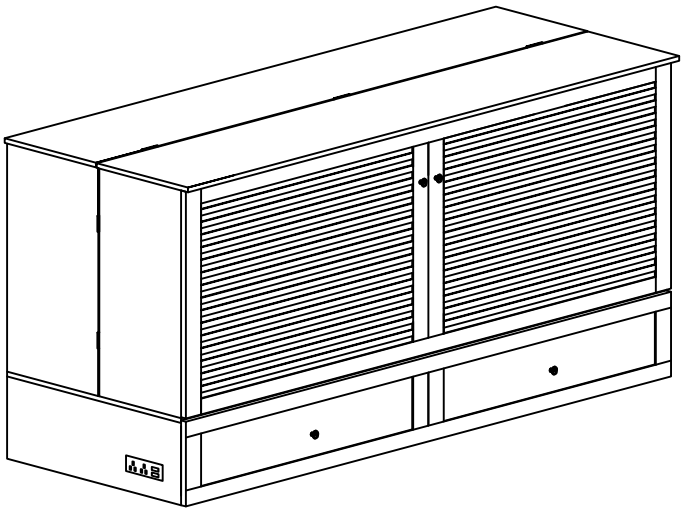
INSTALLATION GUIDE

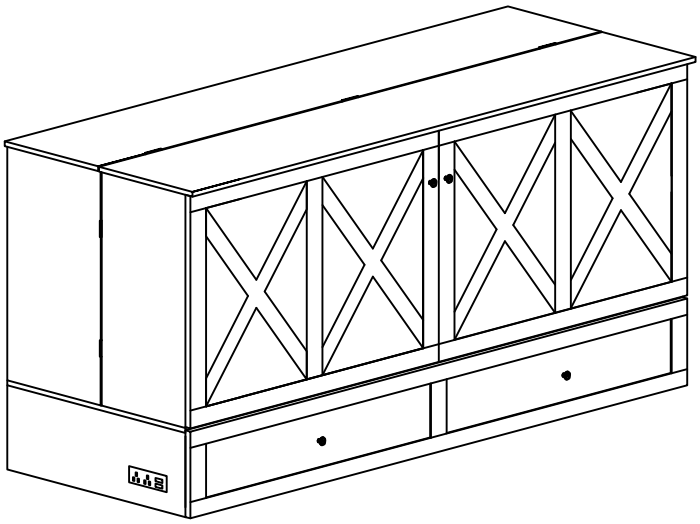


Suggest using electric tools for installation


SKU:16031




SKU:16032

















SKU:16033


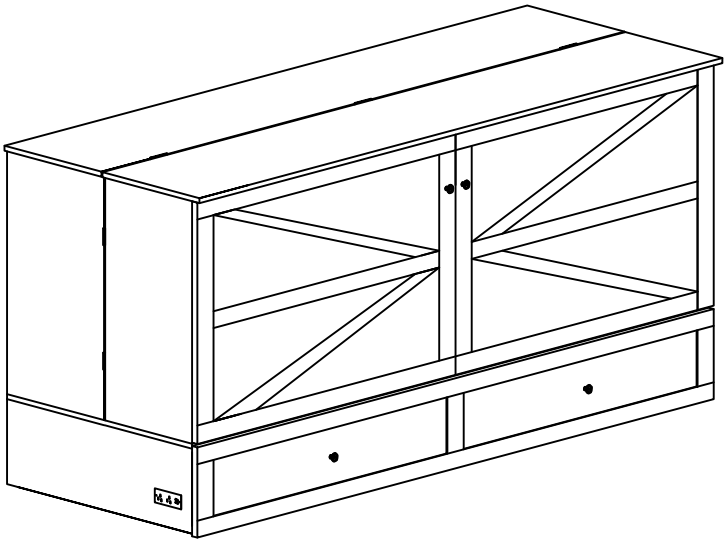


SKU:16034

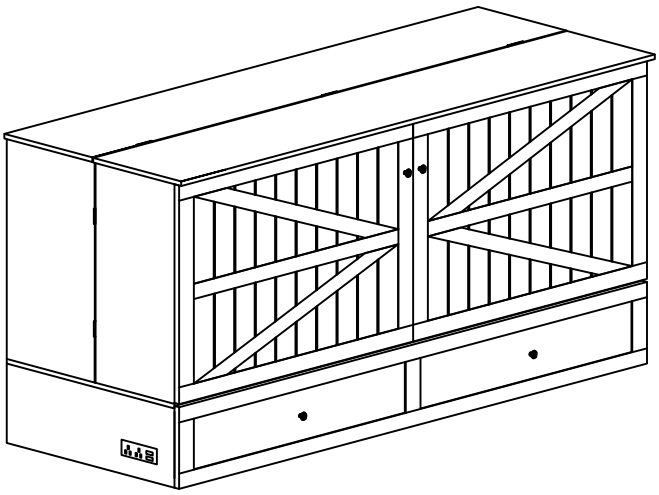


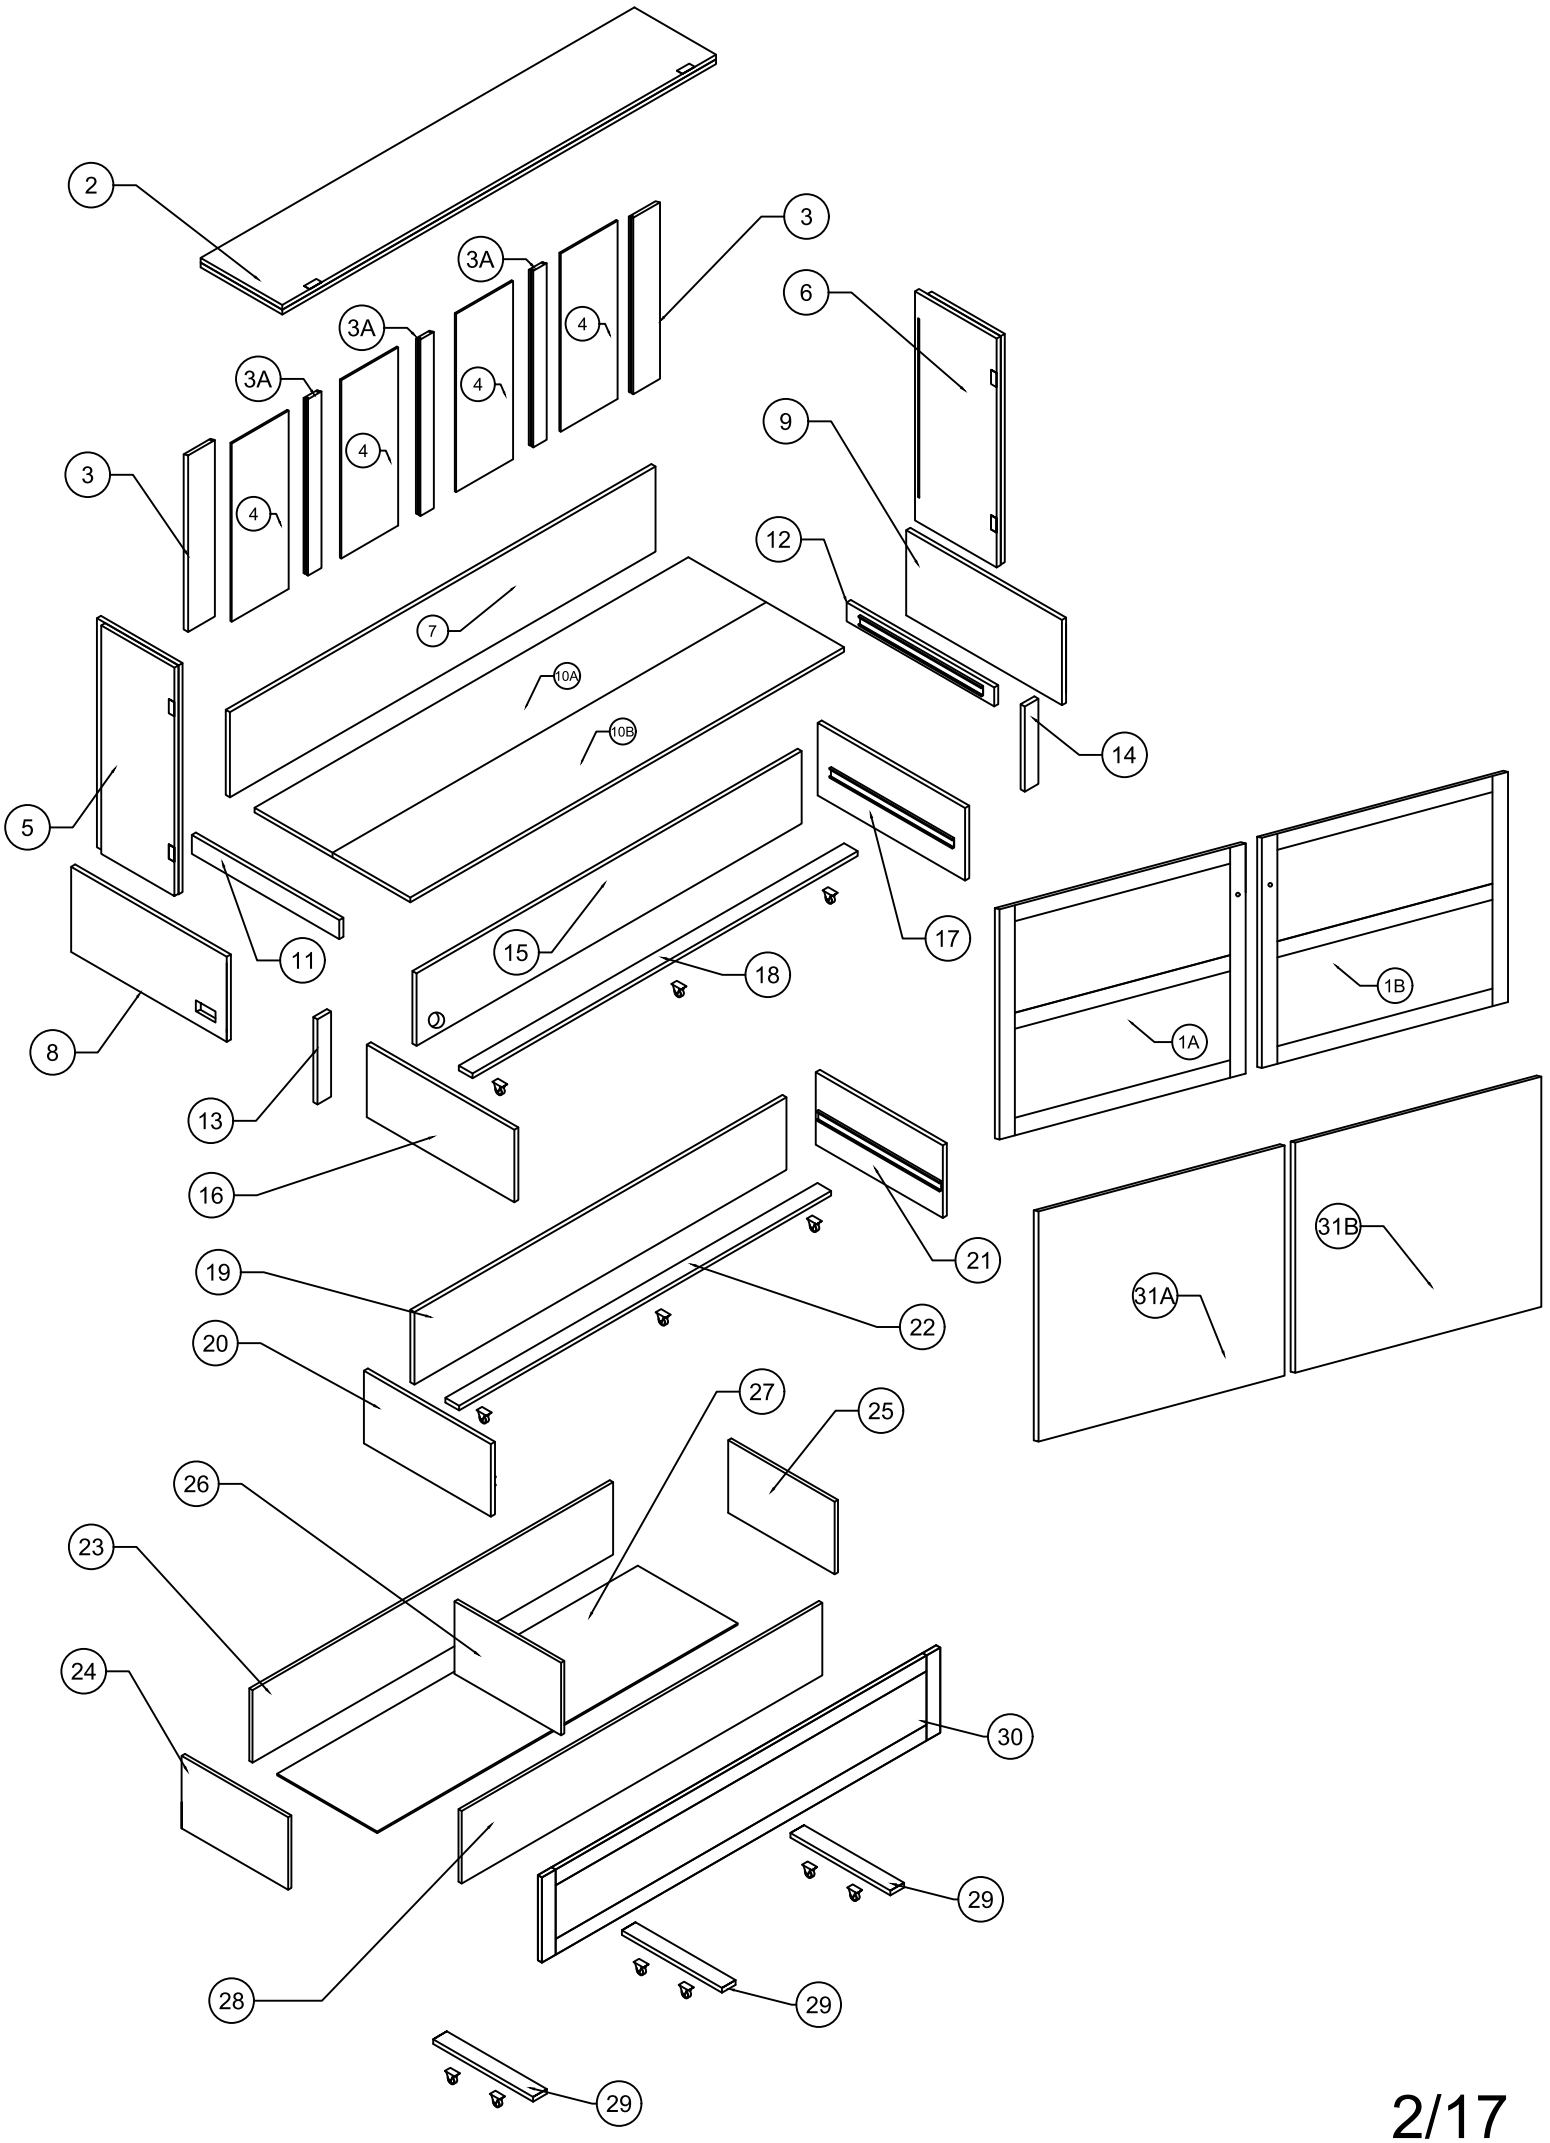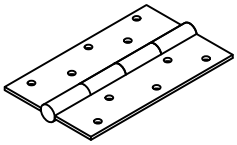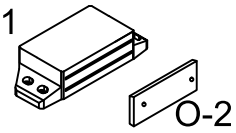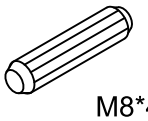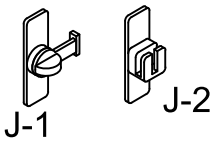

2
3
3A
3A
3A
4
4
4
4
4
3
6
9
12
7
10A
10B
14
5
11
15
17
18
1B
1A
8
13
16
21
31B
31A
19
22
20
27
25
26
23
24
30
29
29
28
29

A		67 PCS	L		8 PCS
B	 M15	67 PCS	M	 M50	1 PCS
C	 80*80	6 PCS	O	O-1  O-2	2 PCS
D	 M8*40	13 PCS	P		1 PCS
E	 M4*30	25 PCS	Q		10 PCS
F	 M3.5*14	142 PCS	R	 M6*13	25 PCS
G	 M3.5*12	6 PCS	S	 M6*18	8 PCS
H	 M4*18	4 PCS	T	 T00L	1 PCS
I		4 PCS	X	 M15*150	4 PCS
J	 J-1 J-2	2 PCS	Z		2 PCS
K		12 PCS			

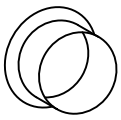
A		8 PCS	B	 M15	8 PCS
M	 M50	1 PCS			

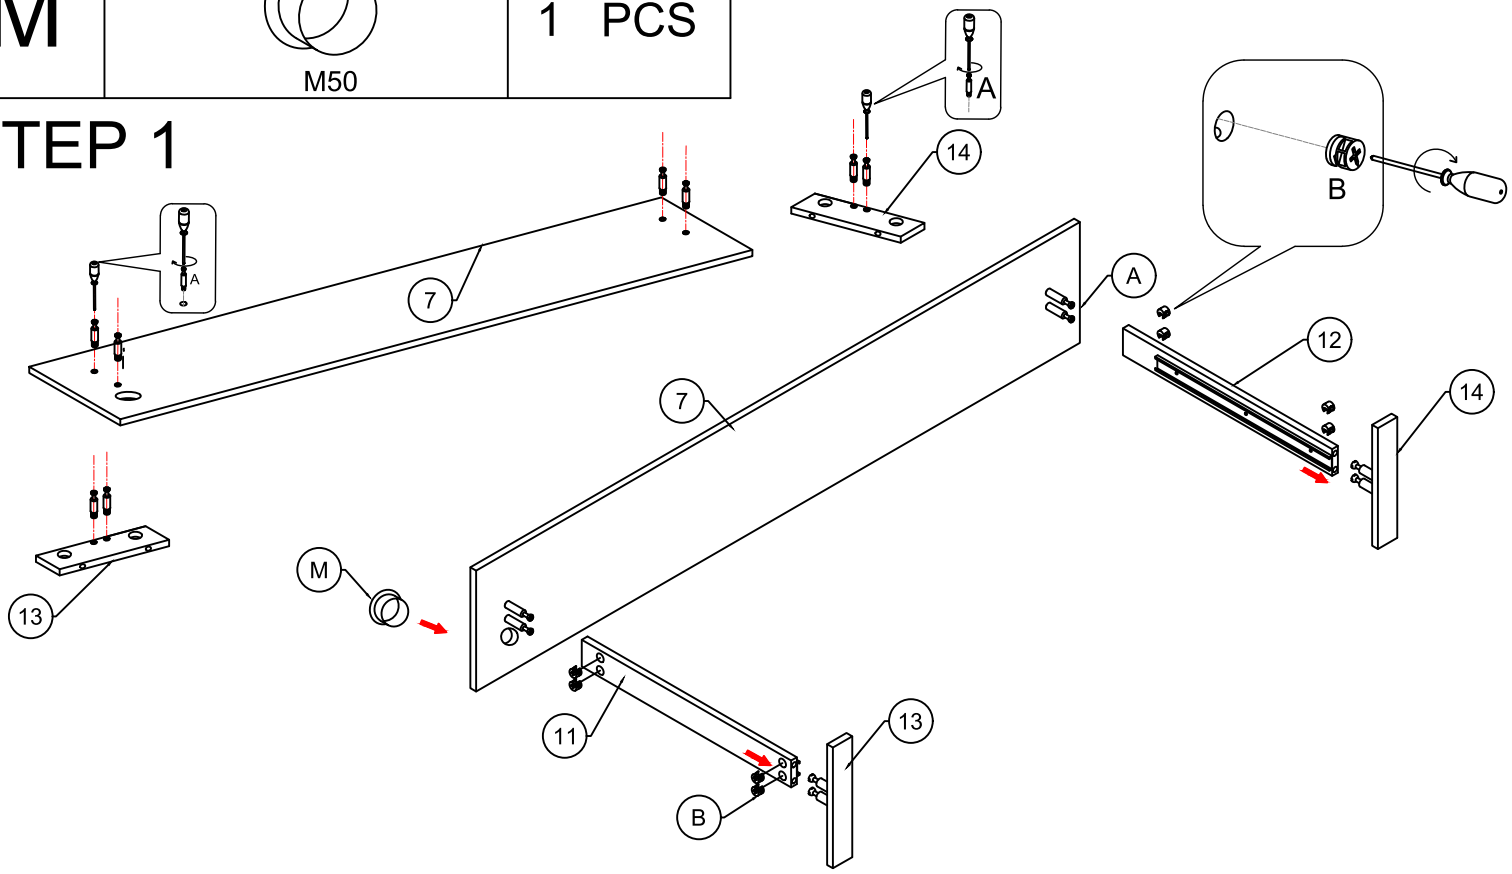

STEP 1




A		8 PCS	B	 M15	8 PCS

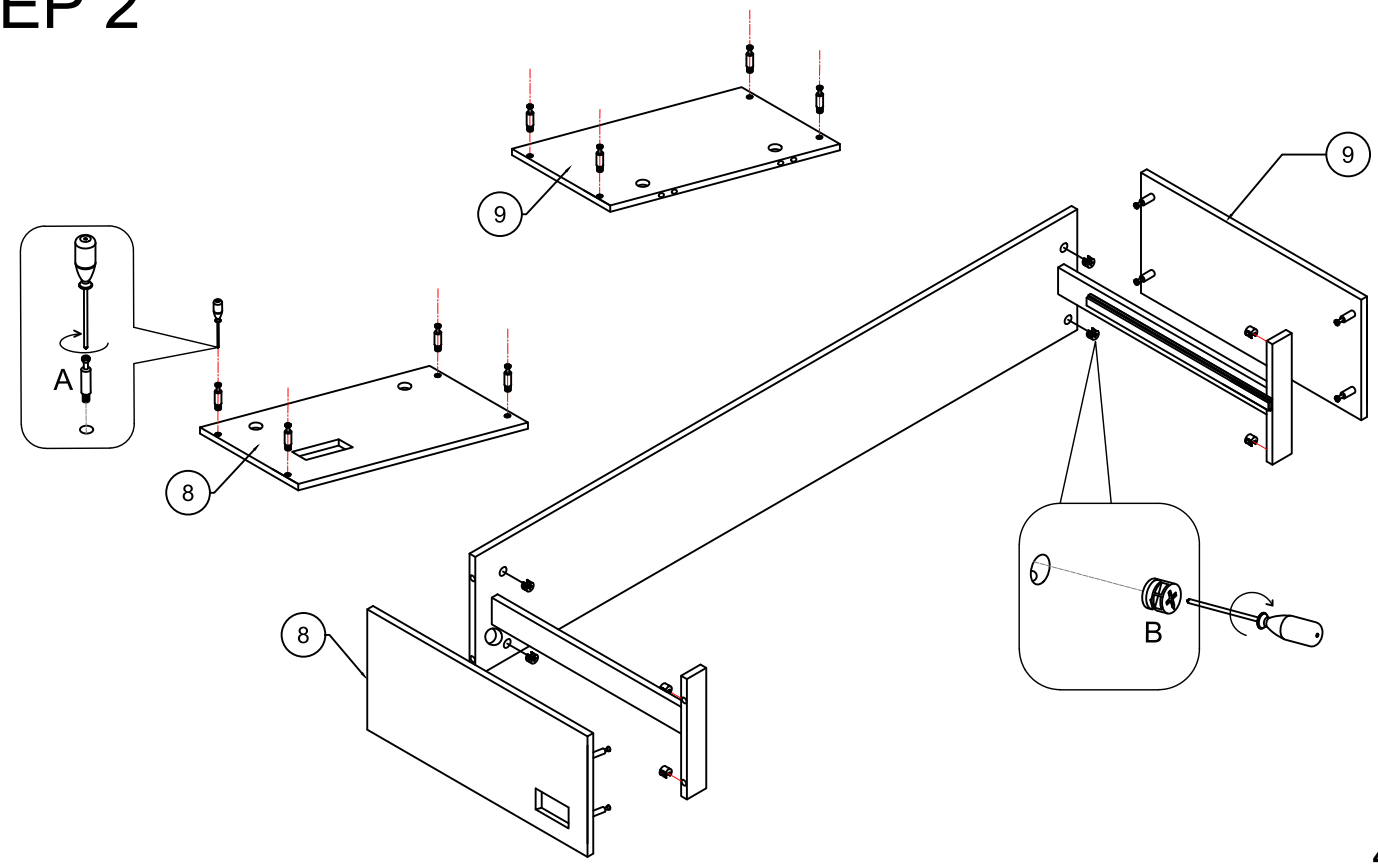


STEP 2




A		8 PCS	D		4 PCS
B	 M15	8 PCS			

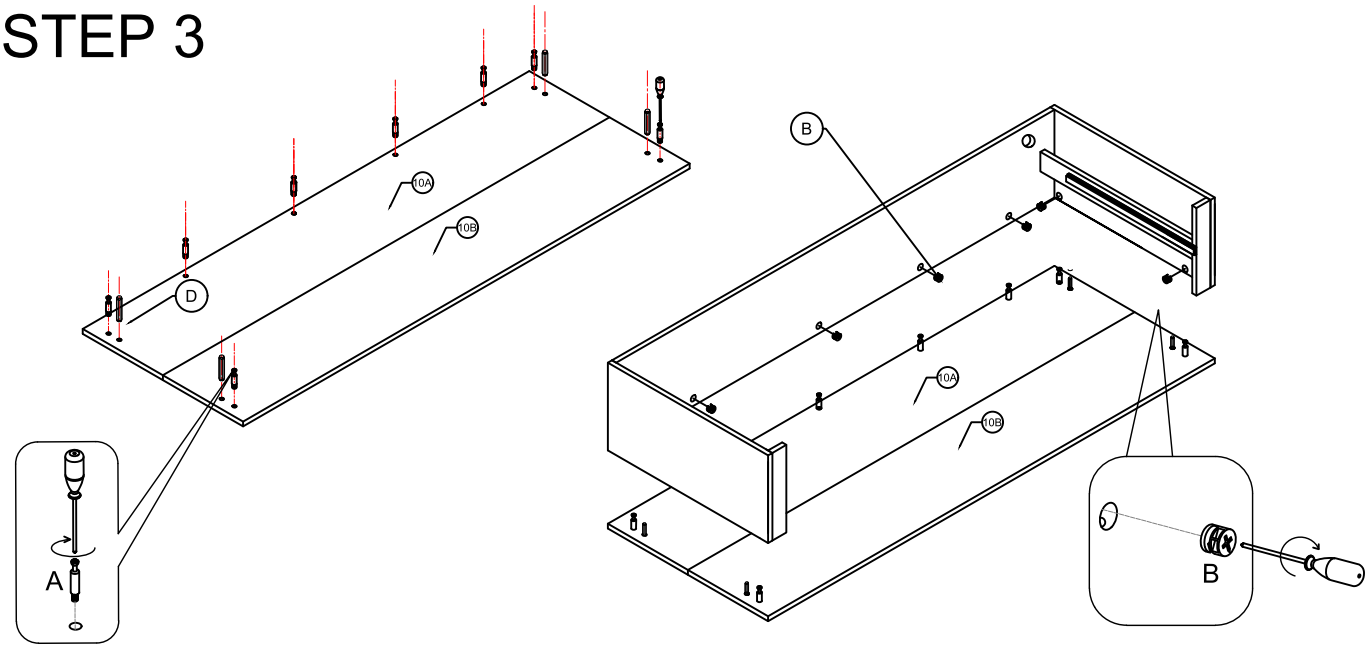
STEP 3




P		1 PCS	F	 M3.5*14	2 PCS
C	 80*80	2 PCS	R	 M6*13	8 PCS
A		11 PCS	D		4 PCS

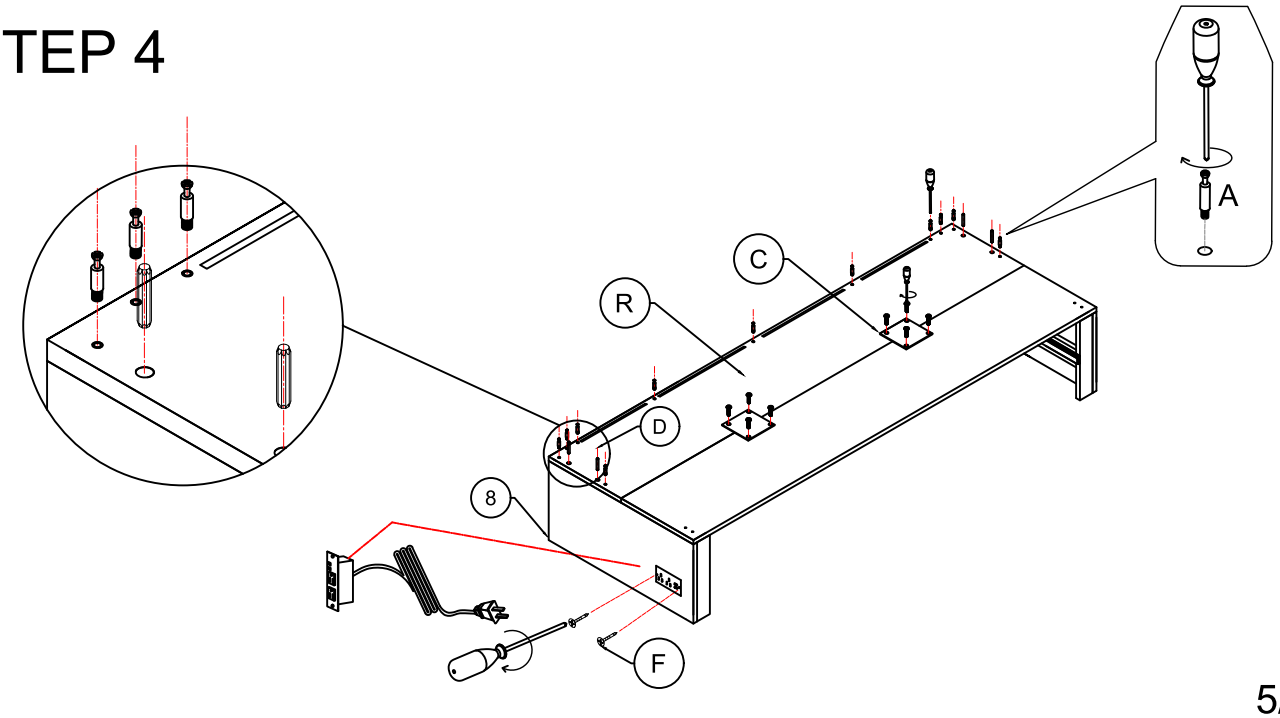
STEP 4






A		4 PCS	B	 M15	14 PCS

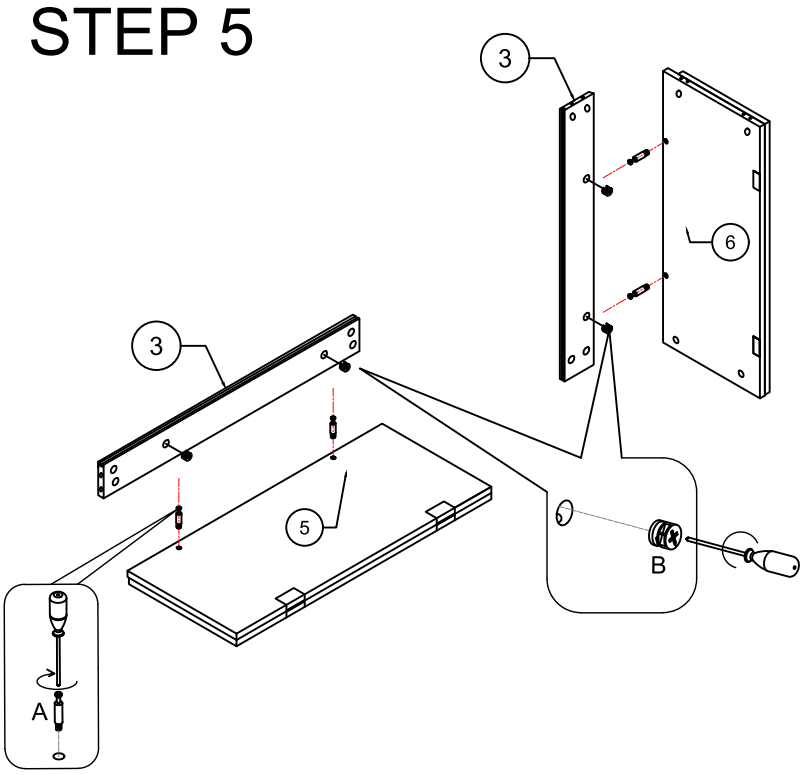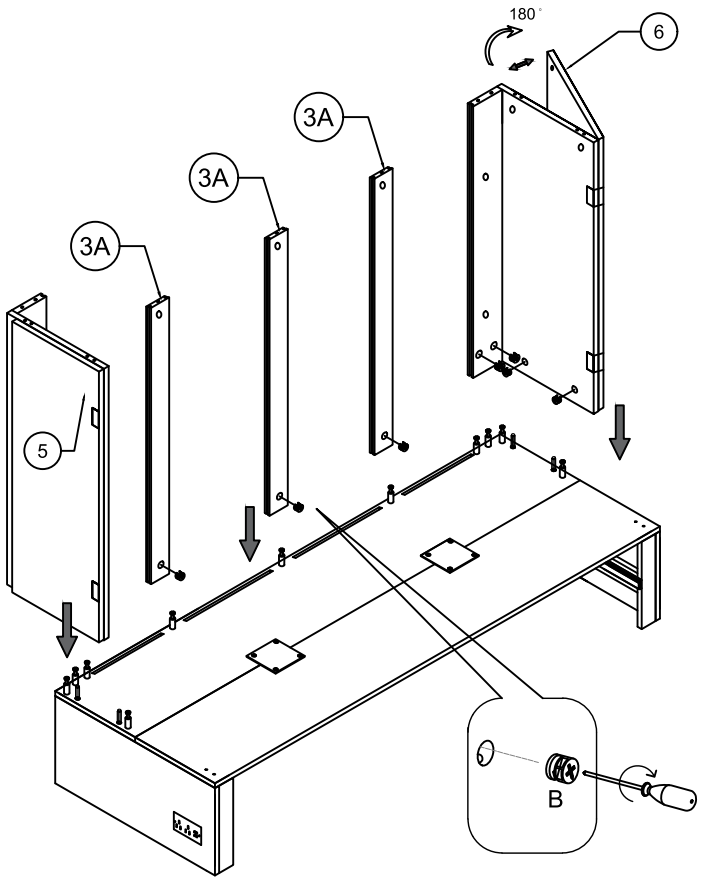
STEP 5











F	 M3.5*14	14PCS	O	 O-1	2 PCS
Q		10 PCS			

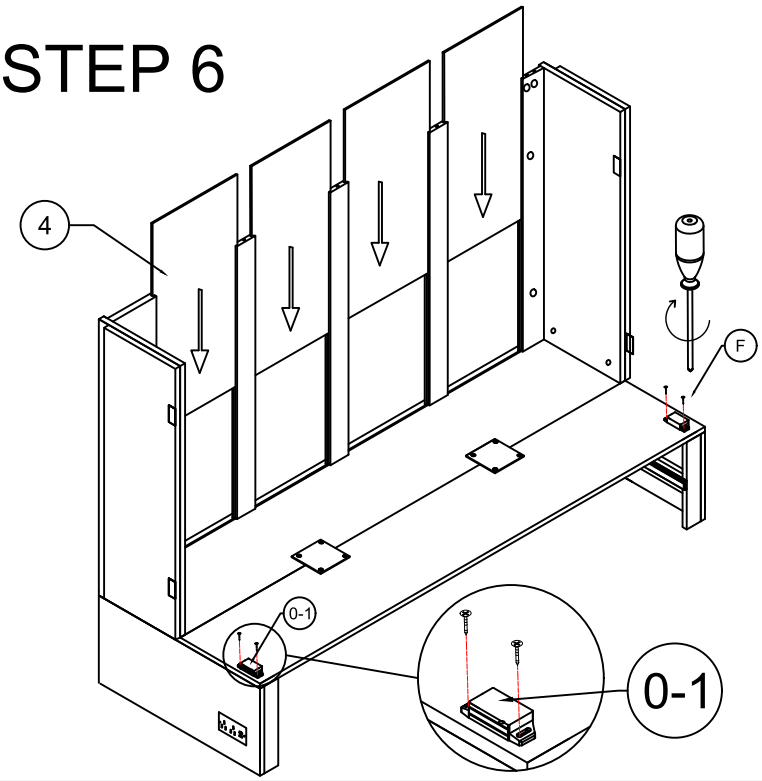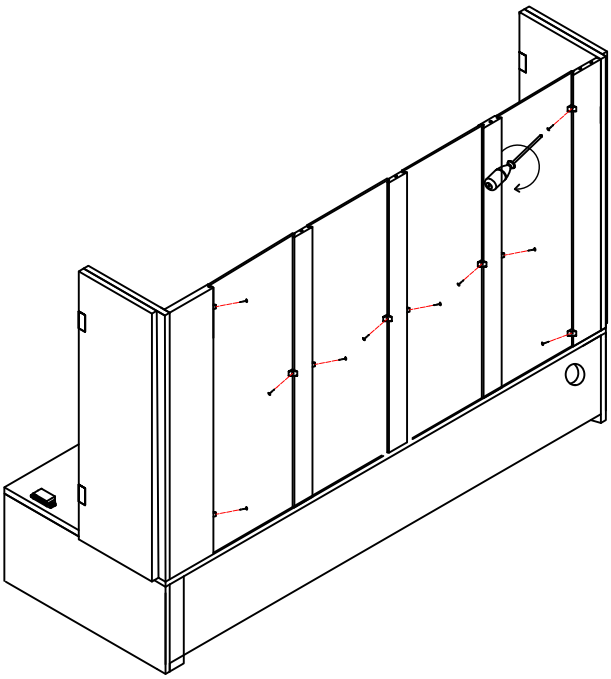
STEP 6








A		11 PCS	B	 M15	11 PCS
F	 M3.5*14	8 PCS	O	 O-2	2 PCS
D		4 PCS	J	 J-2	2 PCS

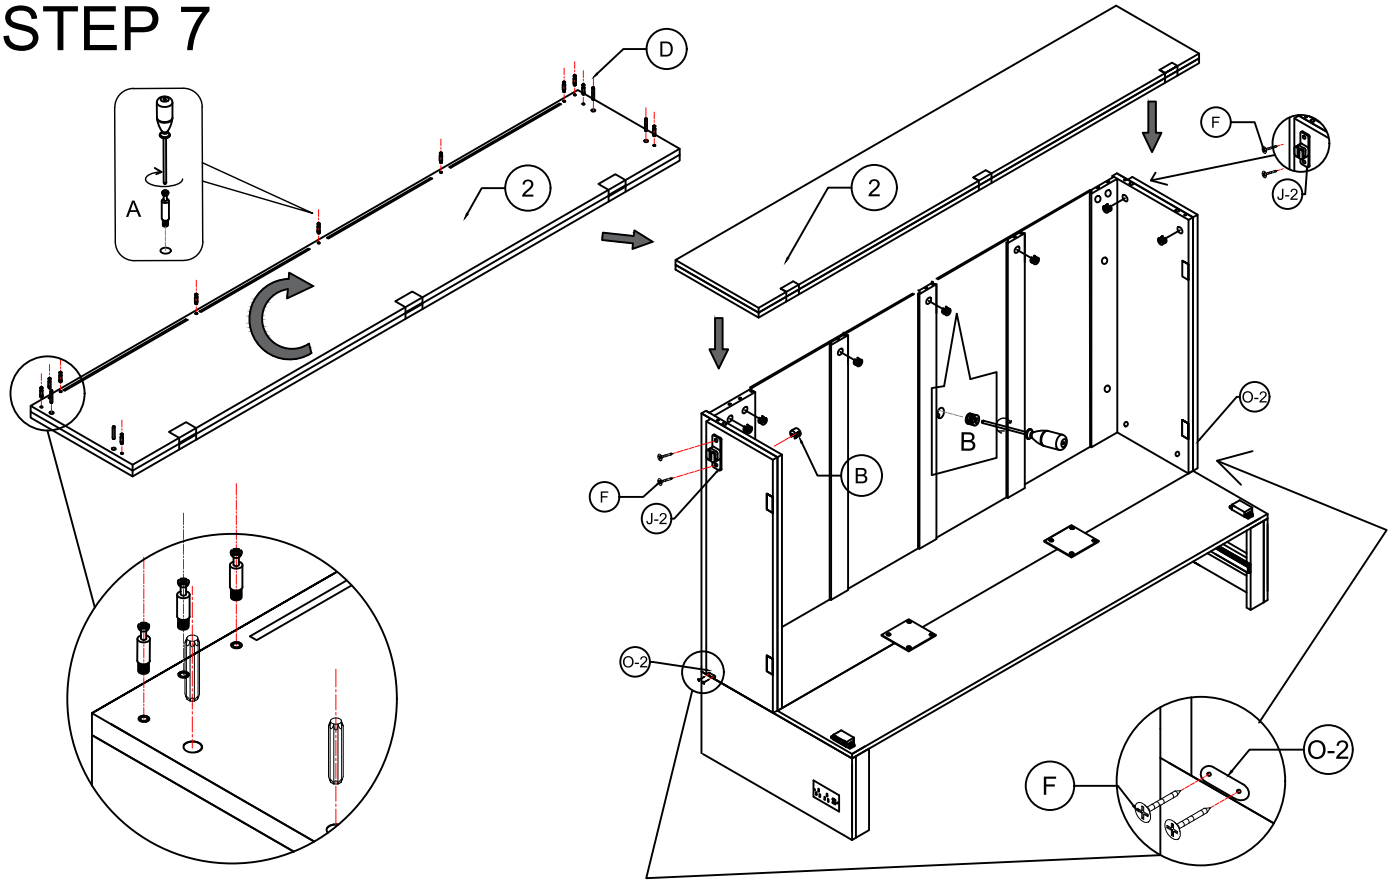
STEP 7




A		2 PCS	B	 M15	2 PCS
F	 M3.5*14	6 PCS	K		3 PCS

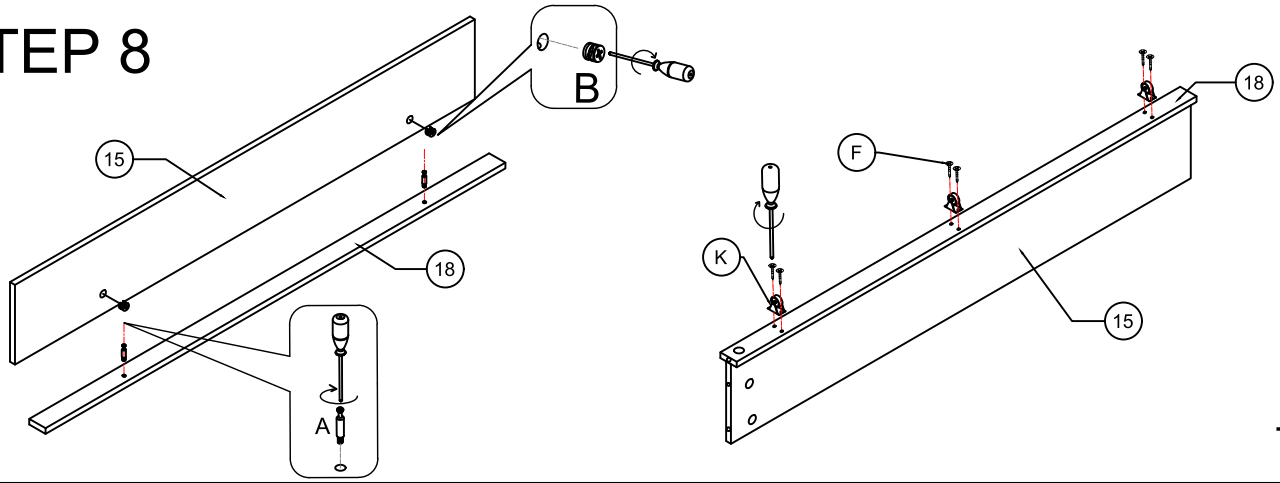

STEP 8




A		6 PCS	B	 M15	6 PCS

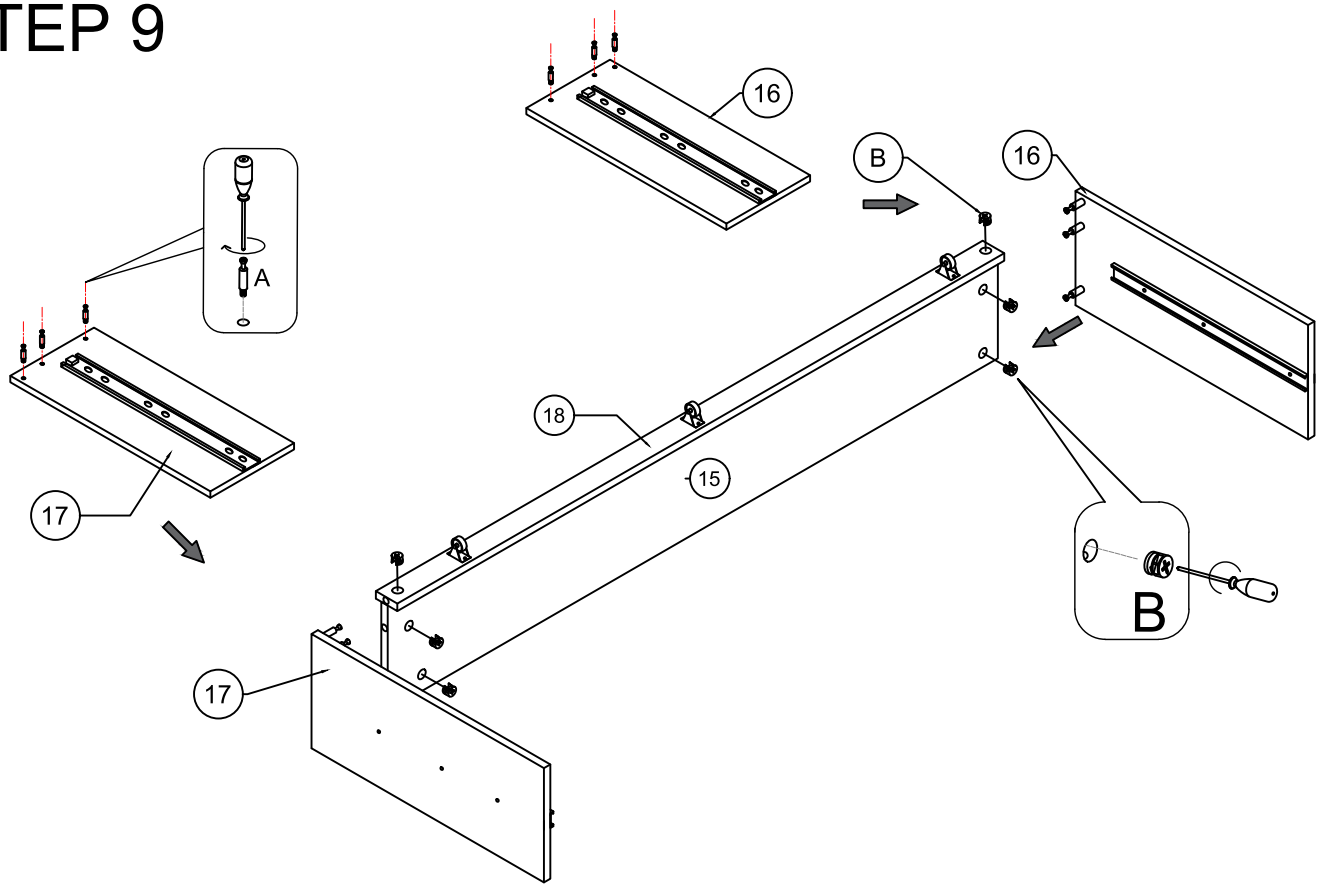
STEP 9




A		2 PCS	B	 M15	2 PCS
F	 M3.5*14	6 PCS	K		3 PCS

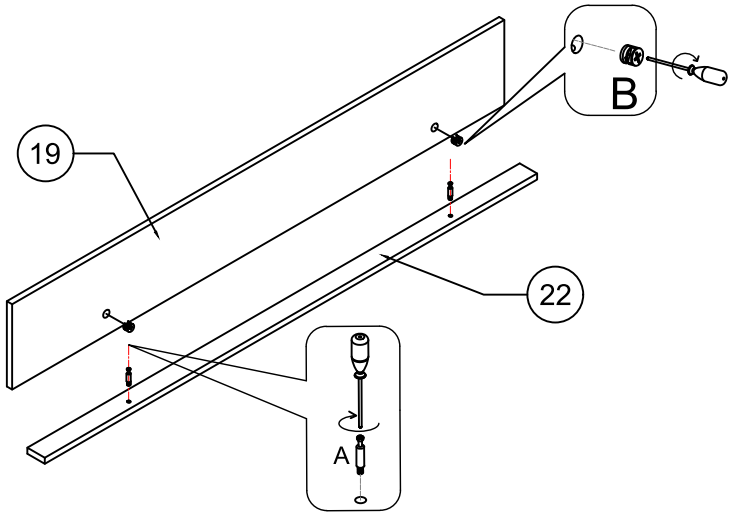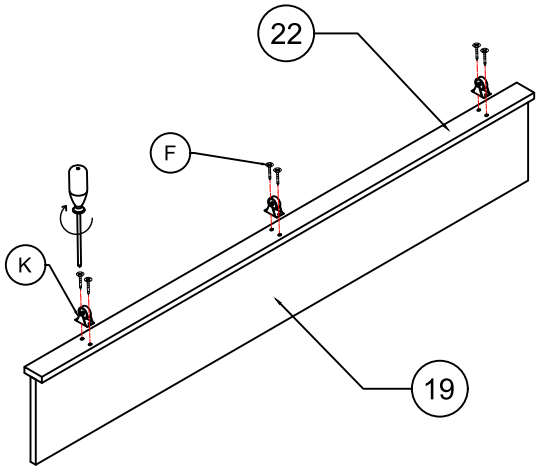
STEP 10








A		6 PCS	B	 M15	6 PCS

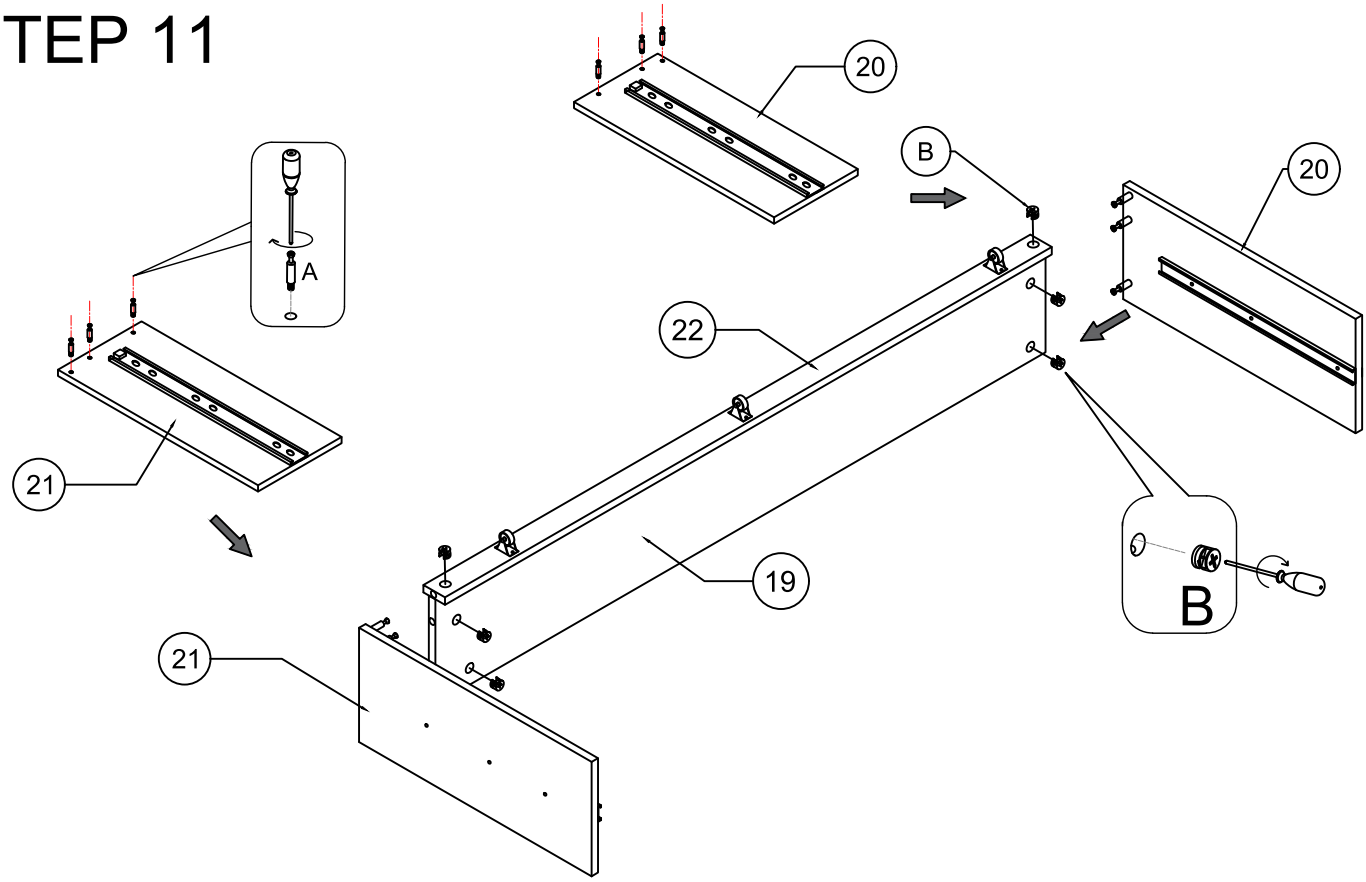
STEP 11




E	 M4*30	8 PCS	K		6 PCS
F	 M3.5*14	12 PCS			

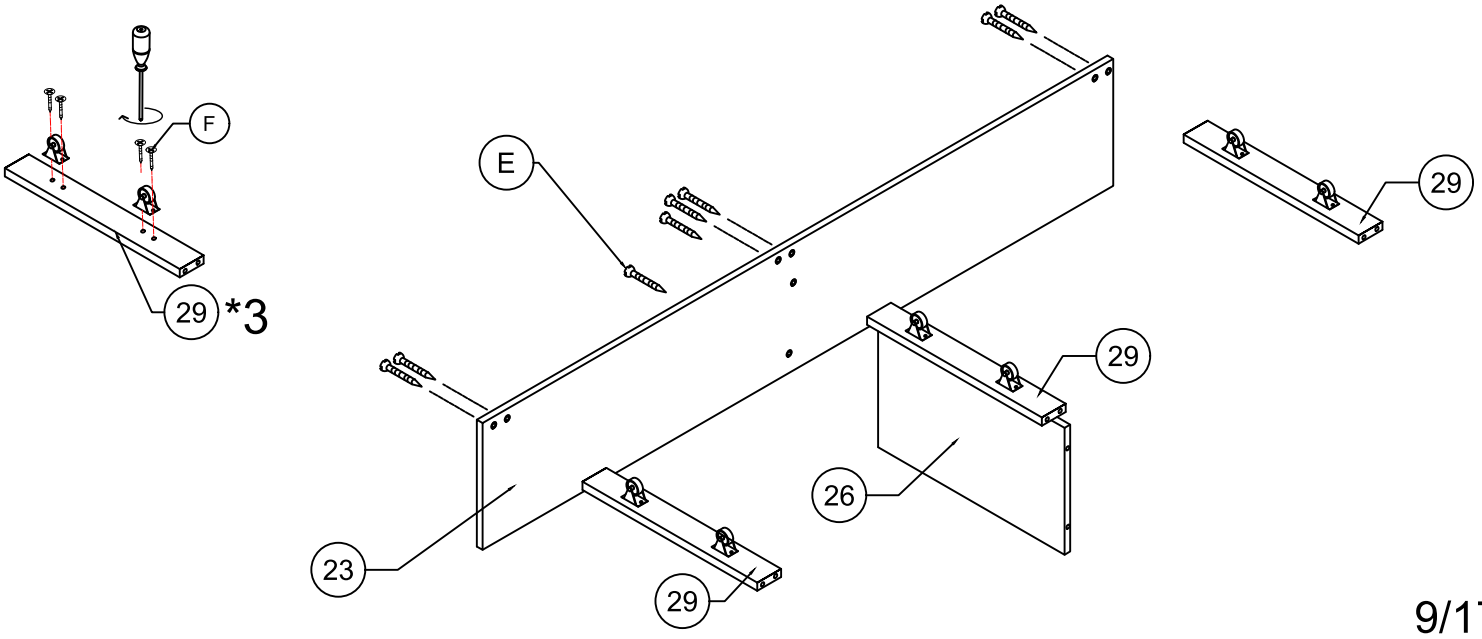
STEP 12




E	 M4*30	8 PCS			

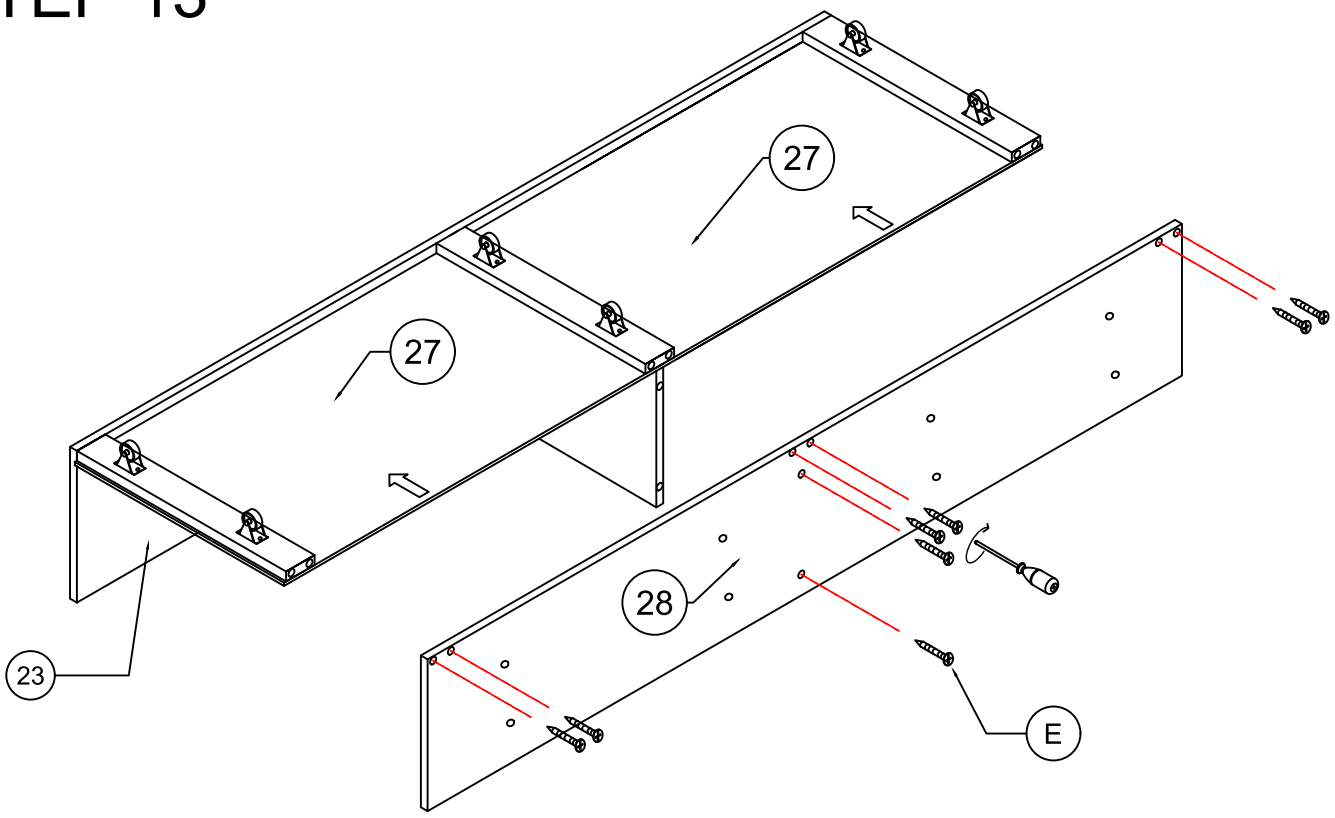
STEP 13




E	 M4*30	8 PCS			

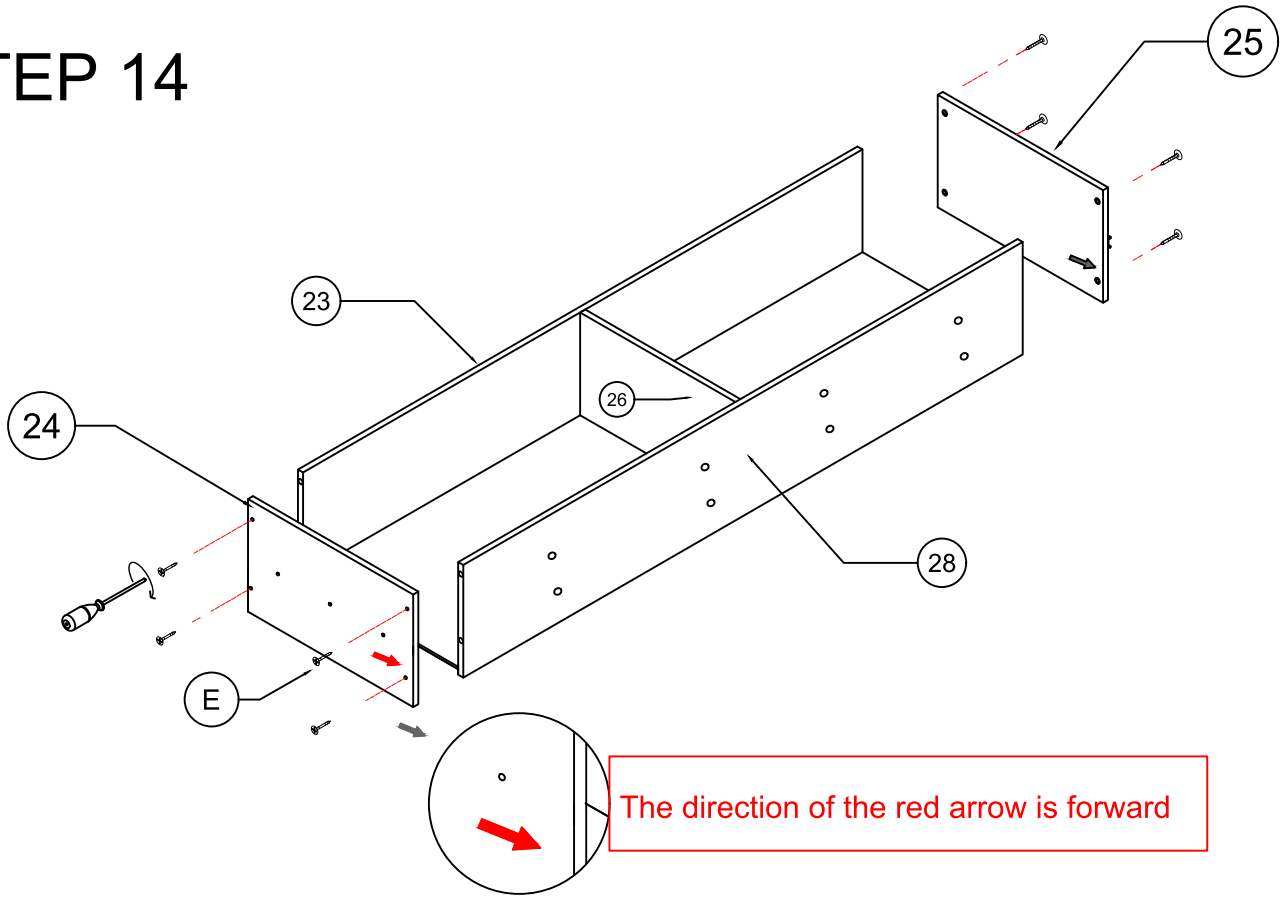
STEP 14




H	 M4*20	2 PCS	I		2 PCS
S	 M6*18	8 PCS			

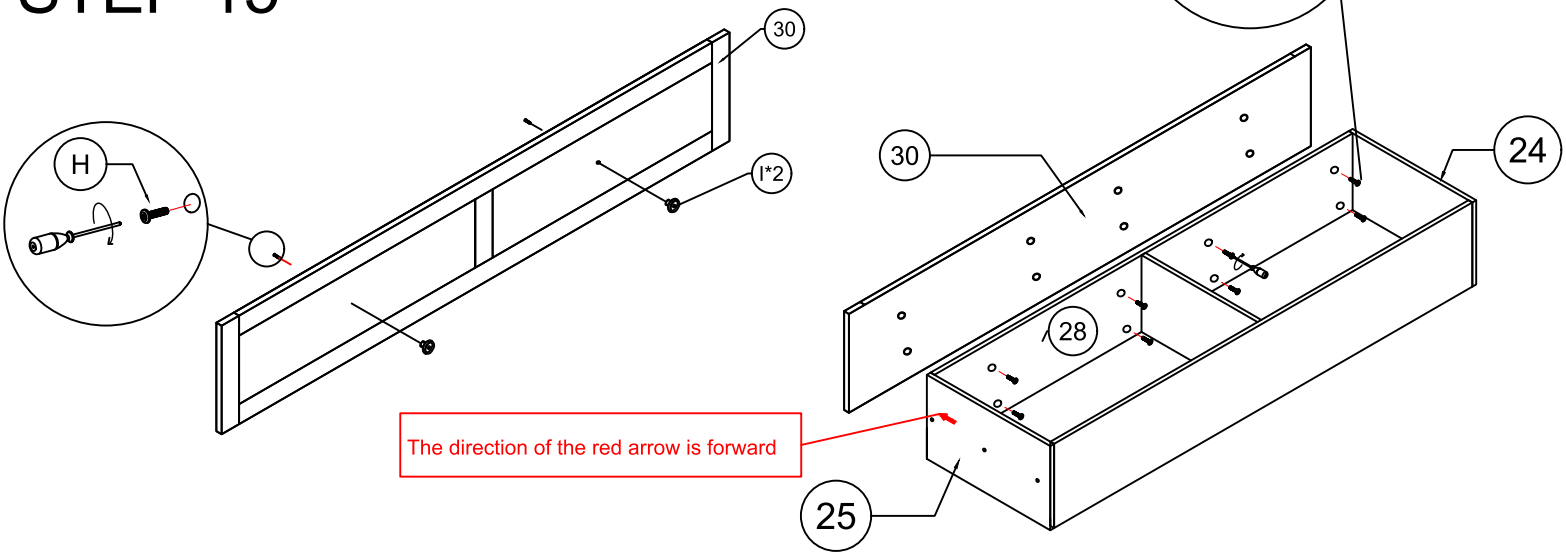STEP 15



H	 M4*20	2 PCS	I		2 PCS
C	 80*80	2 PCS	R	 M6*13	8 PCS

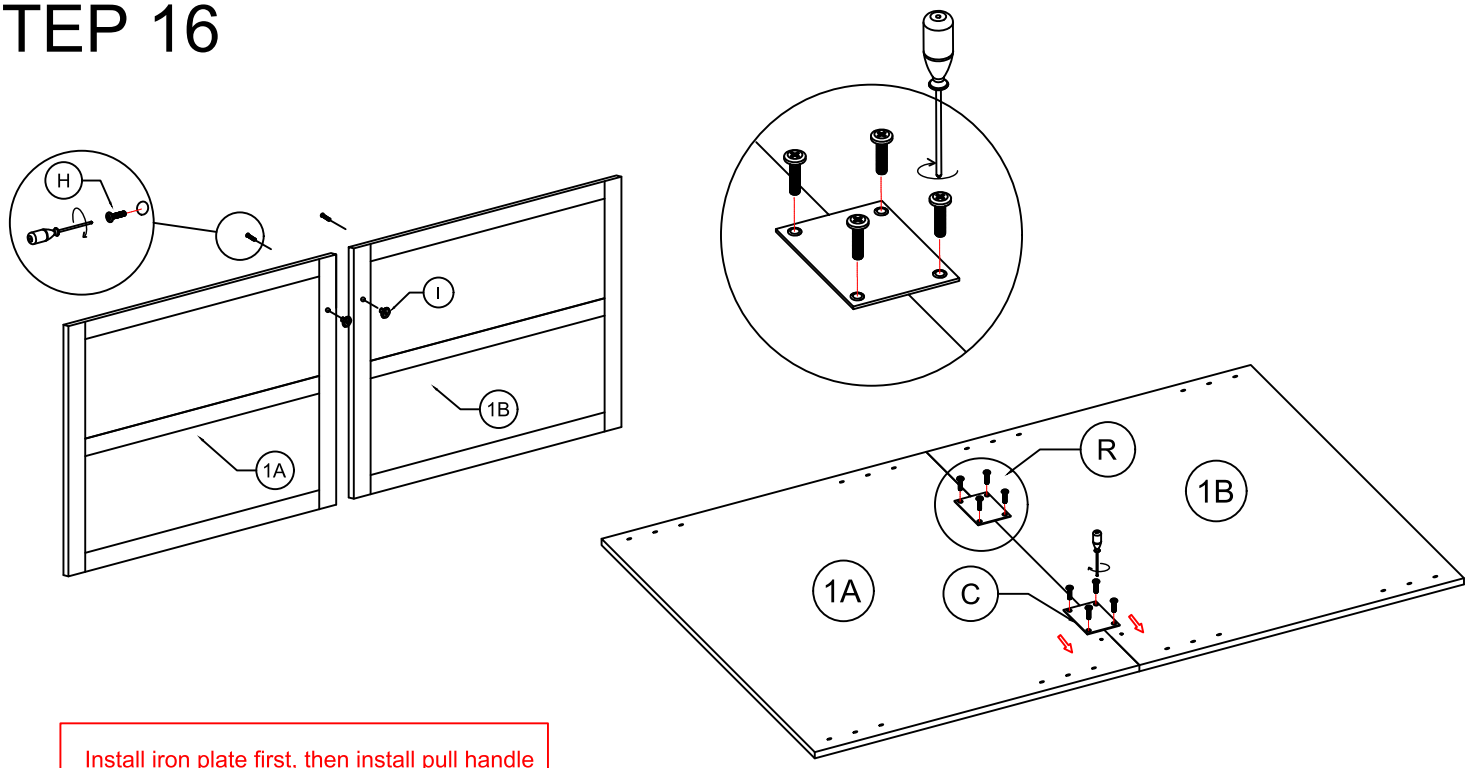
STEP 16




Install iron plate first, then install pull handle

C	80*80	2 PCS	R	M6*13	8 PCS

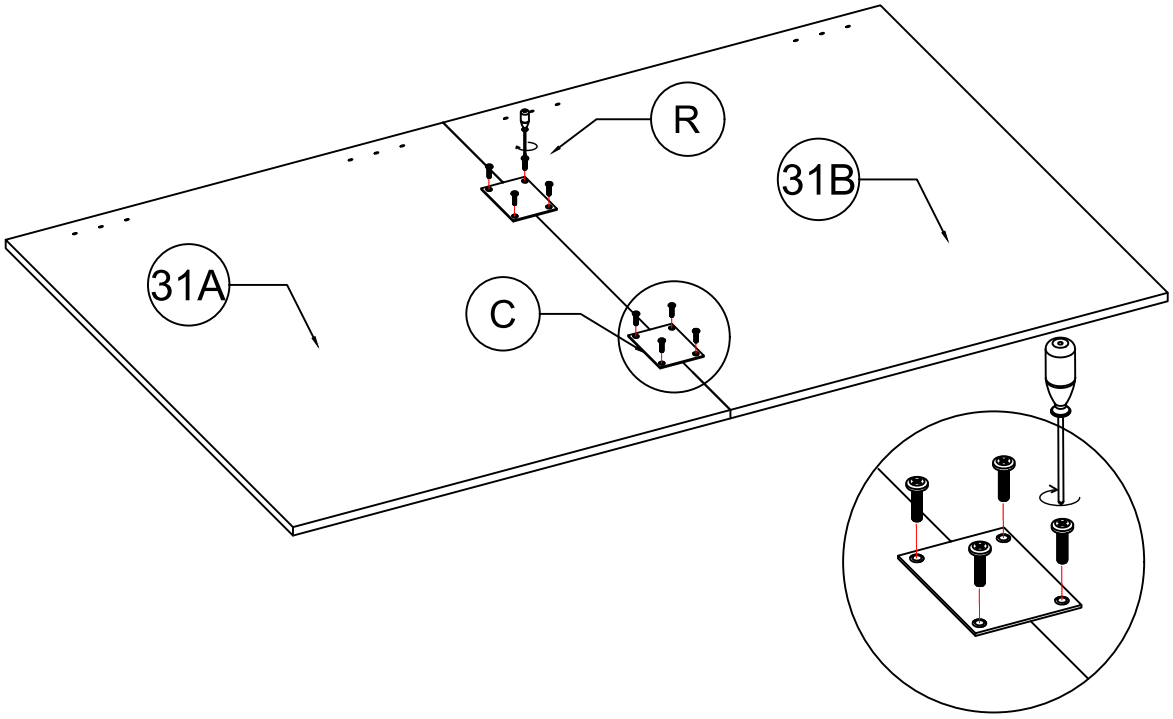STEP 17




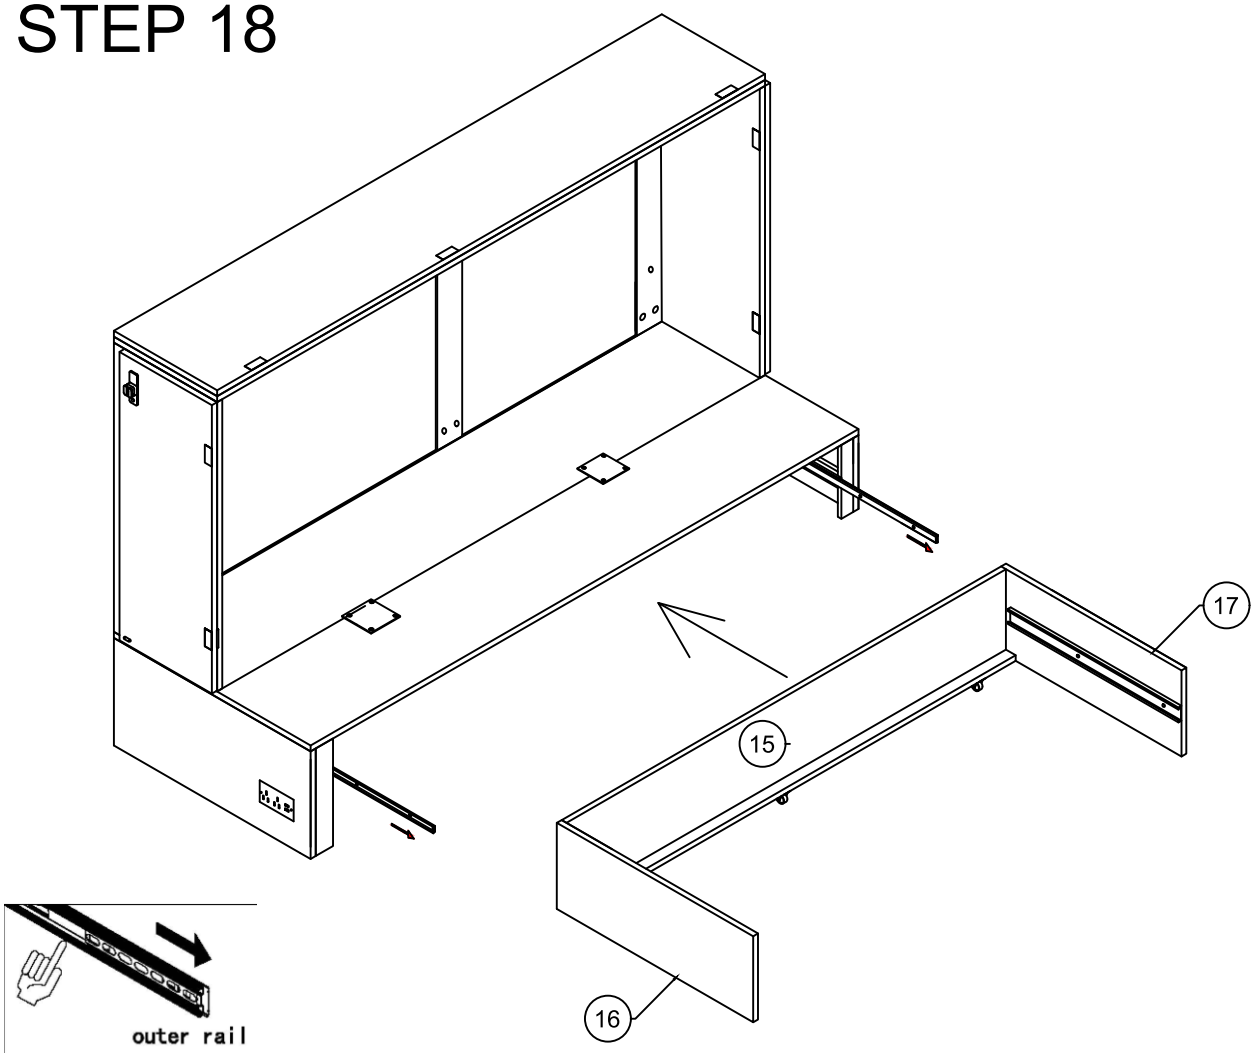
STEP 18



F	M3.5*14	4 PCS

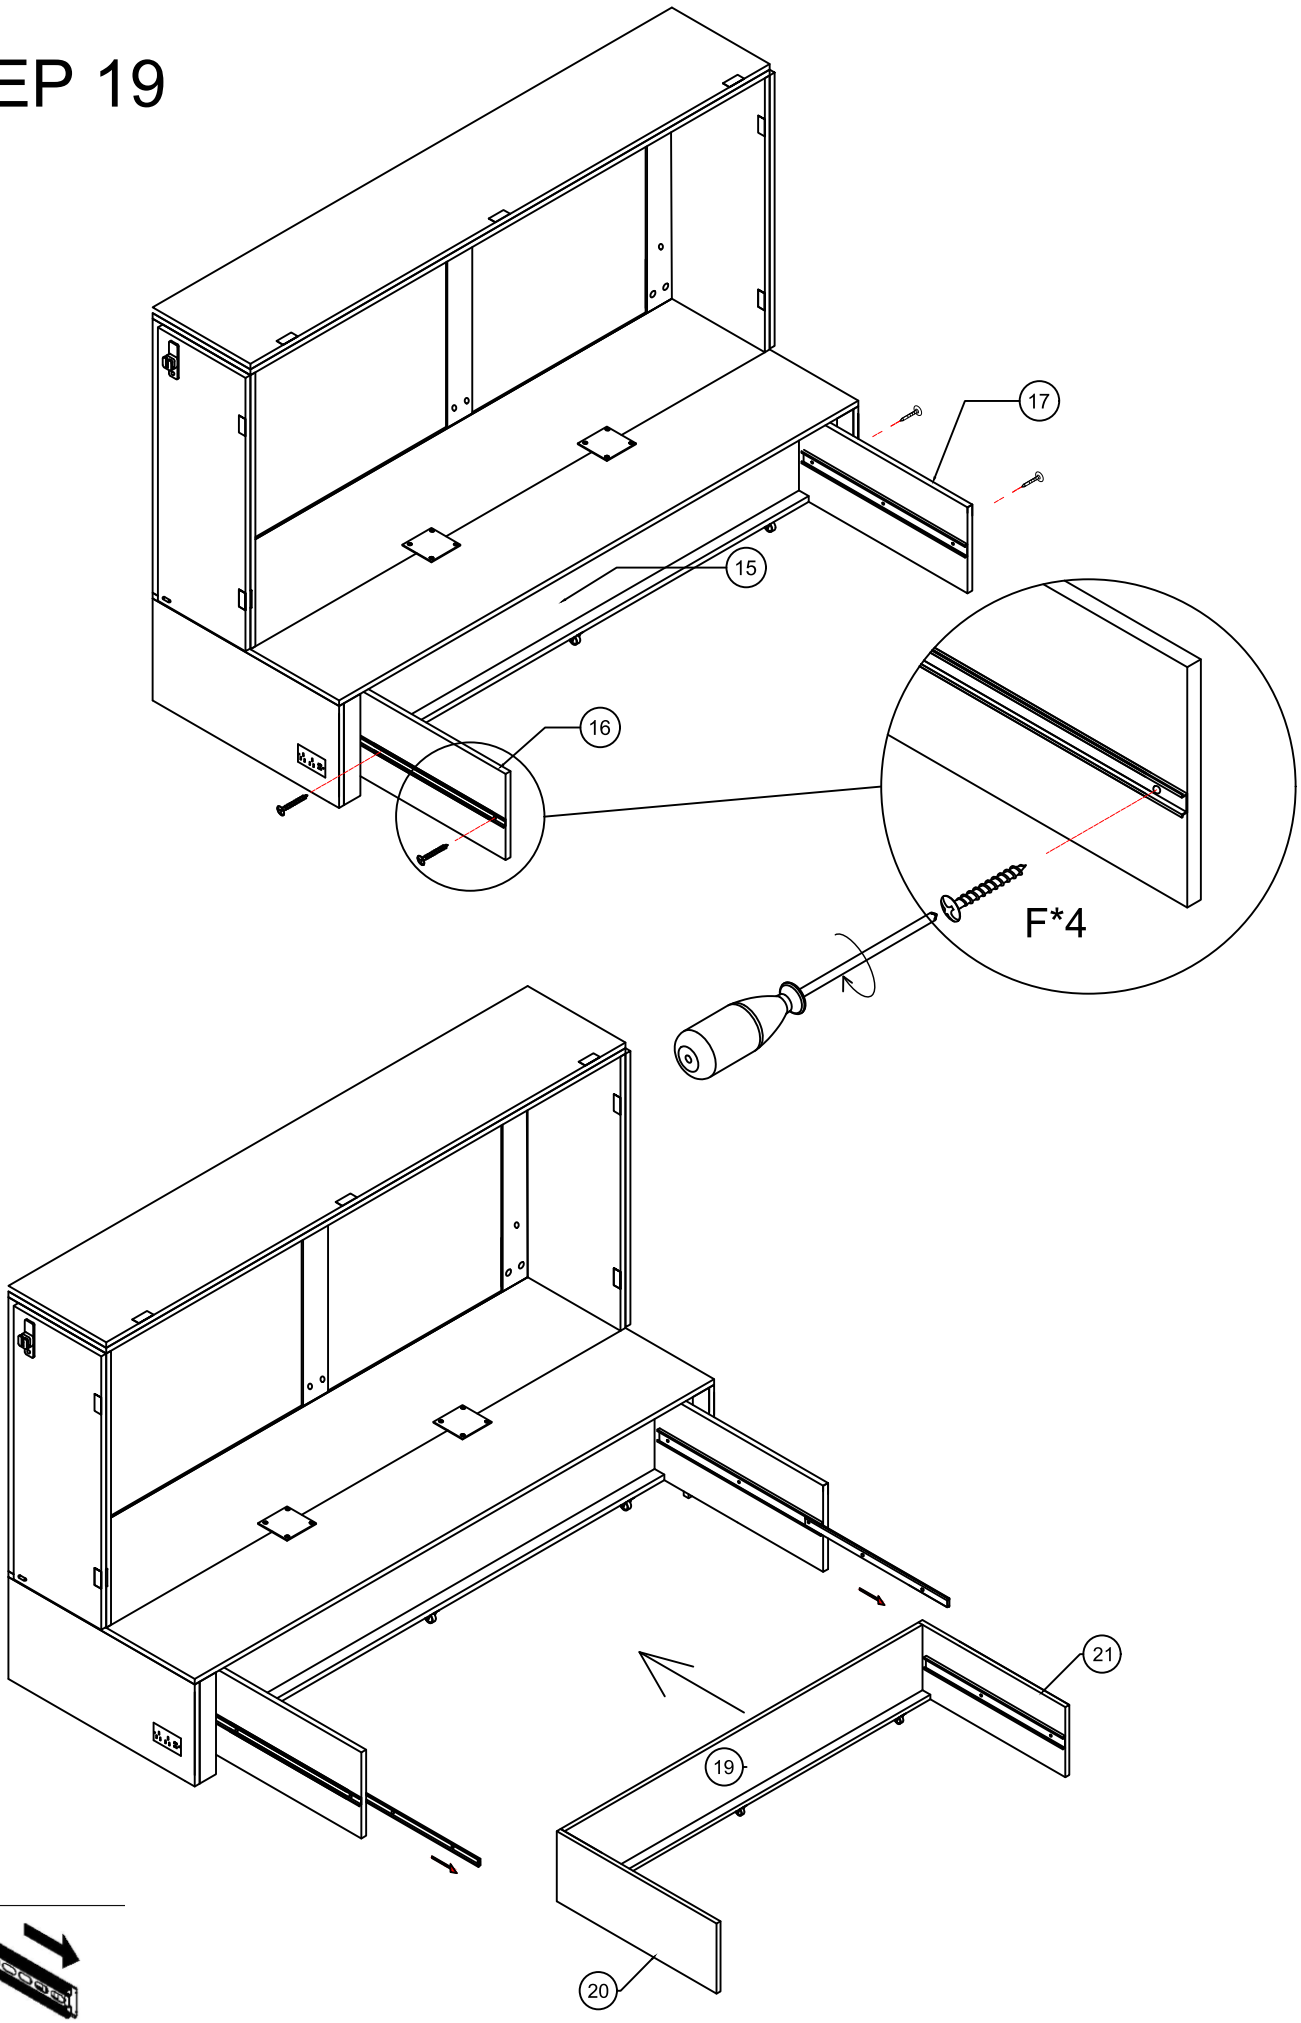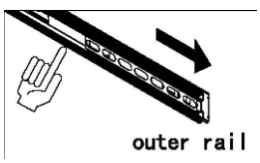
STEP 19






F	M3.5*14	4 PCS

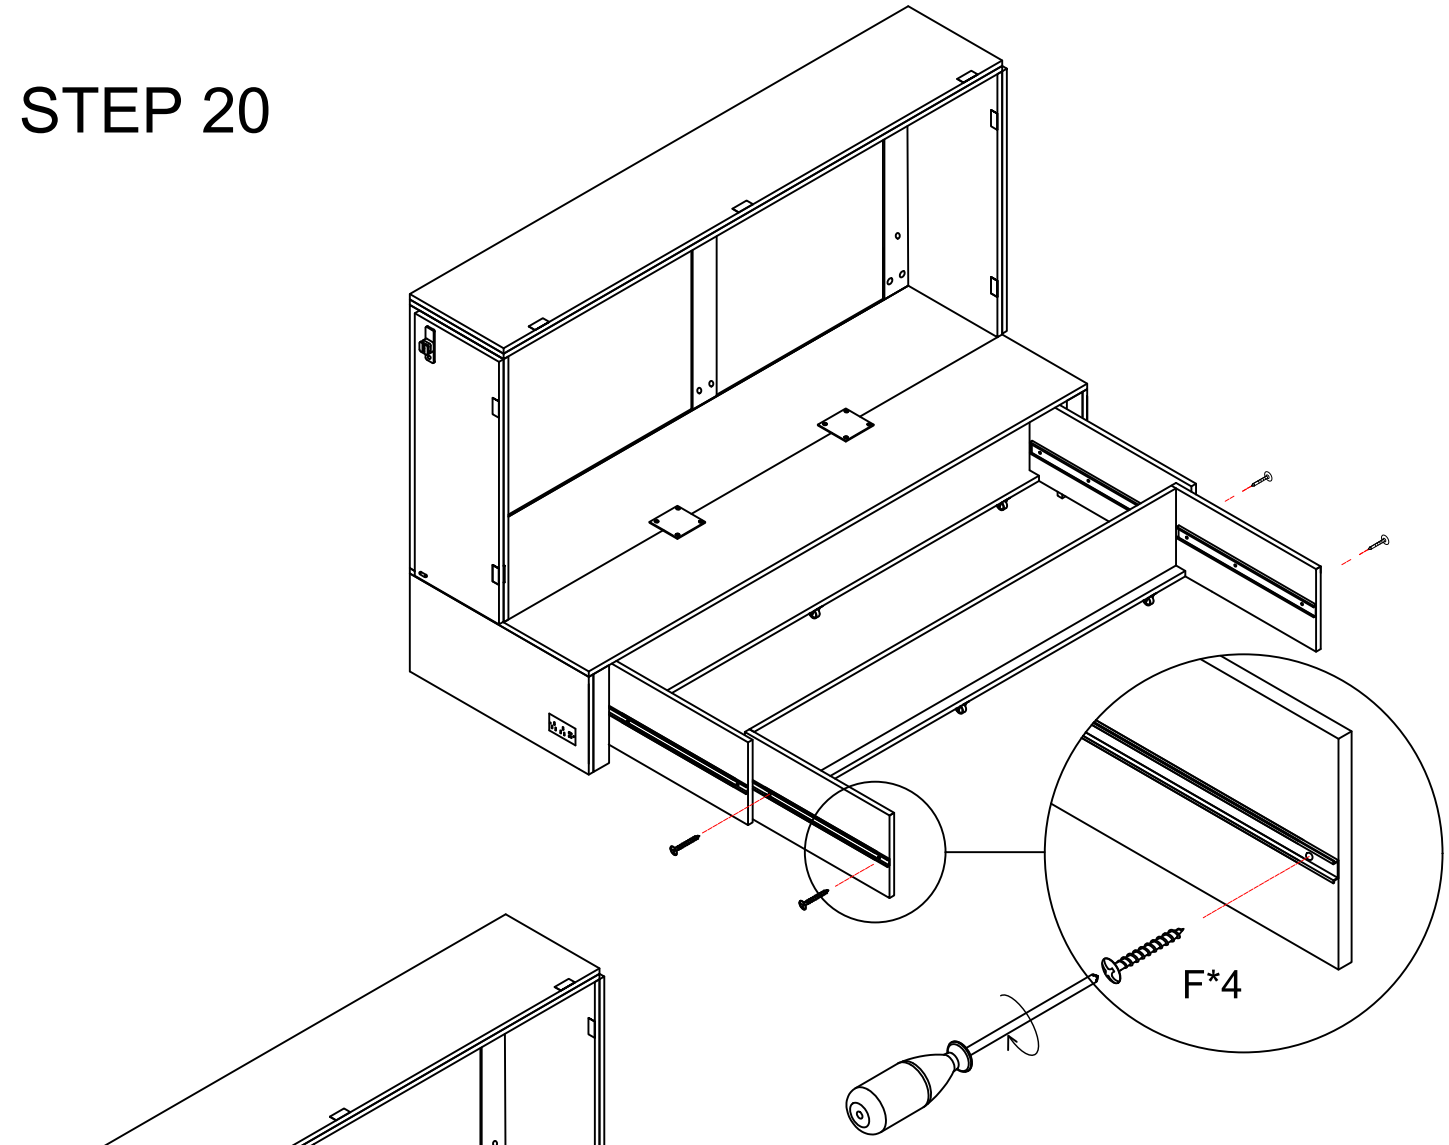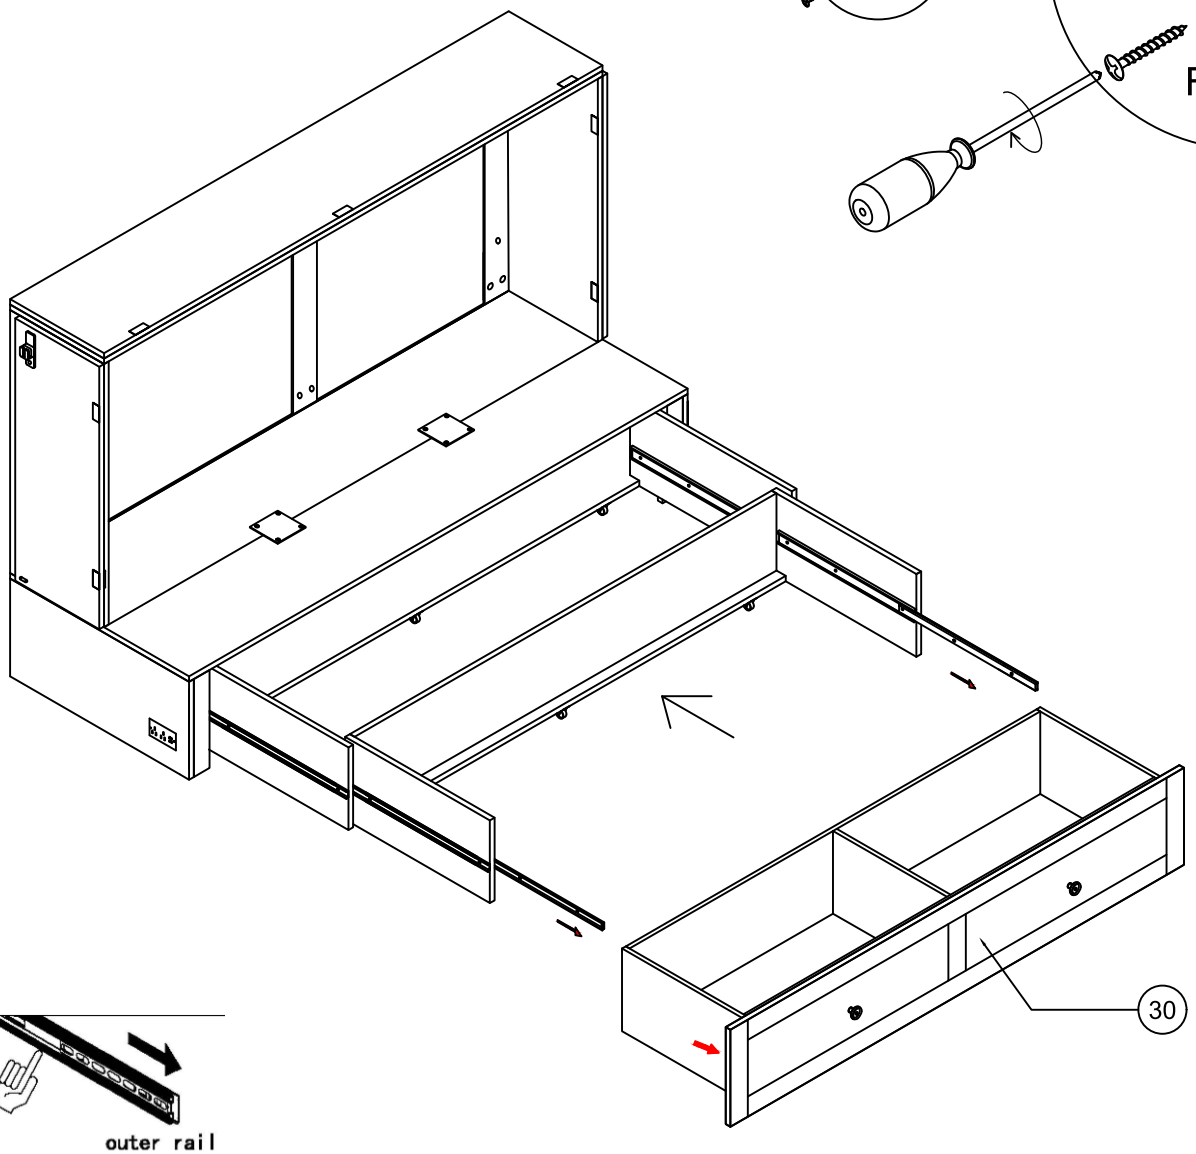
STEP 20






G	M3.5*12	4 PCS

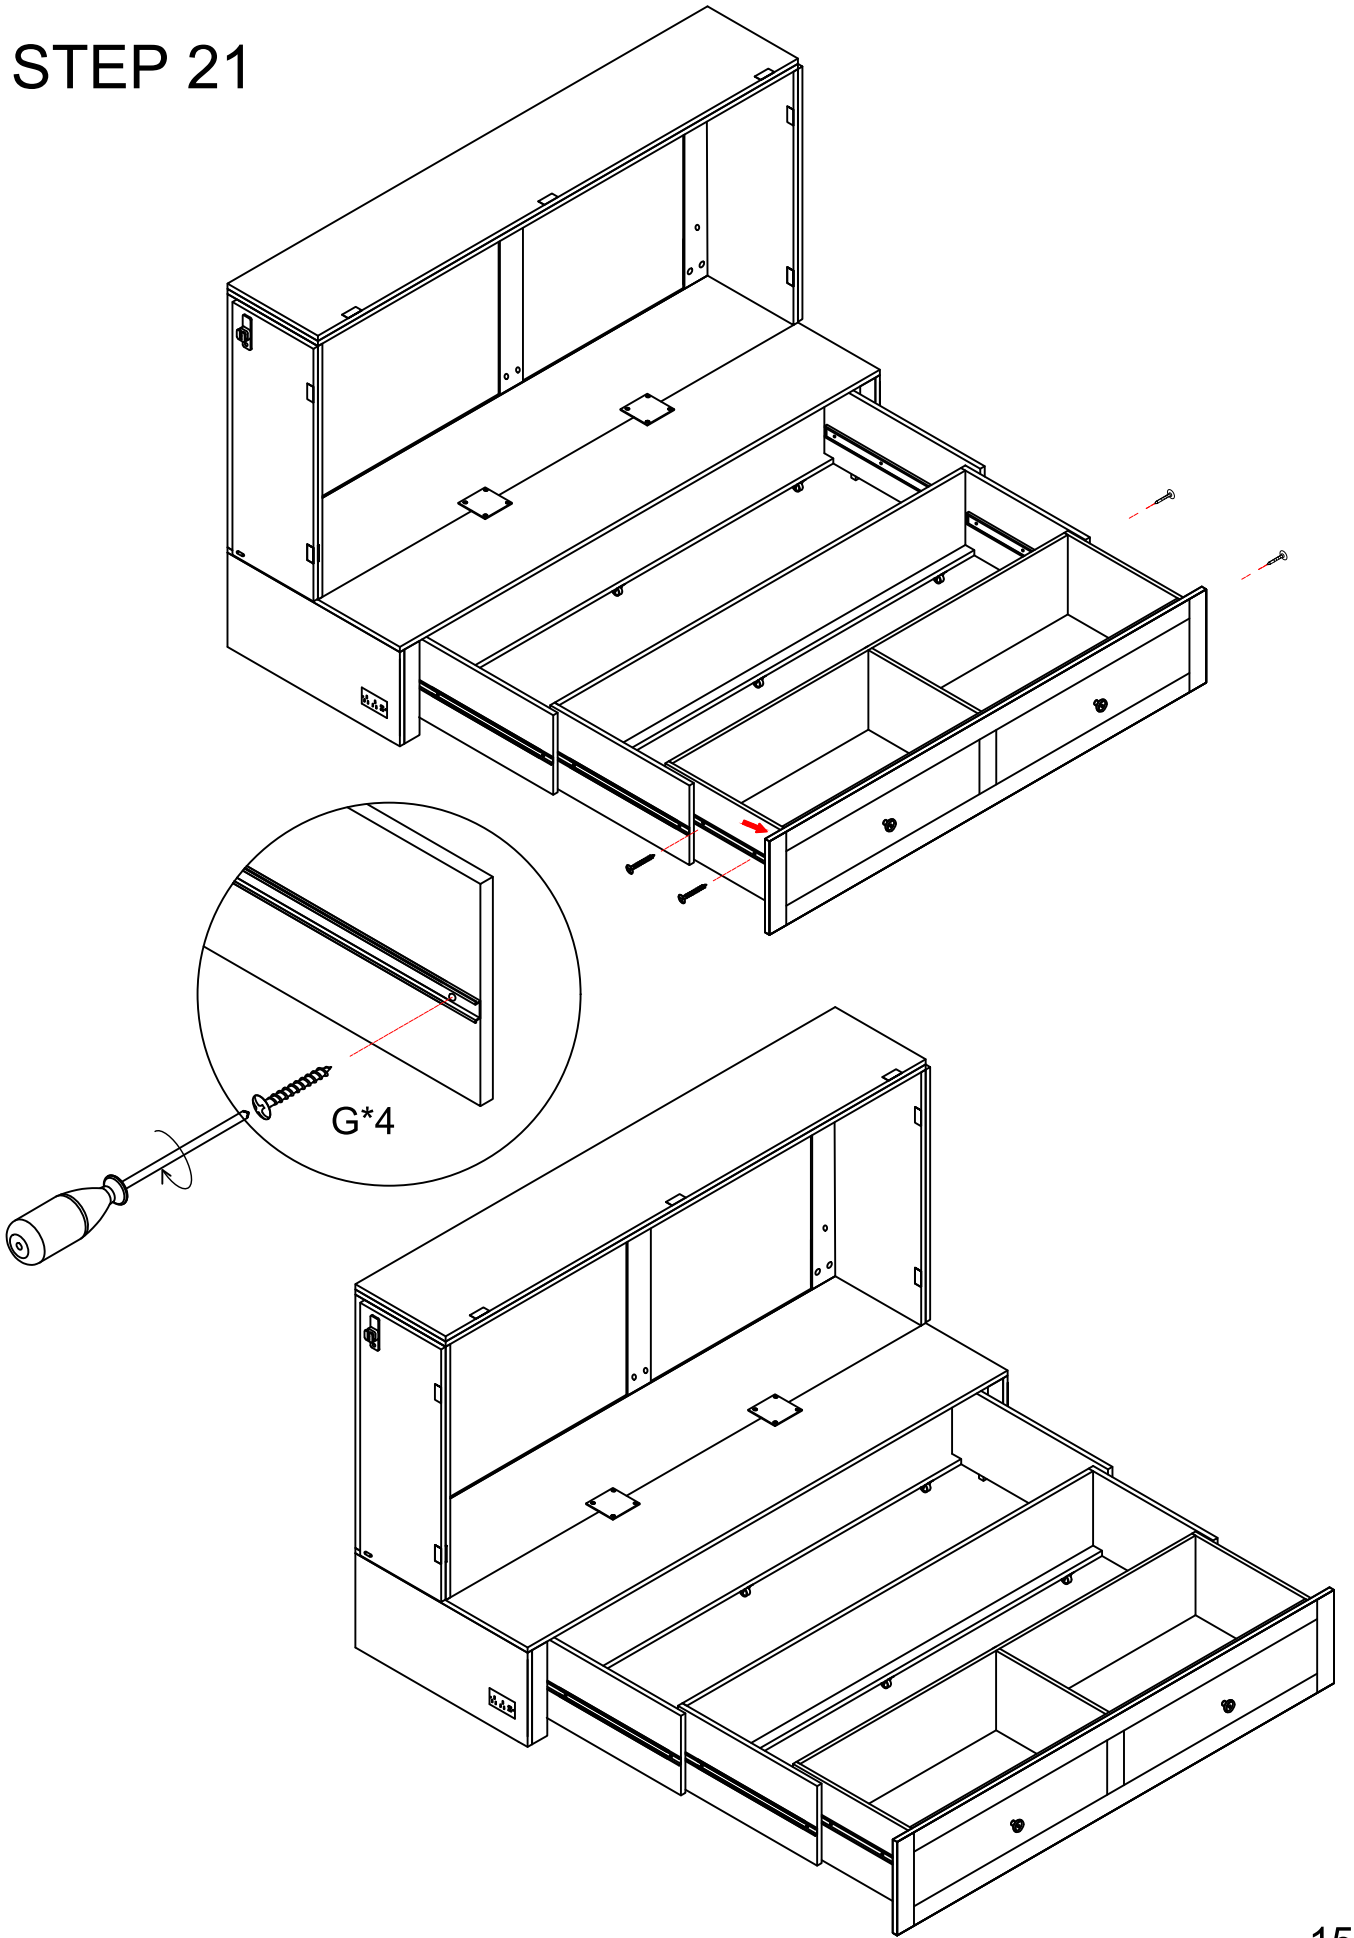STEP 21




F	M3.5*14	80 PCS	L		8 PCS
X	M15*150	4 PCS			

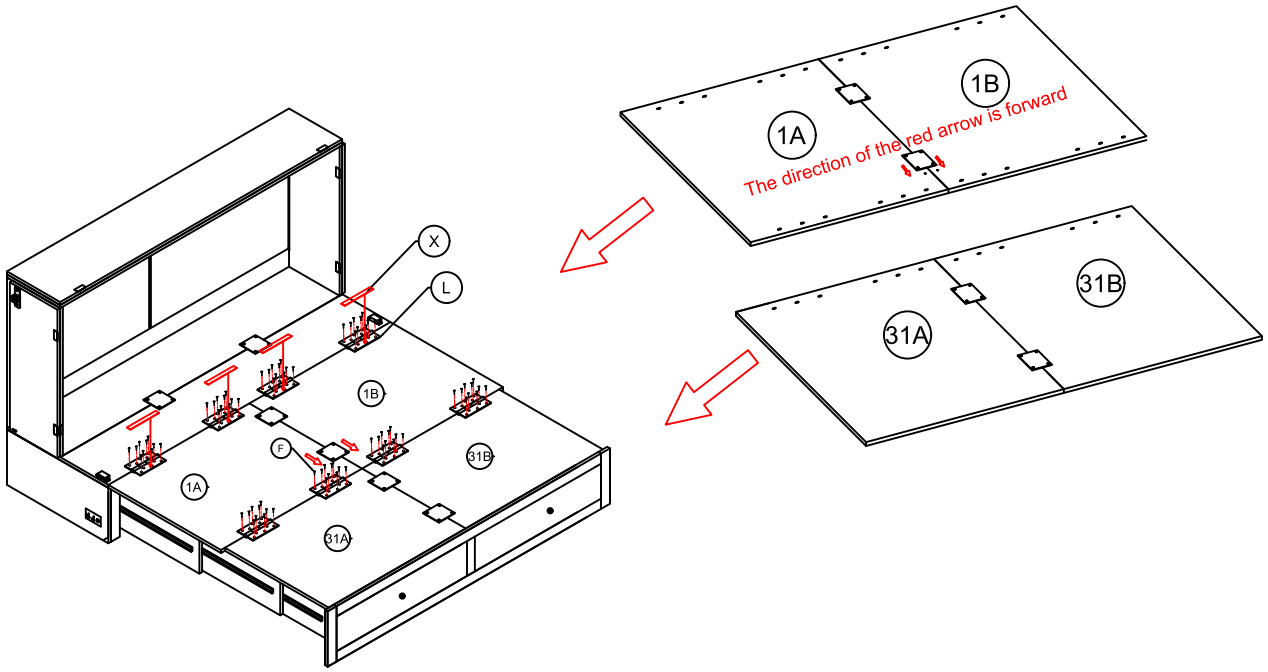STEP 22





F	M3.5*14	4 PCS	J	J-1	2 PCS
Z		2 PCS			

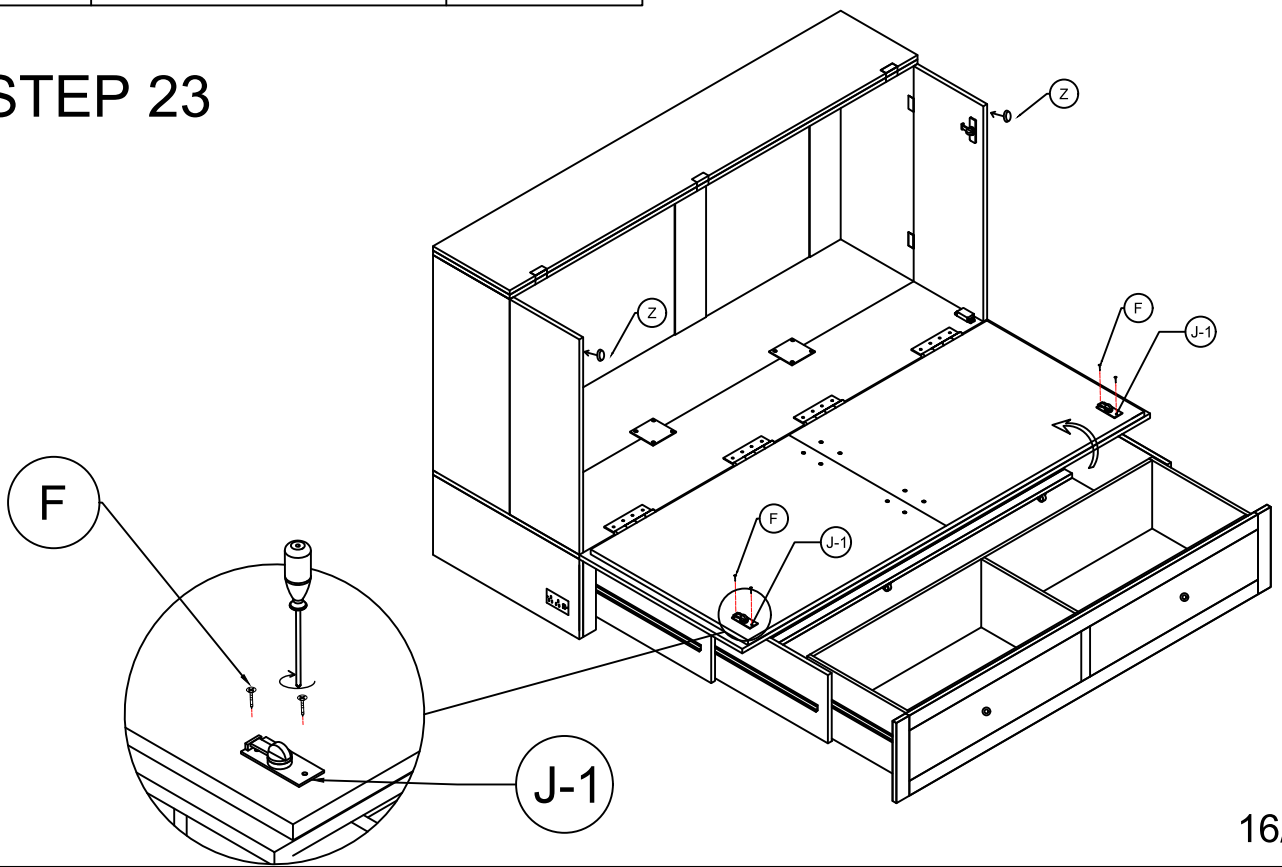
STEP 23




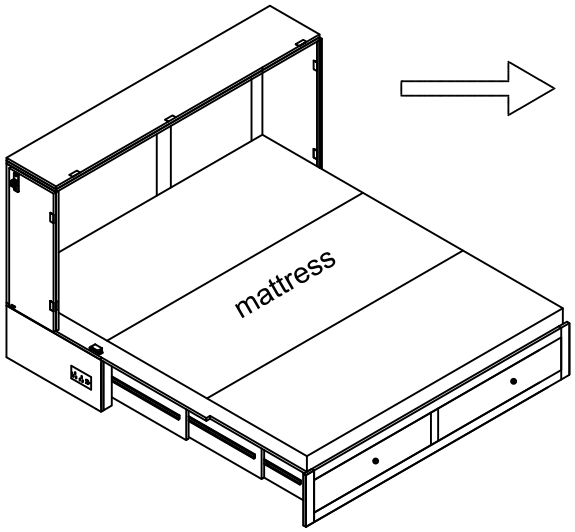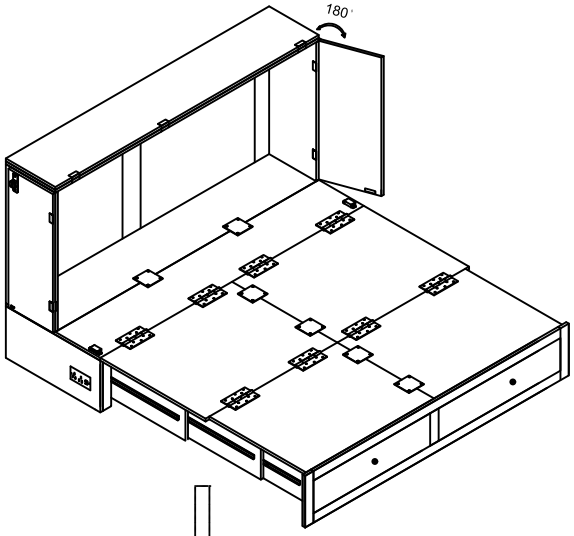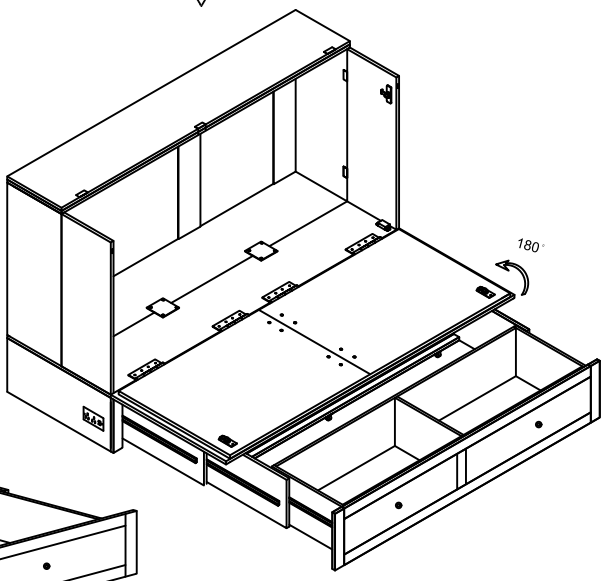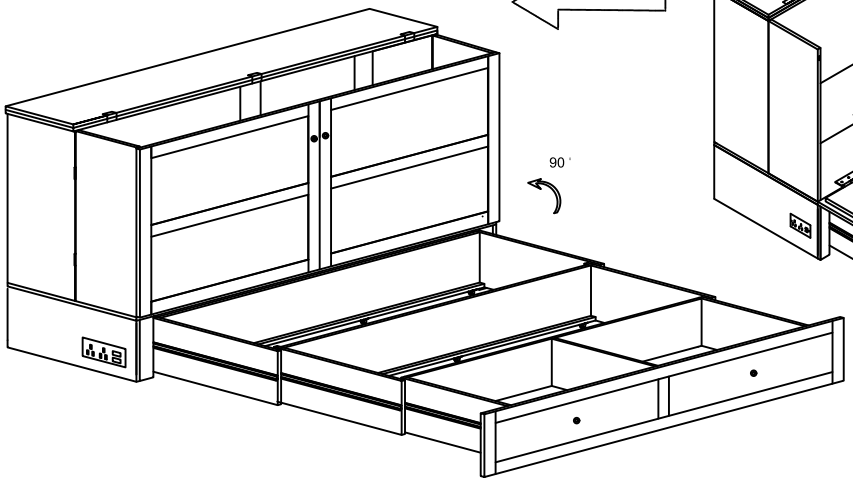STEP 24









When opening or closing, it is advisable to push and pull simultaneously with both hands.

