



Room to grow.



Contact Us

+1 (866) 597-1888

Vego Garden Academy

hello@vegogarden.com

vegogarden.com


vego_garden

Houston, TX




General Manual for Wall Trellis Systems

© Copyright 2024 Vego Garden Inc.

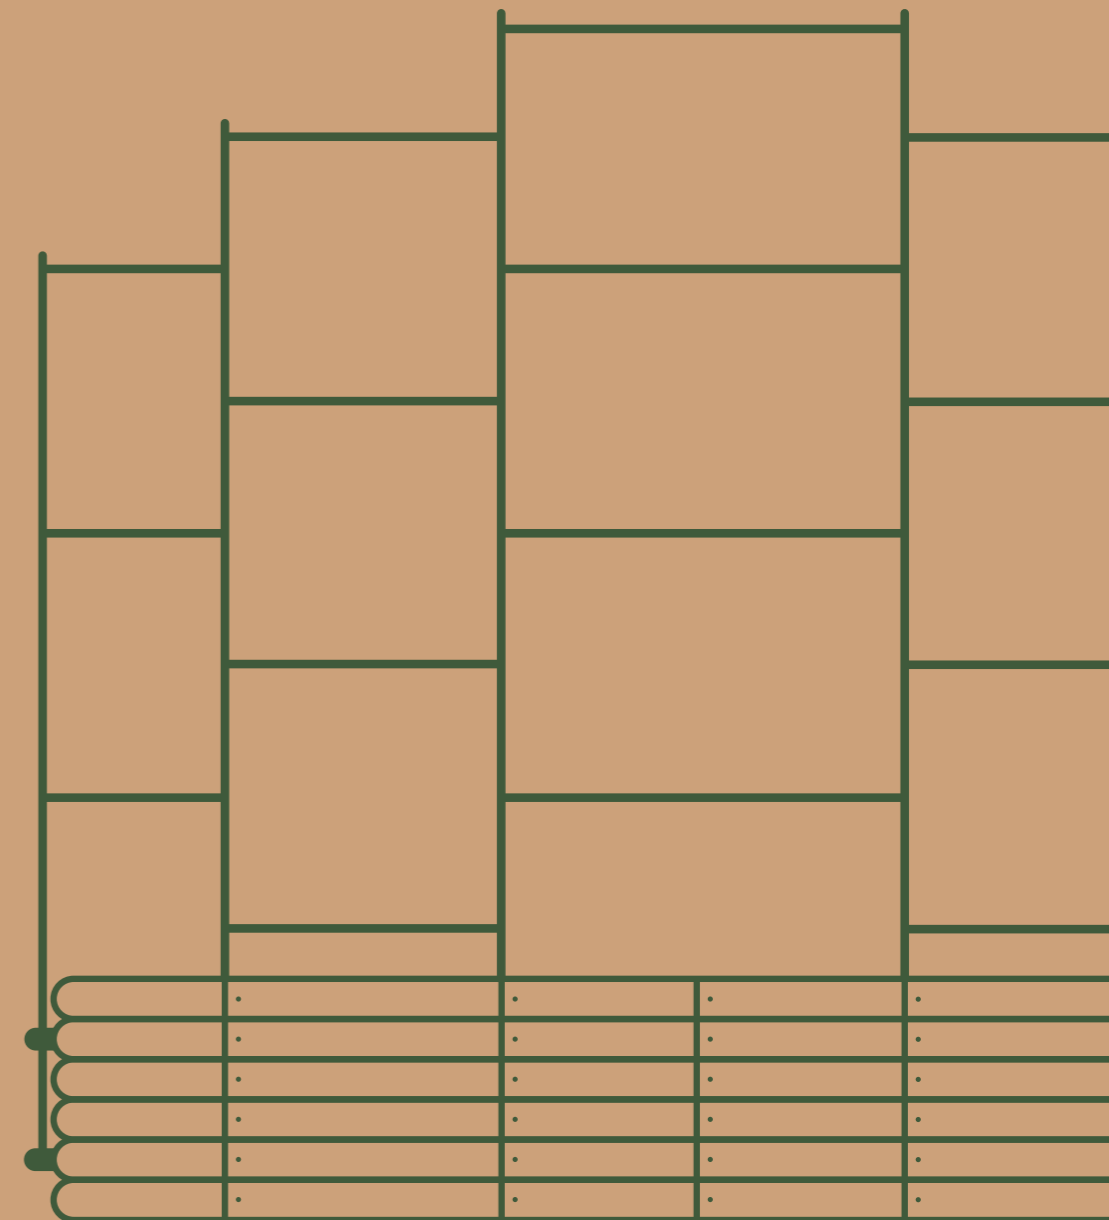


Parts List



● Square Poles

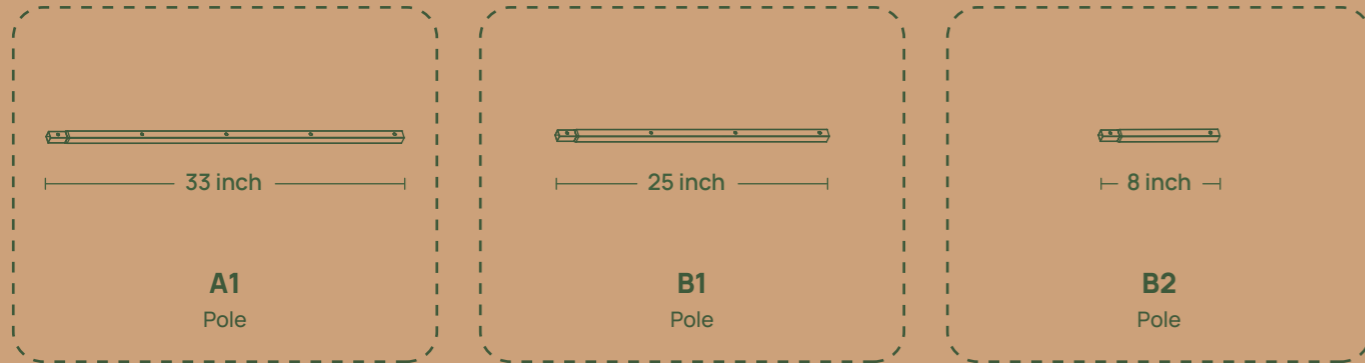

● Link Poles and Curved Poles

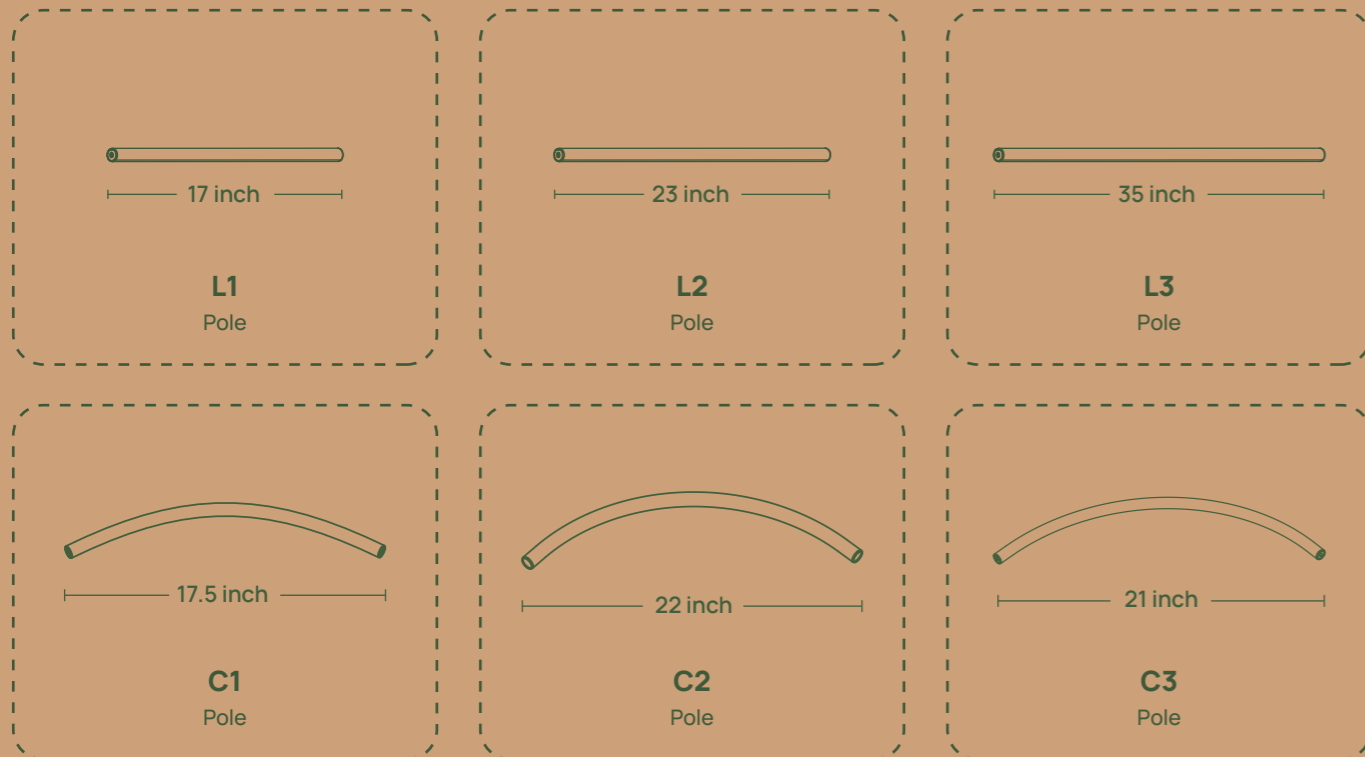

● Connectors

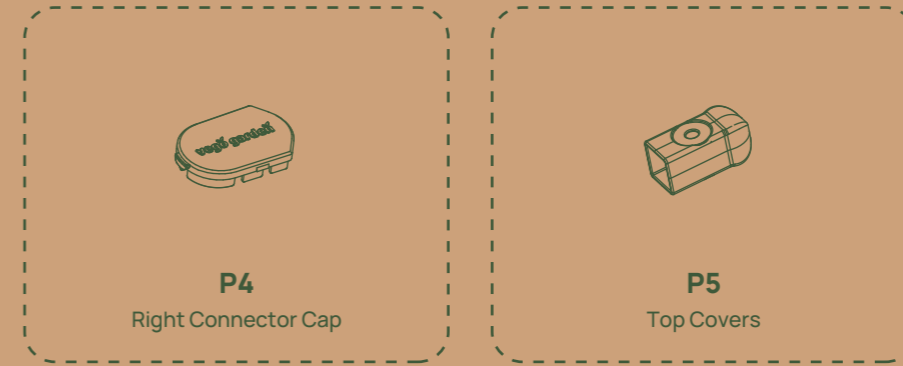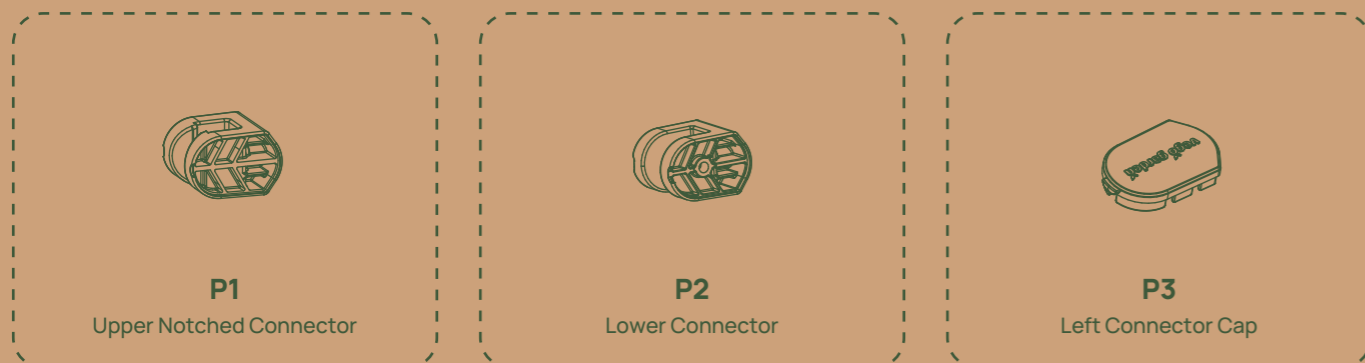








● Hardware







● Tools



(Note: This manual is designed for all Vego Garden Wall Trellises, and the variety of parts & quantity will vary depending on the model that was purchased.)

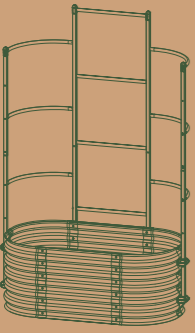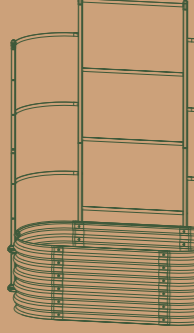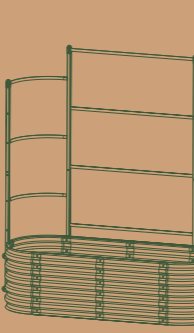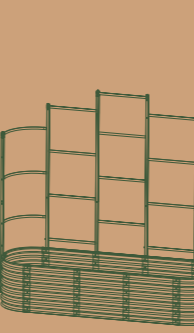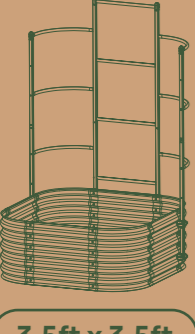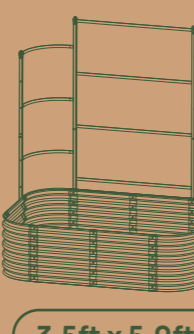
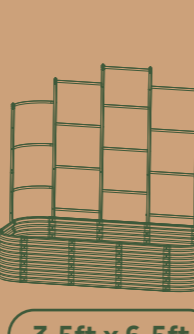
VWT35  2.0ft x 3.5ft	VWT40  2.0ft x 4.0ft	VWT50  2.0ft x 5.0ft	VWT65  2.0ft x 6.5ft
 3.5ft x 3.5ft		 3.5ft x 5.0ft	 3.5ft x 6.5ft

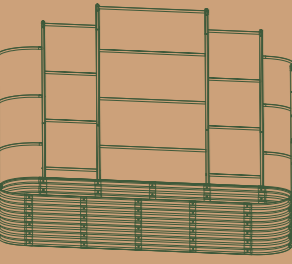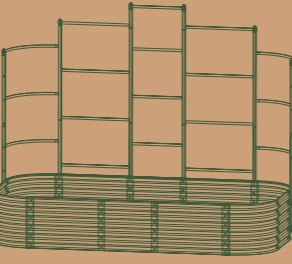VWT2080  2.0ft x 8.0ft	VWT4080  4.0ft x 8.0ft
--	---

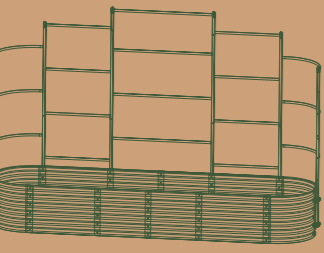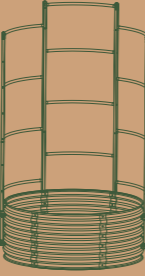VWT95  2.5ft x 9.5ft	VWTRB35  Round 3.5ft
--	---

1 Step 1: Attach Connectors (P1/P2)


First, identify the Upper Connectors, which have a notched cut out, and the Lower Connectors which have a smooth cut out. The Upper Connectors attach to the **2nd** bolt holes from the top of your garden bed, while the Lower Connectors attach to the **5th** bolt holes of your garden bed. Insert an **H2** bolt through the connector and garden bed as shown. Secure the connectors through these holes using **H2** bolts, washers, & nuts.

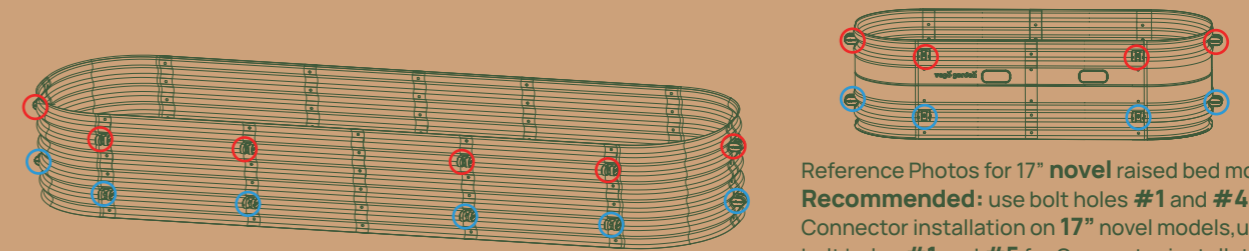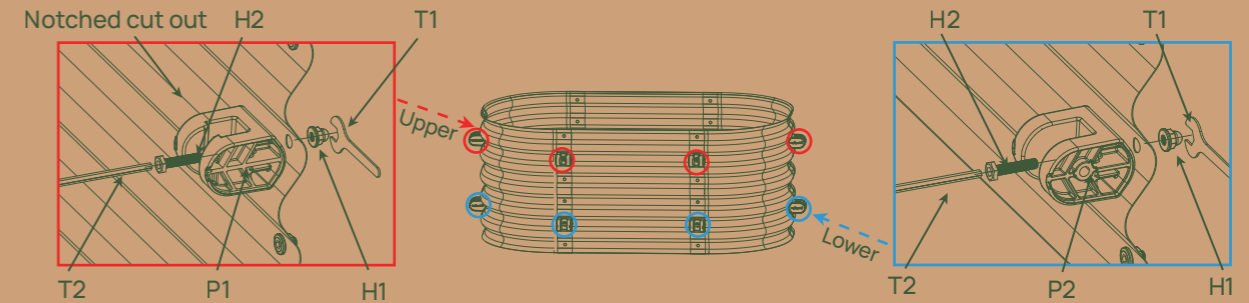


Reference Photos for 17" novel raised bed models.
Recommended: use bolt holes #1 and #4 for Connector installation on 17" novel models, use bolt holes #1 and #5 for Connector installation on 32" novel models

2 Step 2: Attach Square Poles (A1) to Connectors


Once the Connectors are secured to the garden bed, slide the longest Square Poles (A1) into the Connectors with the **flat end down**, and the **notched end up**. Secure the Square Poles (A1) by inserting H4 bolts through the Lower Connectors, and attach cap nuts.

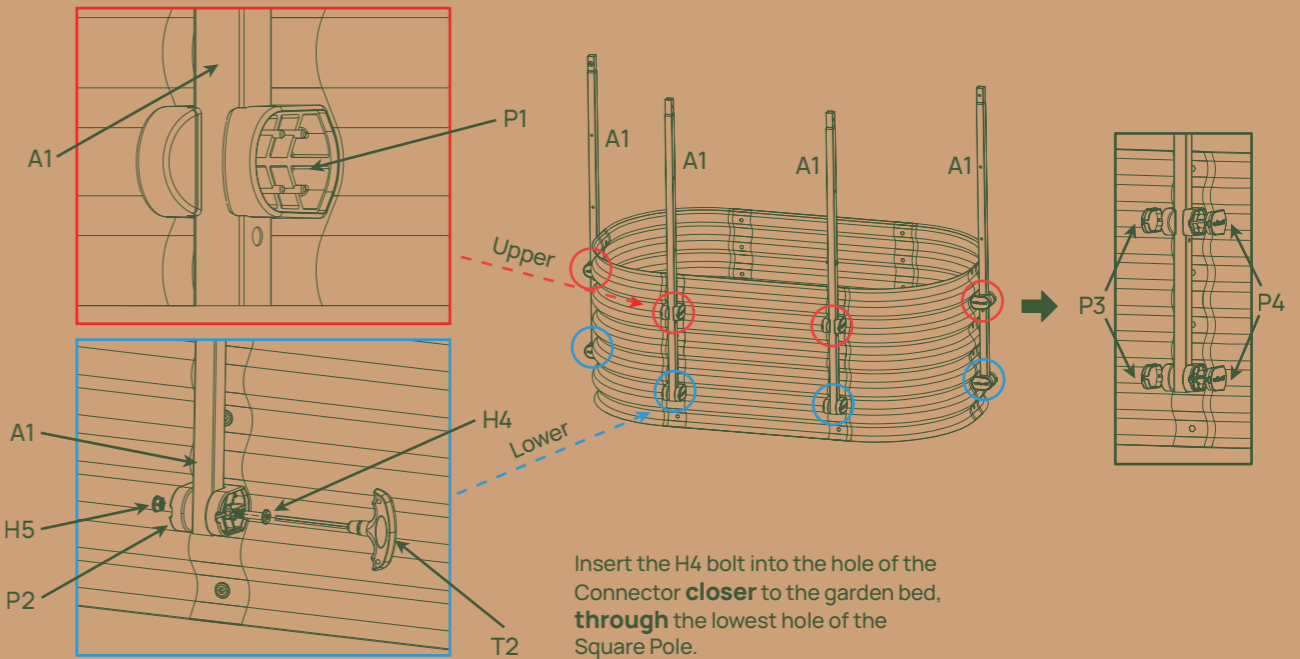

Insert the H4 bolt into the hole of the Connector **closer** to the garden bed, **through** the lowest hole of the Square Pole.

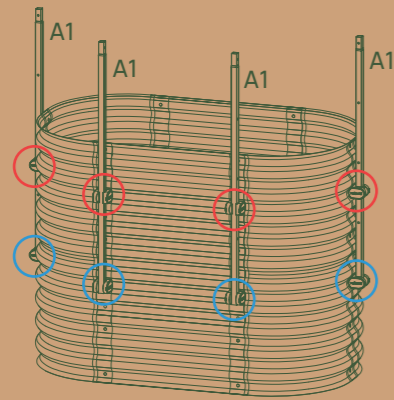



Reference Photos for 32" raised bed models. Recommended: use bolt holes #2 and #4 for Connector installation on 32" models.

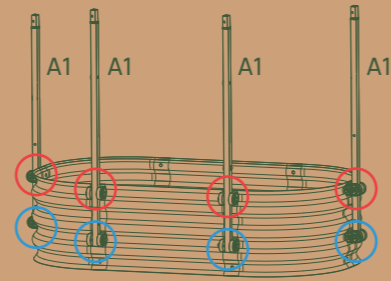


Reference Photos for 11" raised bed models. Recommended: use bolt holes #1 and #3 for Connector installation on 11" models.

3 Step 3: Attach Square Poles to Connectors


Stack remaining Square Poles (A1, B1, B2) referring to the diagram for placement, and making sure to align the pre-drilled holes in overlapping sections. Place Top Covers on to cap each vertical stanchion.

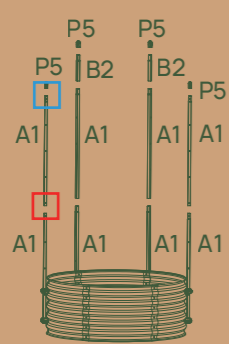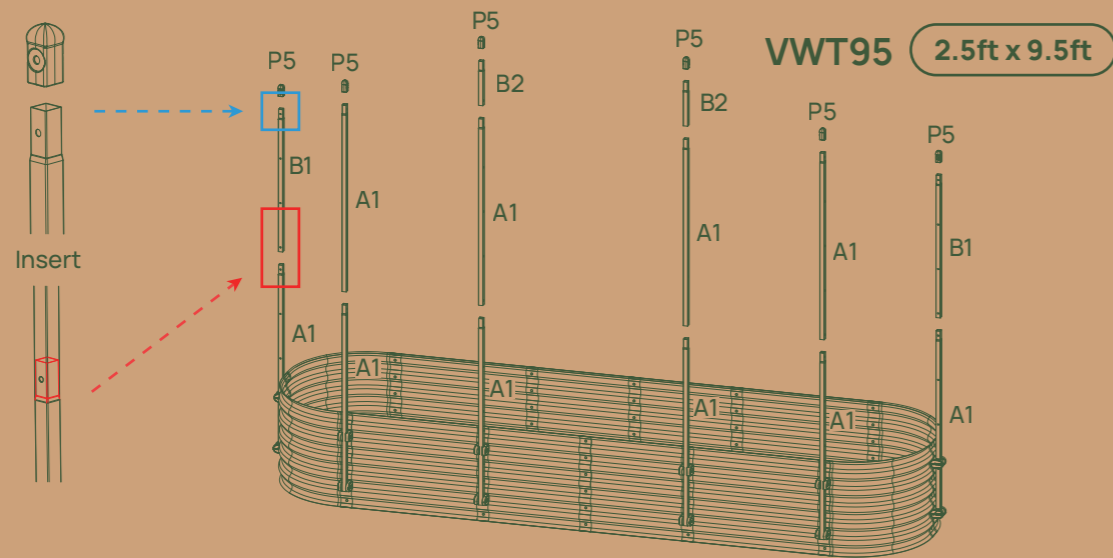


VWTRB35 Round 3.5ft

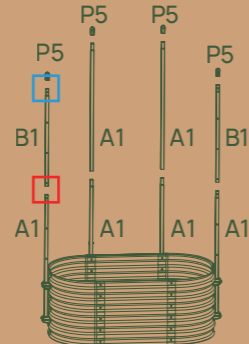


VWT35 2.0ft x 3.5ft

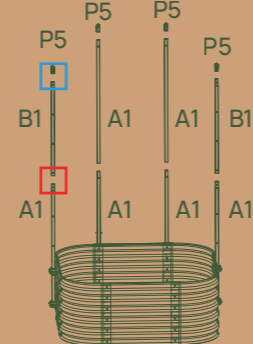


VWT35 3.5ft x 3.5ft

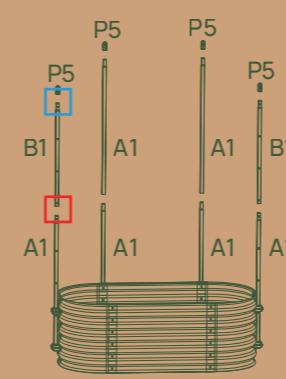


VWT40 2.0ft x 4.0ft

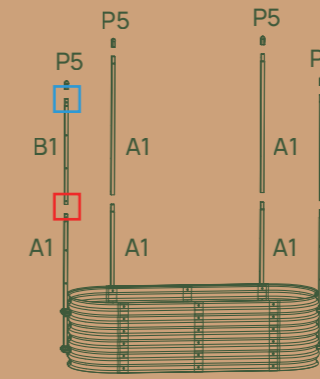


VWT50 2.0ft x 5.0ft

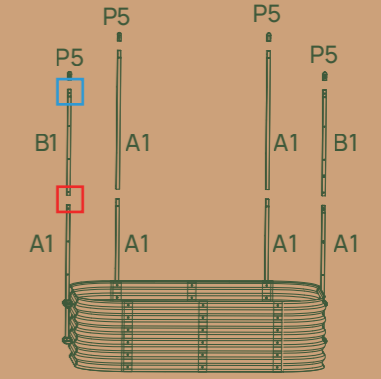


VWT50 3.5ft x 5.0ft

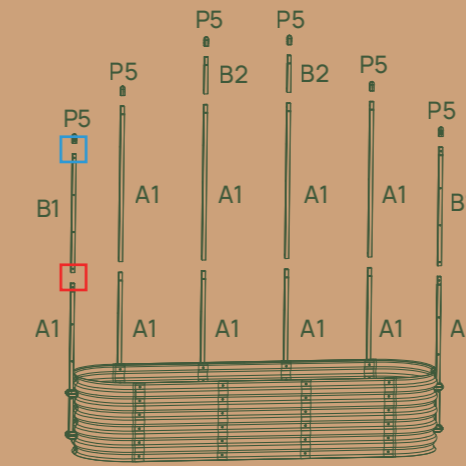


VWT65 2.0ft x 6.5ft

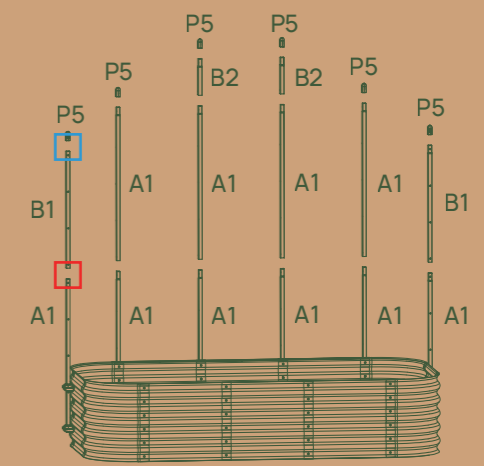

VWT65 3.5ft x 6.5ft

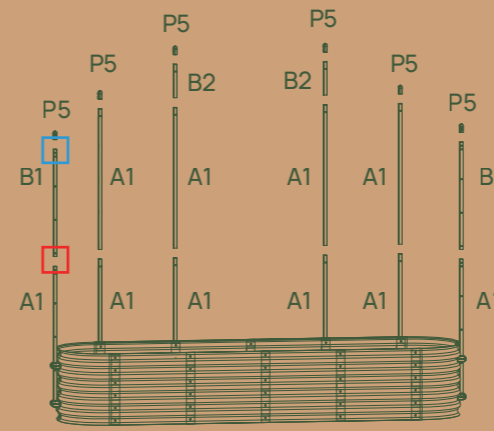


VWT2080 2.0ft x 8.0ft

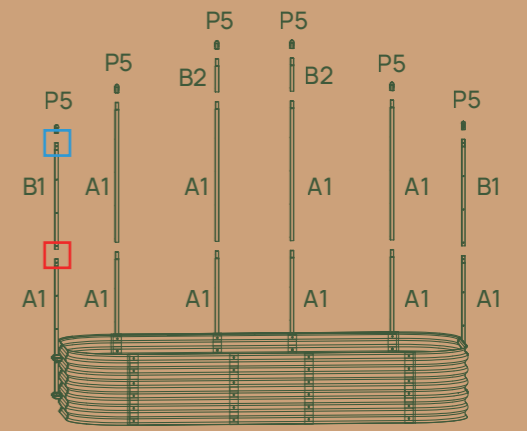

VWT4080 4.0ft x 8.0ft


4 Step 4: Attach Link Poles (L1,L2,L3) and Curved Poles (C1,C2,C3) to Connectors

Connect the columns of Square Poles to each other using Link Poles (L1, L2, L3) and Curved Poles (C1, C2, C3.) For placement, refer to the diagrams, noting that horizontal poles alternate. Insert the larger Interior Plugs (H7) into the holes on the sides that the Links will connect to, and insert the smaller Exterior Plugs (H8) into the holes on the outside. These plugs keep moisture from getting into the trellis parts. Then insert H3 bolts through the Square Poles and into Link Poles, and tighten.

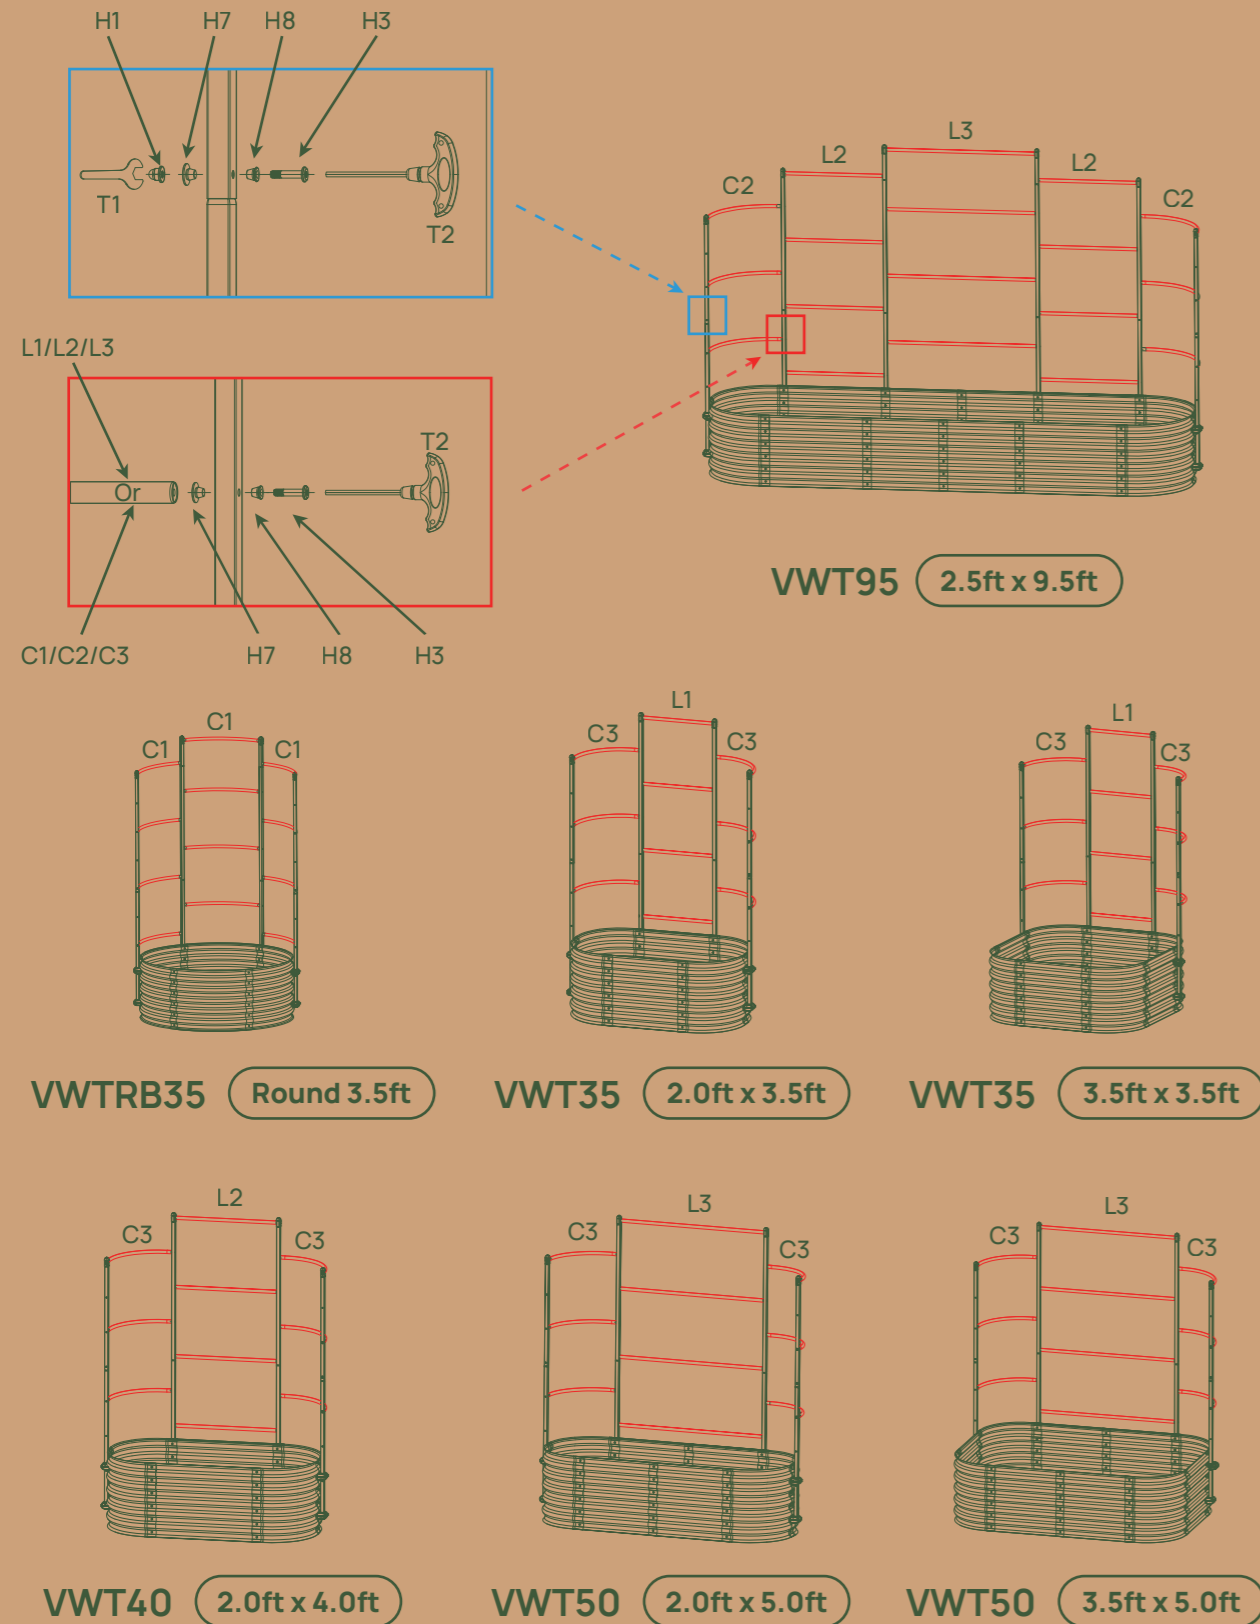

5 Step 5: Plug Remaining Holes

Fill remaining empty holes with Plug Inserts (H6)
Trellis is complete!

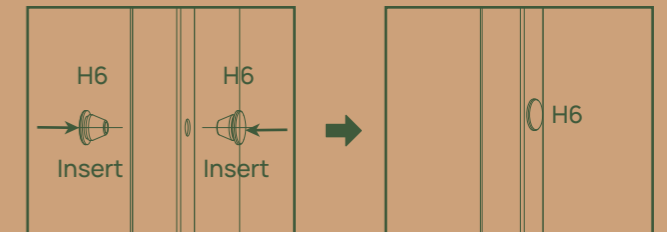

Tip

If desired, hemp ropes can be tied to the trellis to help vines climb. Hemp rope is not included, but recommended as it can be naturally composted once used.

