



N704P277409A

N704P277410A



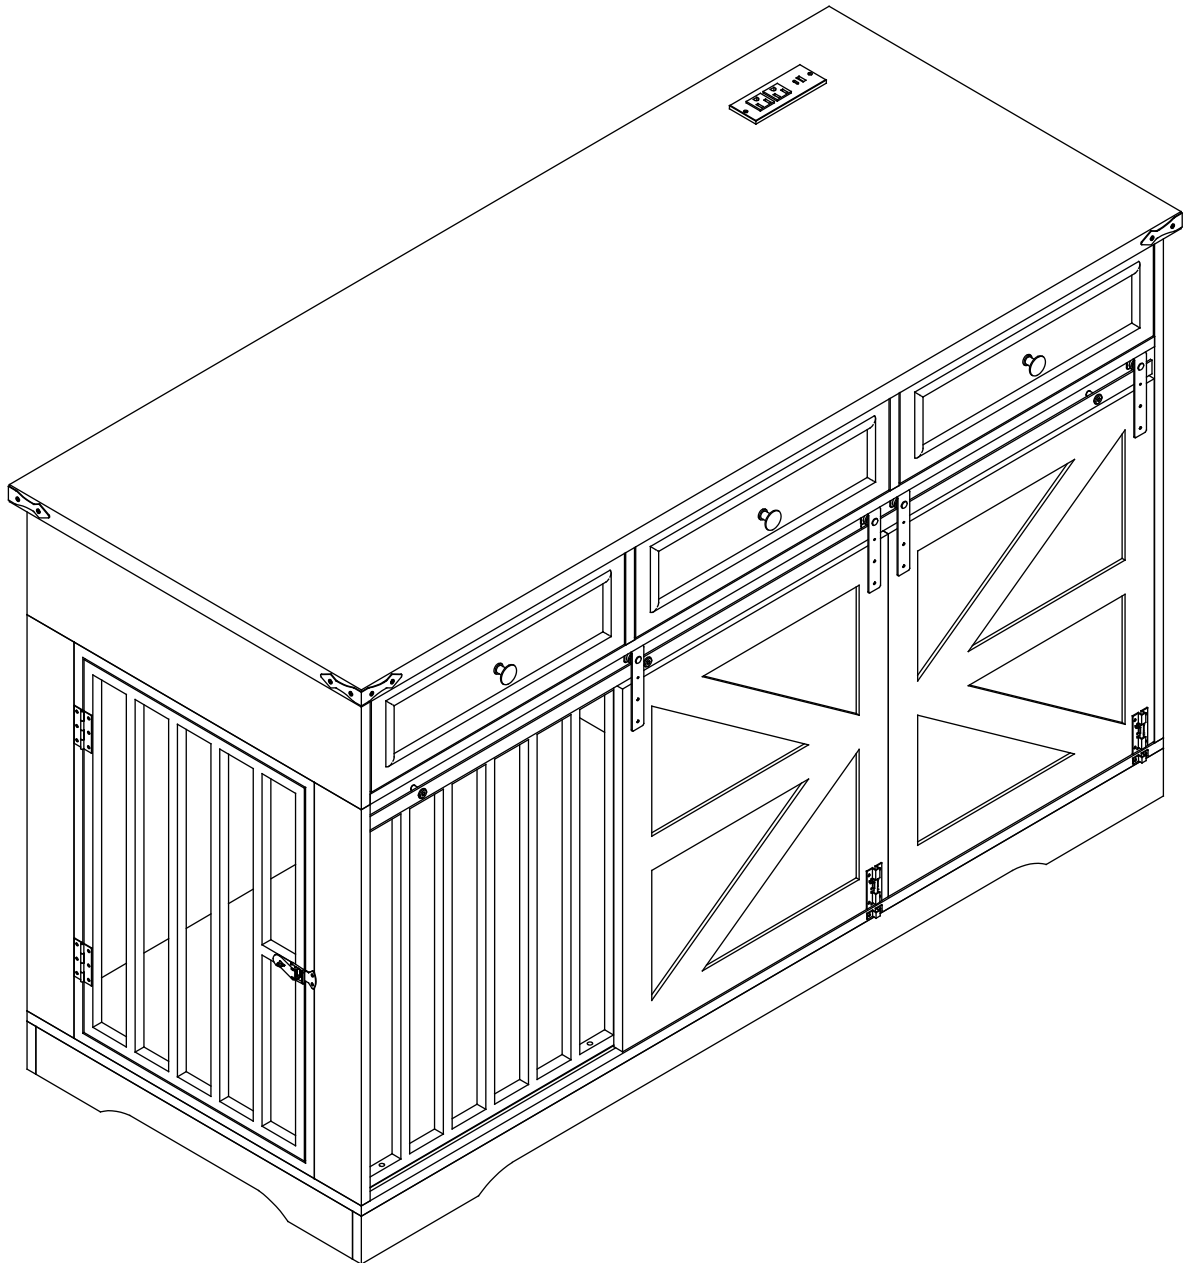


2PERS

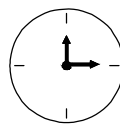

45 MIN

Tool Required Not Provided

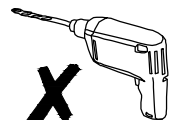



[EN]

Warning: Please read these instructions fully before starting assembly. Check you have all the components and tools listed on pages. Keep the instructions for later reference. Parts of the assembly will be easier with 2 people. Seek professional assistance if necessary.

Warning: Please place all parts on a flat surface. Place a soft blanket or similar underneath to protect against scratches or stains. Avoid dragging or sliding components across the floor.


Warning: Regularly check all fittings and fastenings to ensure they are secure and to prevent accidents. If any parts are missing, broken, damaged, or worn, discontinue use of the product until repairs have been made using factory authorized parts.

Warning: Do not allow children to climb on the furniture as this may result in tipping and serious personal injury. Assemble the furniture away from the reach of children.
























Warning: Do not place furniture close to fire sources or high-temperature objects to avoid the risk of fire. Do not place furniture in damp environments to prevent material damage.


Warning: Clean furniture with a damp cloth or alcohol, avoid using cleaning agents containing corrosive chemicals.

Warning: This product is equipped with an anti-tilt device. Please be sure to install this device to prevent unnecessary injuries caused by tipping.

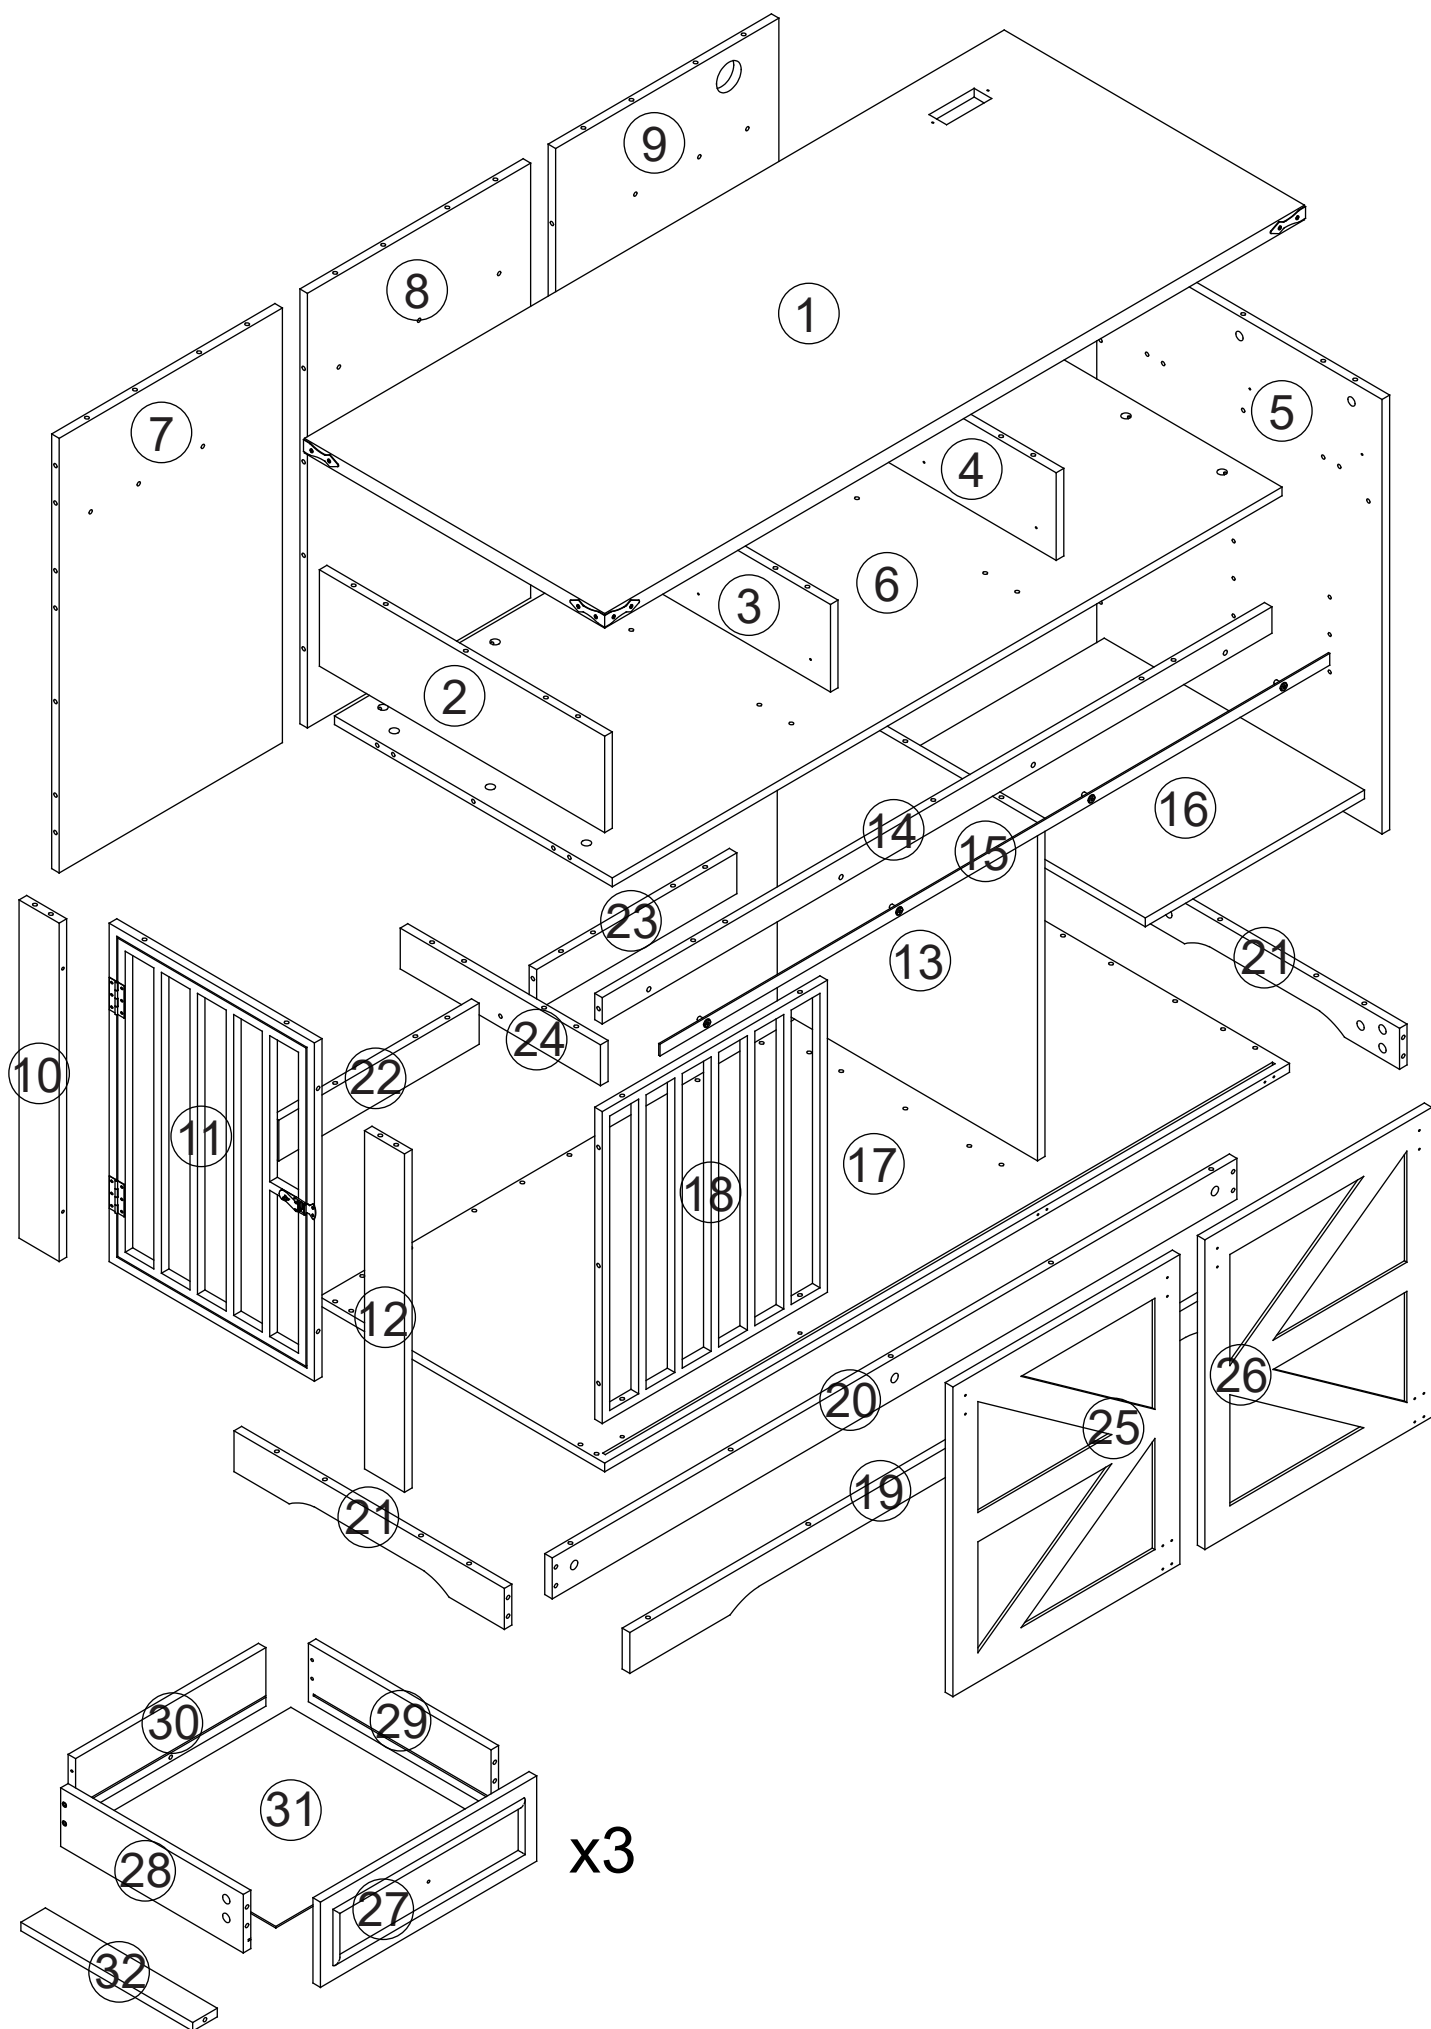


Hardwareliste

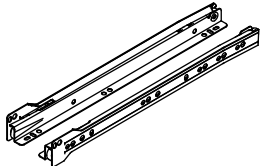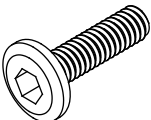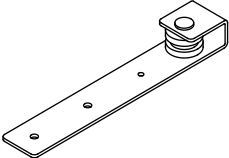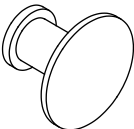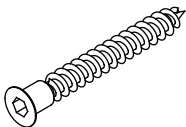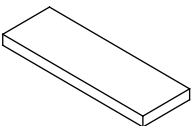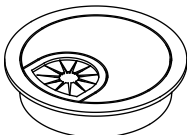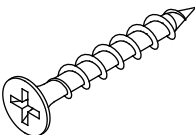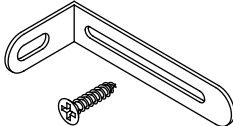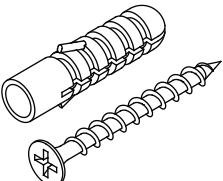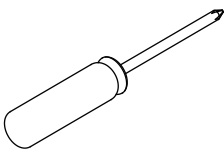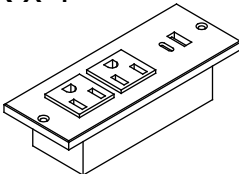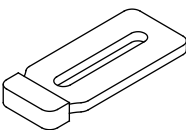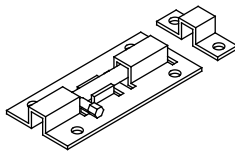
A x 108+2  7x40mm	B x 108+2  15x10mm	C x 70+2 	D x 24+2  3.5x15mm	E x 3 
F x 9+1 	G x 4 	H x 3 	I x 3 	J x 8+1 
K x 4 	L x 1 	M x 12+1 	N x 108+2 	O x 2 
P x 2 	Q x 1 	R x 1 	S x 4 	T x 4 
U x 6+1  3.5x15mm	V x 2 	W x 24+2  3.5x12mm	X x 1 	

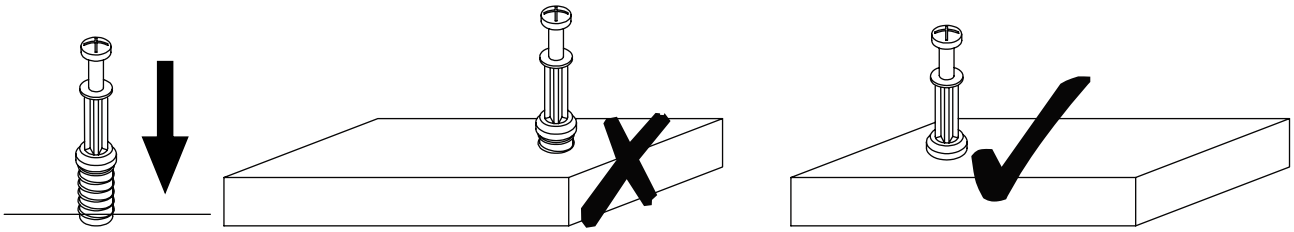


EN_QUICKFIT: Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

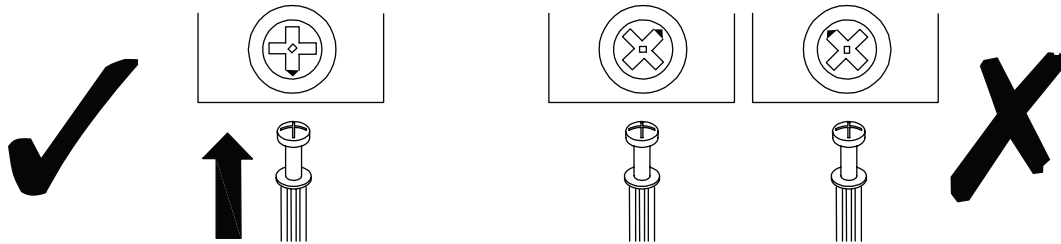

EN_CAM LOCK: When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.

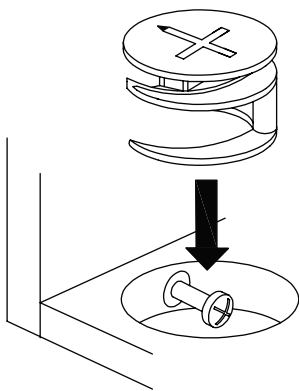















EN_Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.

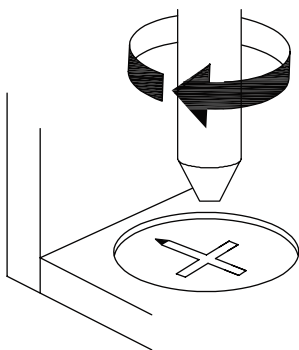















EN_Turn cam lock clockwise to tighten.

Before installation, insert the screws into the holes and tighten them, but do not tighten them to 100%, 70% to 80% is sufficient. Finally, after all screws are installed, tighten all screws to 100%.


N704P277409A

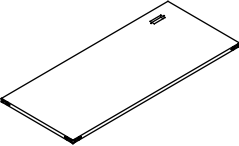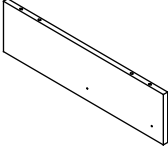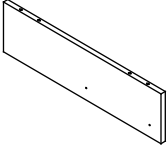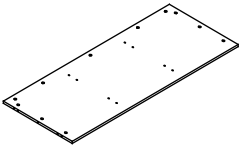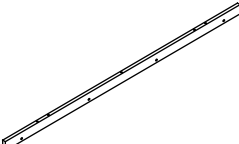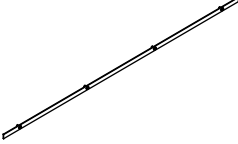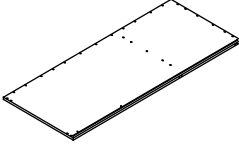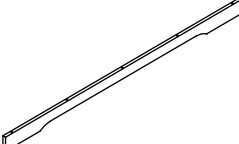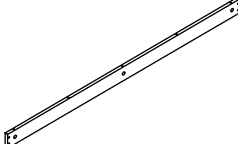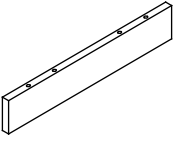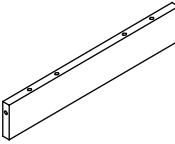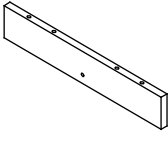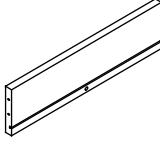 ① x1	 ③ x1	 ④ x1	 ⑥ x1	 ⑩ x1	 ⑫ x1
 ⑭ x1	 ⑮ x1	 ⑰ x1	 ⑲ x1	 ⑳ x1	 ㉒ x1
 ㉓ x1	 ㉔ x1	 ⑳ x3	 ⑳ x3		


N704P277410A

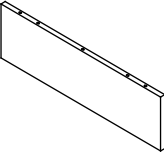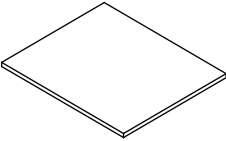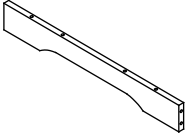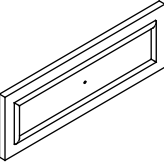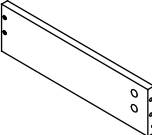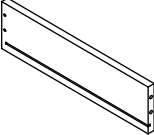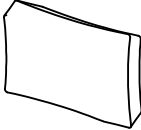 ② x1	 ⑤ x1	 ⑦ x1	 ⑧ x1	 ⑨ x1	 ⑪ x1
 ⑬ x1	 ⑬ x1	 ⑱ x1	 ㉑ x2	 ㉕ x1	 ㉖ x1
 ㉗ x3	 ㉘ x3	 ㉙ x3	 ㉚ x3	 Hardware	

1

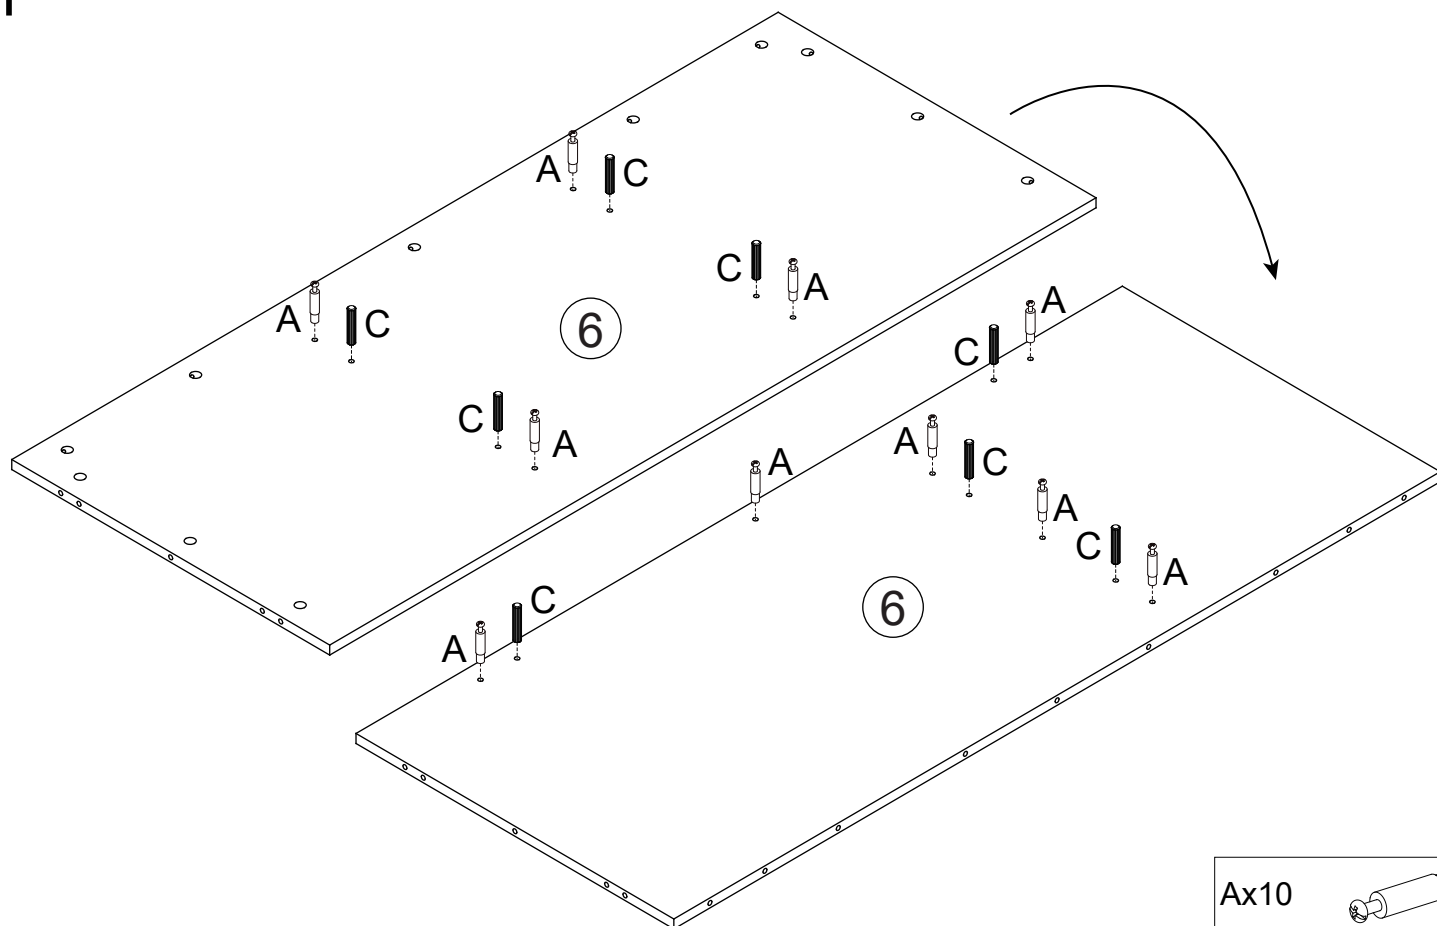


Ax10




Cx8




2

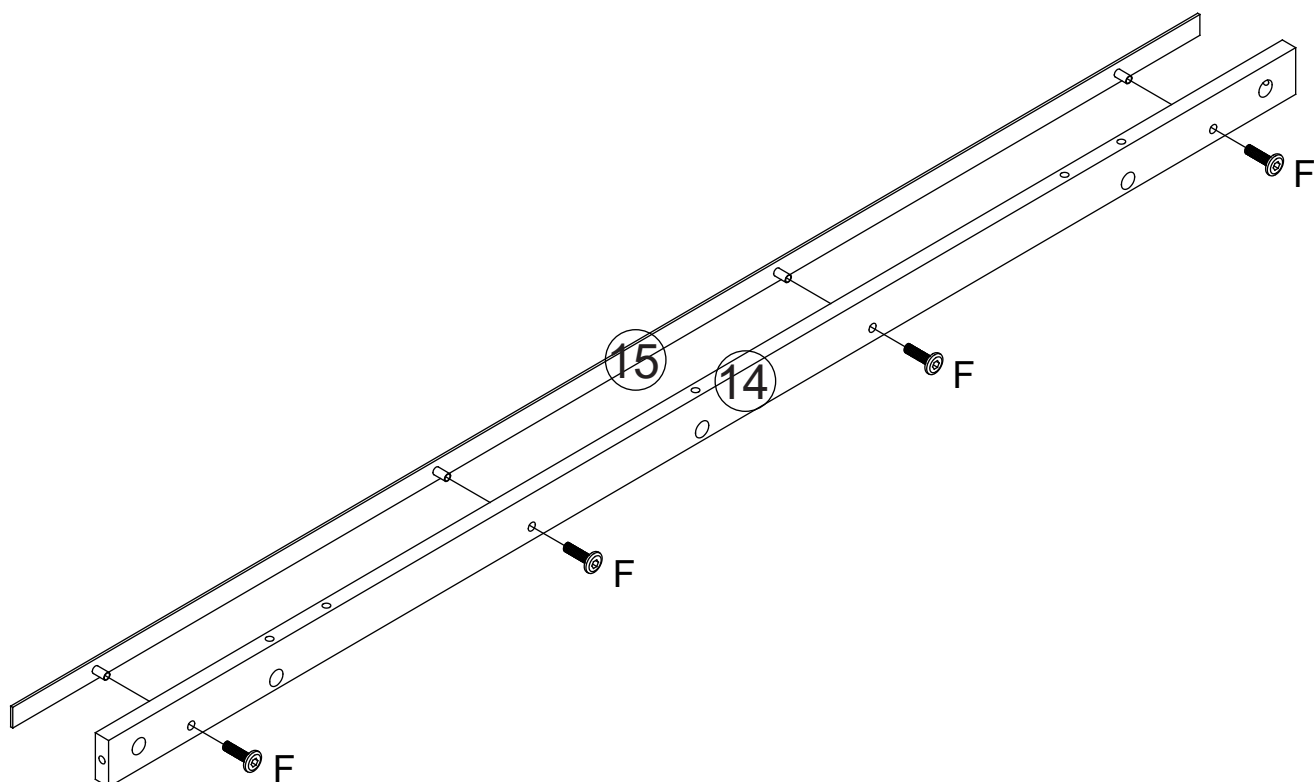

Fx4




3

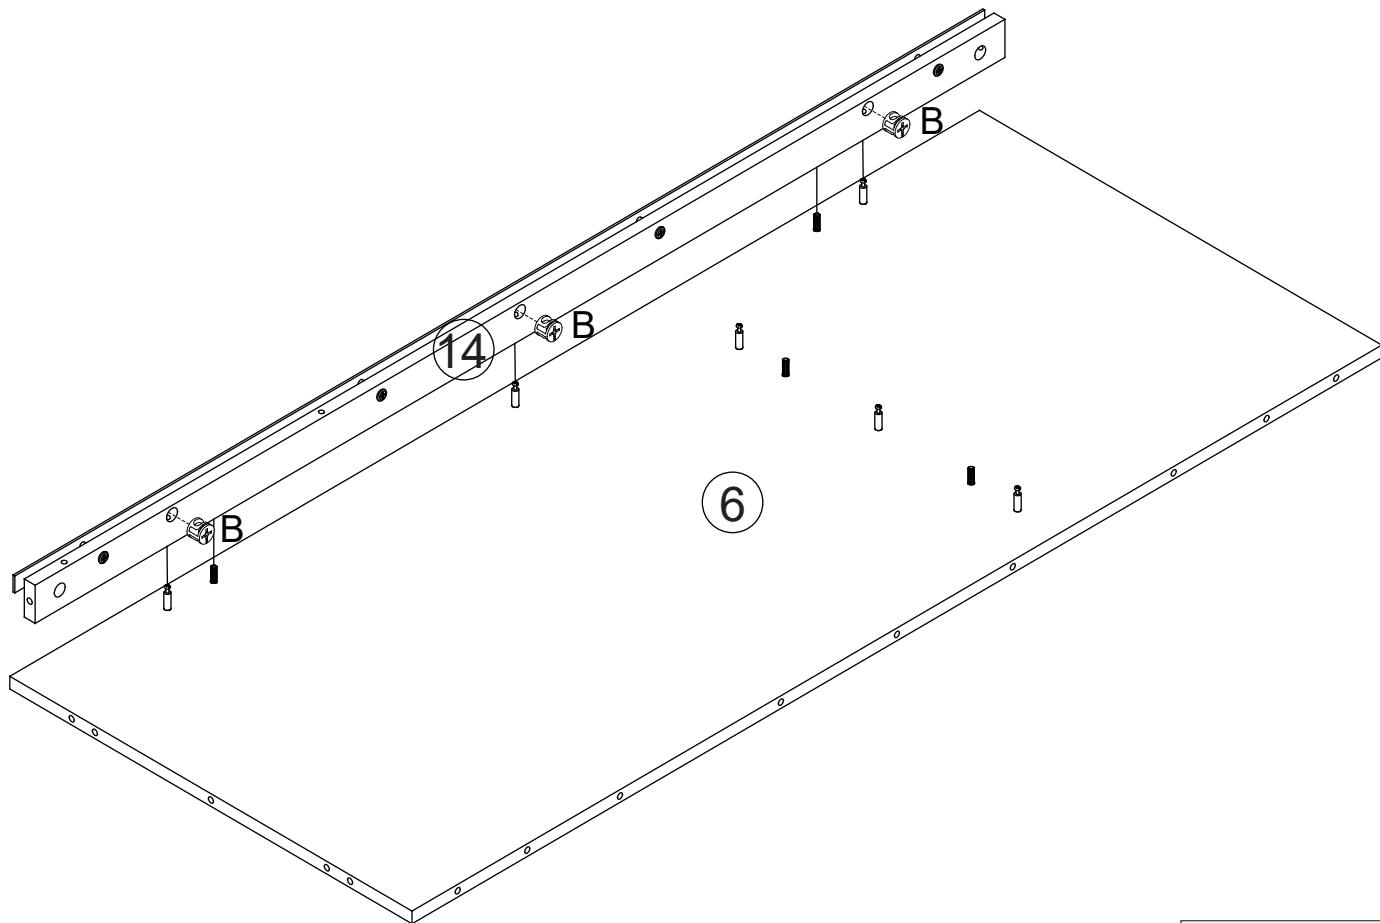


Bx3




4

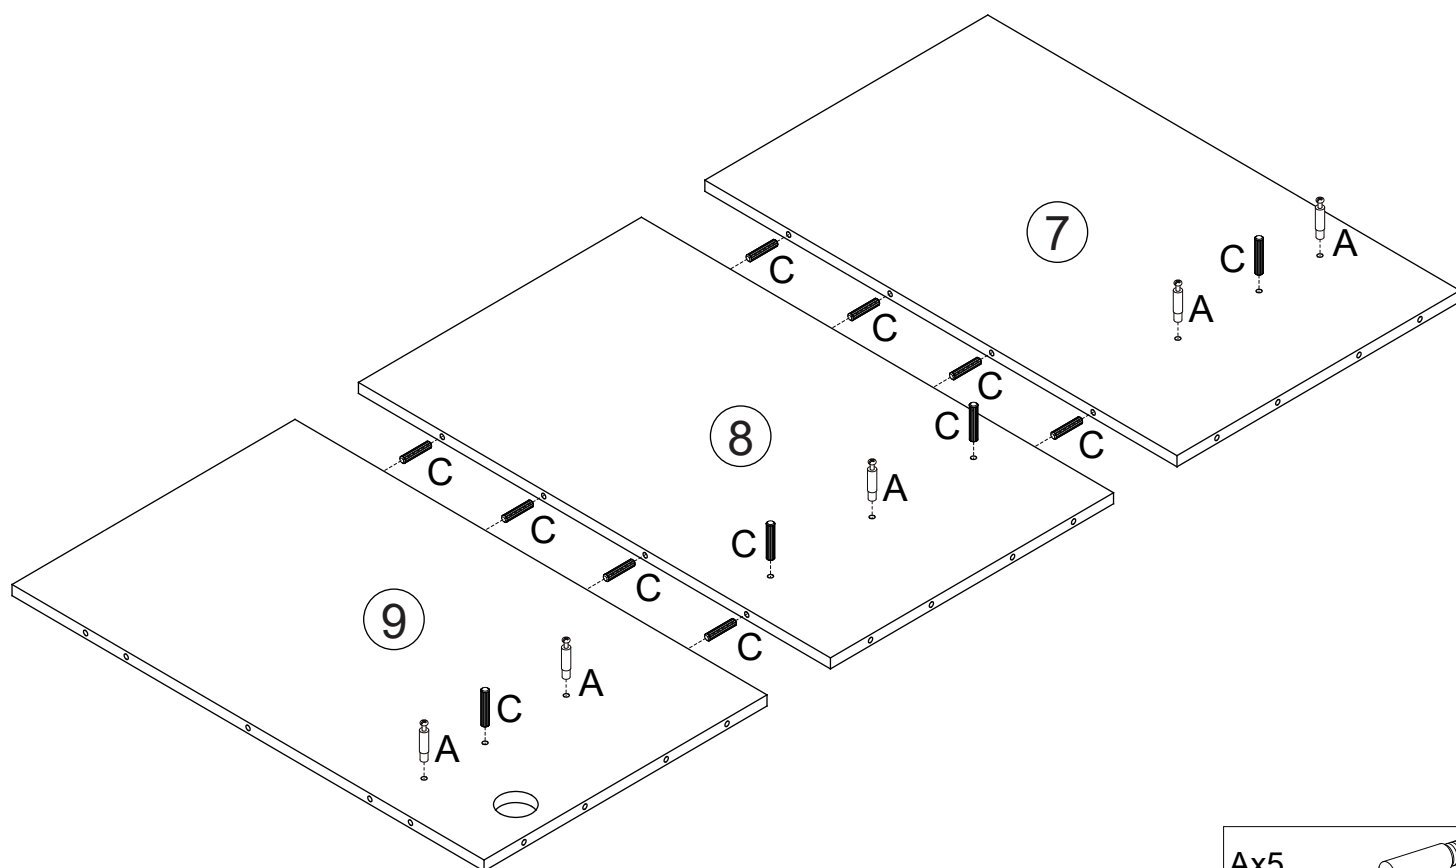


Ax5



Cx12




5

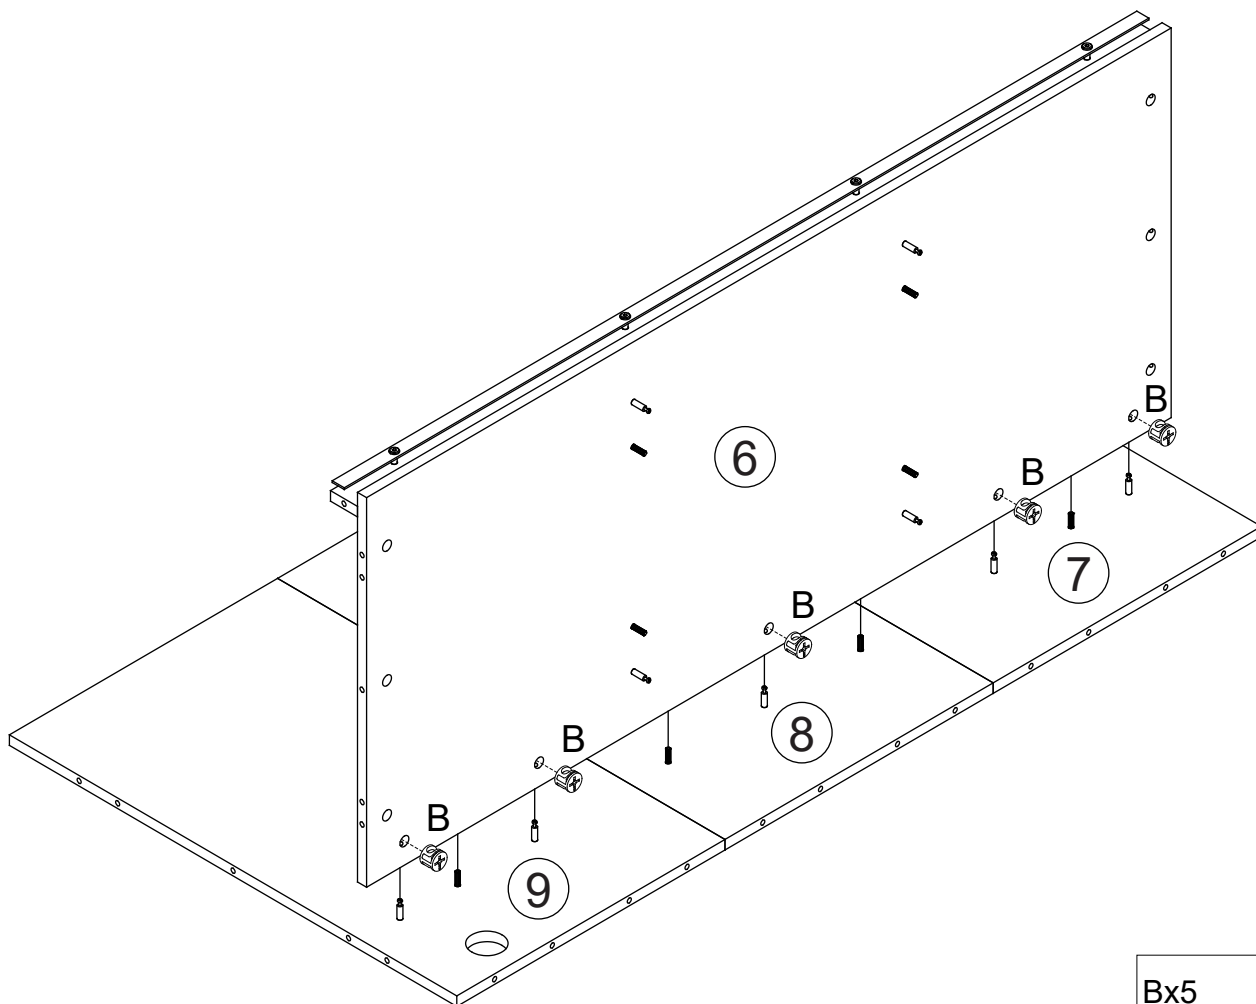

Bx5



6

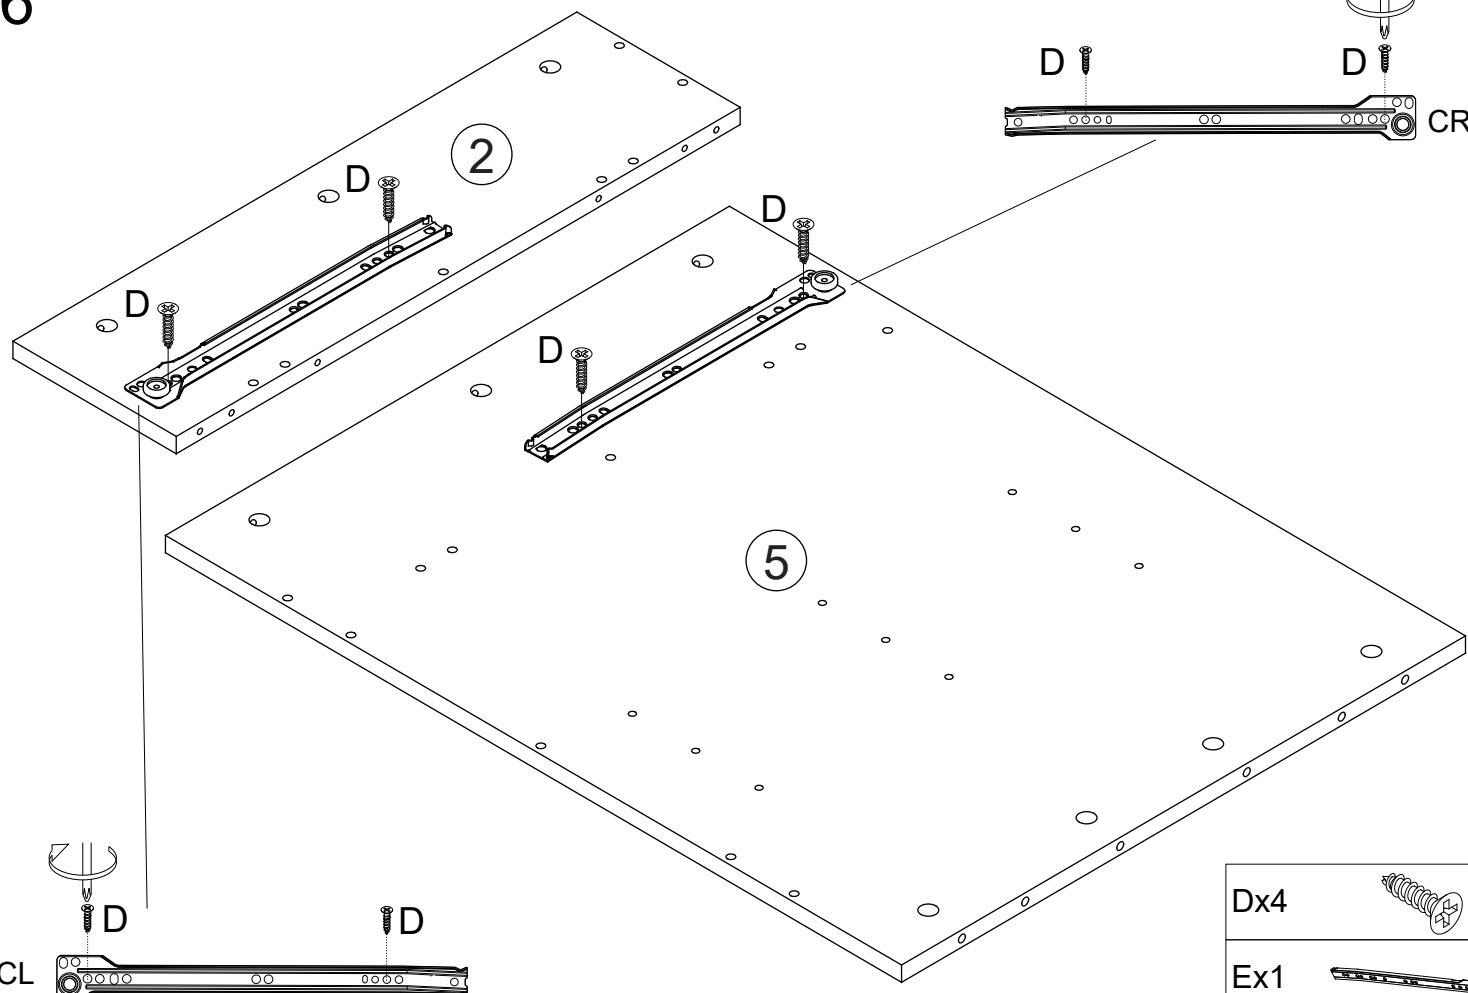


Dx4



Ex1




7

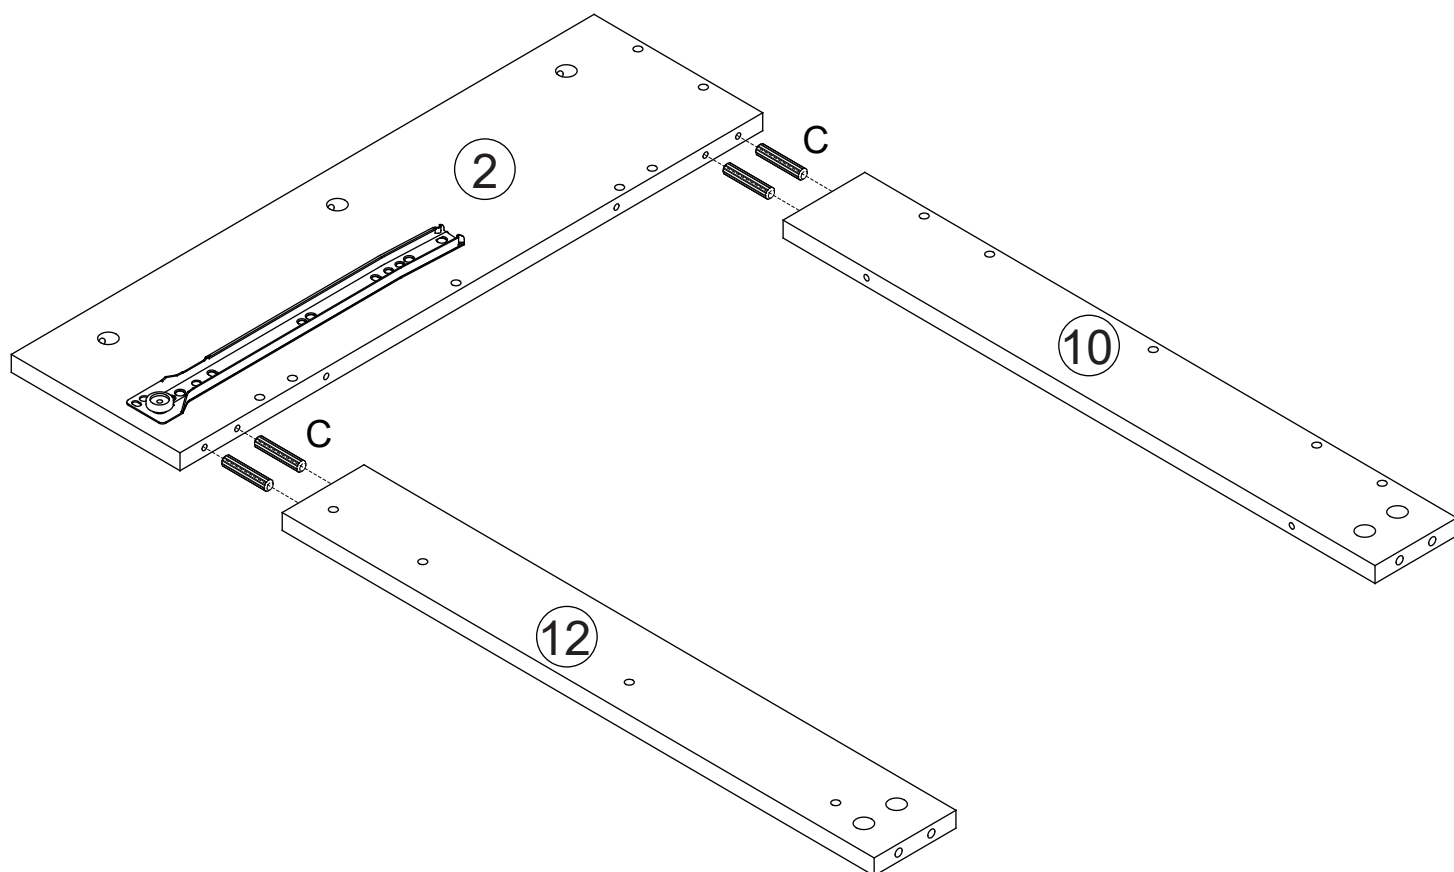


Cx4



8

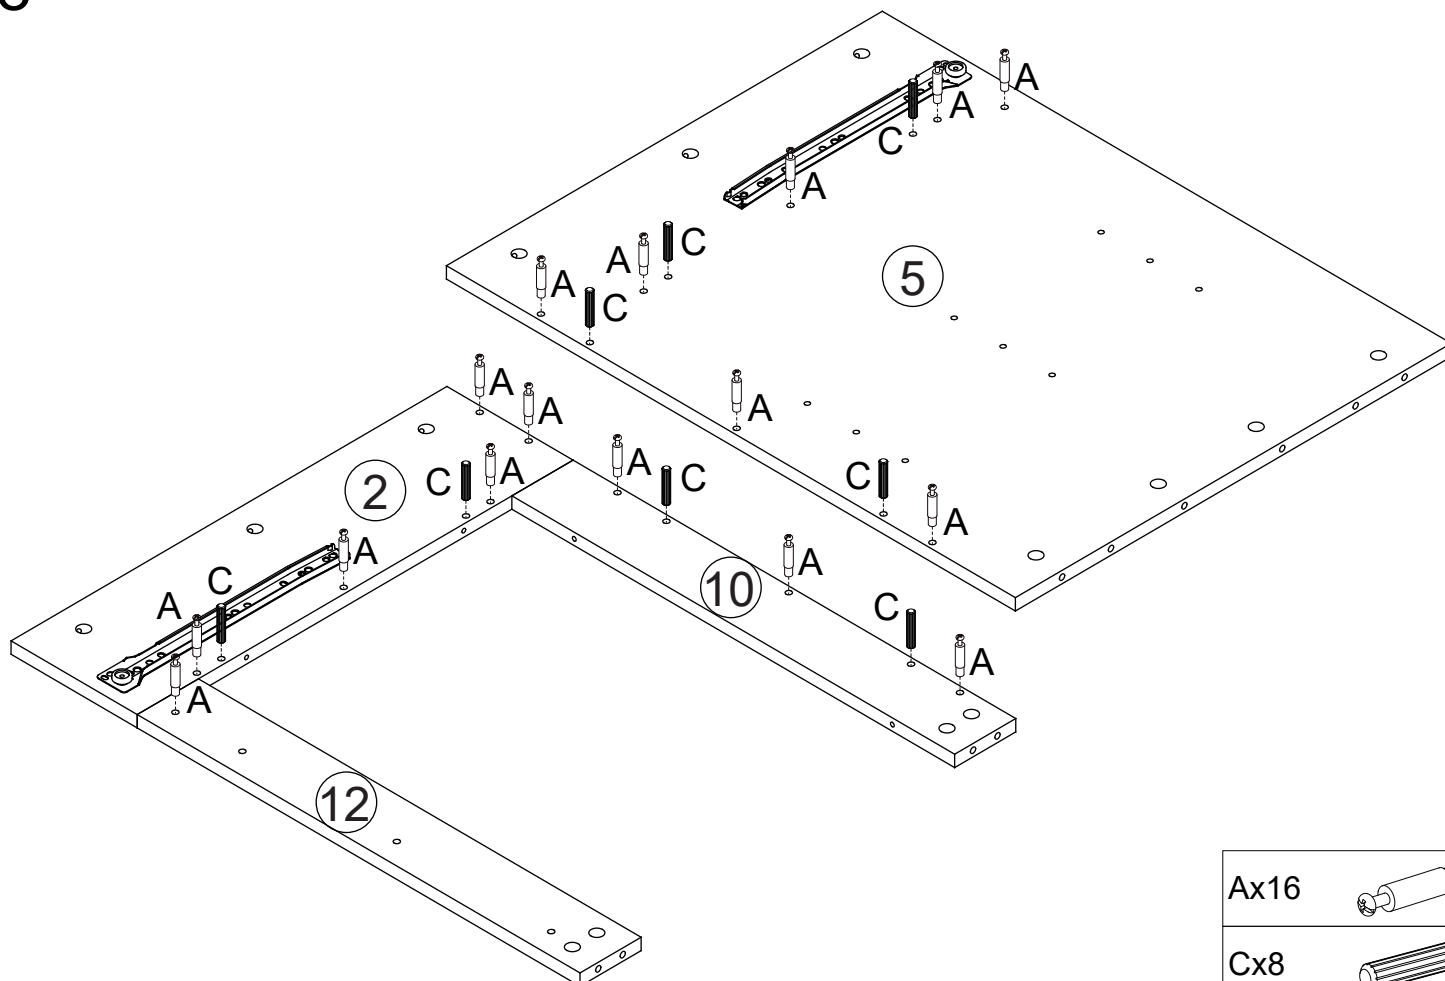


Ax16



Cx8





9

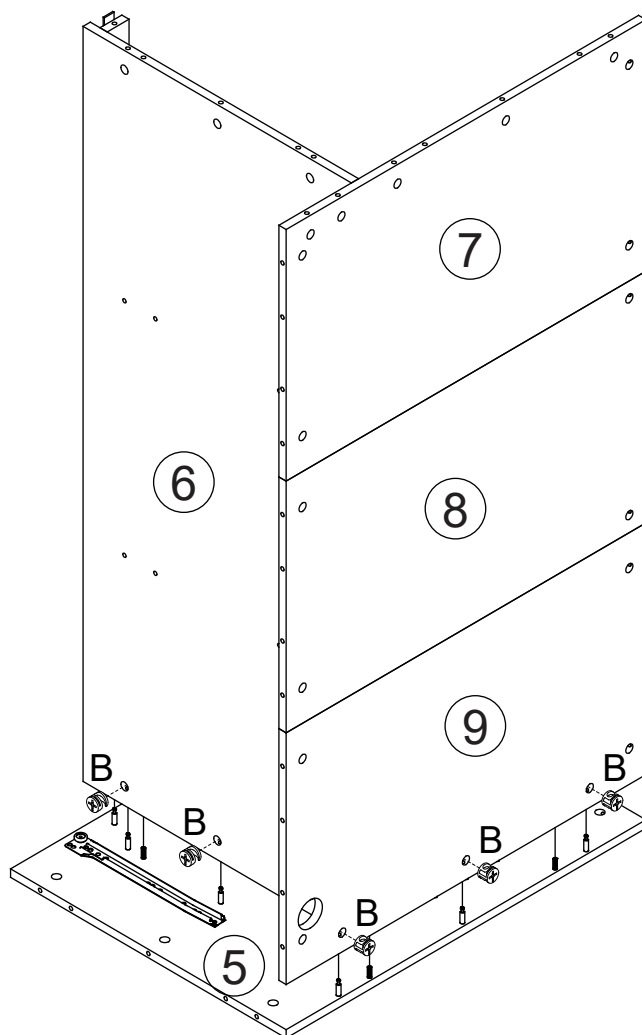

Bx7




10

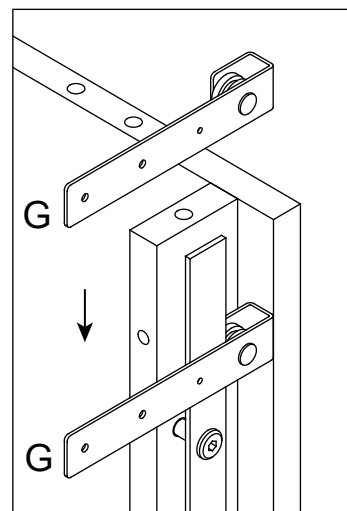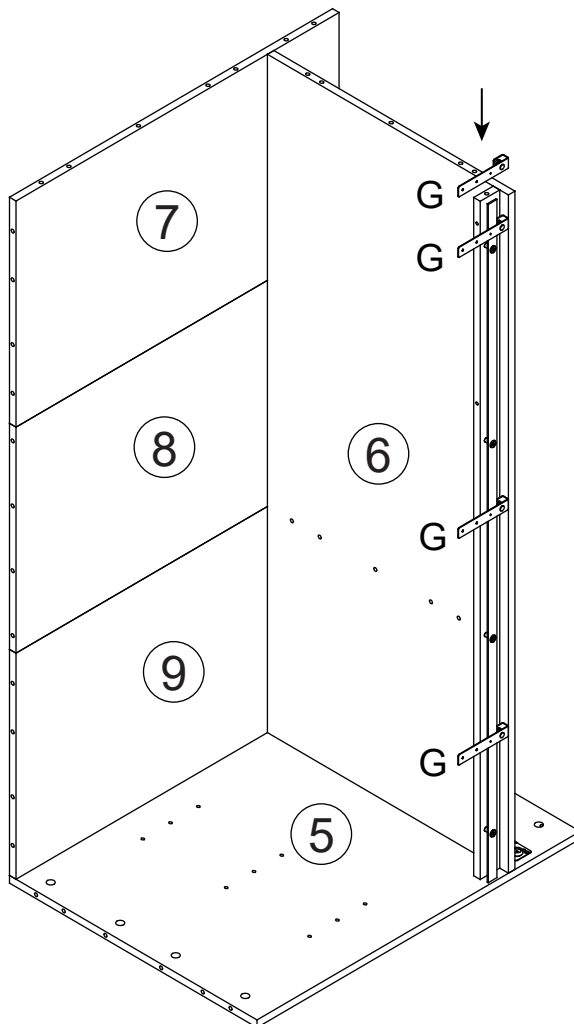

Gx4




11

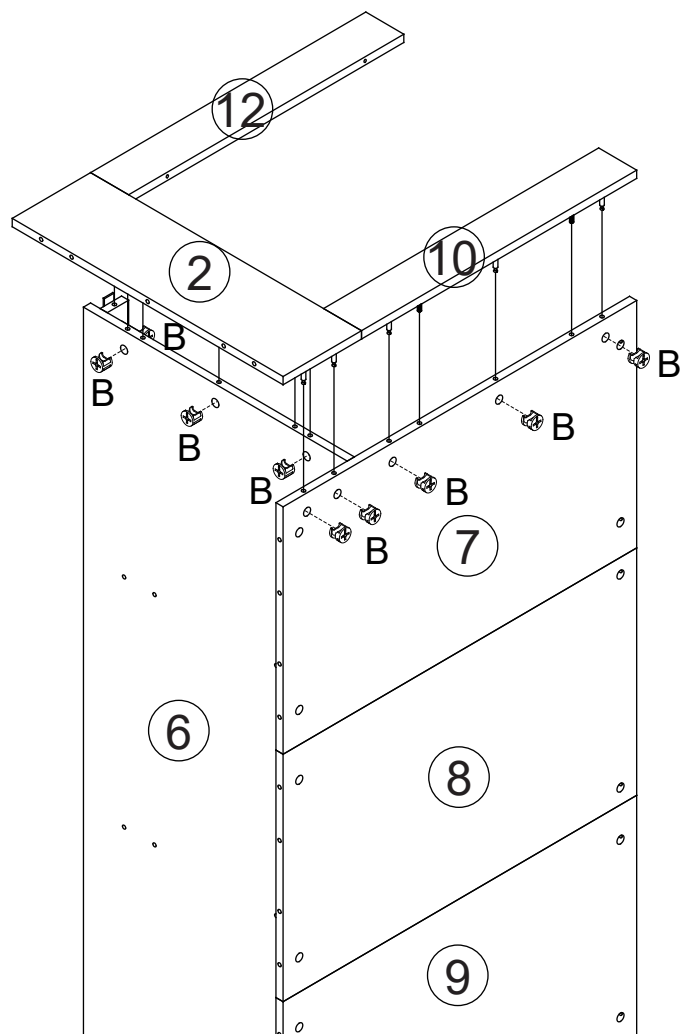

Bx9




12

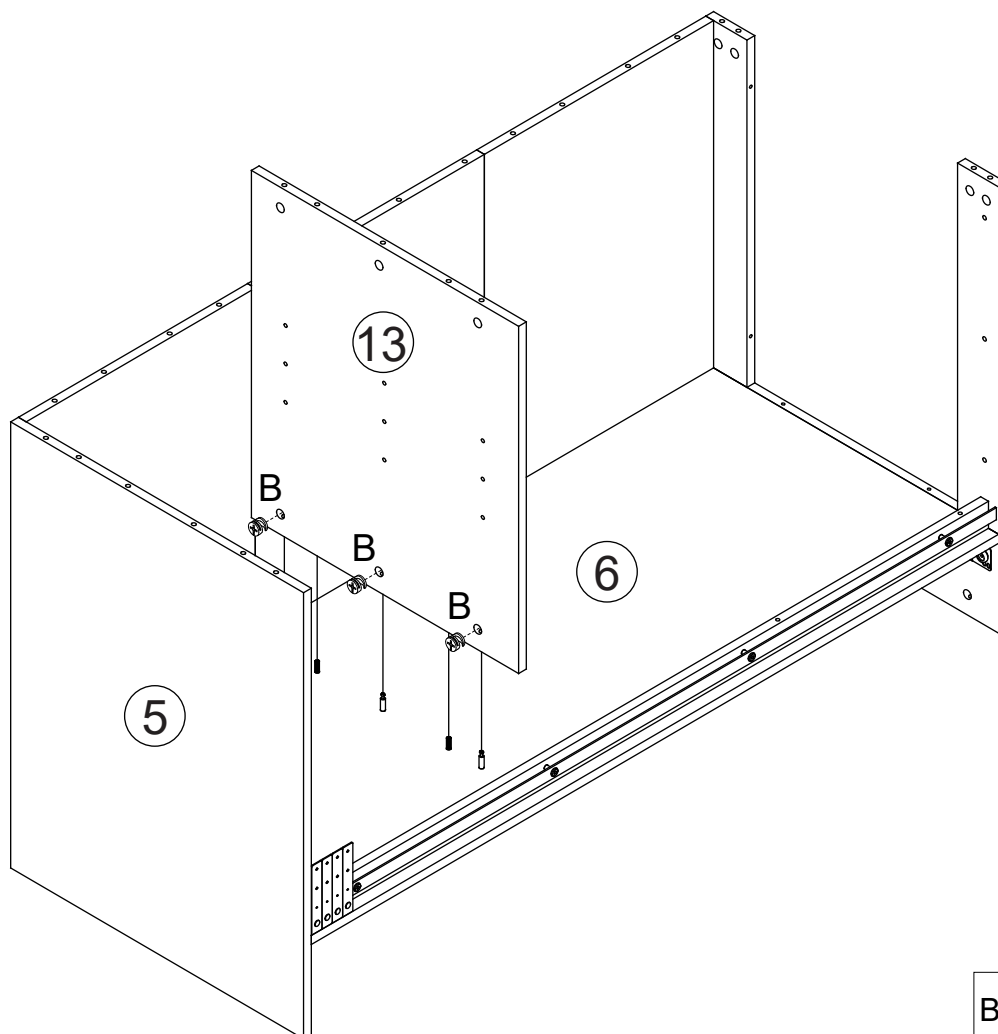

Bx3




13

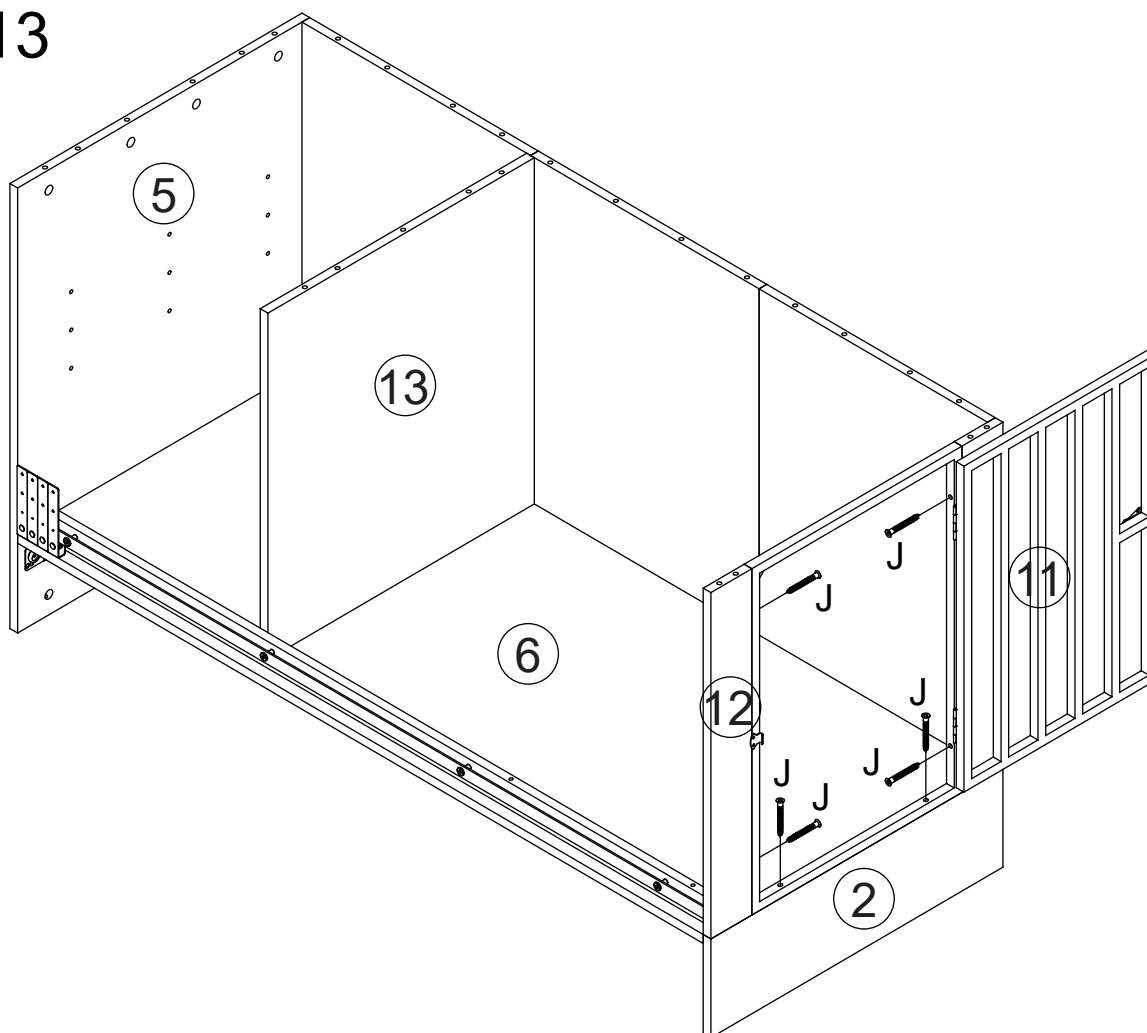


Jx6



14

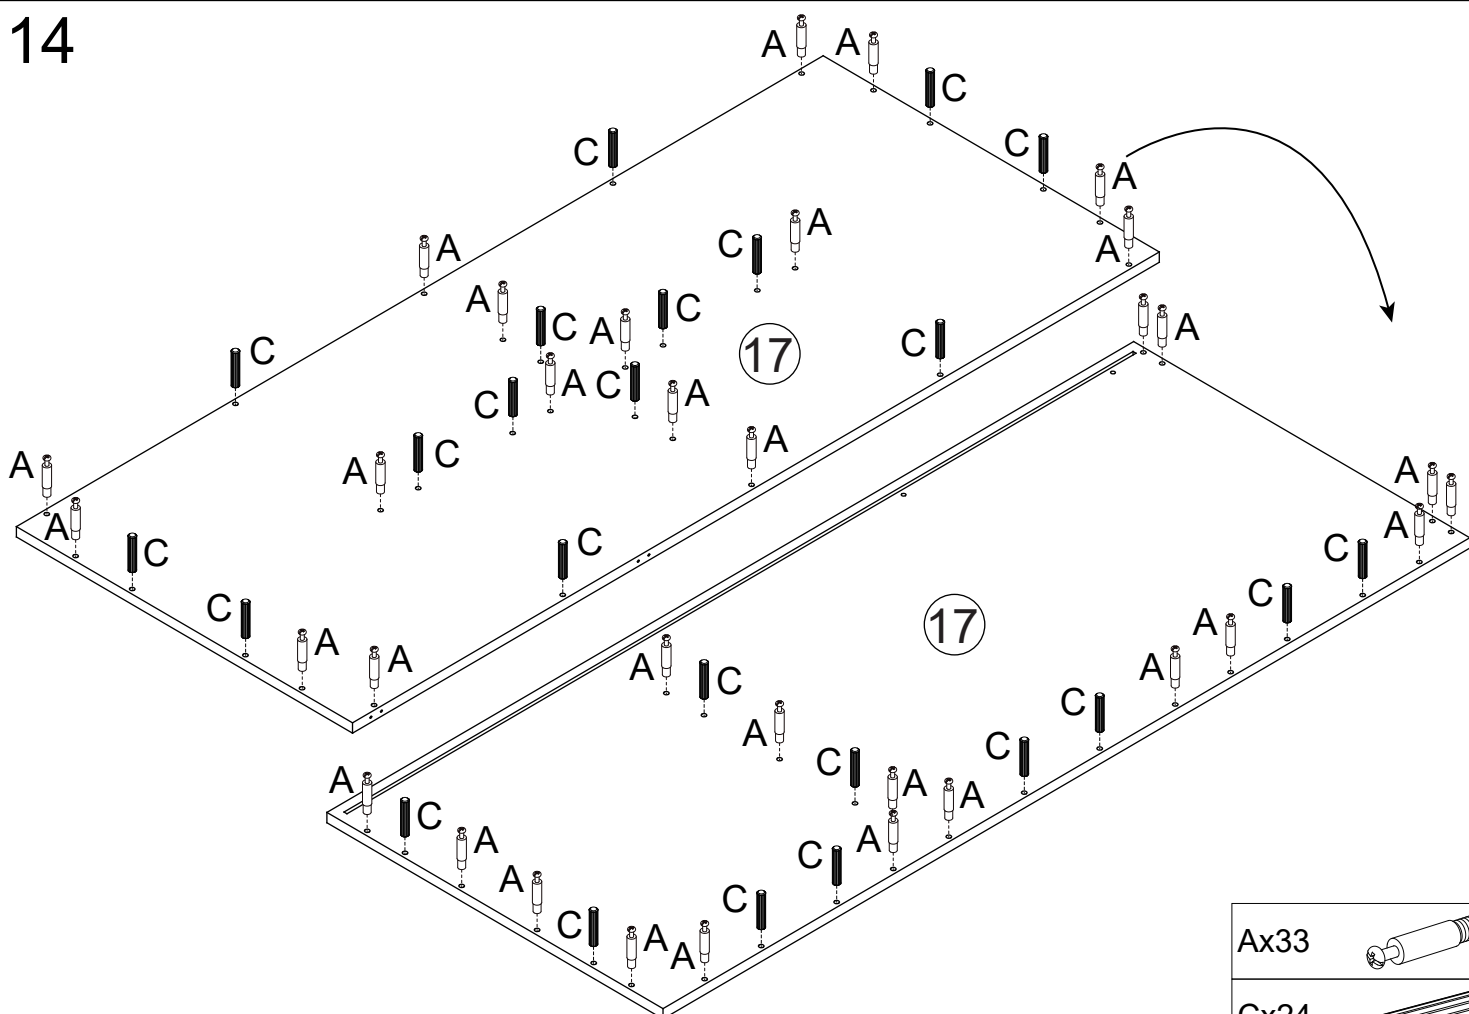


Ax33



Cx24





15

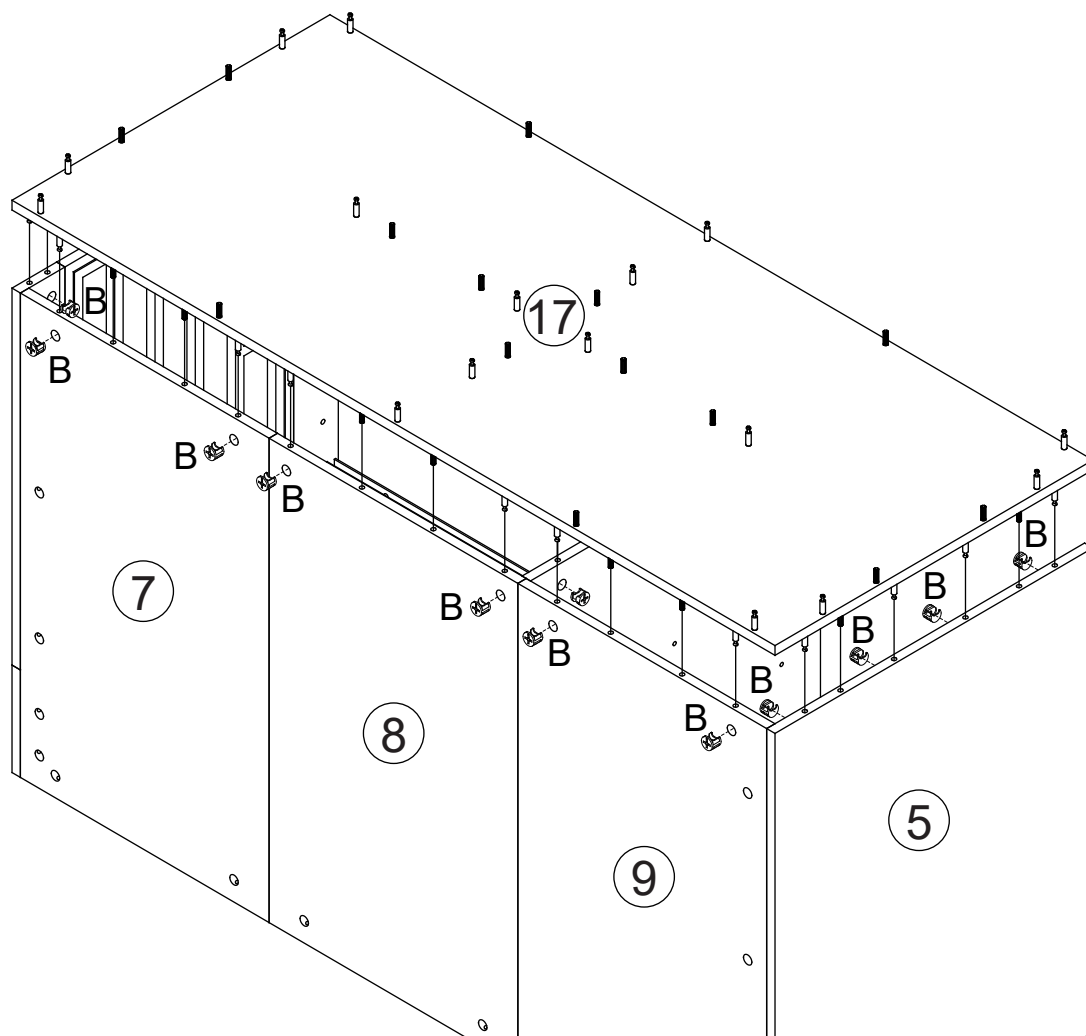

Bx17



16

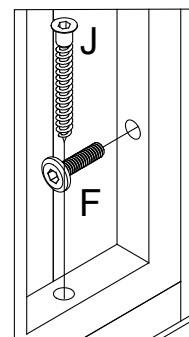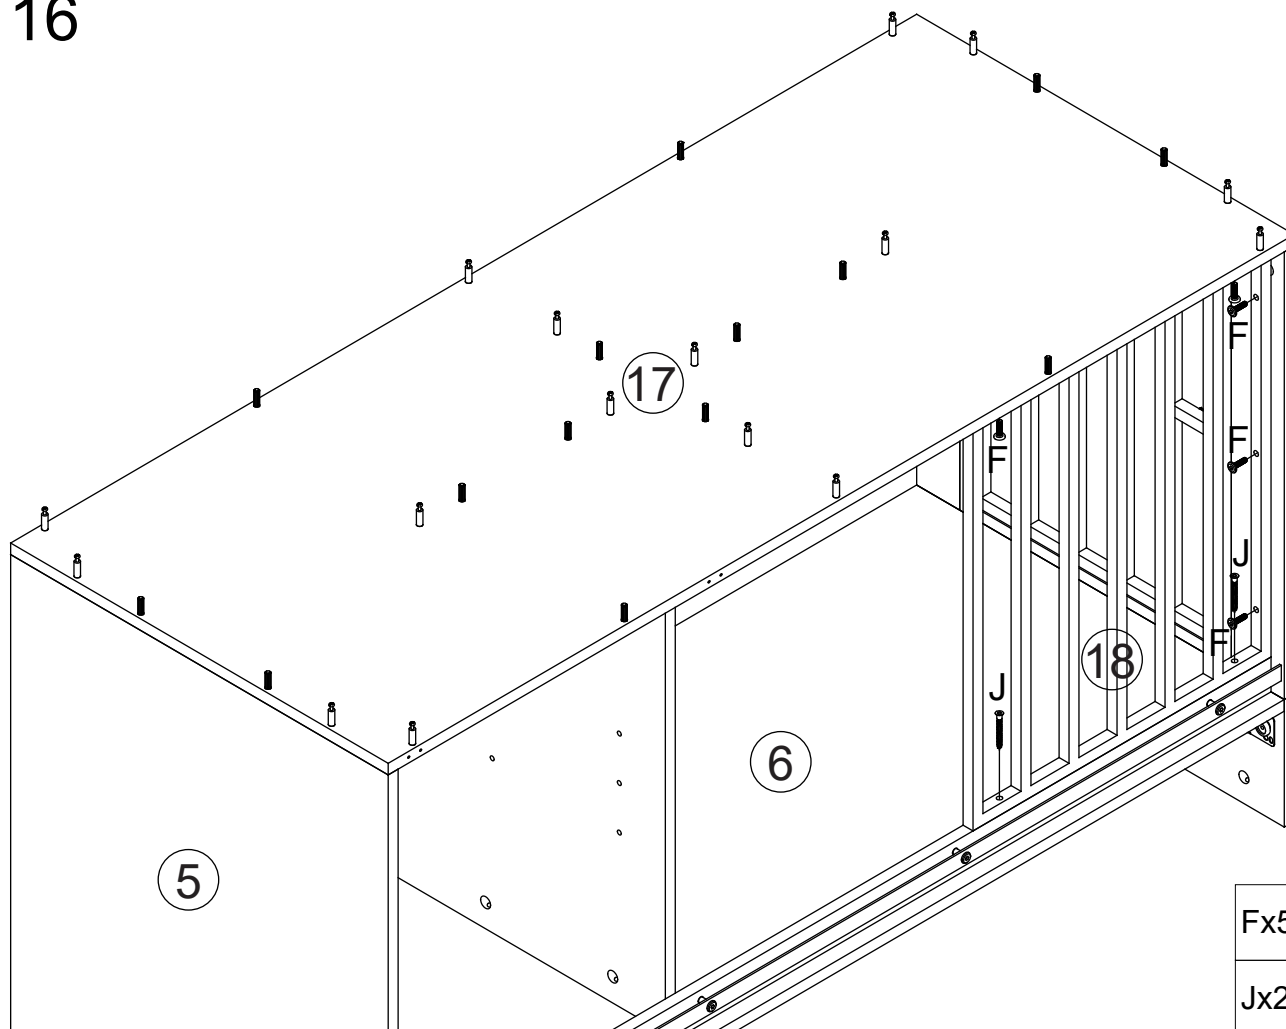


Fx5




Jx2



17

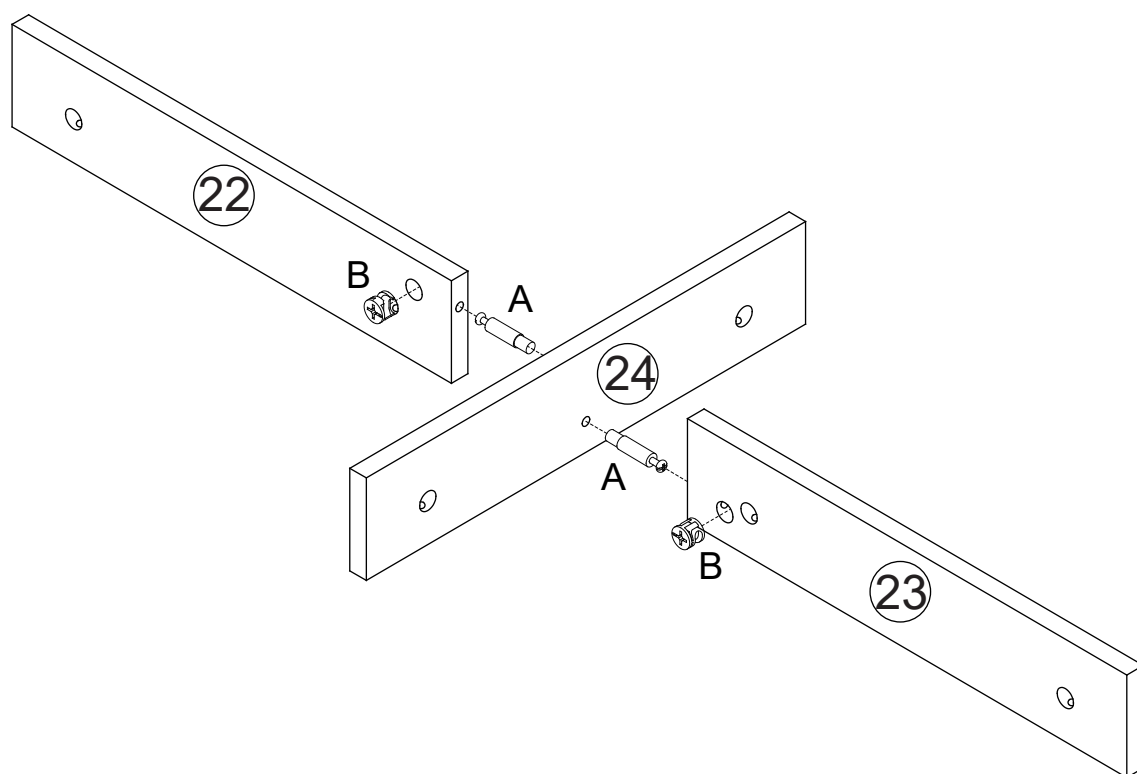


Ax2



Bx2




18

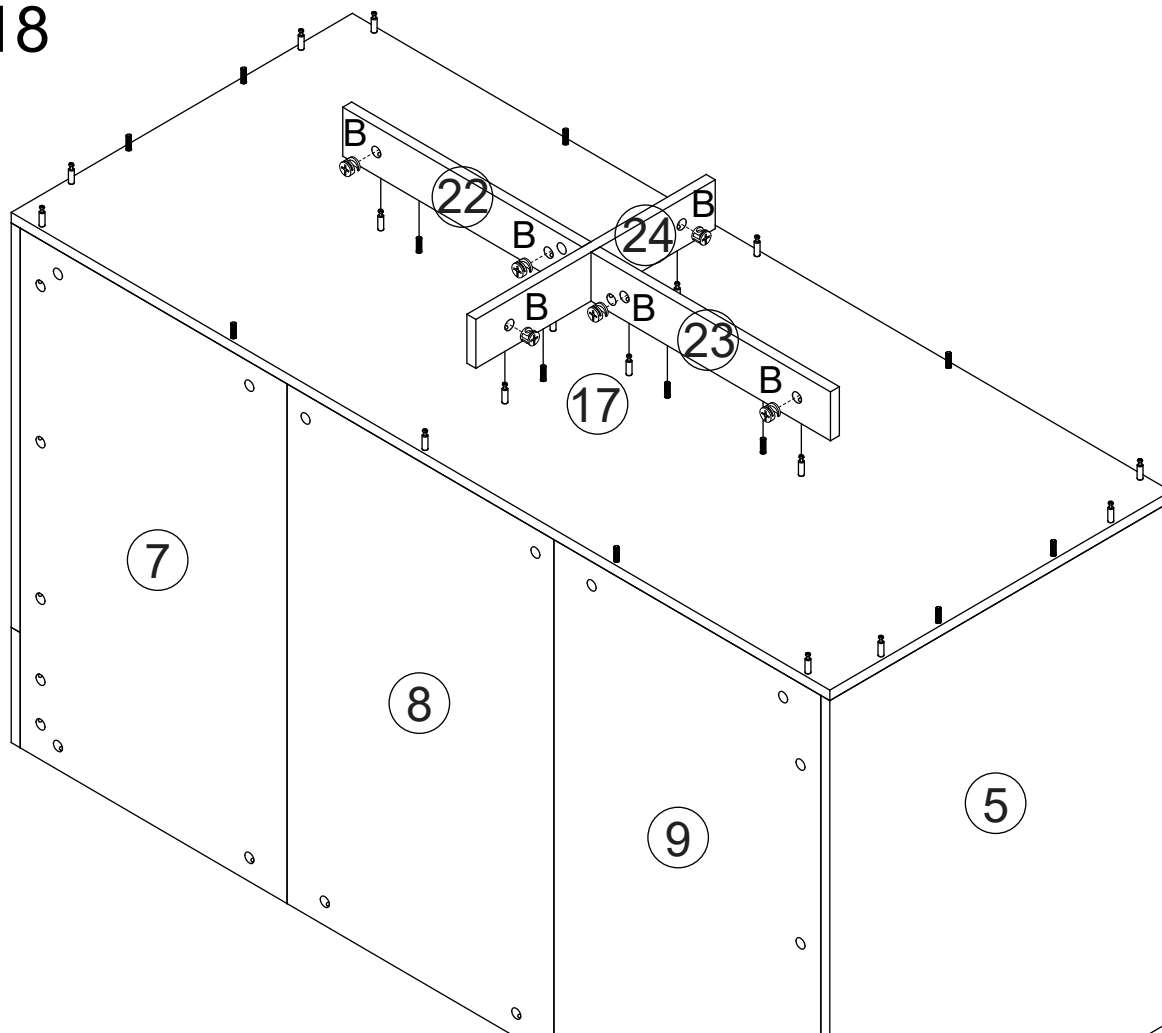


Bx6




19

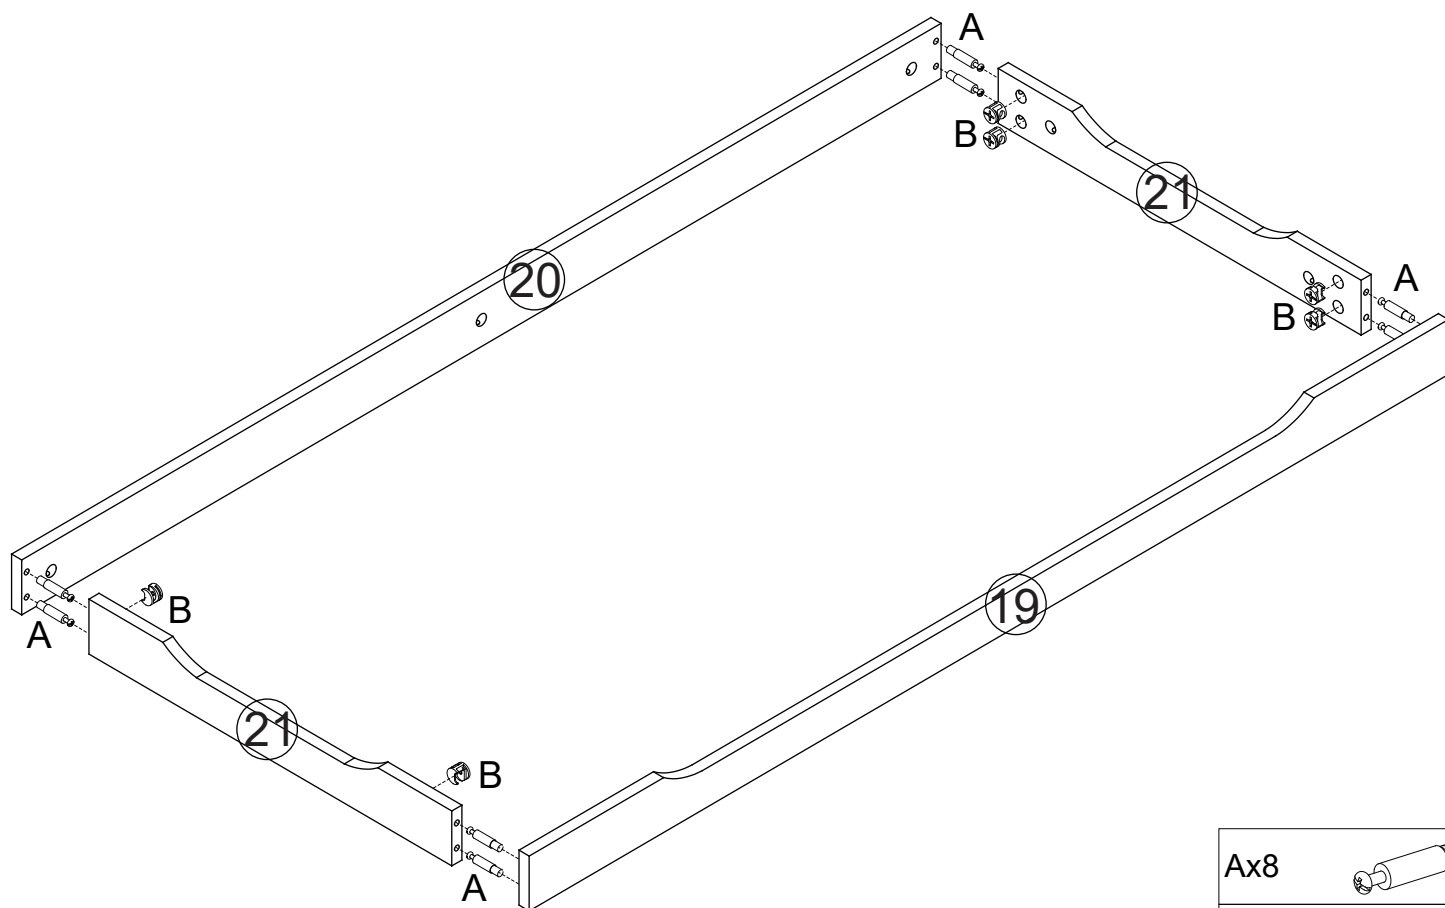


Ax8	
Bx8	

20

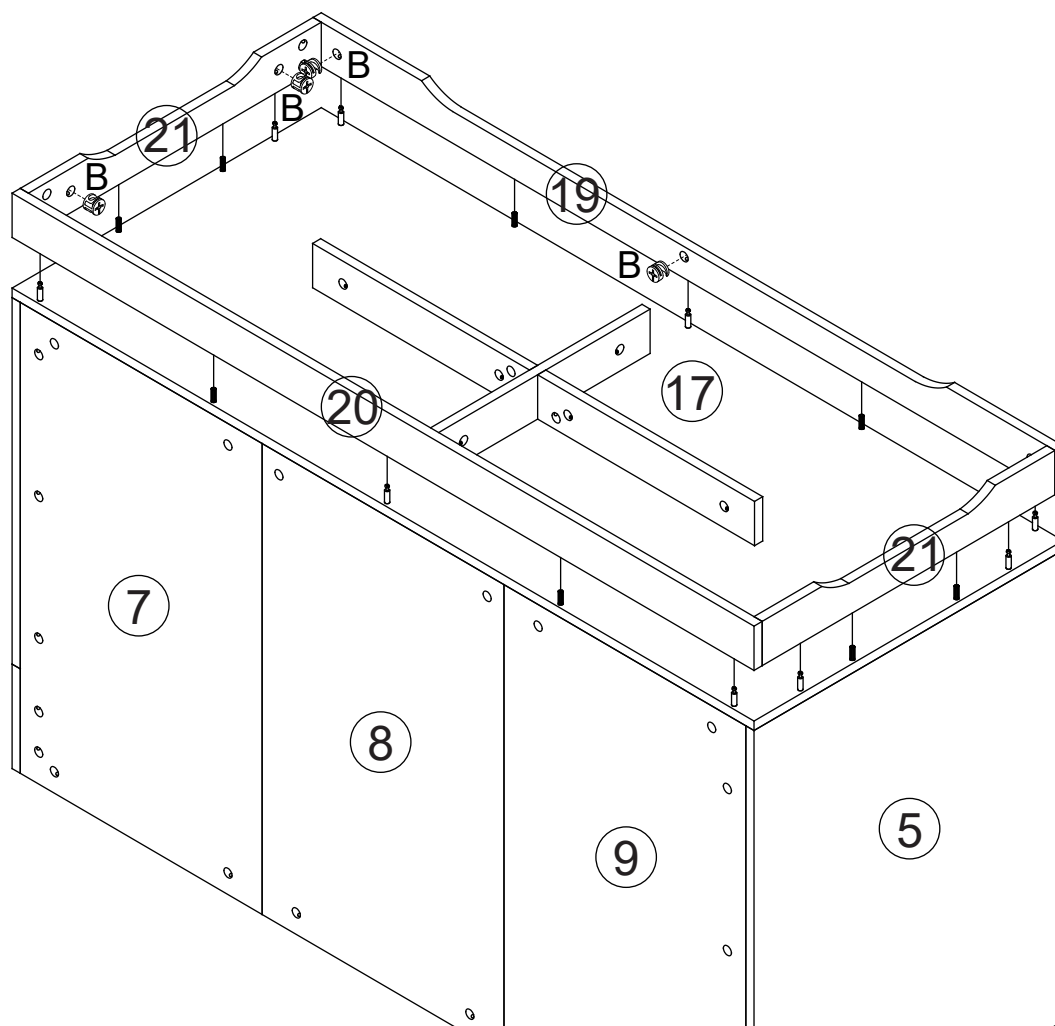

Bx10	
------	---

21

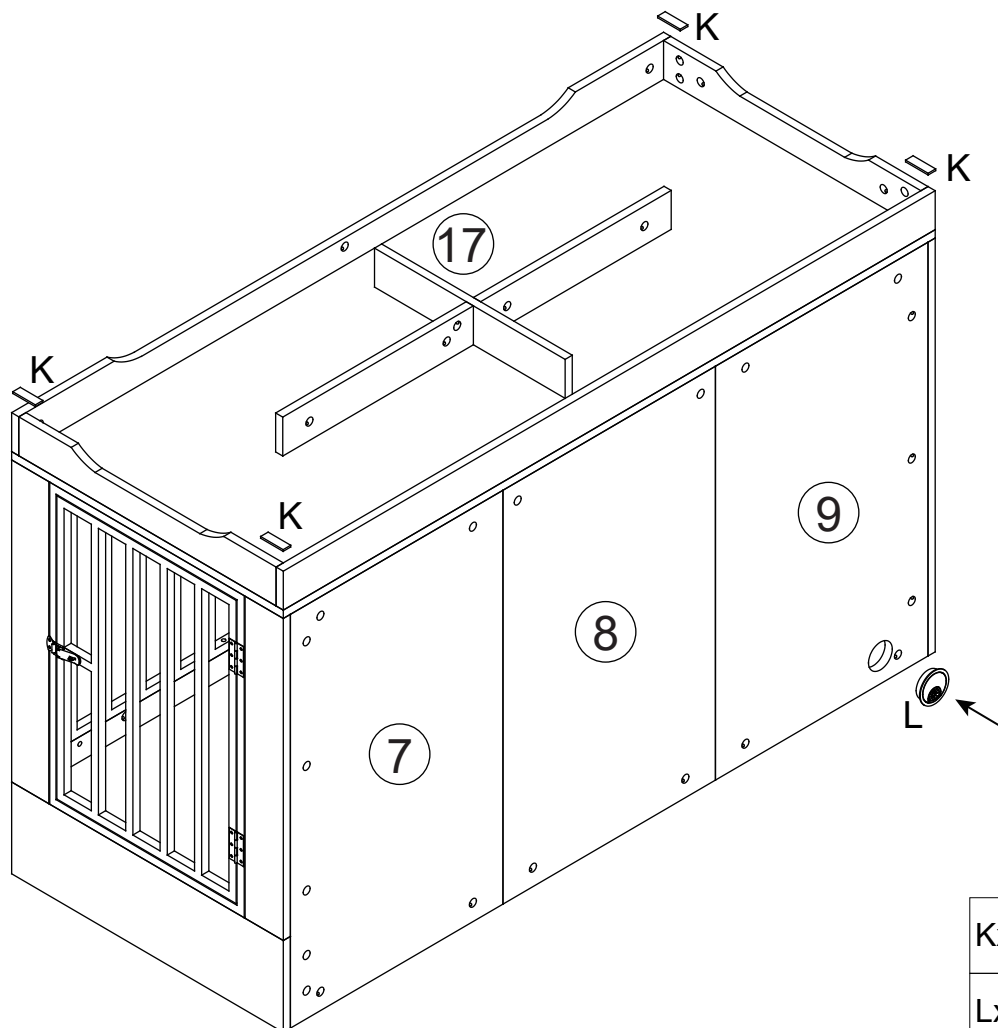


Kx4



Lx1




22

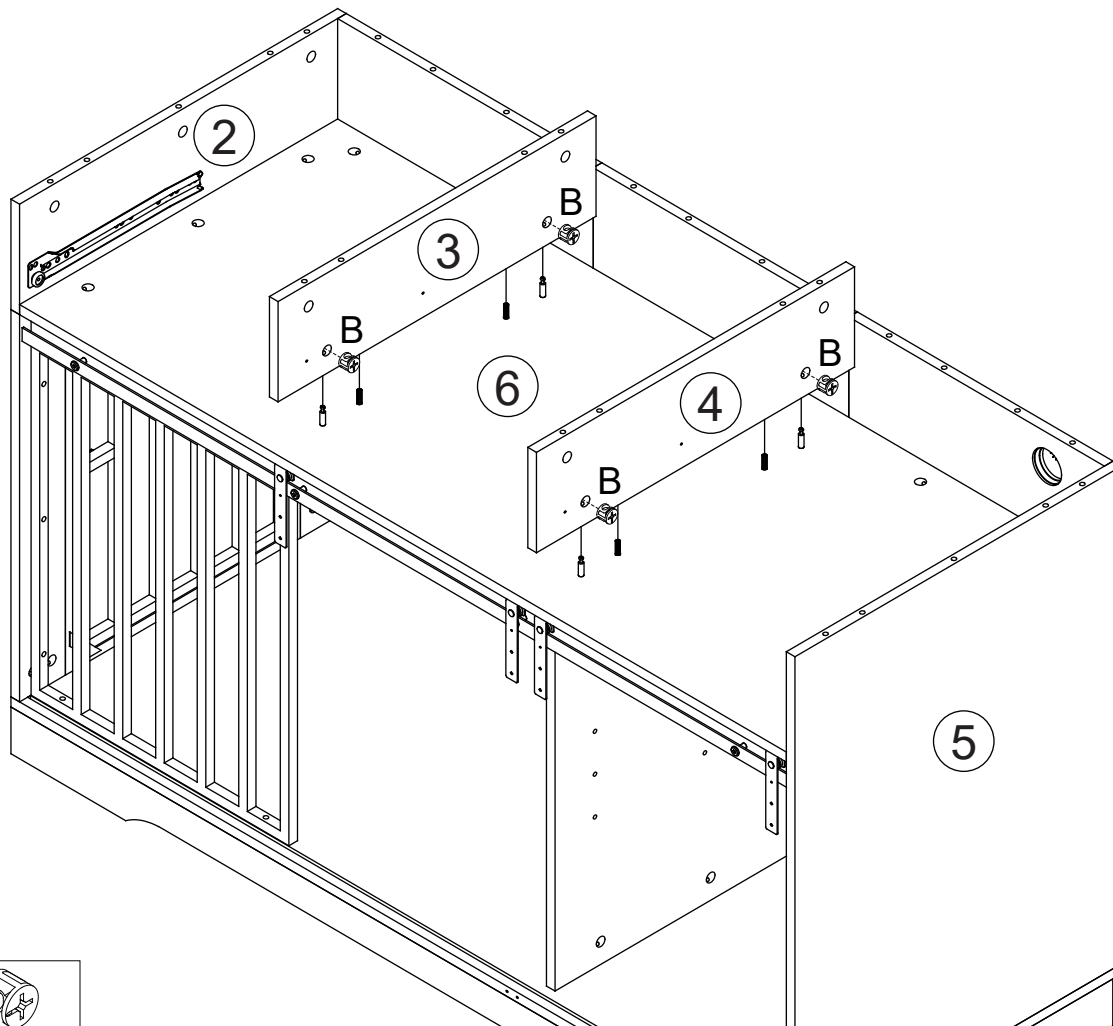


Bx4




23

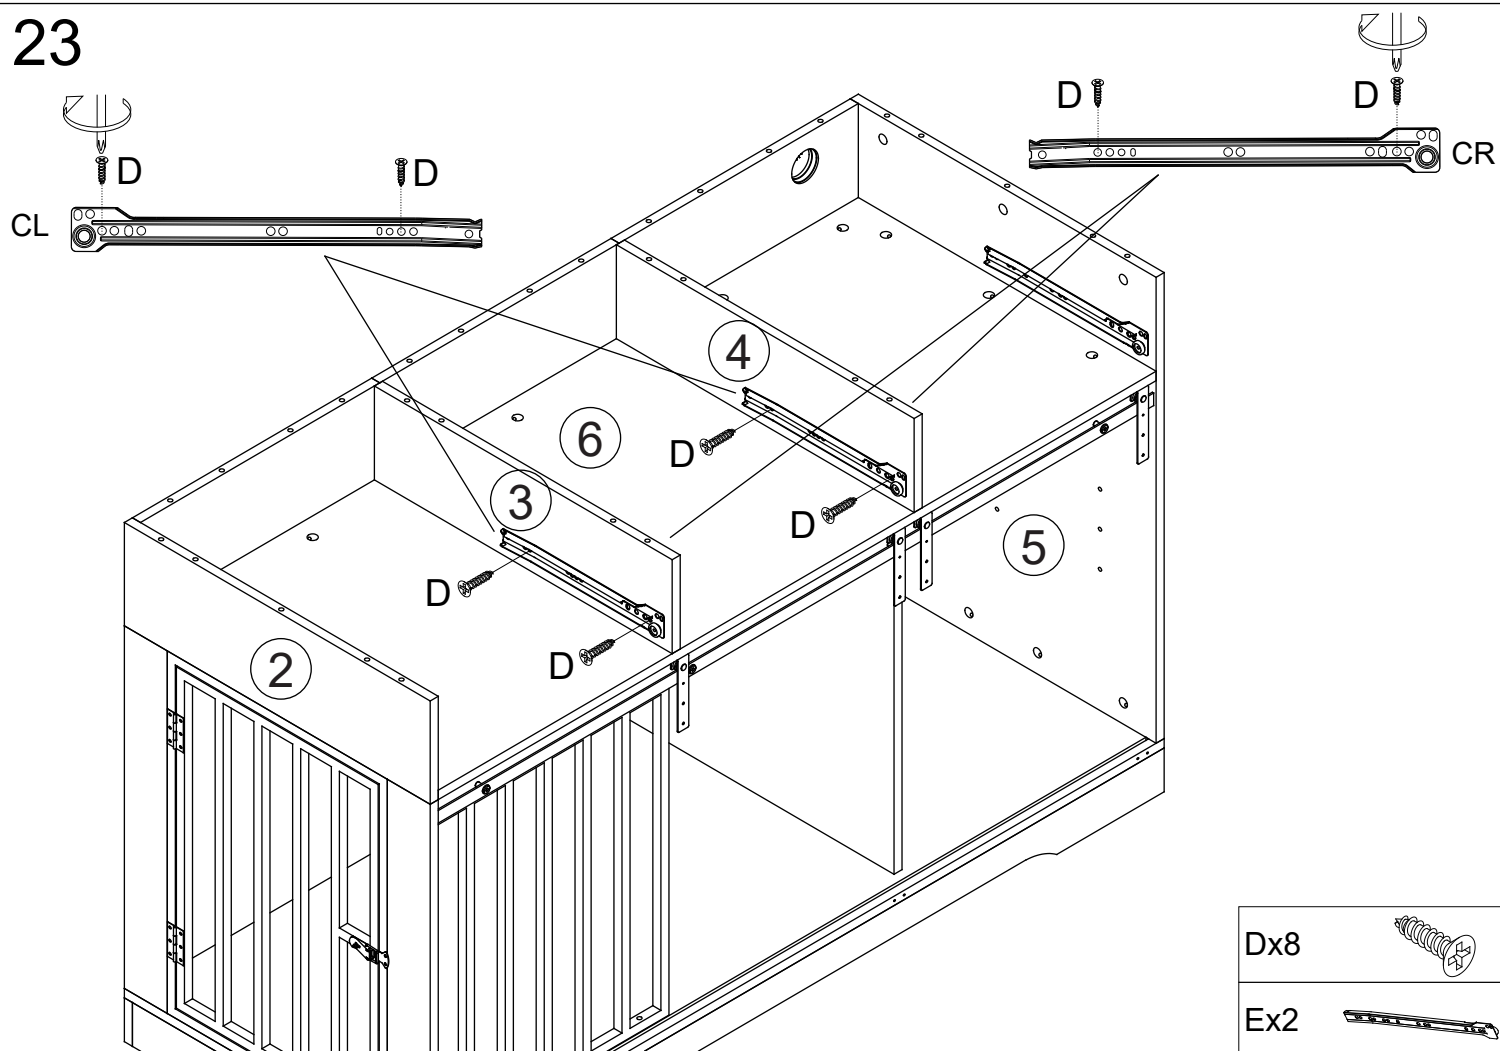

24

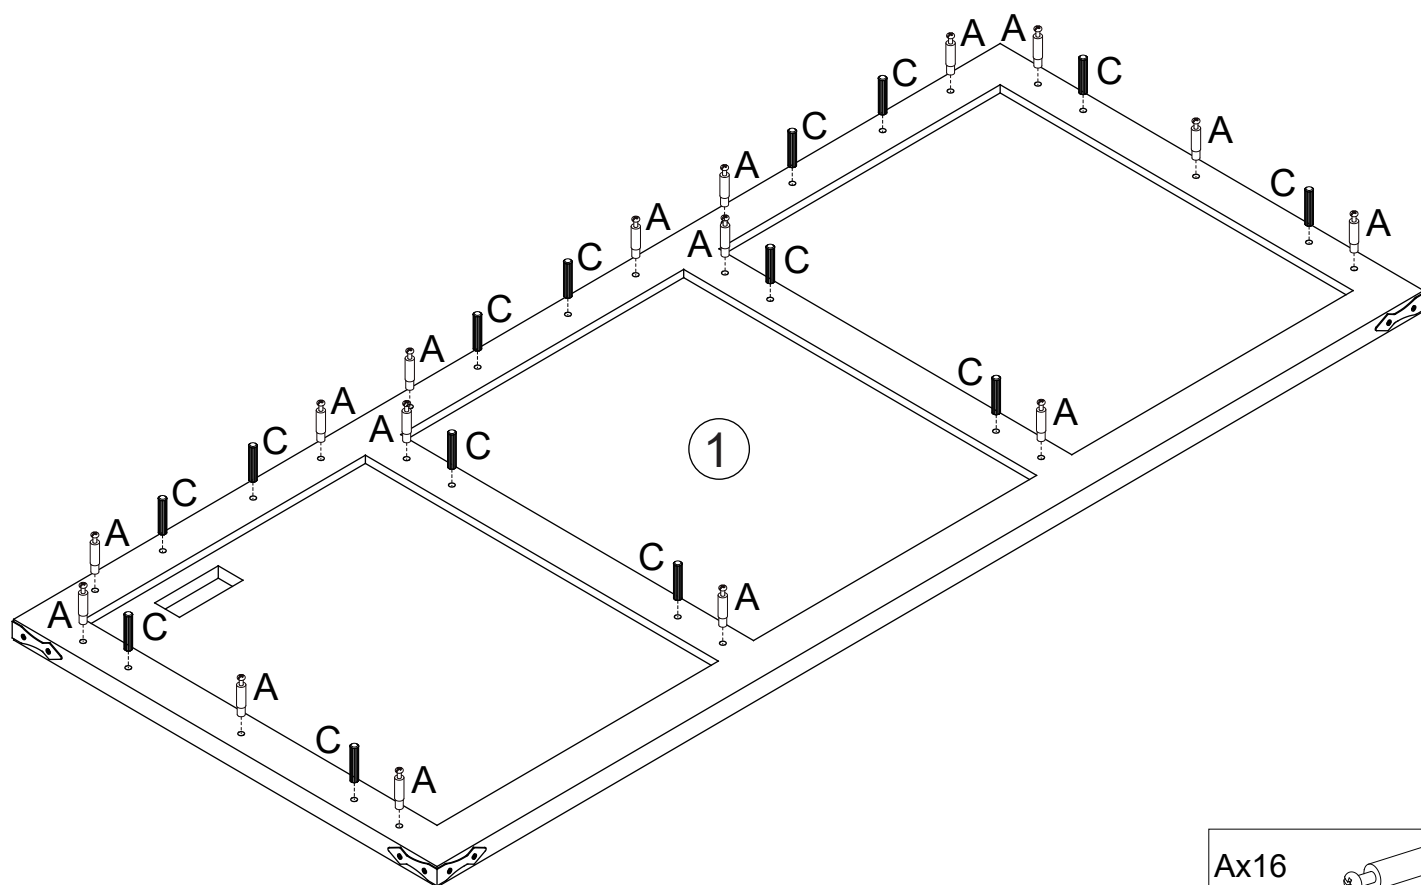




25

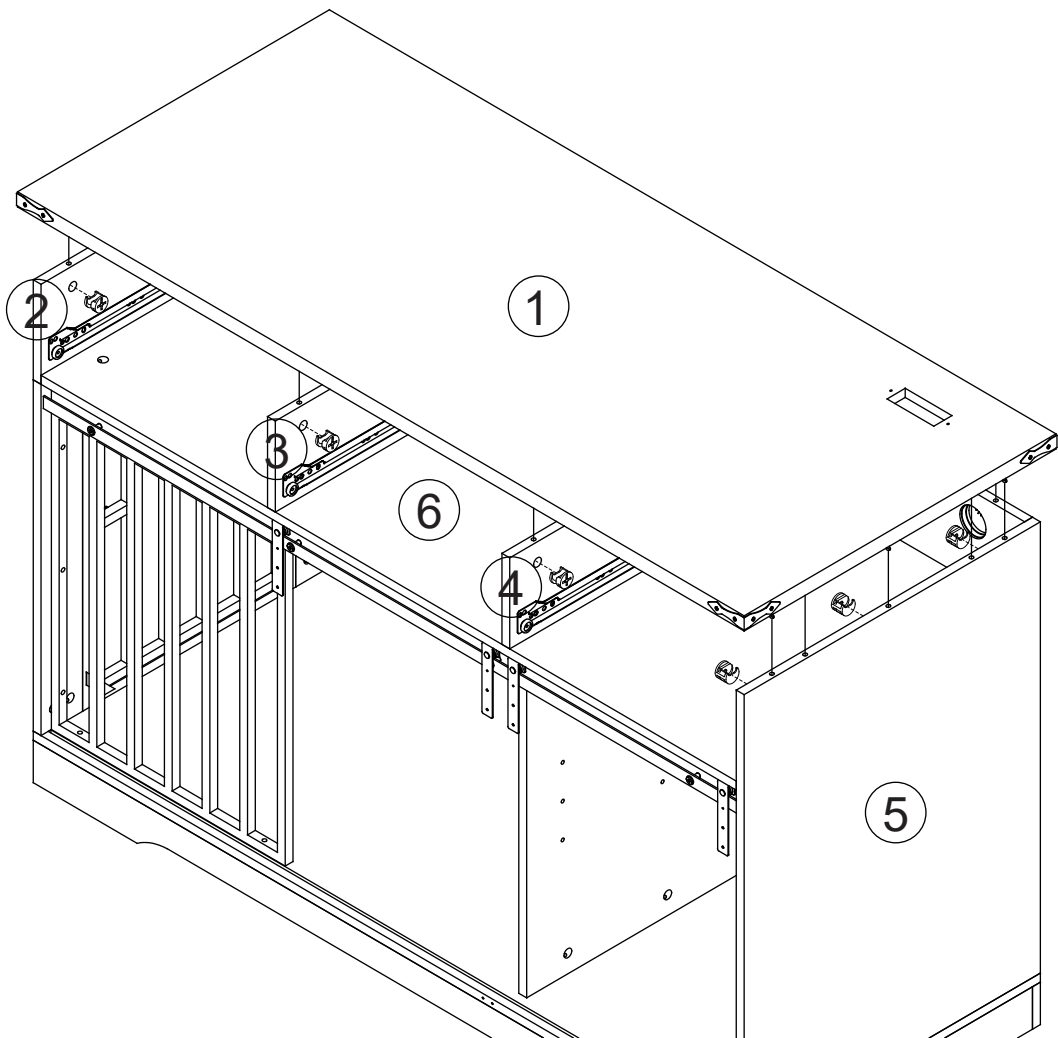

Bx16




26

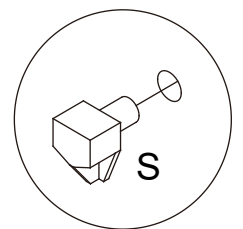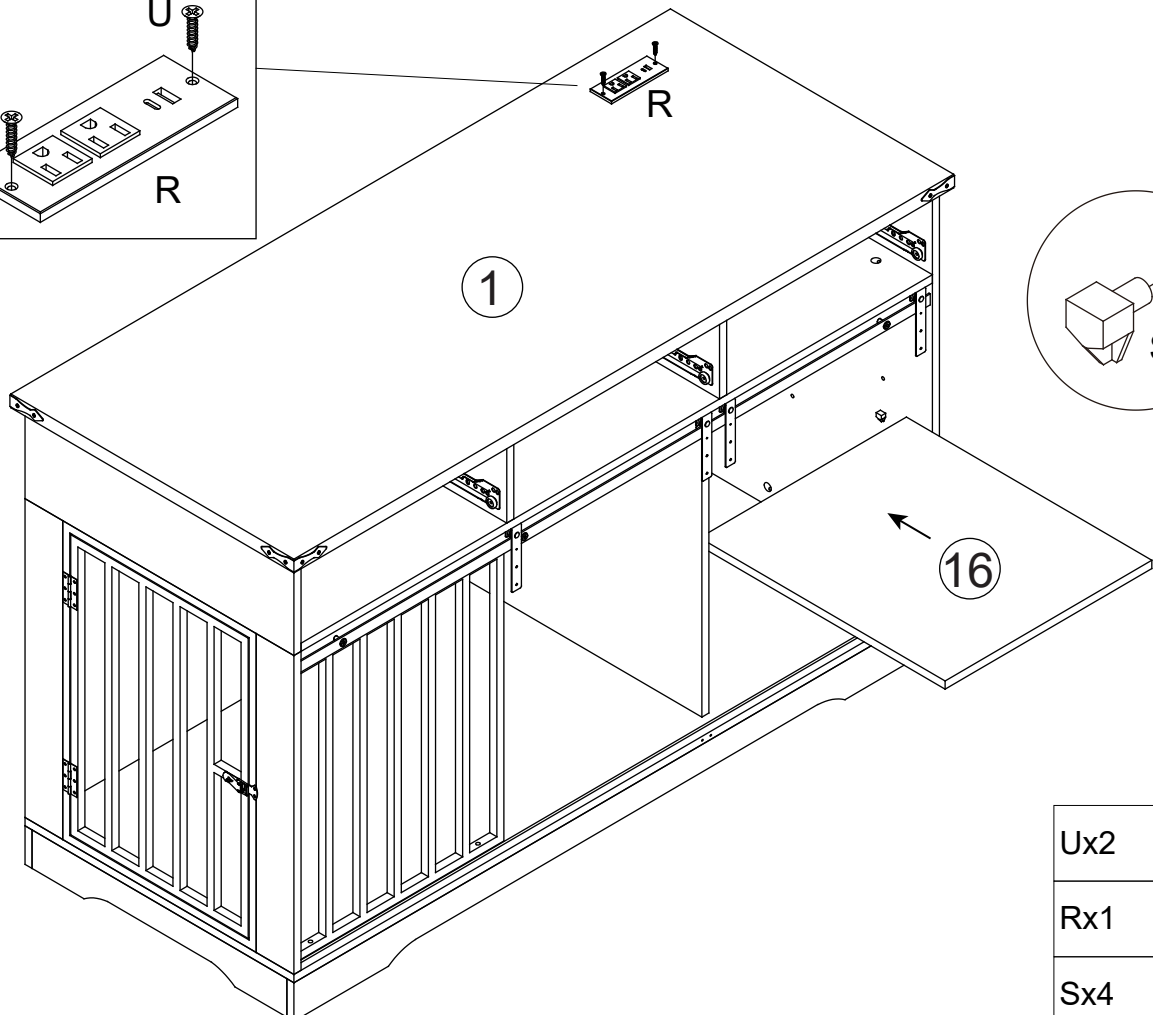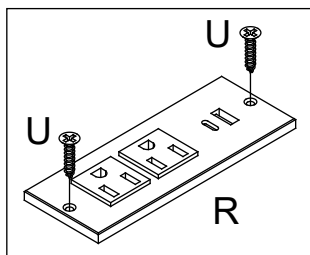

Ux2




Rx1



Sx4




27

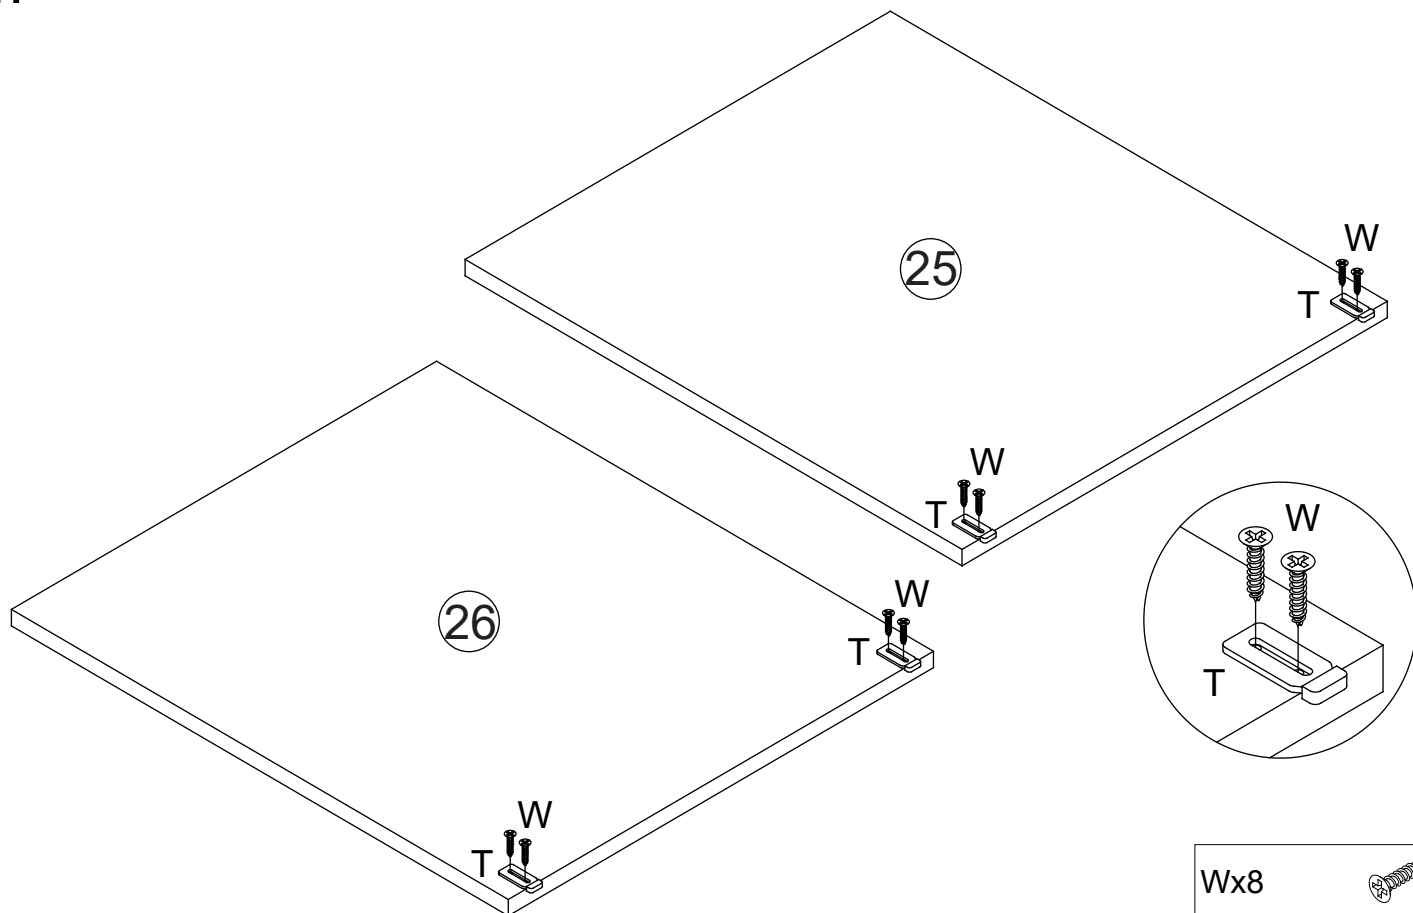



Wx8	
Tx4	

28

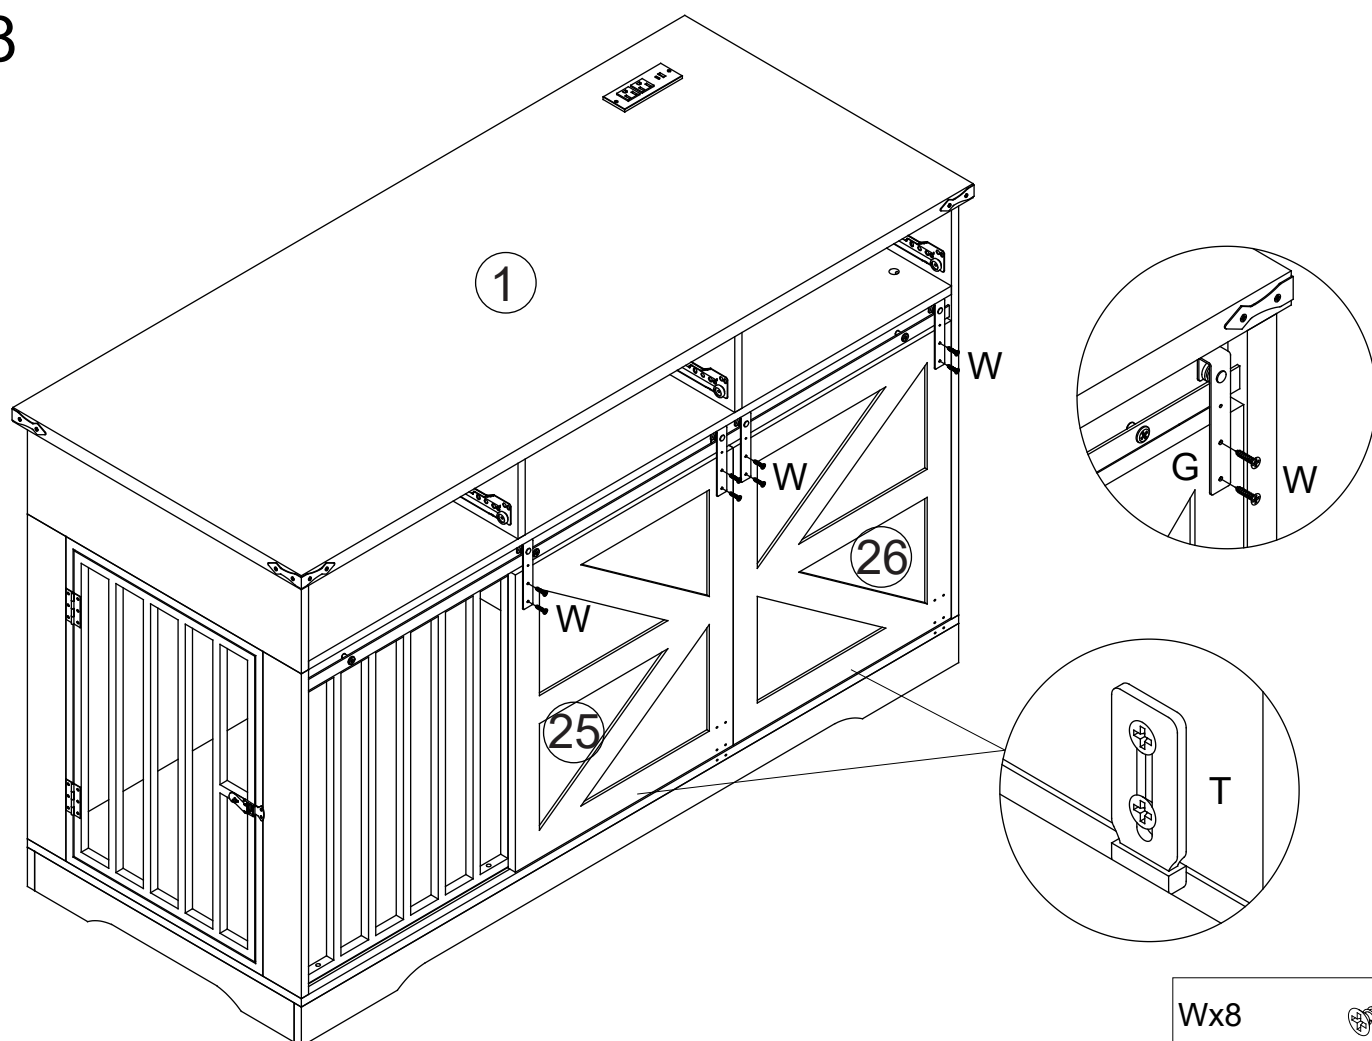


Wx8	
-----	---

29

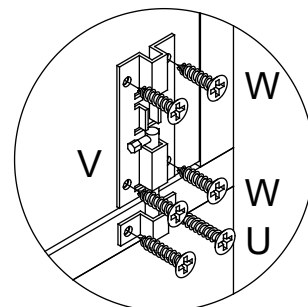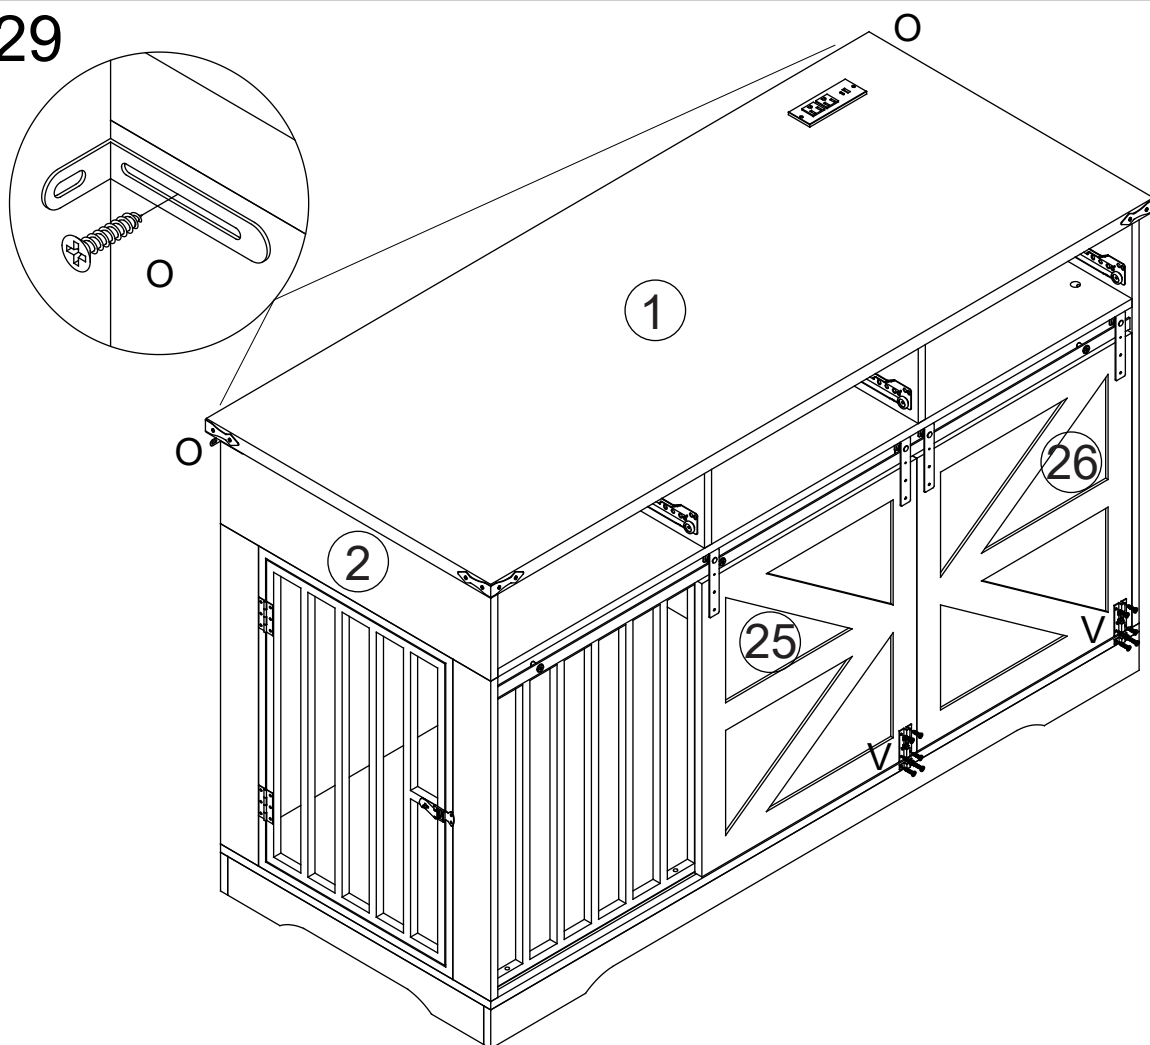

Ox2	
Ux4	
Vx2	
Wx8	


30

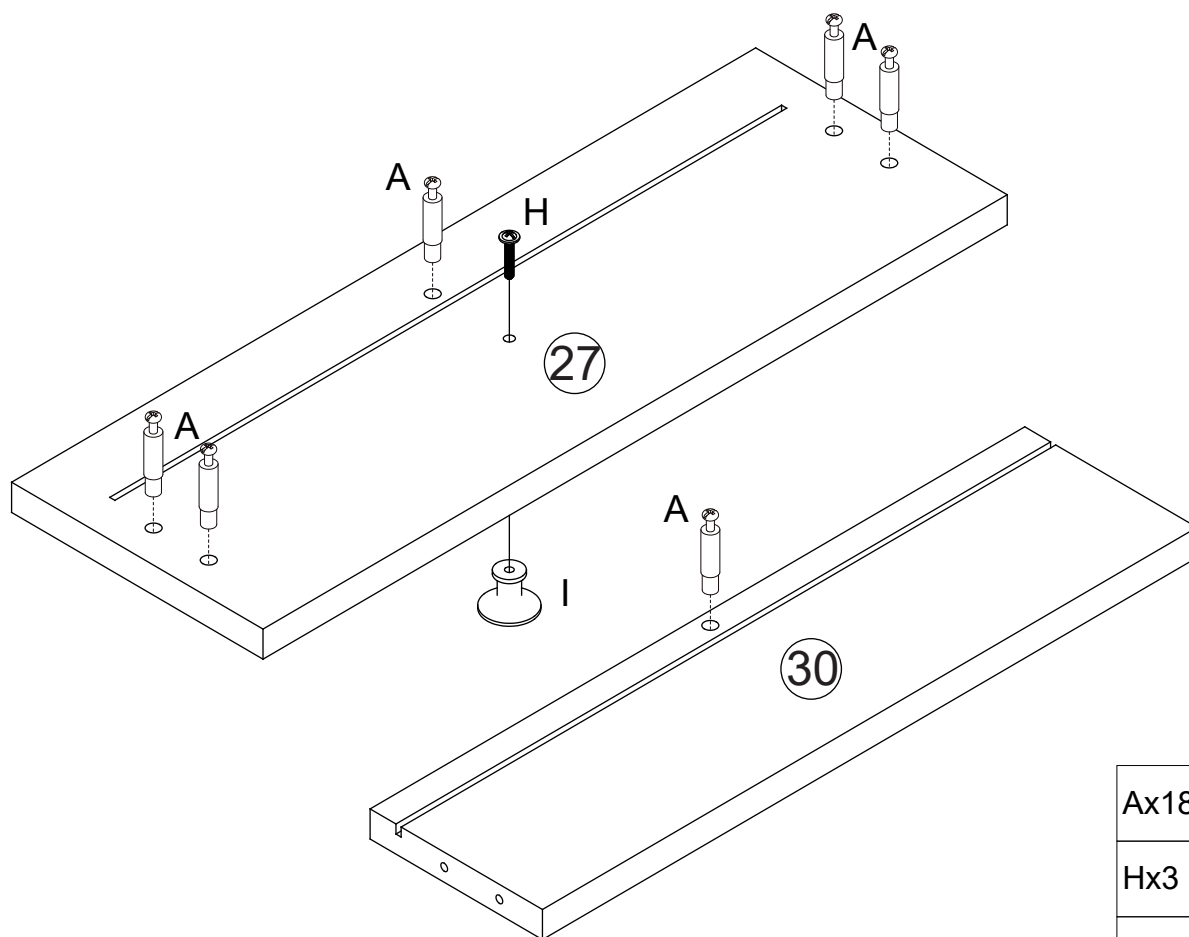

x3

Ax18	
Hx3	
Ix3	


31

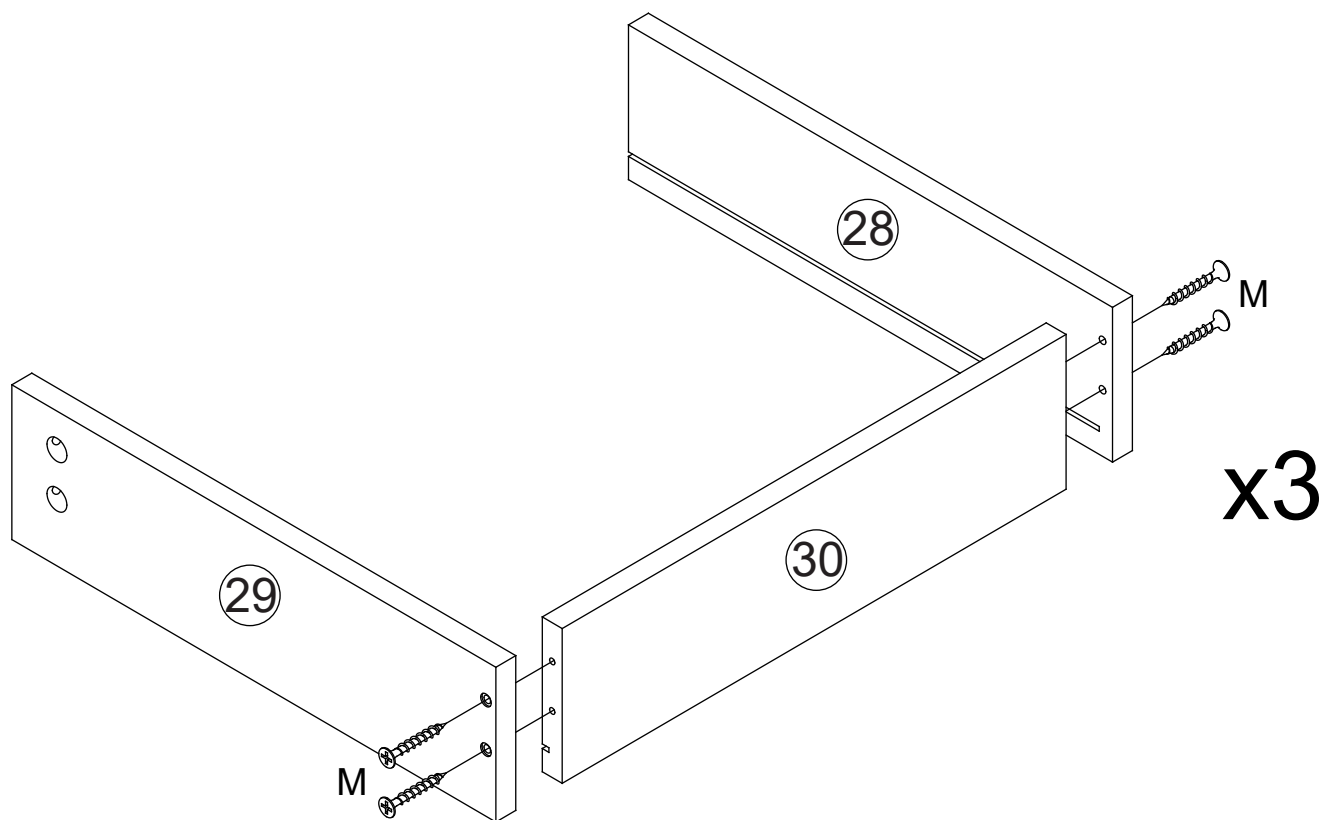

Mx12




32

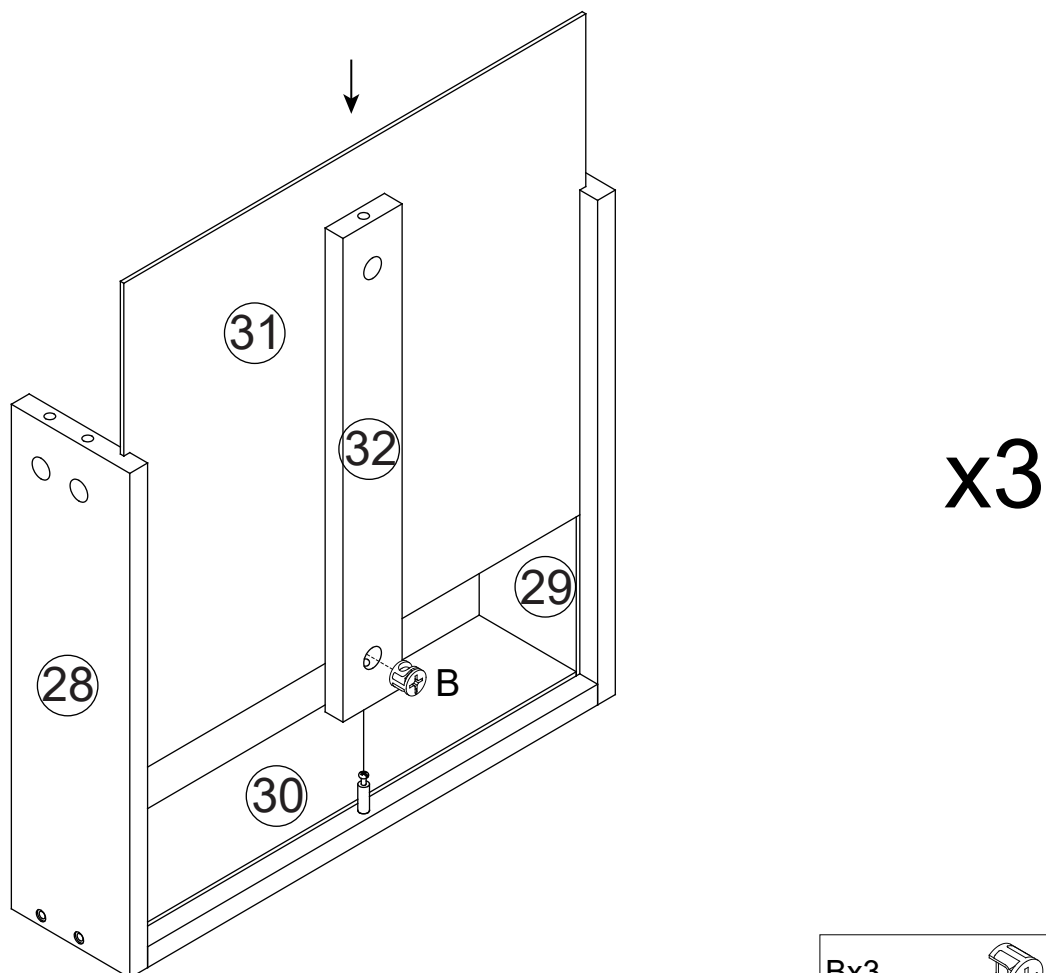

Bx3




33

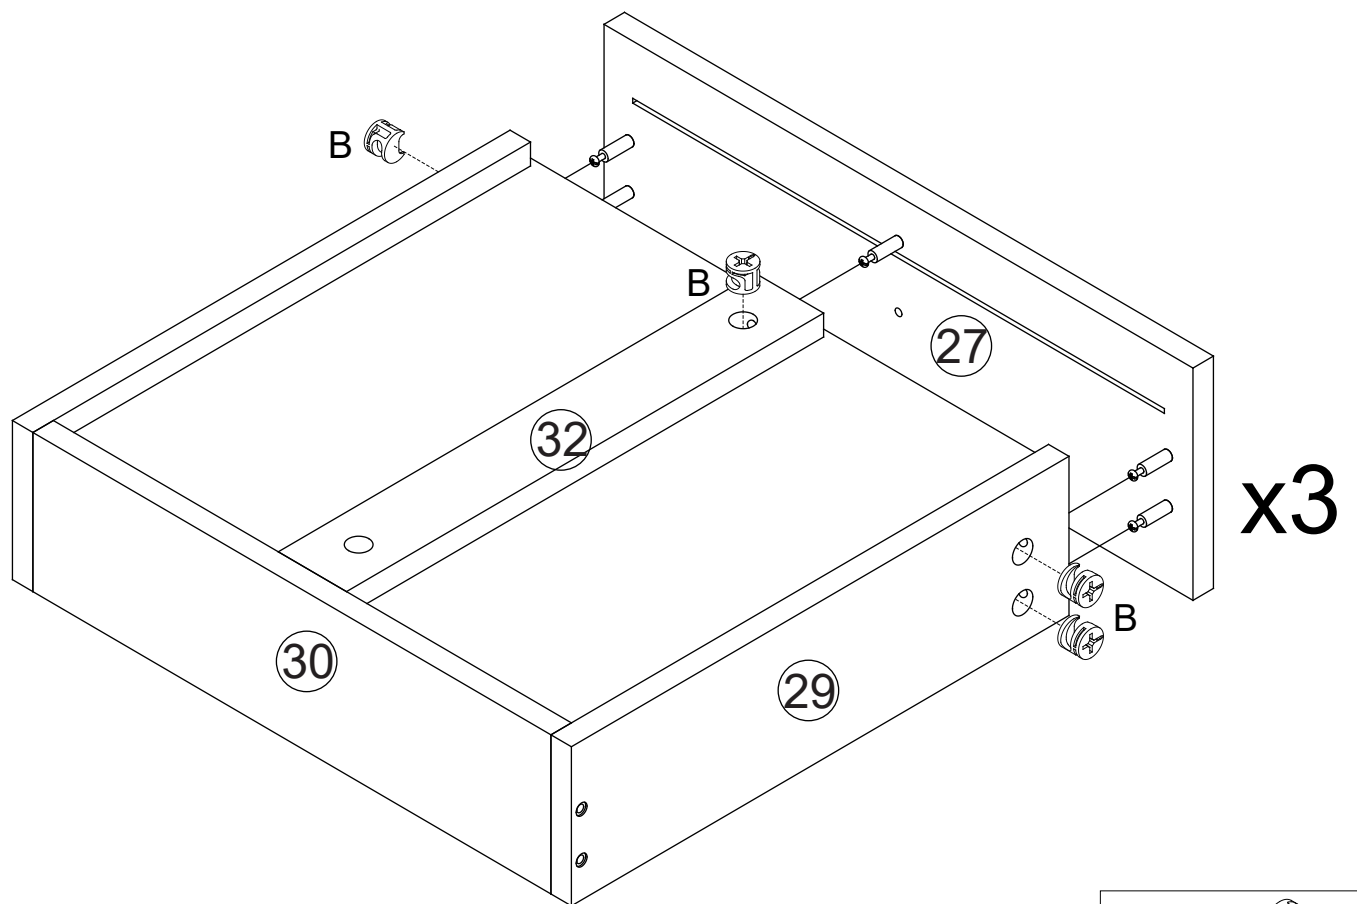


Bx15



34

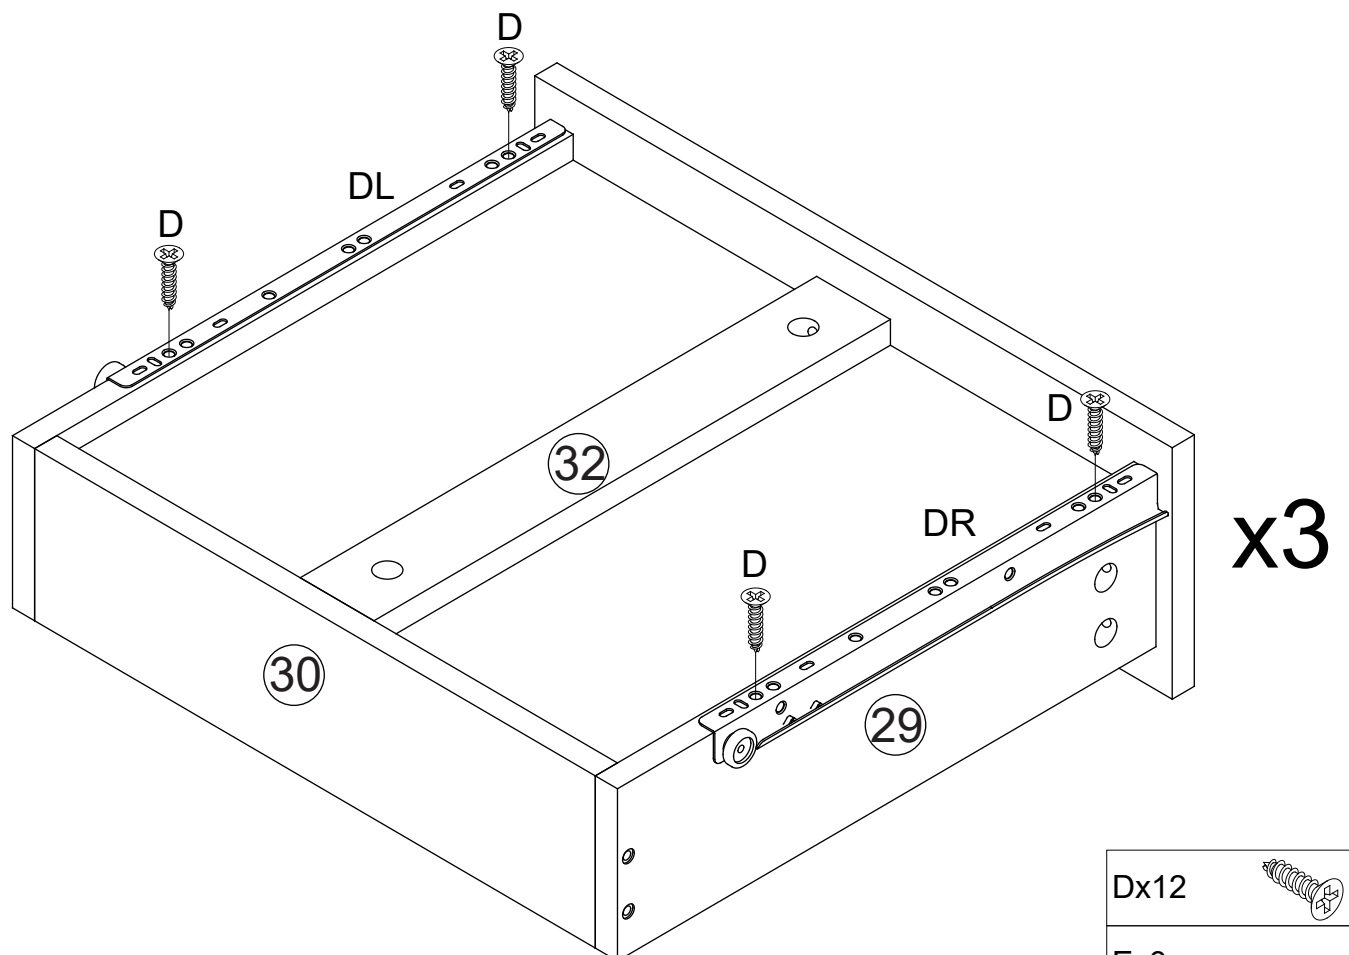




Dx12



Ex3






35

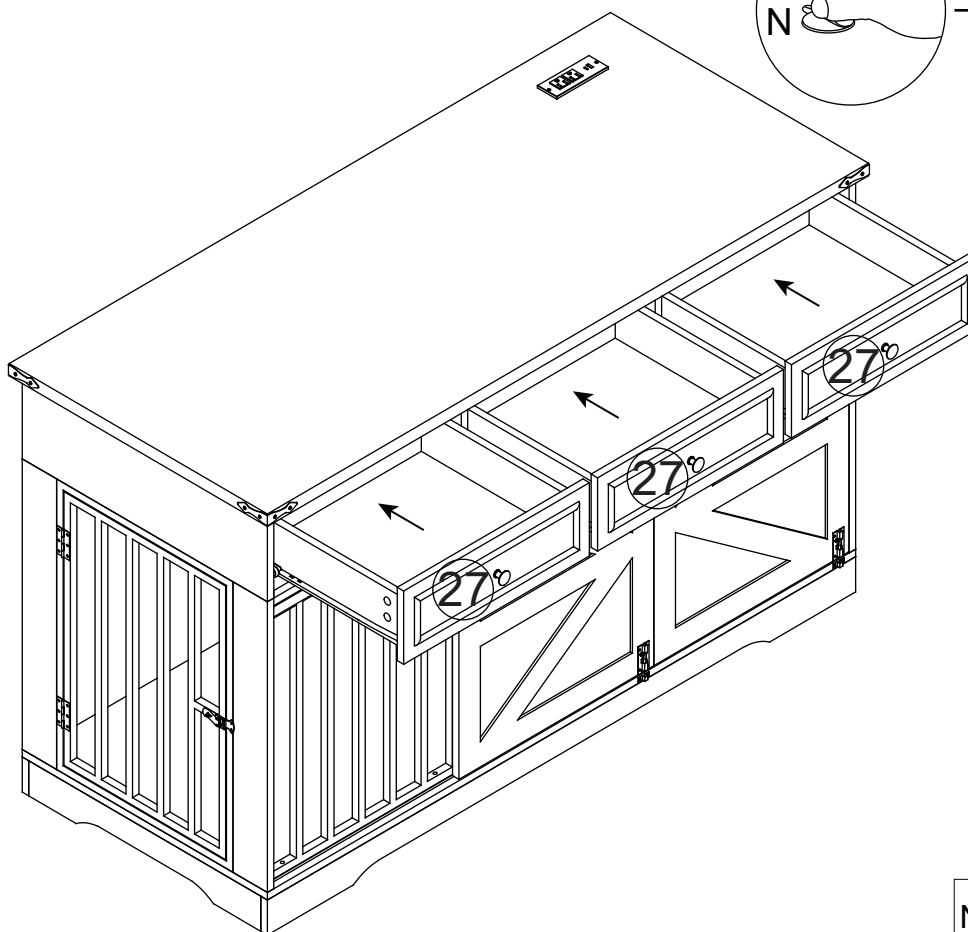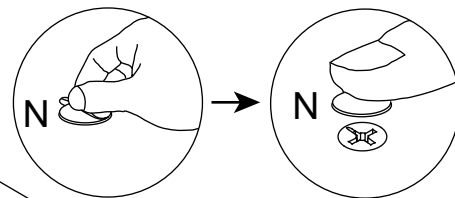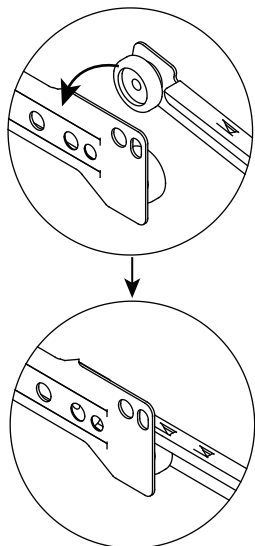

Nx108



36

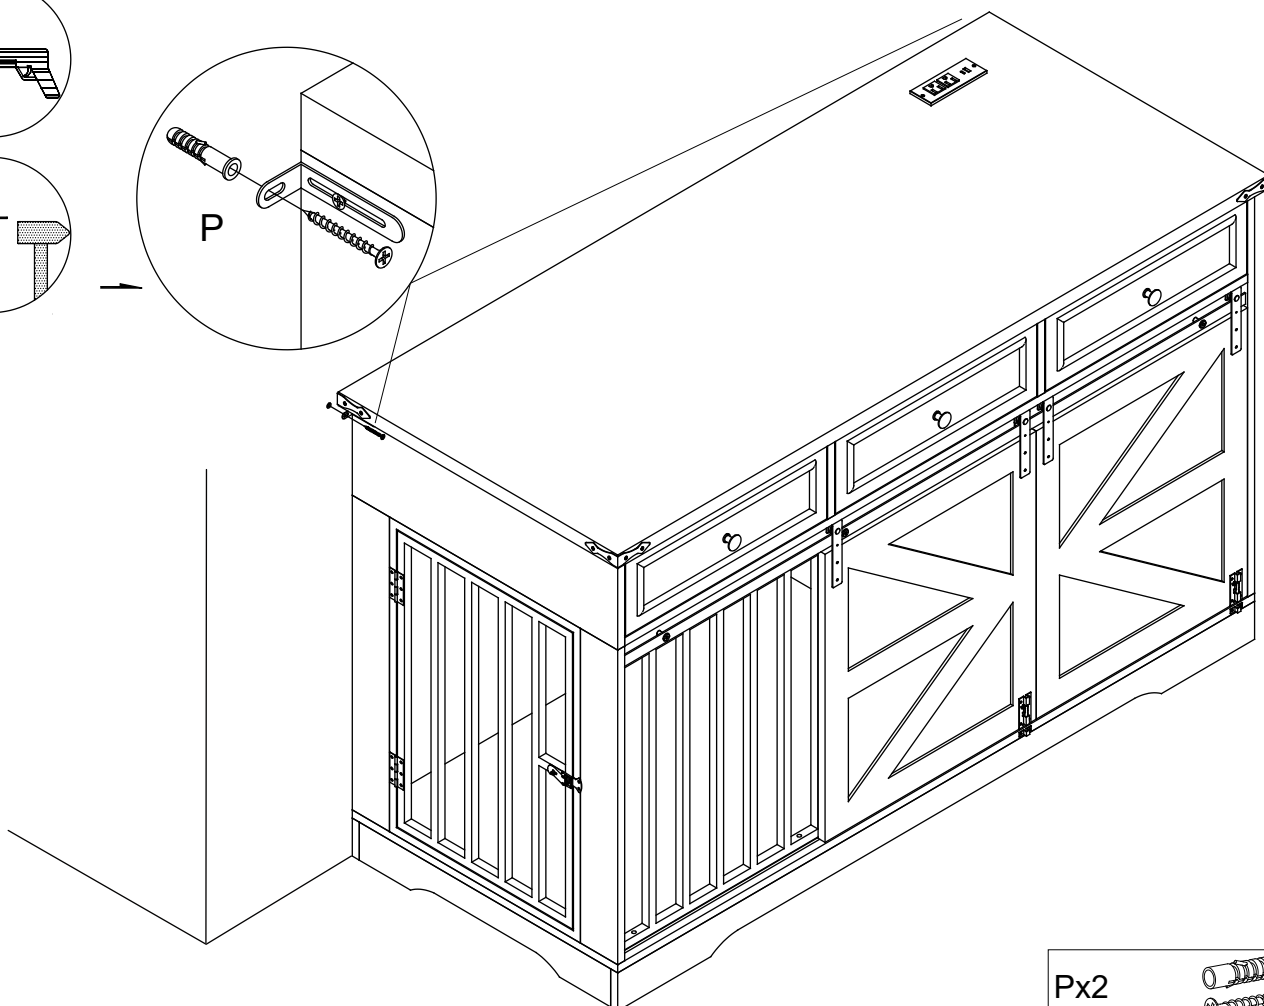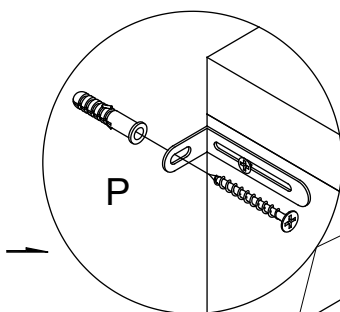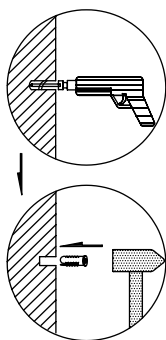

Px2

