


Assembly Instruction

Accent Cabinet












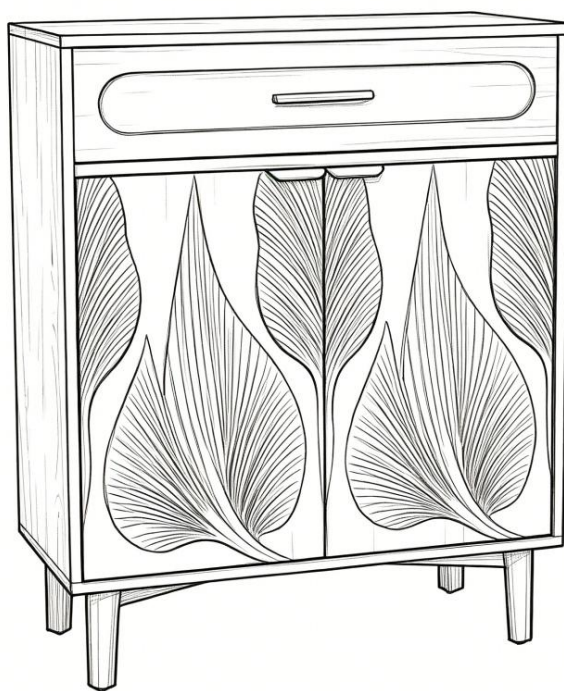


⚠ WARNING:

- Read all instructions carefully and completely before assembly and use.
- Retain for future reference.
- **DO NOT use power tools.**
- **DO NOT over-tighten hardware.**
- Periodically check all hardware and re-tighten as necessary.
- DO NOT sit or stand on product. Use only for intended purpose.
- DO NOT exceed 80 lbs for the tabletop and 10 lbs for the drawers& shelf, evenly distributed.

Parts List


Check all parts before assembly

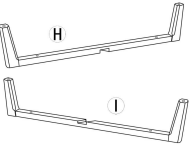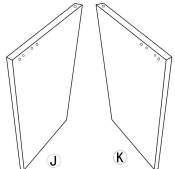Item no.	Reference image	QTY.	Item no.	Reference image	QTY.	Item no.	Reference image	QTY.
A.		1	F.		1	M.		1
B.		1	G.		1	N.		1
C.		1	H/I.		1/1	O.		1
D.		1	L.		1	P.		1
E.		2	J/K.		1/1	Q.		1
H1.		4+1	H8.		4+1	H15.		1
H2.		4+1	H9.		2	H16.		4+1
H3.		12+1	H10.		4+1	H17.		1
H4.		12+1	H11.		4+1	H18.		2+1
H5.		6+1	H12.		4+1	H19.		2+1
H6.		12+1	H13.		10+1	H1:M6x40mm H5:M4x14mm H13:M3x14mm H16: M4x25mm H18:M4x14mm		
H7.		3	H14.		1			

Step 1: Put the Tabletop (A) on a soft surface to protect the finish.


Insert the Wooden pin (H6) & Bolt (H3) to the pre-drilled hole on Table Top (A) by (H15).

Attach Side panel (C) to the Top (A) with Screw (H4) by (H15). **Leave hardware loose in this step.**

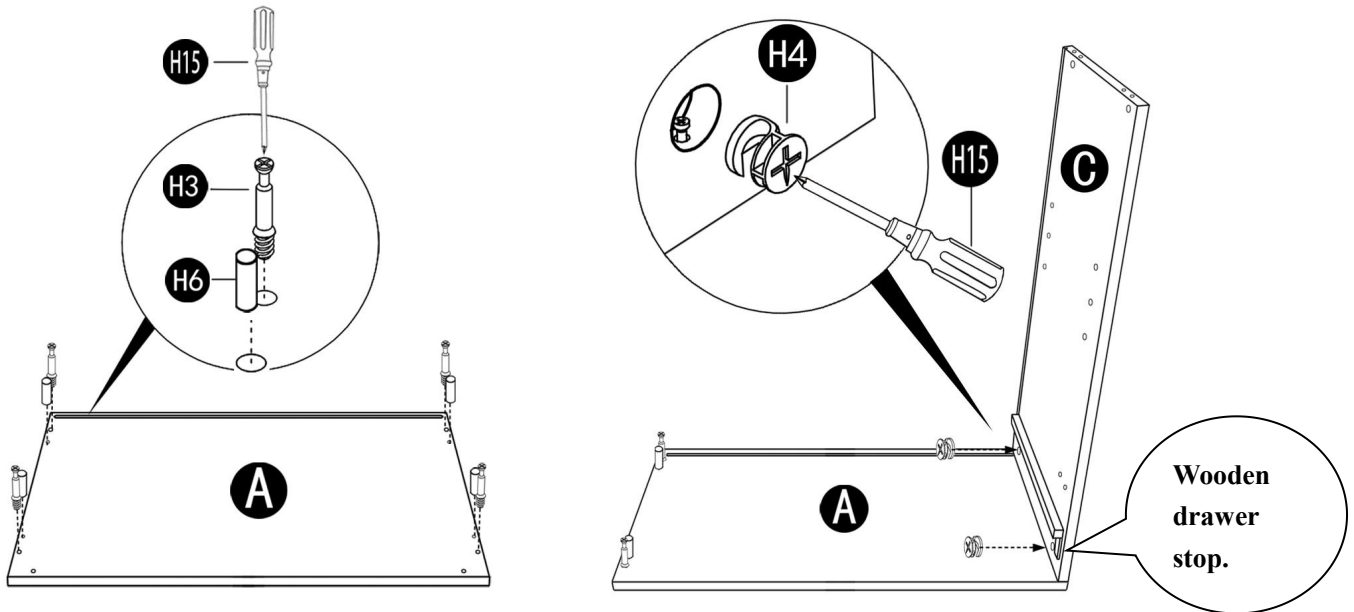

Step 2: Attach the Magnet (H7) to the pre-drilled hole on Wooden bar (D) with (H5) by (H15).


Insert the Wooden pin (H6) to the pre-drilled hole on the two end of Wooden bar (D).

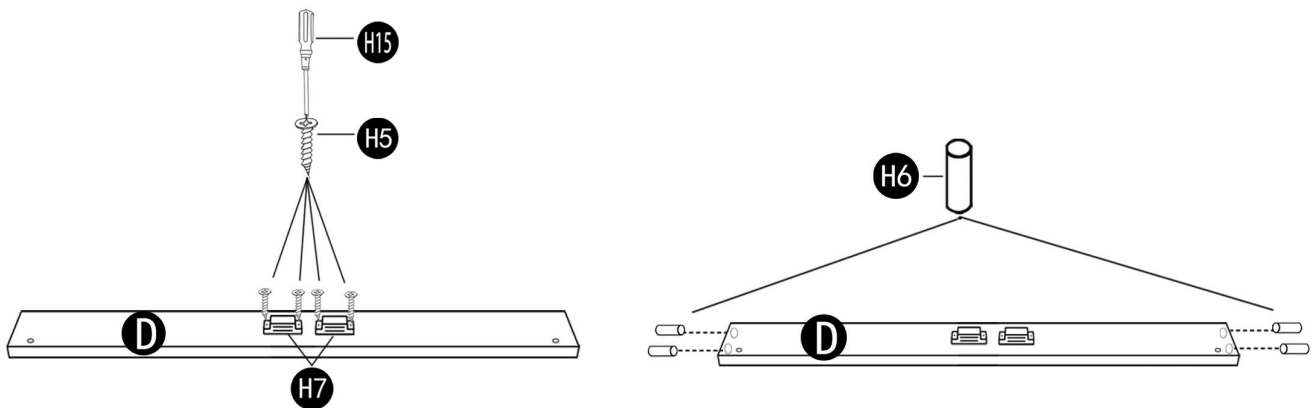


Step 3: Attach the Wooden bar (D) to the pre-drilled holes on Side panel (C) as below shown.

Then, attached the Side panel (B) to Wooden bar (D) and Table Top (A) with Screw (H4) by (H15).


Leave hardware loose in this step.

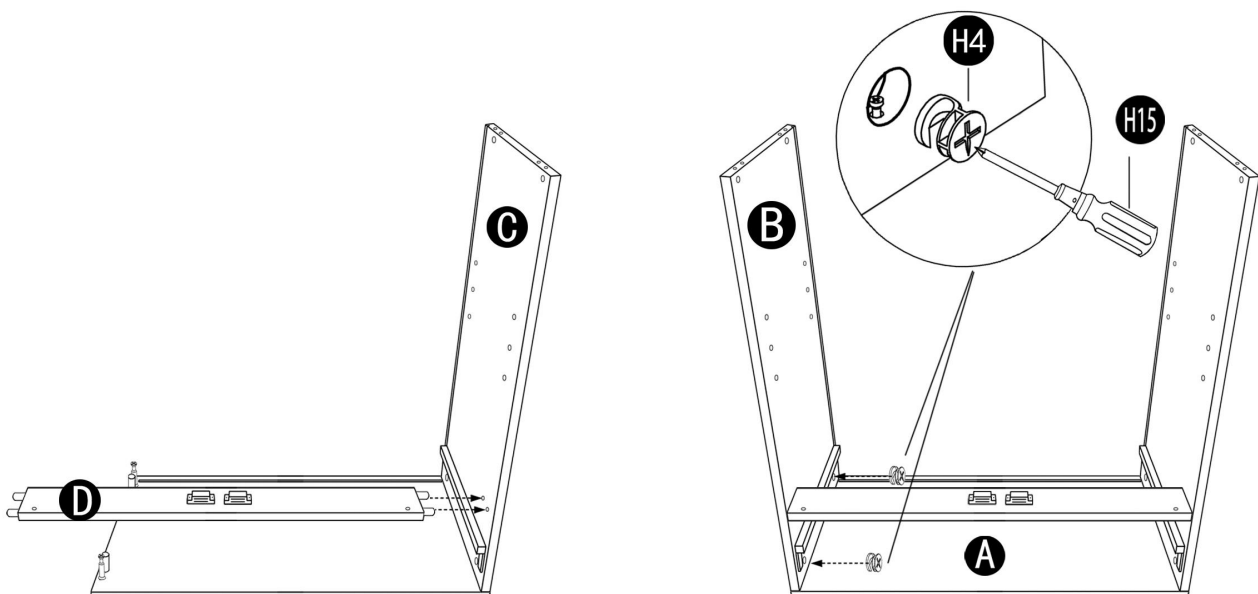


Step 4: Insert the Back panels (E)&Back strip (F) as shown below. Ensure the Back panels (E) aligned Grooves on the Panel (B&C&A). Insert the Wooden pin (6) to the pre-drilled hole on the Panels(B&C).

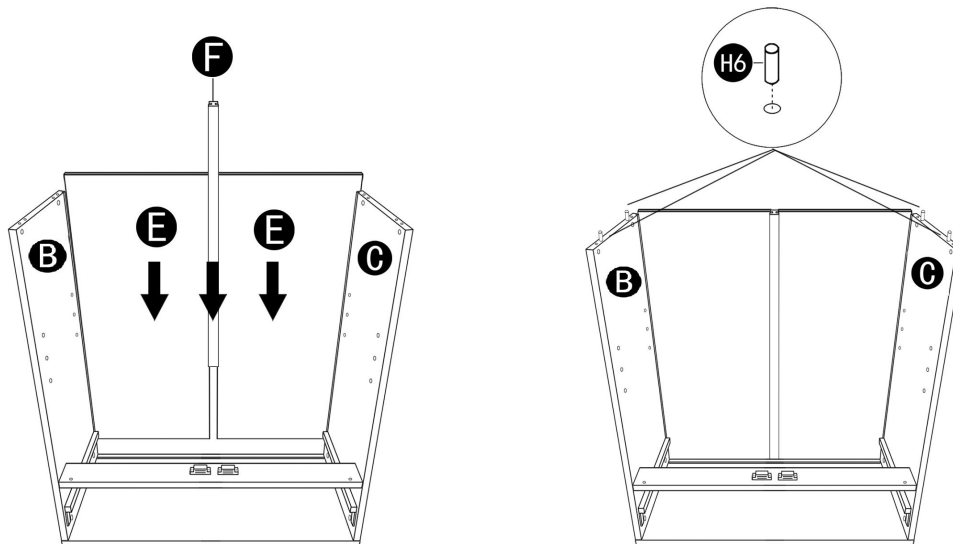

Step 5: Attach the Magnet (H7) to the pre-drilled hole on Bottom panel (G) with (H5) by (H15). Insert the Bolt (H3) to the pre-drilled hole on Bottom panel (G) by (H15). And attach it to the the main Body with Screw (H4) by (H15). **Fully tighten all Bolts from Step 1 to 5.**

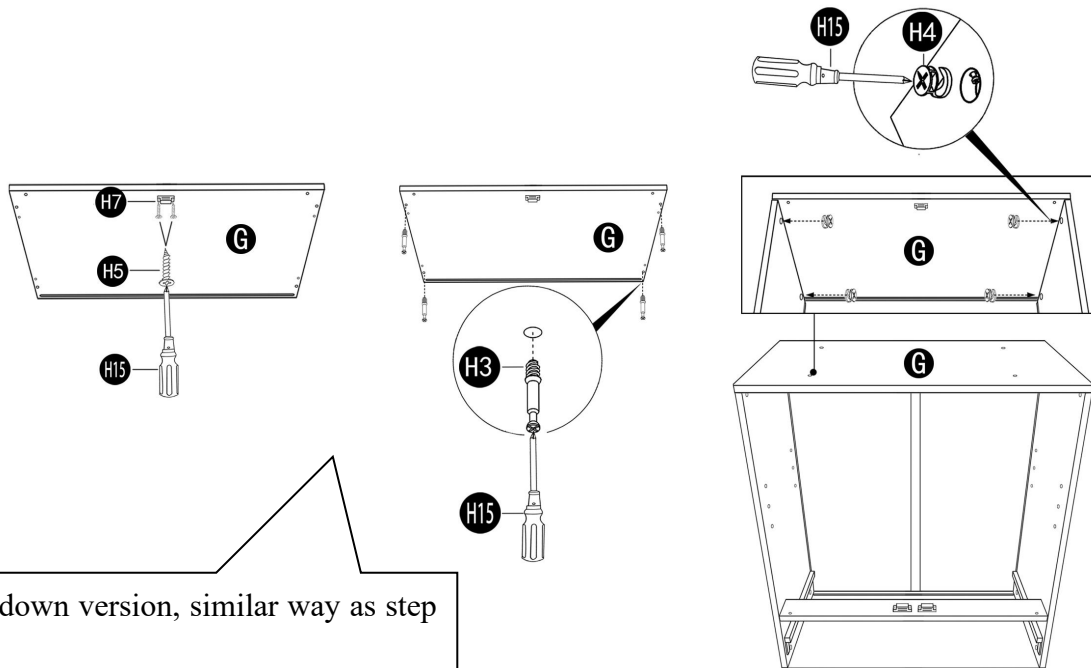


Step 6: Place the Leg (H) with Leg (I) as below photo shown. Attached the Legs (H&I) to the bottom of the cabinet with Hex bolts (H1) and Washers (H2) by Allen key (H14) as shown. Attach the Foot pad (H12) to the bottom of the legs.

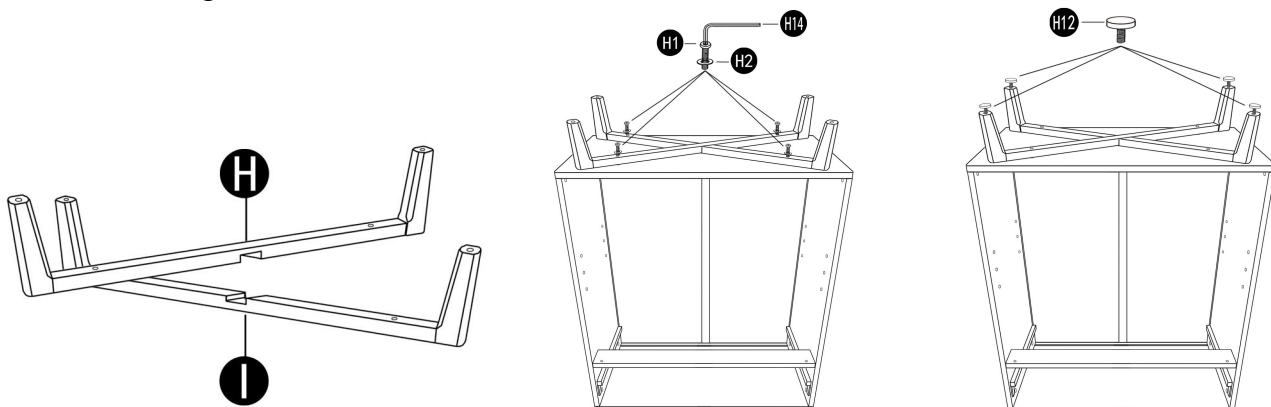


Step 7: TWO PEOPLE REQUIRED when turning the item upside down to avoid breaking the legs.


Insert the Shelf pins (H11) into the holes. Place the Shelf (L) inside as shown in picture below.

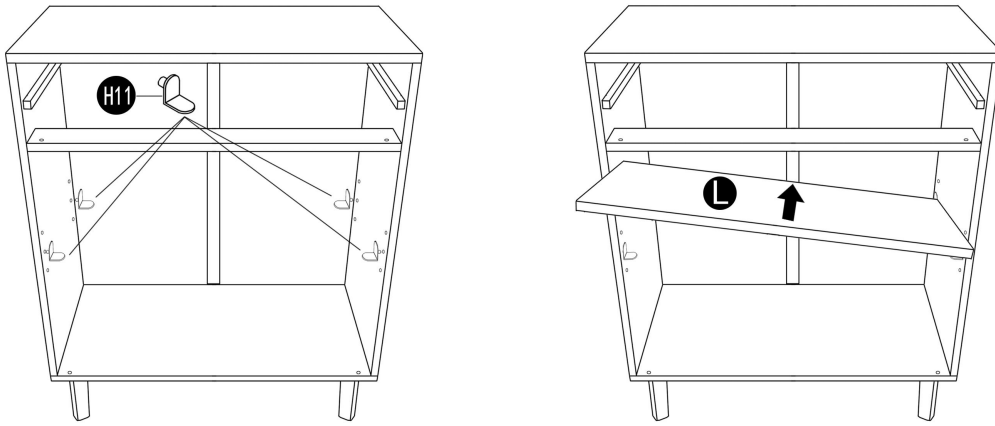


Step 8: Attach the Handle (H9) to the pre-drilled holes on each door (J&K) using screw (H16) by (H15).

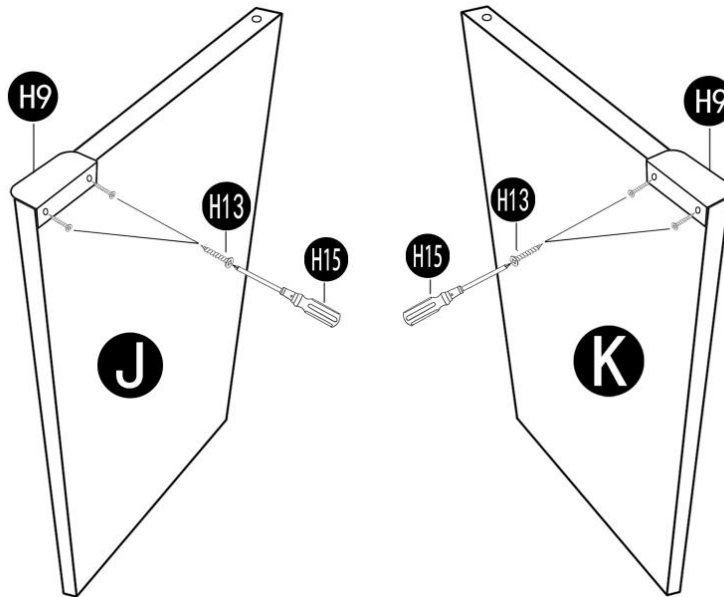

Step 9: Insert the bottom door pin (H10) and top door pin (H10) into the corresponding holes on the doors. Insert the **bottom** door pin (H10) into the hole on the cabinet first, then press down the top door pin (H10) to secure the door in place.

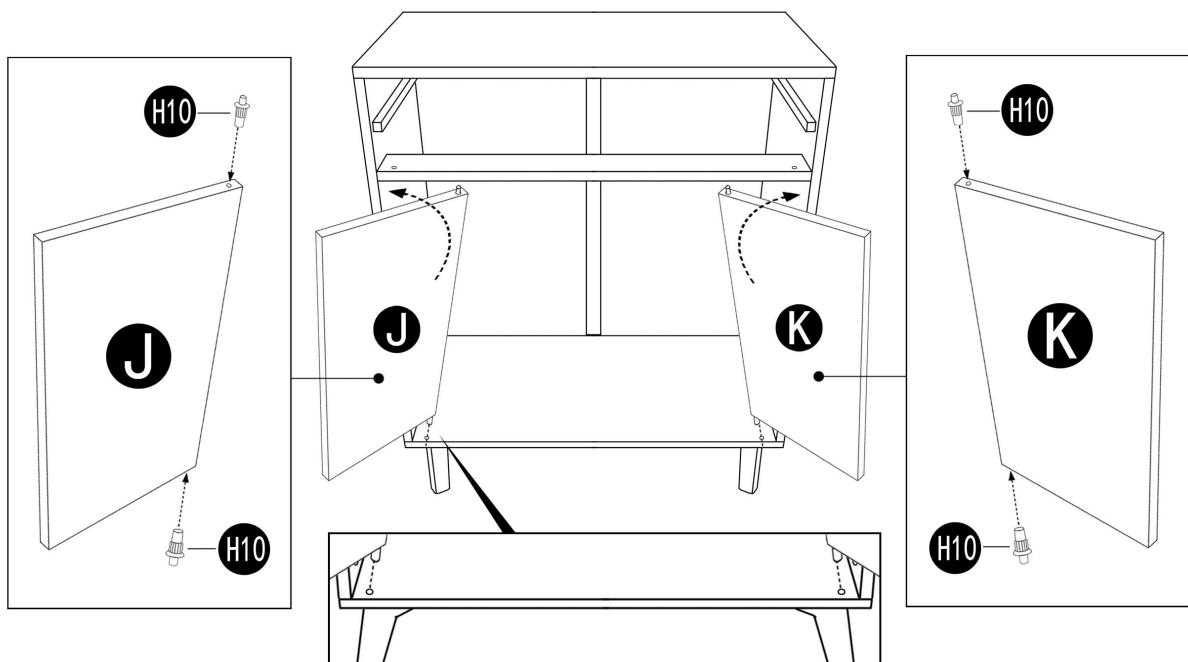


Step 10: Put the Top drawer's panel (M/N/O/P/Q) on a soft surface to protect the finish. Ensure to use the Bolt (H18) for the knob on this step.

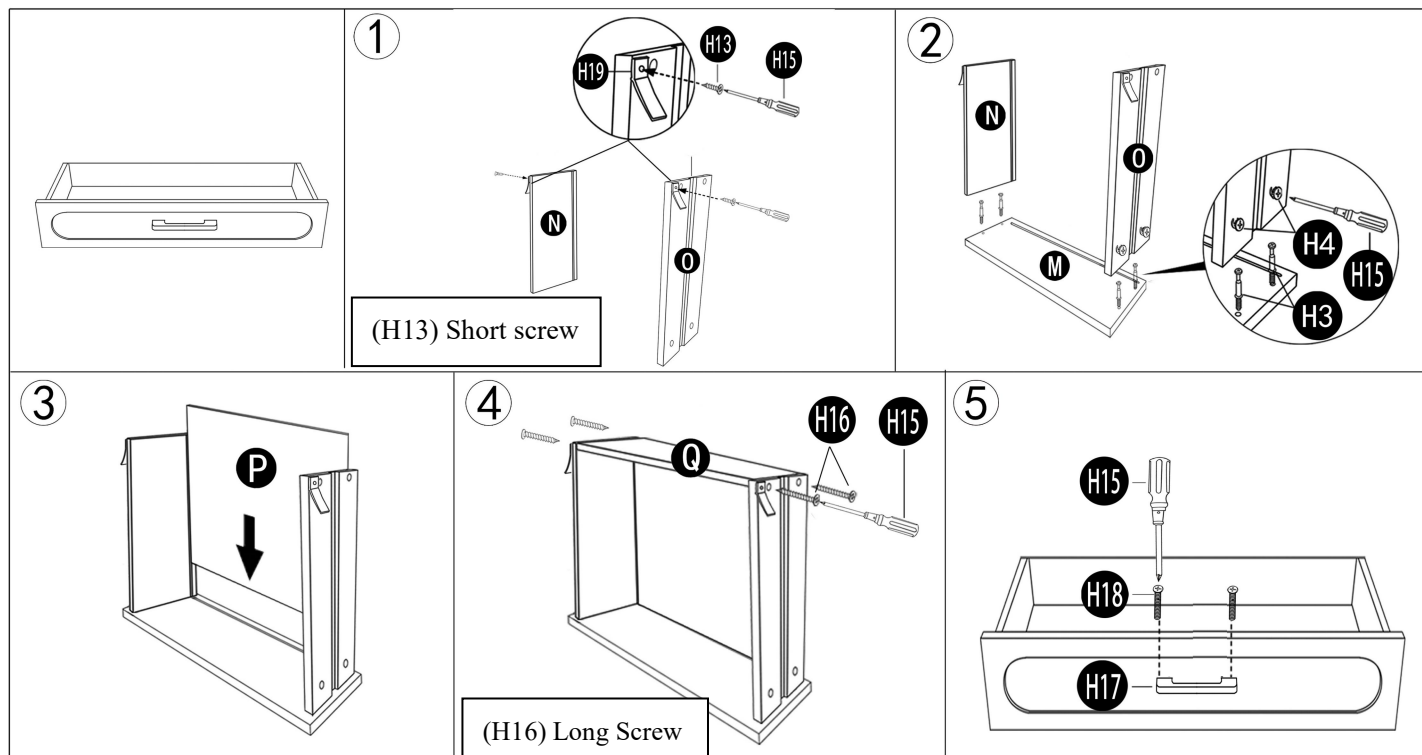

Place the drawer into the main body.

Step 11: Attach (H8) to the back of the main body to enhance the stability with (H13) by Spanner (H15) as shown below.

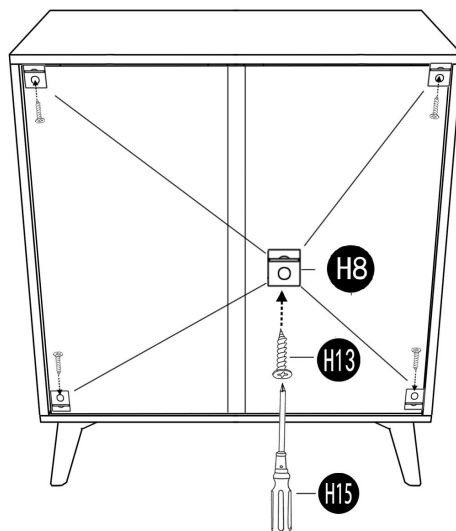

Assembly finished.

Thank you for buying this Living Room Furniture.

If you encounter any issues during installation or use, please email us, including your order ID and a detailed description of the problem. If possible, please provide relevant images to expedite assistance. We will strive to resolve any issues promptly.