


Measurement Guide

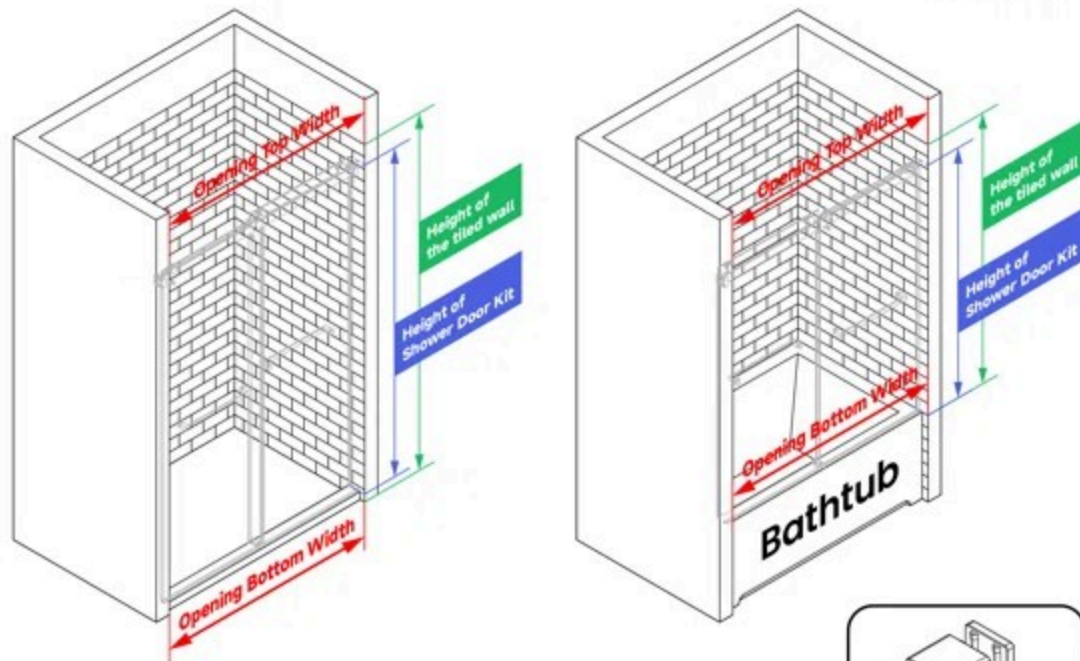

MEASURE THE OPENING AFTER TILING IS COMPLETE

- * The difference between the opening's top width and bottom width **must be $\leq 1"$** . If $>1"$, the wall is too out of plumb – you will need a U-channel or a framed door.



1. Opening width = **the maximum of** opening top width and bottom width.
2. Our shower door kit's height equals the glass panel height. The top rail is **1 7/8"** lower than the glass top.
- 3a. For 72" / 76" / 79" height standard shower door:
The supporting threshold must be WIDER than our bottom rail width (bottom rail width = **3 5/32"**).
- 3b. For 60" or 66" height alcove tub shower door:
The tub ledge width must be WIDER than our bottom rail width (bottom rail width = **3 5/32"**).
4. Our shower door is adjustable within its posted size range. **Even 1/32" wider** than the maximum size **will NOT fit**.