
Assembly Instruction

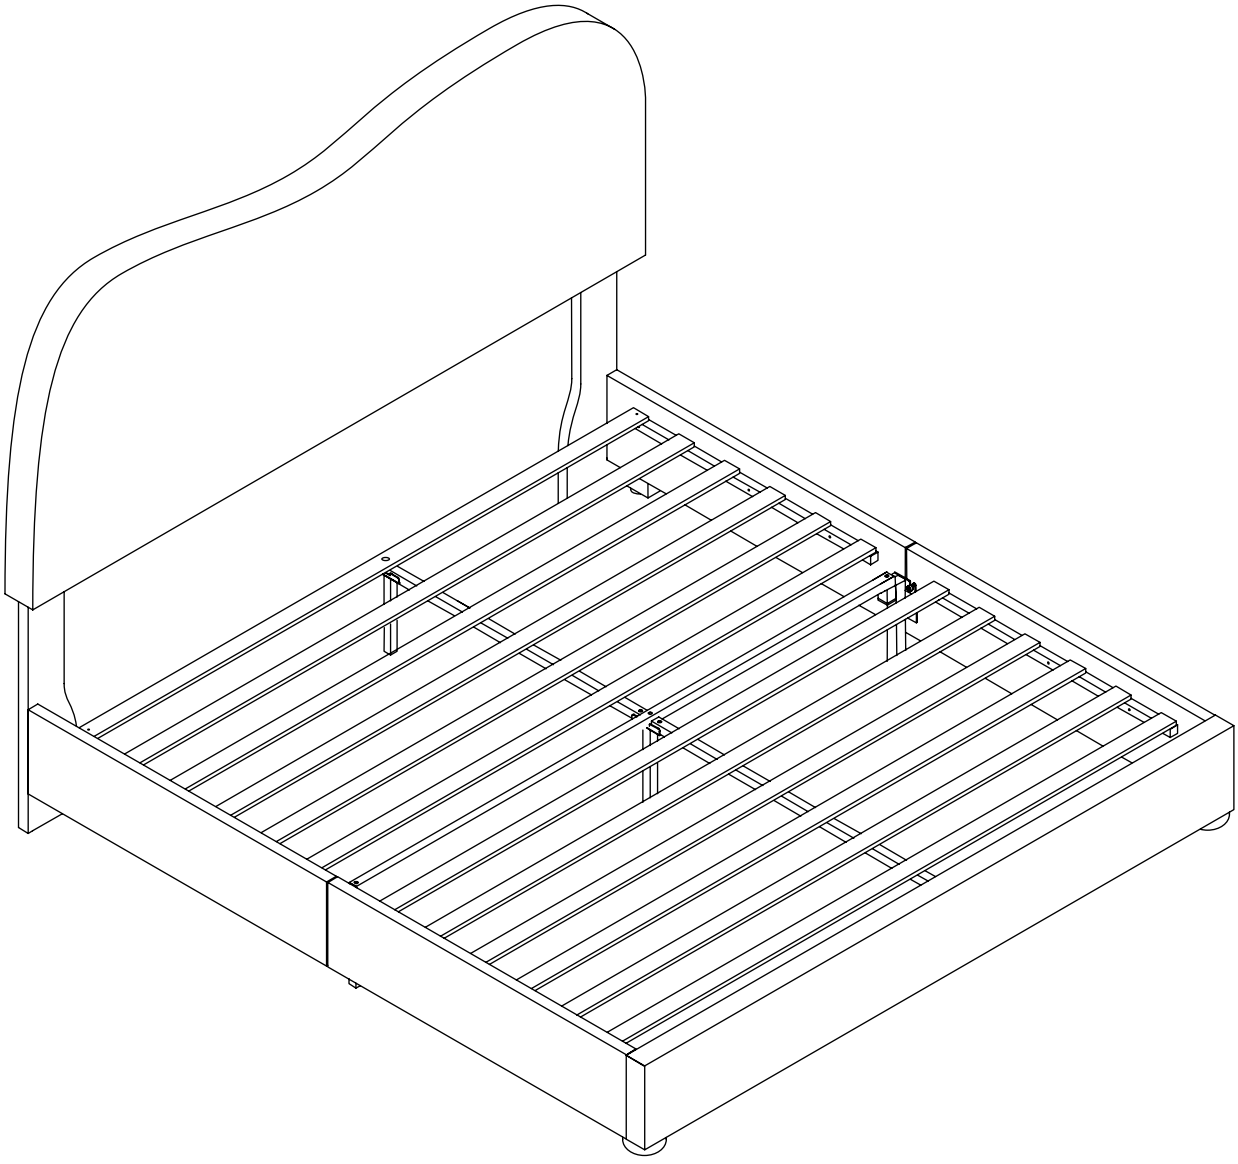



Please check that you have all the parts listed before you start assembling,if you do find that something is missing,do not continue assembly,please contact us immediately.

NOTE:Please do not completely tighten all the hardware until the entire assembly is complete!


IMPORTANT

Please follow the instruction manuals and use a pad to protect the product during your assembly.

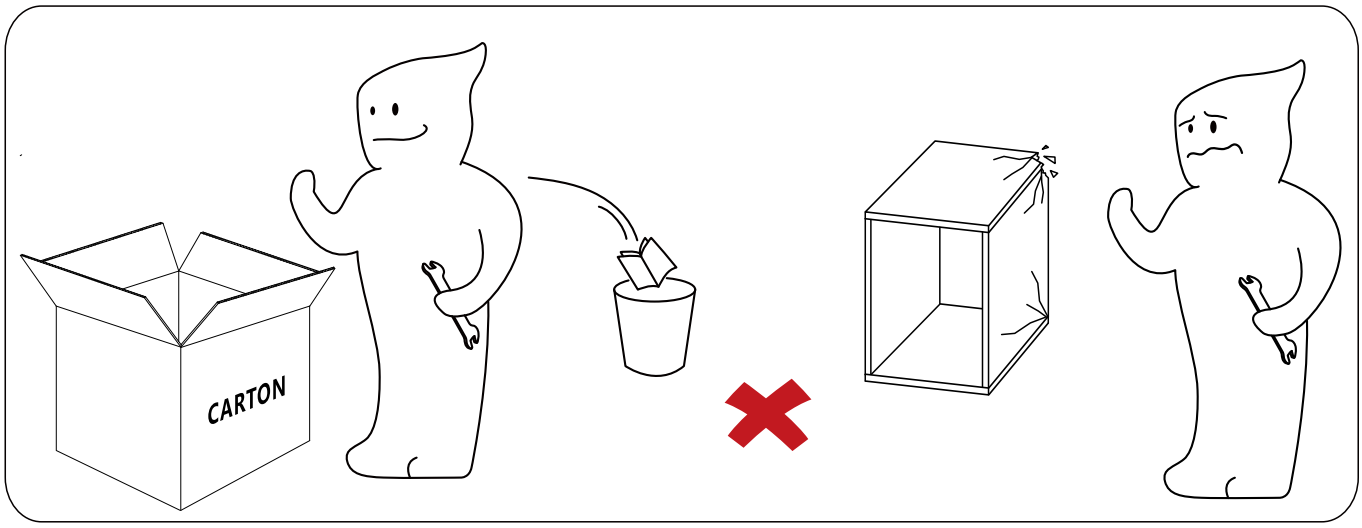


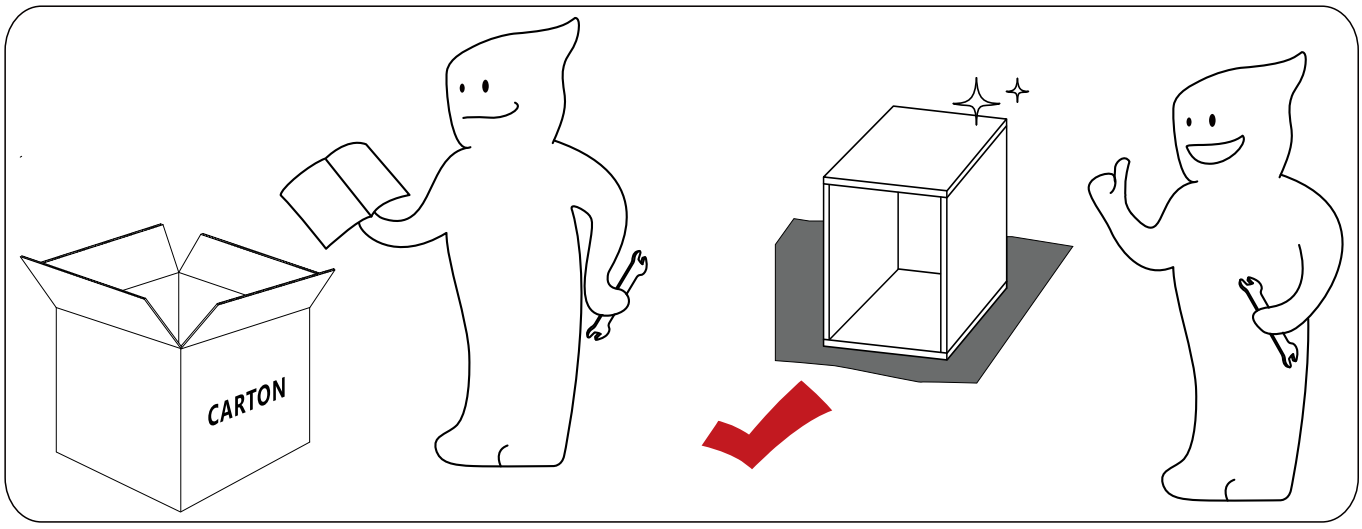

Note:
1. Should be assembled on flat ground to keep balance.
2. Before completing the installation, do not tighten the screws.

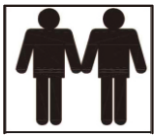


For easier and better assembly, **2** or more adults are required.

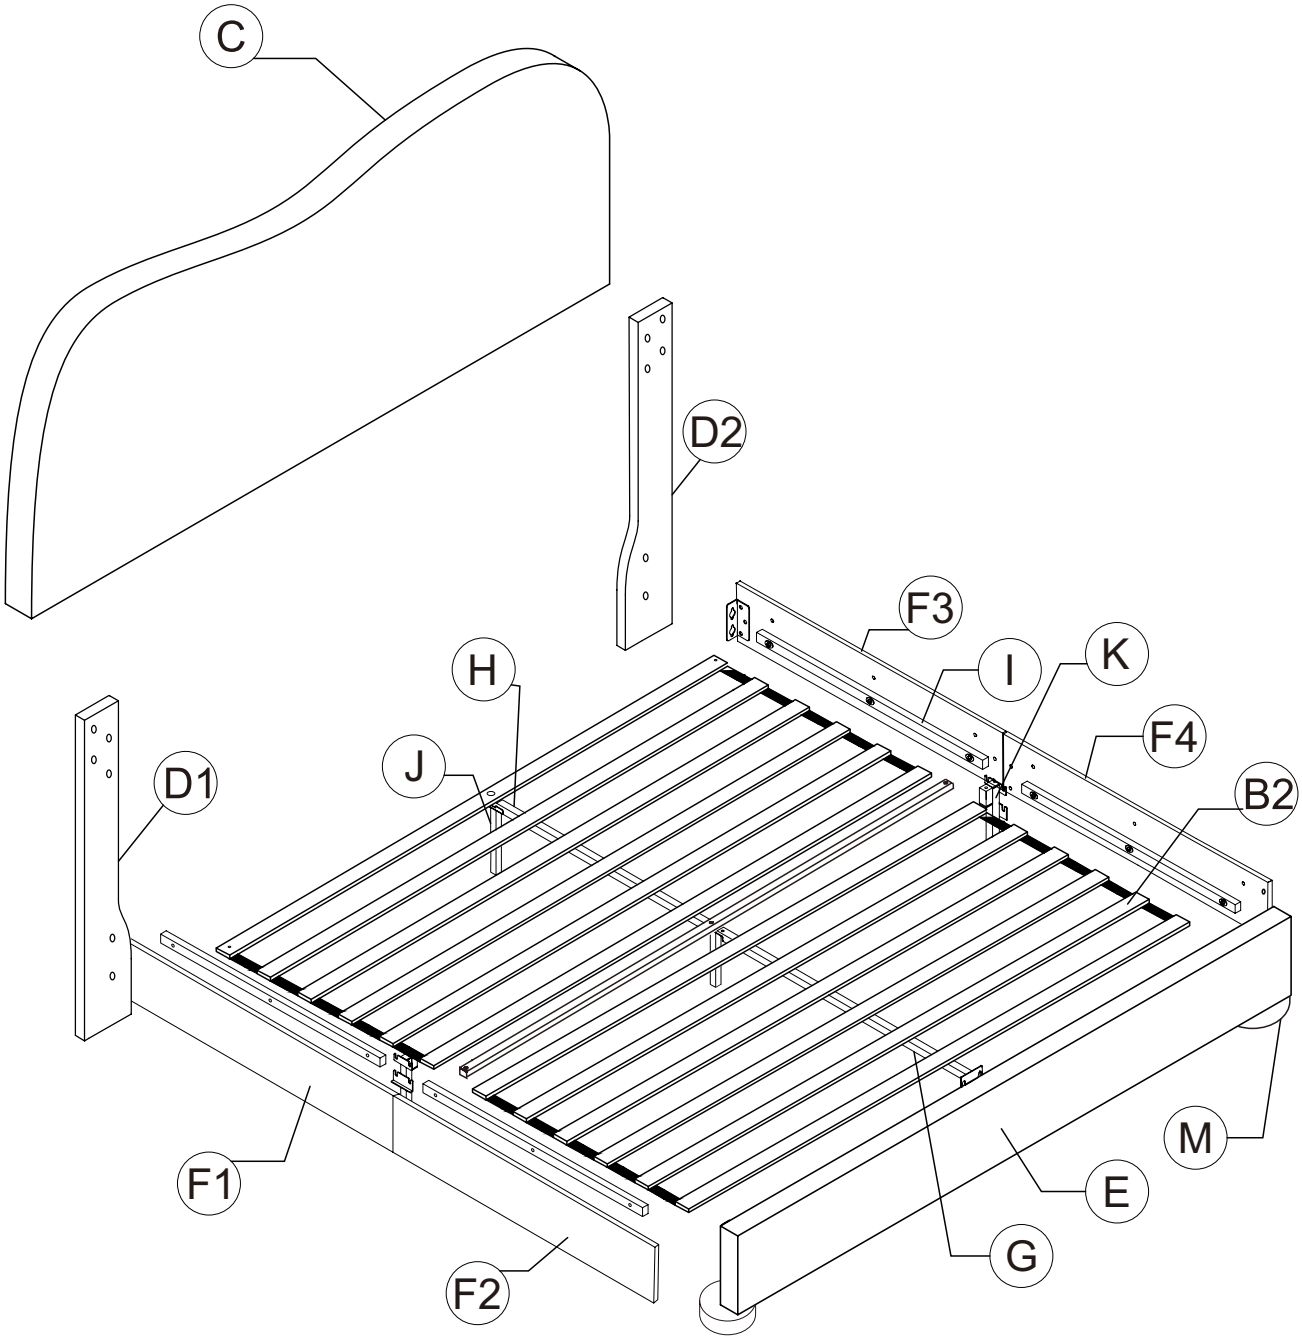
C
D2
F3
H
I
K
J
F4
D1
B2
M
F1
E
G
F2


BED FRAME PARTS LIST

B1 1PC

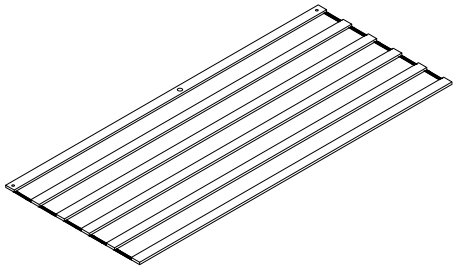


Slat

B2 1PC

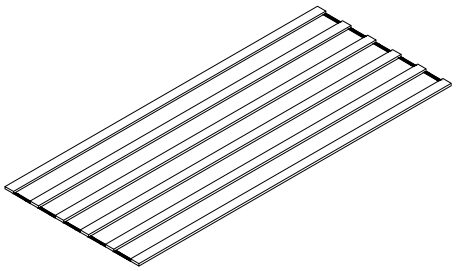

Slat

C 1PC

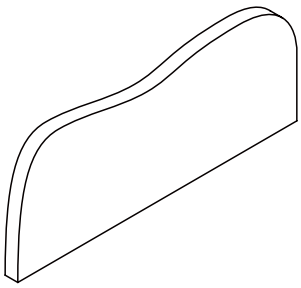

D_1 1PC




Left Leg

D_2 1PC




Right Leg

E 1PC

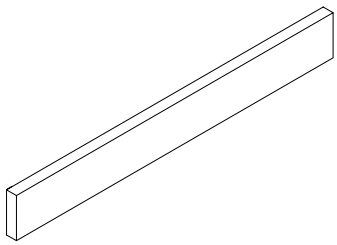


Footboard

F1 1PC

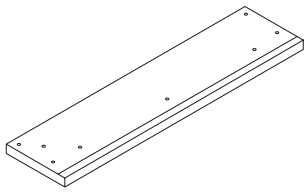


side rail

F2 1PC

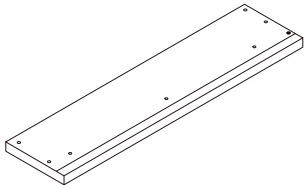


side rail

F3 1PC

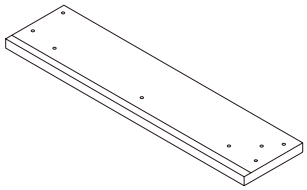


side bar

F4 1PC

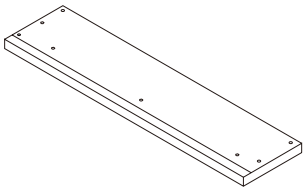


side bar

G 1PC

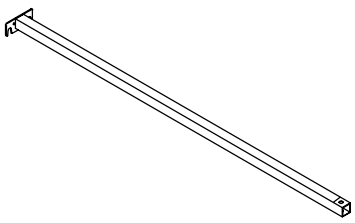


Middle behind support bar

H 1PC

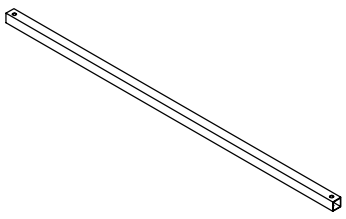


Middle front support bar

I 4PCS

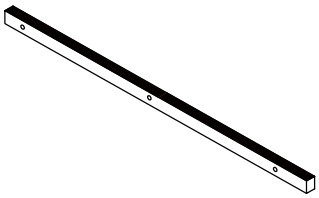


Side bar

J 2PCS














Middle support leg

K 2PCS



Bed side support leg


FITTING PART LIST

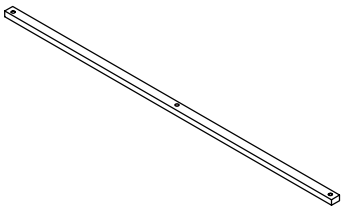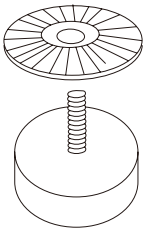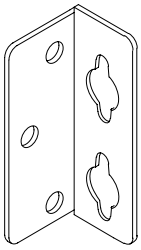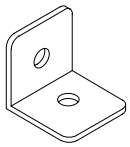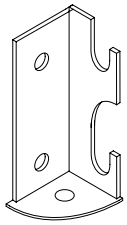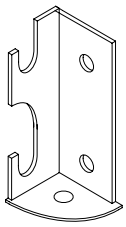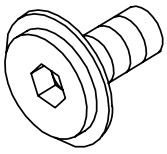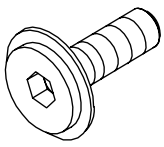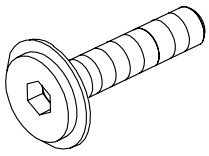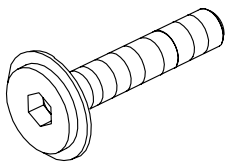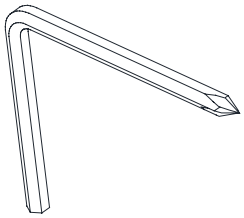L 1PC  Cross bar	M 2PCS  Foot	N 2PCS  Connector-N	O 2PCS  Connector-O
P1 1PC 	P2 1PC 		
a 28PCS  M8*18	b 4PCS  M8*25	c 17PCS  M8*35	d 9PCS  M8*55
e 2PCS  M4*35	f 2PCS 	g 1PC 	

step1


d	M8*55	8PCS

As shown in the figure, the headboard height can be adjusted by locking the support legs to different holes on the headboard for a 2-inch height adjustment.

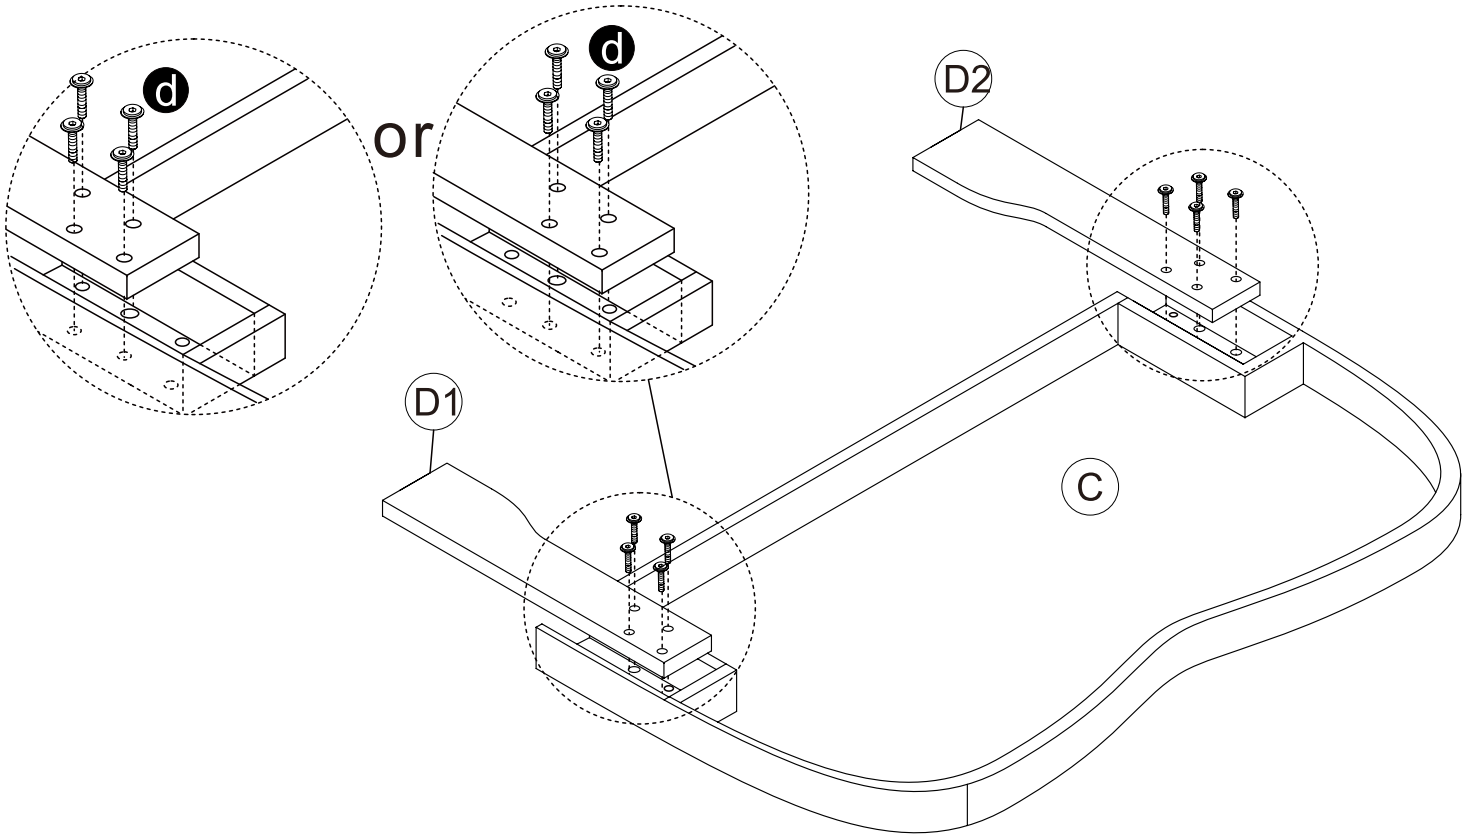

step2


b	M8*25	4PCS

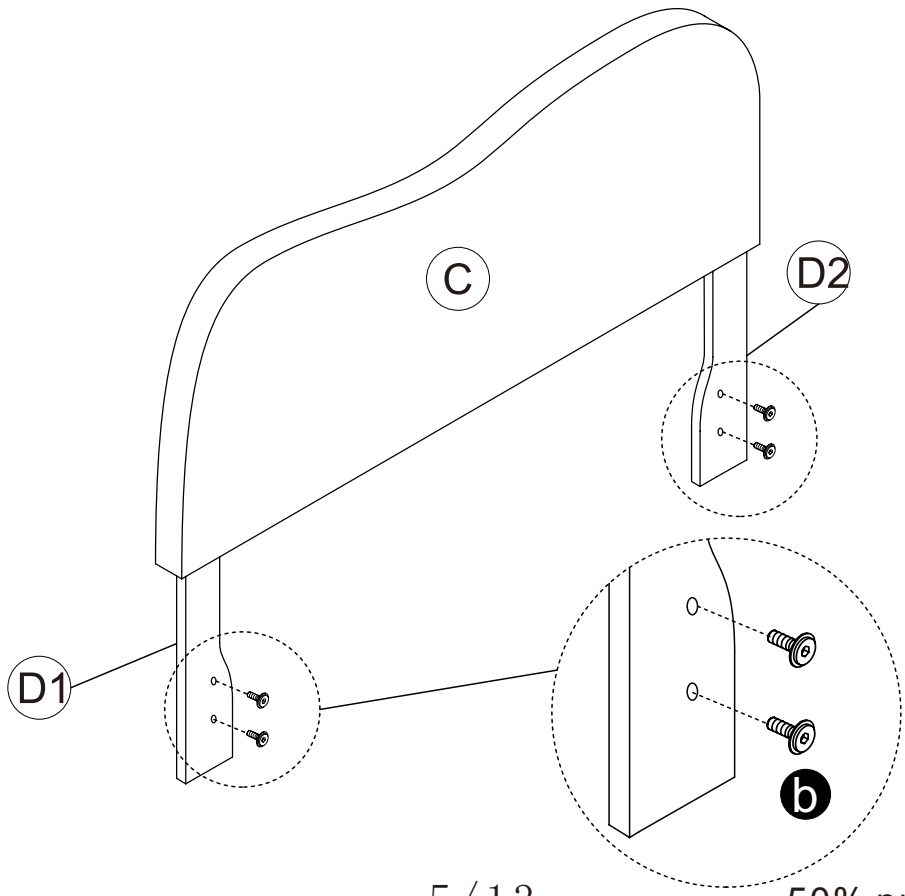

50% pre-screweded.

step3


a	M8*18	6PCS

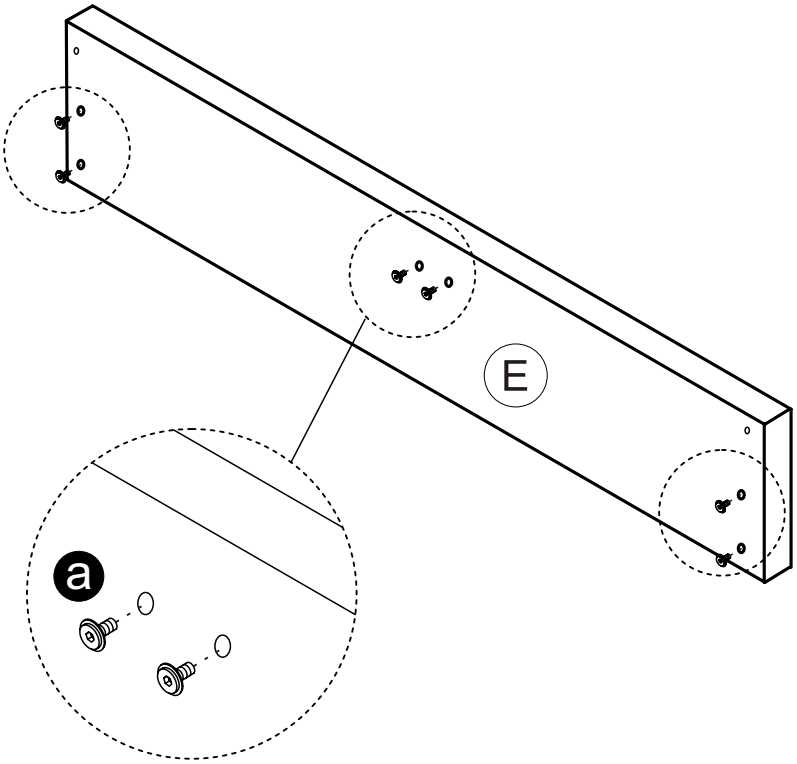

50% pre-screweded


step4

a	M8*18	6PCS

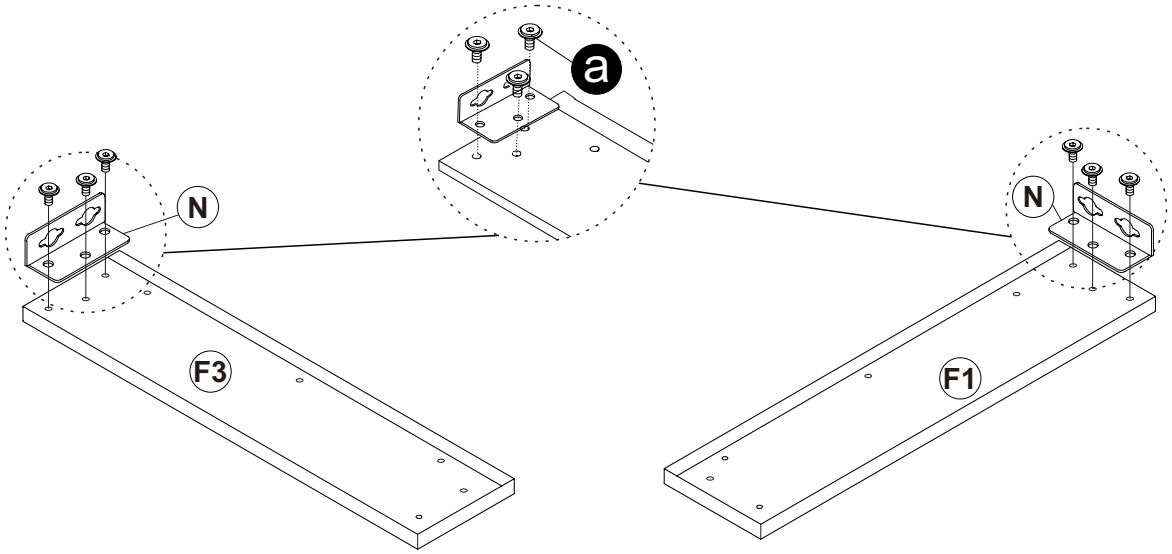


step5

a	M8*18	4PCS

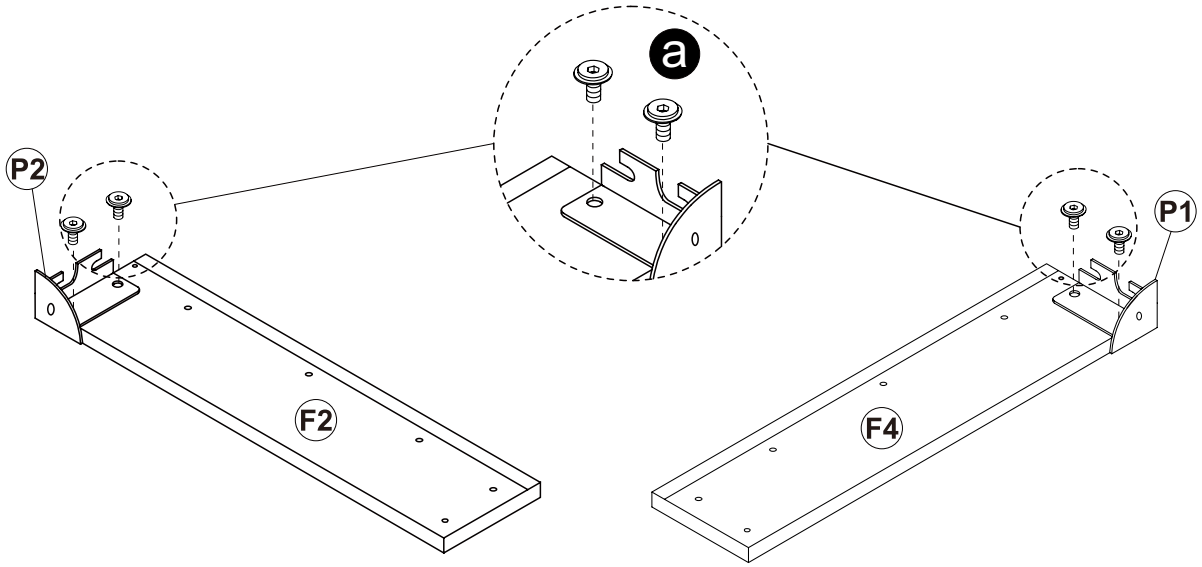


step6

a	M8*18	8PCS

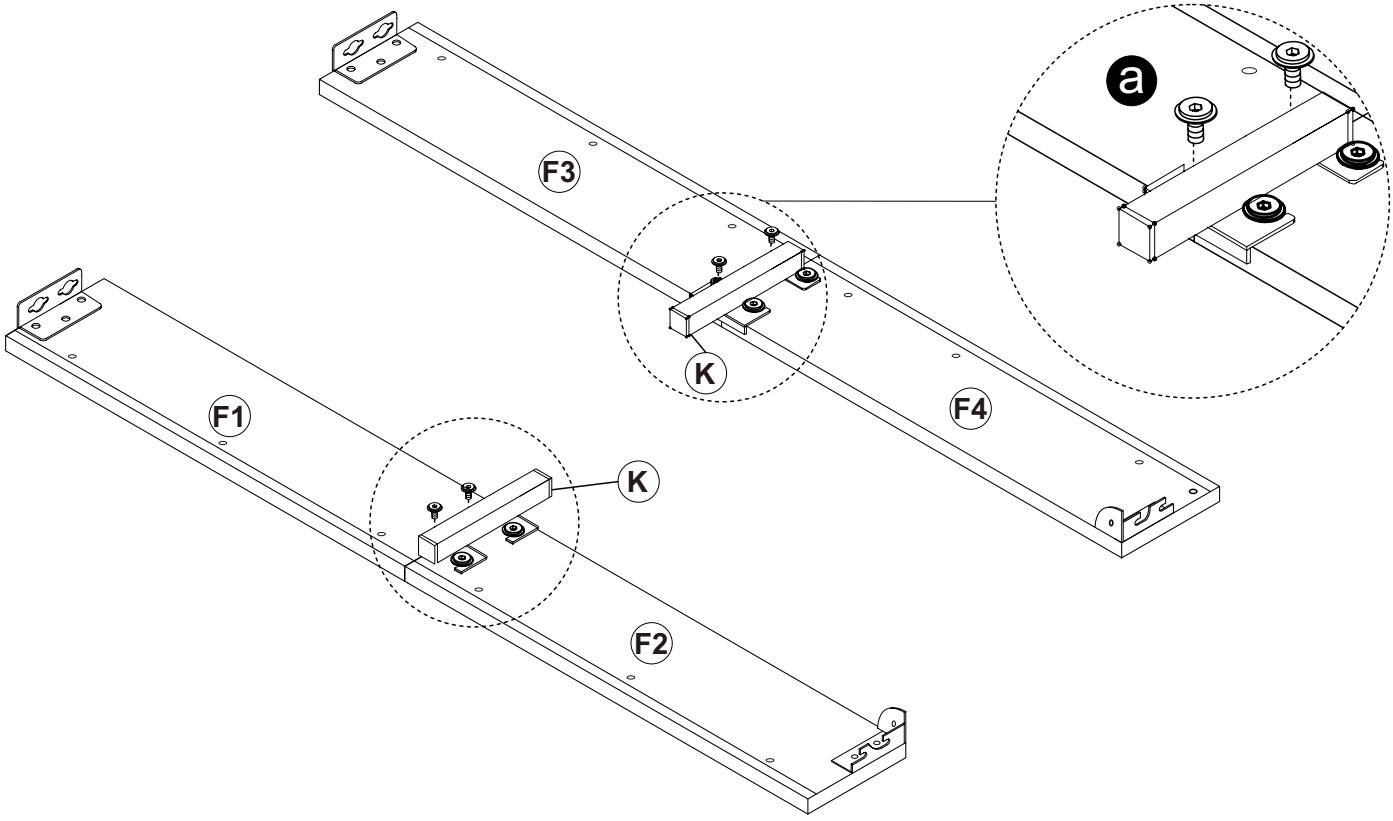


step7

Please first use the pre-installed screw a on the footboard to attach it to the connectors P1 and P2 on the side panel, and then tighten the screw a.

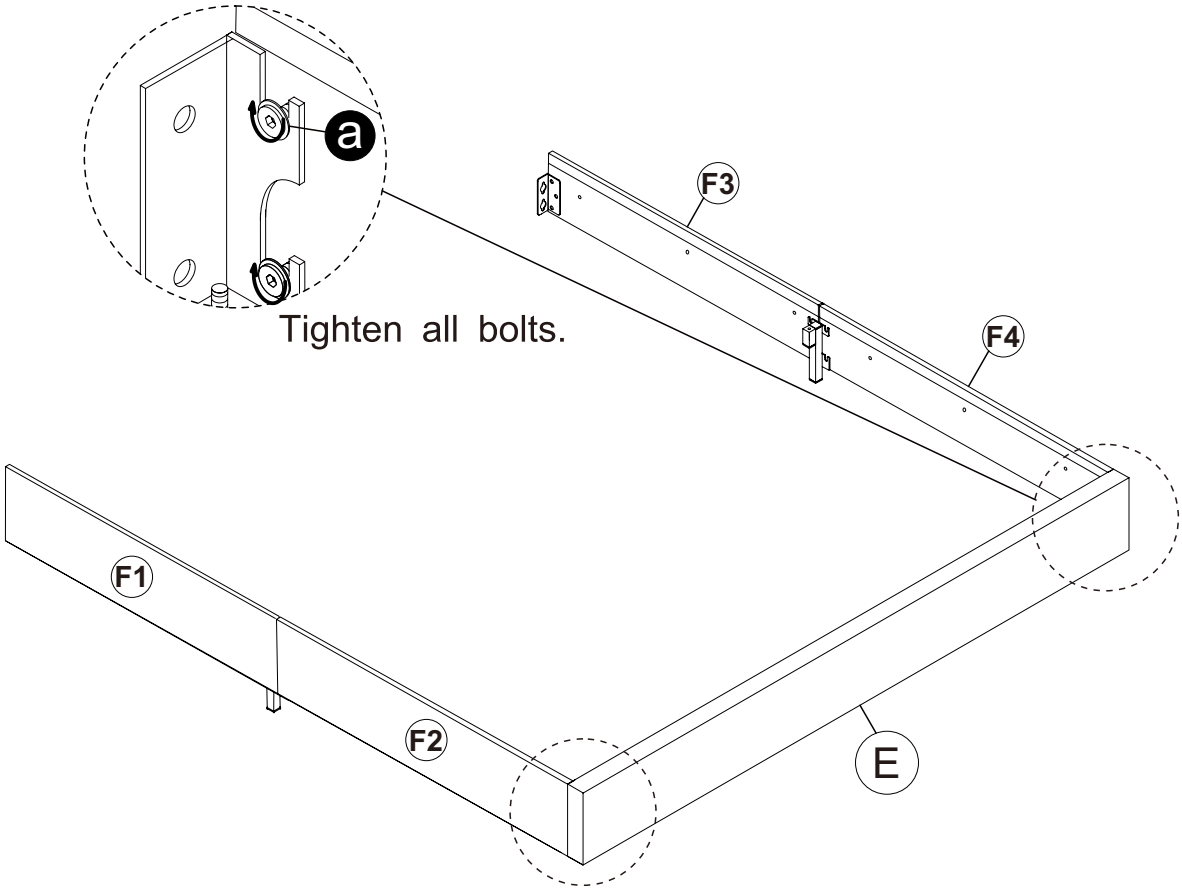


step8

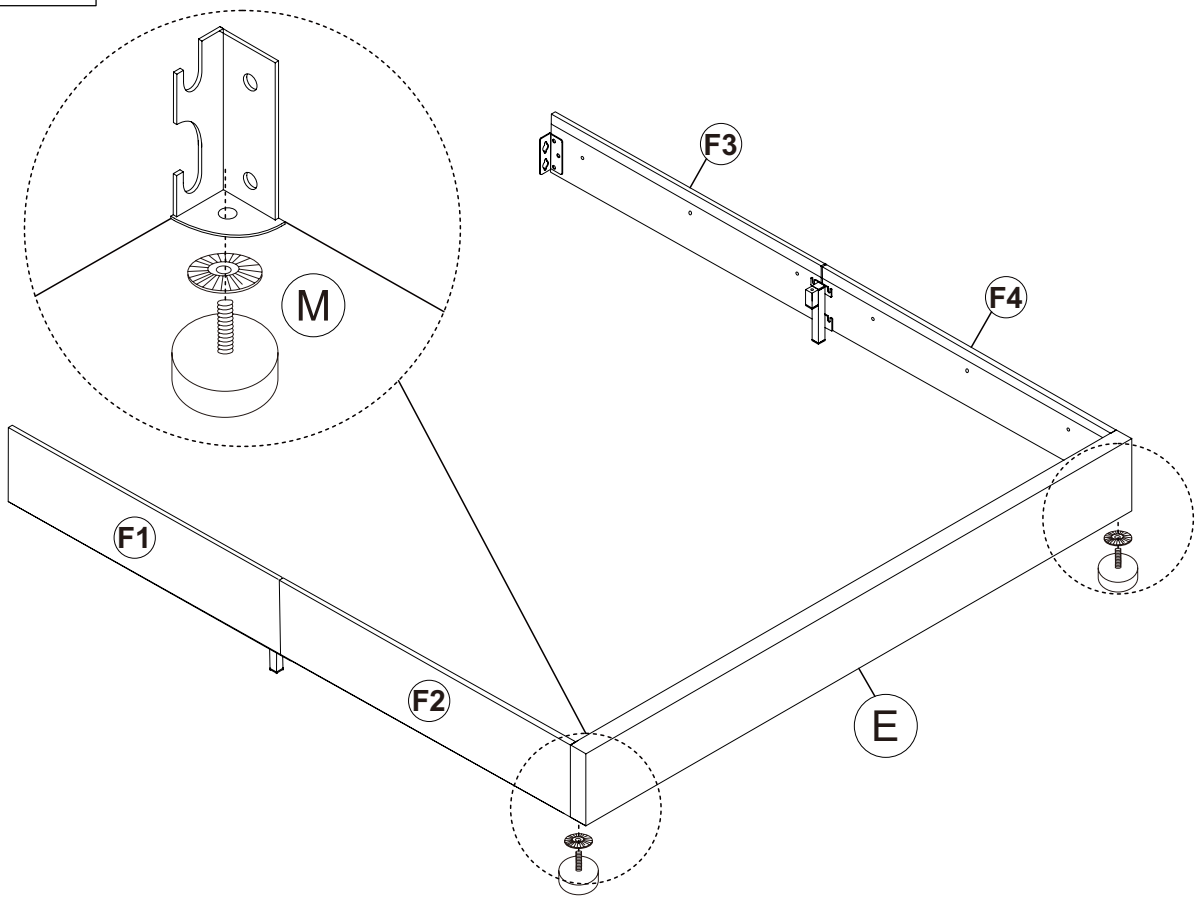


step9

Please first attach the side panel to the pre-installed screw b on the head support leg using connector N, and then tighten screw b.

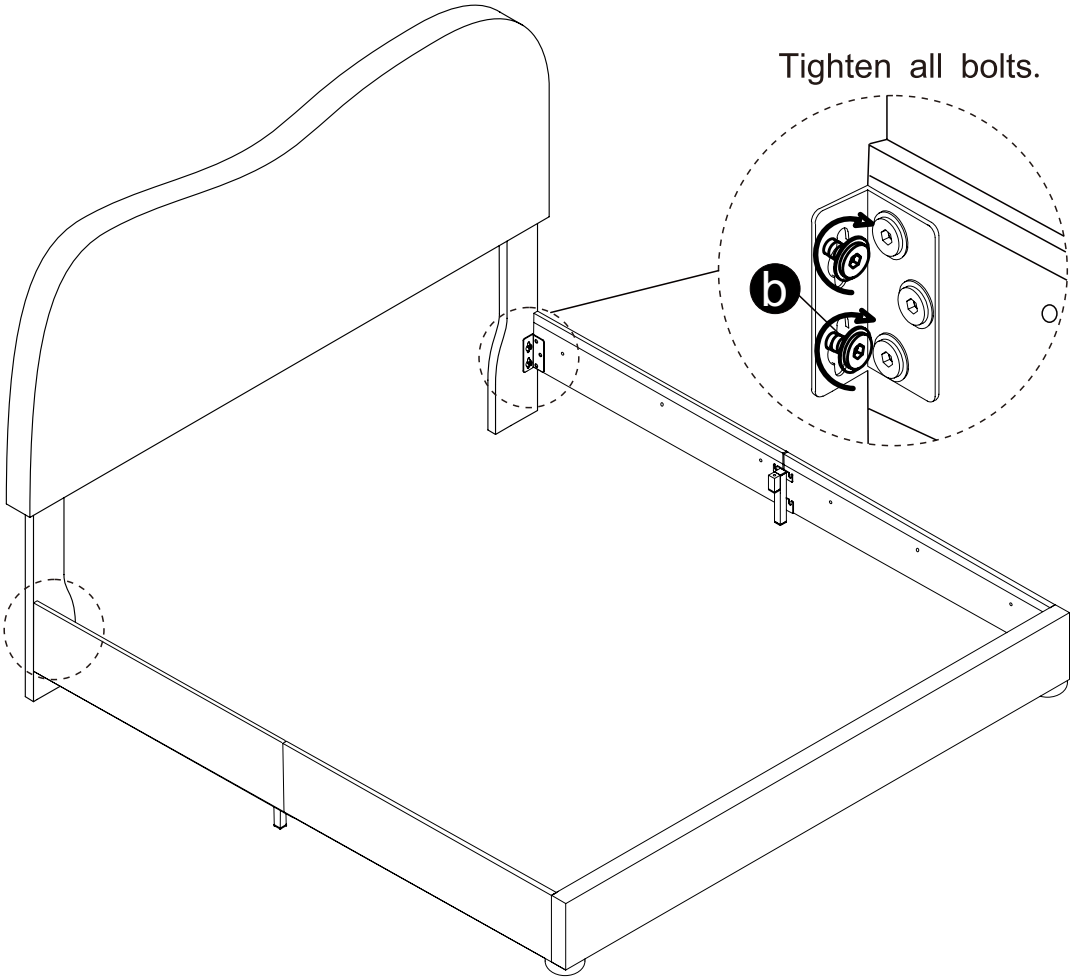


step10

a	M8*18	4PCS

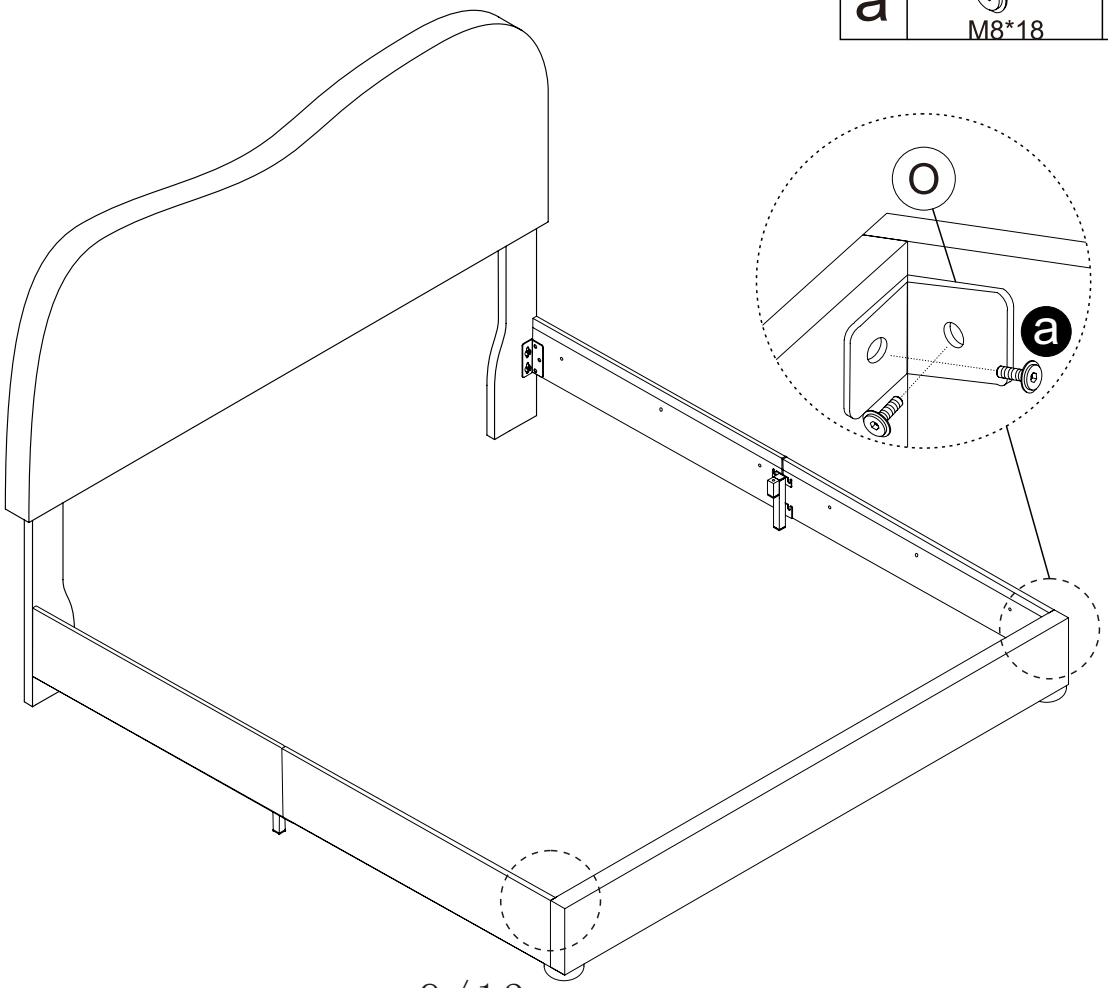


step11

C	M8*35	12PCS

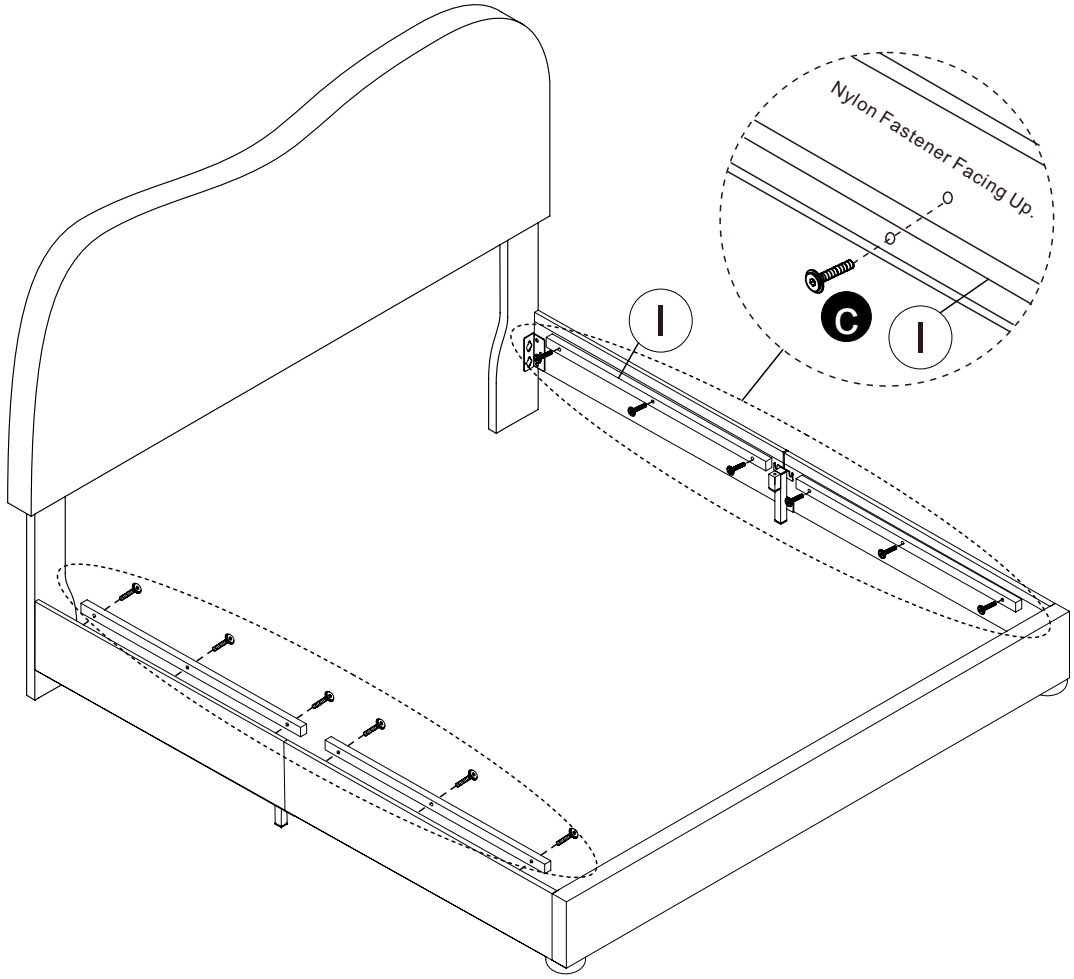


step12

C	M8*35	2PCS

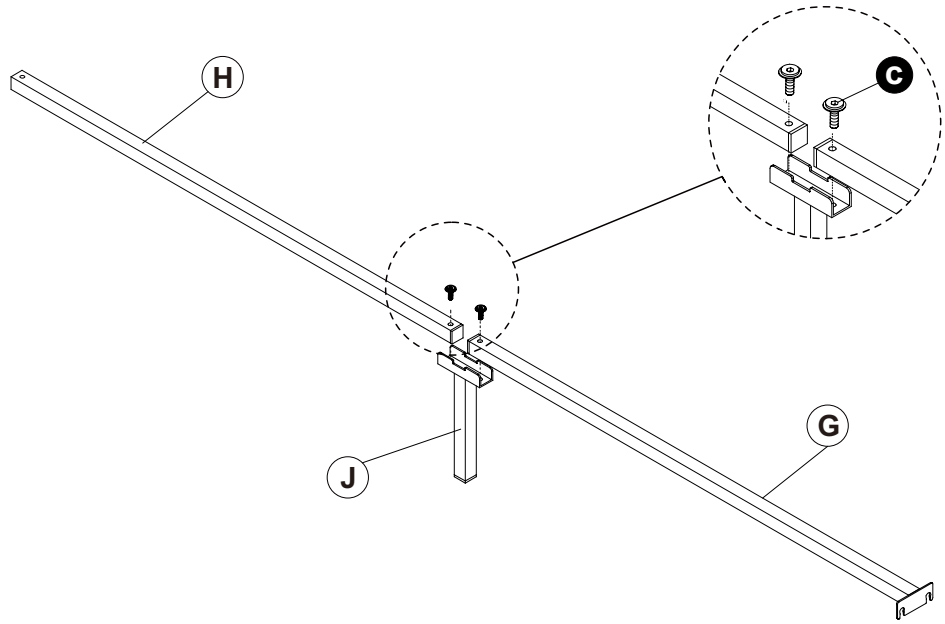


step13

Please first hang bracket G onto screw a pre-installed on the footboard, and then tighten screw a.

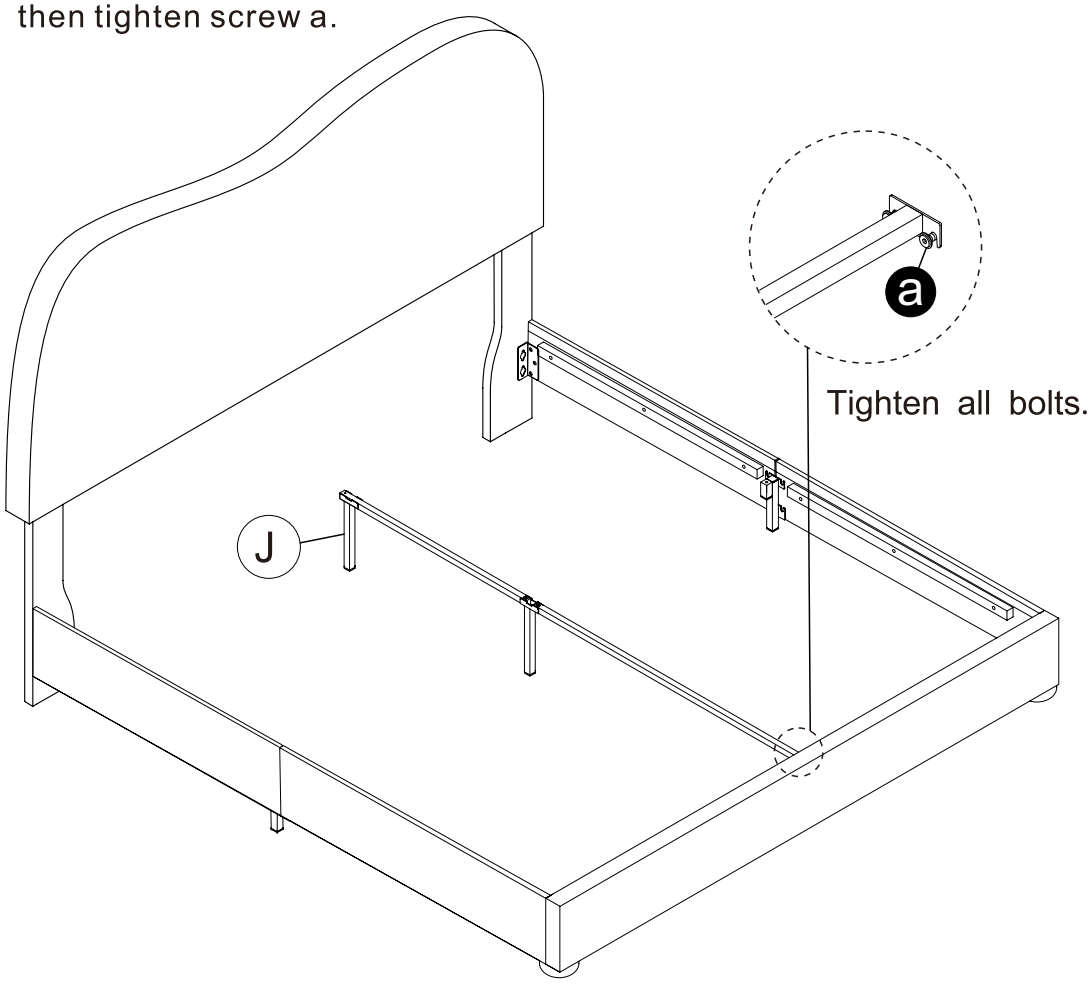


step14

C	M8*35	3PCS

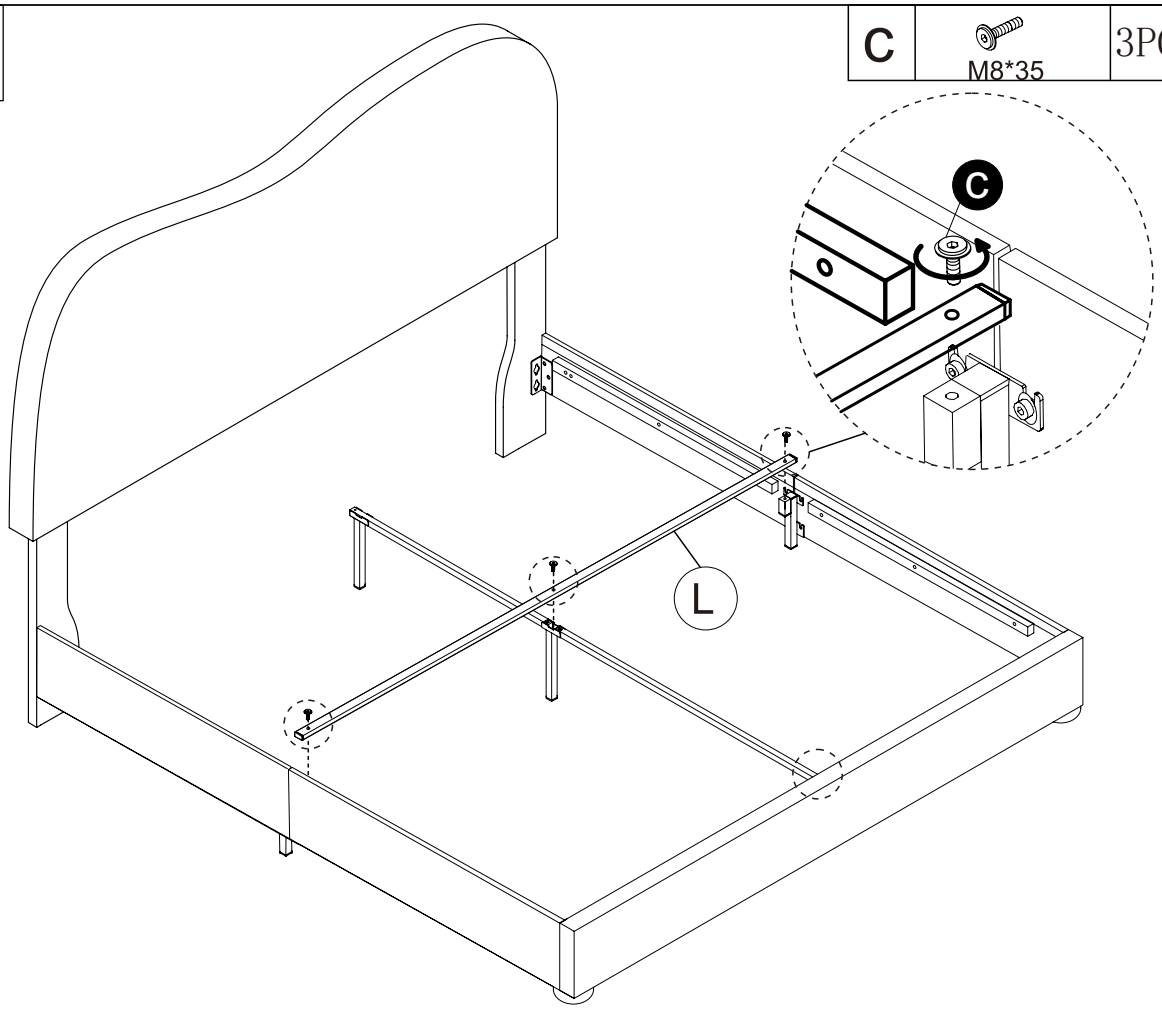


step15

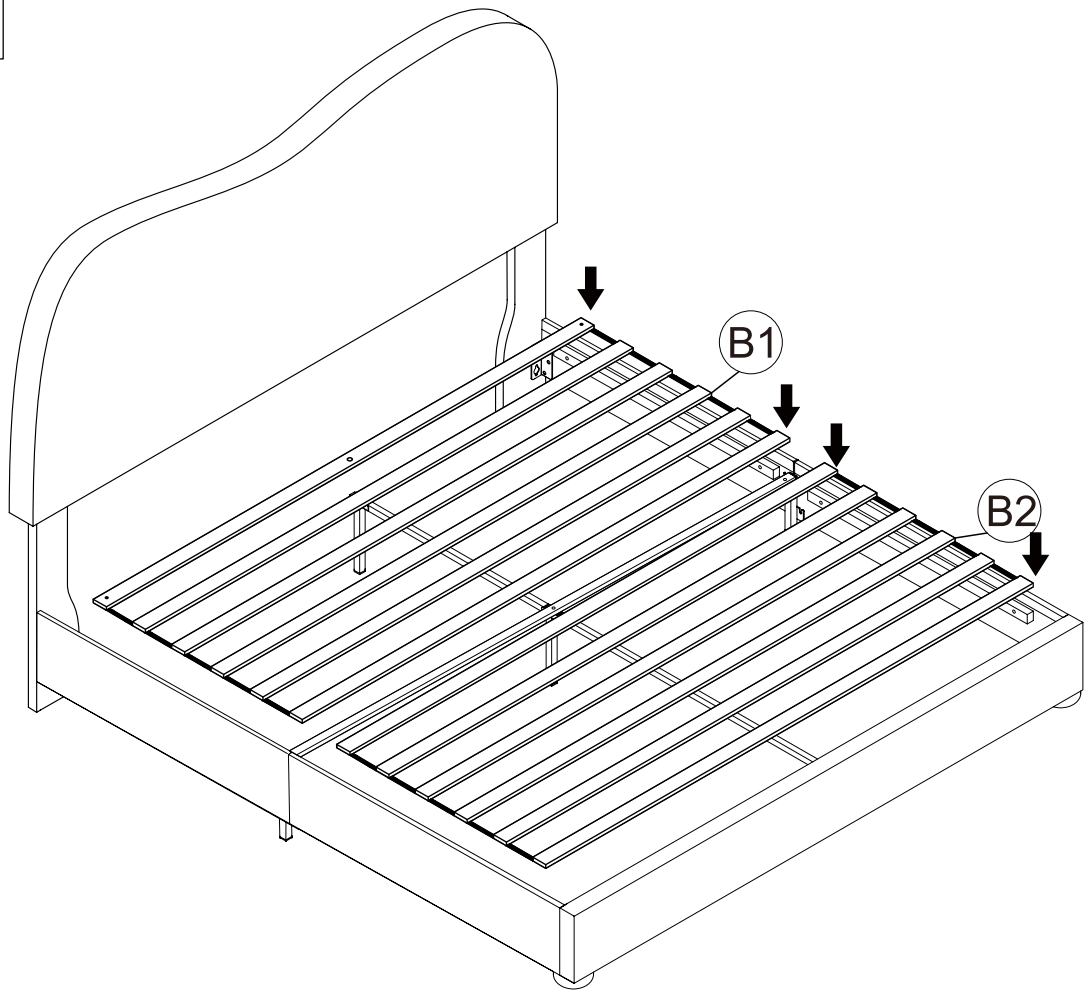

step16

d	 M8*55	1PC

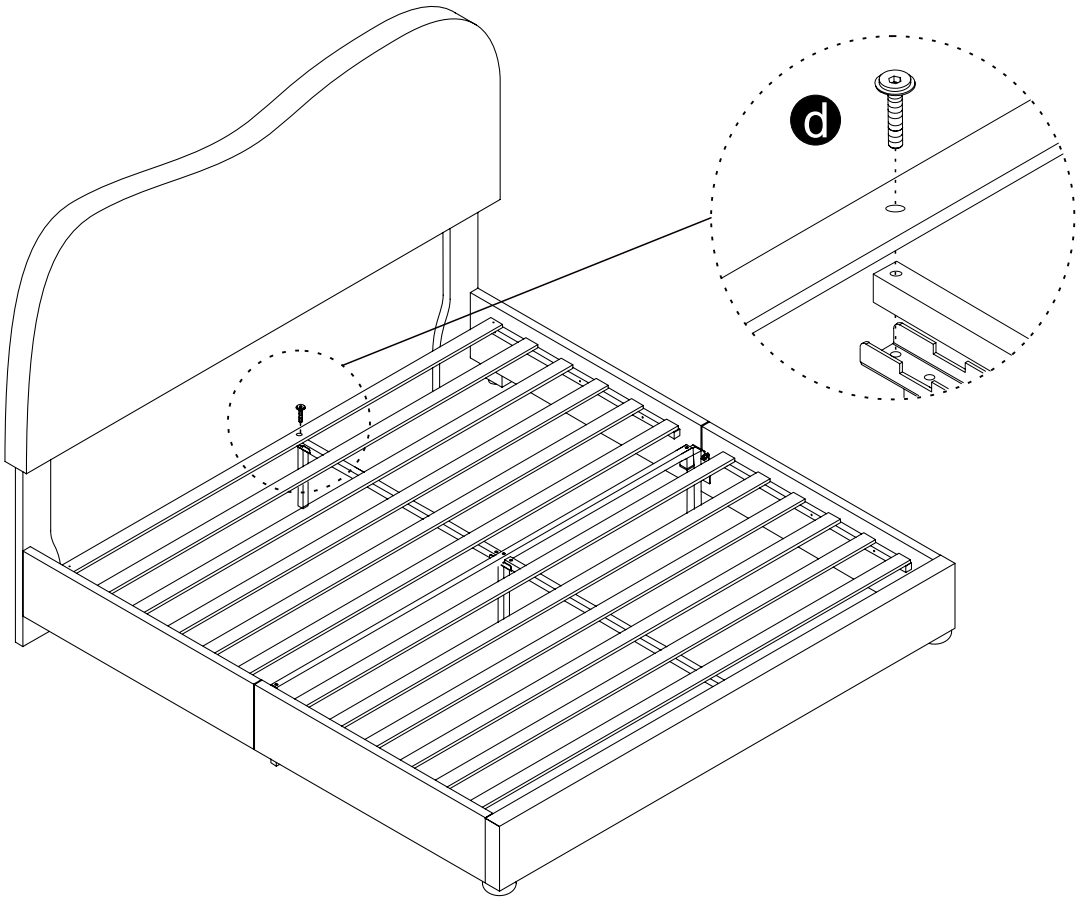

step17

e	M4*35	2PCS
f		2PCS

