



Double Rod Freestanding Closet



A1 10 ea
End connector

A2 3 ea
End connector

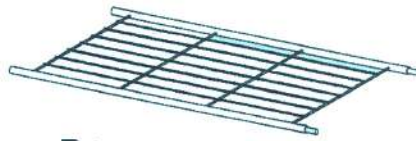

B 2 ea
Long Shelf



C 5 ea
Short Shelf



D 4 ea
Long Vertical Pole




E 16 ea
Short Vertical Pole



F 2 ea
Hanging rod

STEP 1. Start by assembling the top and bottom sections. Insert parts (B) and (C) into parts (A1) and (A2) as shown below. Insert one hanging rod (F) into top section.

Top Section:

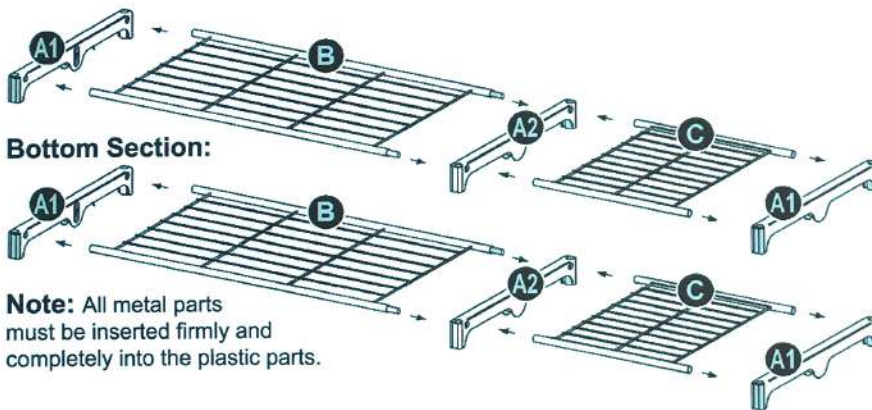

Note: All metal parts must be inserted firmly and completely into the plastic parts.

STEP 3. Place the assembled top section onto the top of the vertical poles. Assembly is now complete. For indoor use only



STEP 2. Building up from the assembled bottom section insert poles (D) and (E) and end connectors (A1) and (A2) as the diagram shows. Place other hanging rod (F) between middle end connectors (A1) and (A2).

