


Assembly Instructions

AC-SMXBZ-CT_V2.0

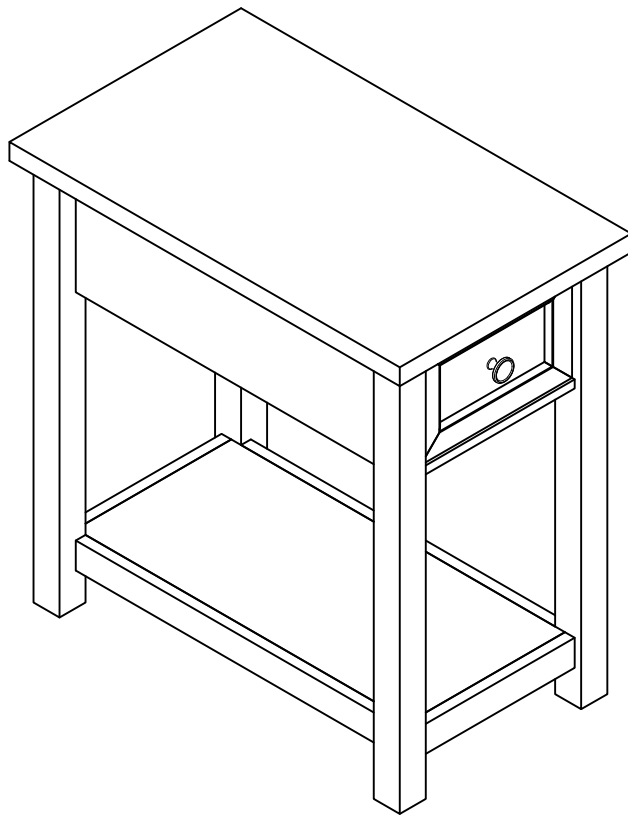

General Guidelines


1. Please read the following instruction carefully and use the product accordingly.
2. This summary may not include every detail of all variations and considered steps. Please contact us when further information and help are needed.
3. Put the screws in loosely until all pieces are together and then tighten them all. It will save your time if you make a mistake while installing.

Thank you for your order.


















If you find any damage, missing parts, or dissatisfaction after receiving the product, please feel free to contact us the first time, We will provide you with a 100% satisfactory solution.

Any questions, please feel free to contact us via our store or the email address on the carton.









PART LIST

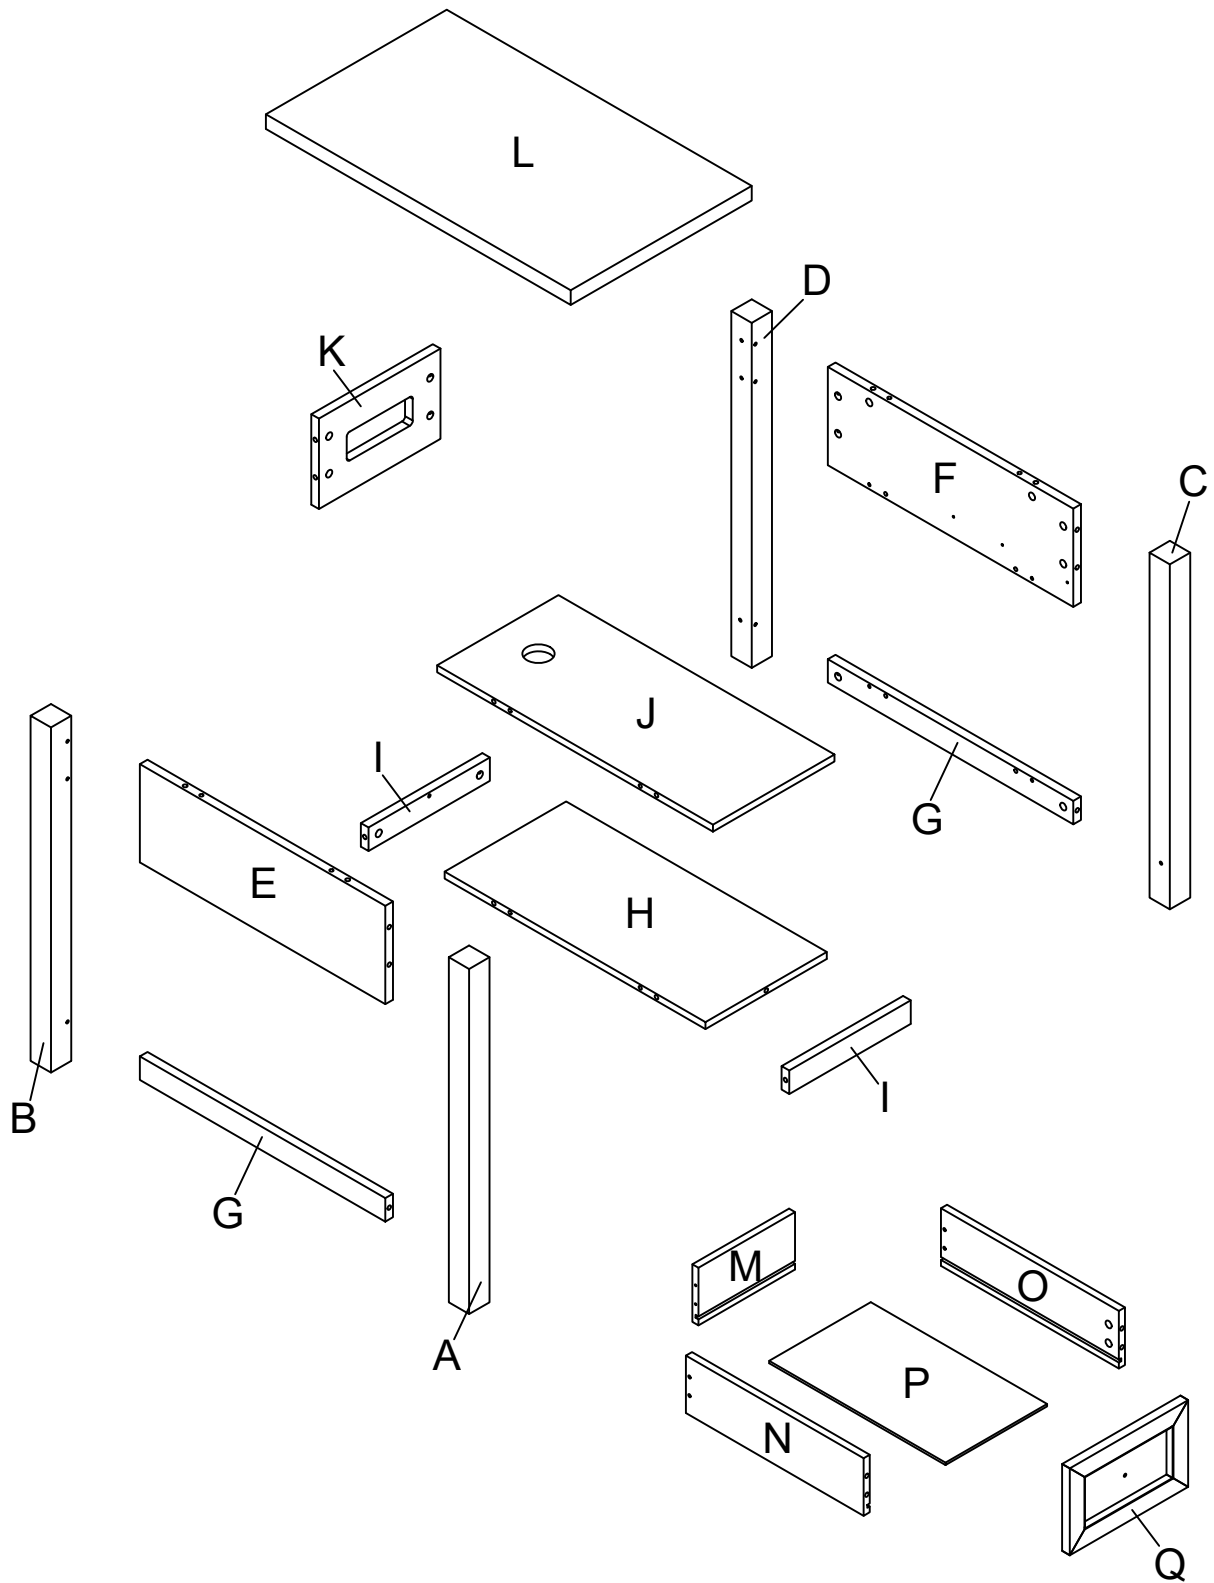

PART LIST

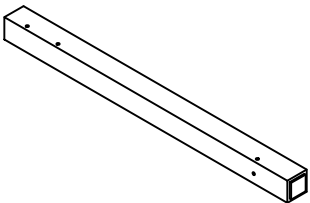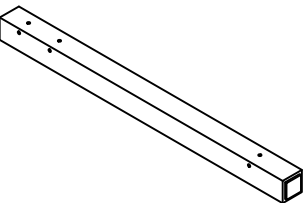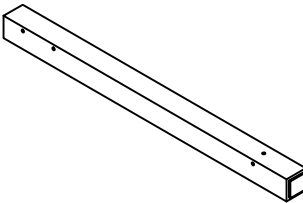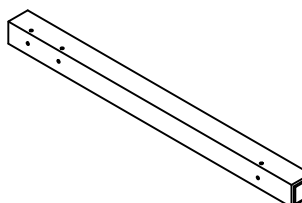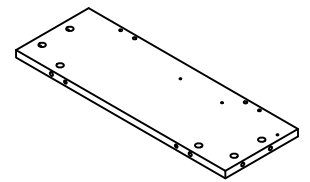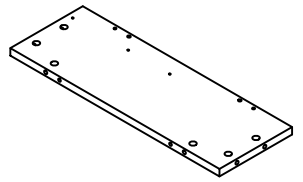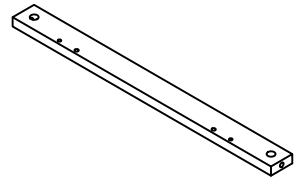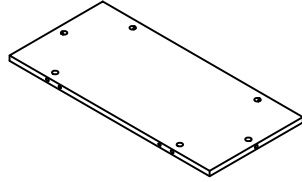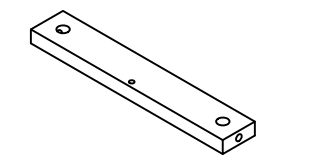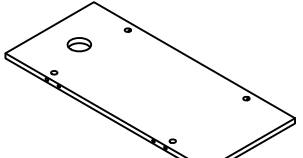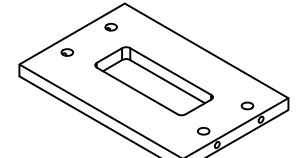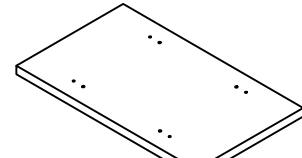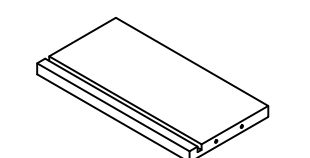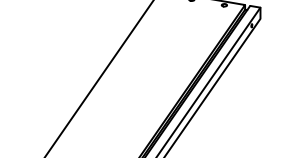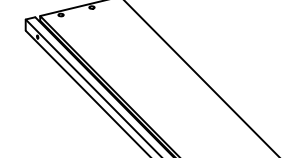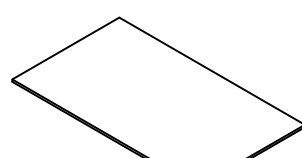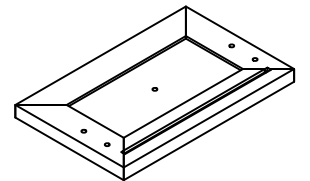A x 1pc 	B x 1pc 	C x 1pc 	D x 1pc 
E x 1pc 	F x 1pc 	G x 2pcs 	H x 1pc 
I x 2pcs 	J x 1pc 	K x 1pc 	L x 1pc 
M x 1pc 	N x 1pc 	O x 1pc 	P x 1pc 
Q x 1pc 			

HARDWARE LIST

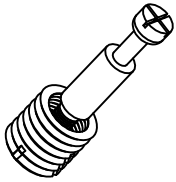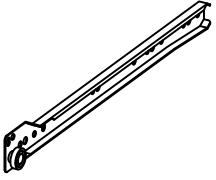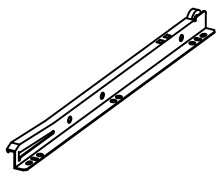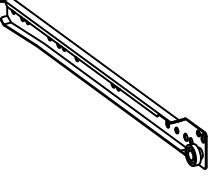
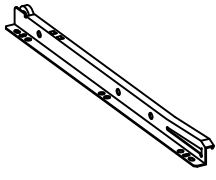
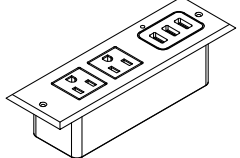
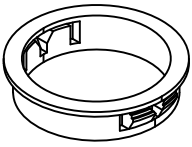

①  M6x28 38 pcs	②  Φ12 38 pcs	③  Φ6x30 12 pcs
④  350L 1 pc	⑤  350L 1 pc	⑥  350L 1 pc
⑦  350L 1 pc	⑧  M4x30 4 pcs	⑨  M3x12 14 pcs
⑩  1 pc	⑪  M4x6 1 pc	⑫  1 pc
⑬  Ø45mm 1 pc	⑭  1 pc	

Please count and verify all parts before assembly.

Using Camlocks

Read each step carefully before starting. Each step of instruction should be performed in the correct order. If these steps are not followed in sequence, assembly difficulties may occur.


No gap

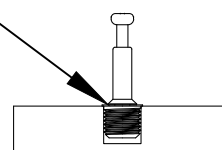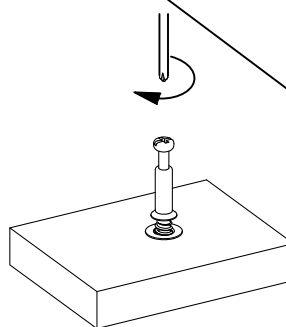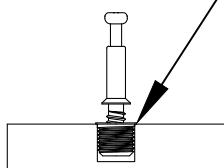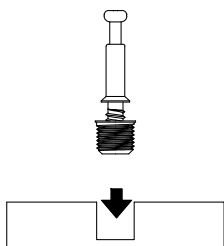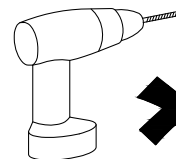

Connect the male camlock with plastic nut as directed in the assembly instructions using a screwdriver. Press the plastic nut completely into the hole first.


1

DO NOT OVER TIGHTEN

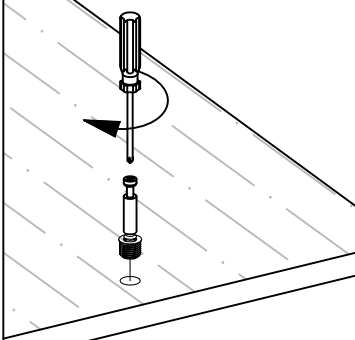

Push the male camlock into the entry hole.


2

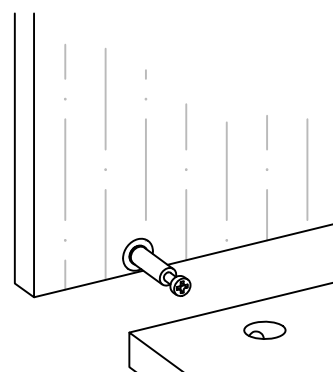

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points toward the entry hole for the male camlock.

3

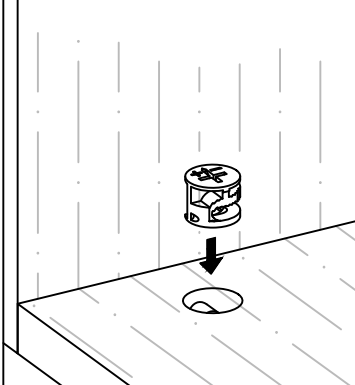


Turn the female camlock clockwise with a screwdriver.



You should feel a click when the camlock is locked in place.

The joint is now secure.



4

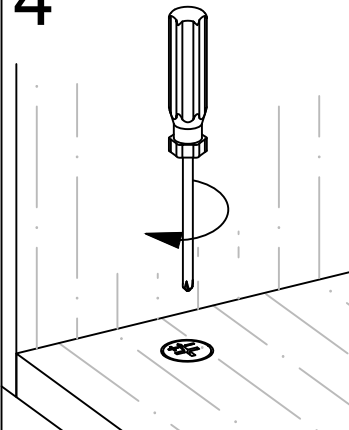


STEP 1

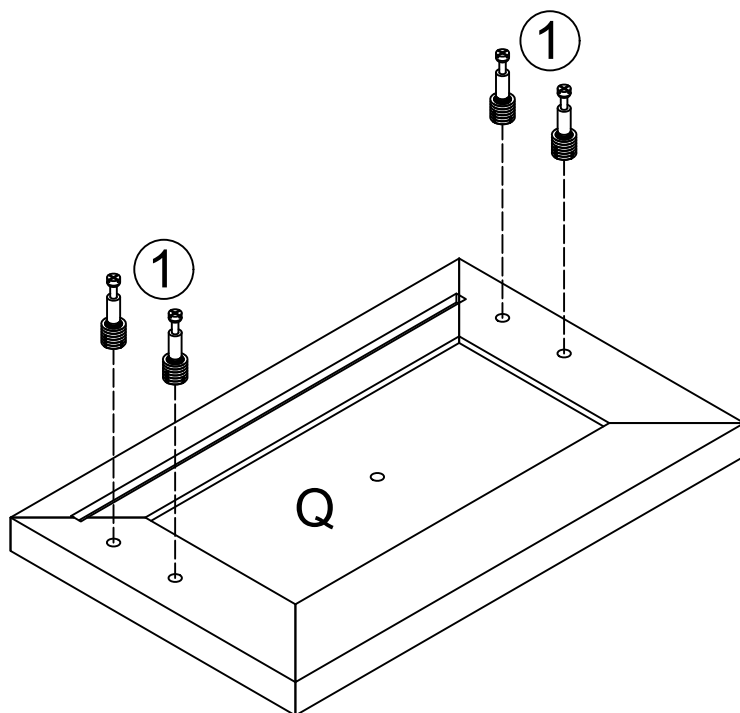

STEP 2

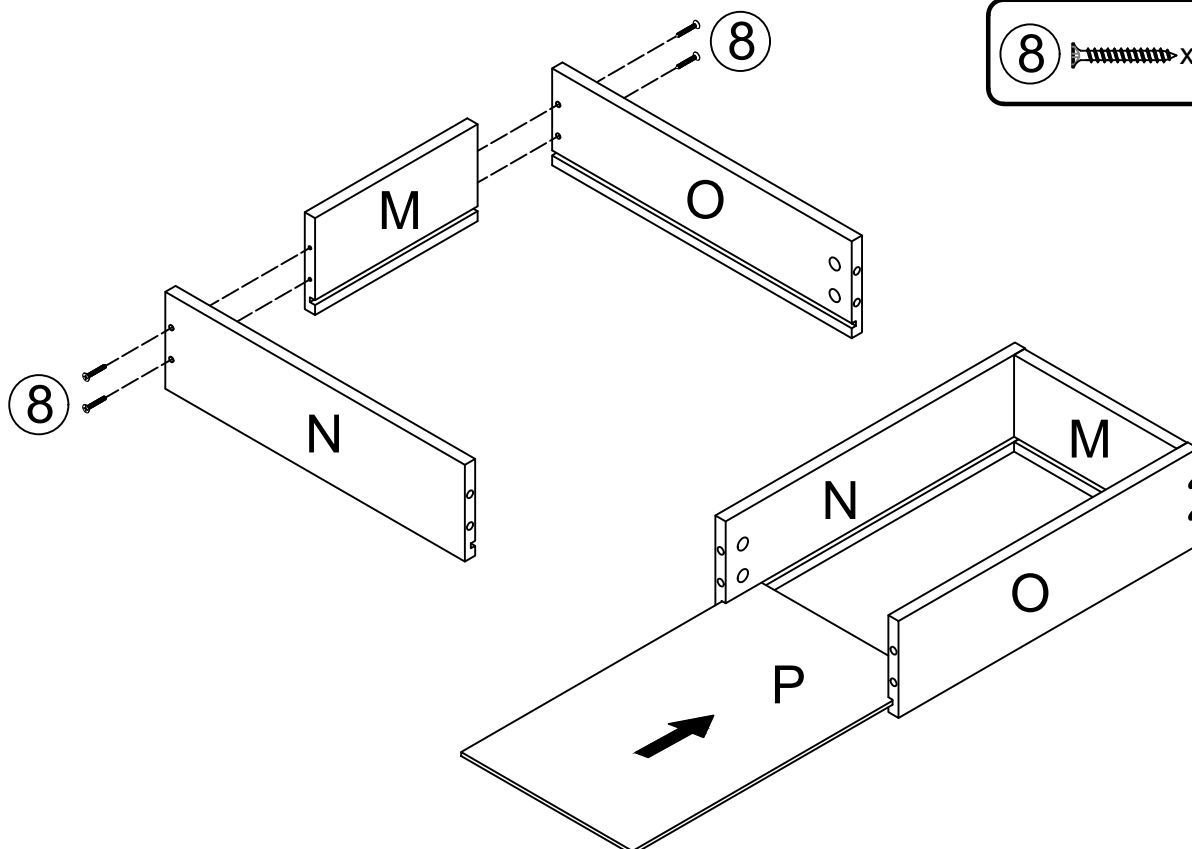


STEP 3

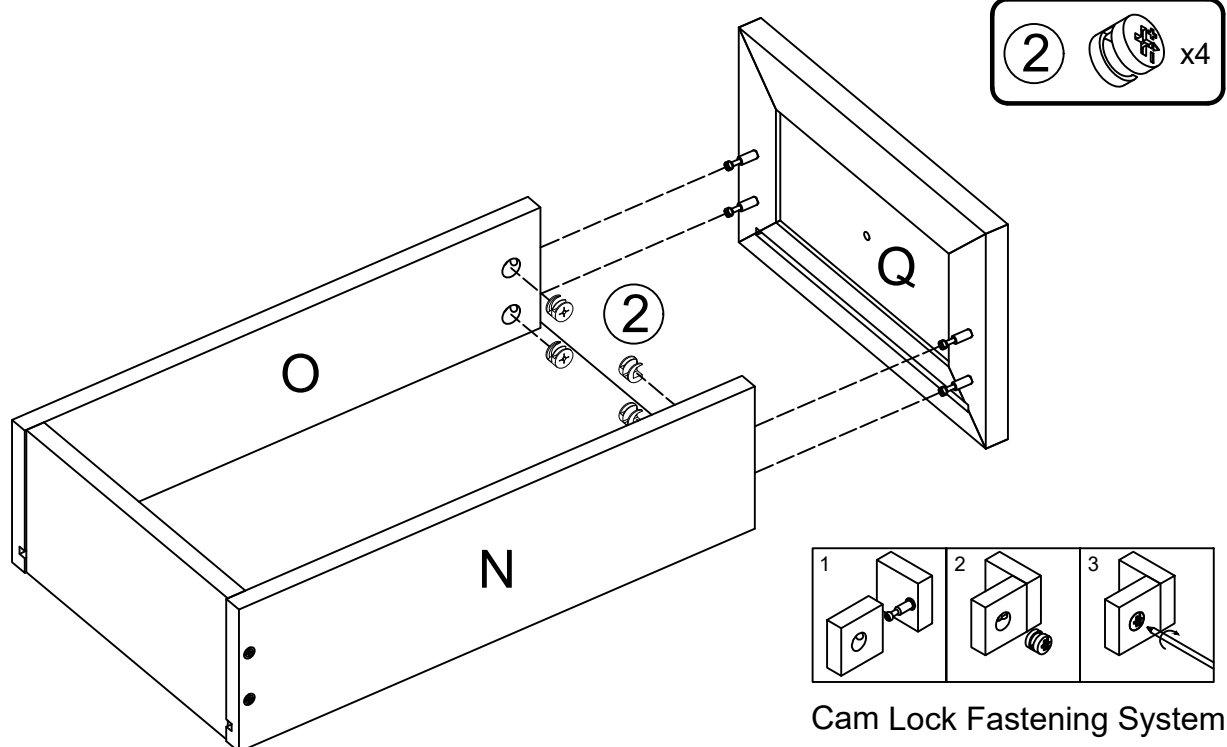


Please point the arrow upward to the mounting hole when installing Part ②. then use screwdriver to tighten it in the "+" direction.


STEP 4

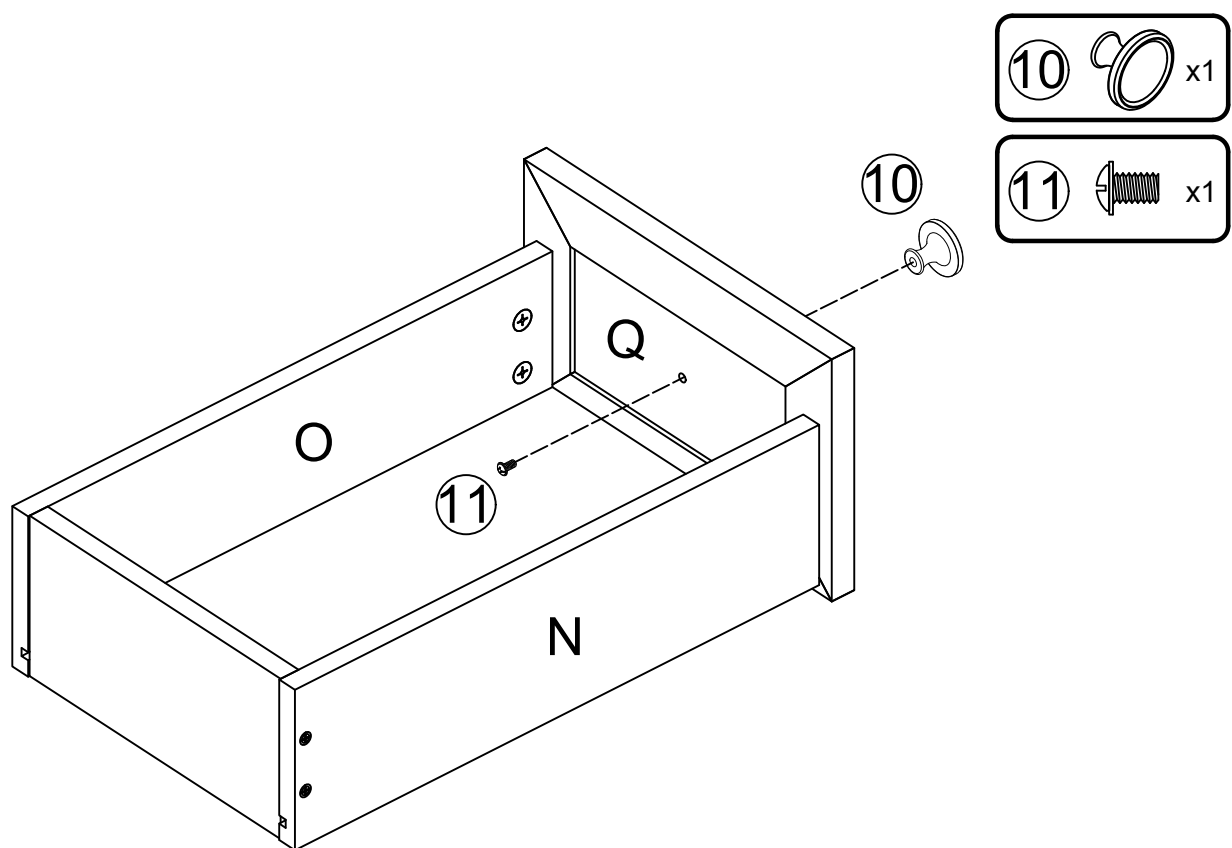



STEP 5

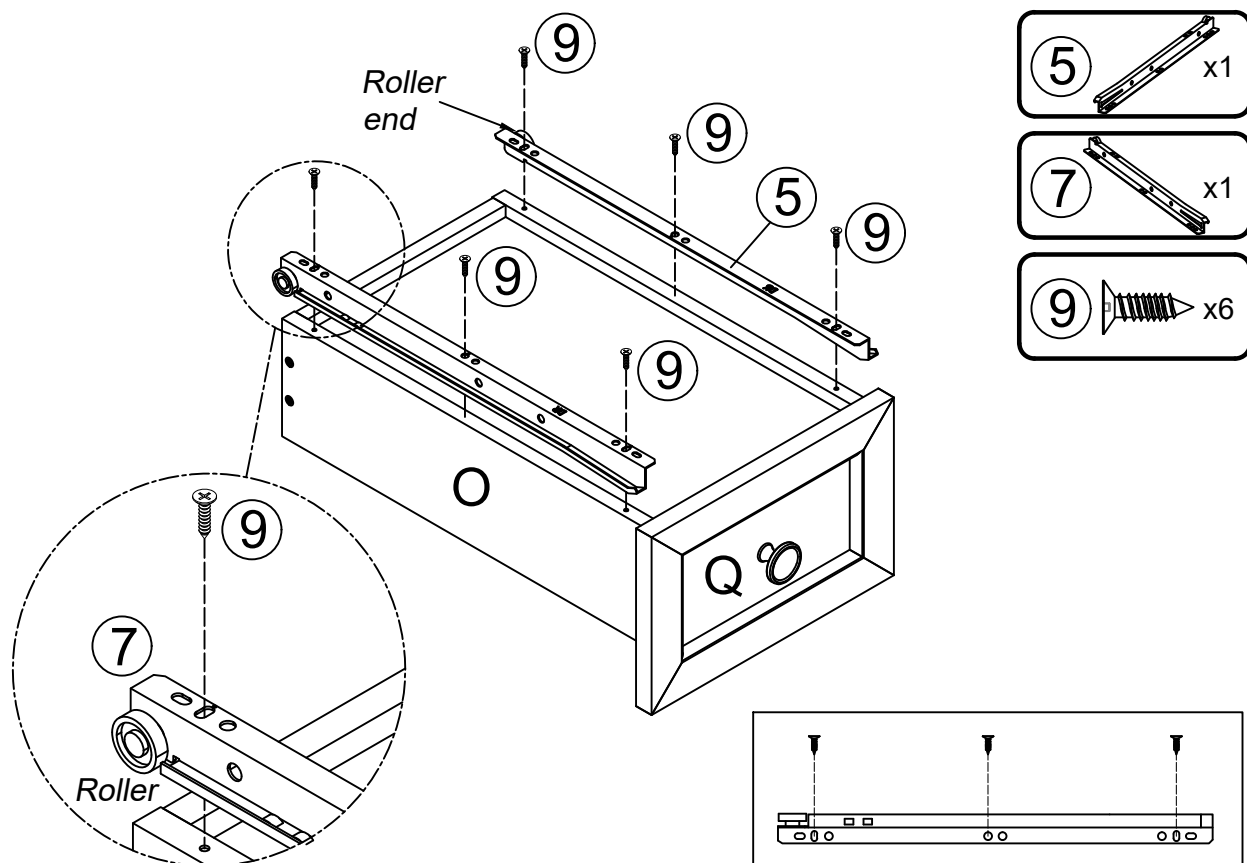

STEP 6


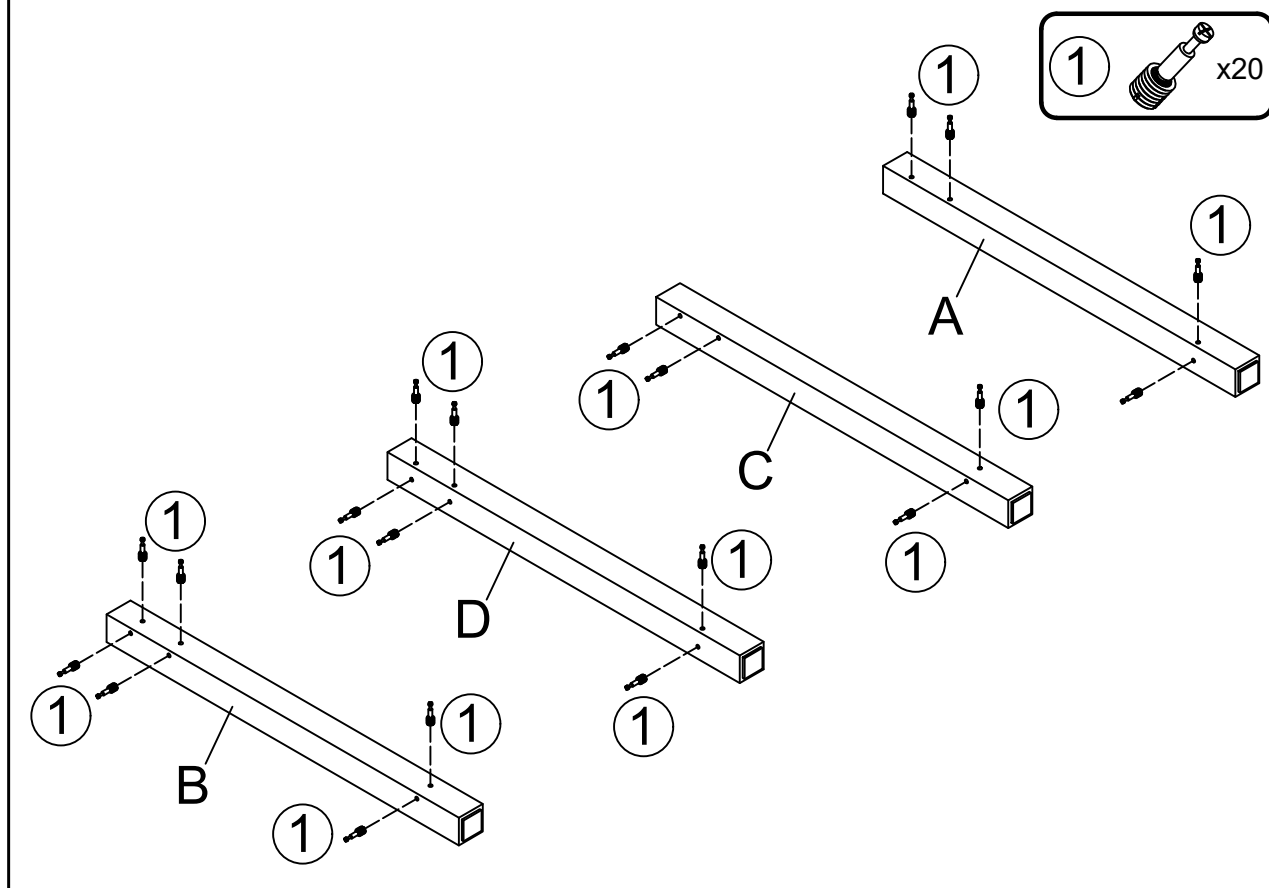


STEP 7

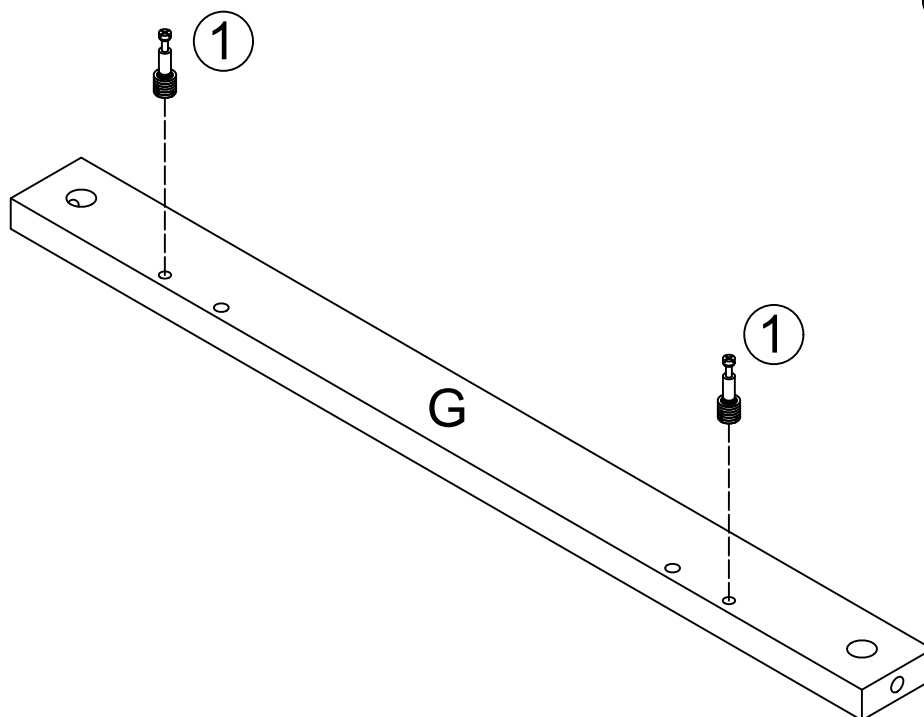



X 2

STEP 8

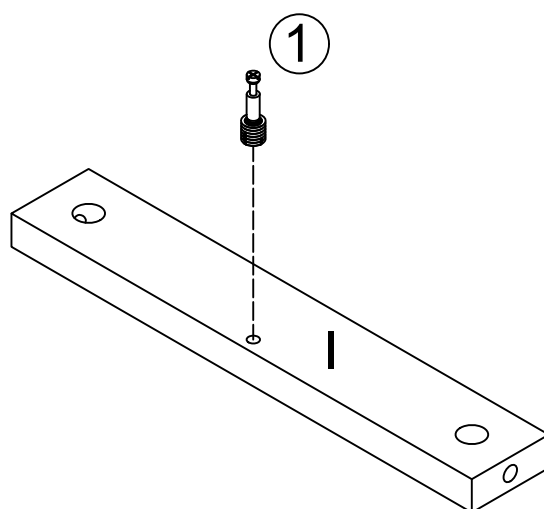


X 2


STEP 9

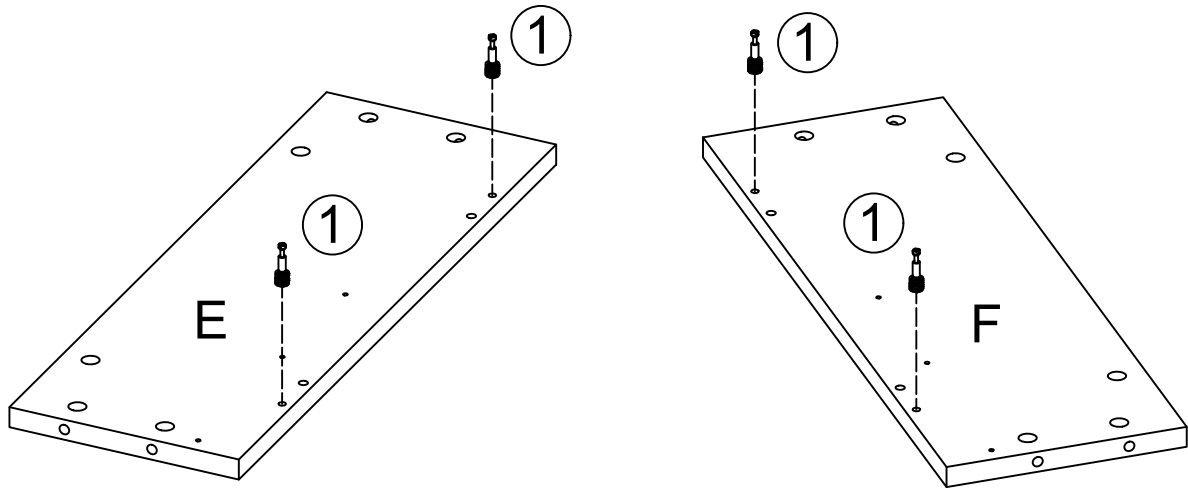


STEP 10

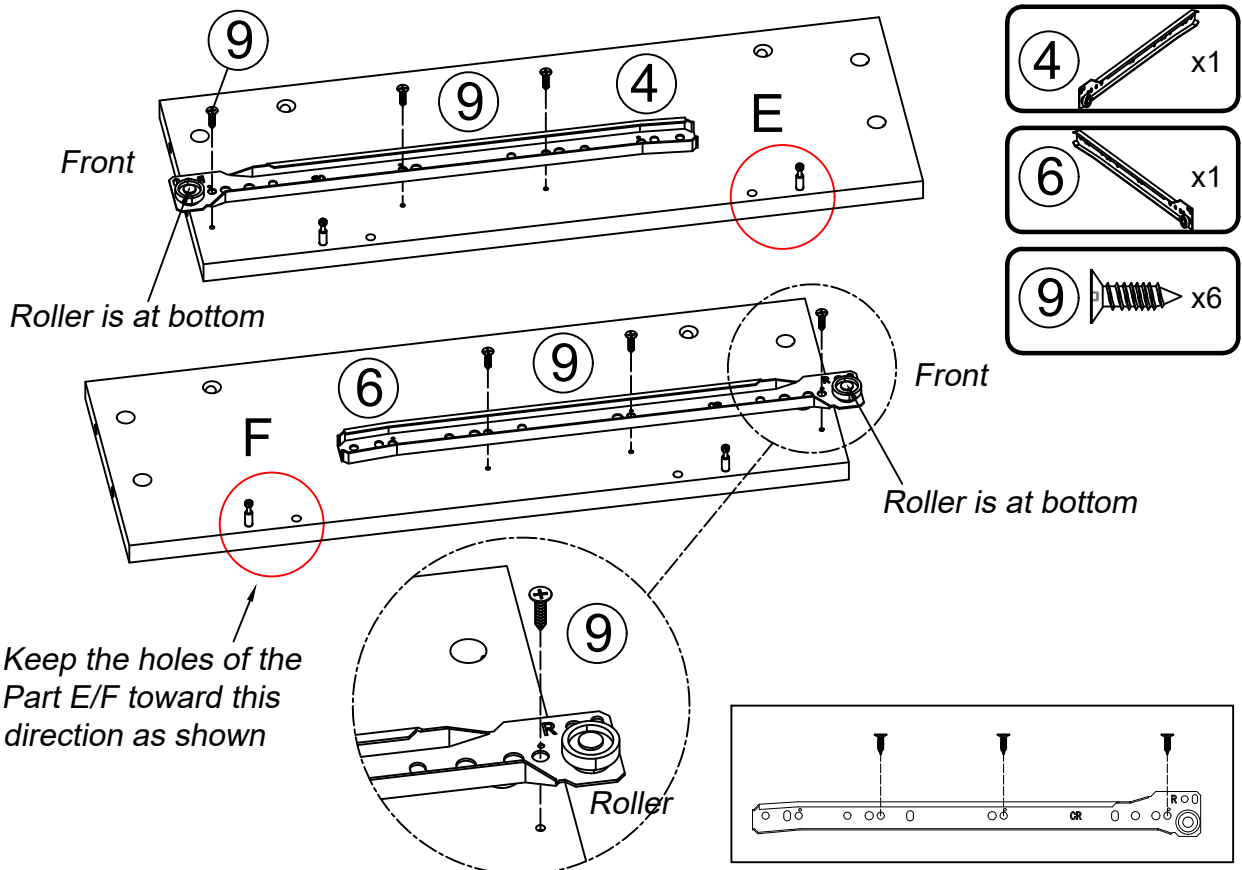


STEP 11

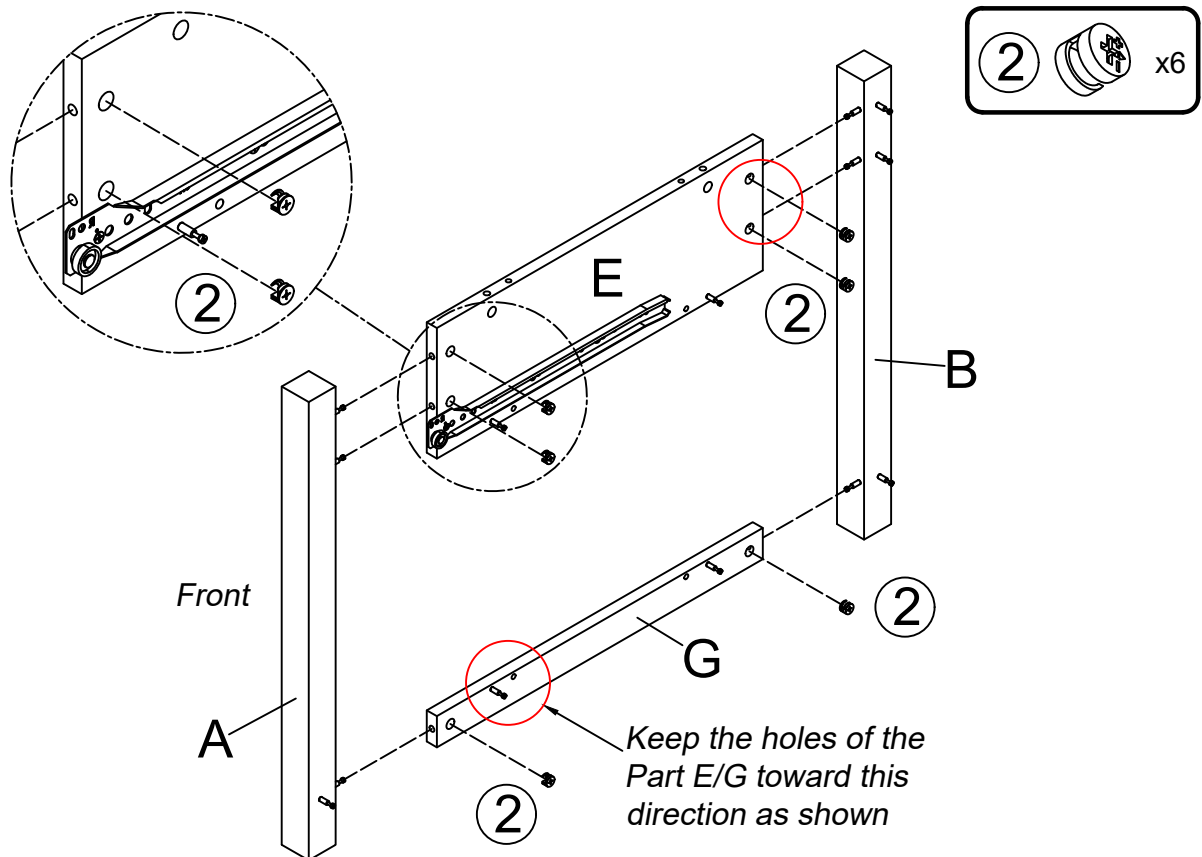


STEP 12

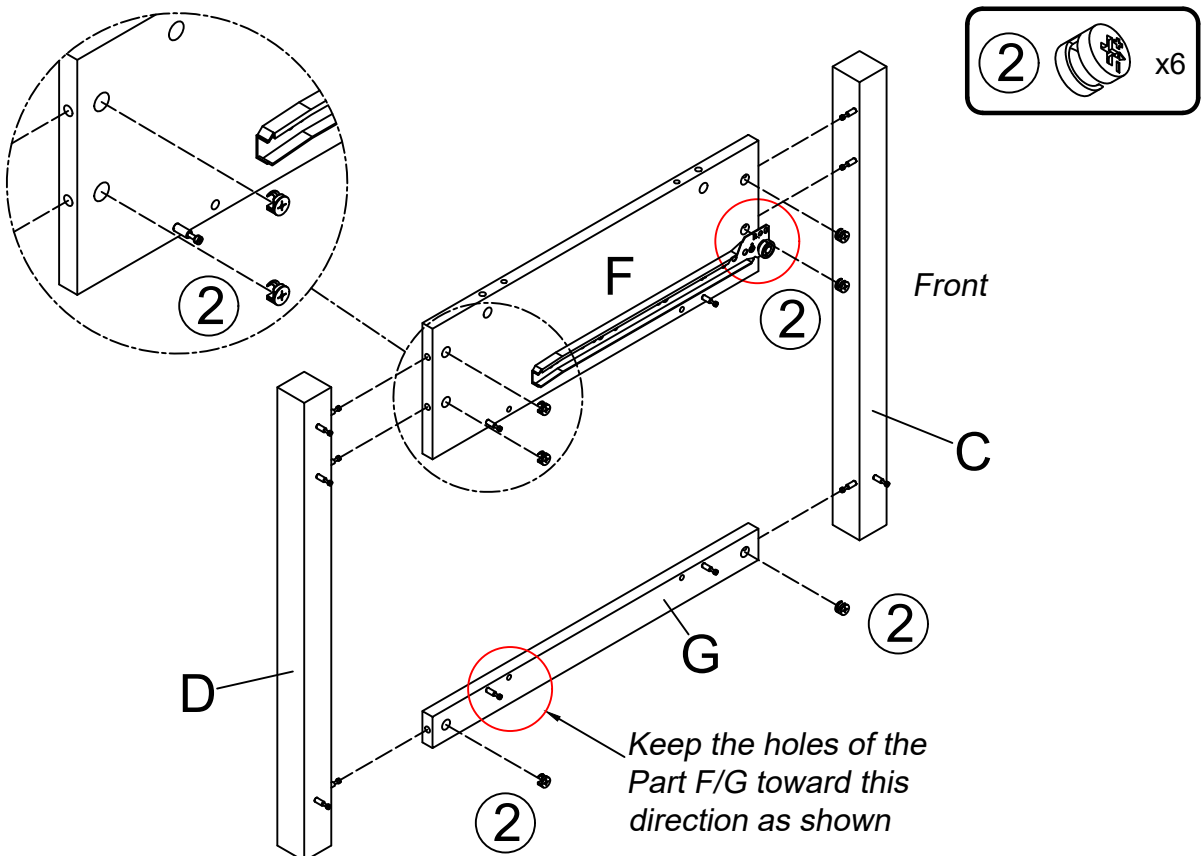


STEP 13

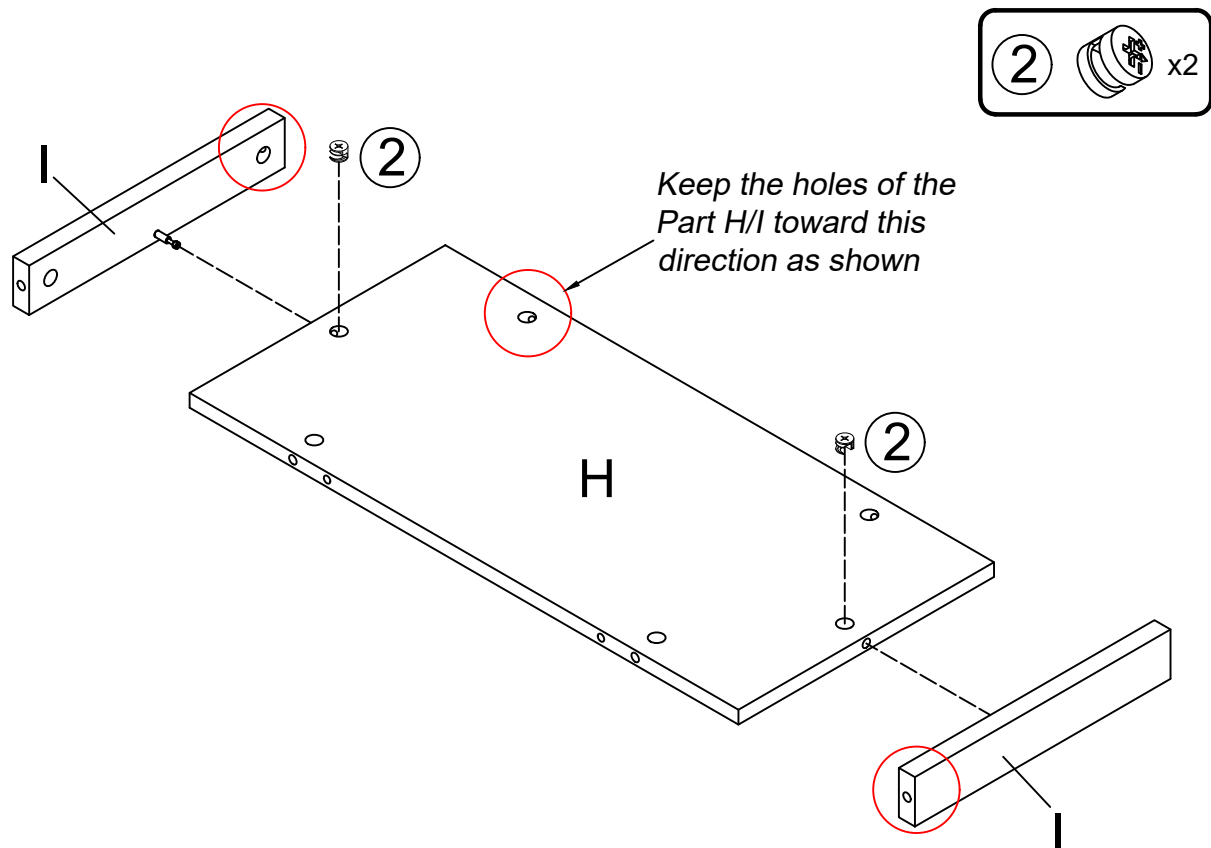


STEP 14

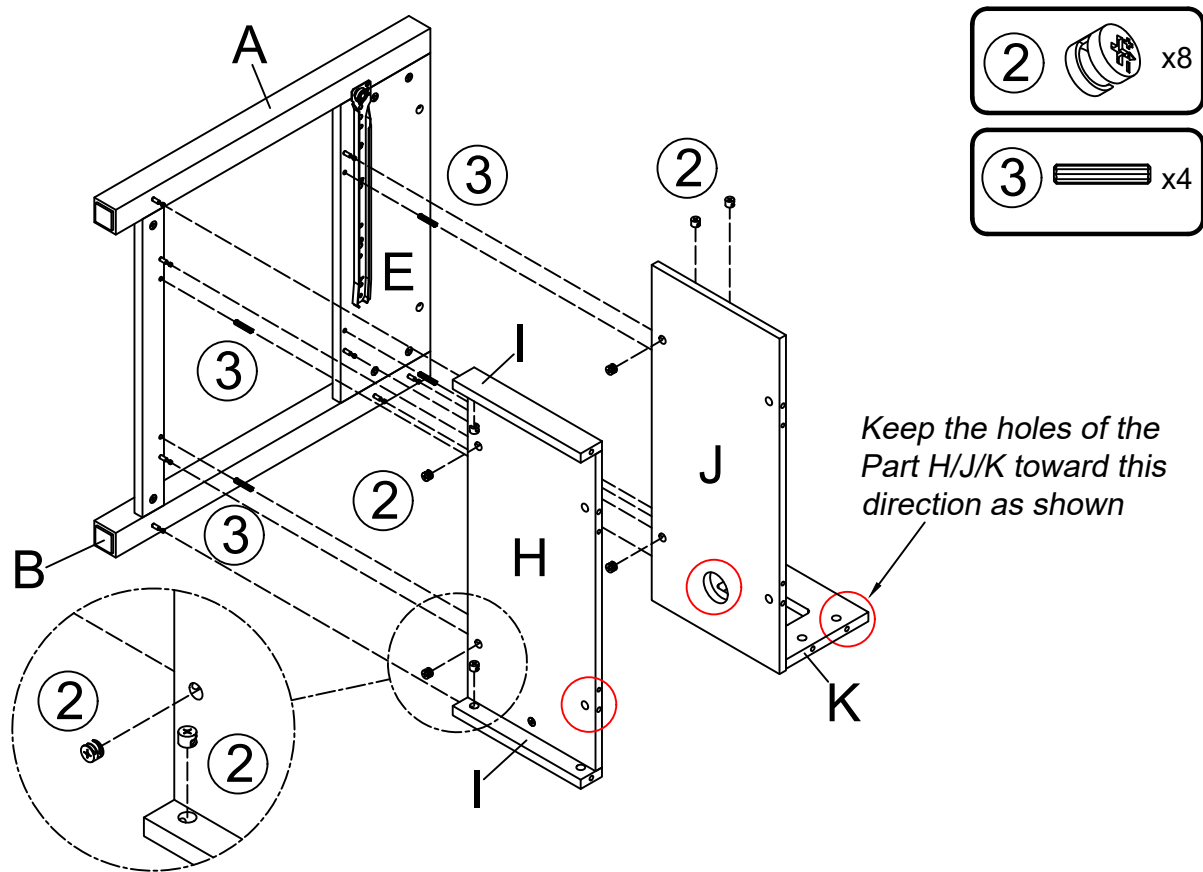



STEP 15

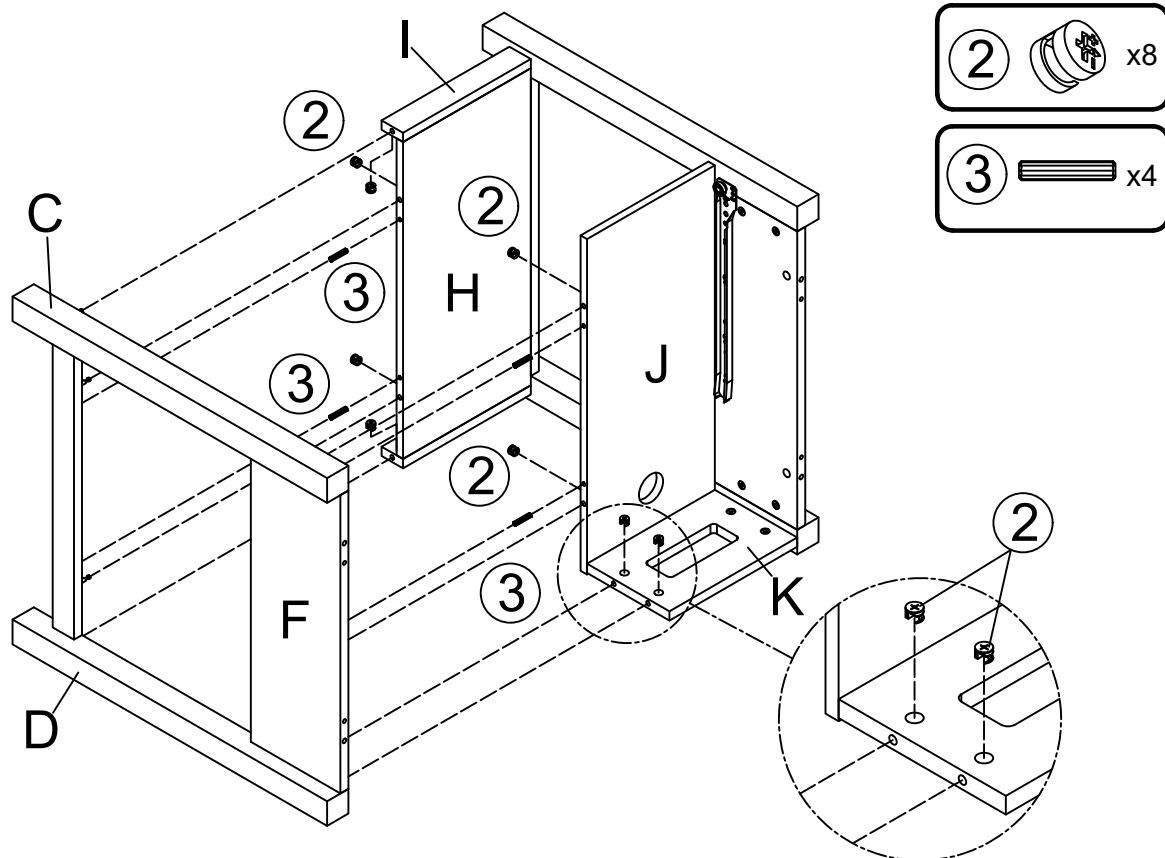



STEP 16

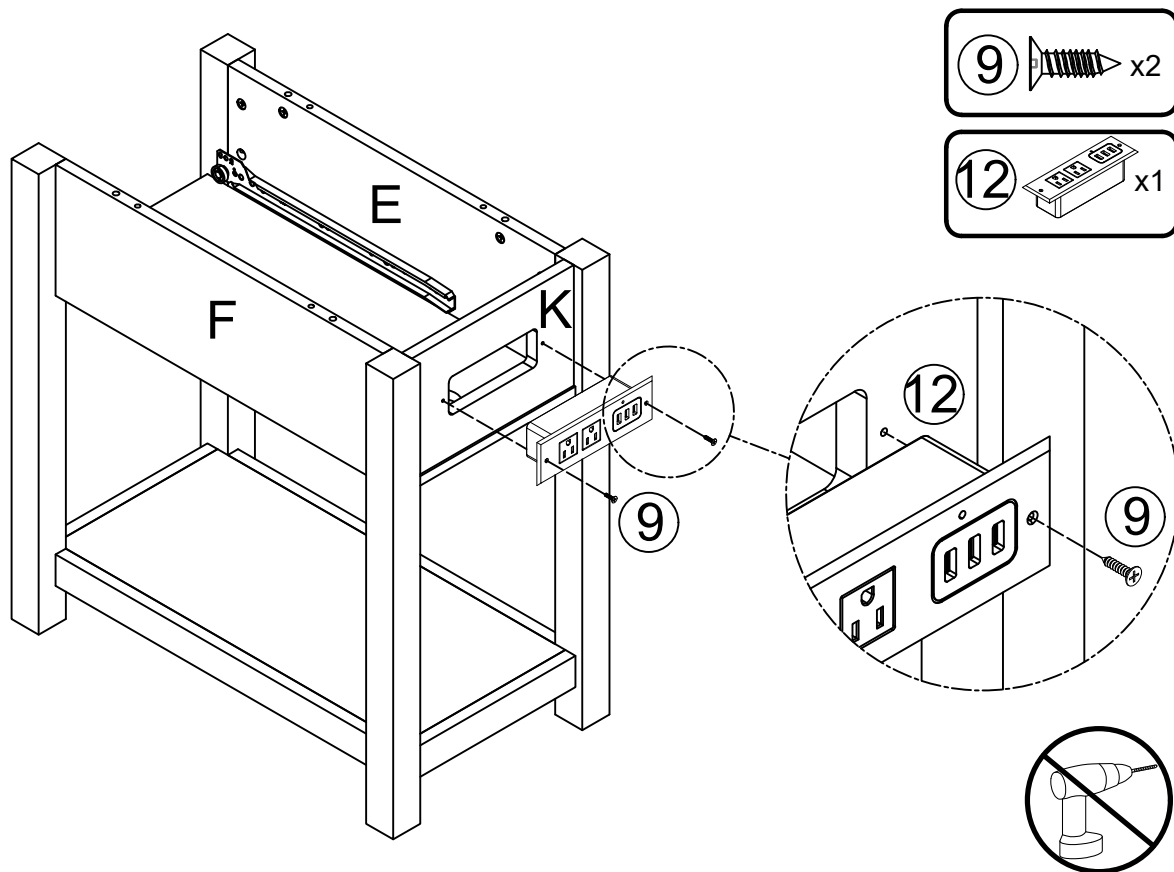


STEP 17

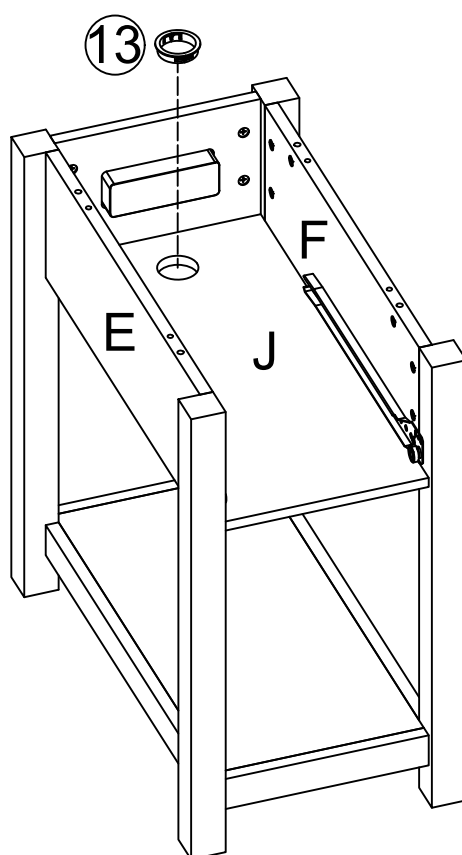


STEP 18

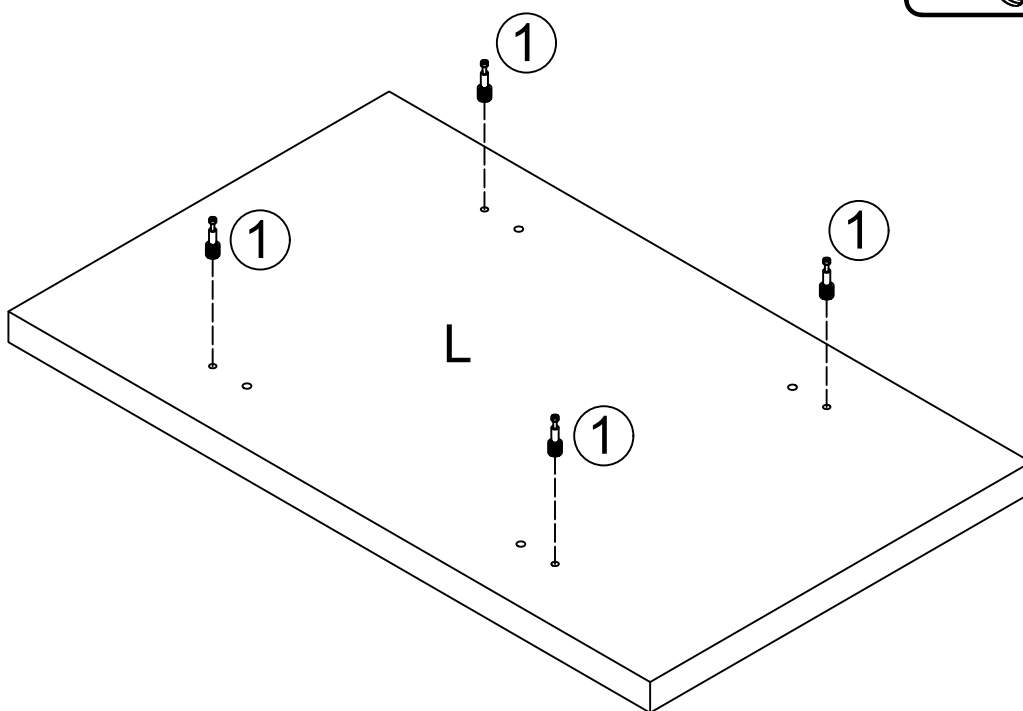

STEP 19

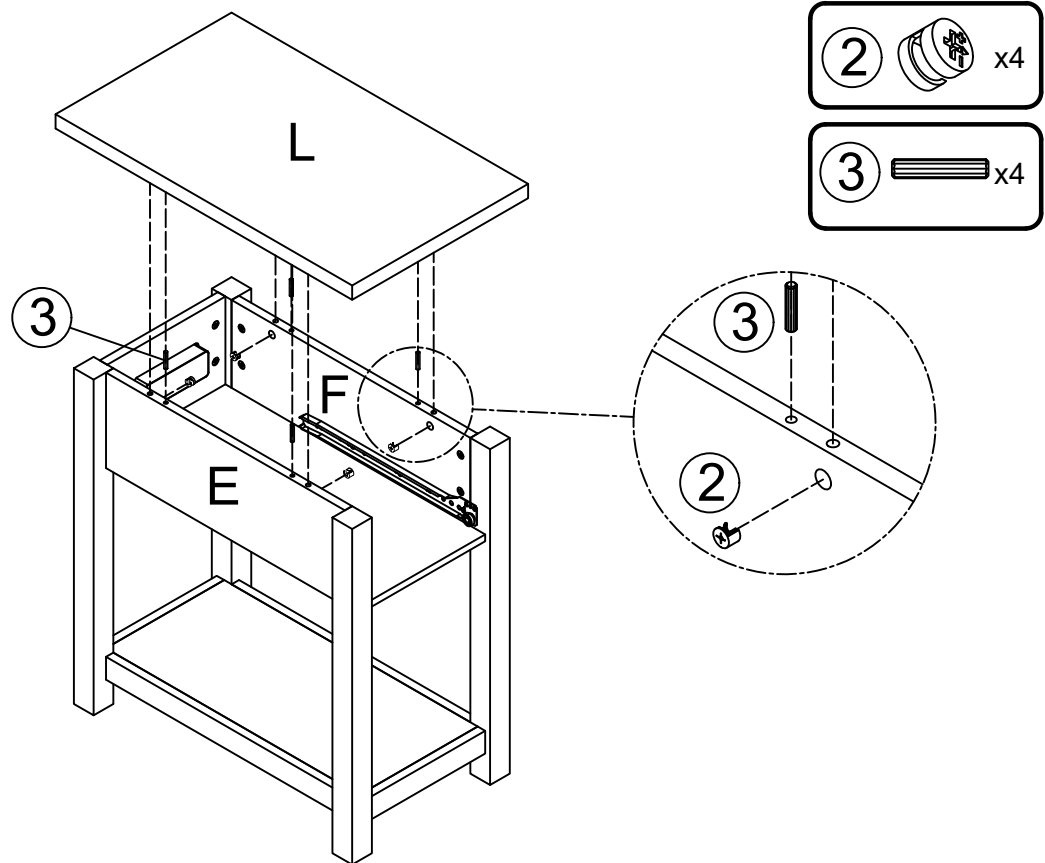

STEP 20

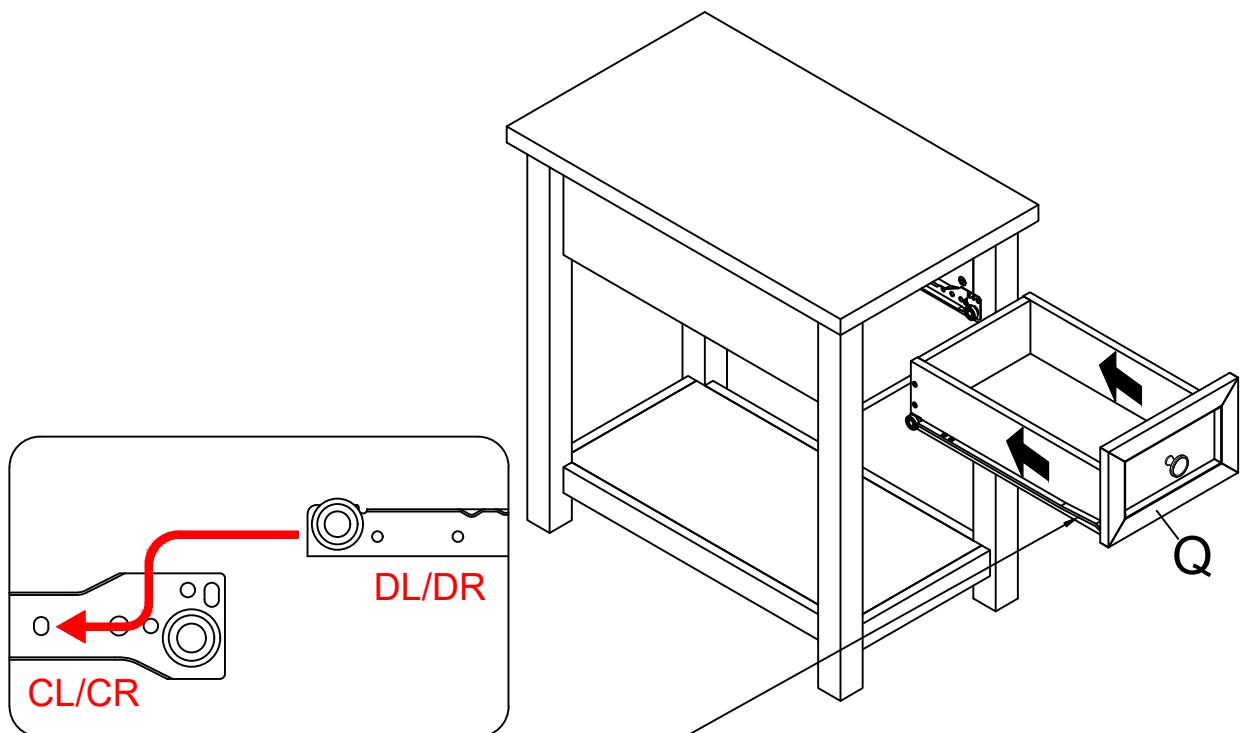

Please put the wheels align with the slots as the instruction shows, then slide into them