

BARBER CHAIR INSTRUCTION




Installation Video
SCAN THE QR CODE

BARBER CHAIR INSTRUCTION


Step 1: Check all parts you receive.

Part List			
			
Seat cushion . (1pc)	Backrest.(1pc)	left armrest.(1pc)	Right armrest.(1pc)
			
Footrest.(1pc)	Pillow.(1pc)	Base.(1pc)	Pump.(1pc)
			
Stabilizer bar.(2pcs)	Foot bar.(1pc)	Footrest support.(2pcs)	Nut.(4pcs)
			
Connecting iron.(4pcs)			

Step 2: Insert threaded bolts on bottom of pump into holes on top of base. Tighten and locking 4 nuts onto threaded bolts.

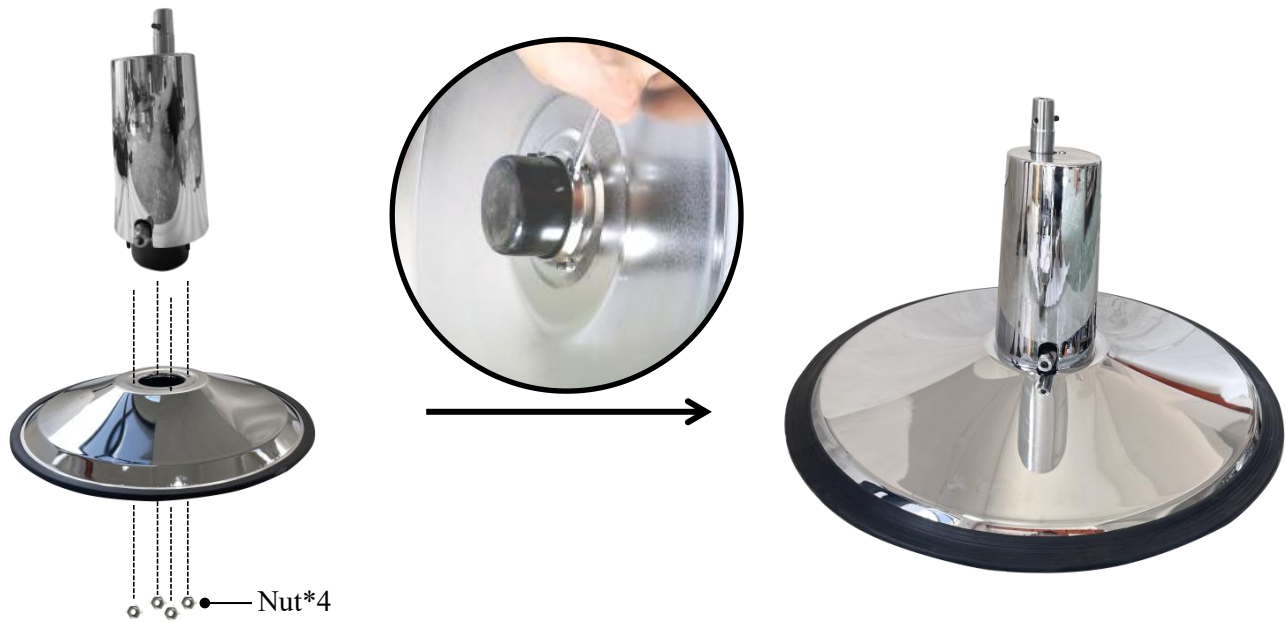

Step 3: Assembled foot bar and hydraulic pump, tighten the set screws to firmly hold the foot bar in place. (pay attention to the direction of foot bar)

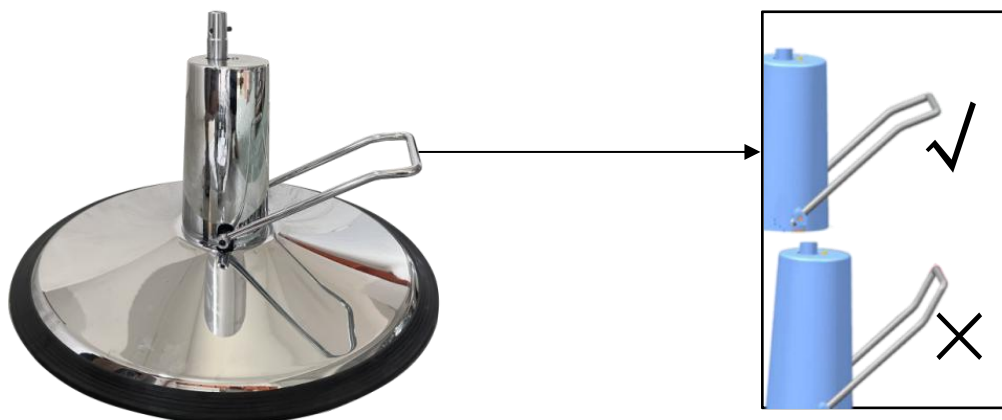


Step 4: Unscrew the screws on both sides of the armrests, assemble connecting iron to armrests by those screws. Tighten. (Noted: The direction of connecting iron)




Step 5: Unscrew the screws on the seat cushion, assemble the armrests to seat cushion by those screws, tighten. (Please pay attention to the direction of the armrests and install it exactly as shown in the picture)



Step 6: Unscrew the screws and nuts on the footrest, assemble the footrest to seat cushion by those screws, tighten.

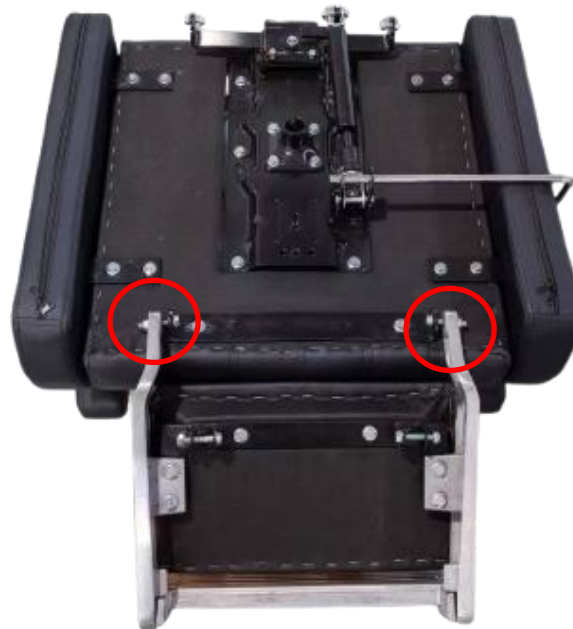

Step 7: Unscrew 4pcs pre-fitted bolts of footrest and set cushion, assemble the 2 stabilizer bar to seat cushion by those screws, tighten.

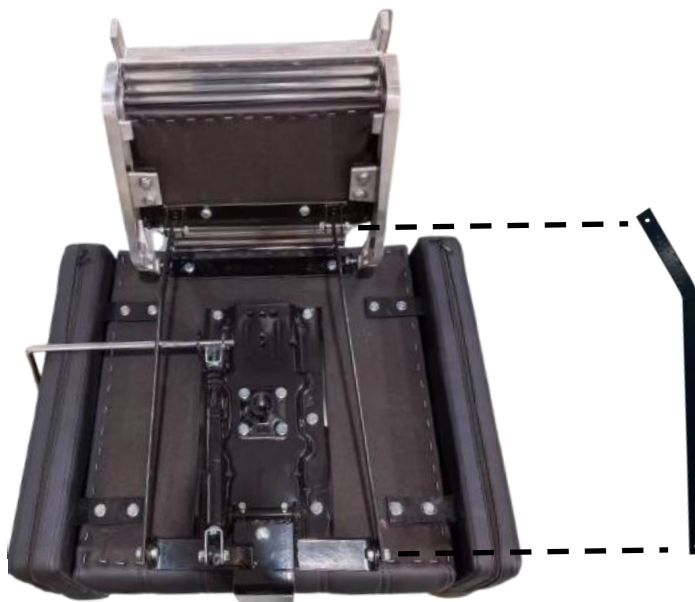

Please note the direction
of the satbilizer bar!

Step 8:Put the assembled seat to the hydraulic pump.



Step 9:Loosen 4 screws previously assembled on the backrest ,attach backrest to seat cushion by those screws. Tighten,as picture.



Step 10:Install the pillow on the backrest, Attach footrest supports to footrest.,as picture.



