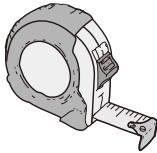
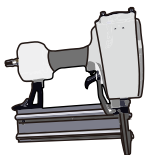


DOOR FRAME SIZE & INSTALLATION


Important Notes:

This threshold is for inswing doors only. It is not compatible with outswing doors.


Tools Required

Speed Square	Phillips Screwdriver	Tape Measure	Pencil	Nail Gun
				


Includes two 84.02 in legs and a 36.22 in header

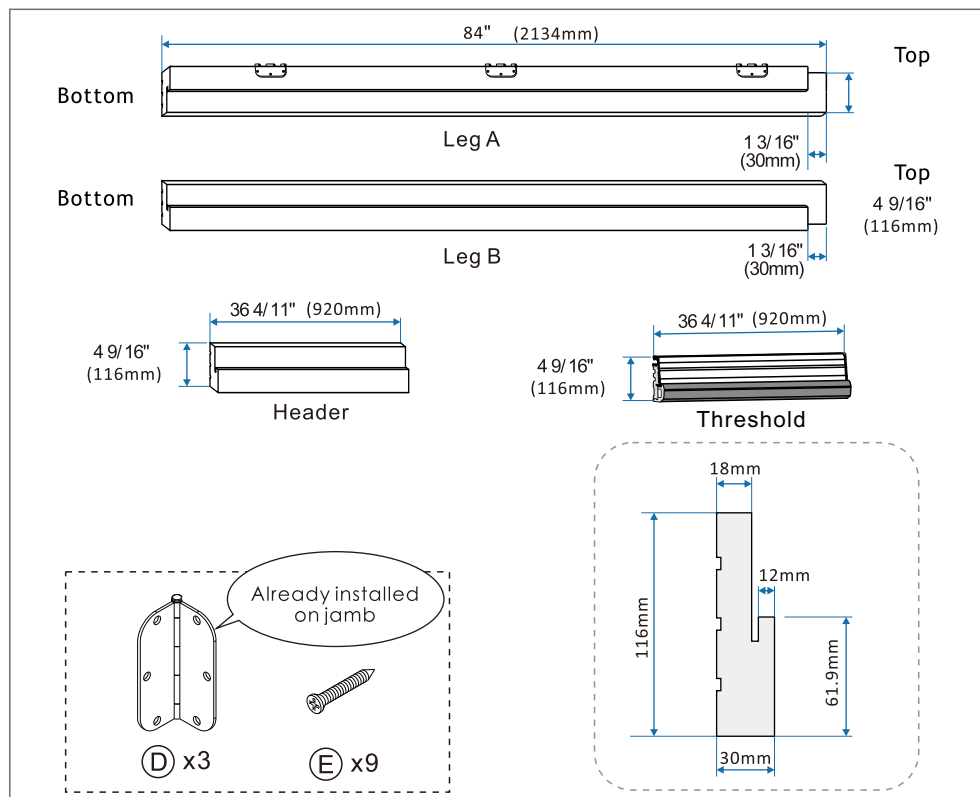


Step ① Attach door to jamb

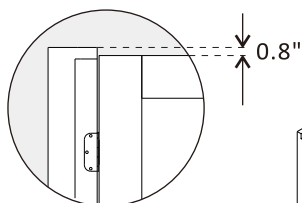




Pro tip: leave 0.8" from top of jamb to top of the door for upper jamb.

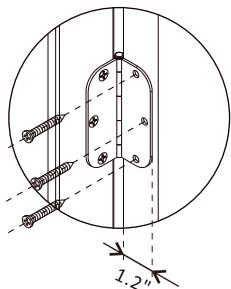

Pro tip: the edge of hinge should be 1.2" from the edge of door for enough room of door swing.

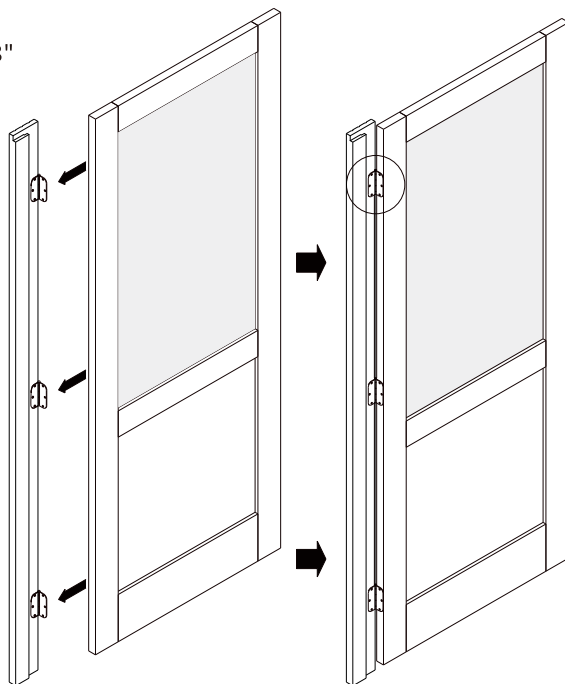



Step ② Remove hinge needle to de-attach door and jamb

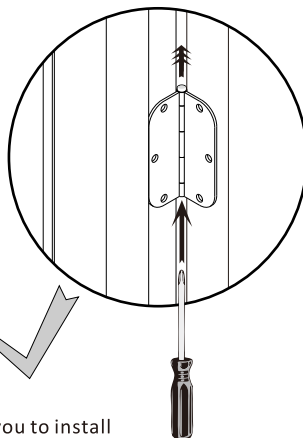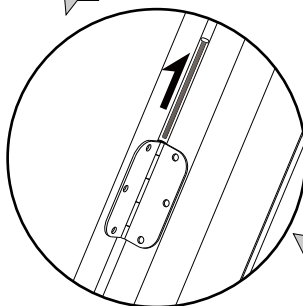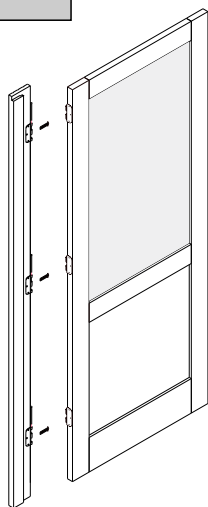




Pro tip: solid door is heavy and we advice you to install jamb alone and then door for safety. It's easy to re-attach door with half hinge back in later step.

Step ③ Assemble door frame with nail gun

Cut the legs and header to the size of the door, as shown in Figures A and B.

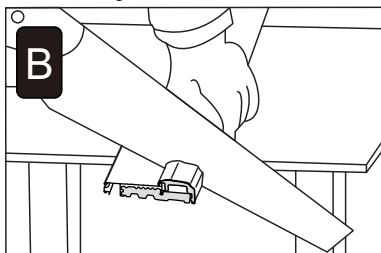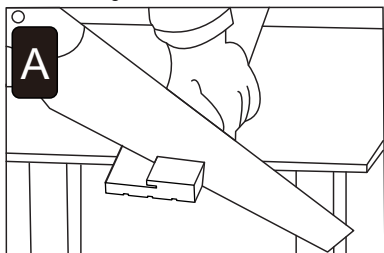


Cut the left and right door frames so they fit the notches on the threshold, as shown in Figure C.

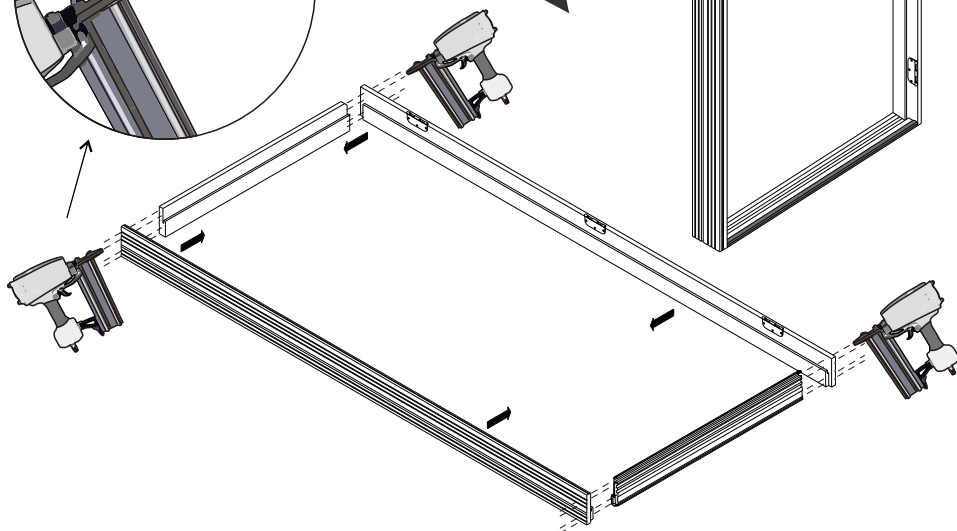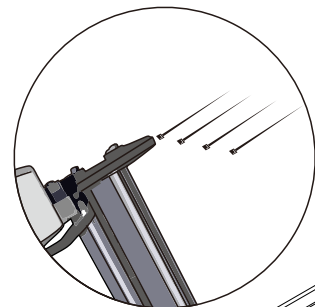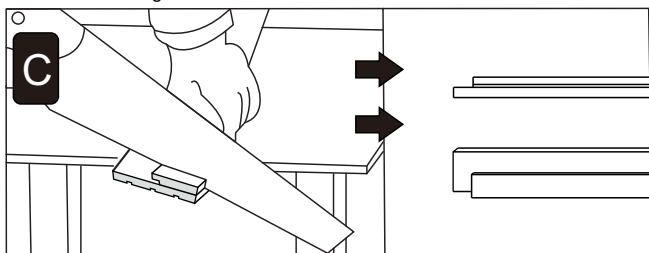


Step ④ Install Jamb to Door Opening

Step 1: Install the jamb

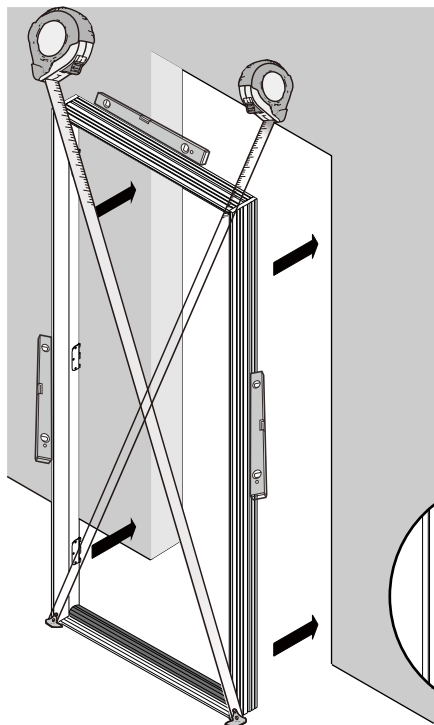

Step 2: Attach the doors

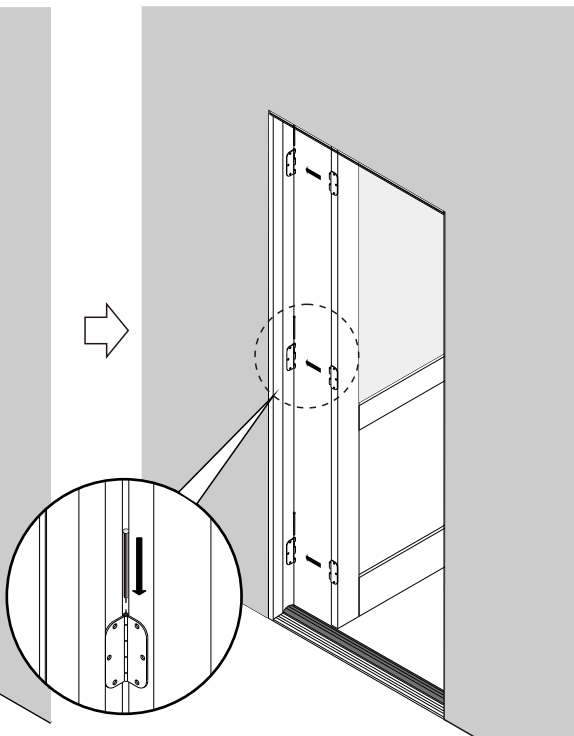

Step 3: Your French Door is ready

