

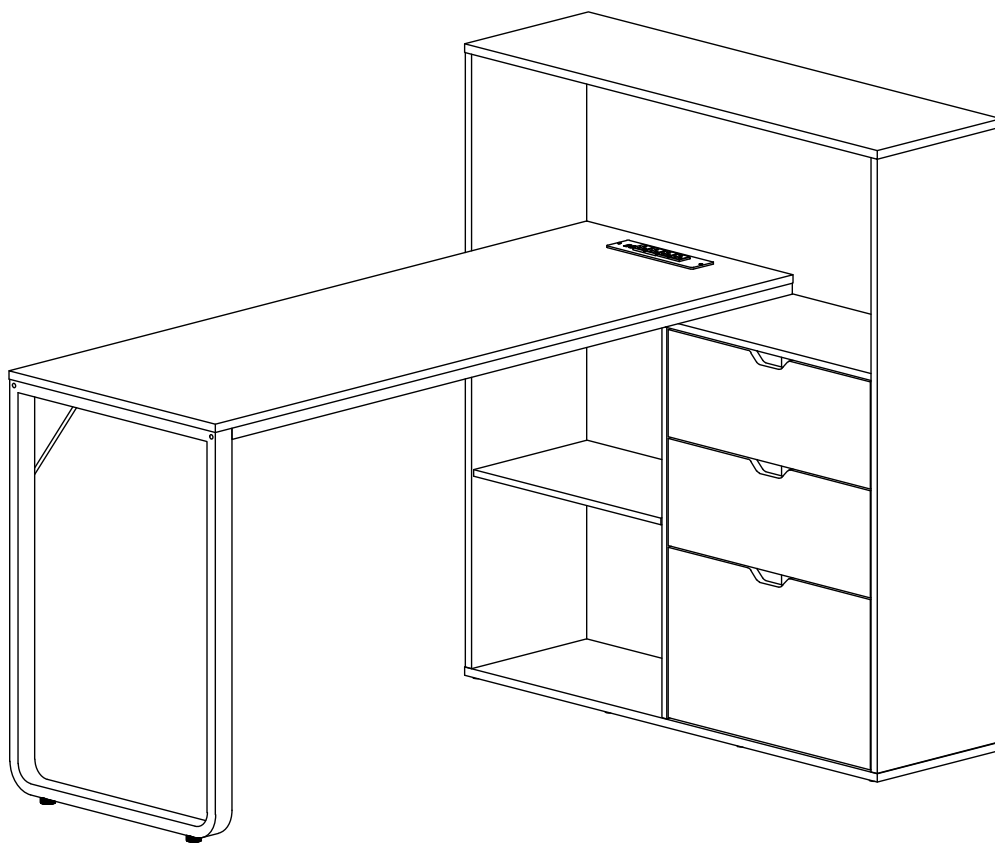
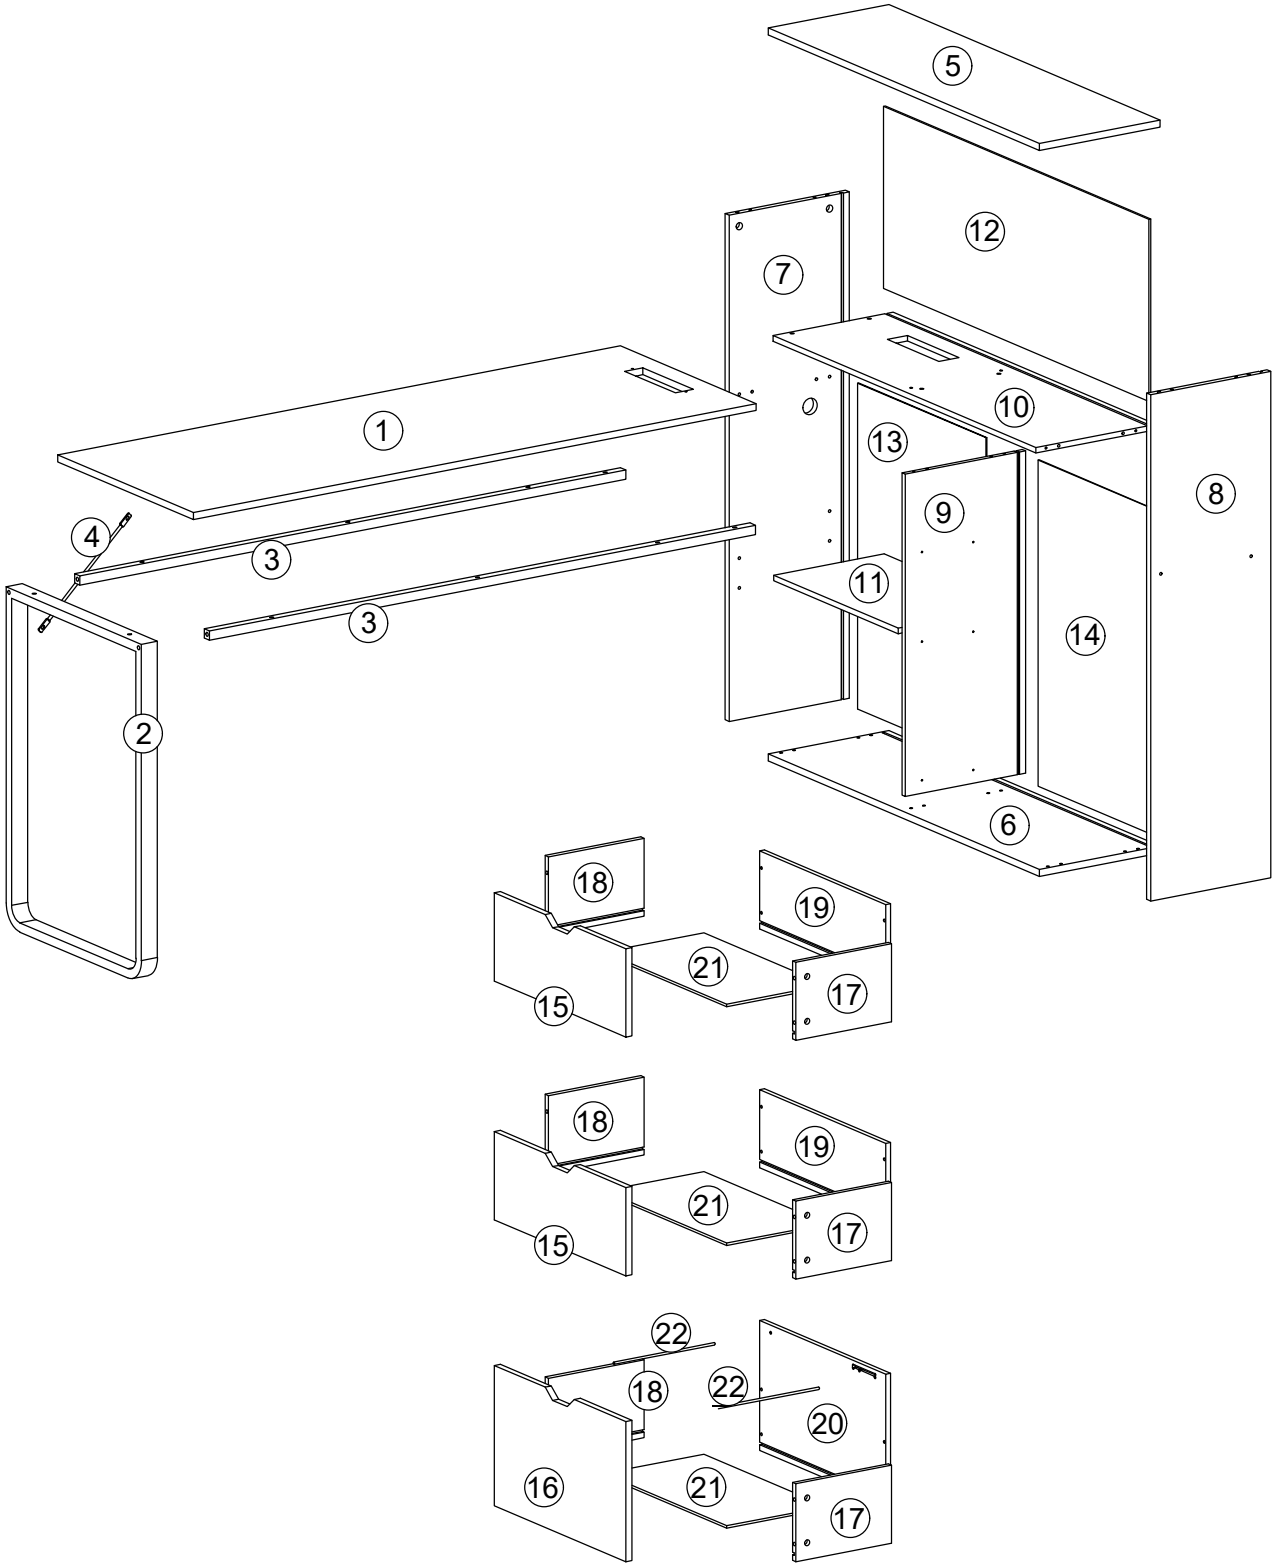
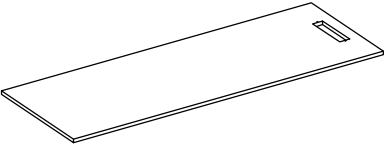
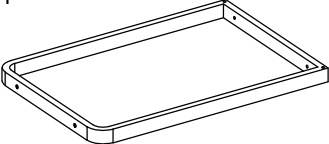
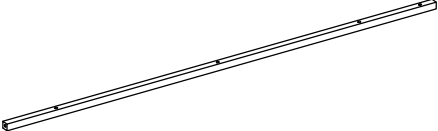

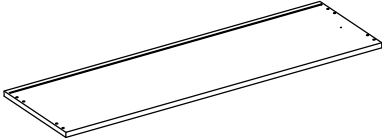
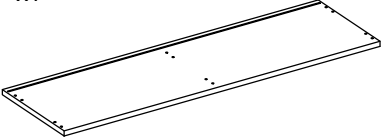
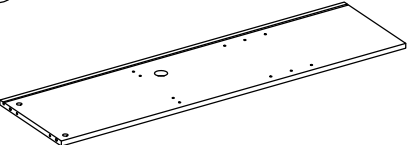
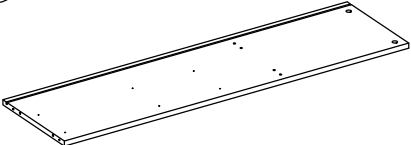
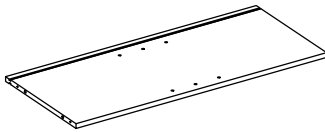
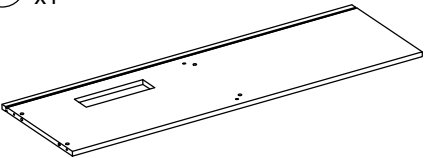
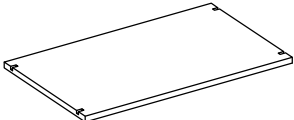
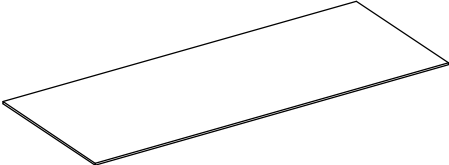
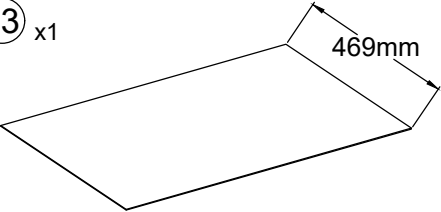
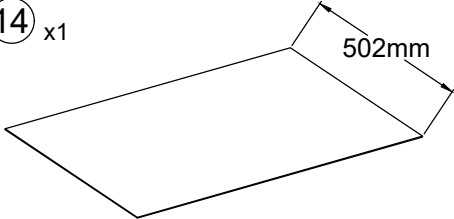
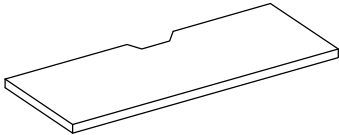
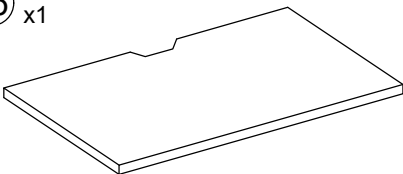
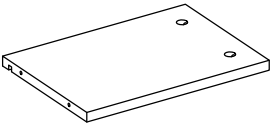
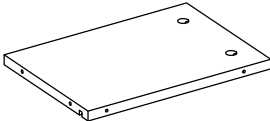
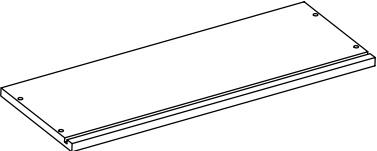
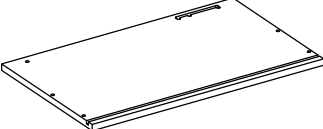






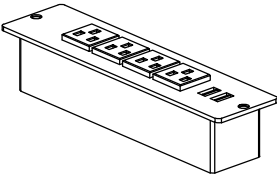



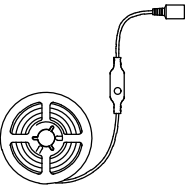


IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY




① x1 	② x1 	③ x2 
④ x1 	⑤ x1 	⑥ x1 
⑦ x1 	⑧ x1 	⑨ x1 
⑩ x1 	⑪ x1 	⑫ x1 
⑬ x1 	⑭ x1 	⑮ x2 
⑯ x1 	⑰ x3 	⑱ x3 
⑲ x2 	⑳ x1 	㉑ x3 
㉒ x2 		

A x 24+1  Ø5x40	B x 2+1  M6x60	C x 4+1  M6x40	D x 6+1  M6x28
E x 2+1  M6x12	F x 16+1  Ø8x40	G x 16+1  Ø15x10 M5x42	H x 2  M3.5x14
I x 3  250mm	J x 27+2  M3.5x12	K x 1 	L x 4+1 
M x 1 	N x 2  M8x15	O x 3 	


TOOL




Attention

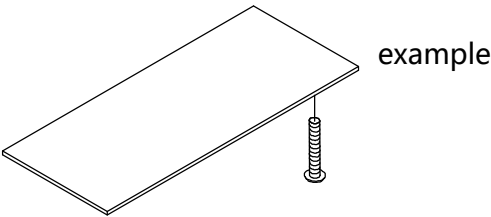

Be sure to use the proper screws to avoid damaging the parts

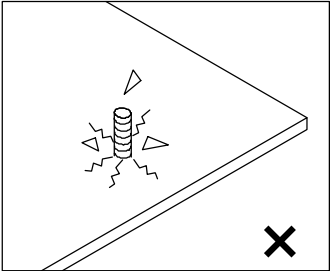


Wrong screws can cause the plank to crack

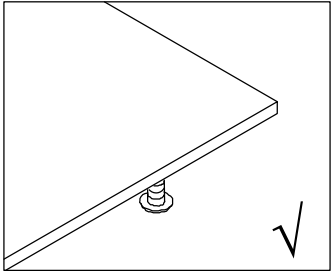


The right screw is the right size


STEP 1

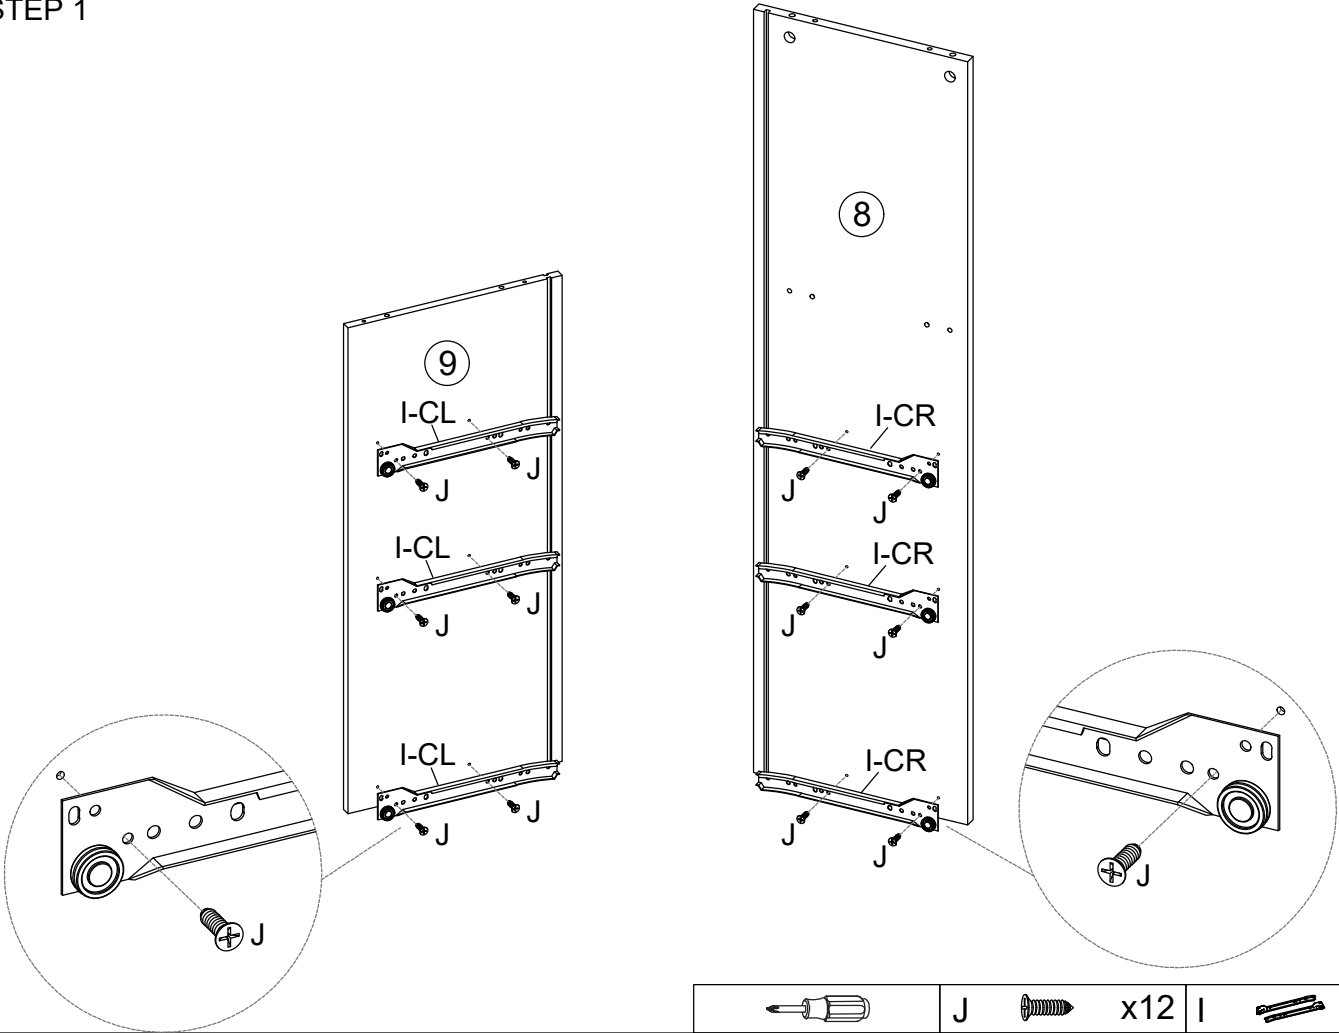


STEP 2

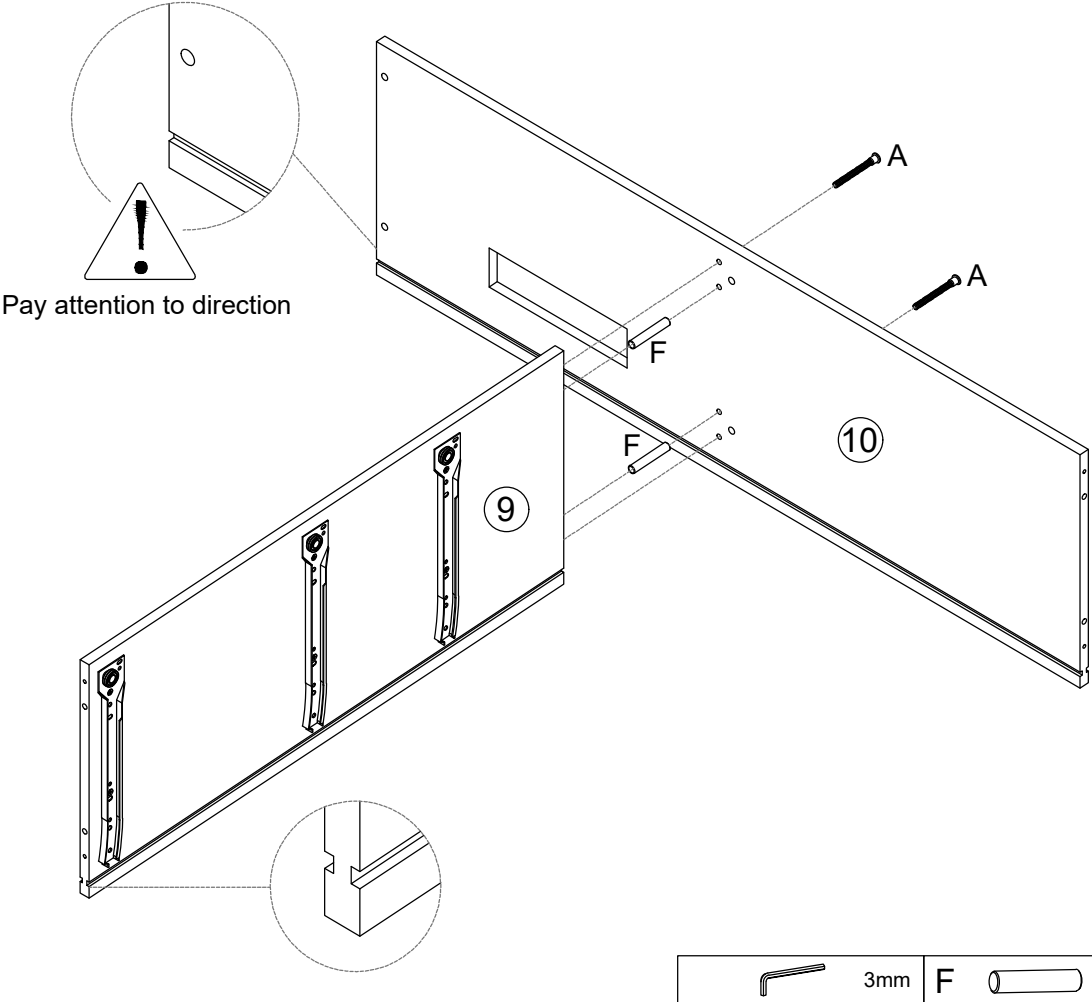


STEP 3

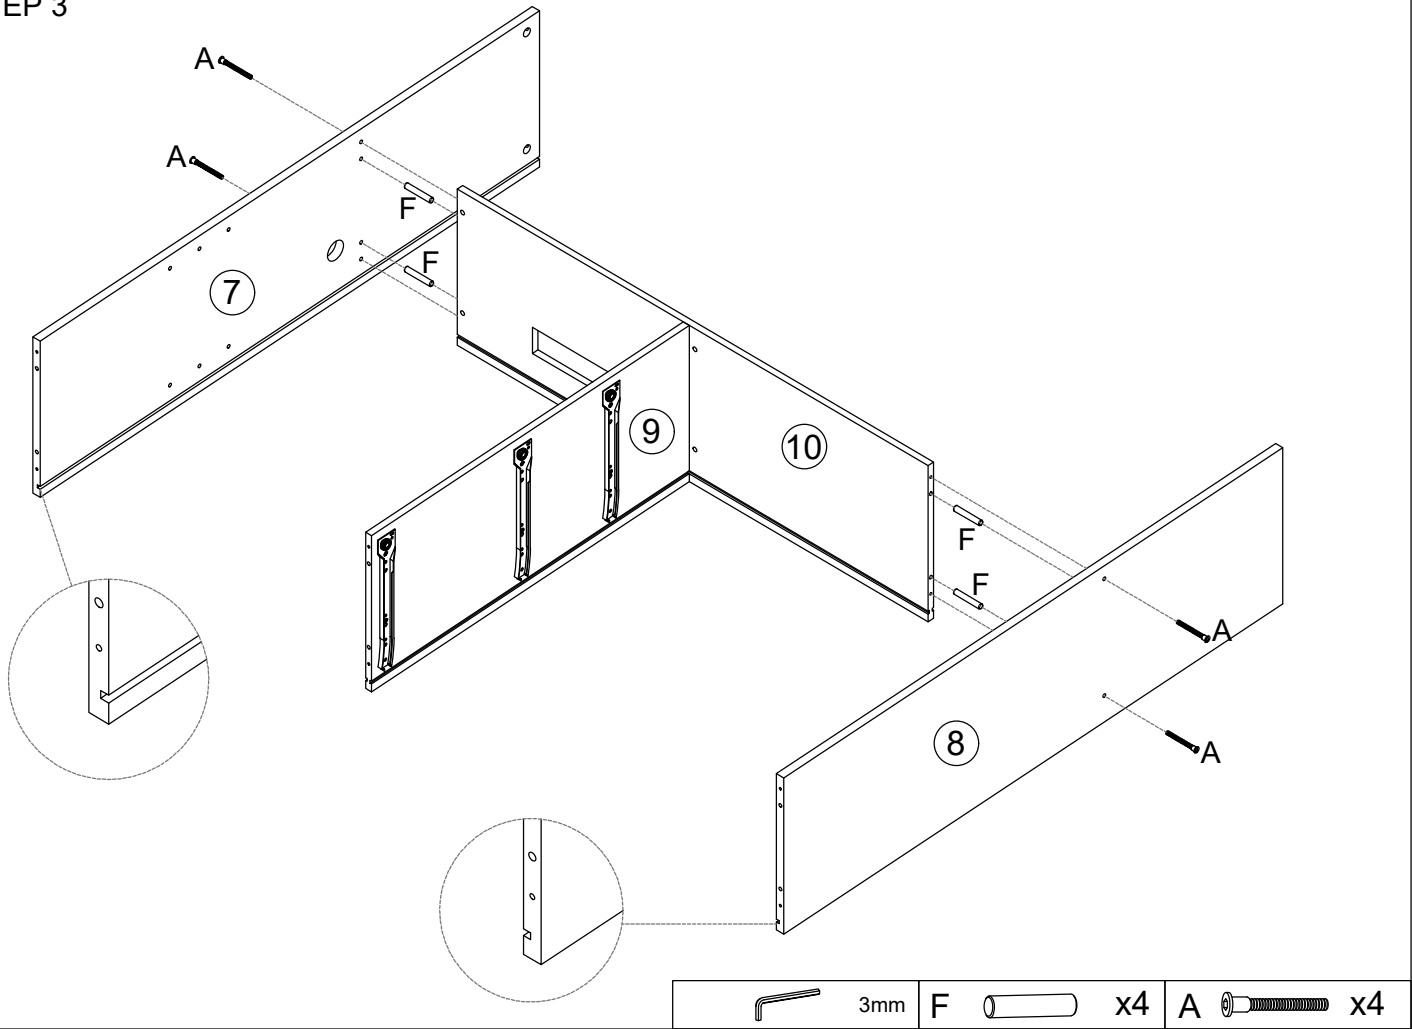

STEP 4

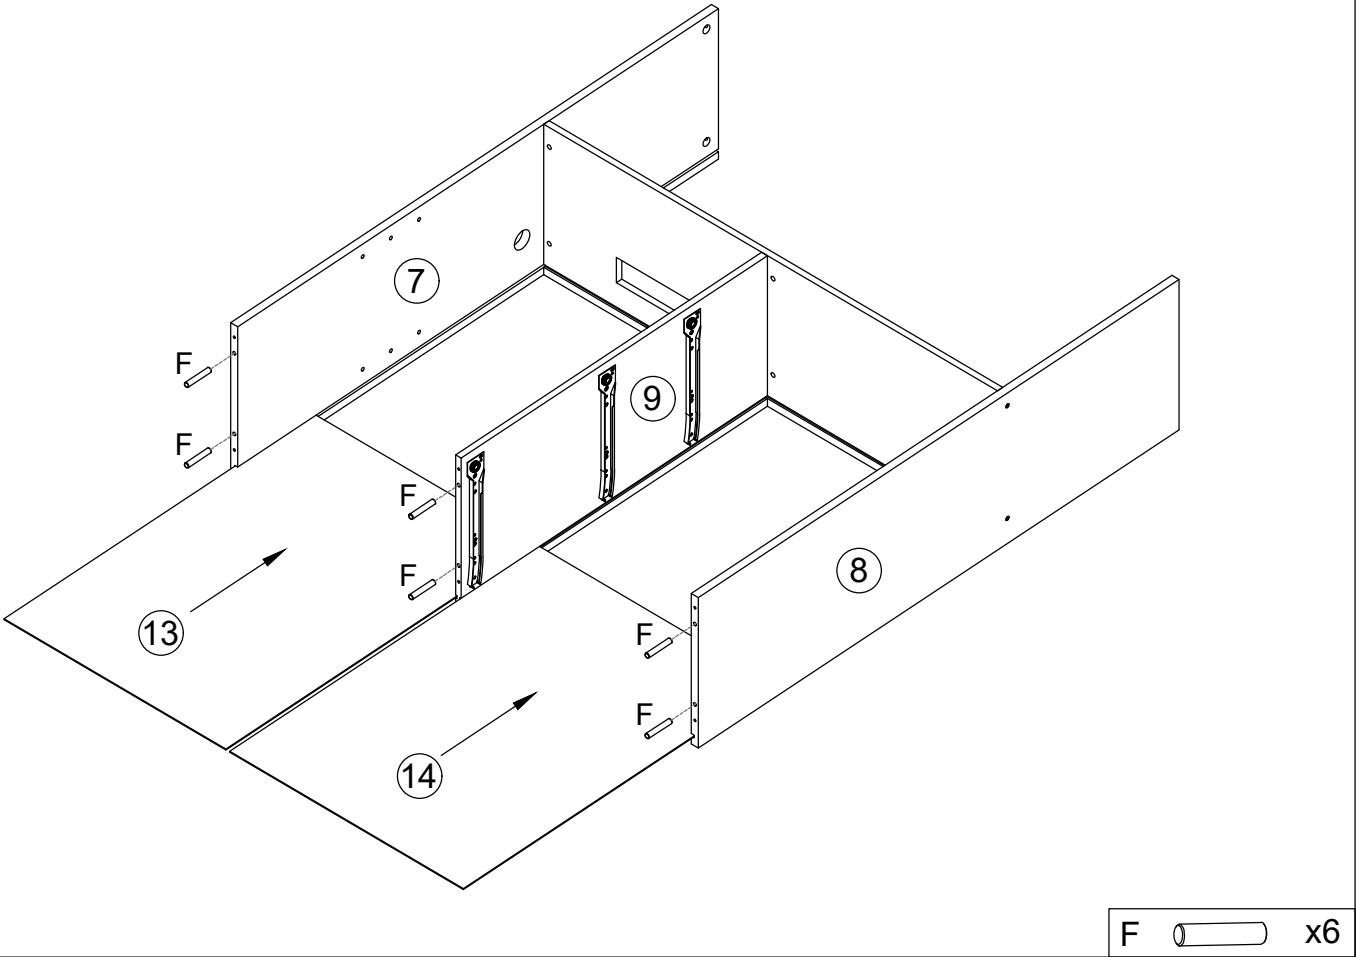


STEP 5

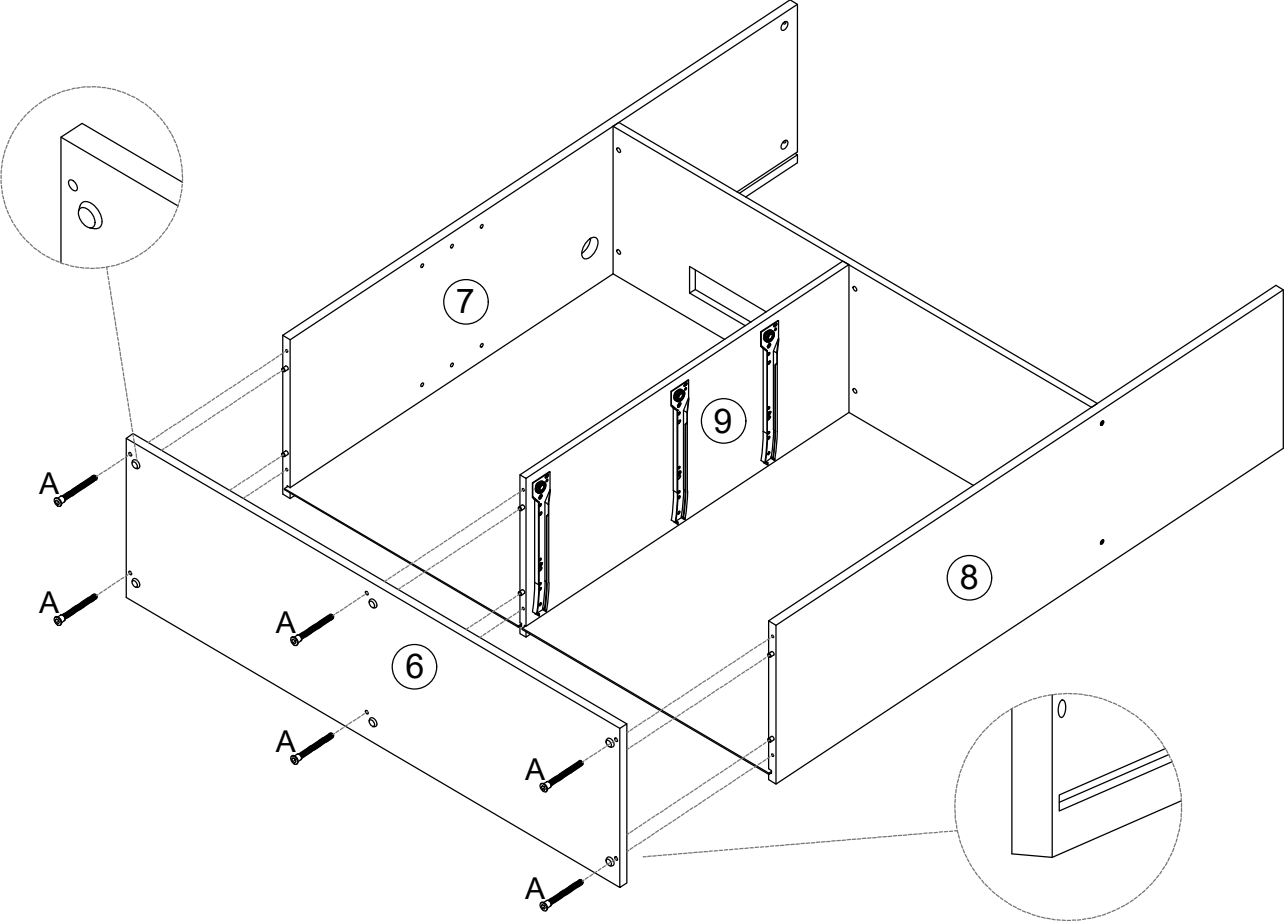


 3mm **A**  x6

STEP 6

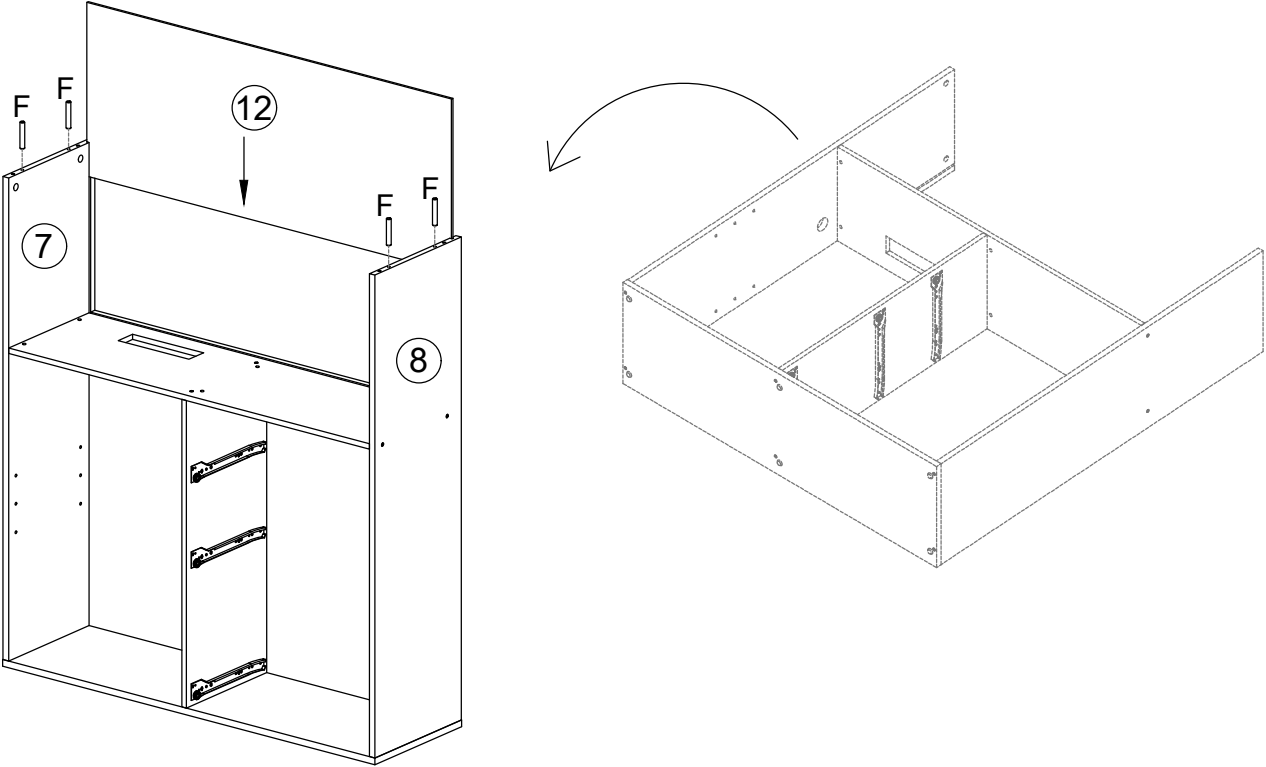


F  x4


STEP 7

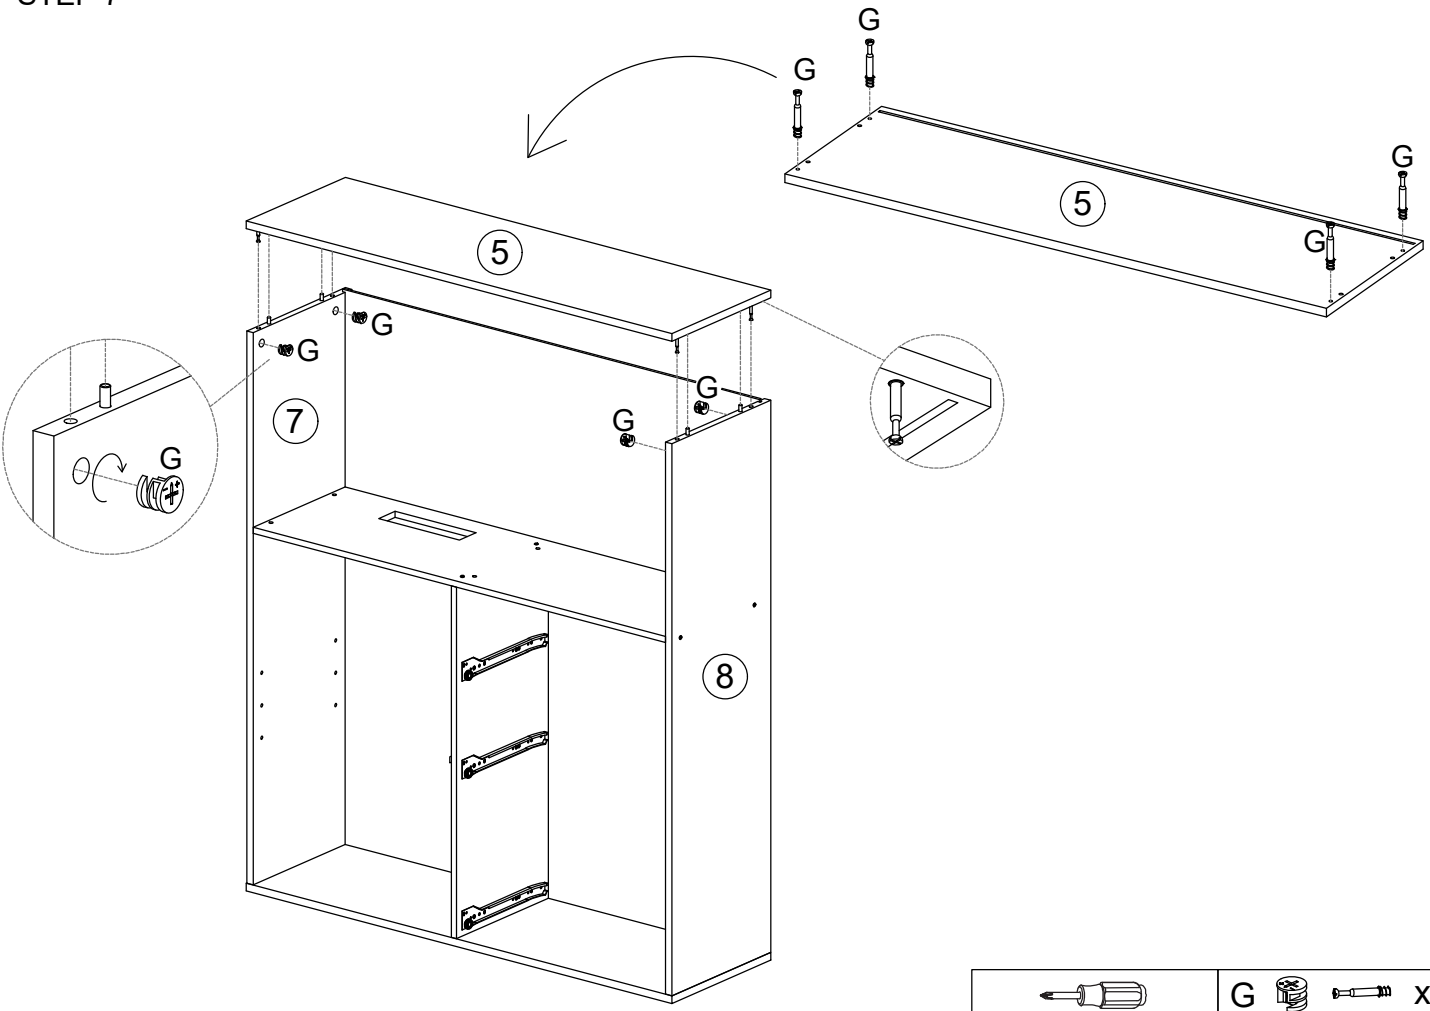

STEP 8

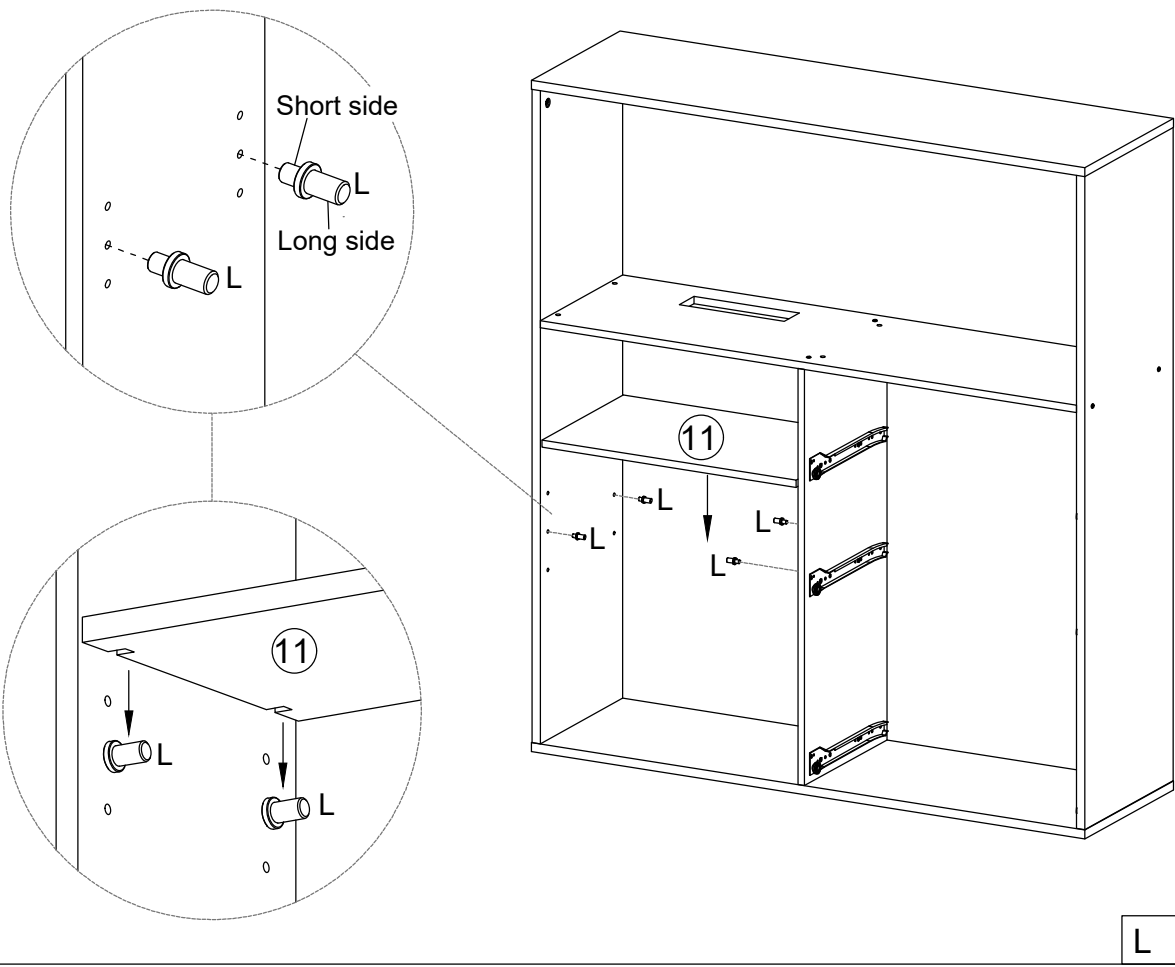


STEP 9

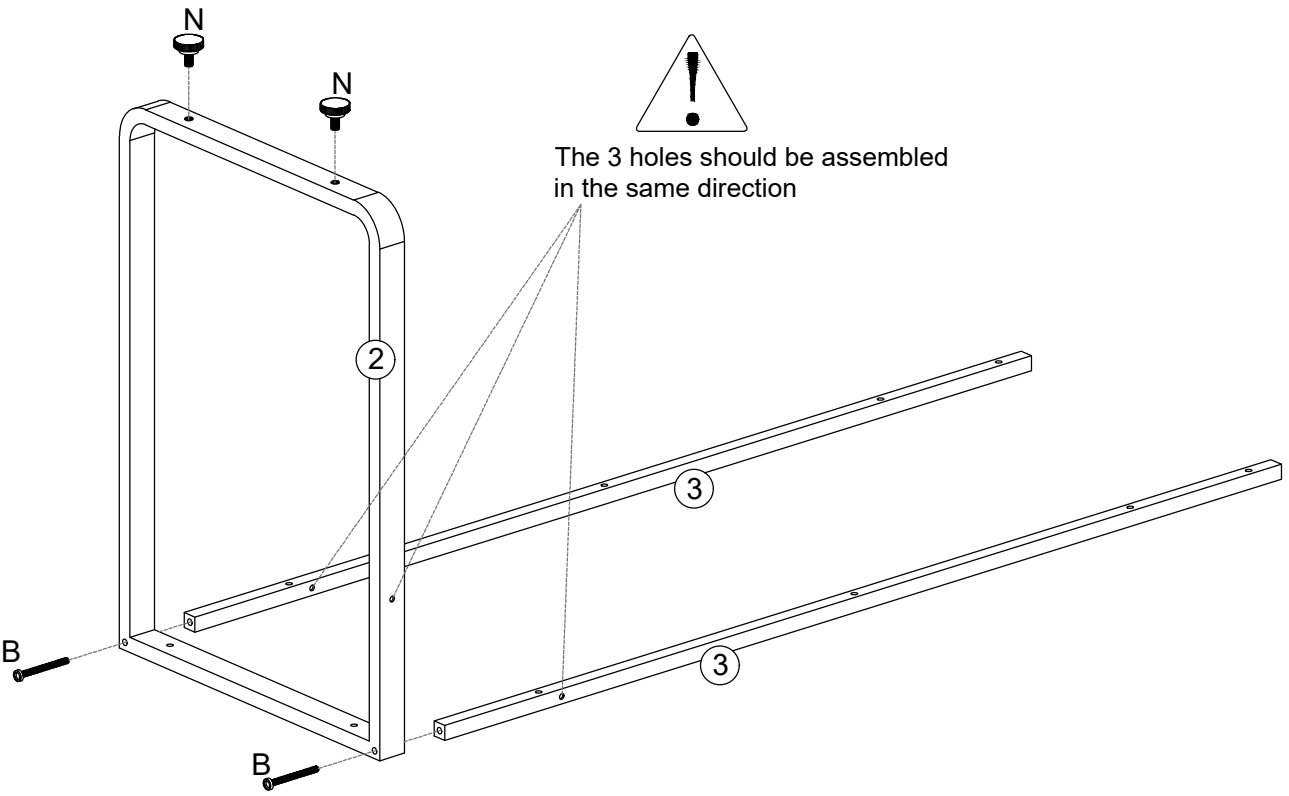


	4mm	N		x2	B		x2
---	-----	---	---	----	---	---	----

STEP 10

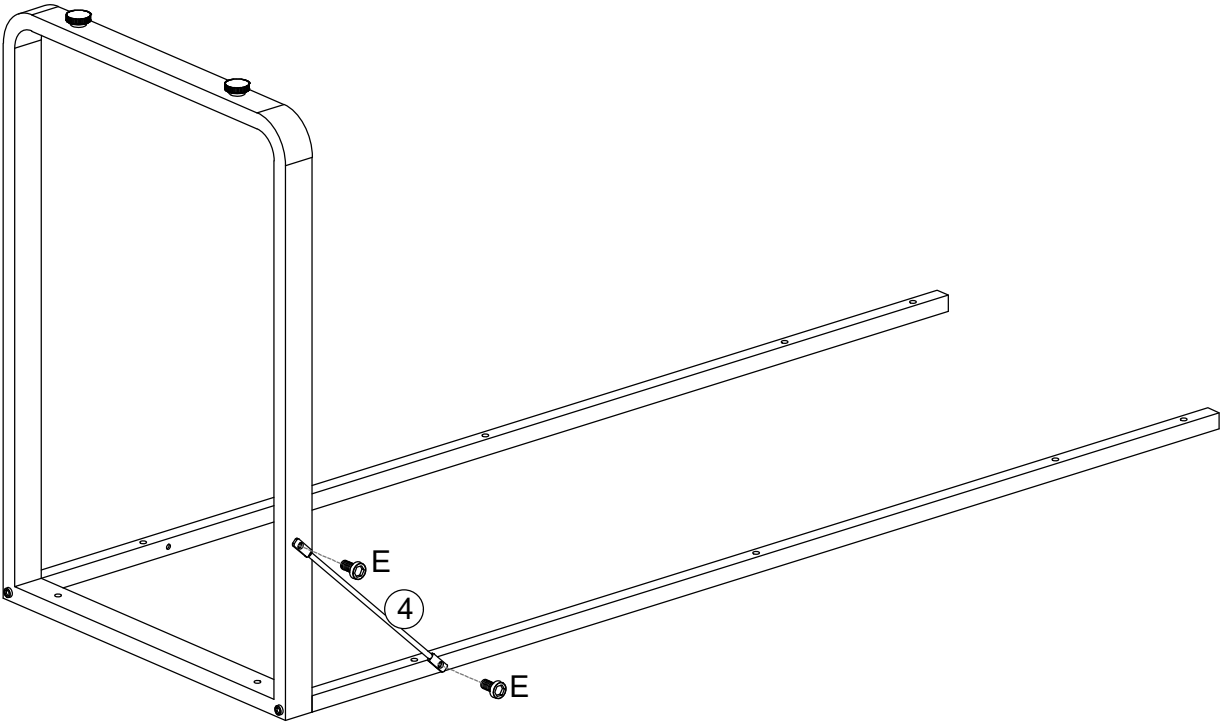


	4mm	E		x2
---	-----	---	---	----

STEP 11

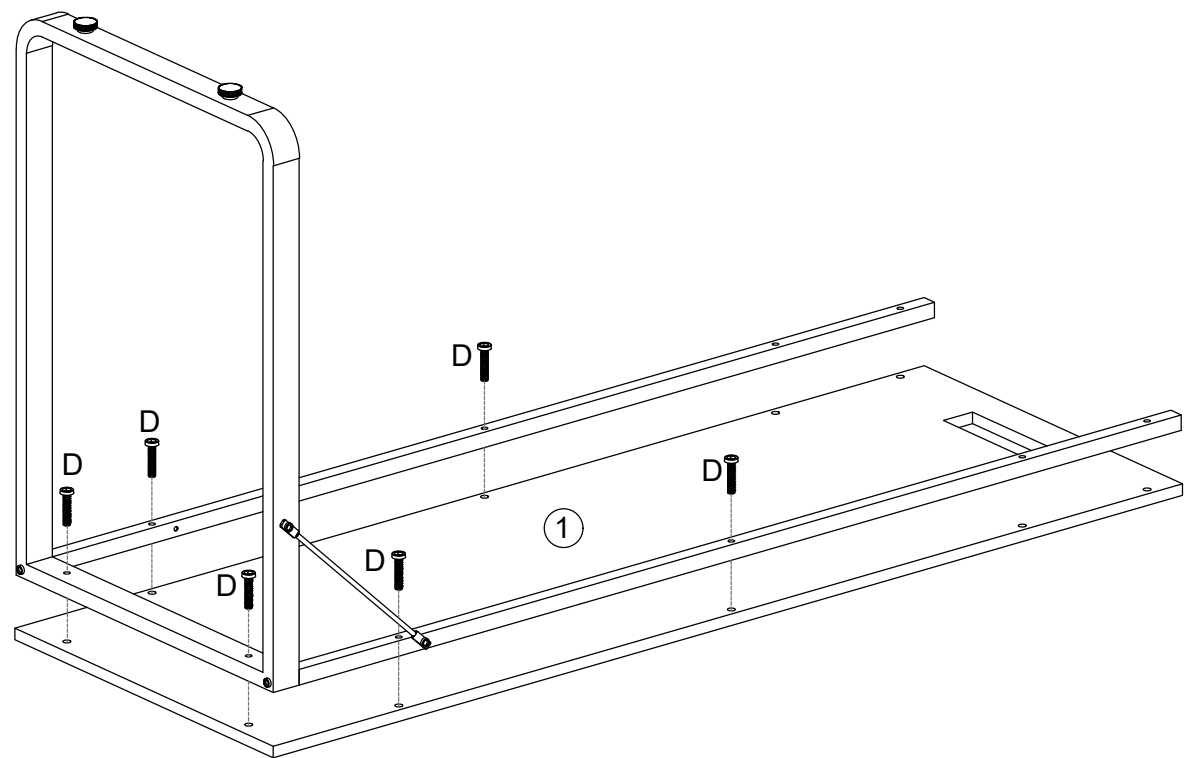

	4mm	D		x6
---	-----	---	---	----


STEP 12

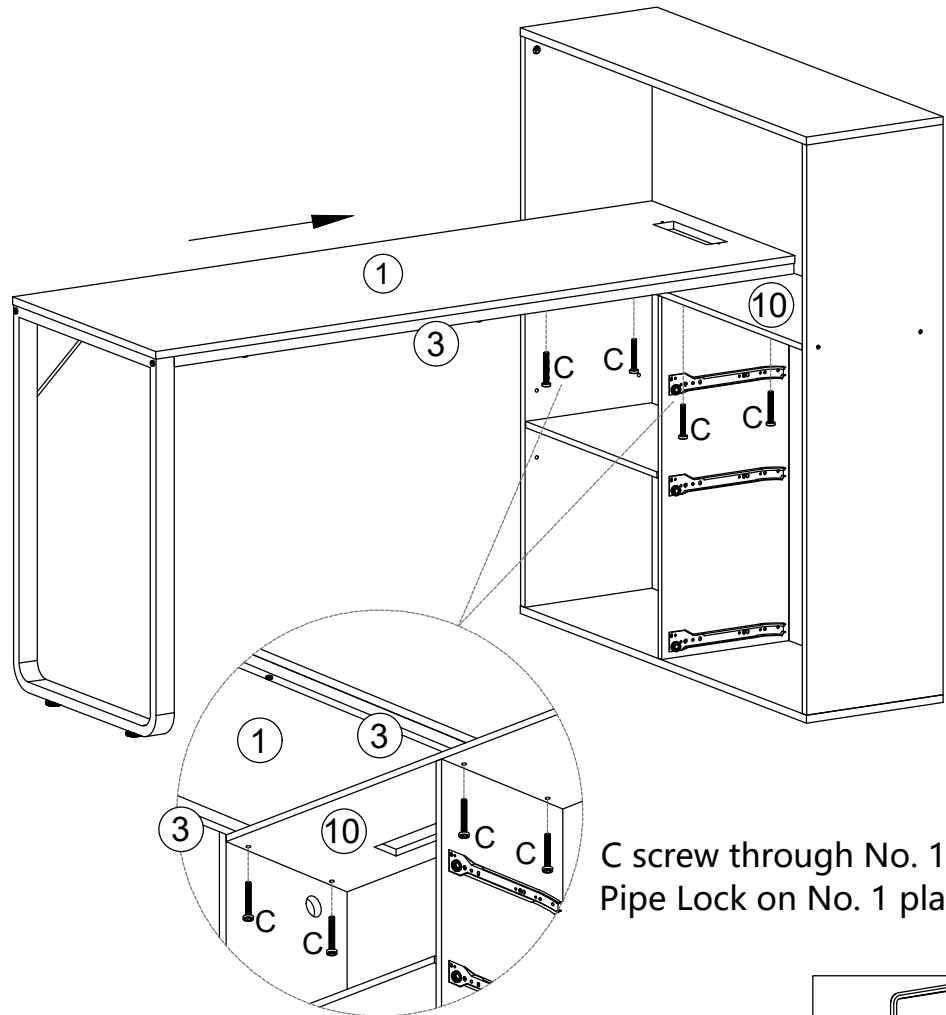

C screw through No. 10 plate and No. 3 Iron Pipe Lock on No. 1 plate


	4mm	C		x4
---	-----	---	---	----


STEP 13

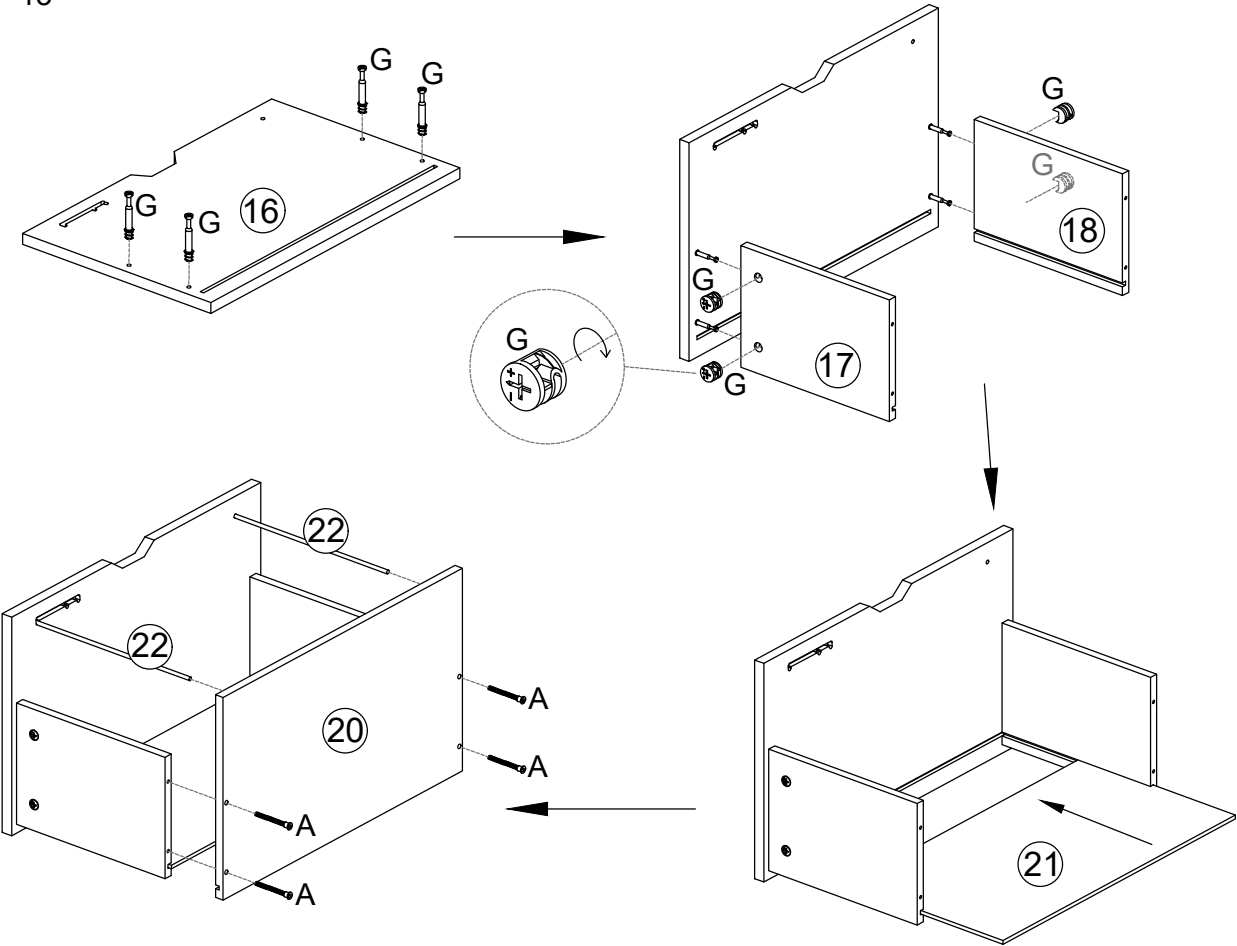


	3mm		G  x4	A  x4
---	-----	---	--	--

STEP 14

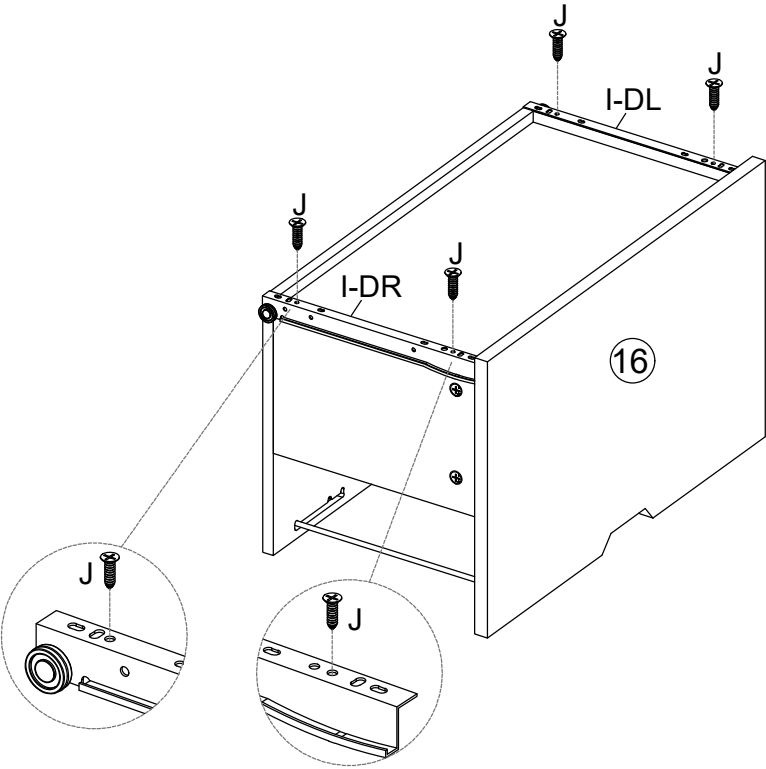


	J  x4	I  x1
---	--	--

STEP 15

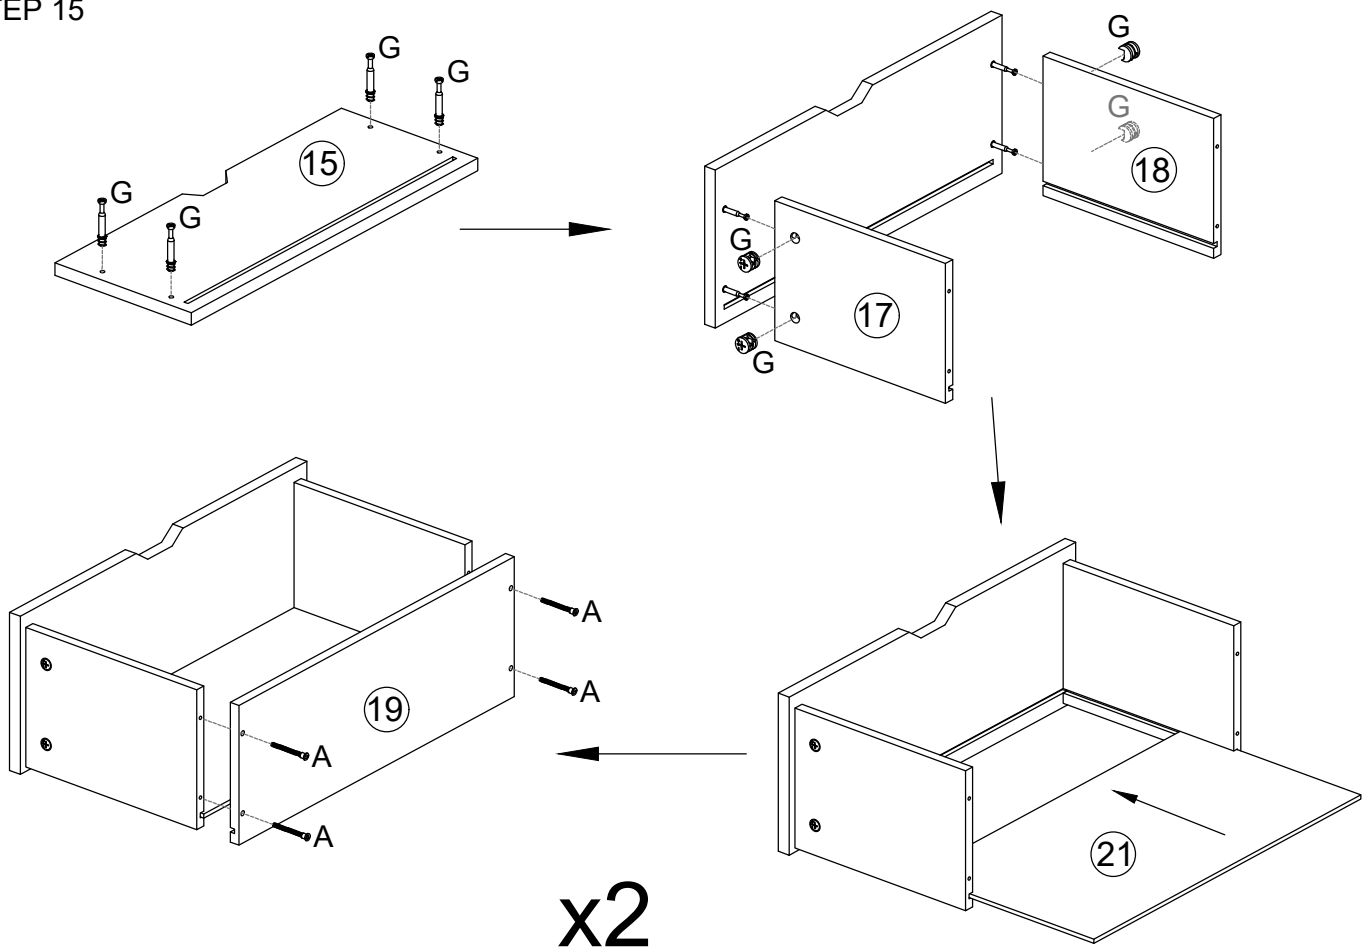


	3mm		G 		x8	A 	x8
---	-----	---	---	---	----	---	----

STEP 16

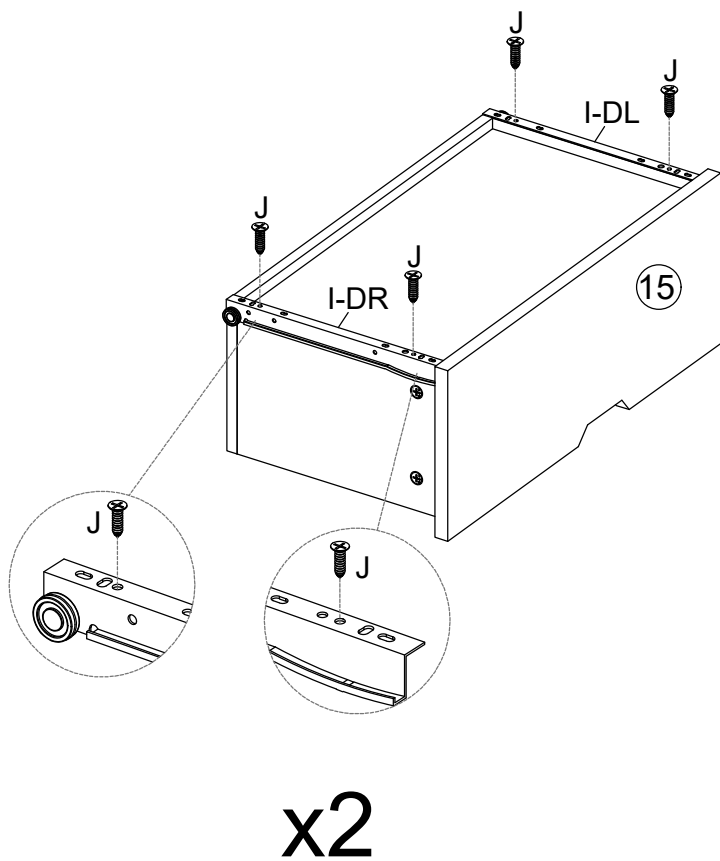


	J 		x8	I 	x2
---	---	---	----	---	----

STEP 17

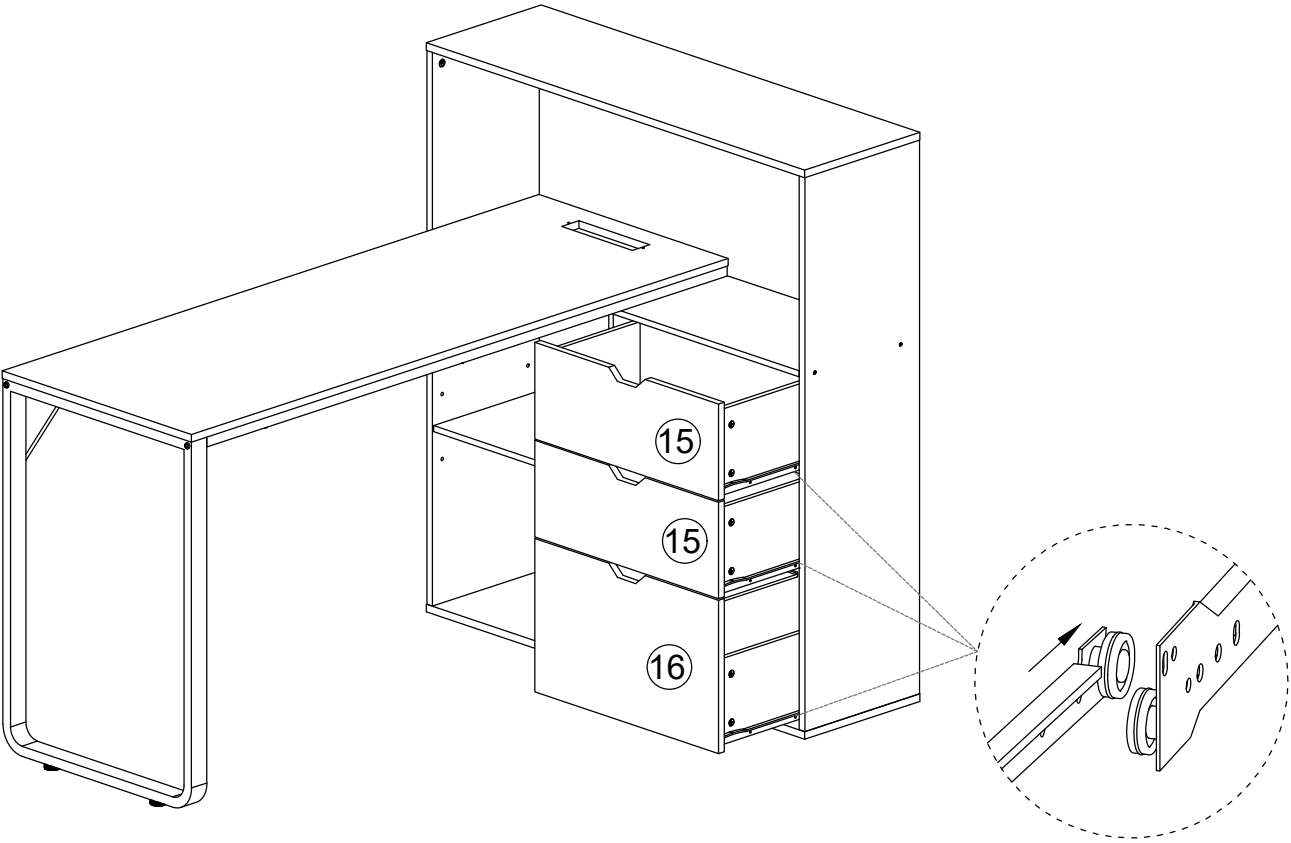


STEP 18

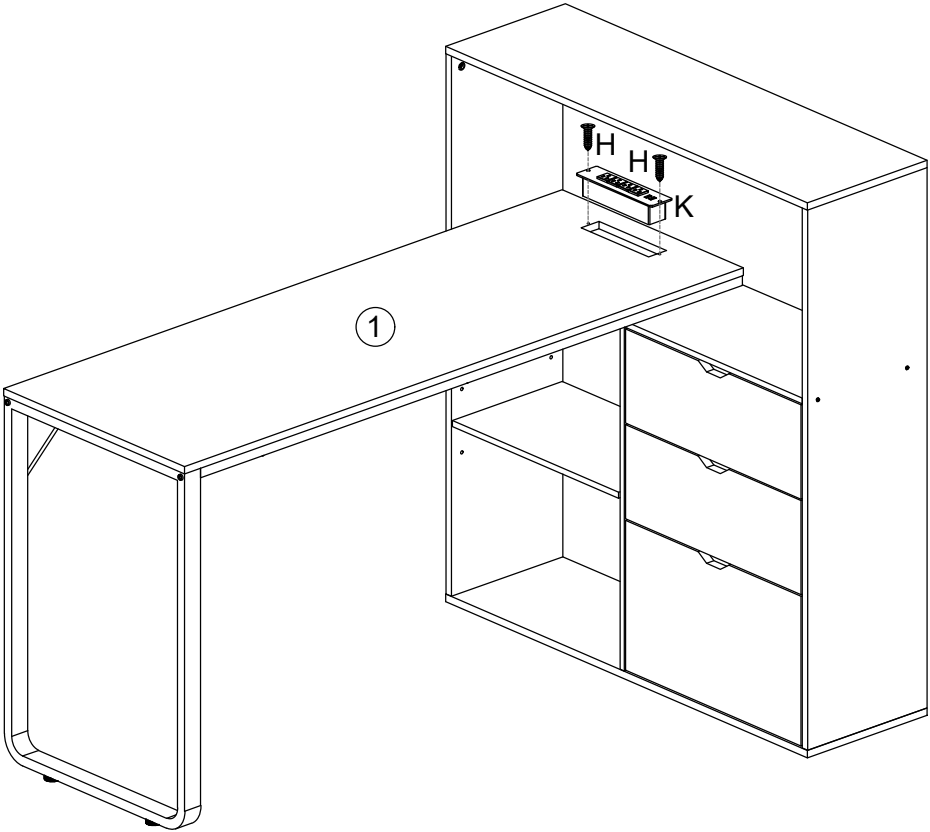

	K		x1	H		x2
---	---	---	----	---	---	----

STEP 19

Tear off the tape and apply it to the bottom plate, then press it firmly with your hand

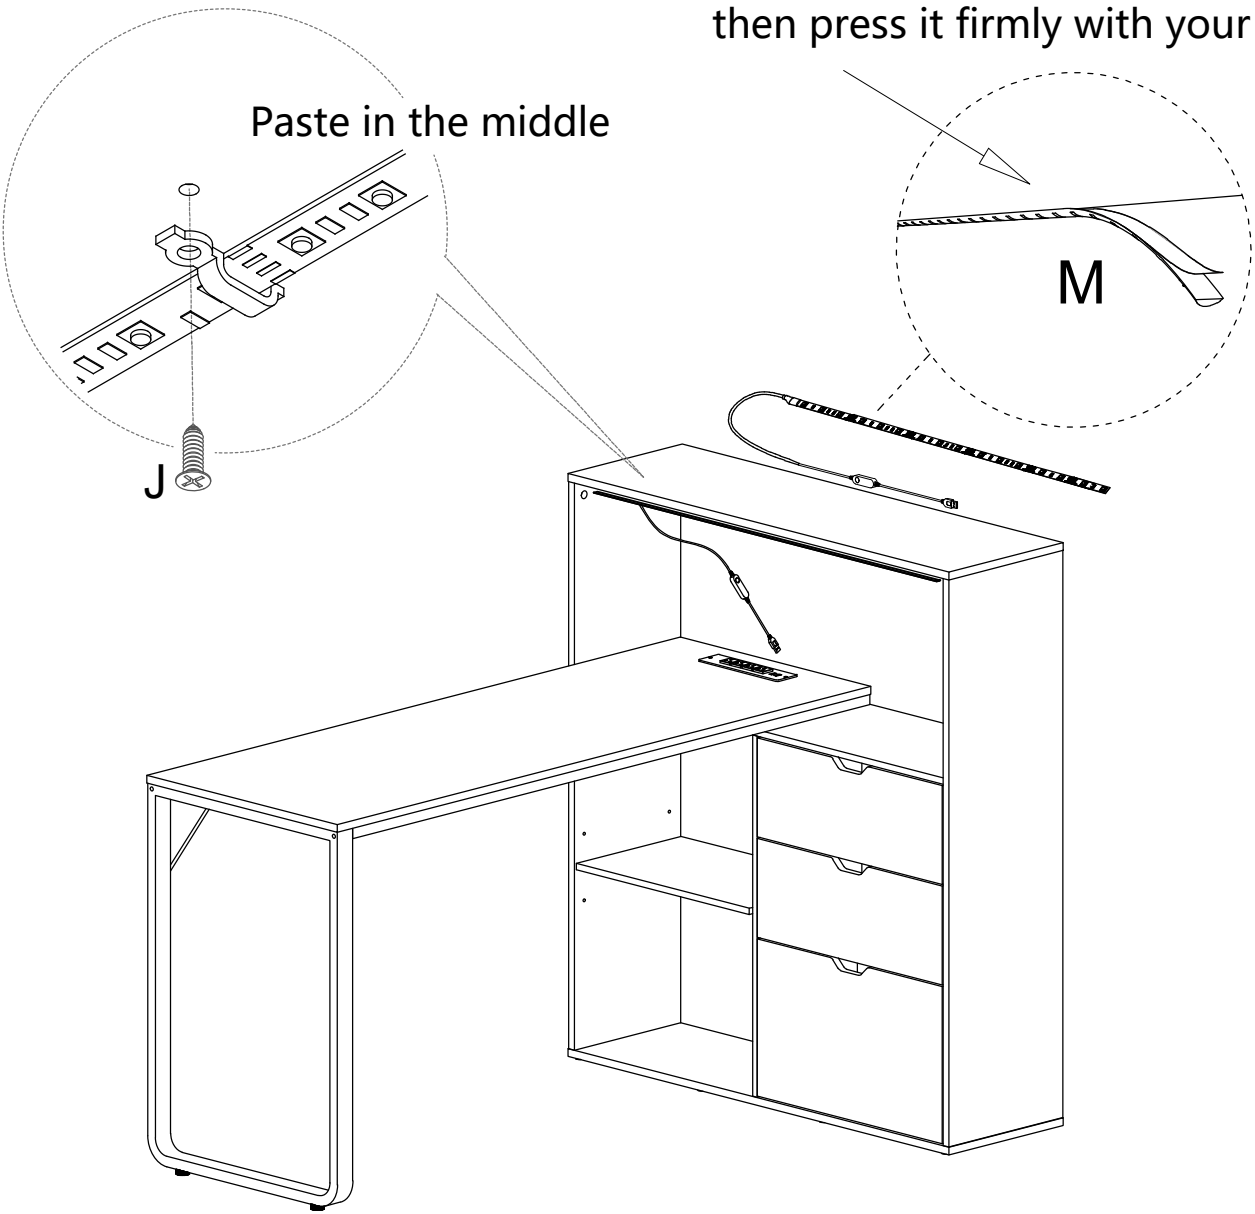

Installation Completed

		
O		x3
J		x3
M		x1