


Assembly Manual

Bookcase Headboard


HB002-S

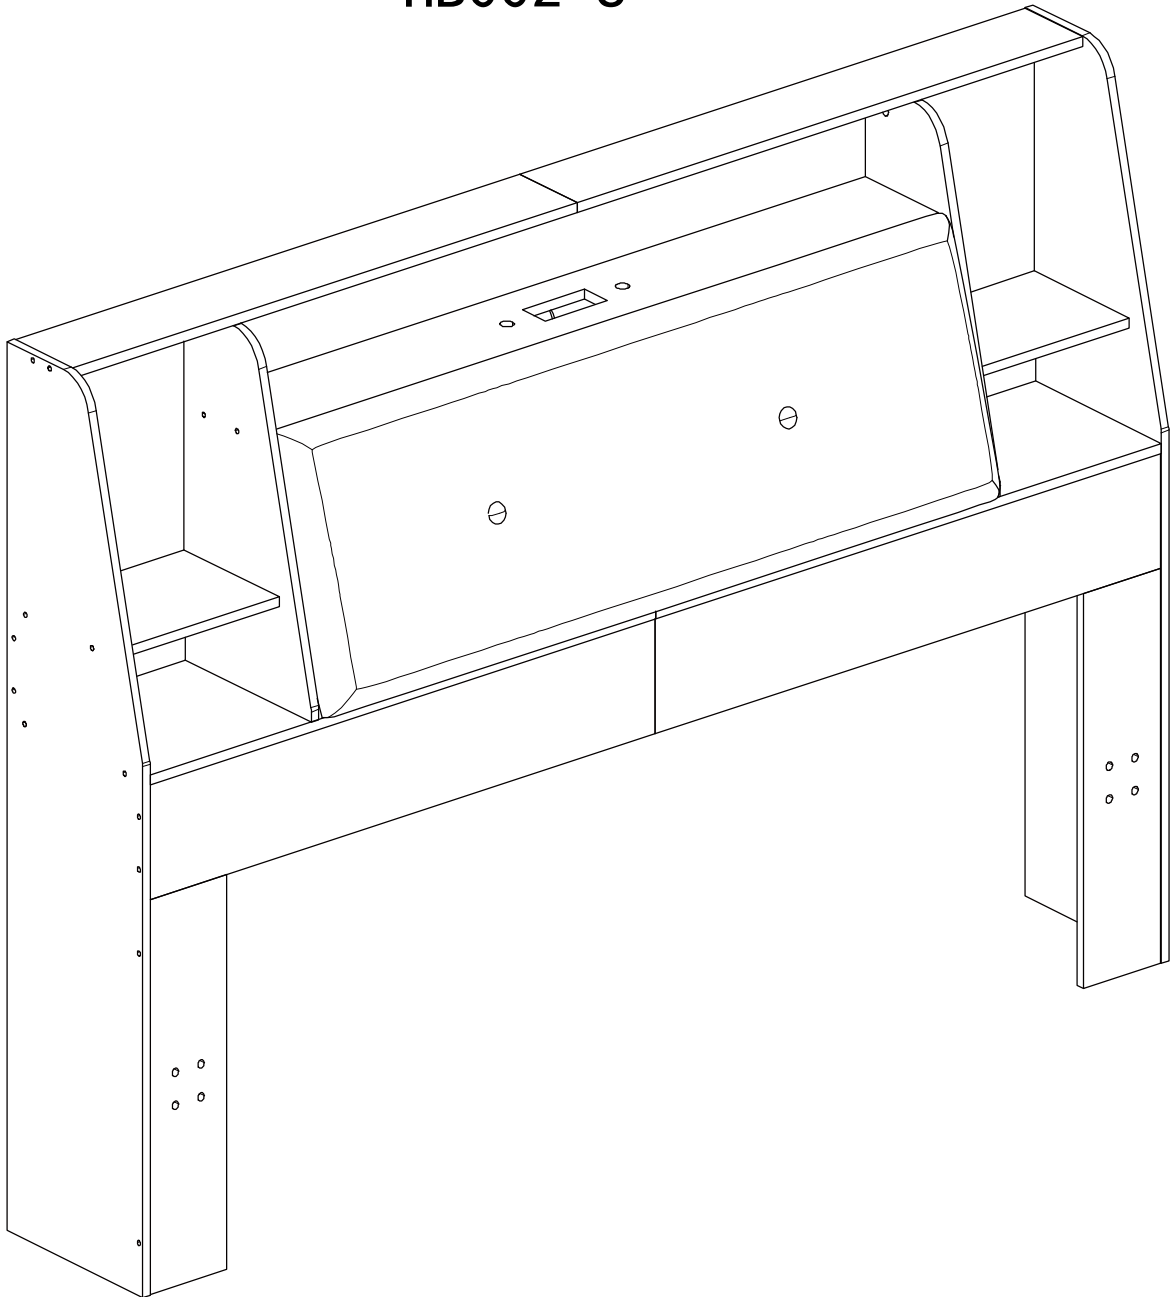

Please read this manual carefully before any operation and keep it properly for future use.

Customer Service: service@sunoft.com


Exploded View

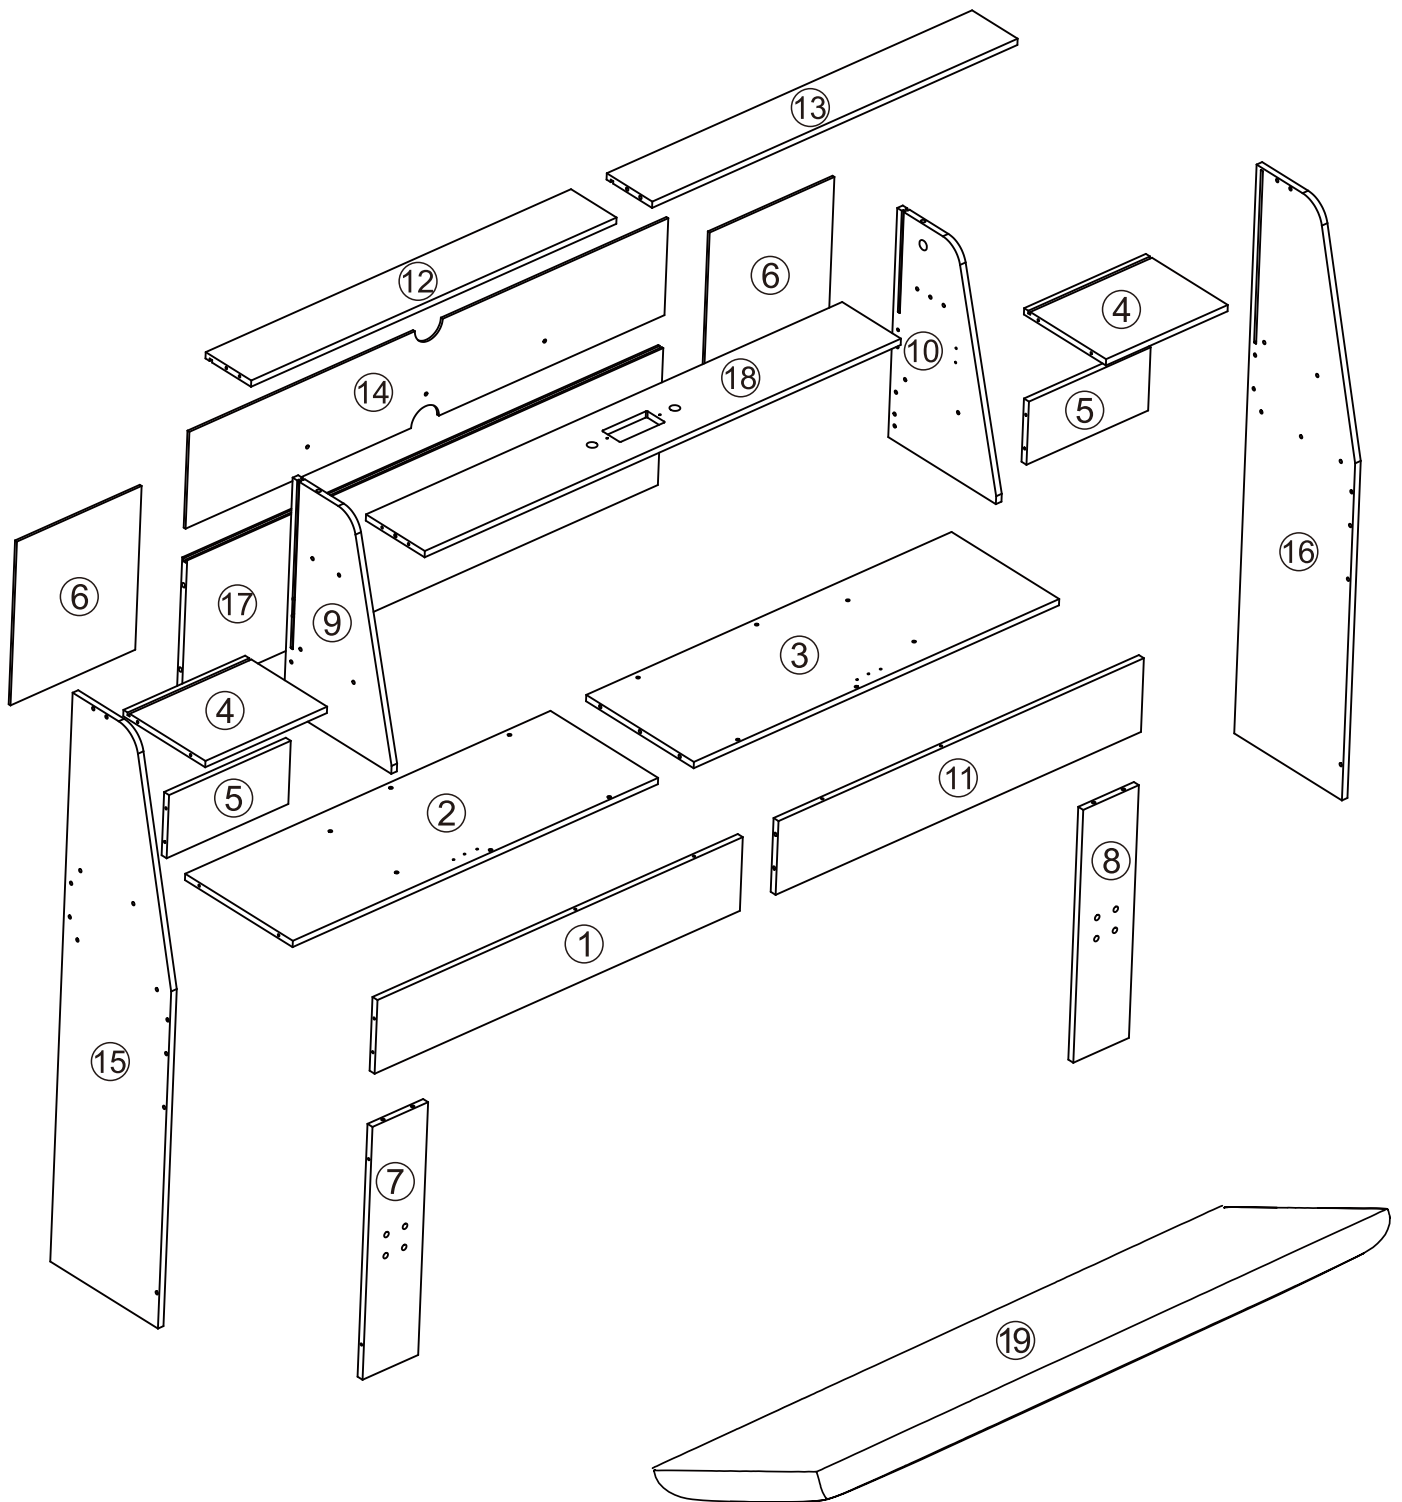

Warnings

ATTENTION:

FUNCTION OF KLIX CAM

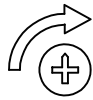


1/2 RIGHT
TURN FOR
LOCKING

MAKE SURE THE ARROW OVER AGAINST THE
TOPSIDE OF CAM LOCK PIN BEFORE
INSERTING INTO THE PANEL'S HOLE


IMPORTANT!

After 180° right turn, if there is a gap
between the boards, please check
whether the cam lock pin is tightened
enough.

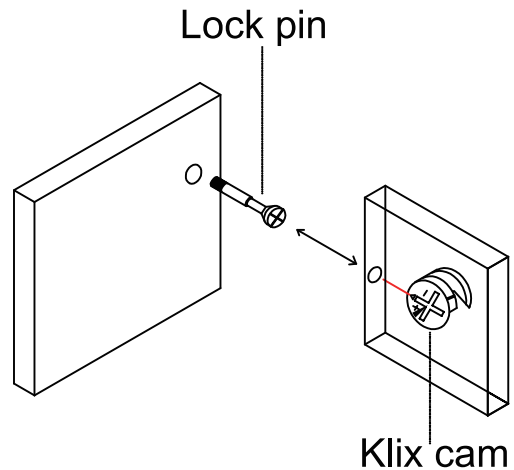


Components List

A retainer*2

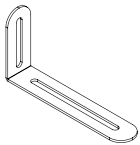


B connecetor*5

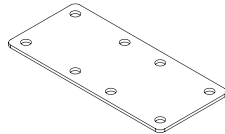


C nut*6



D bolt*6

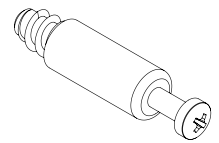


E dowel*13

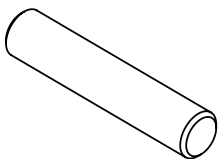

F bolt*52



G bolt*62

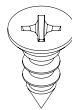


H Allen wrench*1




I screwdriver*1




J plug*1

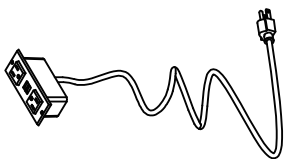

K power

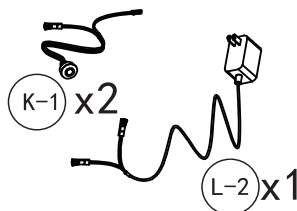

L hinge

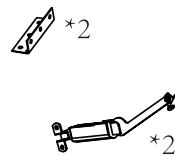


M Corner code*2




Components List


① ×1

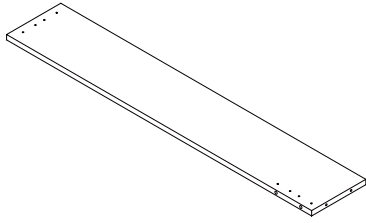


② ×1

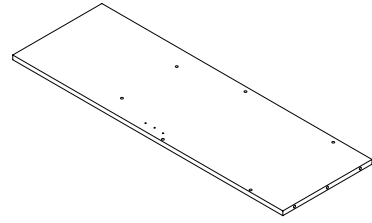


③ ×1

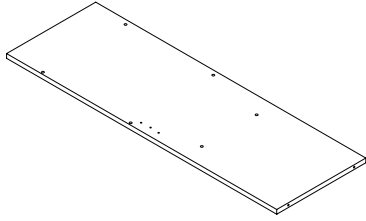


④ ×2

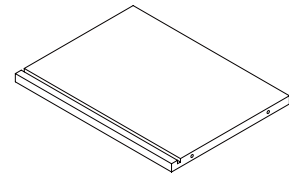


⑤ ×2

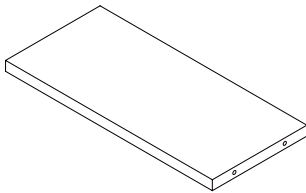


⑥ ×2

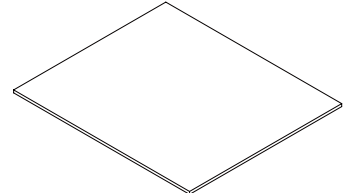


⑦ ×1

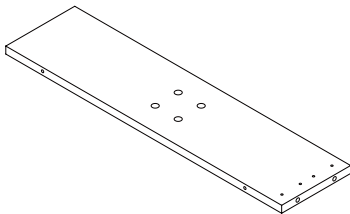


⑧ ×1

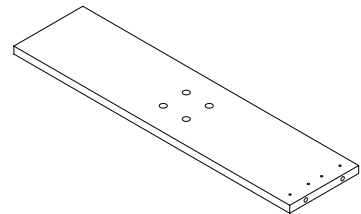


⑨ ×1

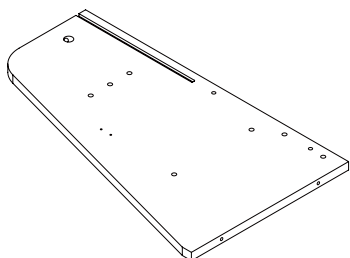


⑩ ×1

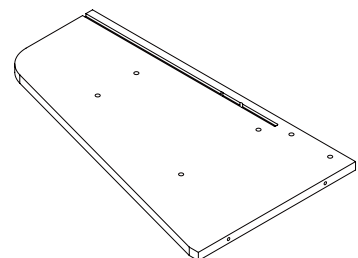

⑪ ×1

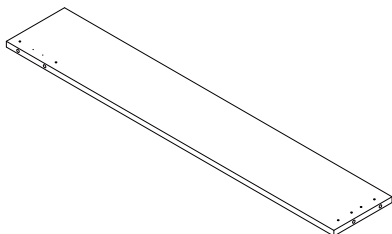


⑫ ×1

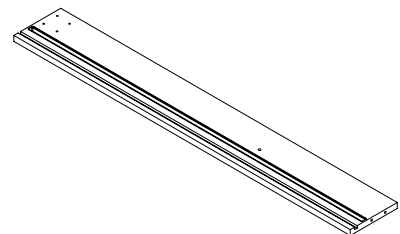


Components List


⑬ × 1

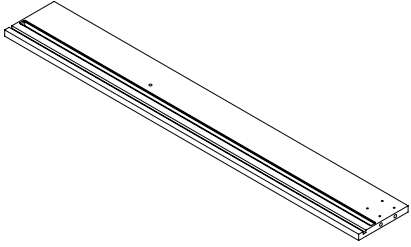


⑭ × 1

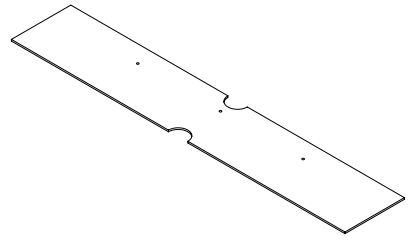


⑮ × 1

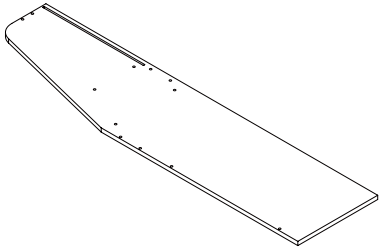


⑯ × 1

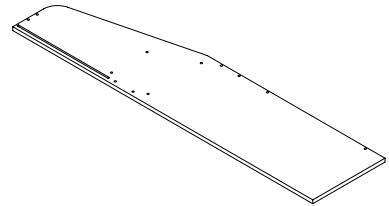


⑰ × 1

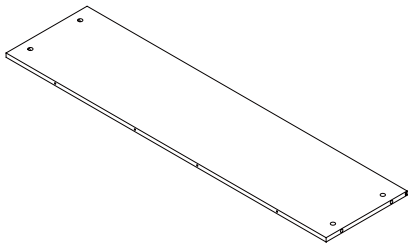







⑱ × 1

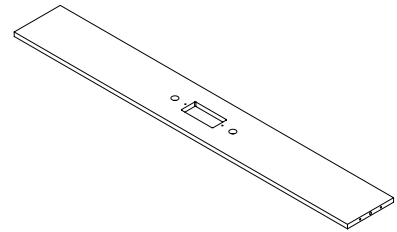







⑲ × 1

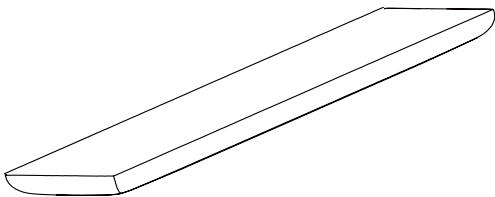

Assembly Instruction

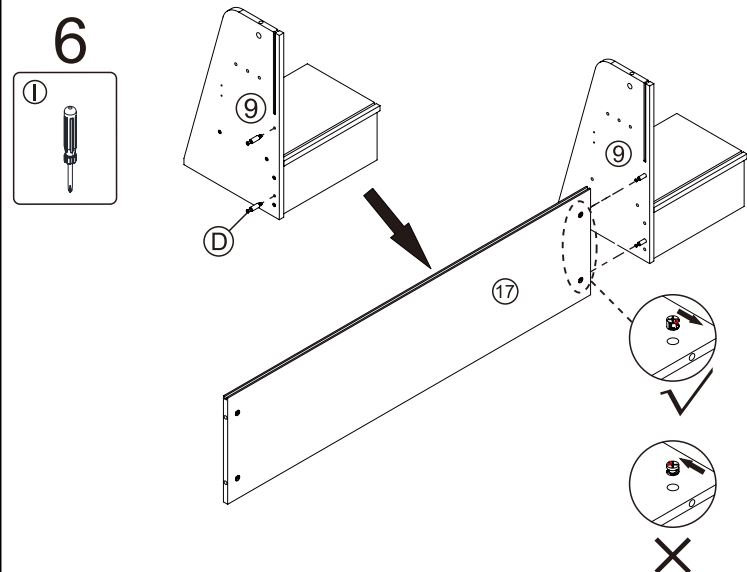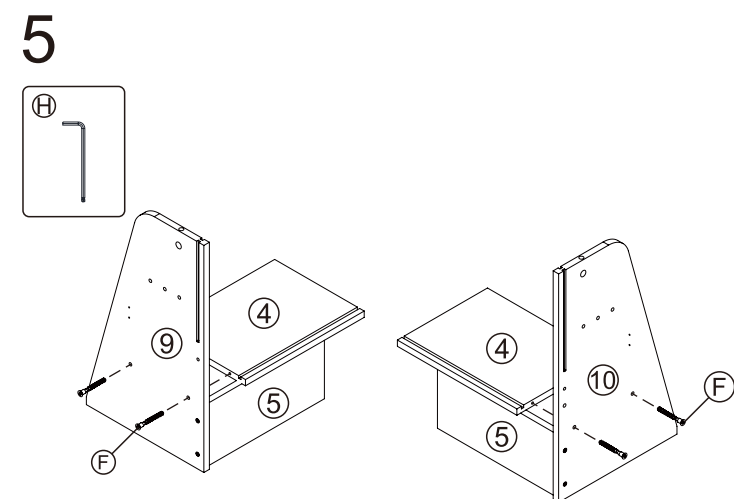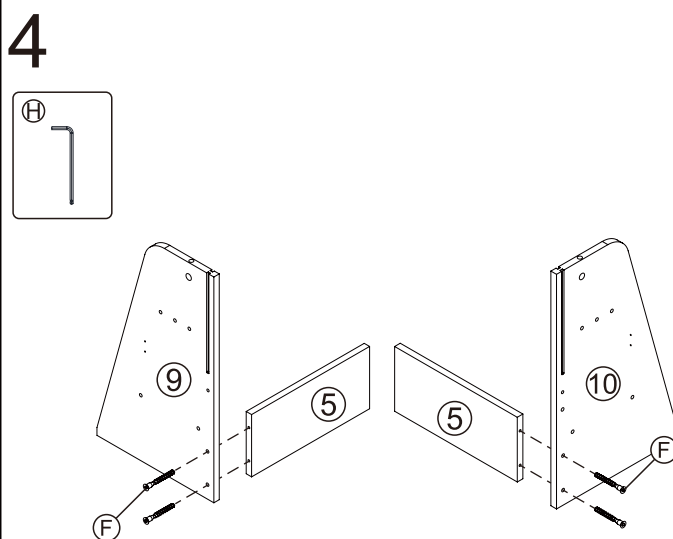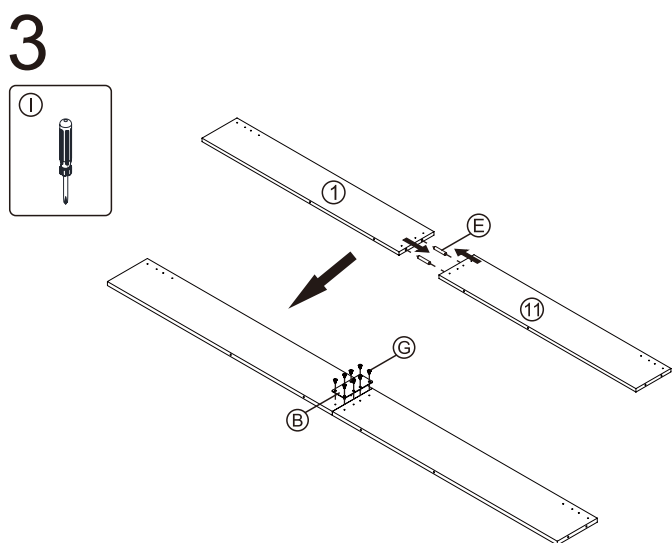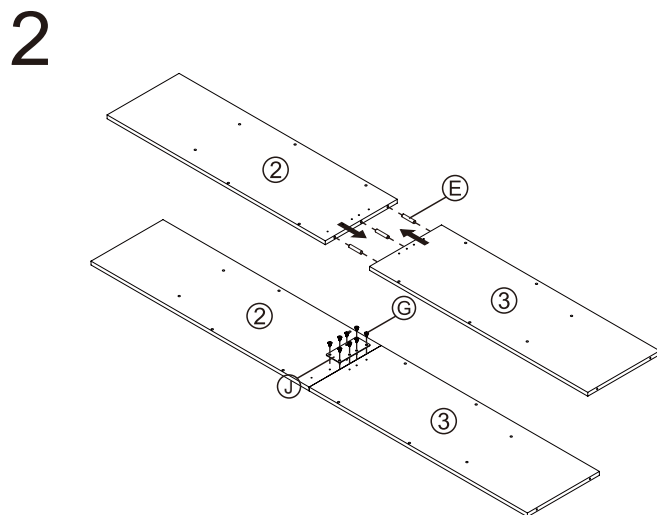
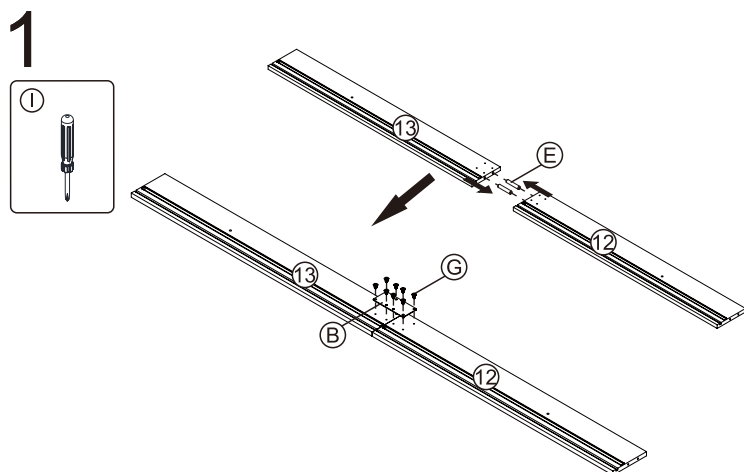


Assembly Instruction

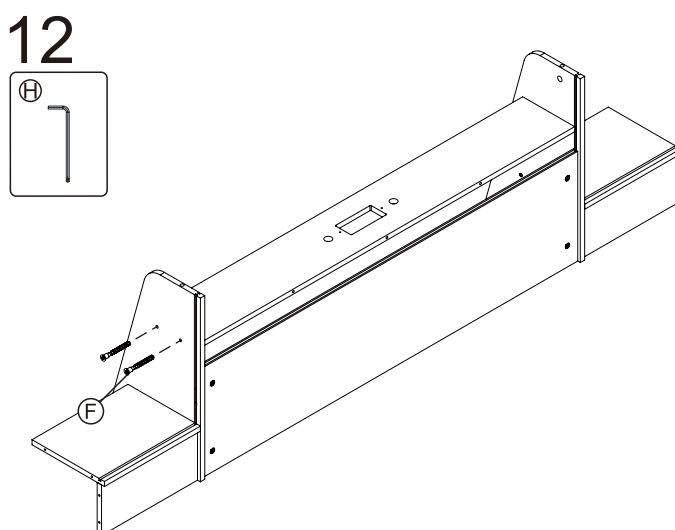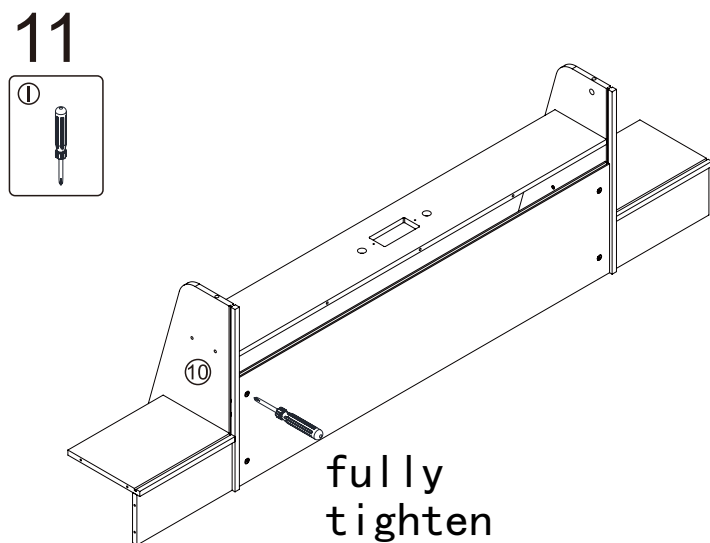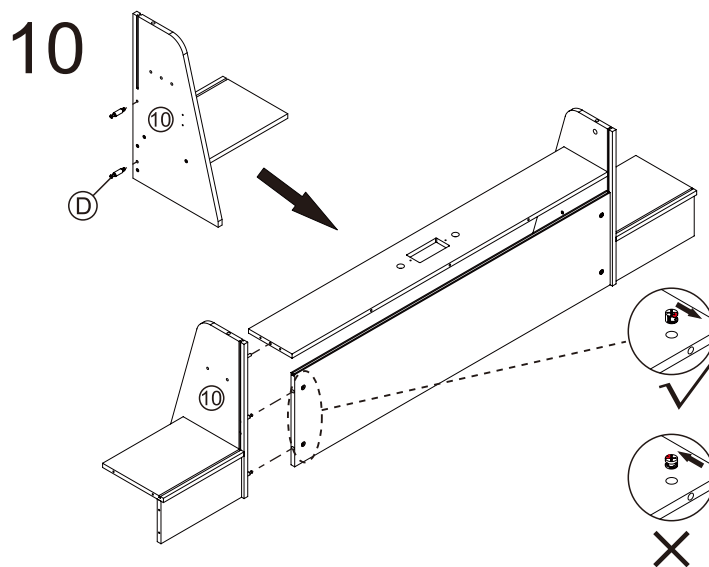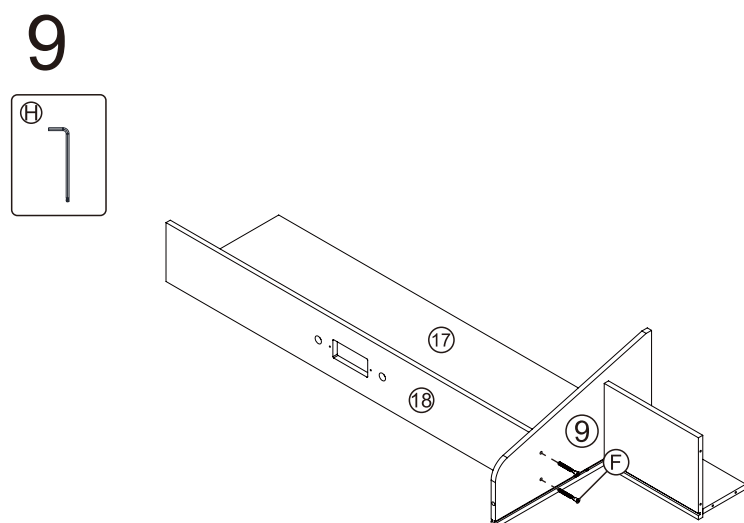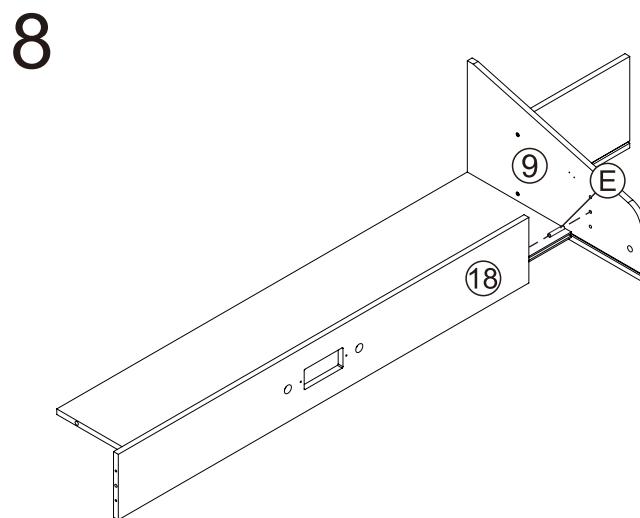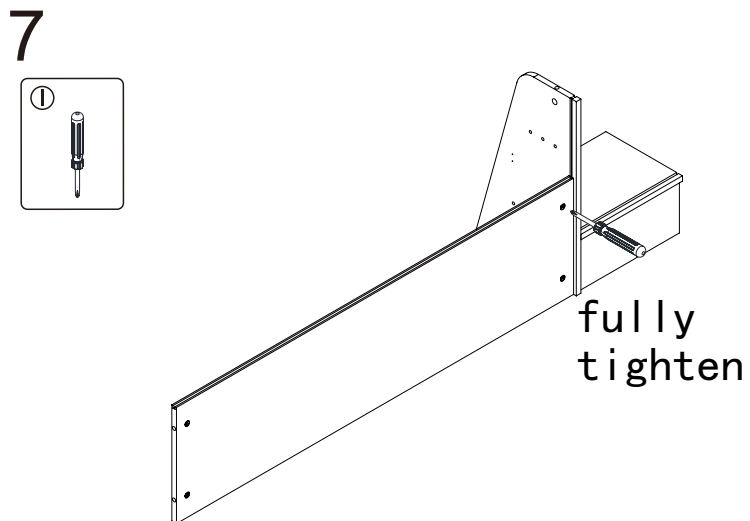


Assembly Instruction



13

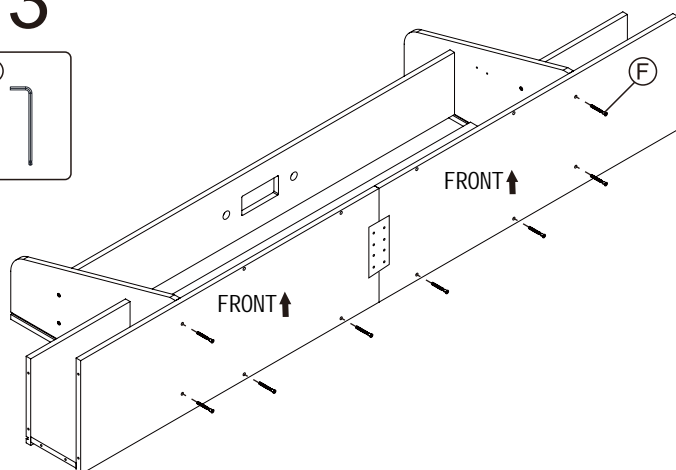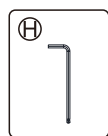



14

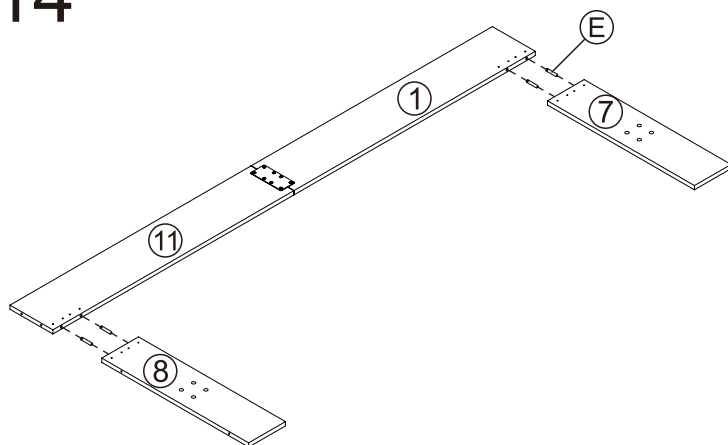


15

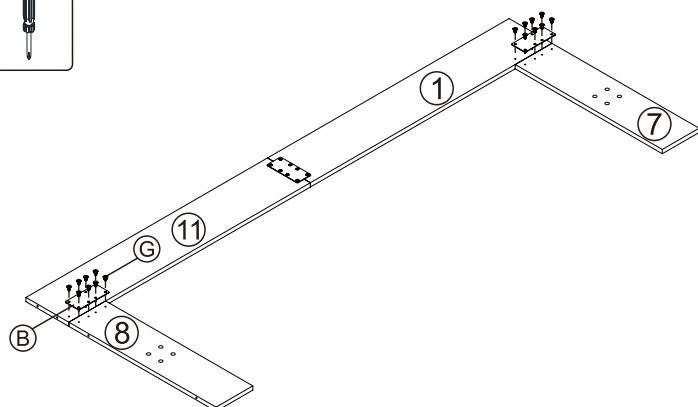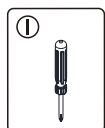


16

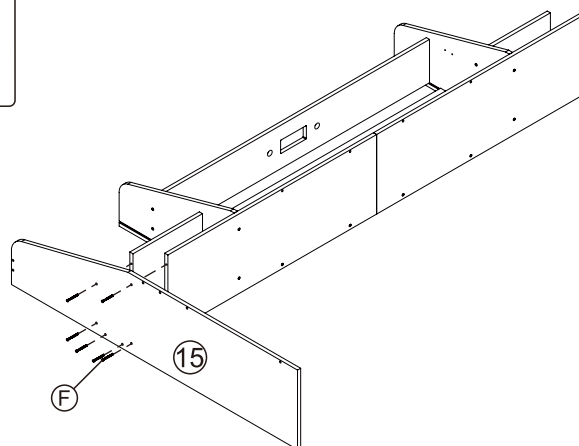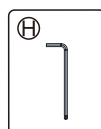

17

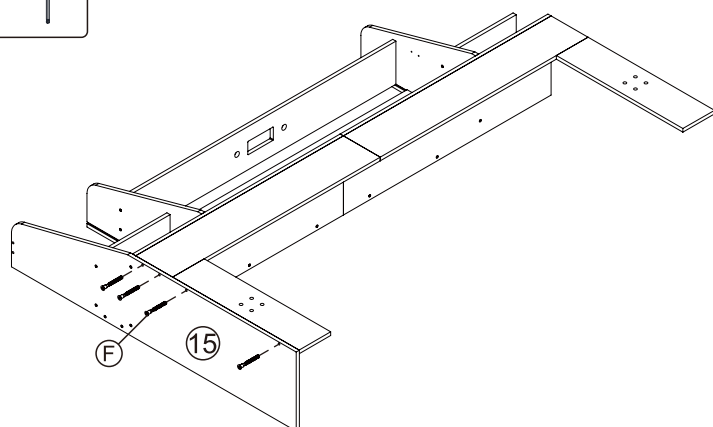


18

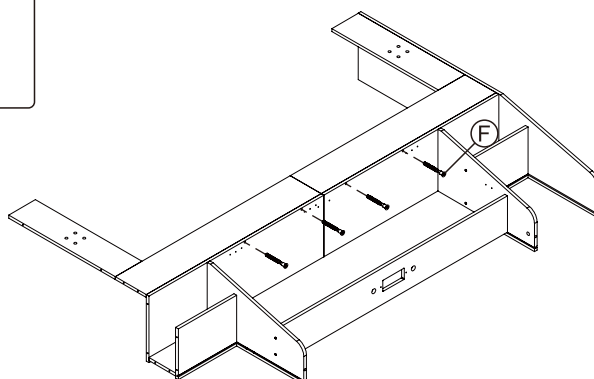


Assembly Instruction


19

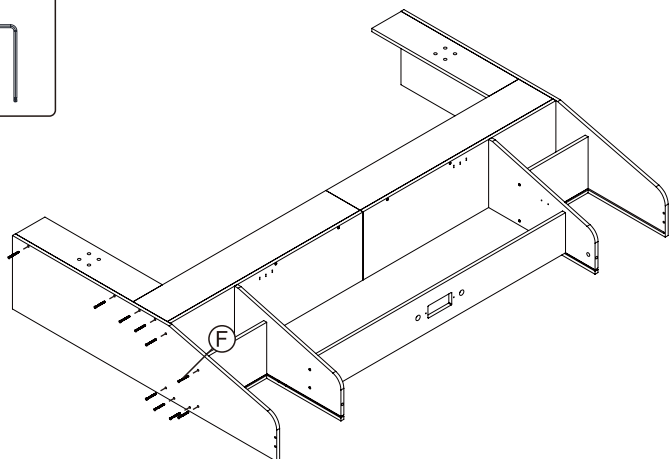


20

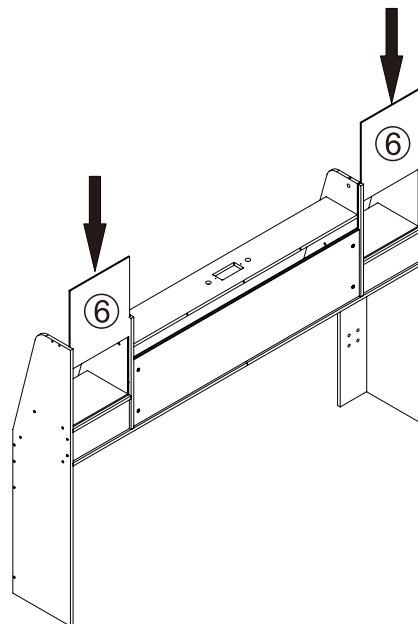


21

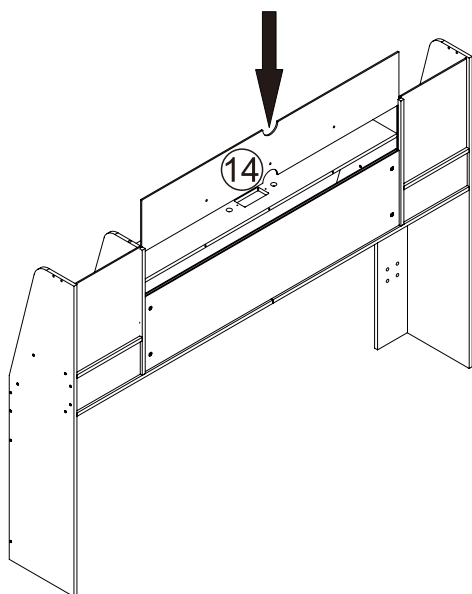


22

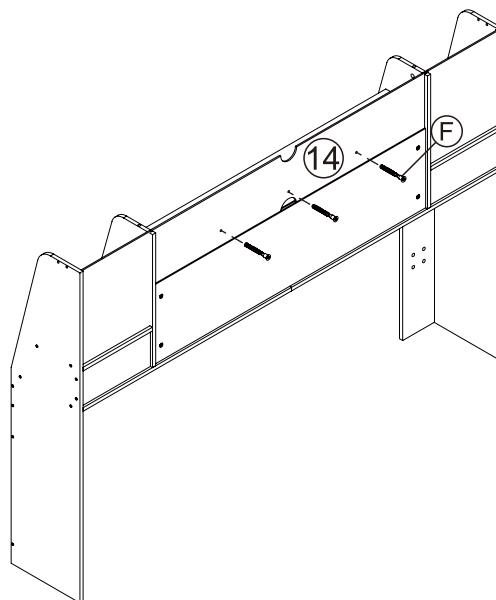

23

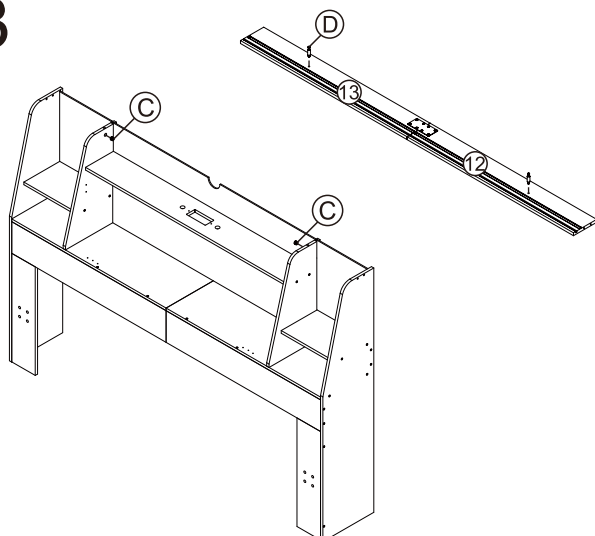


24

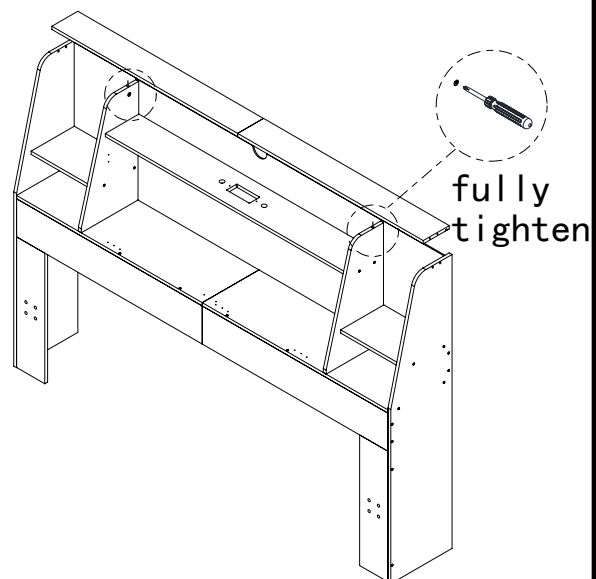


Assembly Instruction

25

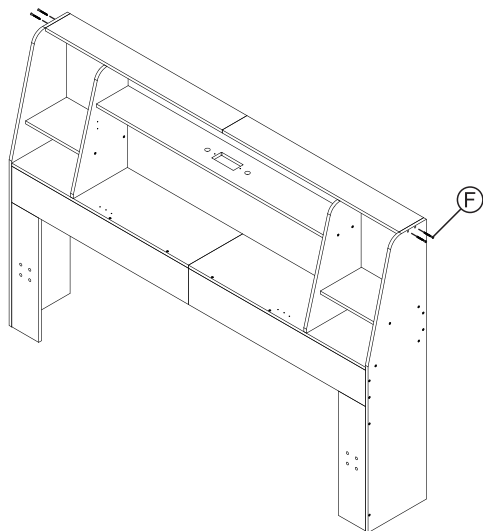


26

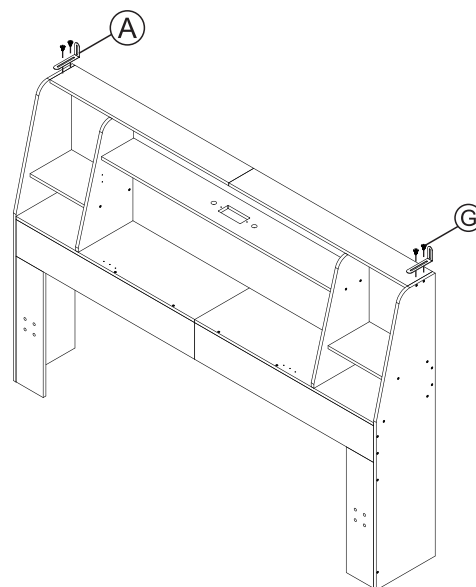


27

Install the plastic corner code between the back plate and the top plate.

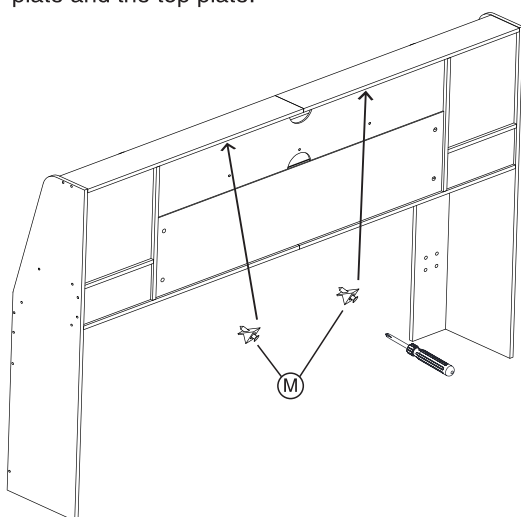


28

Install hinges on plates 9 and 10

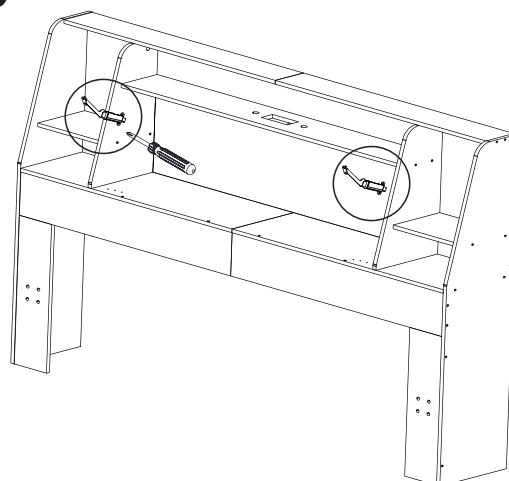


29

Install hinges on board 19.

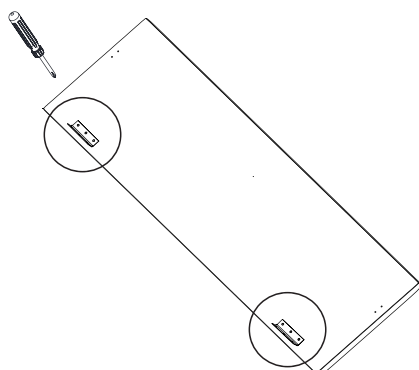


30

Connect part 19 to the cabinet,

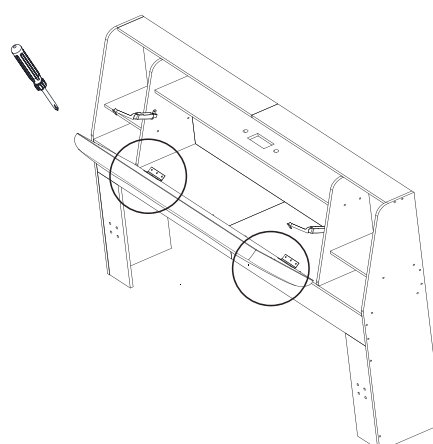

Assembly Instruction

31 Attach the hinges on board 9 and 10 to board 19.

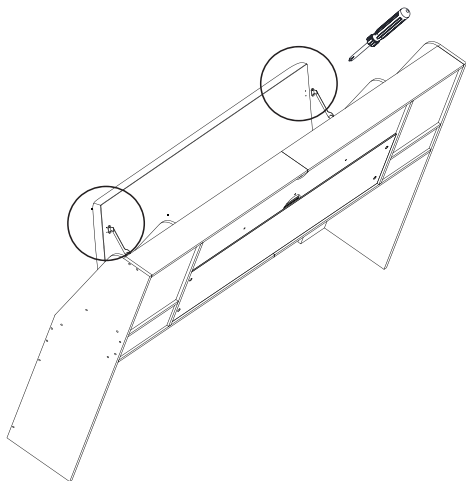

32

Connect the touch dimmer buttons (K-1) to the power cord (K-2). Organize the cables using the tie cables (M) to neatly arrange them. First remove the backing of the tie cables, then push hard to place the cable tie where desired.

