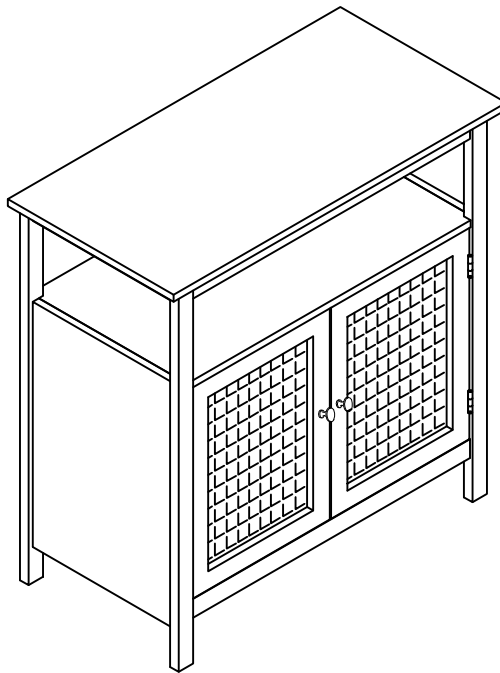


ASSEMBLY INSTRUCTIONS

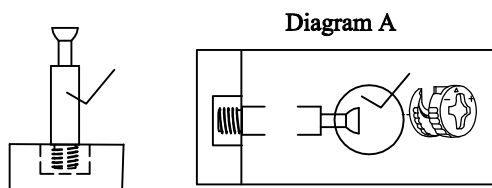
TV Stand




NOTE TO CUSTOMERS:

- For ease and speed of assembly we recommend that before you commence each step of the assembly that you identify all the parts required to complete that step.
- We recommend that where possible you allow sufficient space to assemble the item as close as possible to the place where it will be once assembled.
- For the protection of your furniture we recommend that the product is placed on protected surfaces during assembly to prevent any damage.
- During assembly do not over tighten, as this may damage the product.
- Please ensure you retain all the product packaging until the item completely assembled.
- Please periodically check all fittings and re-tighten as necessary.
- Never allow any liquids to remain on your furniture as absorption can cause the wood to warp or the finish to de-laminate.
- It is recommended that this item should be assembled by two adults.


To insert a cam lock: (Please read below instructions before assembling)



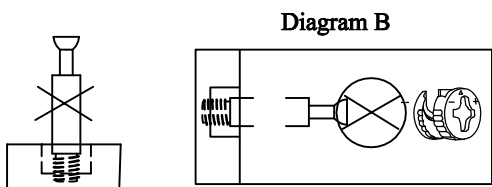
1. Insert cam screw into hole as shown in diagram A .



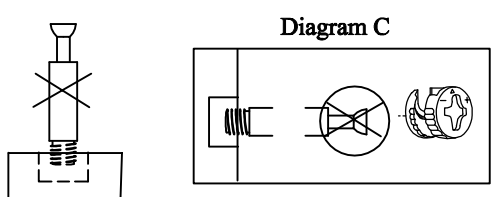
Make sure not to insert the cam screw:
Too deep as shown in figure B as this will cause the
cam screw to be misaligned and unable to
interlock properly.



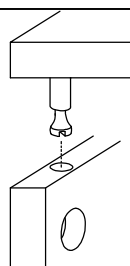
Also avoid inserting the cam screw too close to the
surface of the hole as shown in figure C, as this will
cause the cam lock to be too loose, and not interlock
properly.



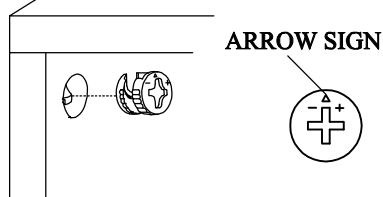2. Connect the panels together.



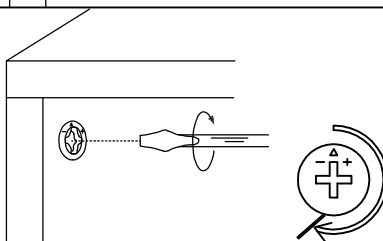3. When inserting the cam lock make sure the arrow
of the cam lock faces the cam screw.












4. To tighten the cam lock turn the cam lock clockwise
90-180 degree or until the arrow is facing opposite
the place cam lock was inserted.

**NOTE: DO NOT USE AN AUTOMATIC
SCREWDRIVER TO TIGHTEN CAM LOCKS.**



Note:

- Read these instructions carefully before assembling.
- Tools required : Phillips screwdriver, flat screwdriver.
- Find a clean, smooth area on which to work , such as a carpet, in order to avoid scratching the wood surfaces.
- Wait to dispose of the packing material until assembly is complete and all parts and hardware are accounted for.
- Two or more people might be required for assembly.

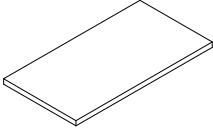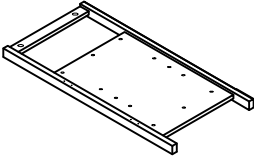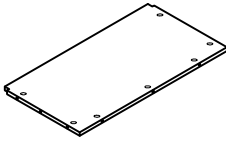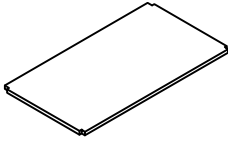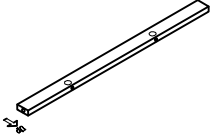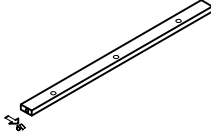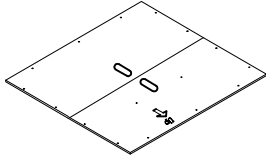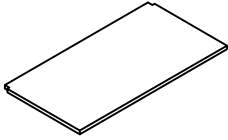Part List


A1 Quantity of 1  Top Panel	A2 Quantity of 2  Side Panel(L&R)	A3 Quantity of 1  Bottom Panel	A4 Quantity of 1  Shelf
A5 Quantity of 1  Cross Bar	A6 Quantity of 2  Door(L&R)	A7 Quantity of 1  Apron	A8 Quantity of 1  Back Panel
A9 Quantity of 1  Adjustable Shelf			

Hardware List

B1 Quantity of 8  Wood Dowel	B2 Quantity of 17  Cam-Lock	B3 Quantity of 1  Magnet	B4 Quantity of 4  Hinge with Screw
B5 Quantity of 20  Screw	B6 Quantity of 2  Door Knob with Bolt	B7 Quantity of 4  Shelf Support	

STEP 1

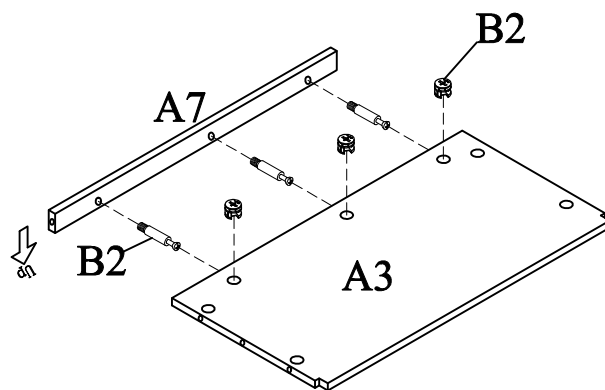
B2  3sets



Assemble Apron A7 to Bottom Panel A3 using Camlocks B2.


STEP 2


B1		6pcs
B2		8sets
B3		1pc
B5		2pcs

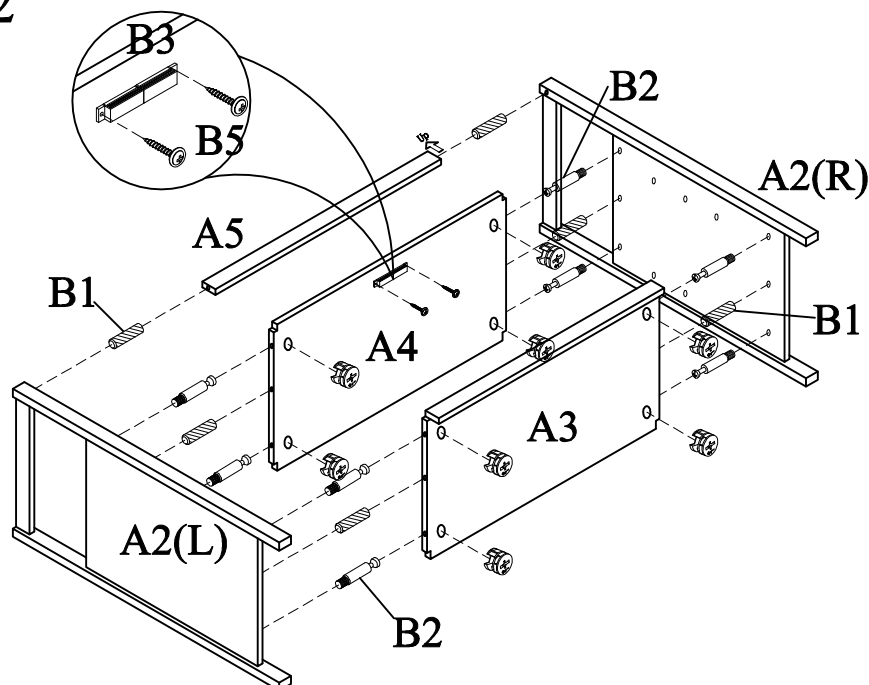

- 1). Attach Magnet B3 to Shelf A4 using Screws B5.
- 2). Assemble Side Panels A2(L&R) to Bottom Panel A3, Shelf A4 and Cross Bar A5 using Wood Dowels B1 and Camlocks B2. Note: Holes are pre-drilled for Screws B5.

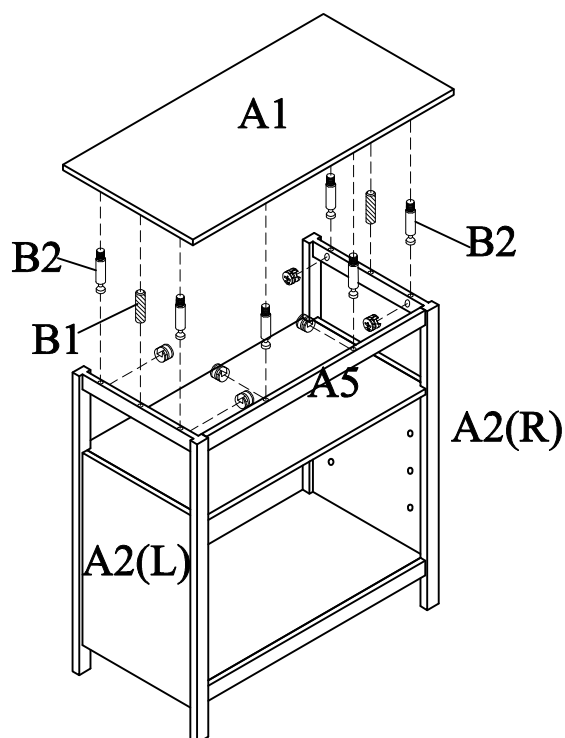
STEP 3



B1		2pcs
B2		6sets

Assemble Top Panel A1 to Side Panels A2(L&R) and Cross Bar A5 using Wood Dowels B1 and Camlocks B2.

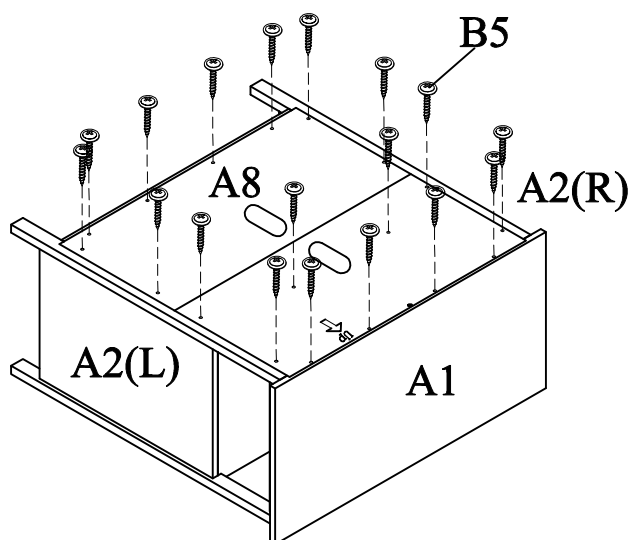
STEP 4




B5		18pcs
----	---	-------

Attach Back Panel A8 to the back of this unit using Screws B5.

STEP 5


B4  4sets

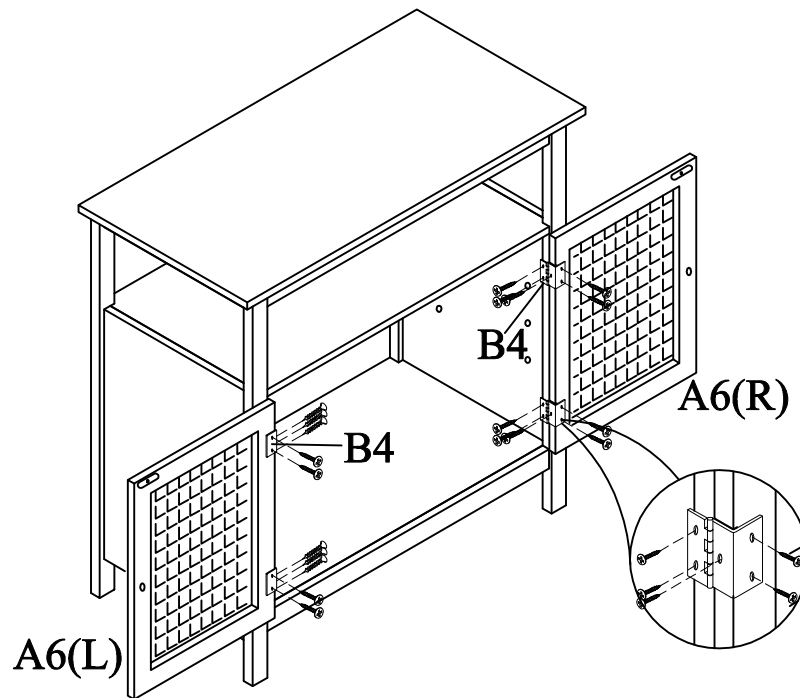

Assemble Doors A6(L&R) to Side Panels A2(L&R) using Hinge with Screws B4.
Note: Holes are pre-drilled for Screws B4.

STEP 6





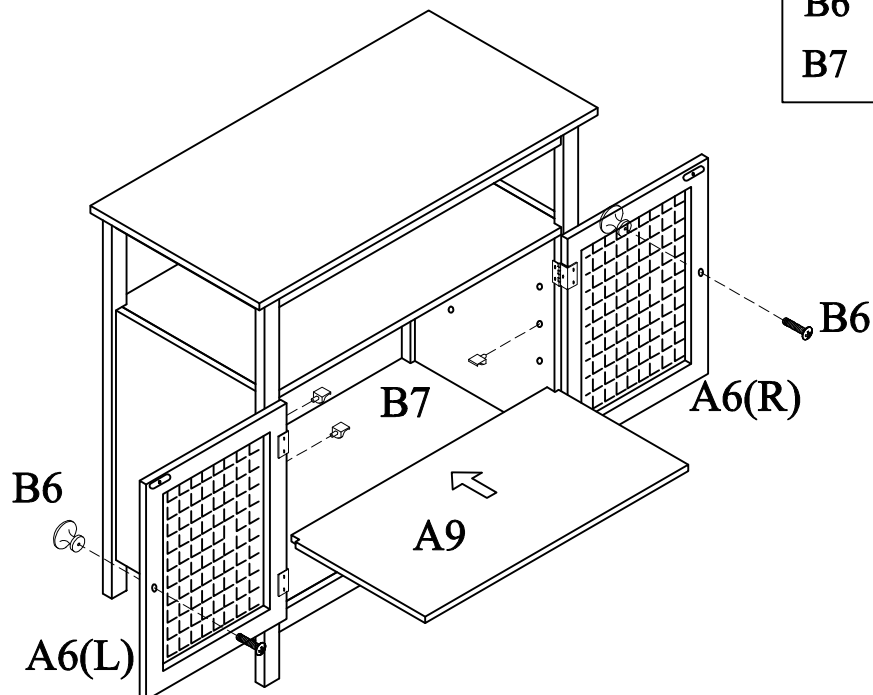
B6  2sets
B7  4pcs



Insert Shelf Supports B7 into the holes of Side Panels A2(L&R), then put Adjustable Shelf A9 onto Shelf Supports B7.

Assemble Door Knobs B6 to Doors A6(L&R) using included Bolts.

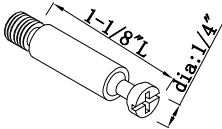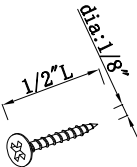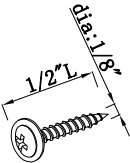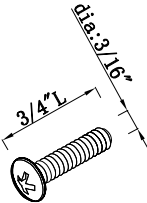APPENDIX: Dimension of Hardwares in this AI.

B1  Wood Dowel	B2  Cam-boltCam-Lock	B4  Screw
B5  Screw	B6  Bolt	