

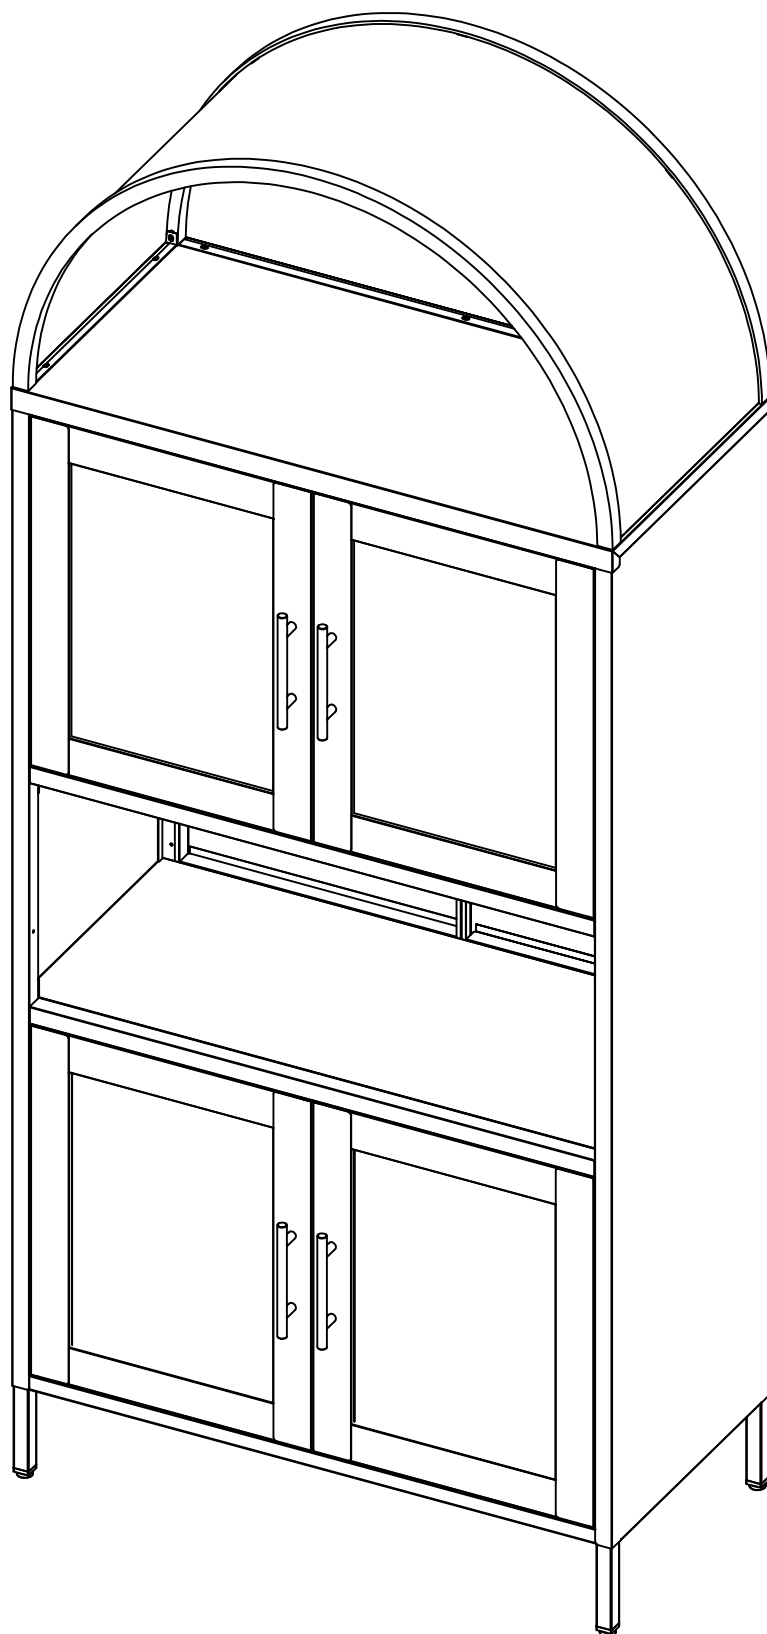
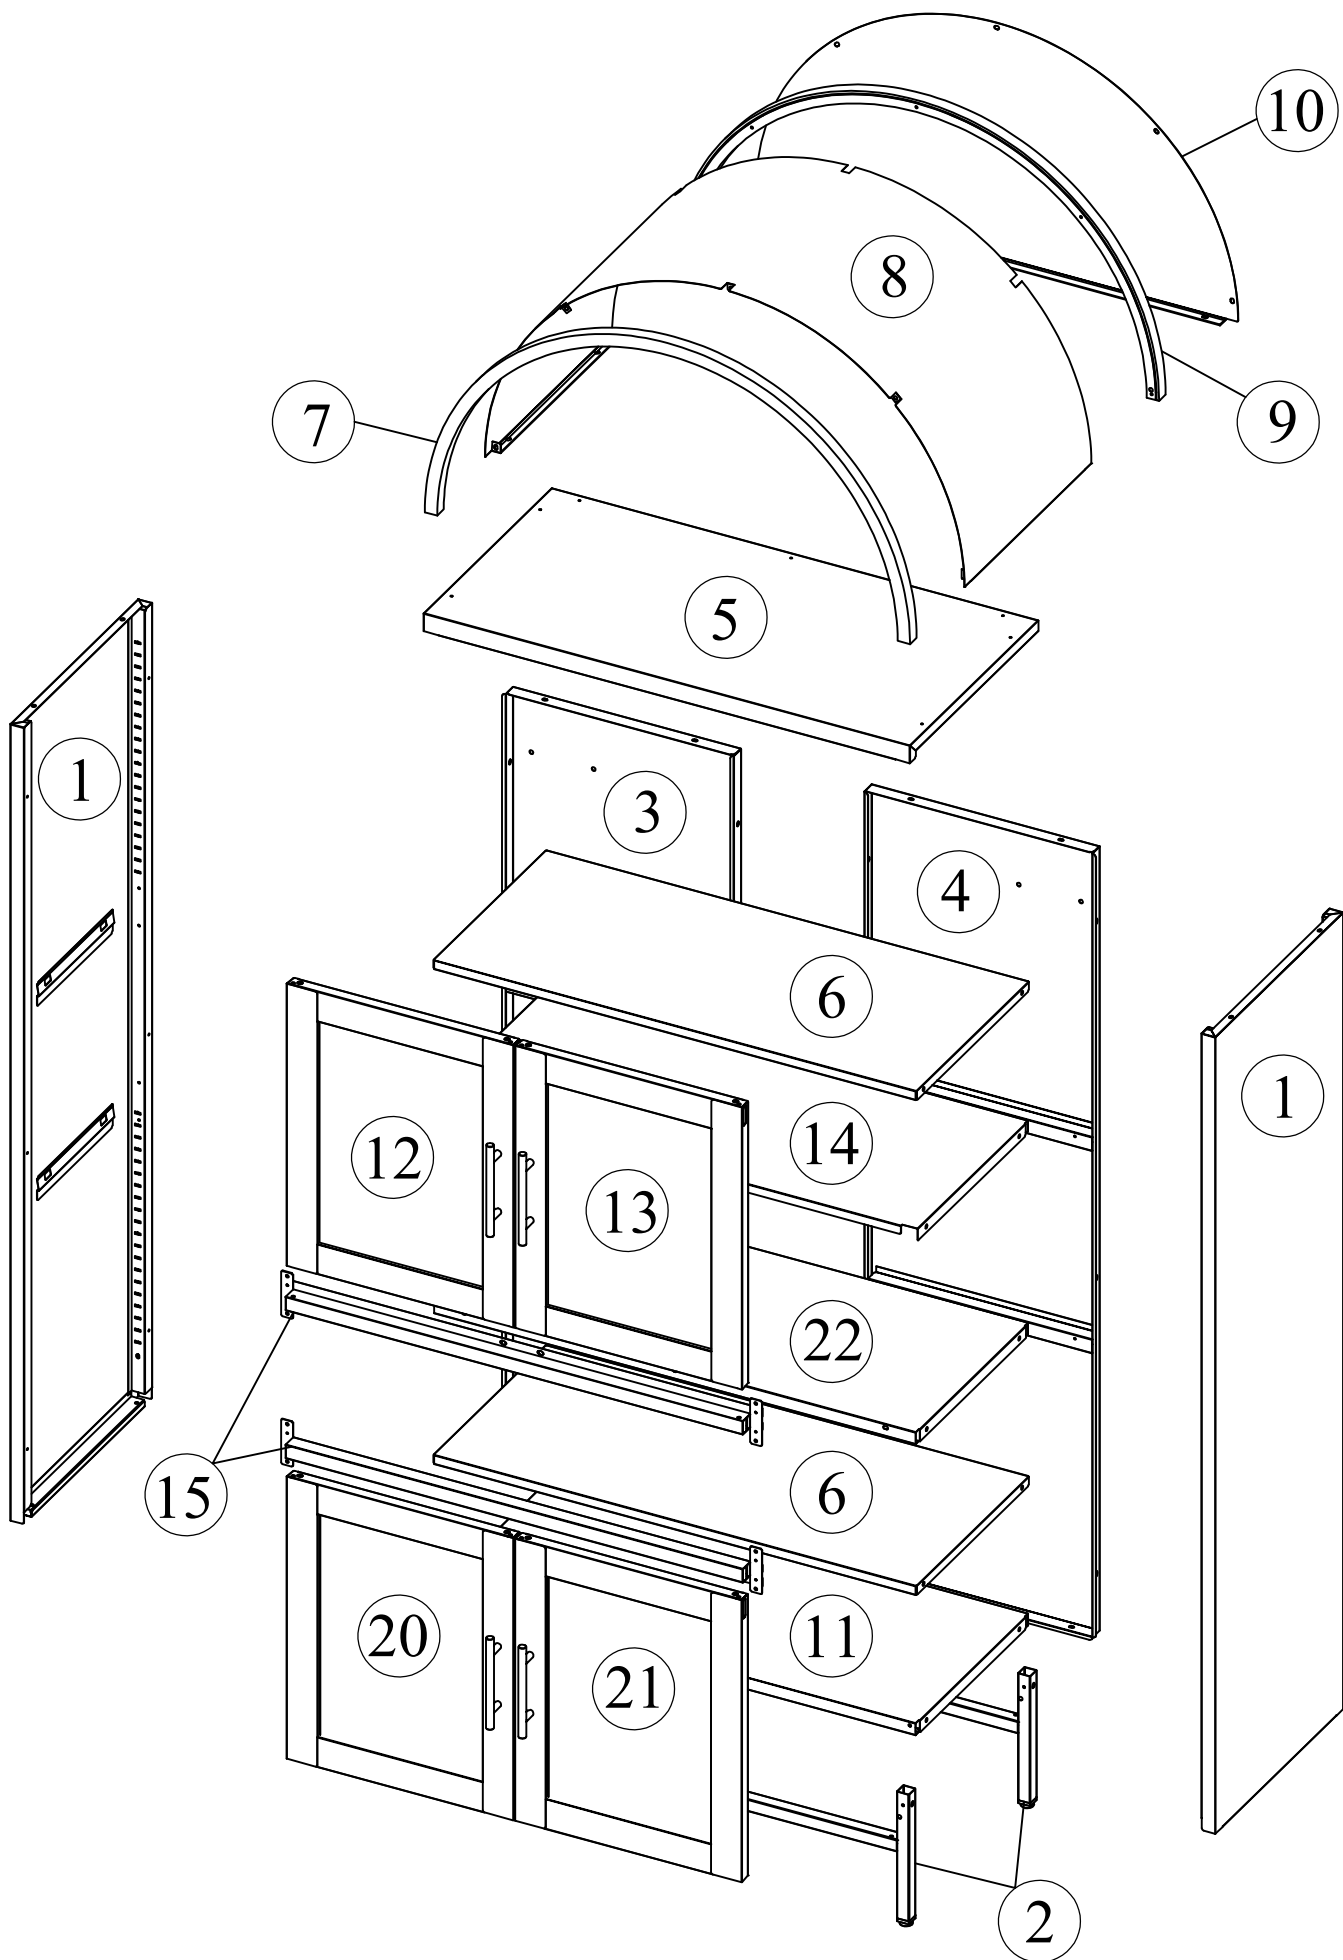

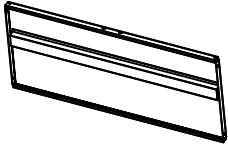
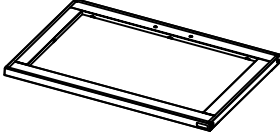

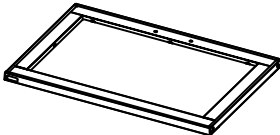



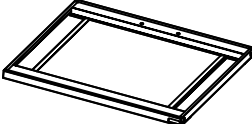




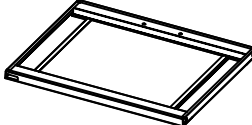




Accessories

Name		Picture	Qty	Name		Picture	Qty
1	Side panel		2	11	Floor		1
2	Kick plate		2	12	Left glass door		1
3	Left back panel		1	13	Right glass door		1
4	Right back panel		1	14	Waist plate		1
5	Top panel		1	15	Waist face		2
6	Shelf		2	20	Left steel door		1
7	Dome front tube		1	21	Right steel door		1
8	Dome panel		1	22	Lower waist plate		1
9	Dome back tube		1				
10	Dome back panel		1				

Accessories

Name		Picture	Qty	Name		Picture	Qty
A	13/32 Screw		61	F	M4*22 screw		8
B	M5 Nut		3	I	Expansion screw		2
C	M5*10 Screw		3	J	Magnet		8
D	Shelf clasp		8	K	Door pivot		4
E	The doorknob		4	L	Shim		8



CAUTION

An assistant is required.


If there is any problem, please feel free to contact our customer service team and we are always here to assist with you!

If there is any slight dent or damage, you can try to fix it by pliers or hammers.

Step 1

Insert side panels 1 into kick plates 2 and fix them with screws A

Ⓐ  × 4

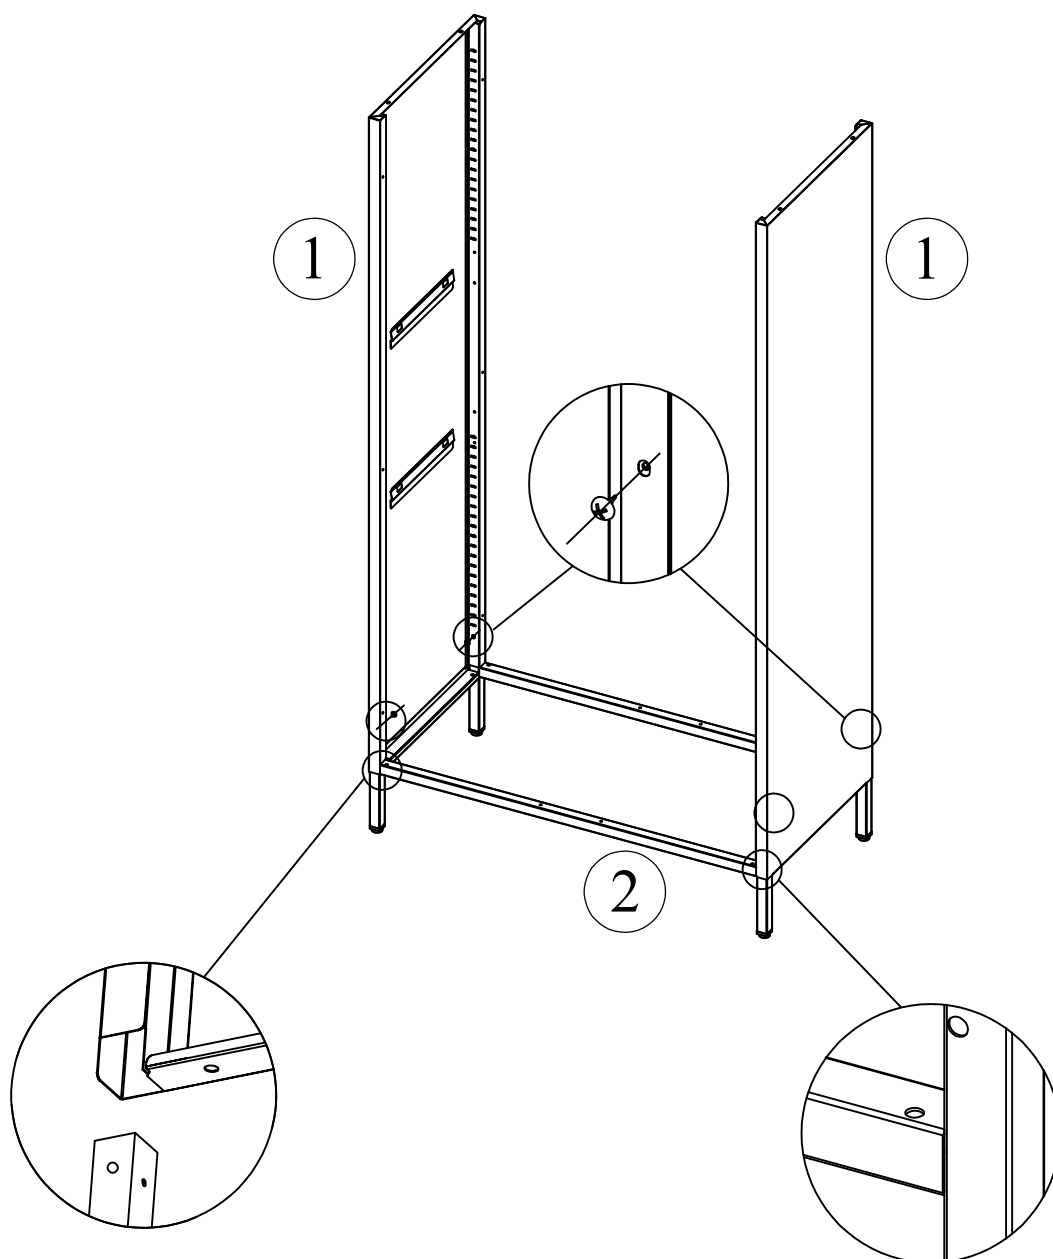


The door shaft hole is in the front

Step 2

Connect left back panel 3 with side panel 1 and kick plate 2 by screws A

(A)  × 4

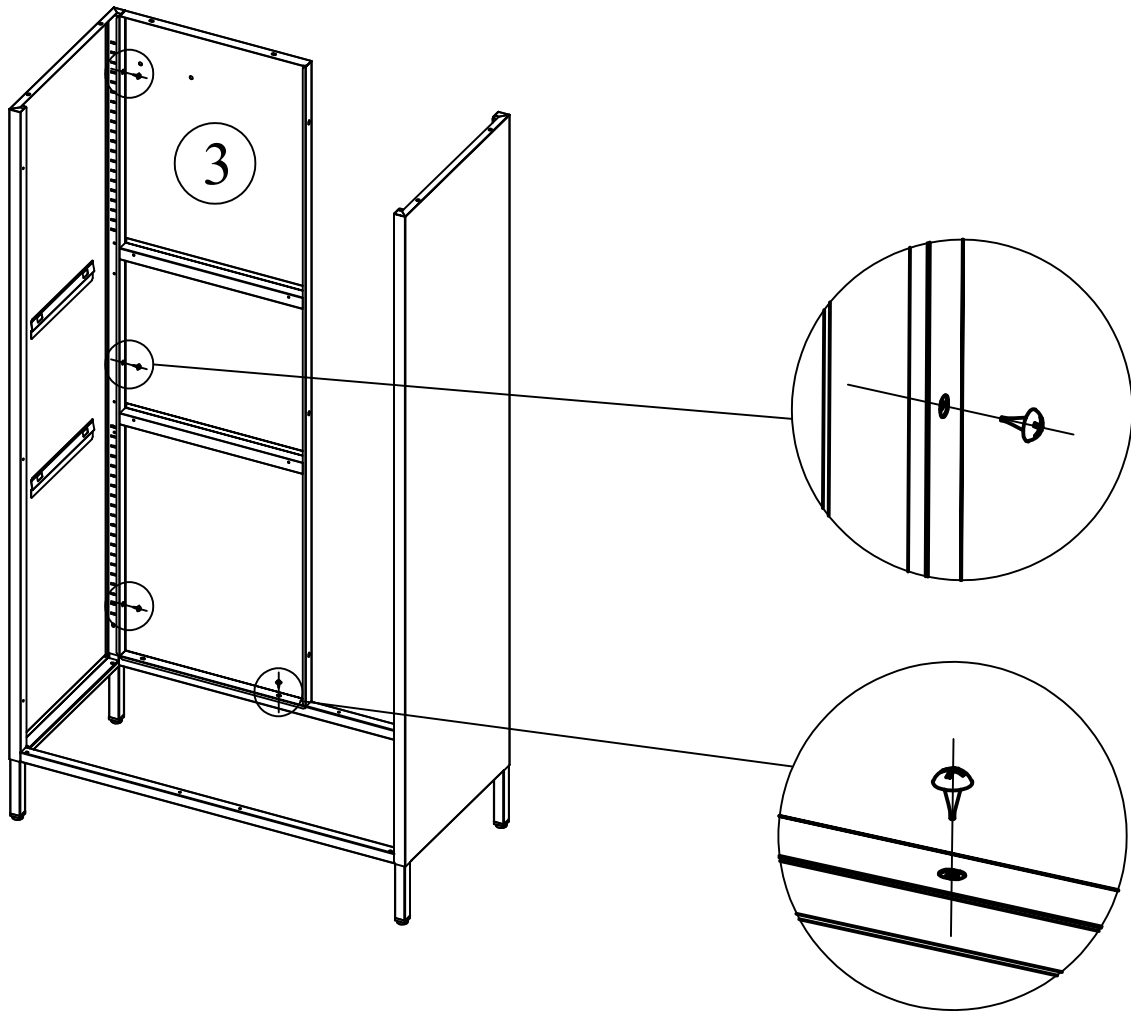


Step 3

Connect right back panel 4 with side panel 1 and kick plate 2 by screws A, then connect two back panels 3 and 4 with nuts B and screws C

(A)  × 4

(B)  × 3








(C)  × 3

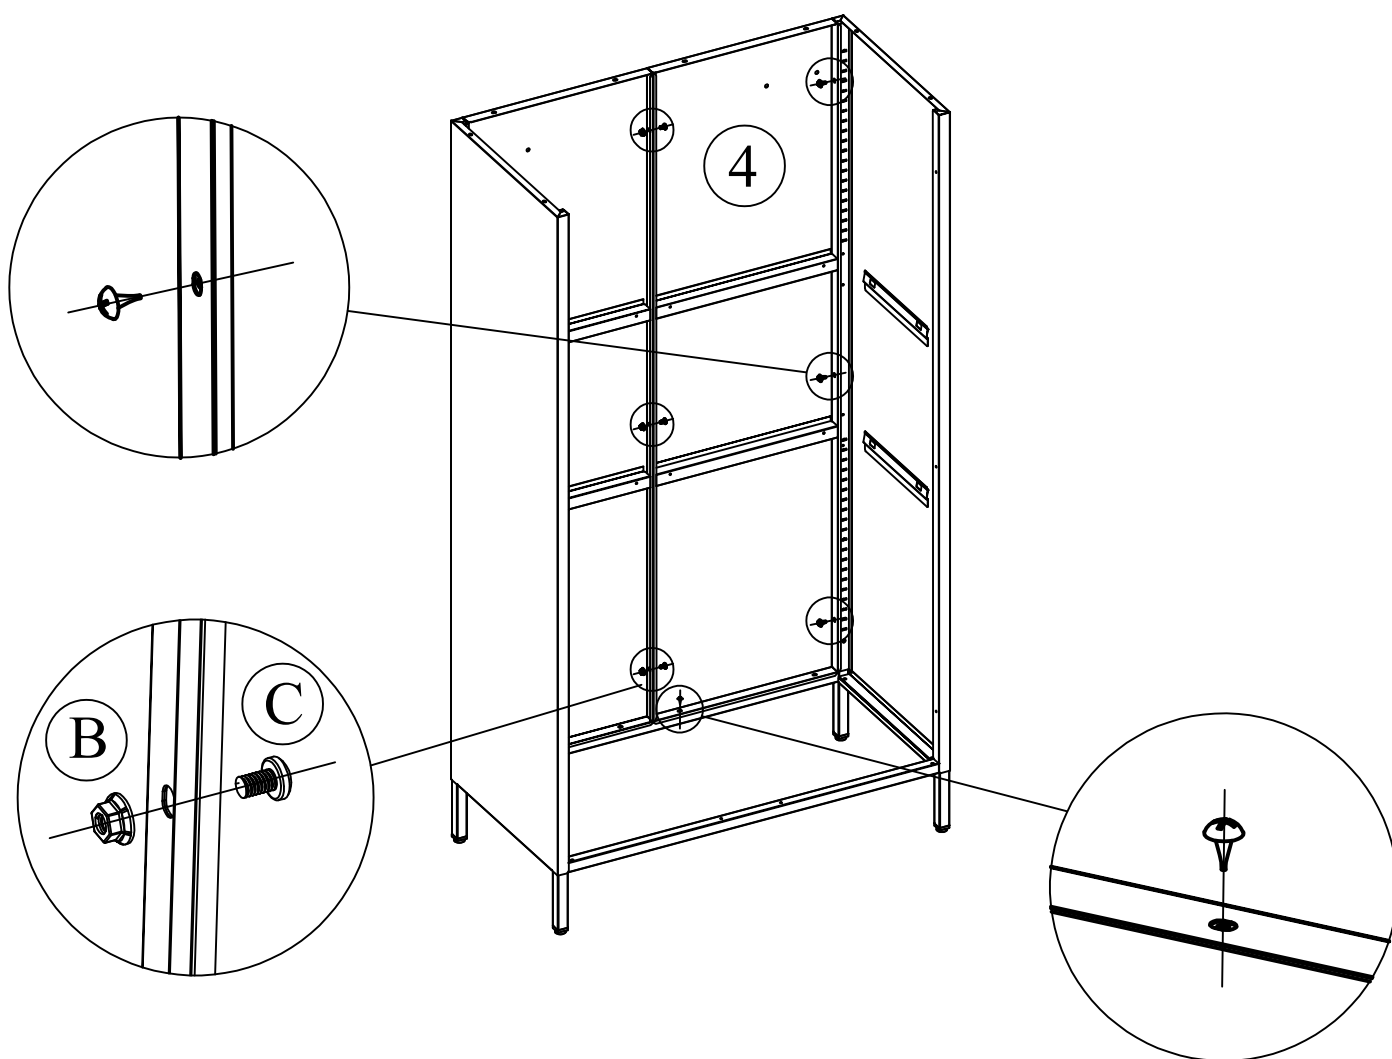

Step 4

Install waist faces 15 on the left side panels with screws A


Ⓐ  × 4

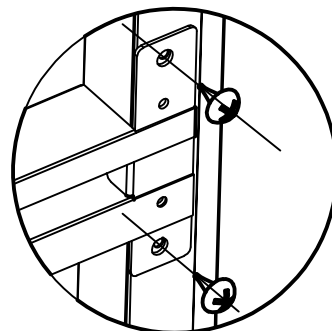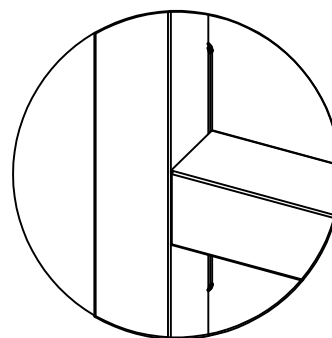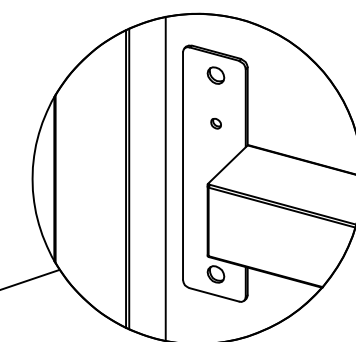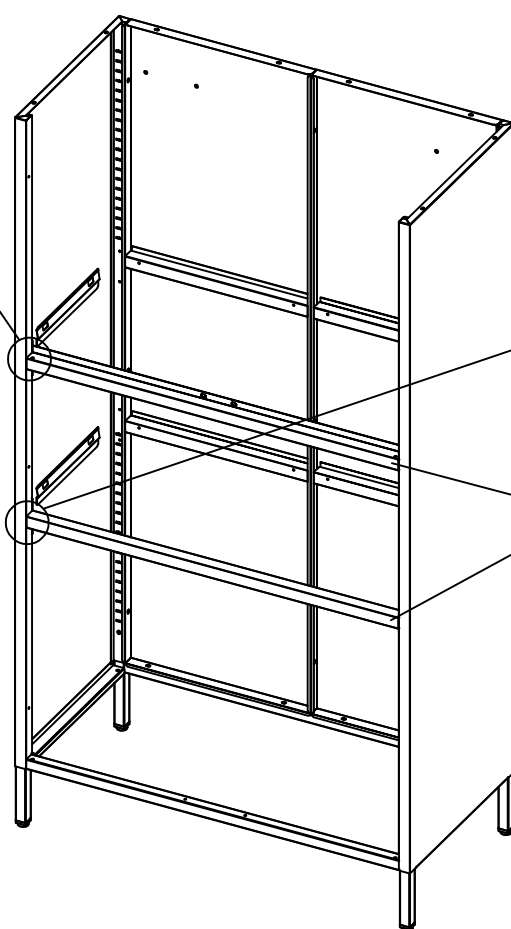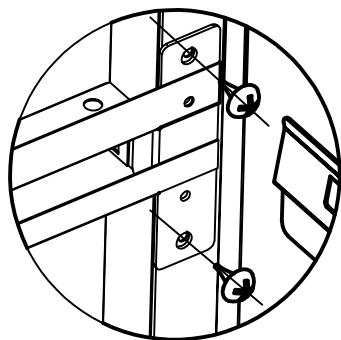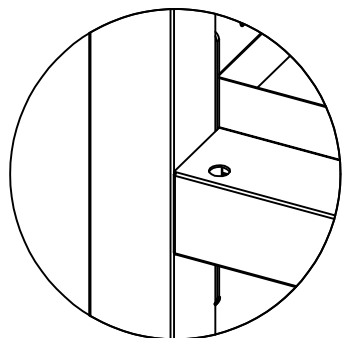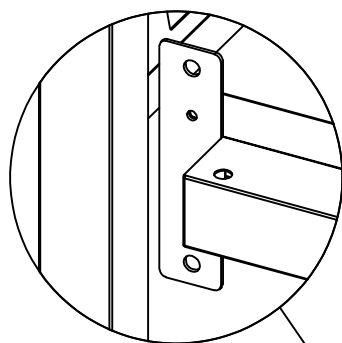

Step 5

Install waist faces 15 on the right side panels with screws A


(A)  × 4

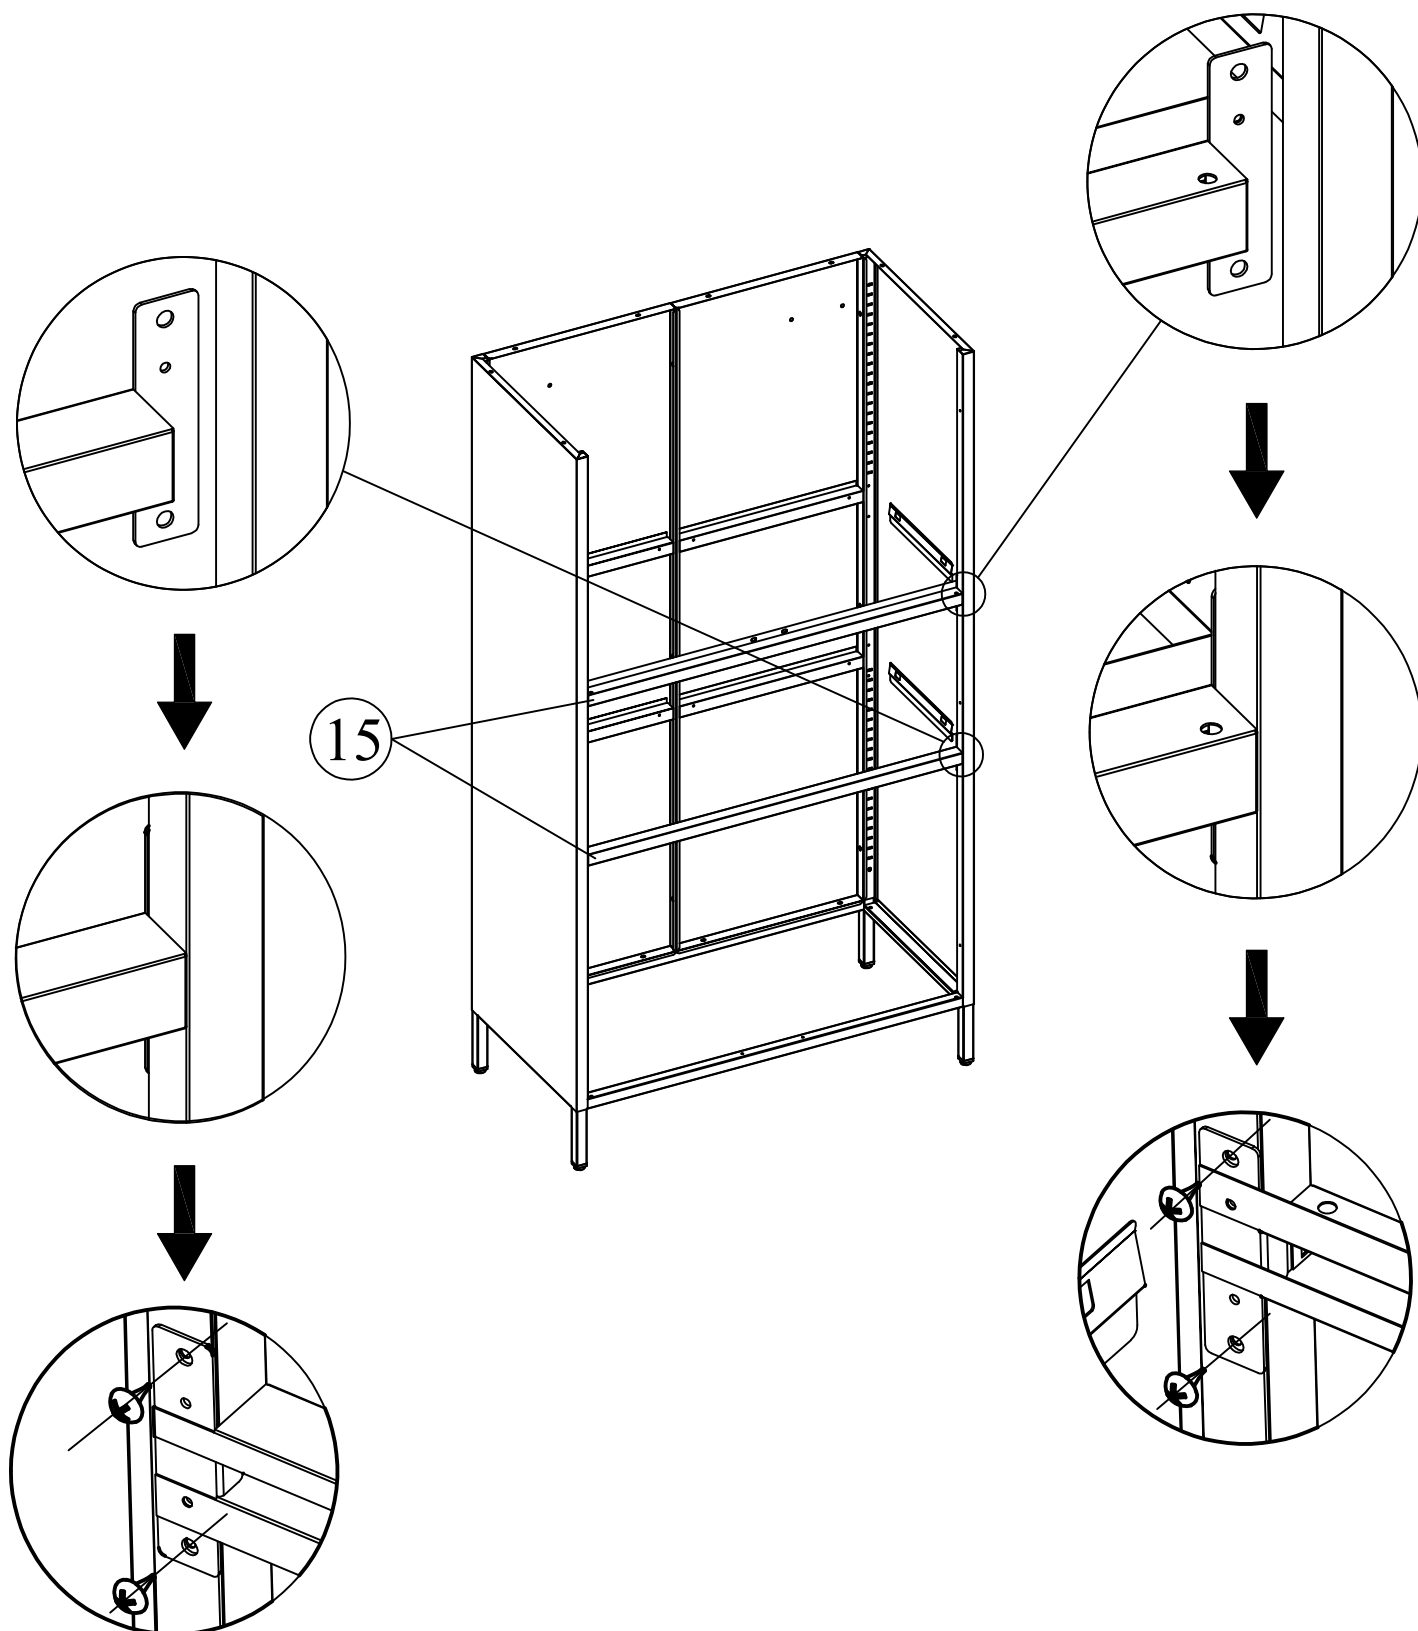

Step 6

Install lower waist panel 22 with screws A


(A)  × 7

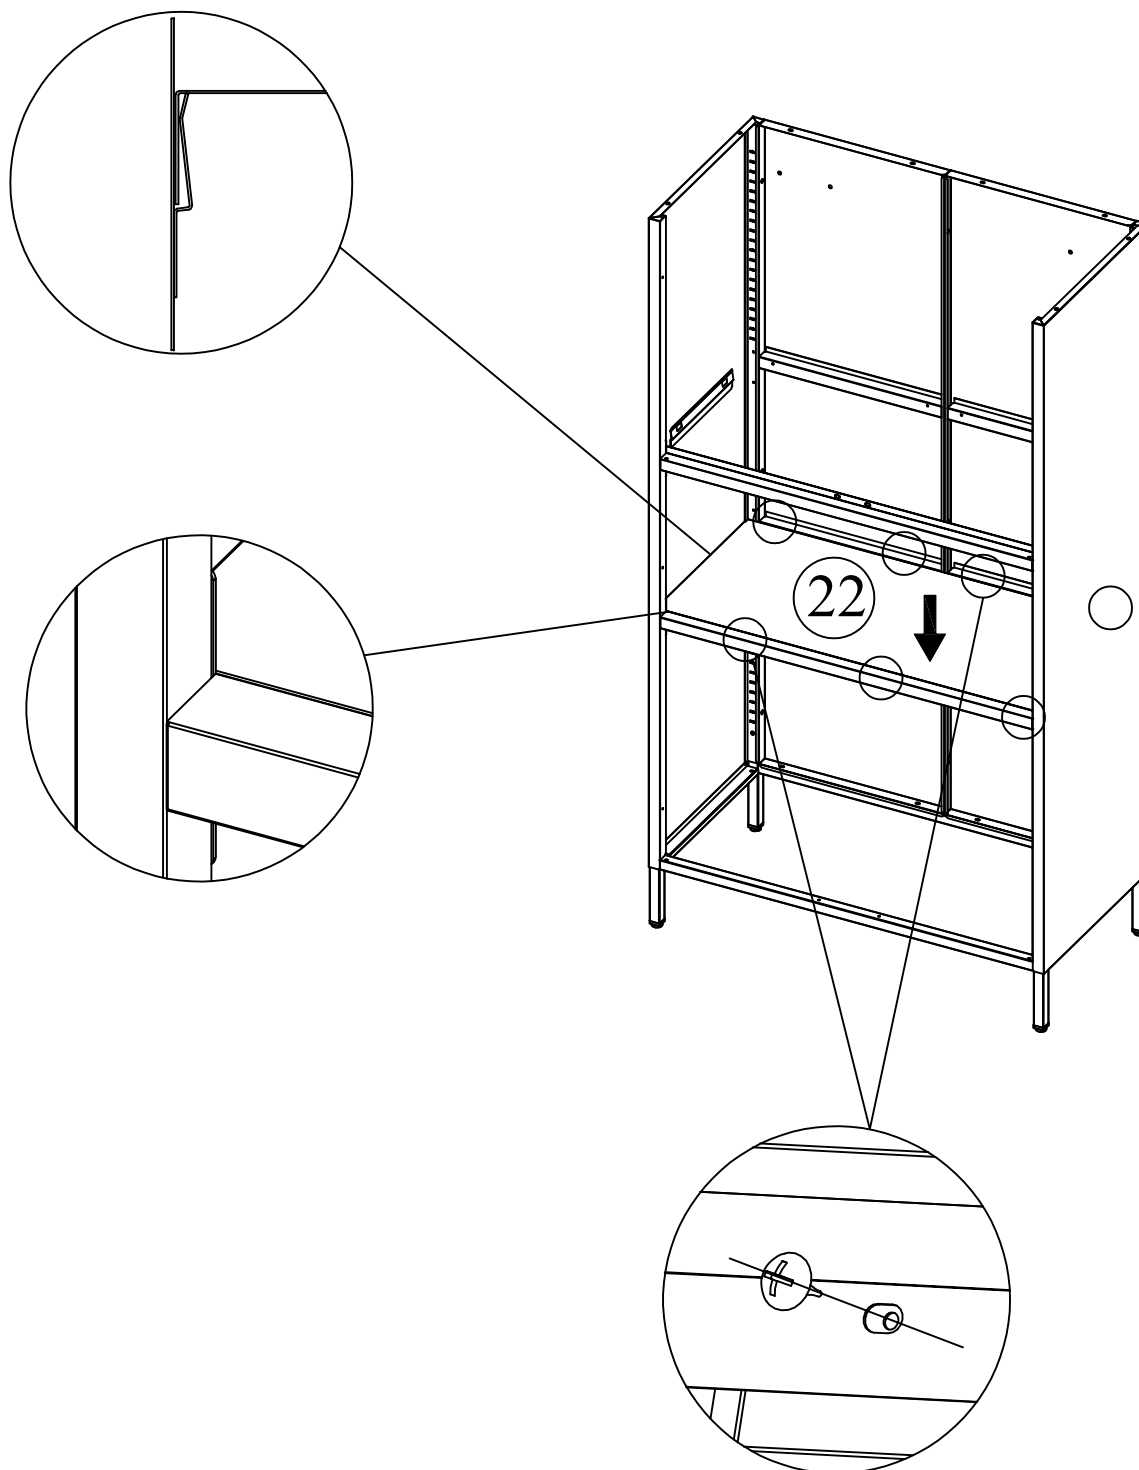

Step 7

Install waist panel 14 with screws A


(A)  × 4

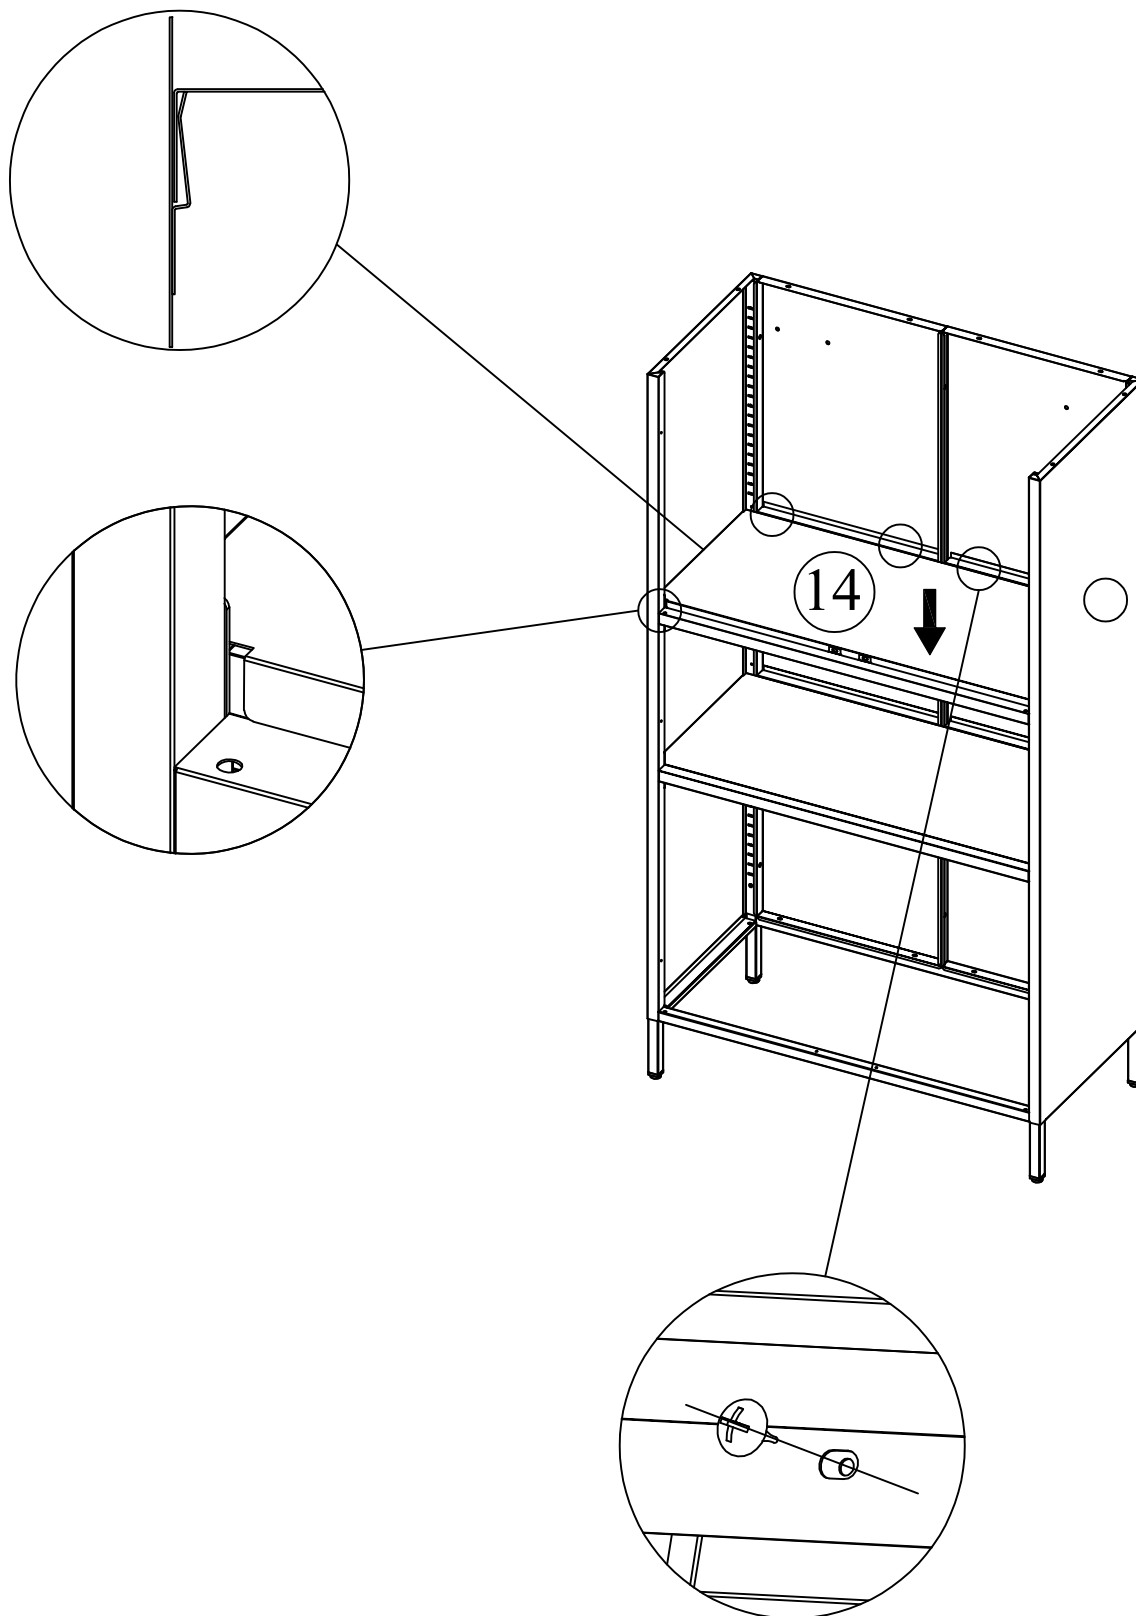

Step 8

Connect top panel 5 with back panels and side panels by screws A

Ⓐ  × 8

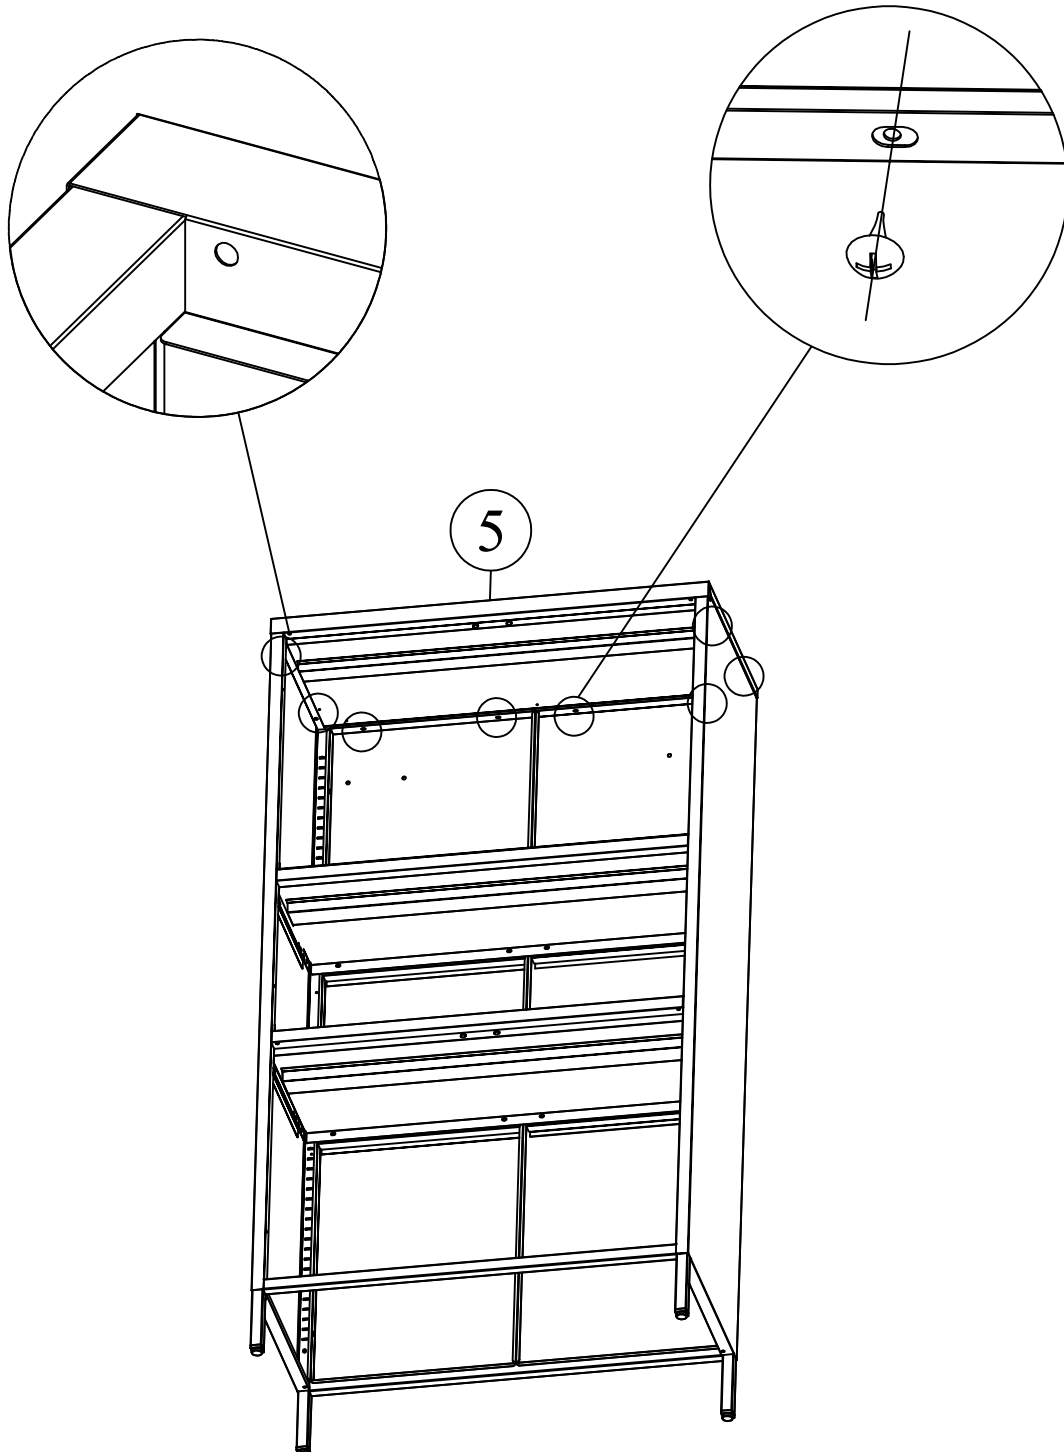


Step 9

Install the shelf clasps D and put the shelves 6 on them

ⓓ  × 8

Install 8 magnets J on the top and bottom as shown below


ⓙ  × 8

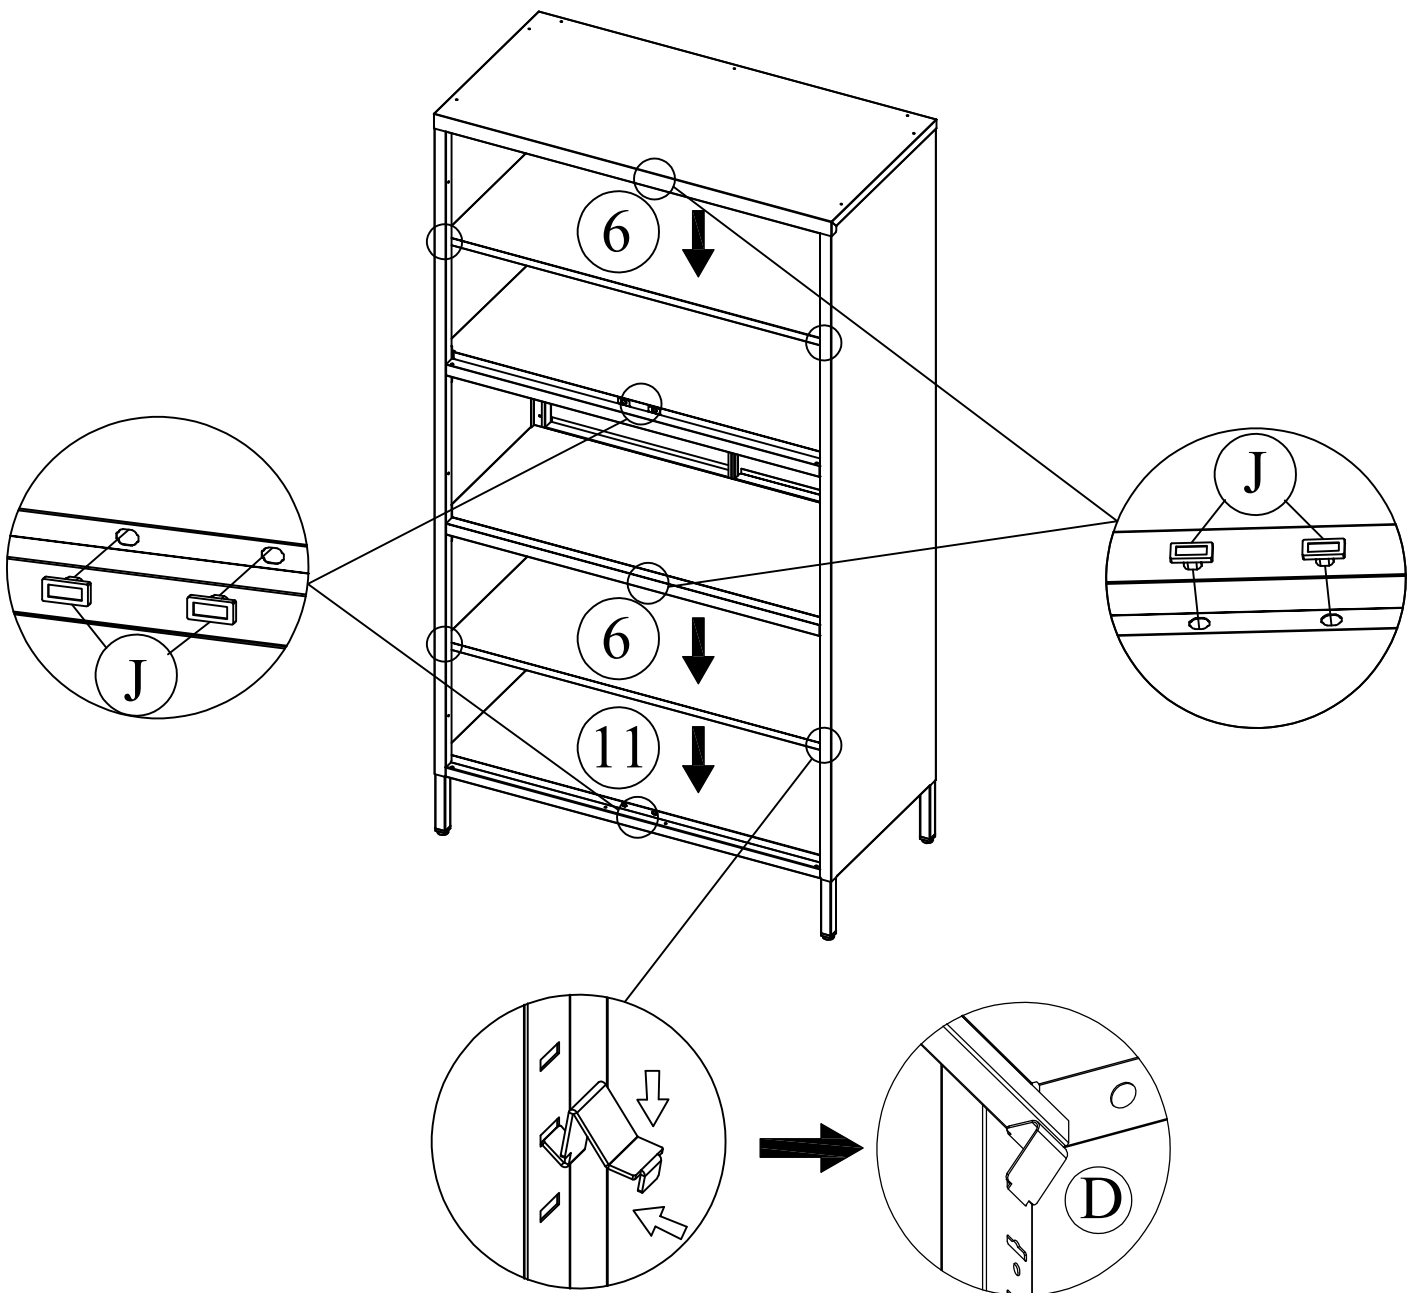


Step 10

Insert the door pivots K into the holes of the both sides of the bottom corner(shims L can be used to adjust), then insert the doors into the door pivots on the bottom and adjust the springs on the top

Install 2 doorknobs E on the doors with screws F


(K)		× 2
(L)		× 4
(F)		× 4
(E)		× 2

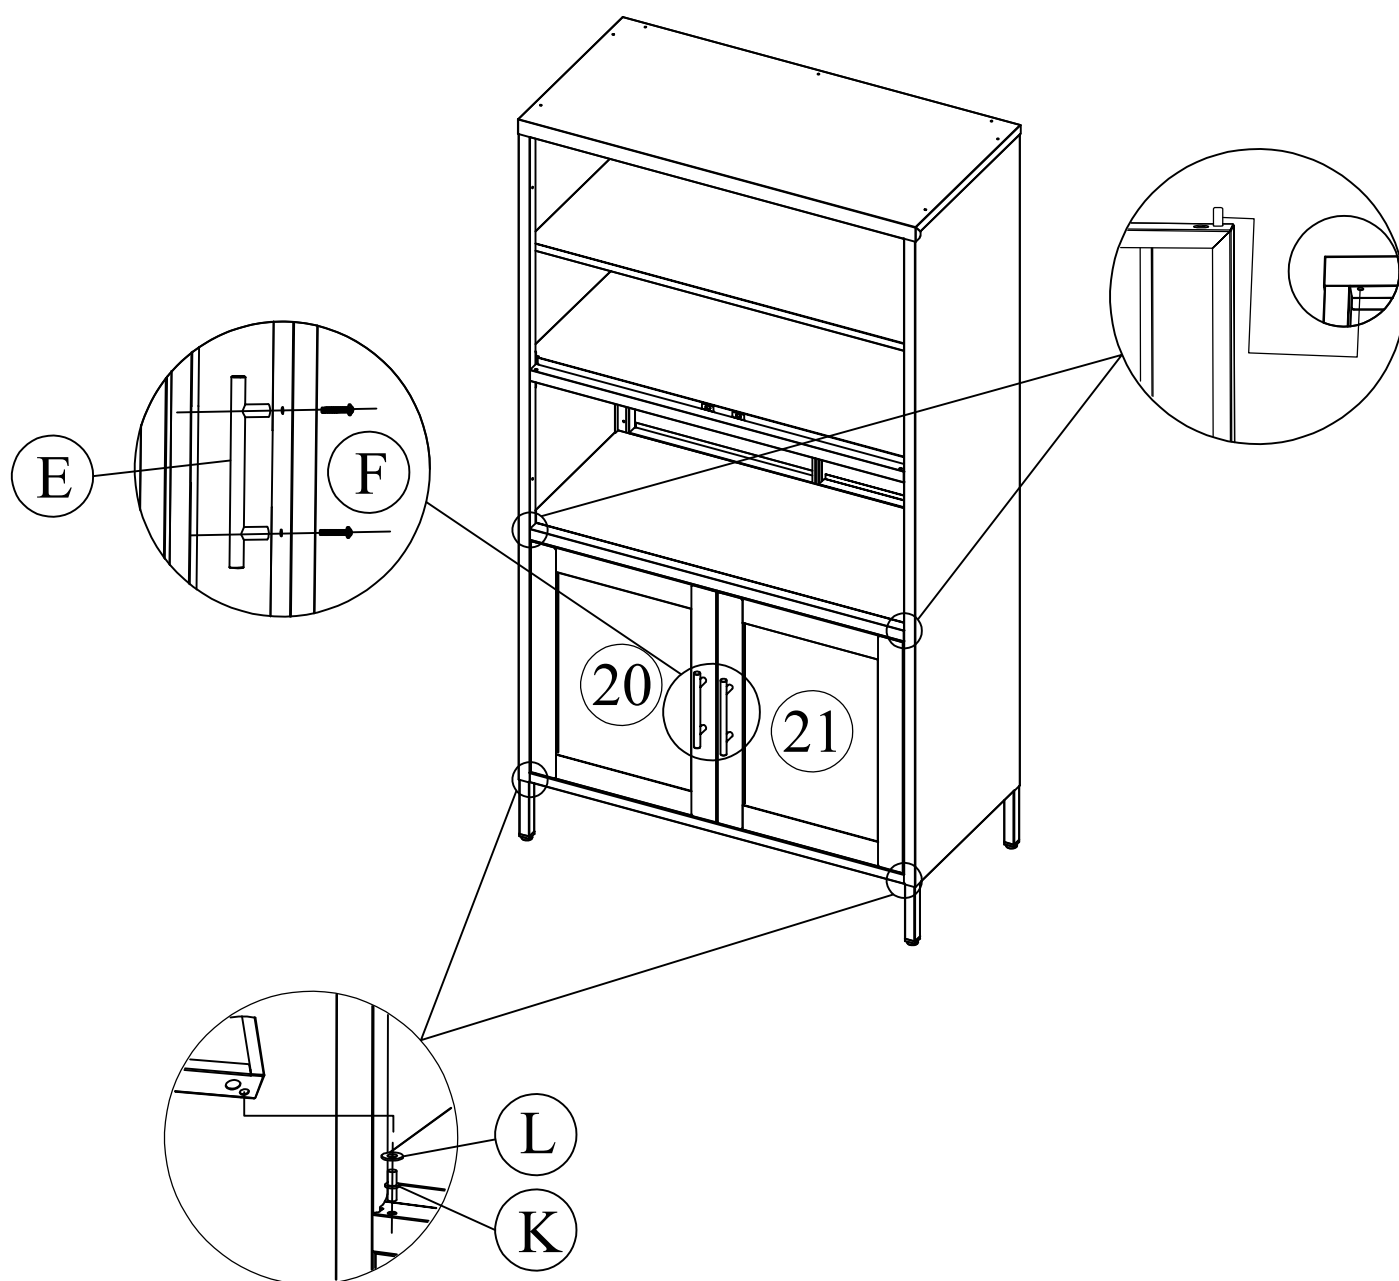

Step 11

Install doors 12 and 13


(K)		× 2
(L)		× 4
(F)		× 4
(E)		× 2

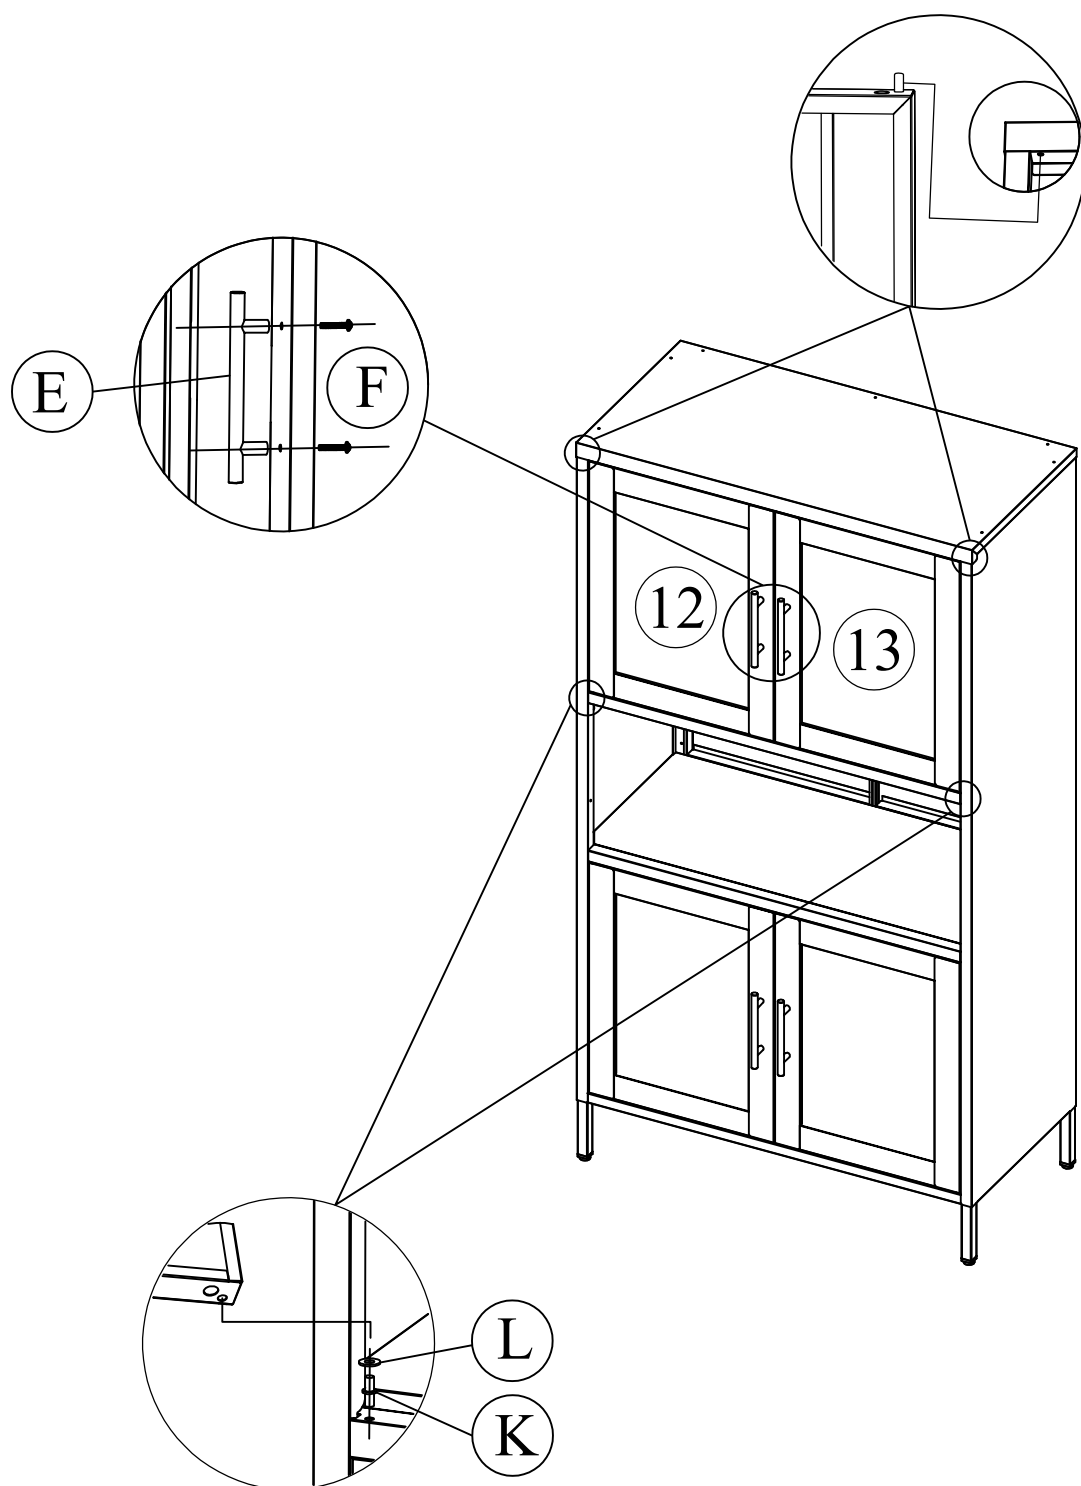

Step 12

Fold all the small parts on dome panel 8 towards the middle for 90 degree

Insert dome panel 8 into dome back tube 9 and dome front tube 7

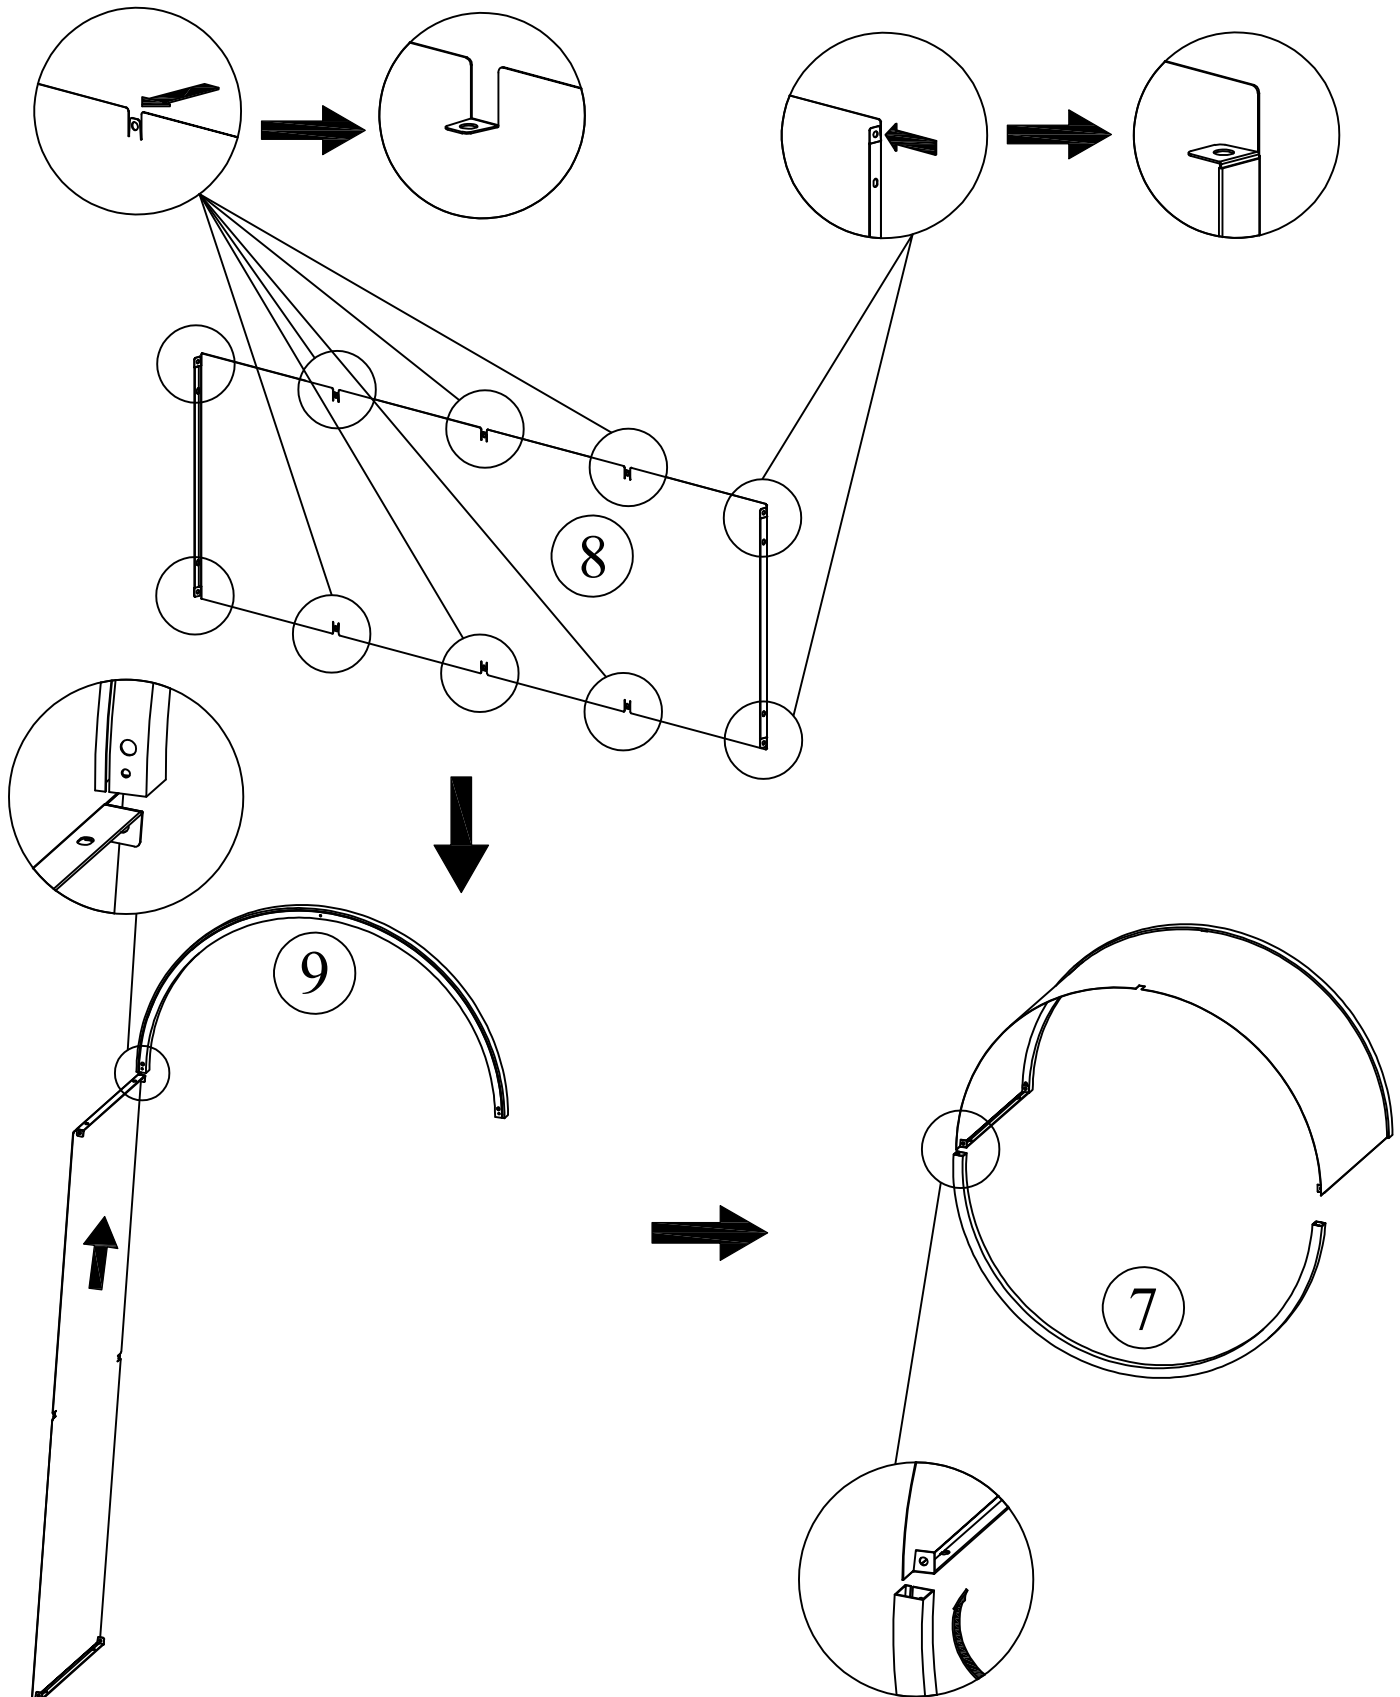


Step 13

Fix the dome panels and tubes with 10 screws

A in the middle and ends

Fix the dome back panel 10 with 5 screws A


(A)  × 15

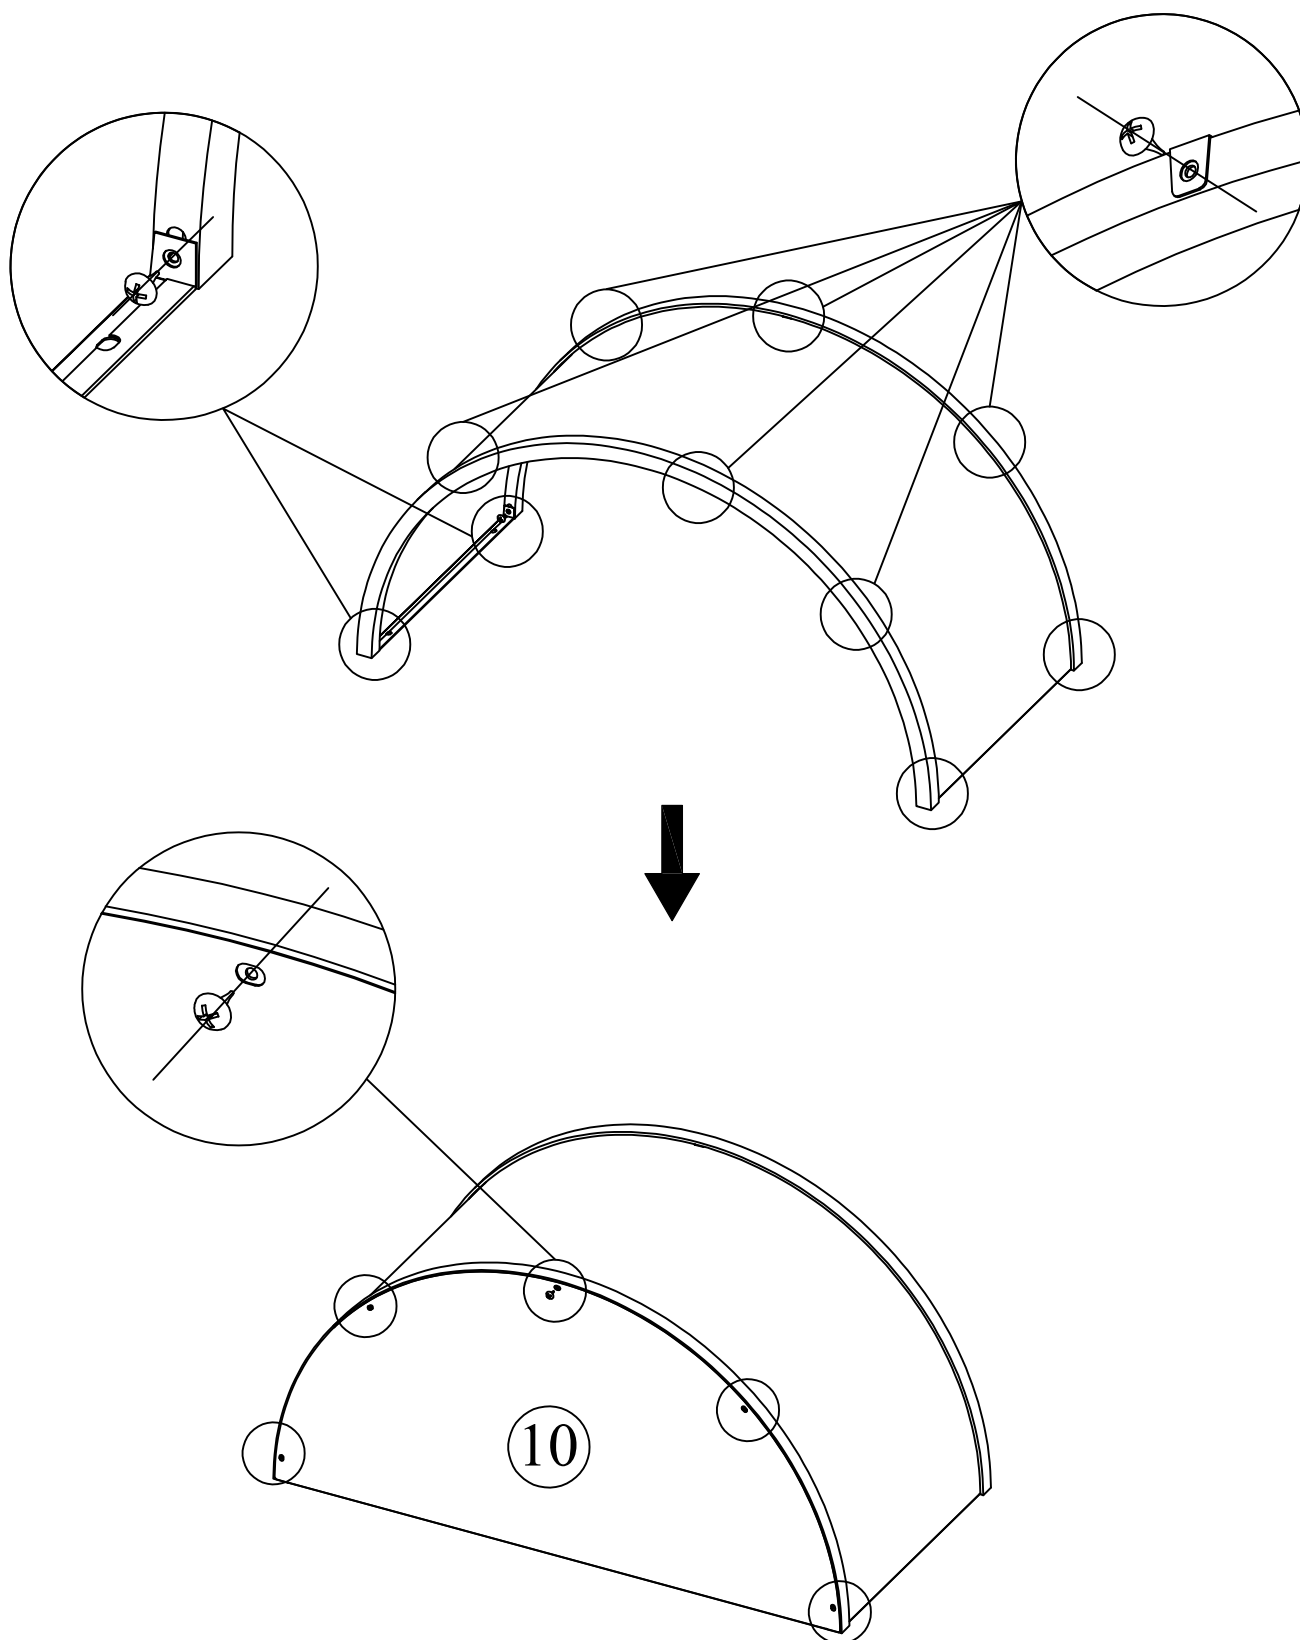

Step 14


Fix the dome on the top of the cabinet with screws A, then adjust the feet of the cabinet

(A)  × 7

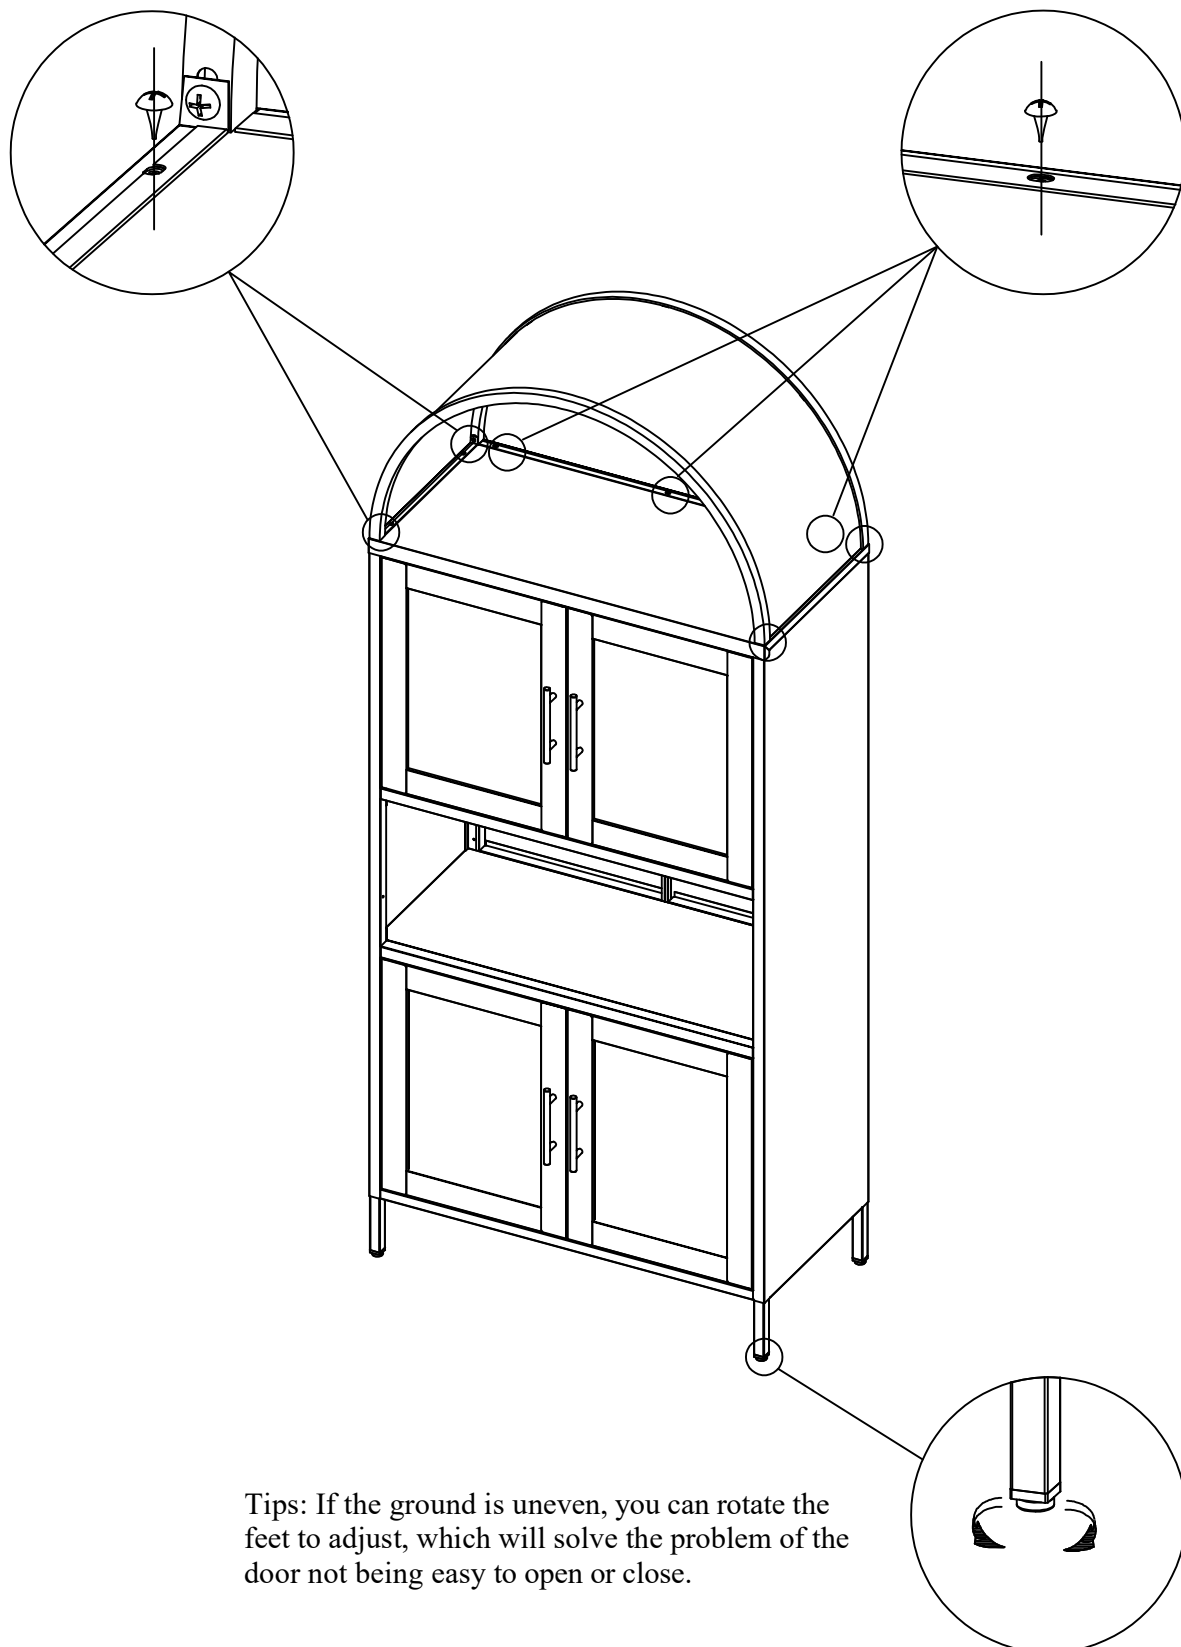

Step 15

Fix the cabinet to the wall with screws
I to prevent tipping

①  × 2

