



Bathroom Faucet Installation Rendering

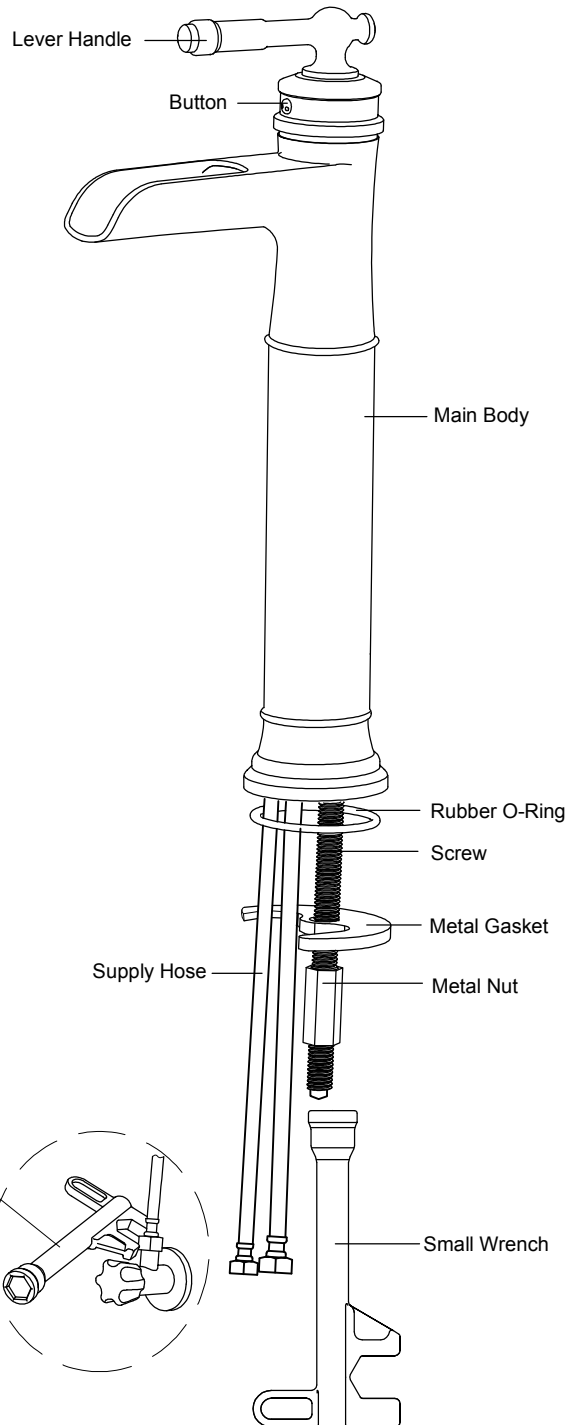


The other side of our equipped 3/8 wrench can also be used to tighten the hot and cold supply water hoses on the angle valve.


Notice:
Must make sure all the pre-installed water hoses are tightened while installing. If not, tighten clockwise.

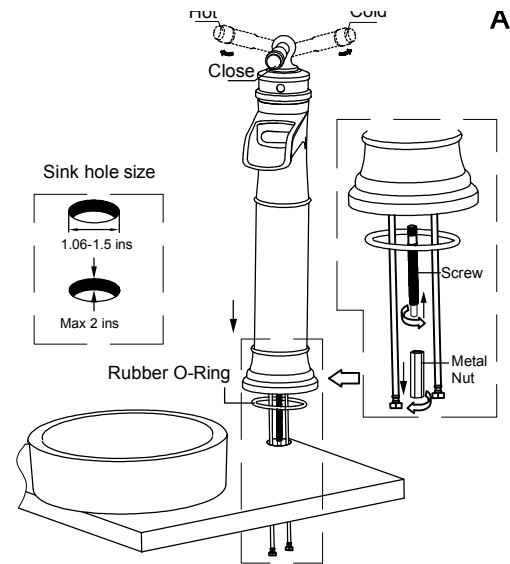


1. Unscrew the metal nut and tighten the short thread of the screw to the faucet.
 2. Place the rubber O-ring under the faucet.
 3. Insert the faucet through the basin hole.
- Notice:
Close the lever handle to make sure the faucet is closed.

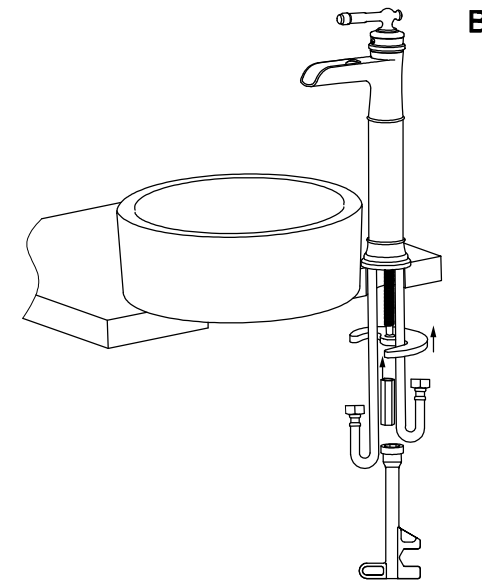

Place the metal gasket and metal nut through the screw in the sequence, then use the wrench to tighten the metal nut.

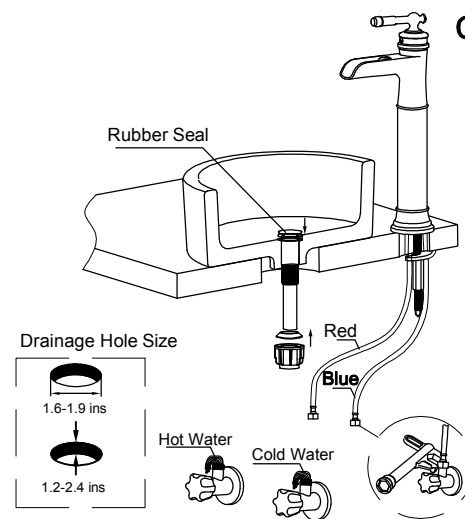

1. Open the angle valve to discharge the sewage within 45-60 seconds.
2. Use our equipped 3/8 plastic wrench to tighten the hot and cold supply water hoses on the angle valve.
3. Insert the drain with rubber seal into the drainage hole.
4. Place the thick rubber gasket and tighten the plastic nut.

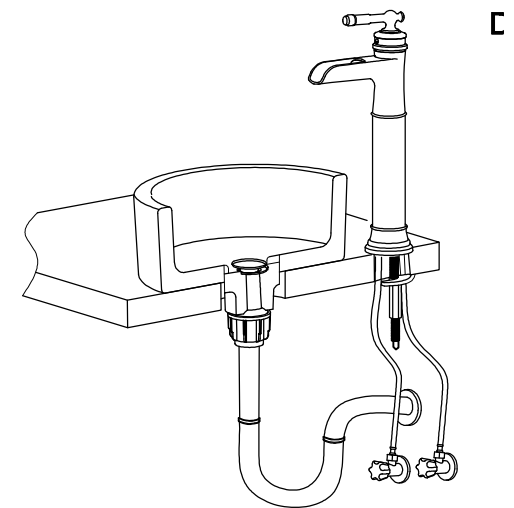

1. Connect the pop-up drain with your own drainage hose.
2. Open the lever handle to check if the faucet is working properly or any leaks.