
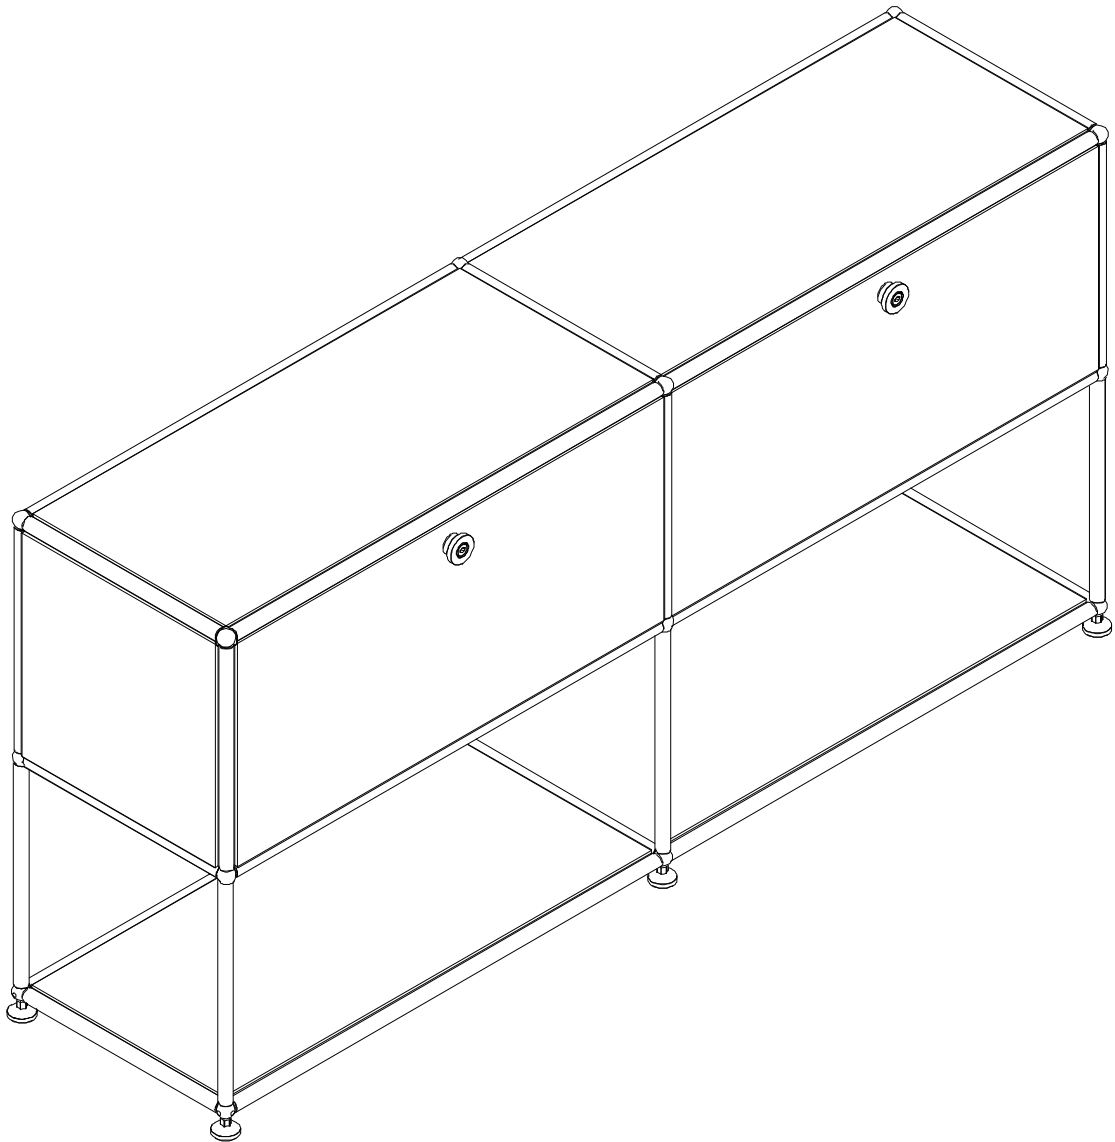












ASSEMBLY INSTRUCTIONS









Storage Cabinets Type F




Part List


①	②	③	④	⑤	⑥	⑦	⑧
							
x1	x2	x2	x1	x1	M3x28 x4	M4x25 x3	M4x14 x4

A	B	C	D	E1	E2	F	G
							
x8	x2	x2	x1	Long x12	Short x21	x2	x6



H1	H2	J1	J2	K1	K2	L1	L2
							
x4	x4	x3	x3	x1	x1	x1	x1

M	N	II	W
			
x66	x1	x1	x2

Step1

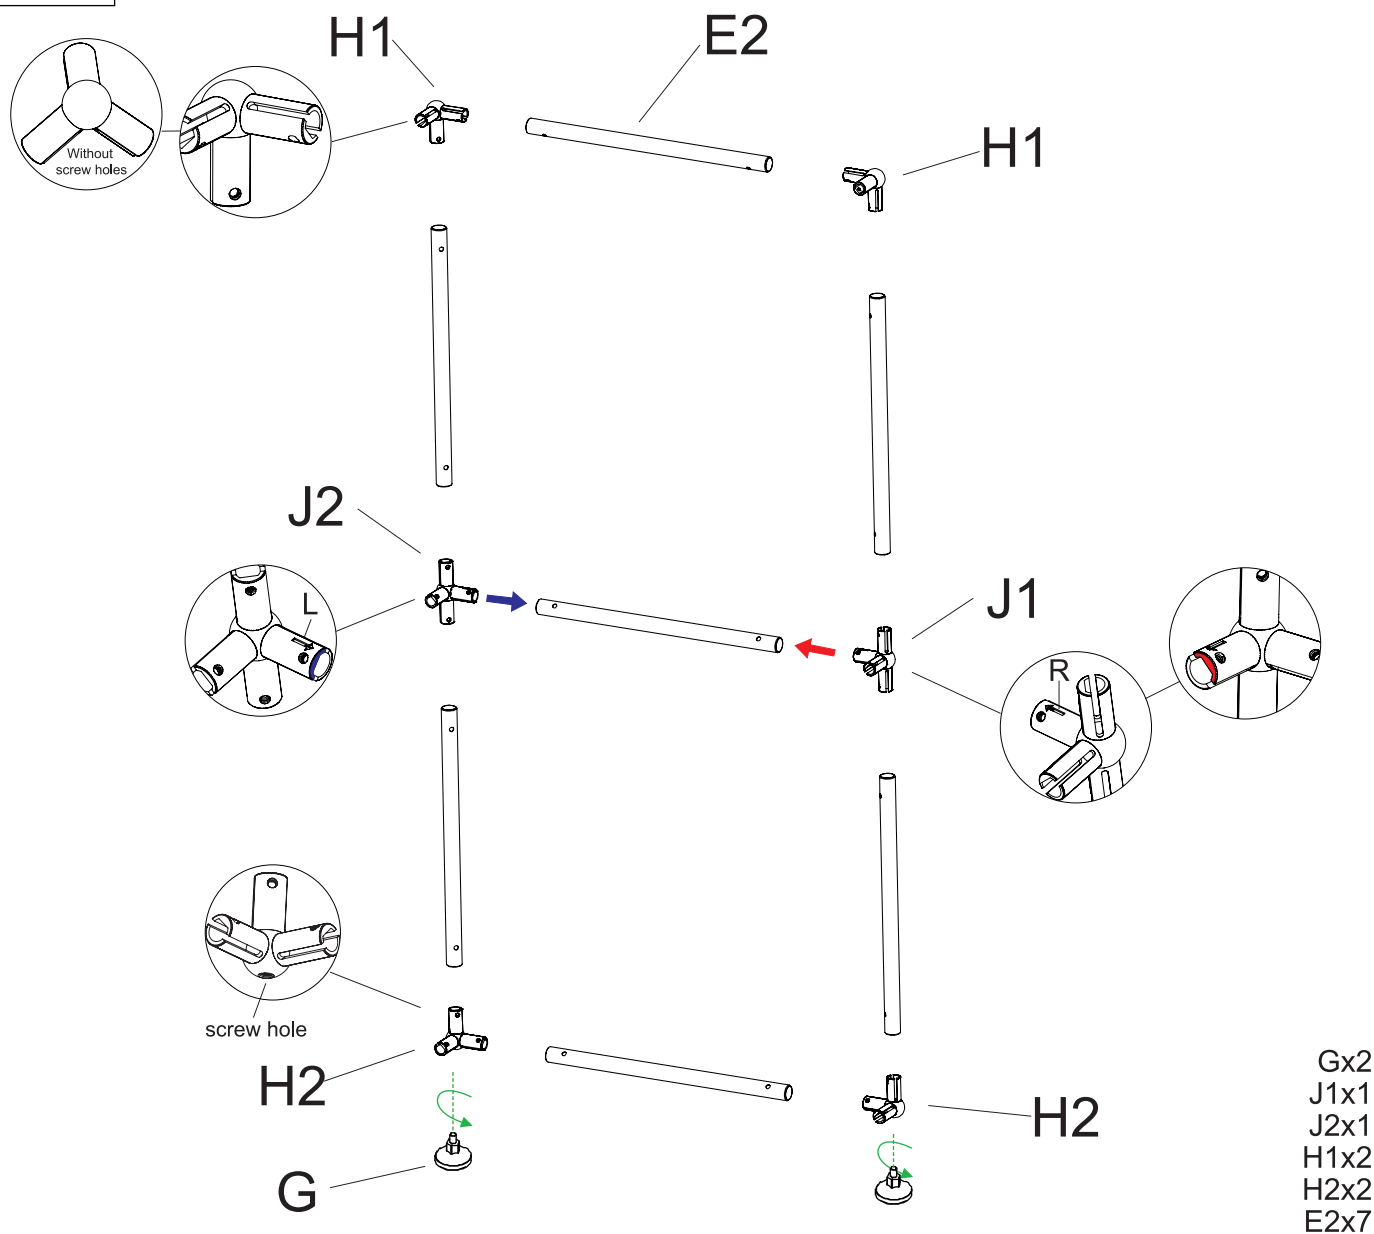


Step2

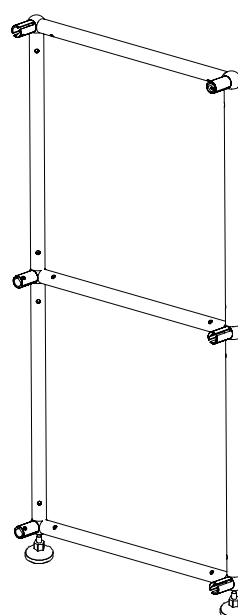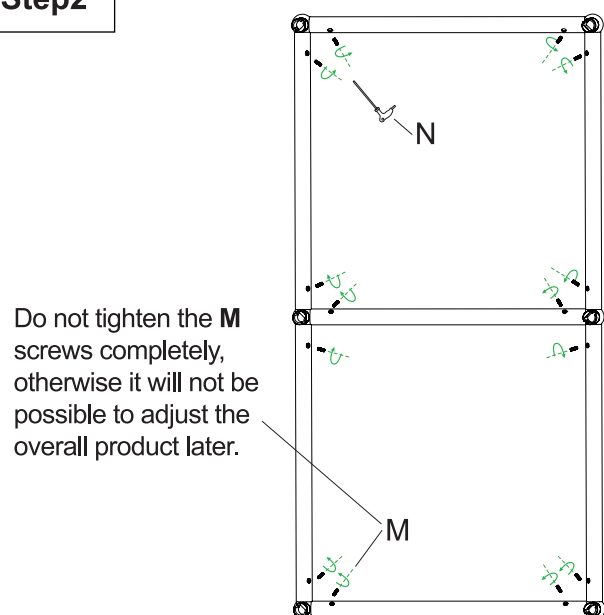



Mx14
Step2x2

Step3

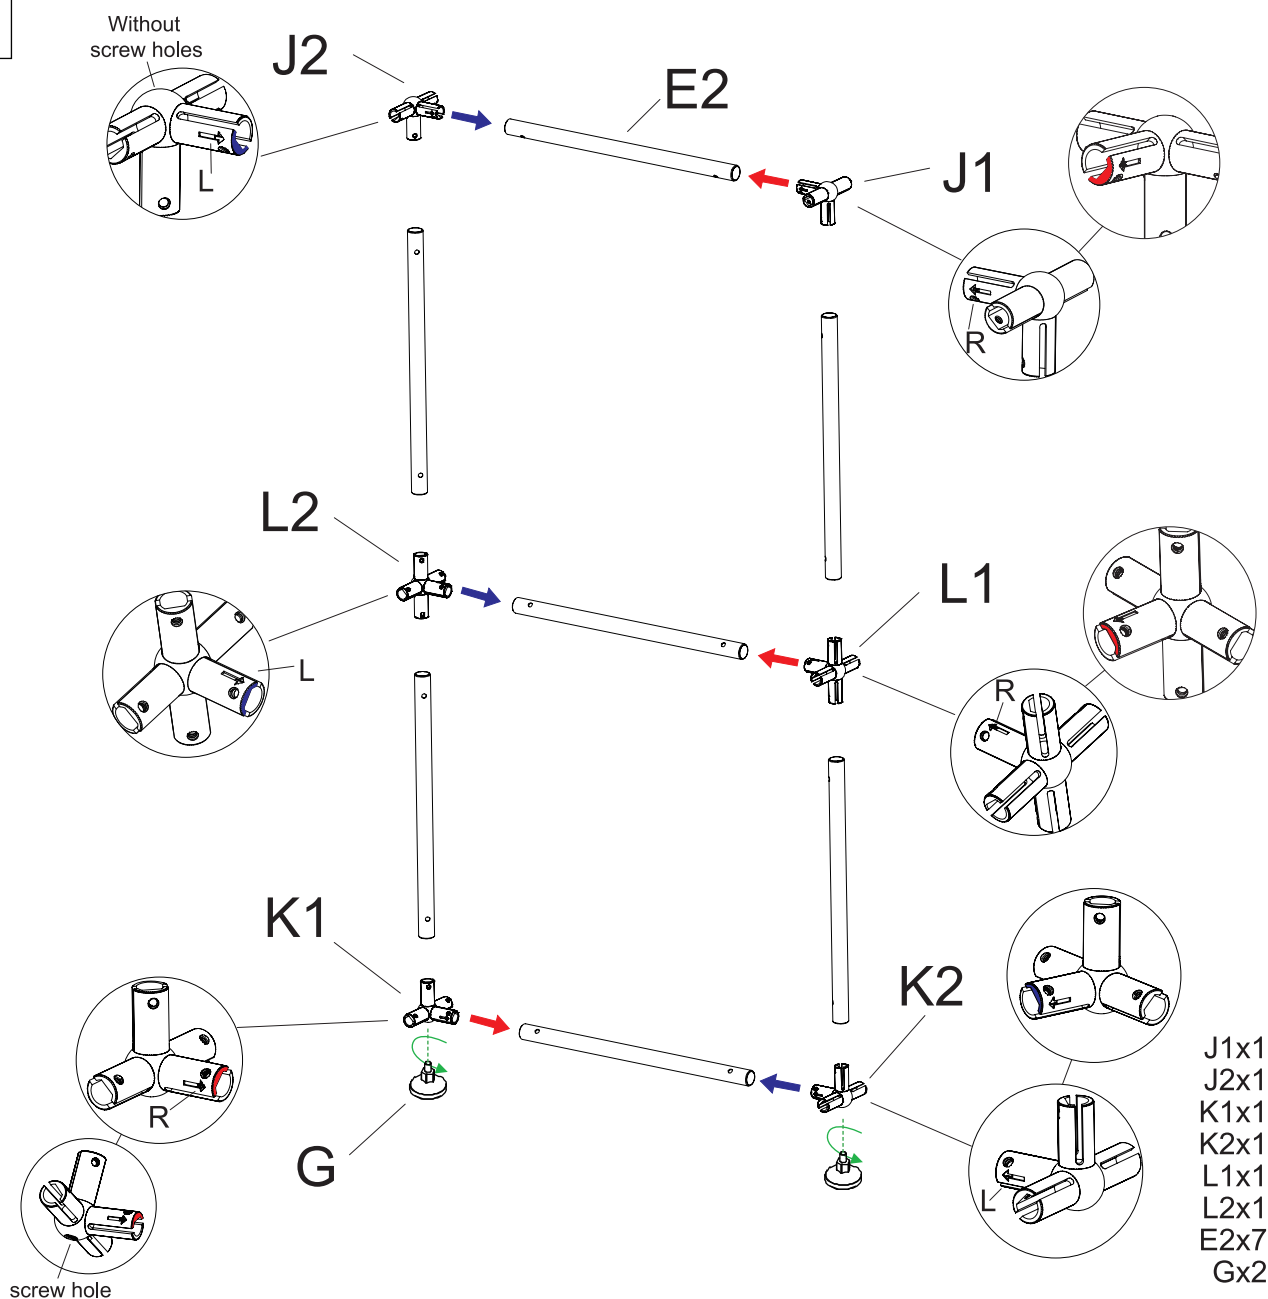


Step4

Do not tighten the **M** screws completely, otherwise it will not be possible to adjust the overall product later.

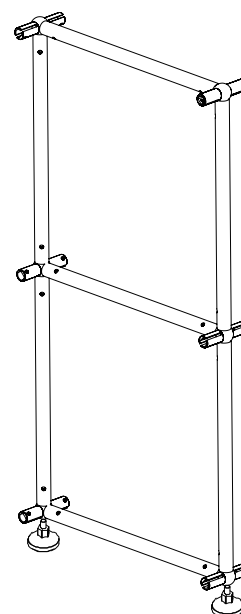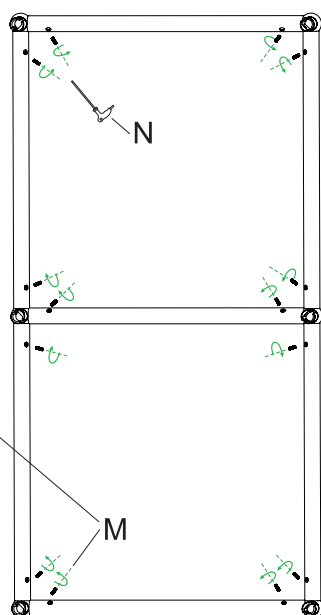


Mx14
Step4x1

Step5

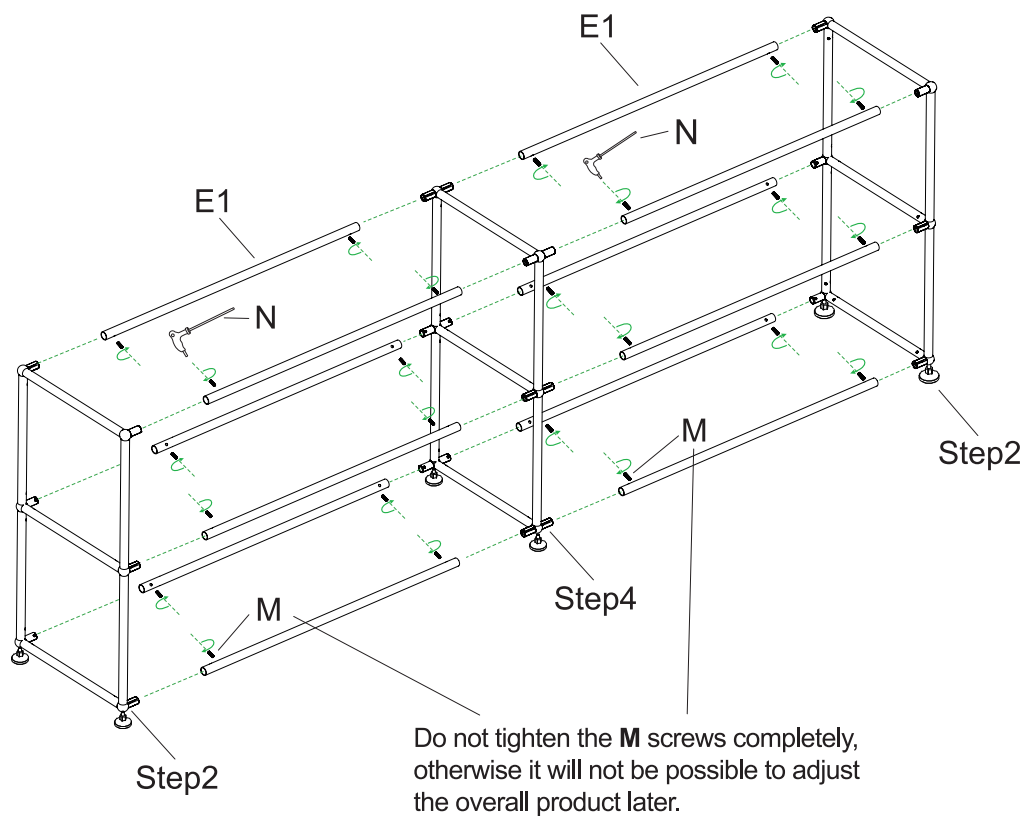


Mx24
E1x12
Step2x2
Step4x1

Step6

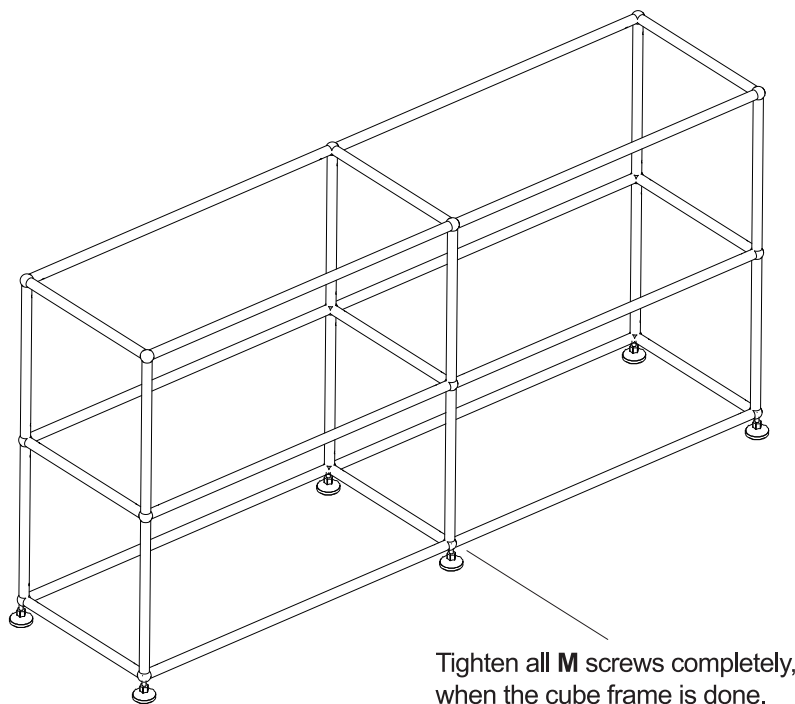


Step7

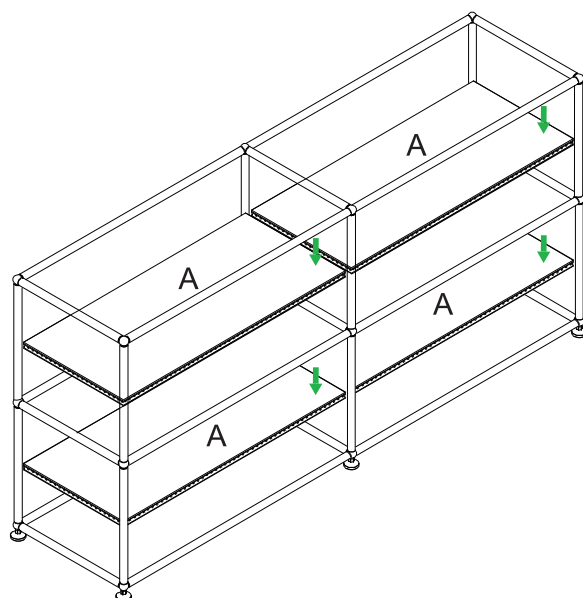

Ax4


Step8

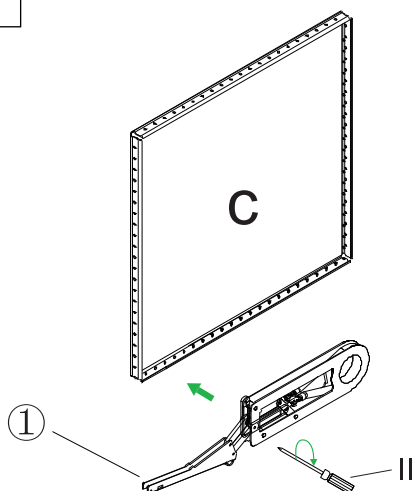

Partially unscrew the three screws in ① before installing it on the metal panel.

Cx1
①x1
Step8x1


Step9

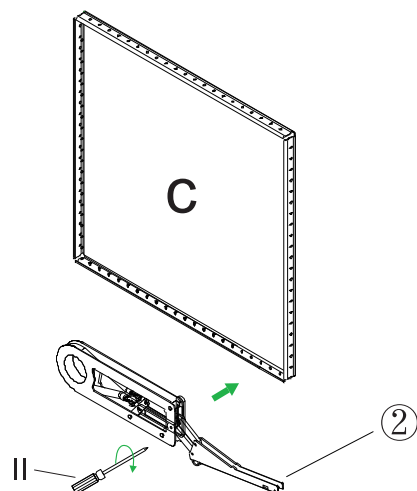

Partially unscrew the three screws in ② before installing it on the metal panel.

Cx1
②x1
Step9x1


Step10

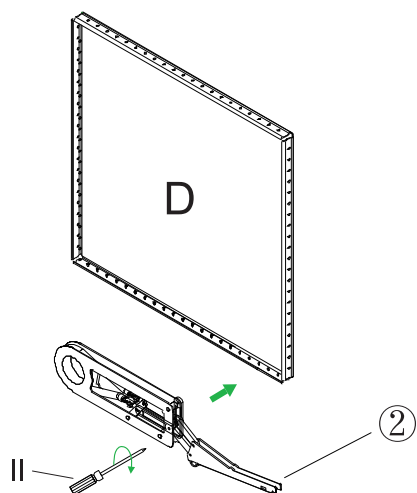

Partially unscrew the three screws in ② before installing it on the metal panel.


Dx1
②x1
Step10x1

Step11

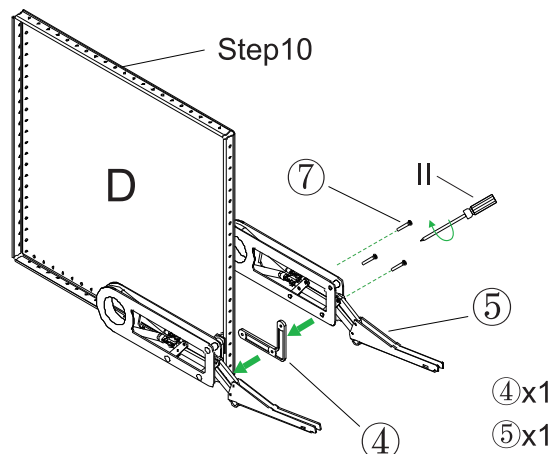


④x1
⑤x1
⑦x3
Step10x1
Step11x1

Step12

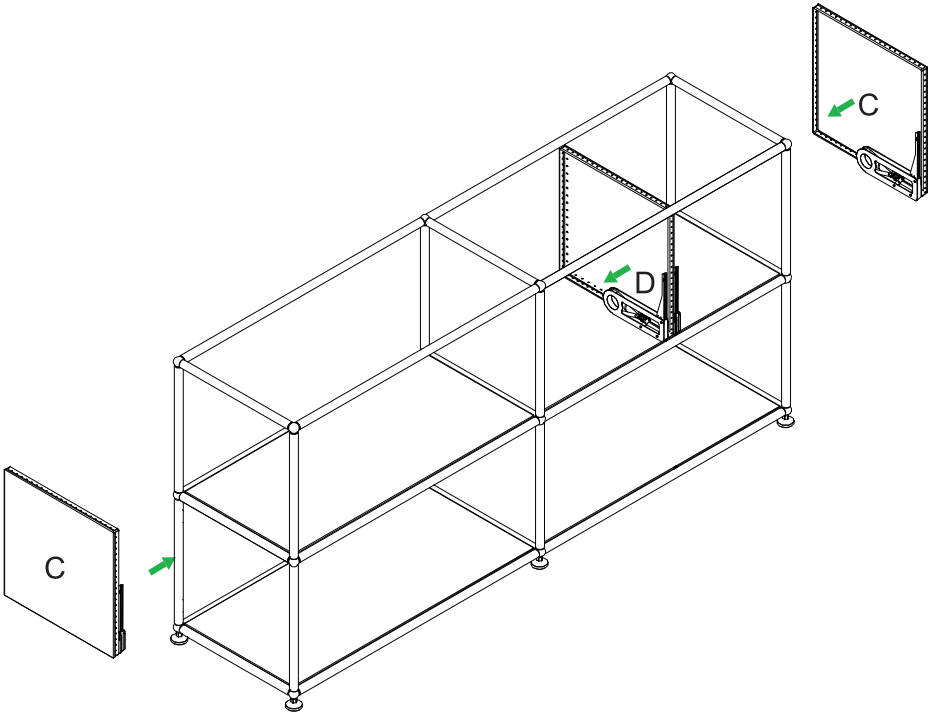


Step8x1
Step9x1
Step11x1

Step13

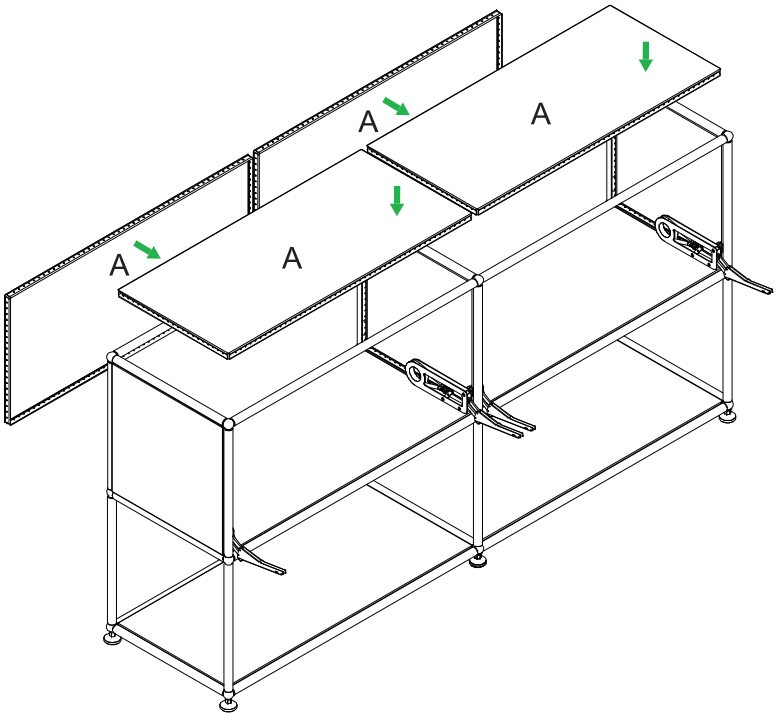


Ax4


Step14

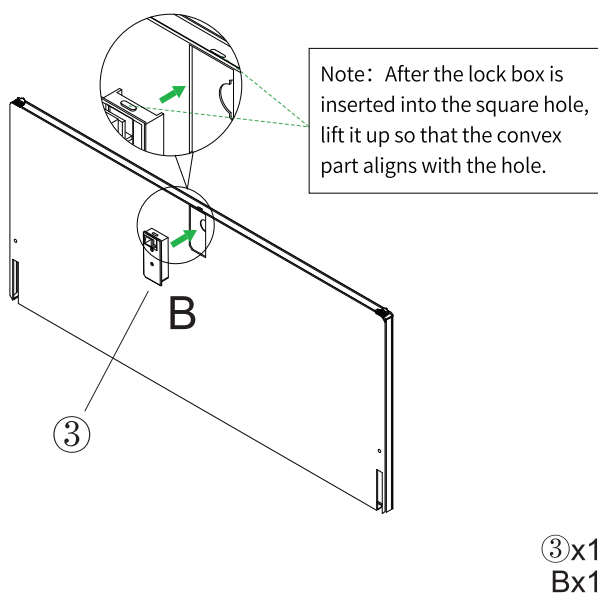


Step15

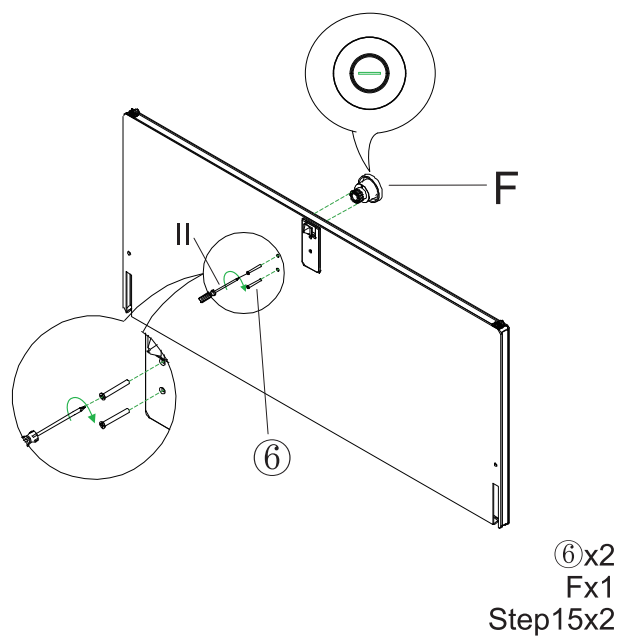


Step16

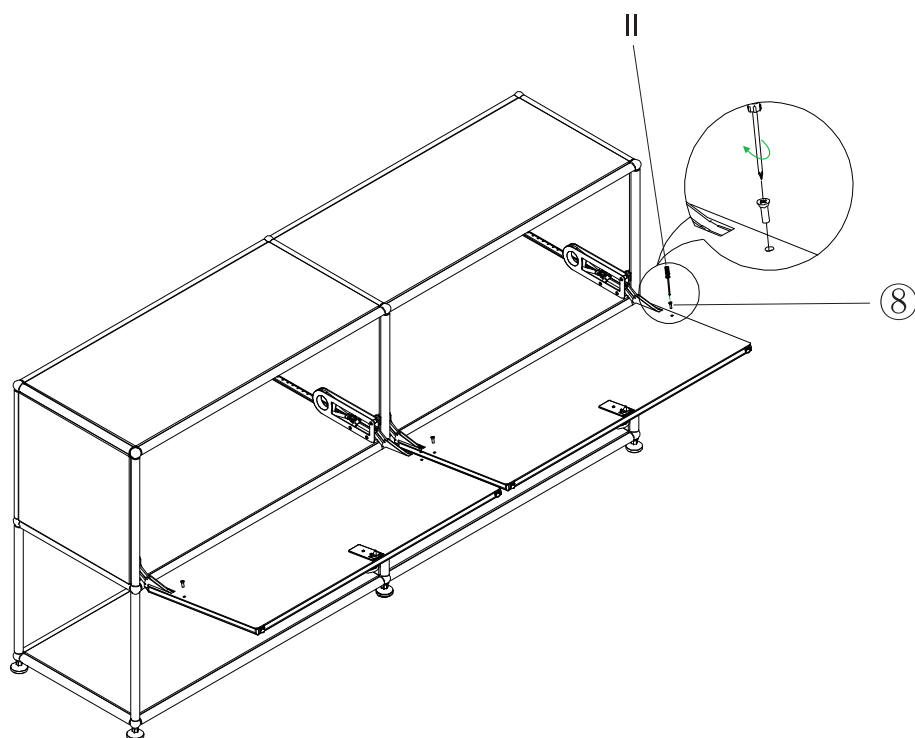


How to use the lock

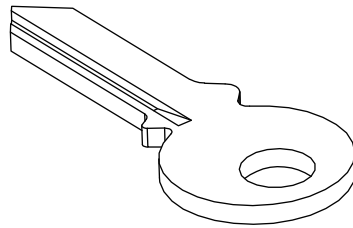

Including 2 keys

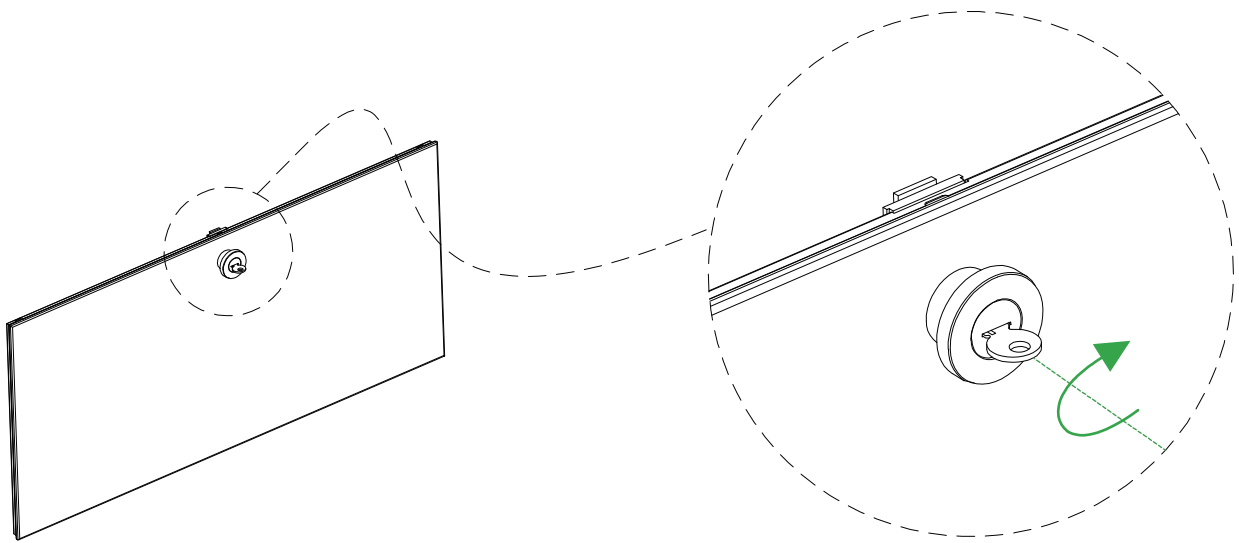

Turn clockwise to unlock

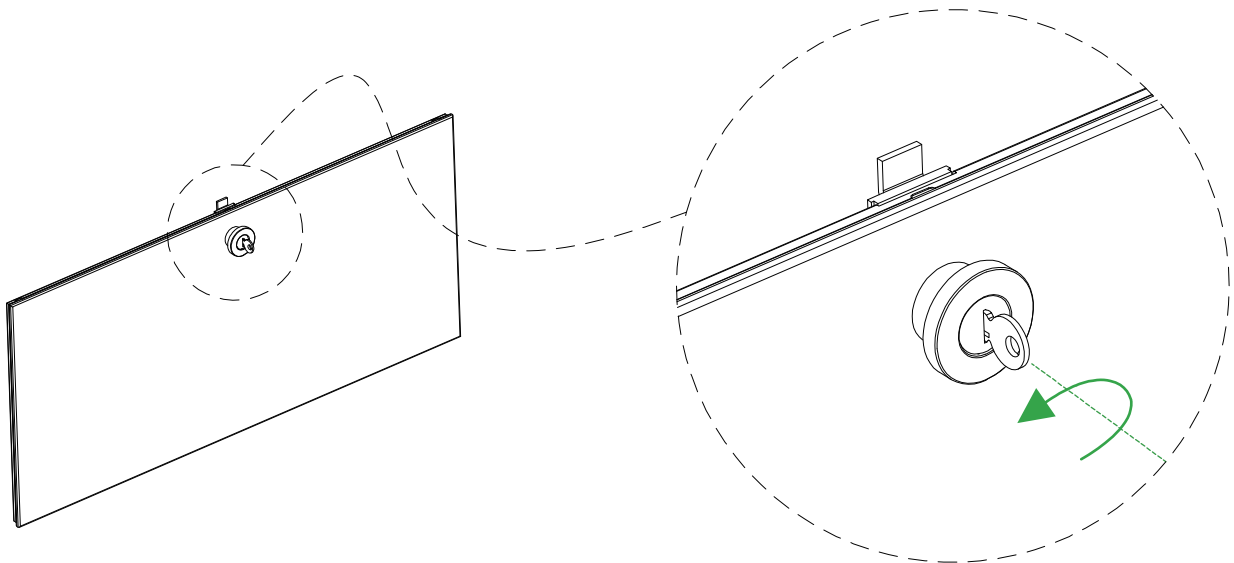

Turn counterclockwise to lock