

SHAMPOO BOWL & CHAIR

Professional Salon Equipment - Installation Guide

IMPORTANT NOTICE

During the installation process, please DO NOT tighten the screws completely. Keep them slightly loose to ensure all parts align correctly. Securely tighten all screws only after the final step is complete.

PARTS & HARDWARE LIST

Code	Description	Qty
A	Chair Backrest	x1
B	Chair Cushion	x1
C	Chair Arm	x2
D	Shampoo Holder	x1
E	Head Holder	x1
F	Neck Pillow	x1
G	Basin Deck	x1
H	Basin Screw	x4
hh	Small Gasket Ring	x4
I	Long Screw	x7
J	Hex Screw	x4
L	Frame Screw	x4
M	Medium Screw	x7
N	Nut	x4
O	Wrench	x1
P	Bigger Gasket Ring	x7

Code	Description	Qty
Q	Tool	x1
R	Rubber Washer	x1
S	Drainer Washer	x1
T	Adjustable Foot	x4
U	Valve	x1
V	Mixed Water Inlet	x1
W	Shower Head Pipe	x1
X	Braided Hose	x1
Y	Drainer Fitting	x1
Z	Shower Head	x1
aa	Drainer Hose	x1
bb	Plumbing Adapter	x1
cc	Accessories	x4
dd	Drainer / Drain Basket	x1
ee	Connecting Bolt	x2

** Please check all parts against this list before beginning assembly.*



INSTALLATION STEPS

Please follow the sequence carefully.


1 Frame Inspection

Unbox and lay out the main cabinet frame. Inspect internal structure and check alignment of top openings before mounting parts.




2 Mount Backrest

Align the **Chair Backrest (A)**. From the inside of the frame, secure with Screws (**M x3**), Washers (**P x3**) and Bolts (**I x3**).

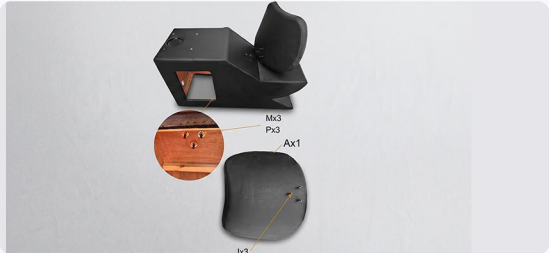


3 Attach Seat Cushion

Position the **Chair Cushion (B)** onto the cabinet top. Fasten securely from underneath using Screws (**I x4**, **M x4**) and Washers (**P x4**).

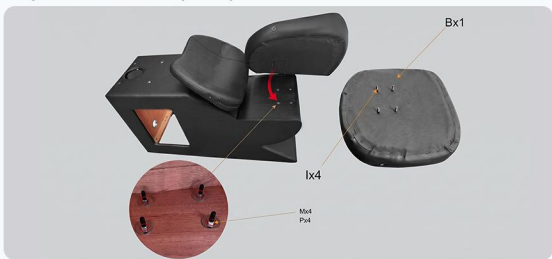


4 Install Armrests

Align **Chair Arms (C x2)** to both sides. Fix them tightly to the backrest and base using Screws (**J x4**) and Plastic Spacers (**cc x4**).

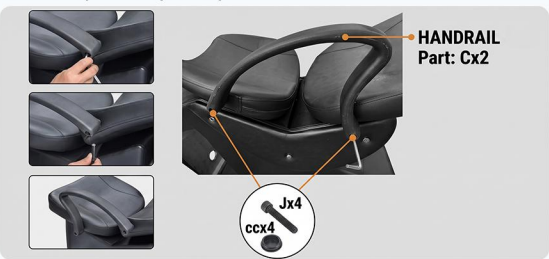

5 Plumbing & Faucet Assembly

1. Fix Valve (U) and Mixer (V) on Basin Deck (G).
2. Connect Shower Pipe (W) to Shower Head (Z). Connect other end to the Valve (U) bottom inlet (marked with ↓).
3. Use Braided Hose (X) to bridge Mixer (V) and Valve (U) (inlets marked with ↑).

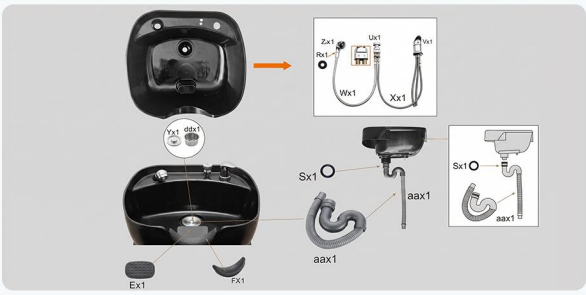

6 Mount Basin & Holder to Frame

Mount the **Basin Deck (G)** and **Shampoo Holder (D)** onto the frame. Secure using Connecting Bolts (**ee x2**) and Basin Screws (**H & hh**) from inside the cabinet.

