

Polybird



2' GLIDER P-30


TOOLS




HARDWARE

AA		EE	
x4	1/4" x 2 1/4" Wafer Bolt	x2	1/4" x 1 3/4" Wafer Bolt
BB		FF	
x6	1" Screw	x12	1 1/2" Screw
CC		GG	
x4	2 1/2" Screw	x6	1/4" Flange Nut
DD		HH	
x4	5/16" x 2 1/2" Wafer Bolt	x4	5/16" Lock Nut


PARTS

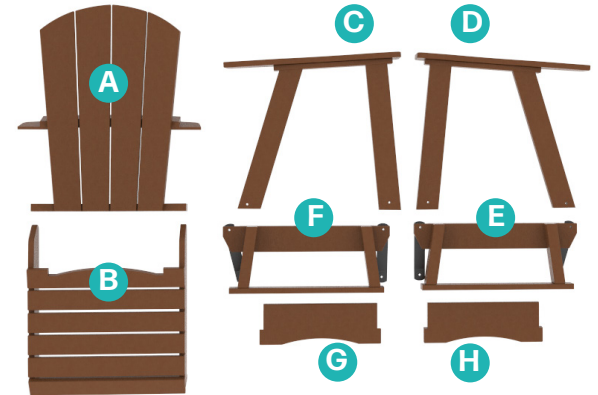


Note before starting: wait until the whole piece is assembled to tighten the bolts completely.

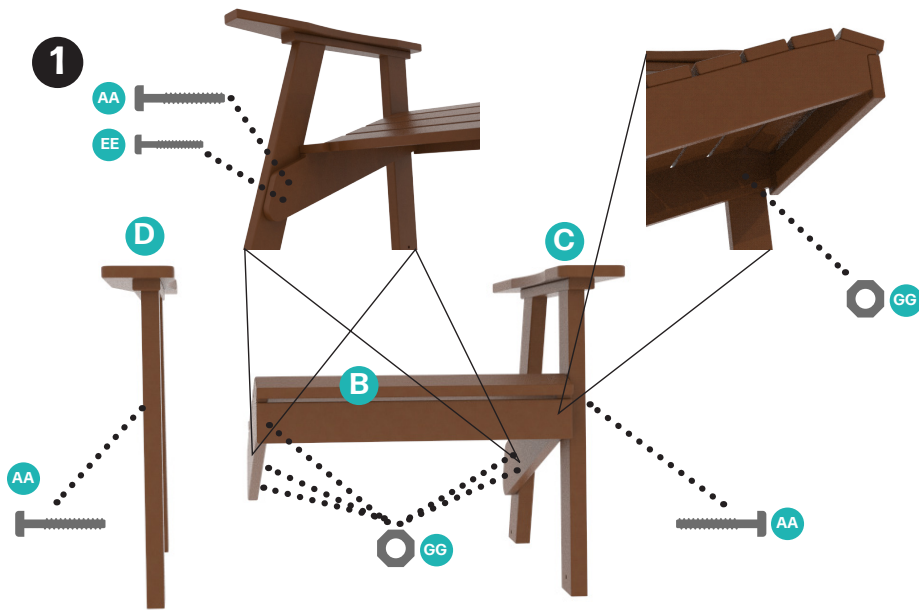

Attach seat (B) to legs C and D using four 1/4" x 2 1/4" wafer bolts (AA), one for each front leg and one for each top hole in the back legs, working from the outside in. Then use two 1/4" x 1 3/4" wafer bolts (EE), one for each bottom hole in the back legs. Add a 1/4" flange nut (GG) to each bolt, as shown.

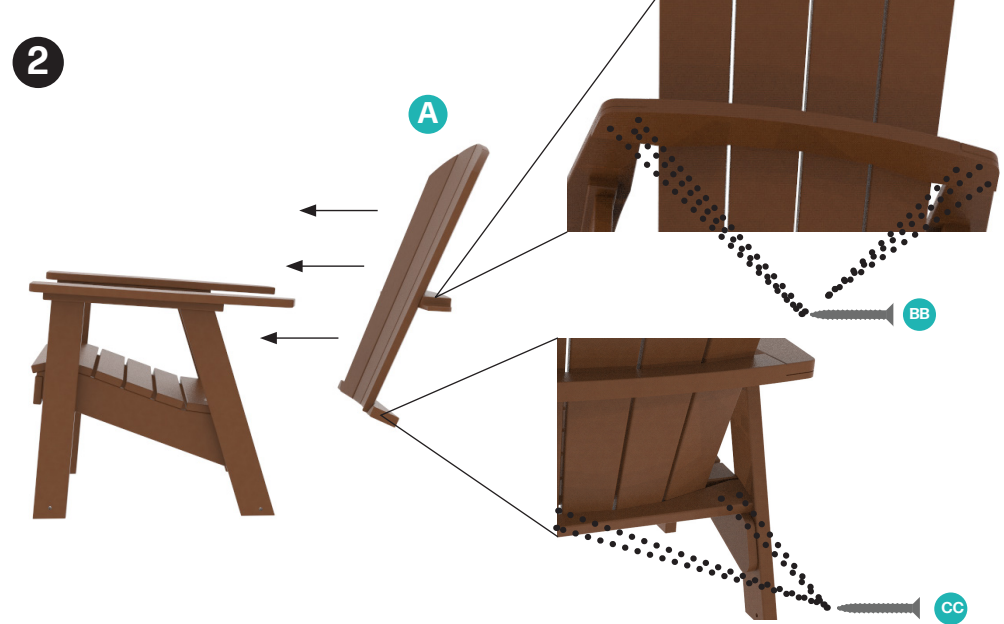

Attach seat back (A) to assembly from step 1 by inserting four 2 1/2" screws (CC) through back brace at the seat. Then insert six 1" screws (BB) under arm rests.

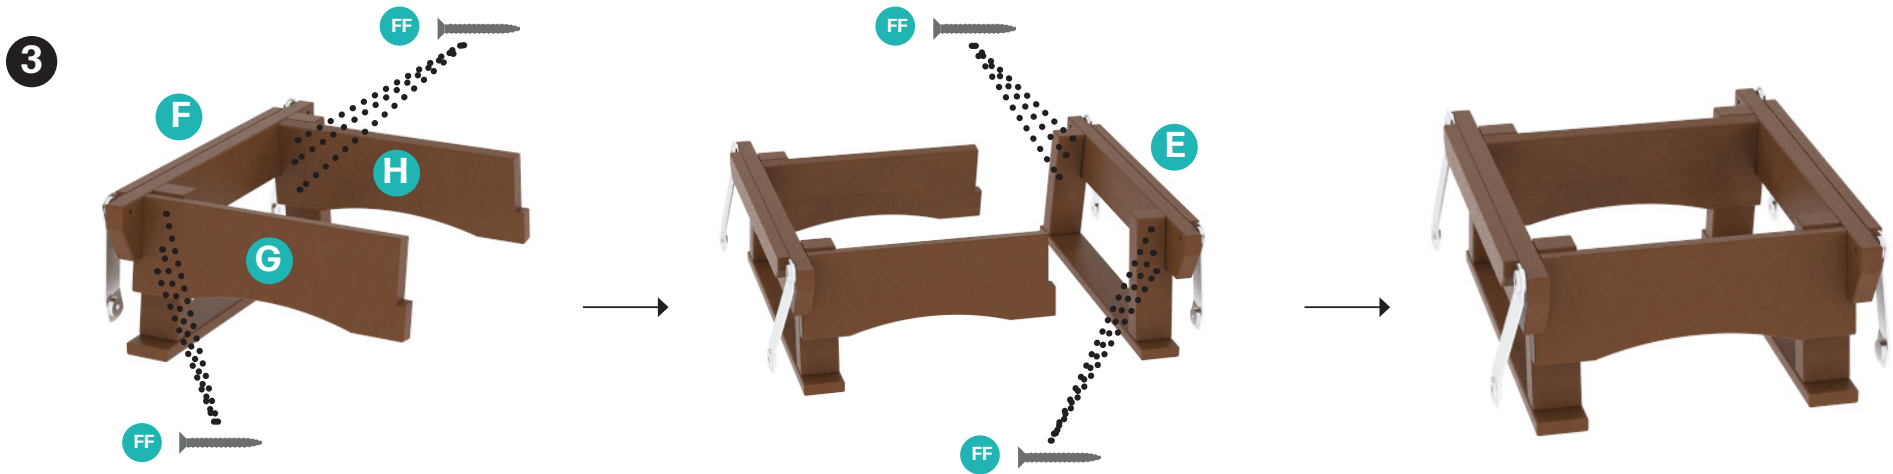

Assemble glider base. Attach base pieces G & H to F & E using three 1 1/2" screws (FF) in each corner, as shown.



Lift chair assembly from step 2 over base assembly from step 3. Attach chair to base working from the outside in: Insert a $\frac{5}{16}$ " x 2 1/2" wafer bolt (DD) through leg and then through metal support on base, finish with a lock nut (HH). Repeat for each of the 4 corners of the chair.

We hope you enjoy your new piece of furniture for years to come!