


6 Drawer Dresser

Assembly Instructions

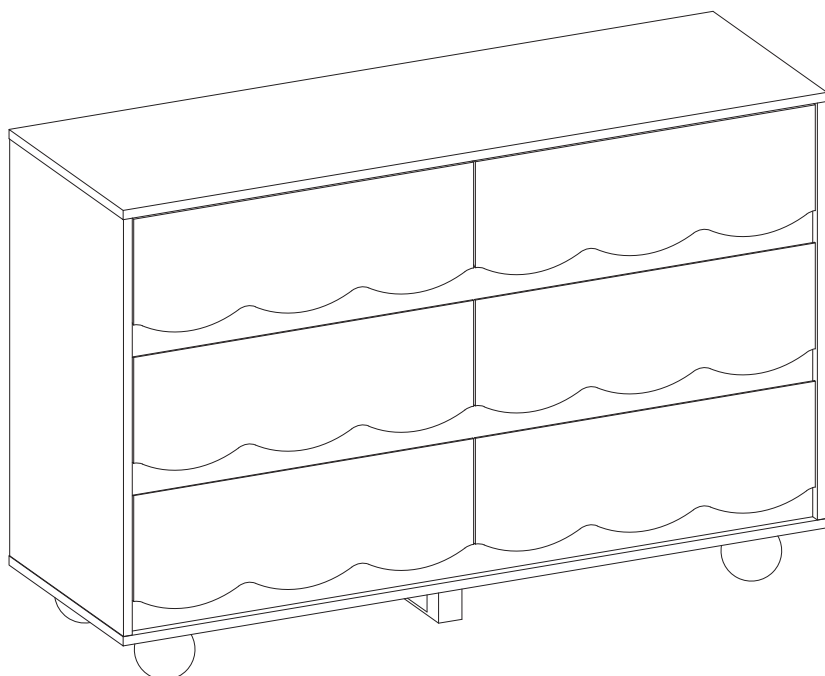


If you have any questions about assembly or use, please feel free to contact us

Before Assembly

Tips Before Your Start:


- Remove all wrapping material, including staples & packing straps before you start to assemble.
- DO NOT tighten all screws and bolts until the assembly is completely assembled.
- Keep all hardware parts out of reach of children.

QUICKFIT

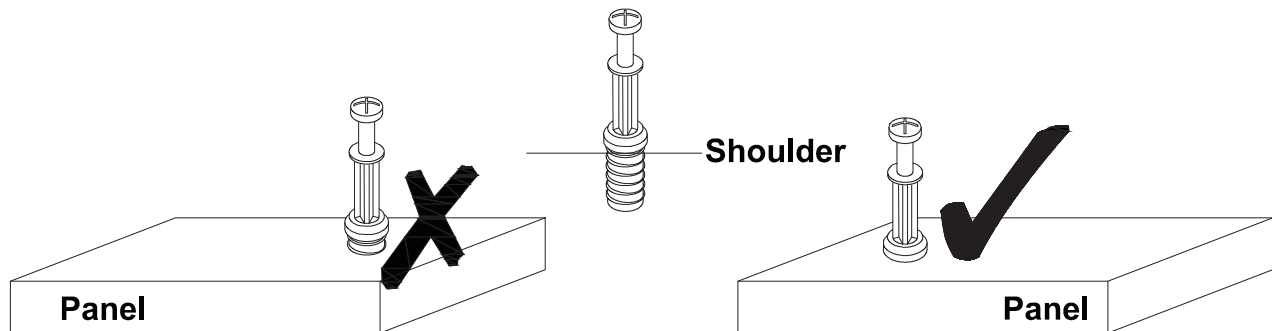

Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.


CAM LOCK

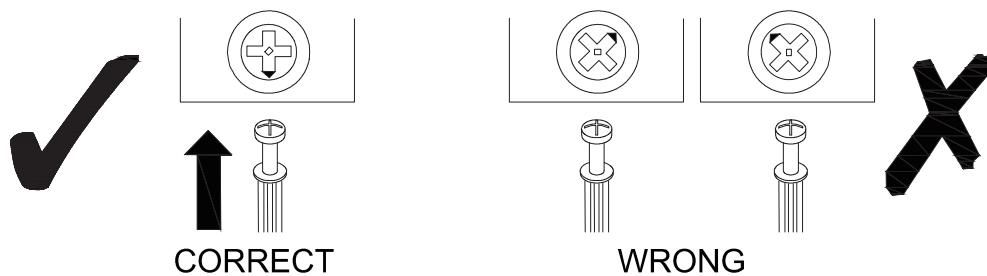

When fitting a cam lock, ensure the starting position is correct before inserting the connecting QUI CKFIT















Quickfit head should be in the centre of the cam lock when the two panels are joined.

Cam lock should be inserted before quickfit.

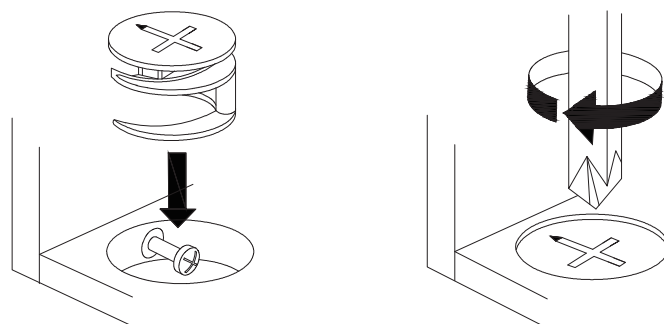




Turn cam lock clockwise to tighten.

Part List

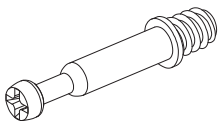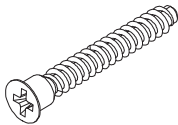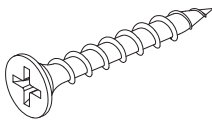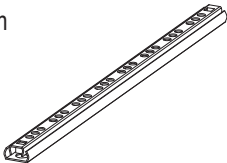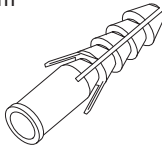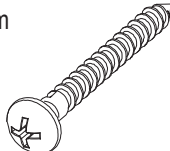
No. A Quantity: 52+2 PCS Cam Bolt ø6x33.5mm 	No. B Quantity: 52+2 PCS Cam ø15x9.5mm 	No. C Quantity: 52+2 PCS Sticker ø20mm 	No. D Quantity: 14+1 PCS Dowel ø6x30mm 
No. E Quantity: 12+1 PCS Screw ø5x48mm 	No. F Quantity: 36+2 PCS Screw ø3.5x12mm 	No. G Quantity: 36+2 PCS Screw ø4x30mm 	No. H Quantity: 12 PCS Drawer Slider 278mm 
No. I Quantity: 12+1 PCS Screw M4x10mm 	No. J Quantity: 8+1 PCS Bolt M6x28mm 	No. K Quantity: 4+1 PCS Bolt M6x12mm 	No. L Quantity: 1 PC Hex Key 4mm 
No. M Quantity: 1 PC Foot Pad 35x35x3mm 	No. N Quantity: 2 PCS L-Shaped anti tipping iron bar 76x15x30mm 	No. O Quantity: 2 PCS Plastic Expansion ø8x40mm 	No. P Quantity: 2 PCS Screw ø4x12mm 
No. Q Quantity: 2 PCS Screw ø4x38mm 	No. R Quantity: 8 PCS Screw ø3x16mm 	No. S Quantity: 8 PCS Back Buckle 15x15x10mm 	No. T Quantity: 2 PCS 

Tip: To ensure greater product stability, please install Accessory S during Step 23. Do not omit this step.


Product structure

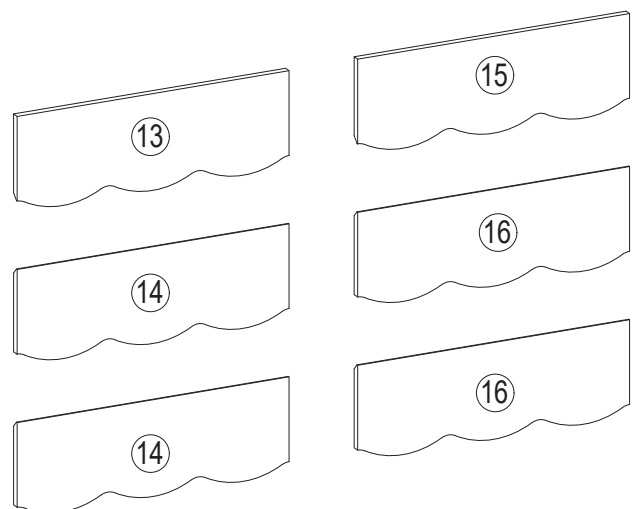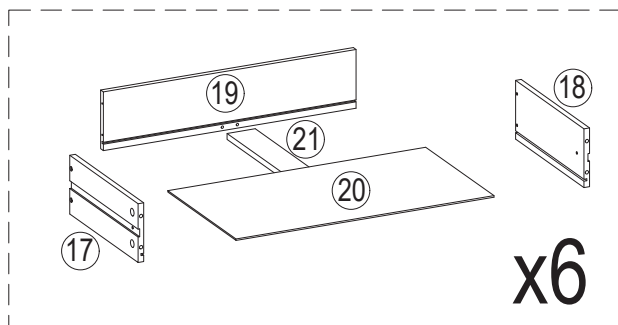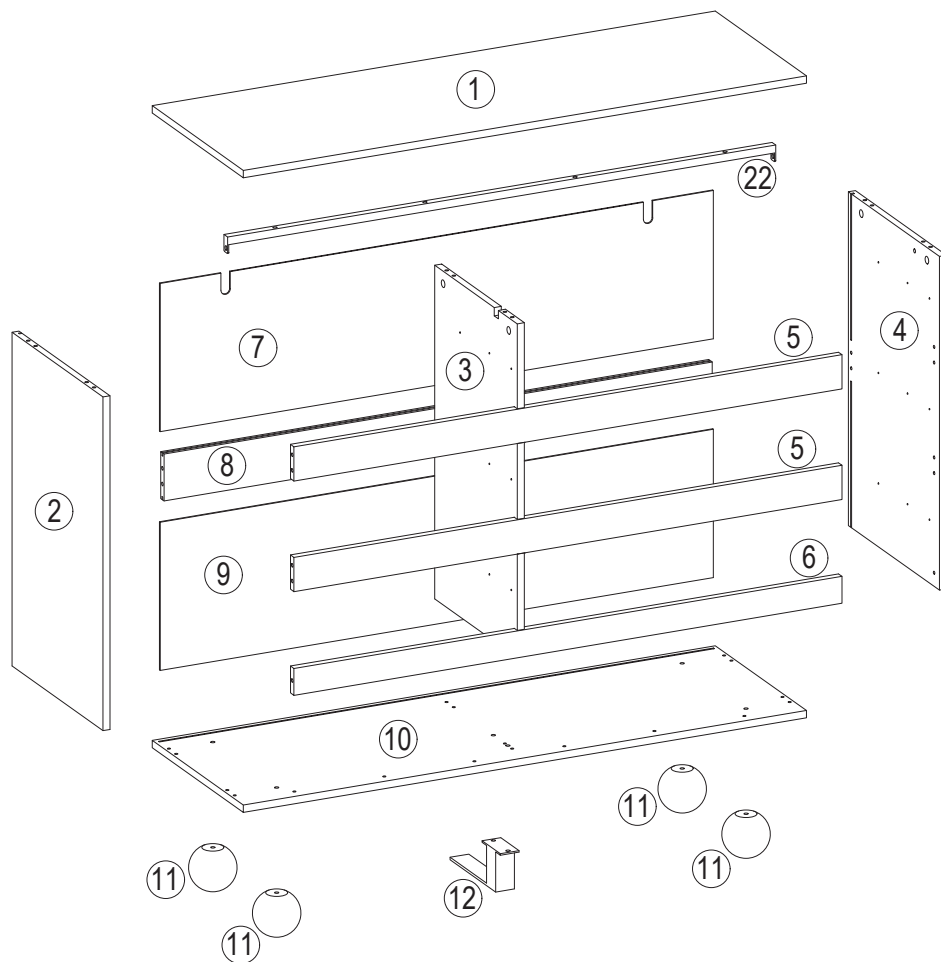

Step 1

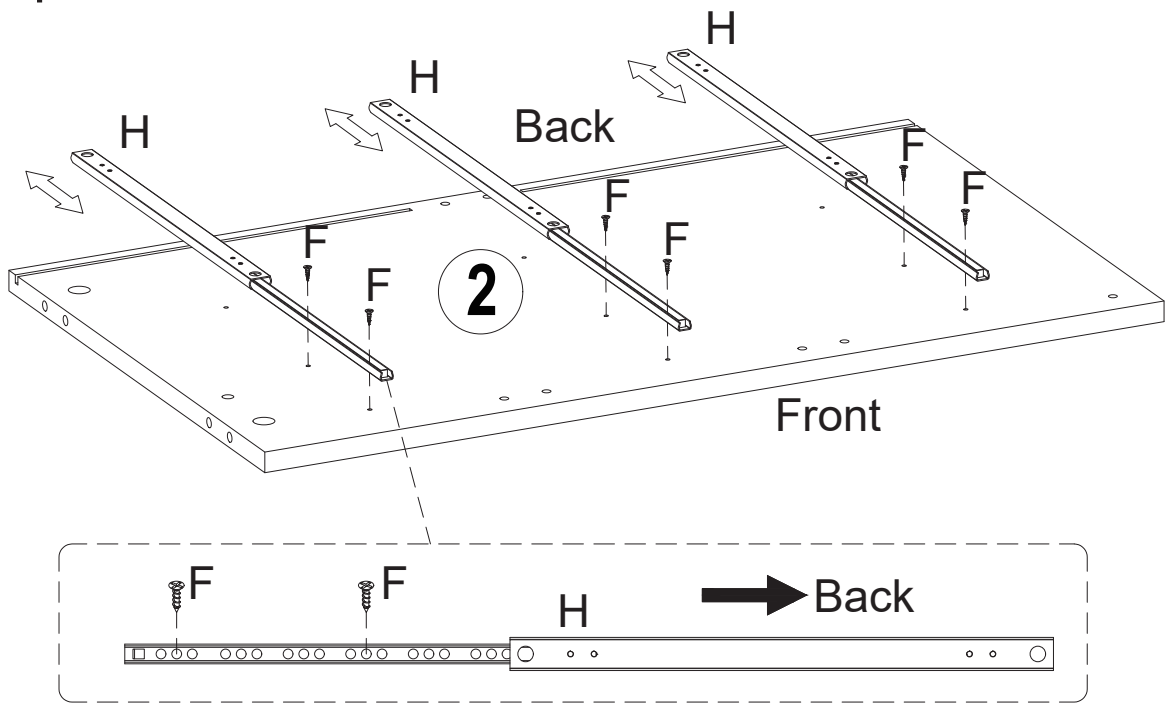


Tip: The slide rail must be pulled back; install the two front F-screws first.

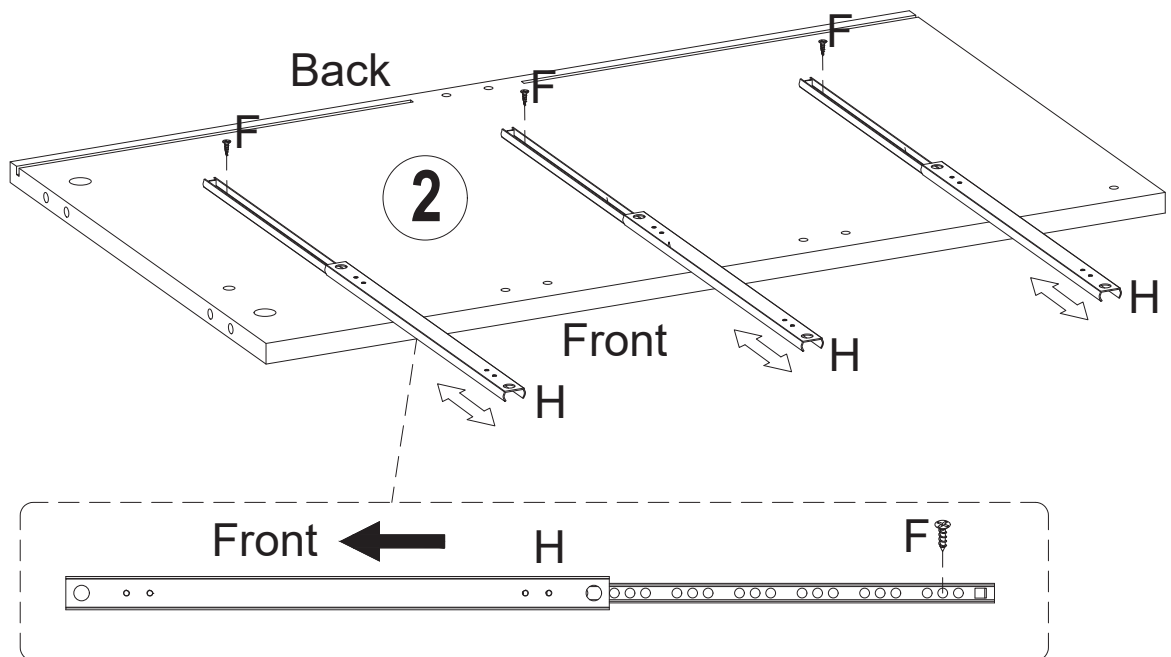


Tip: You need to pull the slide rail forward to install the rear F-screw.


No. F
Quantity: 9 PCS
Screw
ø3.5x12mm




No. H
Quantity: 3 PCS
Drawer Slider
278mm

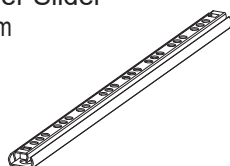

Step 2

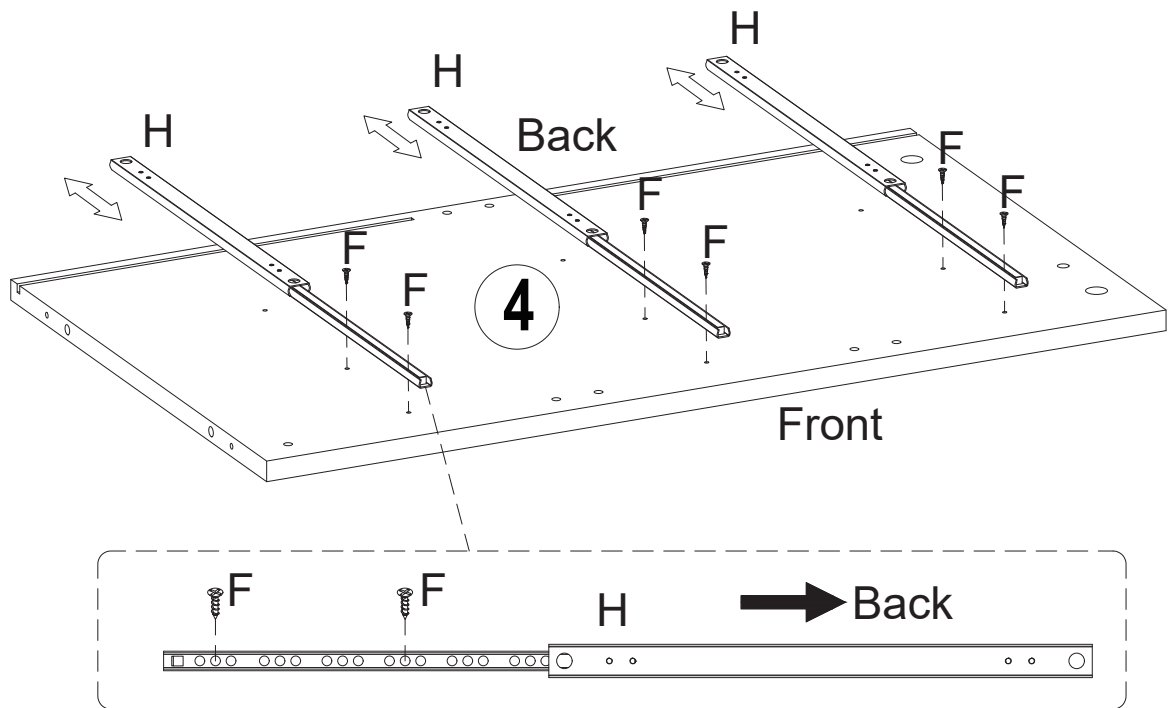


Tip: The slide rail must be pulled back; install the two front F-screws first.

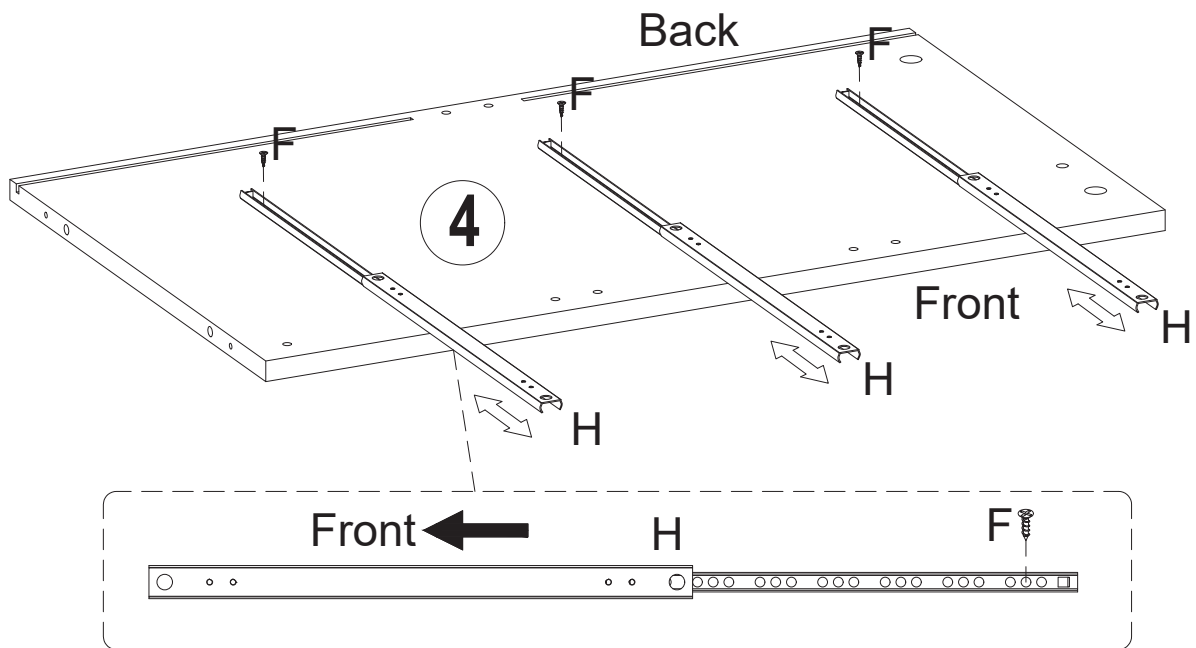


Tip: You need to pull the slide rail forward to install the rear F-screw.



No. F
Quantity: 9 PCS
Screw
ø3.5x12mm




No. H
Quantity: 3 PCS
Drawer Slider
278mm

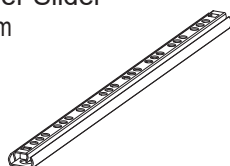


Step 3

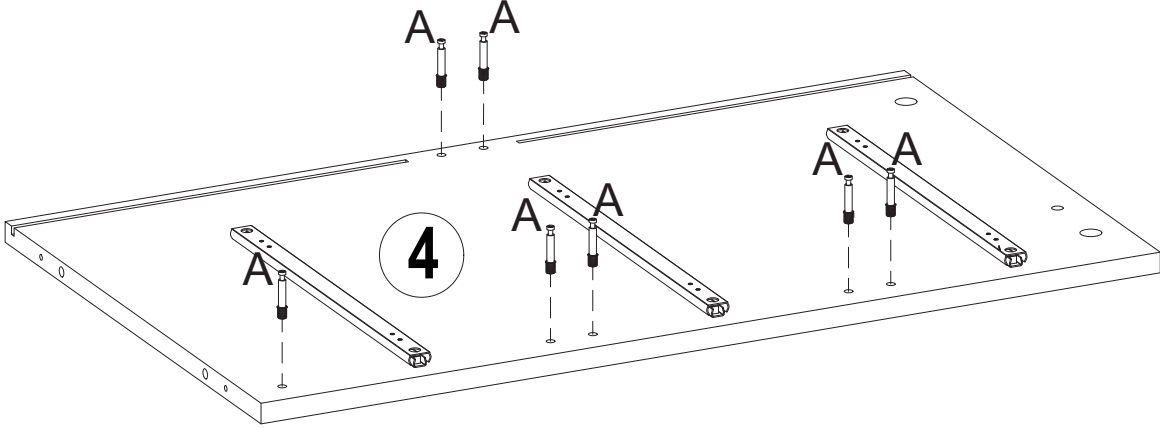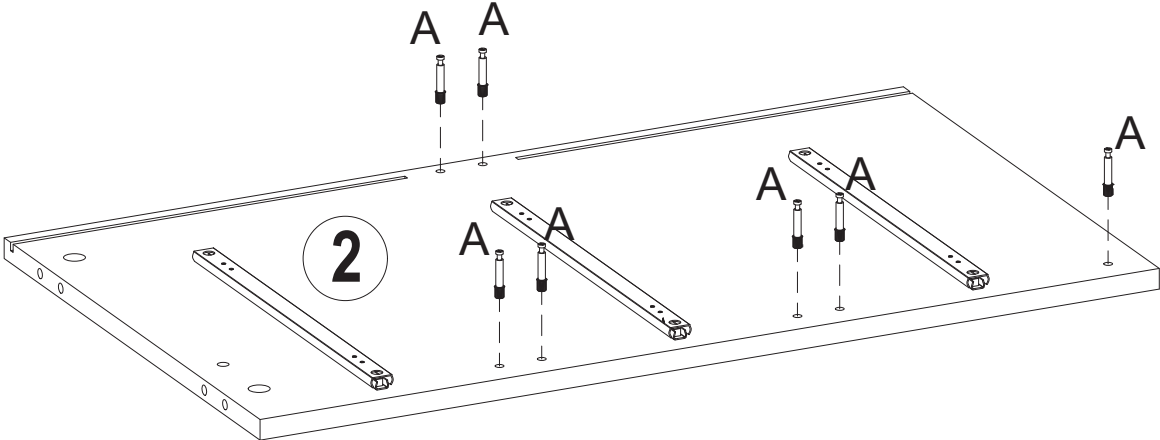


No. A
Quantity: 14 PCS
Cam Bolt
ø6x33.5mm

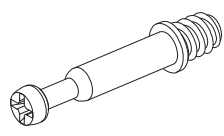


Step 4

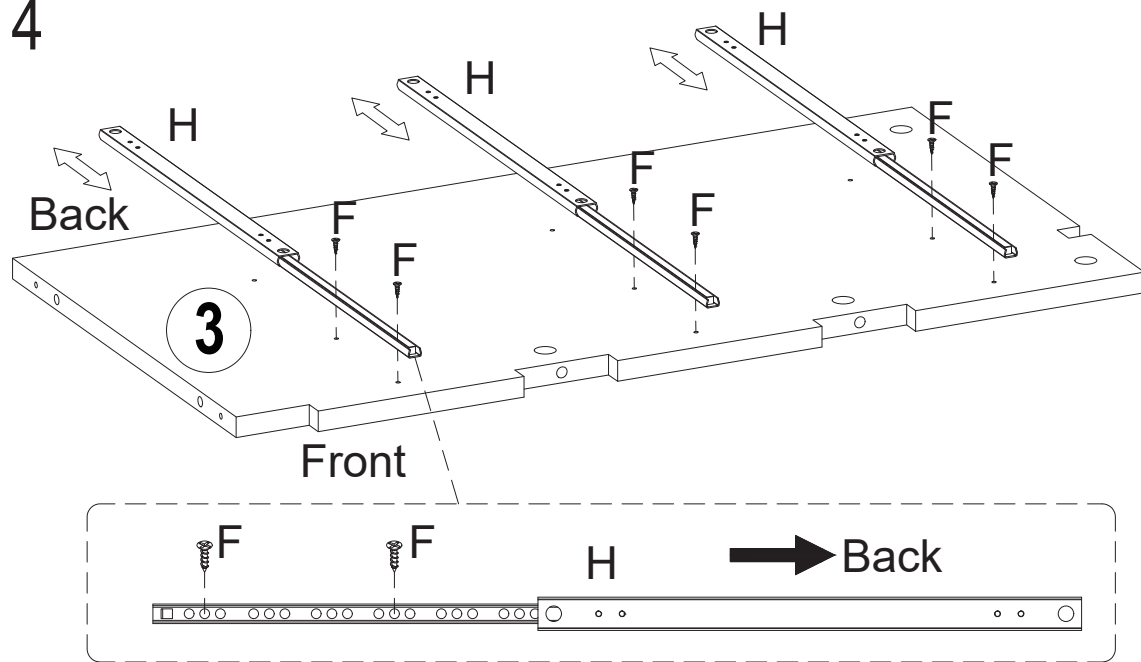

Tip: The slide rail must be pulled back; install the two front F-screws first.

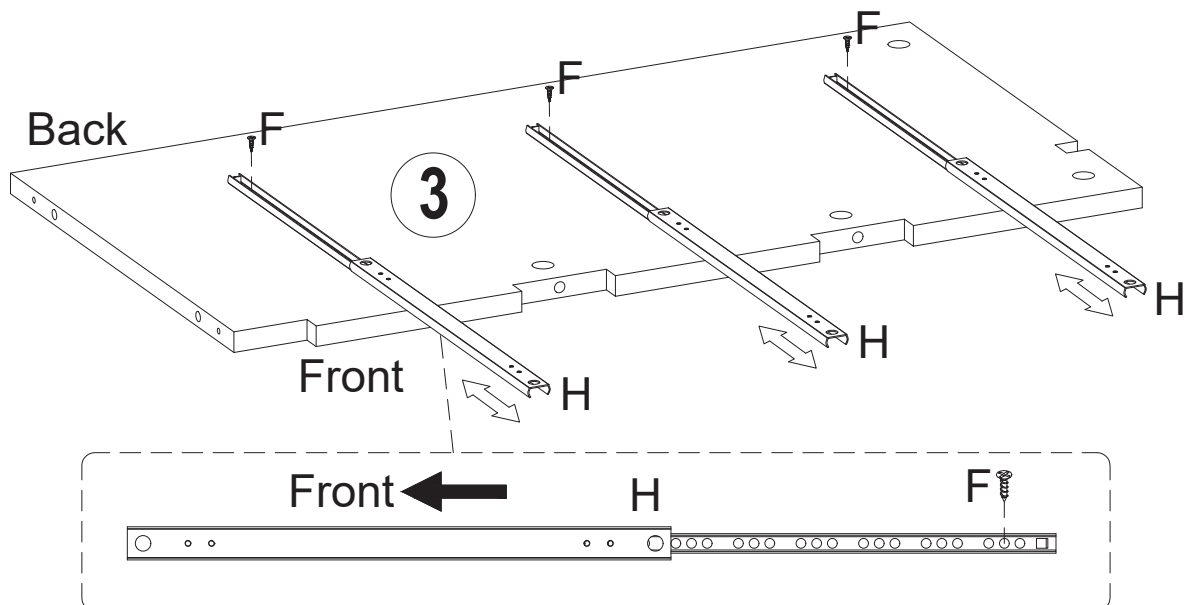


Tip: You need to pull the slide rail forward to install the rear F-screw.

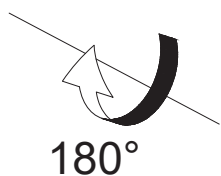


Tip: After completing Step 4 (installing the slide rail), flip the unit over to the other side to proceed with Step 5 (installing the remaining slide rail). Please carefully verify the orientation of the slide rail installation.


No. F
Quantity: 9 PCS
Screw
ø3.5x12mm




No. H
Quantity: 3 PCS
Drawer Slider
278mm

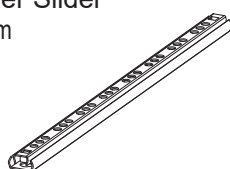

Step 5

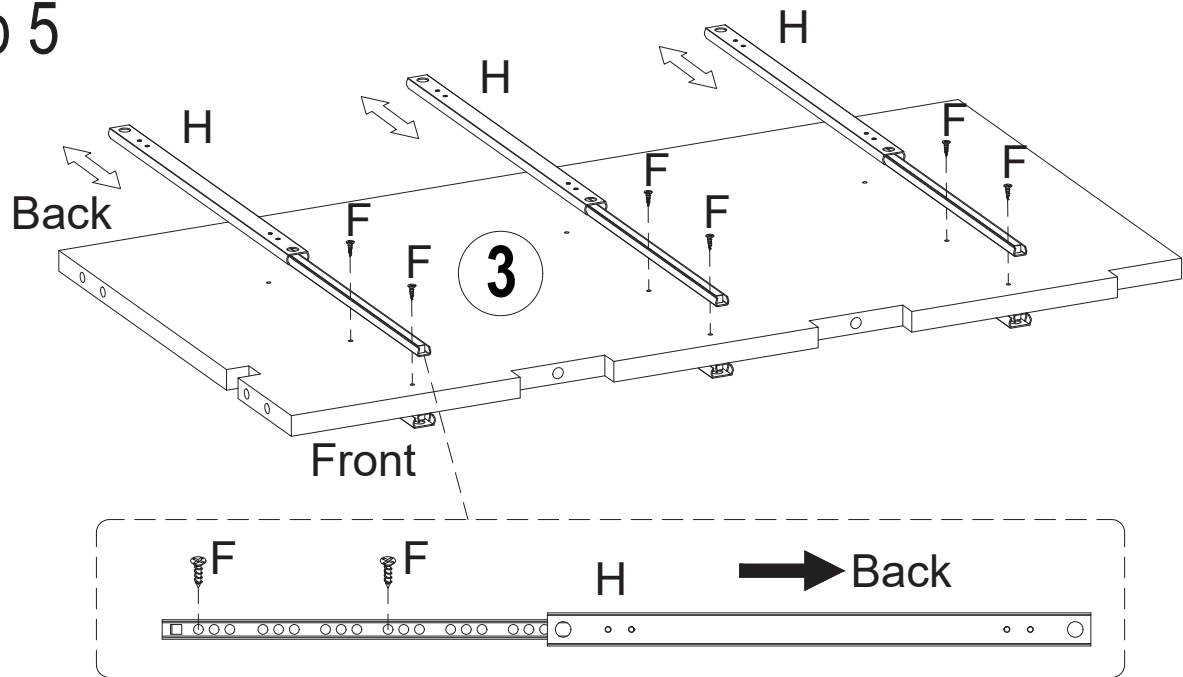


Tip: The slide rail must be pulled back; install the two front F-screws first.

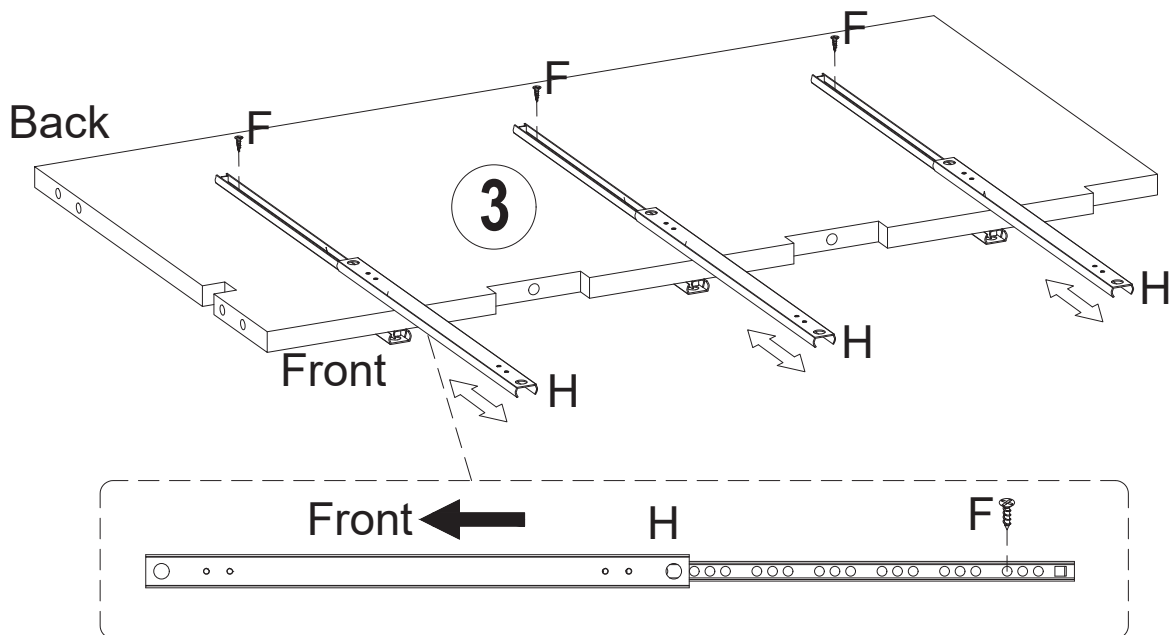


Tip: You need to pull the slide rail forward to install the rear F-screw.


No. F
Quantity: 9 PCS
Screw
ø3.5x12mm




No. H
Quantity: 3 PCS
Drawer Slider
278mm

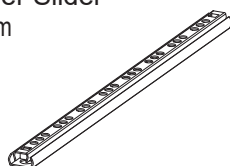


Step 6

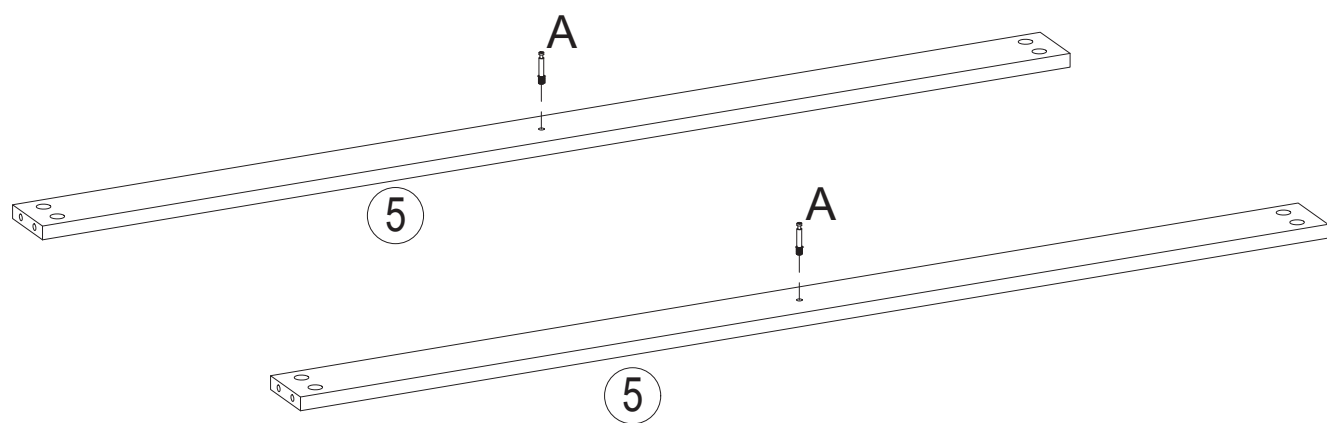


No. A
Quantity: 2 PCS
Cam Bolt
ø6x33.5mm

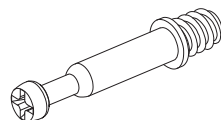


Step 7

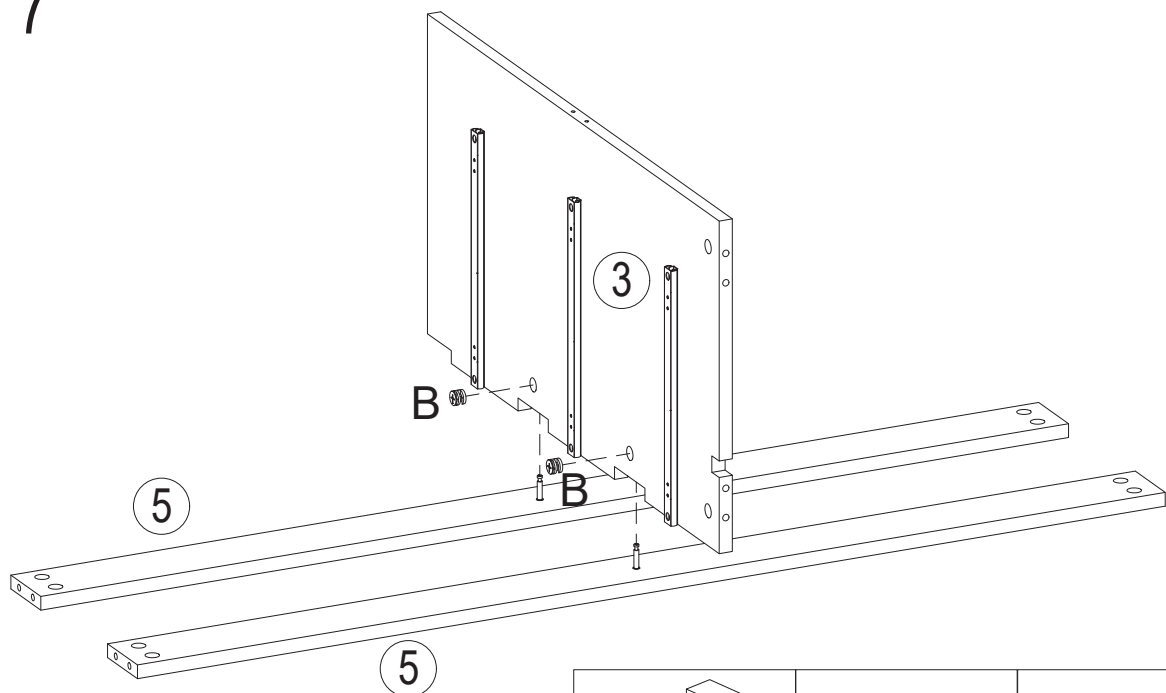

No. B
Quantity: 2 PCS
Cam
ø15x9.5mm

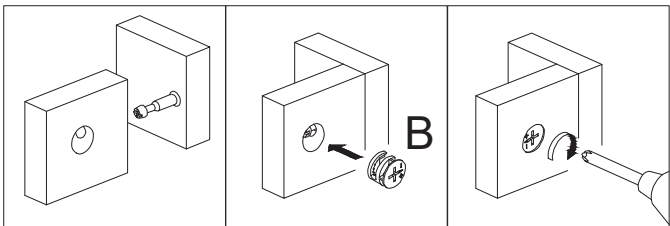


Step 8

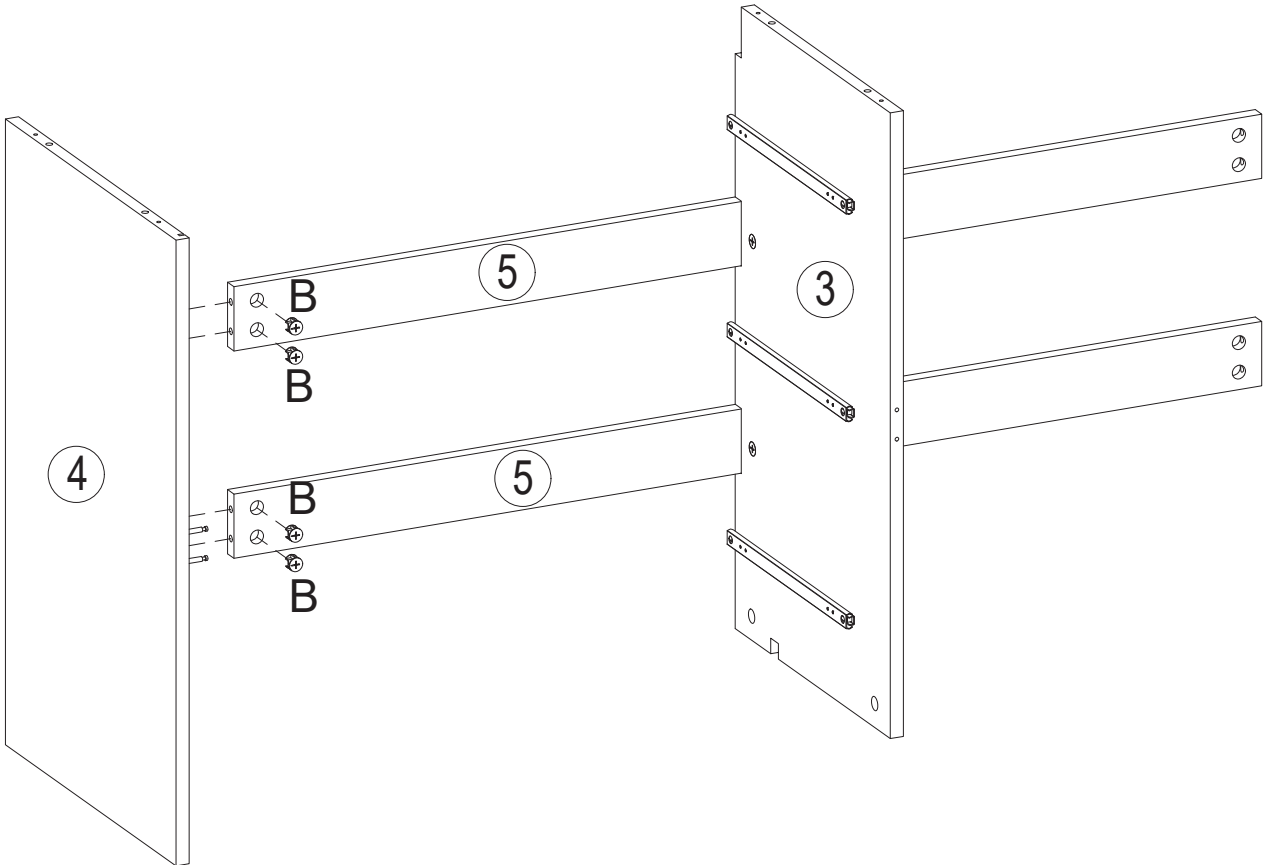

No. B
Quantity: 4 PCS
Cam
ø15x9.5mm




Step 9

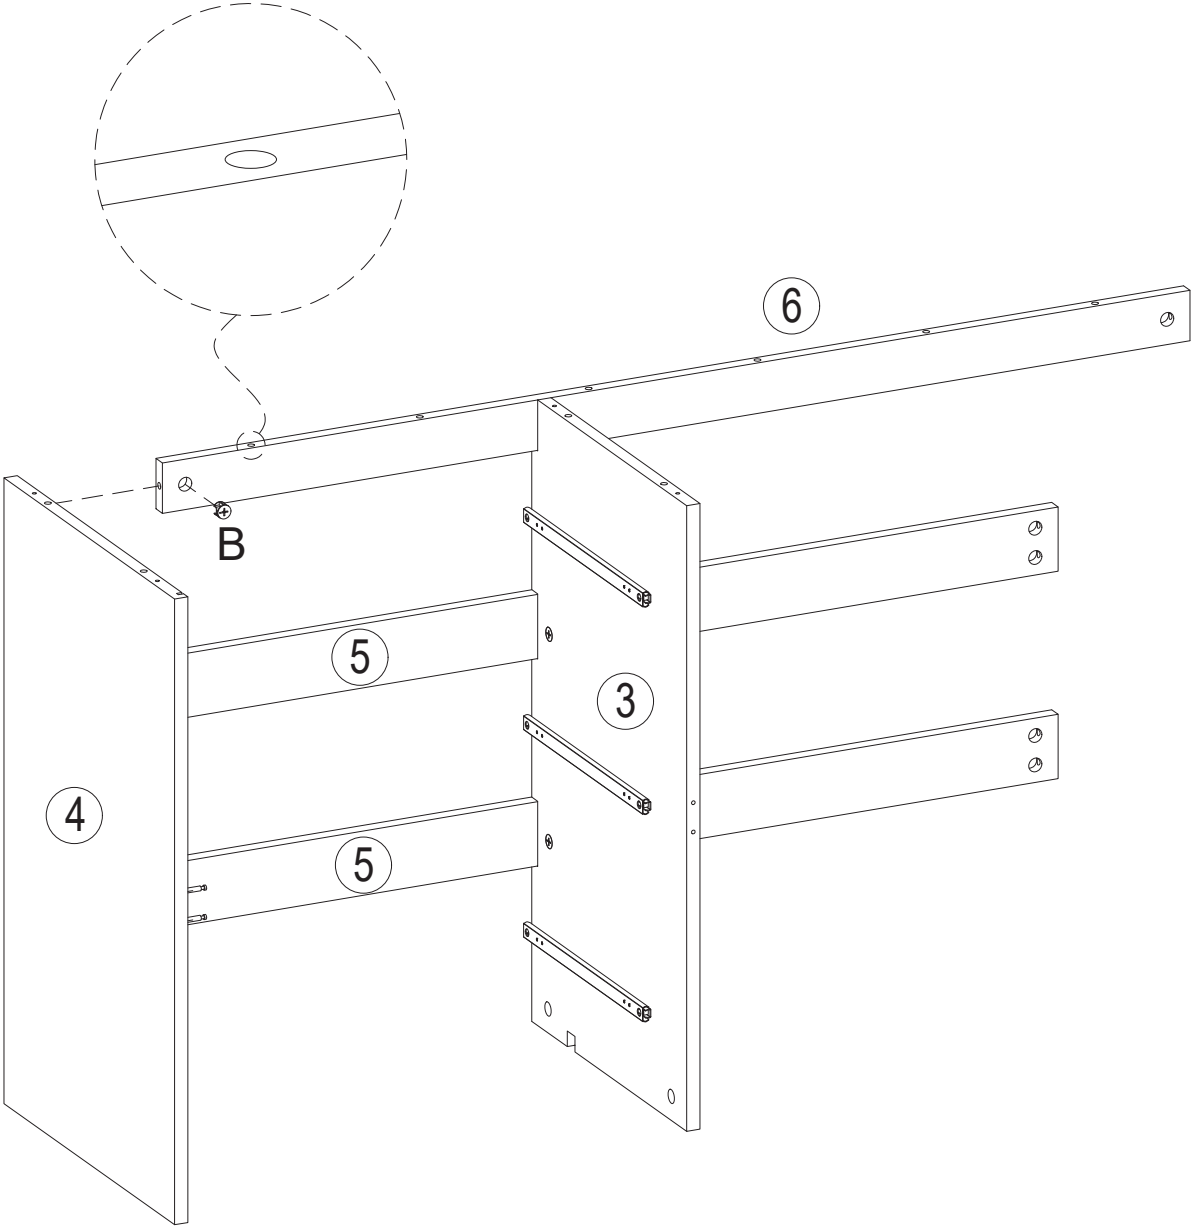

No. B
Quantity: 1 PC
Cam
ø15x9.5mm




Step 10

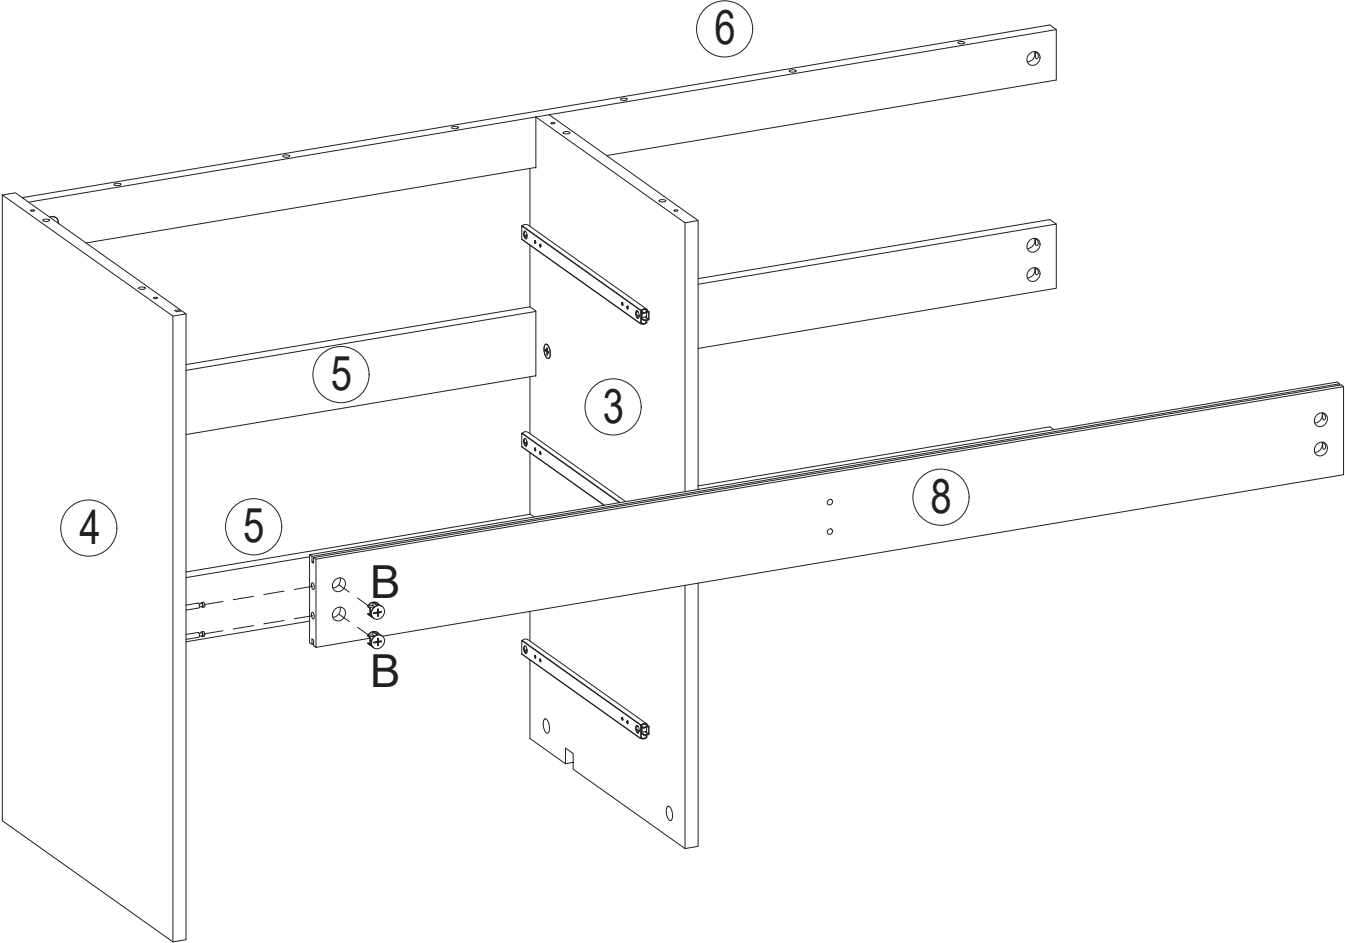


No. B
Quantity: 2 PCS
Cam
ø15x9.5mm




Step 11

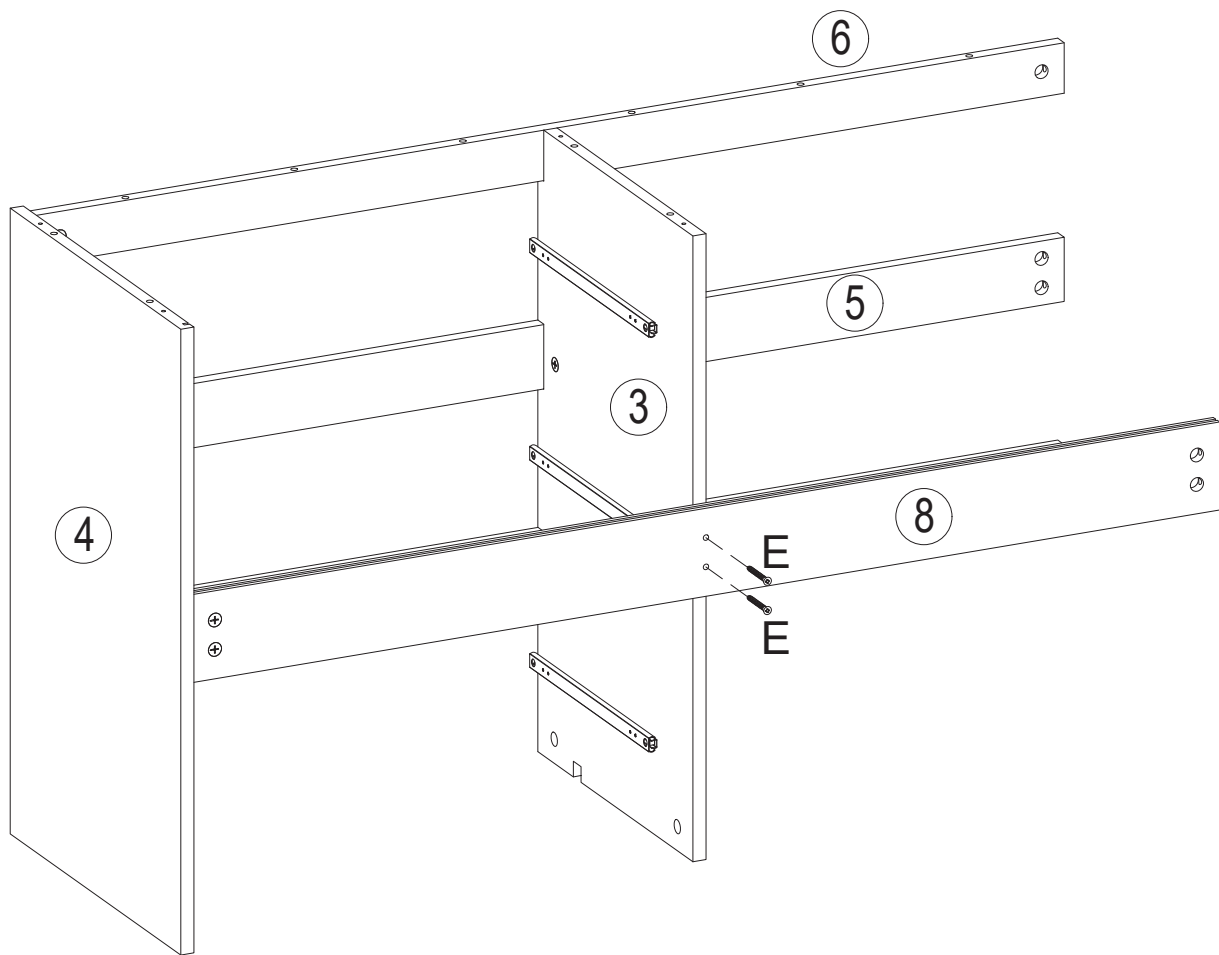

No. E
Quantity: 2 PCS
Screw
ø5x48mm

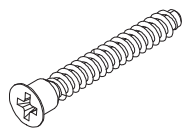


Step 12

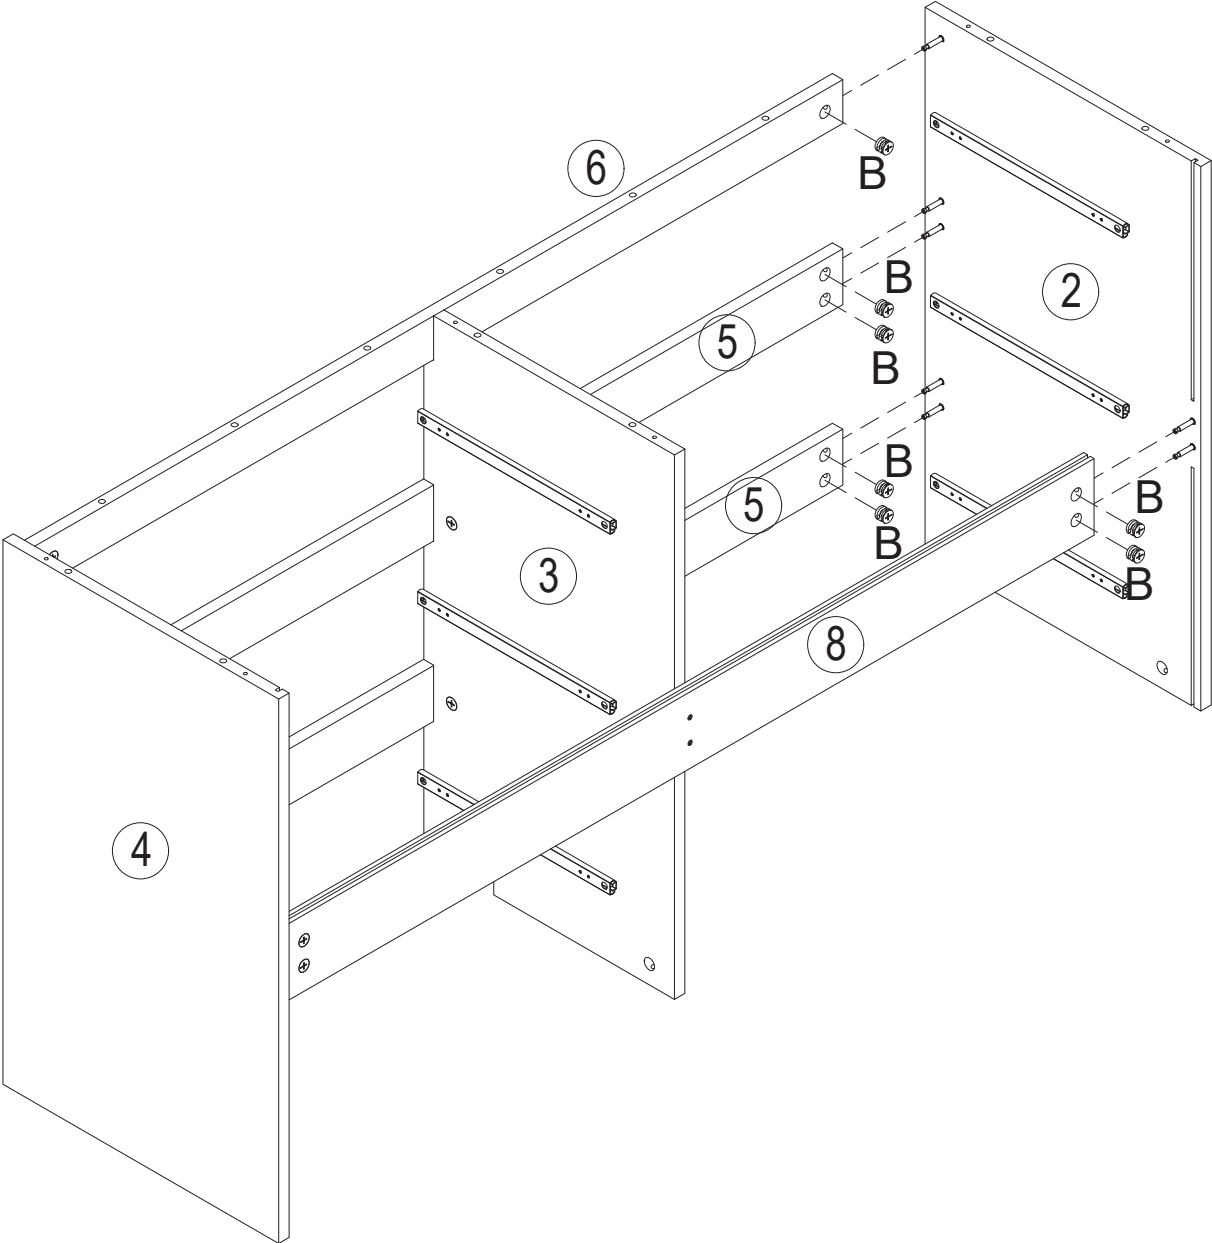


No. B
Quantity: 7 PCS
Cam
ø15x9.5mm




Step 13

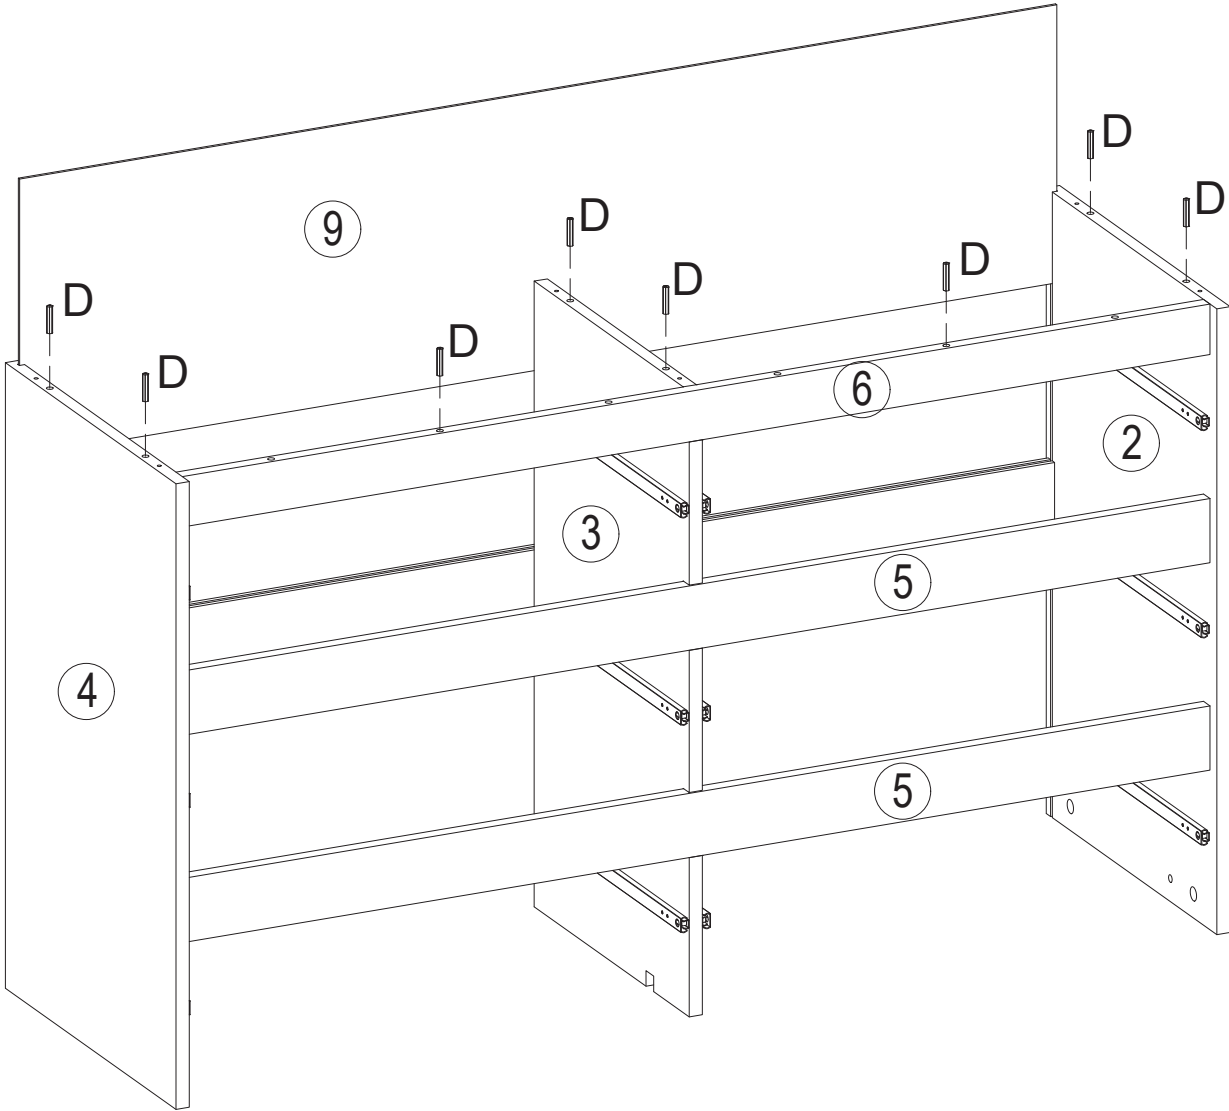


No. D
Quantity: 8 PCS
Dowel
ø6x30mm




Step 14

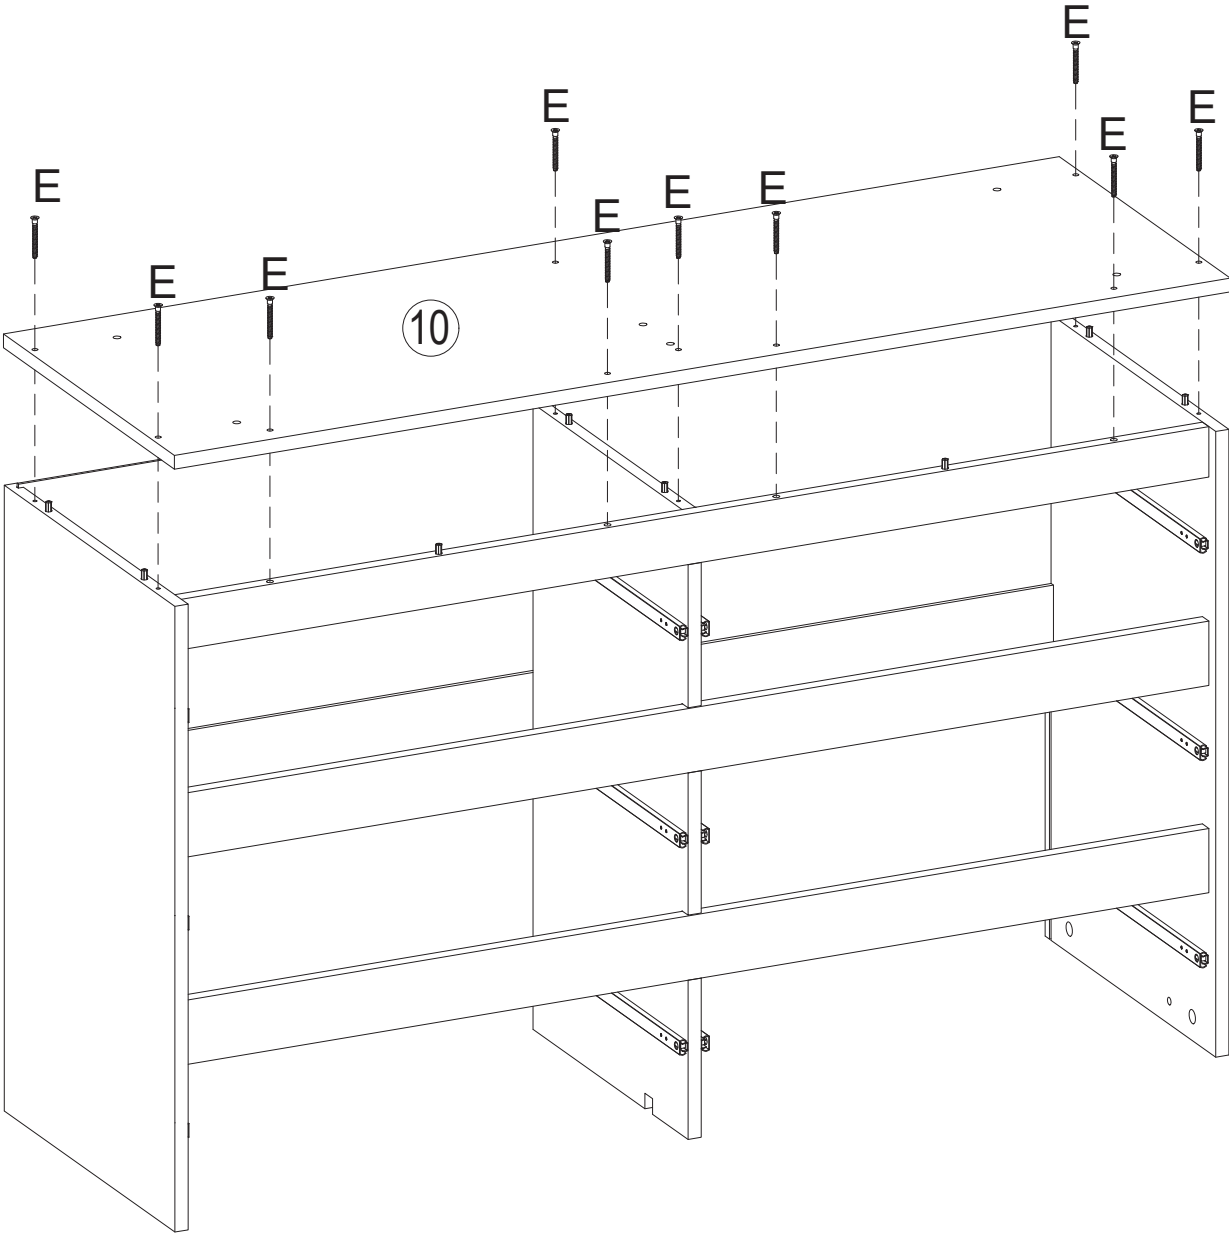


No. E
Quantity: 10 PCS
Screw
ø5x48mm

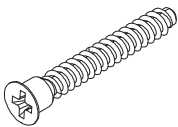

Step 15

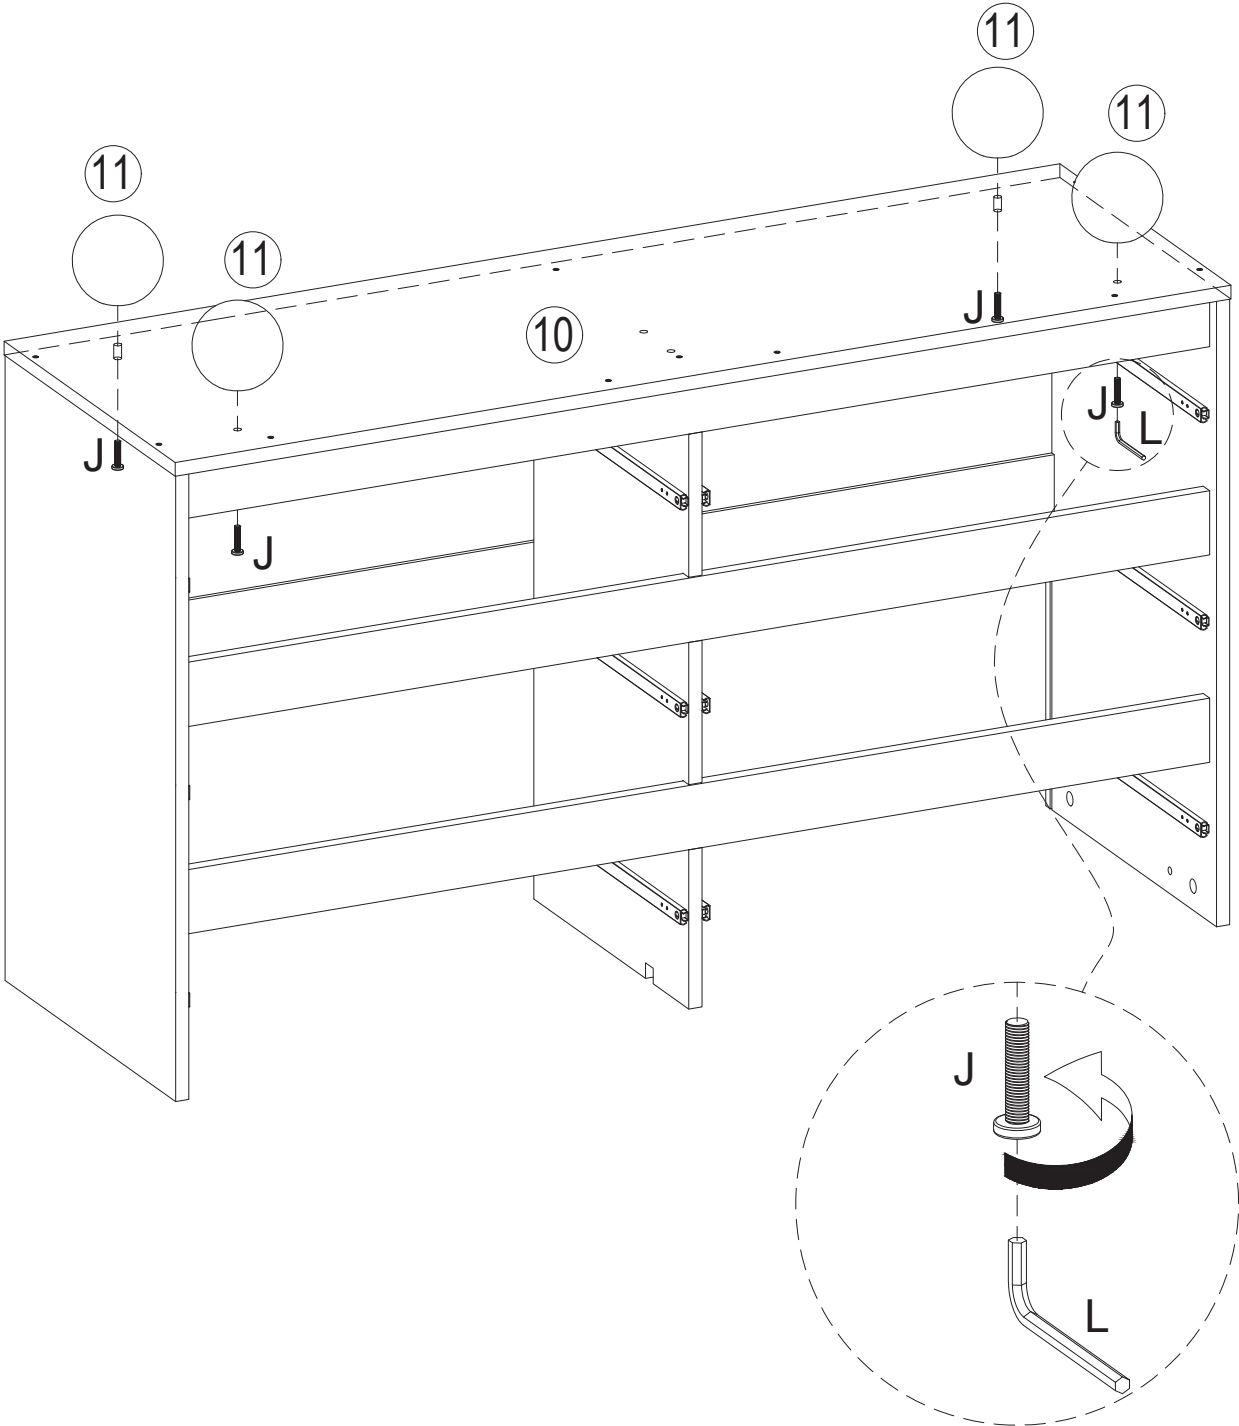



No. J
Quantity: 4 PCS
Bolt
M6x28mm



No. L
Quantity: 1 PC
Hex Key
4mm





Step 16

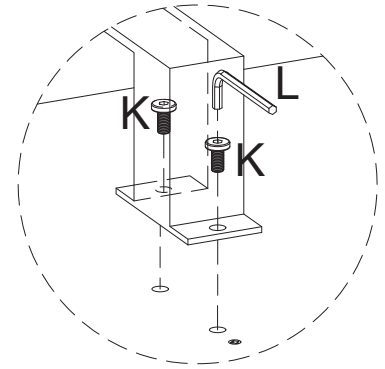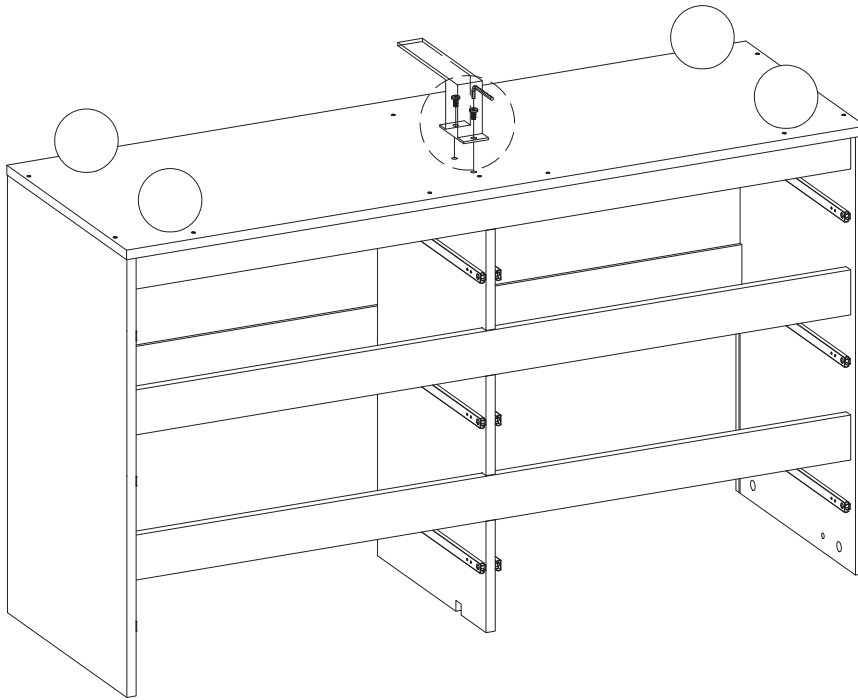


NOTE:

For more stable ,the L leg also can be installed oppositly.

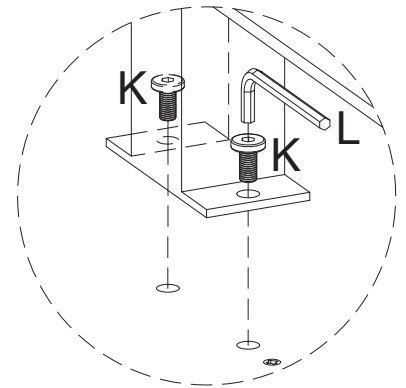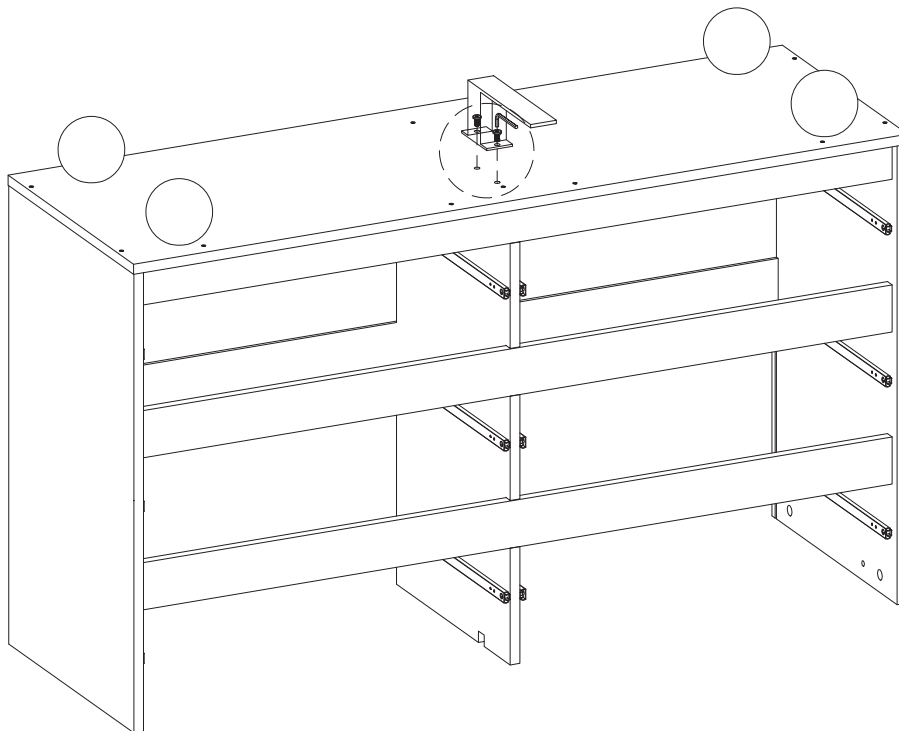



No. K
Quantity: 2 PCS
Bolt
M6x12mm



No. L
Quantity: 1 PC
Hex Key
4mm




Step 17

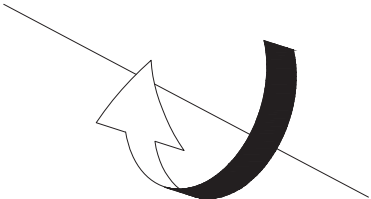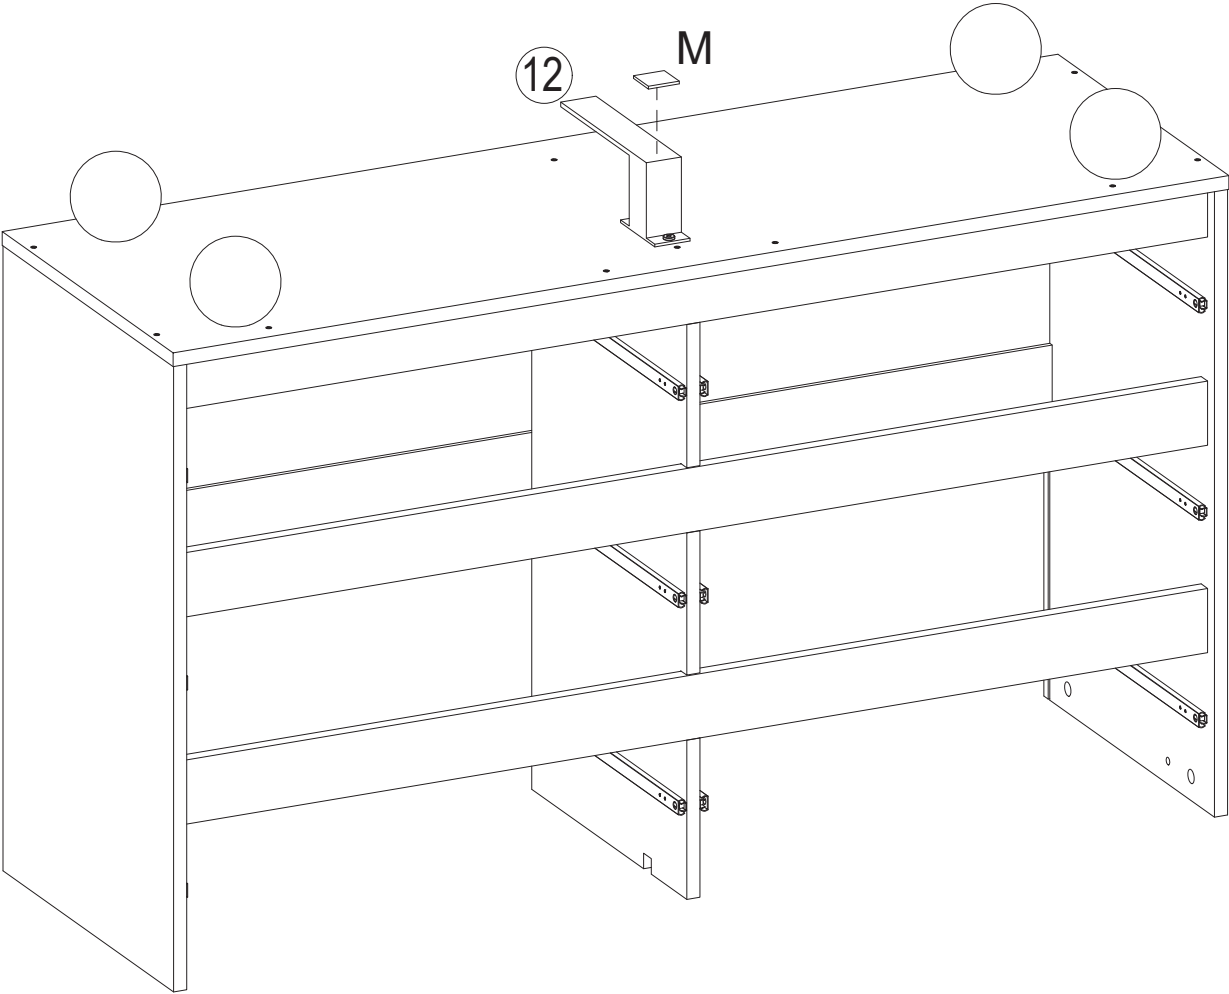


180°


No. M
Quantity: 1 PC
Foot Pad
35x35x3mm



Step 18

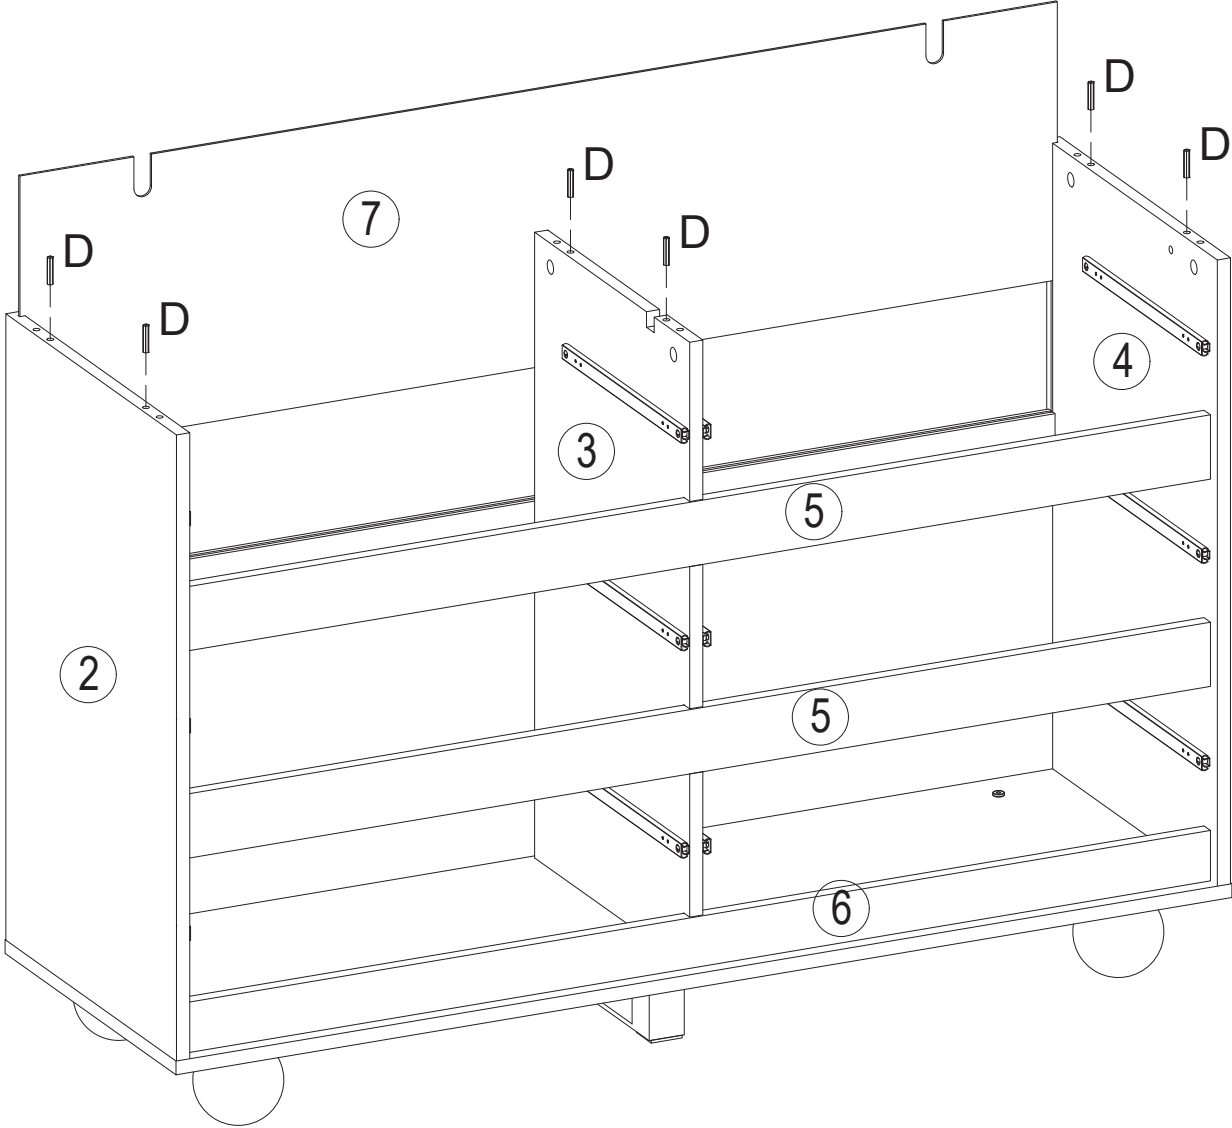


No. D
Quantity: 6 PCS
Dowel
ø6x30mm




Step 19



Tighten All bolt #J to 80% first.
After completing Step21,
tighten All bolt completely.

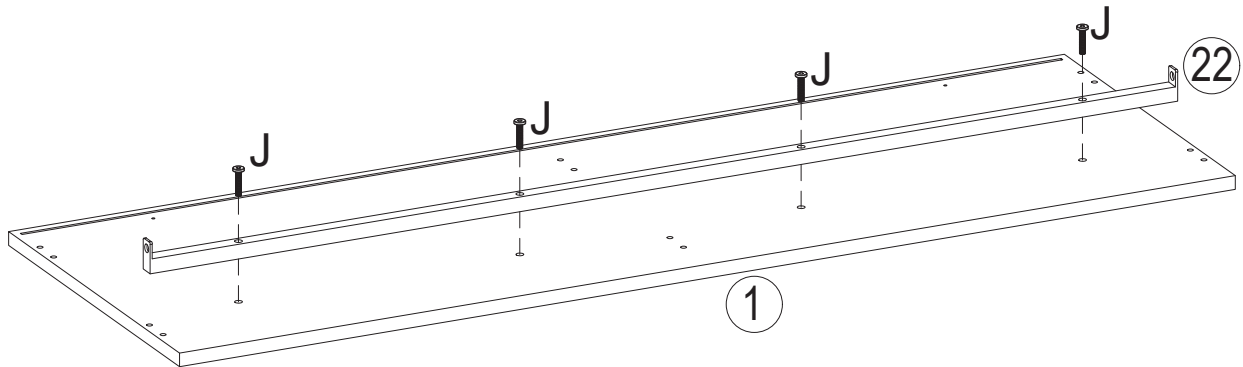


No. J
Quantity: 4 PCS
Bolt
M6x28mm




No. L
Quantity: 1 PC
Hex Key
4mm

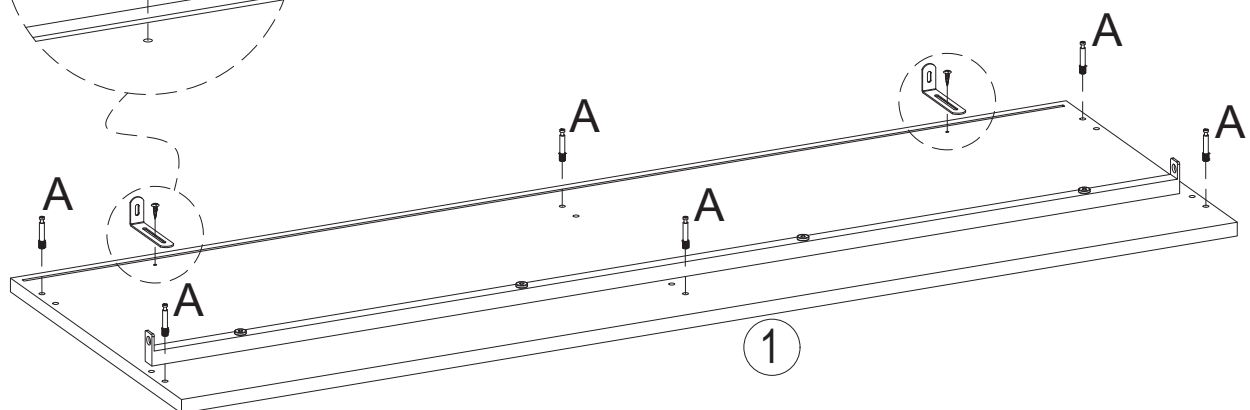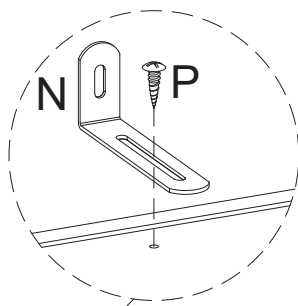


No. A
Quantity: 6 PCS
Cam Bolt
ø6x33.5mm

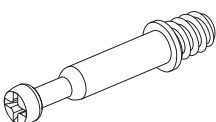


No. N
Quantity: 2 PCS
L-Shaped anti tipping iron
bar
76x15x30mm



No. P
Quantity: 2 PCS
Screw
ø4x12mm



Step 20

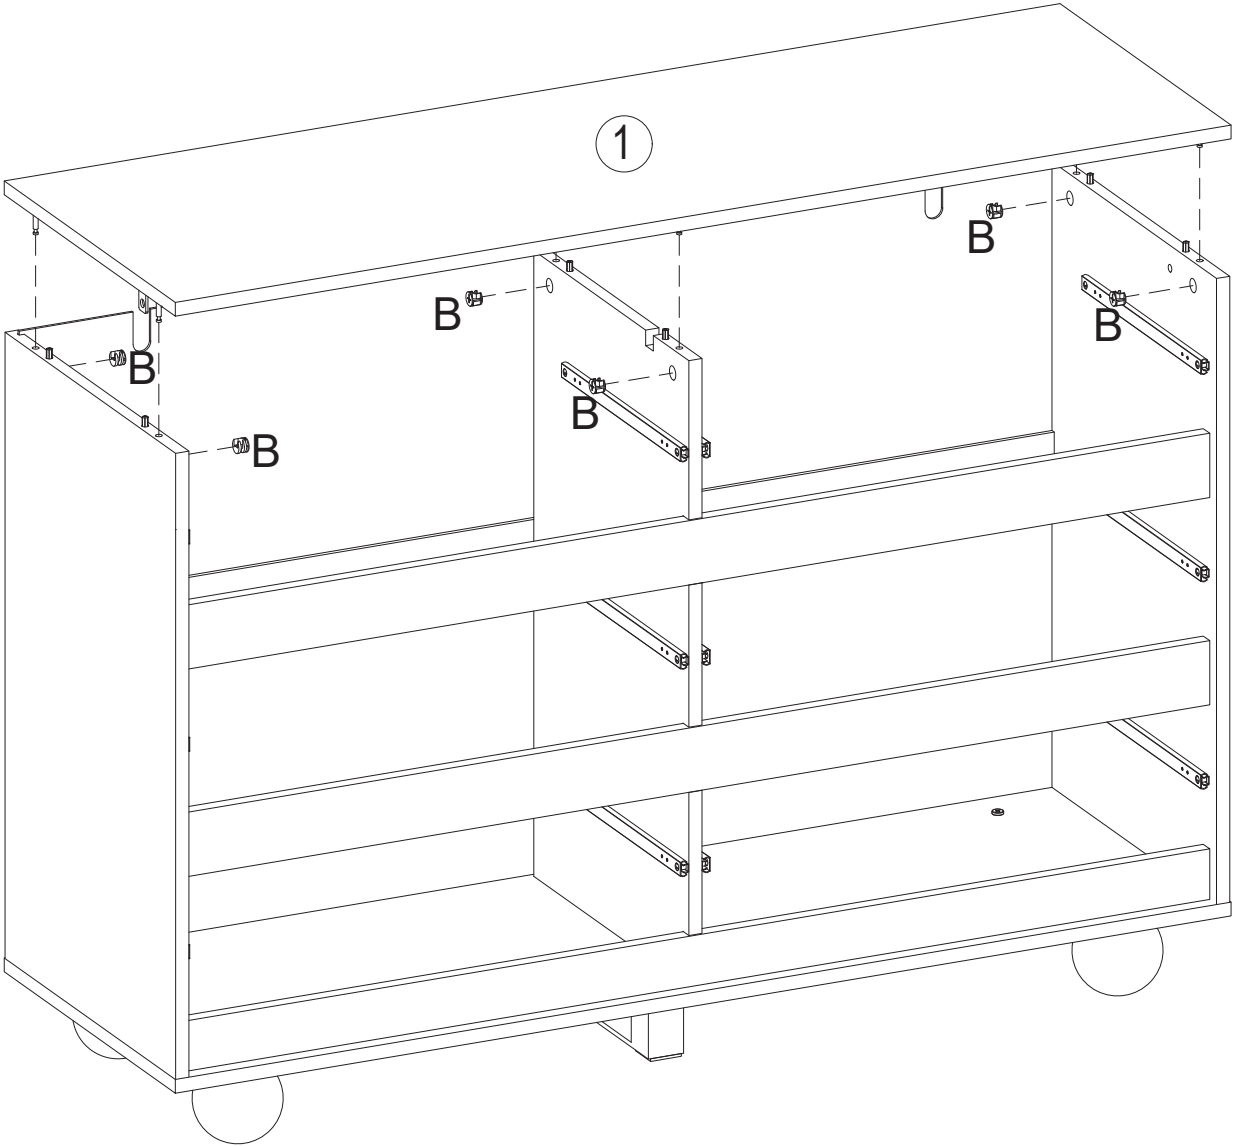


No. B
Quantity: 6 PCS
Cam
ø15x9.5mm



Step 21

NOTE:
Tighten all Bolt (J and K) In the #22

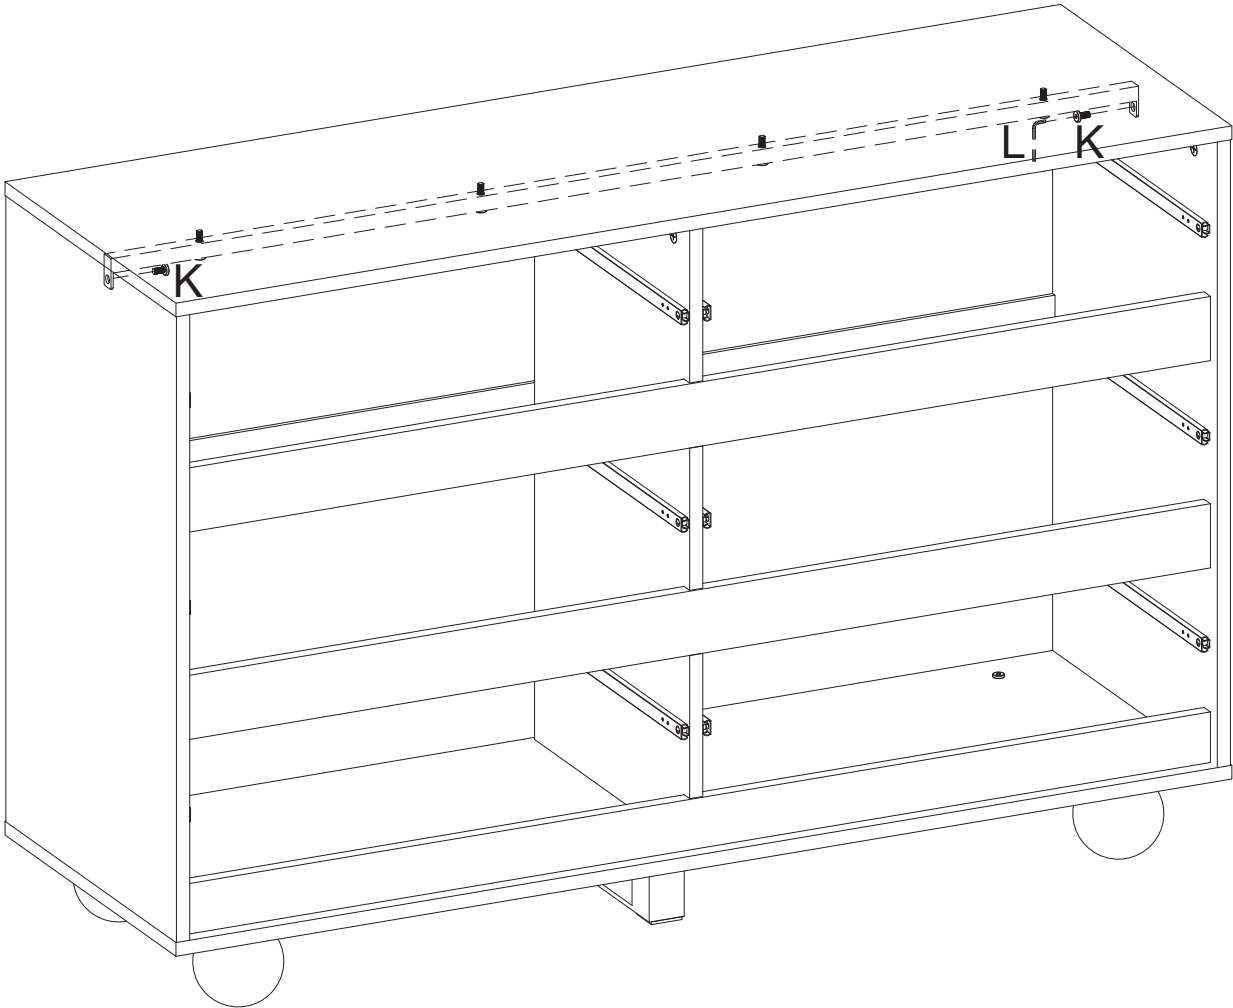

No. K
Quantity: 2 PCS
Bolt
M6x12mm





No. L
Quantity: 1 PC
Hex Key
4mm




Step 22


Please Note: To ensure greater product stability, parts S and R must be installed according to the instructions. Failure to install them will cause the product to wobble.

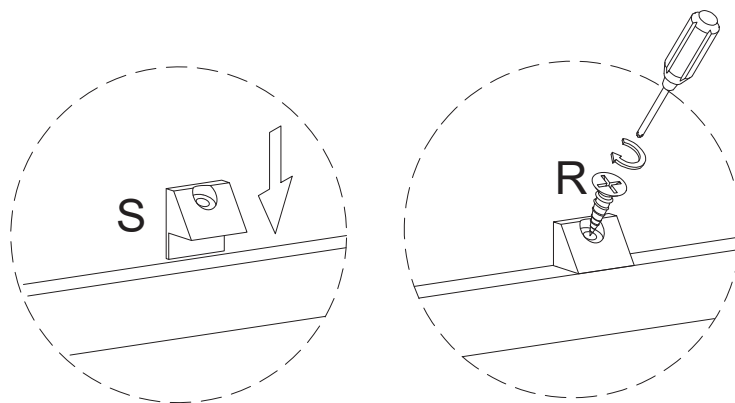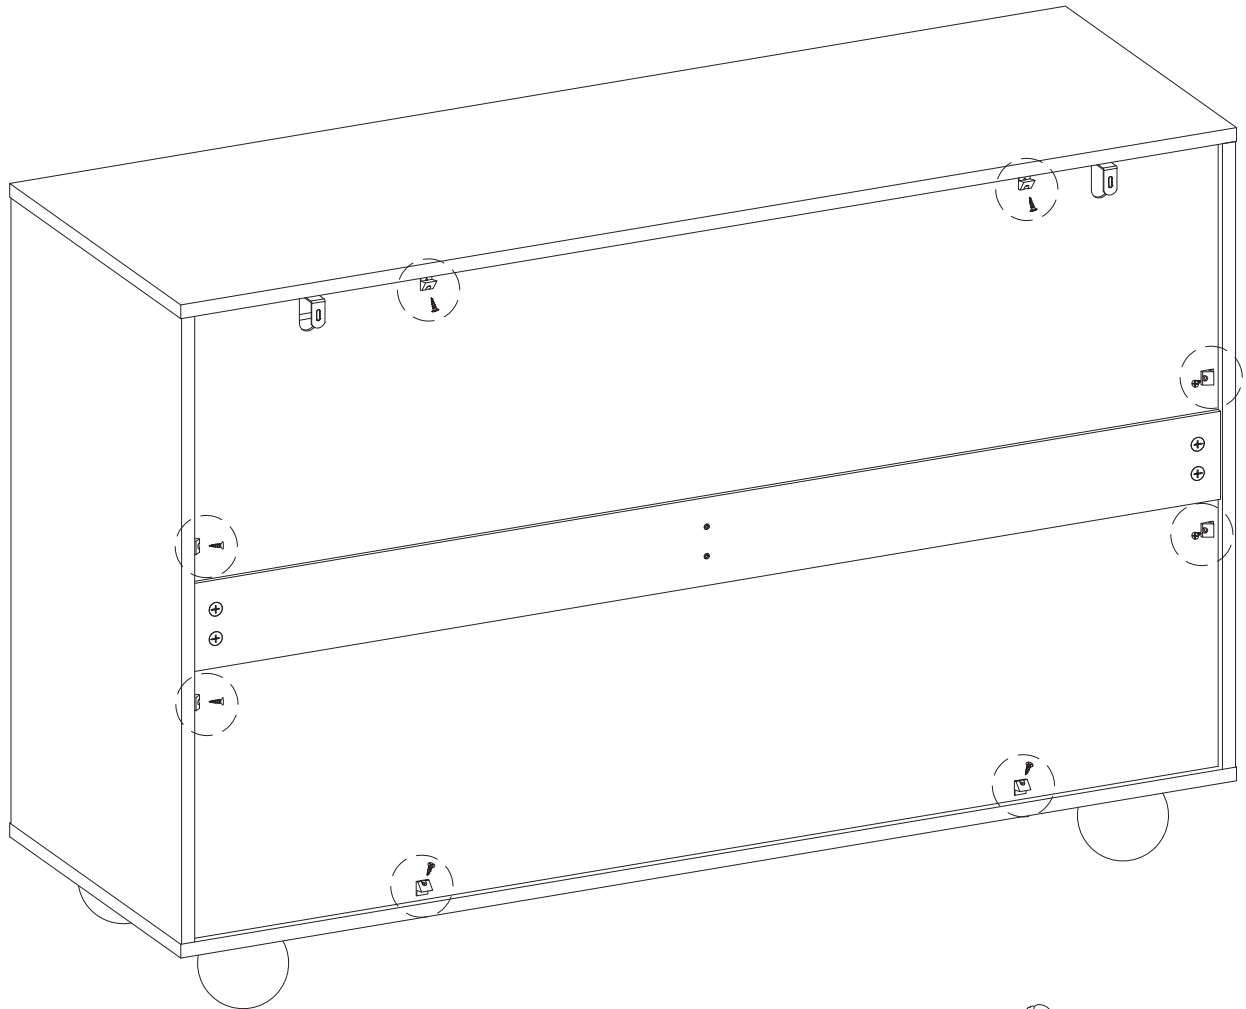

No. R
Quantity: 8 PCS
Screw
ø3x16mm





No. S
Quantity: 8 PCS
Back Buckle
15x15x10mm




x8







Step 23

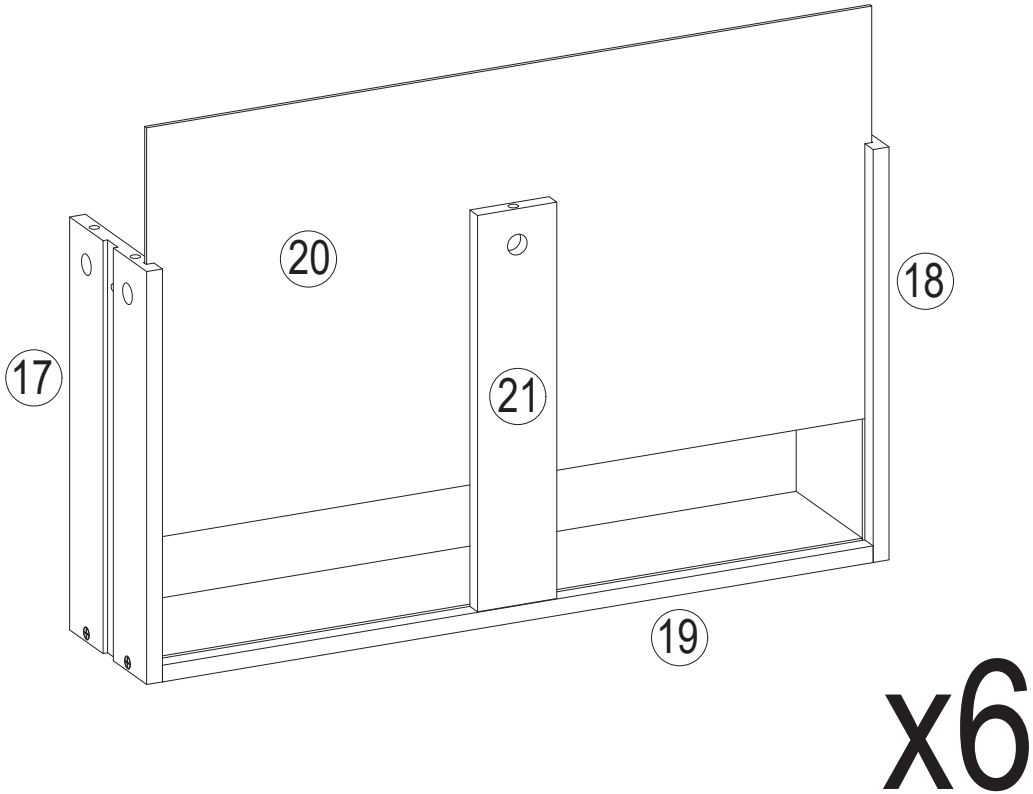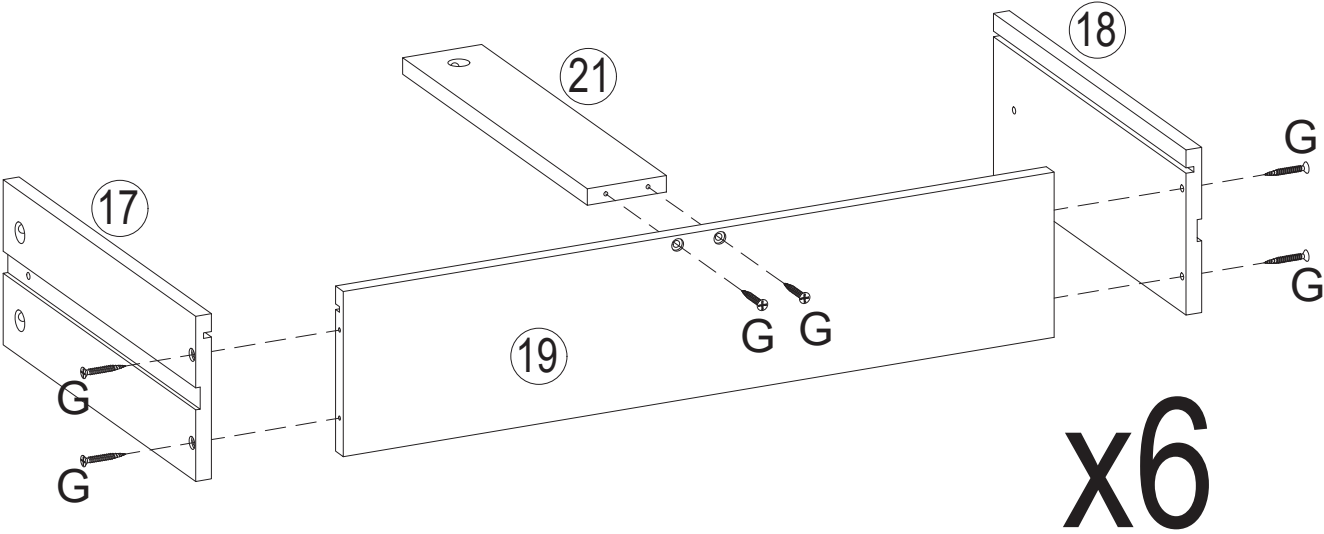


No. G
Quantity: 36 PCS
Screw
ø4x30mm









Step 24

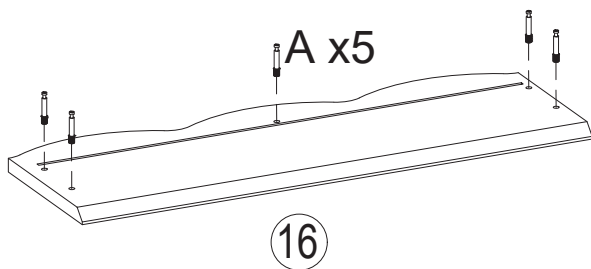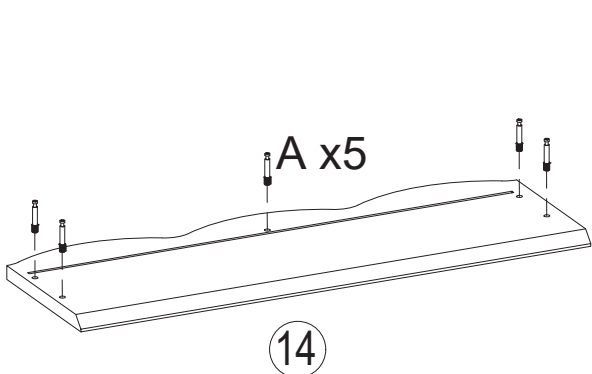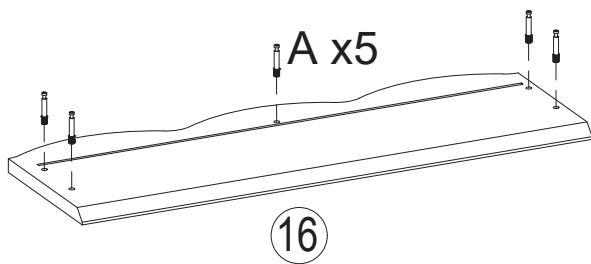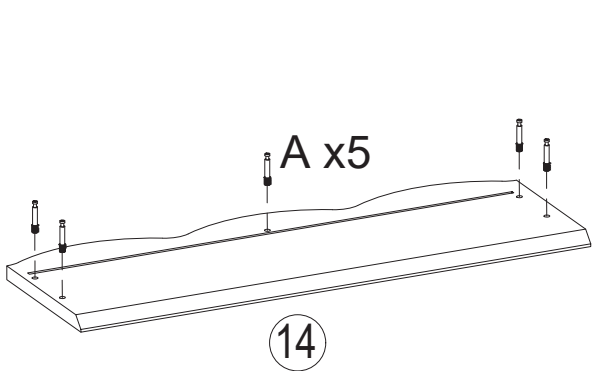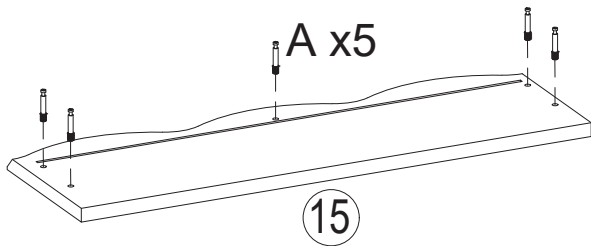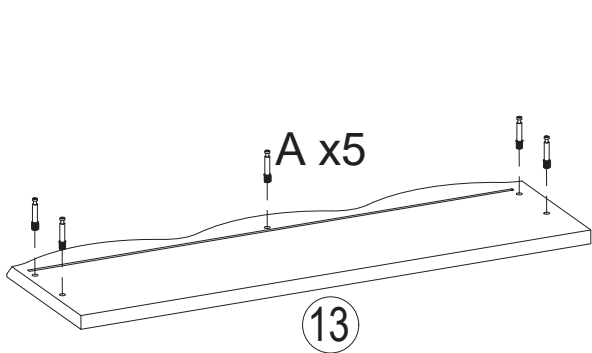

No. A
Quantity: 30 PCS
Cam Bolt
ø6x33.5mm




Step 25

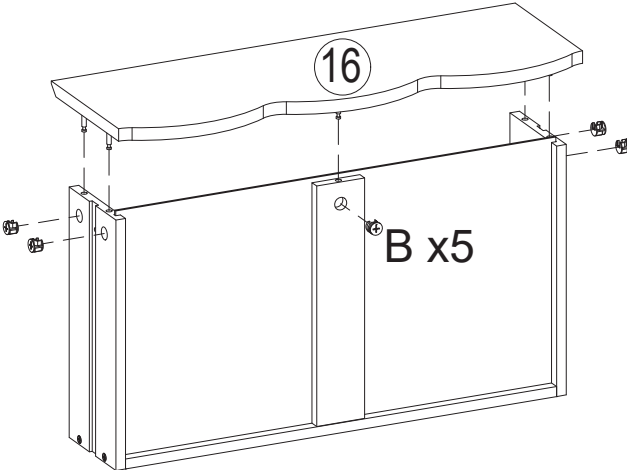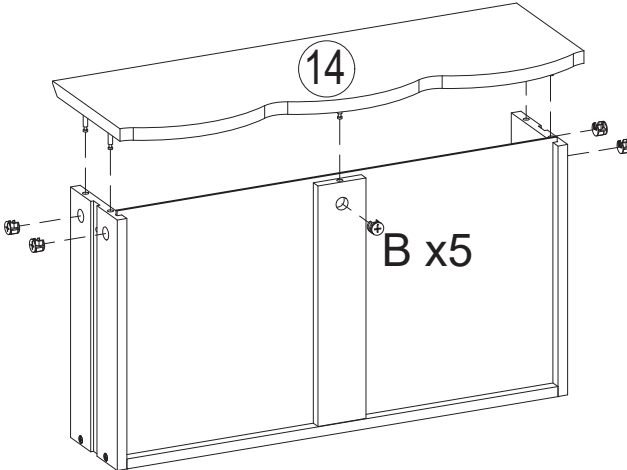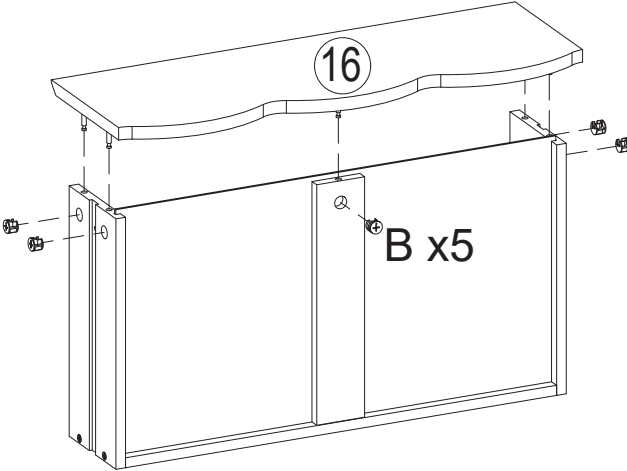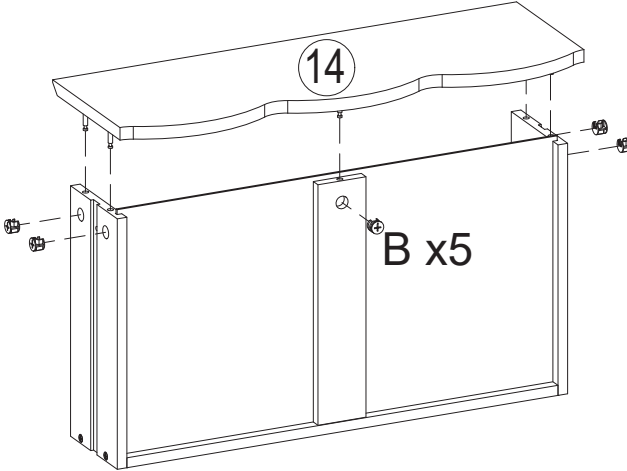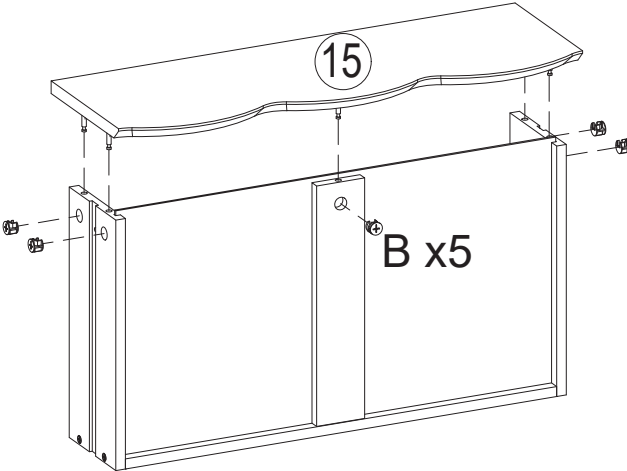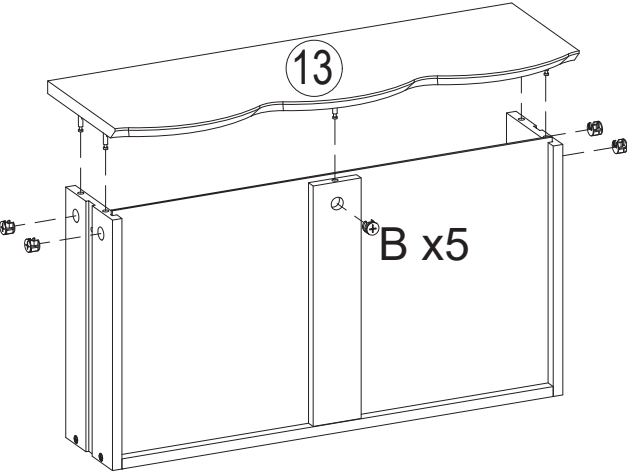


No. B
Quantity: 30 PCS
Cam
ø15x9.5mm



Step 26

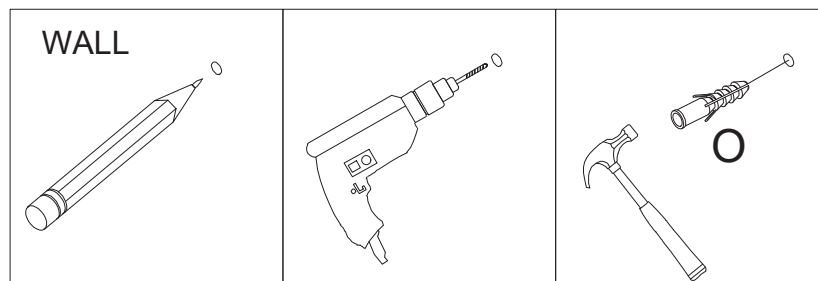


1. The customer must mark the desired mounting positions on the wall, then use their own hammer drill to drill holes into the wall surface.
2. Use a hammer to tap the two plastic expansion anchors into the wall.
3. Insert the corresponding screws into the plastic expansion anchors to complete the installation.

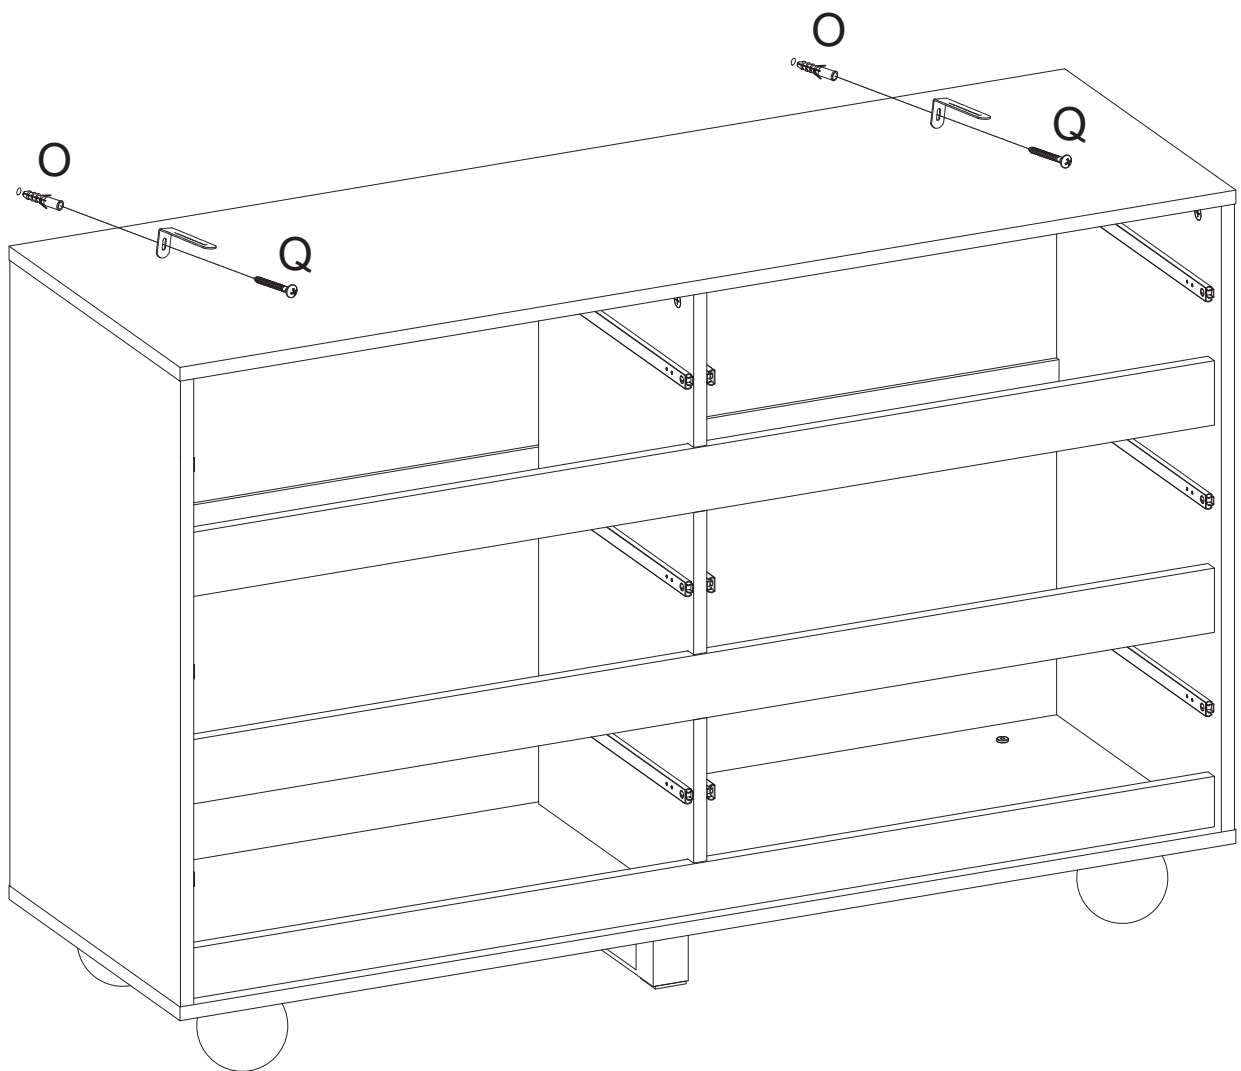


No. O

Quantity: 2 PCS
Plastic Expansion
ø8x40mm

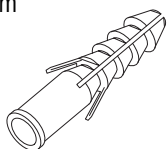


No. Q






Quantity: 2 PCS
Screw
ø4x38mm

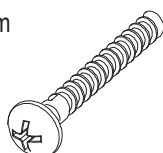

Step 27

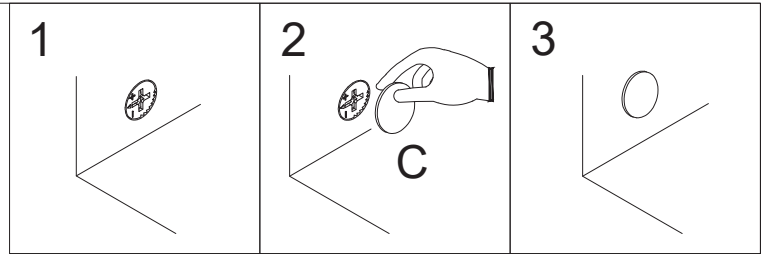

C is a cover, and B is a lock. Once B is installed, it will be very noticeable, so using C to cover it up looks much better. (There are as many Cs as there are Bs.)

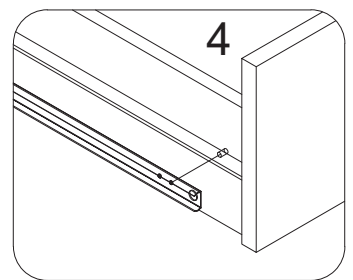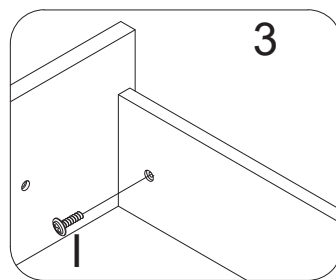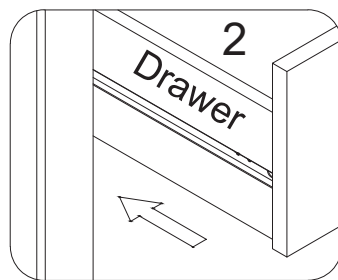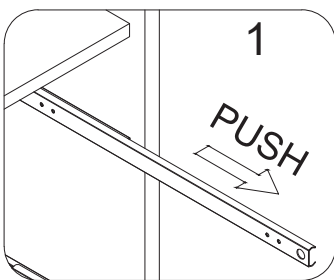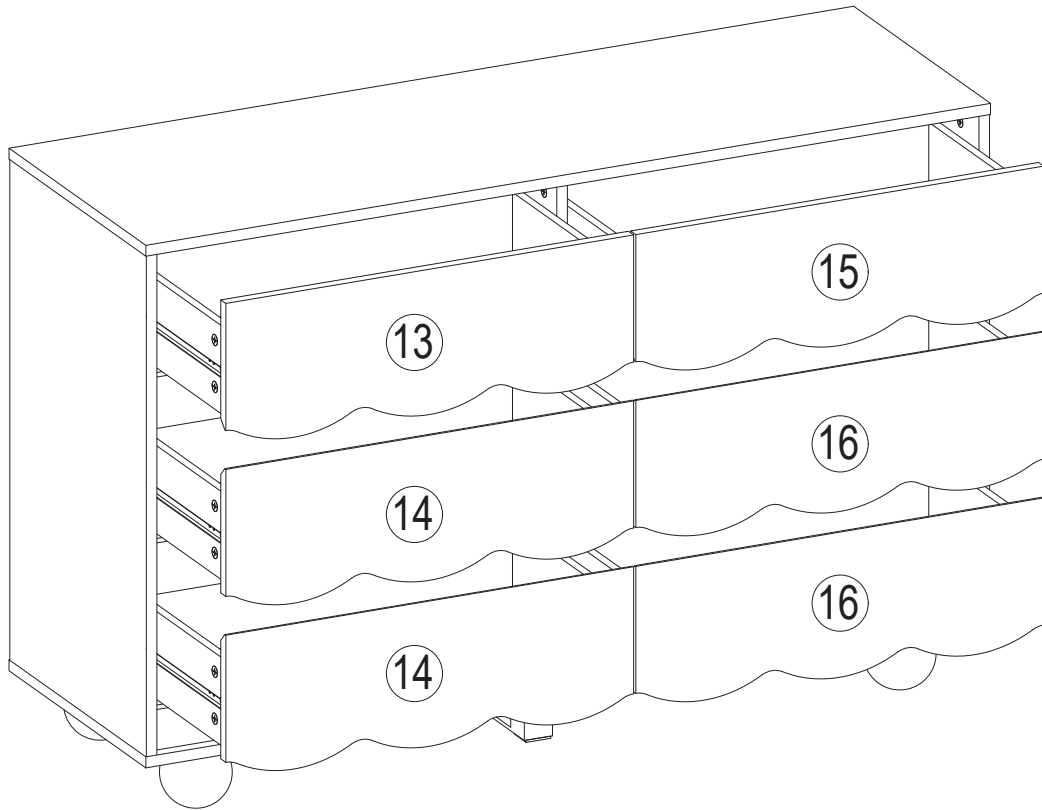


Tip: I-Screws must be installed on both sides of the drawer.
This applies to all 6 drawers; please ensure none are omitted.


No. C
Quantity: 52 PCS
Sticker
ø20mm




No. I
Quantity: 12 PCS
Screw
M4x10mm



Step 28

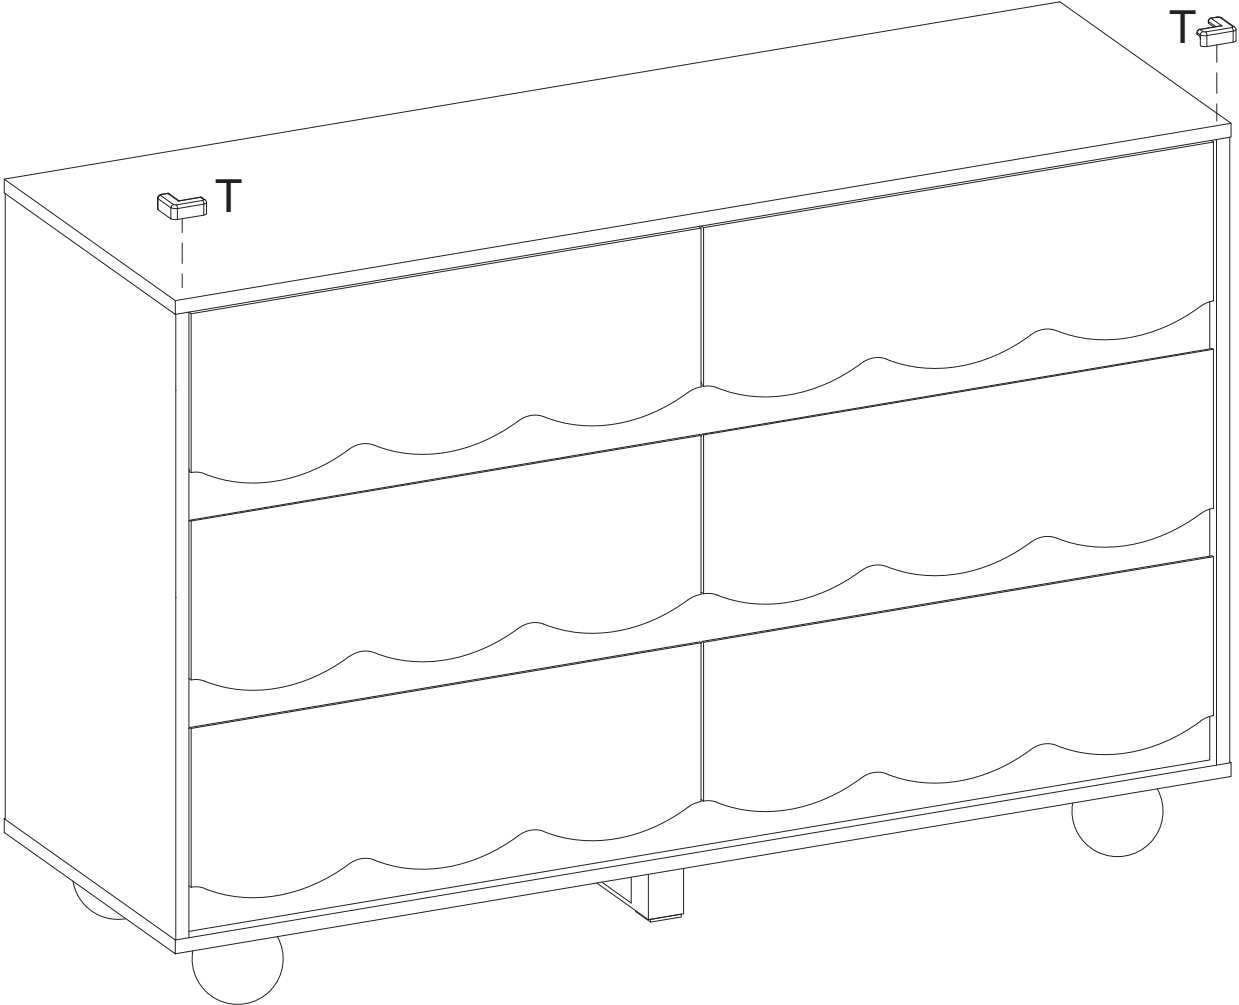

No. T
Quantity: 2 PCS



Step 29

