




ASSEMBLY INSTRUCTIONS
CASTA QUEEN BED ITEM# 19600WAL

ASSEMBLY
REQUIREMENTS

2-Pers
Assembly

2 Hours
Assembly Time
(Approximate)

Tools Required
(Not Provided)


Phillips Screwdriver



Flat Screwdriver

Thank you for purchasing our product!

Please refer and use this assembly instruction to assemble the product. Contact our customer service department in case there are any missing or damage parts or hardware. Replacement parts are normally shipped within 2 or 3 days.

Email: replacementparts@buylateral.com
Within 30 days from delivery date

We appreciate your business!

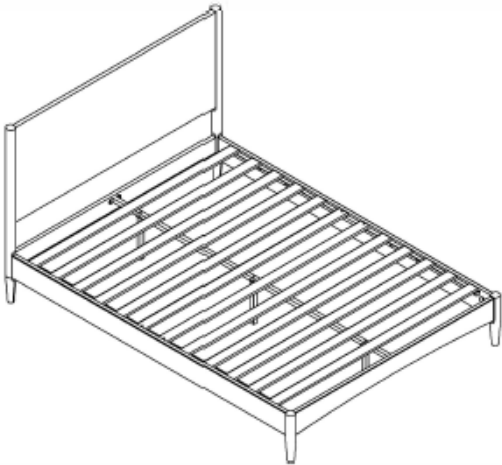

ASSEMBLY PREPARATION

1. Remove all packaging materials, staples and packing straps from the carton.
2. Refer to Parts List and Hardware List, and ensure parts and hardware are correct before assembly.
Contact customer service for missing parts.
3. Place all wooden parts on a clean, flat and soft surface (e.g. carpet or rug) to prevent scratch and damage to parts.

SAFETY PRECAUTION

1. KEEP ALL HARDWARE PARTS OUT OF REACH OF CHILDREN.
2. DISPOSE PLASTIC PACKAGING MATERIAL IMMEDIATELY TO AVOID ANY RISK OF SUFFOCATION TO CHILDREN AND ANIMALS.

TIPS FOR ASSEMBLY







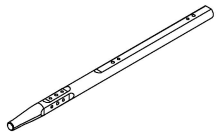
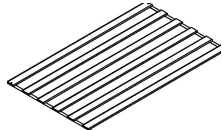
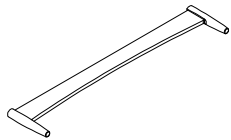
1. Allow ample room for assembly and assemble the product near where the product will be placed.
2. Assemble the product on a surface that does not scratch or damage the exterior gloss and finish of the furniture.
3. Identify all of the parts, hardware and quantities required for each step.
4. During assembly, do not over-tighten any fittings as this may cause damage.
5. DO NOT USE POWER TOOLS TO ASSEMBLE THIS PRODUCT.
6. Always place the product on a flat, level surface.
7. Do not sit or stand on the partially assembled product; only use the product for which it is intended.

CARE AND MAINTENANCE


- Use a slightly damp cloth to clean the product. Do not use bleach or abrasive cleaning material.
- Check all the fittings periodically and re-tighten as necessary. Do not use the product if any of the parts is damaged or broken.
- Never allow any kind of liquid to remain on your furniture. Absorption can cause wood to warp or delaminate.
- Do not place hot items (e.g. hot drinks) directly onto the wood surface.
- Do not drag and/or pull the furniture.

This product is for indoor and household use only - not for commercial use.



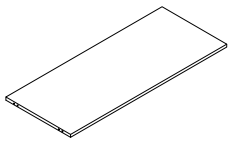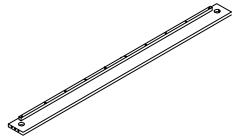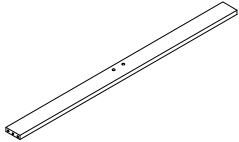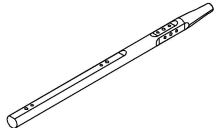


Parts List

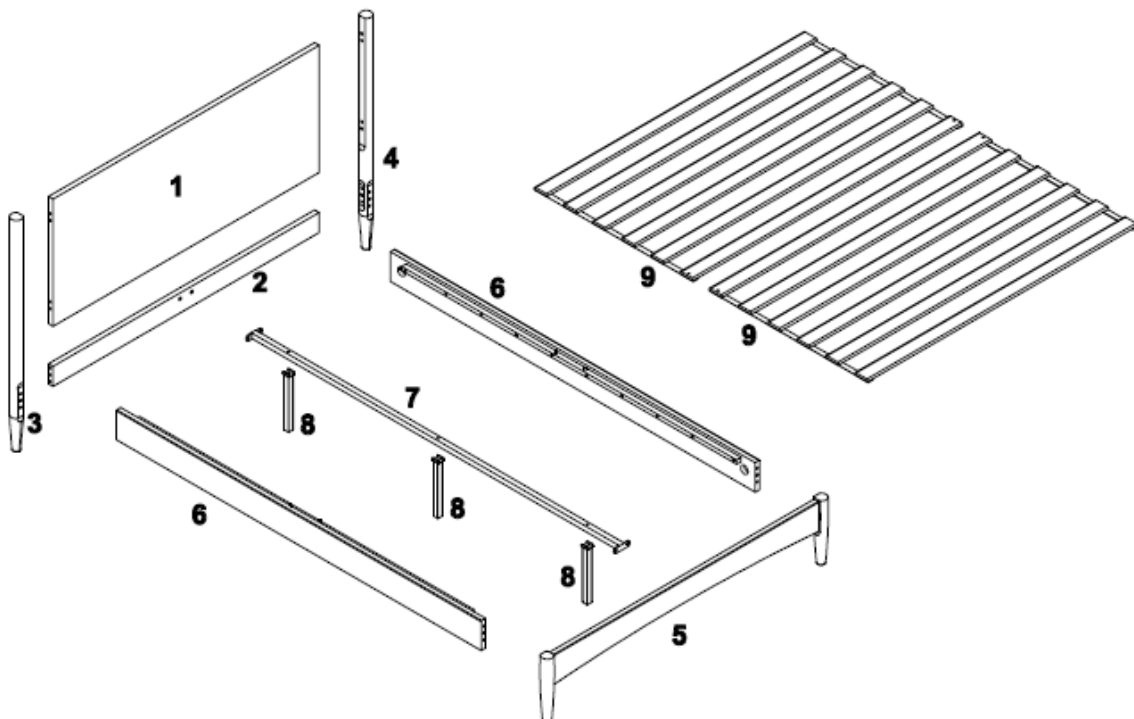




ITEM	DESCRIPTION	PART	QTY	ITEM	DESCRIPTION	PART	QTY
1	Headboard		1pc	6	Side Panel		2pc
2	Cross Bar		1pc	7	Middle Bar		1pc
3	Headboard Left Leg		1pc	8	Metal legs		3pc
4	Headboard Right Leg		1pc	9	Slats		2pc
5	Footboard		1pc				

Parts Assembly Overview




HARDWARE LIST

Item	Description	Part	Qty
A	Locking Pin		10
B	Locking Nut		10
C	Hex Nut		10
D	Cover		10
E	Screw 8x20mm		4


Item	Description	Part	Qty
F	Screw 8x35mm		3
G	Wood Dowel 10x40mm		16
H	Washer 8x22mm		7
I	Wrench		1
J	Allen Key		1

STEP 1

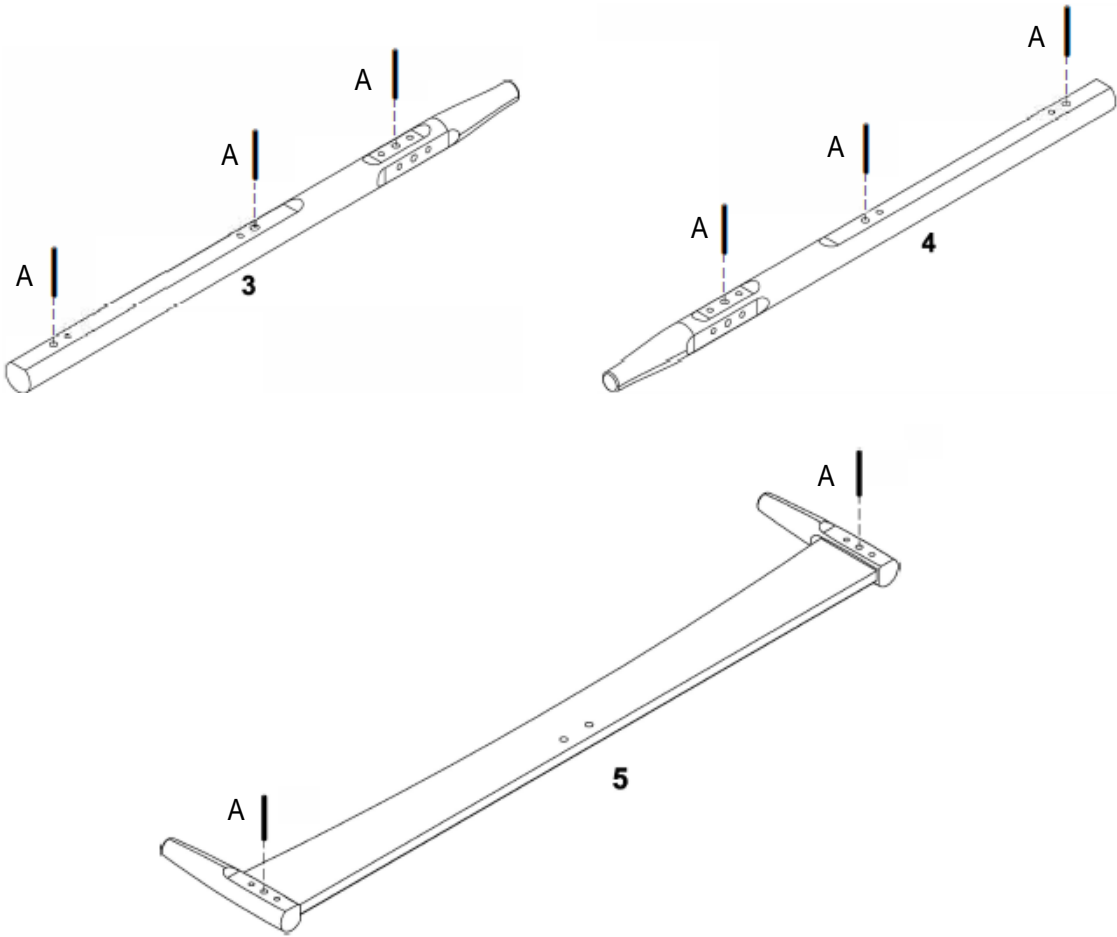


A. Lay Headboard Left Leg (3), Headboard Right Leg (4) and Footboard (5) as shown on a material that does not scratch or damage the parts and screw in Locking Pin (A) into the designated holes.

STEP 2

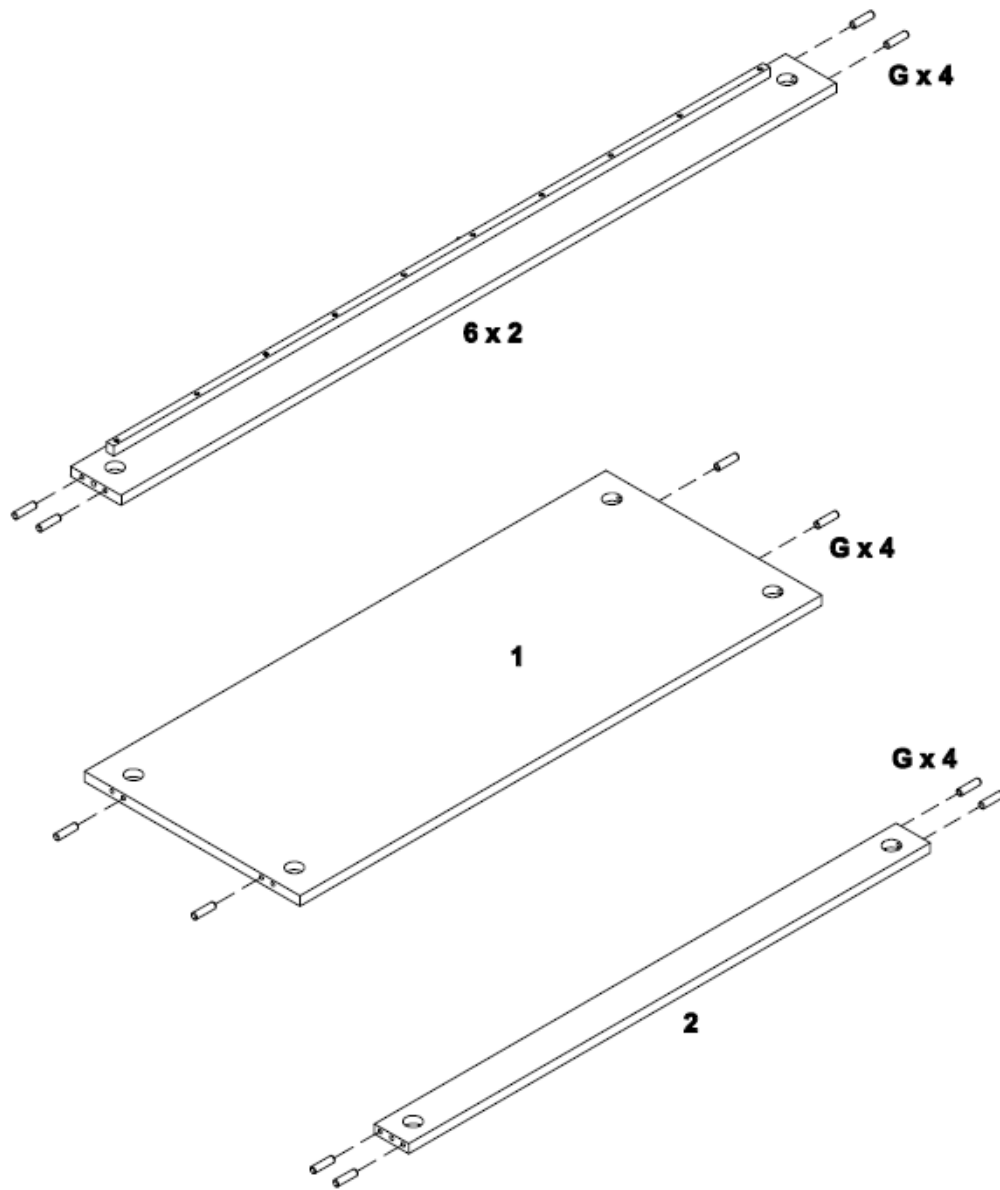


- A. Lay Headboard (1), Cross Bar (2), Side Rail (6) as shown on a material that does not scratch or damage the parts.
- B. Insert Wood Dowel (G) into the designated holes on (1, 2 & 6).

STEP 3

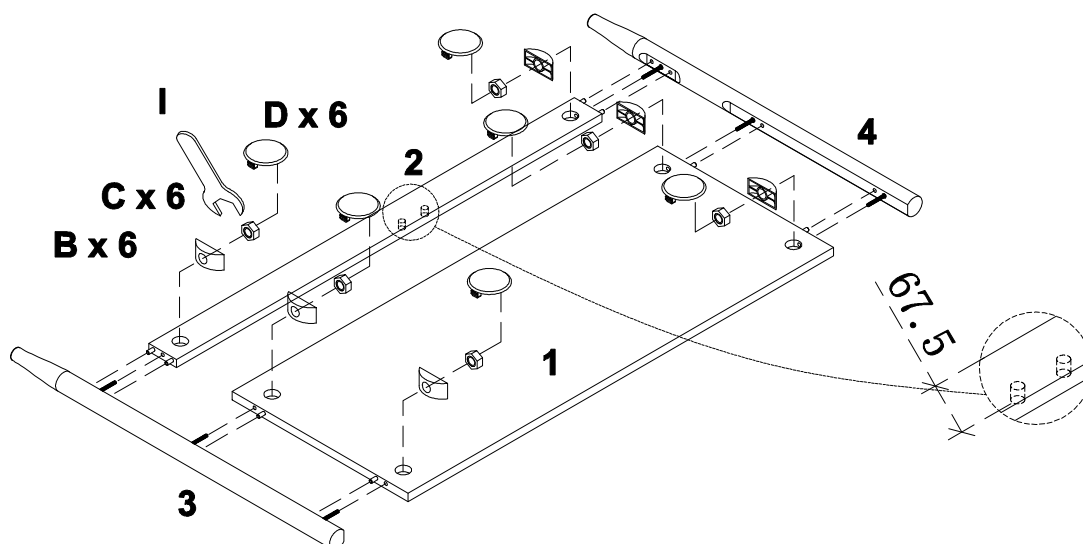

- A. Lay Headboard (1), Cross Bar (2), Headboard Left Leg (3) and Headboard Right Leg (4), as shown on a material that does not scratch the parts. (Note the orientation of (2) - the long edge with the bolt holes in the middle has to be towards the headboard.)
- B. Insert Locking Nut (B) into the designated hole on (2). Ensure that the bolt hole on (B) is aligned to the middle bolt hole at both ends of (2).
- C. Attach (3) to (1 & 2). Take care to insert Locking Pin (A) on (3) through Locking Nut (B) on (1 & 2) simultaneously and fasten with Hex Nut (C). Use Wrench (I) to drive and tighten (C) completely.
- D. Use Cover (D) to conceal Locking Nut and holes.


STEP 4

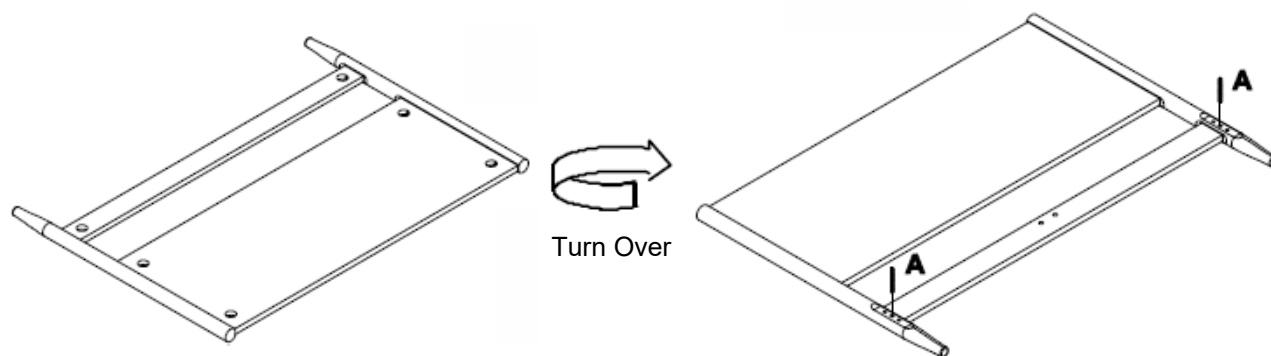

Headboard Assembly from STEP 3


- A. Turn over headboard assembly from STEP 3.
- B. Insert Locking Pin (A) into the designated middle hole on each Headboard Leg.

STEP 5

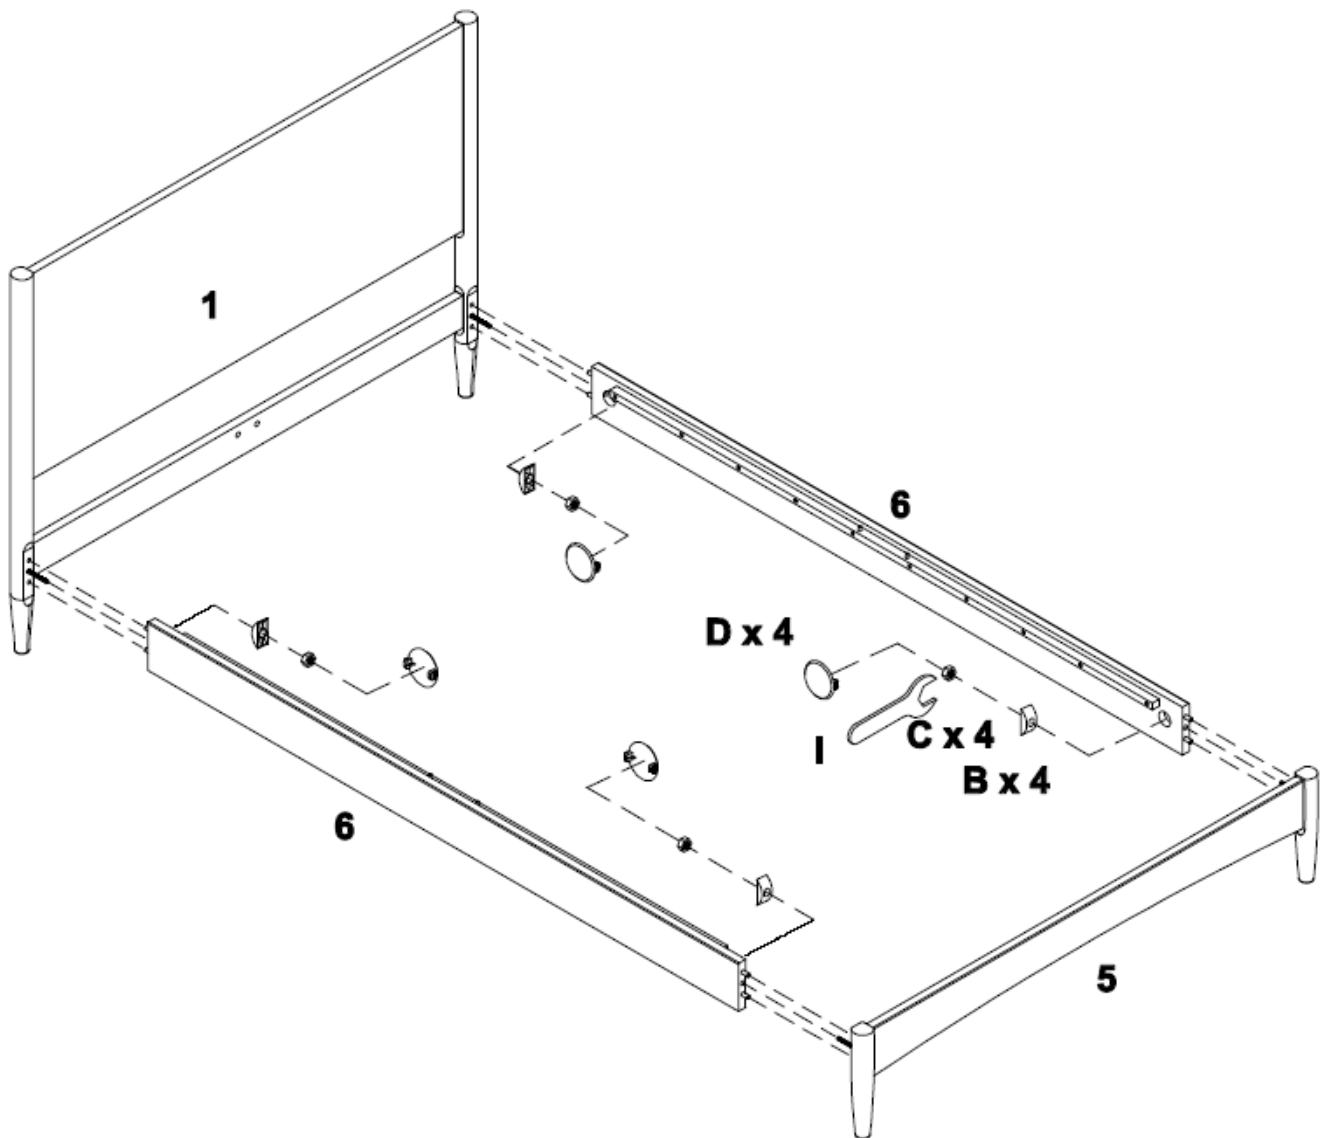


- A. Insert Locking Nut (B) into designated holes on a Side Rail (6) from STEP 2 as shown. Ensure that the bolt hole on (B) is aligned to the middle bolt hole at both ends of (6).
- B. With assistance attach 1 piece of (6) to Headboard Right Leg. Take care to insert Locking Pin (A) on (6) through Locking Nut (B) on Headboard Right Leg and fasten with Hex Nut (C). Use Wrench (I) to drive and tighten (C) completely. Use Cover (D) to conceal Locking Nut and holes.
- C. Use the above procedure (B) to attach the second piece of (6) to Headboard Left Leg.
- D. With assistance, attach Footboard (5) to (6). Take care to insert Locking Pin (A) on (5) through Locking Nut (B) on (6) and fasten with Hex Nut (C). Use Wrench (I) to drive and tighten (C) completely. Use Cover (D) to conceal Locking Nut and holes.

STEP 6

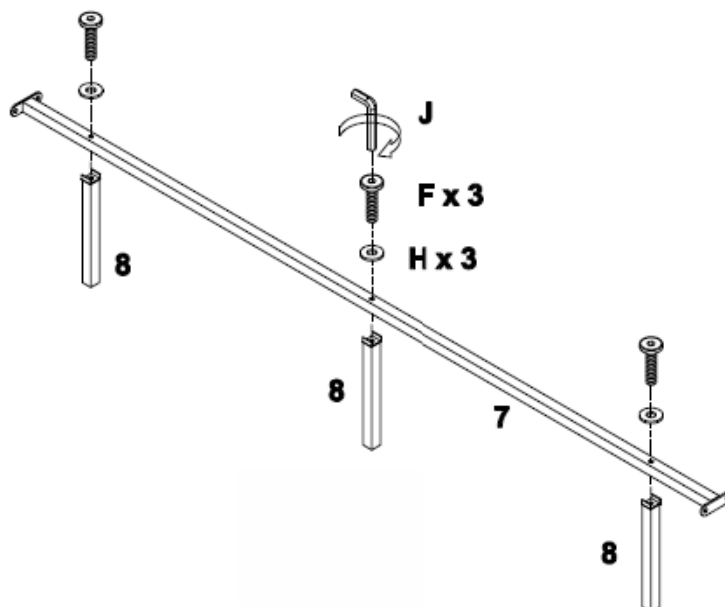


With assistance, fasten Metal Leg (8) to Middle Bar (7) with Screw (F) fitted with Flat Washer (H). Use Allen Key (J) to drive and tighten (F) completely.

STEP 7

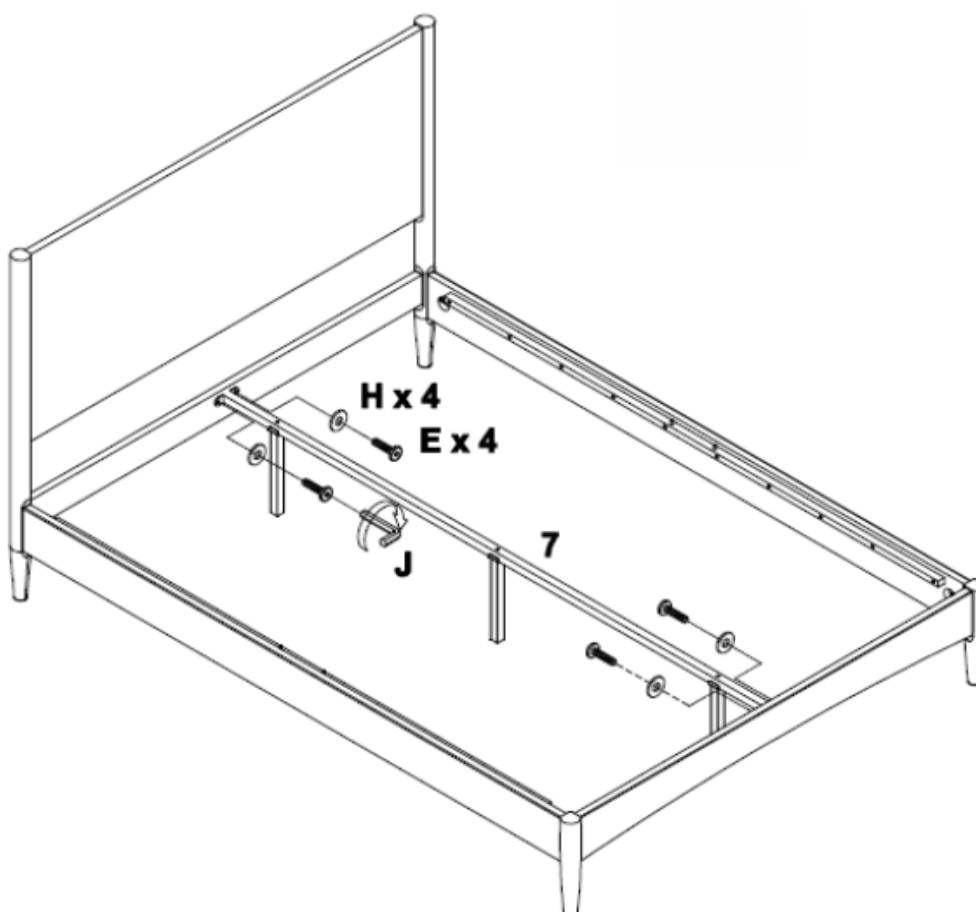


Use Screw (E) fitted with Flat Washer (H) to fasten Middle Bar (7) to Footboard and Cross Bar. Use Allen Key (J) to drive (E). Do not tighten (E) completely until all the screws are in place.

STEP 8

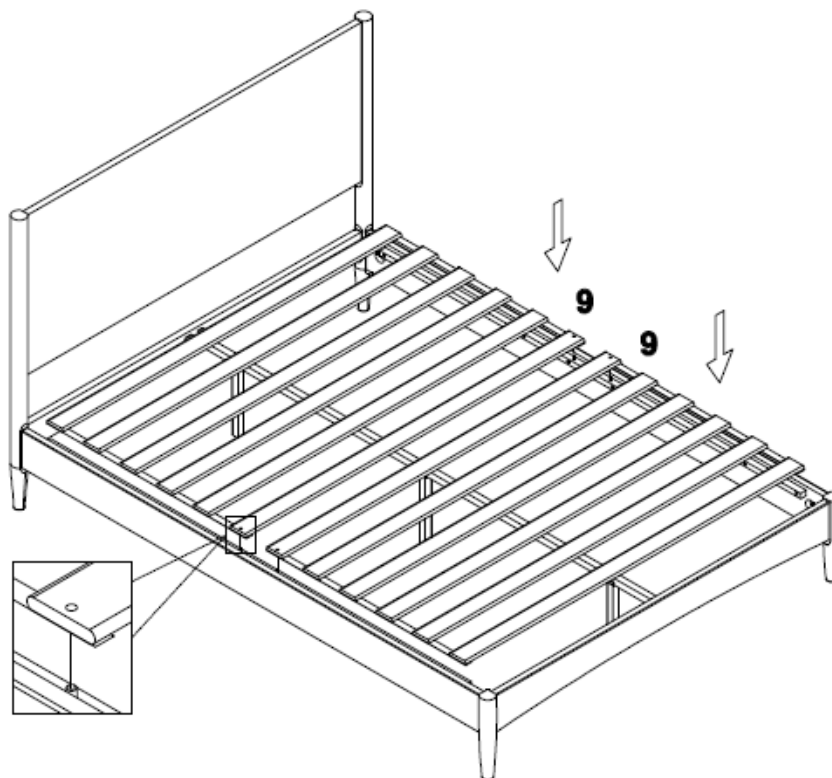

Lay the 2 set of Slats (9) to rest on the slat support on the Side Rail. Check and ensure that the designated slate on each set are firmly fasten to the rail on the Sideboard.

STEP 9

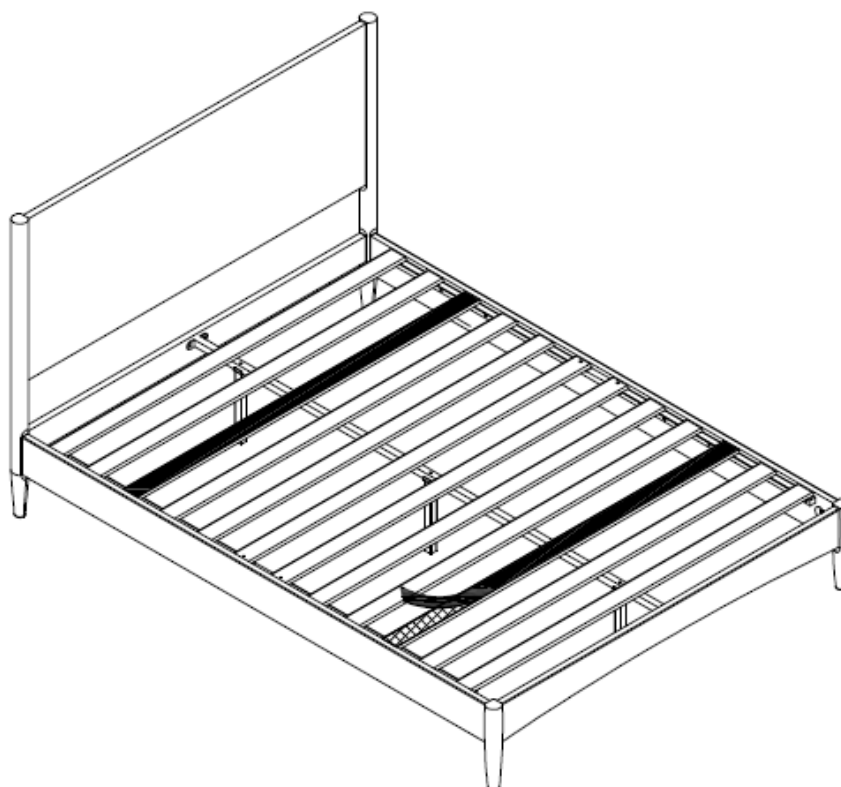

Peel-off the adhesive covering on the designated slat to expose the non-slip surfaces that serve to keep the mattress in place.

The assembly of the bed is complete.