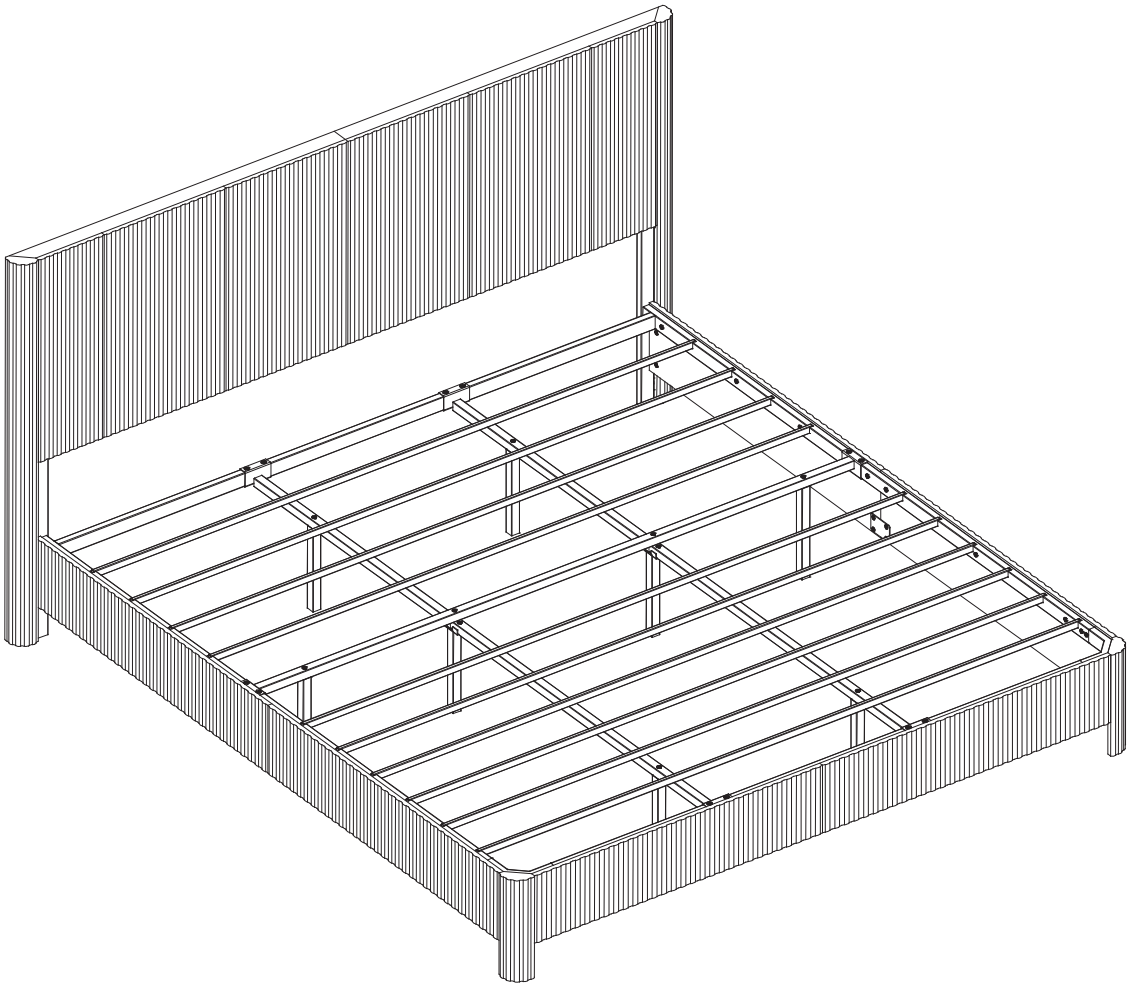
EVERMAGIN

Assembly Instructions

LGR176BK



evermagin@yeah.net

General Guidelines

- Please read the following instructions carefully and use the product accordingly.
- Please keep this manual and hand it over when you transfer the product.
- This summary may not include every detail of all variations and considered steps. Please contact us if further information or assistance is needed.

Notes















- The product is intended for indoor use only. It must be assembled and used in accordance with the provisions of the manual. Personal injury and/or damage to the product may occur if the product is used outside of its intended purpose and/or if it has been changed/modified from its original design. The seller does not assume any responsibility or liability for injury or damage caused by incorrect assembly or improper use.
- Avoid long-term exposure to humid environments to prevent mildew.
- Keep the product away from fire sources and high temperatures. Do not expose the product to direct sunlight.
- Do not place any hot objects on the surface of the product.
- If there are any defective or missing parts after unpacking, please cease assembly immediately and contact us.
- Assemble the item on a spacious surface and avoid placing the unwrapped product directly on the ground to prevent damage.
- Do not stand or sit on the wooden boards.
- Wear gloves during the assembly and/or disassembly process to avoid scratches from any sharp edges.
- Match each part and fitting based on the part number in the manual.
- If a part does not match the fitting, please check the manual for clarification.
- During assembly, first loosely align all screws with the corresponding pre-drilled holes, then tighten them one by one.
- Periodically inspect the screw tightness while the product is in use. Retighten if necessary to ensure structural integrity.
- If you accidentally spill water or any other liquid on the surface, immediately wipe it clean with a dry towel.
- Keep the product away from sharp, pointed objects and corrosive substances to prevent damage.
- Place the item on level, solid ground during use.

Warnings














- During assembly, keep all small parts out of the reach of children, as they may be fatal if swallowed or inhaled.
- Children should not climb or play on the product to avoid tipping over and causing serious injury.
- To avoid the potential danger of suffocation, keep all packaging materials (film, plastic bags, foam, etc.) away from babies and children.
- Do not shake or move the product violently during use to avoid tipping over.

Official Page | After-sales | Pinterest | X(Twiter) | YouTube | Facebook | Instagram



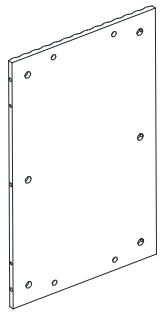
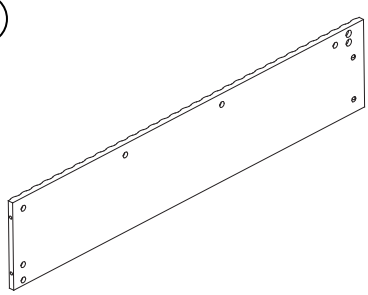
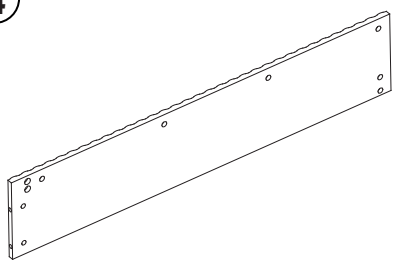
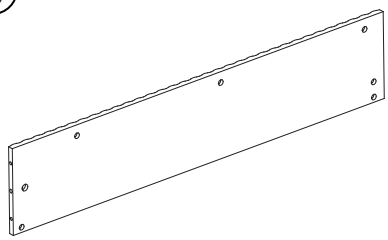
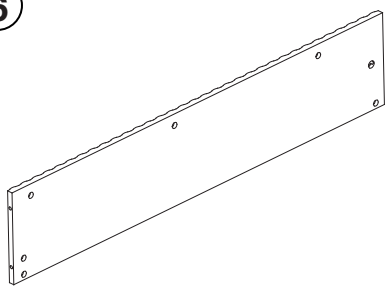
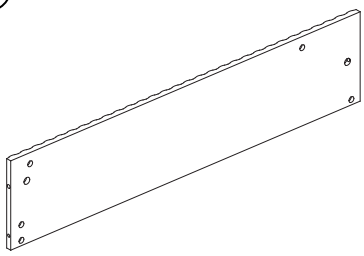
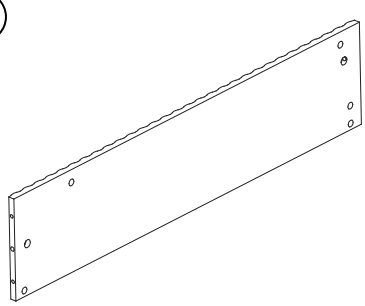
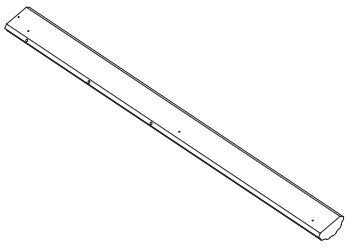
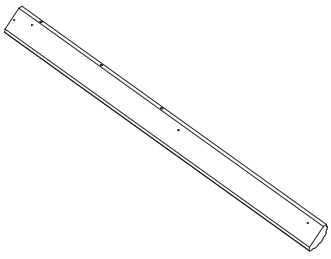
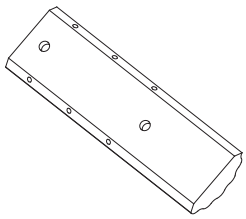
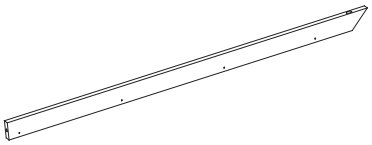
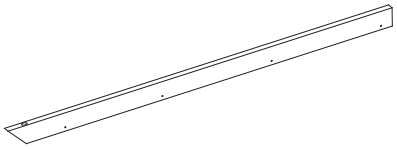
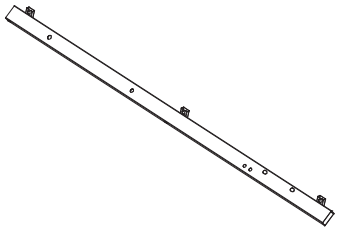
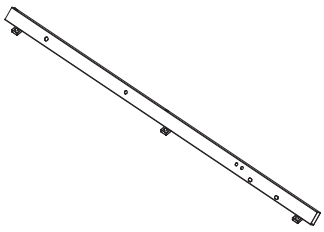
PARTS LIST

1  x4	2  x2	3  x1
4  x1	5  x1	6  x1
7  x1	8  x1	9  x1
10  x1	11  x2	12  x1
13  x1	14  x1	15  x1

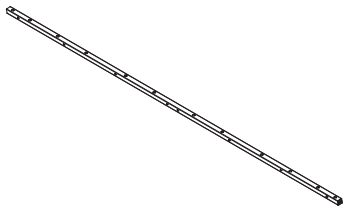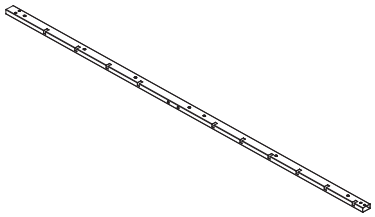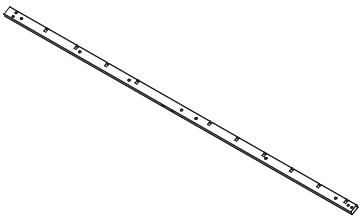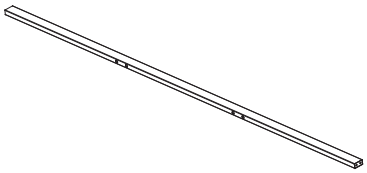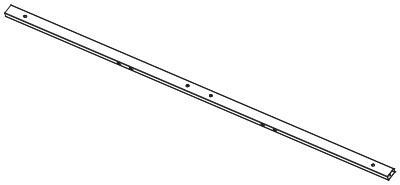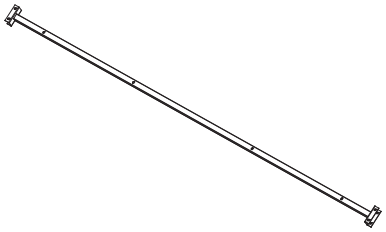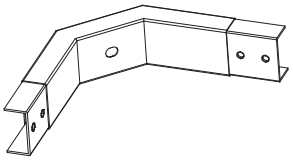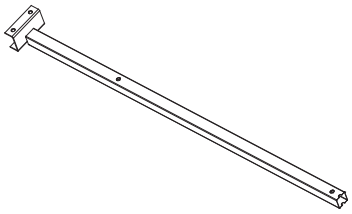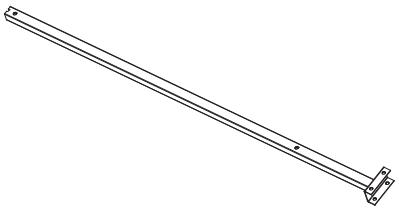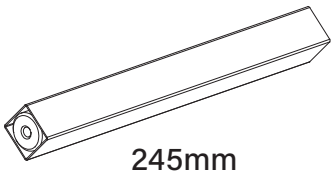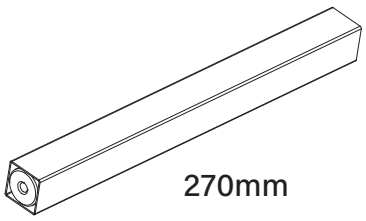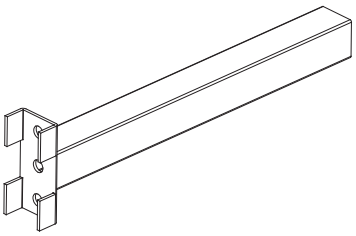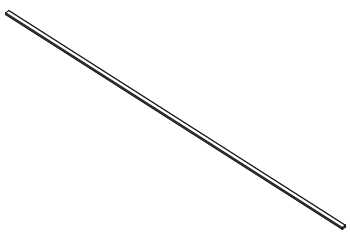
PARTS LIST

16  x2	17  x1	18  x1
19  x1	20  x1	21  x1
22  x2	23  x2	24  x2
25  245mm x4	26  270mm x2	27  x2
28  x10		

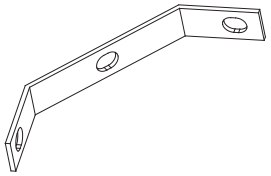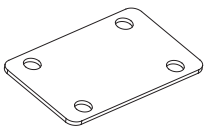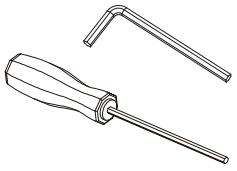
HARDWARE LIST

A  6*40mm 8+1PC	**B**  15*9.5mm 40+2PCS	**C**  6*30mm 26+2PCS	**D**  5*80mm 16+1PC
E  M6*12mm 26+2PCS	**F**  M6*25mm 12+1PC	**G**  M6*28mm 48+2PCS	**H**  M6*35mm 18+1PC
I  M6*55mm 6+1PC	**J**  M8*50mm 4+1PC	**K**  12+1PC	**L**  4+1PC
M  M3.5*14mm 6+1PC	**N**  M3.5*30mm 10+1PC	**O**  2PCS	**P**  3PCS
Q  1PC	**R**  1PC		

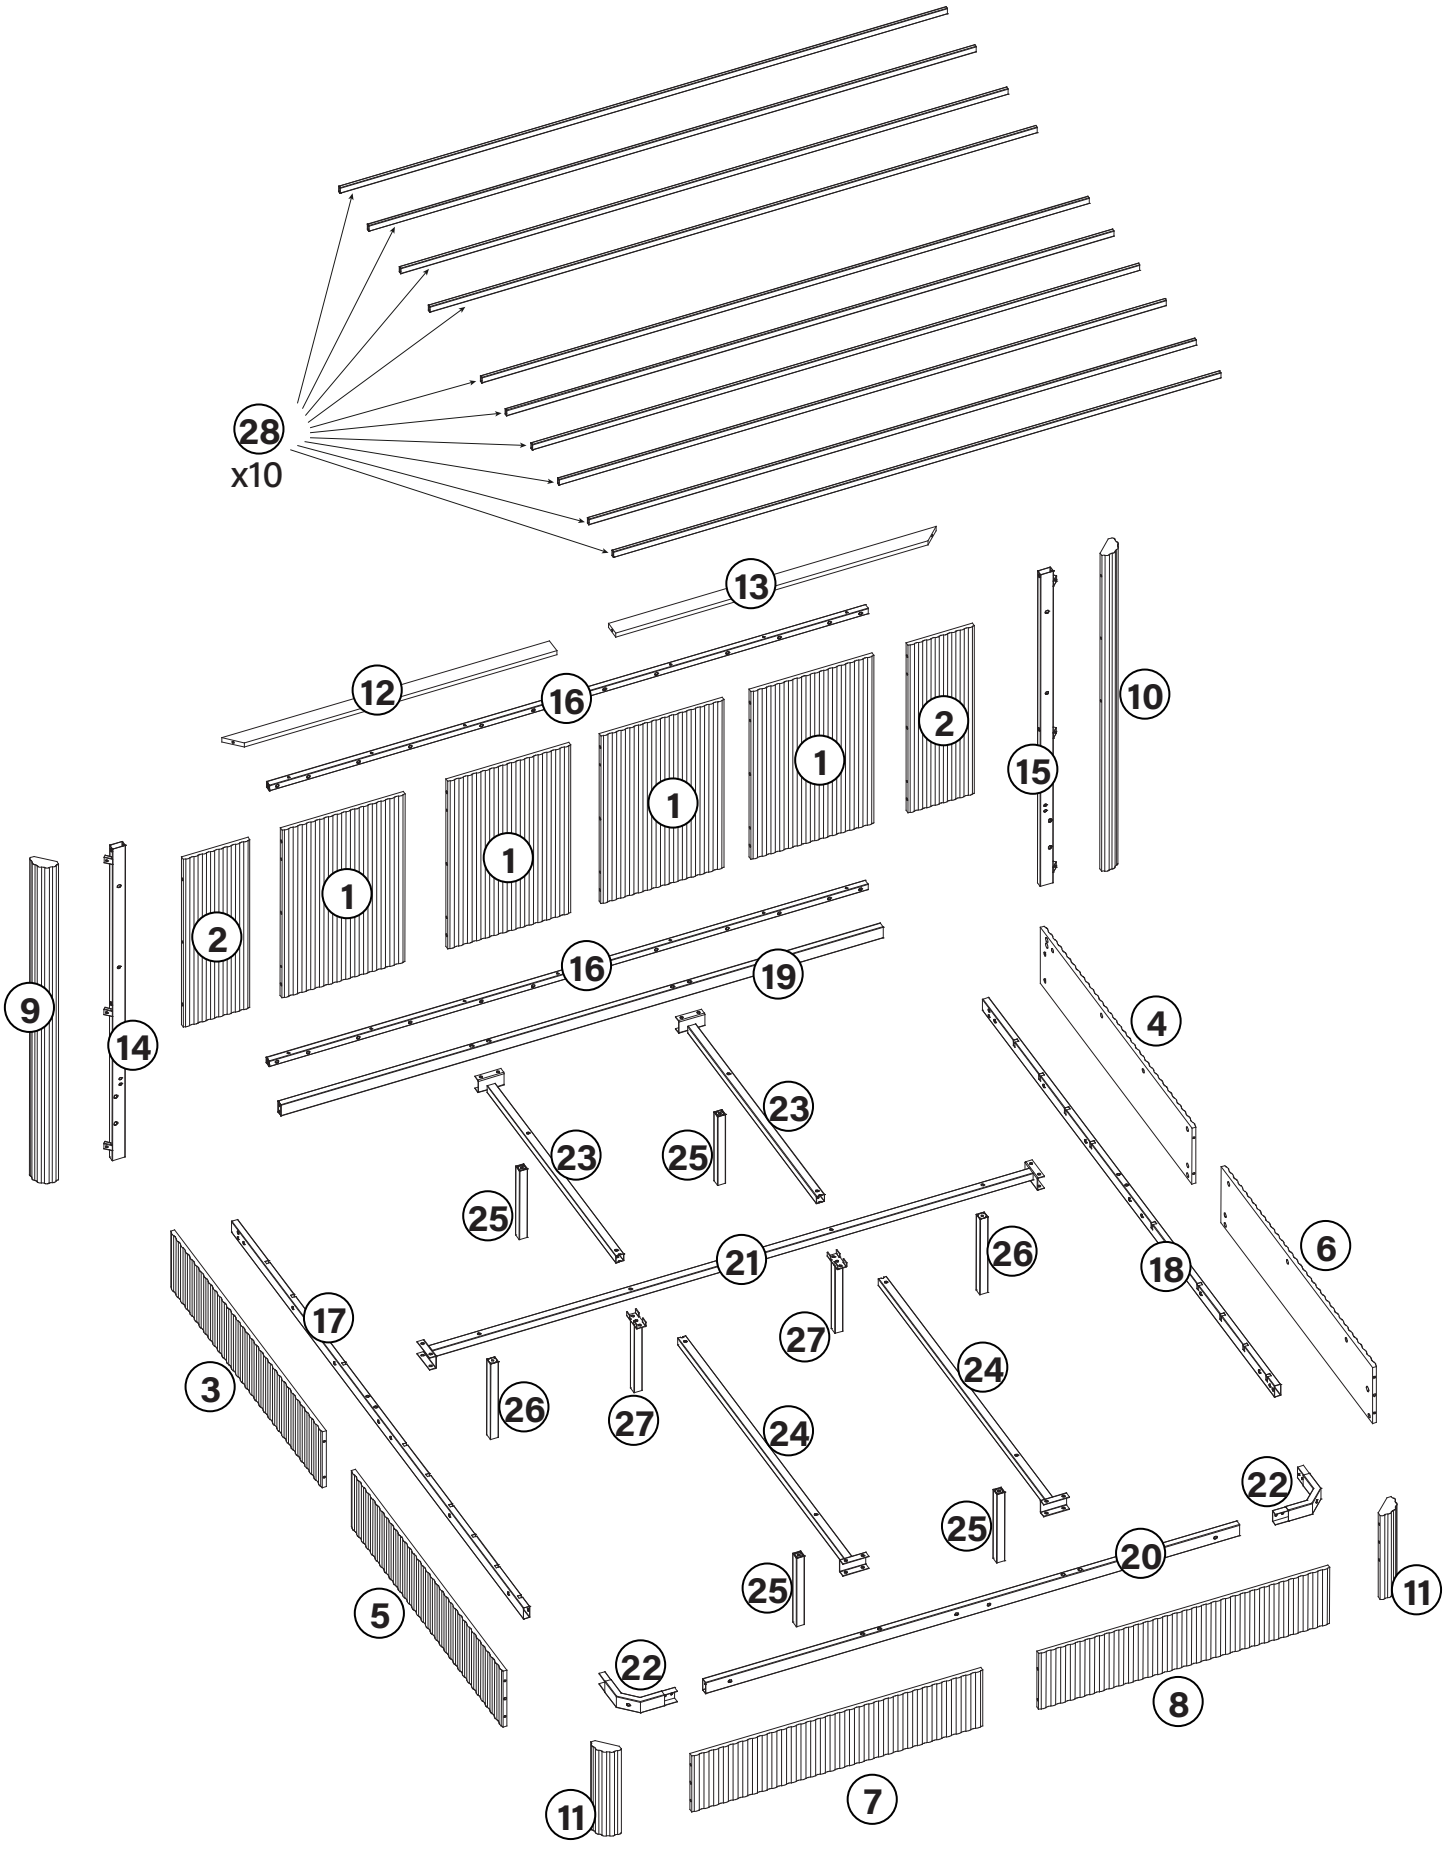EXPLODED



28
x10
13
12
16
10
2
15
1
9
14
19
4
23
25
21
26
18
6
17
3
27
24
22
20
11
5
8
7

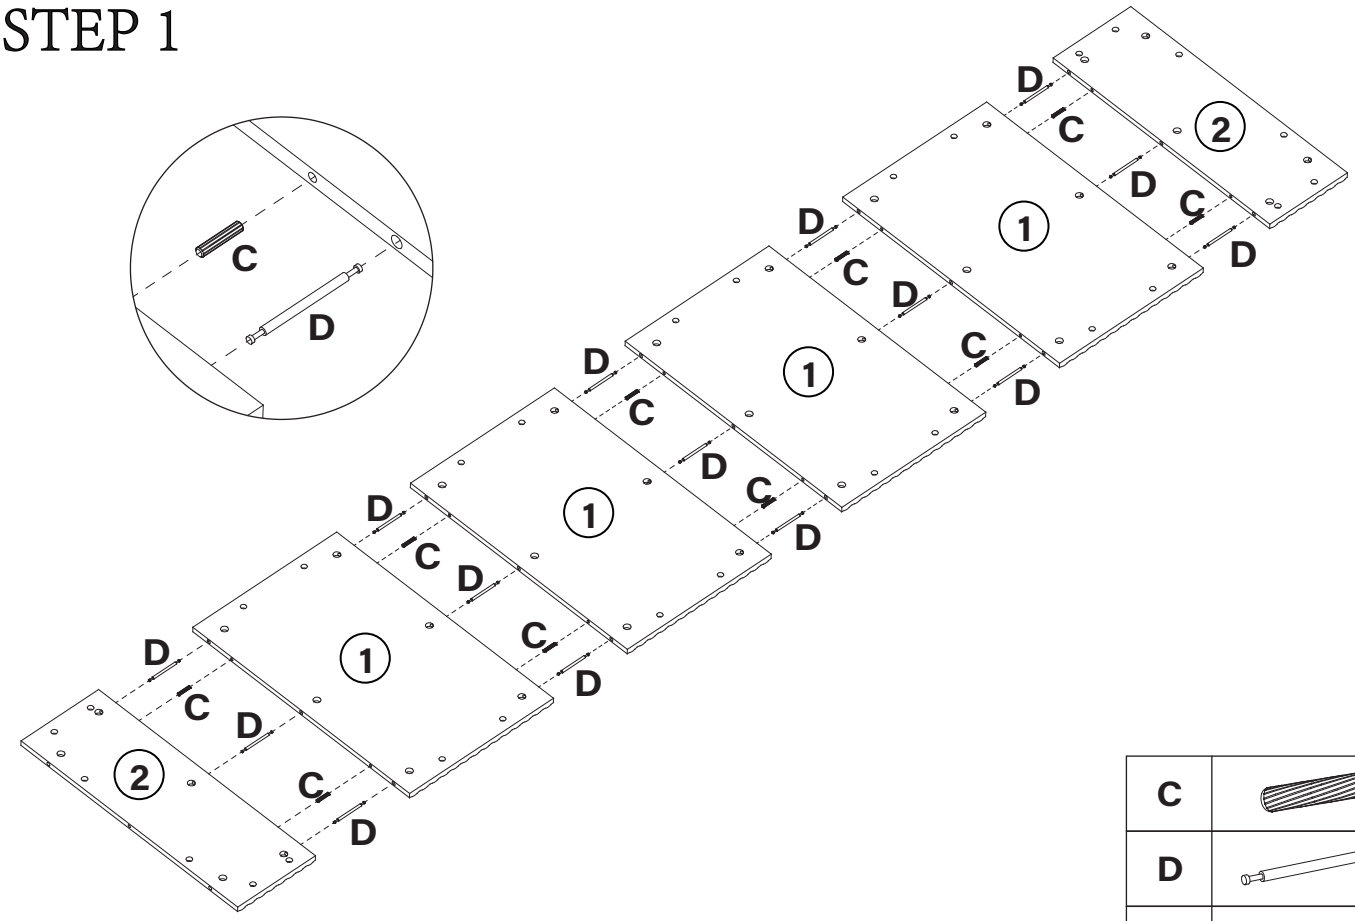STEP 1




C		x10
D		x15
Q		x1

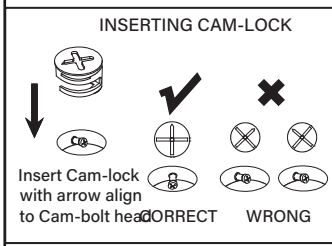STEP 2



Align the arrow on the Cam-lock tothe Cam-bolt head and insert the Cam-lock.Ensure-

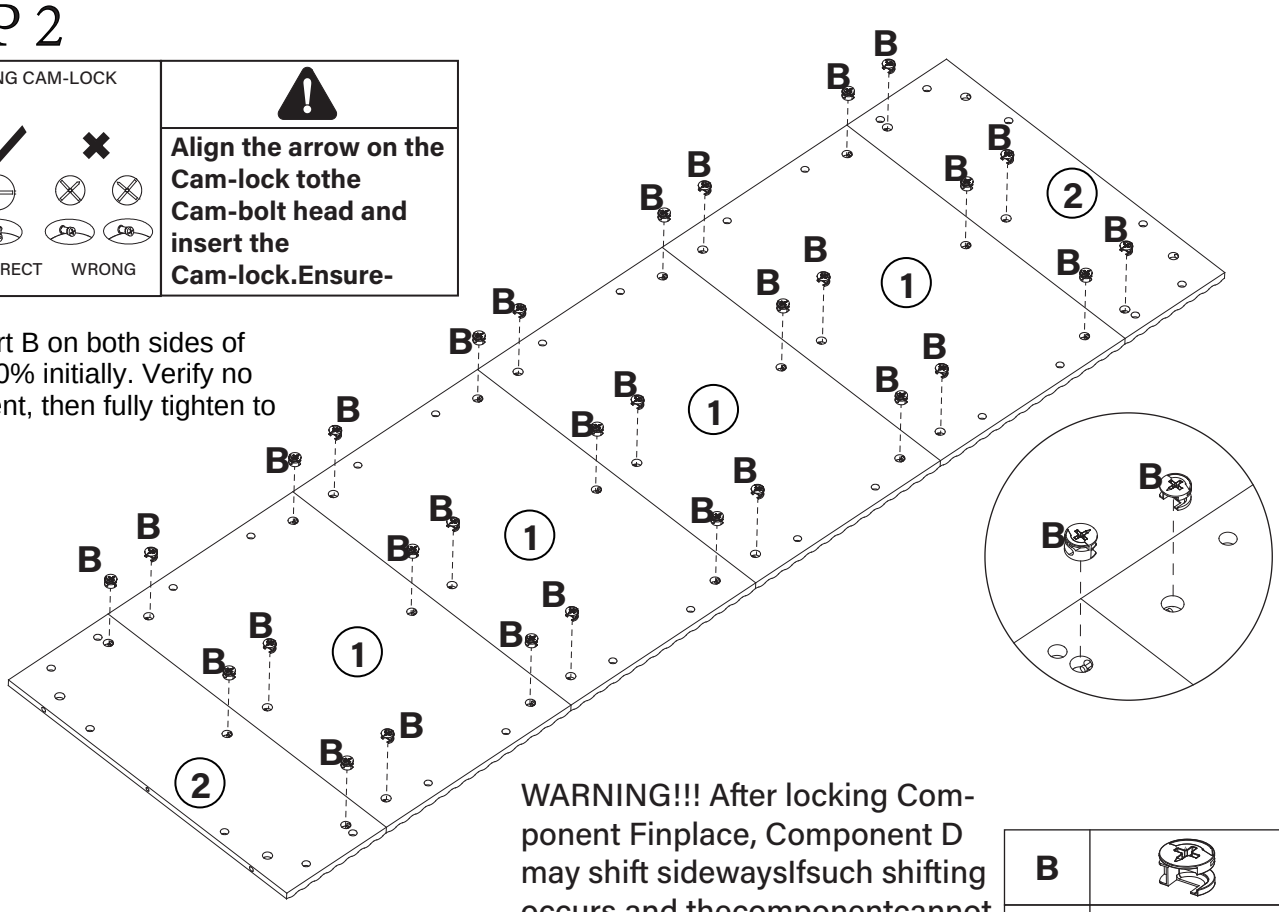
Tighten Part B on both sides of Part D to 50% initially. Verify no misalignment, then fully tighten to 100%.




WARNING!!! After locking Component Finplace, Component D may shift sidewaysIfsuch shifting occurs and thecomponentcannot be locked, makeadjustmentsac-

B		x30
Q		x1

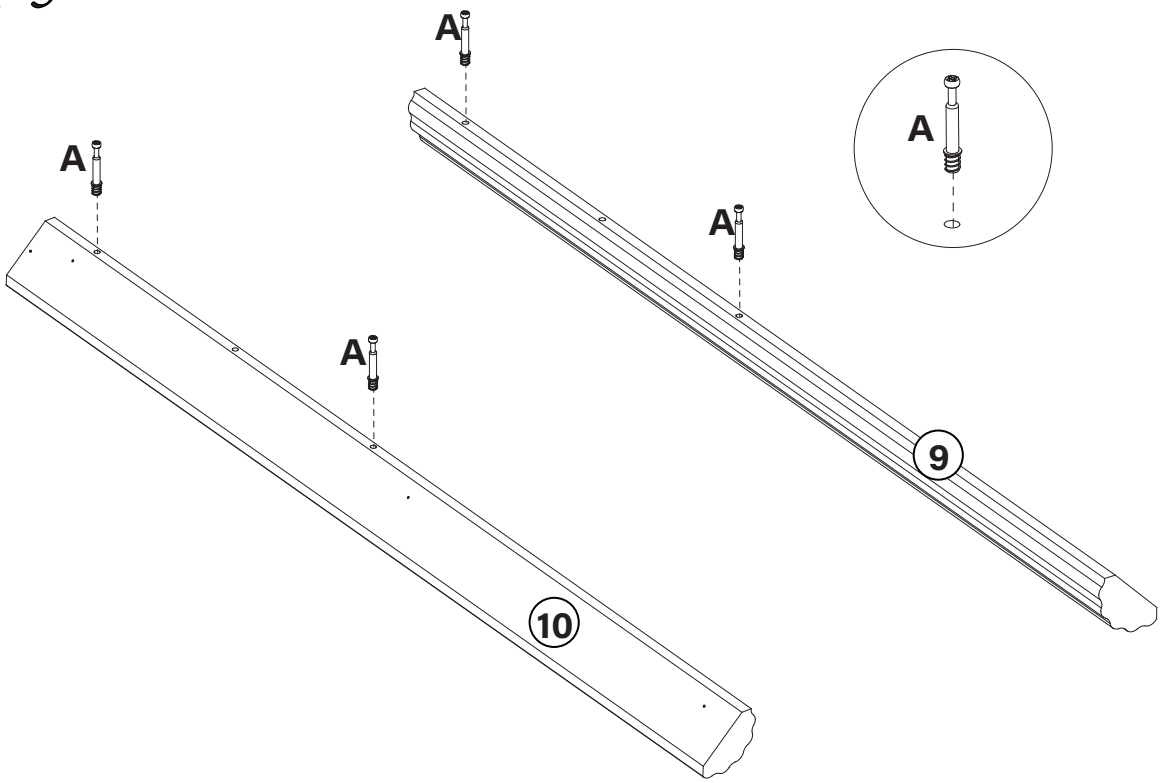
STEP 3




A		x4
Q		x1


STEP 4

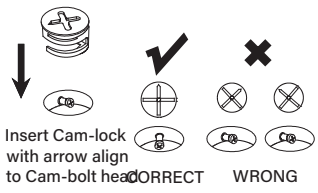INSERTING CAM-LOCK




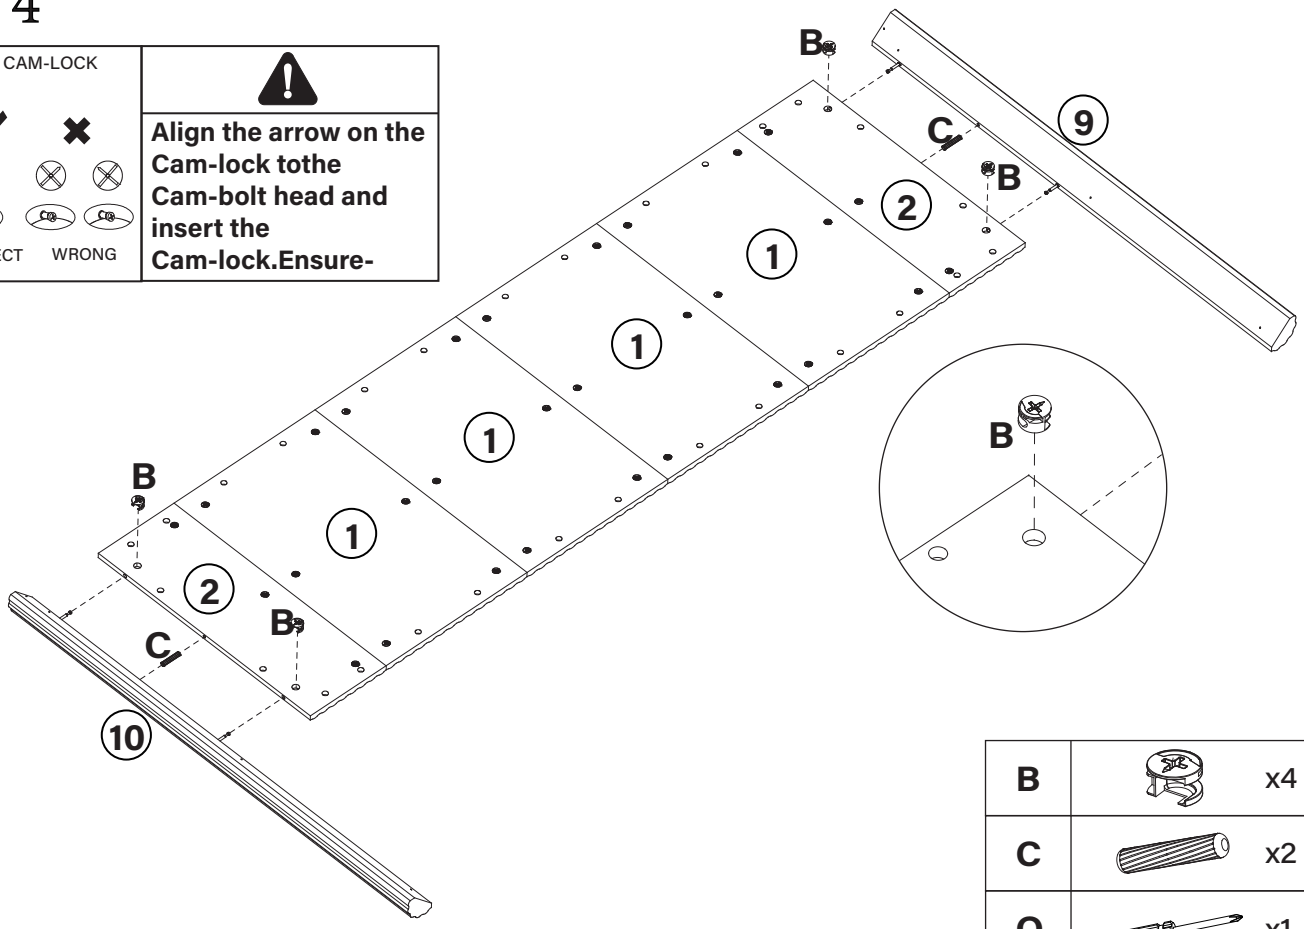
Align the arrow on the Cam-lock tothe Cam-bolt head and insert the Cam-lock.Ensure-




B		x4
C		x2
Q		x1

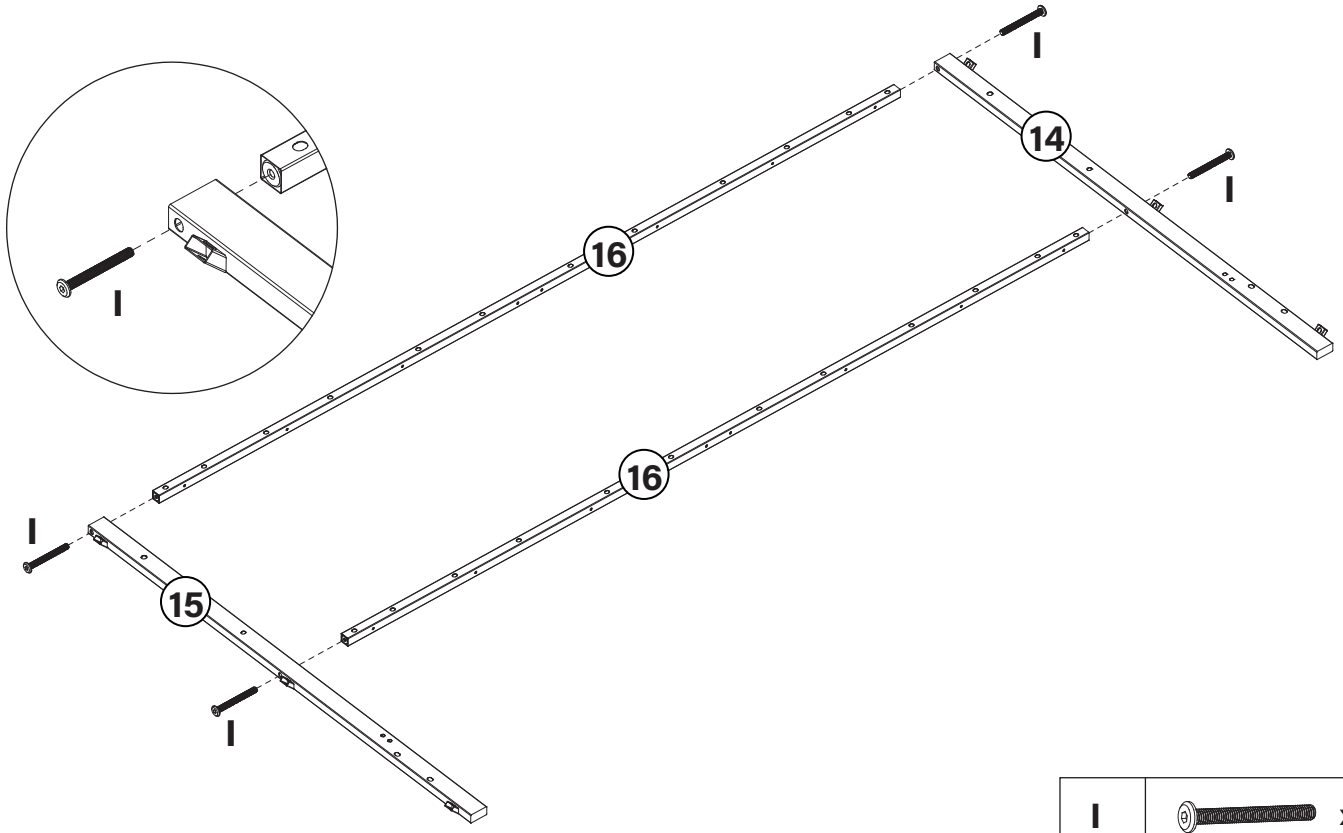STEP 5






I		x4
R		x1

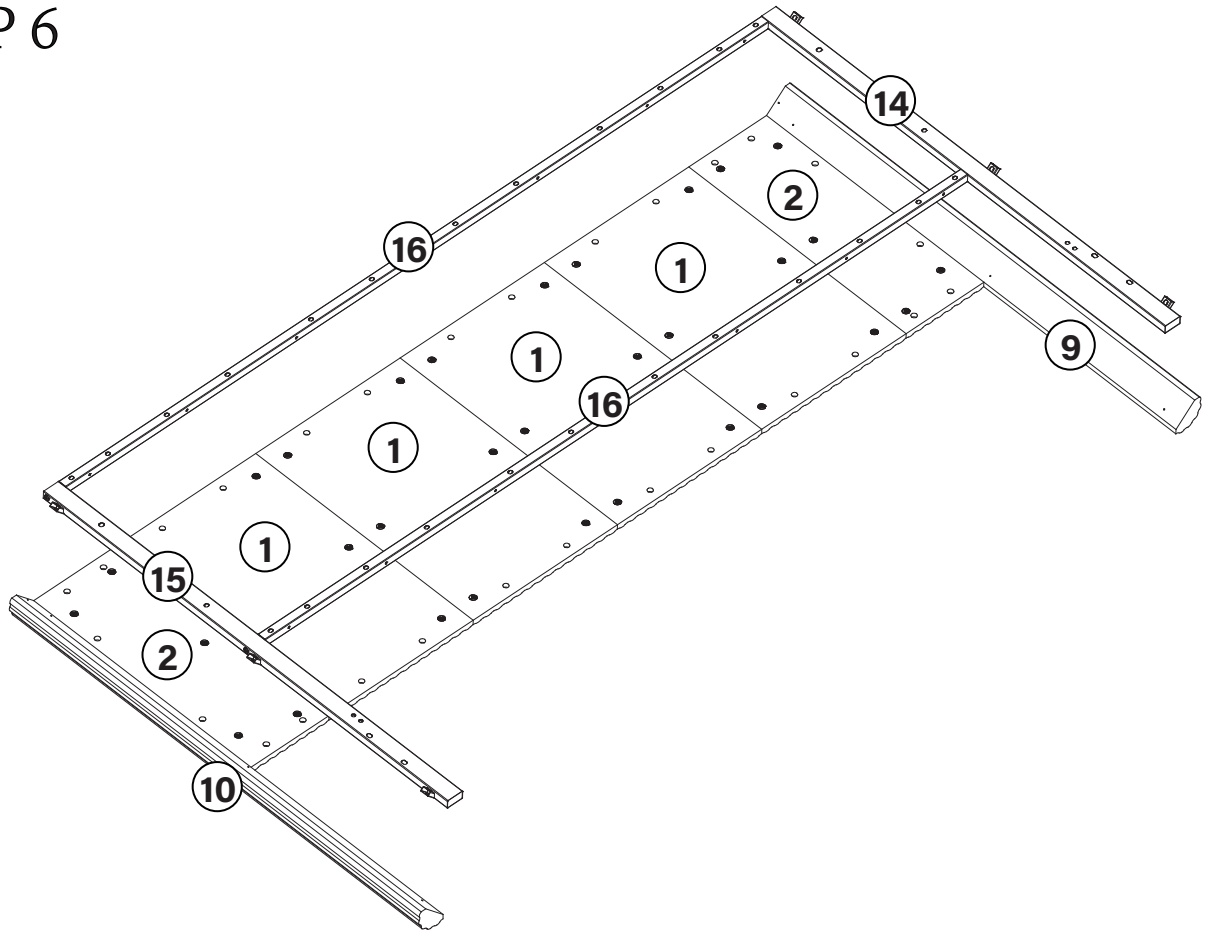STEP 6




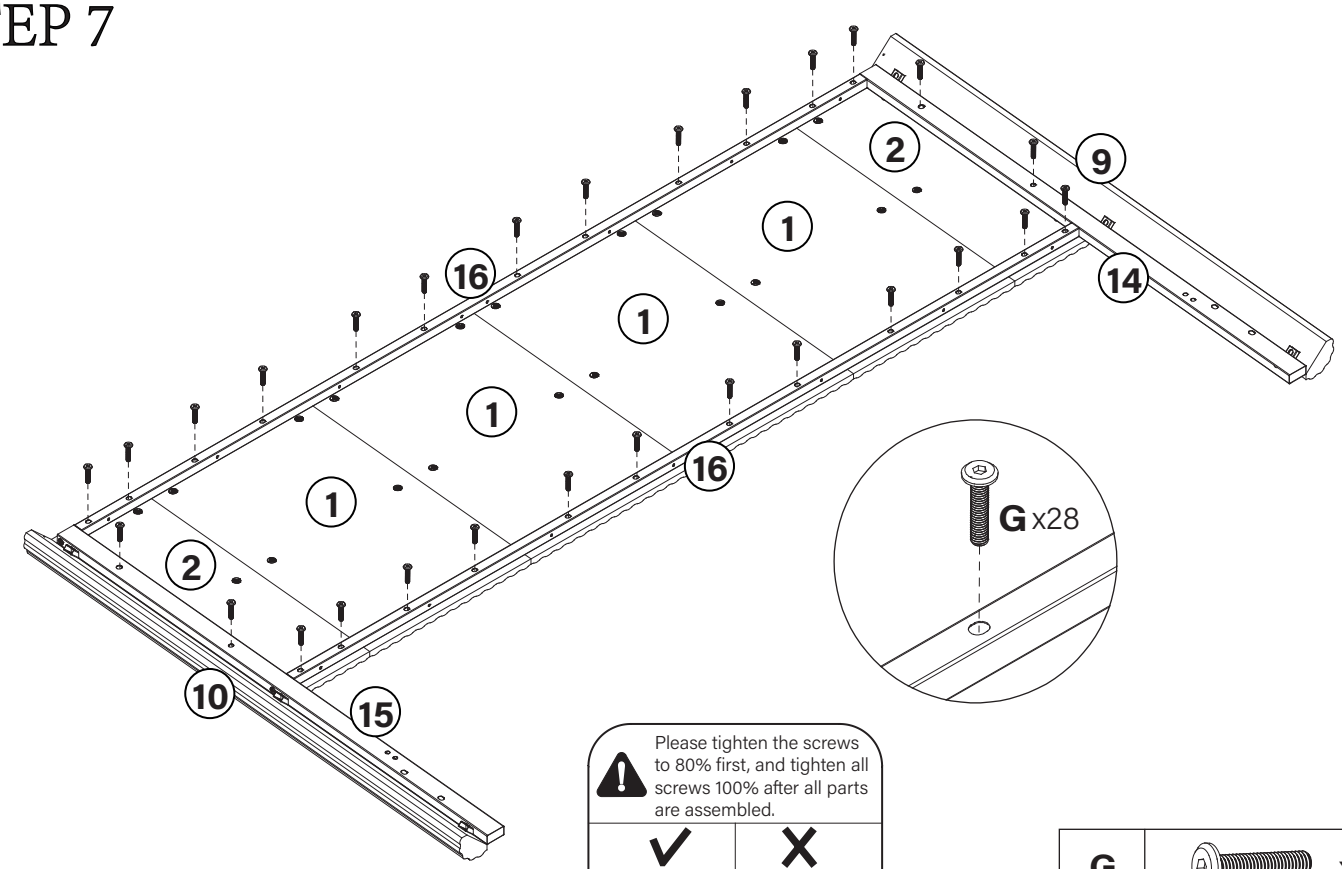
STEP 7




G		x28
R		x1

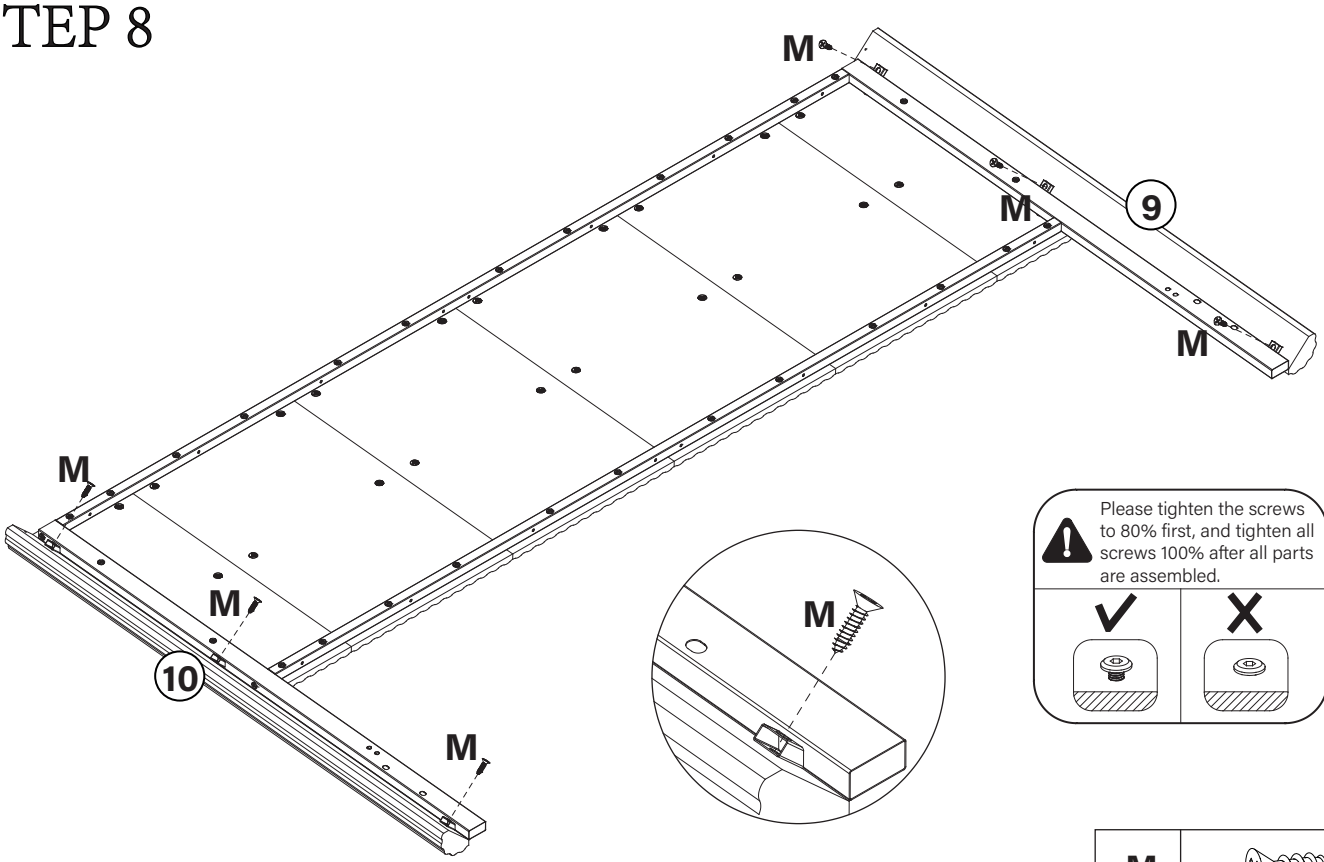STEP 8




M		x6
Q		x1

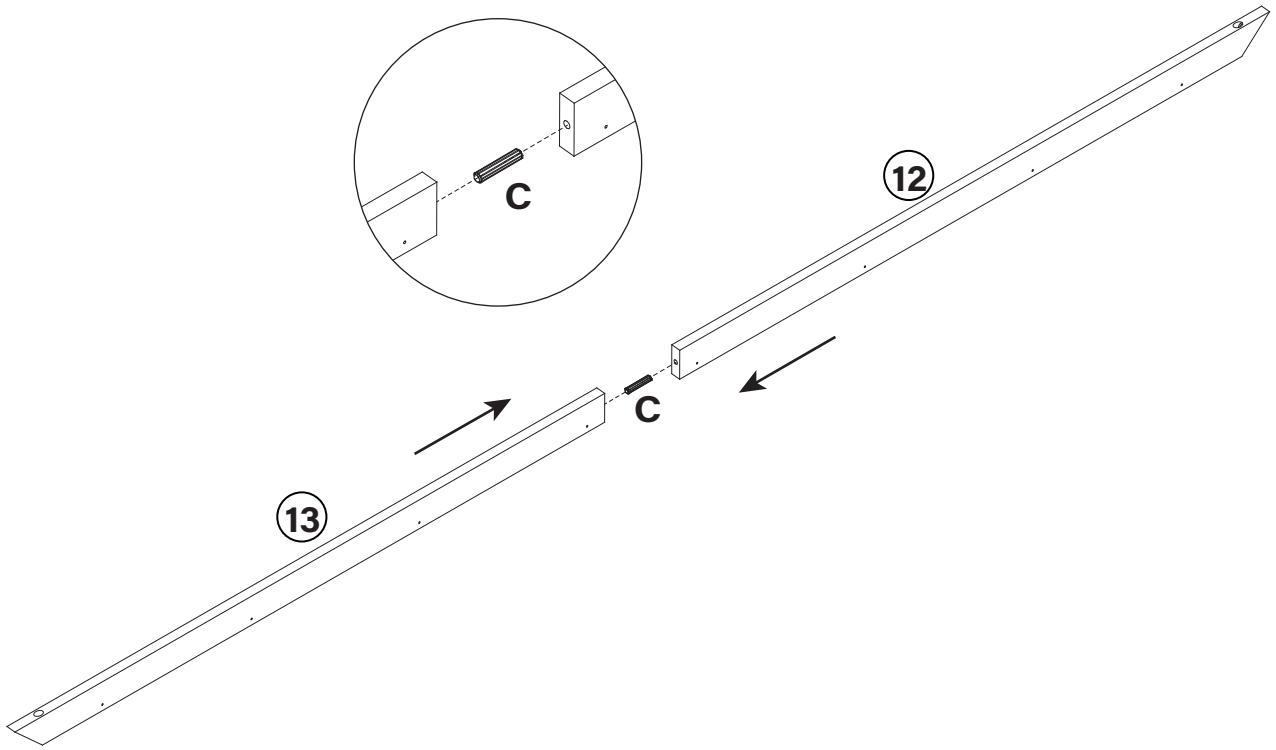STEP 9




C		x1

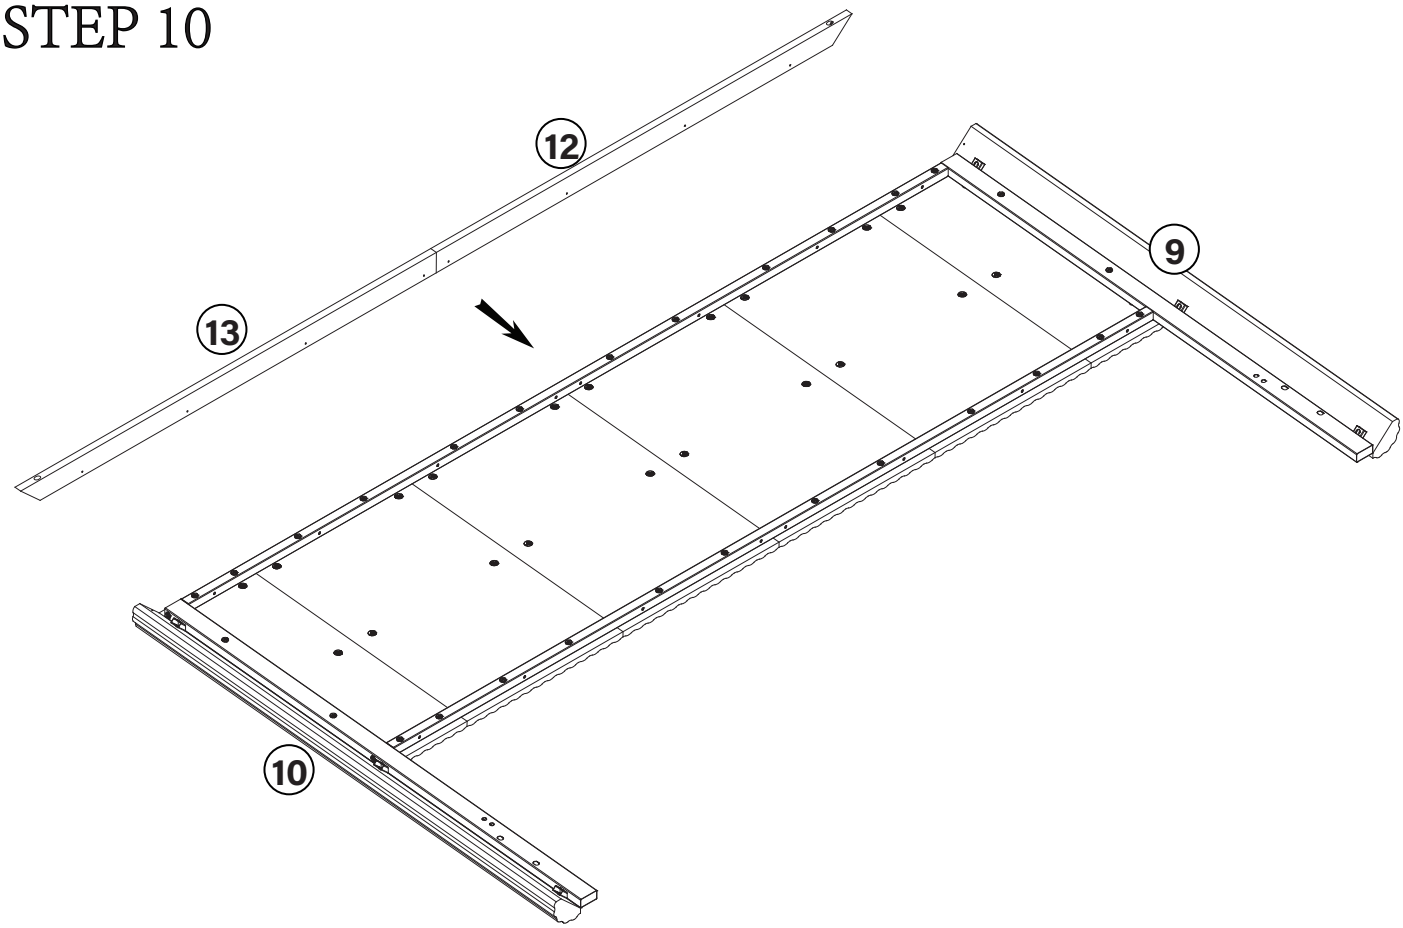
STEP 10




STEP 11

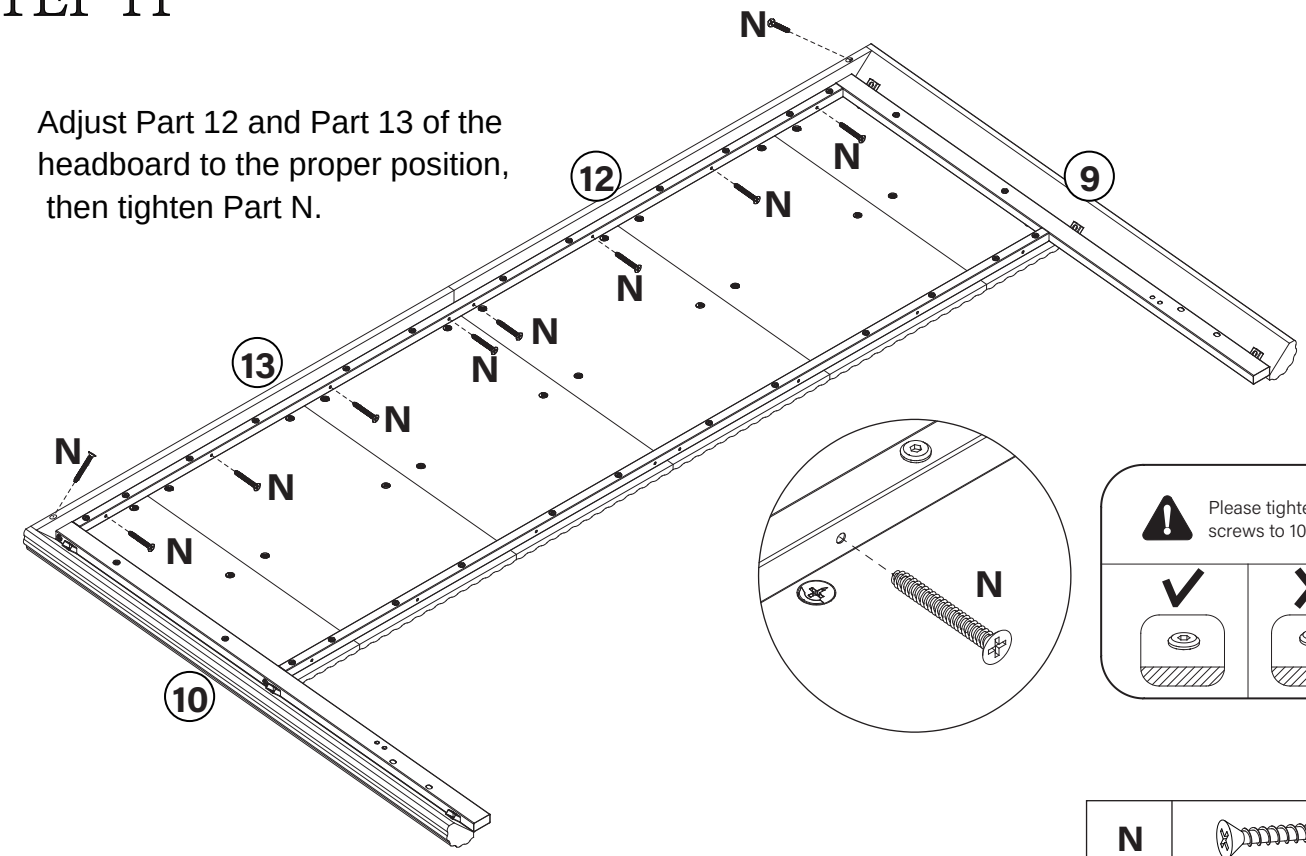
Adjust Part 12 and Part 13 of the headboard to the proper position, then tighten Part N.




N		x10
Q		x1

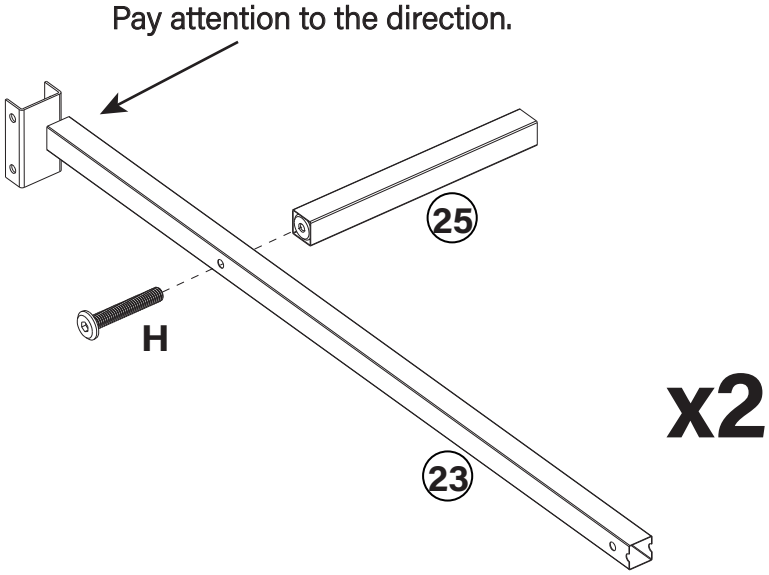
STEP 12




H		x2
R		x1

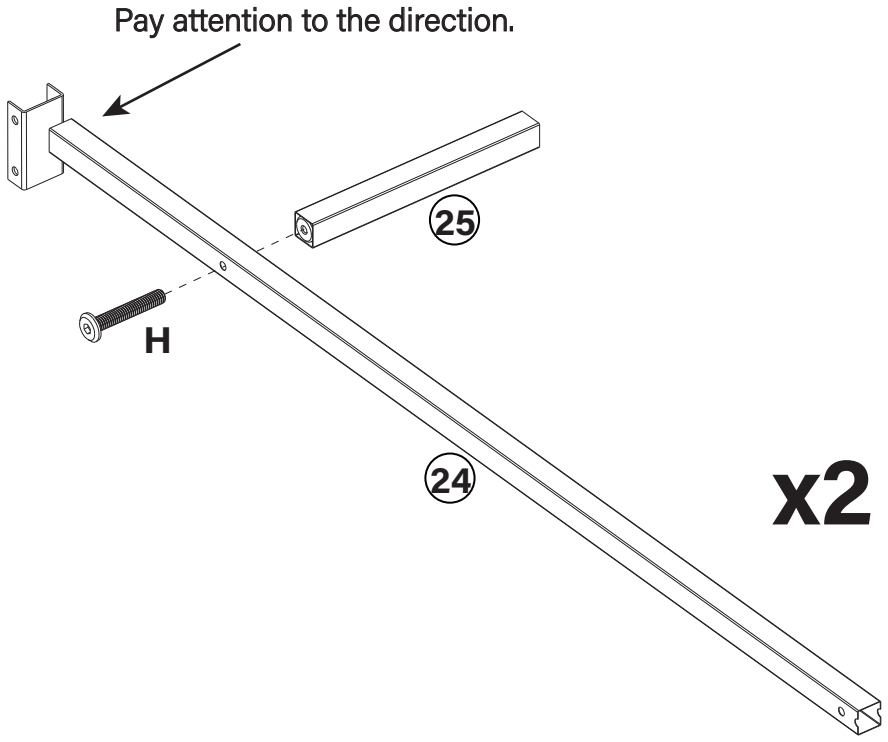
STEP 13




H		x2
R		x1

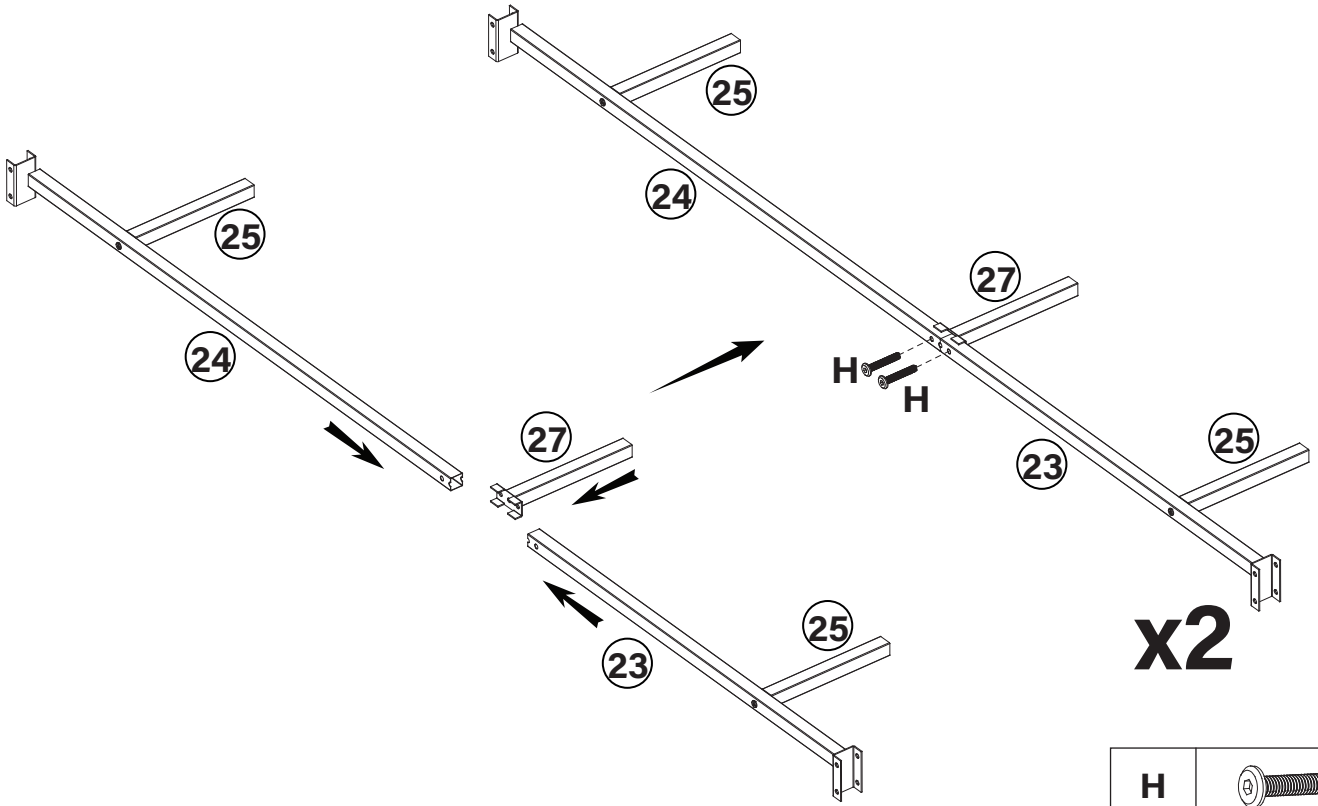STEP 14




H		x4
R		x1

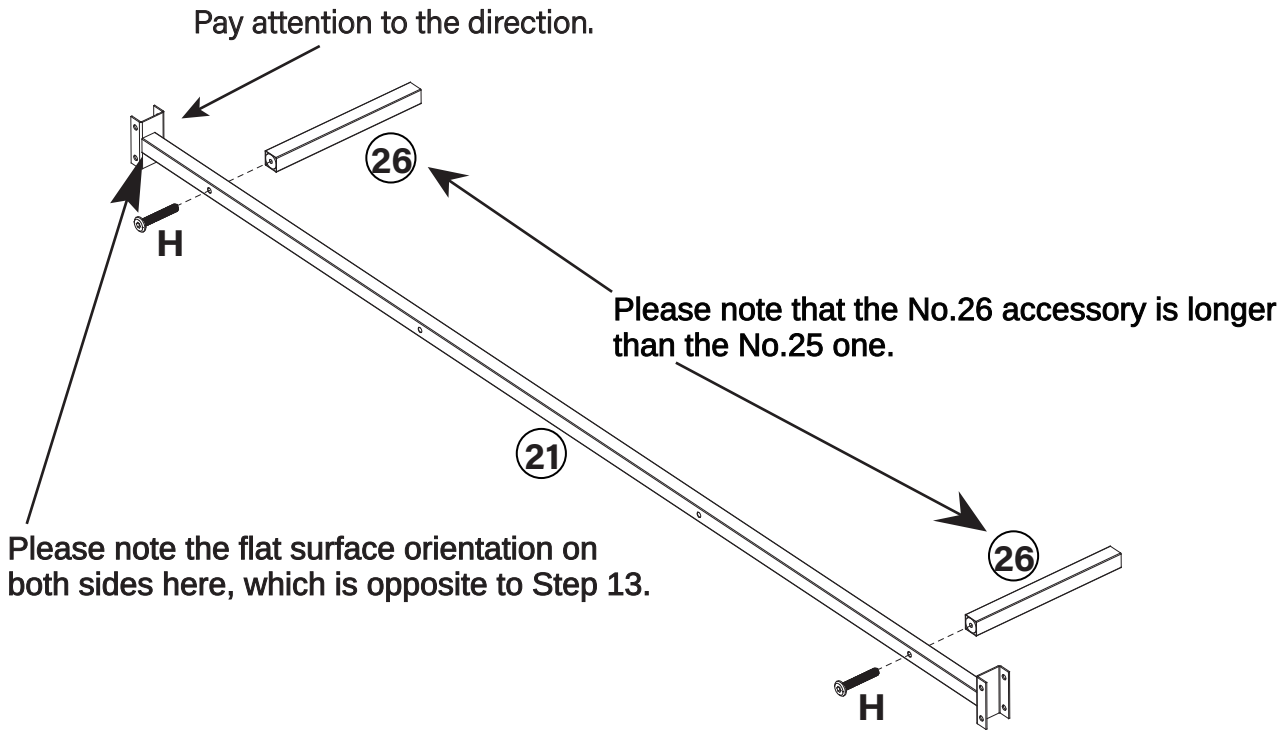
STEP 15




H		x2
R		x1

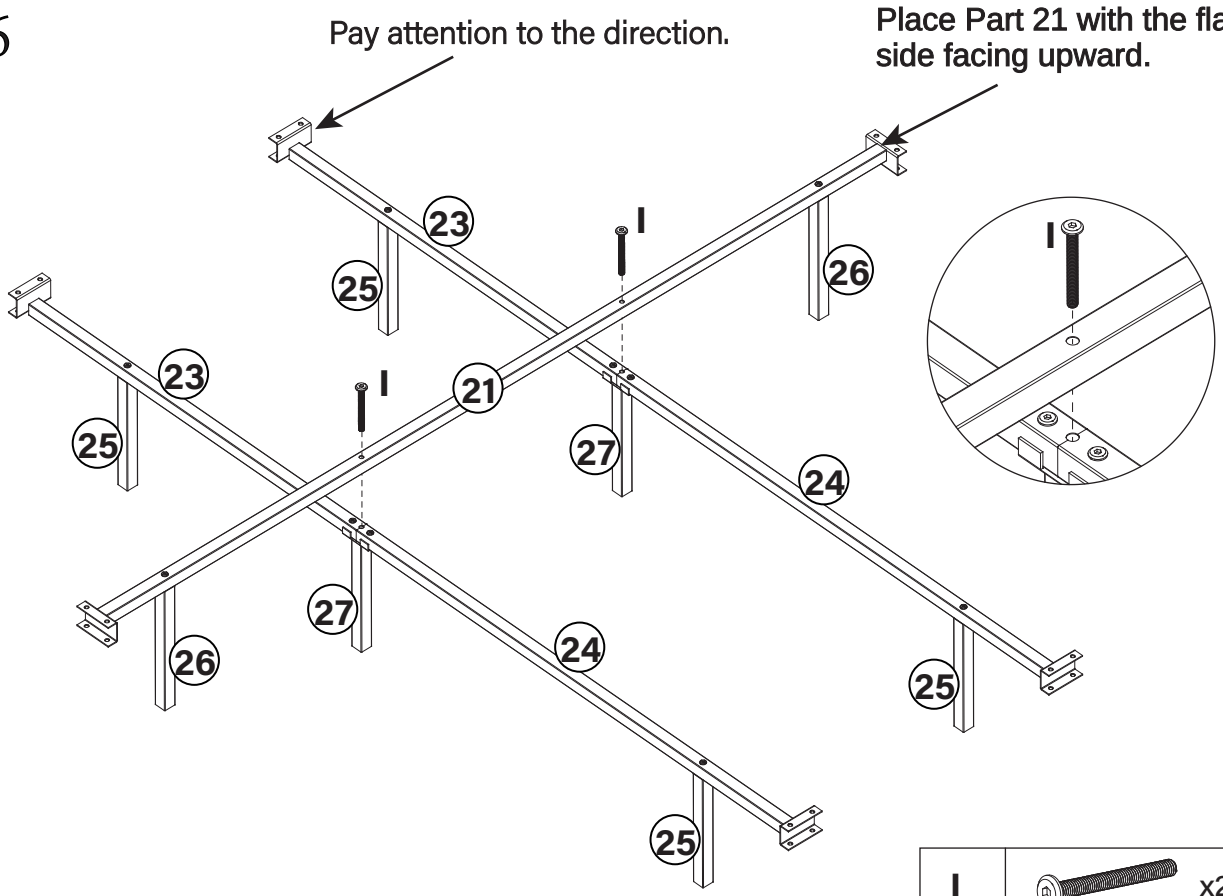STEP 16




I		x2
R		x1

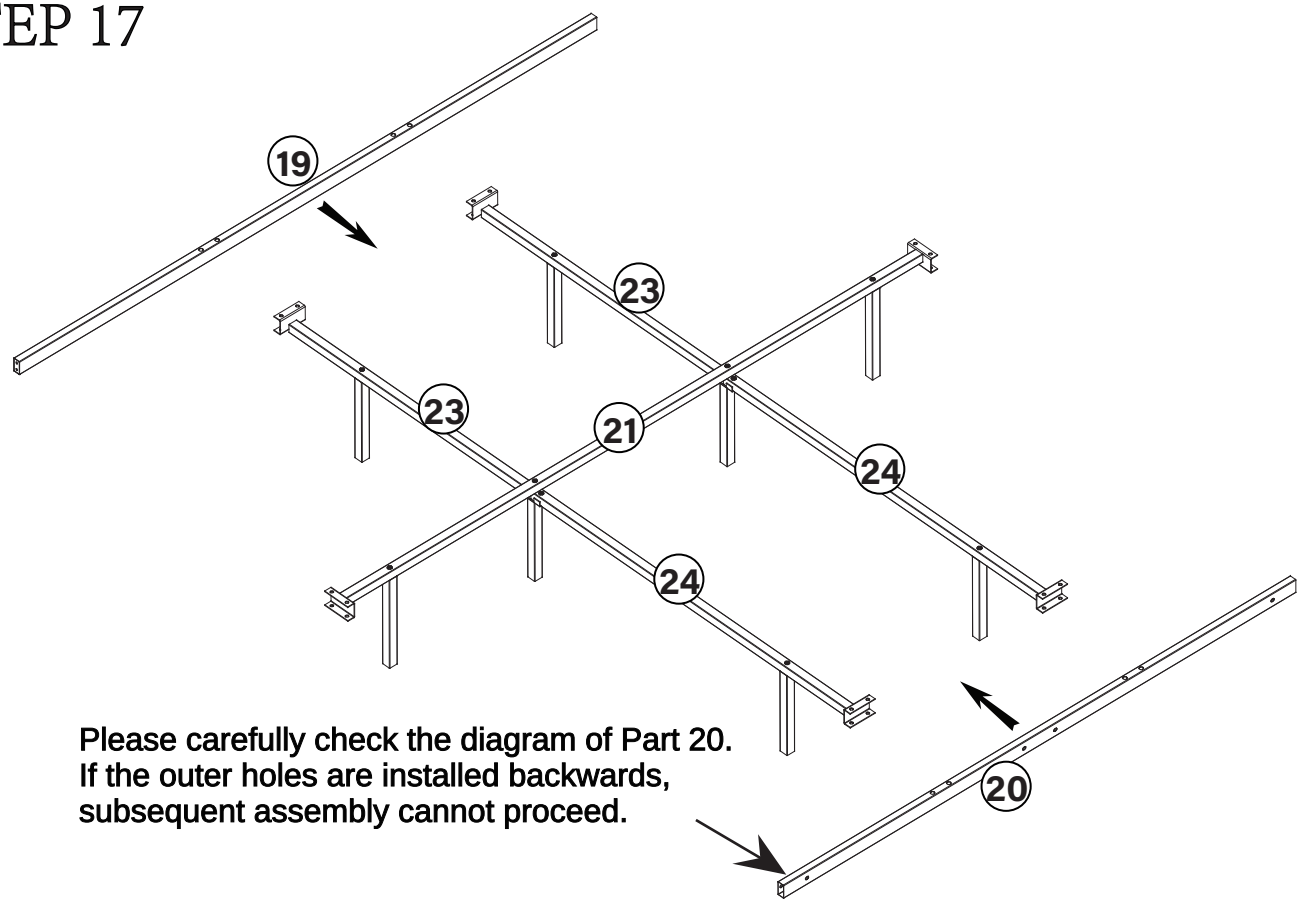
STEP 17




Please carefully check the diagram of Part 20.
If the outer holes are installed backwards,
subsequent assembly cannot proceed.

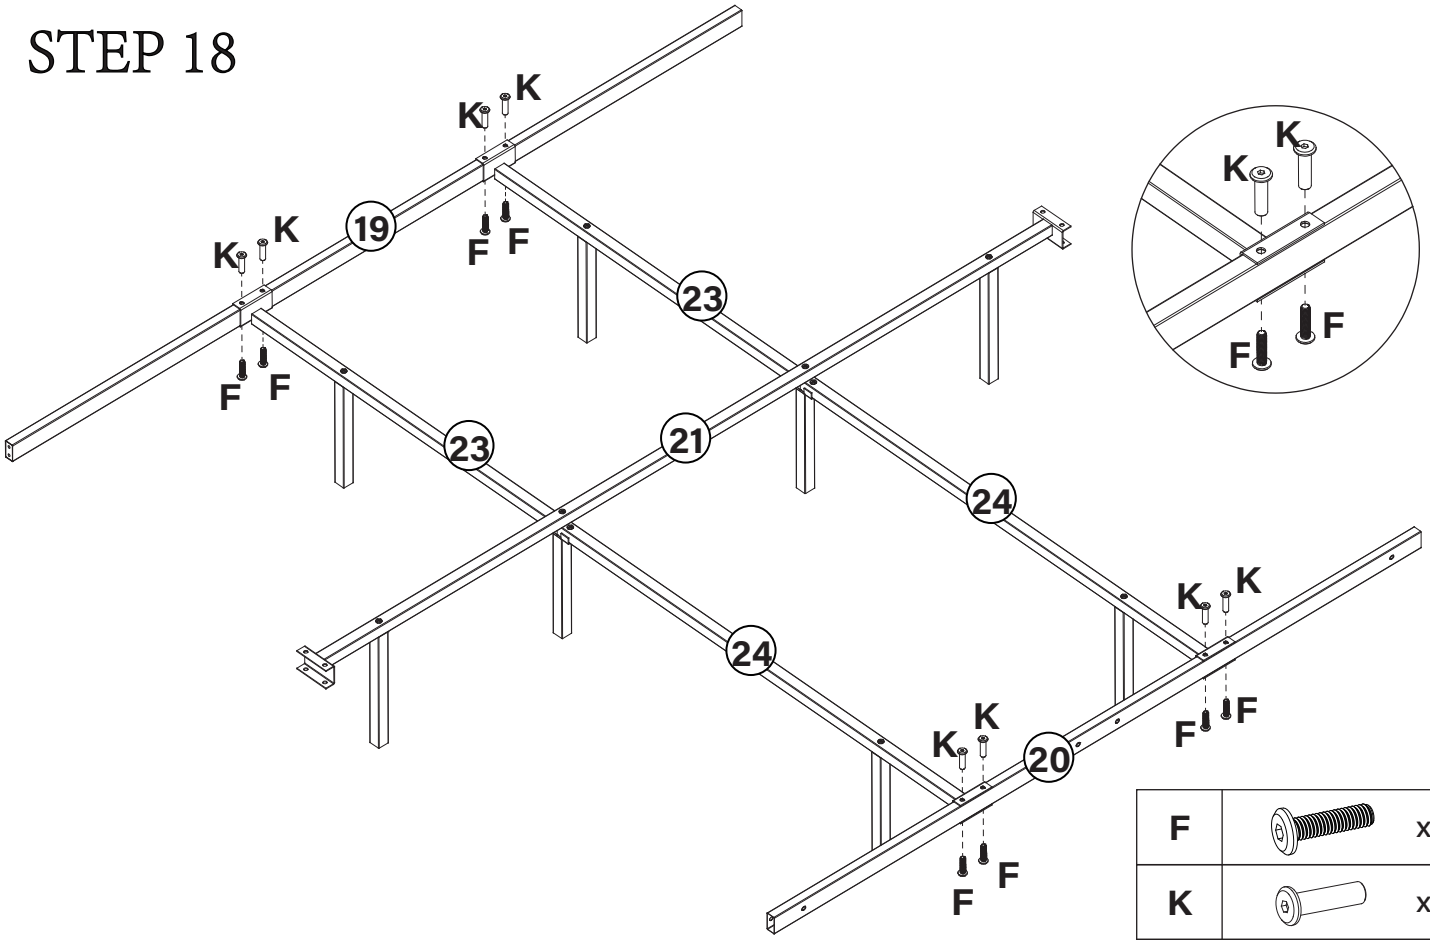STEP 18




F		x8
K		x8
R		x1

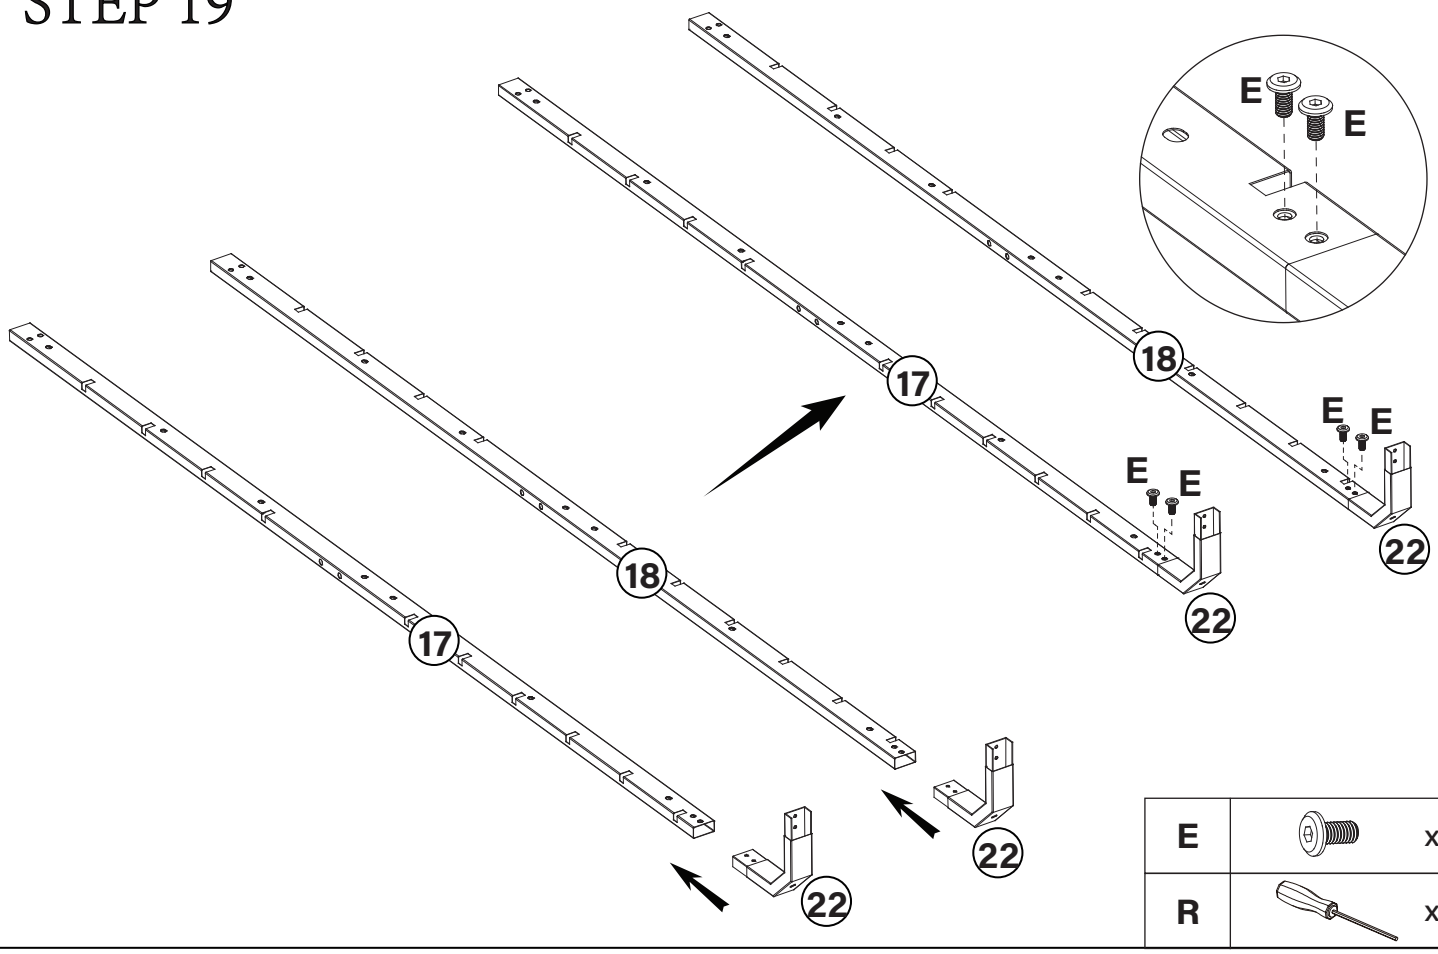STEP 19




E		x4
R		x1

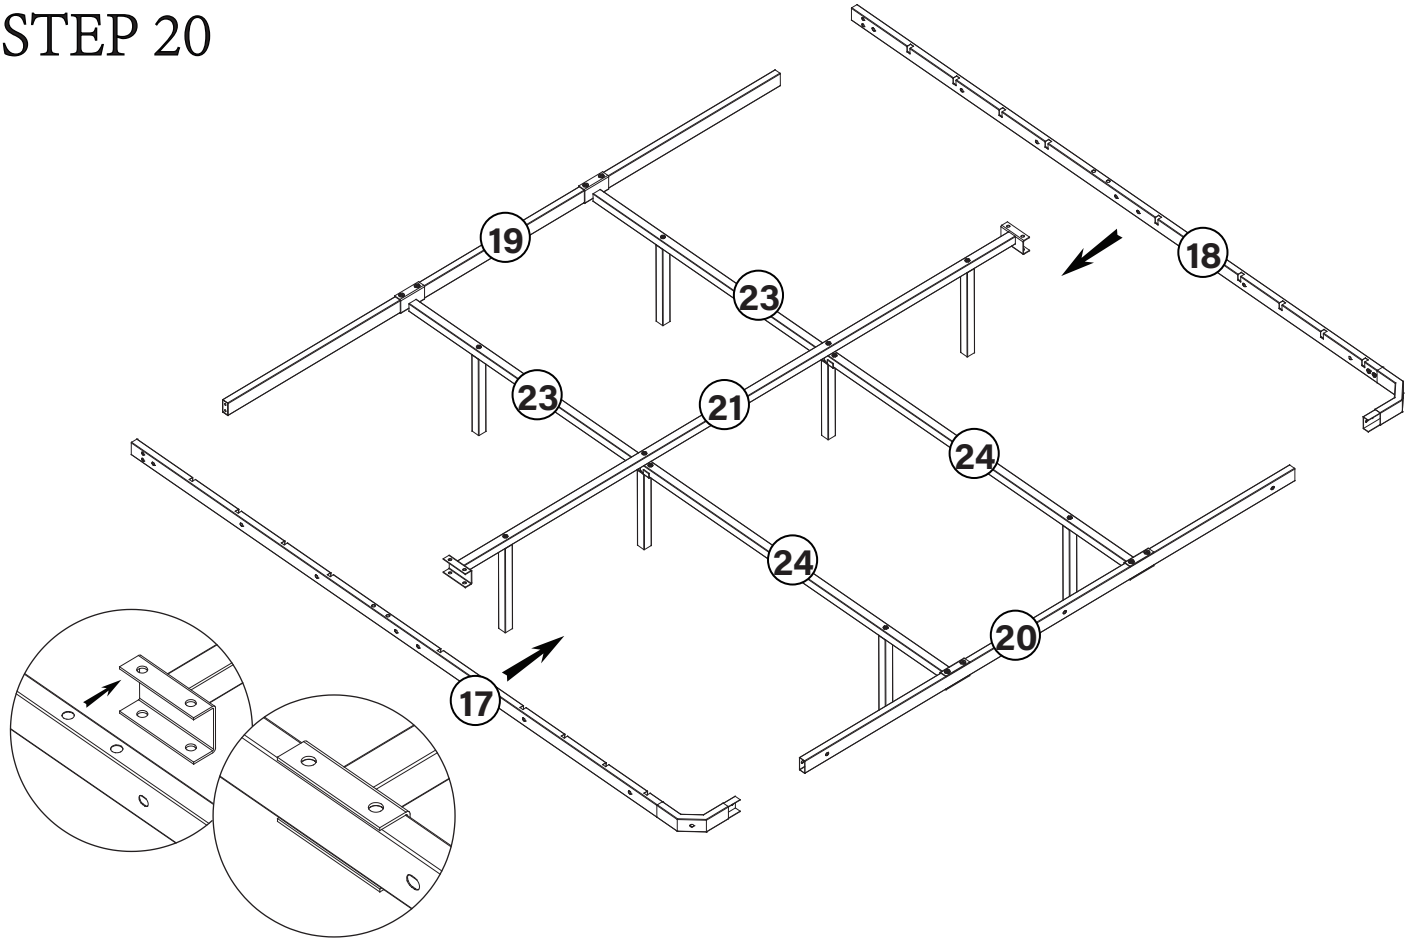STEP 20



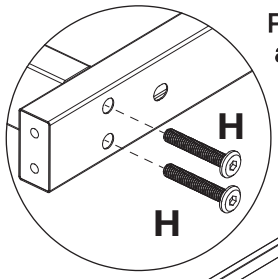STEP 21




Please do not mix F and H screws.


Please do not mix F and H screws.

E		x4
F		x4
H		x4
K		x4
R		x1

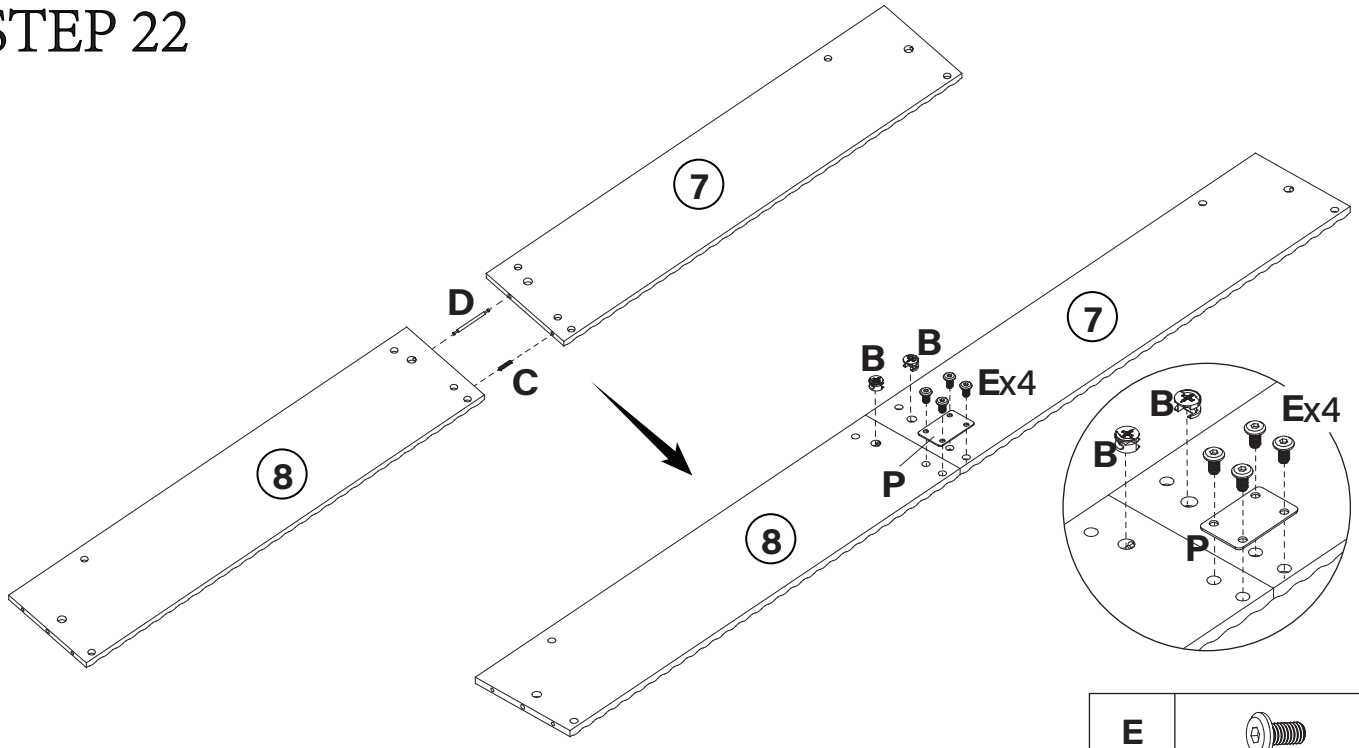STEP 22




INSERTING CAM-LOCK

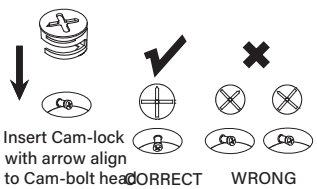

Align the arrow on the Cam-lock tothe Cam-bolt head and insert the Cam-lock.Ensure-

			E		x4
B		x2	P		x1
C		x1	Q		x1
D		x1	R		x1

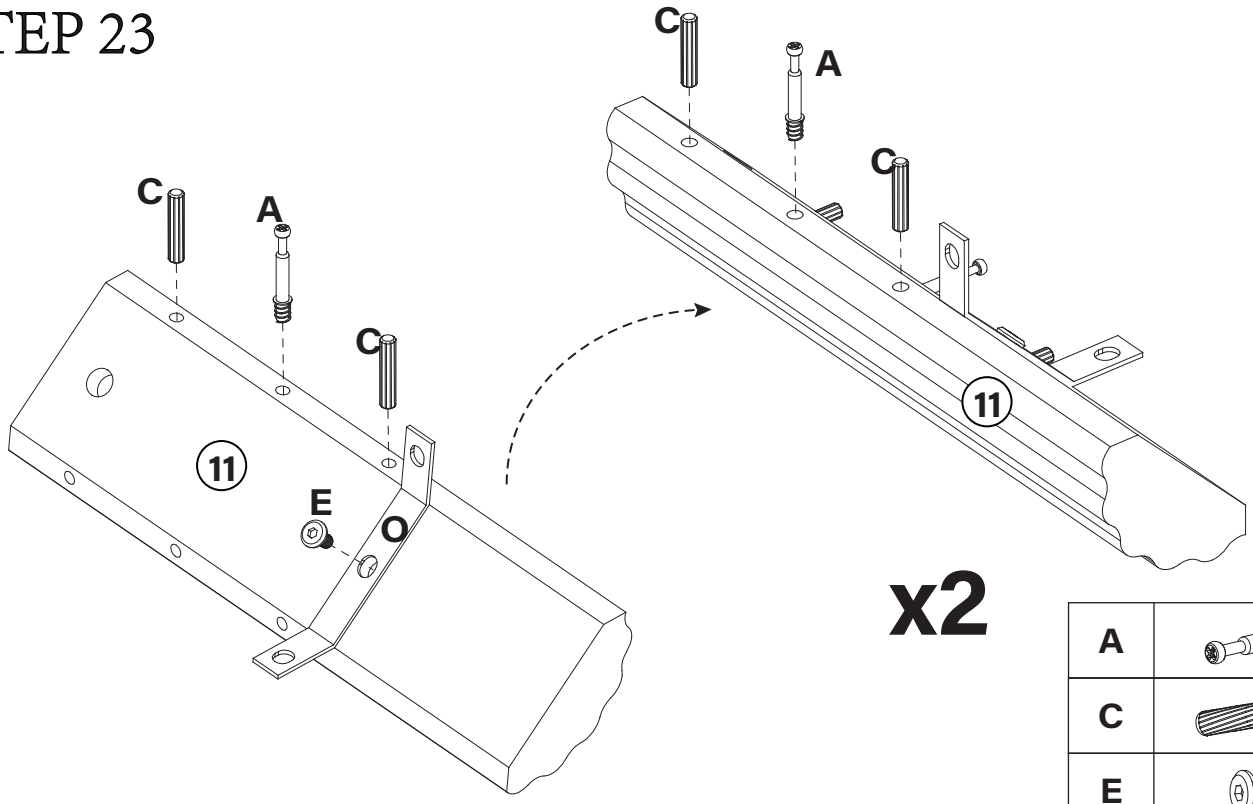STEP 23




x2

A	x4		
C	x8		
E	x2		
O	x2		
Q	x1	R	x1

STEP 24

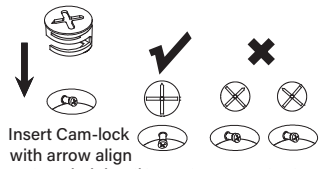
INSERTING CAM-LOCK




Align the arrow on the Cam-lock tothe Cam-bolt head and insert the Cam-lock.Ensure-

B	x2		
E	x2		
Q	x1		
R	x1		

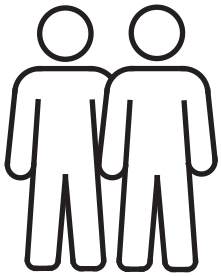
STEP 25





INSERTING CAM-LOCK

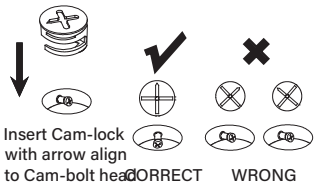


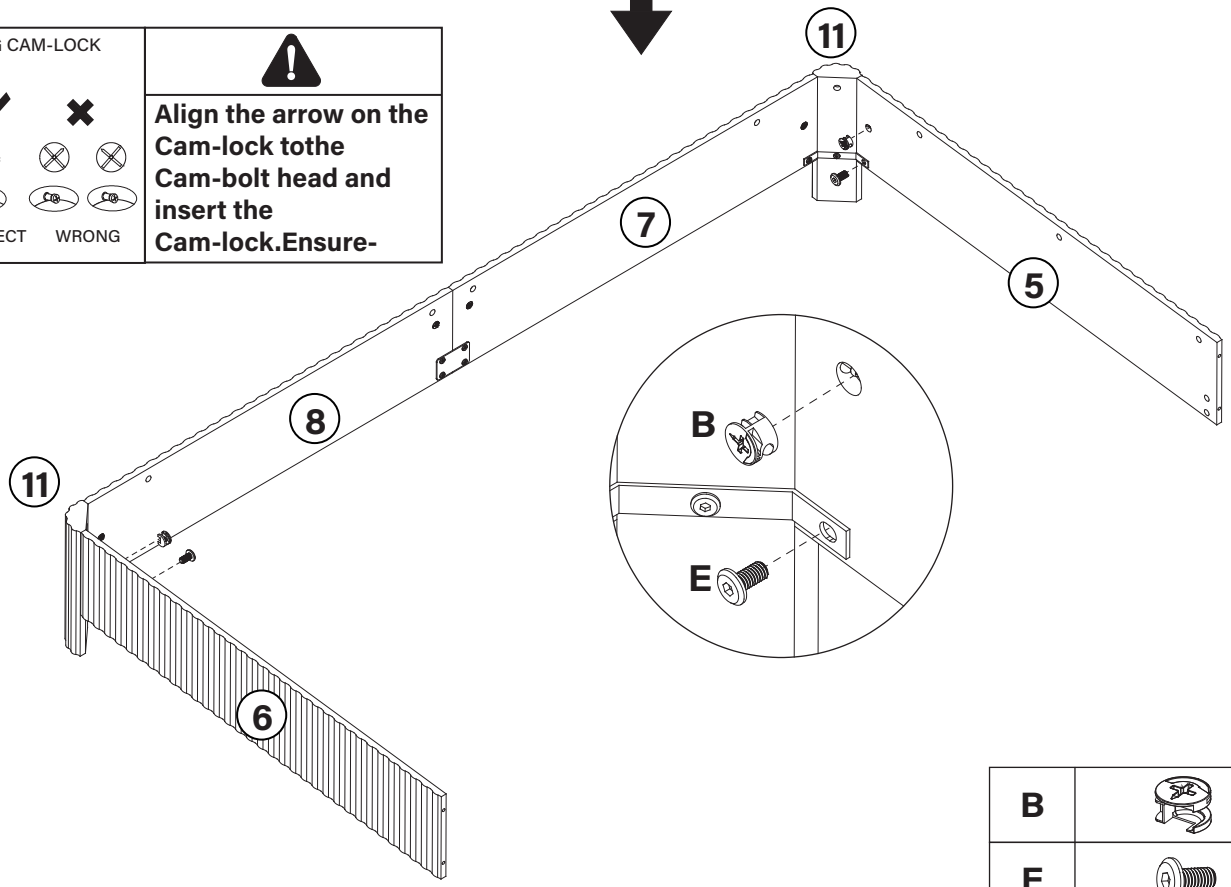
Align the arrow on the Cam-lock tothe Cam-bolt head and insert the Cam-lock.Ensure-




B		x2
E		x2
Q		x1
R		x1

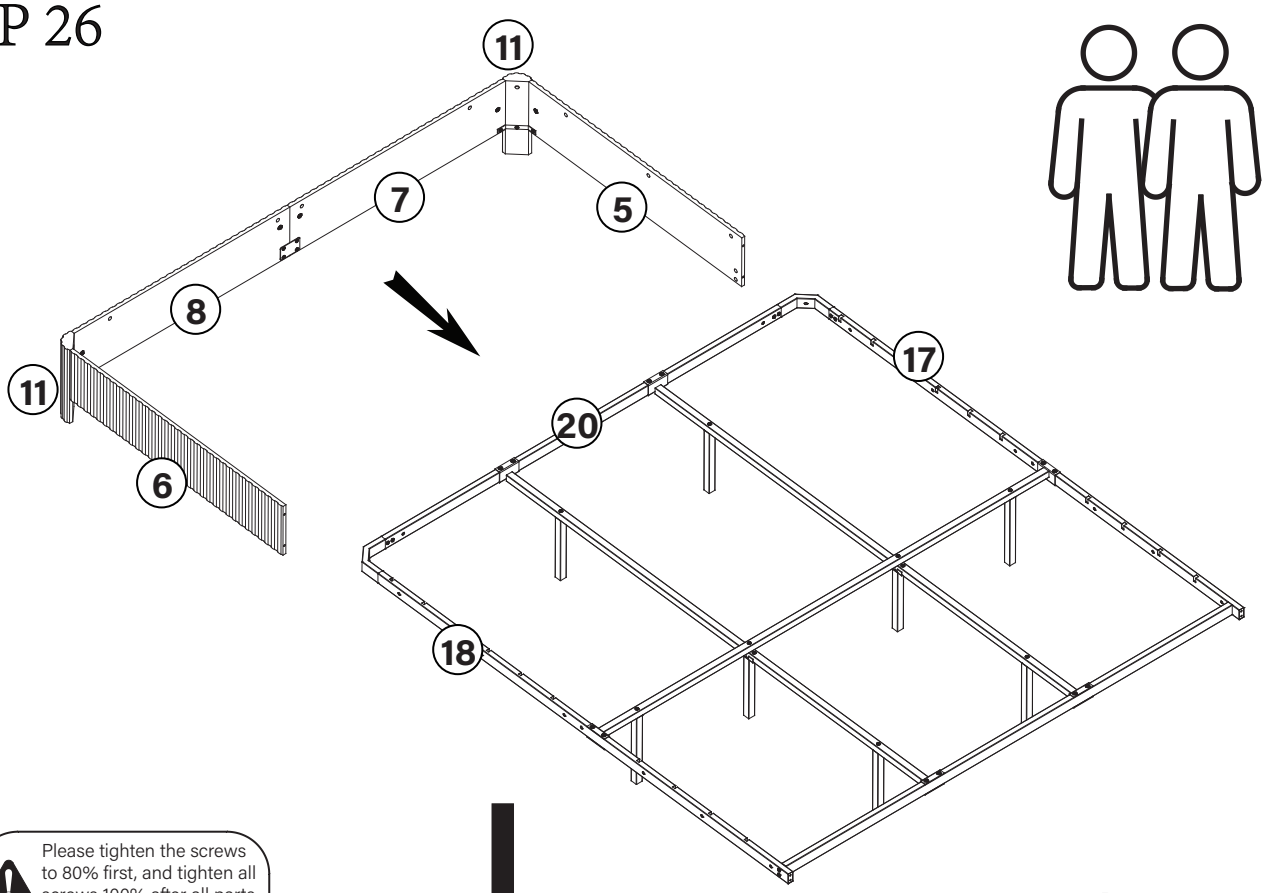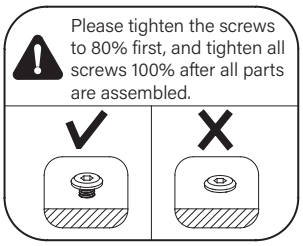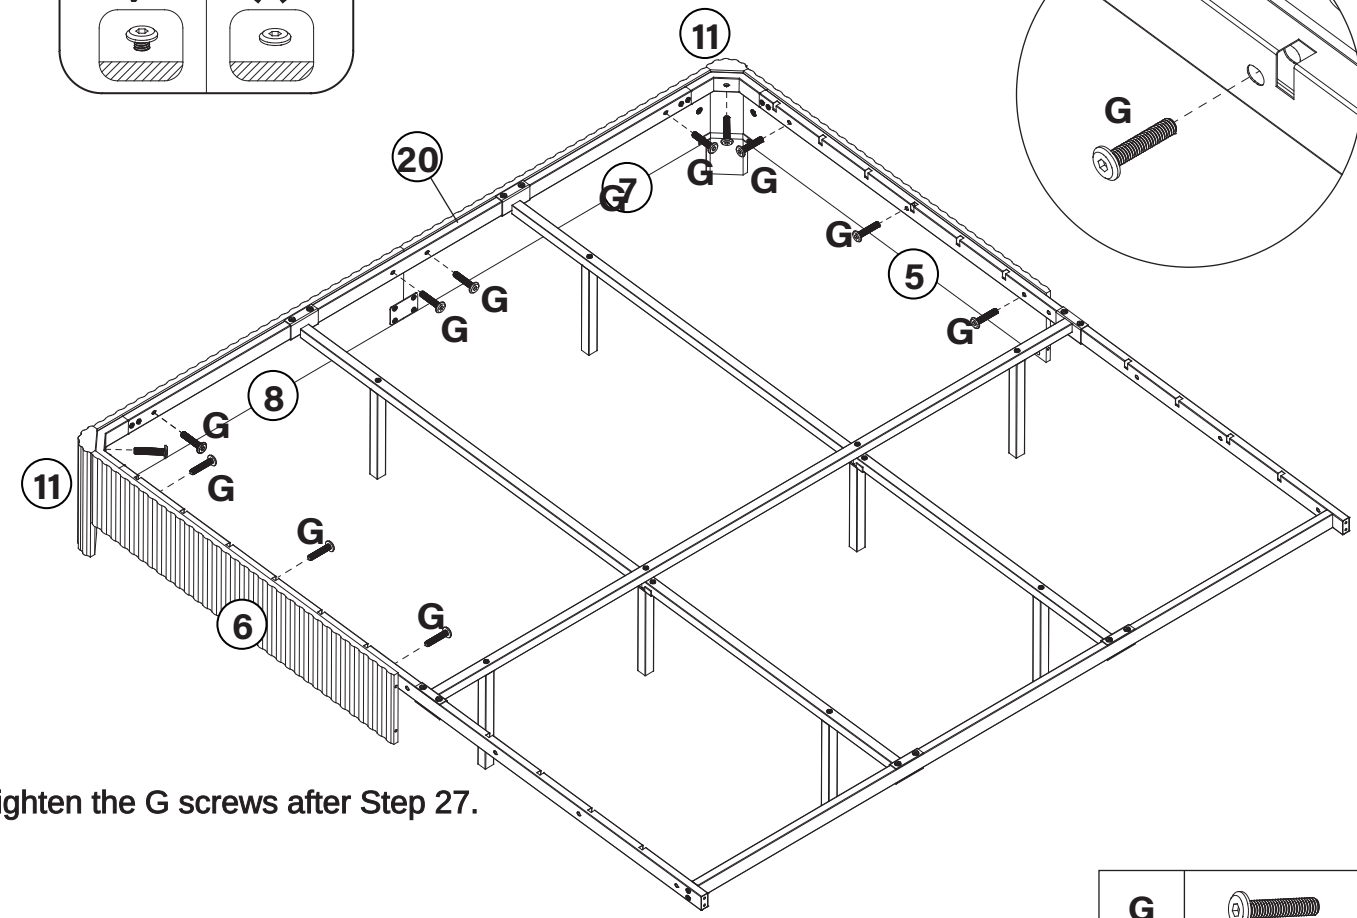
STEP 26









Tighten the G screws after Step 27.

G		x12
R		x1

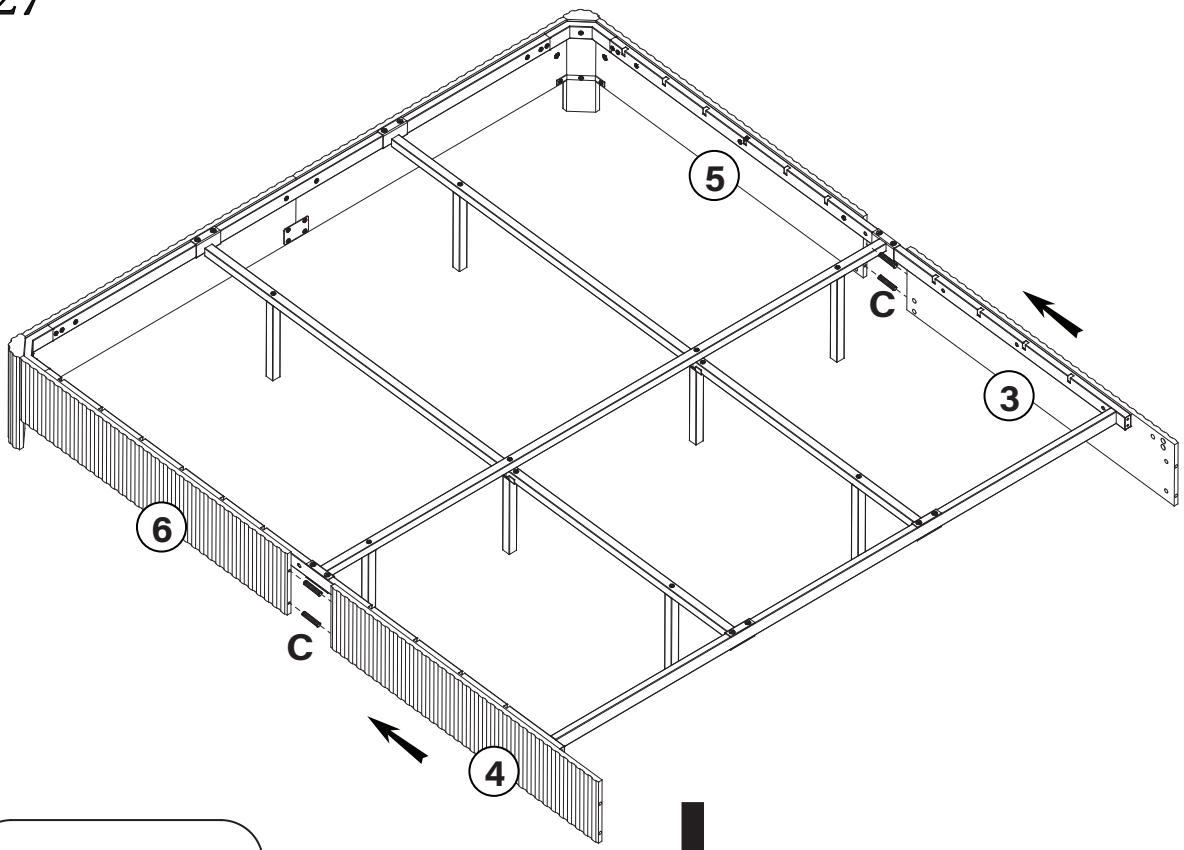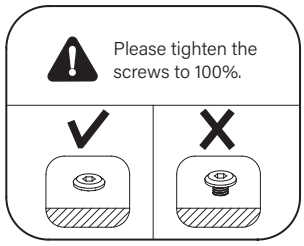
STEP 27








C		x4
G		x8
R		x1

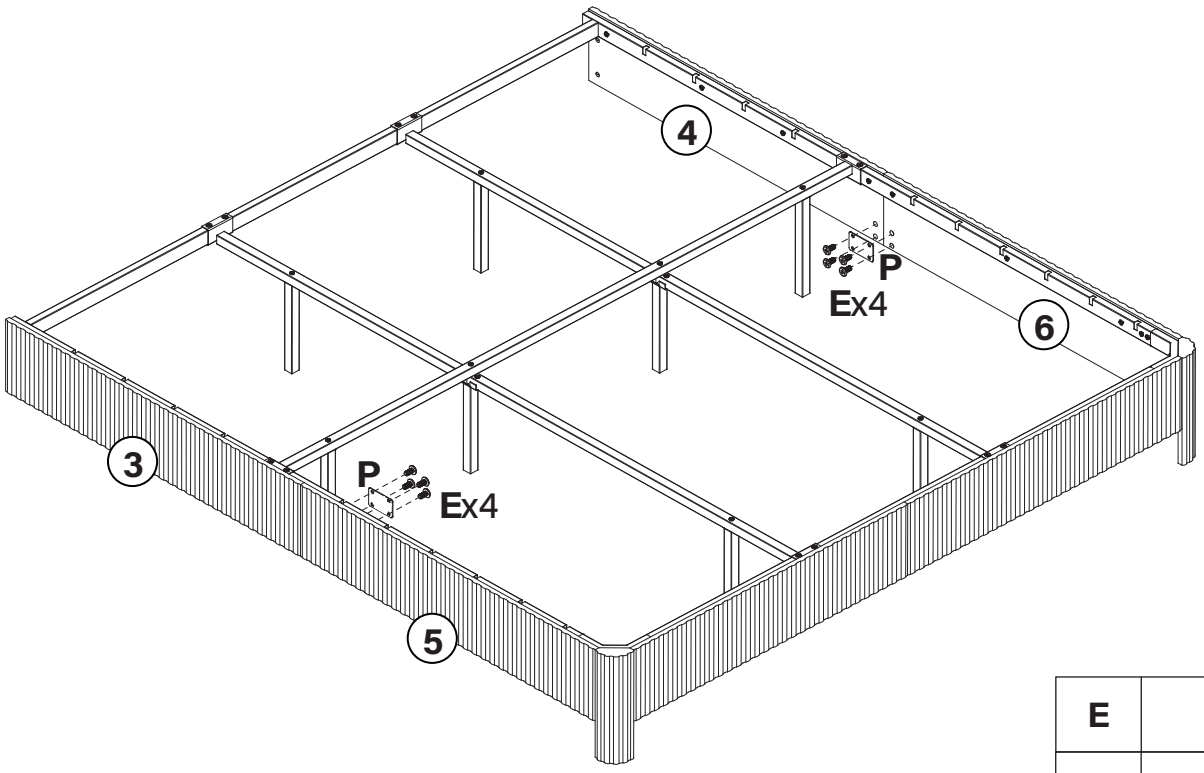
STEP 28




E		x8
P		x2
R		x1

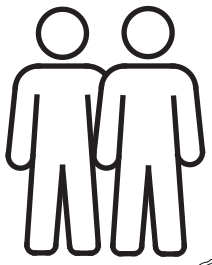STEP 29



H		x4
J		x4
L		x4
R		x1

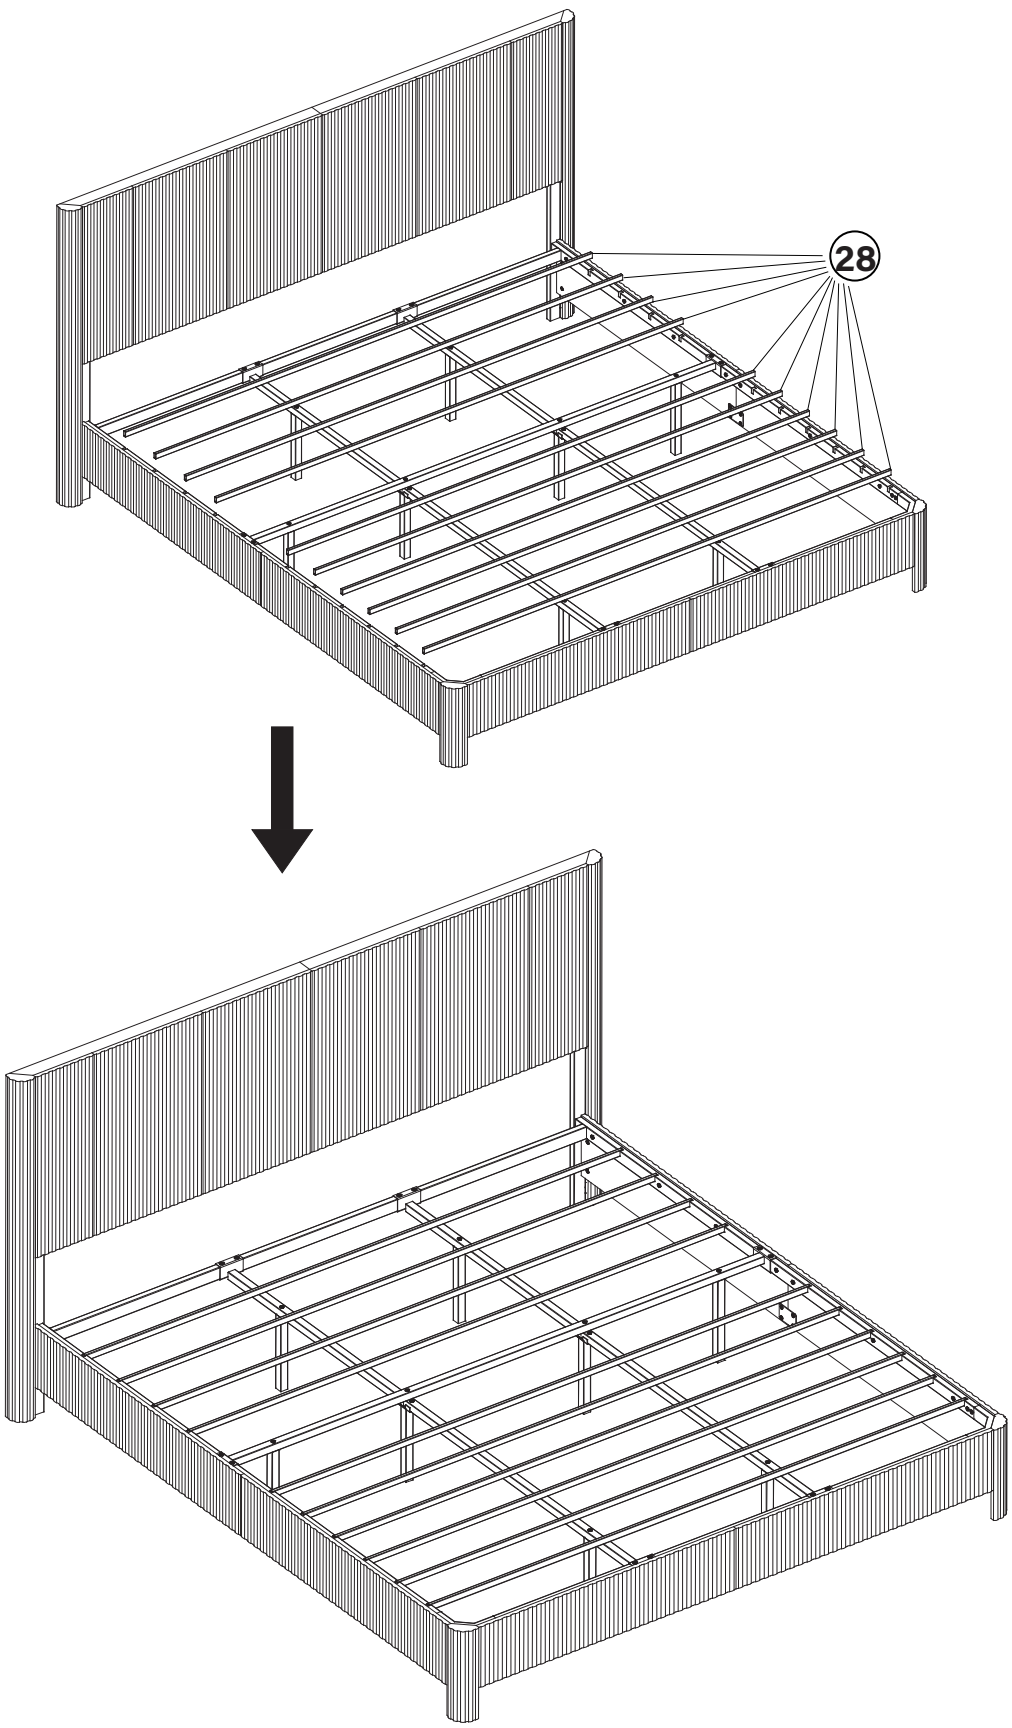STEP 30



complete!