
TV STAND

Assembly Instructions - Please keep for future reference

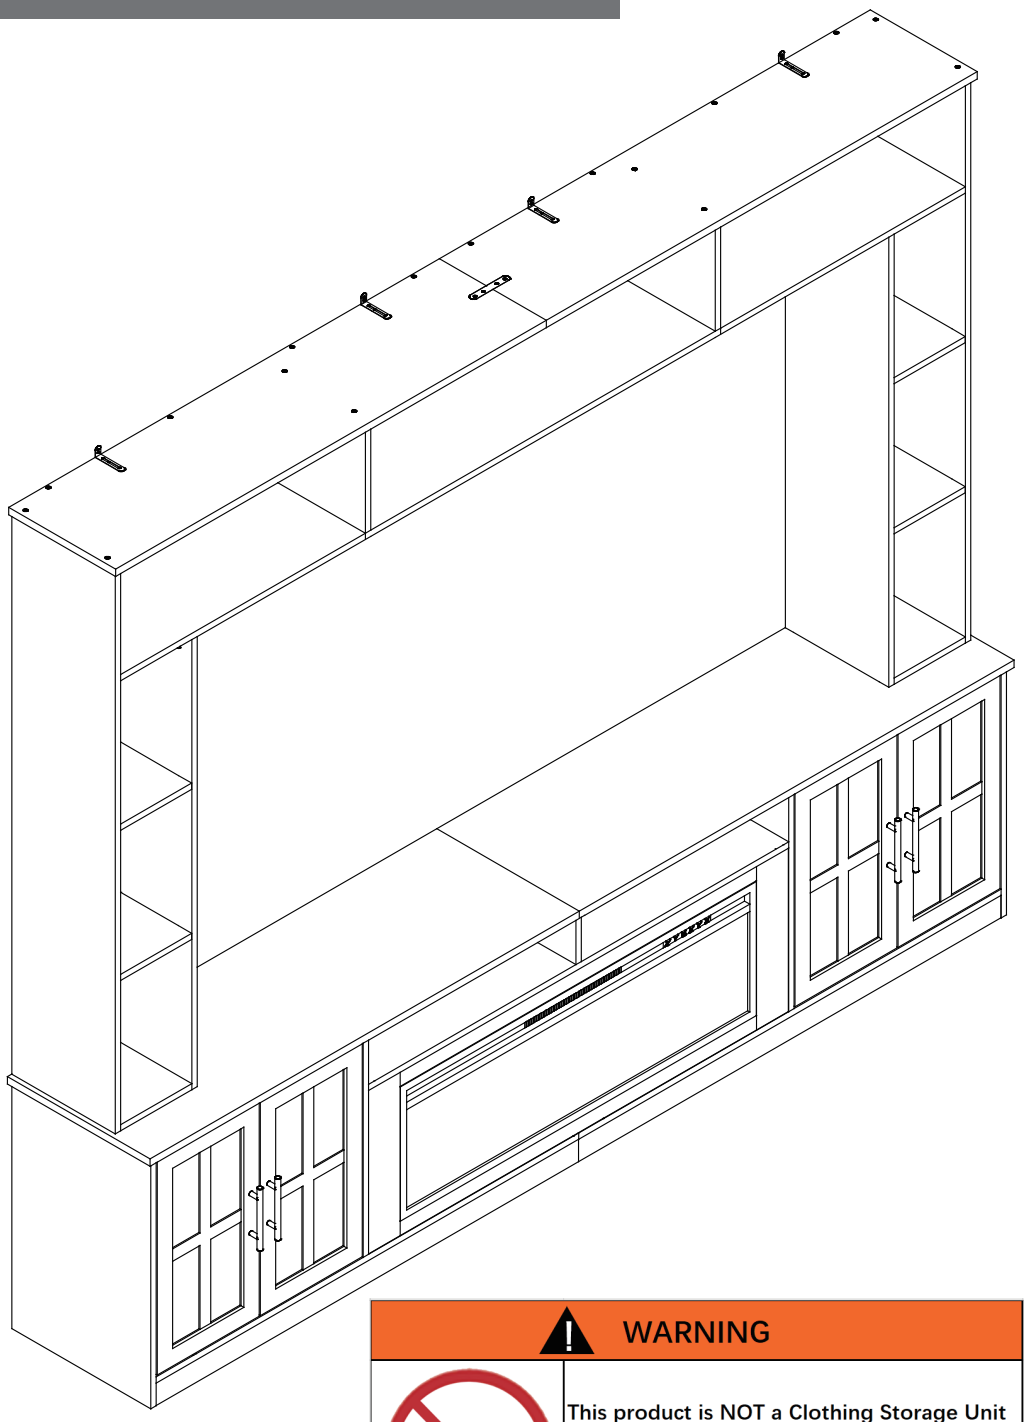

Dimensions

Width- 95.5inch

Depth-40inch

Height-78.75inch

WARNING



This product is NOT a Clothing Storage Unit (CSU).
DO NOT use it for clothing storage.
Improper use may cause furniture tipover.

Important – Please read these instructions fully before starting assembly

Safety and Care Advice

Important – Please read these instructions fully before starting assembly

• Check you have all the components and tools listed on the following pages.

• Remove all fittings from the plastic bags and separate them into their groups.

• Keep children and animals away from the work area, small parts could choke if swallowed.

• Make sure you have enough space to layout the parts before starting.

• During assembly do not stand or put weight on the product, this could cause damage.

• Assemble the item as close to its final position (in the same room) as possible.

• Assemble on a soft level surface to avoid damaging the unit or your floor.

• Parts of the assembly will be easier with 2 people.



• To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

Care and maintenance

• Only clean using a damp cloth and mild detergent, do no use bleach or abrasive cleaners.

• From time to time check that there are no loose screws on this unit.

• This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

• Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts

• Regularly check and ensure That all bolts and fittings are tightened properly.

WARNING
In order to help prevent overturning – please follow these instructions




















To help prevent product toppling over please follow the below steps:-

Use the anti tip stap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose


Components - Fittings

Please check you have all the panels listed below


Note:The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required

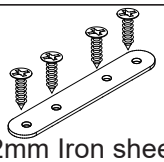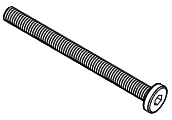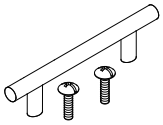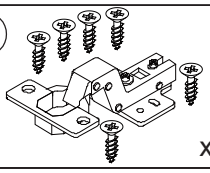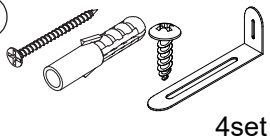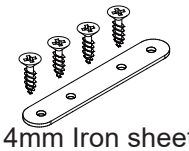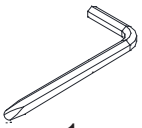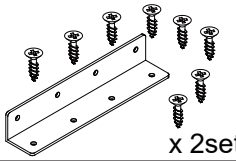A  Cam Bolt x 78+2	B  6*30mm Dowel x 88+2	C  Cam lock x 90+2	D  5*16mm Screw x 10+1
E  x 8	F  Iron pipe fitting x 1	G  4*12mm Screw x 8+1	H  3.5*12mm Iron sheet x 2
I  4*40mm Screw x 58+2	J  6*50mm Screw x 4	K  x 2set	L  6*40mm Dowel x 6+1
M  Laminate support x 8+1	N  Handle x 4set	O  x 4set	P  x 8set
Q  4set	R  Perfect fit x 42	S  3.5*14mm Iron sheet x 3	T  Allen key x 1
U  x 28set	V  x 2set	W  x 12set	X  Foot pad x 12
Y  x 2			

Tools required Not Included

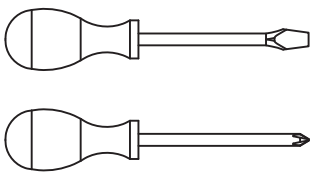


Phillips screwdriver
(medium & large)

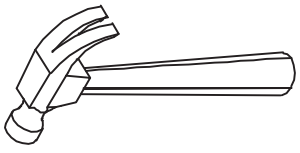

Using Camlocks


Step 1

Connect the male camlock as diected in the assembly instructions using a scewdriver.

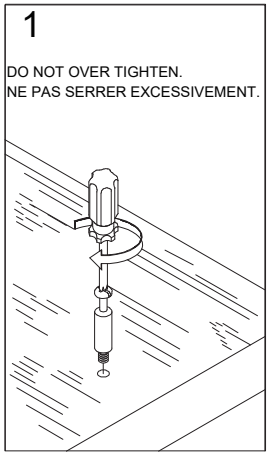

Step 2


Push the male camlock into the entry hole.

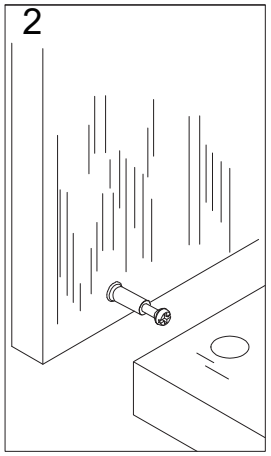

Step 3

Insert the female camlock as shown in the instruction.

Note：ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

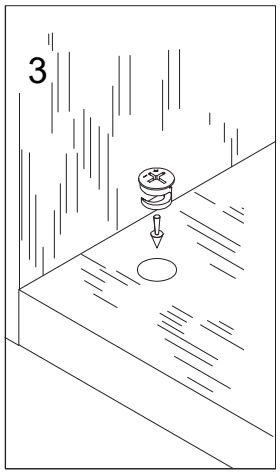


Step 4


Turn the female camlock clockwise with a screwdriver.

You should feel a click when the camlock is locked in place.

The joint is now secure.

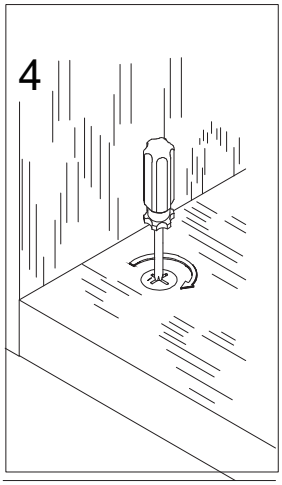


Assembly Instructions

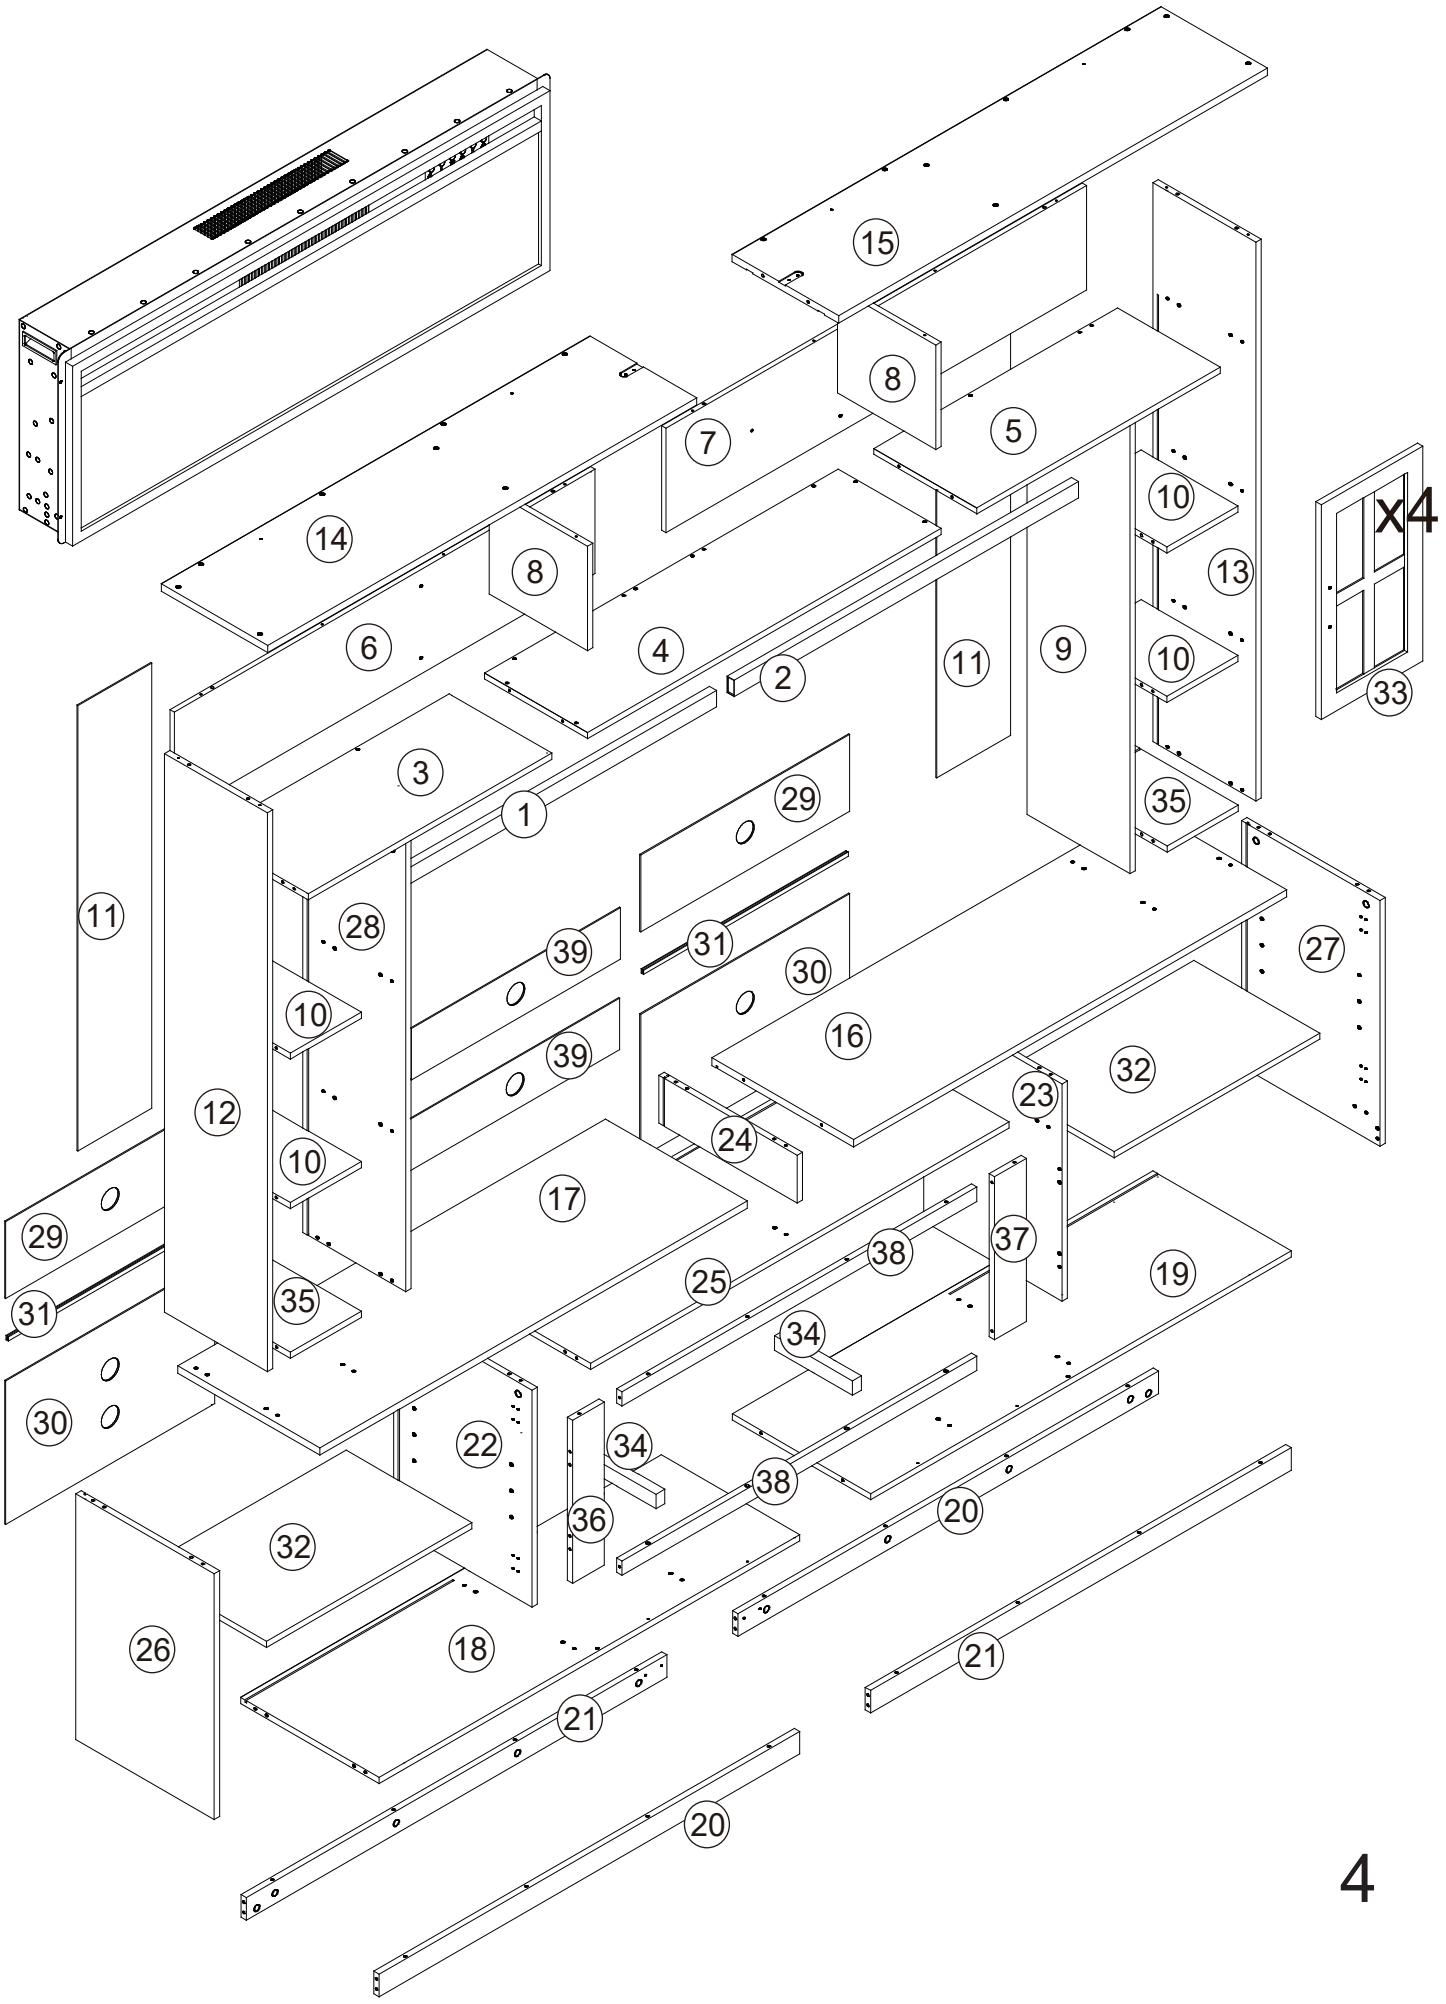


PART LIST

This product comes in 3 box.


Box 1

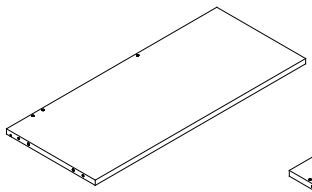


③
x1
687x290x15mm

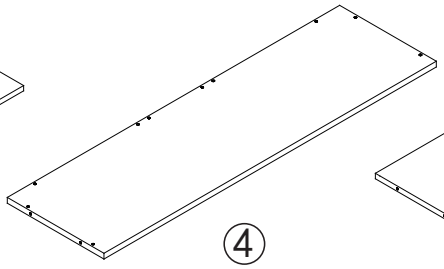


④
x1
997x290x15mm

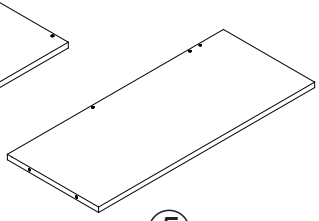


⑤
x1
687x290x15mm

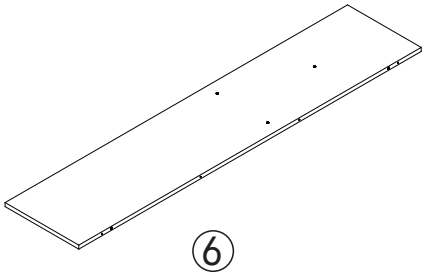


⑥
x1
1185.5x255x12mm

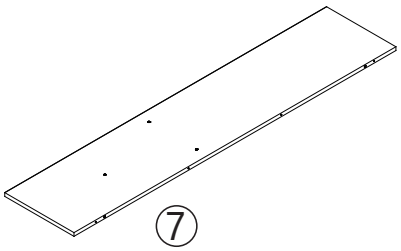


⑦
x1
1185.5x255x12mm

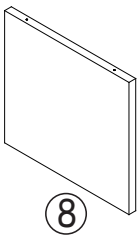


⑧
x2
277x255x15mm

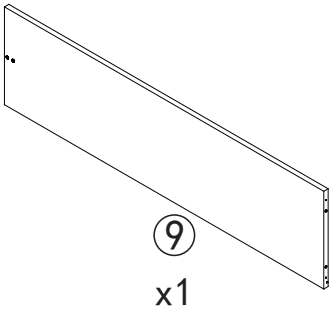


⑨
x1
1094x290x15mm

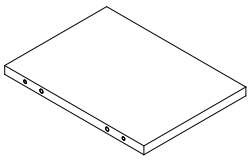


⑩
x4
273x200x15mm

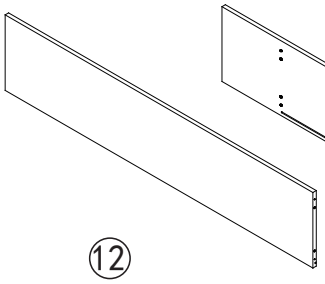


⑫
x1
1364x290x15mm

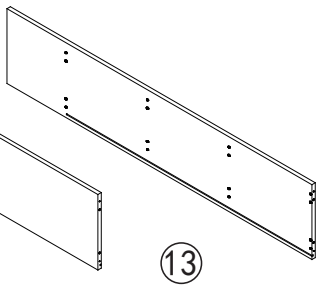


⑬
x1
1364x290x15mm

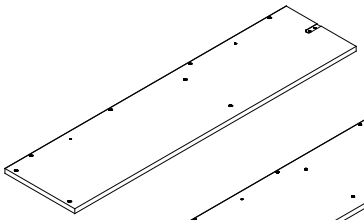


⑭
x1
1209x300x18mm

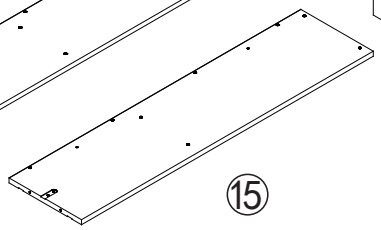


⑮
x1
1209x300x18mm

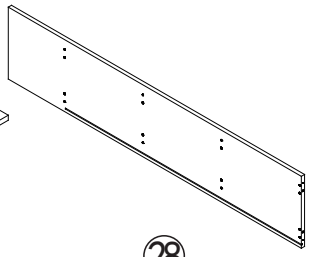

㉘
x1
1094x290x15mm

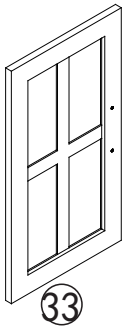

㉝
x4
524x286x15mm

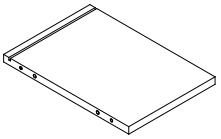

㉟
x2
290x200x15mm




Hardware kit x1


PART LIST

This product comes in 3 box.


Box 2

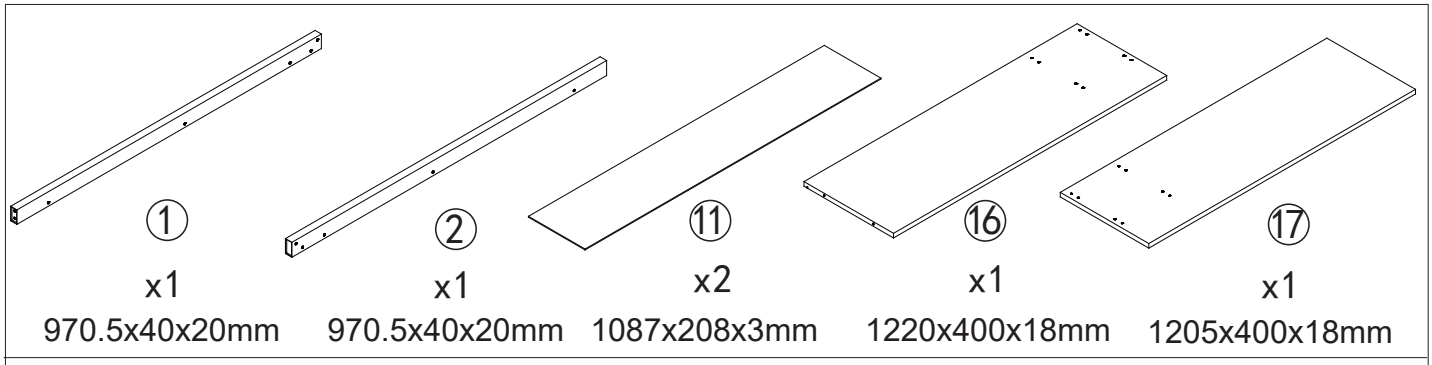


① x1 970.5x40x20mm
② x1 970.5x40x20mm
⑪ x2 1087x208x3mm
⑯ x1 1220x400x18mm
⑰ x1 1205x400x18mm

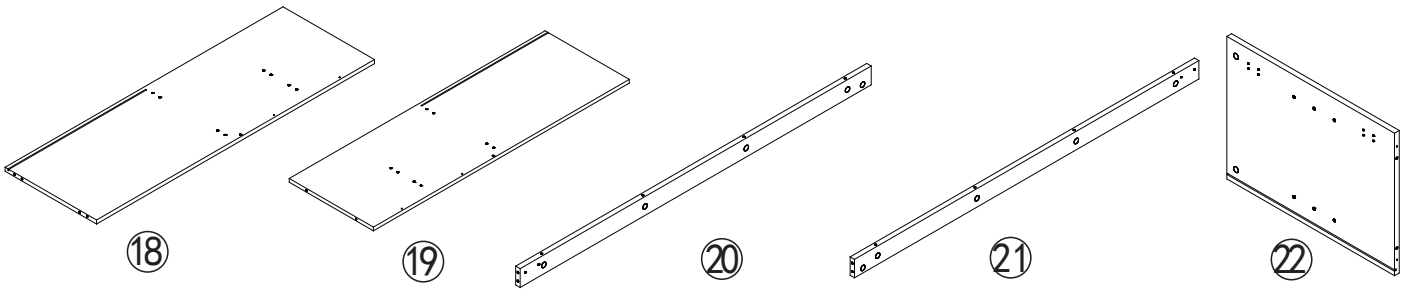

⑱ x1 1185.5x390x15mm
⑲ x1 1185.5x390x15mm
⑳ x2 1185.5x55x15mm
㉑ x2 1185.5x55x15mm
㉒ x1 530x390x15mm

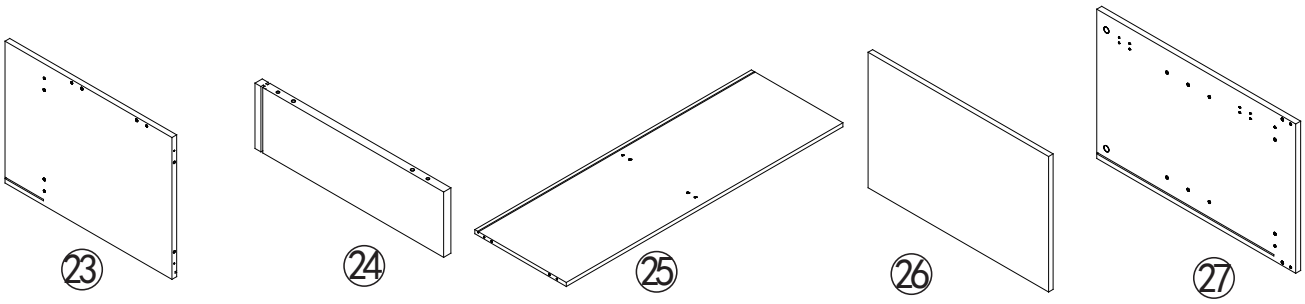


㉓ x1 530x390x15mm
㉔ x1 390x117x15mm
㉕ x1 1179x390x15mm
㉖ x1 600x390x15mm
㉗ x1 600x390x15mm

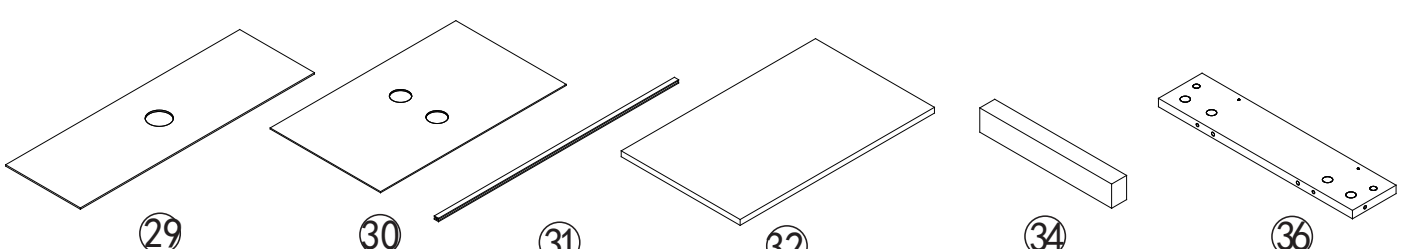

㉙ x2 589x188x3mm
㉚ x2 589x350x3mm
㉛ x2 577mm
㉜ x2 579x350x15mm
㉞ x2 220x35x25mm
㊱ x1 398x89.5x15mm


PART LIST

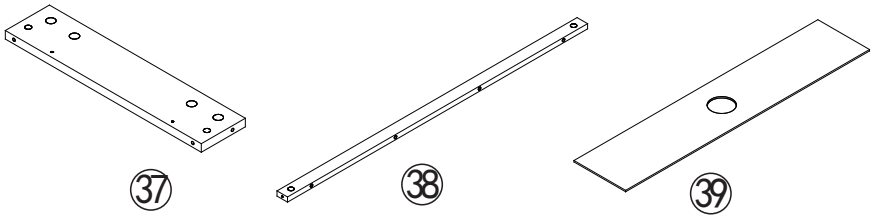

㊲	㊳	㊴
x1	x2	x2
398x89.5x15mm	1000x35x15mm	590x125x3mm


This product comes in 3 box.

Box 3

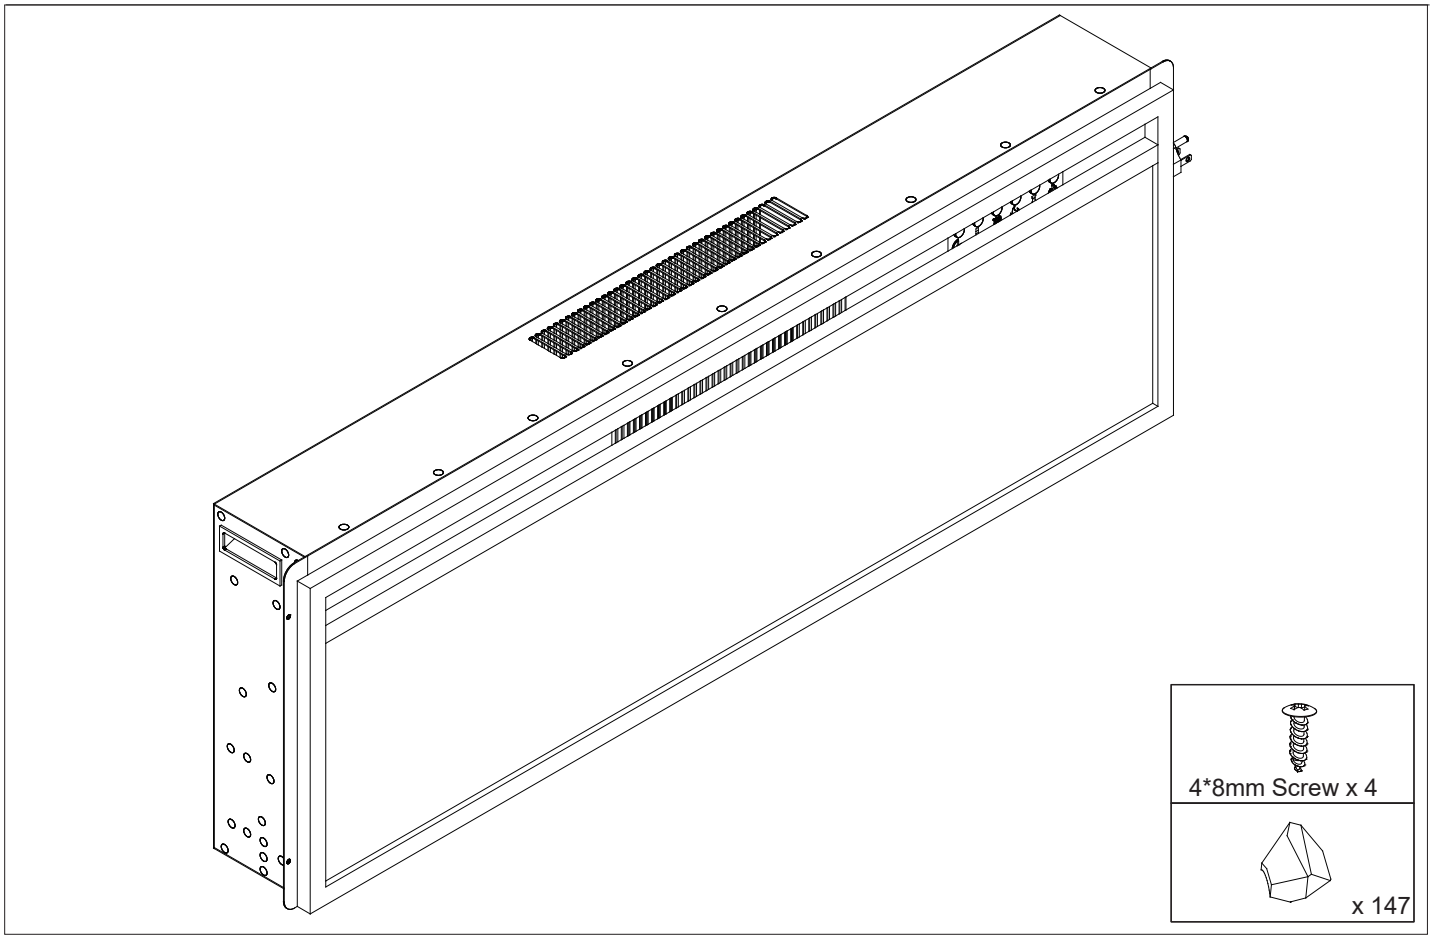

Assembly Instructions


Step 1

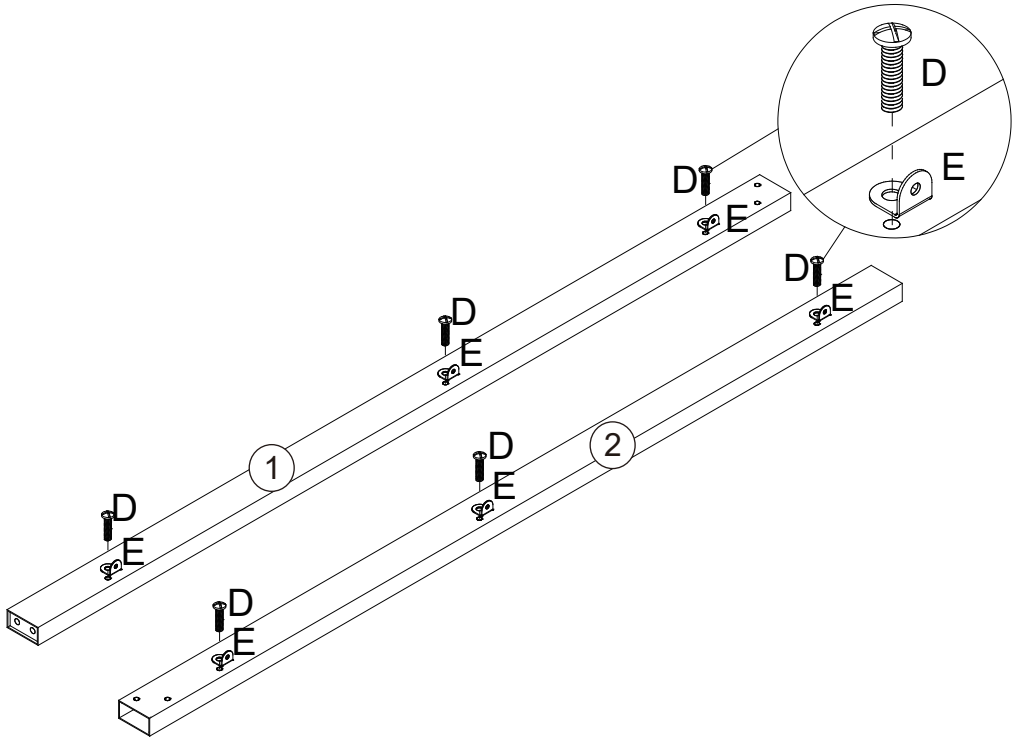

D	E
5*16mm Screw x 6	x 6

Step 2


F
Iron pipe fitting x 1

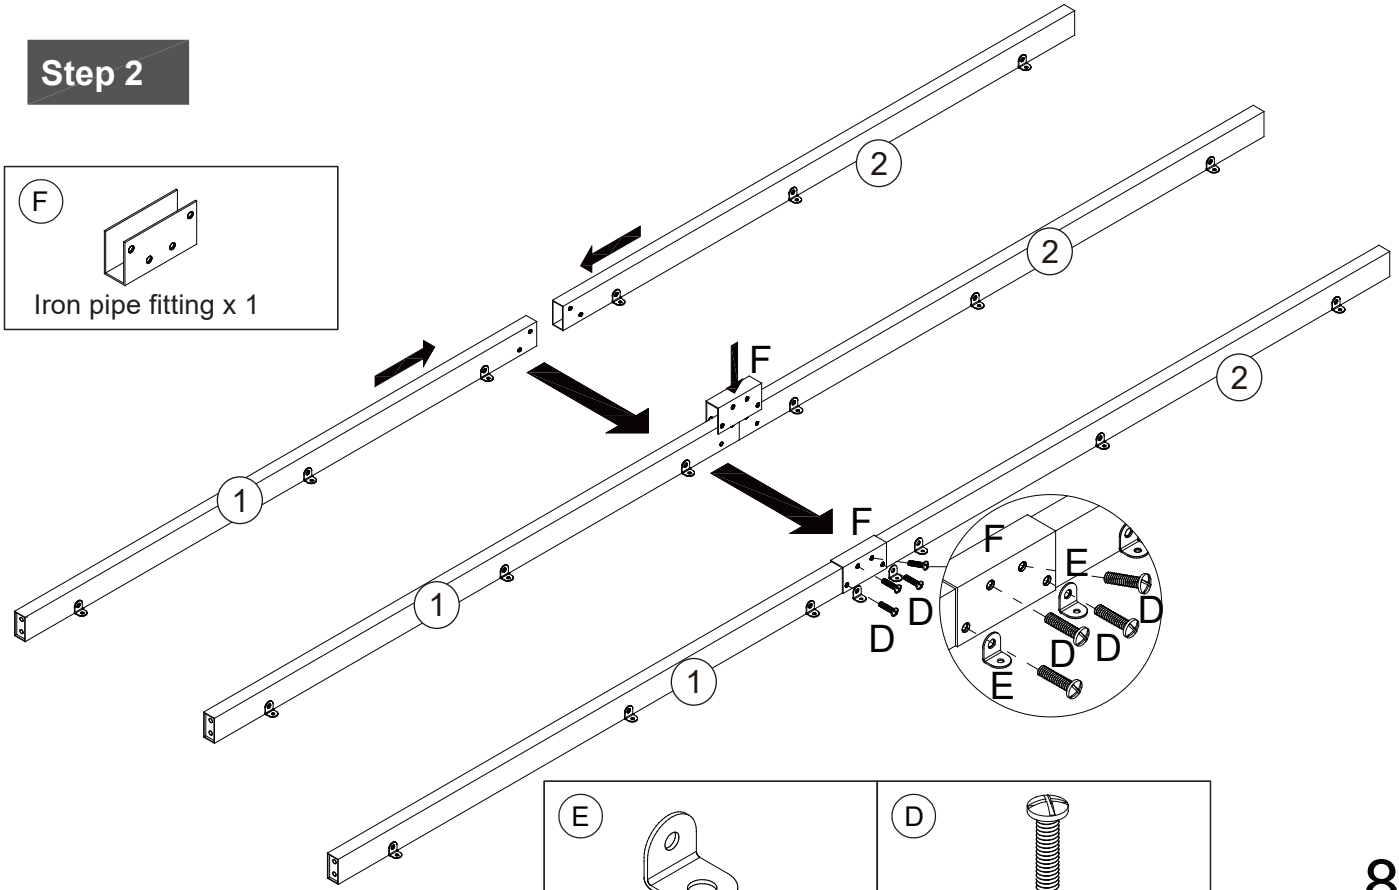

E	D
x 2	5*16mm Screw x 4


Assembly Instructions

Step 3

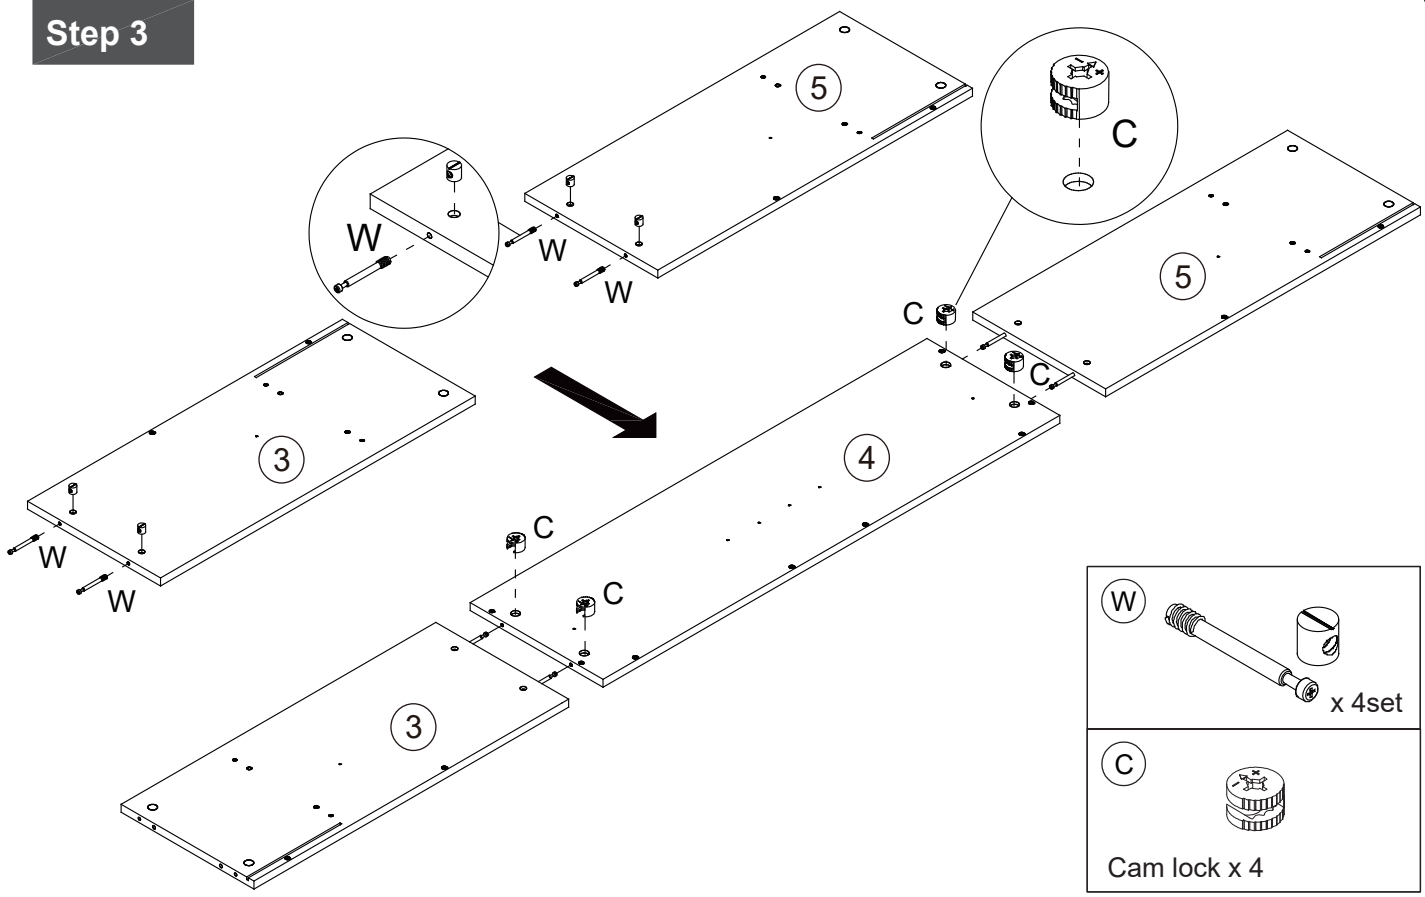

W	x 4set
C	Cam lock x 4


Step 4

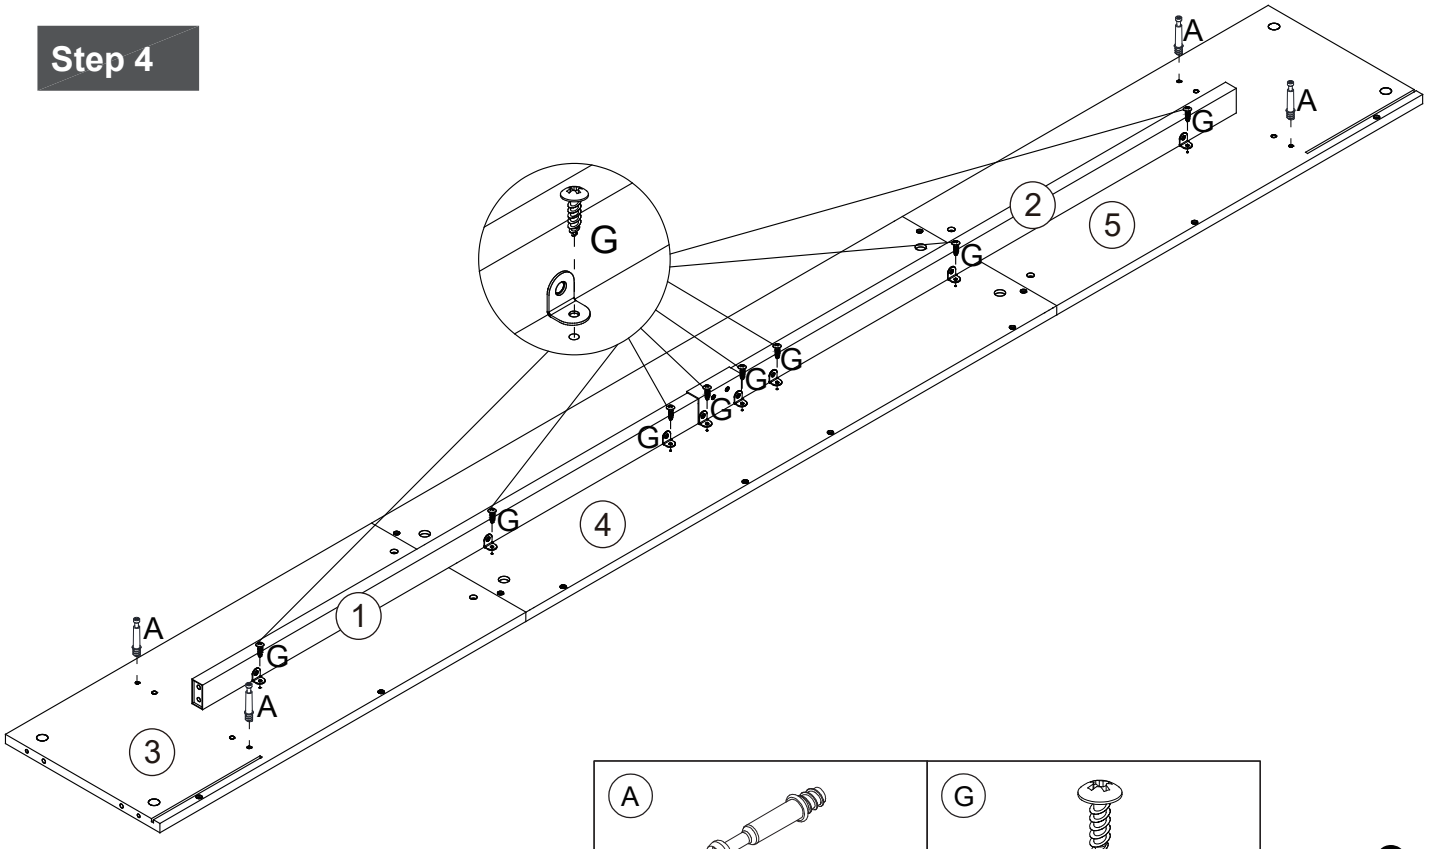


A	Cam Bolt x 4
G	4*12mm Screw x 8


Assembly Instructions

Step 5

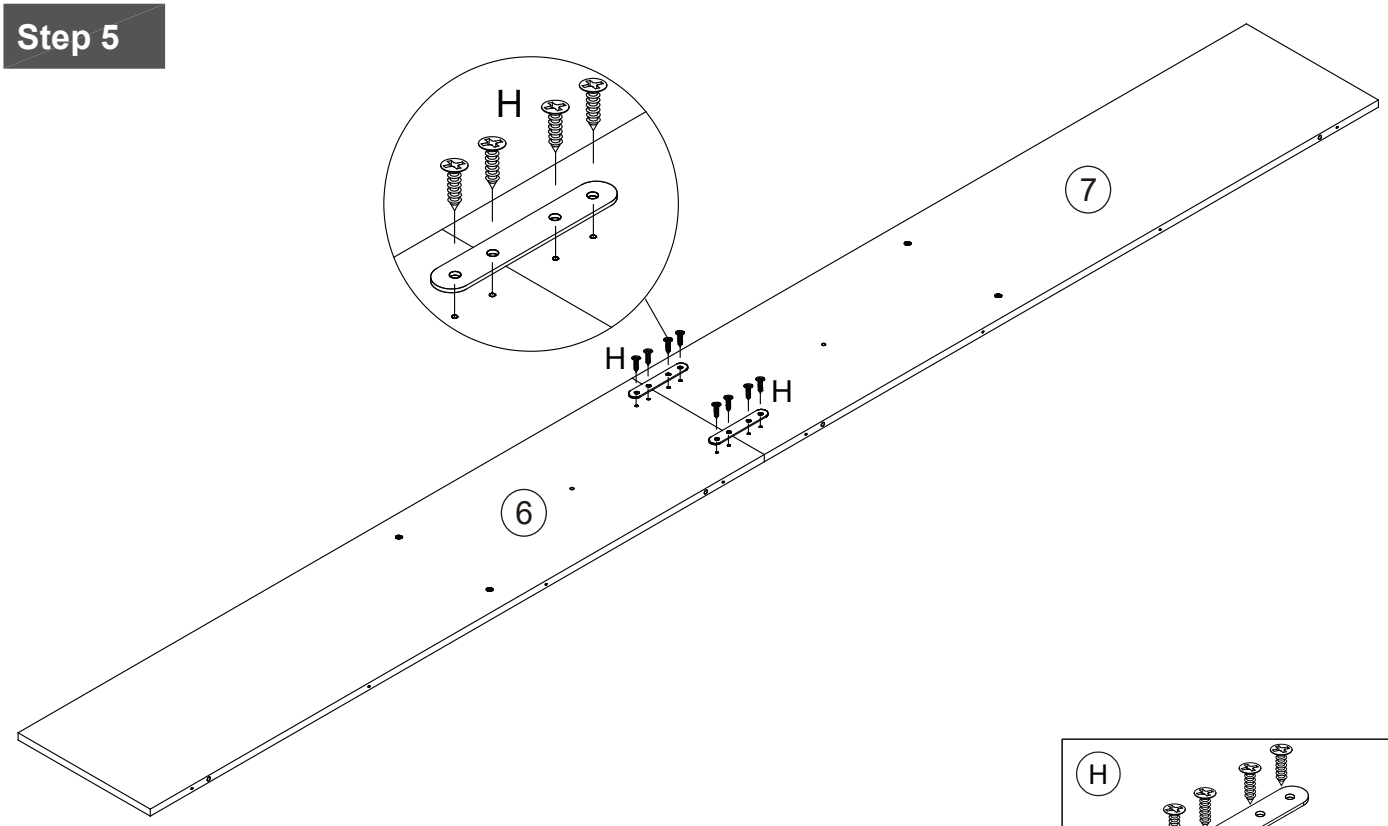

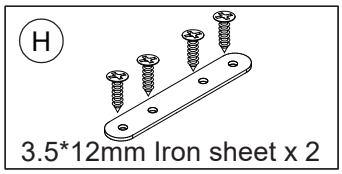


Step 6

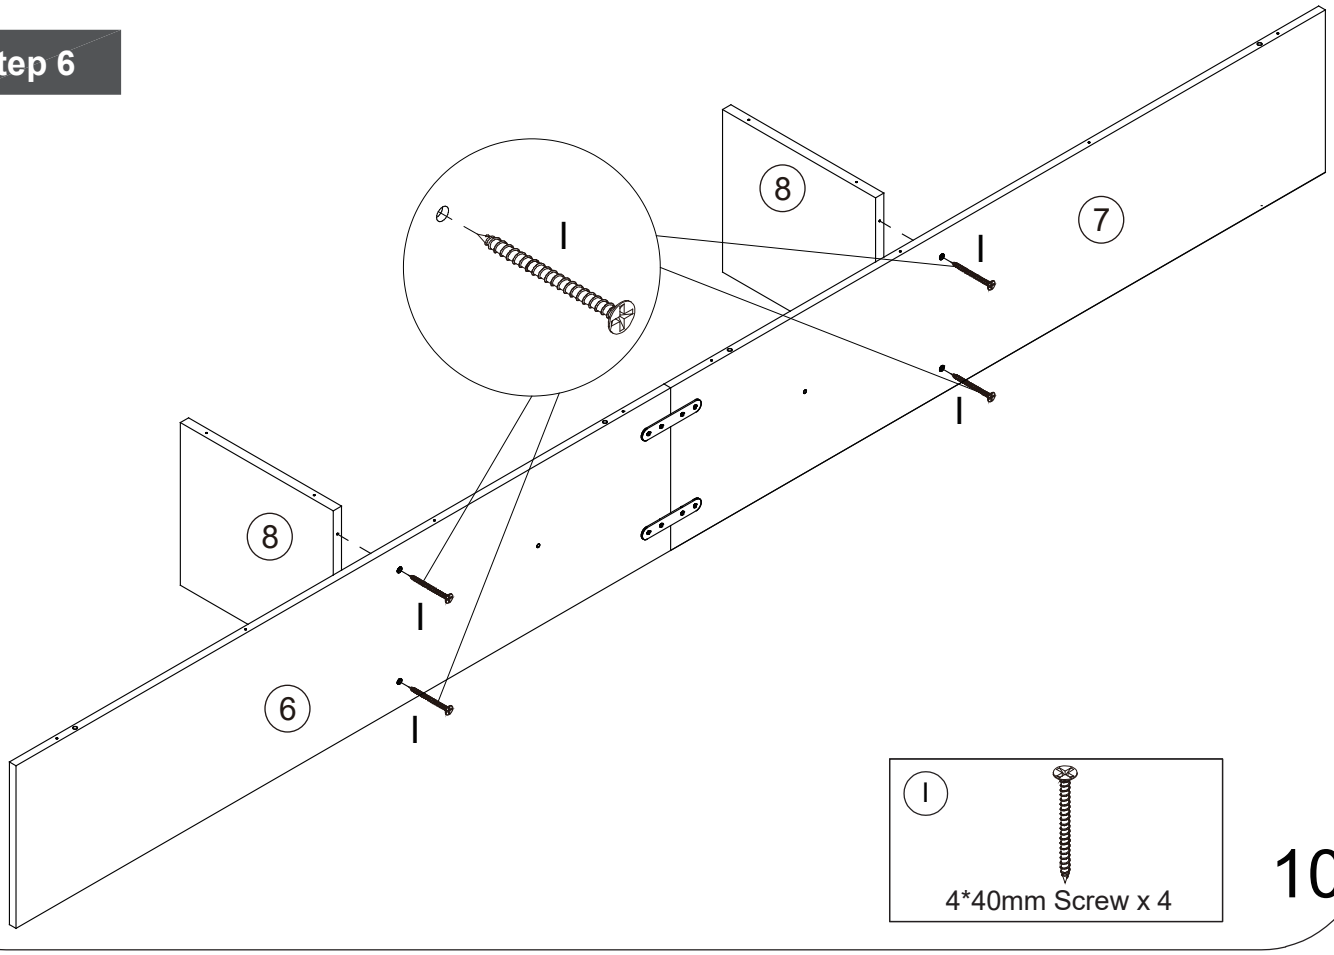


Assembly Instructions

Step 7

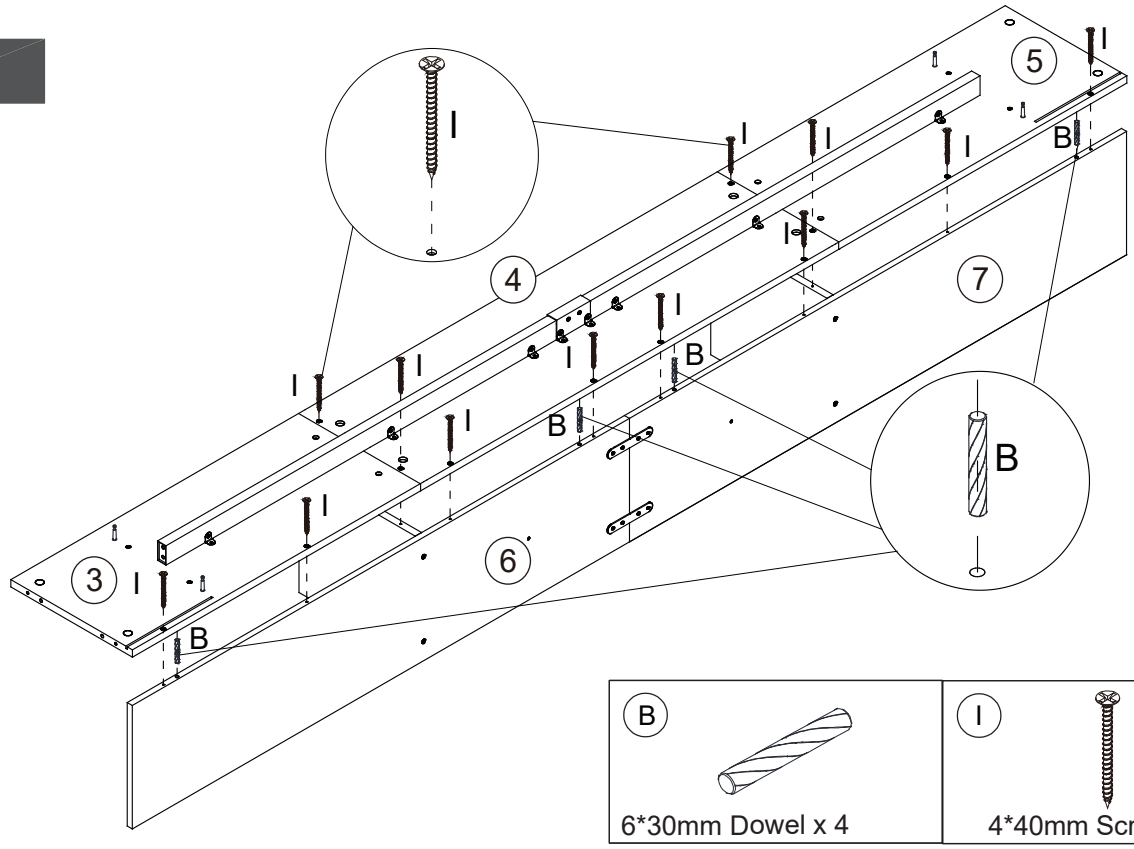

B	I
6*30mm Dowel x 4	4*40mm Screw x 12


Step 8

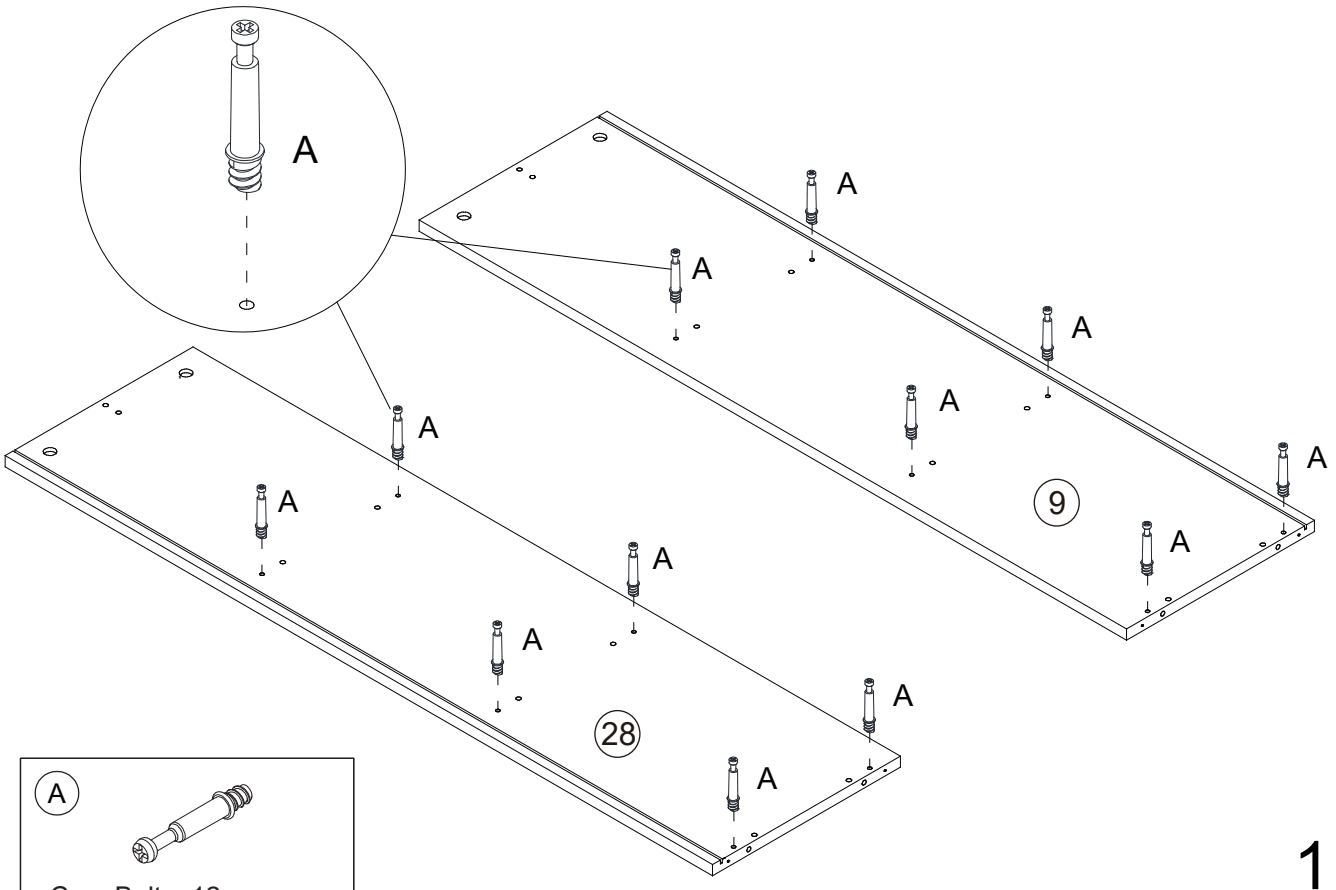

A
Cam Bolt x 12


Assembly Instructions

Step 9

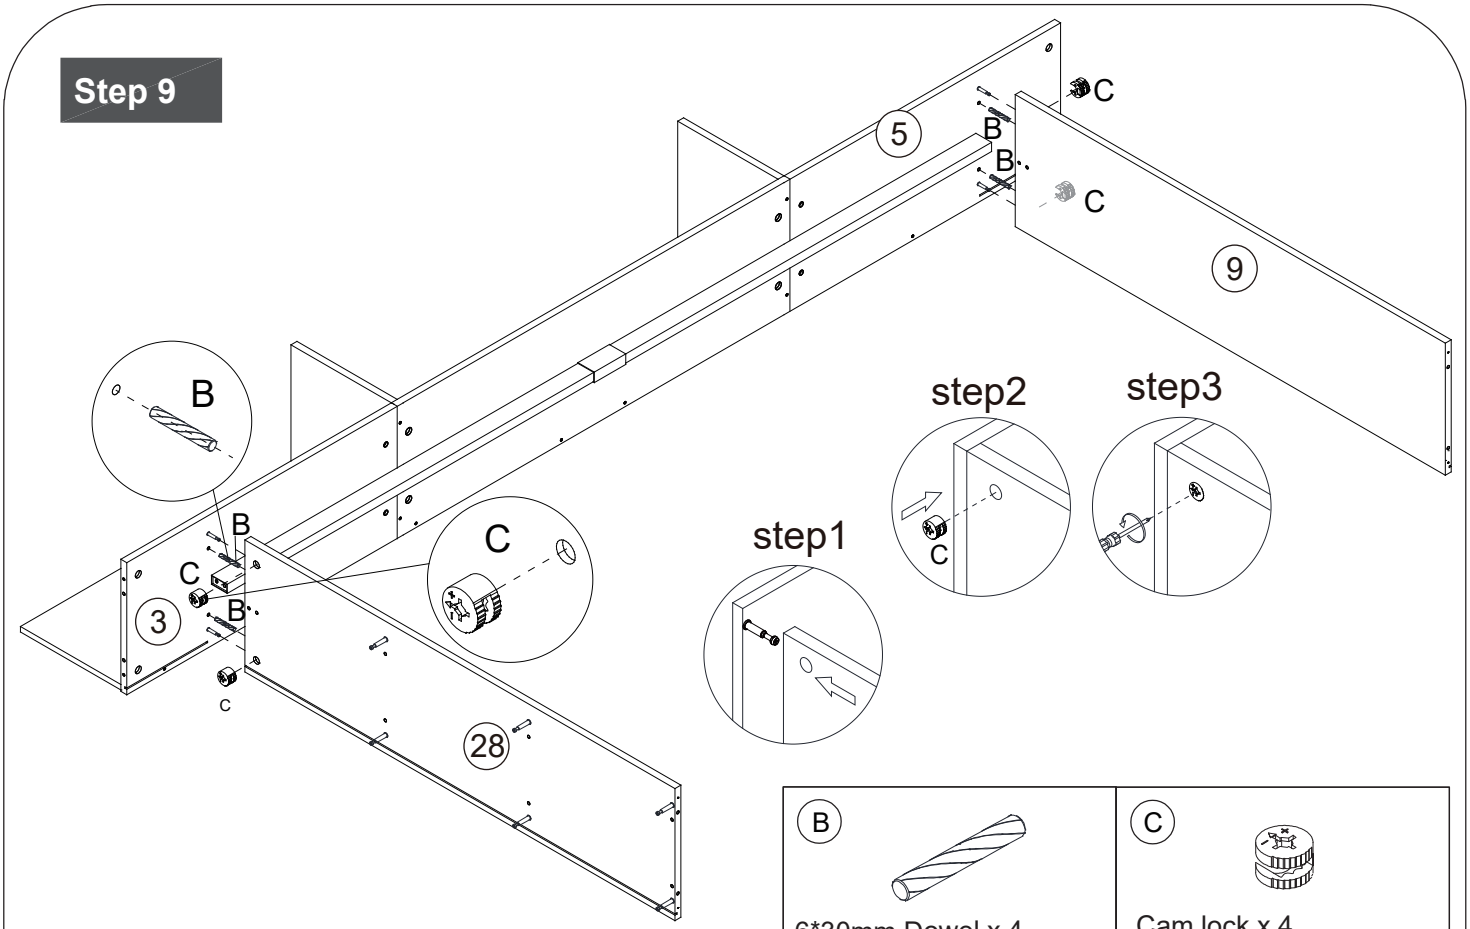

B	C
6*30mm Dowel x 4	Cam lock x 4


Step 10

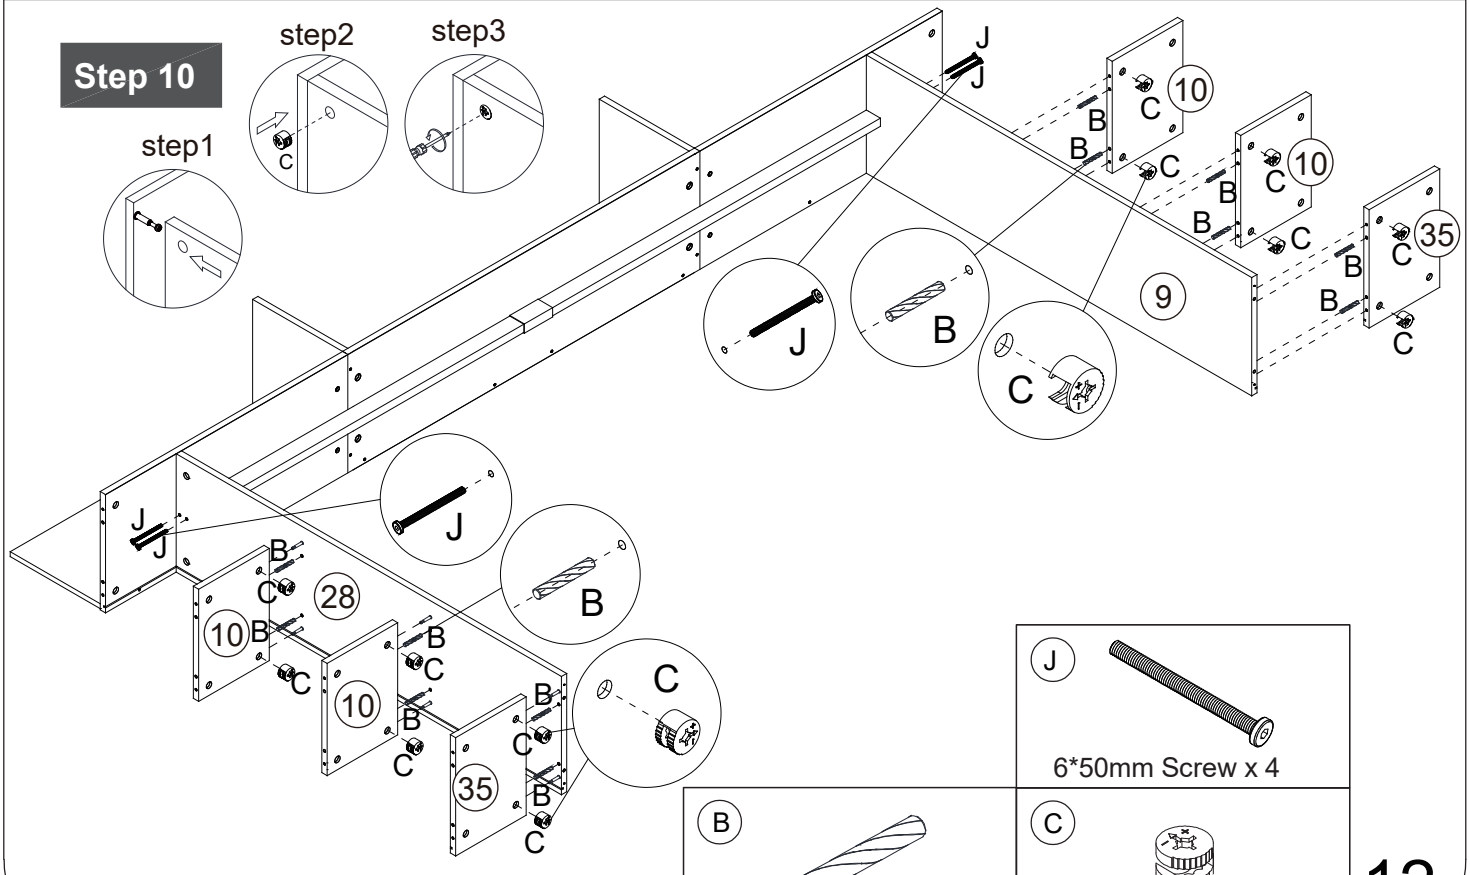


J	B	C
6*50mm Screw x 4	6*30mm Dowel x 12	Cam lock x 12

Assembly Instructions

Step 11

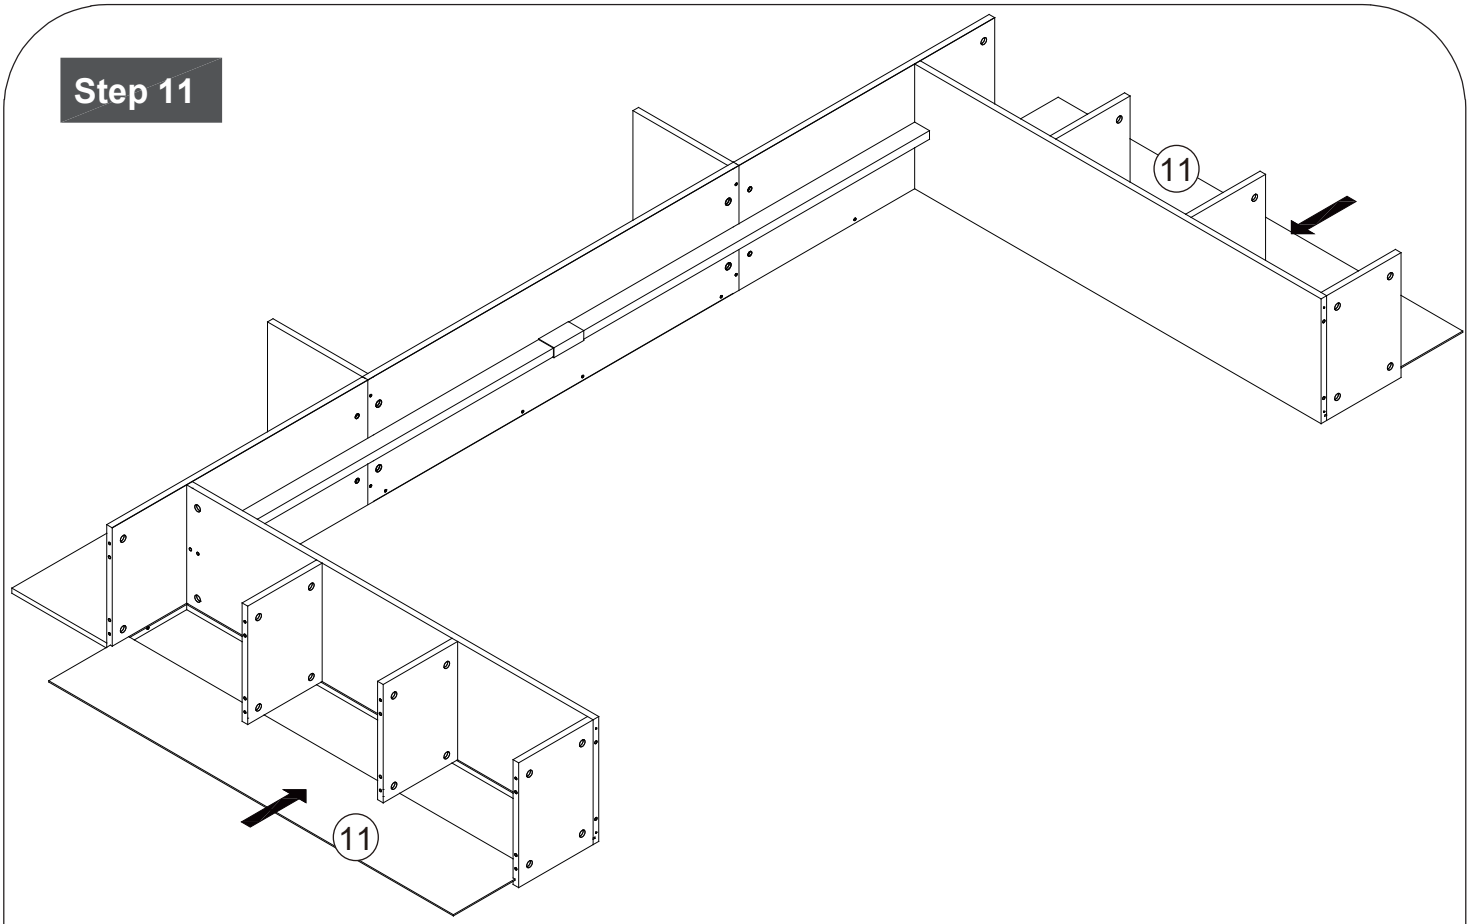

Step 12

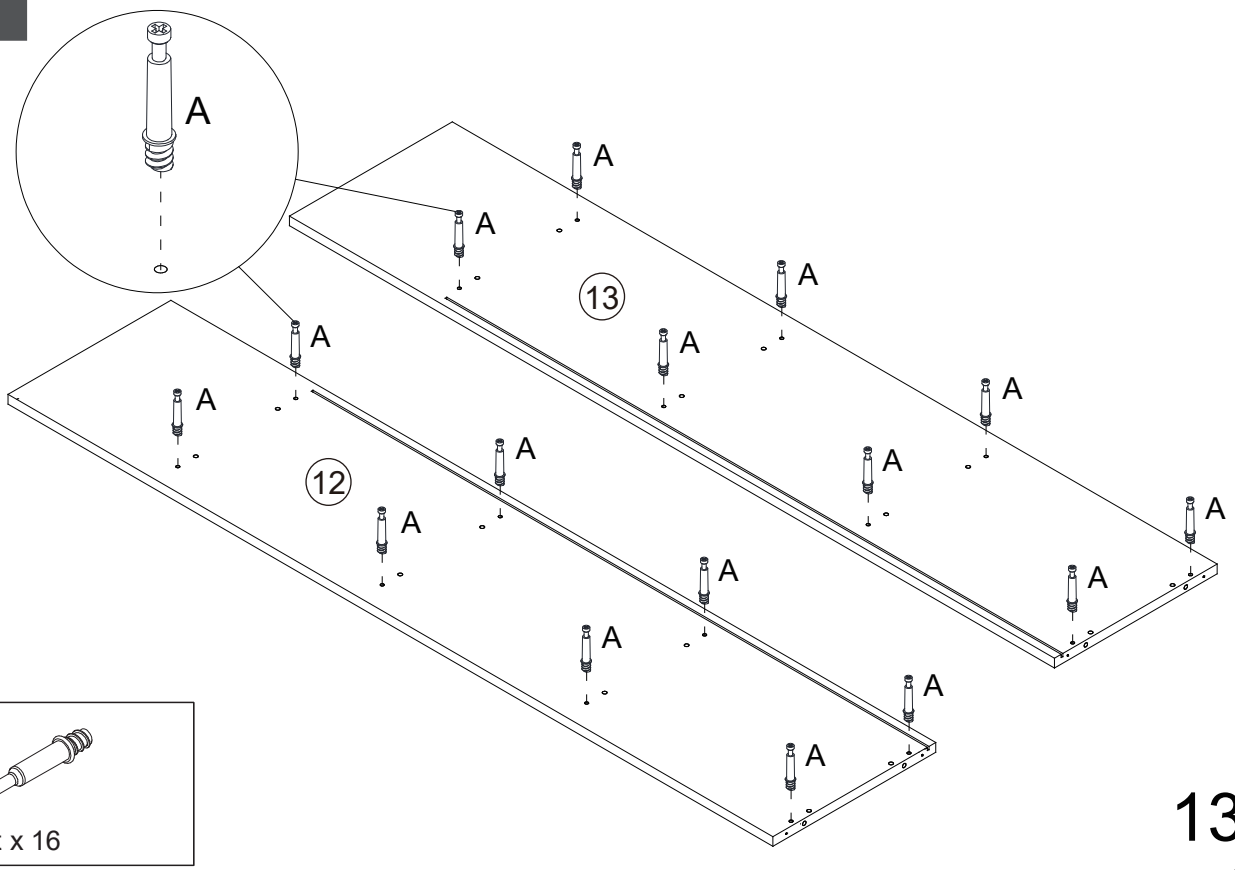


A

Cam Bolt x 16


Assembly Instructions


Step 13

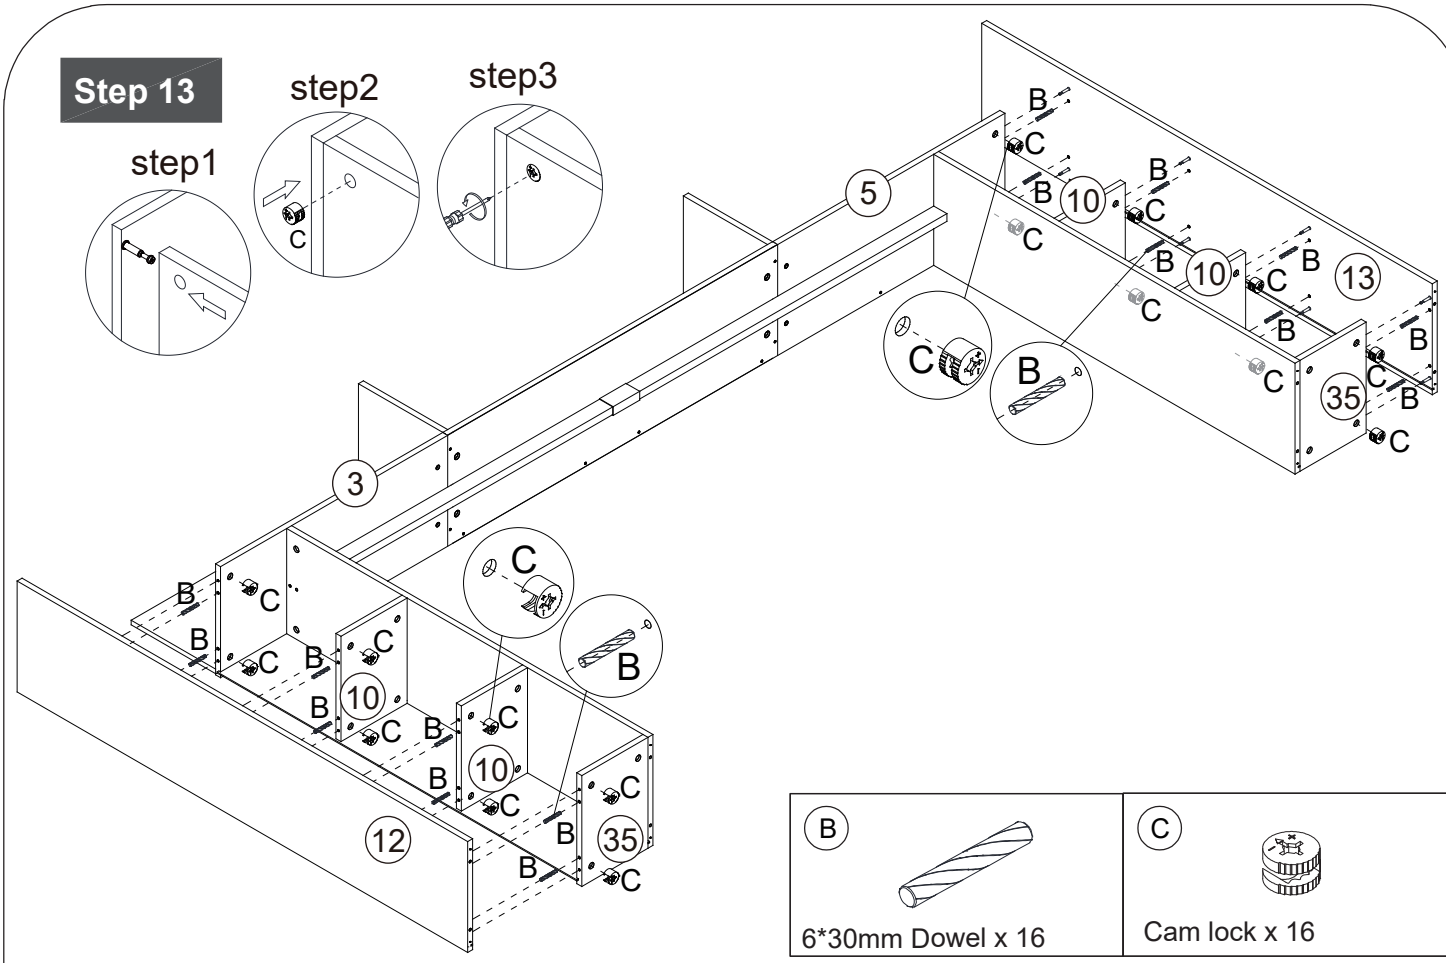

B	C
6*30mm Dowel x 16	Cam lock x 16


Step 14

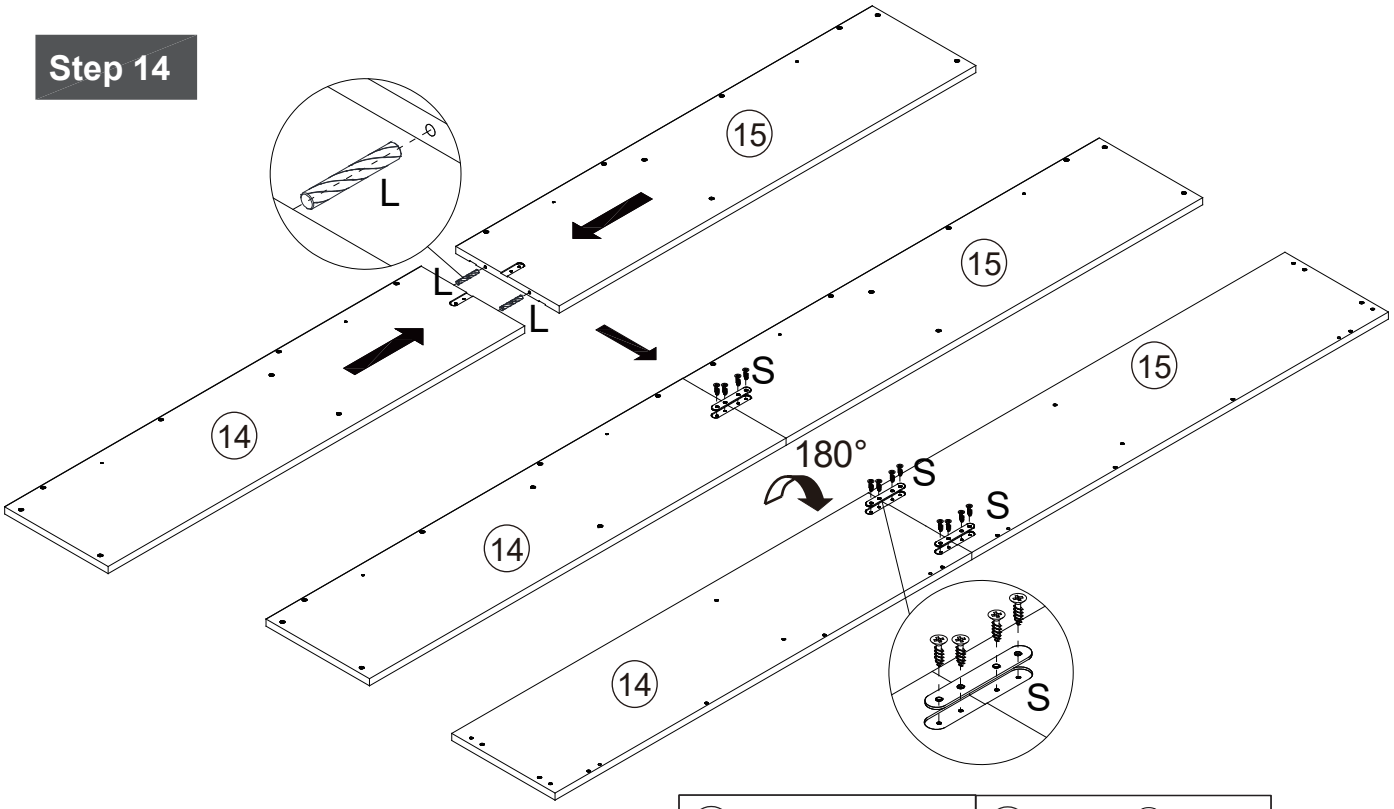

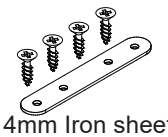L	S
	
6*40mm Dowel x 2	3.5*14mm Iron sheet x 3

Assembly Instructions

Step 15

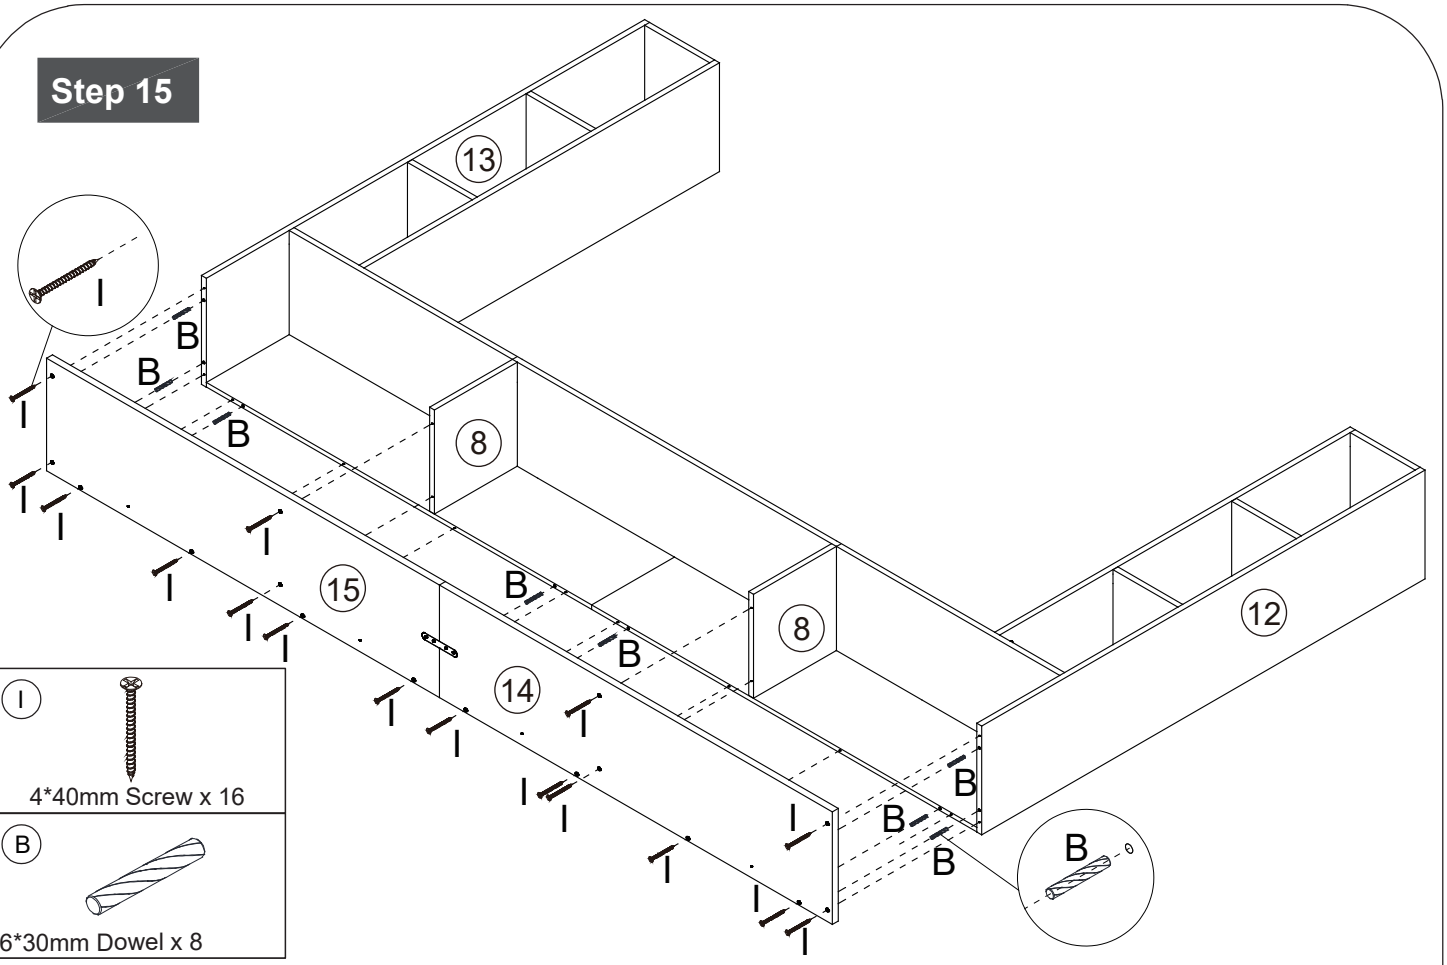

I
4*40mm Screw x 16


B
6*30mm Dowel x 8

Step 16

K
x 2set


W
x 2set

C
Cam lock x 2

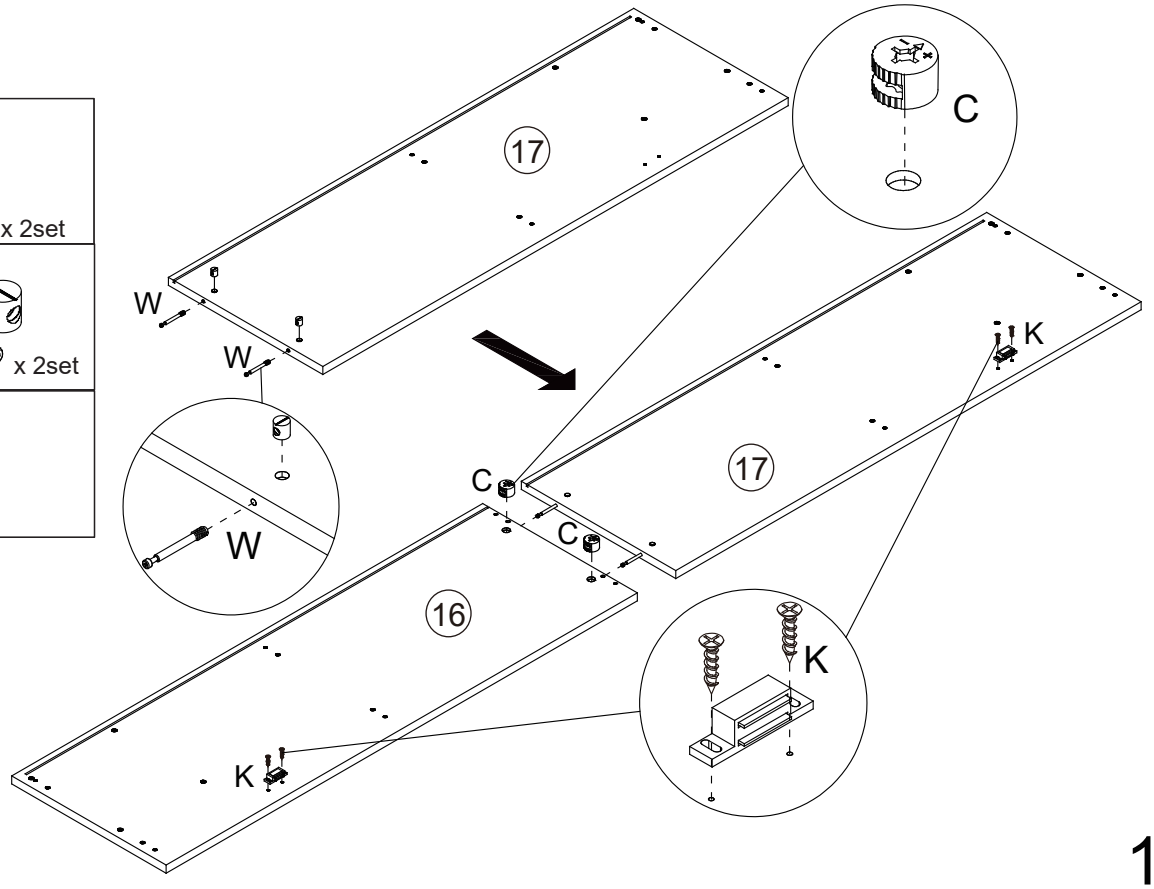



Assembly Instructions

Step 17

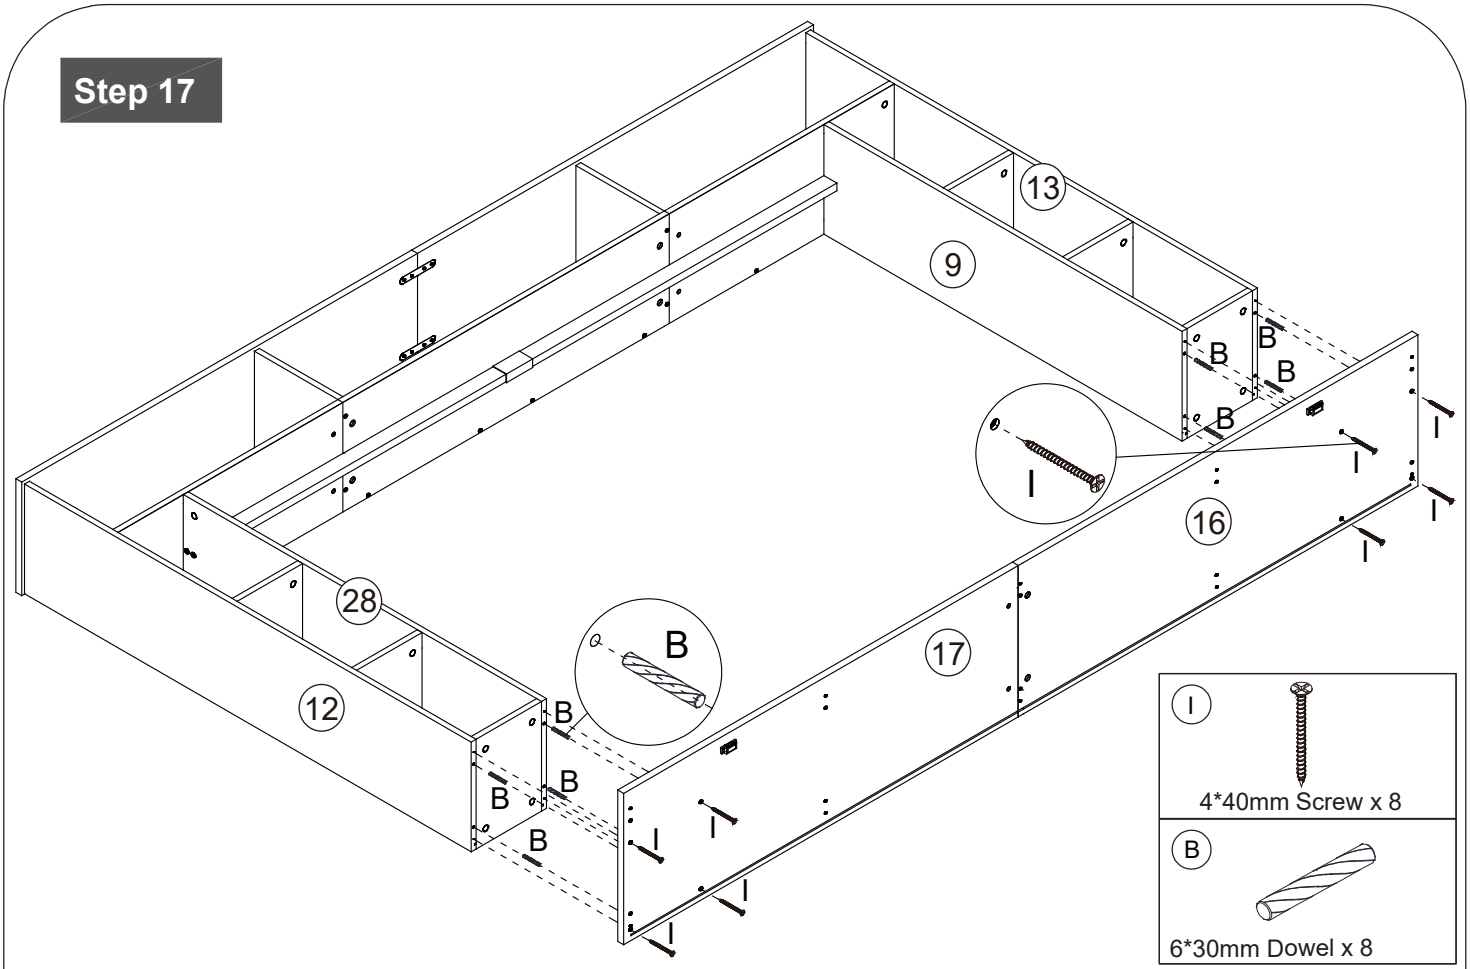


Step 18

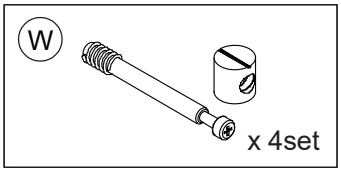

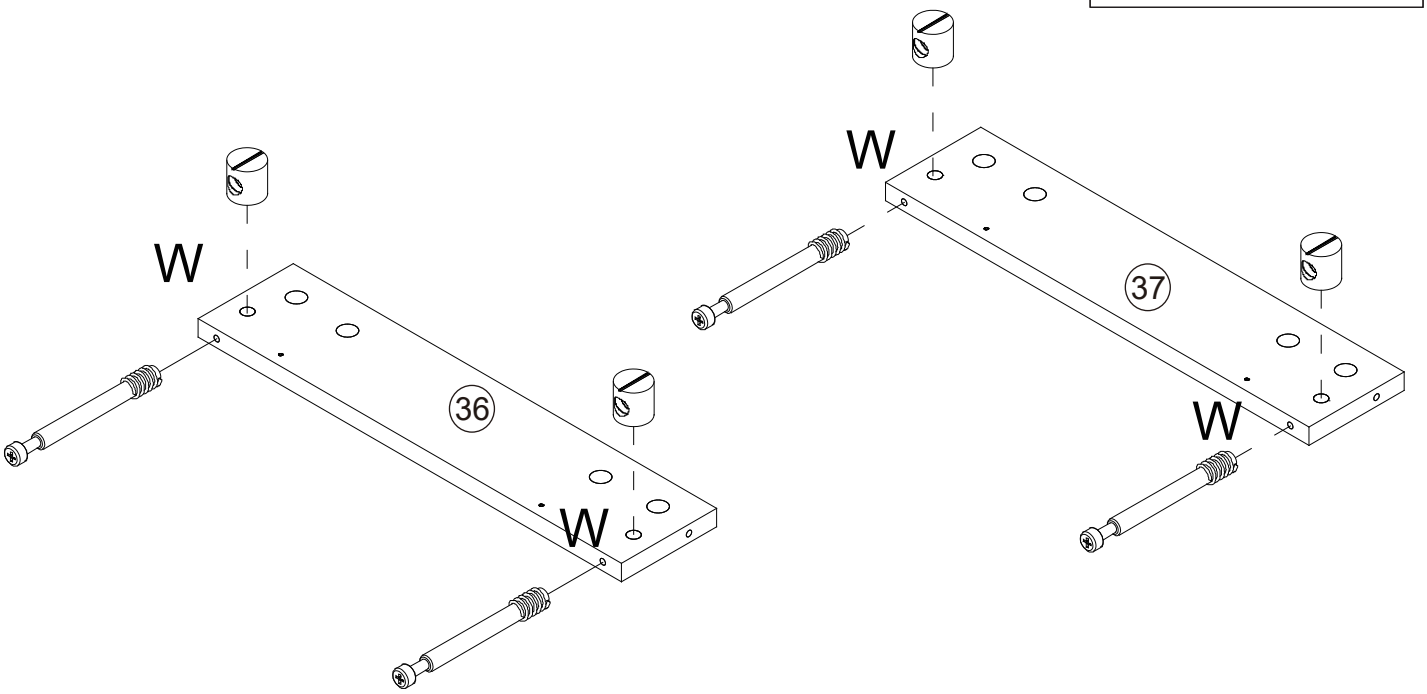

Assembly Instructions


Step 19

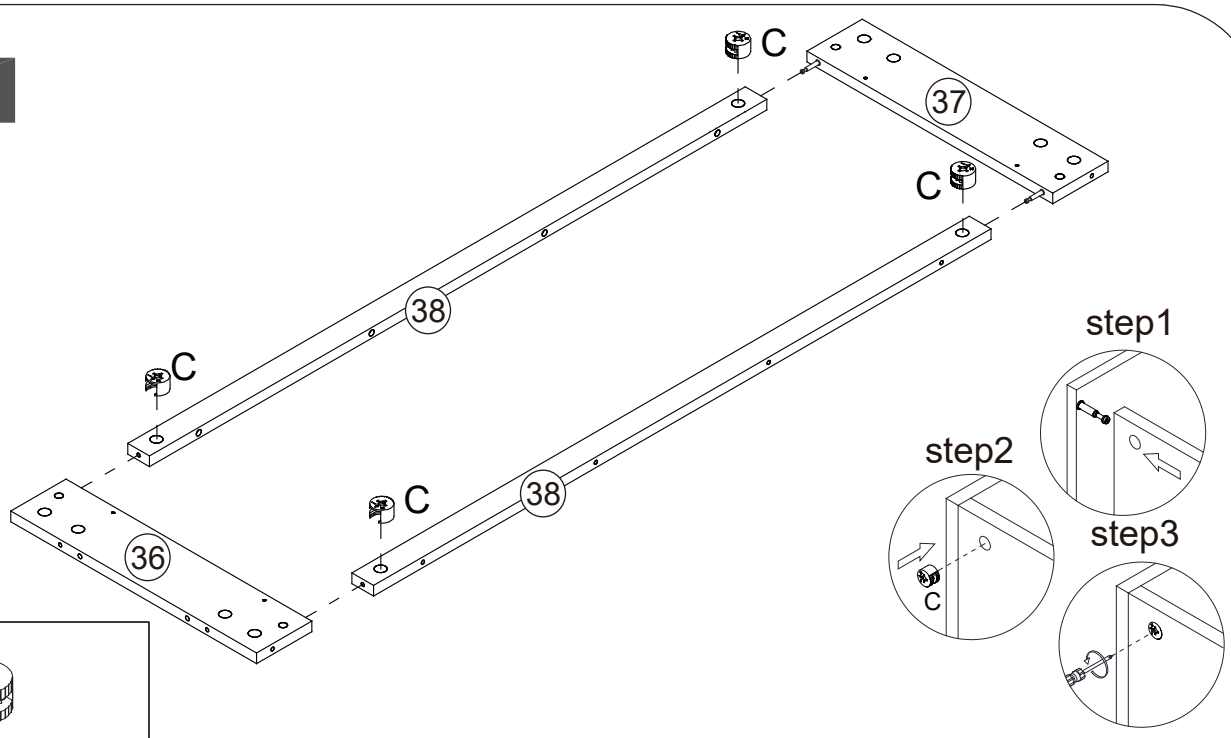

C

Cam lock x 4

Step 20

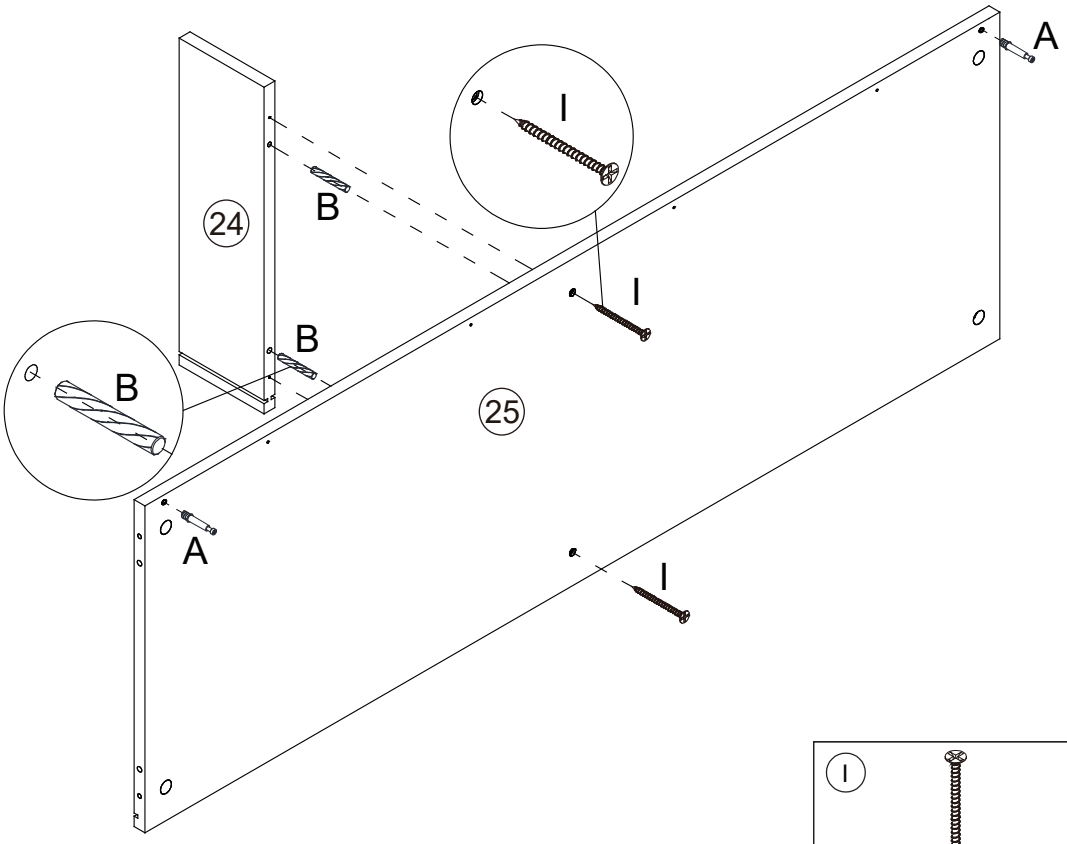

I

4*40mm Screw x 2

A


Cam Bolt x 2

B


6*30mm Dowel x 2

Assembly Instructions

Step 21

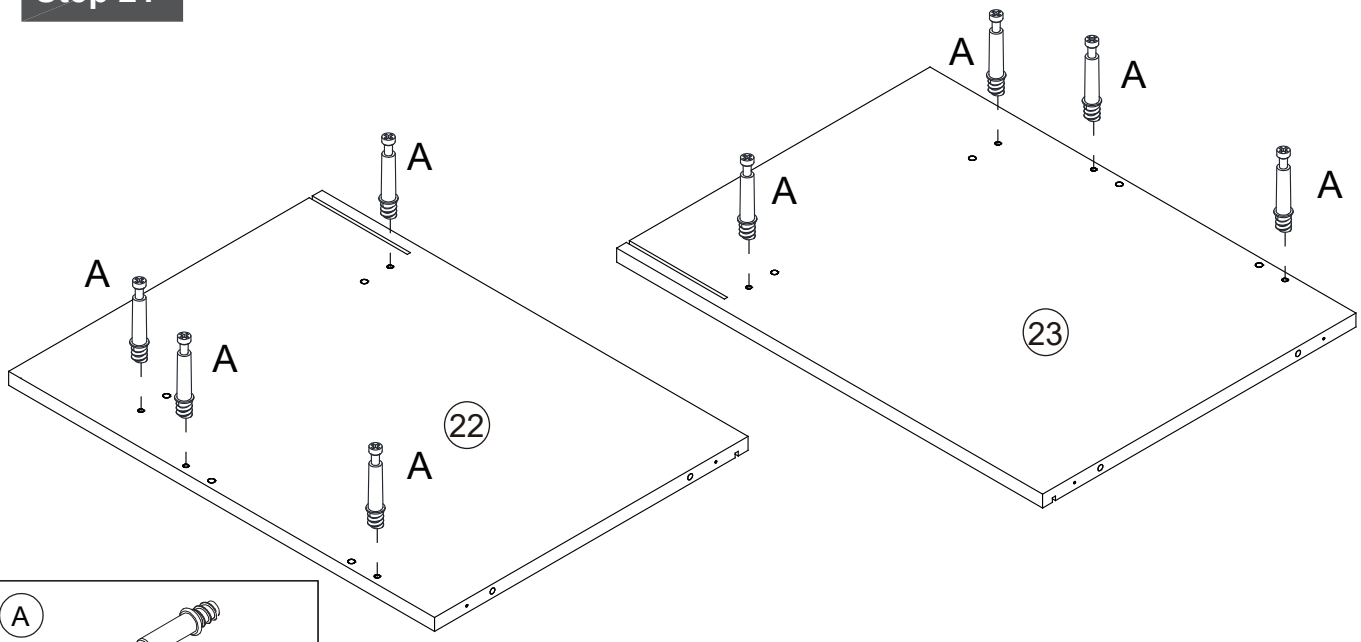

A



Cam Bolt x 8

Step 22


C



Cam lock x 2


Assembly Instructions

Step 23

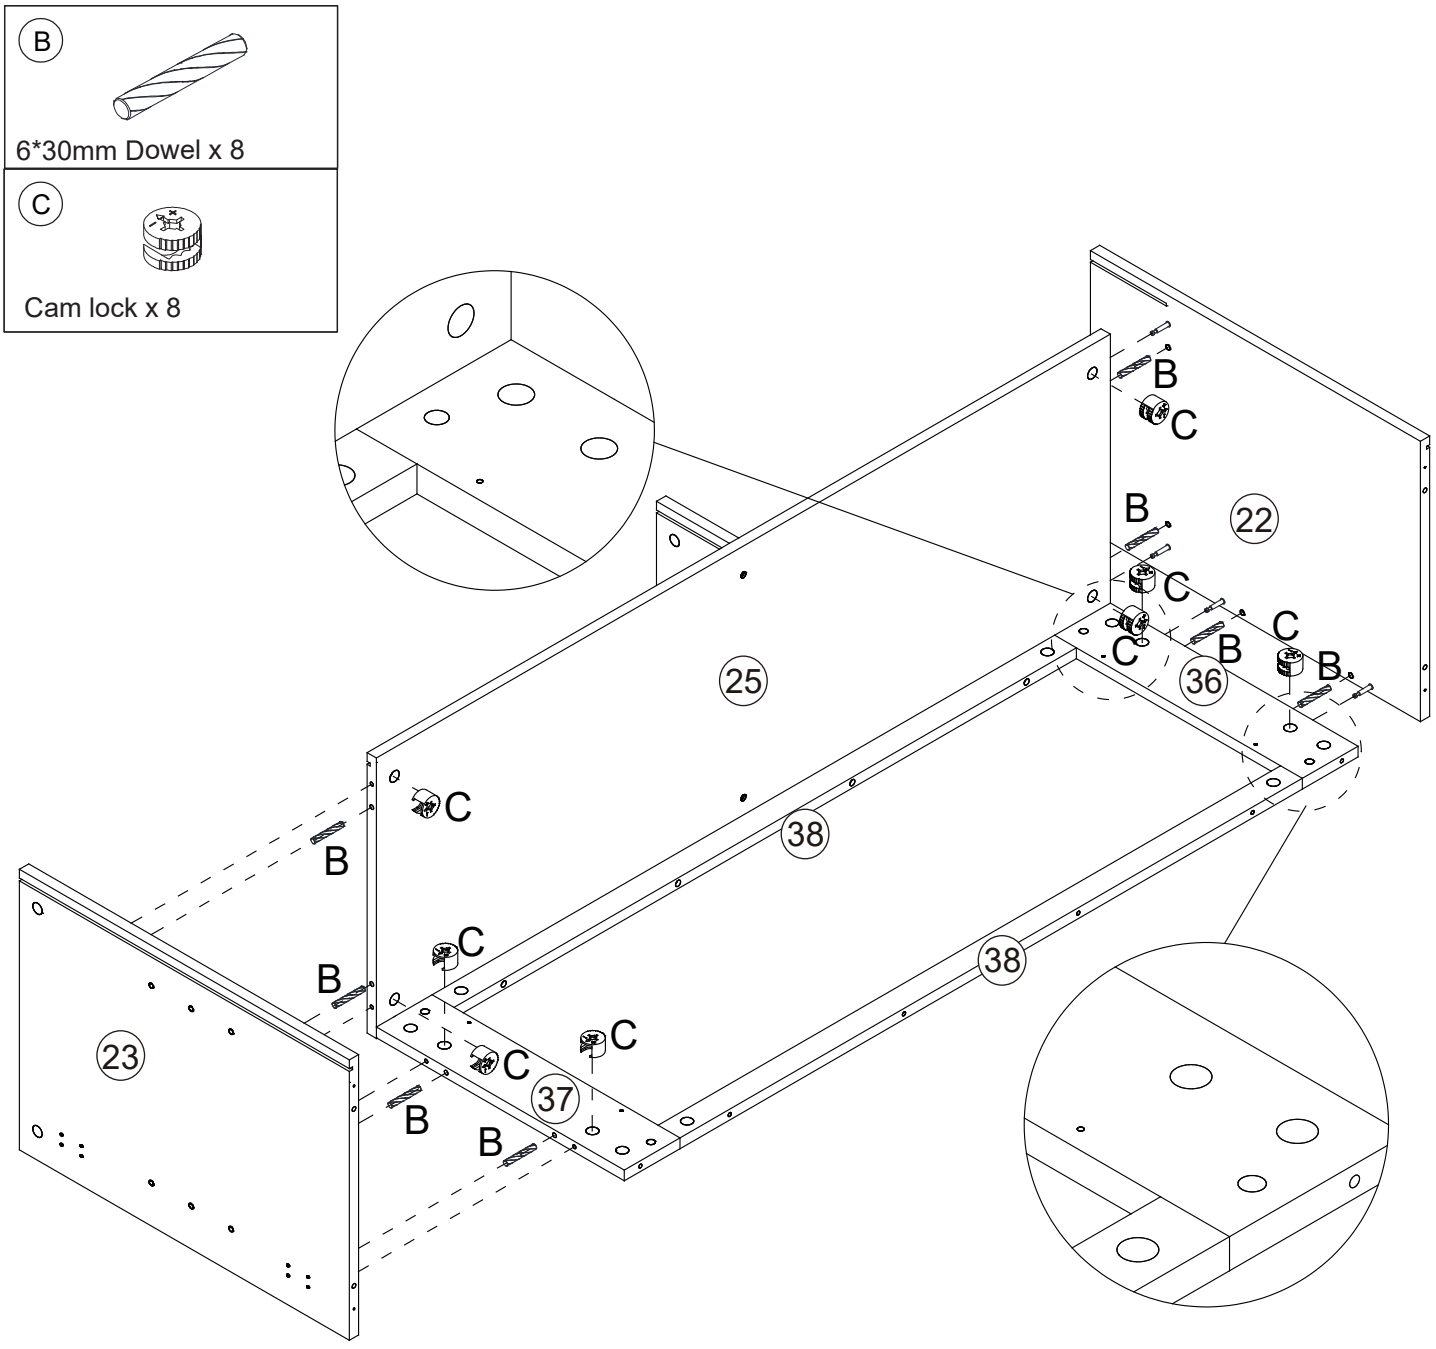



Assembly Instructions

Step 24

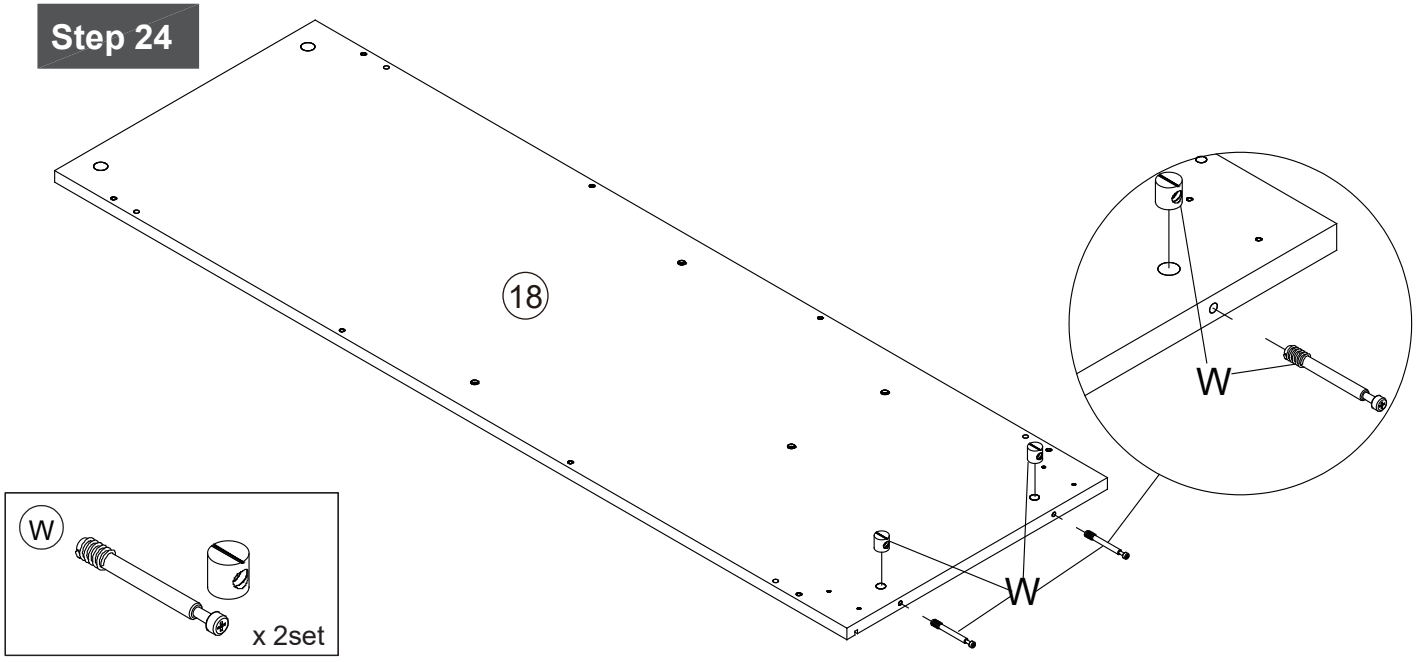


Step 25

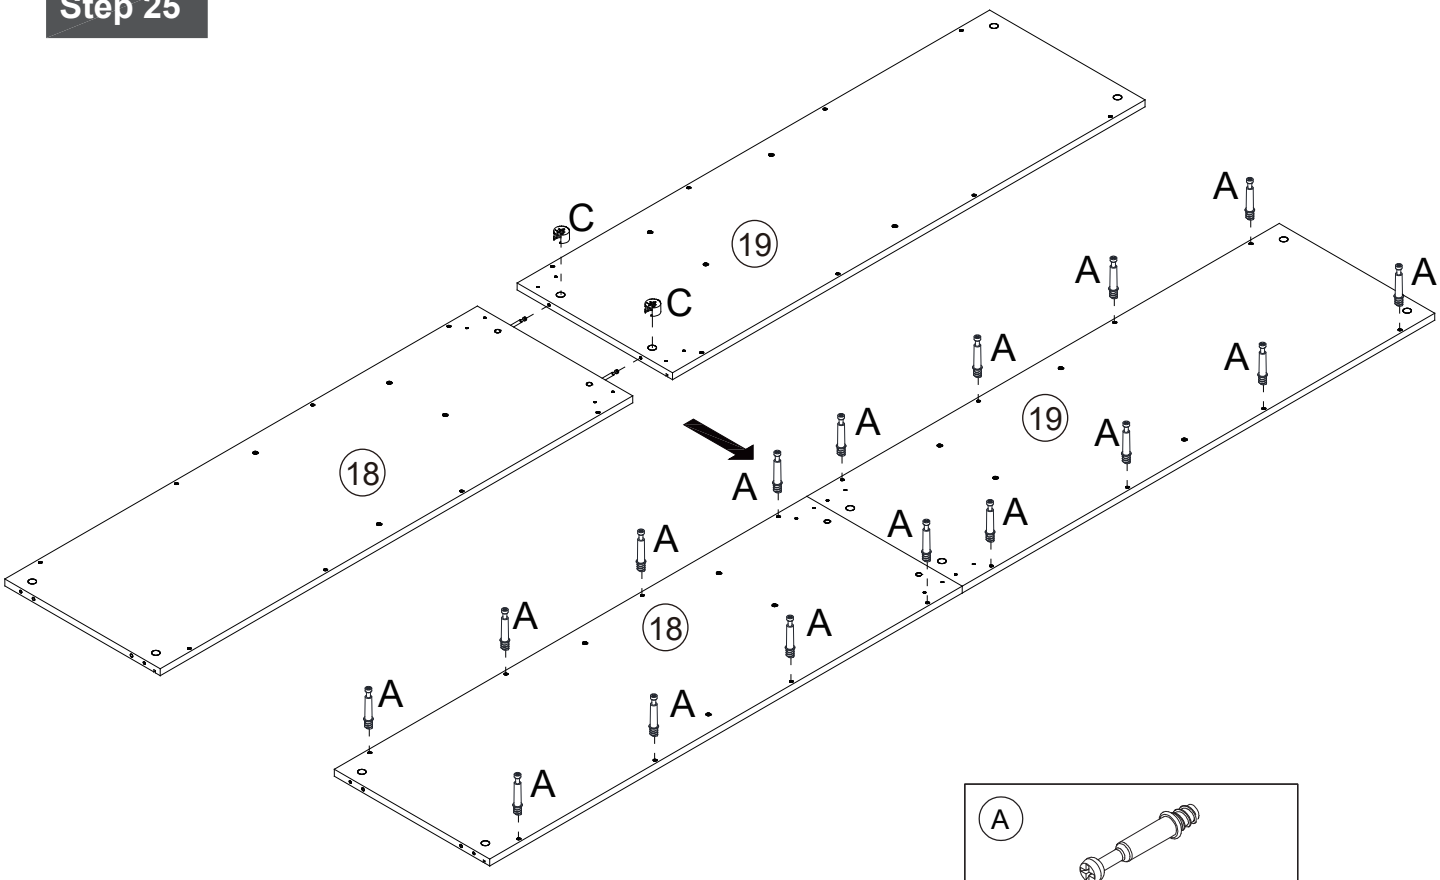

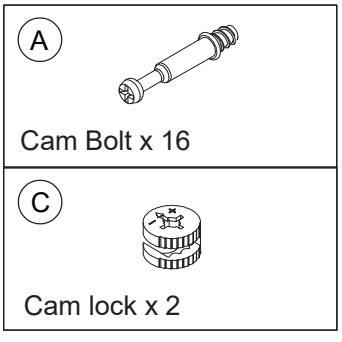


Assembly Instructions

Step 26

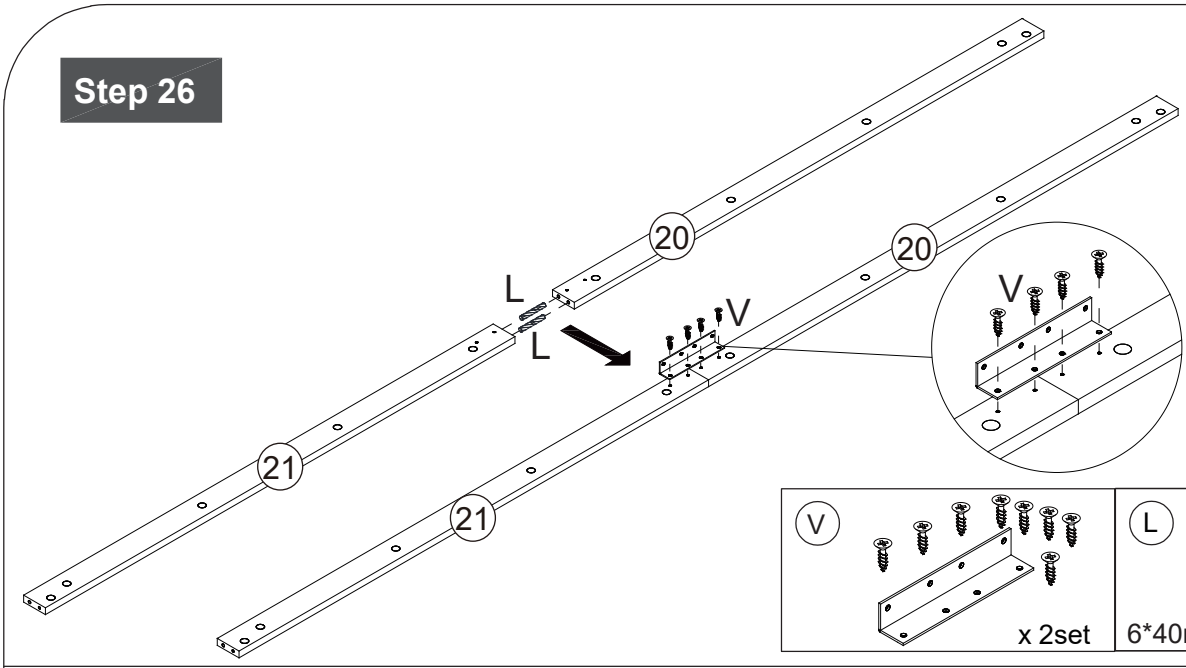


Step 27

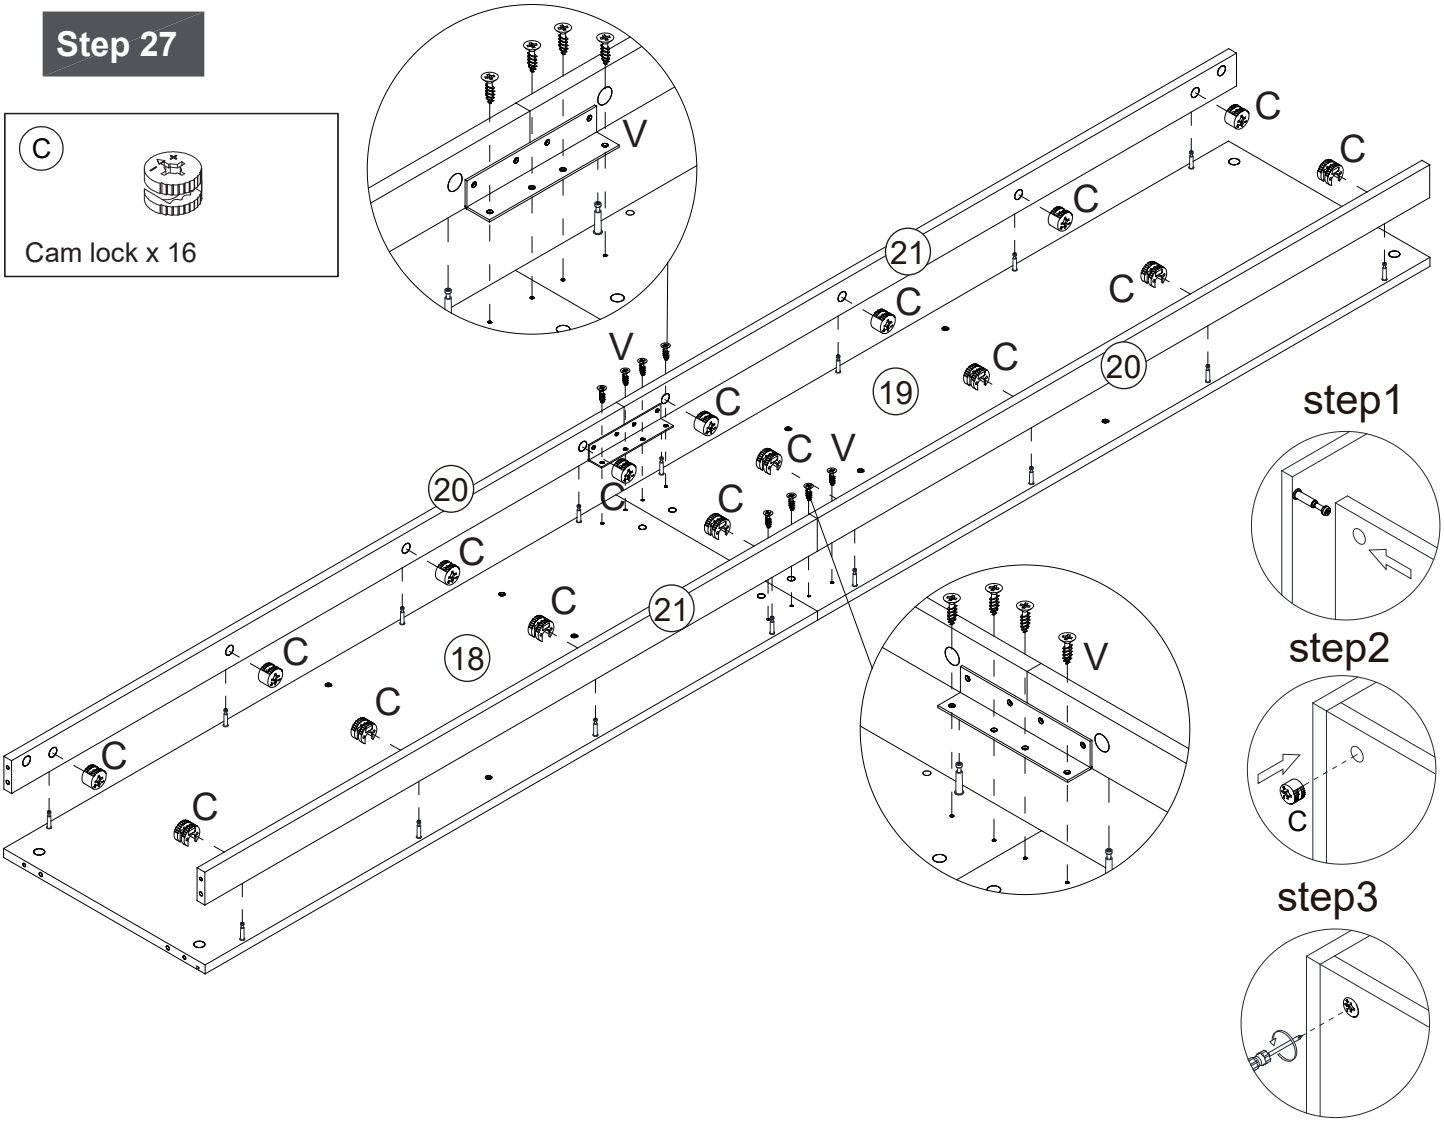


Assembly Instructions

Step 28

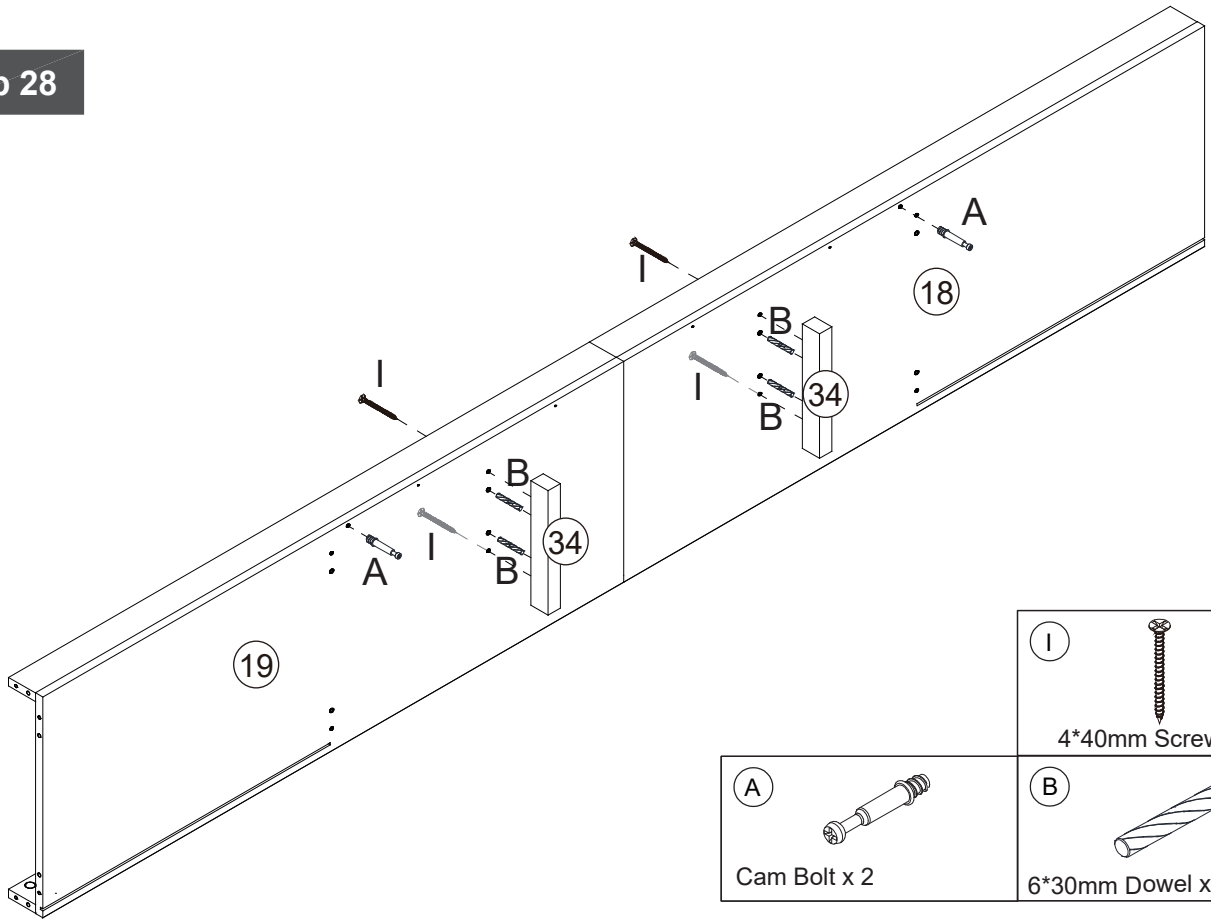

I 4*40mm Screw x 4	
A Cam Bolt x 2	B 6*30mm Dowel x 4


Step 29

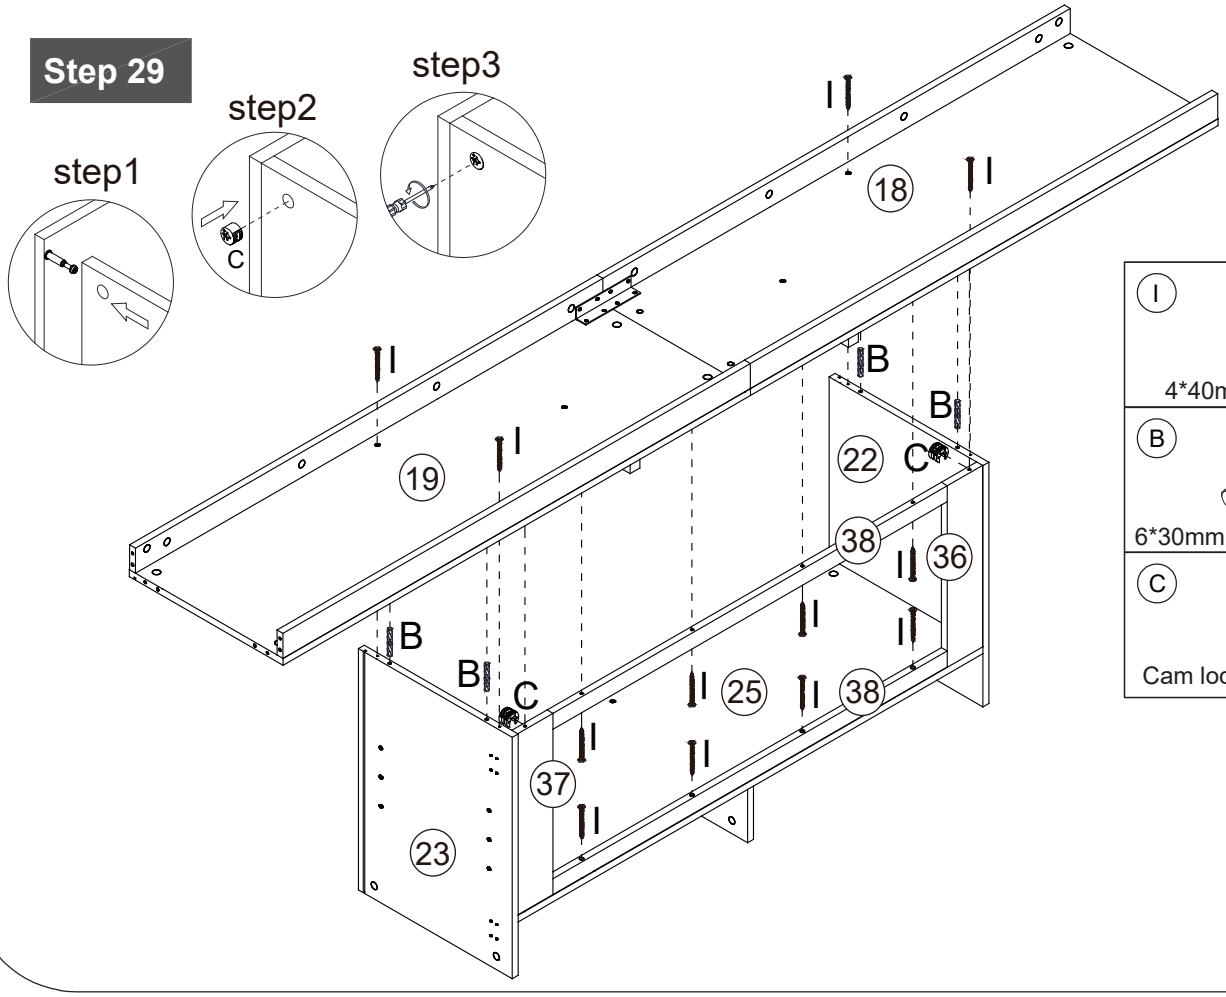


I  4*40mm Screw x 12
B  6*30mm Dowel x 4
C  Cam lock x 2


Assembly Instructions

Step 30

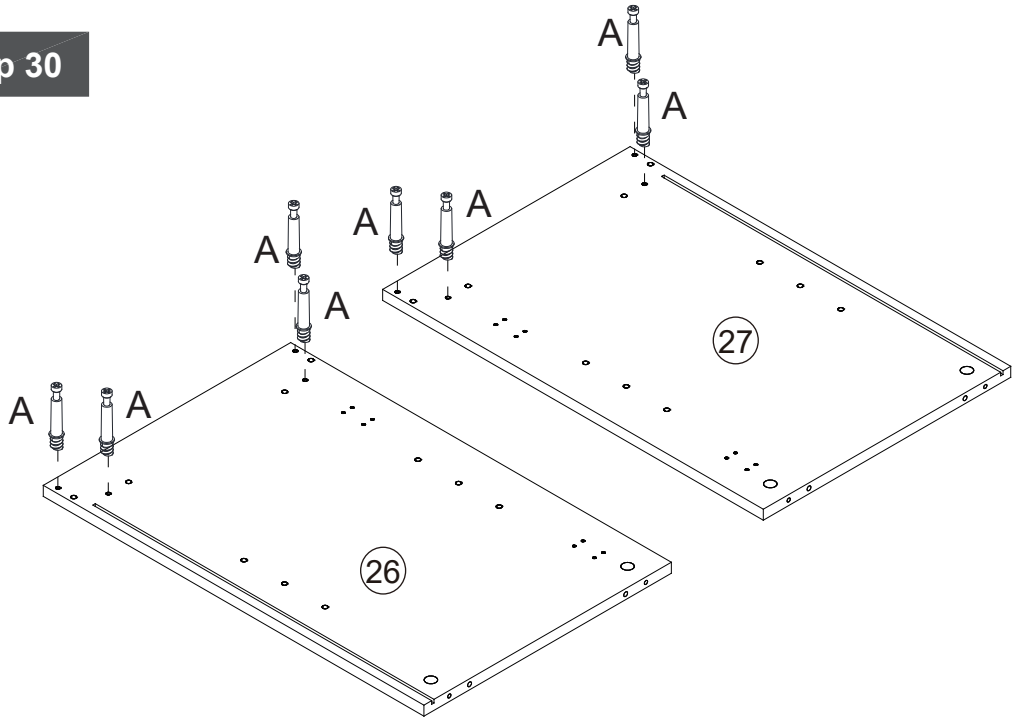

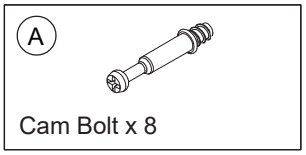


Step 31

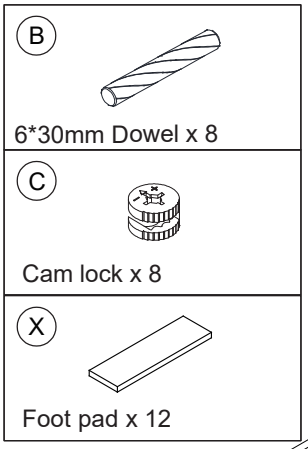


Assembly Instructions


Step 32

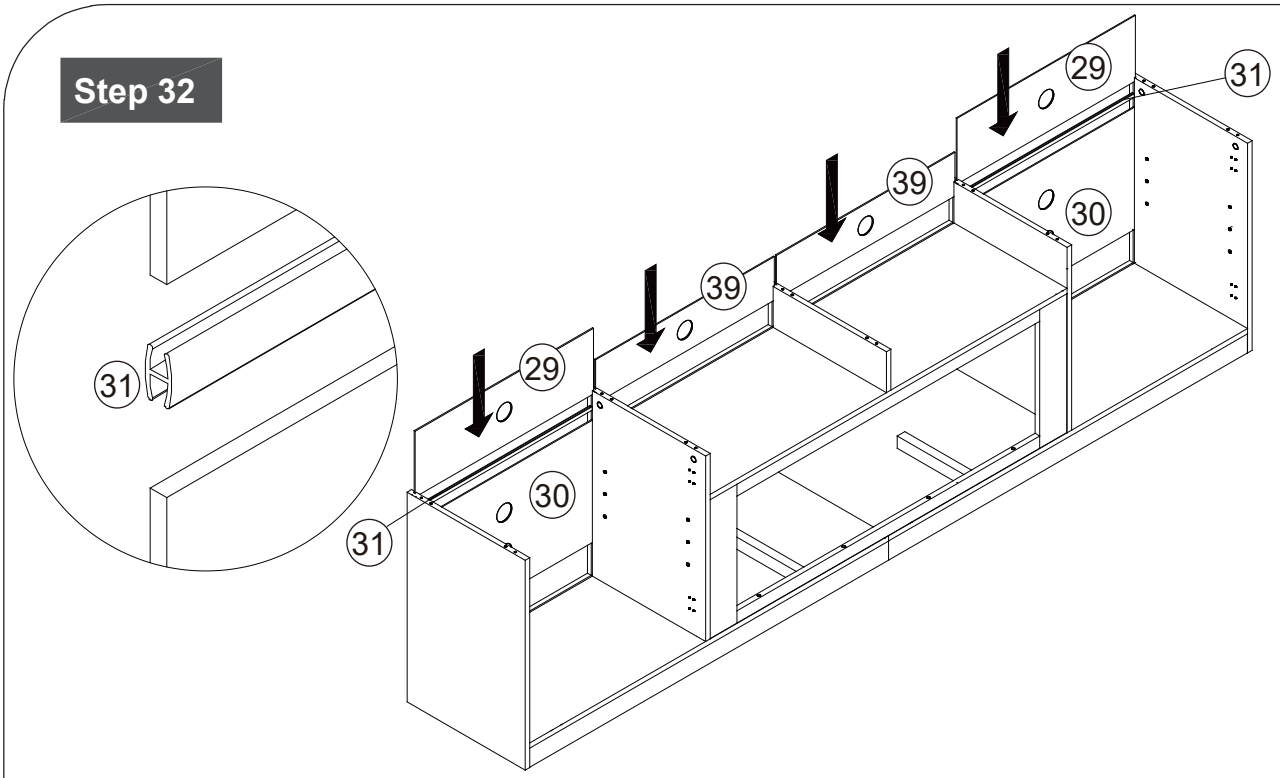

Step 33

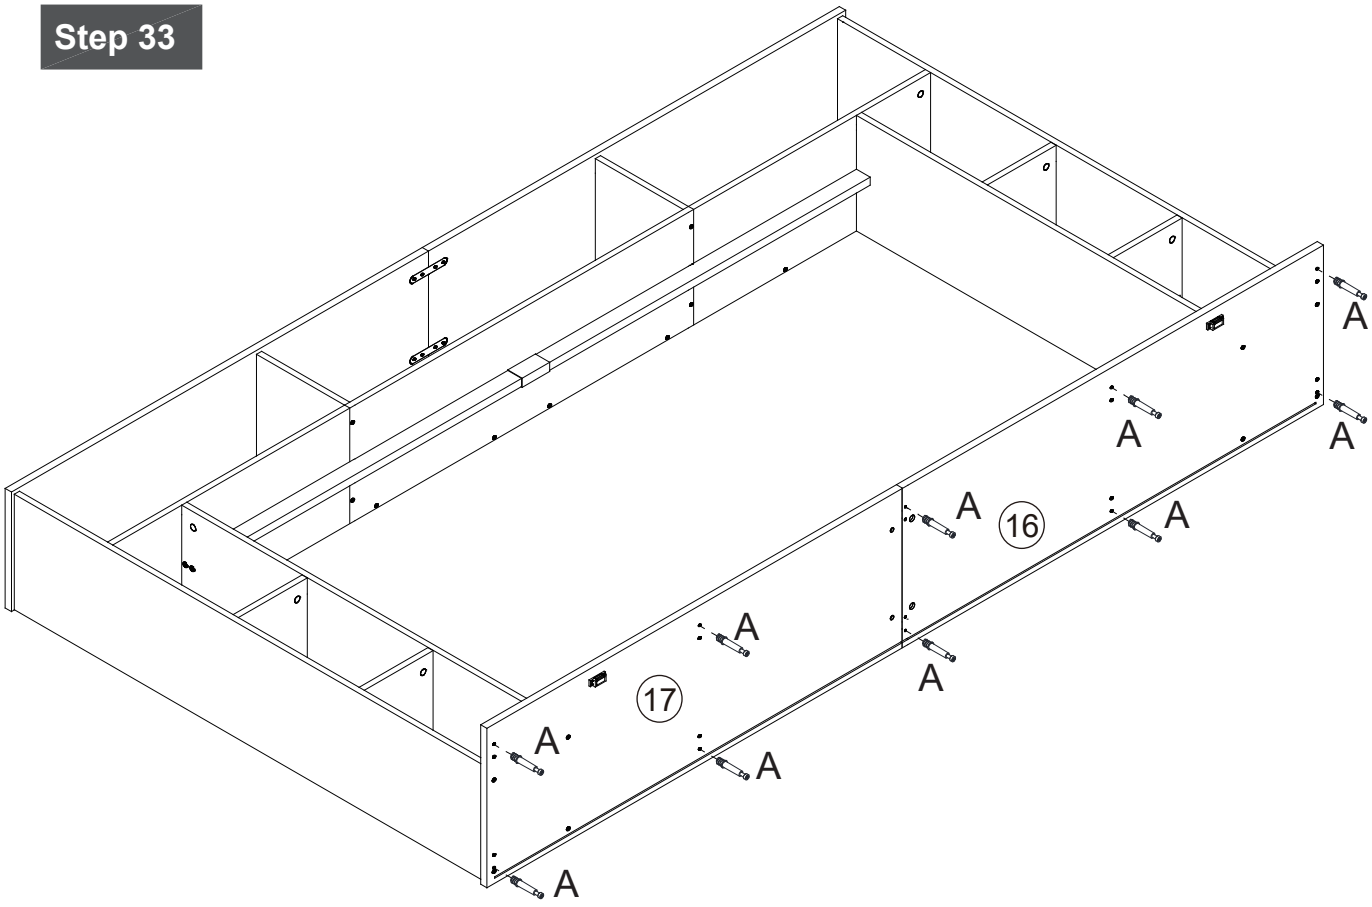


(A)




Cam Bolt x 10

Assembly Instructions


Step 34

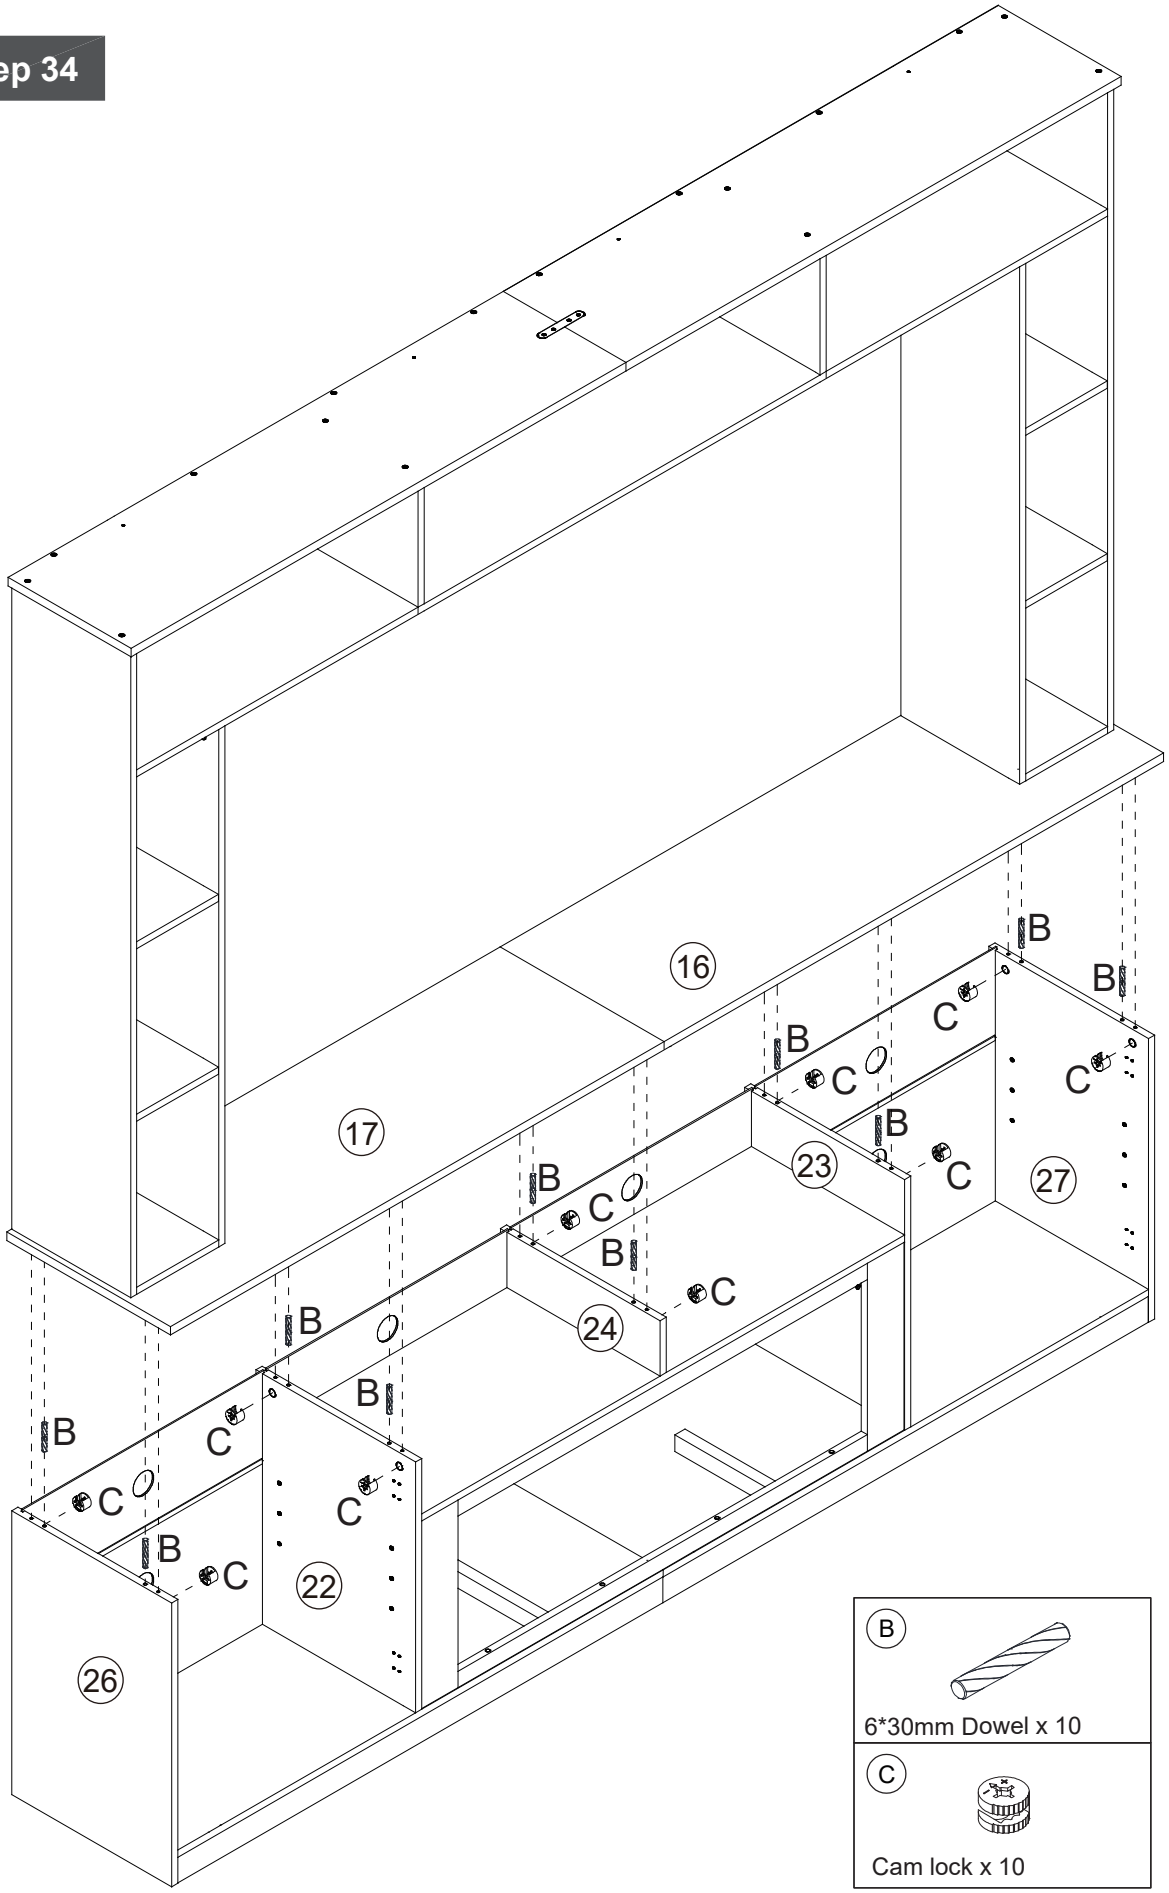


step1

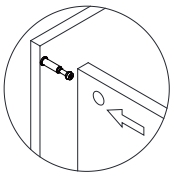

step2

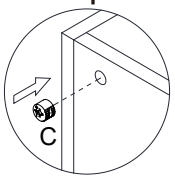


step3

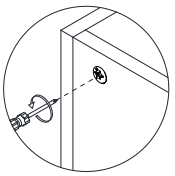


B	6*30mm Dowel x 10
C	Cam lock x 10

Assembly Instructions

Step 35

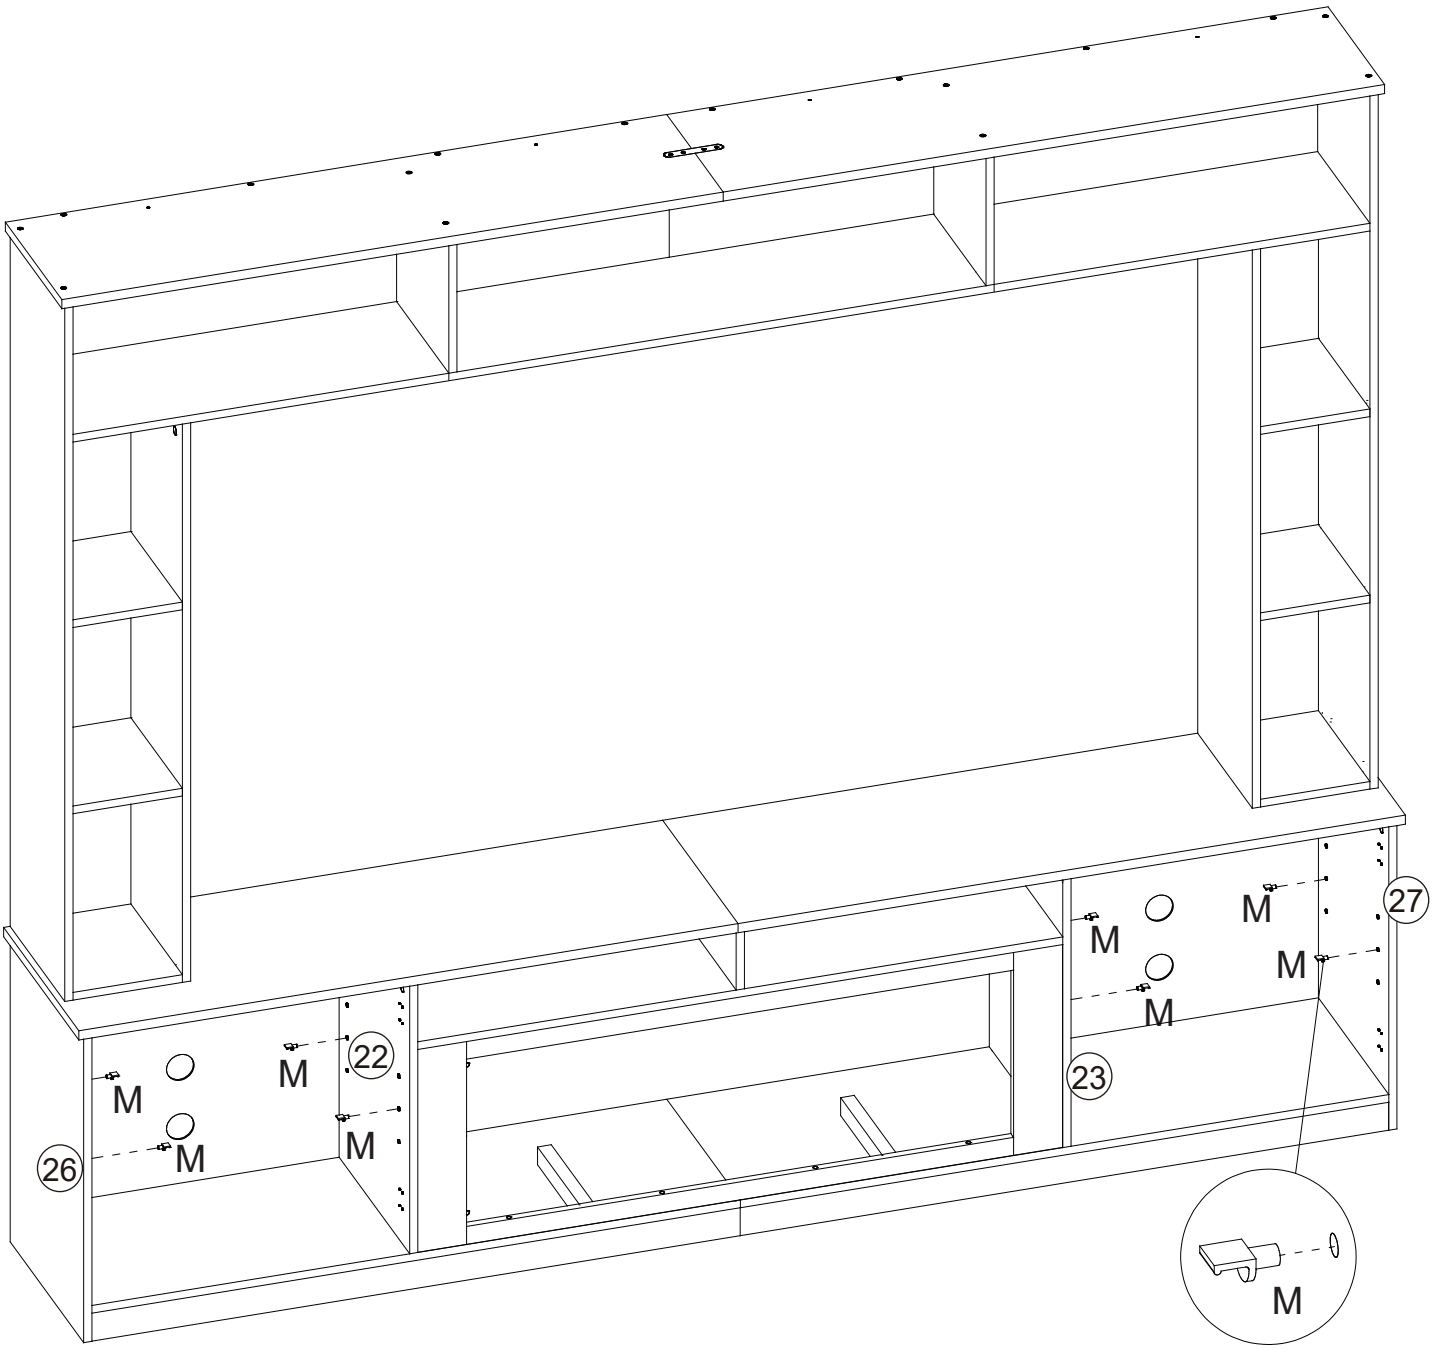


M




Laminate support x 8


Assembly Instructions

Step 36

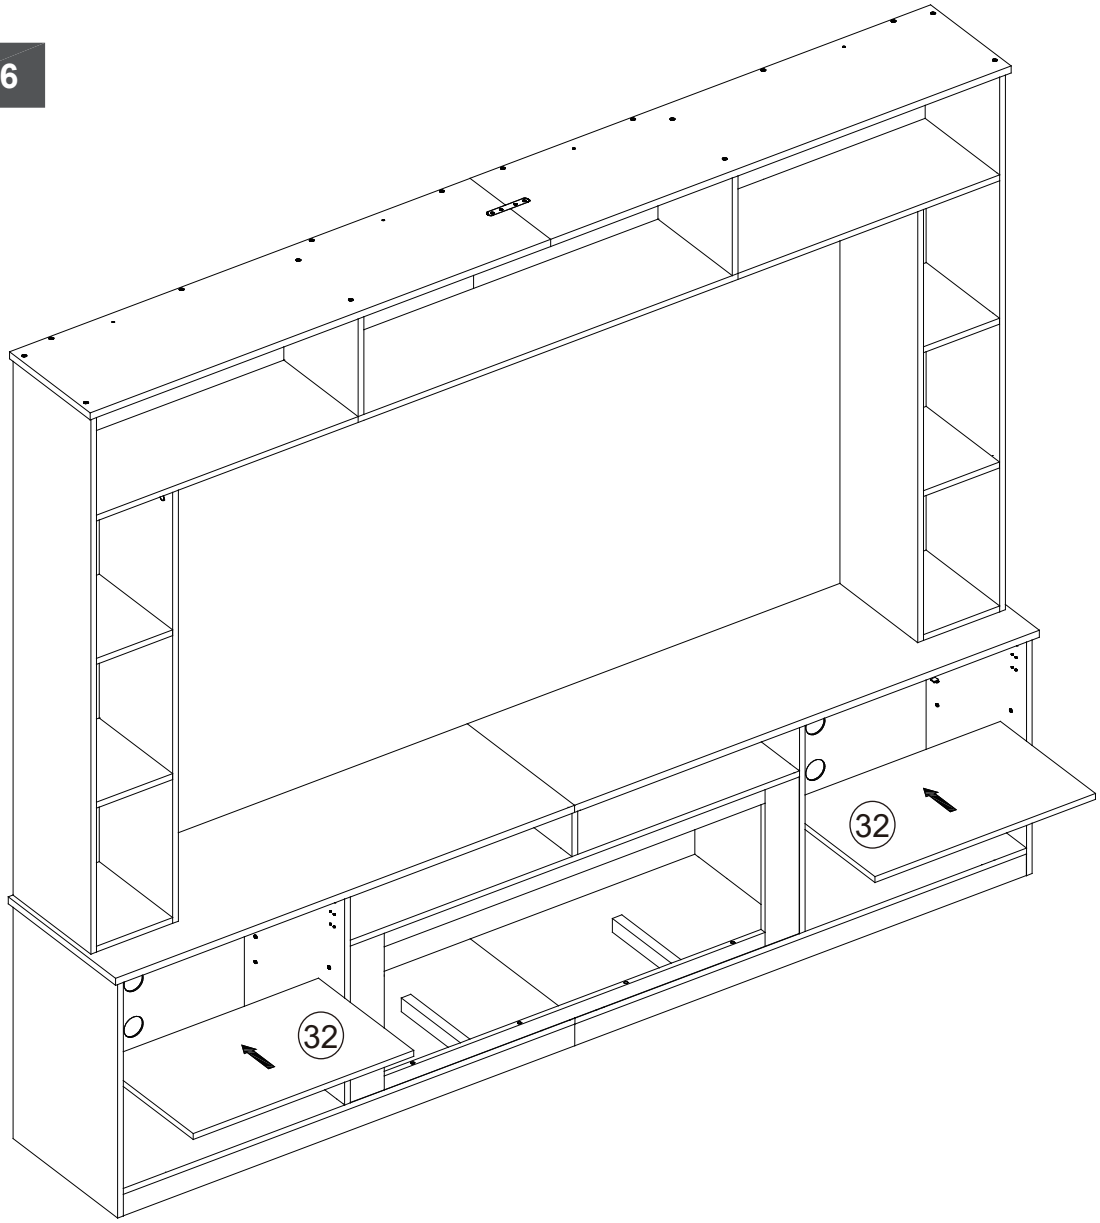


Step 37

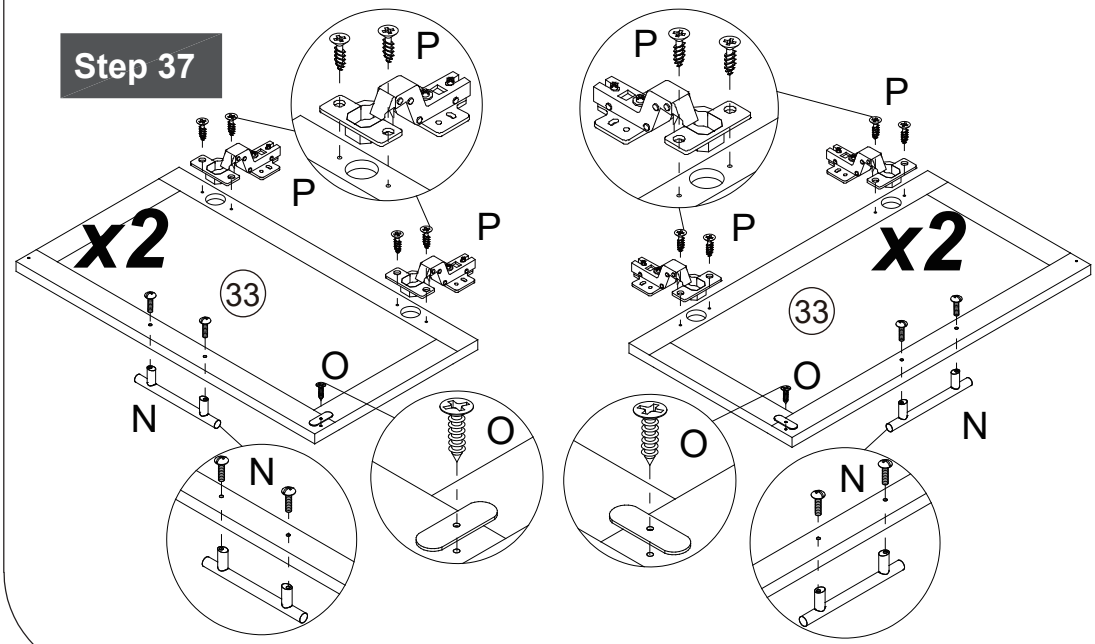

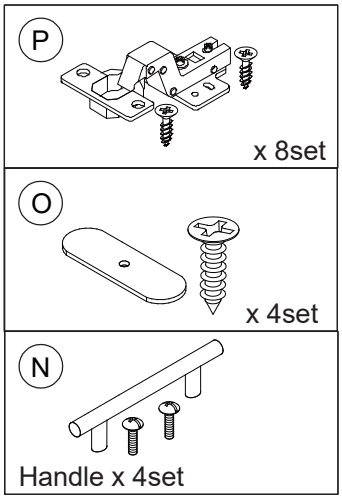


Assembly Instructions


Step 38

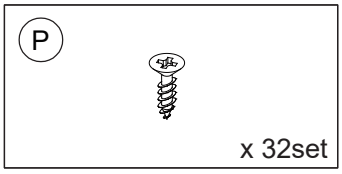


If the door can't close,please adjust the hinges as below.

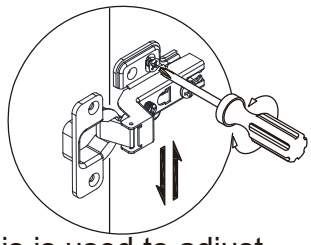

This is used to adjust the door panel in the up and down direction.

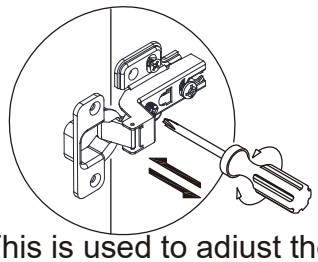

This is used to adiust the door panel in the left and right direction.

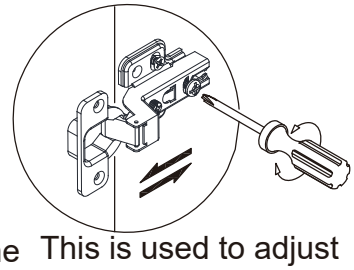


This is used to adjust the door panel in the front and rear.

Assembly Instructions


Step 39

Please follow the instructions to remove the screws that lock the cover plate of the fireplace. Put the screws aside and don't lose them. Then open the cover plate.

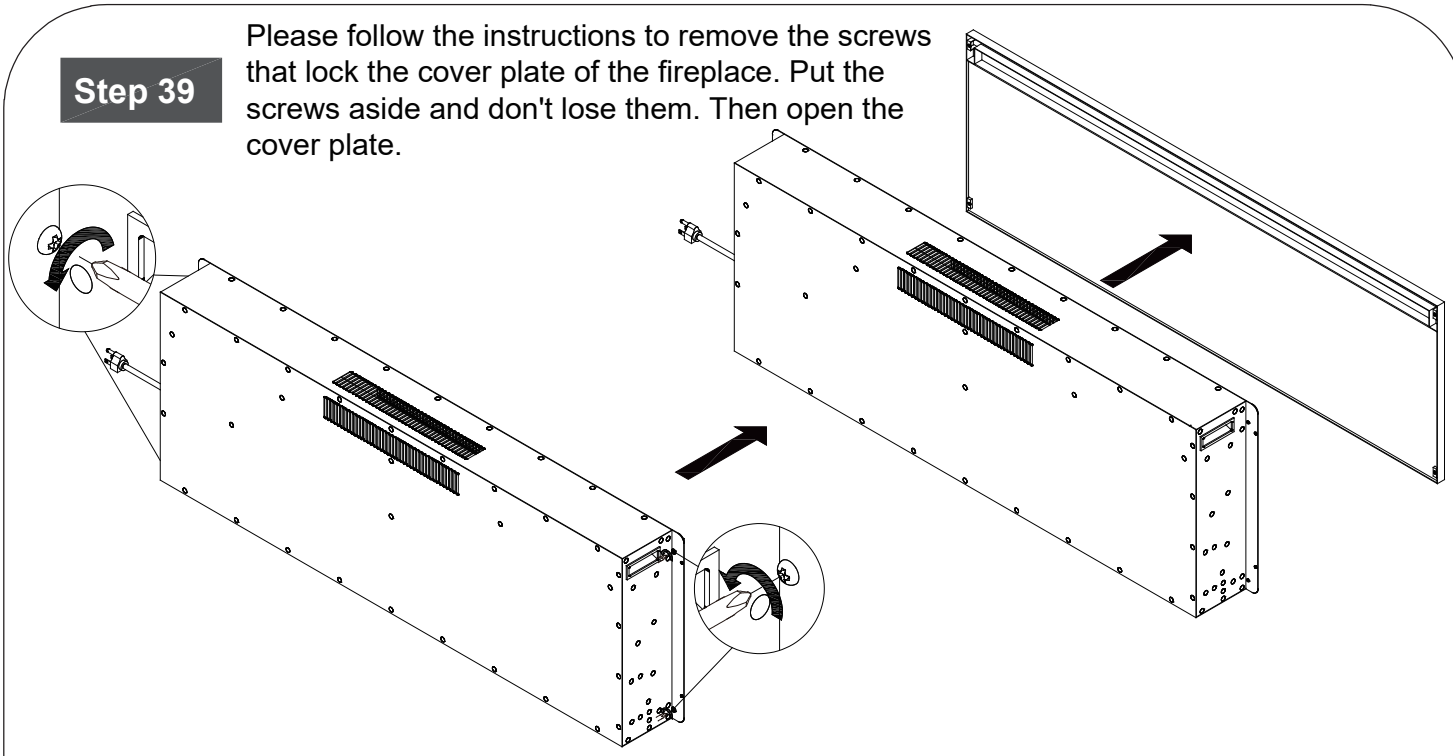


Step 40

Unpack the crystals contained in the bag that came in the same box as the fireplace, pour them into the groove of the fireplace, then reattach the cover plate. Put back the removed screws and tighten them one by one.

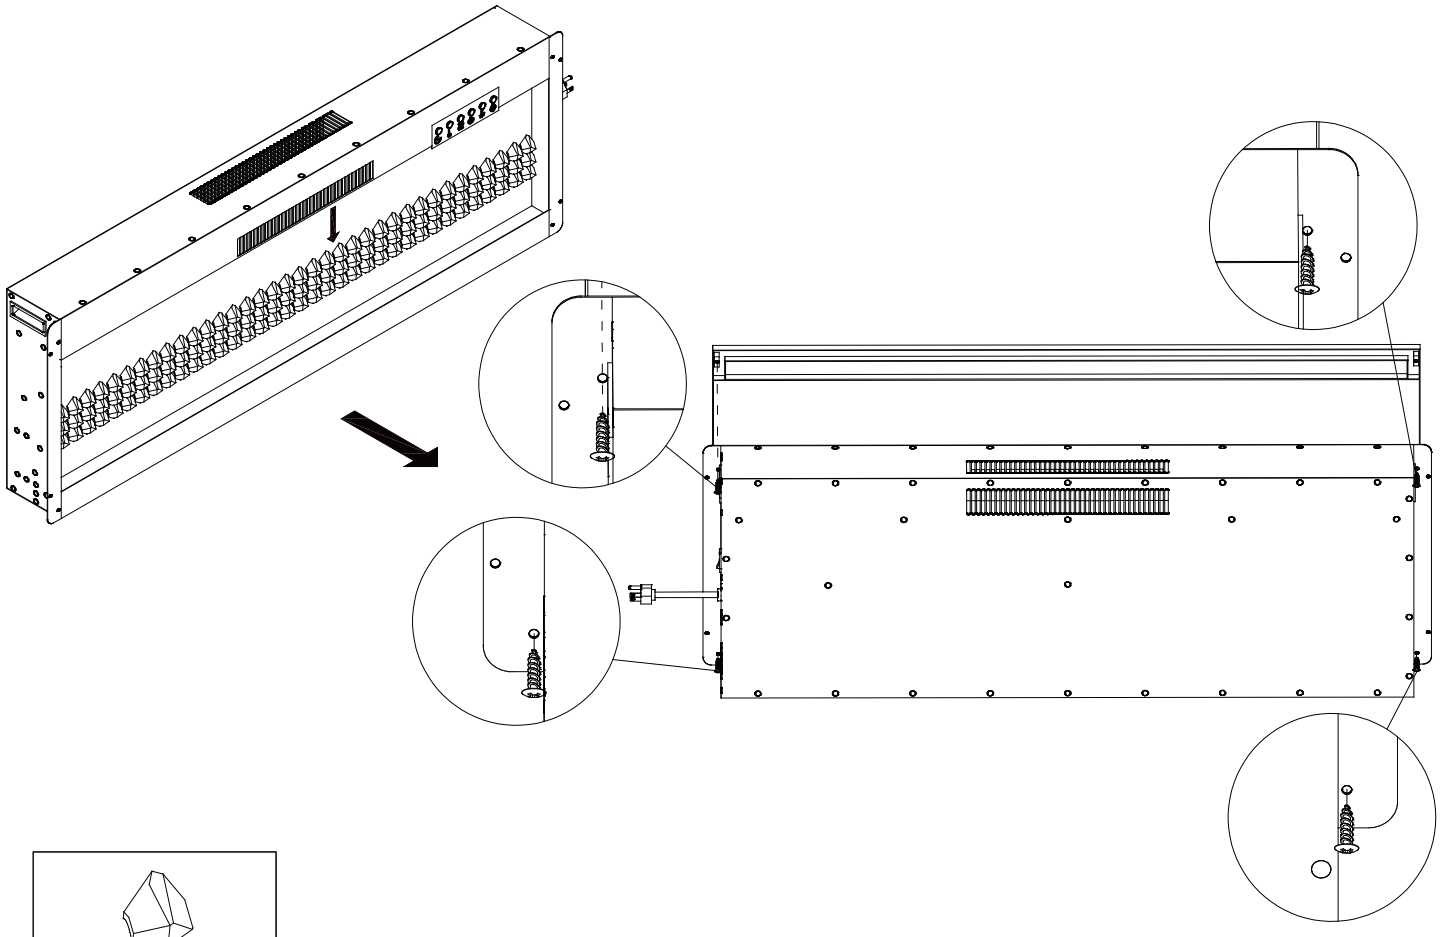

Assembly Instructions


Step 41

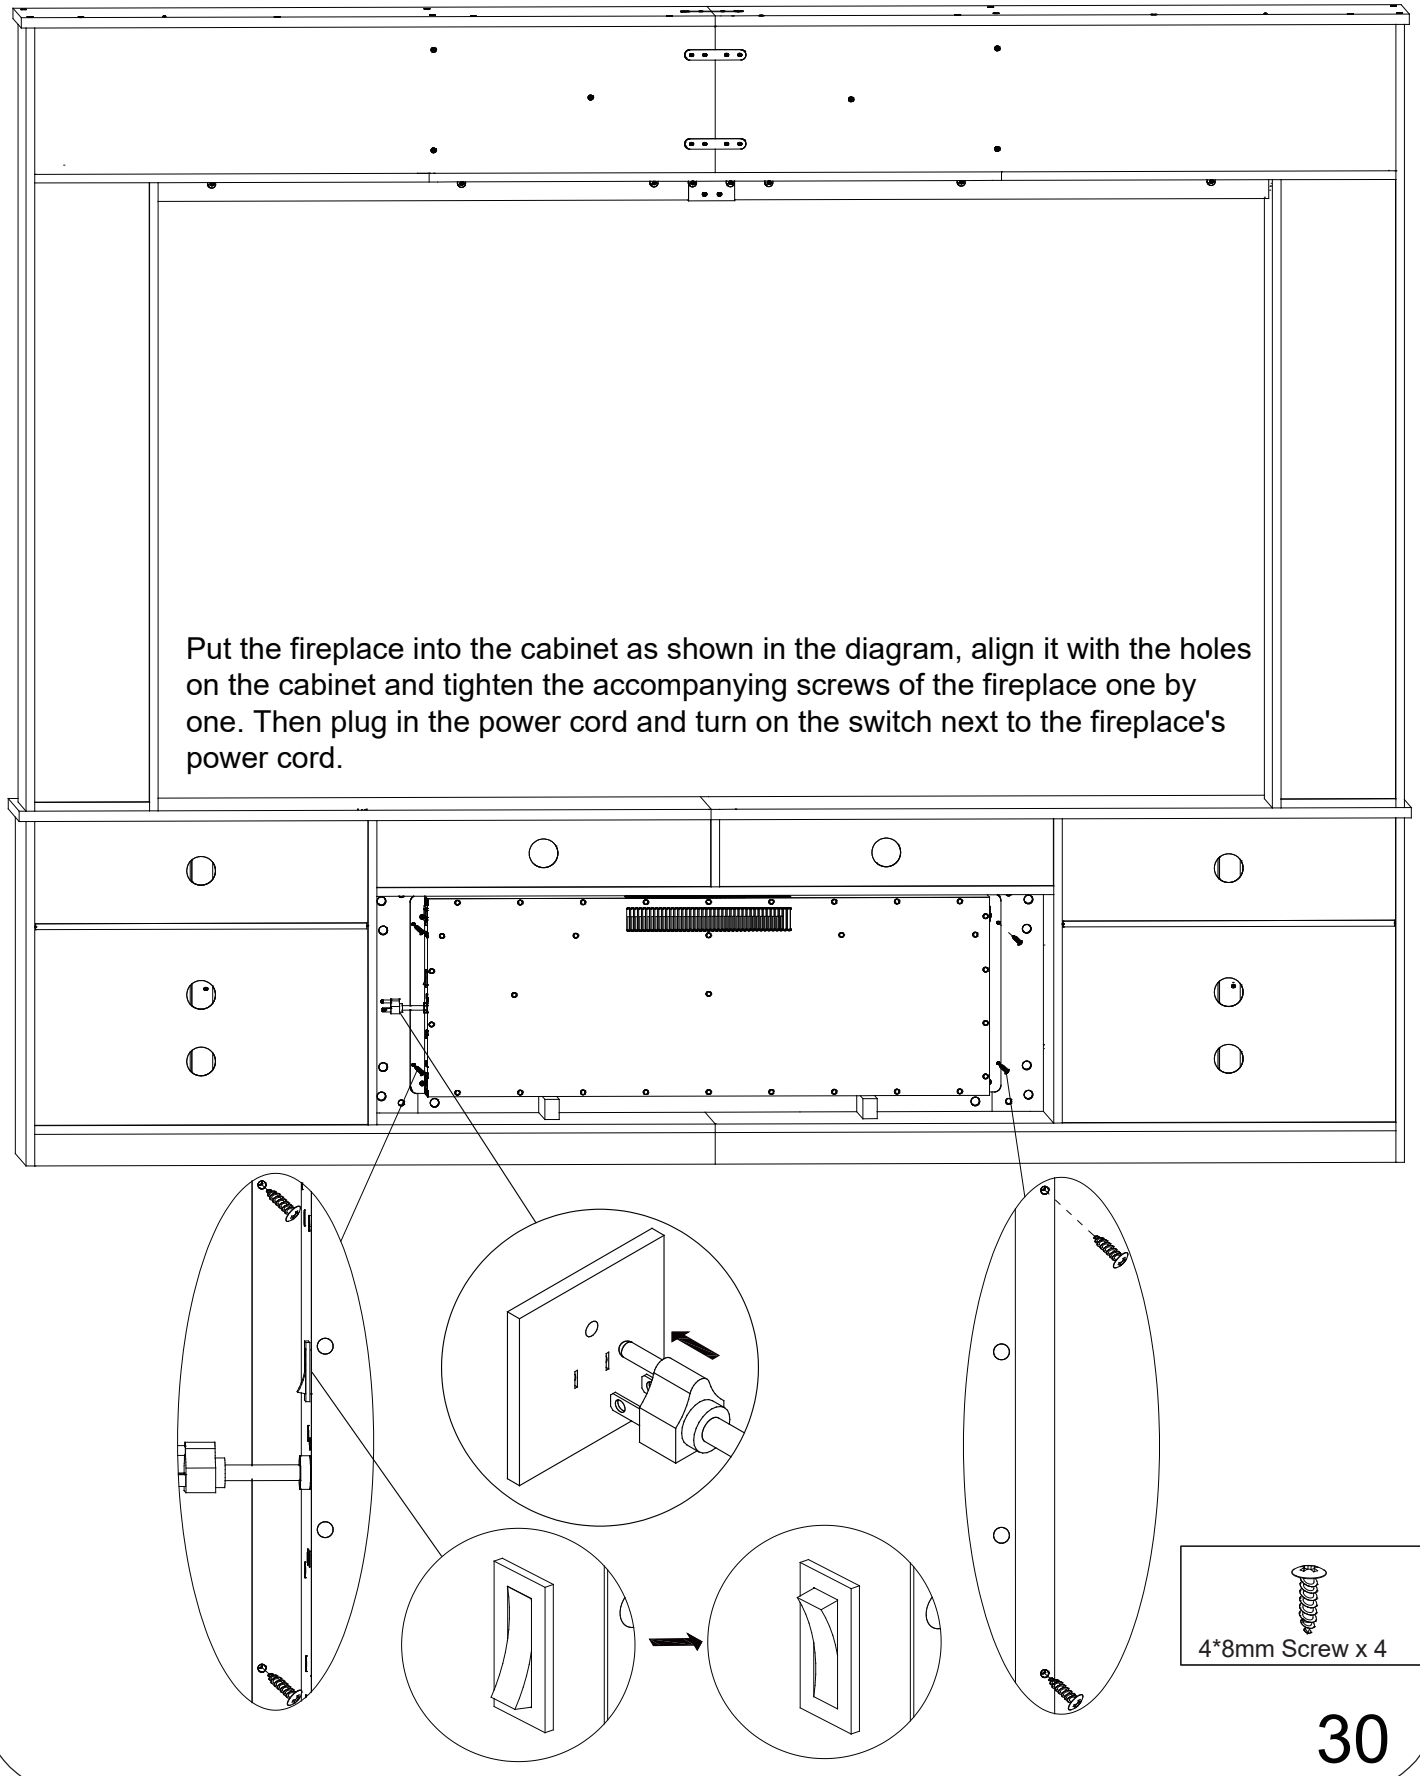

Put the fireplace into the cabinet as shown in the diagram, align it with the holes on the cabinet and tighten the accompanying screws of the fireplace one by one. Then plug in the power cord and turn on the switch next to the fireplace's power cord.


Assembly Instructions


Step 42

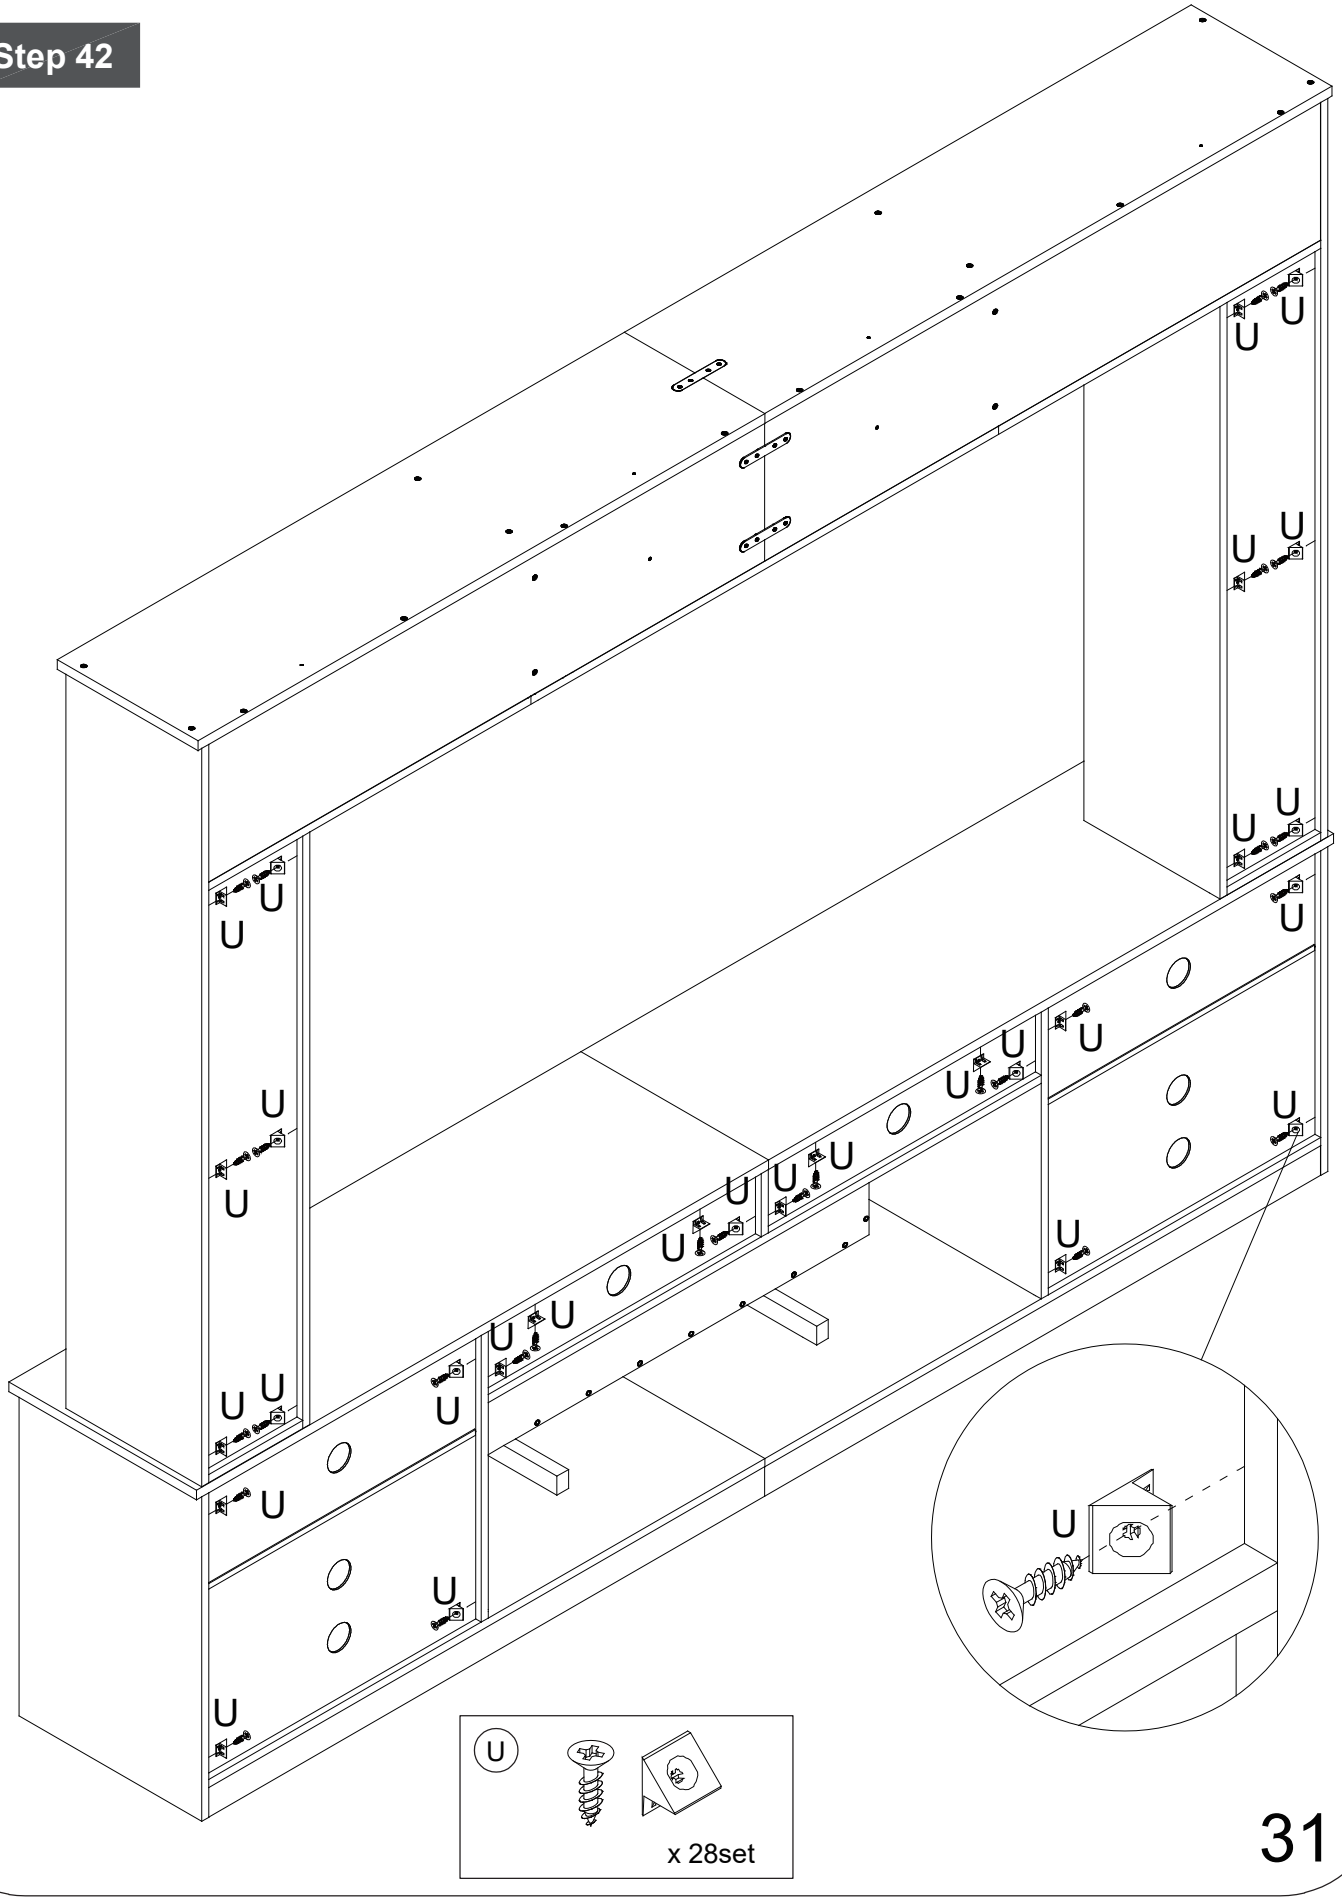


Assembly Instructions

Step 43

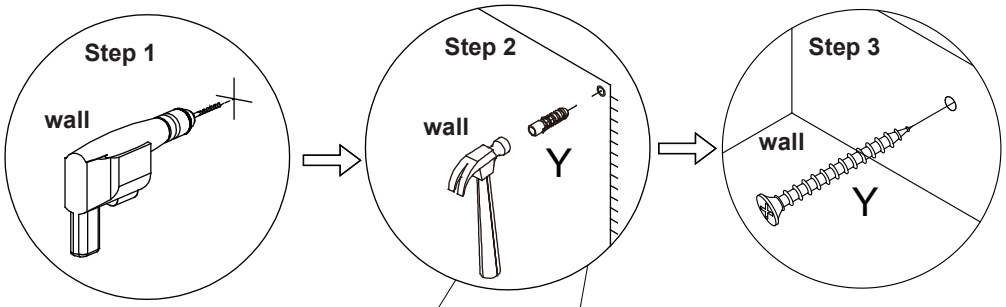


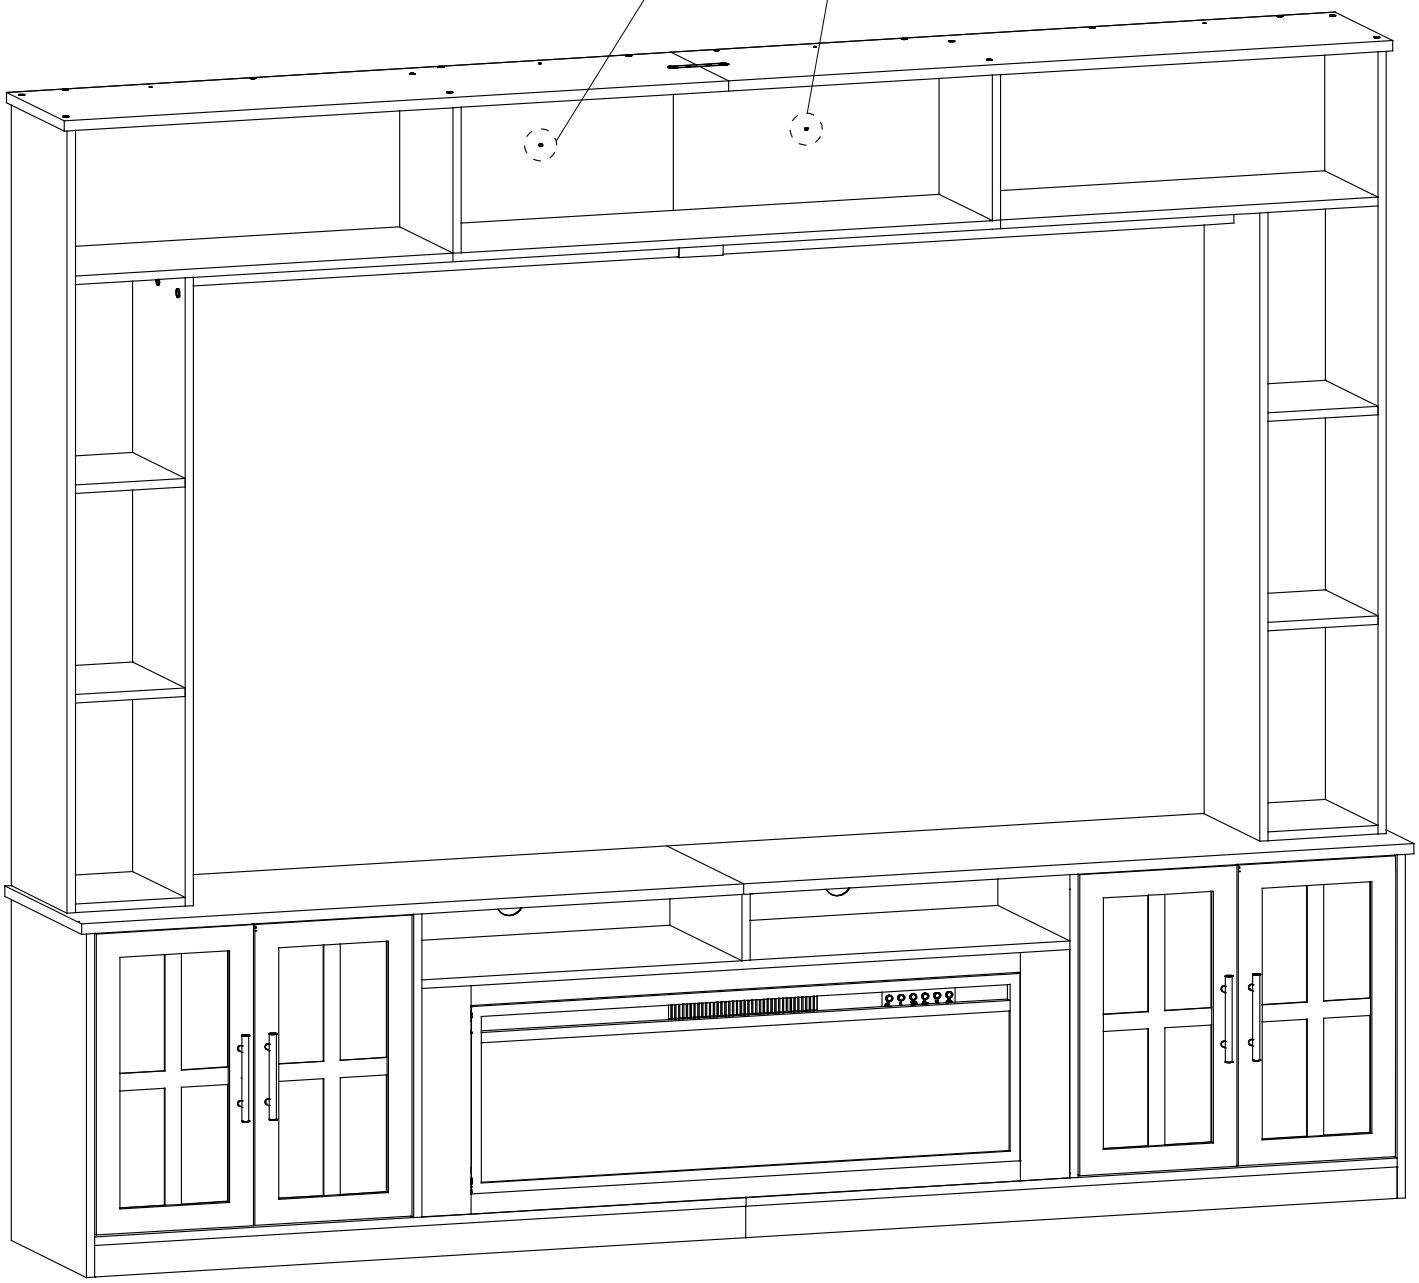


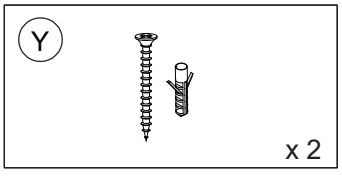



Assembly Instructions

Step 44

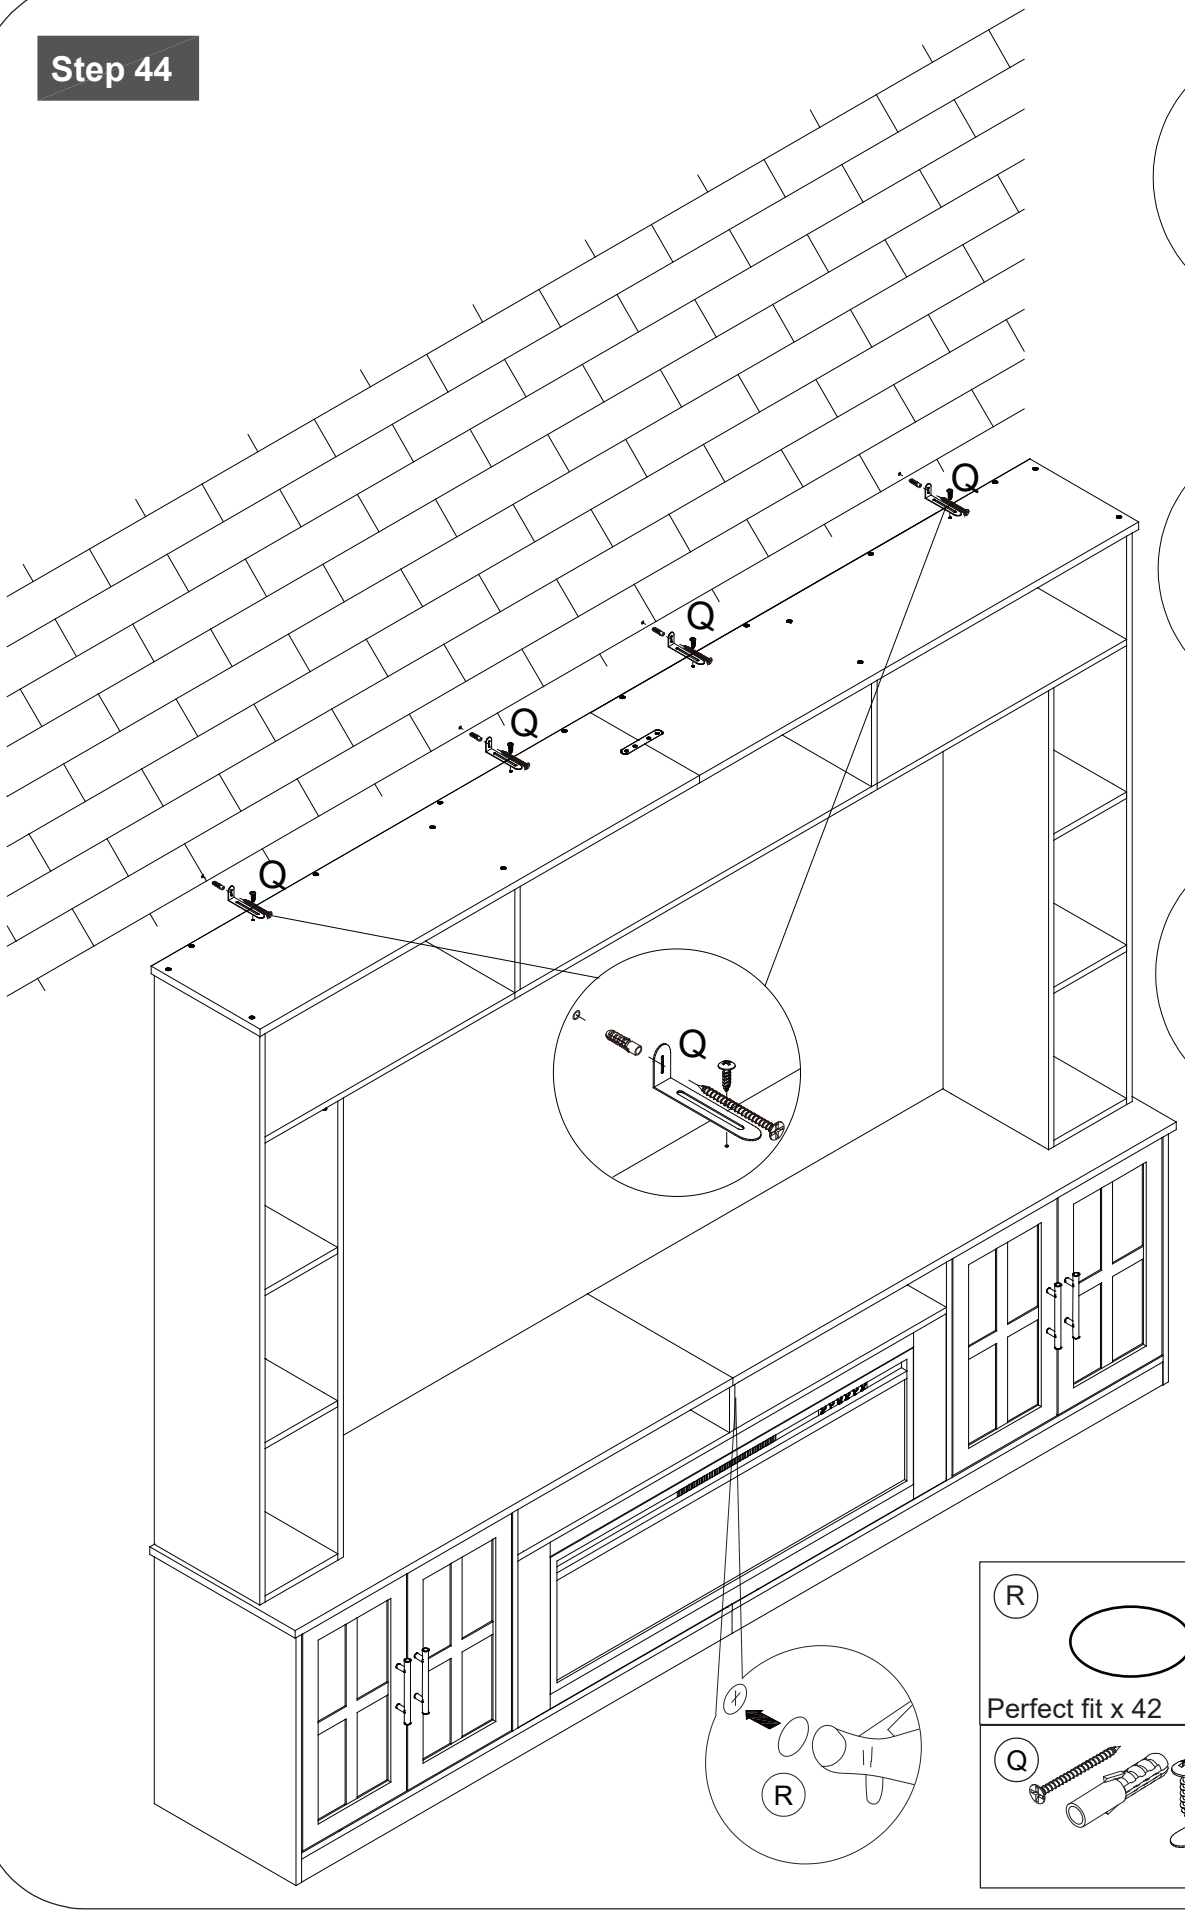

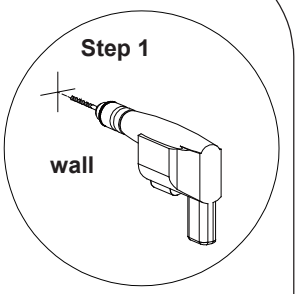

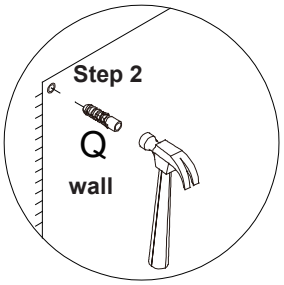

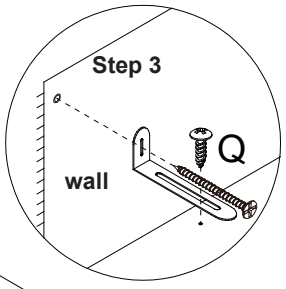

Assembly Instructions

Step 45

