
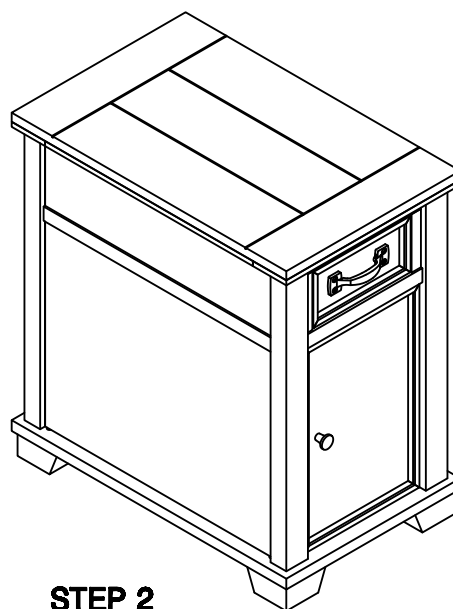


ASSEMBLY INSTRUCTION

CHAIRSIDE CABINET

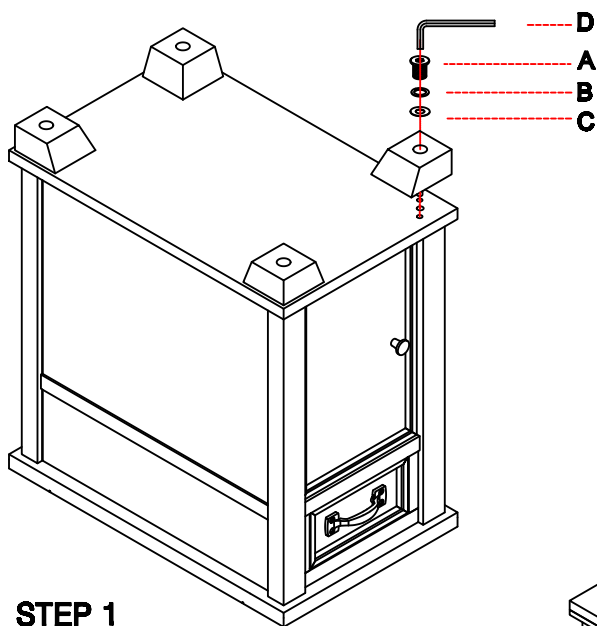

**DO NOT TIGHTEN SCREWS
UNTIL COMPLETELY ASSEMBLED**

Item	Sketch	Description	Qty
A		Bolt 1/4"x1-1/4"	4 PCS
B		Lock Washer 1/4"	4 PCS
C		Flat Washer 1/4"x16mm	4 PCS
D		Allen Wrench 1/4"	1 PC