
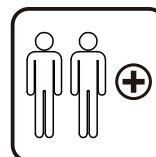
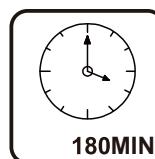
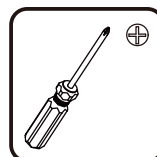
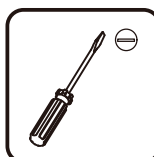


Installation & Assembly

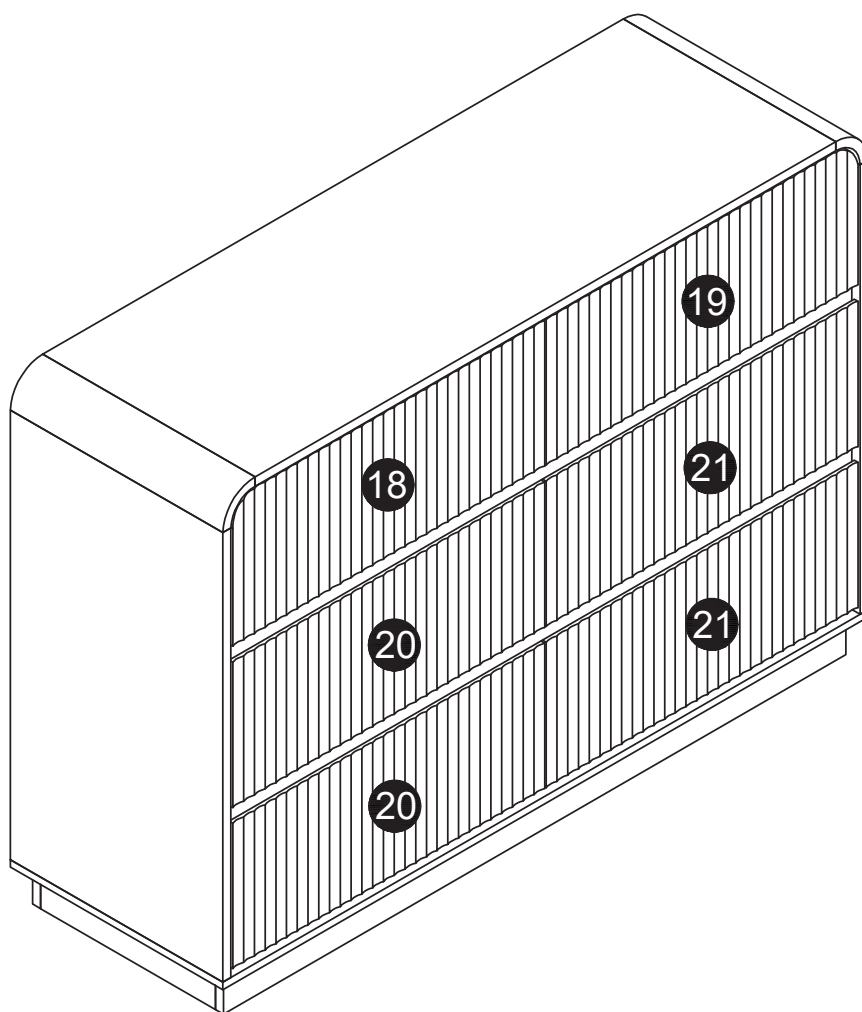

EN_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

. THANK YOU FOR PURCHASE! .

FREE REPLACEMENT PARTS AVAILABLE!



---NEED HELP WITH YOUR FURNITURE?---


If you're experiencing any issues—whether due to shipping, assembly, or any other reason
—we're here to help.

For any damaged or missing components, we're happy to provide FREE replacement parts.


WANT TO CONTACT US

- ▶ Log in to your account.
- ▶ Go to “Your Orders” and locate your furniture order.
- ▶ Click on “Get Help with Order” to send us a message directly.


Our customer support team is ready to assist you and we will respond within
12-24 HOURS to resolve your concerns quickly!

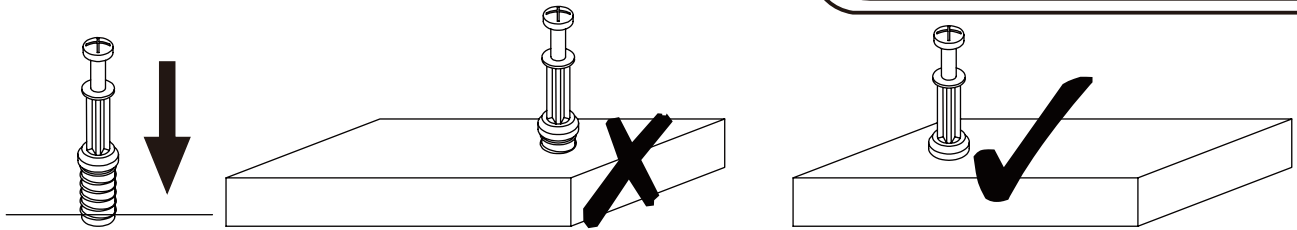


EN_QUICKFIT: Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

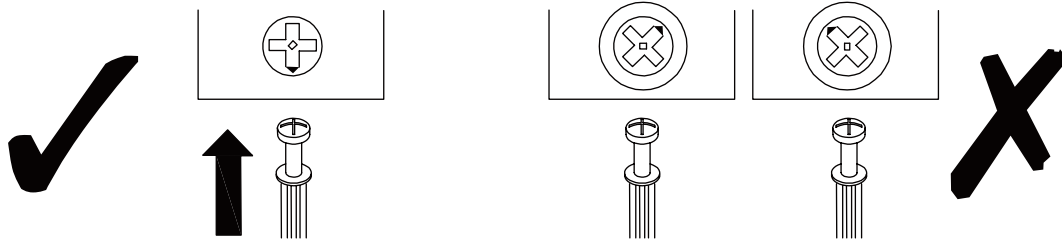












EN_CAM LOCK: When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.










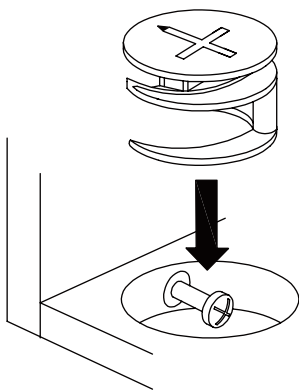





EN_Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.





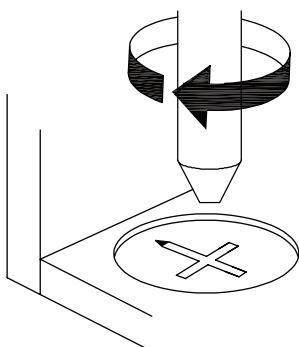


EN_Turn cam lock clockwise to tighten.

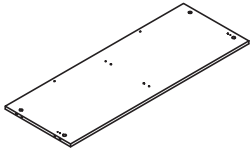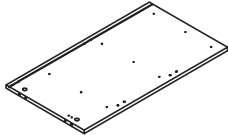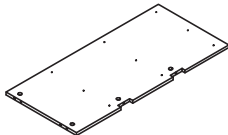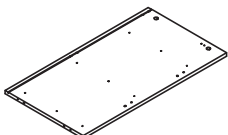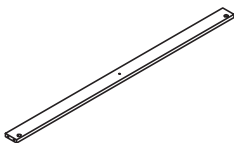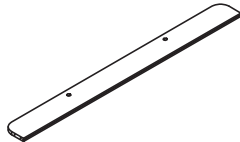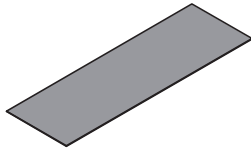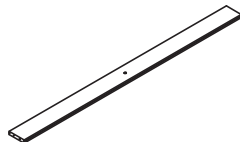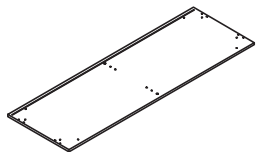NO.	PARTS	QTY	SPARE
①		x1	
②		x2	
③		x1	
④		x1	
⑤		x1	
⑥		x2	
⑦		x1	
⑧		x2	
⑨		x1	
⑩		x1	
⑪		x2	

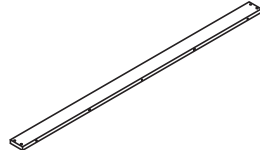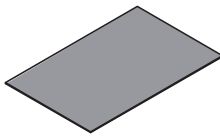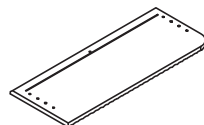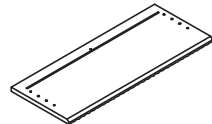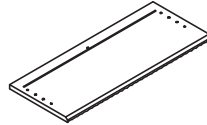
NO.	PARTS	QTY	SPARE
⑫		x2	
⑬		x6	
⑭		x6	
⑮		x6	
⑯		x6	
⑰		x6	
⑱		x1	
⑲		x1	
⑳		x2	
㉑		x2	
	 Hardware Kit	x1	

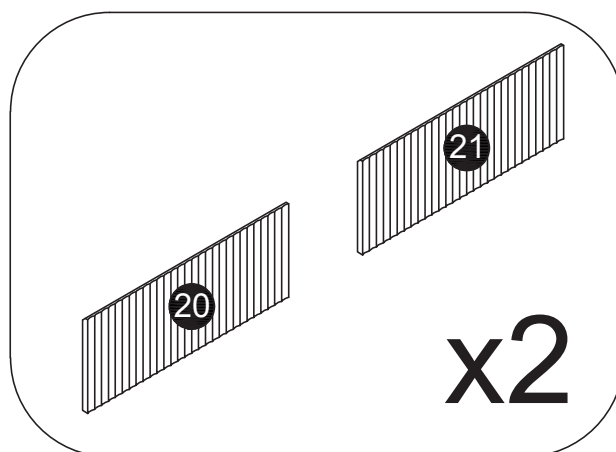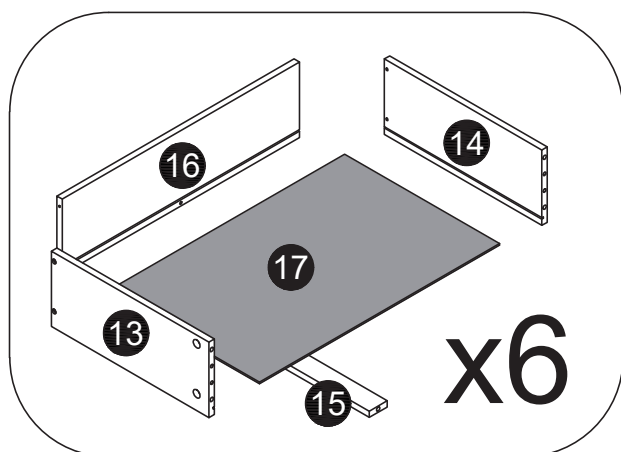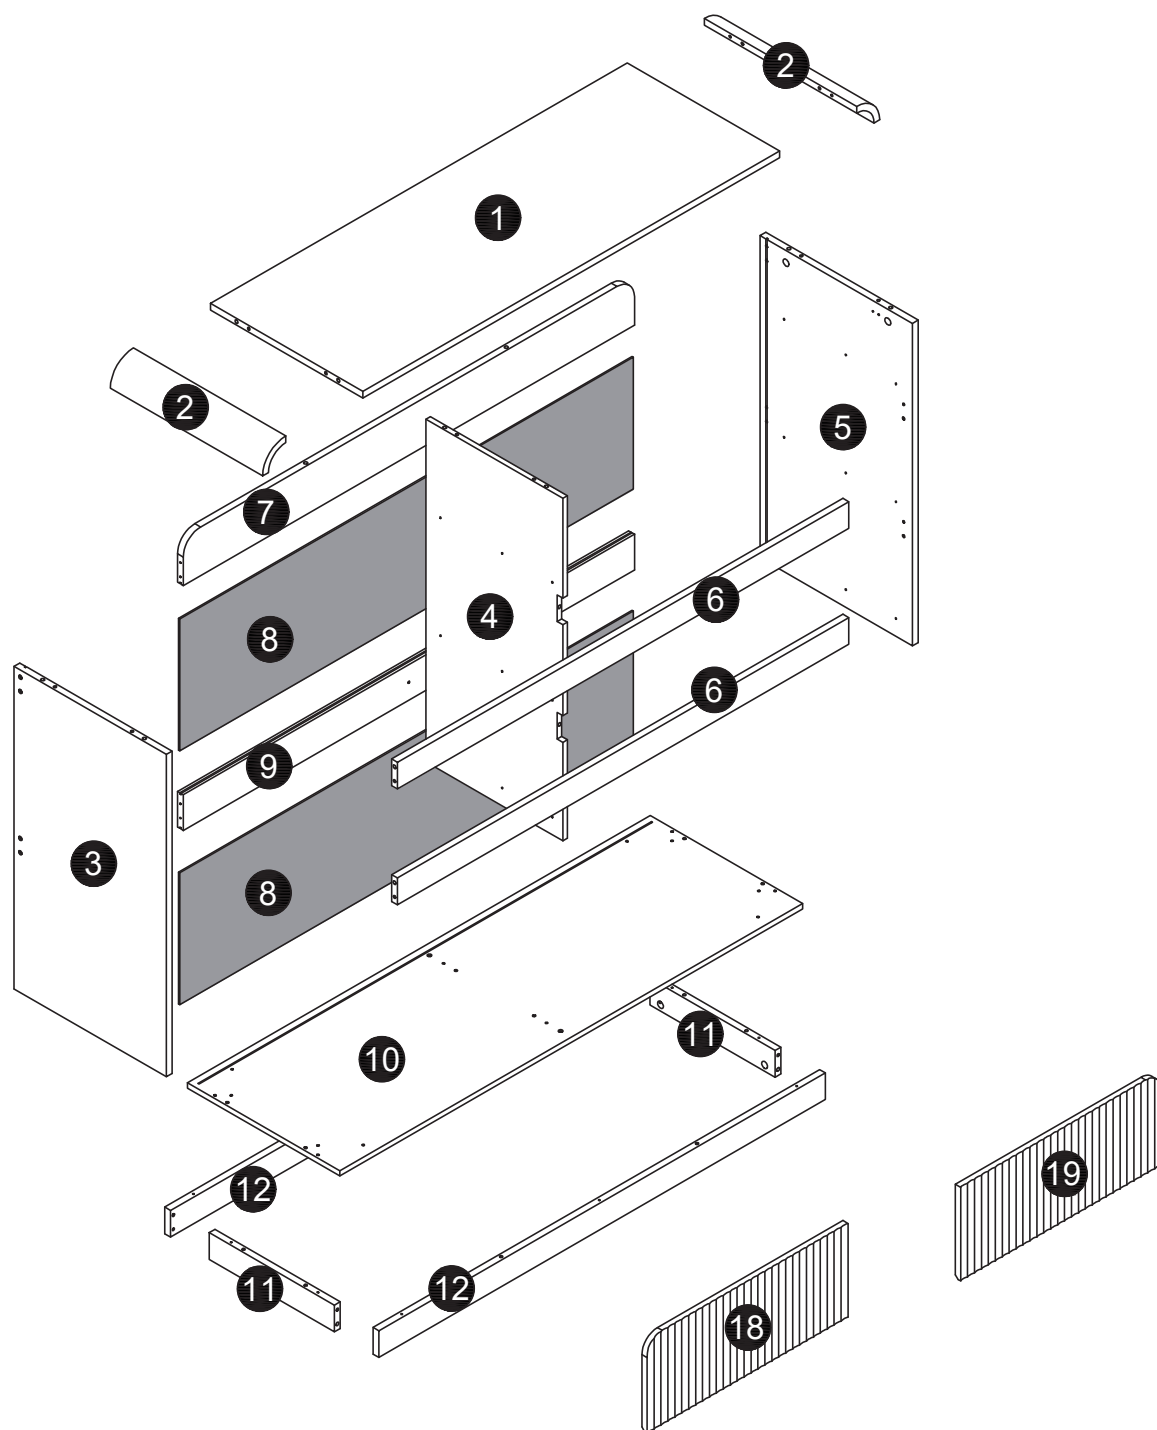

 A x44 Ø6x35mm +3(spare)	 B x52 Ø15x10mm +3(spare)	 C x56 Ø6x30mm +5(spare)	 D x32 Ø4x35mm +3(spare)	 E x72 Ø3.5x12mm +5(spare)	 F x8 Ø6x40mm
 G x15 Ø5x40mm +1(spare)	 H x8 Ø15mm +2(spare)	 I x10 Ø4x30mm	 J x2	 K x8 Ø4x14mm	 L x2 Ø6x30mm
 O-1	 O-2	 N-1	 N-2		
 CL x6 L350mm	 CR x6 L350mm	 DL x6 L350mm	 DR x6 L350mm		


D x30



01

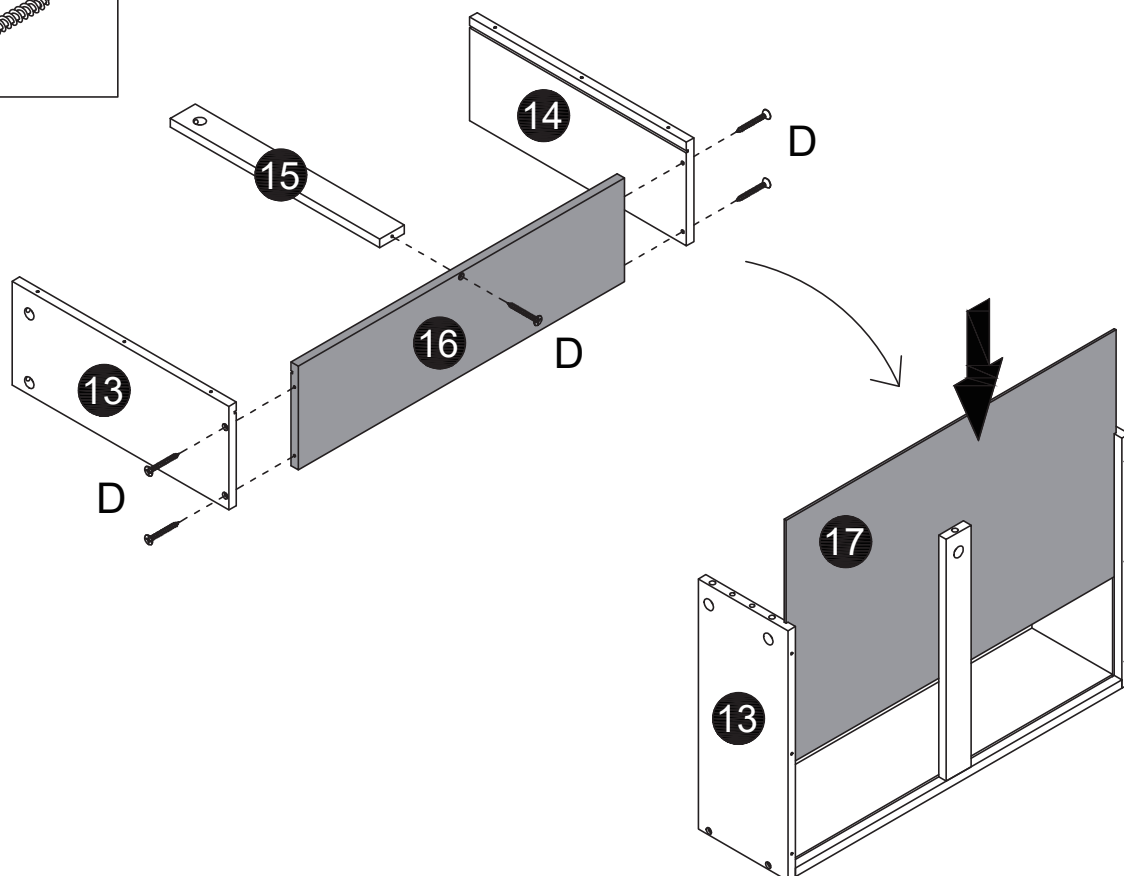


A x30

02

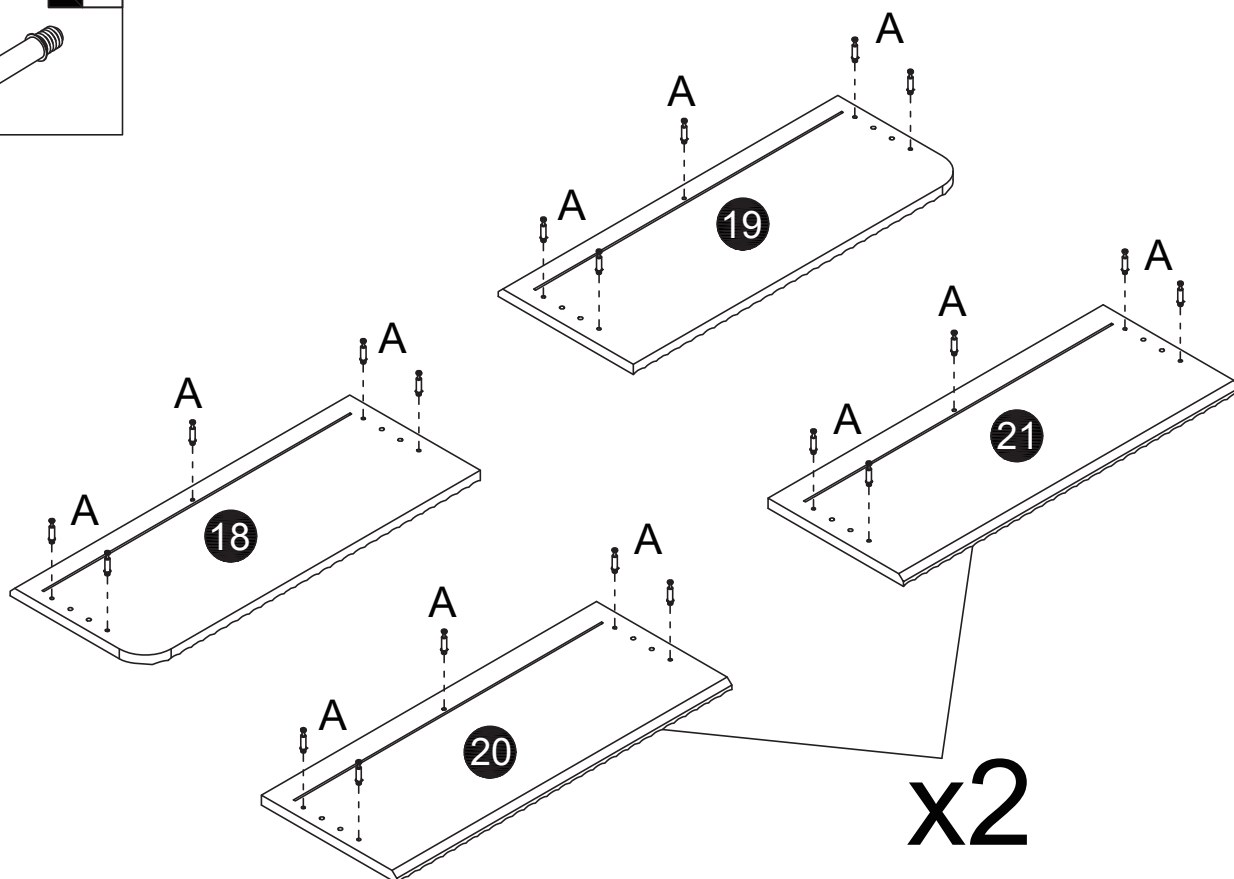

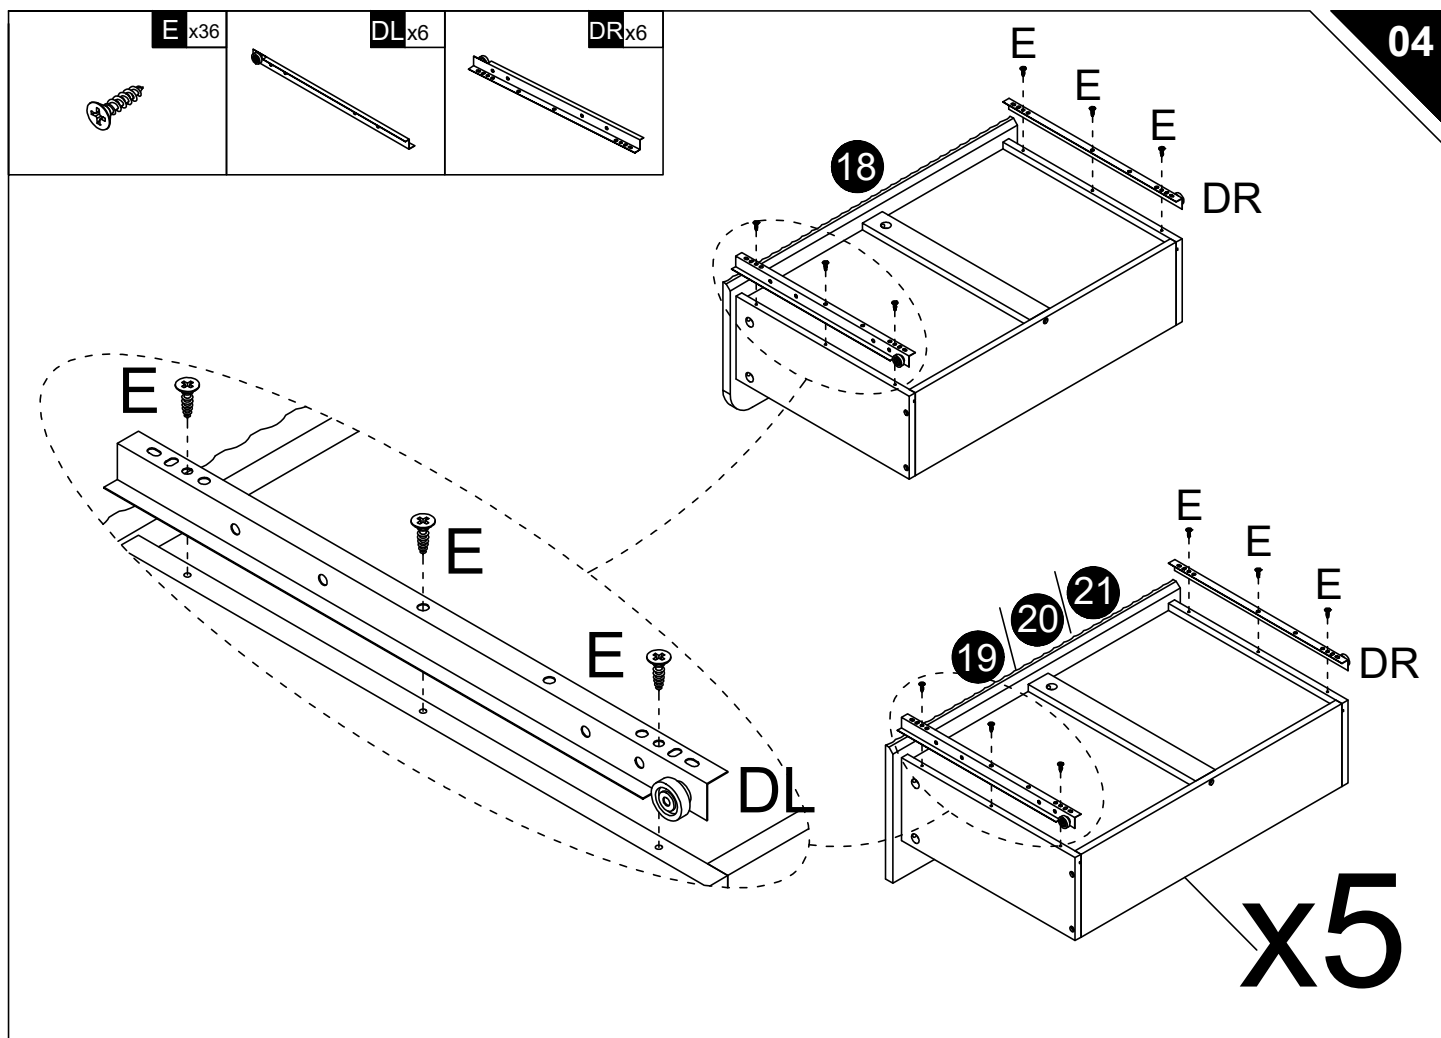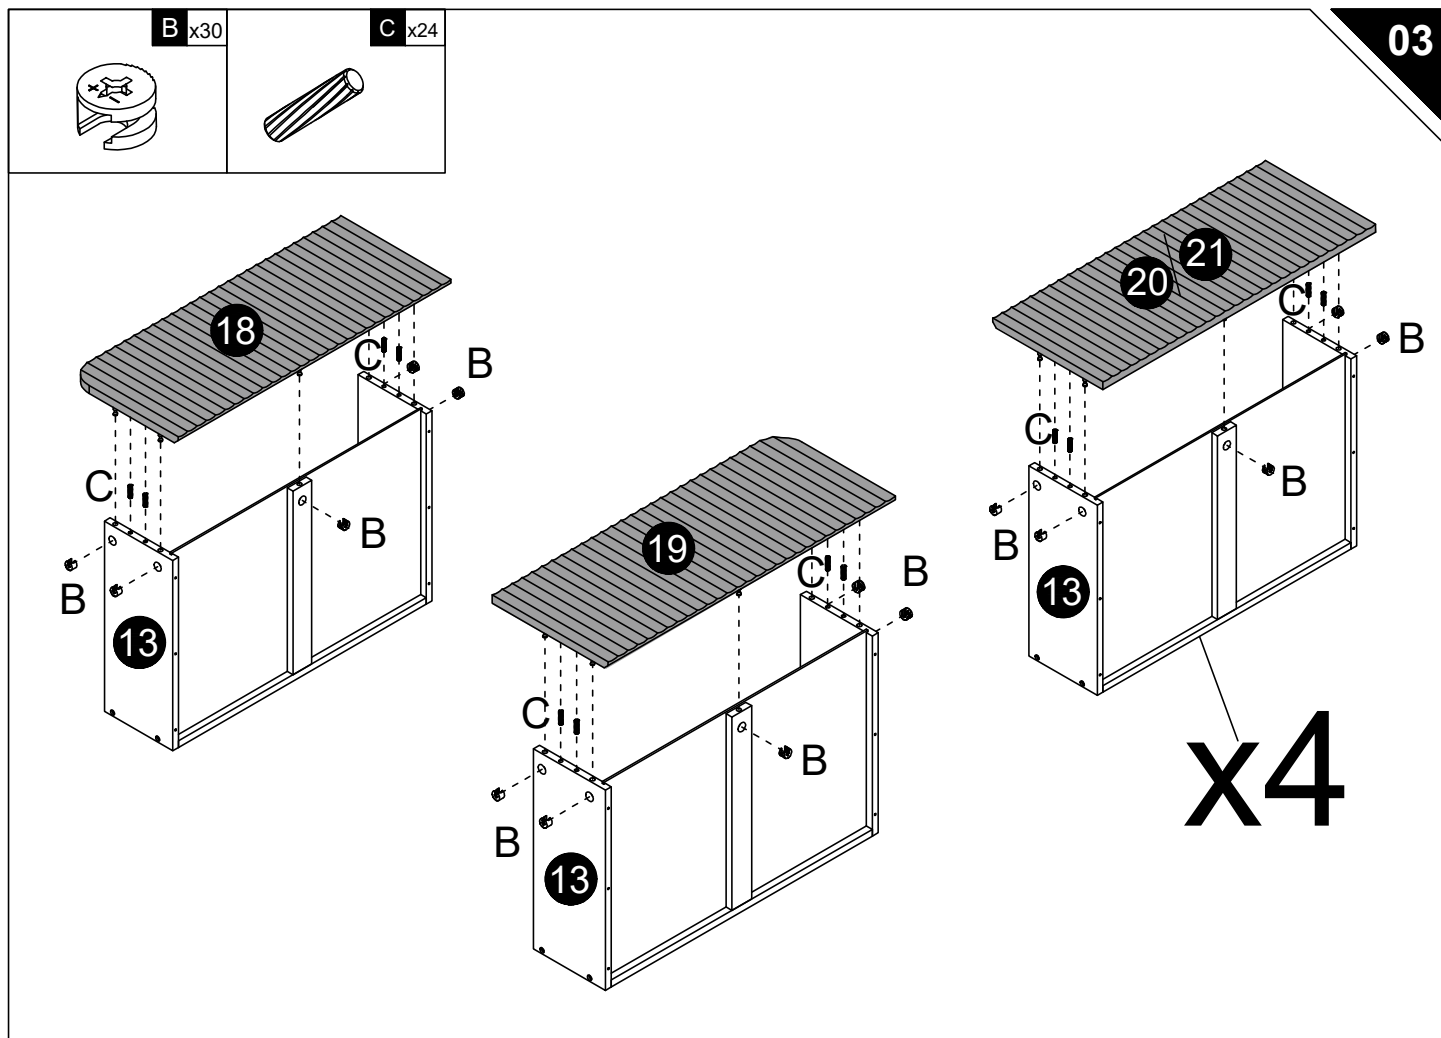

A x4









E x18



CL x3





CR x3

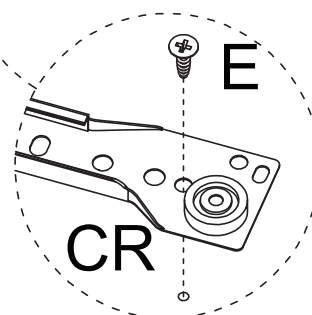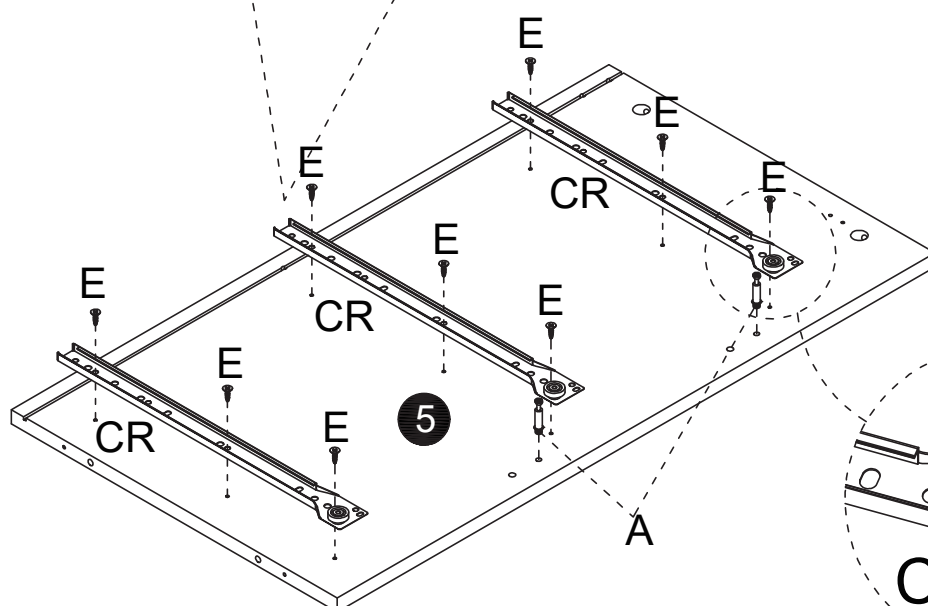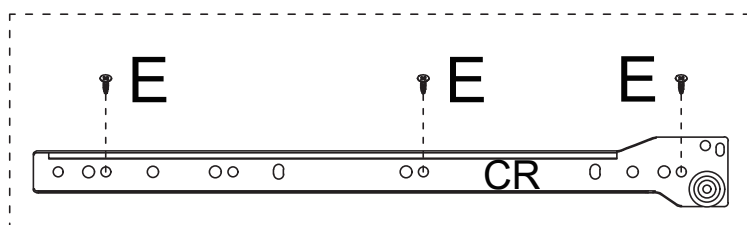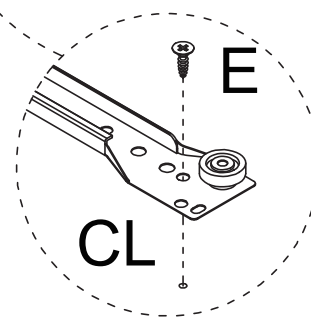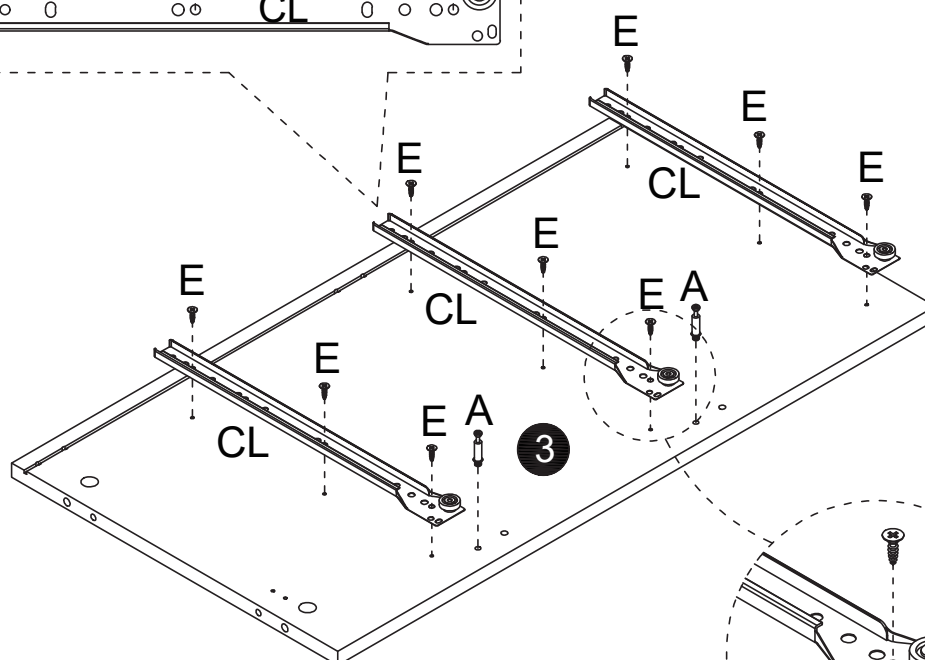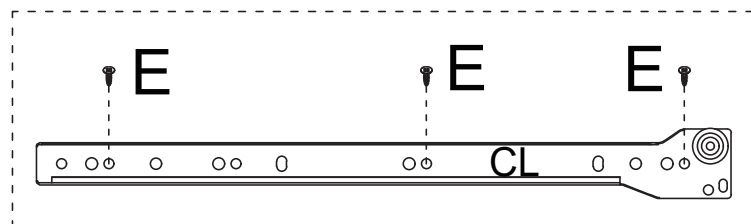



E x18

CL x3




CR x3

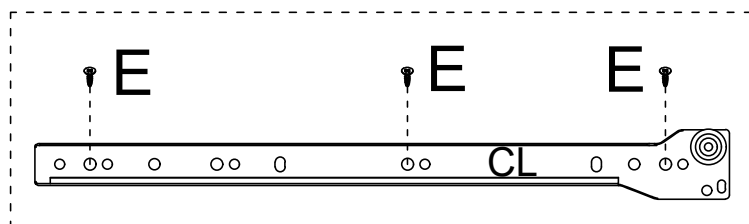

Second hole

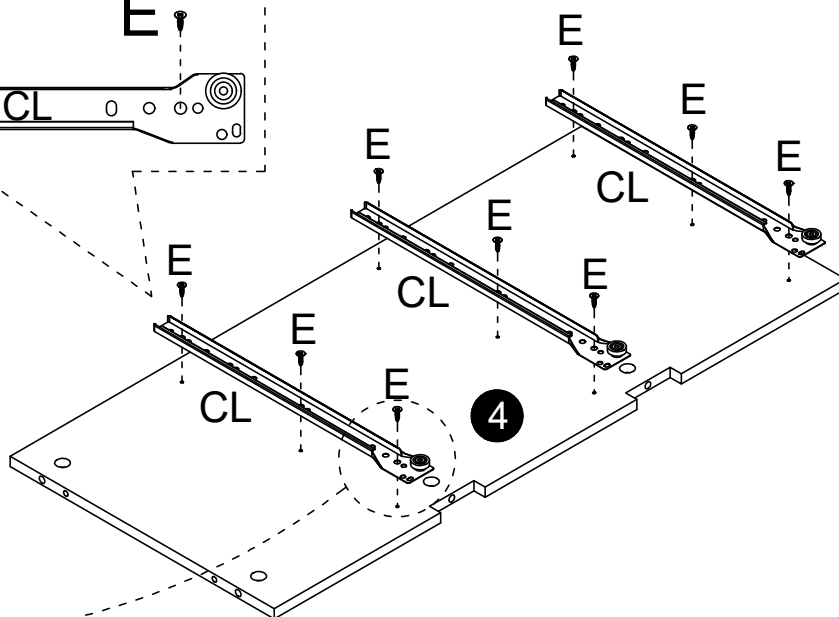
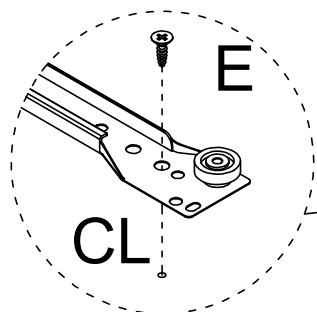


180°

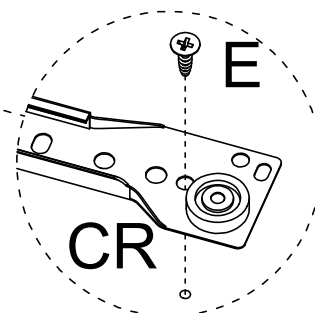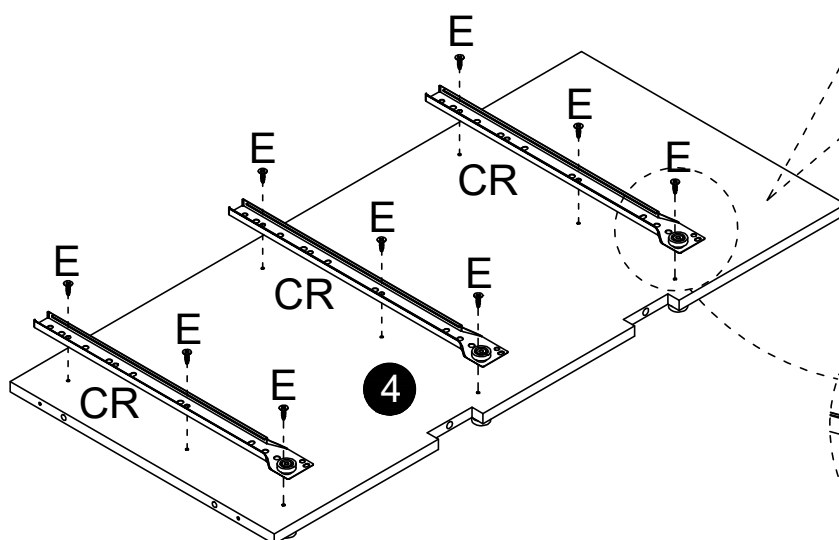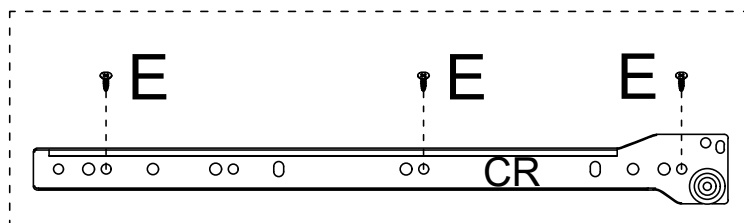

A x2

07

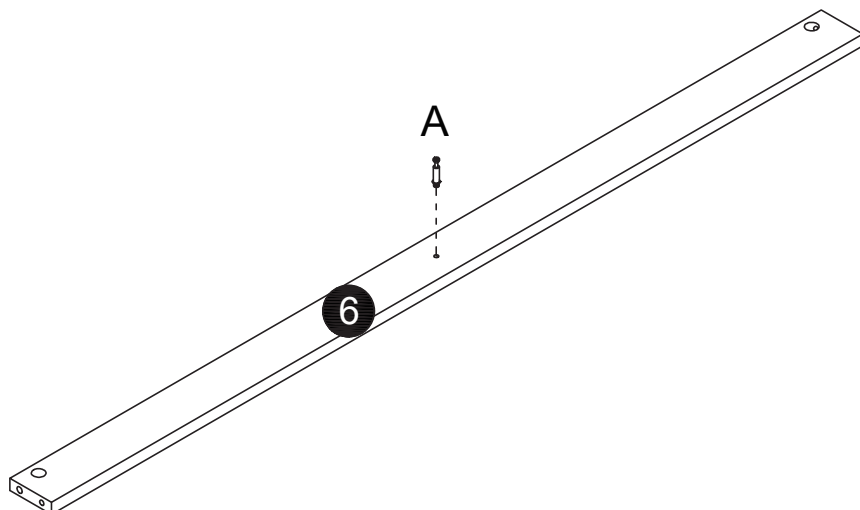


x2

B x2

08




For easier installation, please pad one piece of foam under the product (take it from the packaging box).

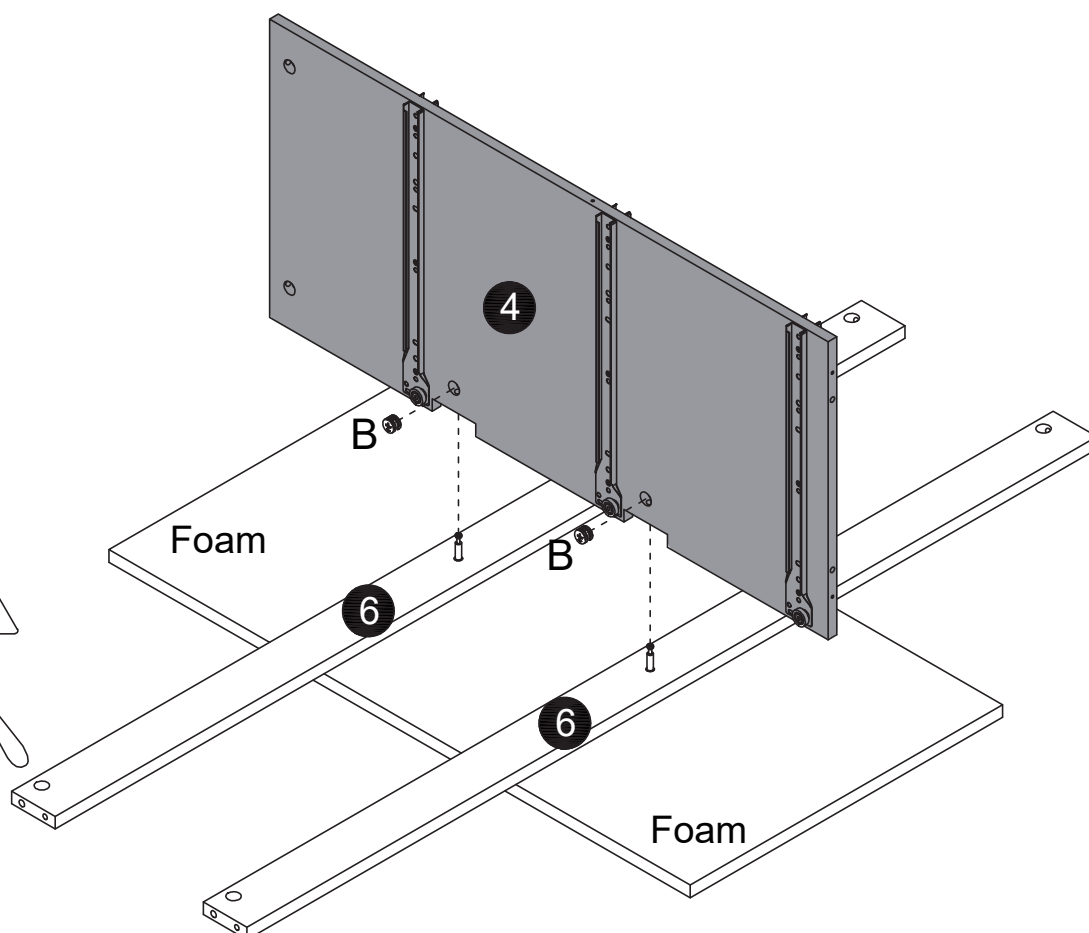


B x2

C x2

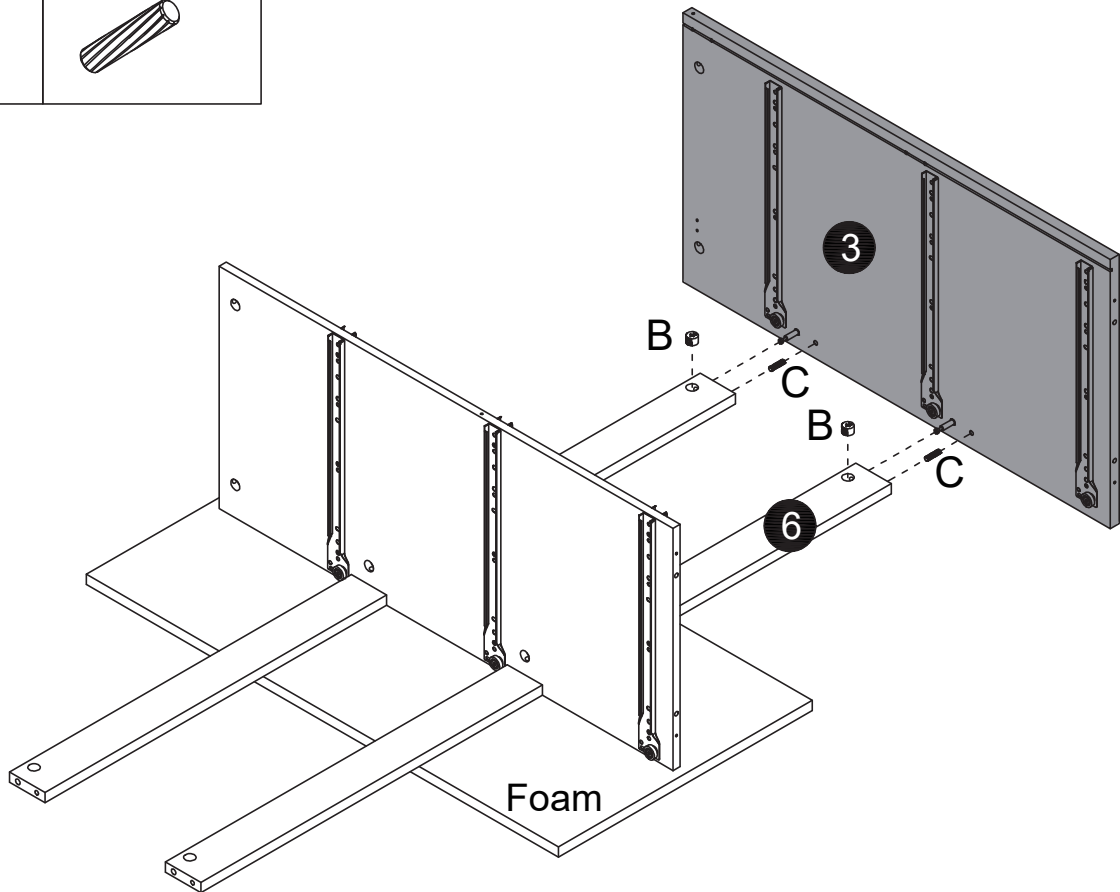

G x3

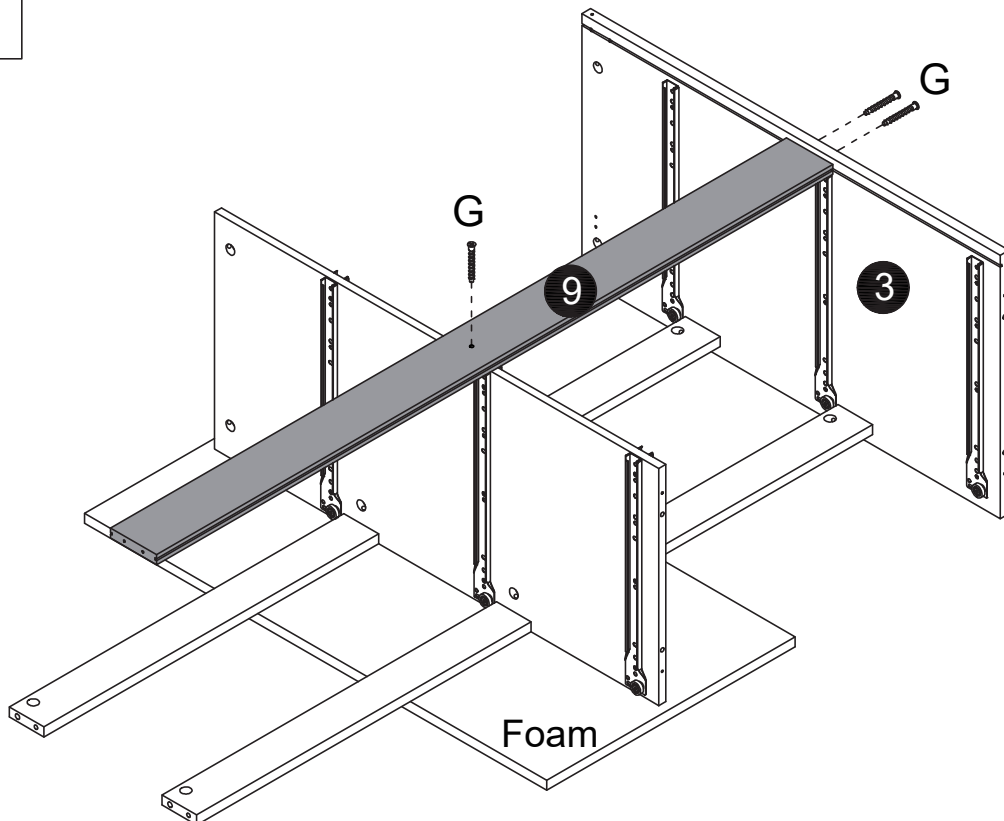


B x2




C x2




G x2


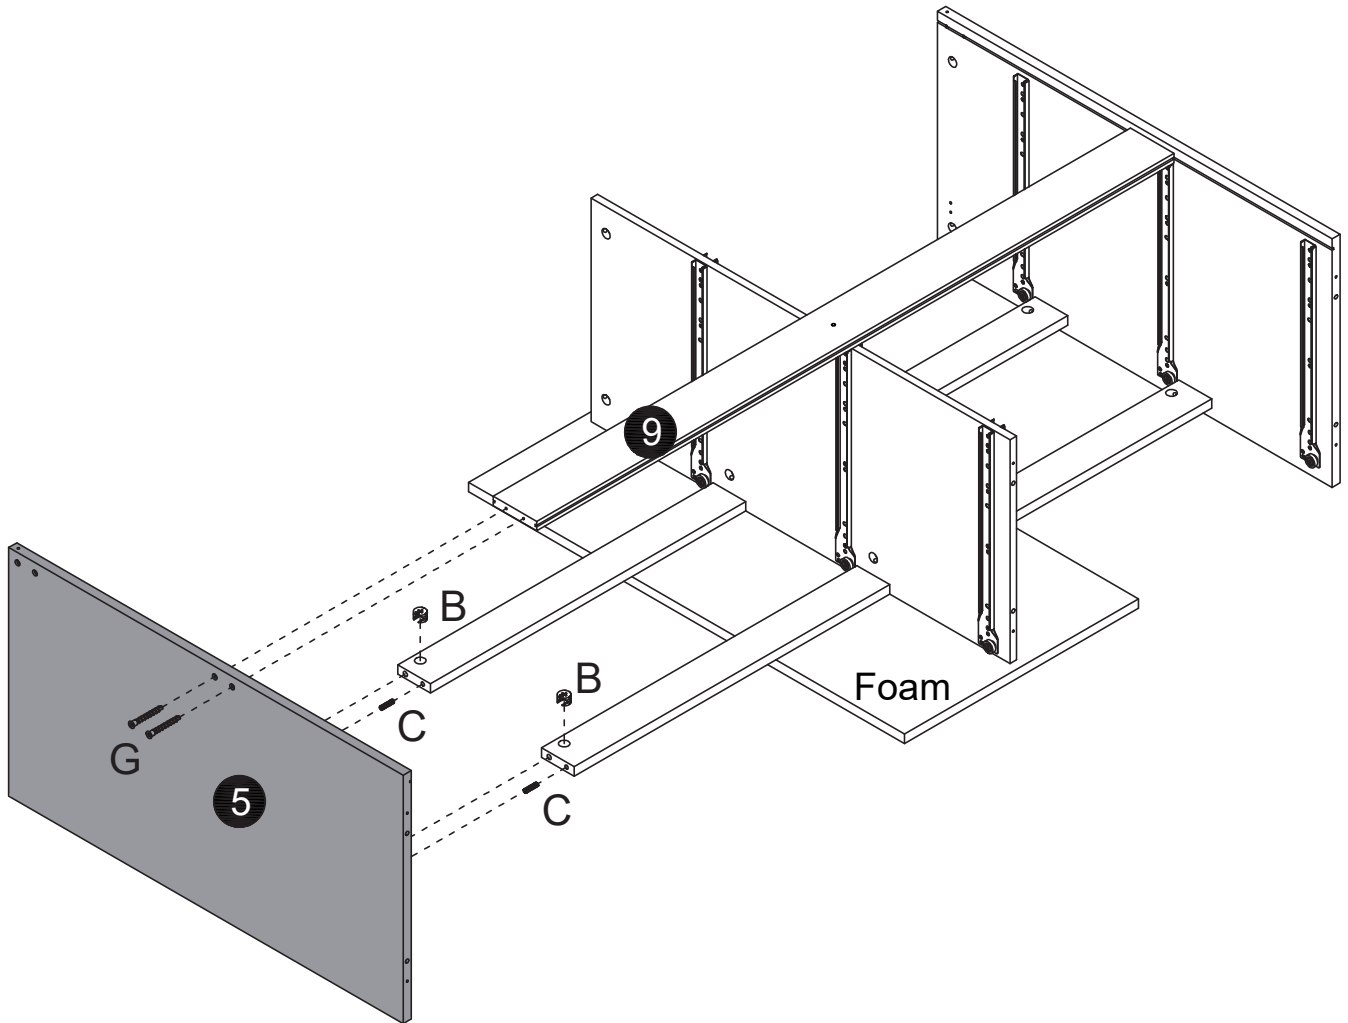


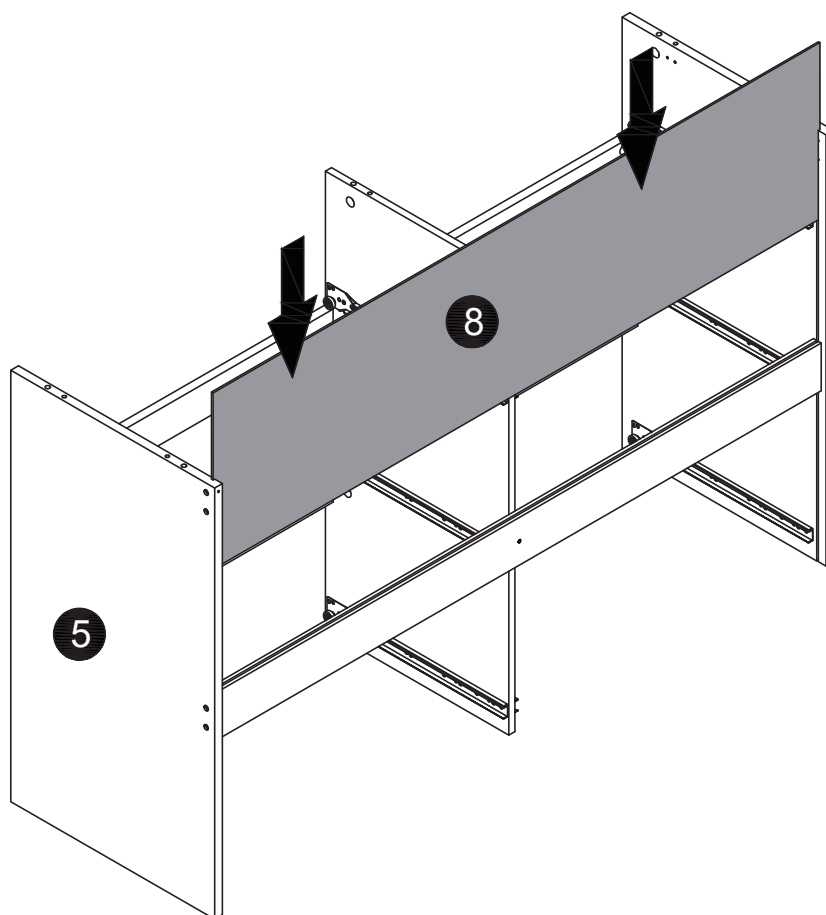


G x4

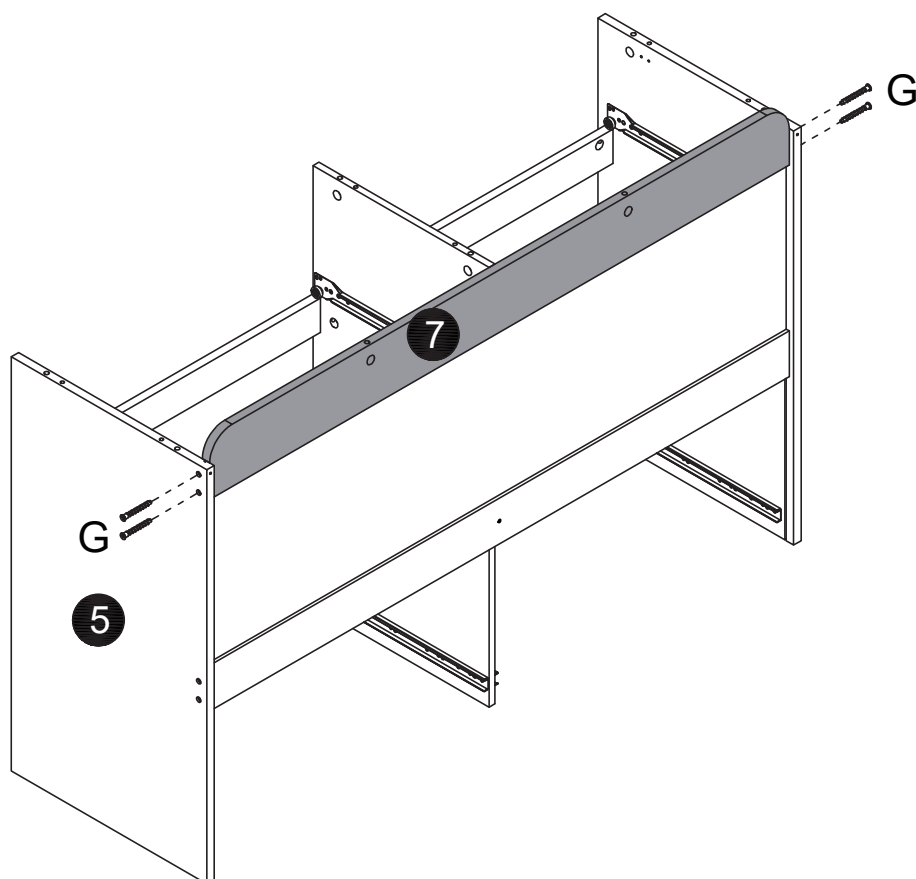

F x8

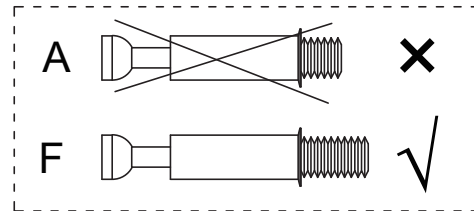

Caution : Need to use the correct part #F instead of part #A.

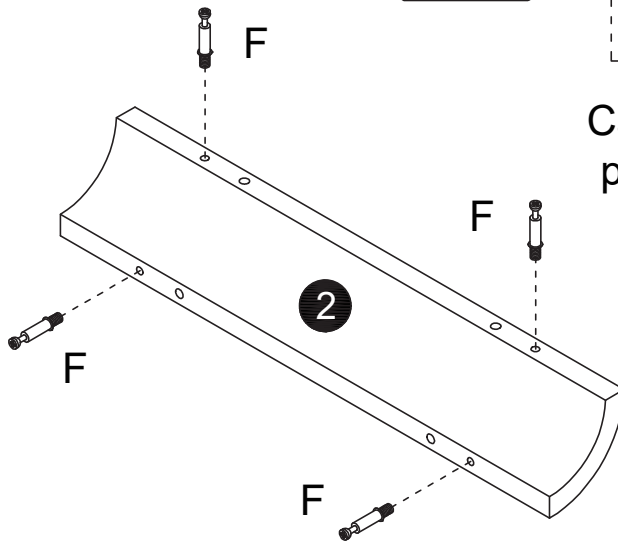




x2

B x4




C x4

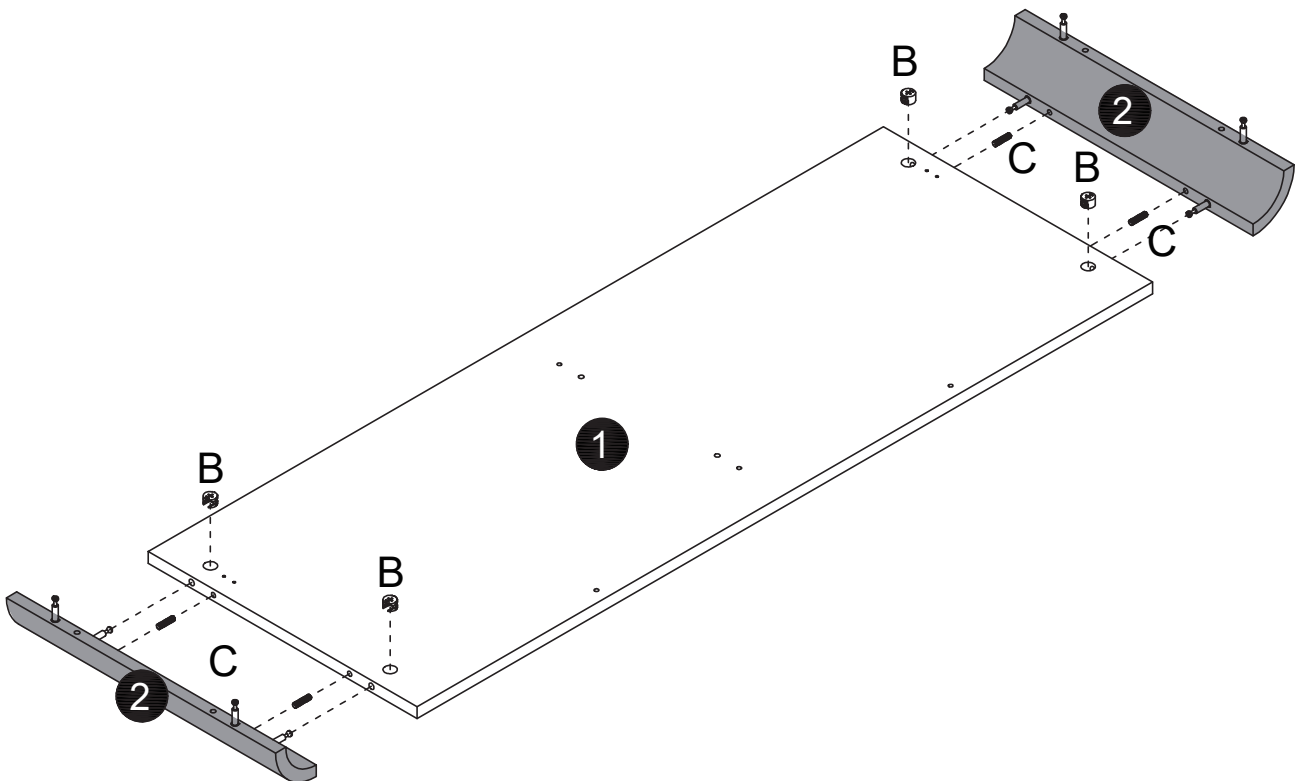


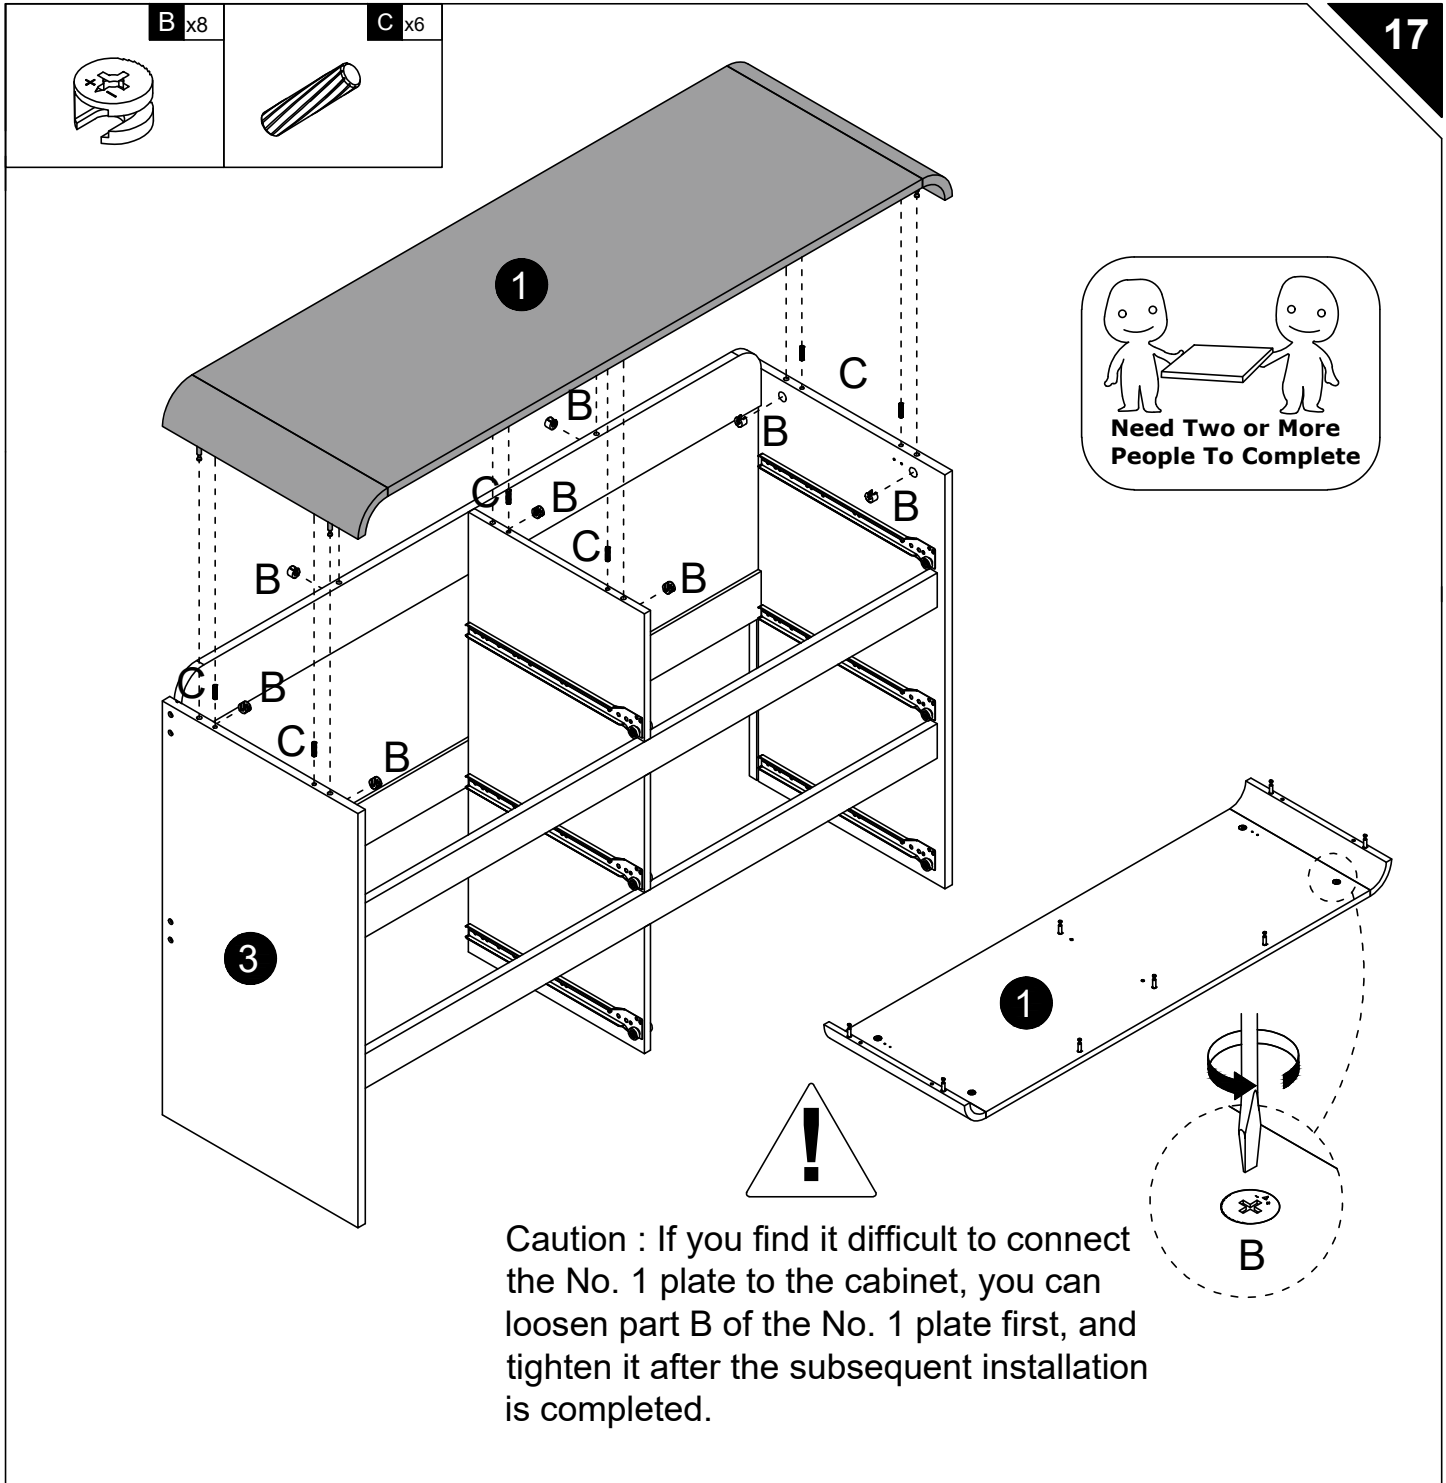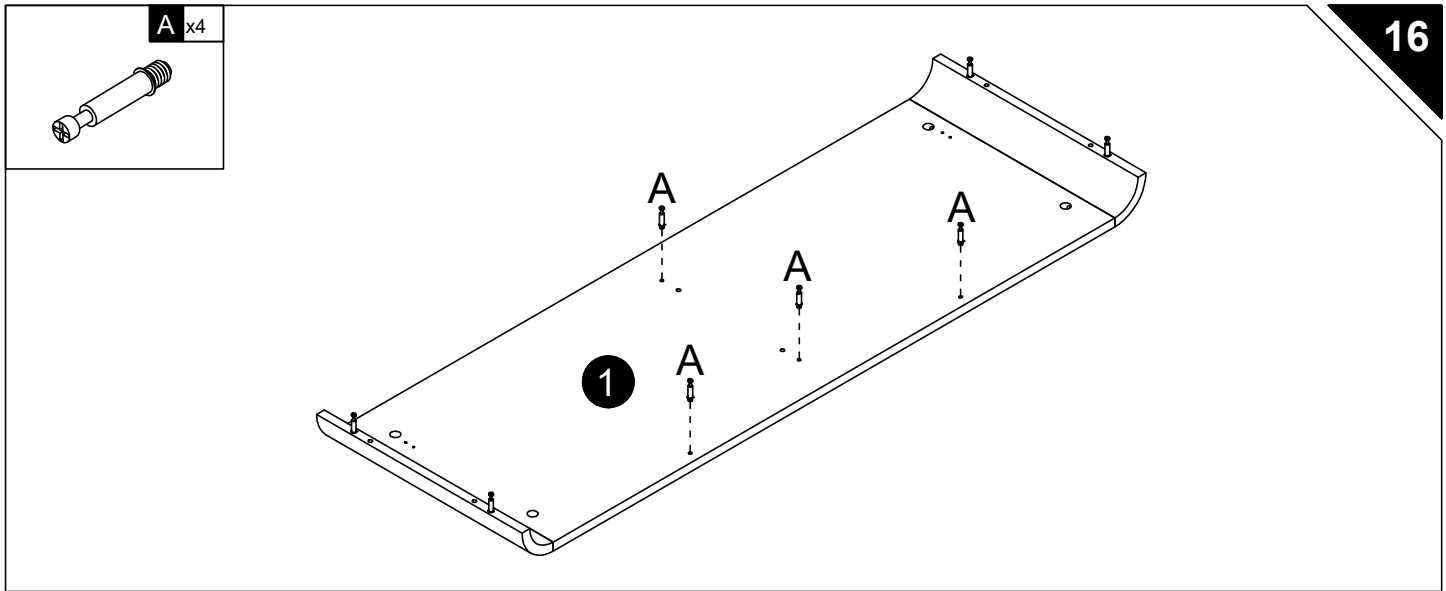

A x4



18

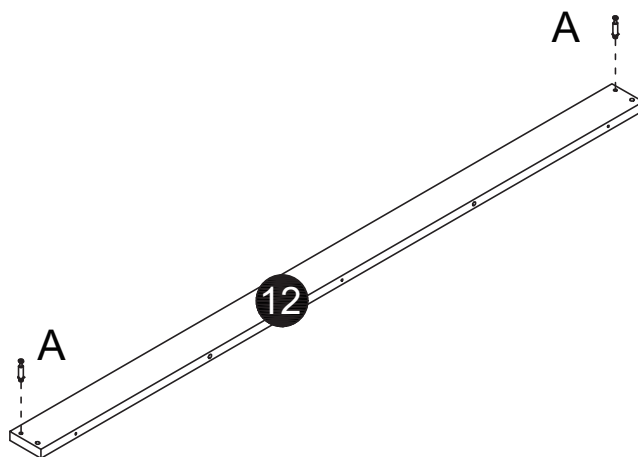

x2

B x4





C x12




I x10




19

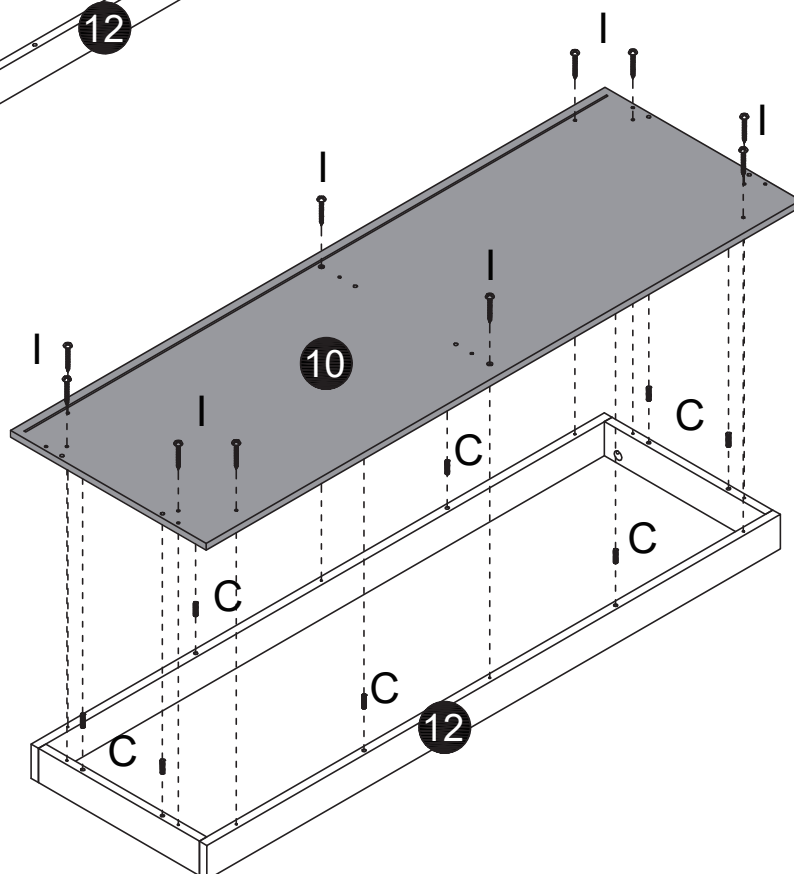
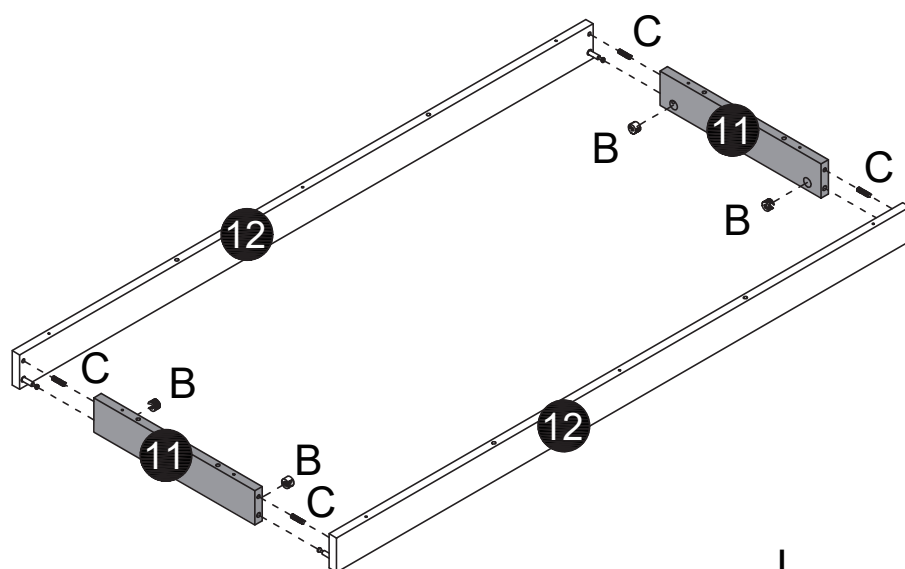



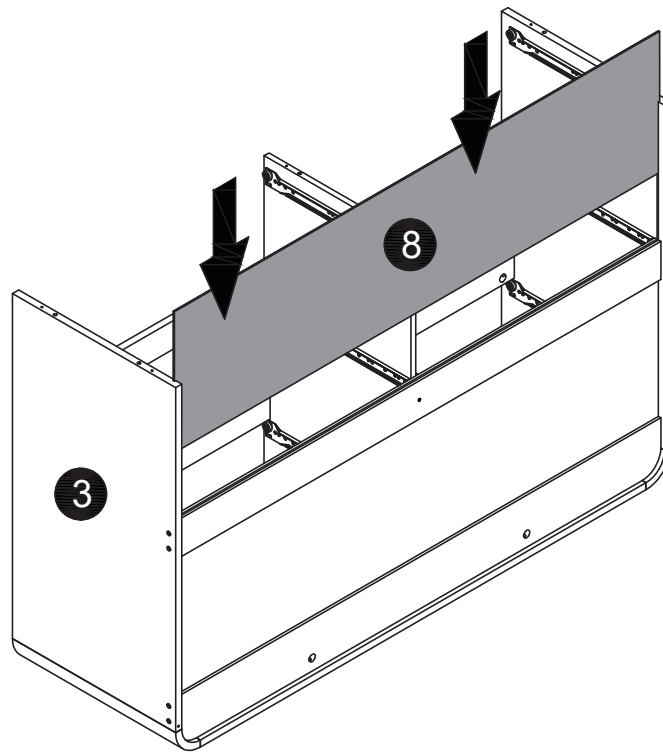


C x6

G x6

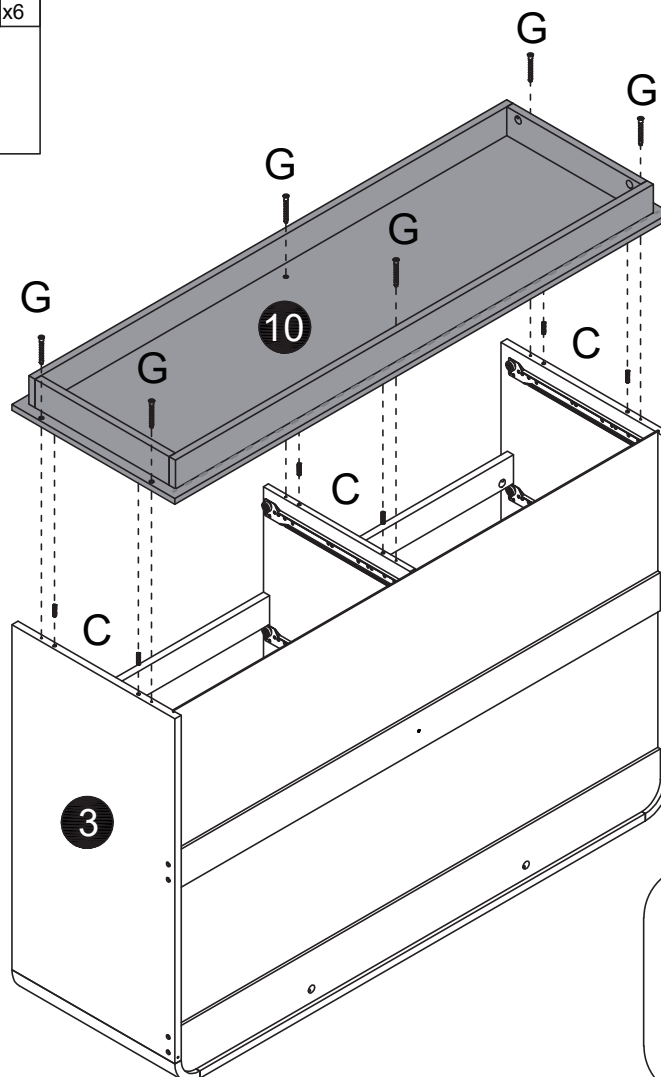


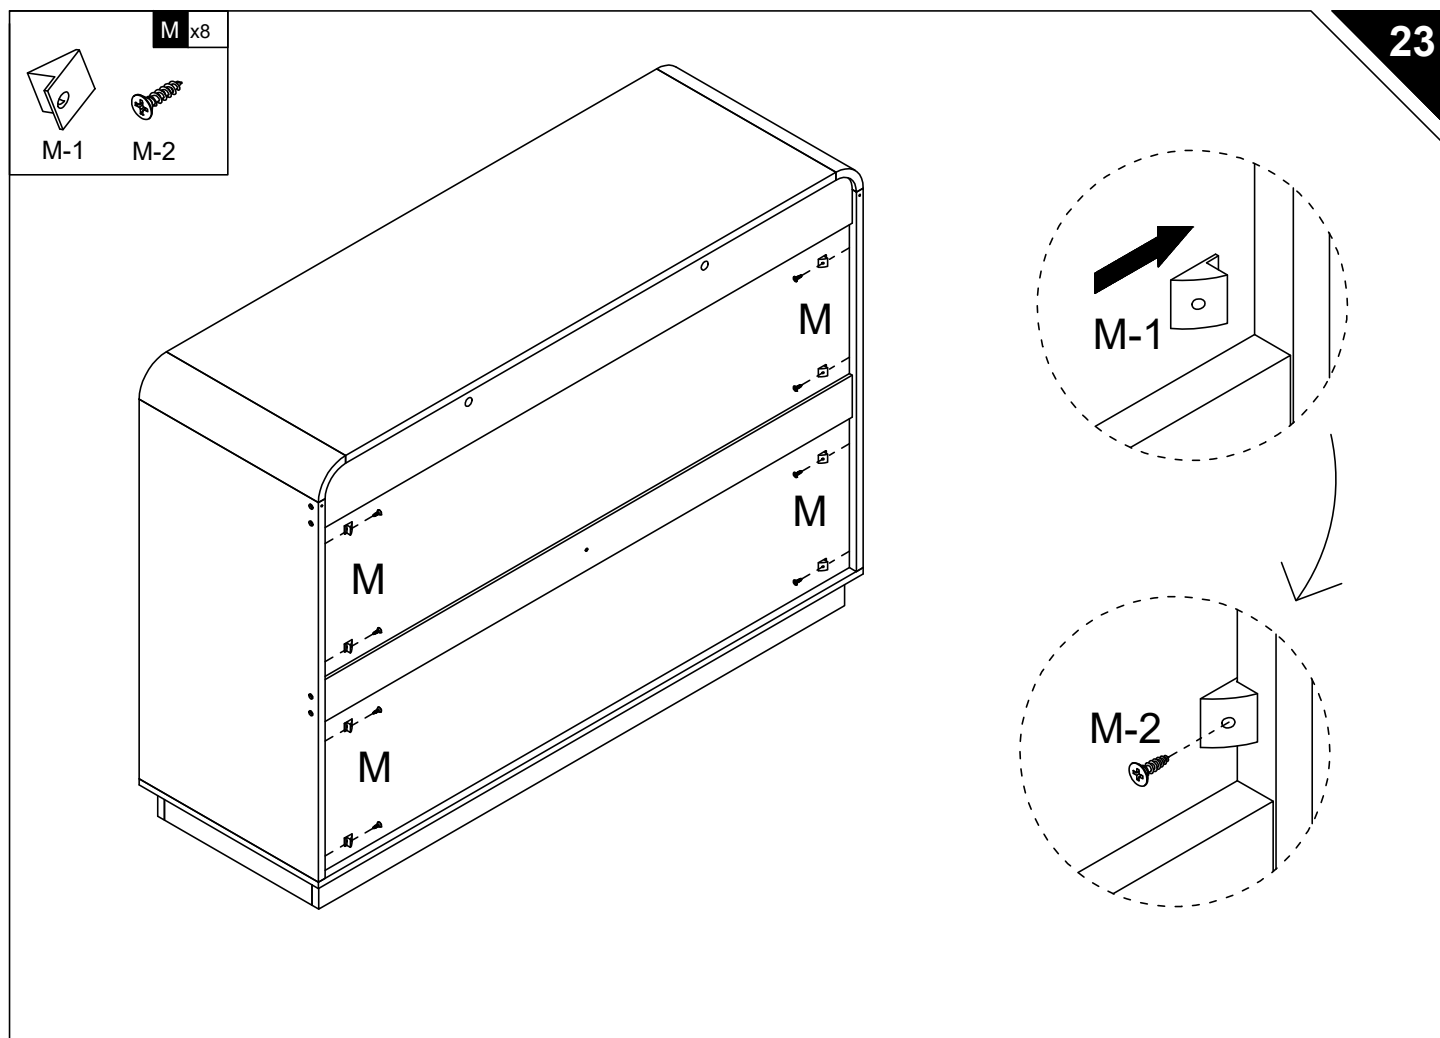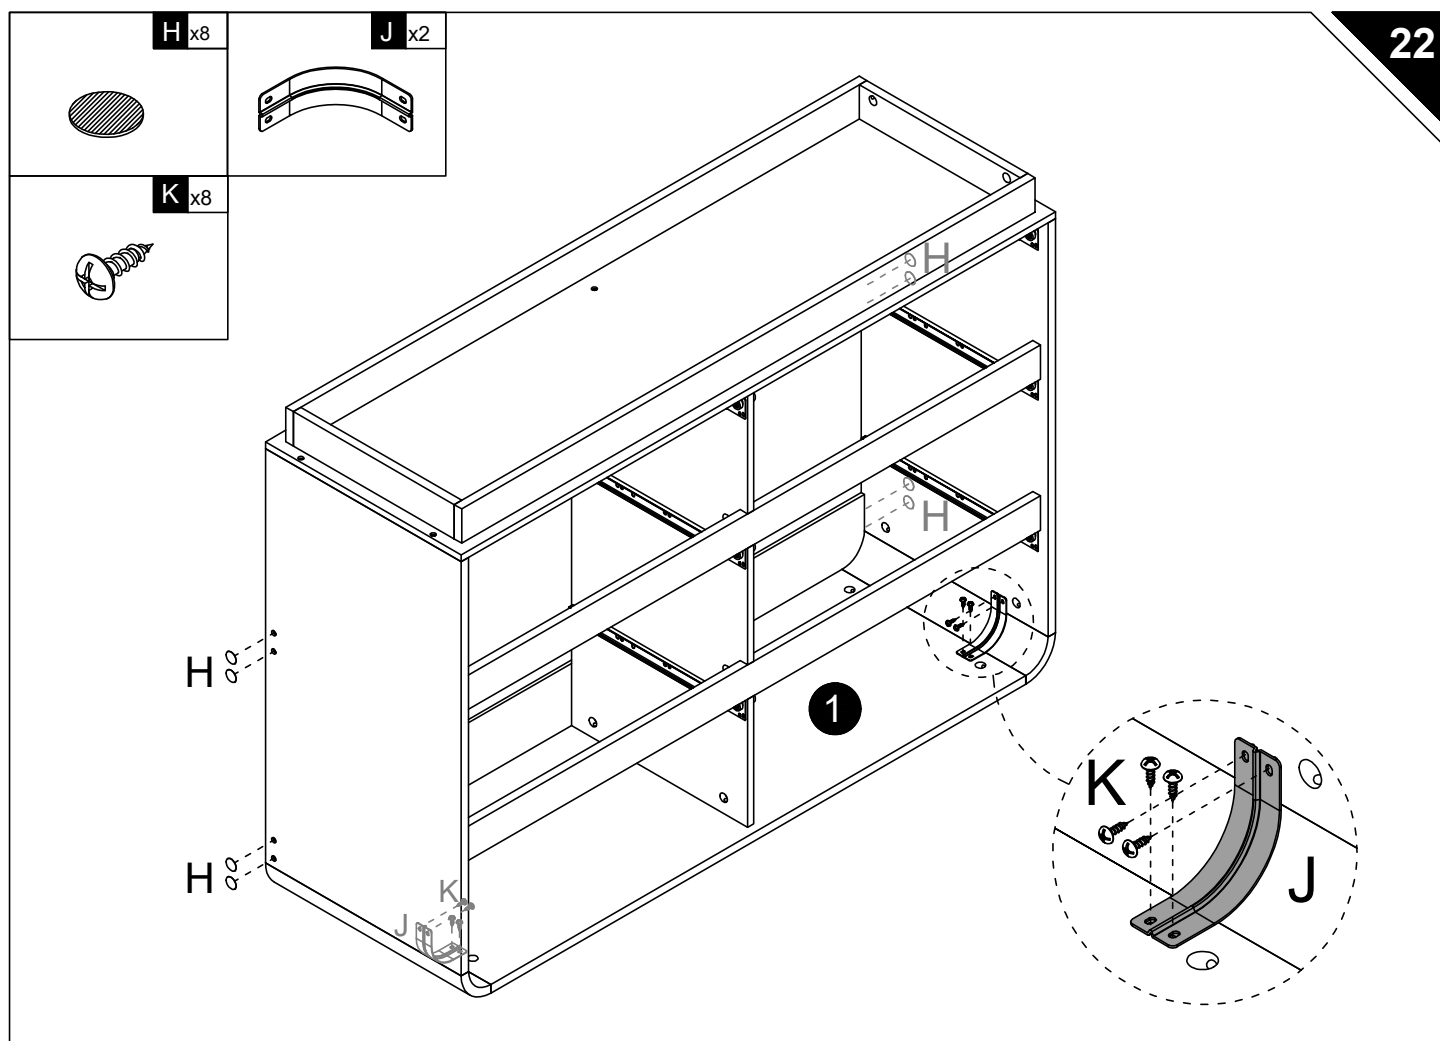

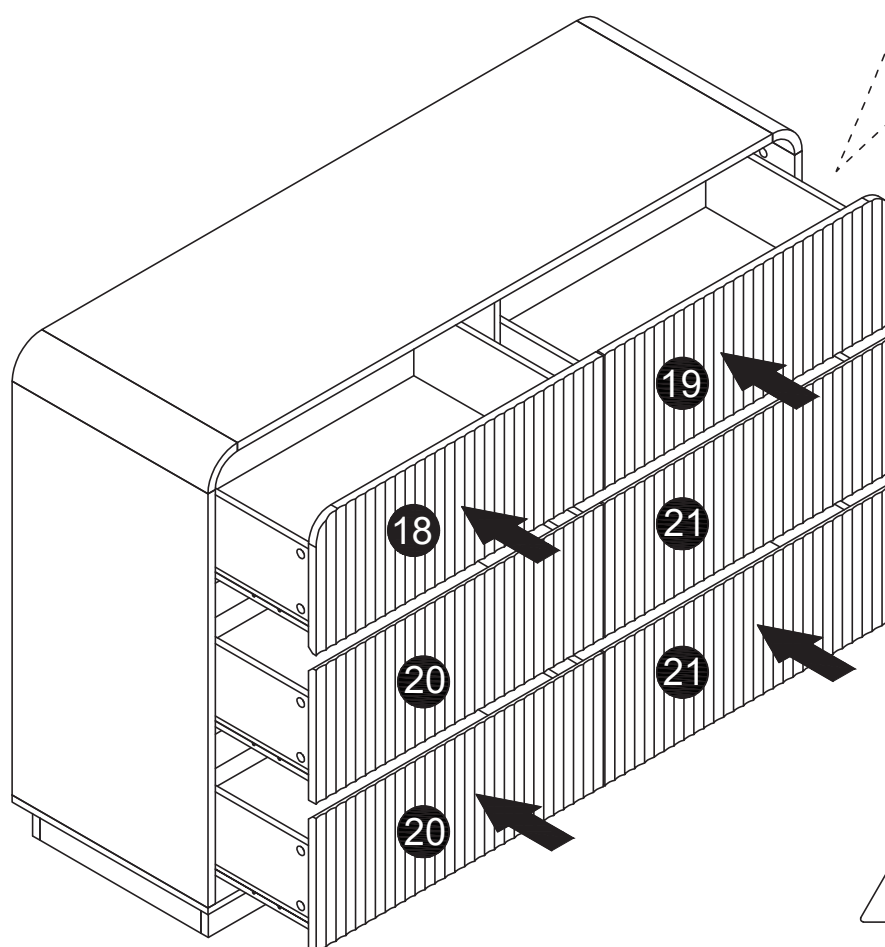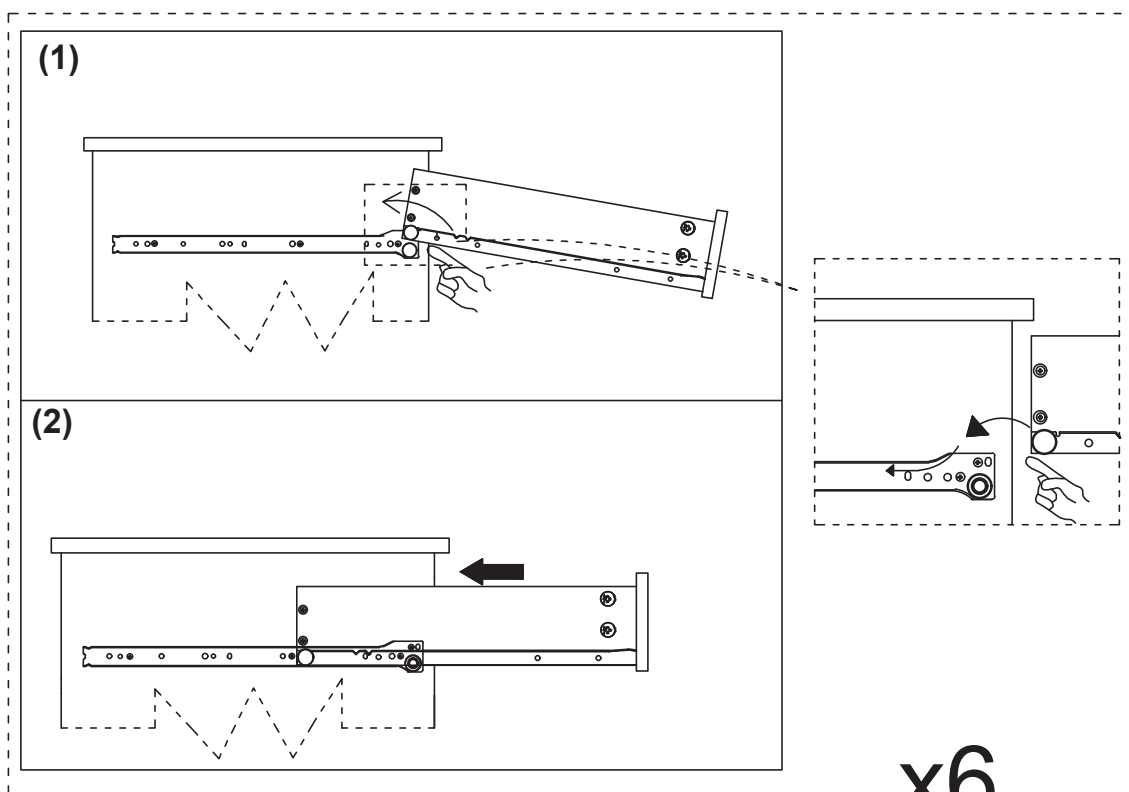


Caution : The drawers are differentiated on the left and right, please place them according to the corresponding numbers.

D x2



L x2




N x2




N-1


N-2

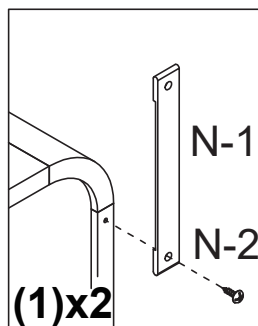


First fix the anti-rewind screw in the reserved hole of the product.

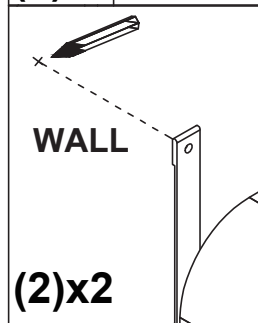


then, use a ruler to measure the approximate height of the product on the wall, and then mark it with a pen.

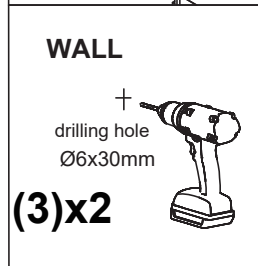

Then use a tape drill to make holes in the wall that are suitable for the product screws.

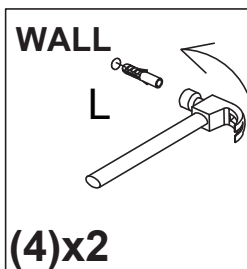

Then, put the expansion bolt into the hole

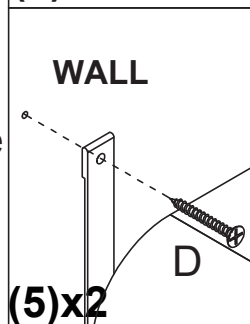

Finally, pass the matching screws through the "anti-rewind" and tighten them to fix them on the wall.

