


Hall Tree

Assembly Instructions - Please keep for future reference

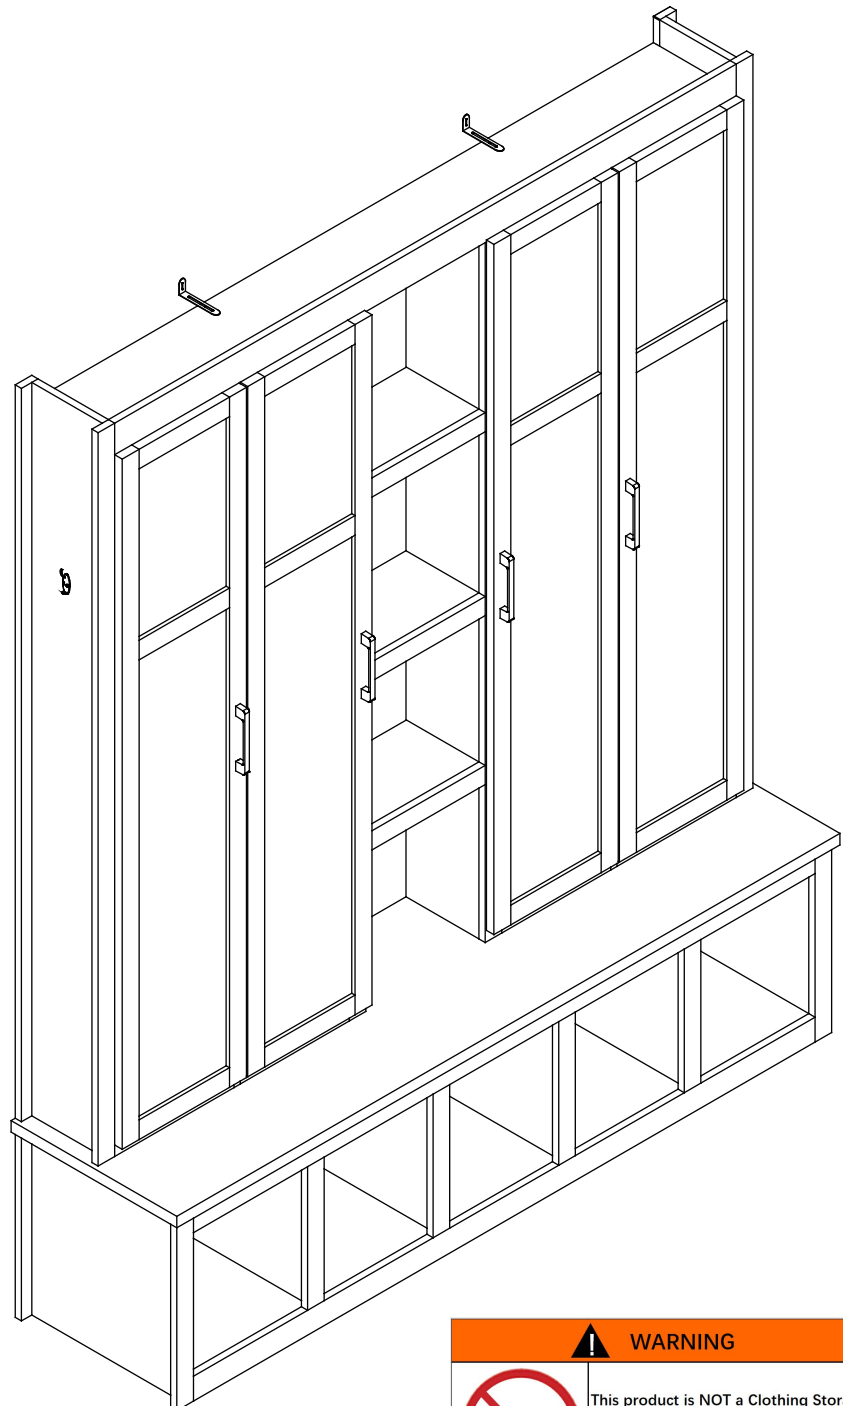

Dimensions

Width- 63inch

Depth- 15.75inch

Height- 76.77inch

⚠ WARNING	
	This product is NOT a Clothing Storage Unit (CSU). DO NOT use it for clothing storage. Improper use may cause furniture tipover.

Important – Please read these instructions fully before starting assembly



Safety and Care Advice

Important – Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



- To reduce the likelihood of damaging your product please ensure that your power drill is set on a low torque setting.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this unit.
- This product should not be discarded with household waste. Take to your local authority waste disposal centre.


Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure That all bolts and fittings are tightend properly.

WARNING
In order to help prevent overturning –
please follow these instructions

To help prevent product toppling over please follow the below steps:-

Use the anti tip stap or wall fixing method provided (if applicable)
Do not allow children to climb or hang on the furniture
Do not open more than one drawer at a time
Do not place heavy items in the top drawers
Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose








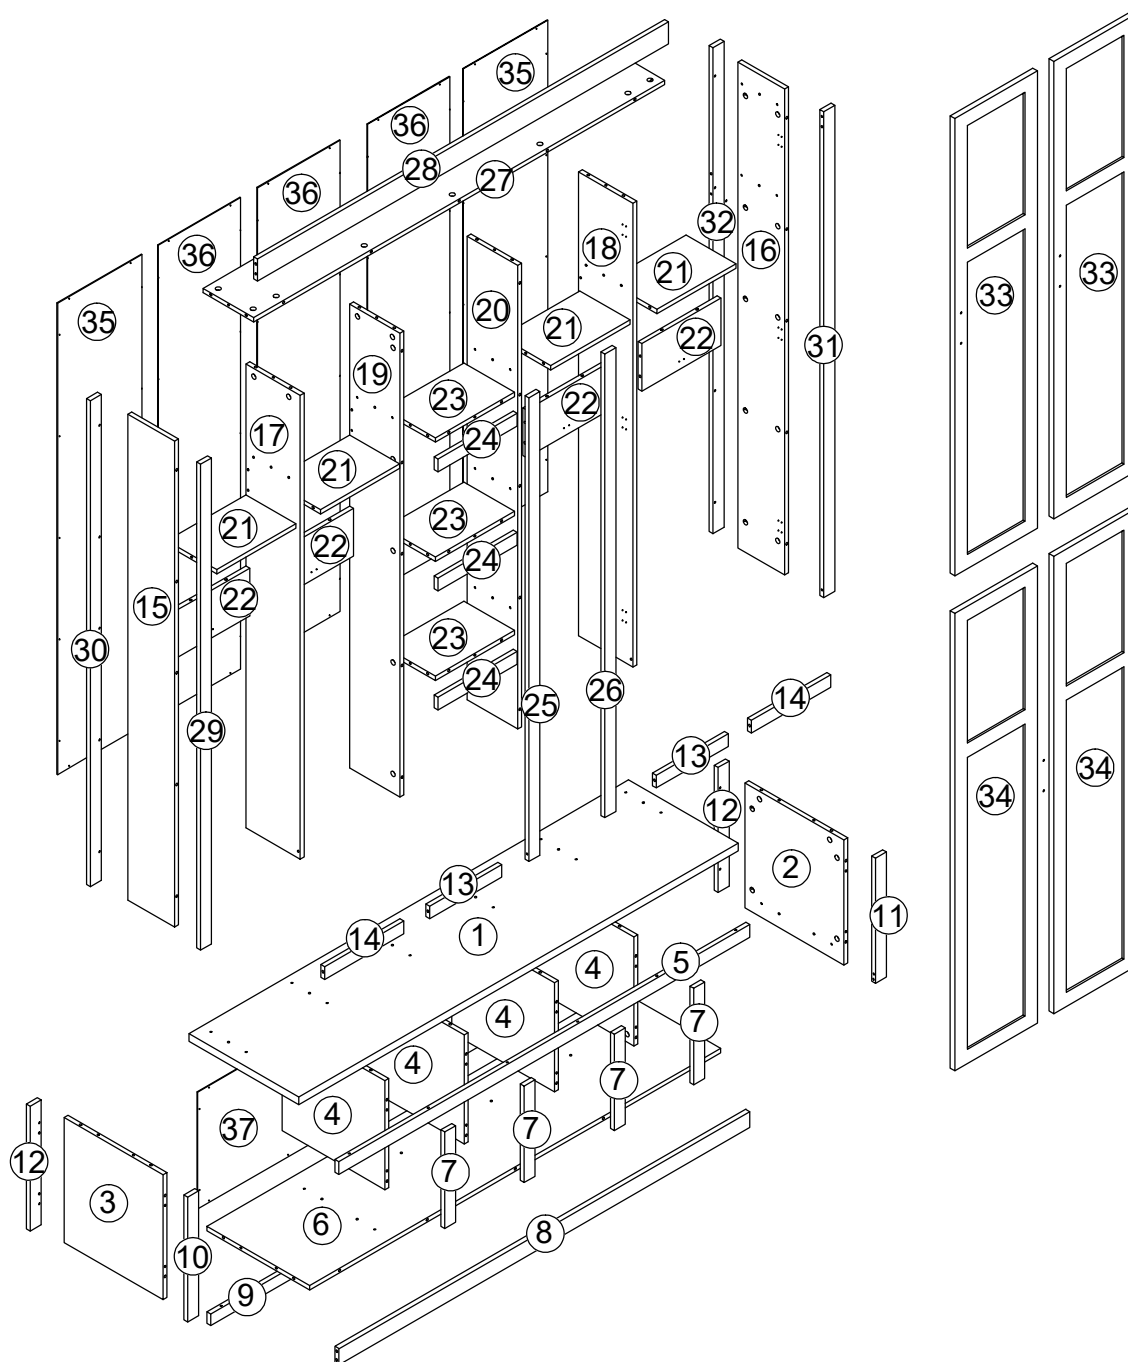


Components - Fittings


Please check you have all the panels listed below

Note: The quantities below are the correct amount to complete the assembly. In some cases more fittings may be supplied than are required.



Hardware List-Packed in Box 1

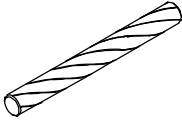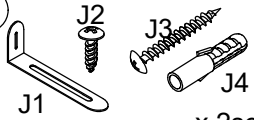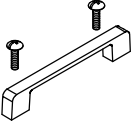(A)  Cam Bolt x 130+2	(B)  6*30mm Dowel x 75+2	(C)  Cam lock x 146+2	(D)  Cam Bolt x 8+2
(E)  6*50mm Dowel x 4+1	(F)  Hook x 6	(G)  4*40mm Screw x 8+2	(H)  3.5*15mm Screw x 66+2
(I)  4*50mm Screw x 20+2	(J)  Hook x 2set	(K)  Hinge x 12	(L)  4*21mm Handle x 4set
(M)  Ø21 pvc x 100+2	(N)  Nail-on glide x 12	(O)  3.5*15mm Screw x 72+2	(P)  Allen key x 1
(Q)  3.5*15mm Screw x 12+2			

Tools required Not Included



Phillips screwdriver
(medium & large)

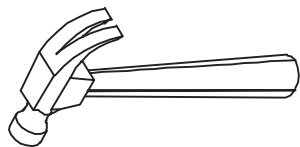


Using Camlocks

Step 1

Connect the male camlock as directed in the assembly instructions using a screwdriver.

1


DO NOT OVER TIGHTEN.
NE PAS SERRER EXCESSIVEMENT.

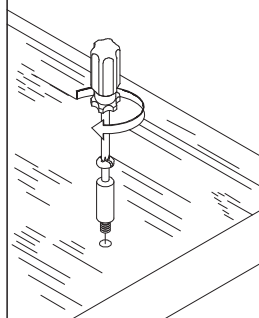

Step 2

Push the male camlock into the entry hole.

2

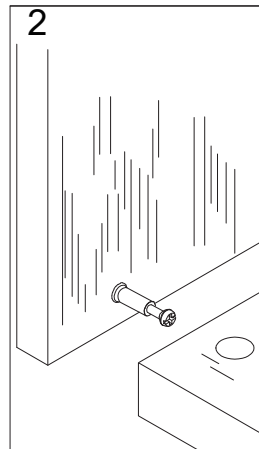


Step 3

Insert the female camlock as shown in the instruction.

Note: ensure that the arrow on the top of the camlock points towards the entry hole for the male camlock.

3

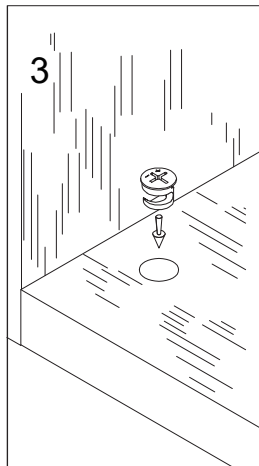


Step 4

Turn the female camlock clockwise with a screwdriver.

You should feel a click when the camlock is locked in place.










The joint is now secure.

4

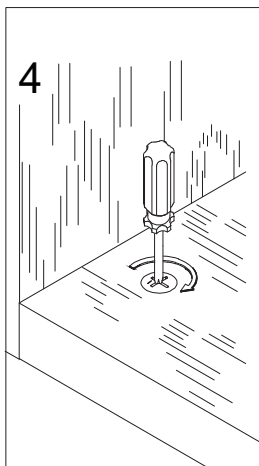

PART LIST


This product comes in 2 boxes.
N721P286078

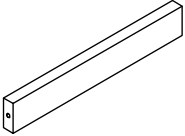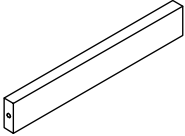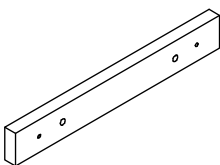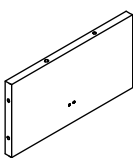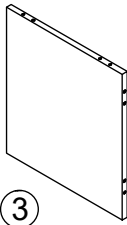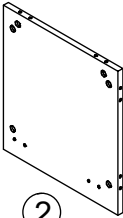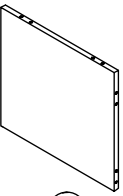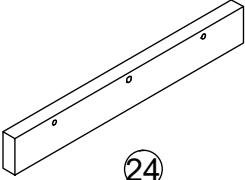				
⑭ x2 288x40x14mm	⑬ x2 262x40x14mm	⑦ x4 304x40x14mm	②② x4 288x150x14mm	②⑤ x1 1462x40x14mm
				
②⑥ x1 1462x40x14mm	③⑤ x2 1486x307x2.5mm	③⑥ x3 1486x300x2.5mm	③ x1 394x360x14mm	② x1 394x360x14mm
				
④ x4 344x374x14mm	①② x2 394x40x14mm	①⑩ x1 394x40x14mm	①① x1 394x40x14mm	
				
①⑨ x1 1462x184x14mm	③④ x2 1442x300x17mm	③③ x2 1442x300x17mm	②④ x3 288x40x14mm	

PART LIST

This product comes in 2 boxes.


N721P286078

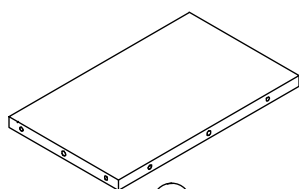

23

x3


288x184x14mm

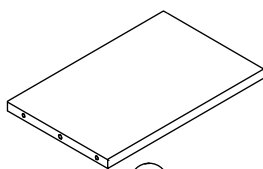

21

x4








288x182x14mm





Hardware kit x1

PART LIST




This product comes in 2 boxes.
N721P286079

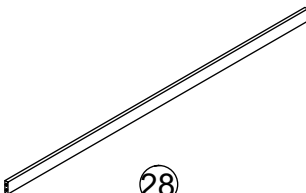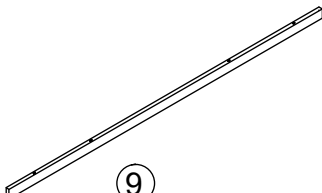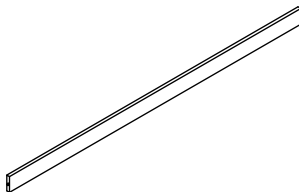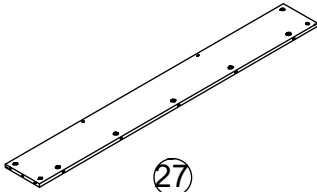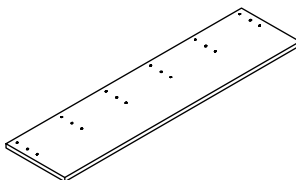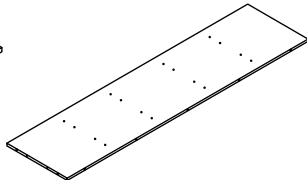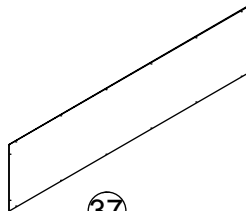 ②① x1 1462x184x14mm	 ①⑦ x1 1462x198x14mm	 ①⑧ x1 1462x198x14mm	 ①⑤ x1 1532x170x14mm	 ①⑥ x1 1532x170x14mm
 ②⑧ x1 1496x70x14mm	 ⑨ x1 1496x36x14mm	 ⑧ x1 1496x50x14mm	 ②⑦ x1 1496x184x14mm	
 ⑤ x1 1496x40x14mm	 ②⑨ x1 1532x40x14mm	 ③① x1 1532x40x14mm	 ③① x1 1532x40x14mm	 ③② x1 1532x40x14mm
 ① x1 1600x400x24mm	 ⑥ x1 1496x374x14mm	 ③⑦ x1 1522x368x2.5mm		



Step 1

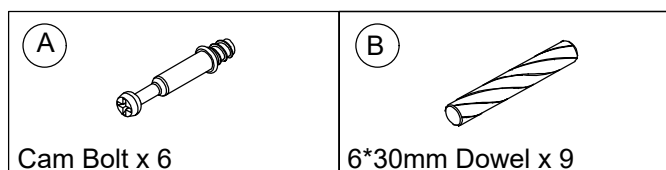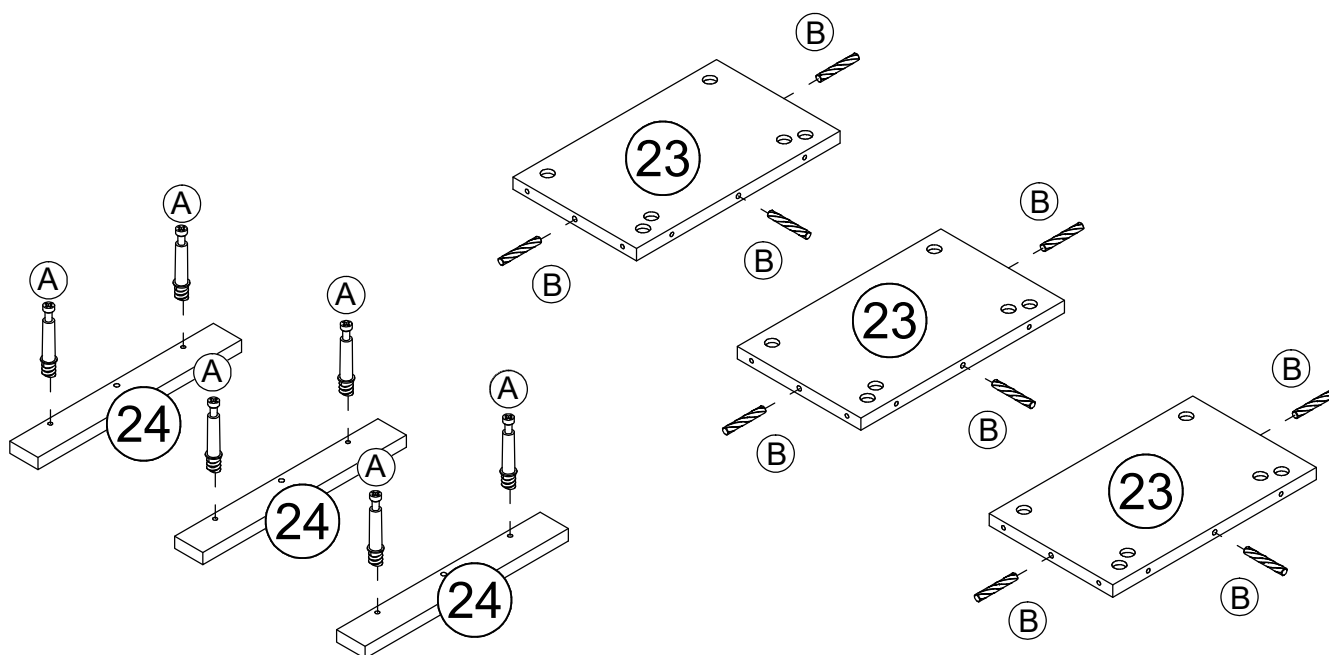



Step 2

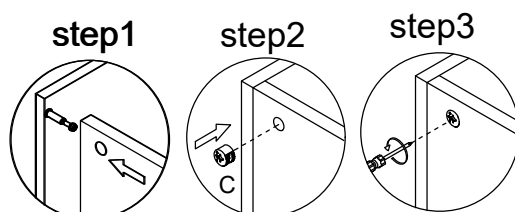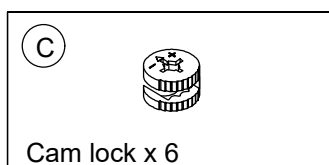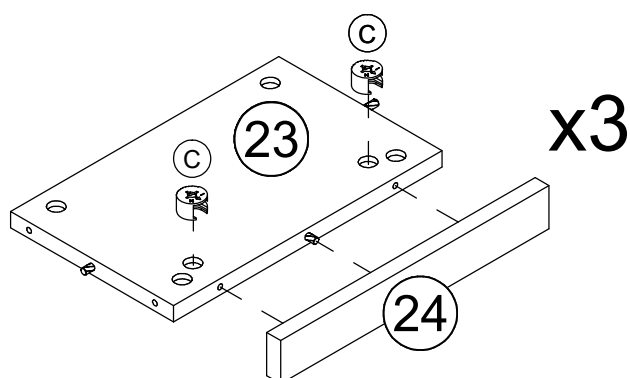

Step 3

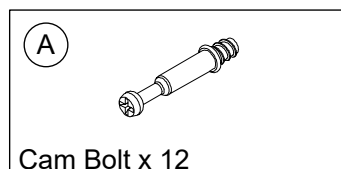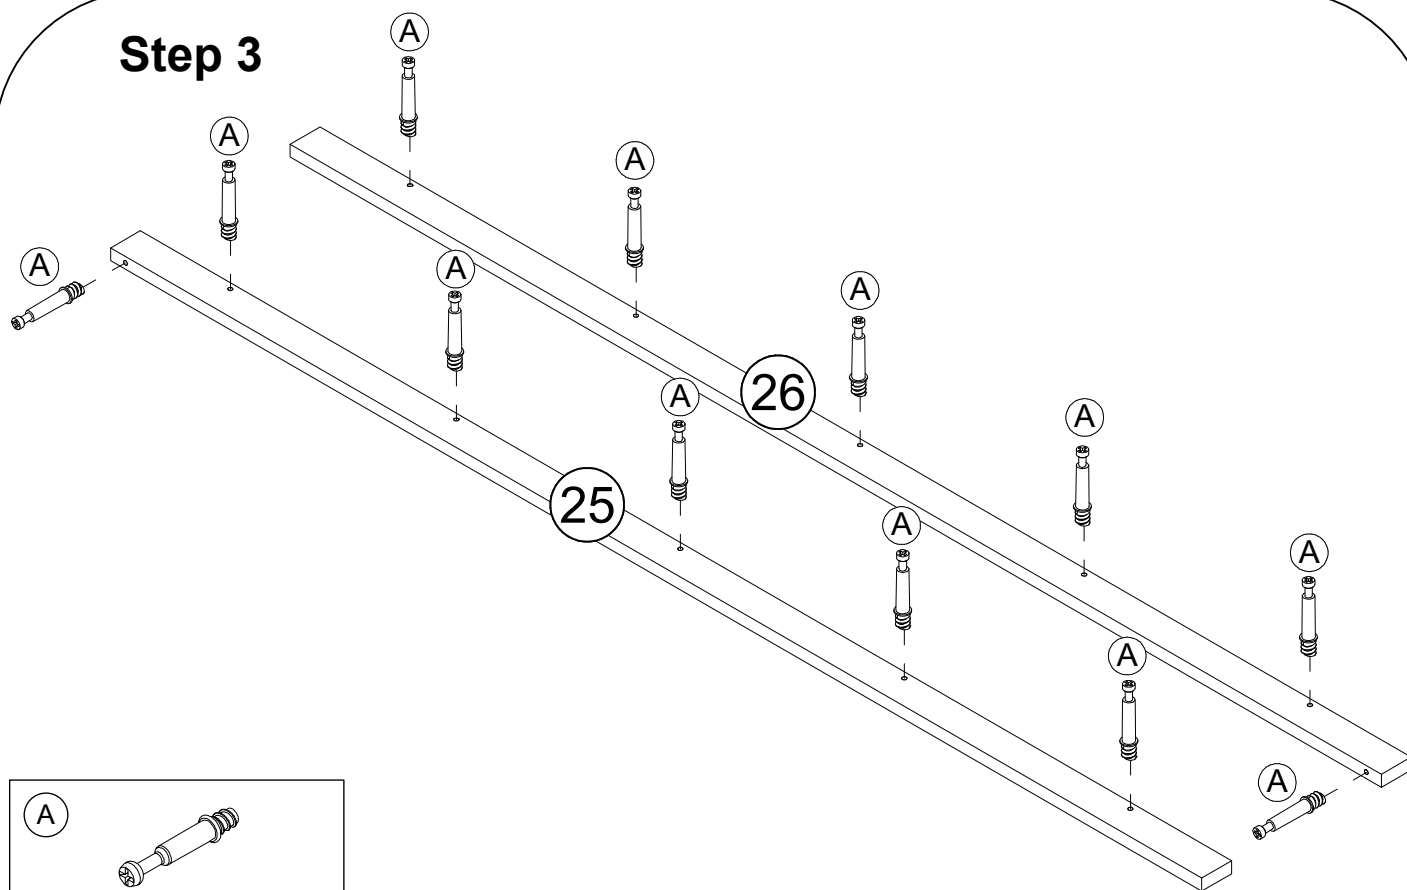


Step 4

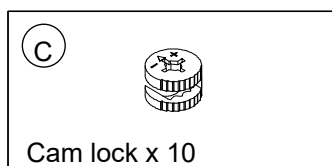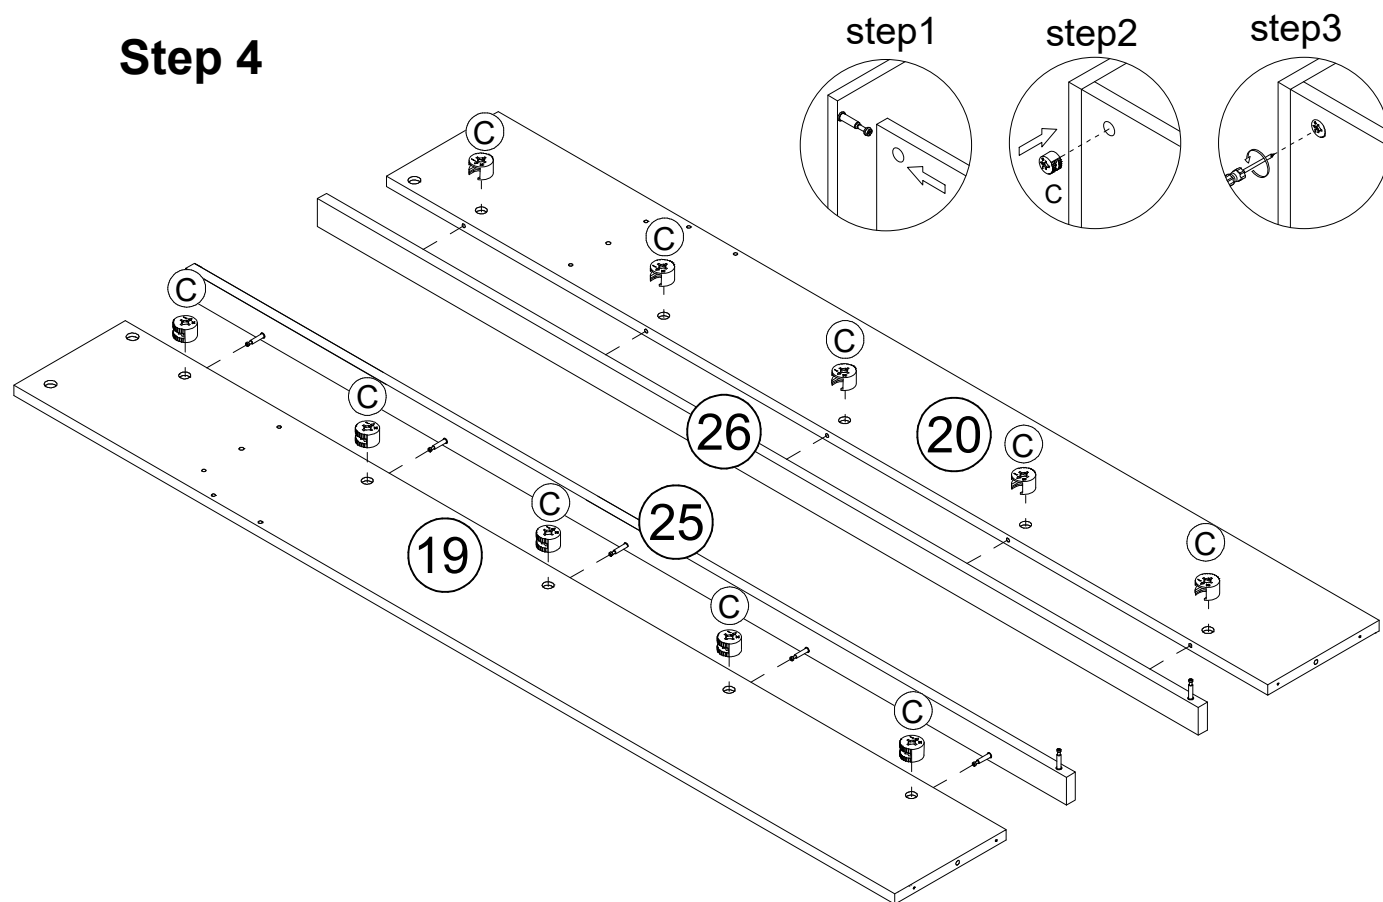


Step 5

Please flip carefully!

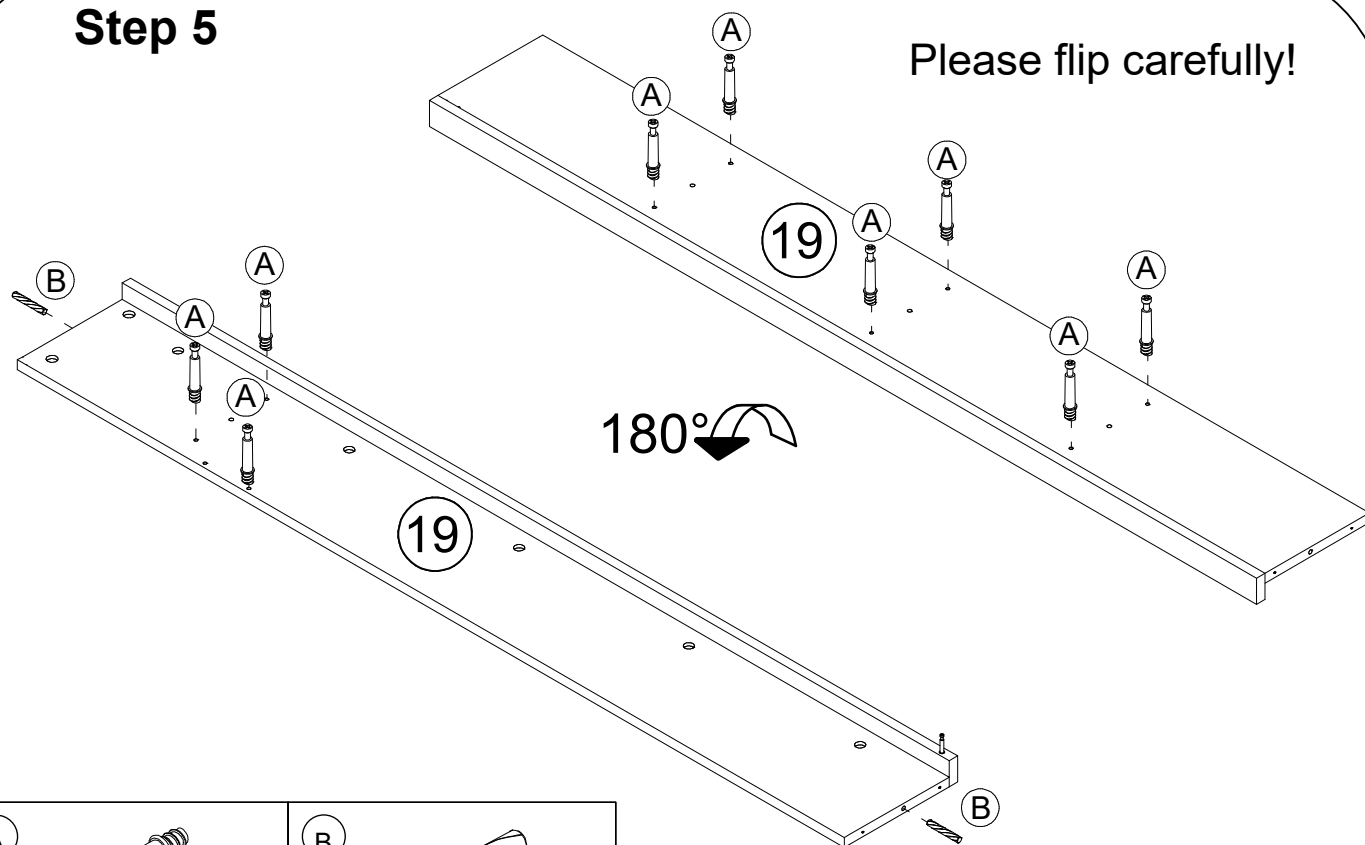

180°

A



Cam Bolt x 9


B



6*30mm Dowel x 2


Step 6

Please flip carefully!

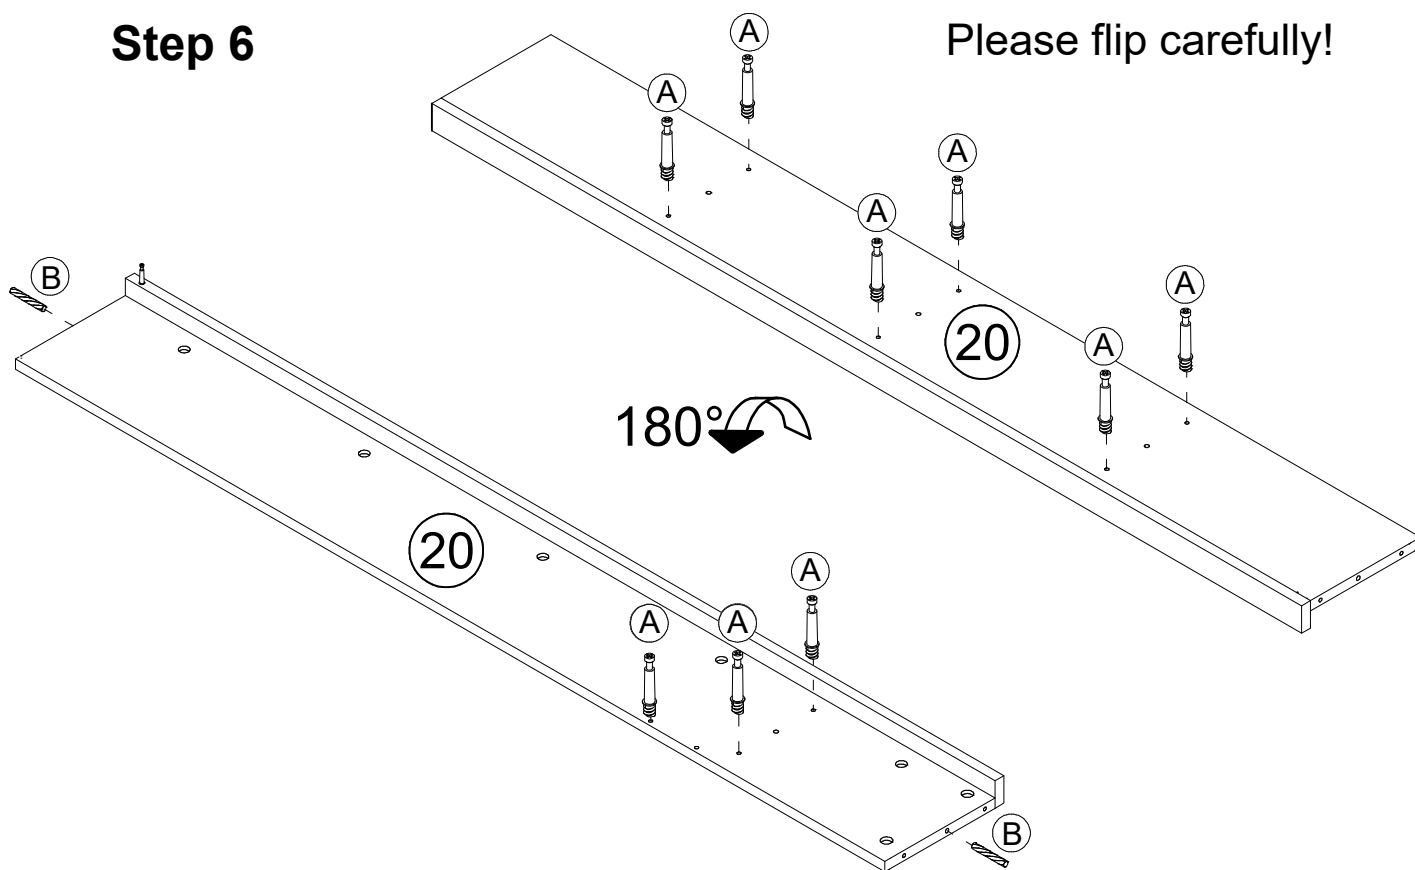

180°

A






Cam Bolt x 9

B






6*30mm Dowel x 2



Step 7

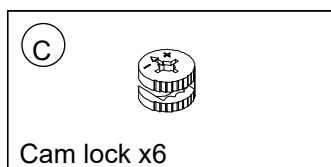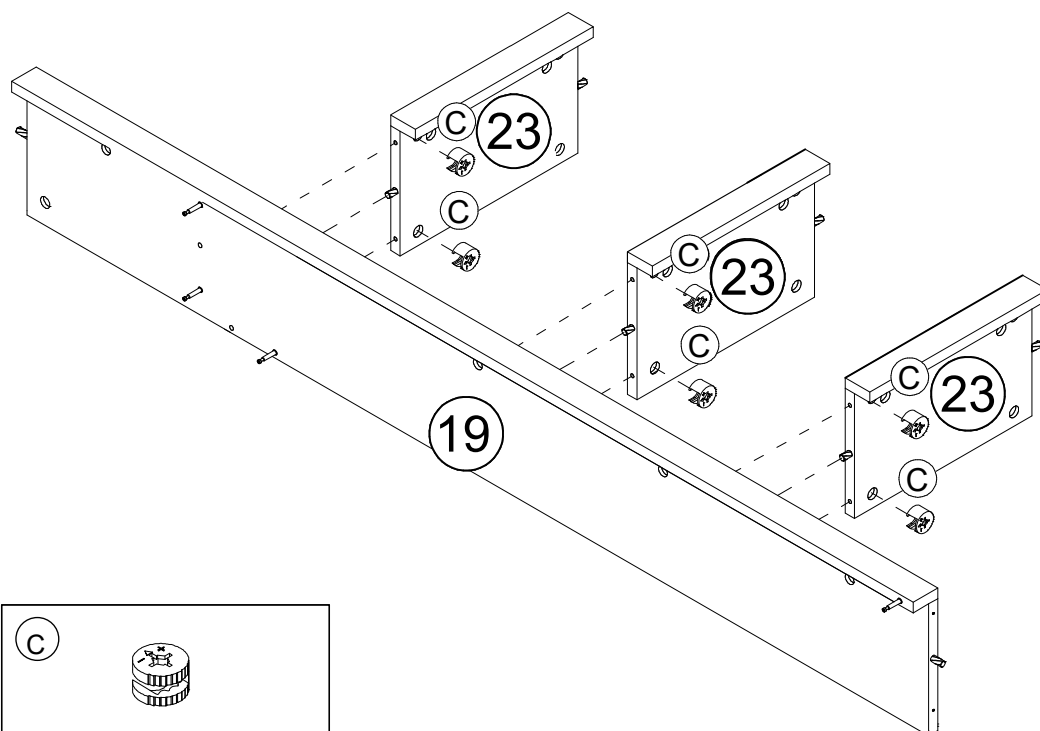
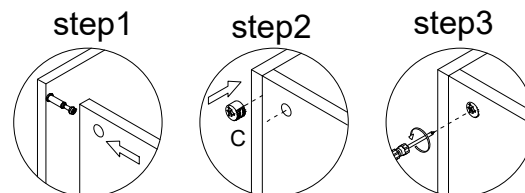


Step 8

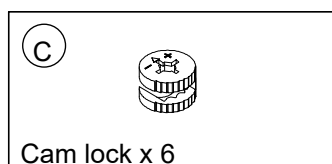
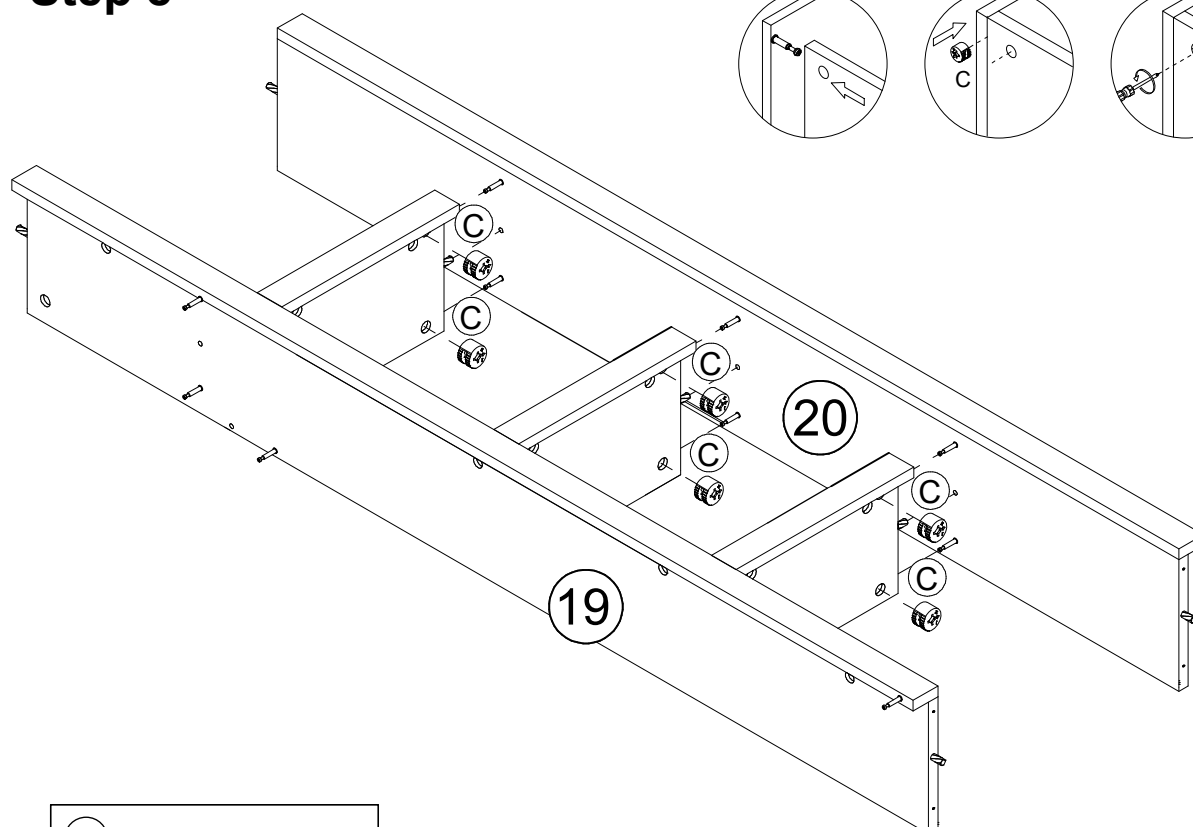
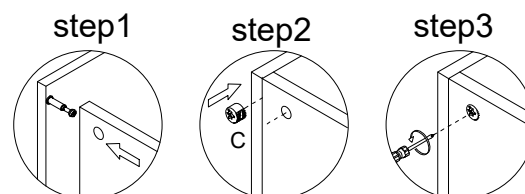


Step 9


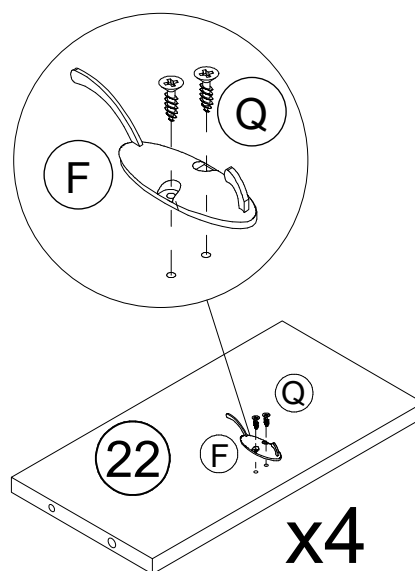
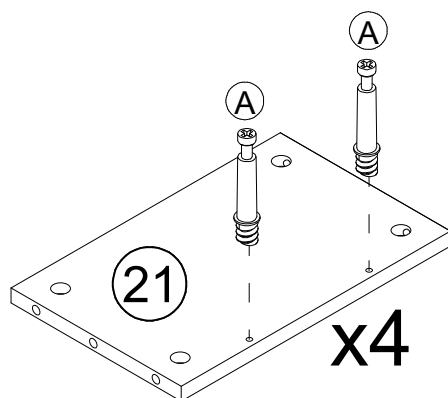



(A)  Cam Bolt x 8	(F)  Hook x 4	(Q)  3.5*15mm Screw x 8
---	---	---

Step 10

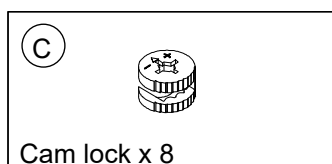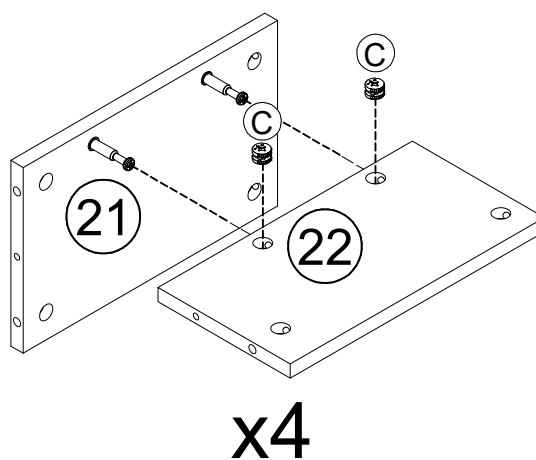
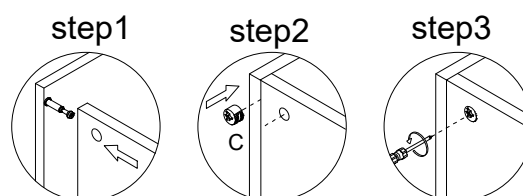


Step 11

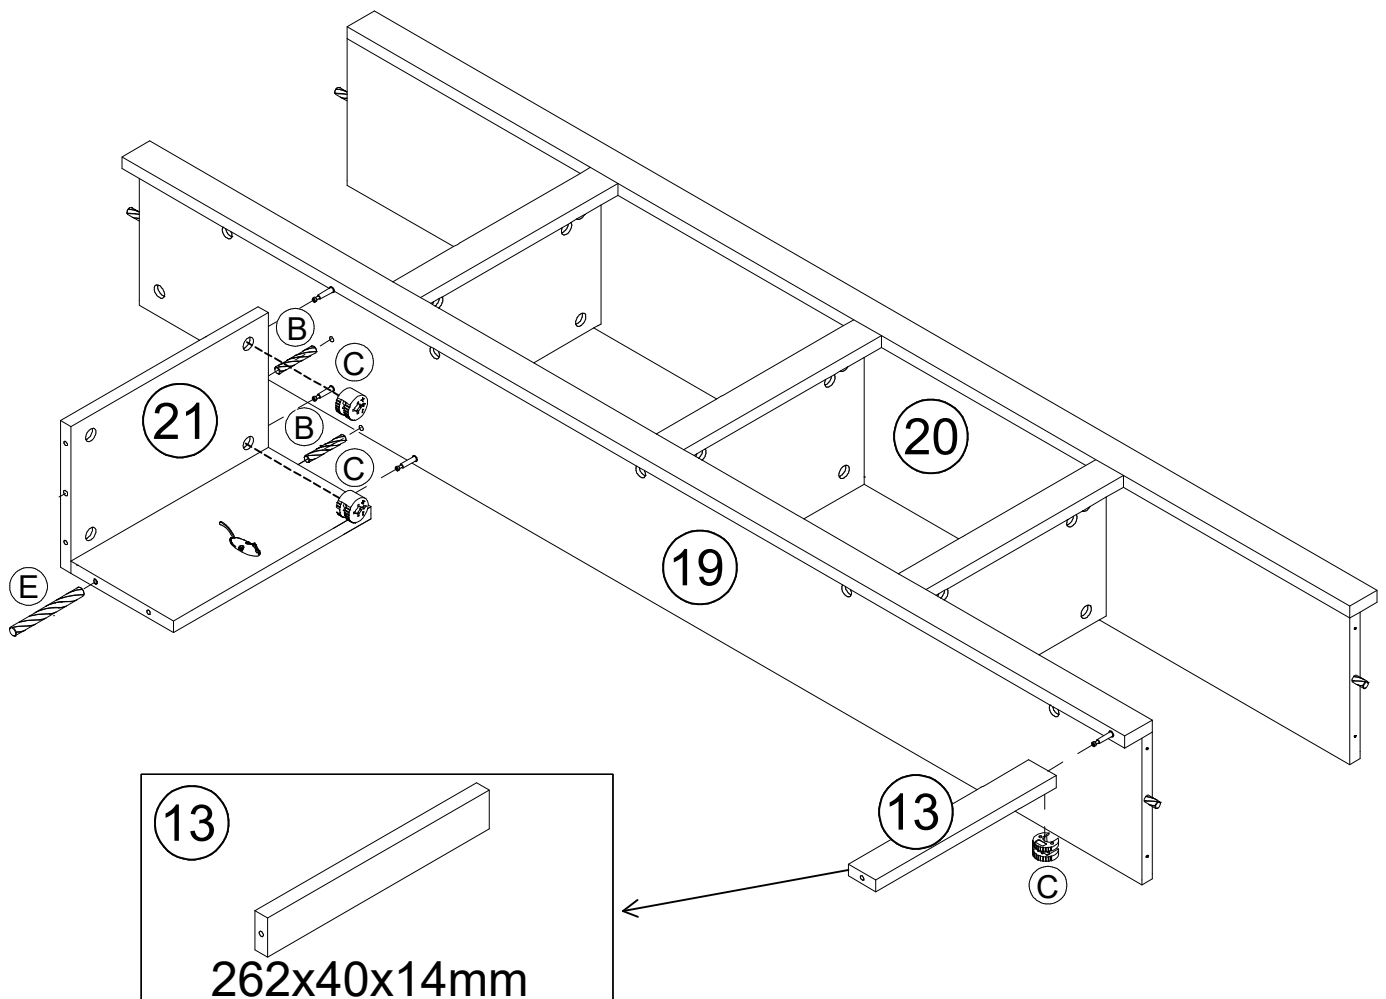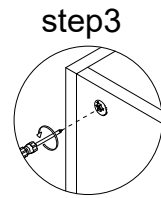
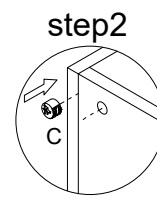


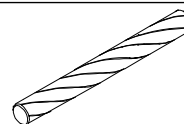(C)  Cam lock x 3	(B)  6*30mm Dowel x 2	(E)  6*50mm Dowel x 1
--	--	---



Step 12

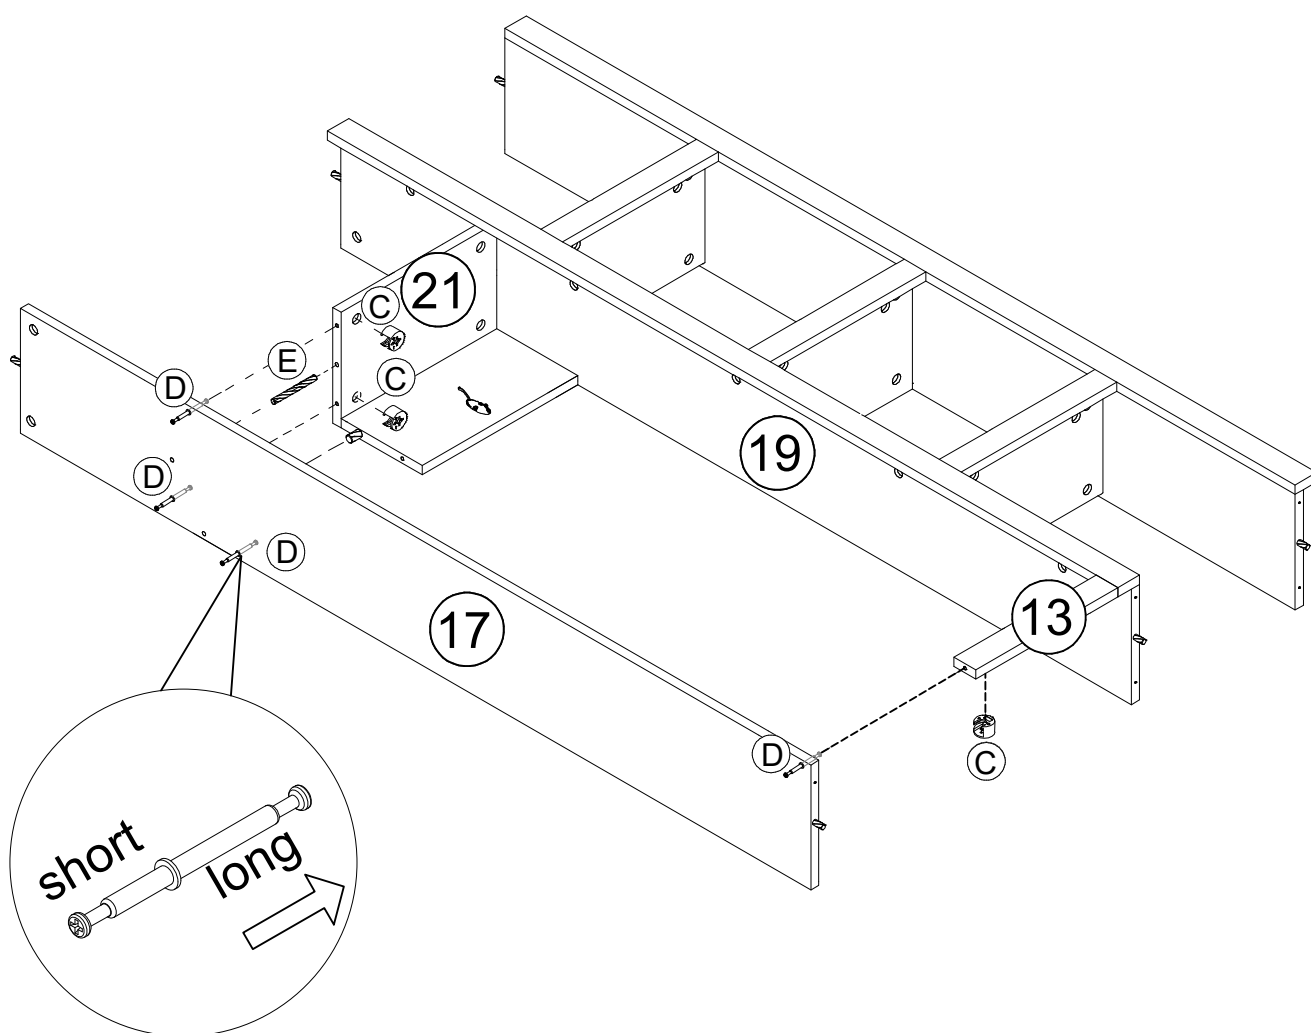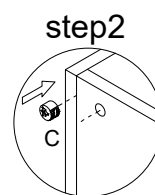


Please Insert the long end from the left side first.

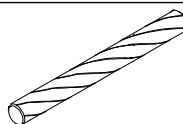

(C)  Cam lock x 3	(E)  6*50mm Dowel x 1	(D)  Cam Bolt x 4
--	--	---

Step 13

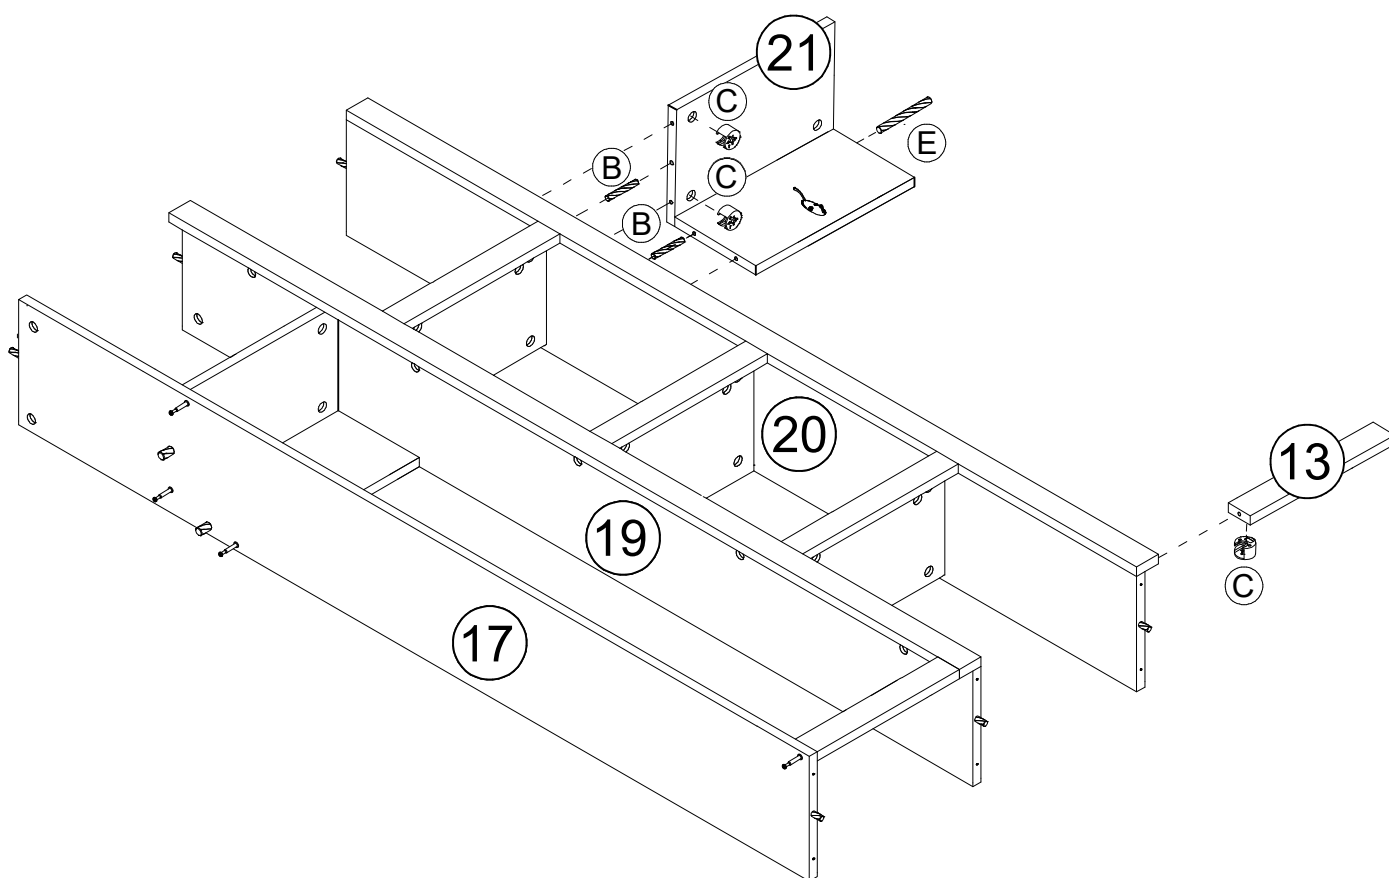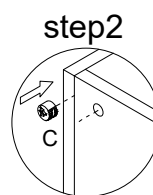


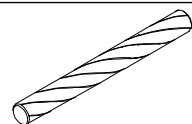(C)  Cam lock x 3	(B)  6*30mm Dowel x 2	(E)  6*50mm Dowel x 1
--	--	---

Step 14

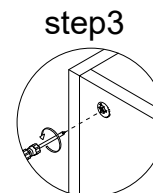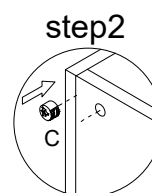

Please Insert the long end from the right side first.

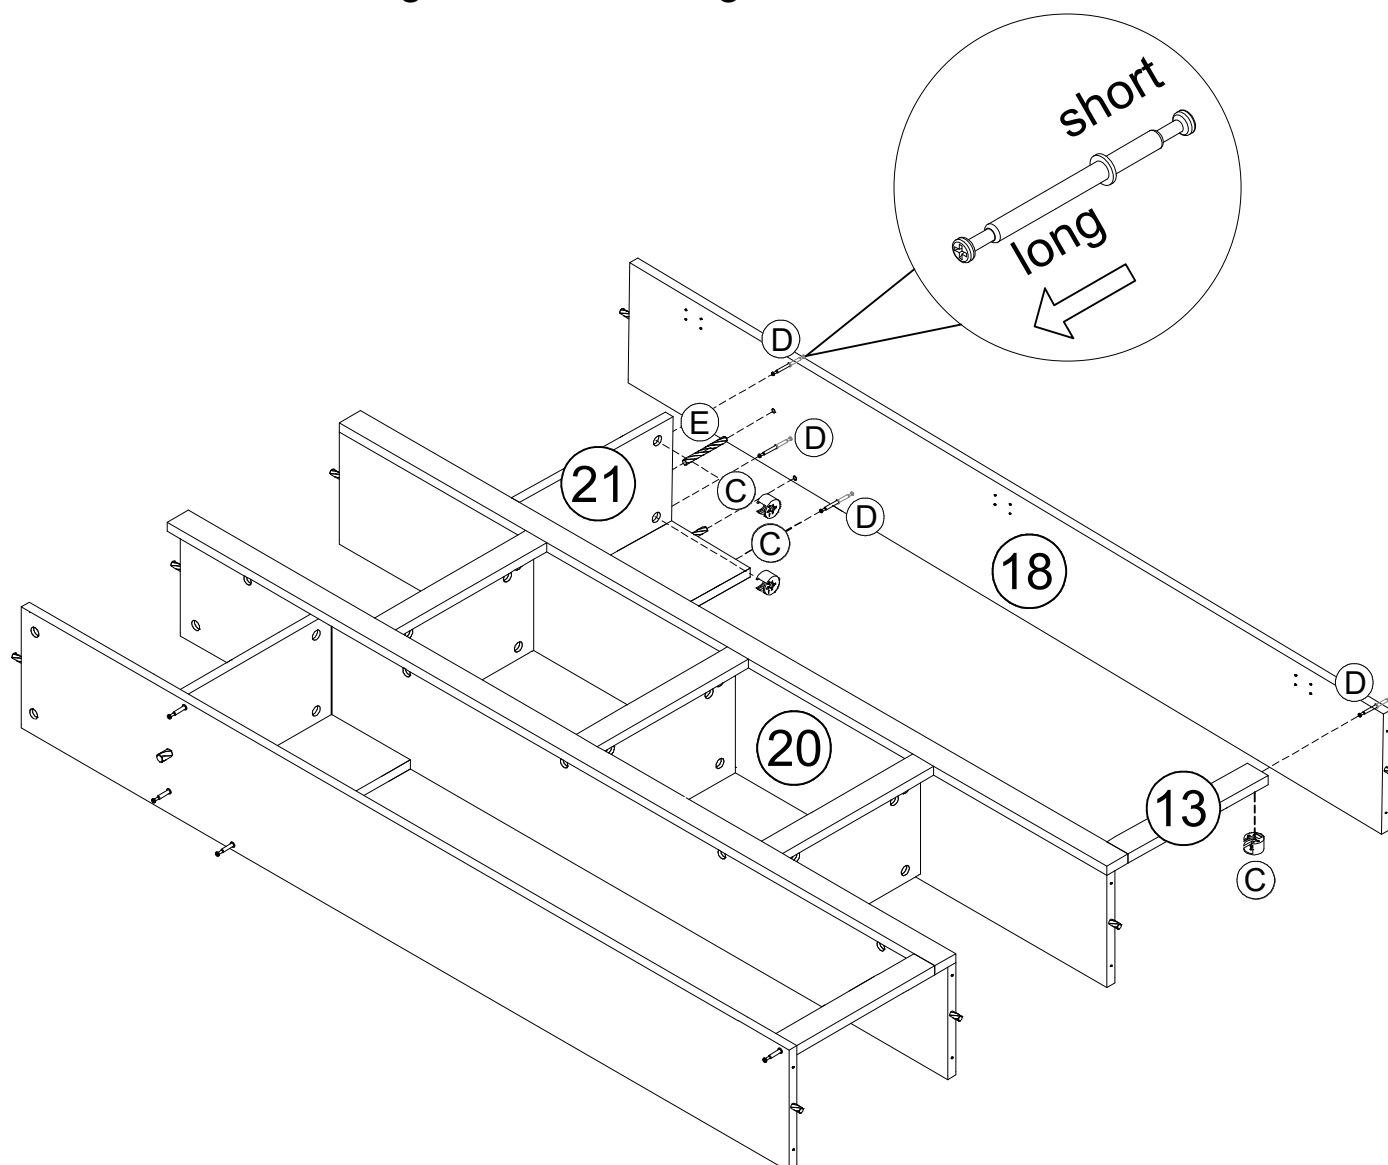


(C)




Cam lock x 3

(E)

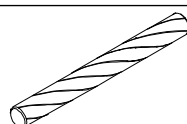



6*50mm Dowel x 1

(D)





Cam Bolt x 4

Step 15


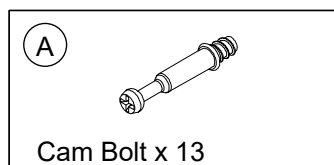
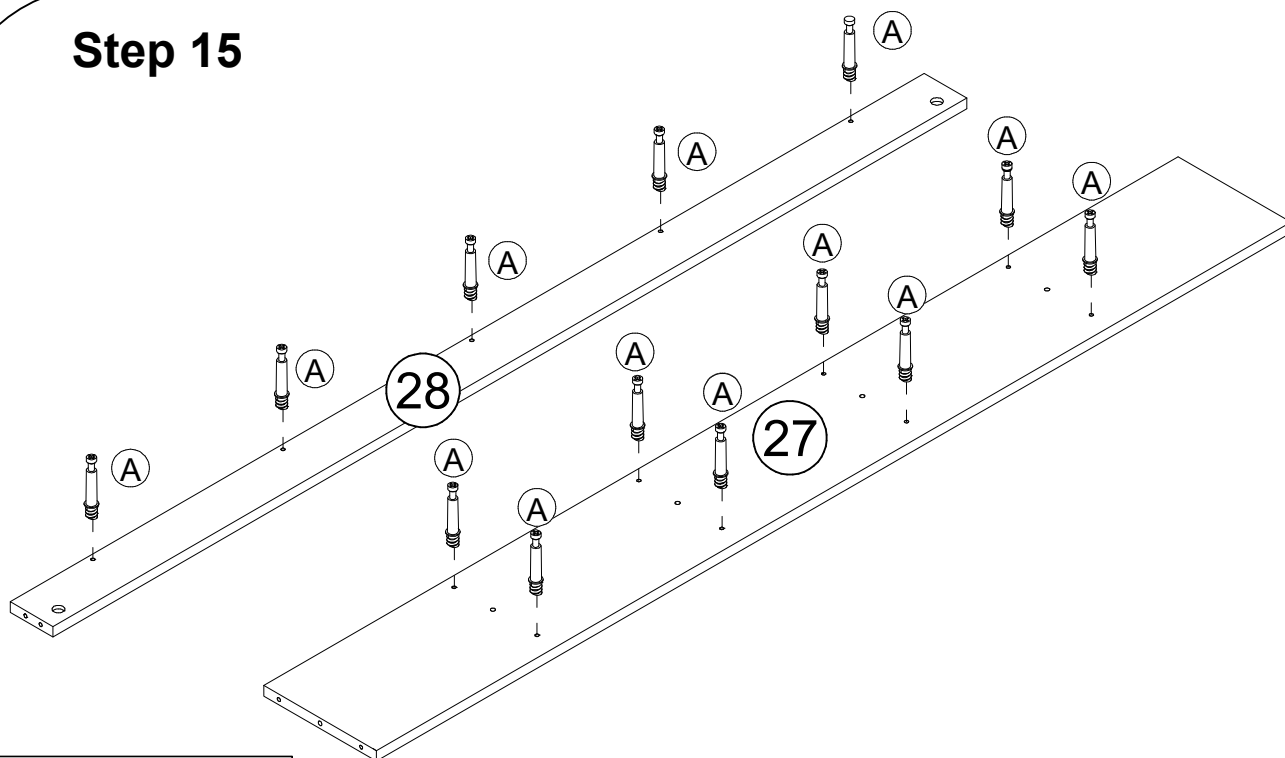


Step 16

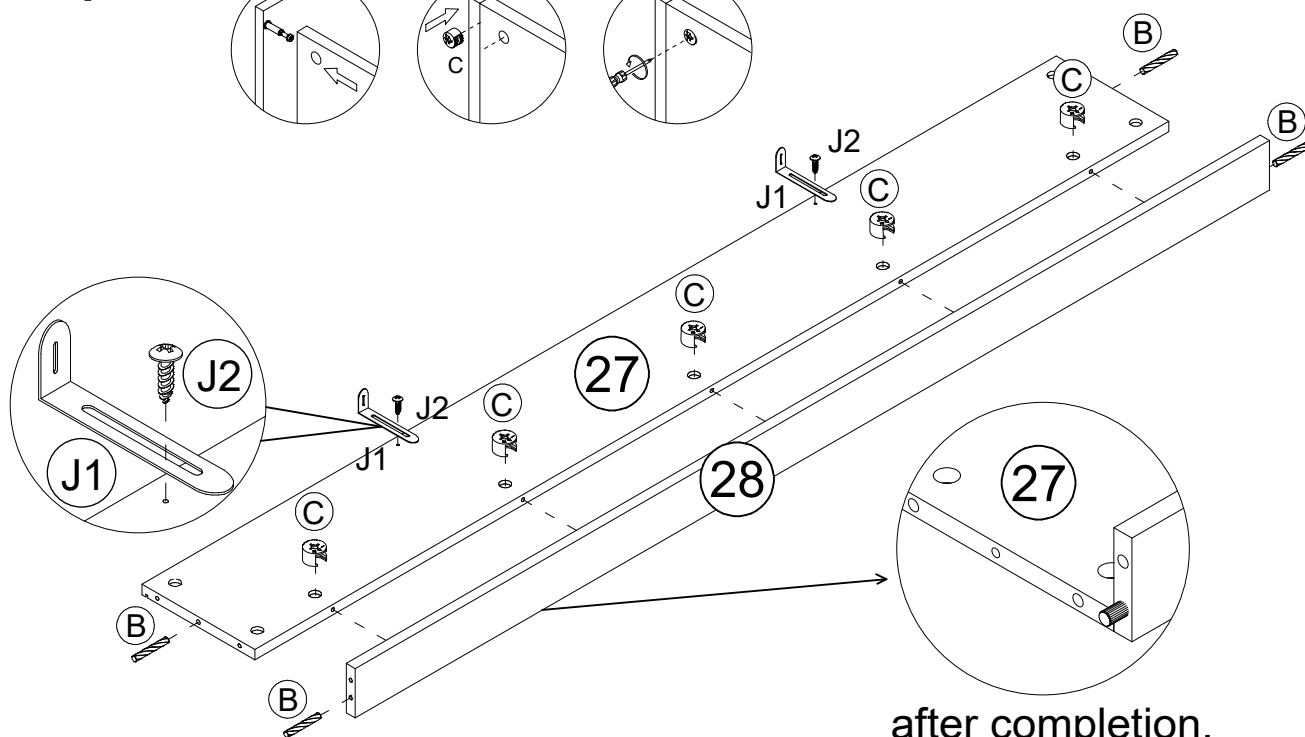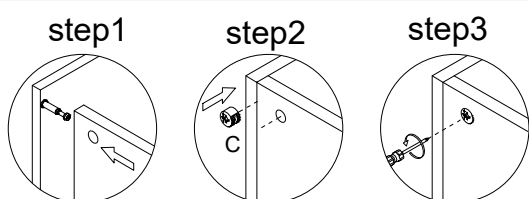


J-J1 x 2set	J-J2 x 2set
C Cam lock x 5	B 6*30mm Dowel x 4

Step 17

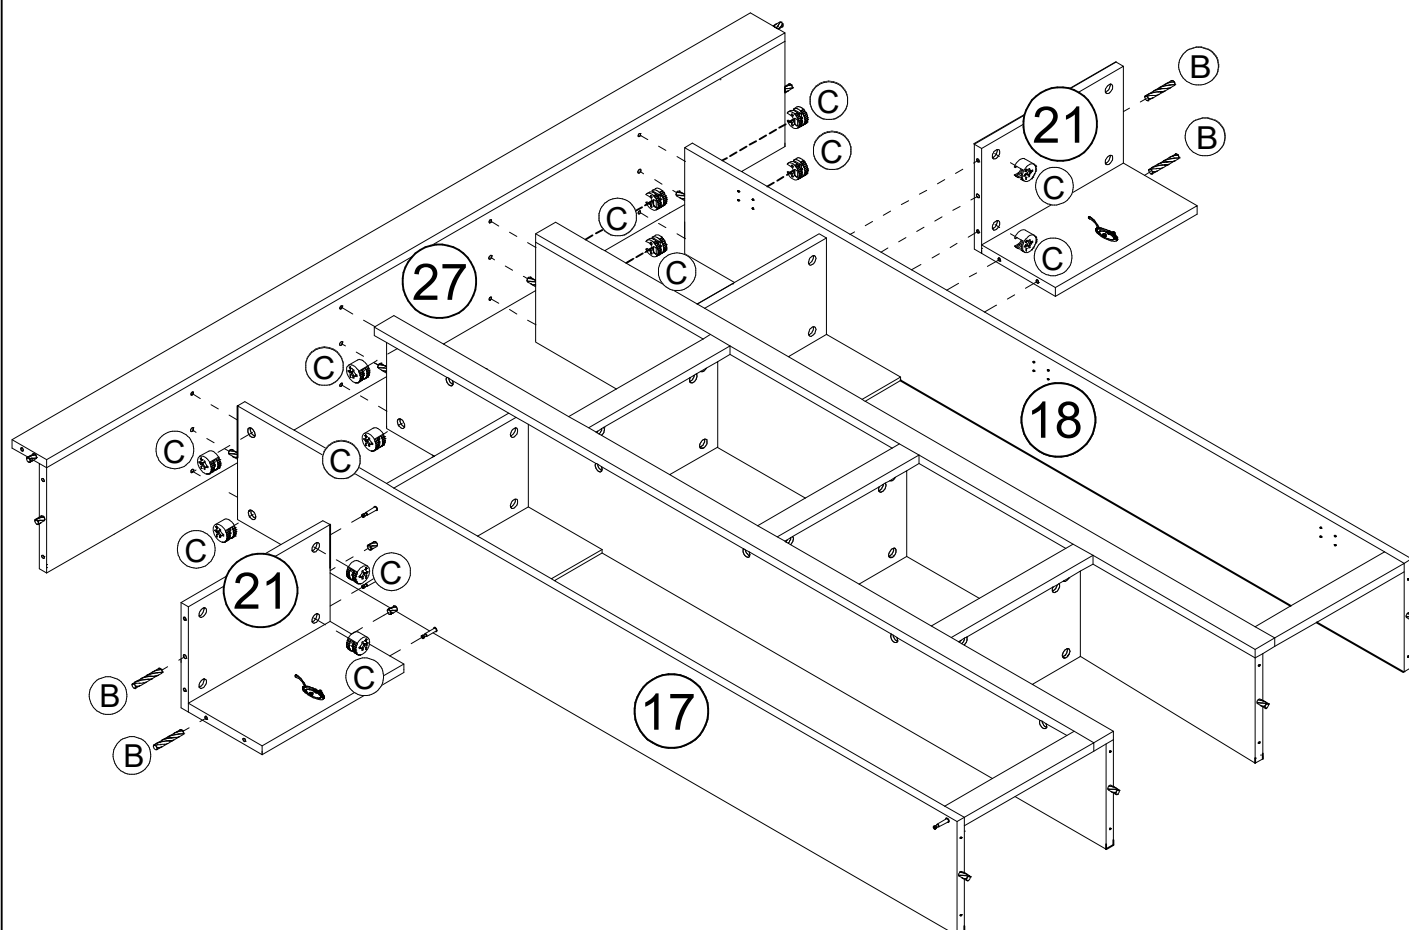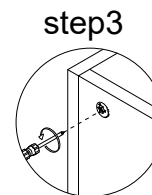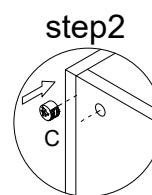


(C)  Cam lock x 12	(B)  6*30mm Dowel x 4
---	--

Step 18


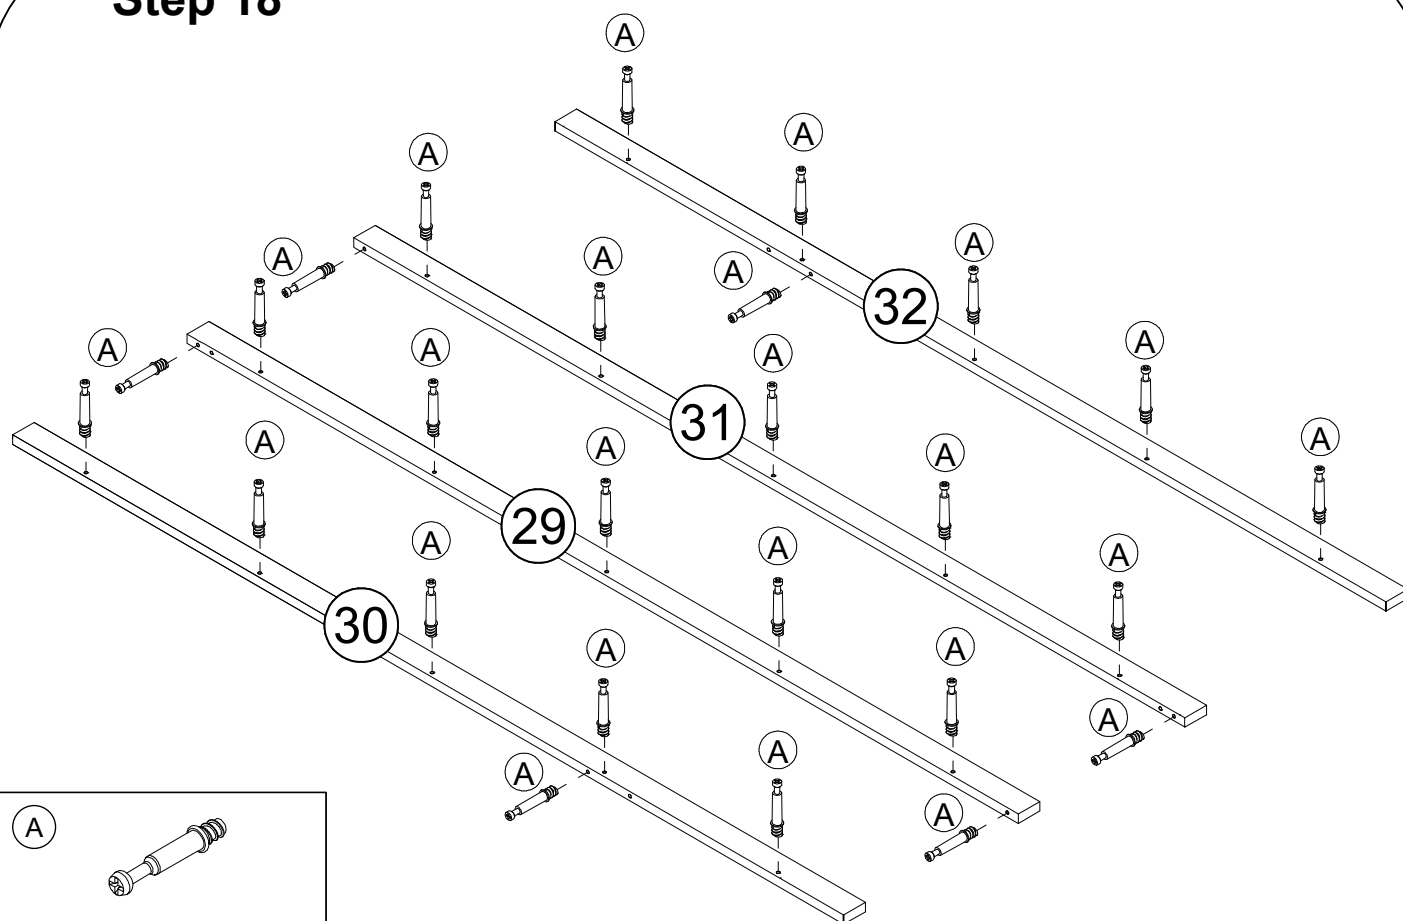


A



Cam Bolt x 26

Step 19

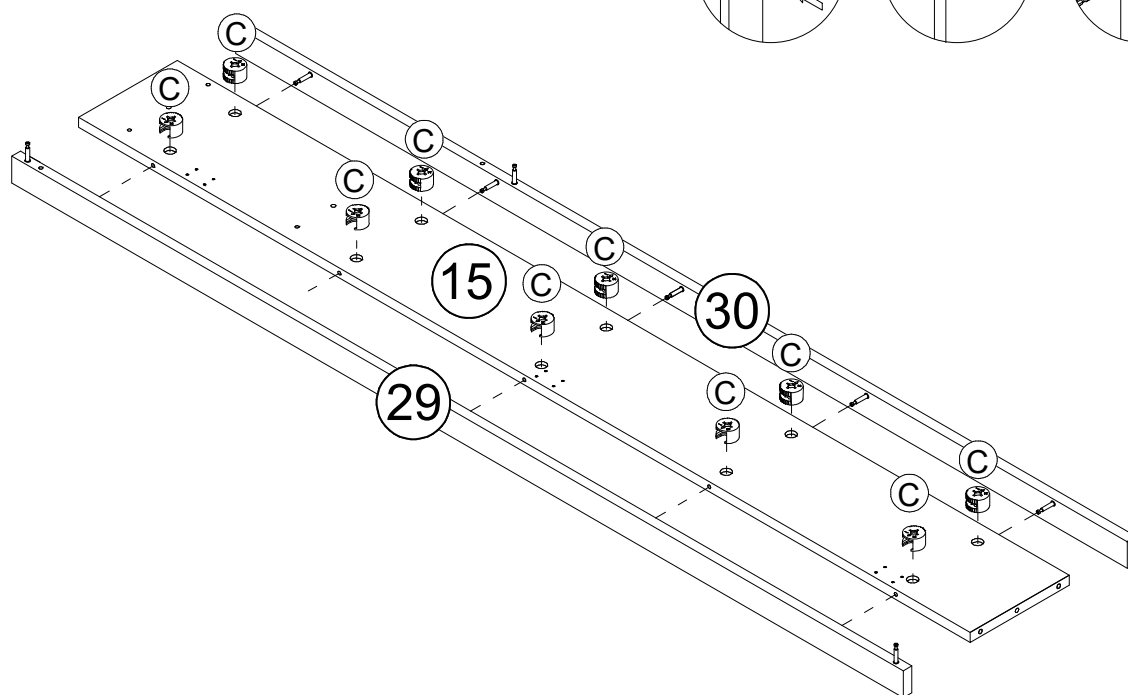
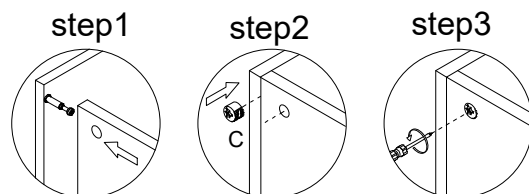


C




Cam lock x 10


Step 20

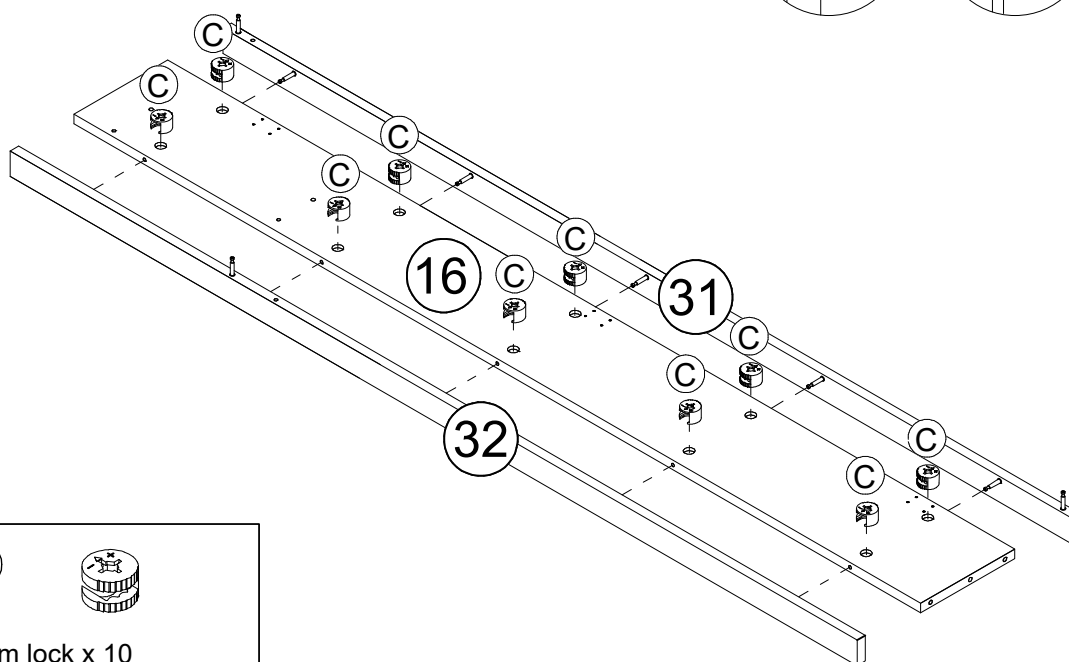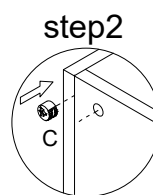

(C) 
Cam lock x 10

Step 21

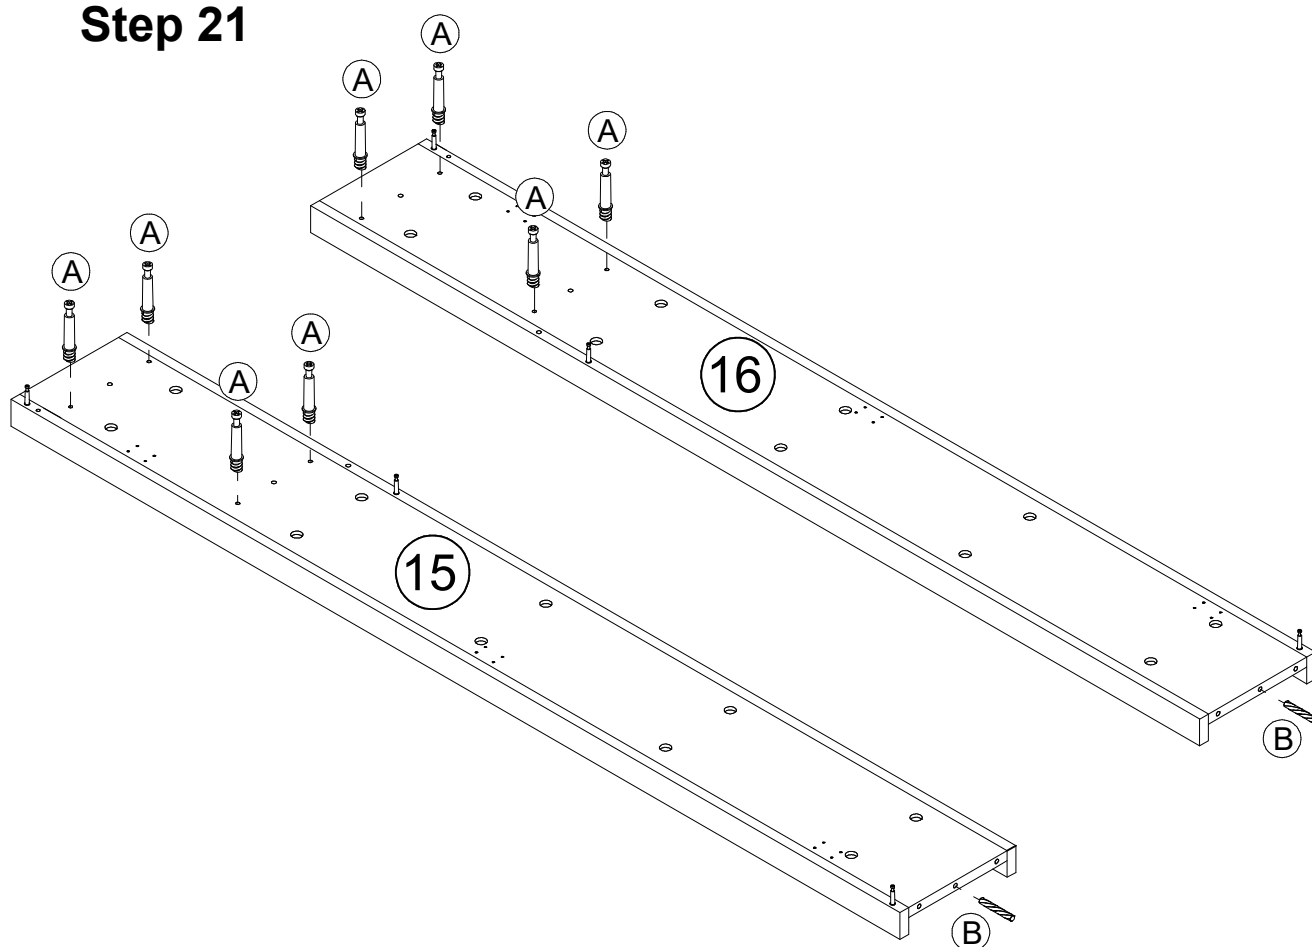


(A) 
Cam Bolt x 8


(B) 
6*30mm Dowel x 2

Step 22

Pay attention to flipping the board to prevent damage.
It is recommended to drag it down by hand.

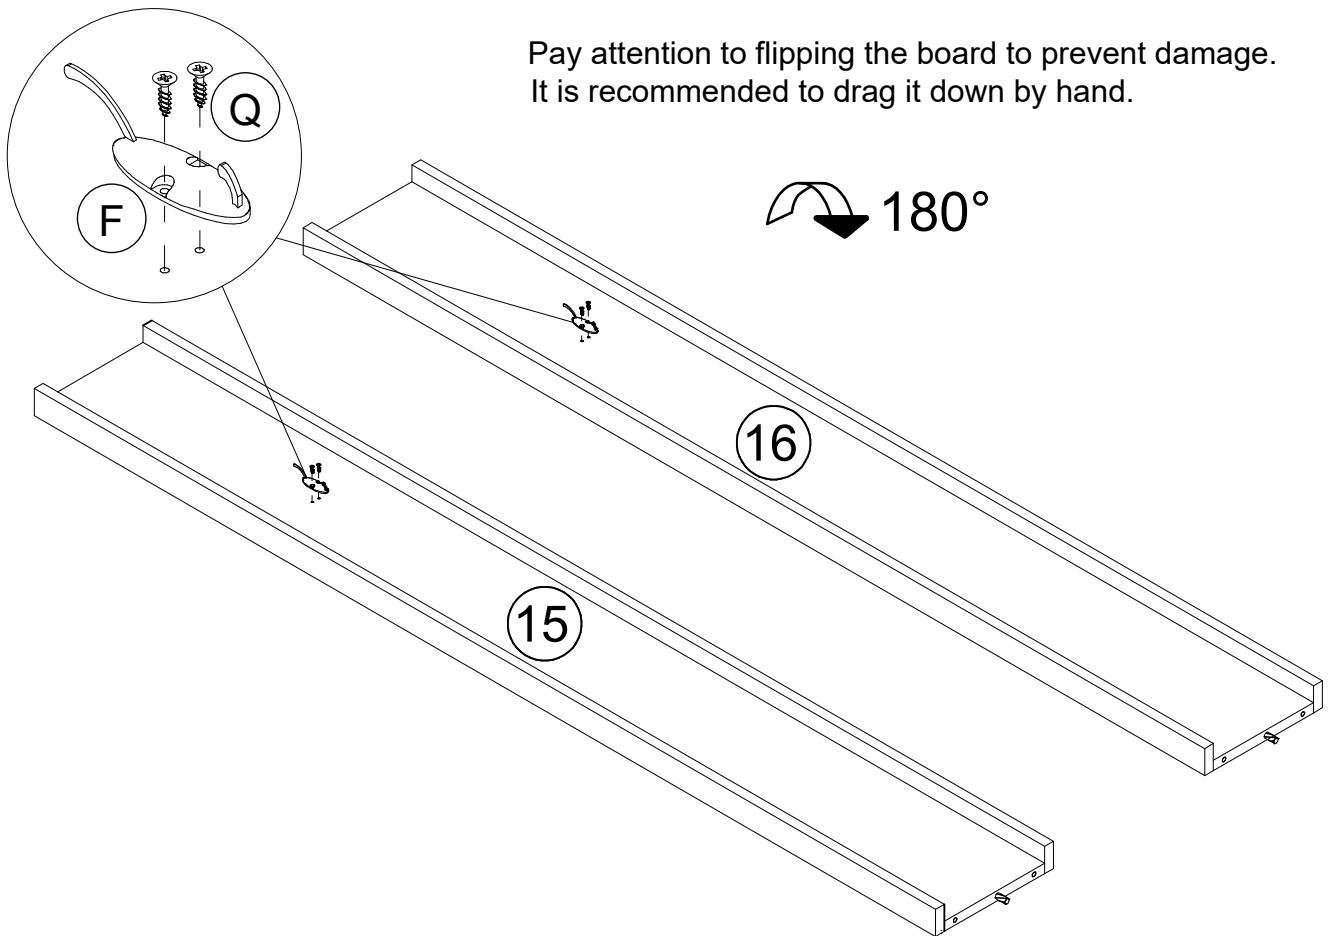

F





Hook x 2

Q



3.5*15mm Screw x 4

Step 23


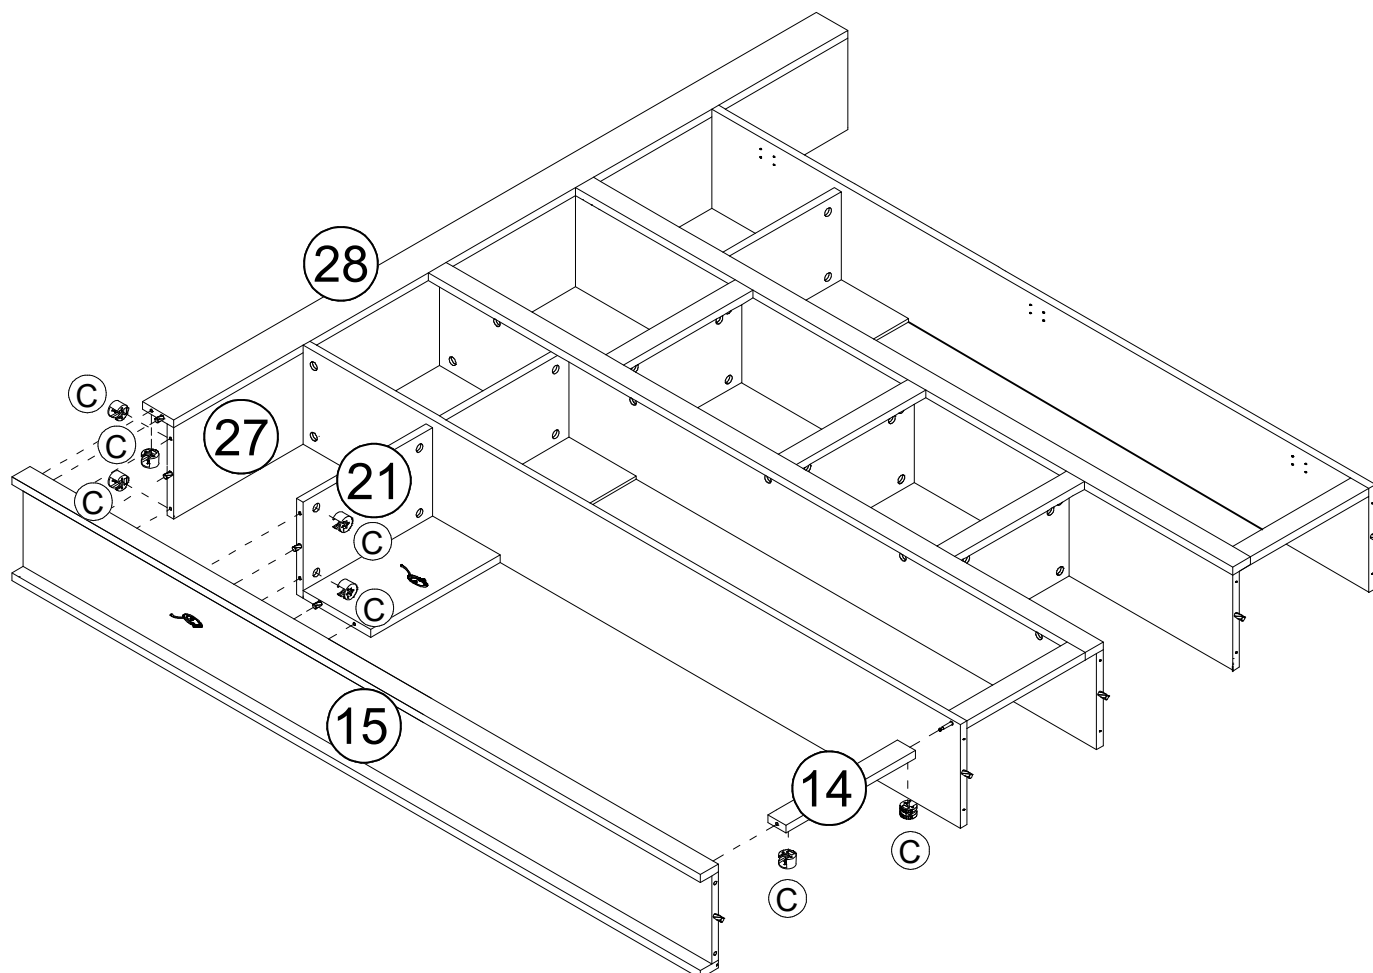
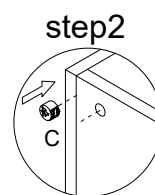


(C)



Cam lock x 7

Step 24

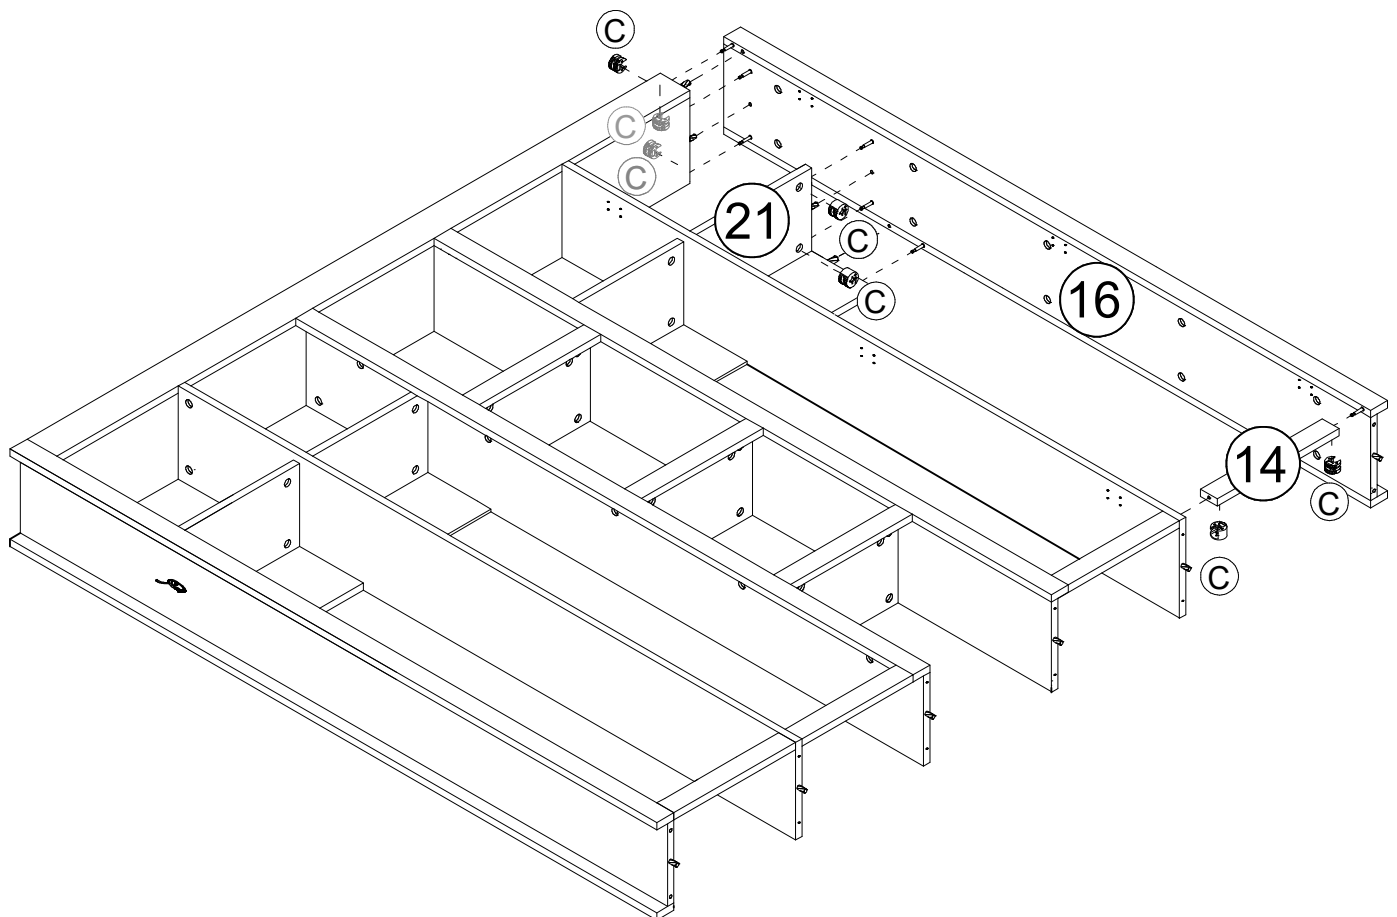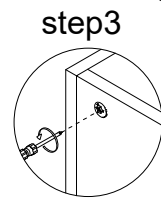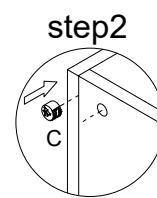


C




Cam lock x 7

Step 25

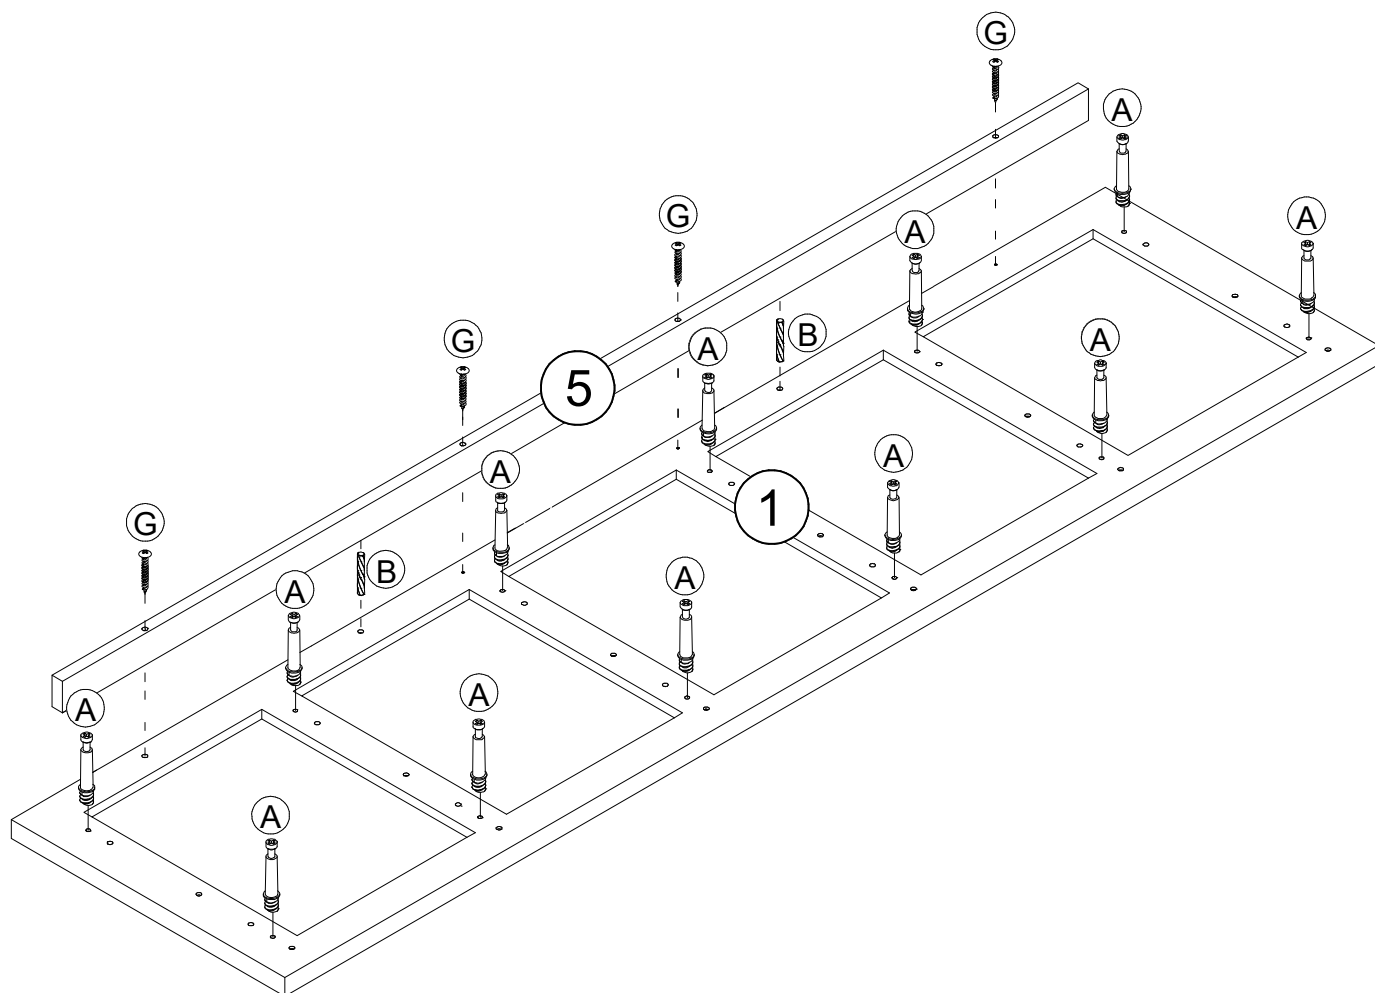

 4*40mm Screw x 4	 Cam Bolt x 12	 6*30mm Dowel x 2
---	--	---

Step 26

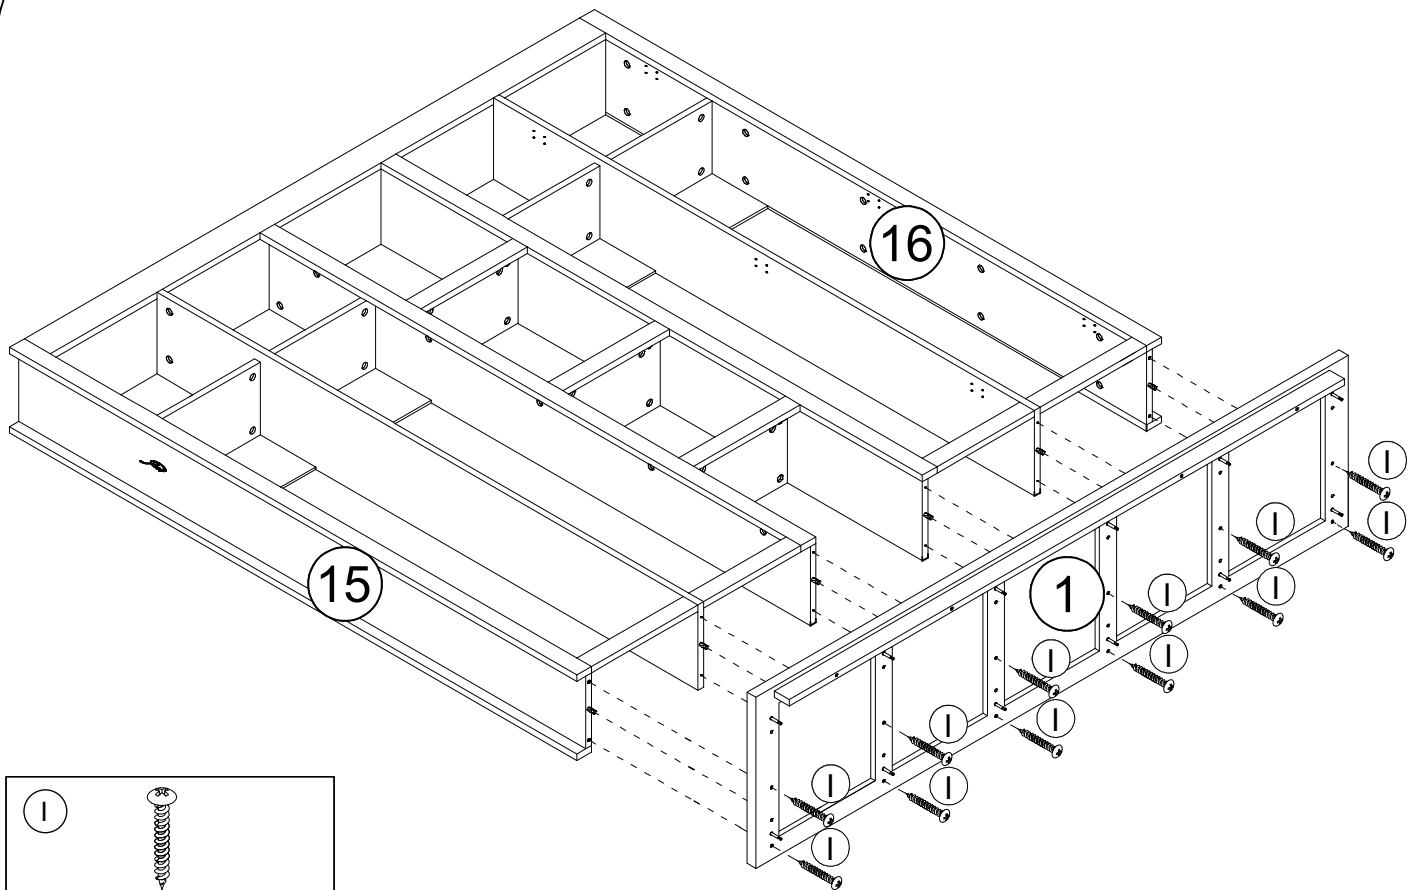


(I)




4*50mm Screw x 12

Step 27

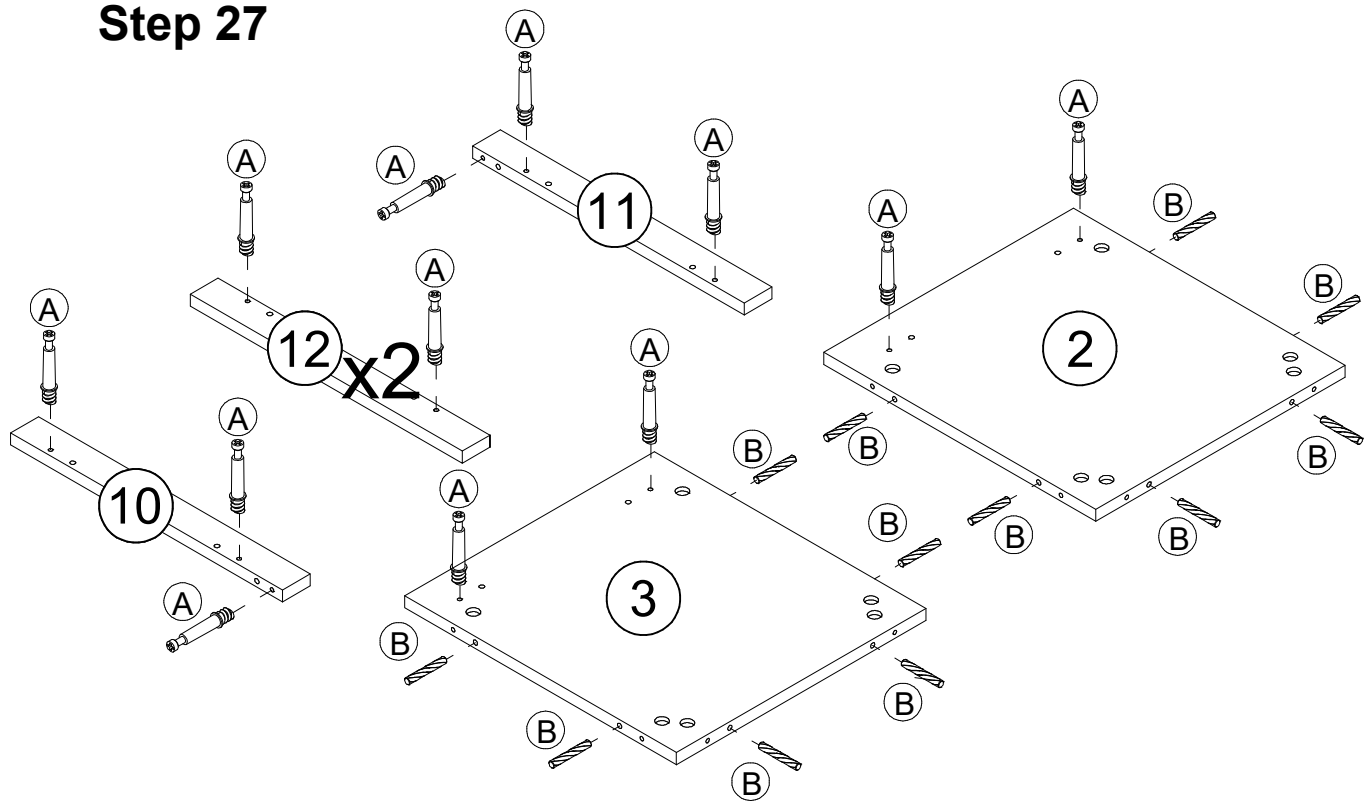

(A)




Cam Bolt x14

(B)



6*30mm Dowel x 12




Step 28

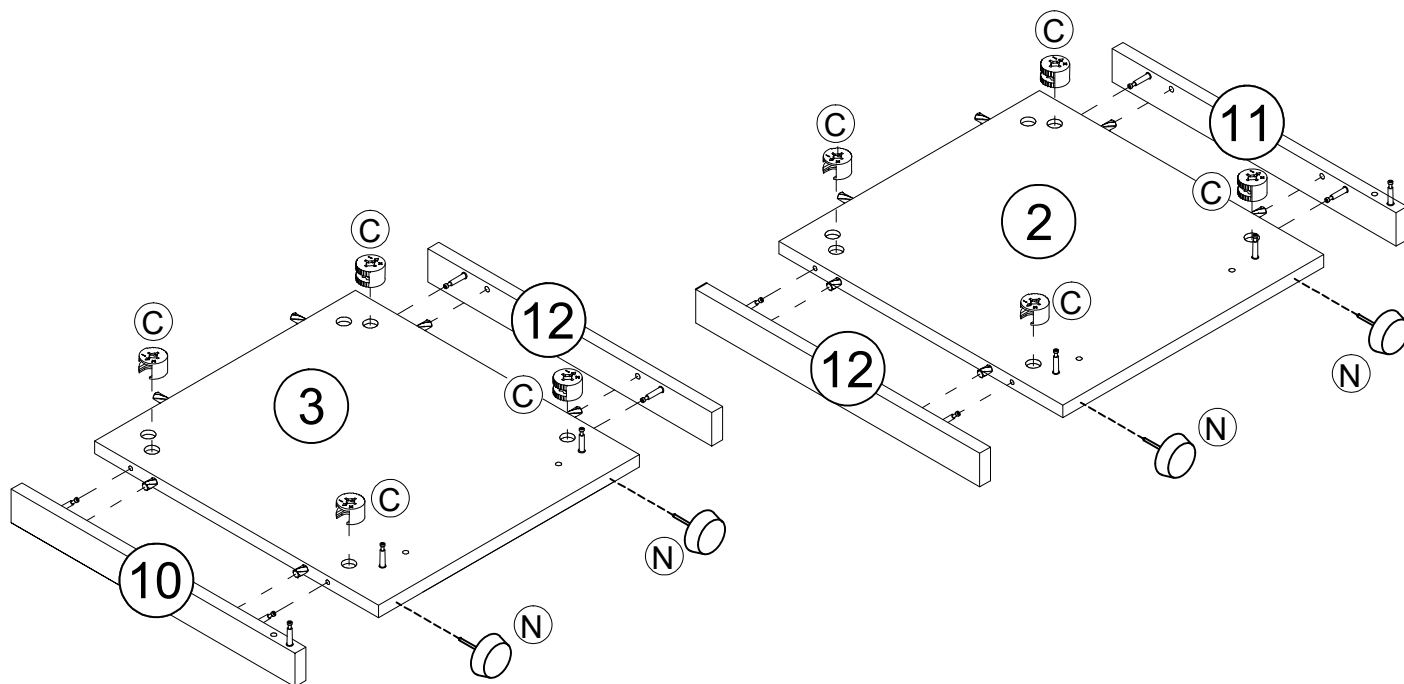

step1

step2

step3

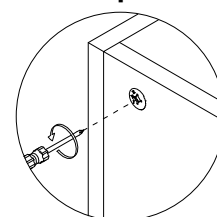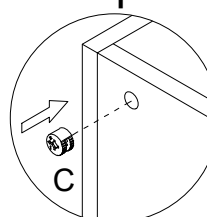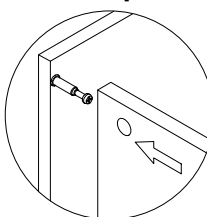

C





Cam lock x 8

N




Nail-on glide x 4

Step 29

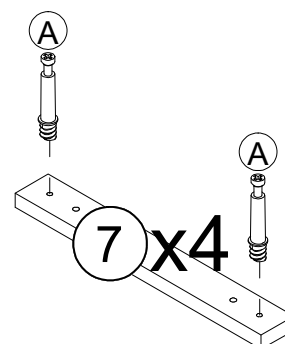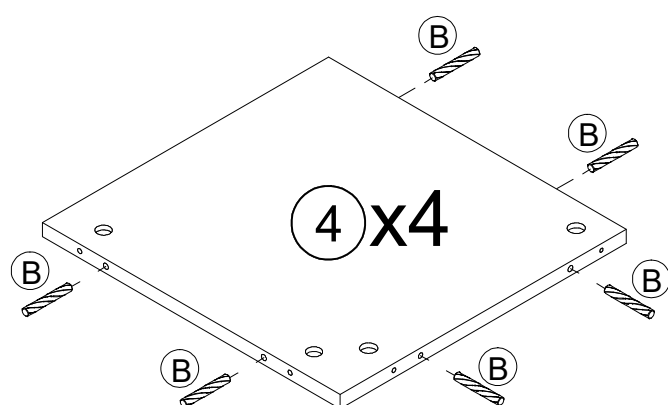

A





Cam Bolt x8

B






6*30mm Dowel x 24

Step 30

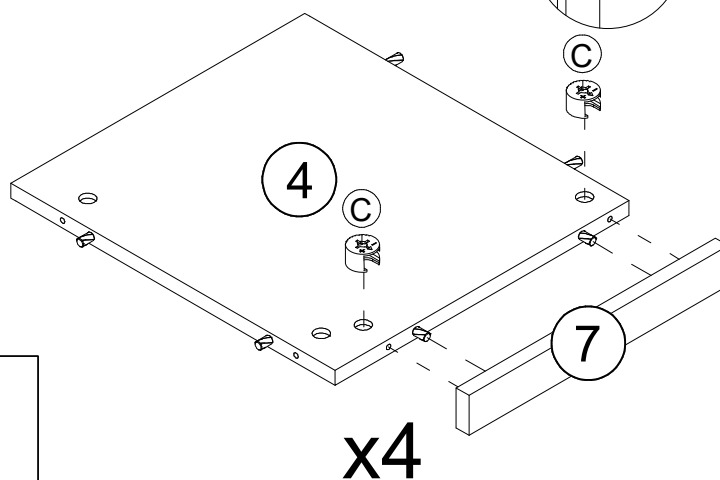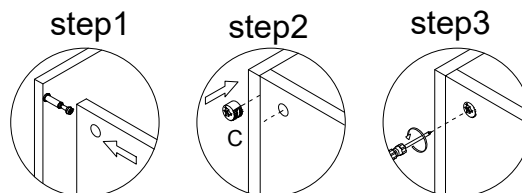

Step 31

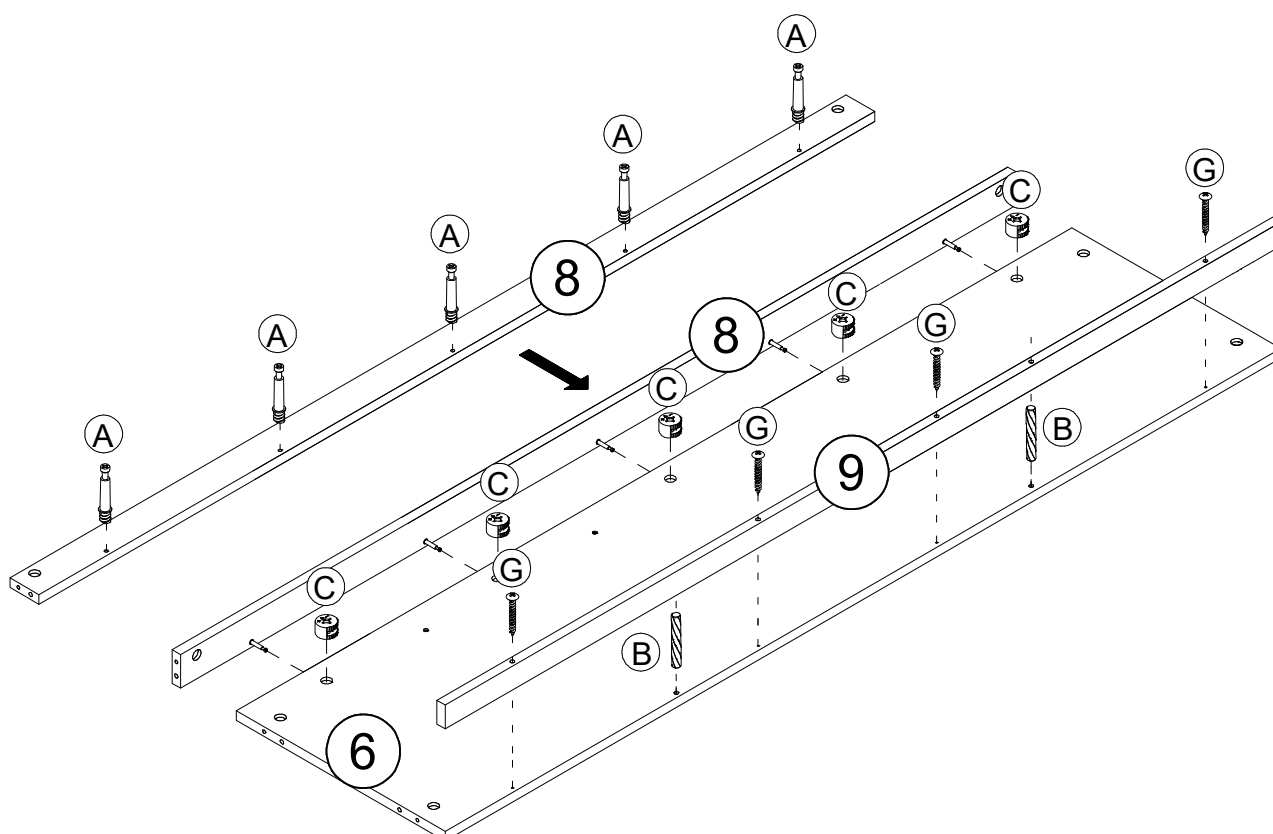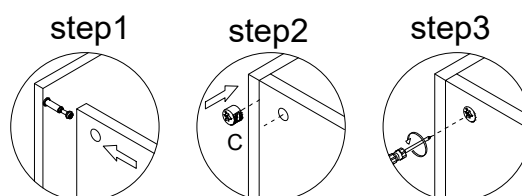

Cam Bolt x5



Cam lock x 5




4*40mm Screw x 4



6*30mm Dowel x 2

Step 32

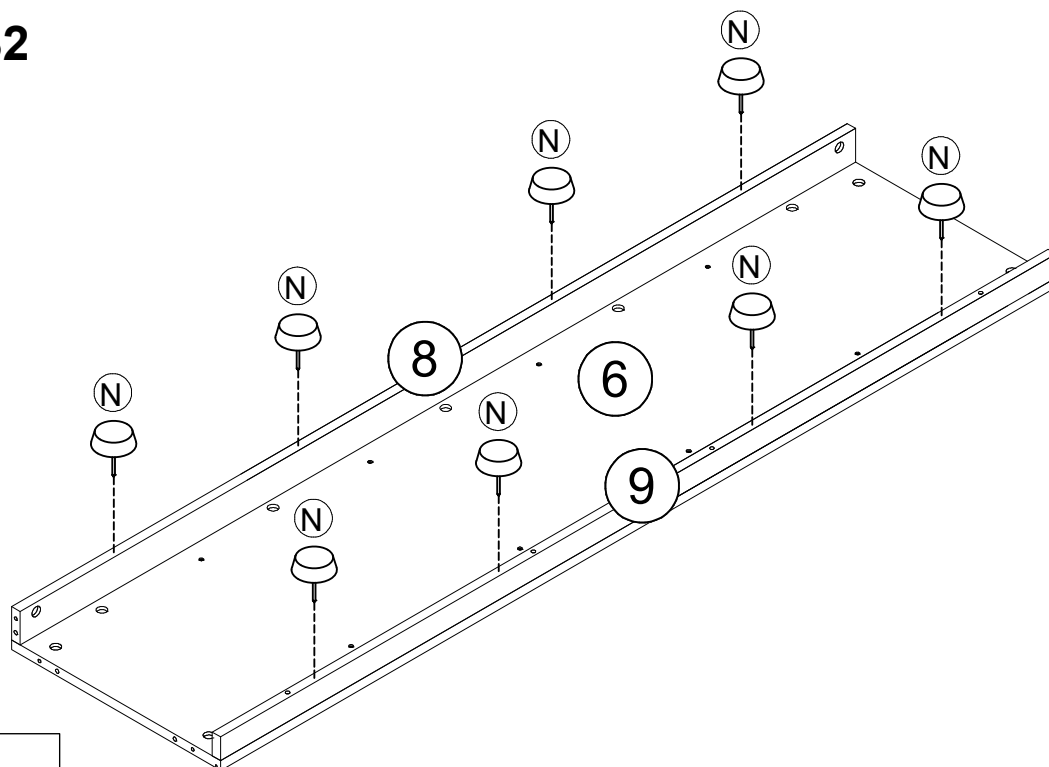


(N)



Nail-on glide x 8

Step 33

Need 2 people to assemble this step.

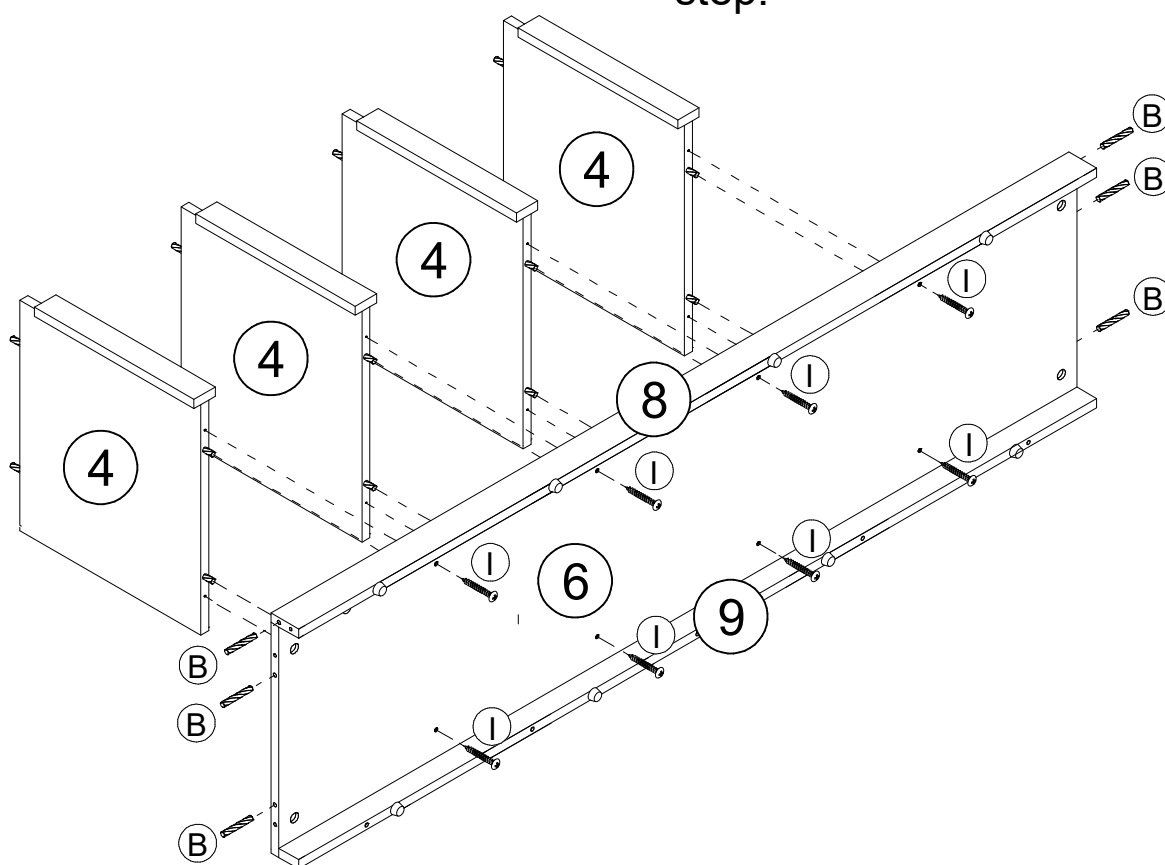


(I)






4*50mm Screw x 8

(B)



6*30mm Dowel x 6

Step 34

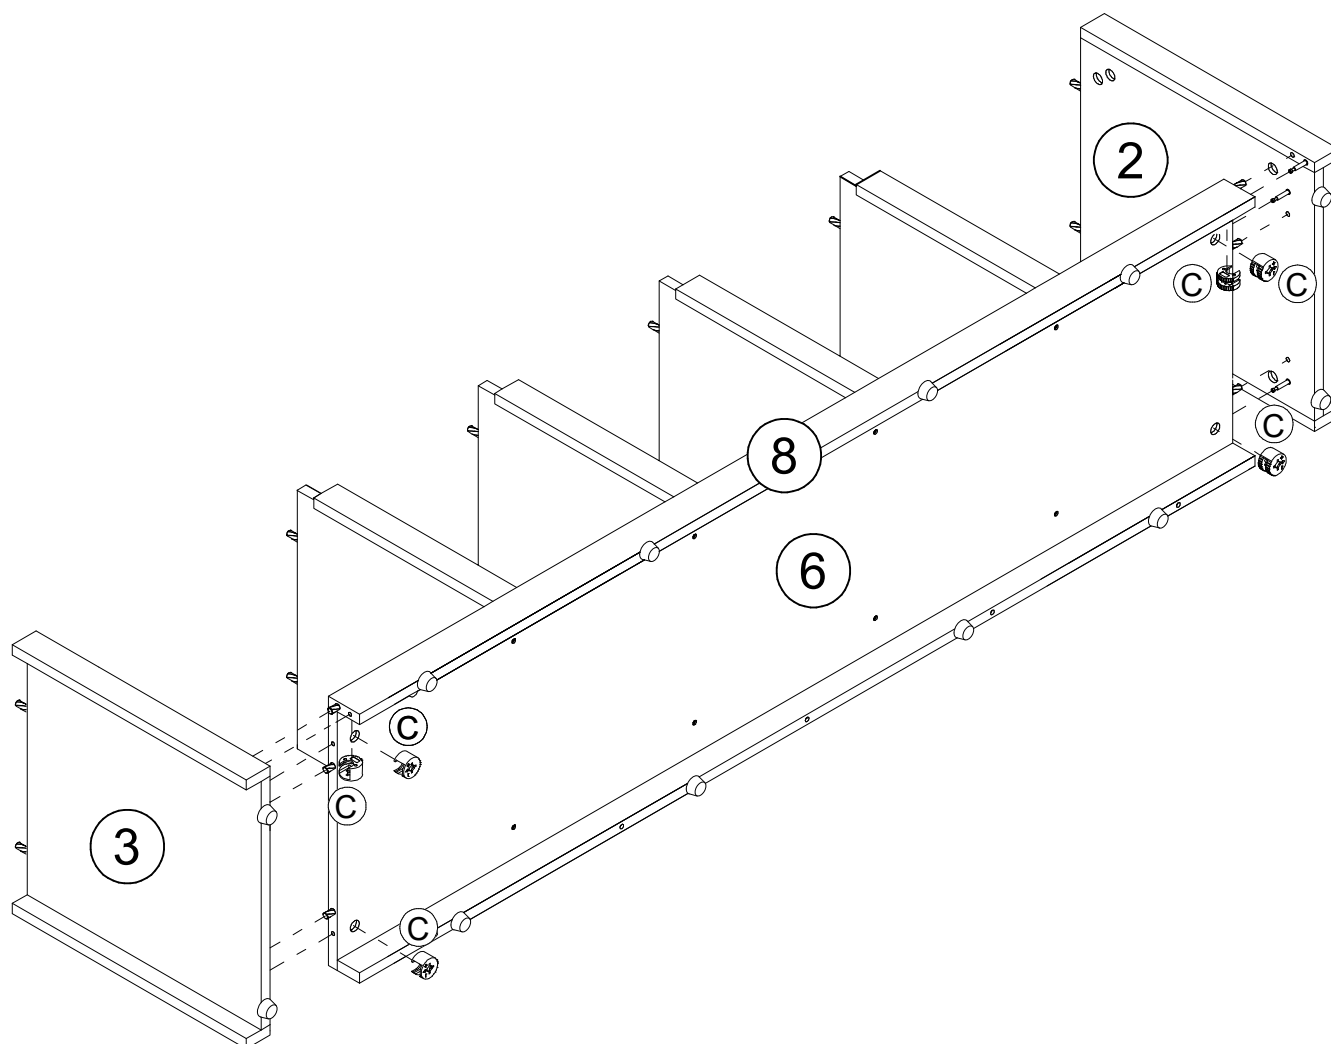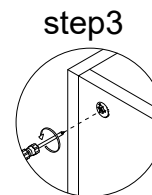
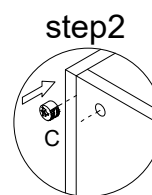


(C)




Cam lock x 6

Step 35

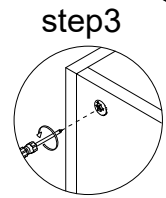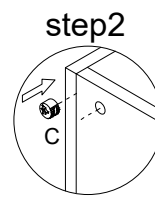

Need 2 people to assemble this step.

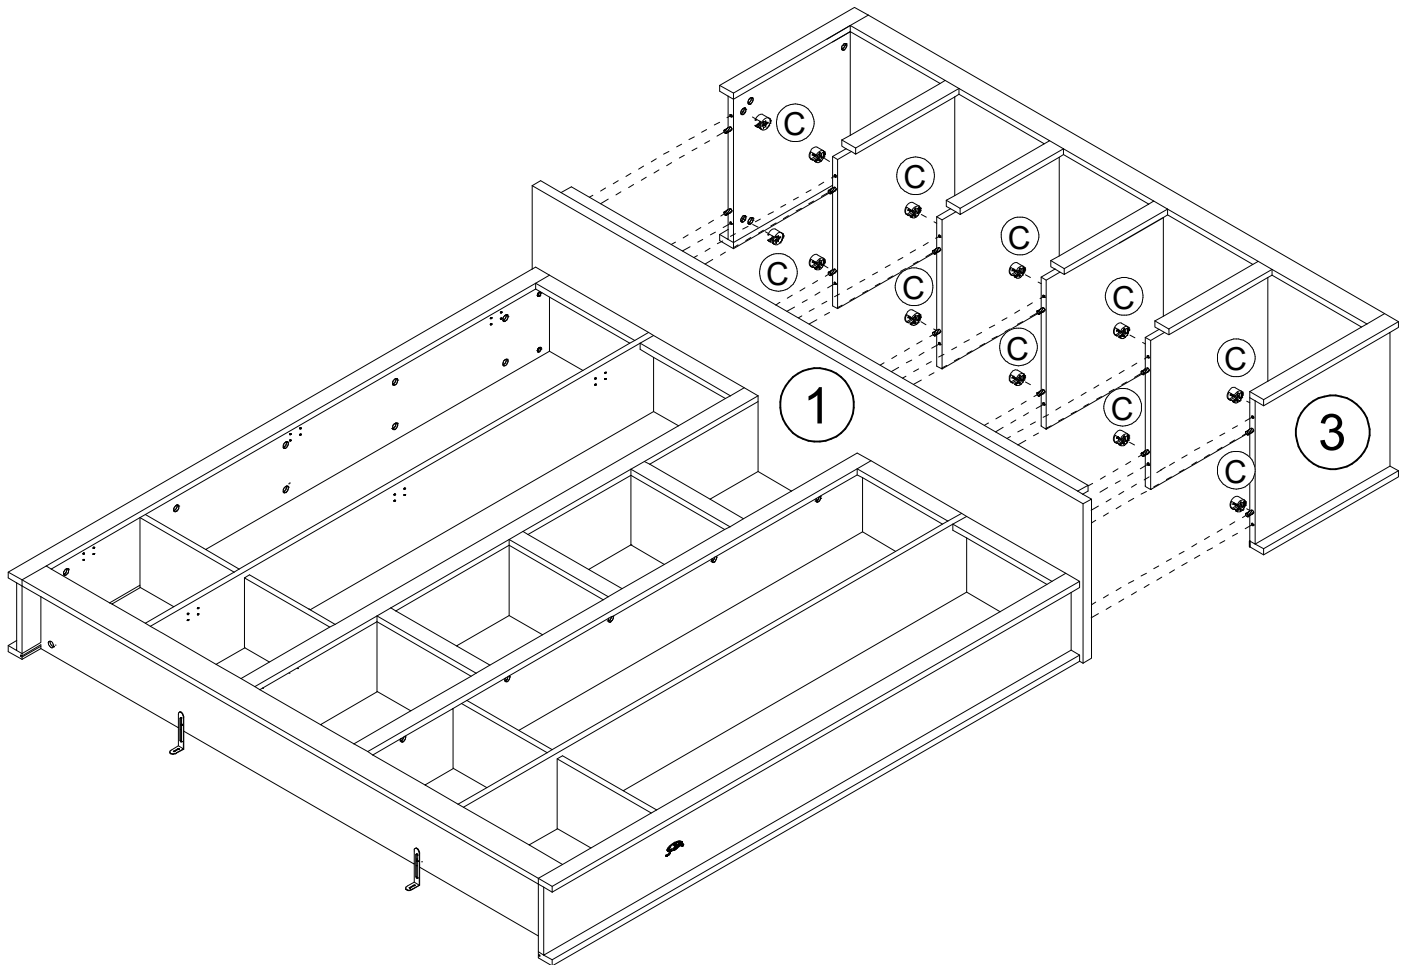


C




Cam lock x 12

Step 36


"Requires 2 people to lift,
please flip carefully."

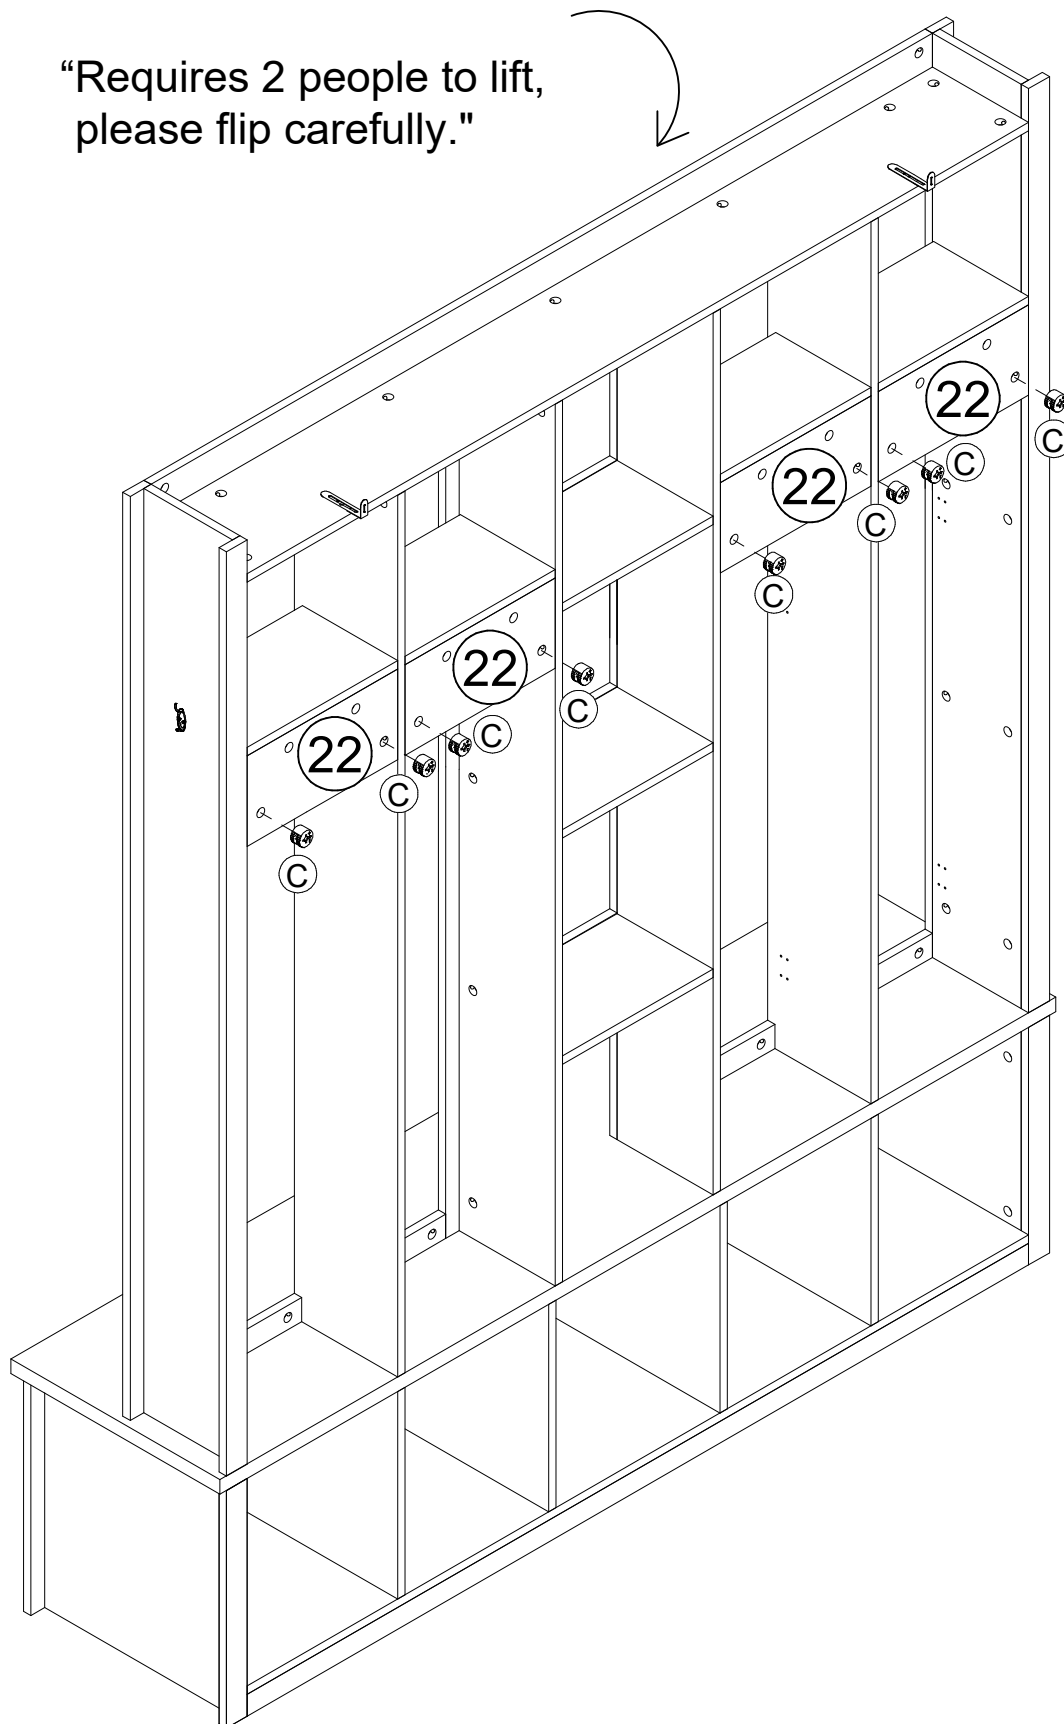


step1

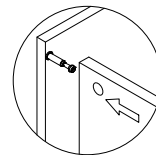

step2

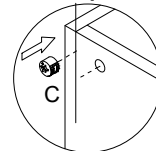

step3

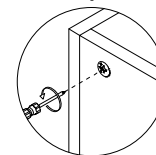


(C)





Cam lock x 8


Step 37

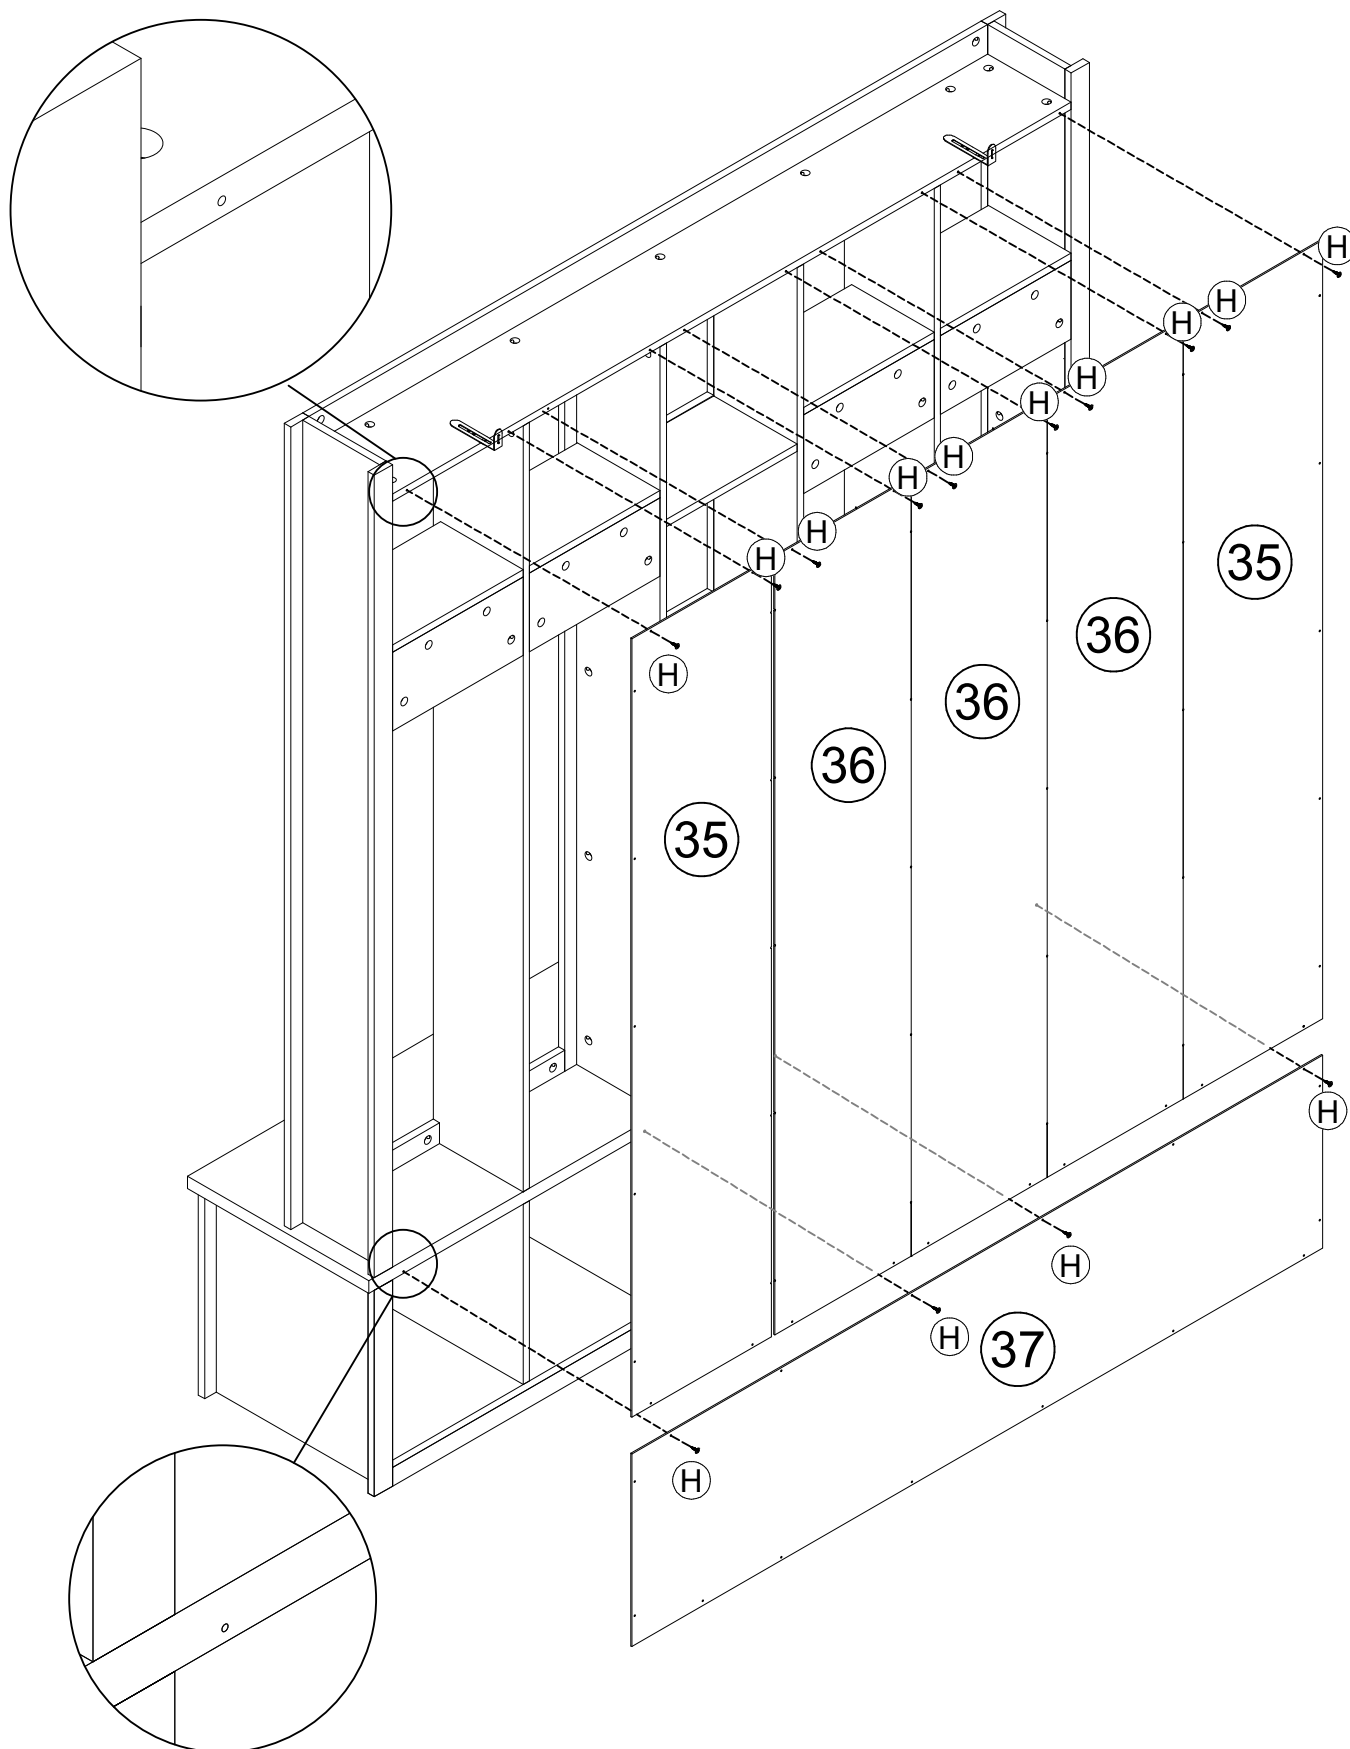

Step 38


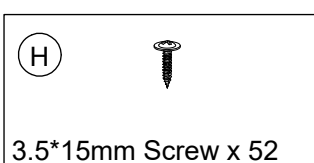
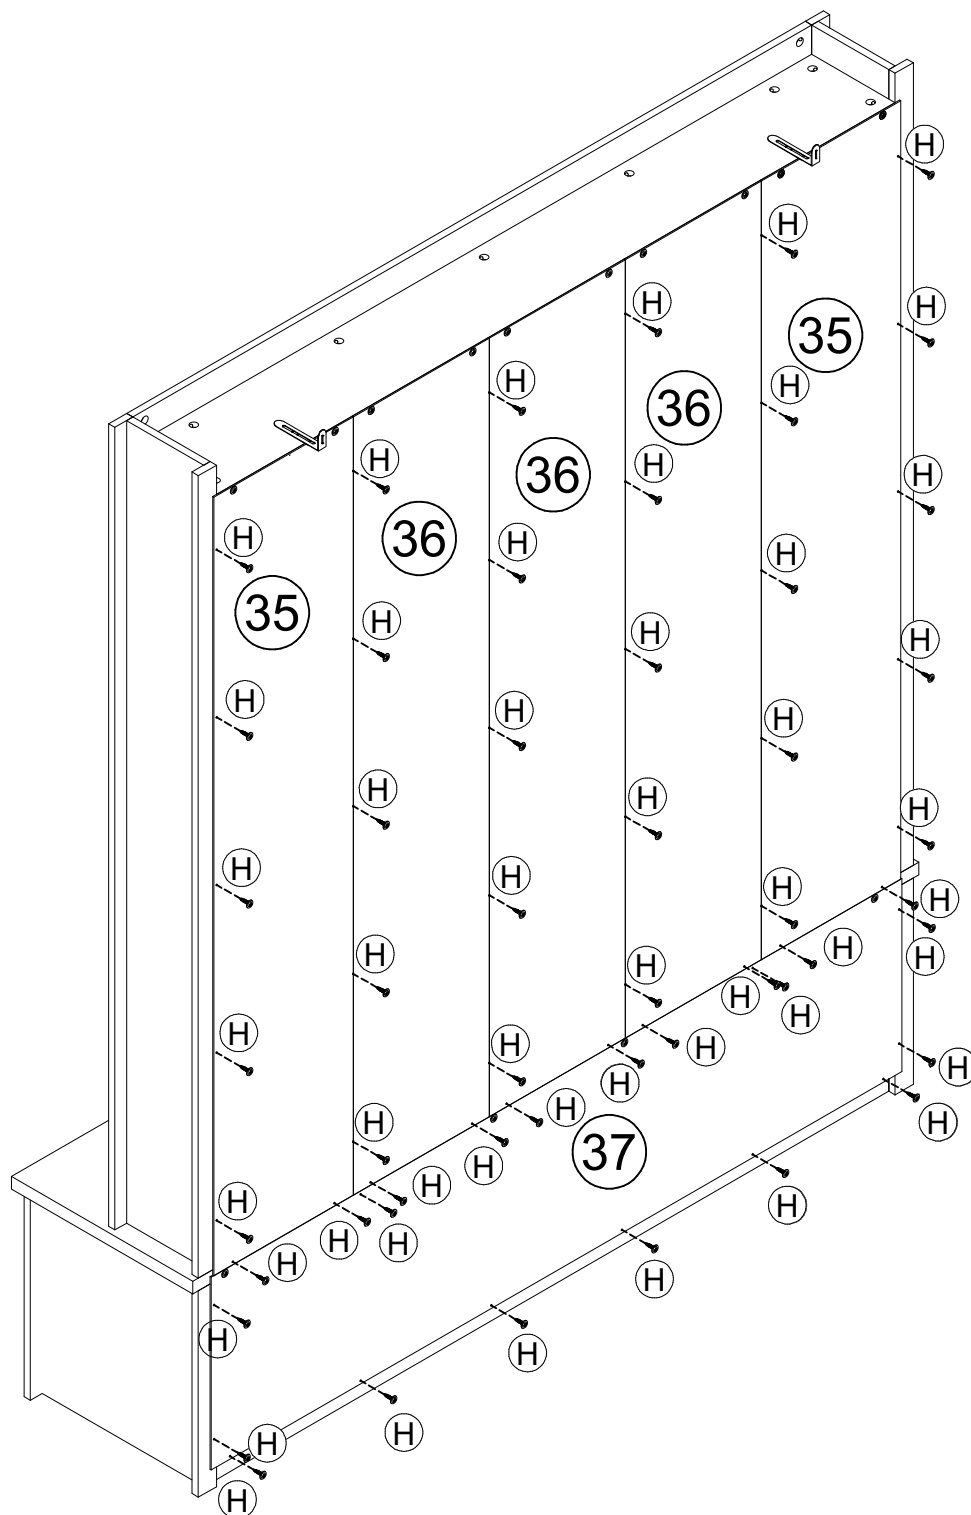


Step 39

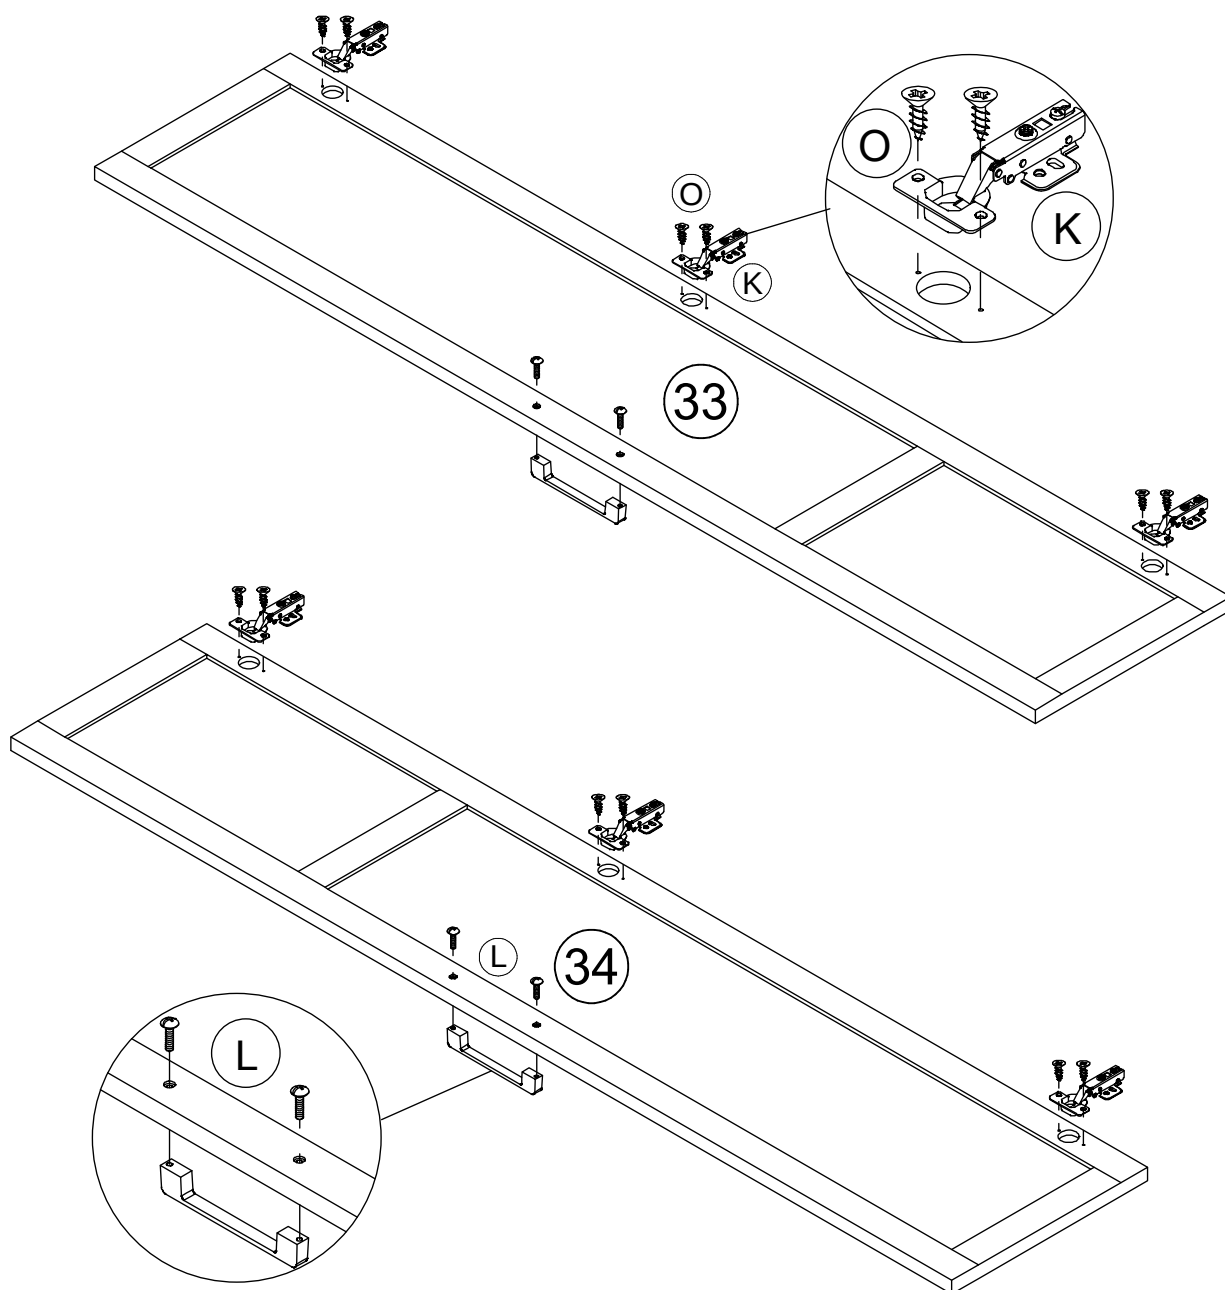


(L) 4*21mm Handle x 4set	(K) Hinge x 12	(O) 3.5*15mm x 24
--	------------------------------	---------------------------------

Step 40

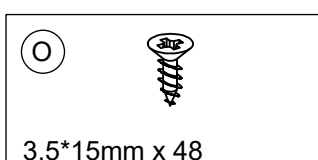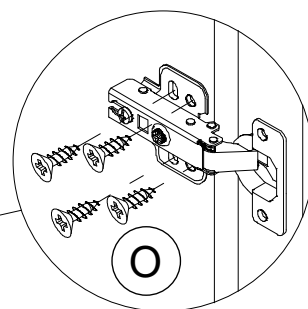
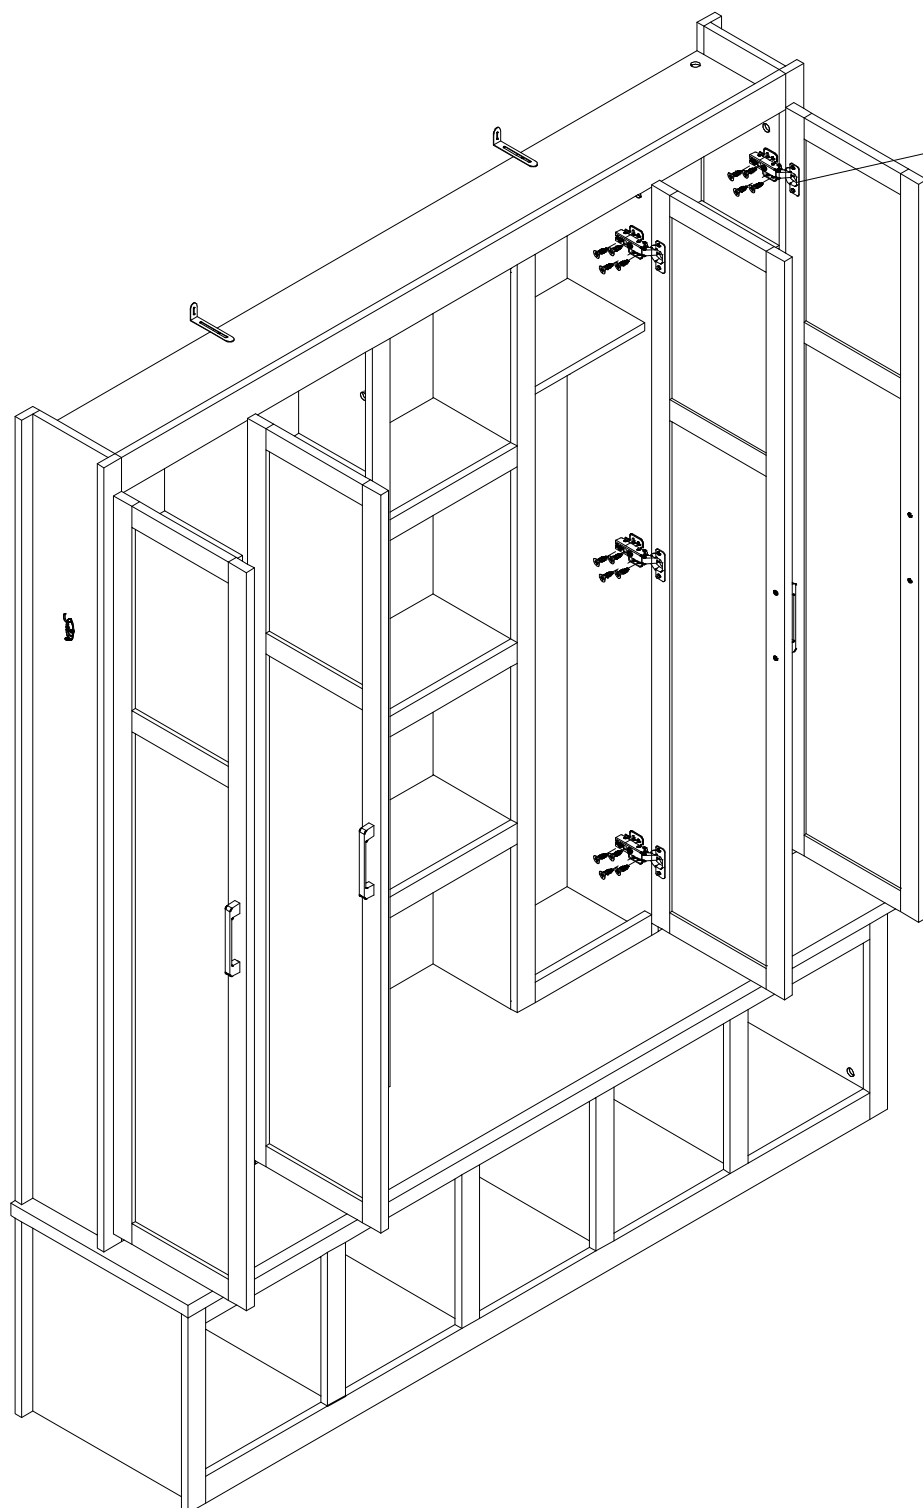


Step 41



When the hinges are installed, you can refer to the pictures to adjust the screws of the doors till it's perfect.

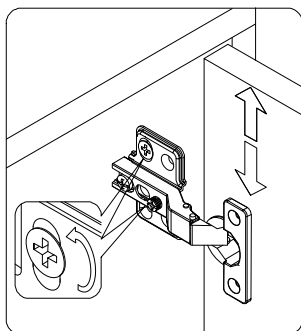



1. Adjust the screws shown in Figure 1 to adjust the door up and down.

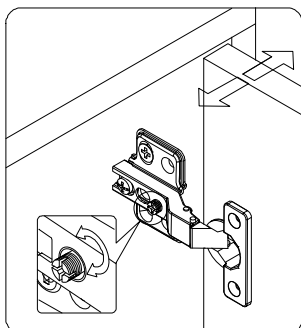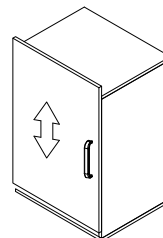

2. Adjust the screws shown in Figure 2 to adjust the door left and right to the right position.

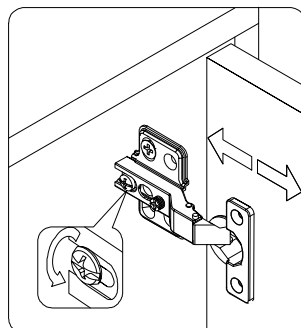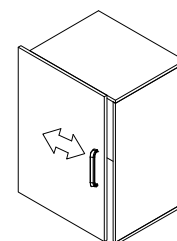



3. Adjust the screws shown in Figure 3 and pull the door back and forth so that it can be opened smoothly.

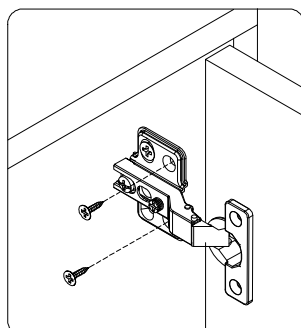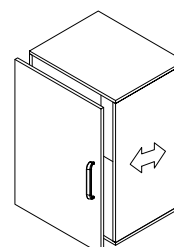





4. After the adjustment is complete, secure the remaining two screws to secure the door in place.

Step 42


Insert the cam lock covers (M) onto the visible cam locks to conseal the cams.

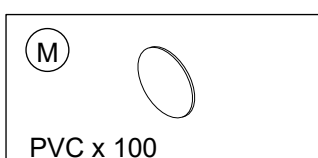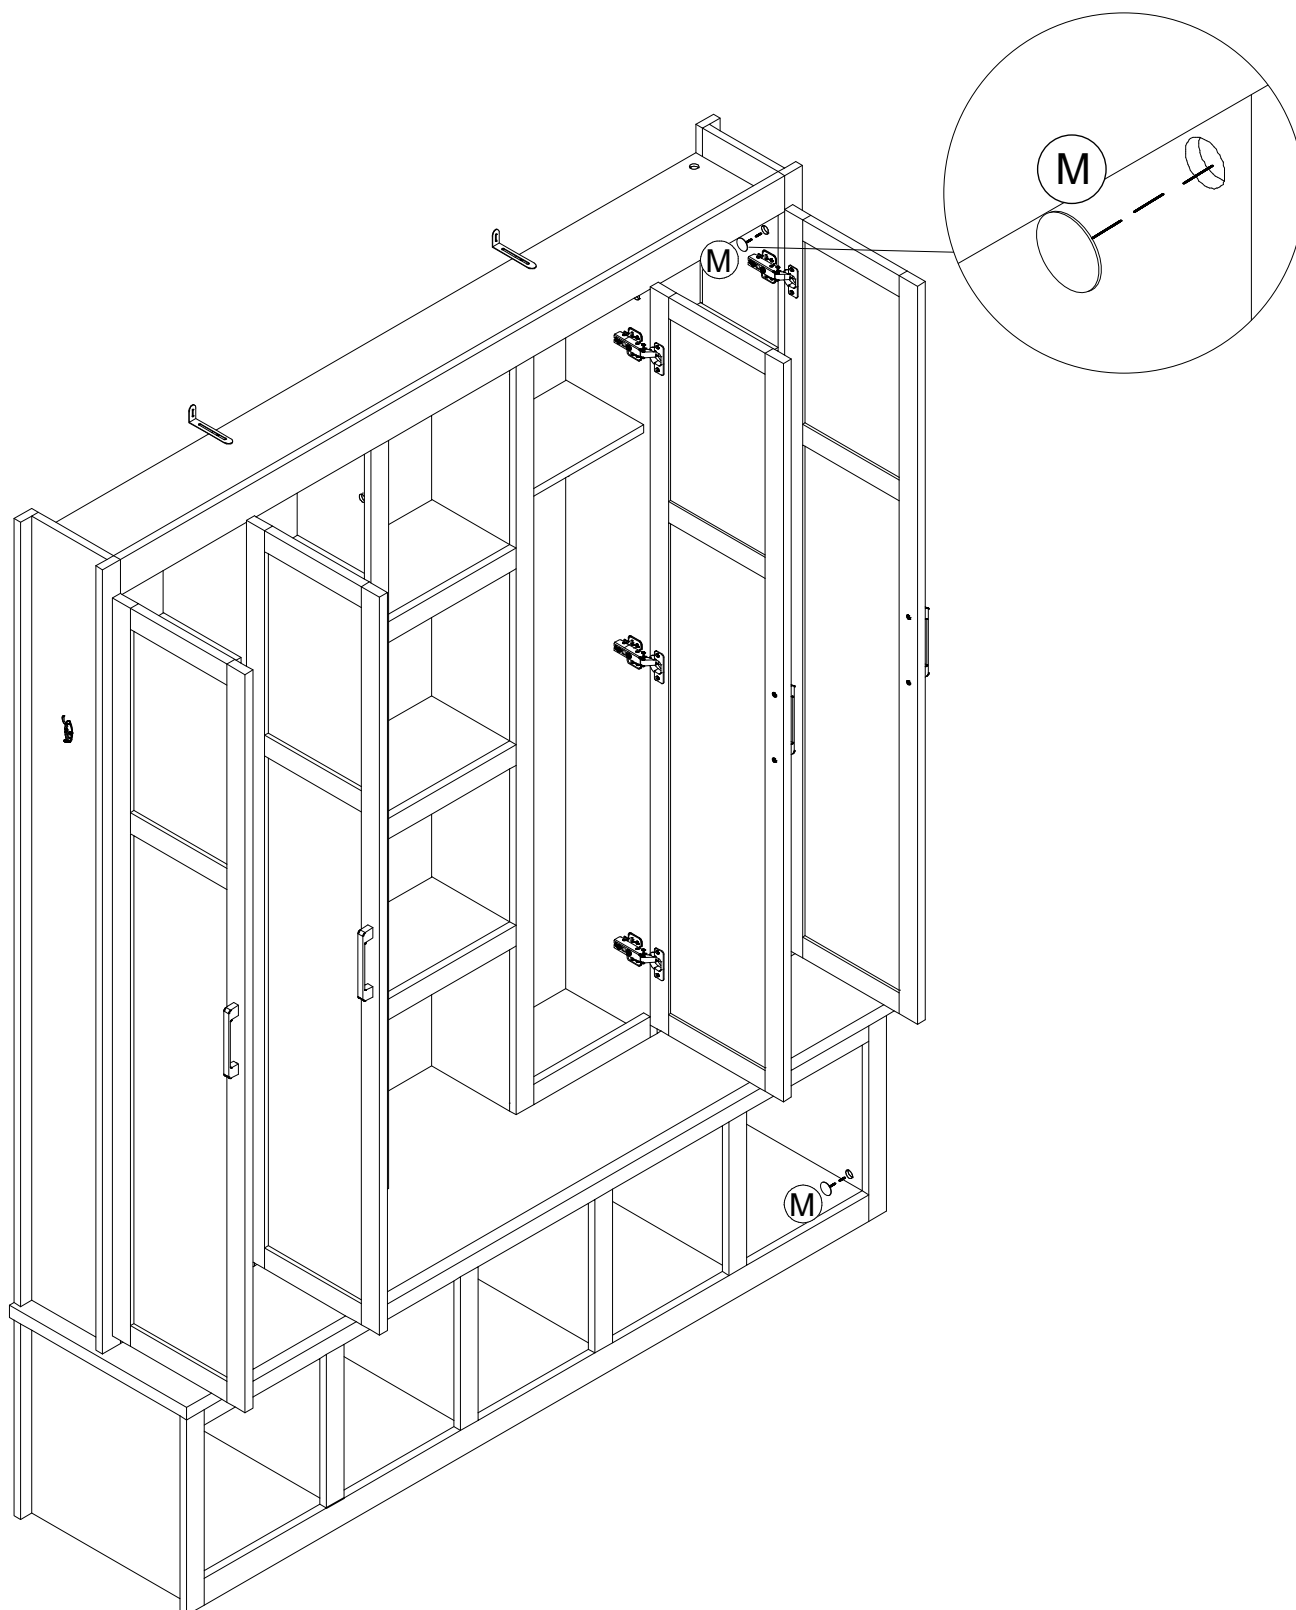

Step 43

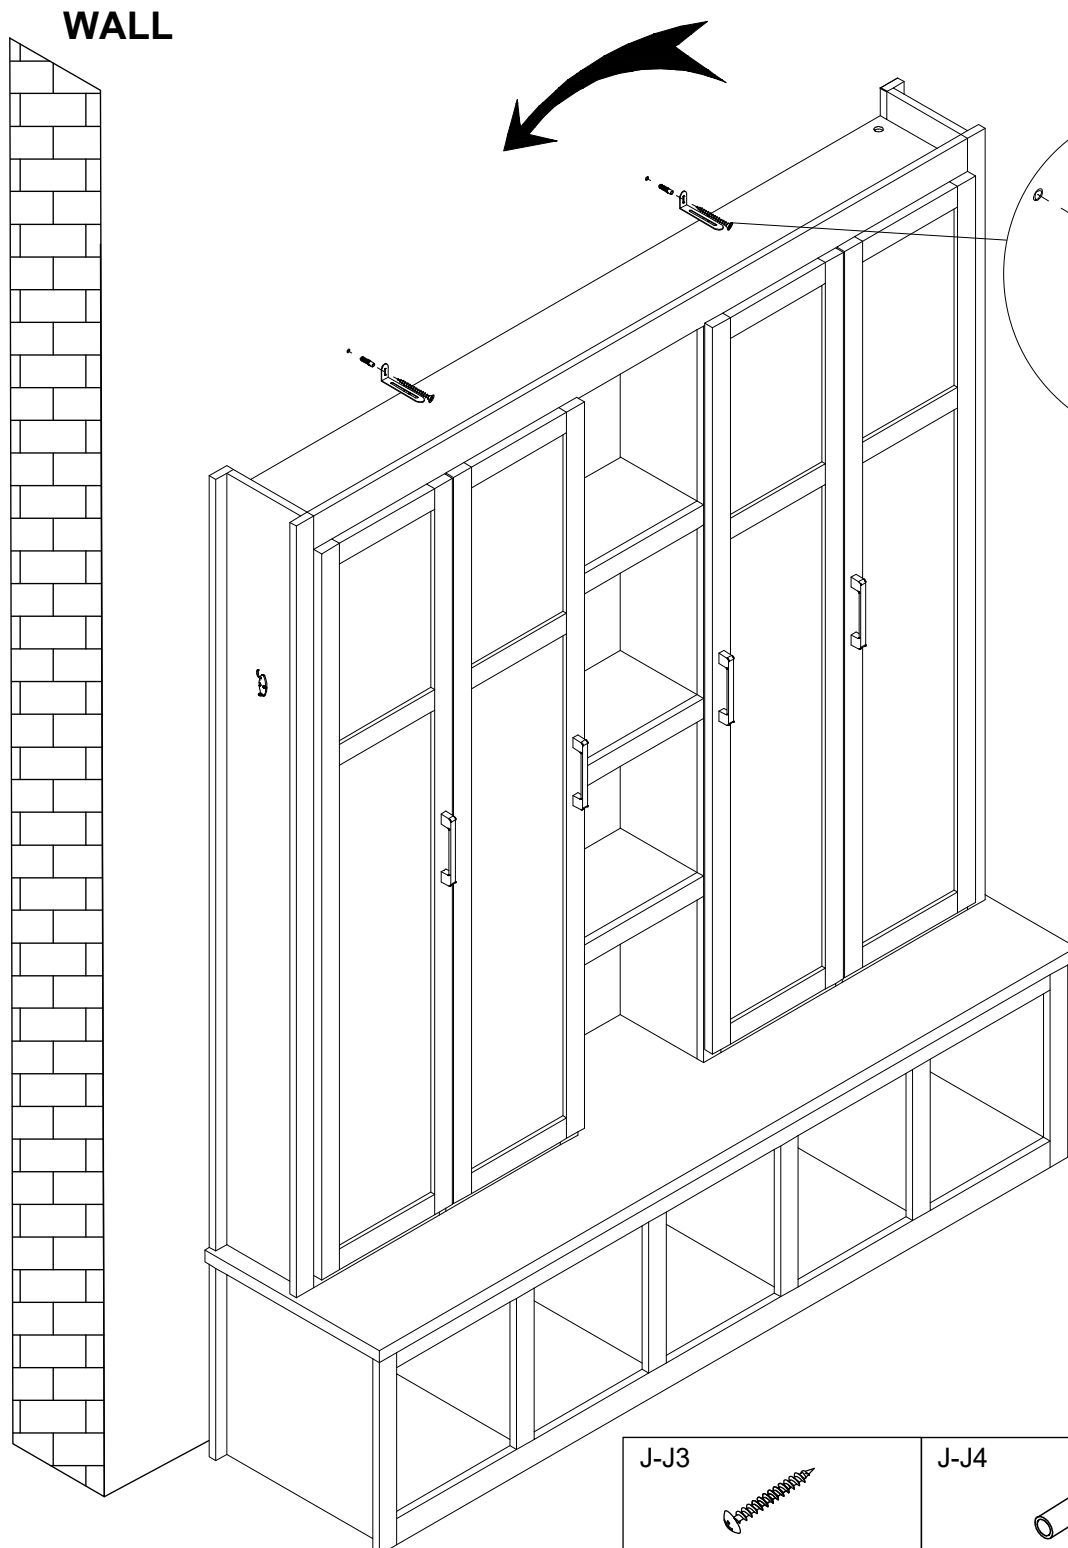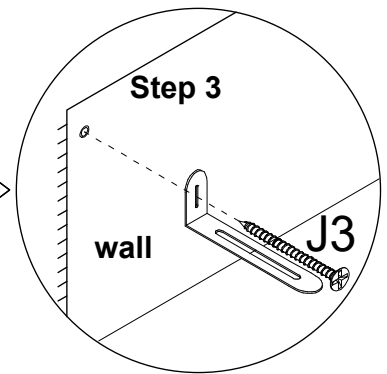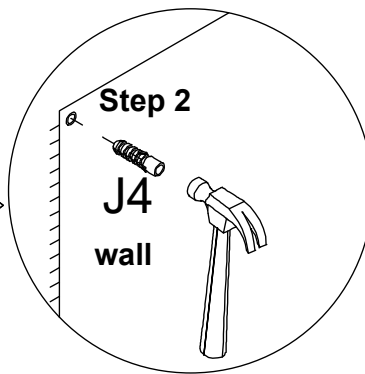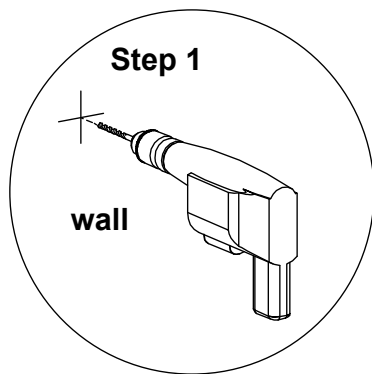

J-J3



x 2set

J-J4



x 2set

COMPLETED

WALL

