


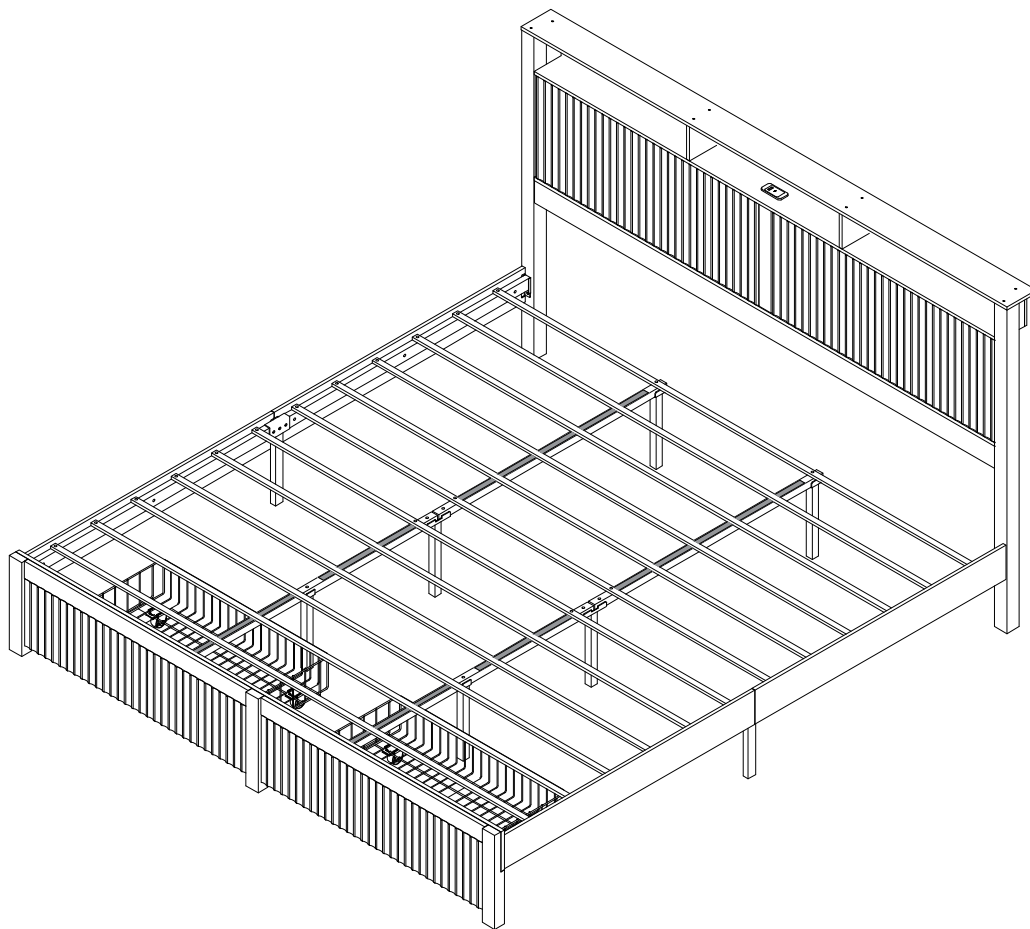


Note:

Should be assembled on flat ground to keep balance.


It needs at least two people to install.

Before starting the assembly, you must read the whole manual and follow the instructions.

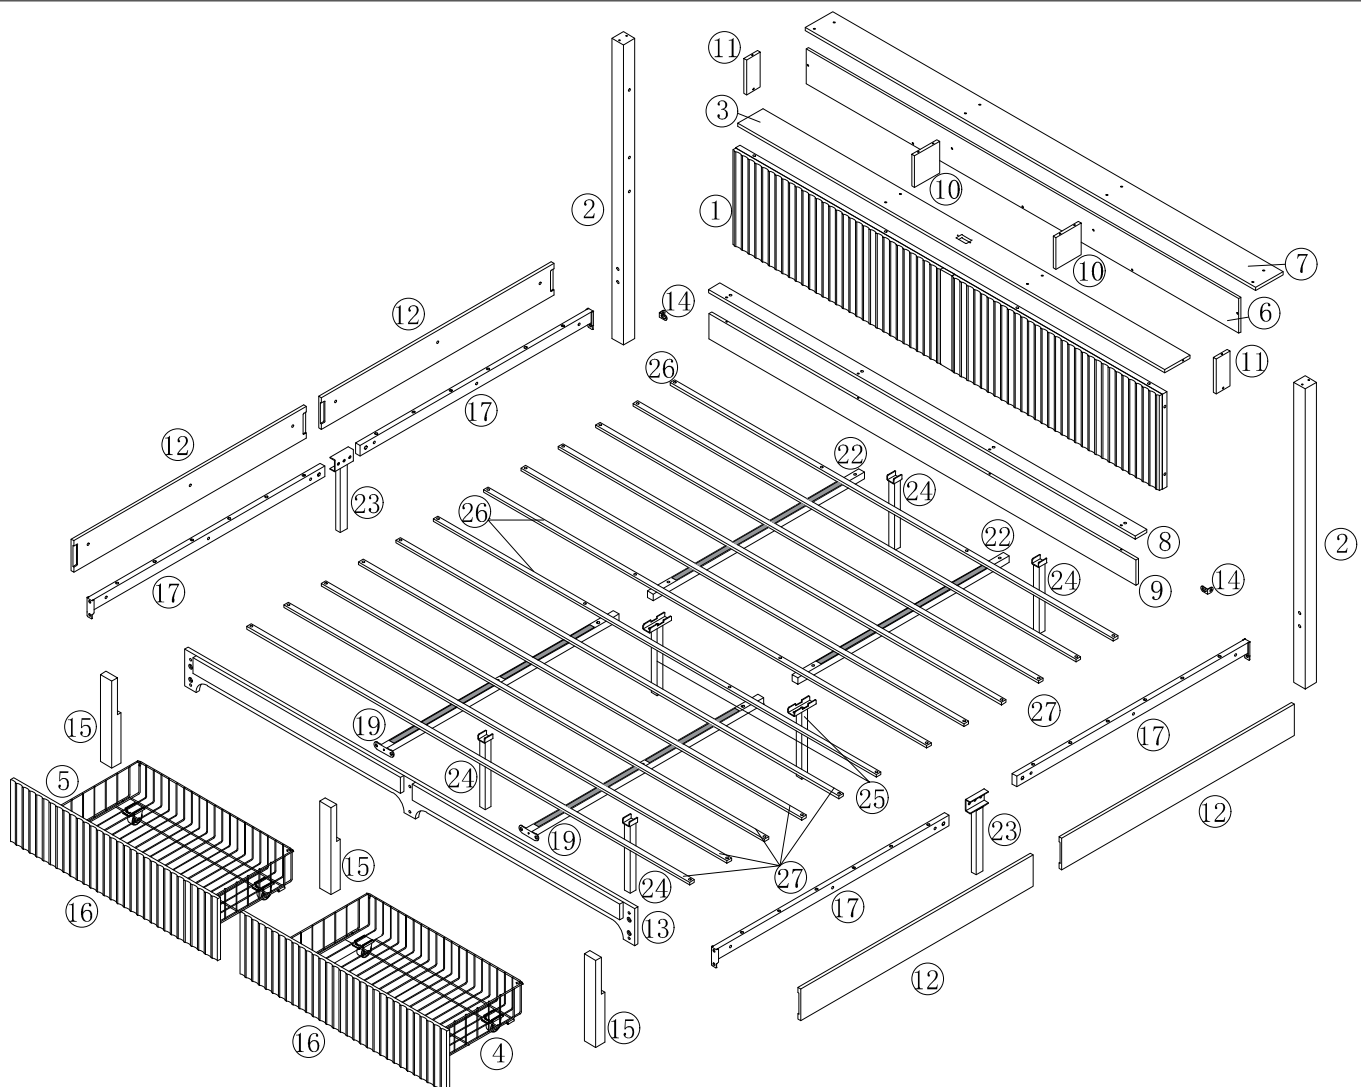





Pls make sure all the accessories are complete!

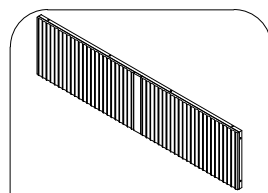


① 1pc

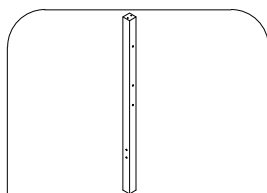


② 2pcs

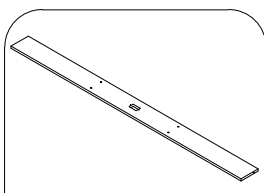


③ 1pc

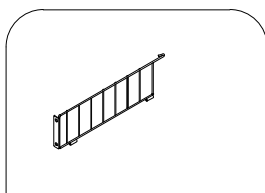


④ 2pcs

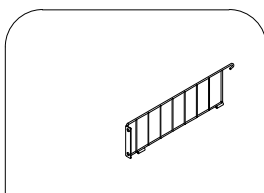


⑤ 2pcs

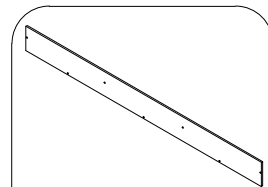


⑥ 1pc

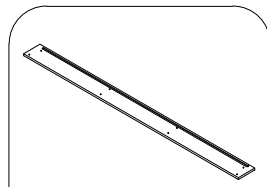


⑦ 1pc

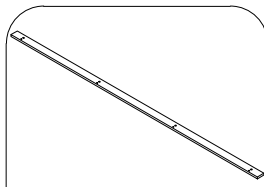


⑧ 1pc

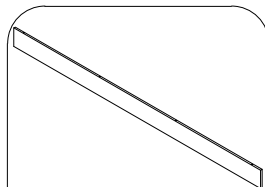


⑨ 1pc

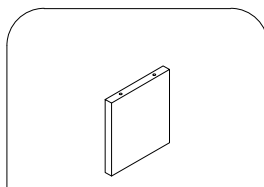


⑩ 2pcs

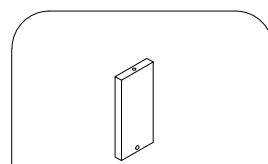


⑪ 2pcs

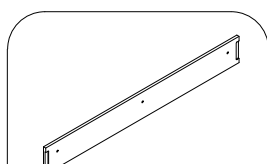


⑫ 4pcs

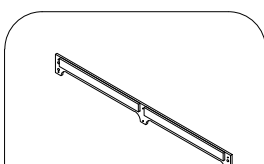


⑬ 1pc

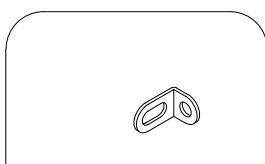


⑭ 2pcs

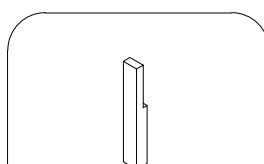


⑮ 3pcs

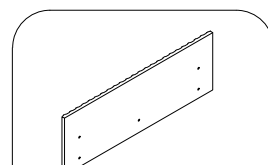


⑯ 2pcs

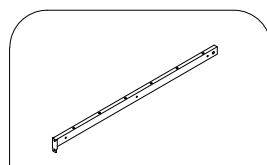


⑰ 4pcs

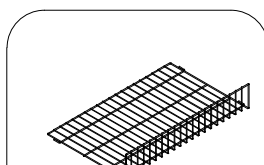


⑱ 2pcs

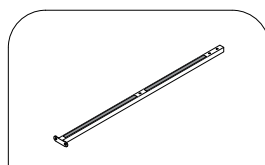


⑲ 2pcs

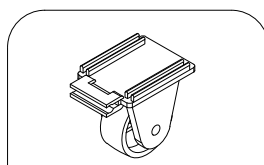


⑳ 8pcs

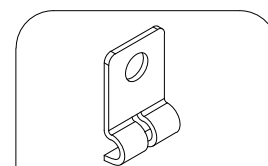


㉑ 2pcs

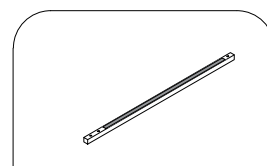


㉒ 2pcs

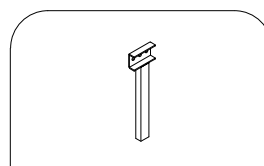


㉓ 2pcs

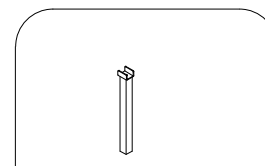


㉔ 4pcs

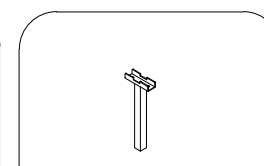


㉕ 2pcs

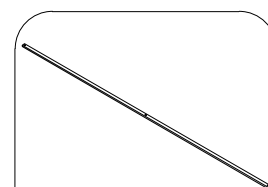


㉖ 3pcs

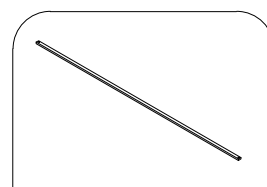


㉗ 9pcs

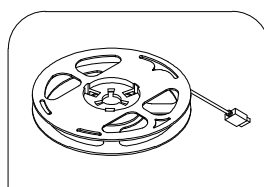


㉘ 1pc

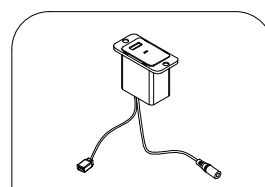


㉙ 1pc

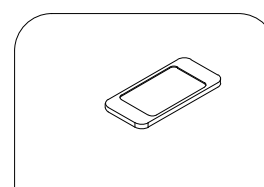


㉚ 1pc

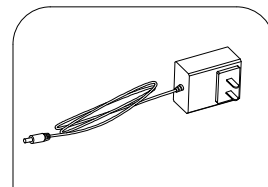

㉛ 1pc

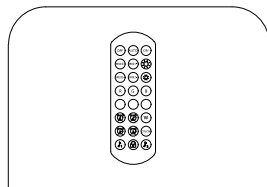

㉜ 1pc



M5x40mm

Ⓐ 25pcs



M6x28mm

Ⓑ 34pcs



M3x15

Ⓒ 2pcs




M6x10mm

Ⓓ 14pcs



M8x35mm

Ⓔ 10pcs



M8x60mm

Ⓕ 6pcs



M6x18mm

Ⓖ 4pcs



M8x15mm

Ⓗ 4pcs




M6x55mm

Ⓙ 24pcs



M6

Ⓚ 28pcs



S5

1pc



S4

1pc



S3

1pc




PH2

1pc


Step1

A



M5x40mm

4pcs

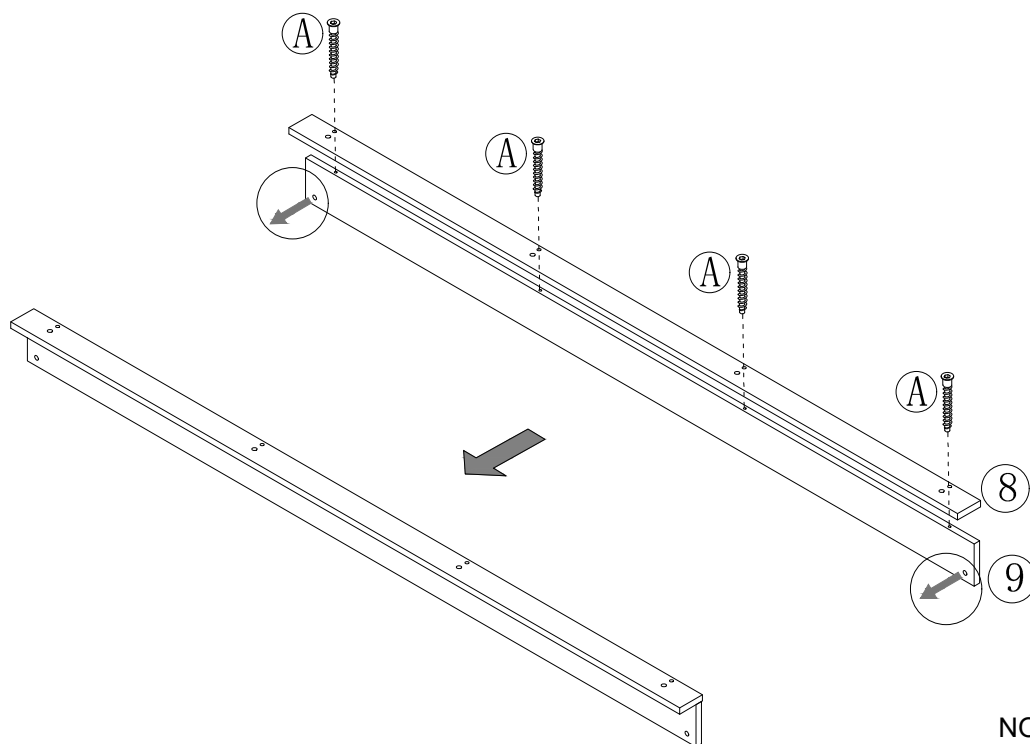

NOTE:

Ensure that the two holes of part 9 face forward, as shown in the figure.


Step2

B




M6x28mm

4pcs

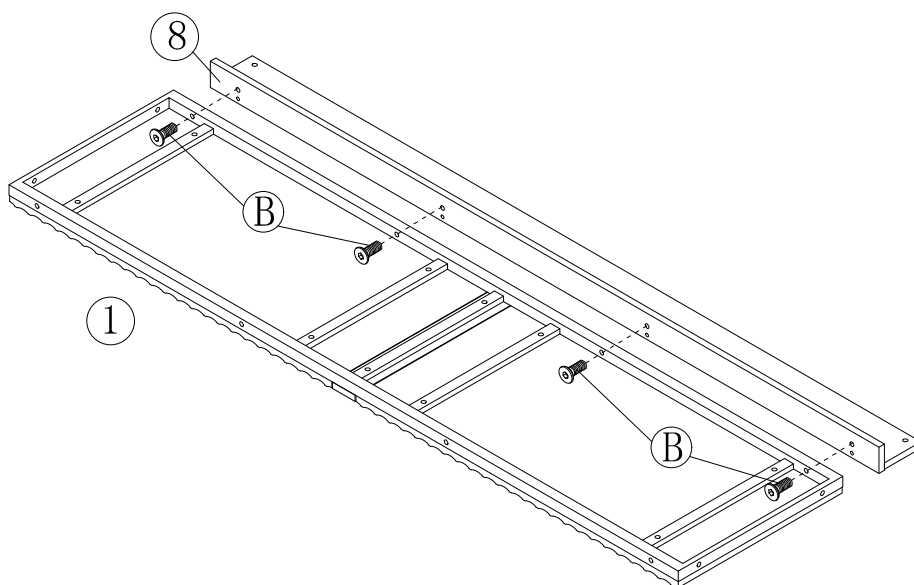


Step3

A




M5x40mm

4pcs

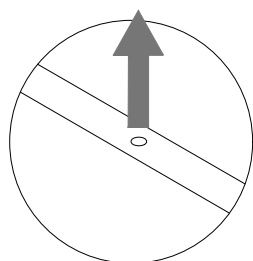

NOTE:

Make sure the side with hole of part (3)&(10) are facing upwards as shown.

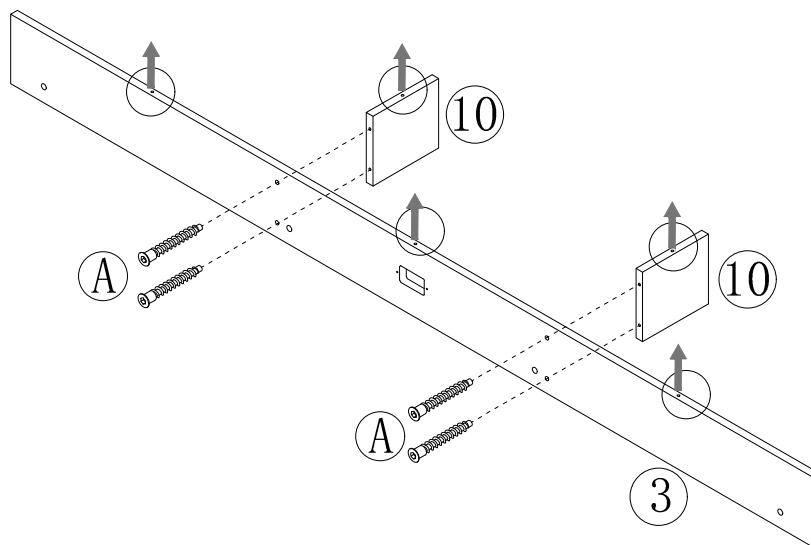


Step4

B




M6x28mm

4pcs

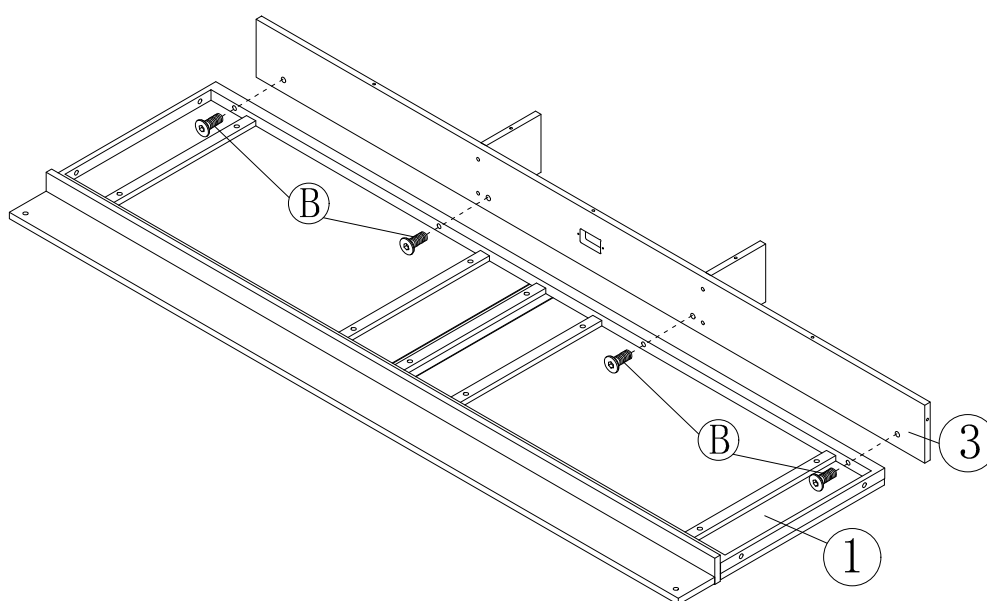


Step5

B		M6x28mm	4pcs
---	---	---------	------

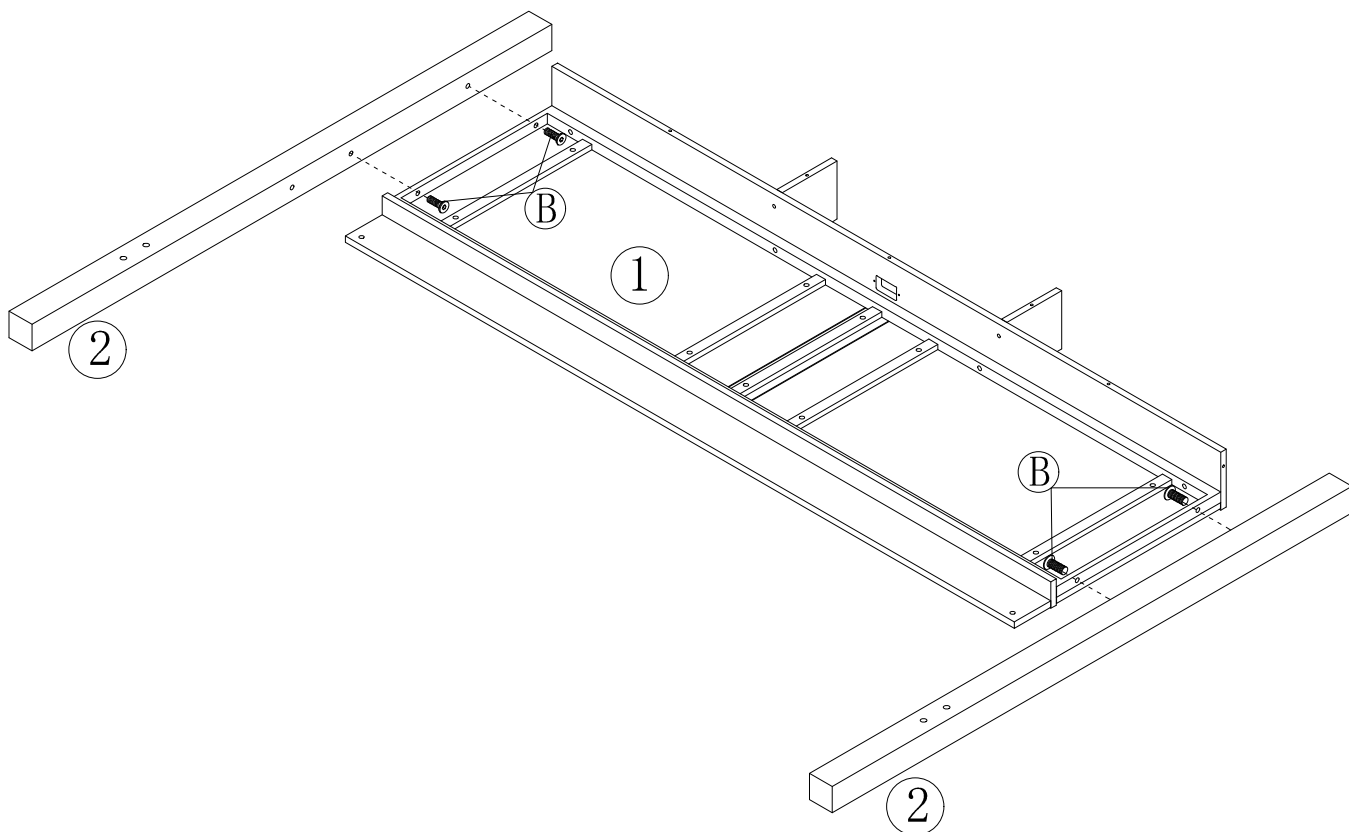

Step6

A		M5x40mm	2pcs
D		M6x10mm	4pcs

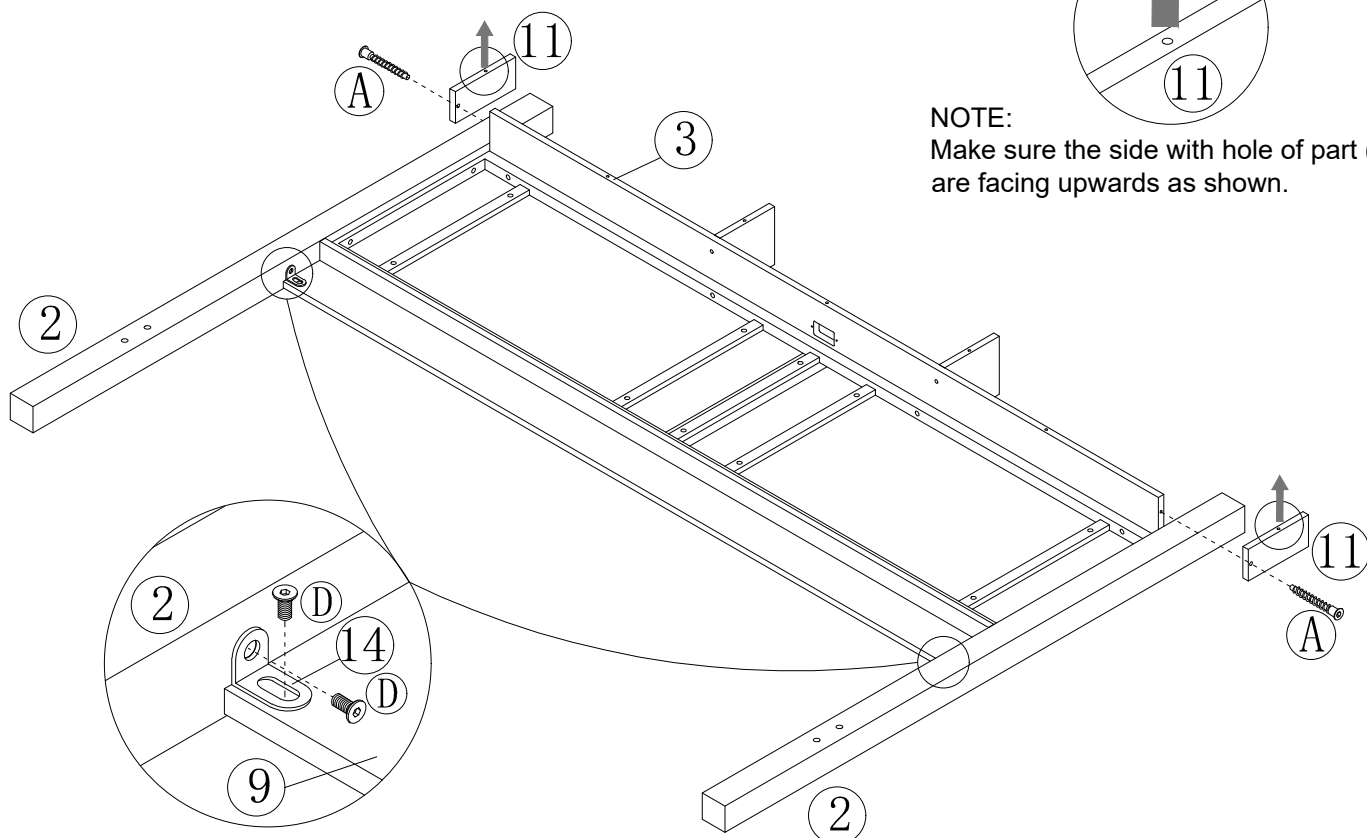


Step7

A





M5x40mm


7pcs

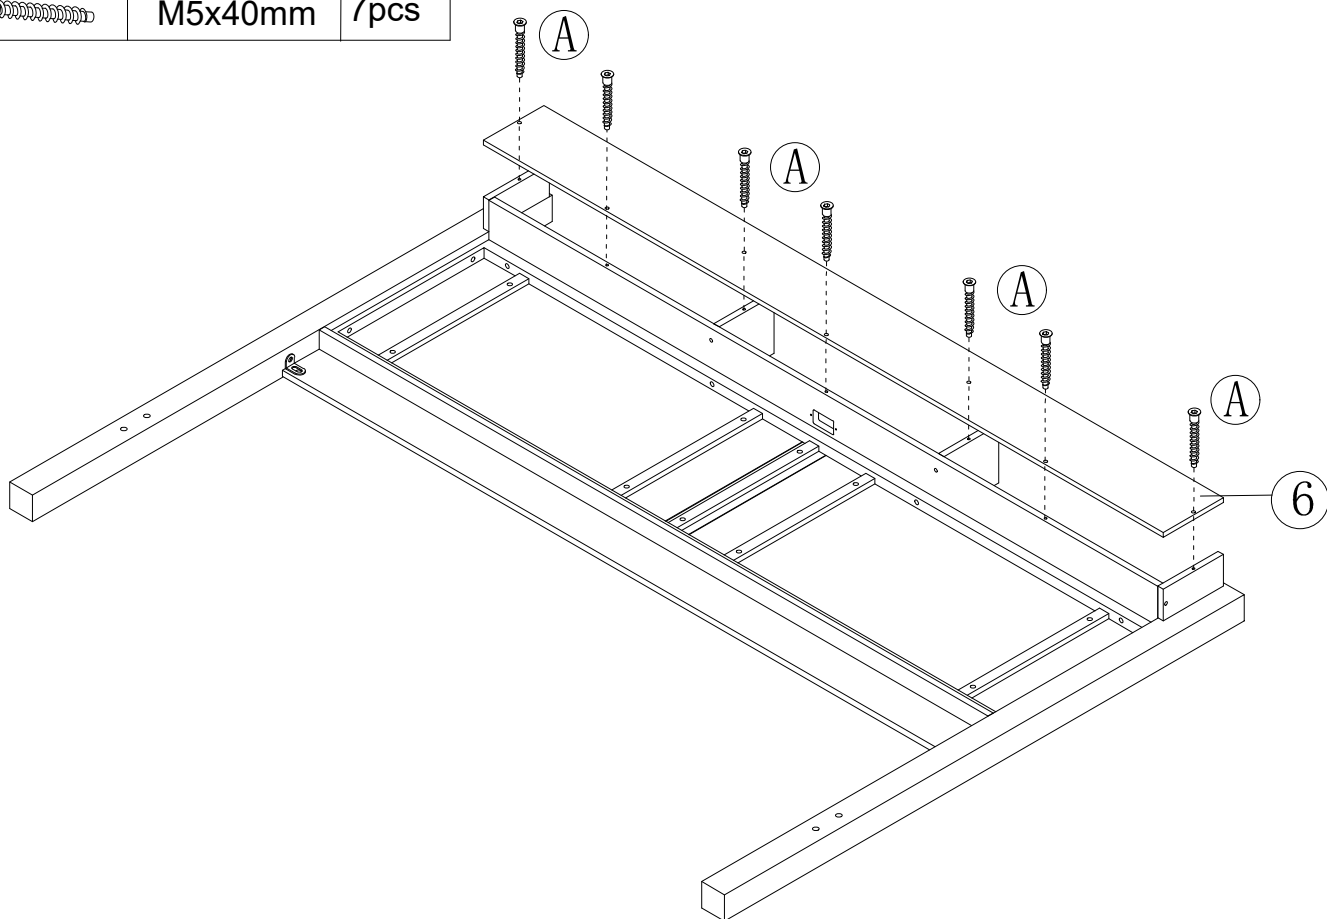


Step8

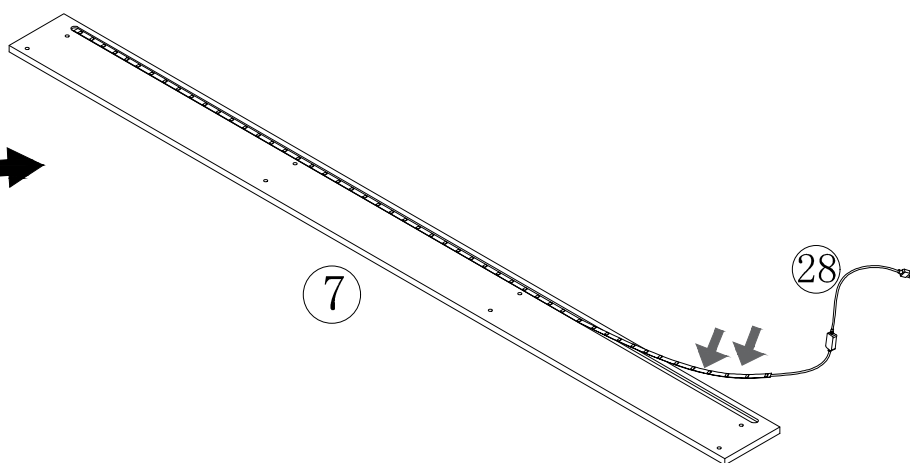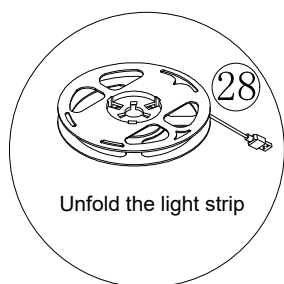



Step9

A		M5x40mm	8pcs
---	---	---------	------

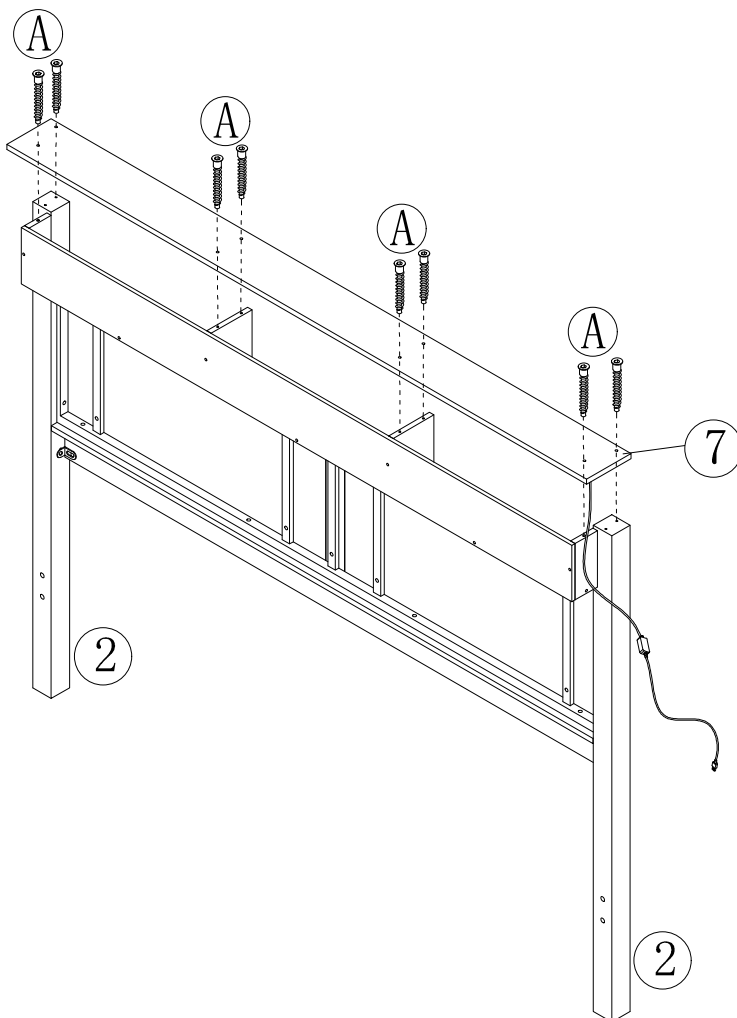


Step10


G		M6x18mm	4pcs
K		M6	4pcs

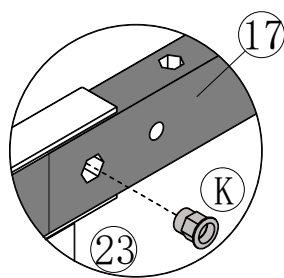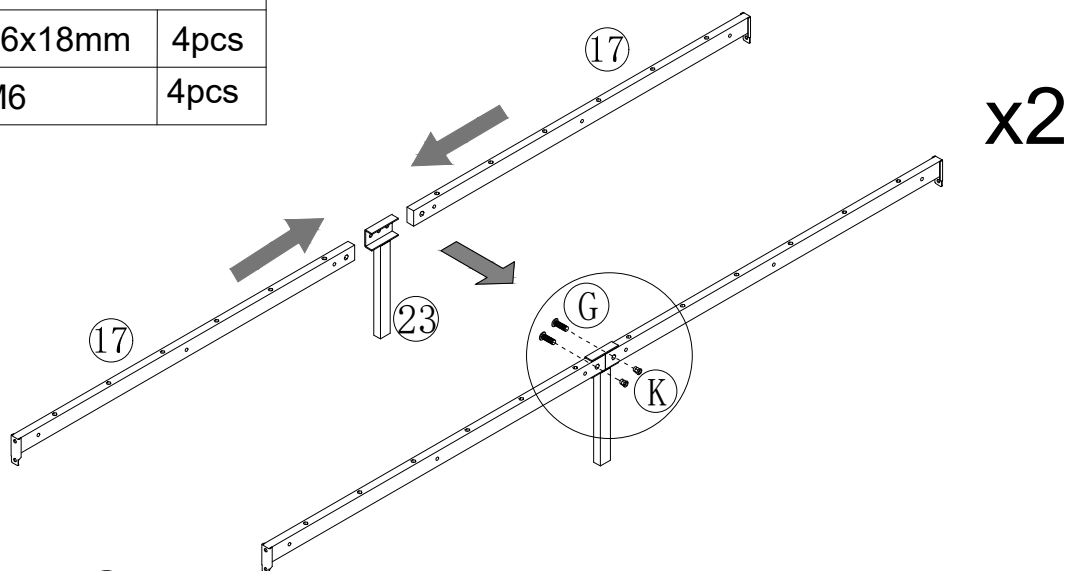

STEP1
First, place nut K onto
iron piece number 17.

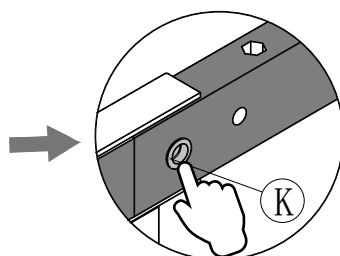

STEP2
Hold the nut k with your hand
to prevent it from falling off

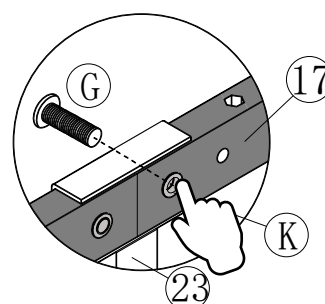


STEP3
Use screw G to connect 23# iron
piece, 17# iron piece, and nut K
together

Step11

E		M8x35mm	6pcs
---	---	---------	------


Please note that the side with EVA is upward during installation.

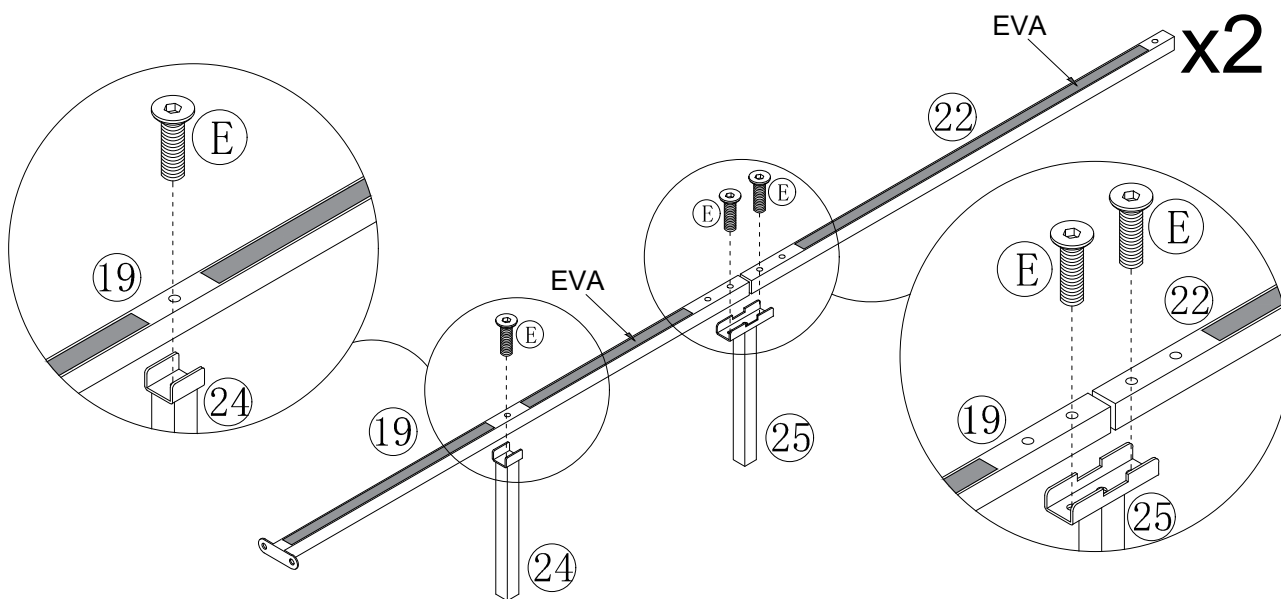

Step12


F		M8x60mm	4pcs
---	---	---------	------

NOTICE:
Please ensure that the specific side of part (23) faces inside.

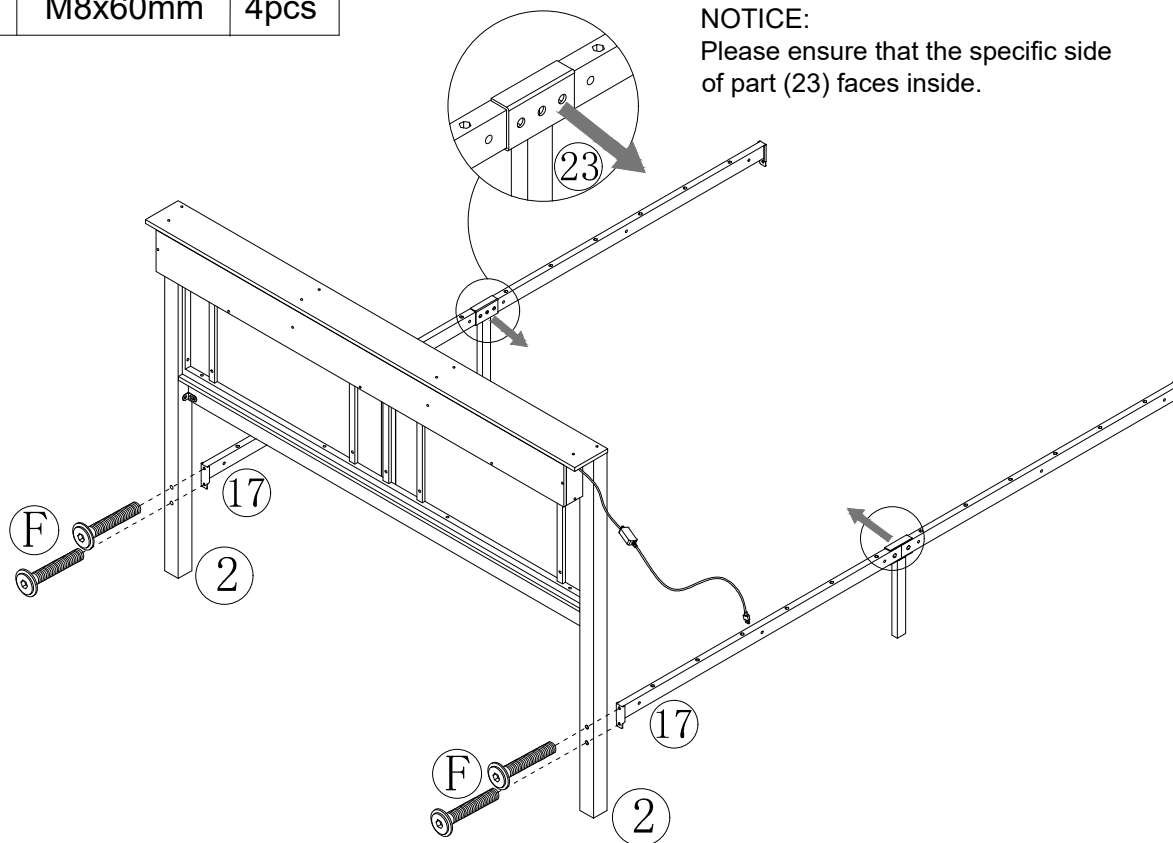


Step13

E		M8x35mm	4pcs
---	---	---------	------

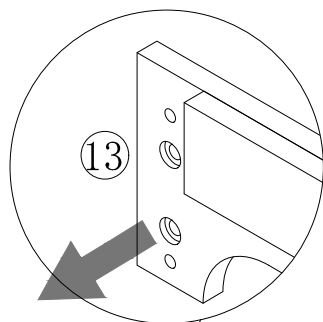


NOTICE:
Please ensure that the specific side
of part (13) faces outward.

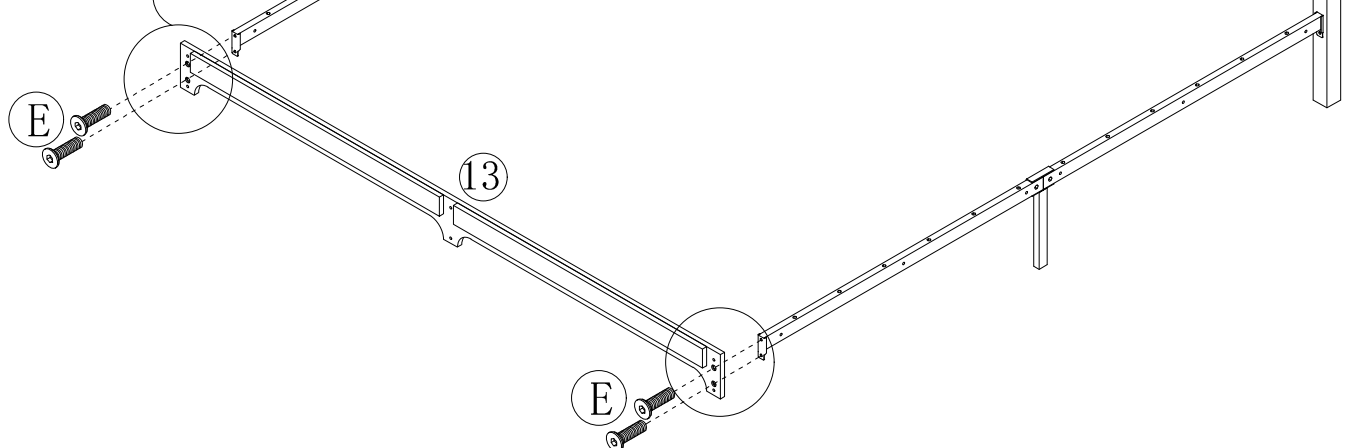

Step14

B		M6x28mm	6pcs
---	---	---------	------

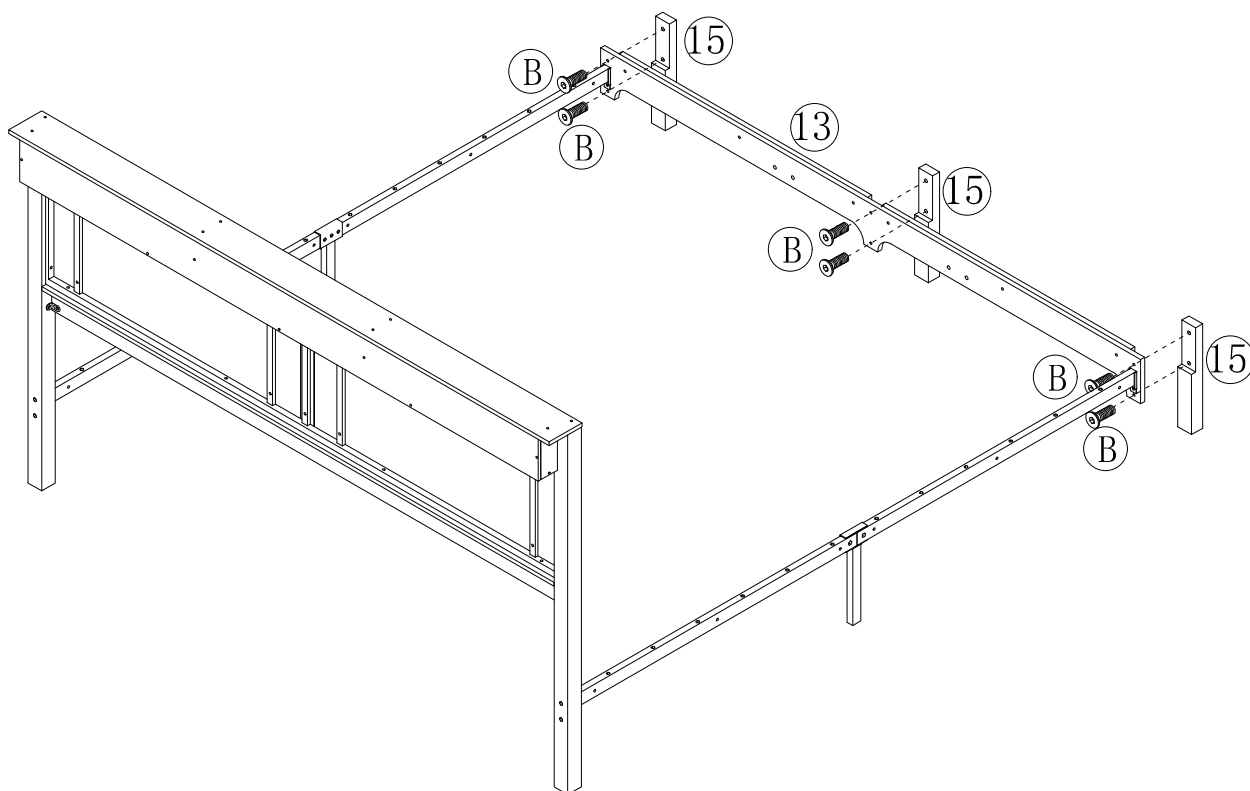


Step15

H



M8x15mm

4pcs

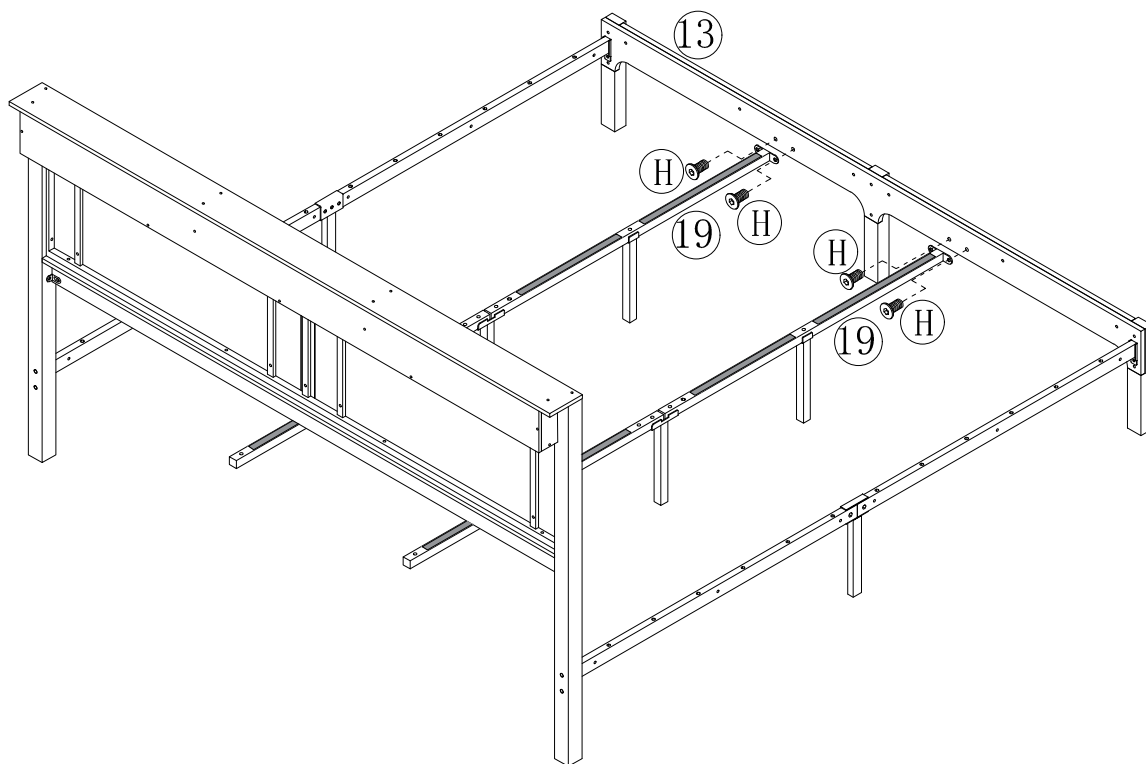


Step16

B



M6x28mm



12pcs

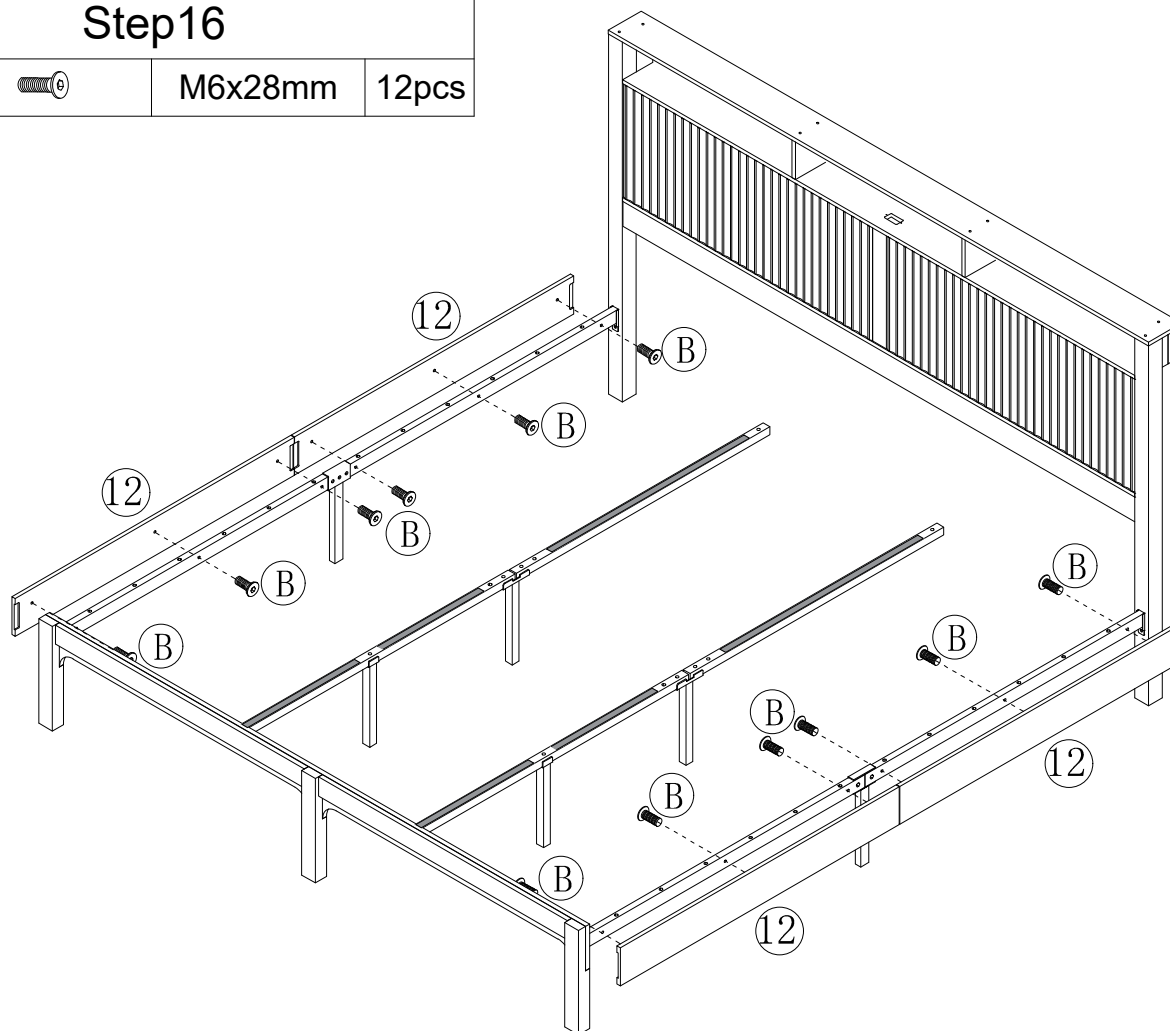

Step17


J  M6x55mm 6pcs

K  M6 6pcs

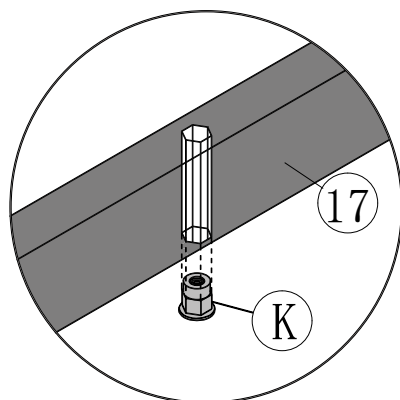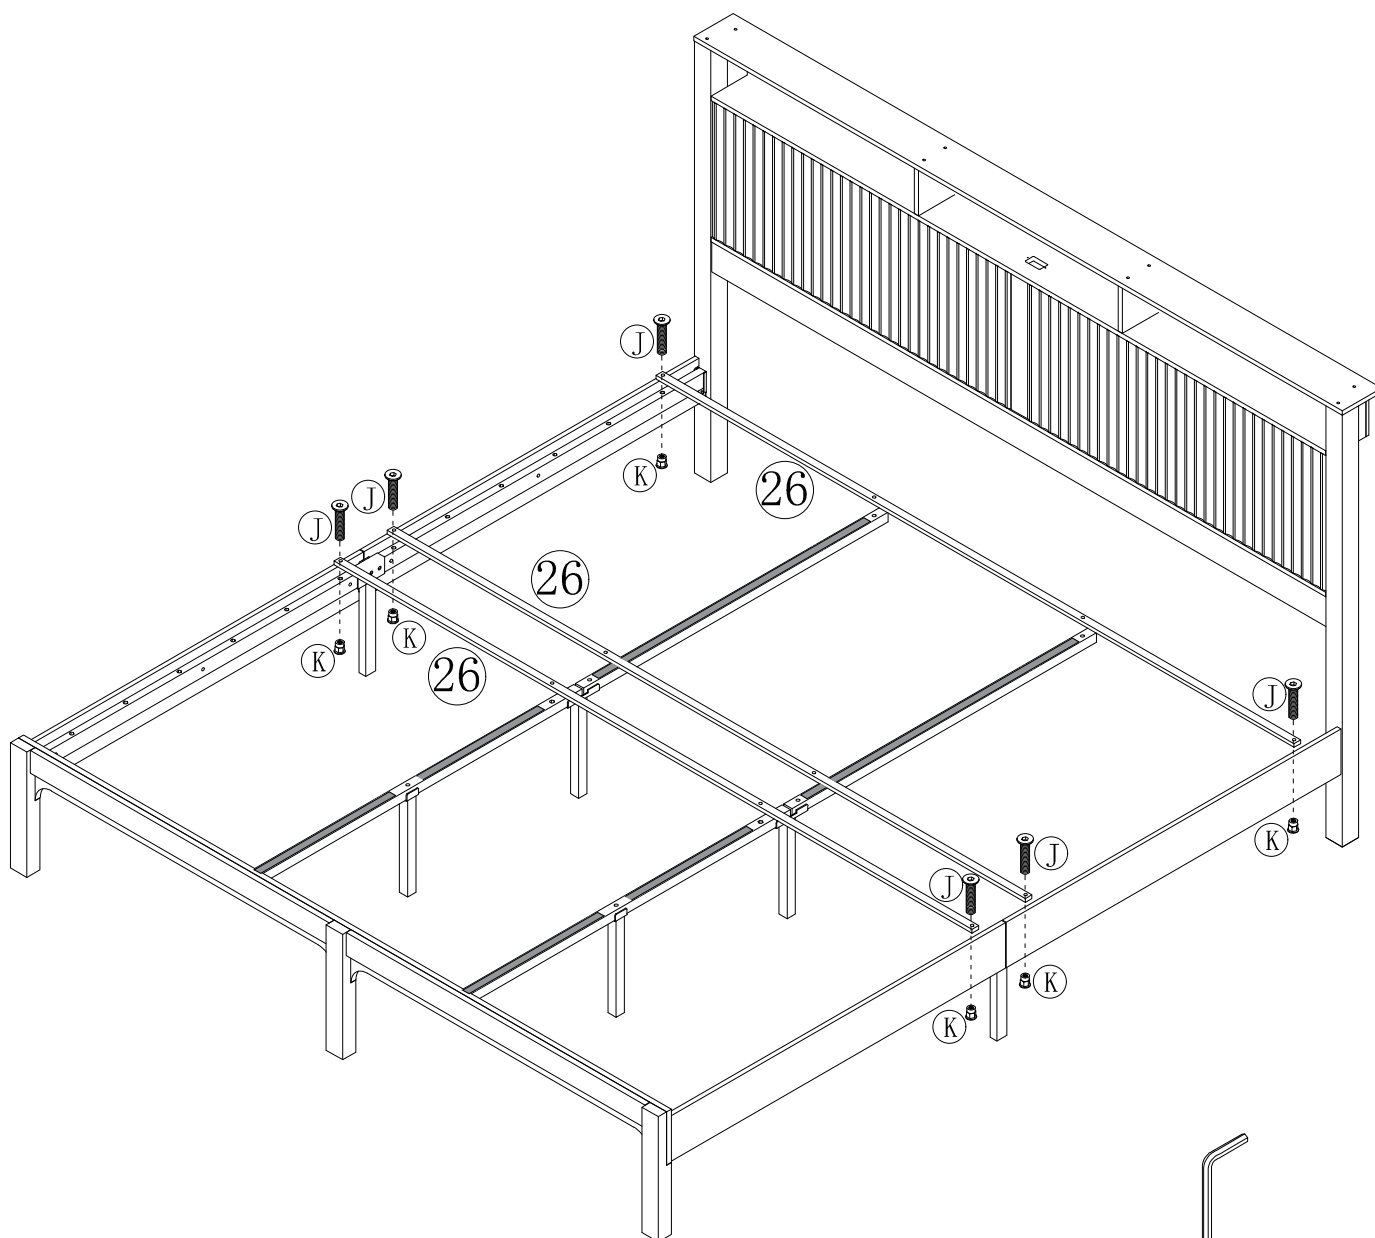


STEP1

First, place nut K onto iron piece number 17.

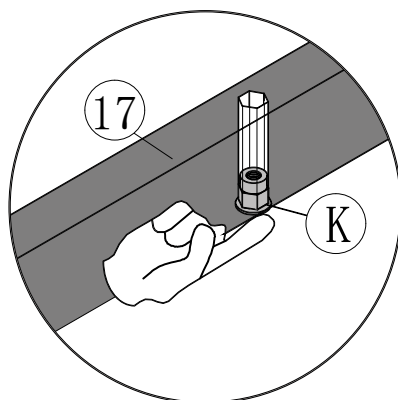

STEP2

Hold the nut k with your hand to prevent it from falling off

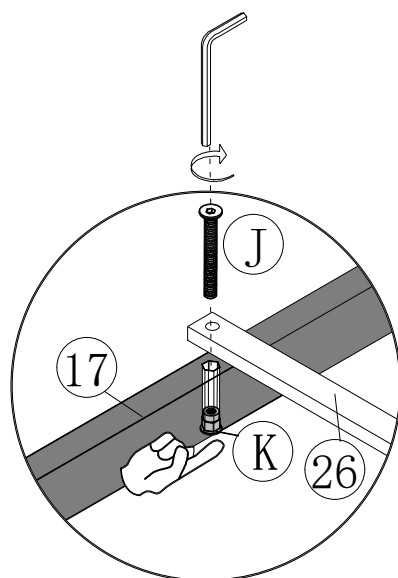


STEP3

Use screw J to connect 26# iron piece, 17# iron piece, and nut K together



Step18

B		M6x28mm	4pcs
F		M8x60mm	2pcs

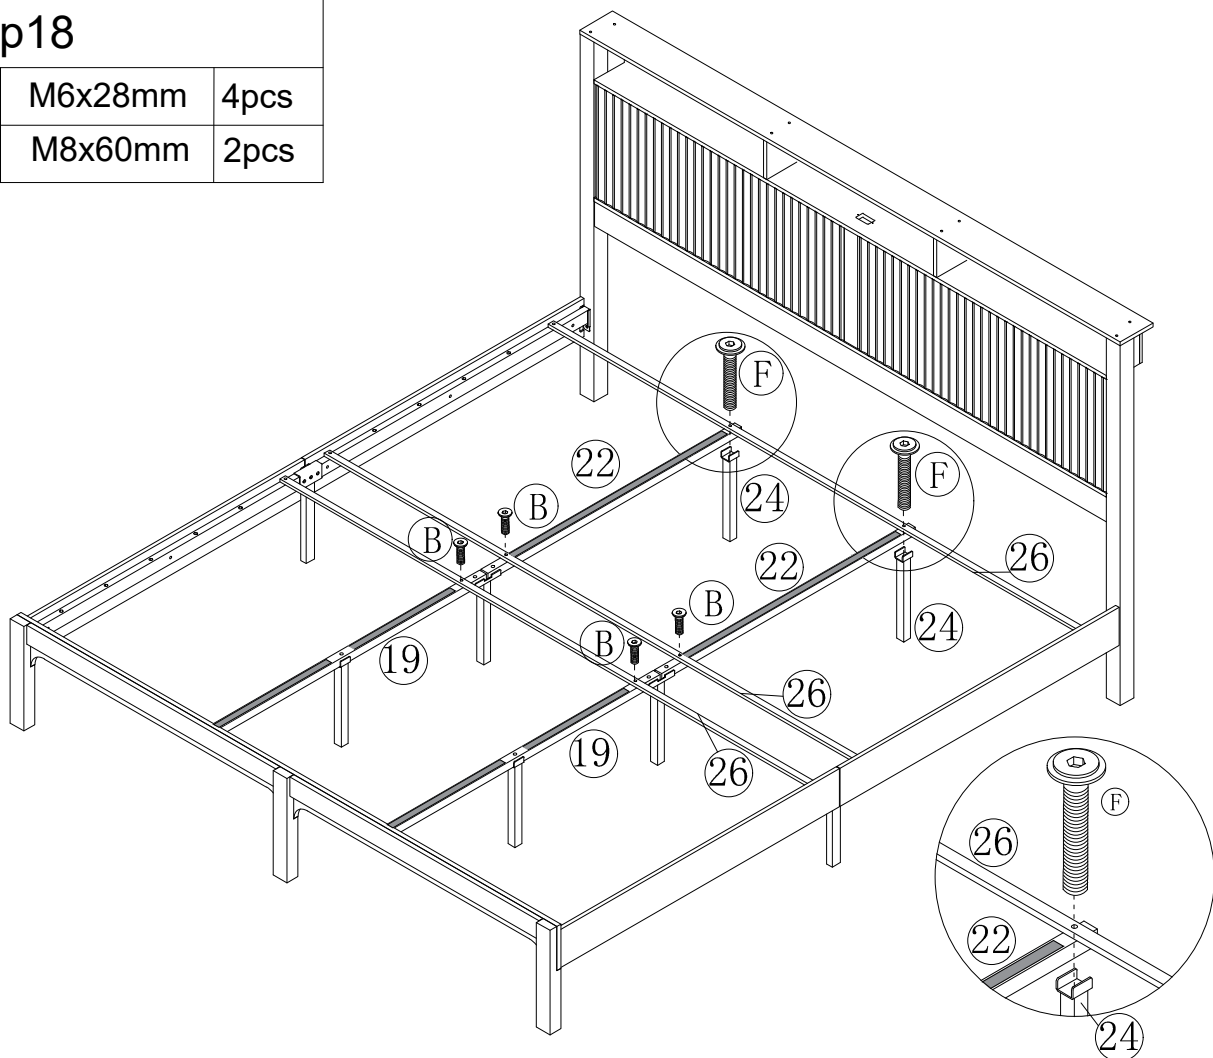






Step19

J		M6x55mm	18pcs
K		M6	18pcs

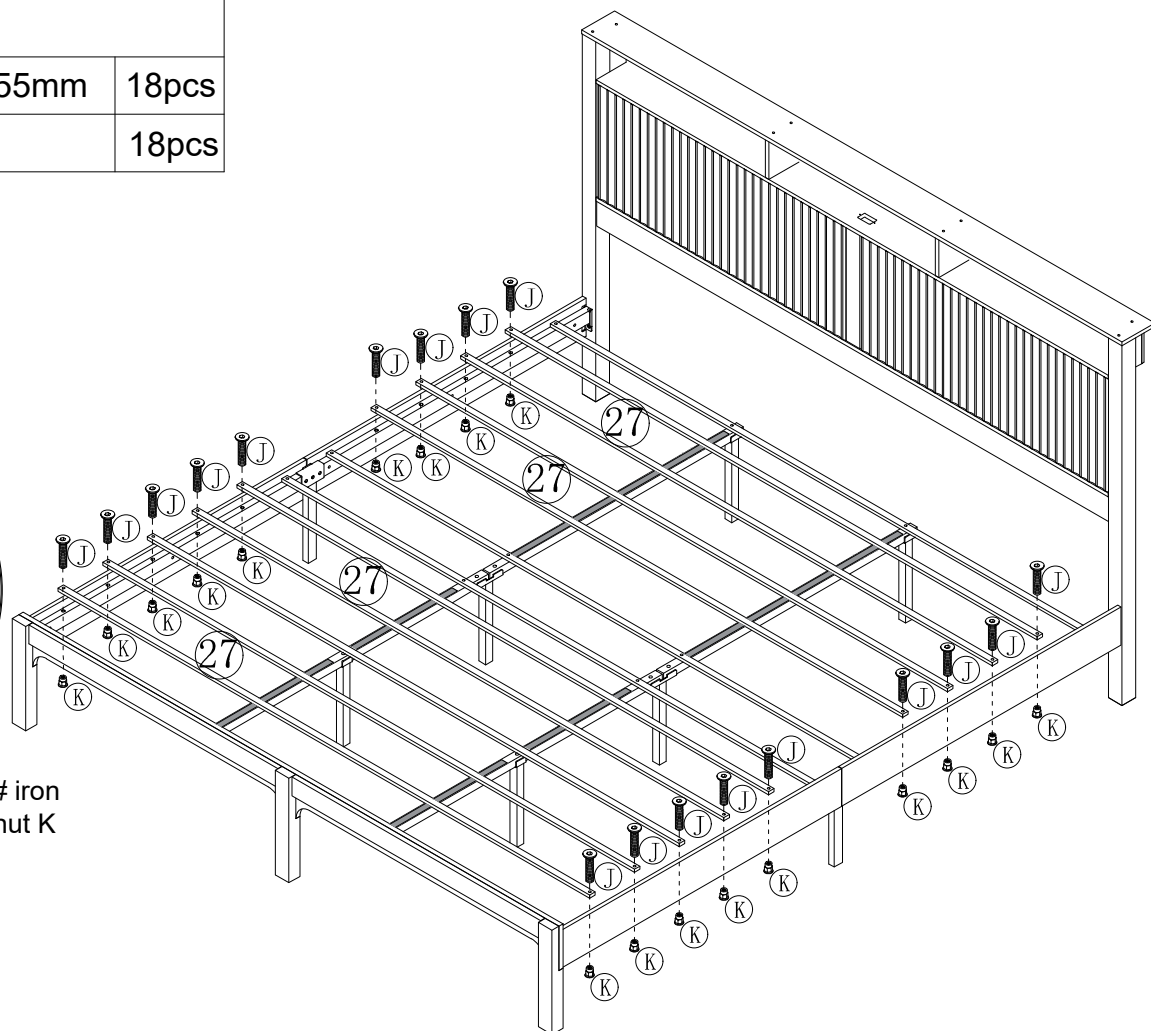
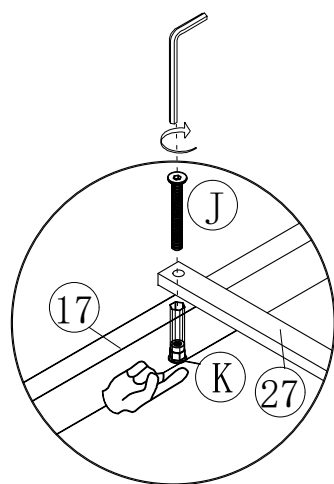


Use screw J to connect 17# iron piece, 27# iron piece, and nut K together

Step20

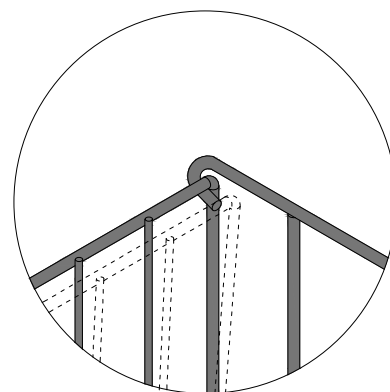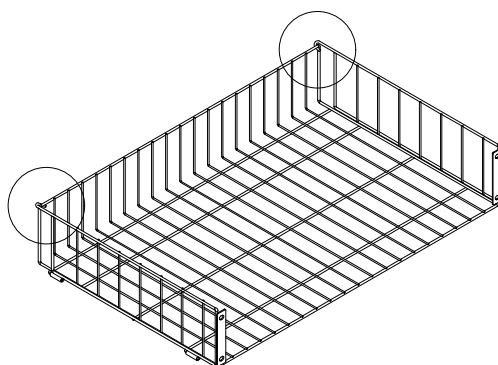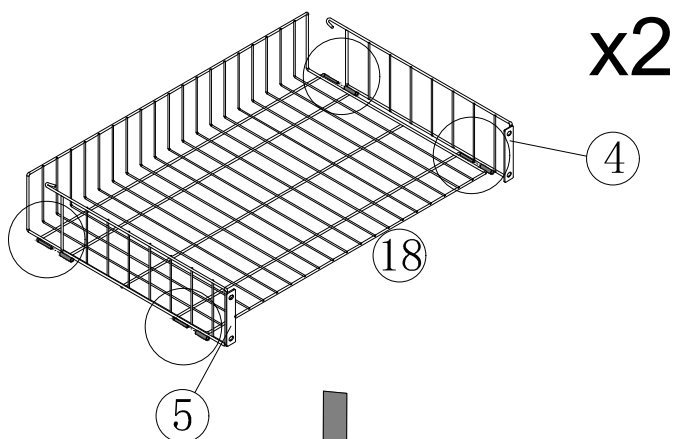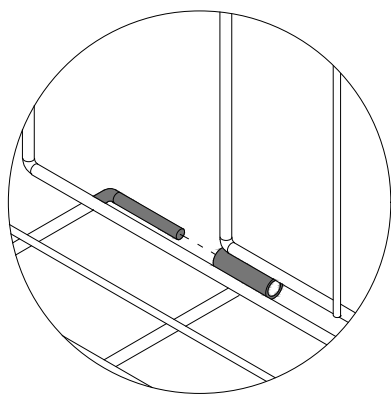

Step21

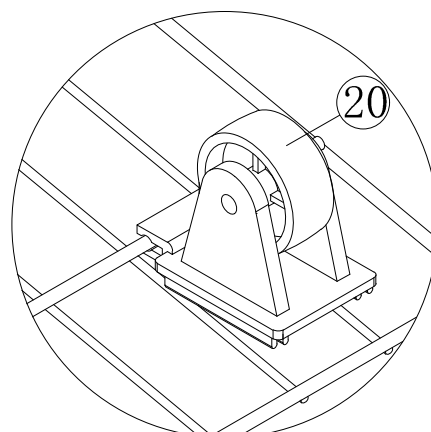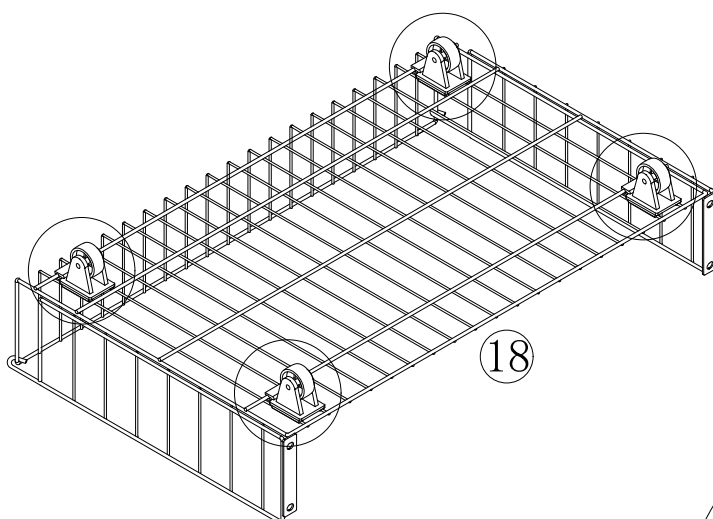


Step22

D




M6x10mm

8pcs

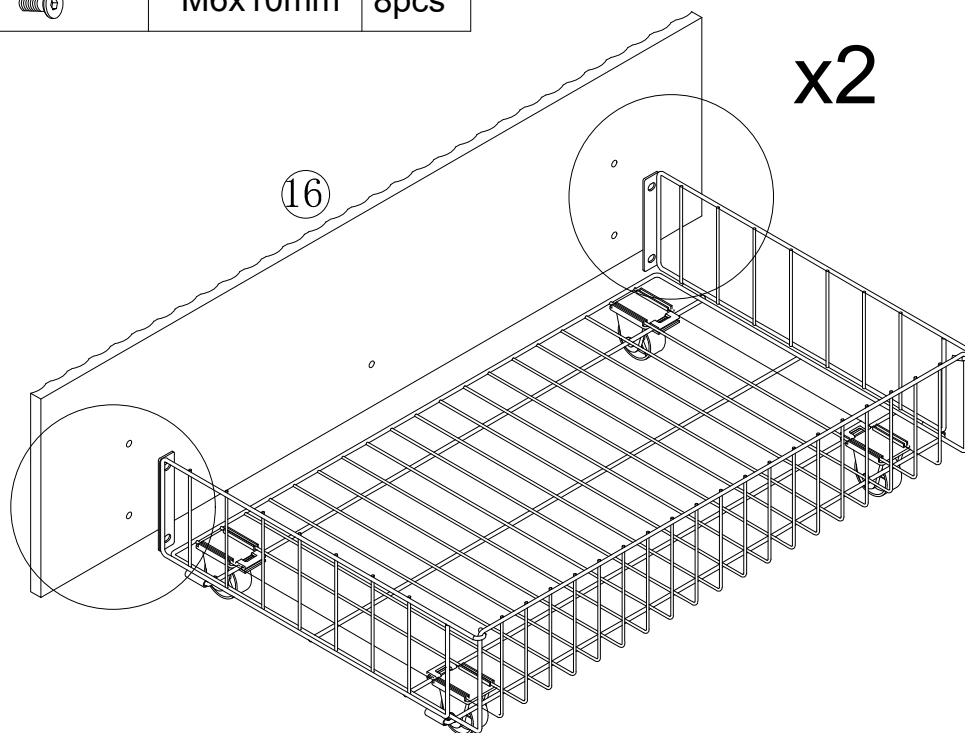

x2

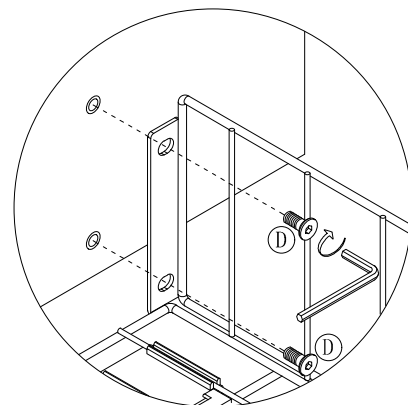


Step23

D




M6x10mm

2pcs

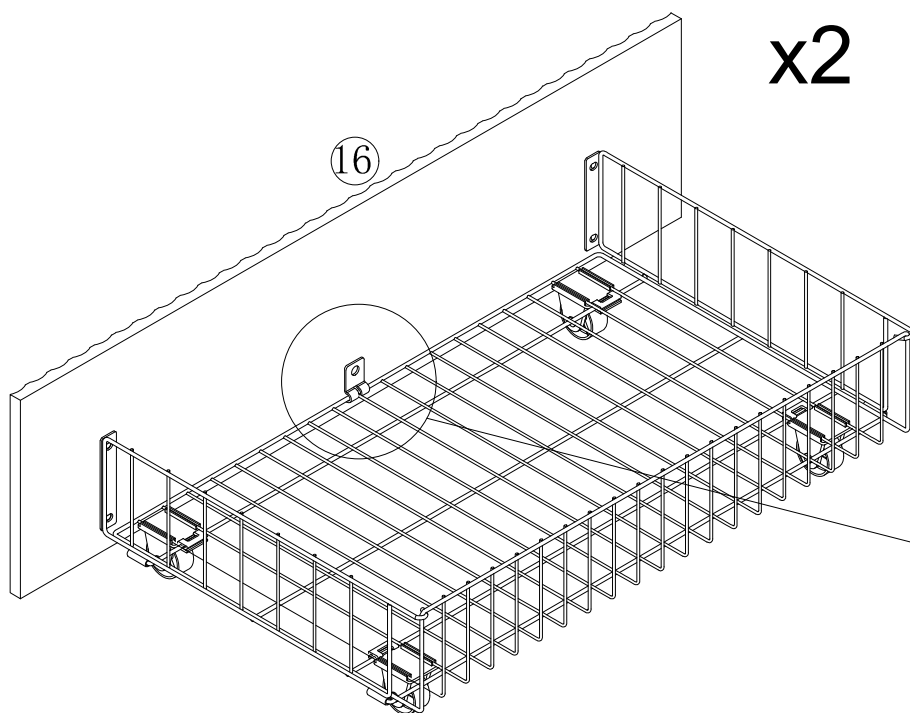


x2

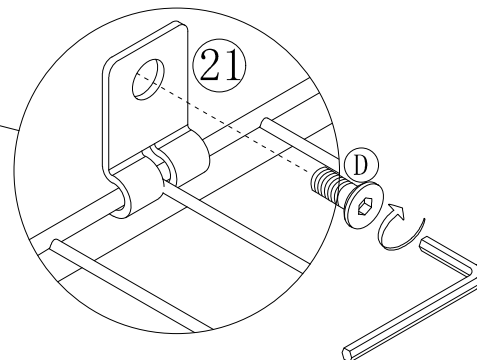


Step24

C		M3x15mm	2pcs
---	---	---------	------

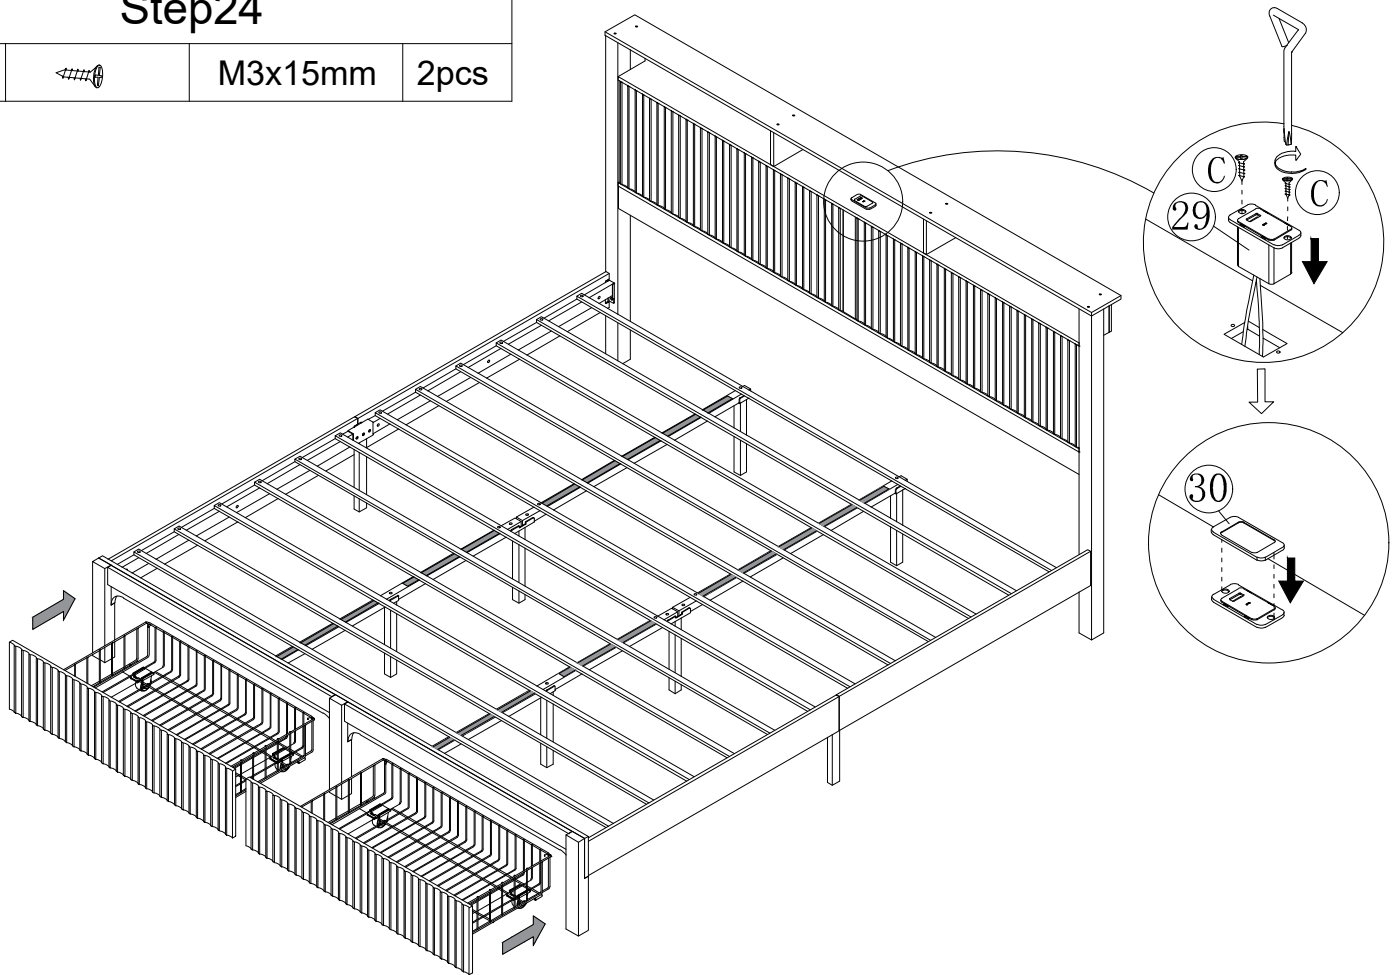

Step25

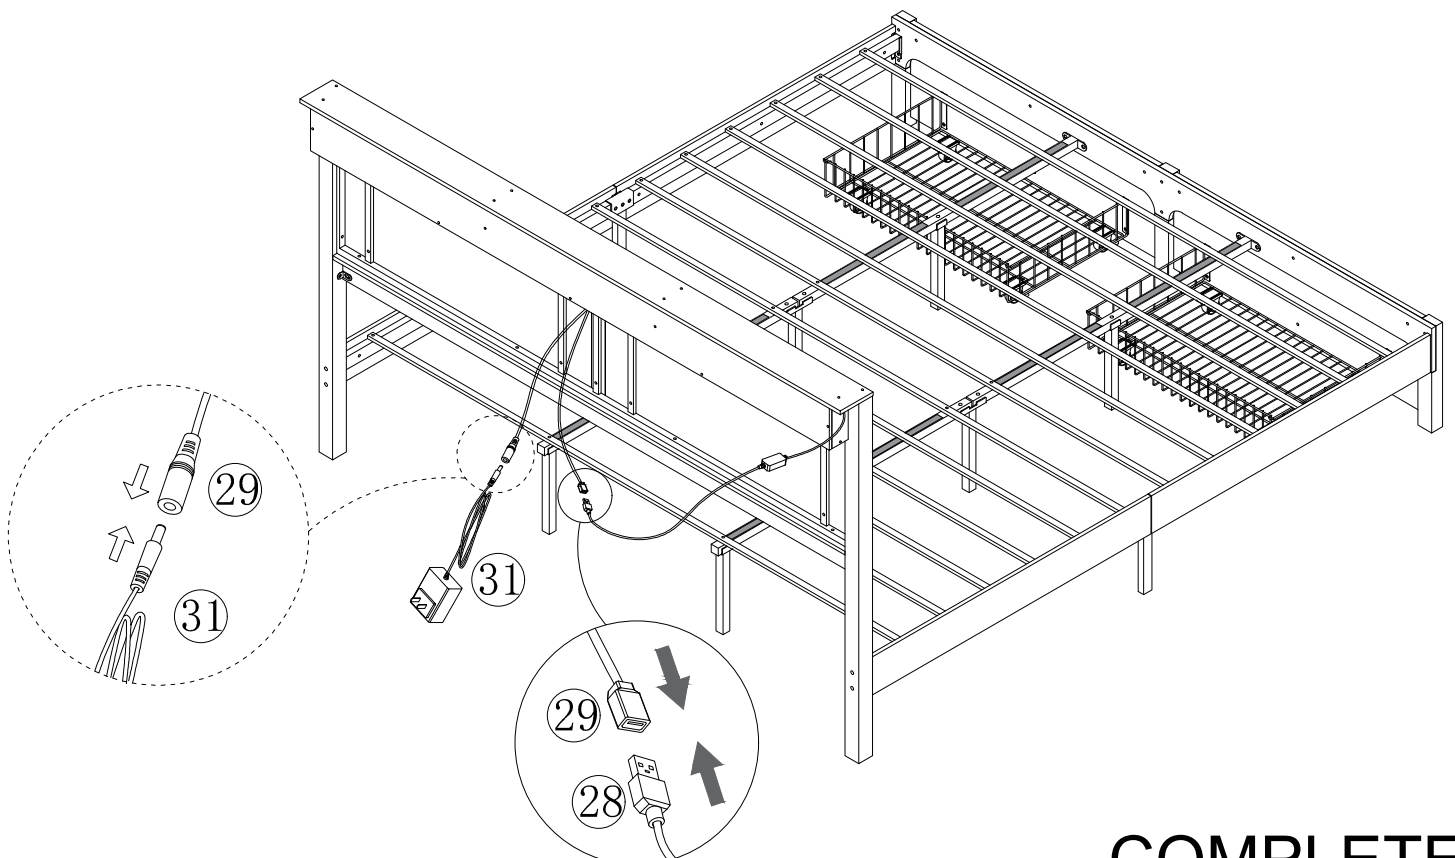

COMPLETE