

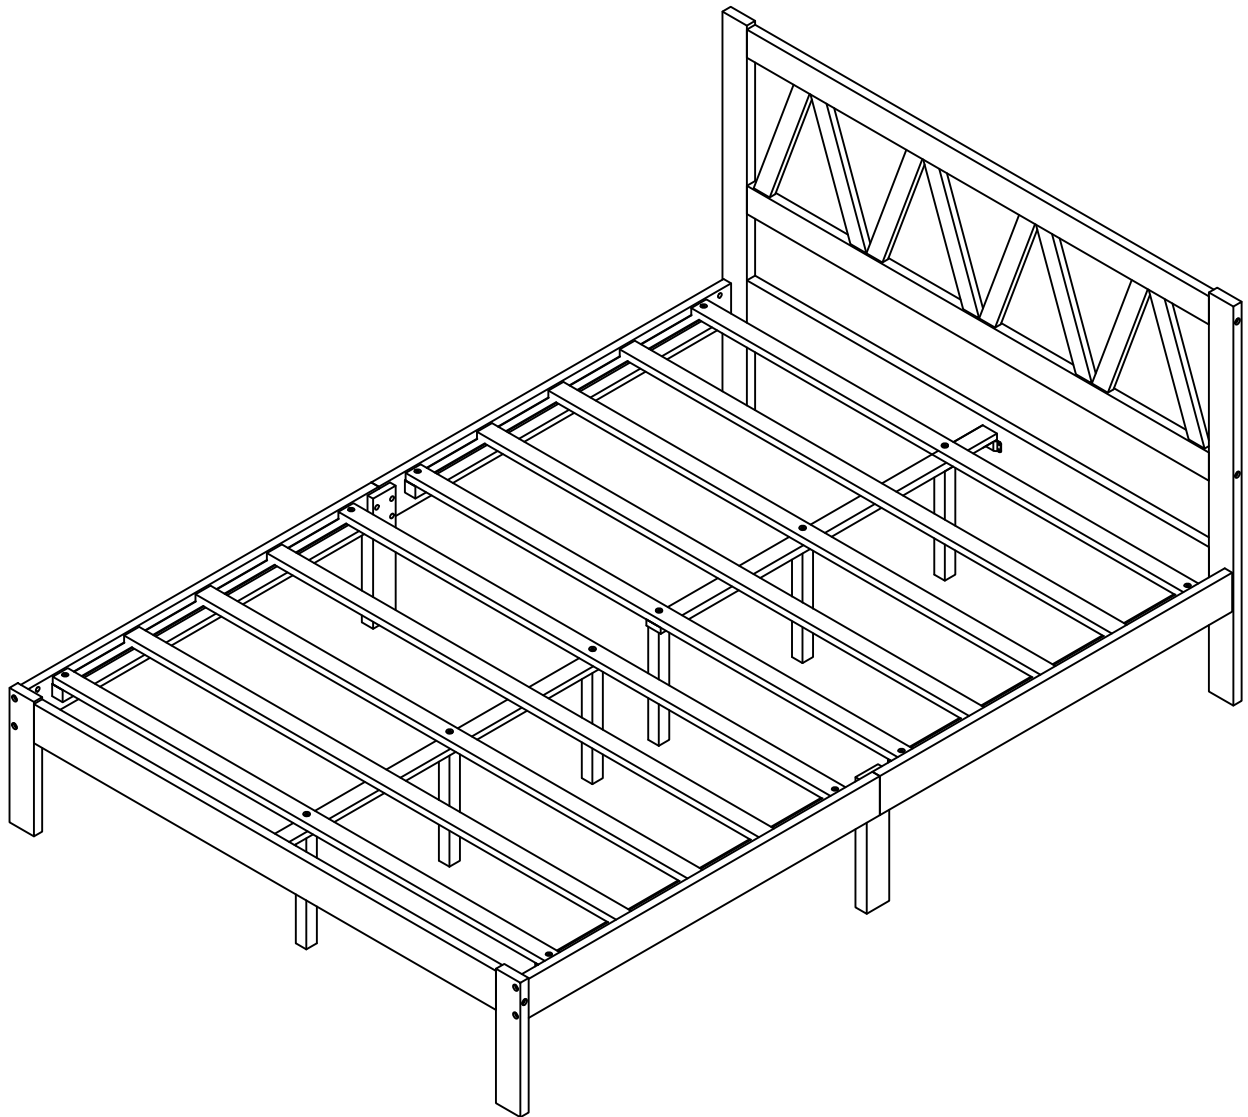








ASSEMBLY INSTRUCTION

MODEL : QUEEN / FULL WOODEN BED

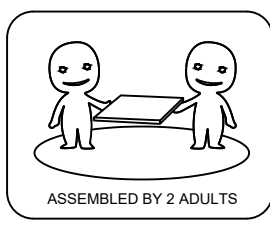


A x 8pcs  M6 x 110 mm	B x 16pcs  M6 x 15 mm	C x 8pcs  Flat Washer	D x 8pcs  M6 x 30 mm
E x 4pcs  M10 x 30 mm	F x 8pcs  M6 x 70 mm	G x 8pcs  M7 x 30 mm	H x 6pcs  Leveler
I x 1pcs  M4 Allen Key	J x 6pcs  M6 x 50 mm		

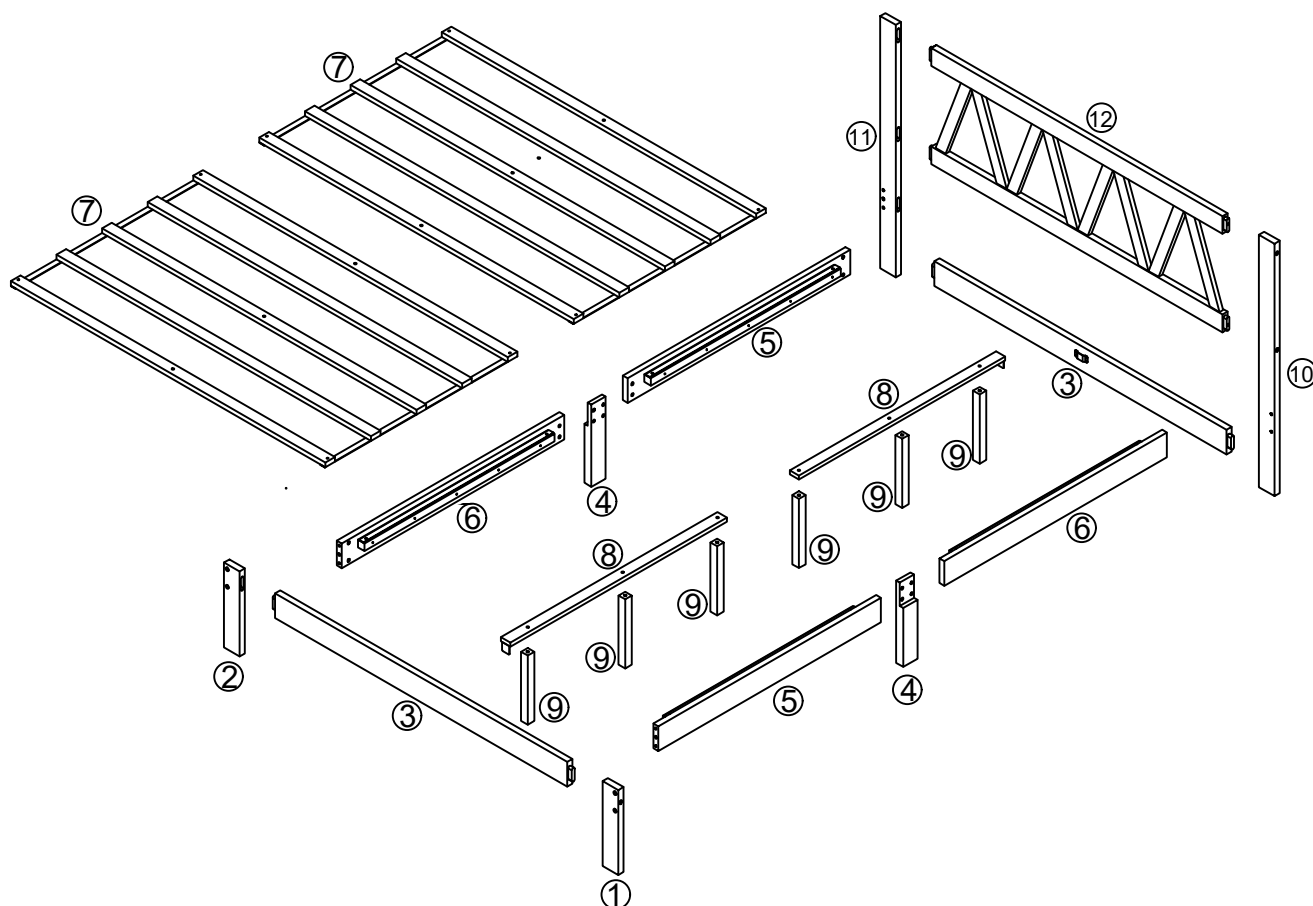


1

A x 2pcs	B x 2pc		I
			
M6*110mm	M6*15mm		M4 Allen Key

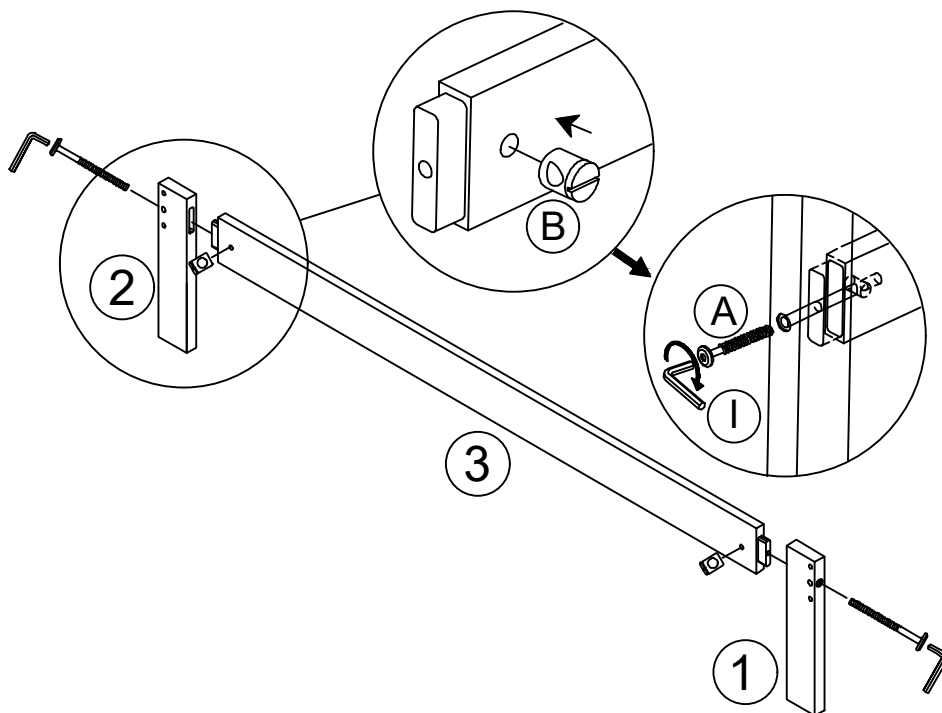

2

A x 6pcs	B x 6pc		I
			
M6*110mm	M6*15mm		M4 Allen Key

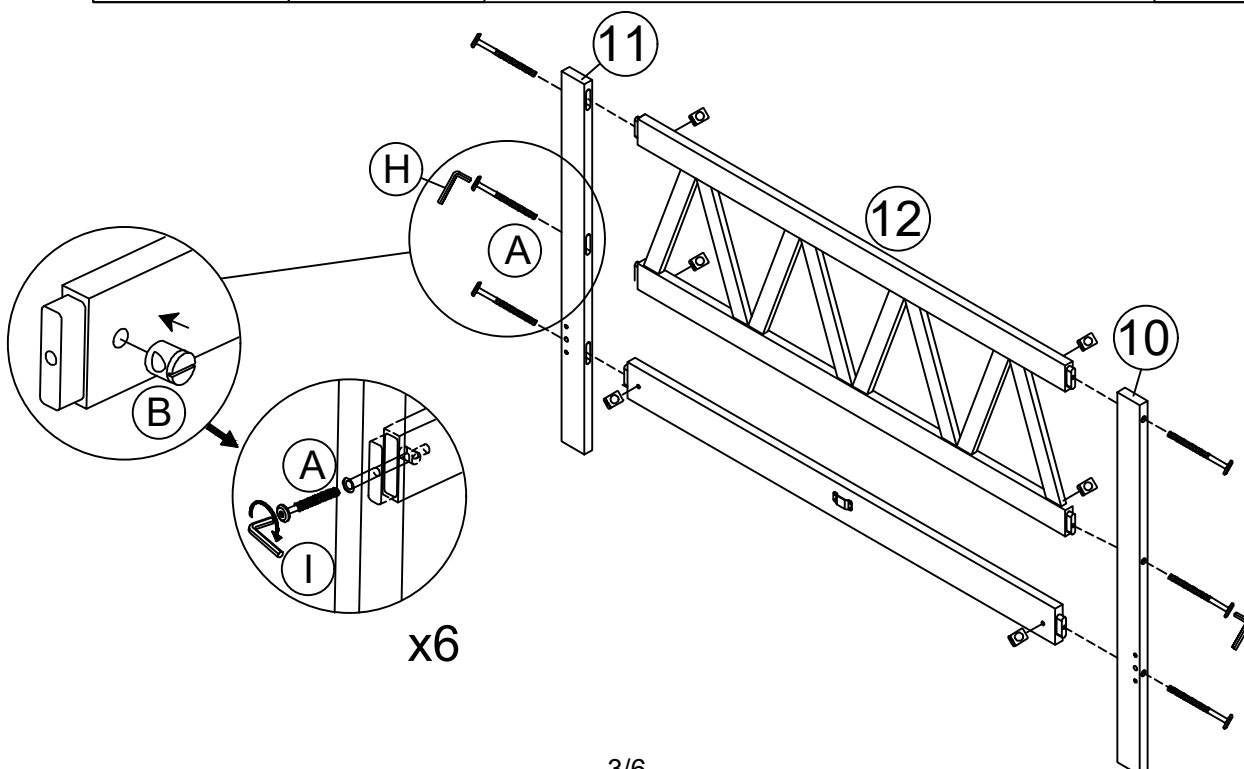


3

C x 8pcs



Flat Washer

D x 8pcs




M6*30mm

I



M4 Allen Key

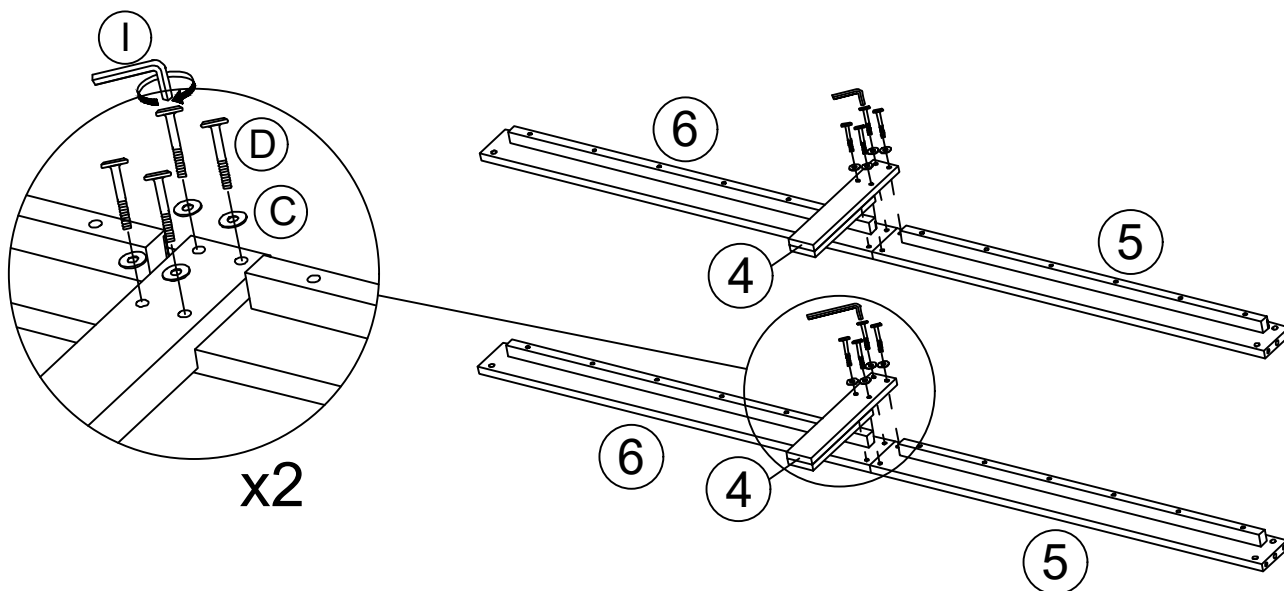


4

B x 8pcs




M6*15mm

E x 4pcs



M10*30mm

F x 8pcs




M6*70mm


I





M4 Allen Key

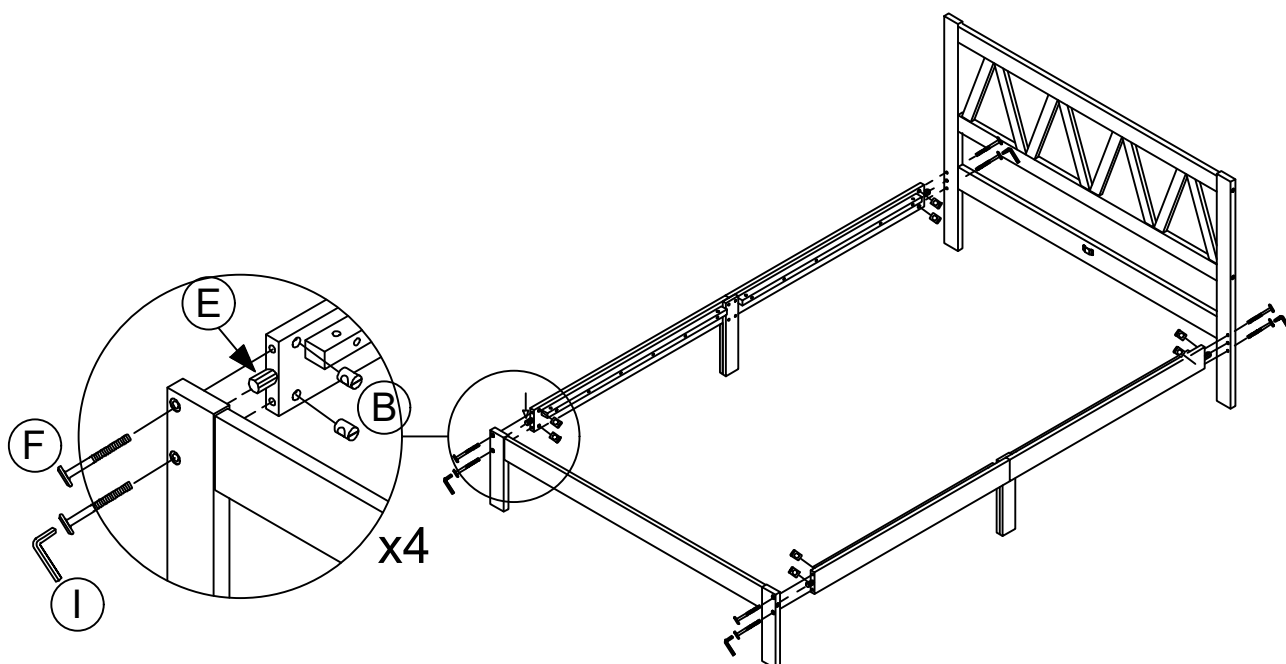

5

G x 8pcs  M7*30mm	H x 6pcs  Leveler	J x 6pcs  M6*70mm	I  M4 Allen Key
--	--	--	--

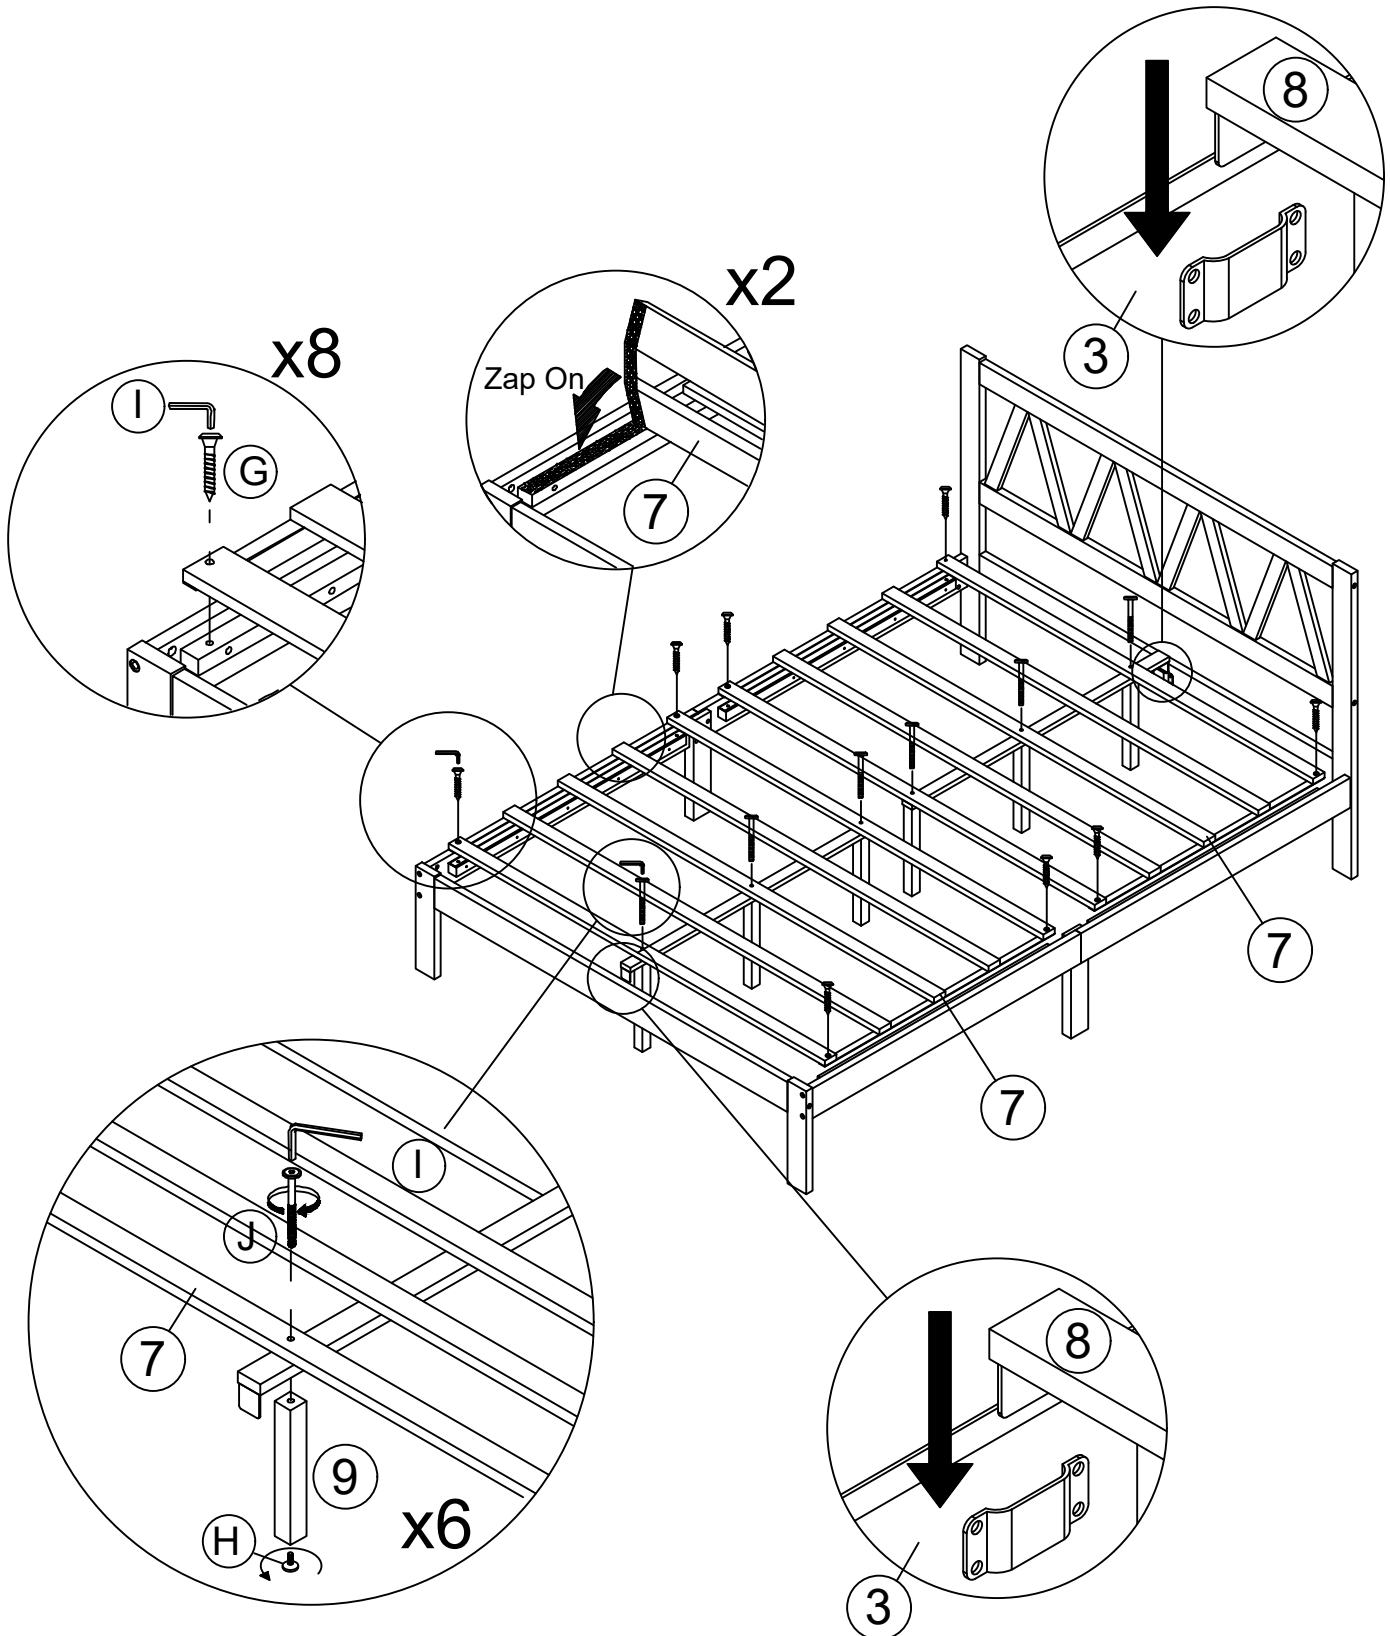

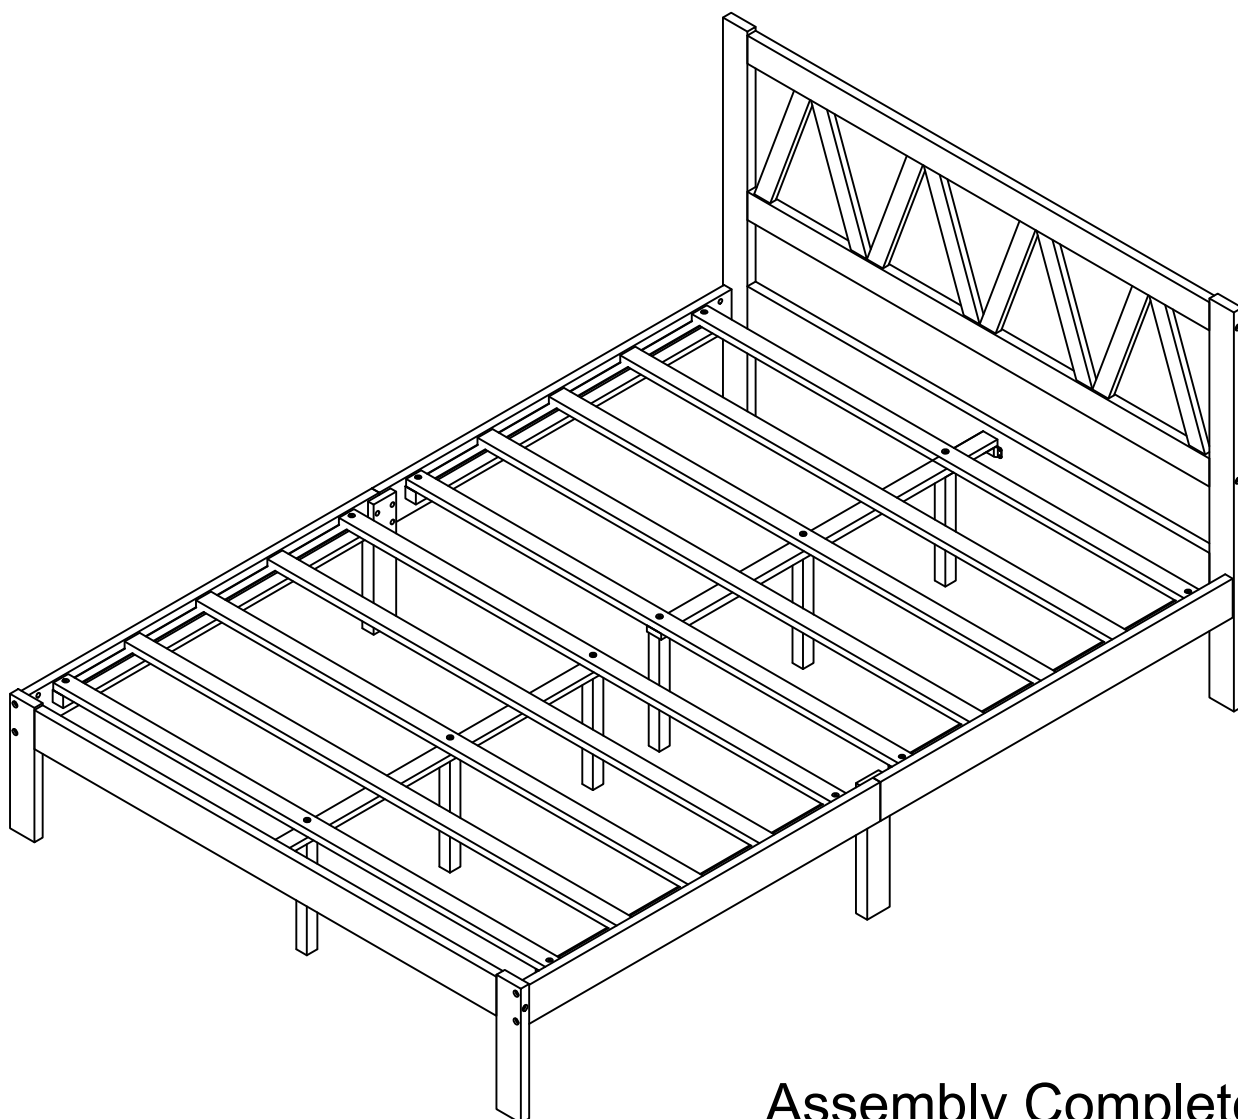

Assembly Complete

