






ASSEMBLY INSTRUCTIONS

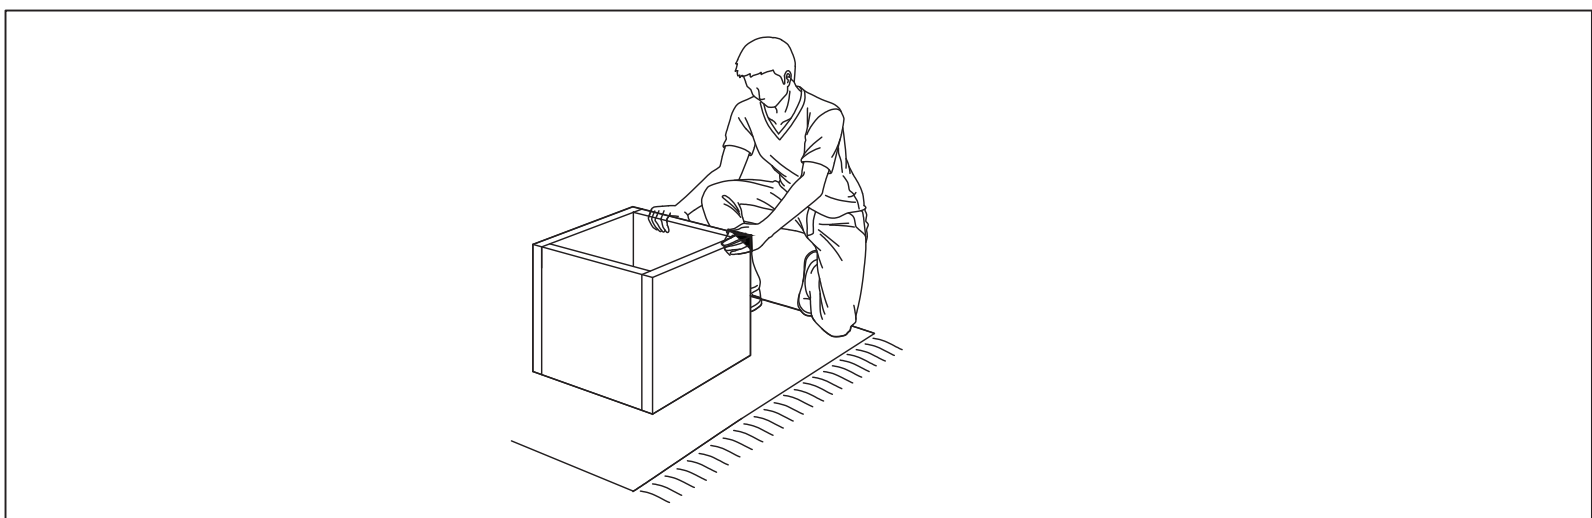

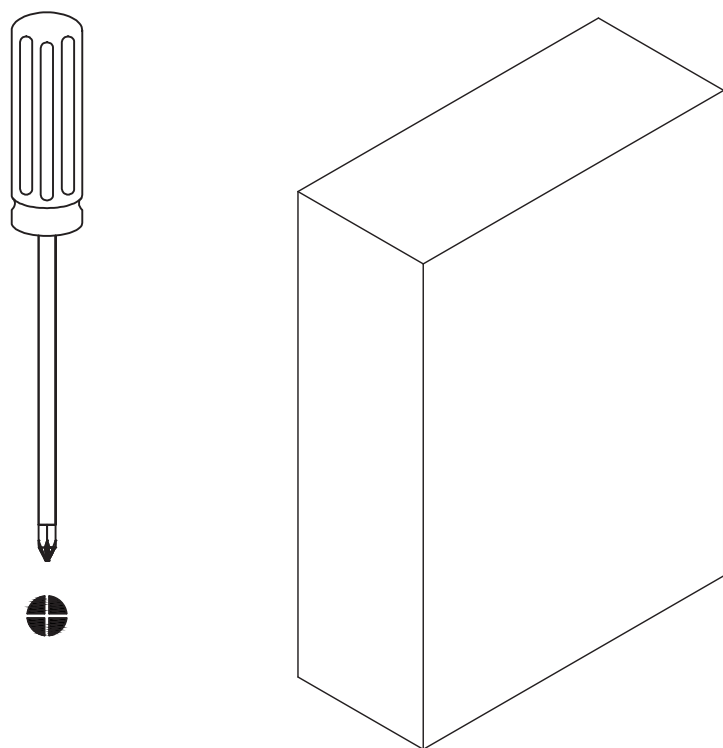


Assembly the furniture on empty carton, carpet, or rug to prevent scratches or damage.

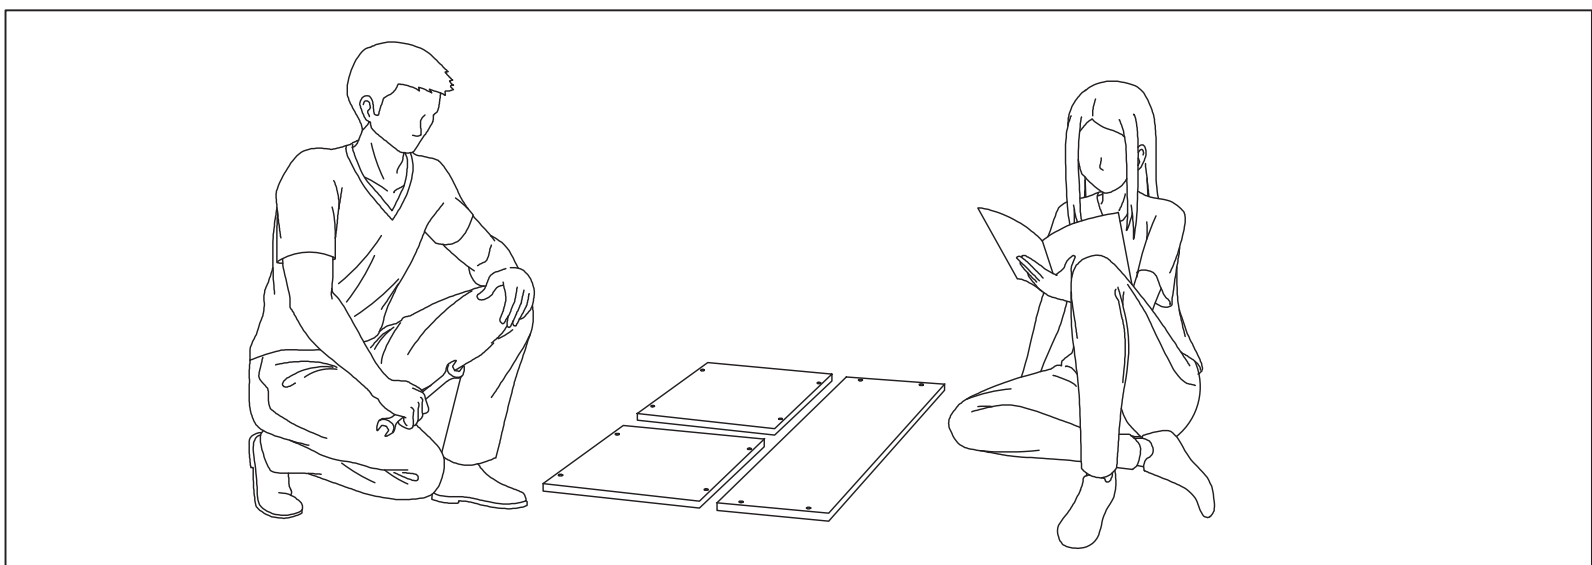


This furniture requires 2 people to assembly.
Make sure no parts are missing or damaged before assembly.


Not actual size

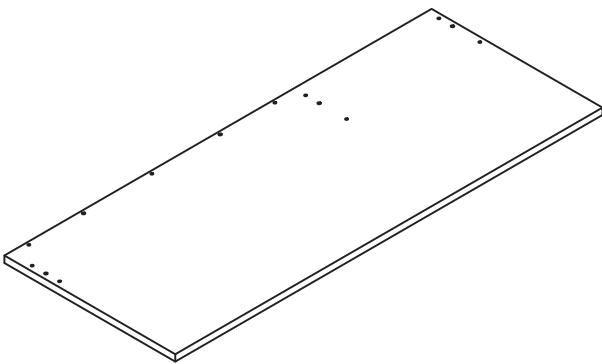


① X1

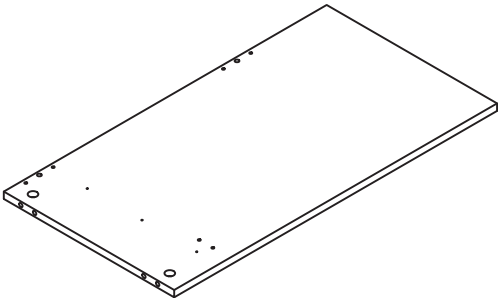


② X1

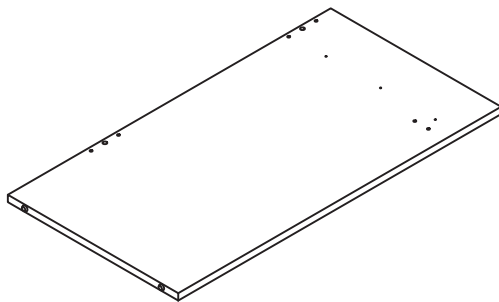


③ X1

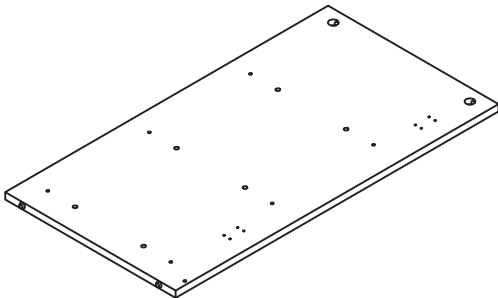


④ X1

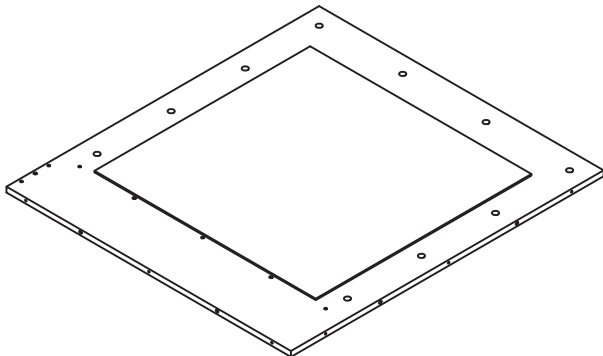


⑤ X1

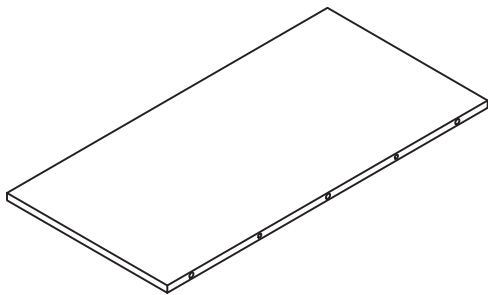


⑥ X1

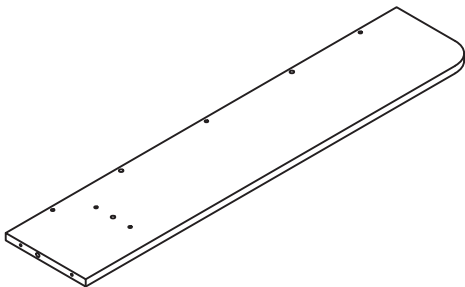


⑦ X1

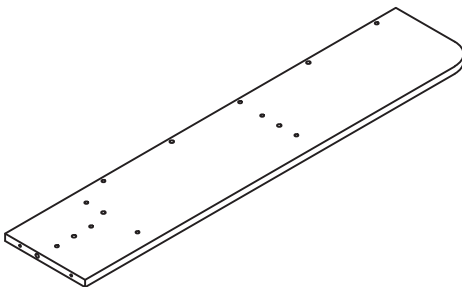


⑧ X1

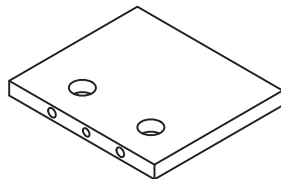


⑨ X1

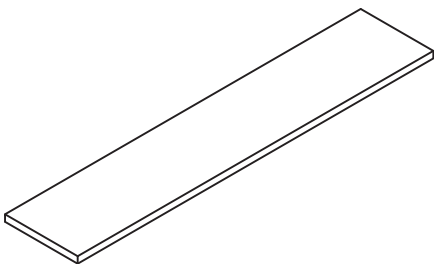

⑩ X1

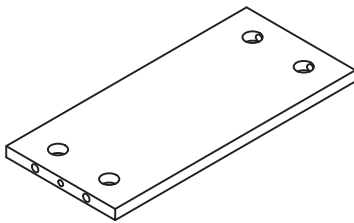


⑪ X1

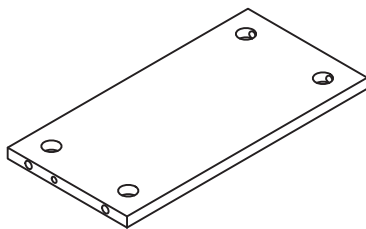


⑫ X1


Not actual size

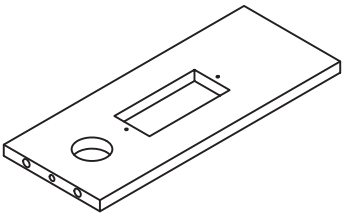


⑬X1

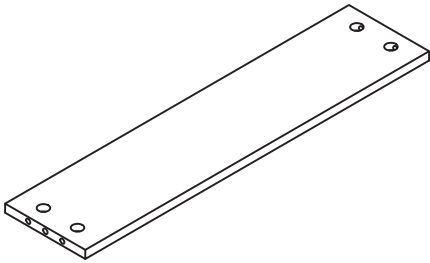


⑭X1

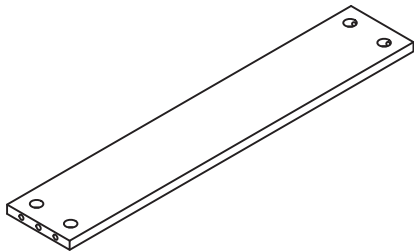


⑮X1

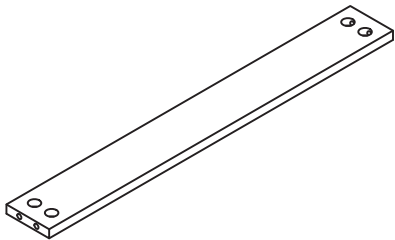


⑯X1

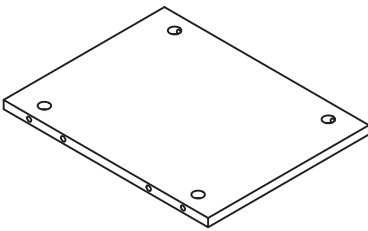


⑰X2

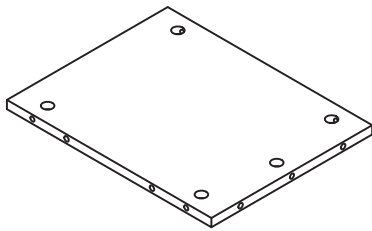


⑱X1

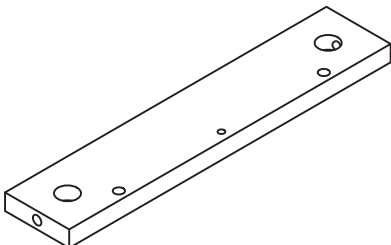


⑲X1

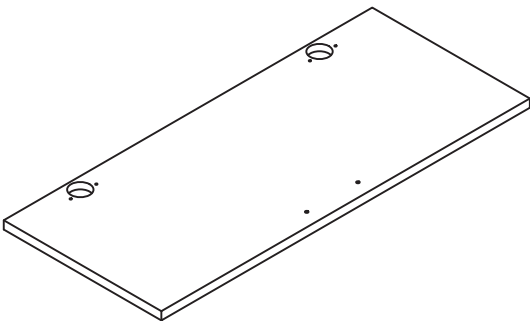


⑳X1

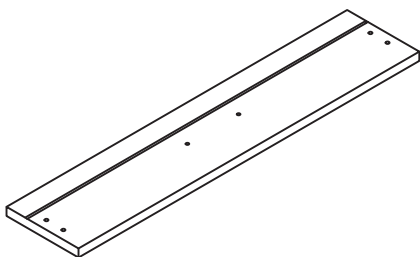


㉑X1

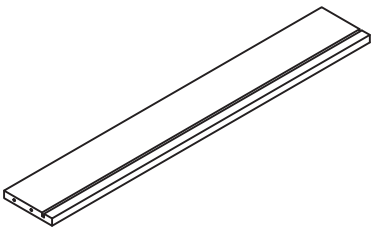

㉒X1

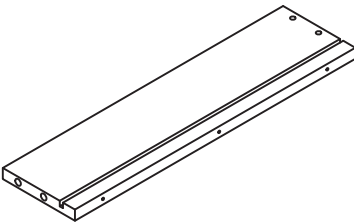


㉓X1

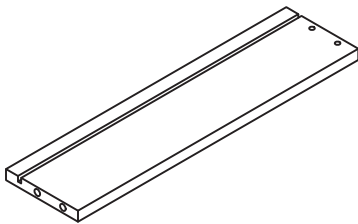


㉔X1




Not actual size

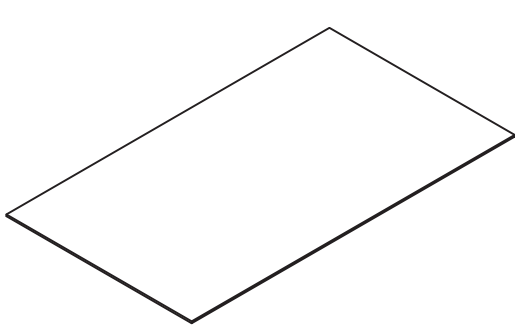


②5 X1

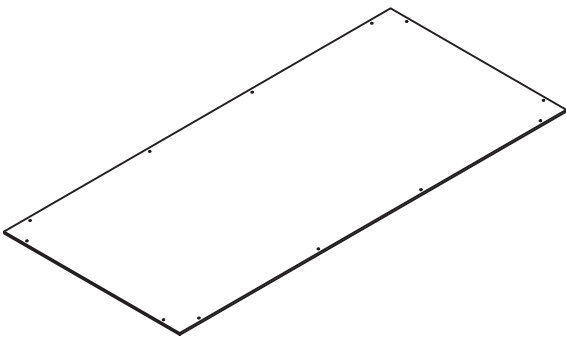


②6 X1

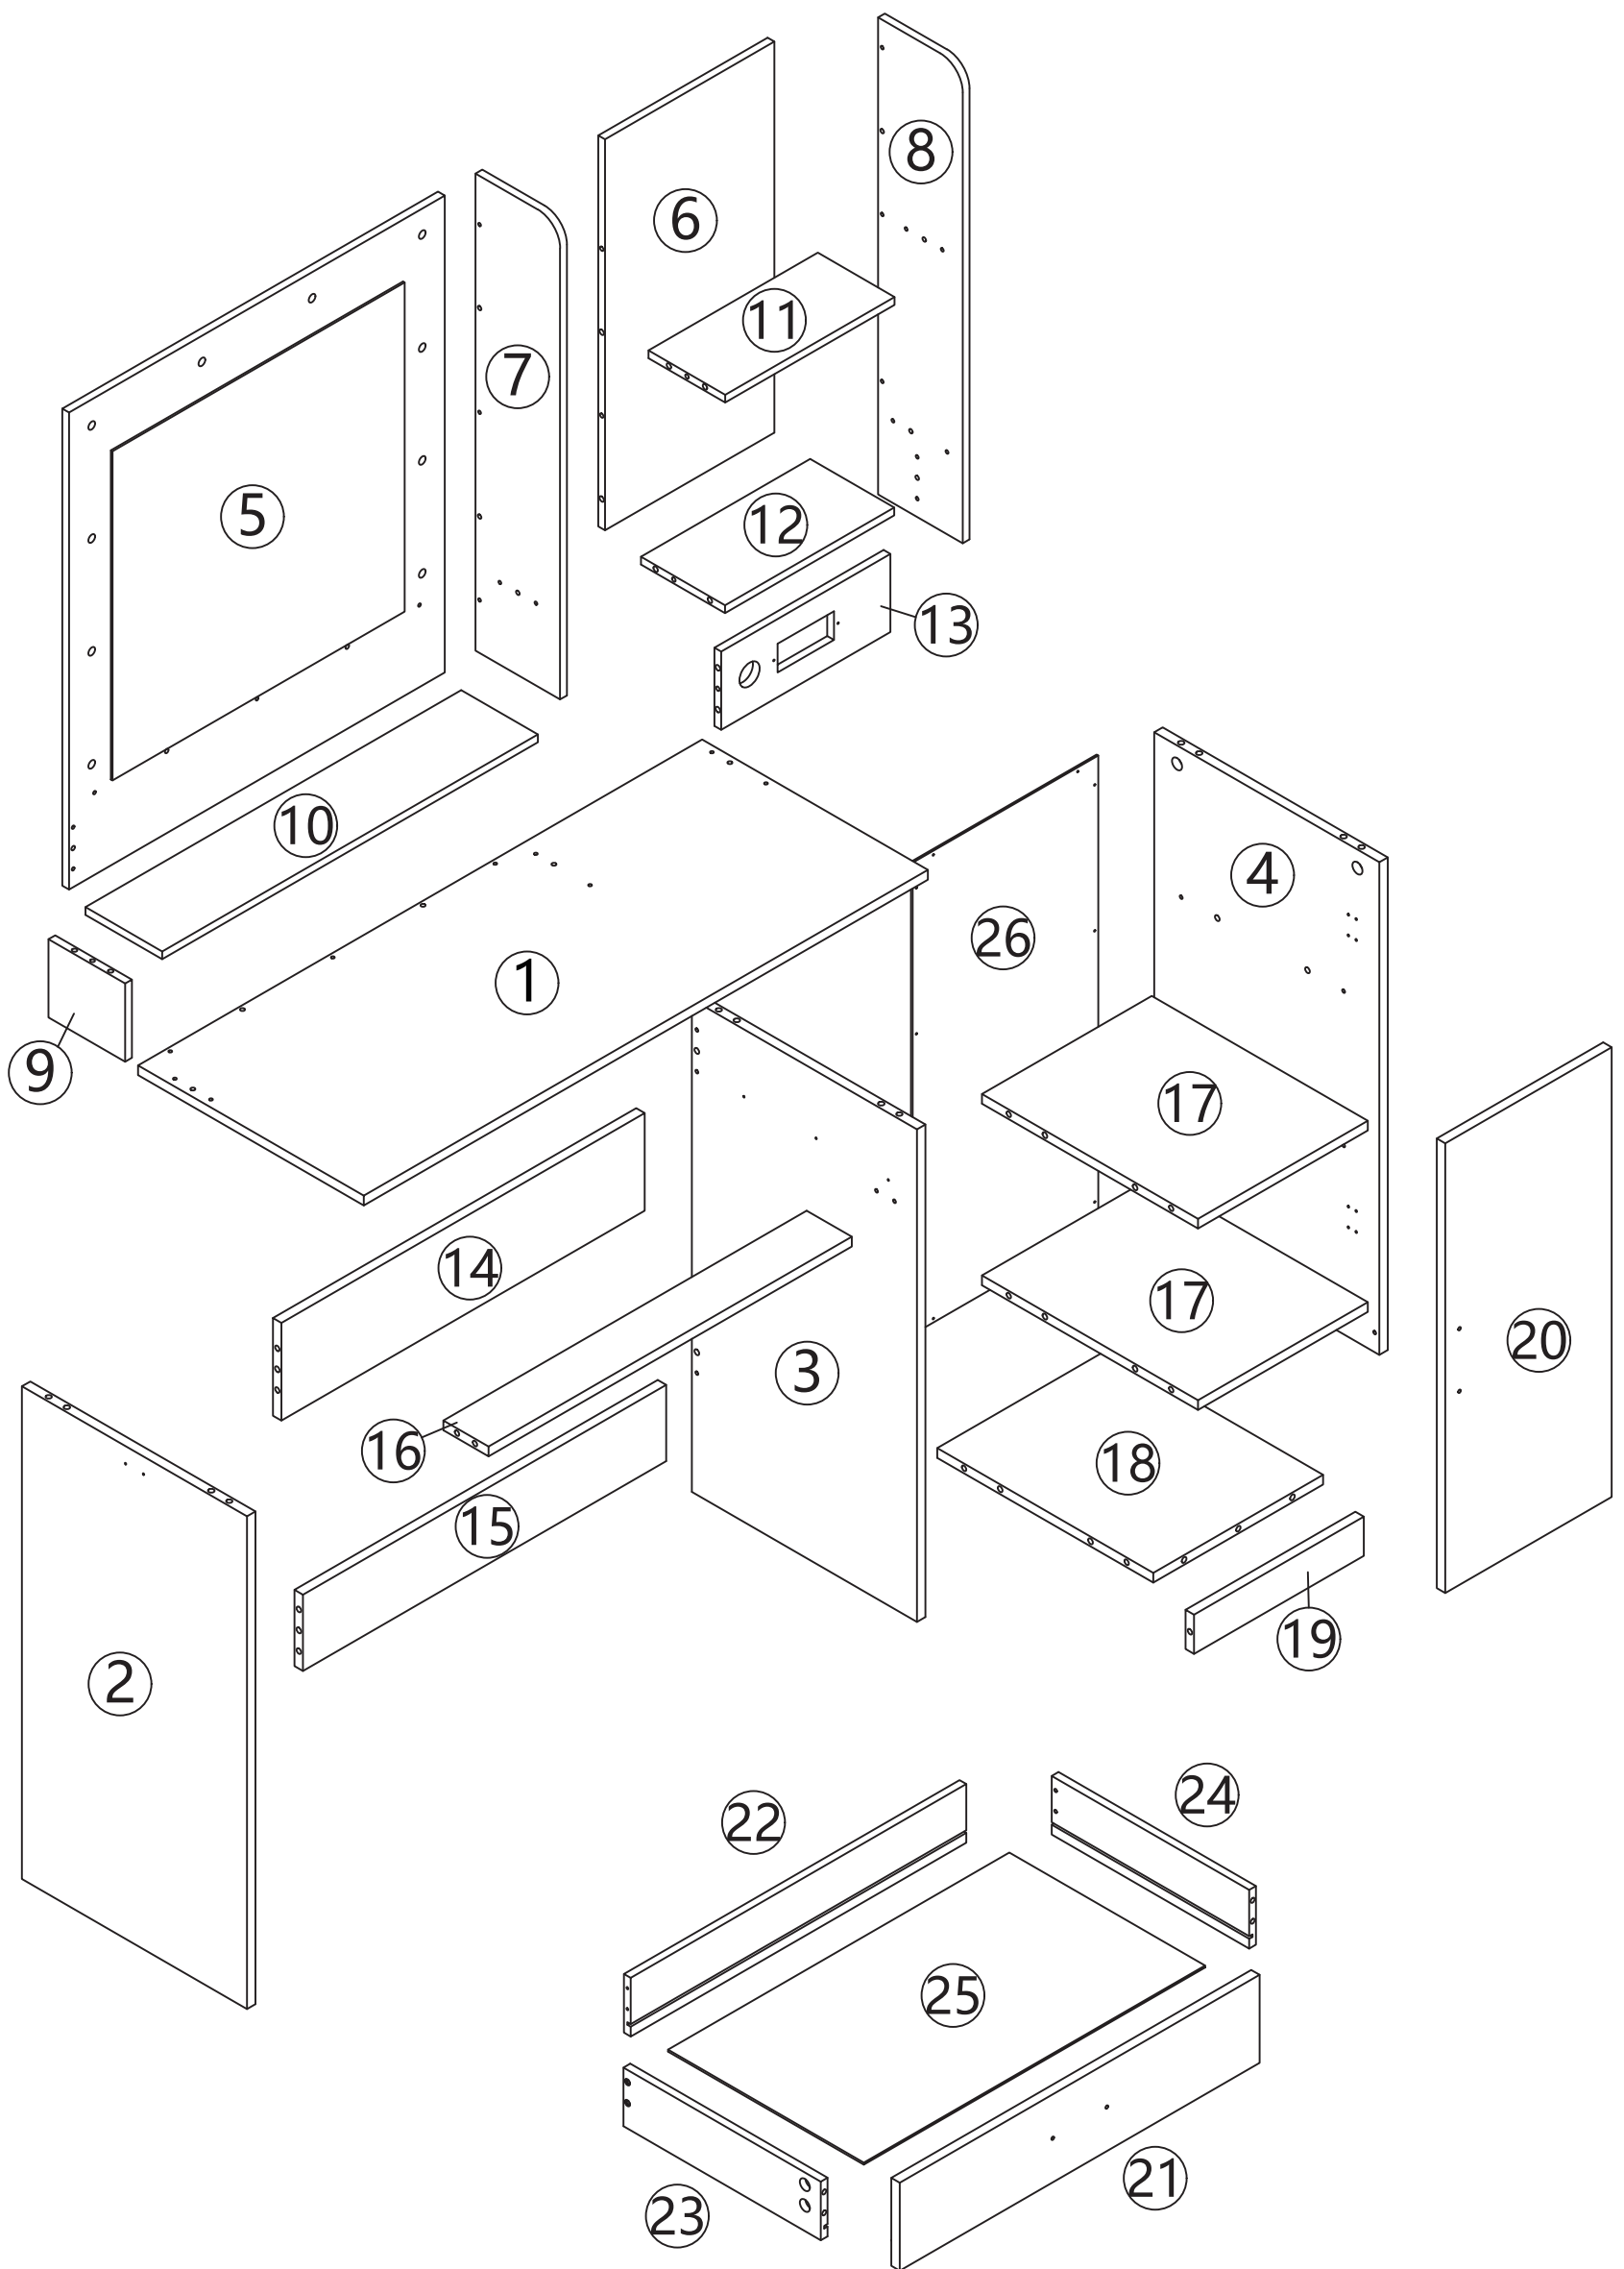

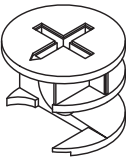


A	X57+3
	
Ø15*9.5	

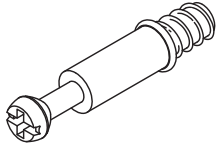
B	X57+3
	
Ø6.5*35	


C	X16+1
	
Ø8*30	


D	X30+3
	
Ø6*30	


E	X24+2
	
Ø3.5*14	


F	X2+1
	
Ø3*12	

G	X23+2
	
Ø4*35	


H	X12+1
	
Ø3*14	


I	X2+1
	
Ø4*14	


J	X4
	
Ø4*18	

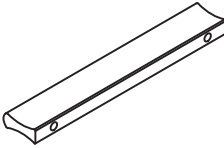
K	X2
	
106*16*8	


L	X1
	
109*99*38.5	

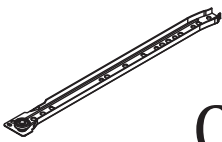M	X1
 CL	
L=350	

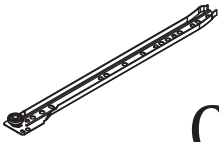
M	X1
 CR	
L=350	

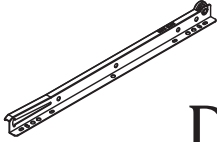
M	X1
 DL	
L=350	

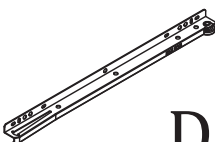
M	X1
 DR	
L=350	

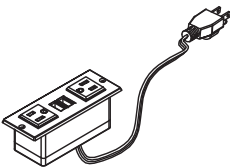
N	X1
	

O	X1
	
Ø35	

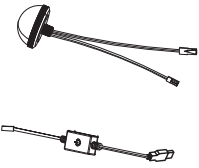P	X10+2
	





Q	X1
	
72*30*5	

Ⓡ	X2
	
Ø35	

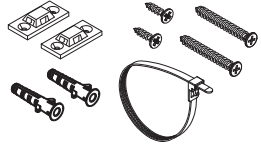
Ⓢ	X1set
	

Cam Lock Fastening System


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

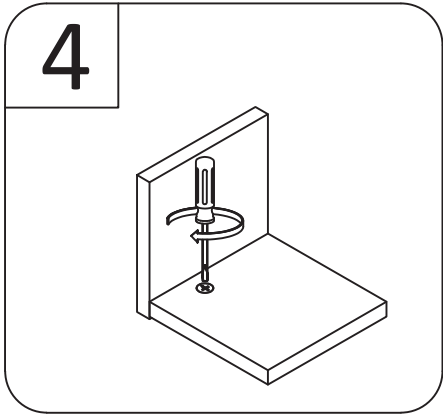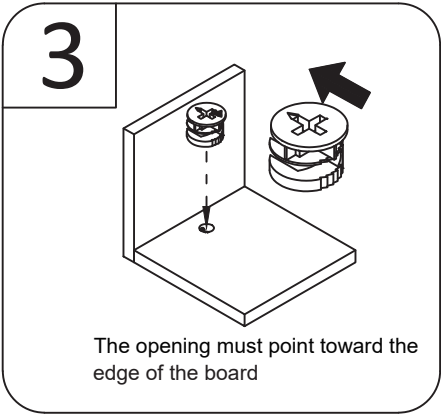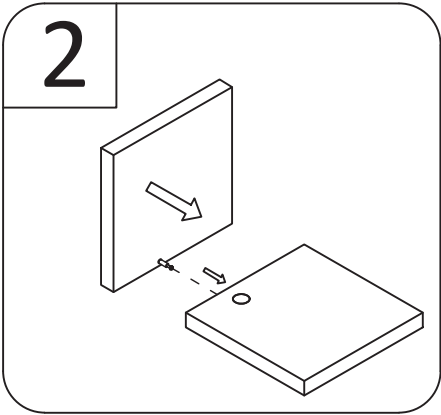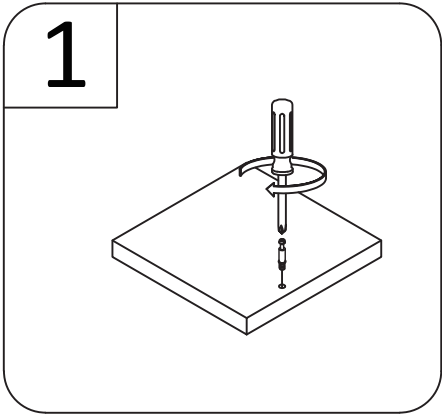



STEP 1

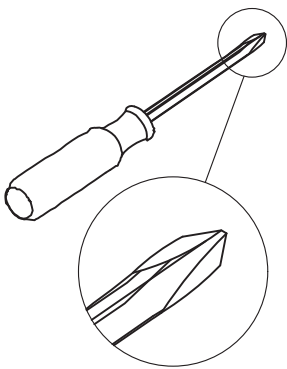


(E)	X6
	
Ø3.5*14	




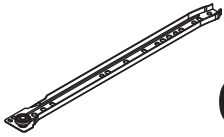
(M)	X1
	
CL L=350	

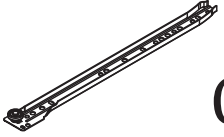(M)	X1
	
CR L=350	

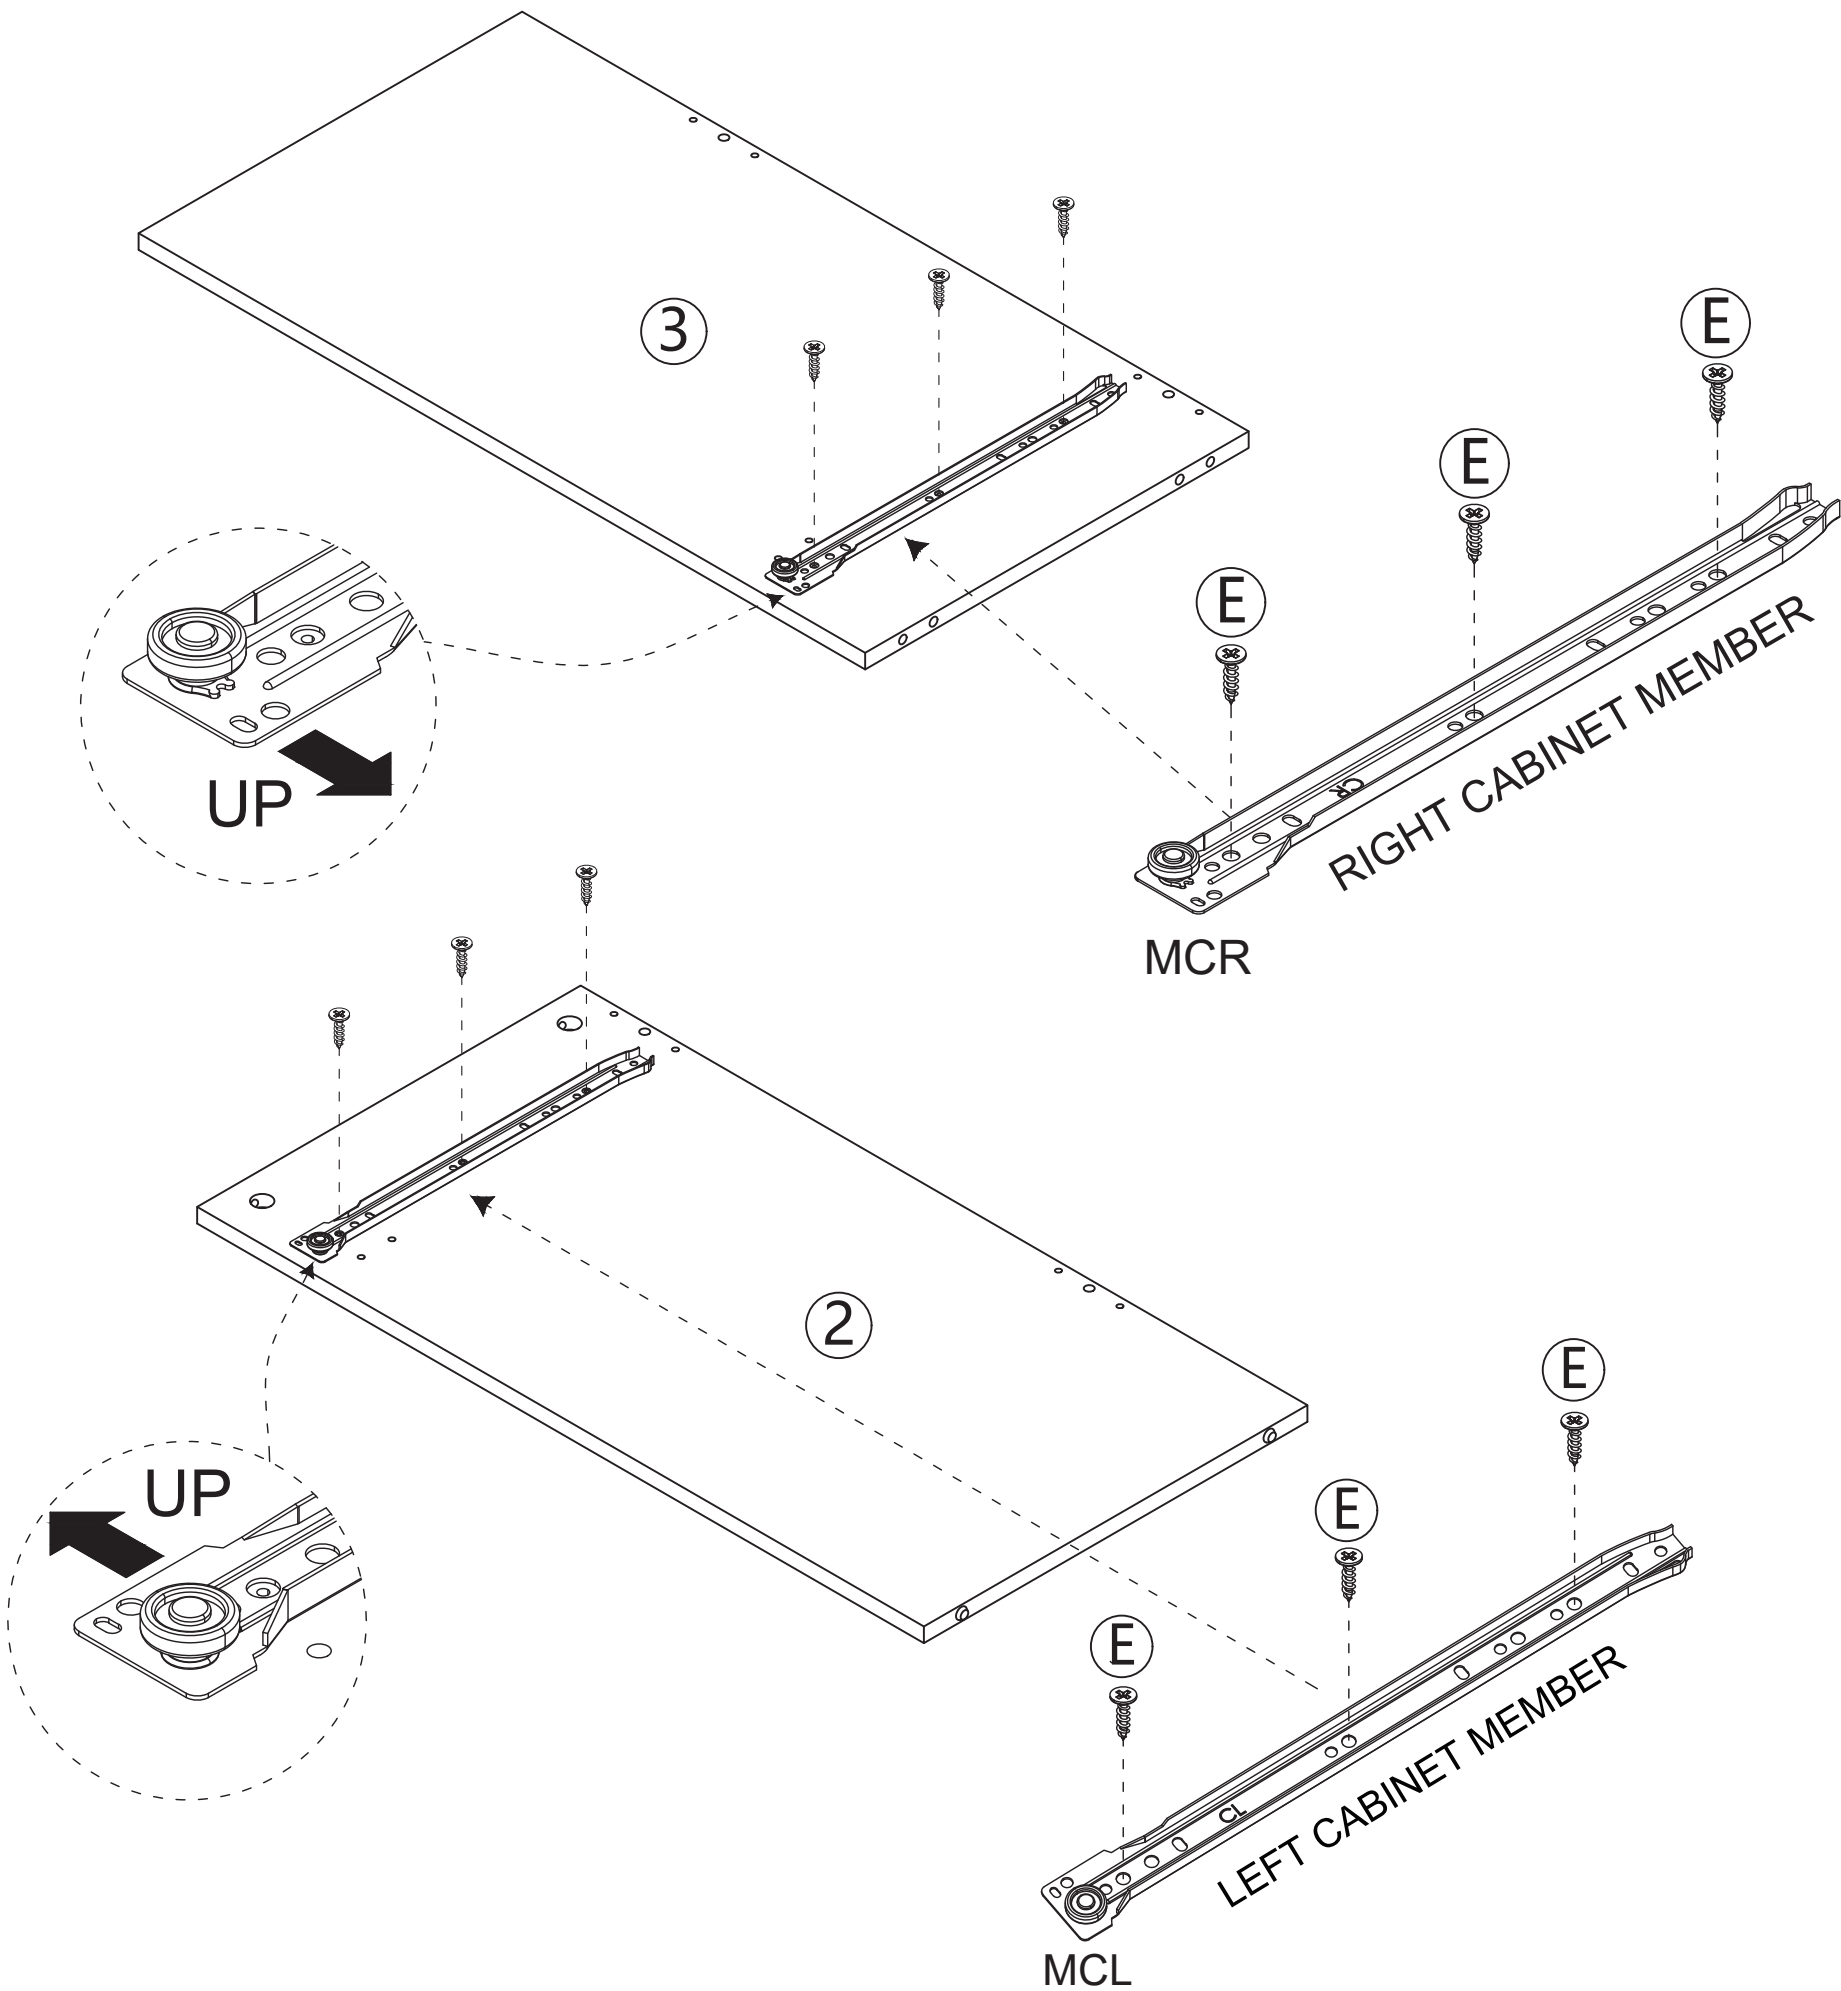


STEP 2


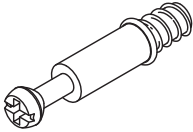
Ⓑ	X19
	
Ø6.5*35	

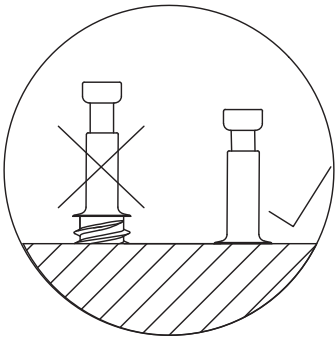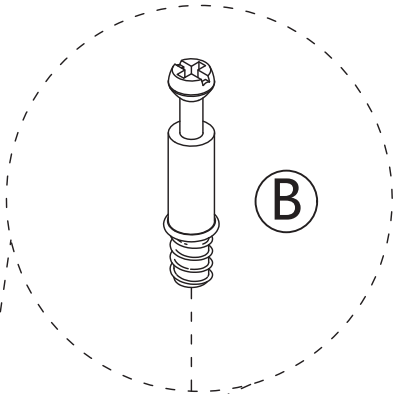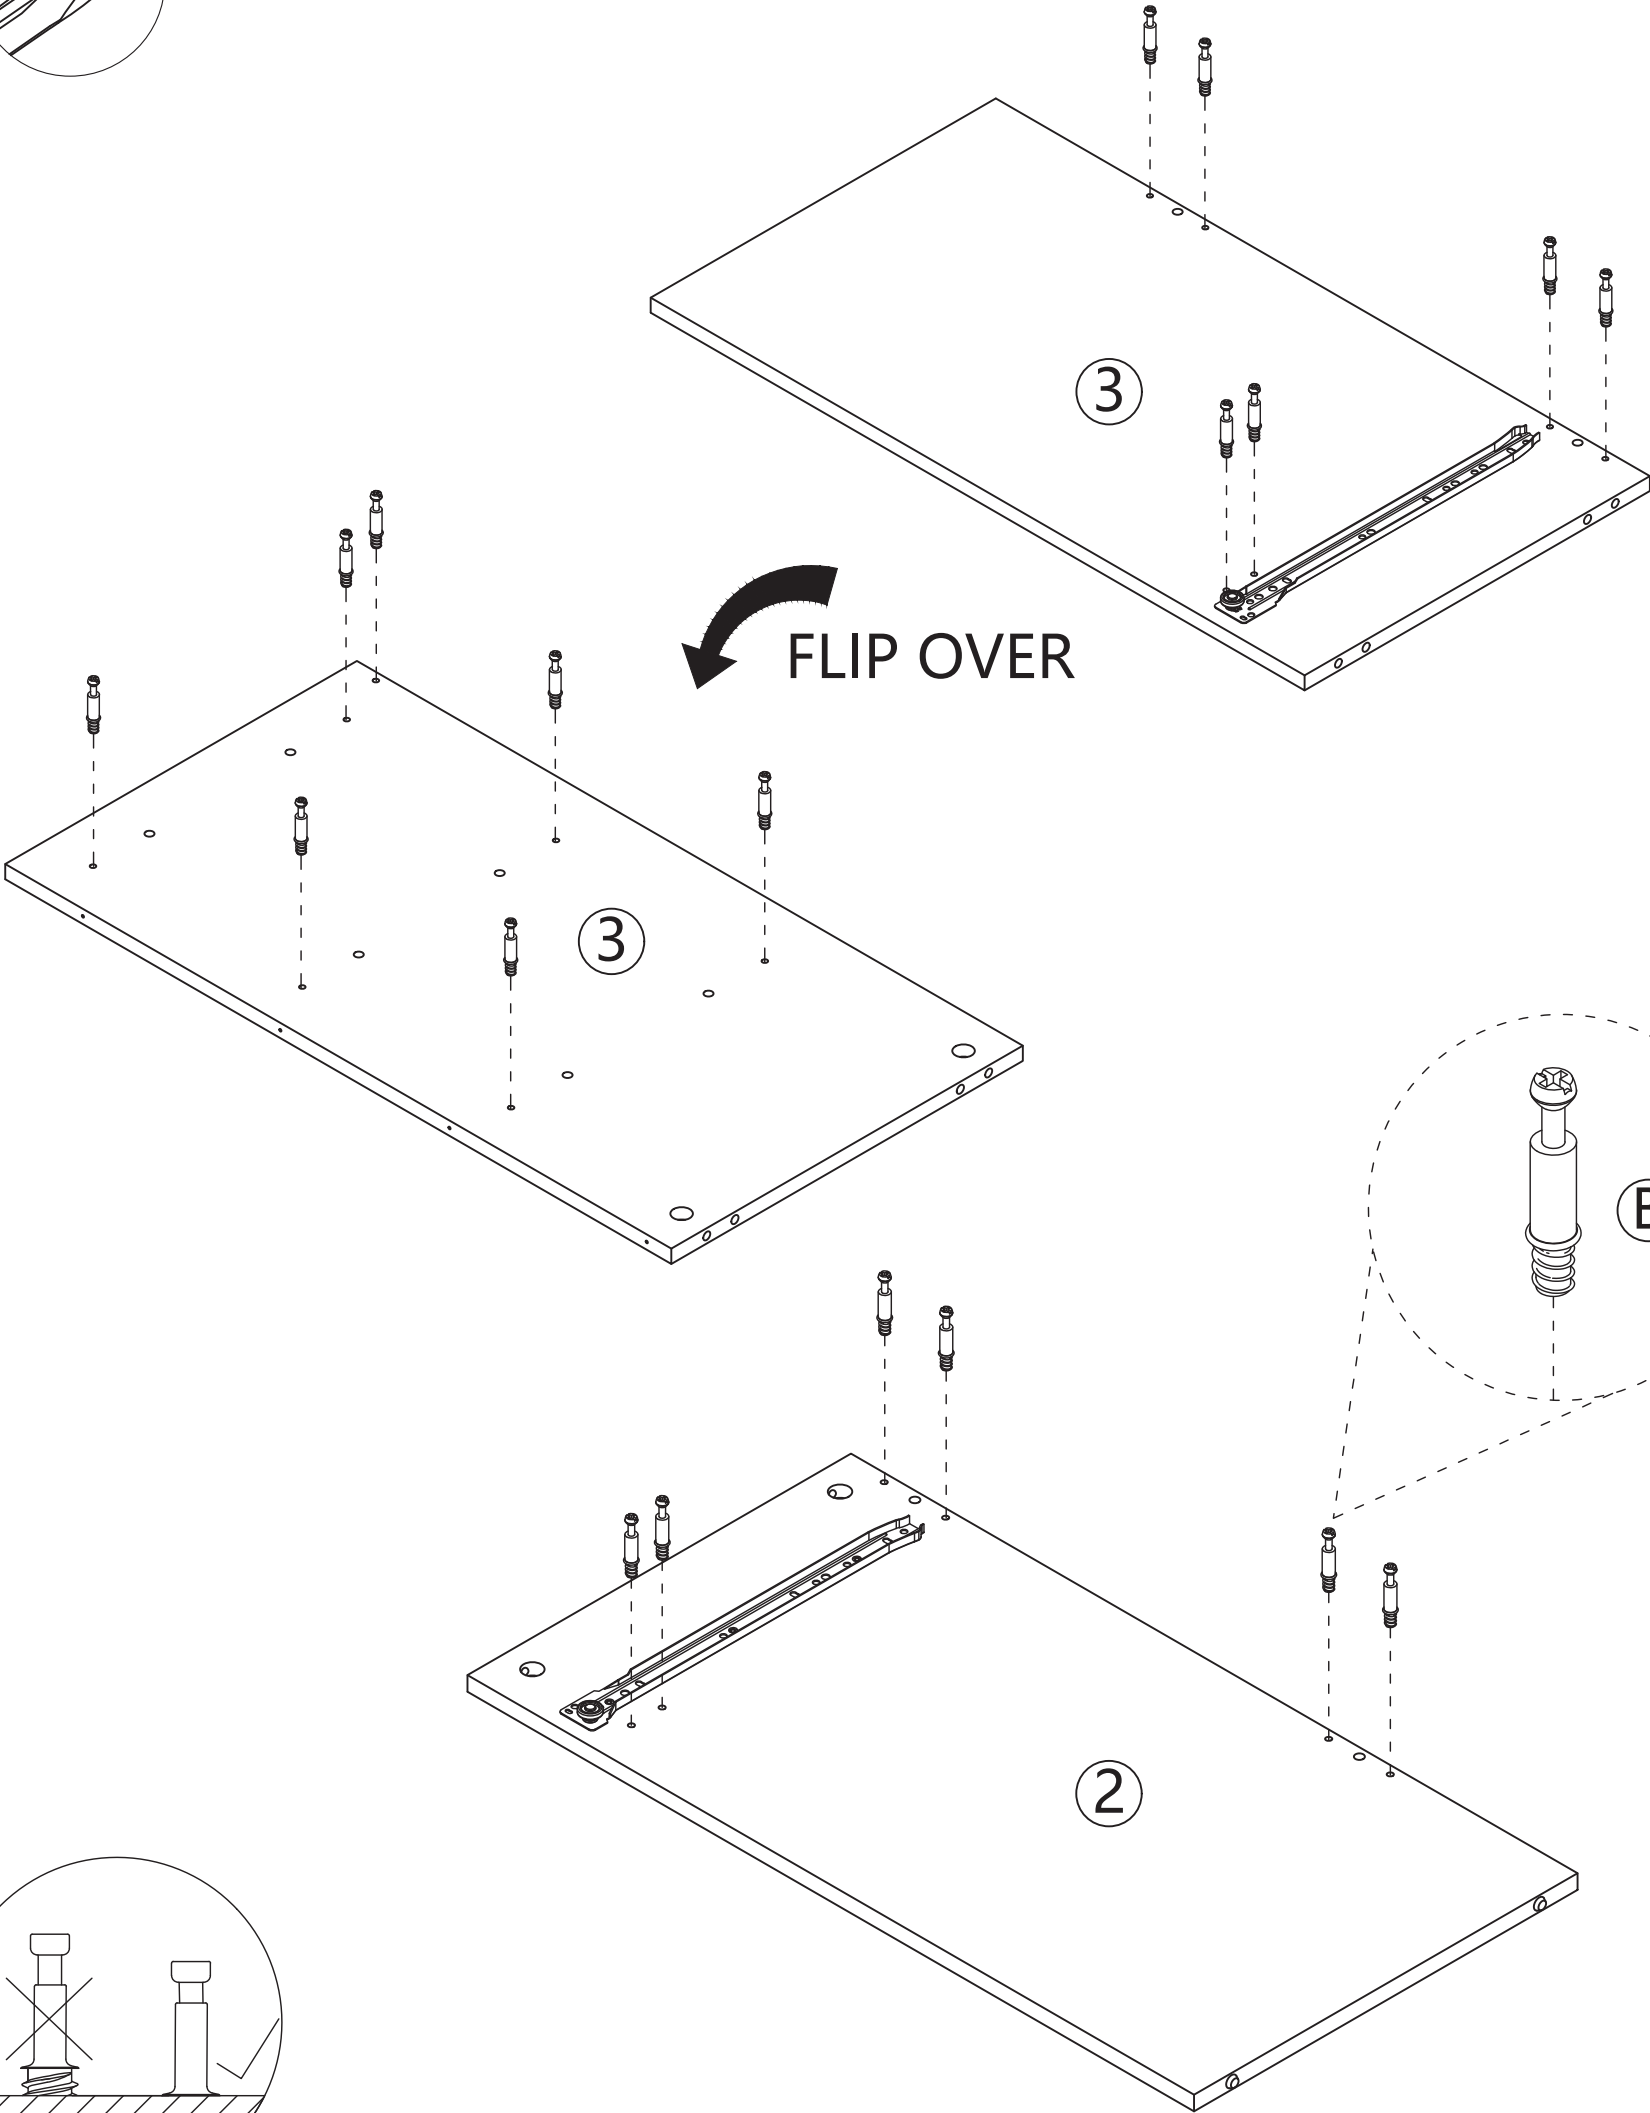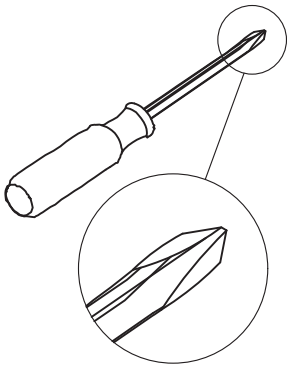


STEP 3

A	X12
	
Ø15*9.5	


C	X4
	
Ø8*30	

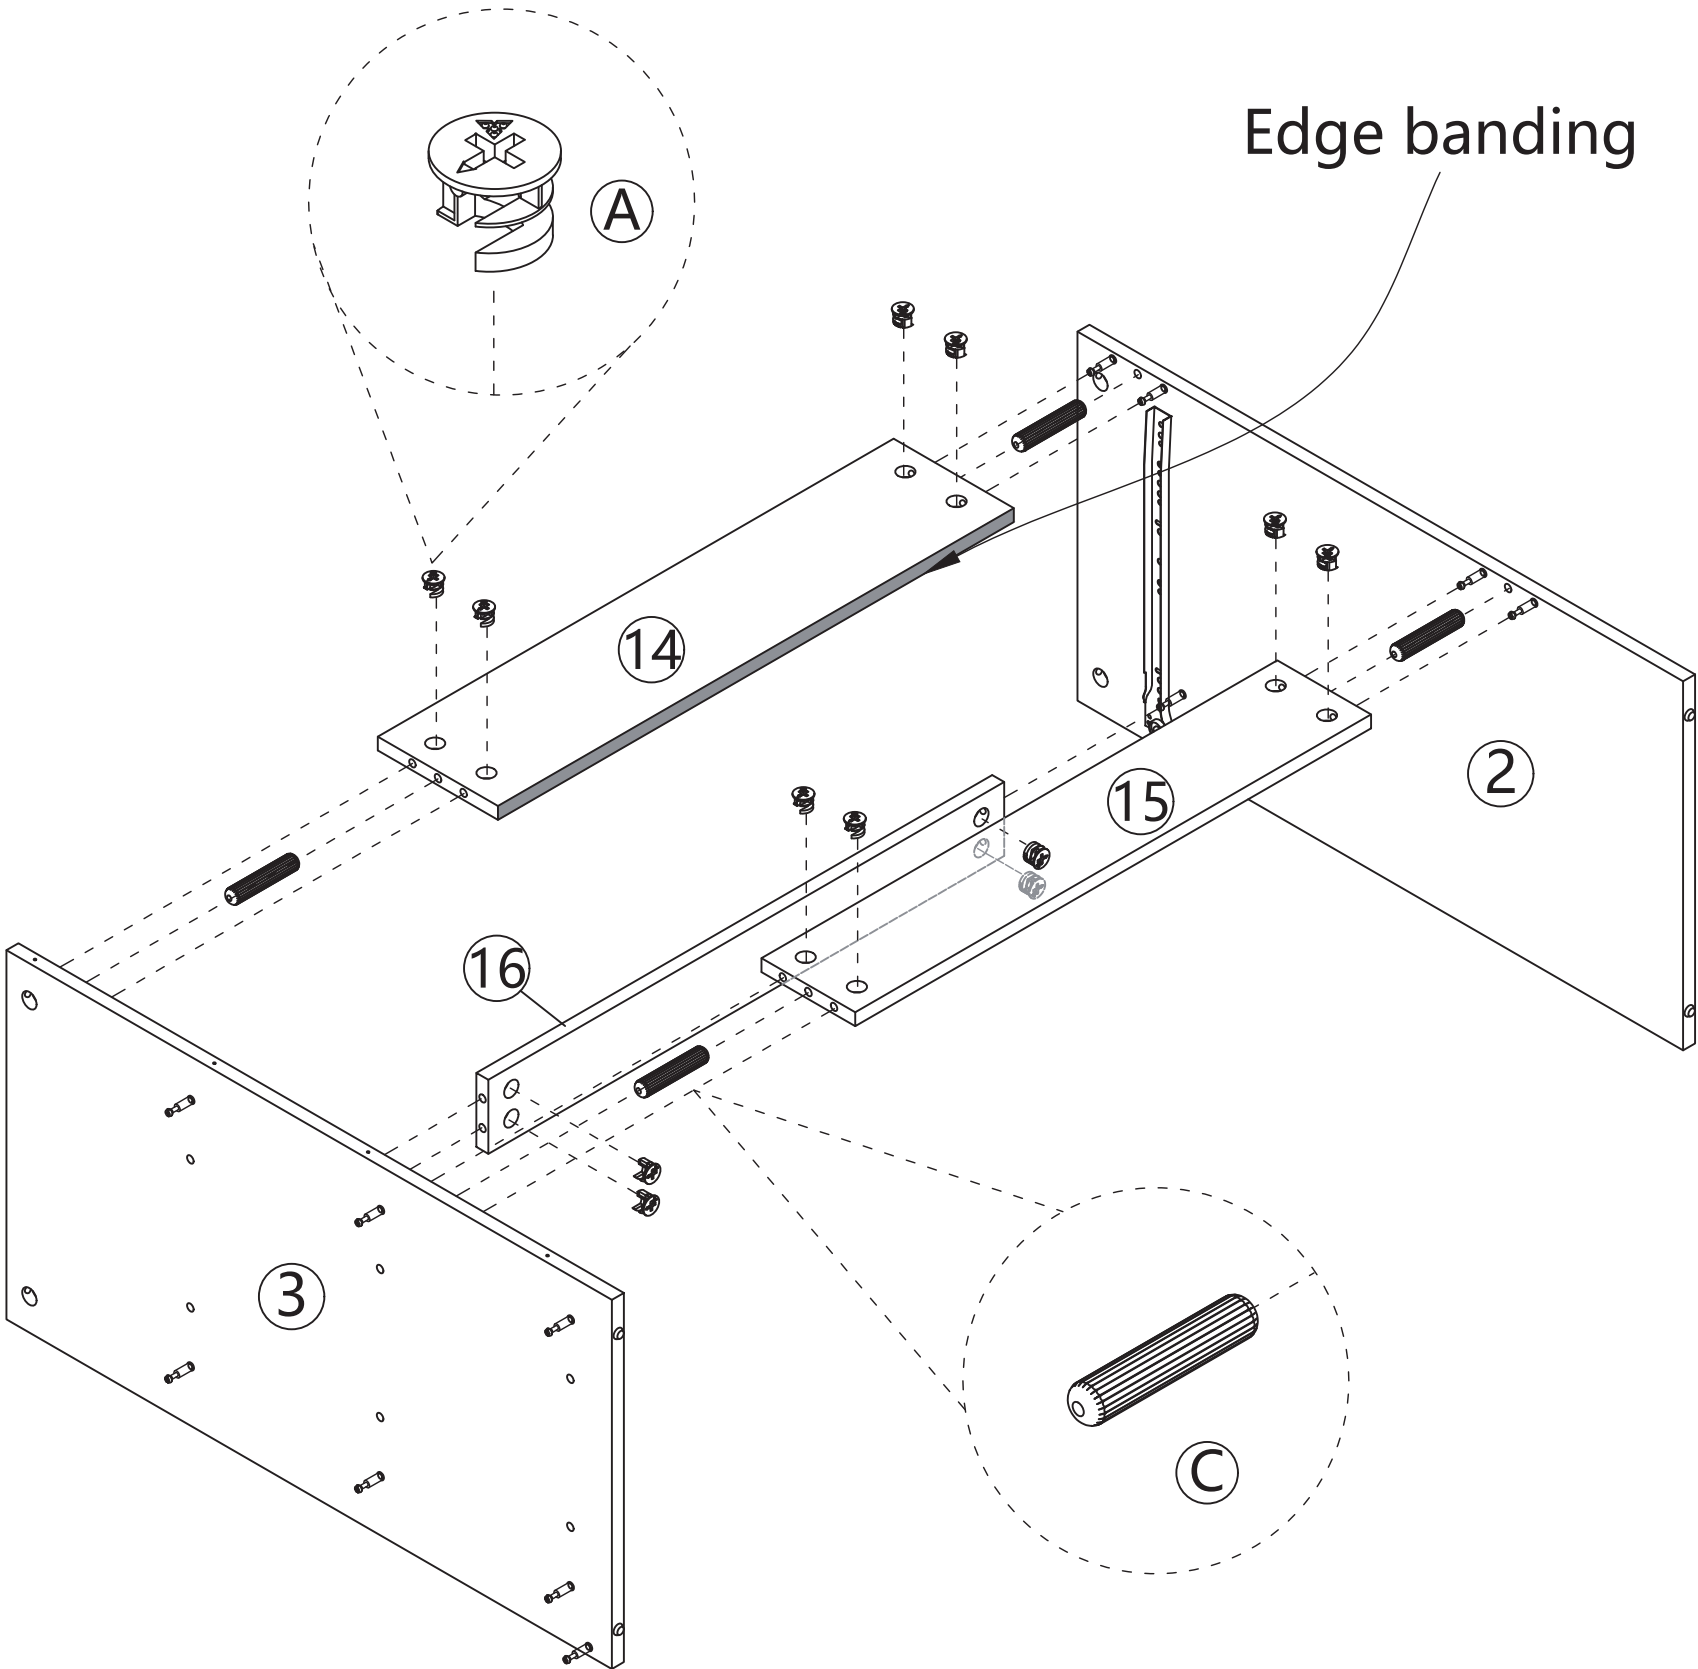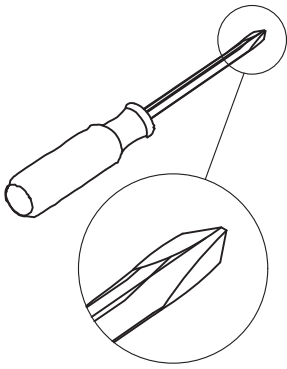



Insert the cam bolt into the hole first, then insert the cam lock and lock it.


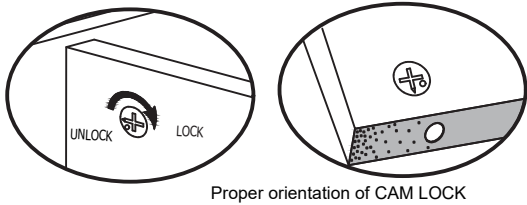


STEP 4


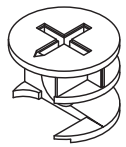
(A)	X1
	
Ø15*9.5	

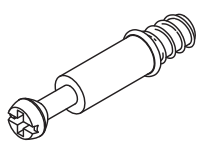(B)	X8
	
Ø6.5*35	


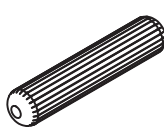
(C)	X2
	
Ø8*30	

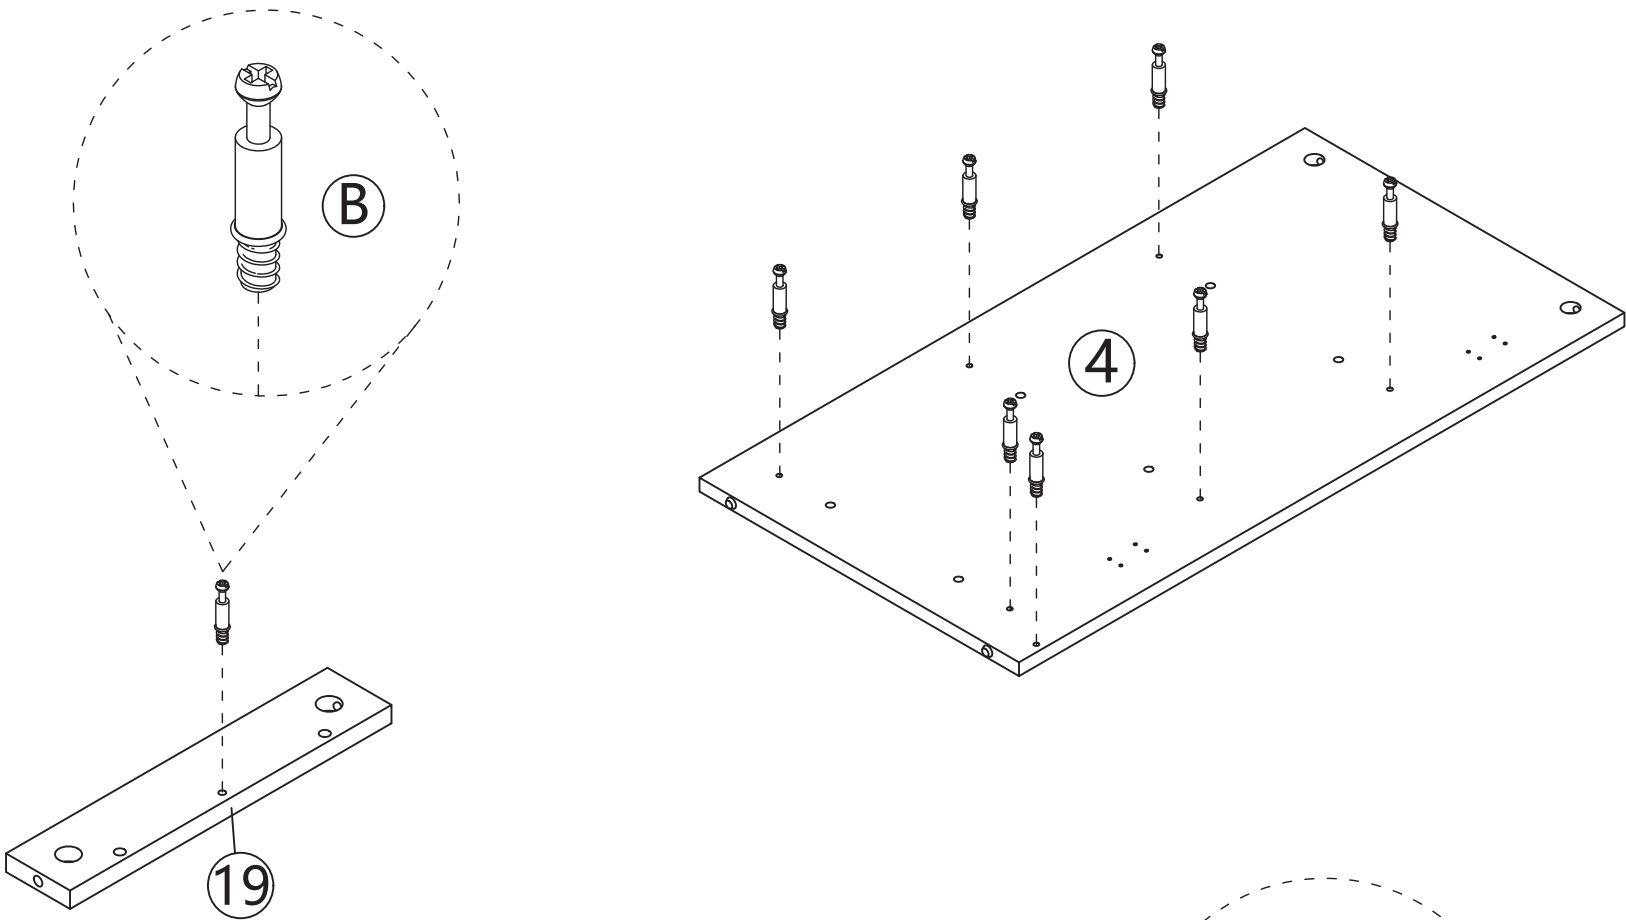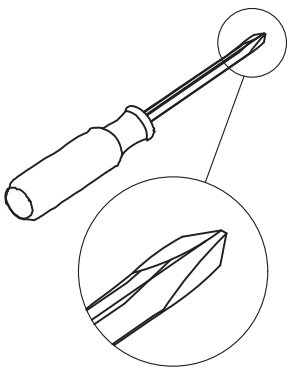

FLIP OVER

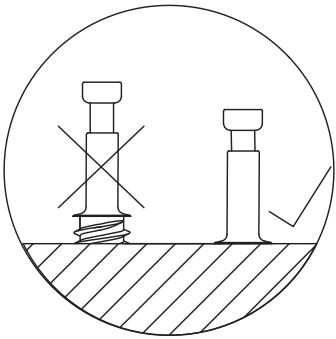
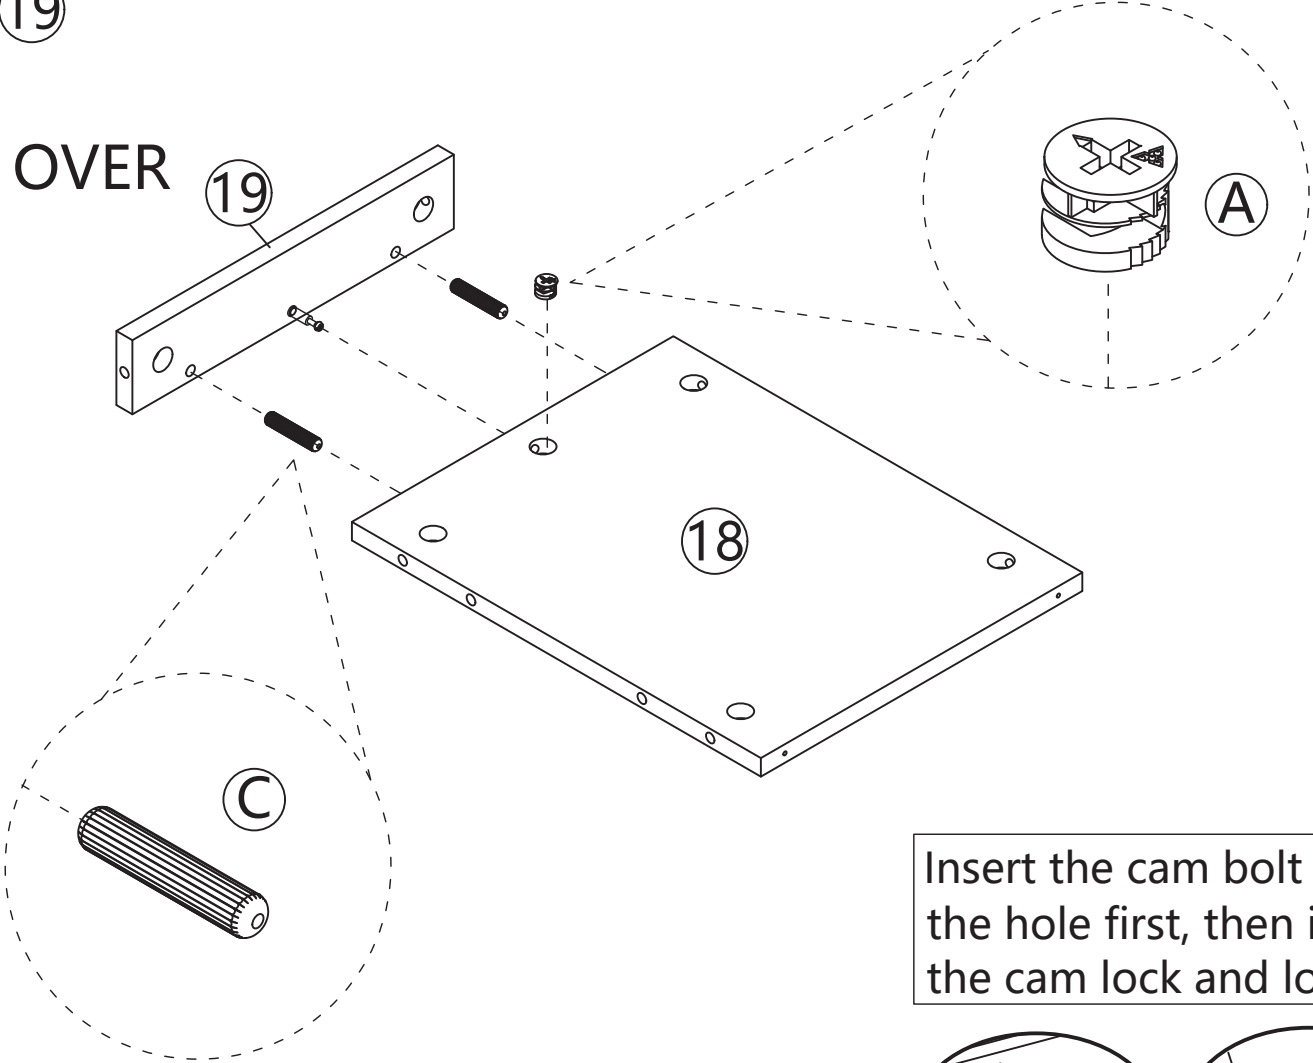



Insert the cam bolt into the hole first, then insert the cam lock and lock it.

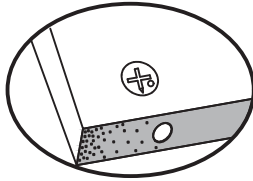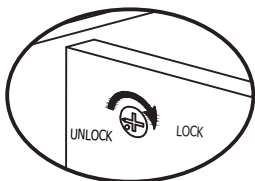



Proper orientation of CAM LOCK

STEP 5

Ⓐ	X14	Ⓒ	X4	Ⓓ	X8
					
Ø15*9.5		Ø8*30		Ø6*30	

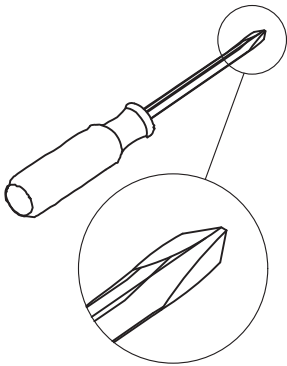


NO Edge banding

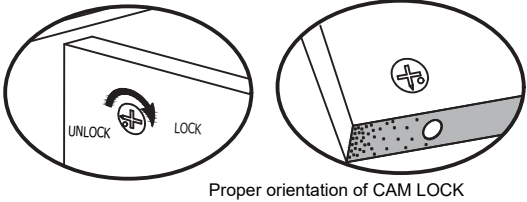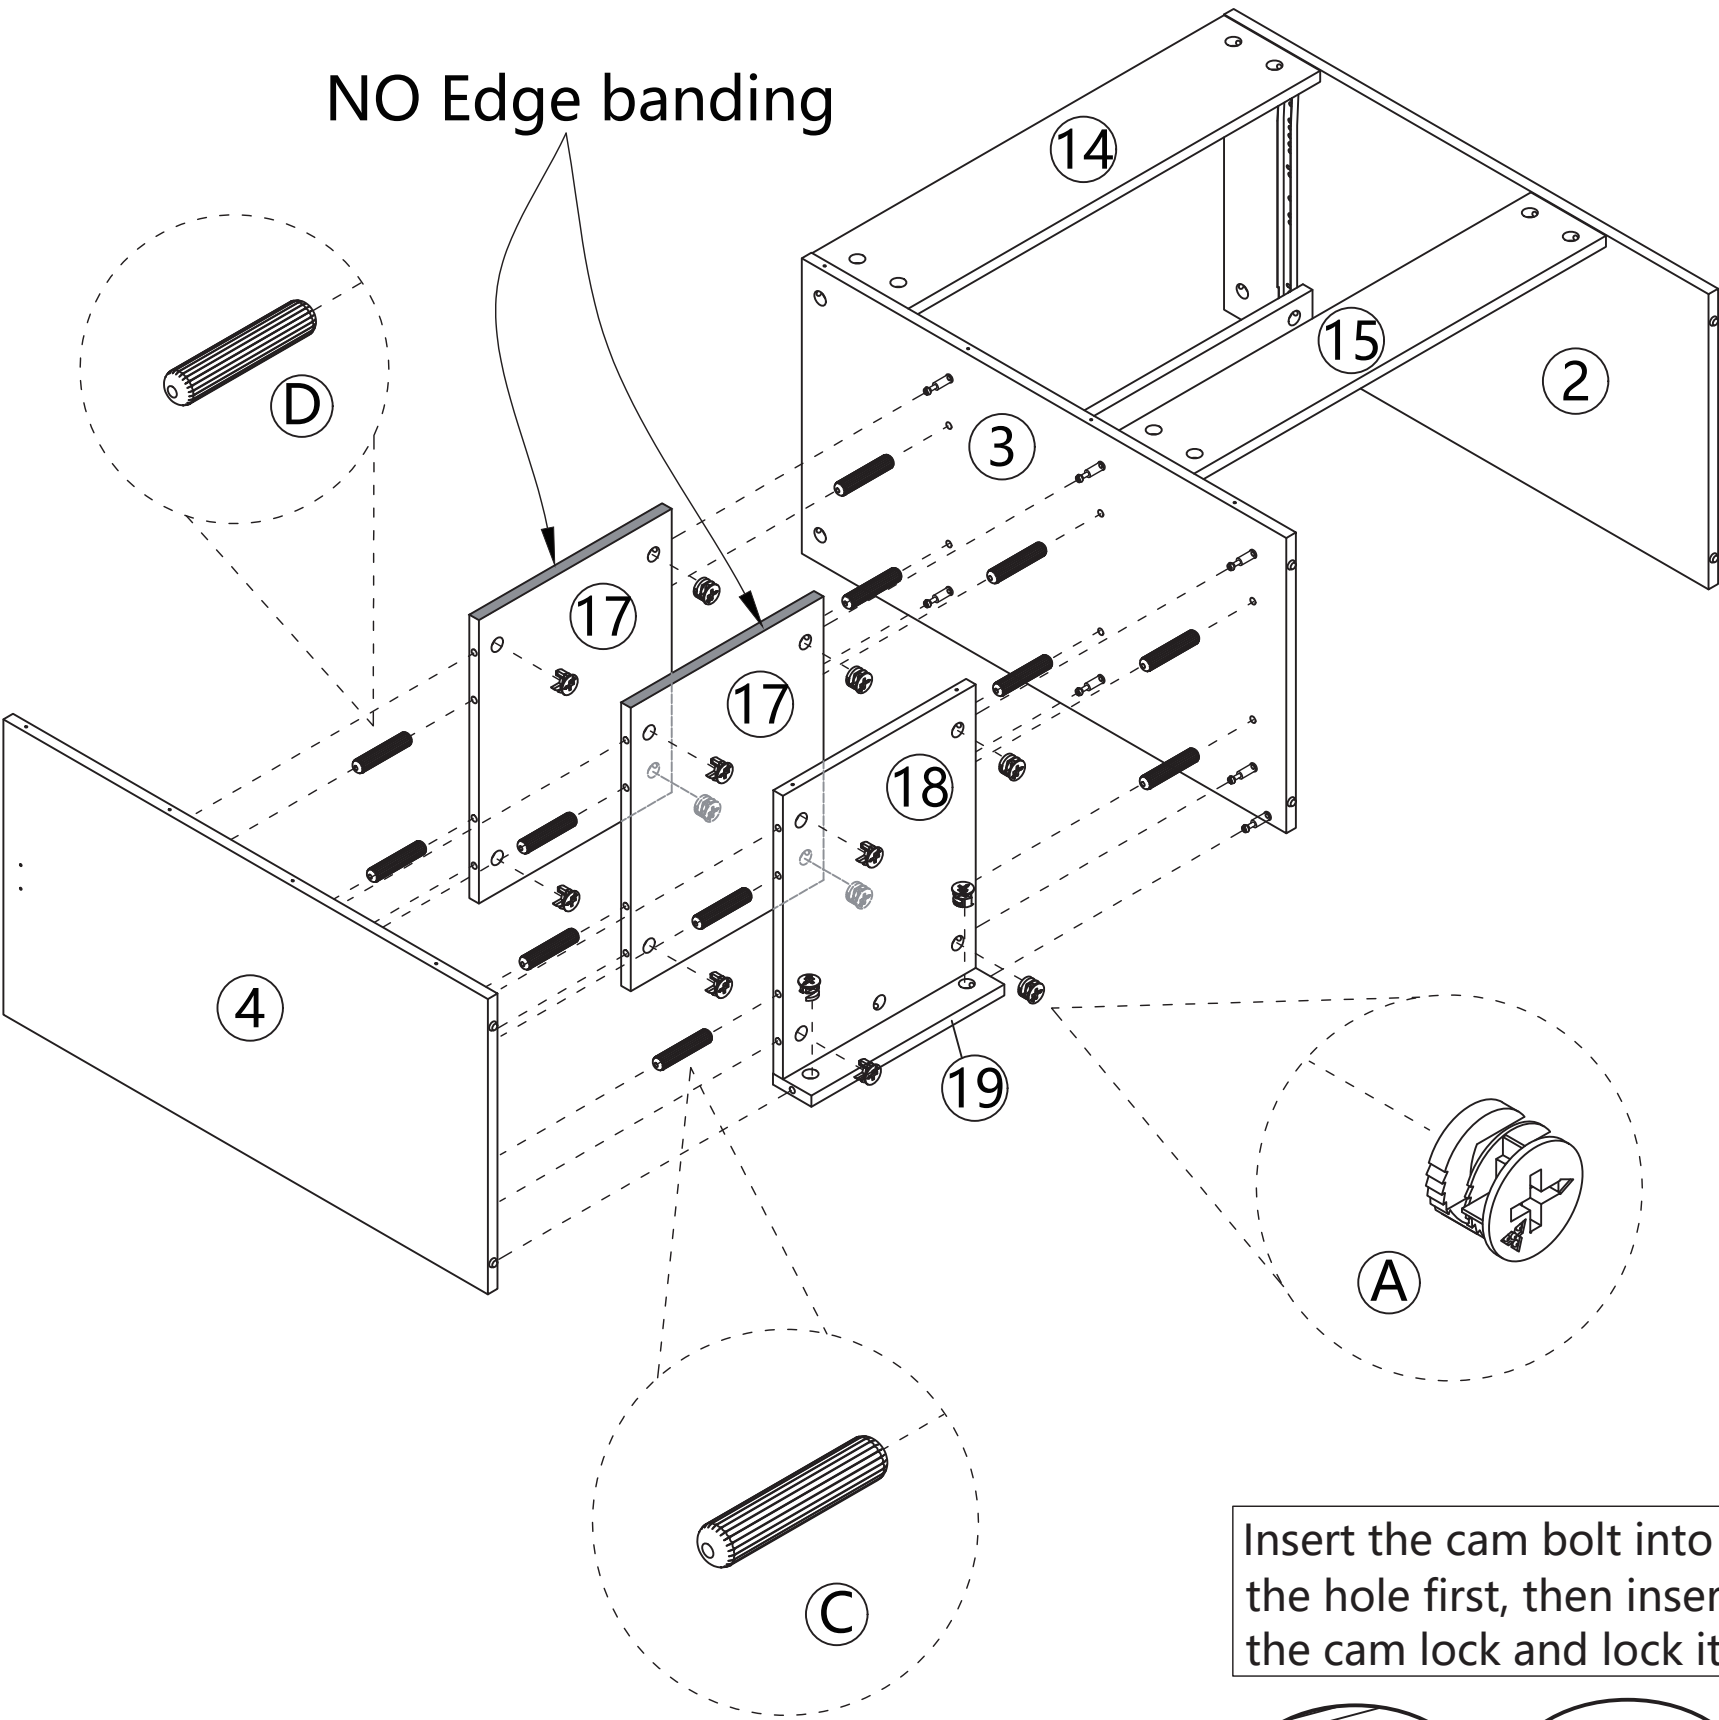




STEP 6

(A)	X2
	
Ø15*9.5	


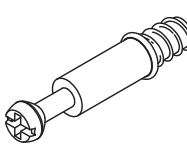
(B)	X2
	
Ø6.5*35	

(D)	X4
	
Ø6*30	

(G)	X5
	
Ø4*35	

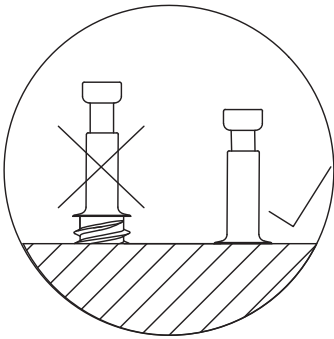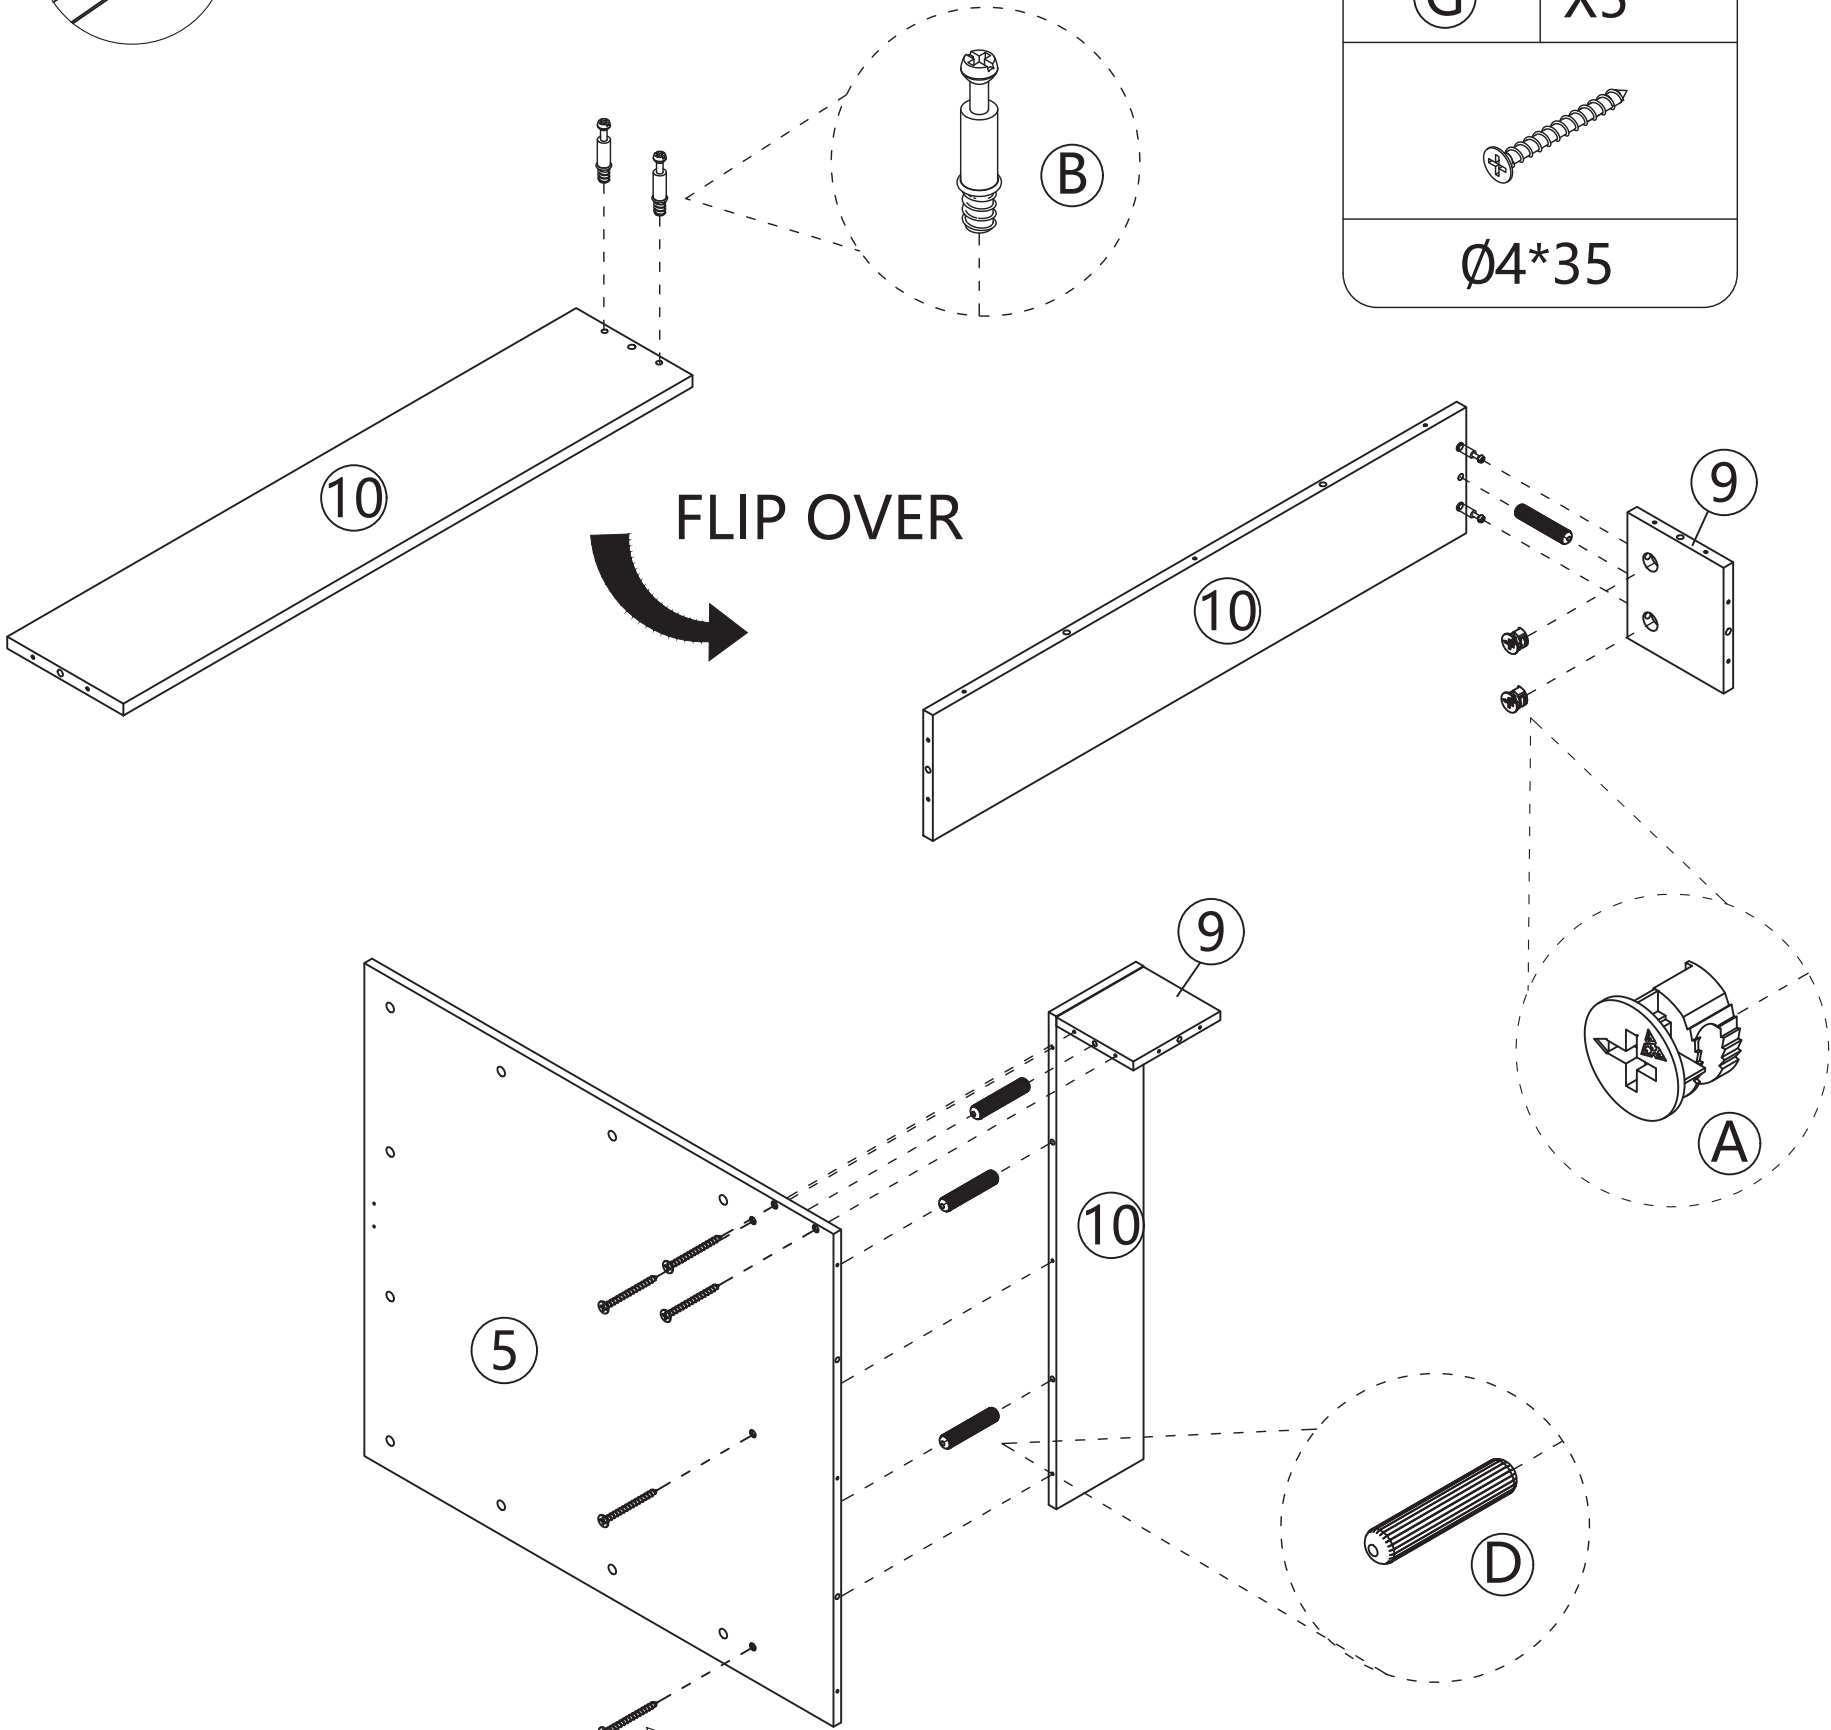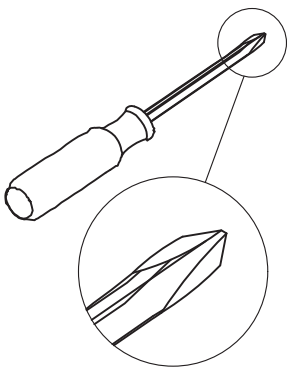


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

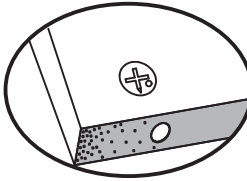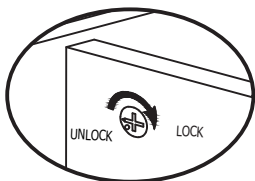








Proper orientation of CAM LOCK

STEP 7

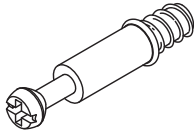Ⓑ	X18
	
Ø6.5*35	


Ⓓ	X3
	
Ø6*30	

Ⓖ	X5
	
Ø4*35	

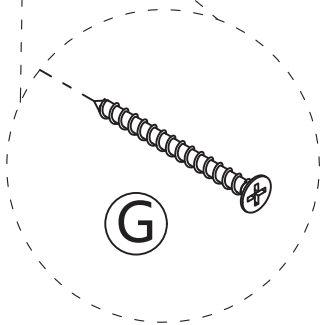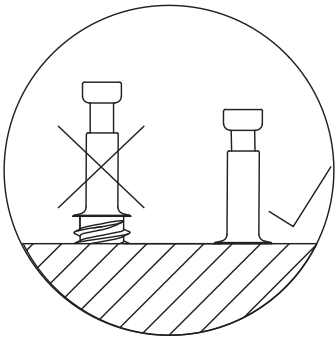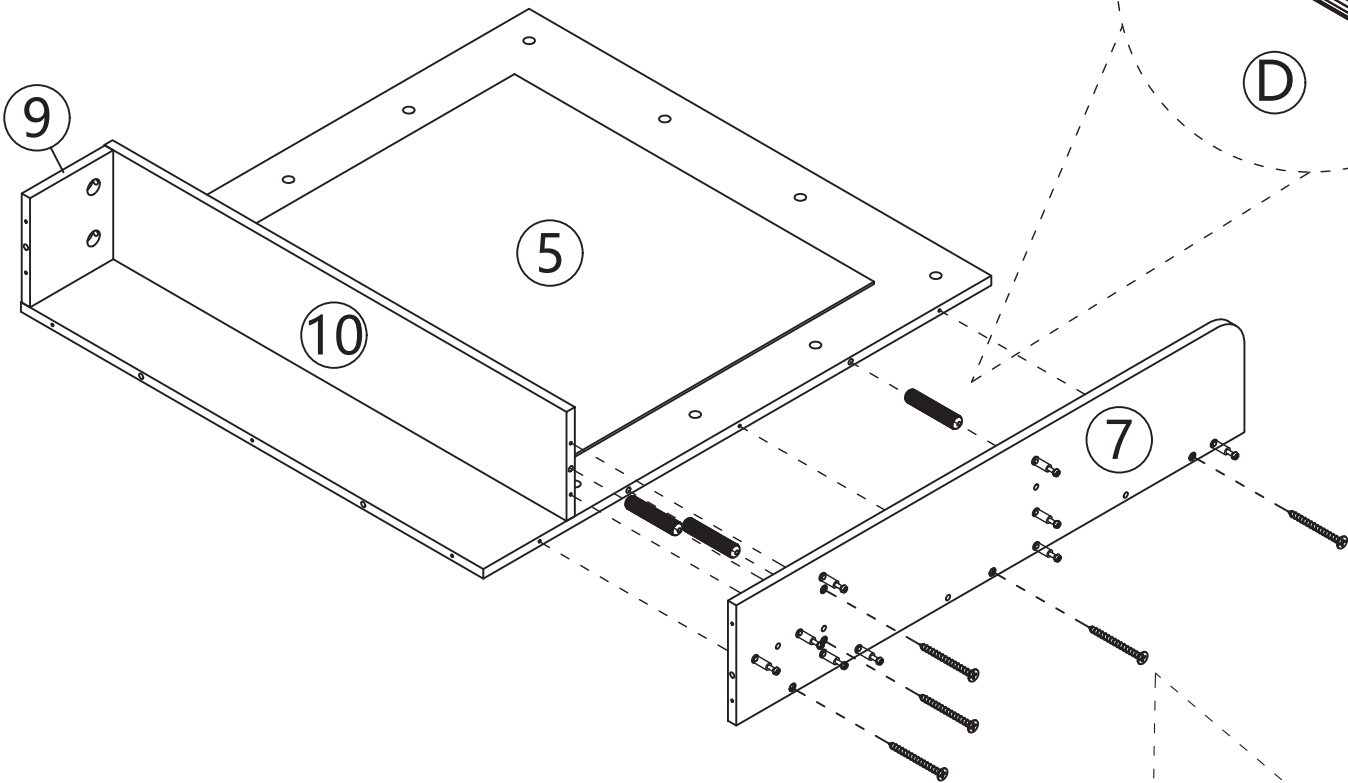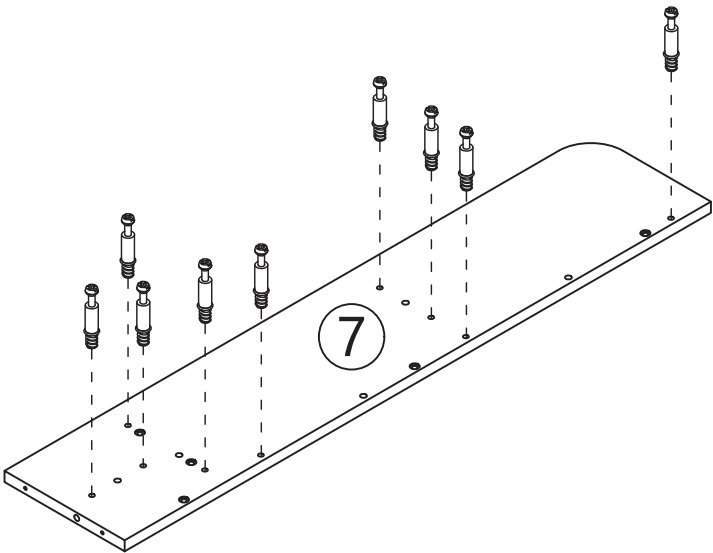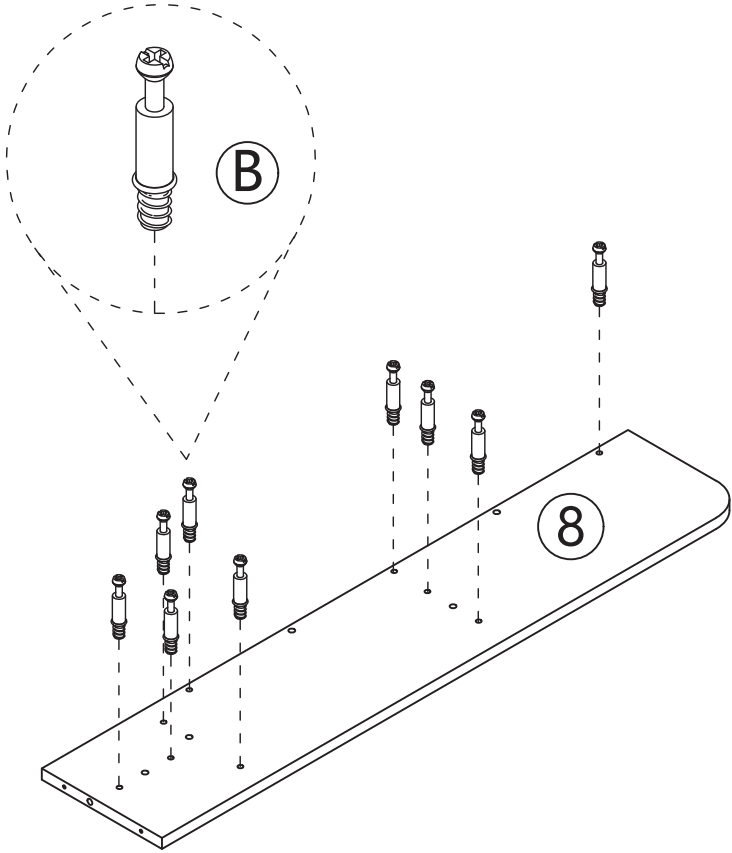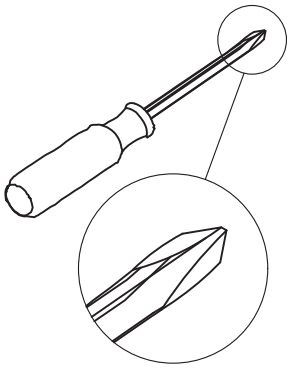


STEP 8


Ⓐ	X4	Ⓓ	X2
			
Ø15*9.5		Ø6*30	

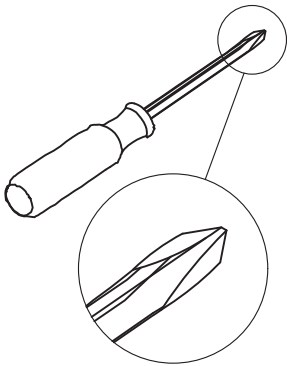

Edge banding

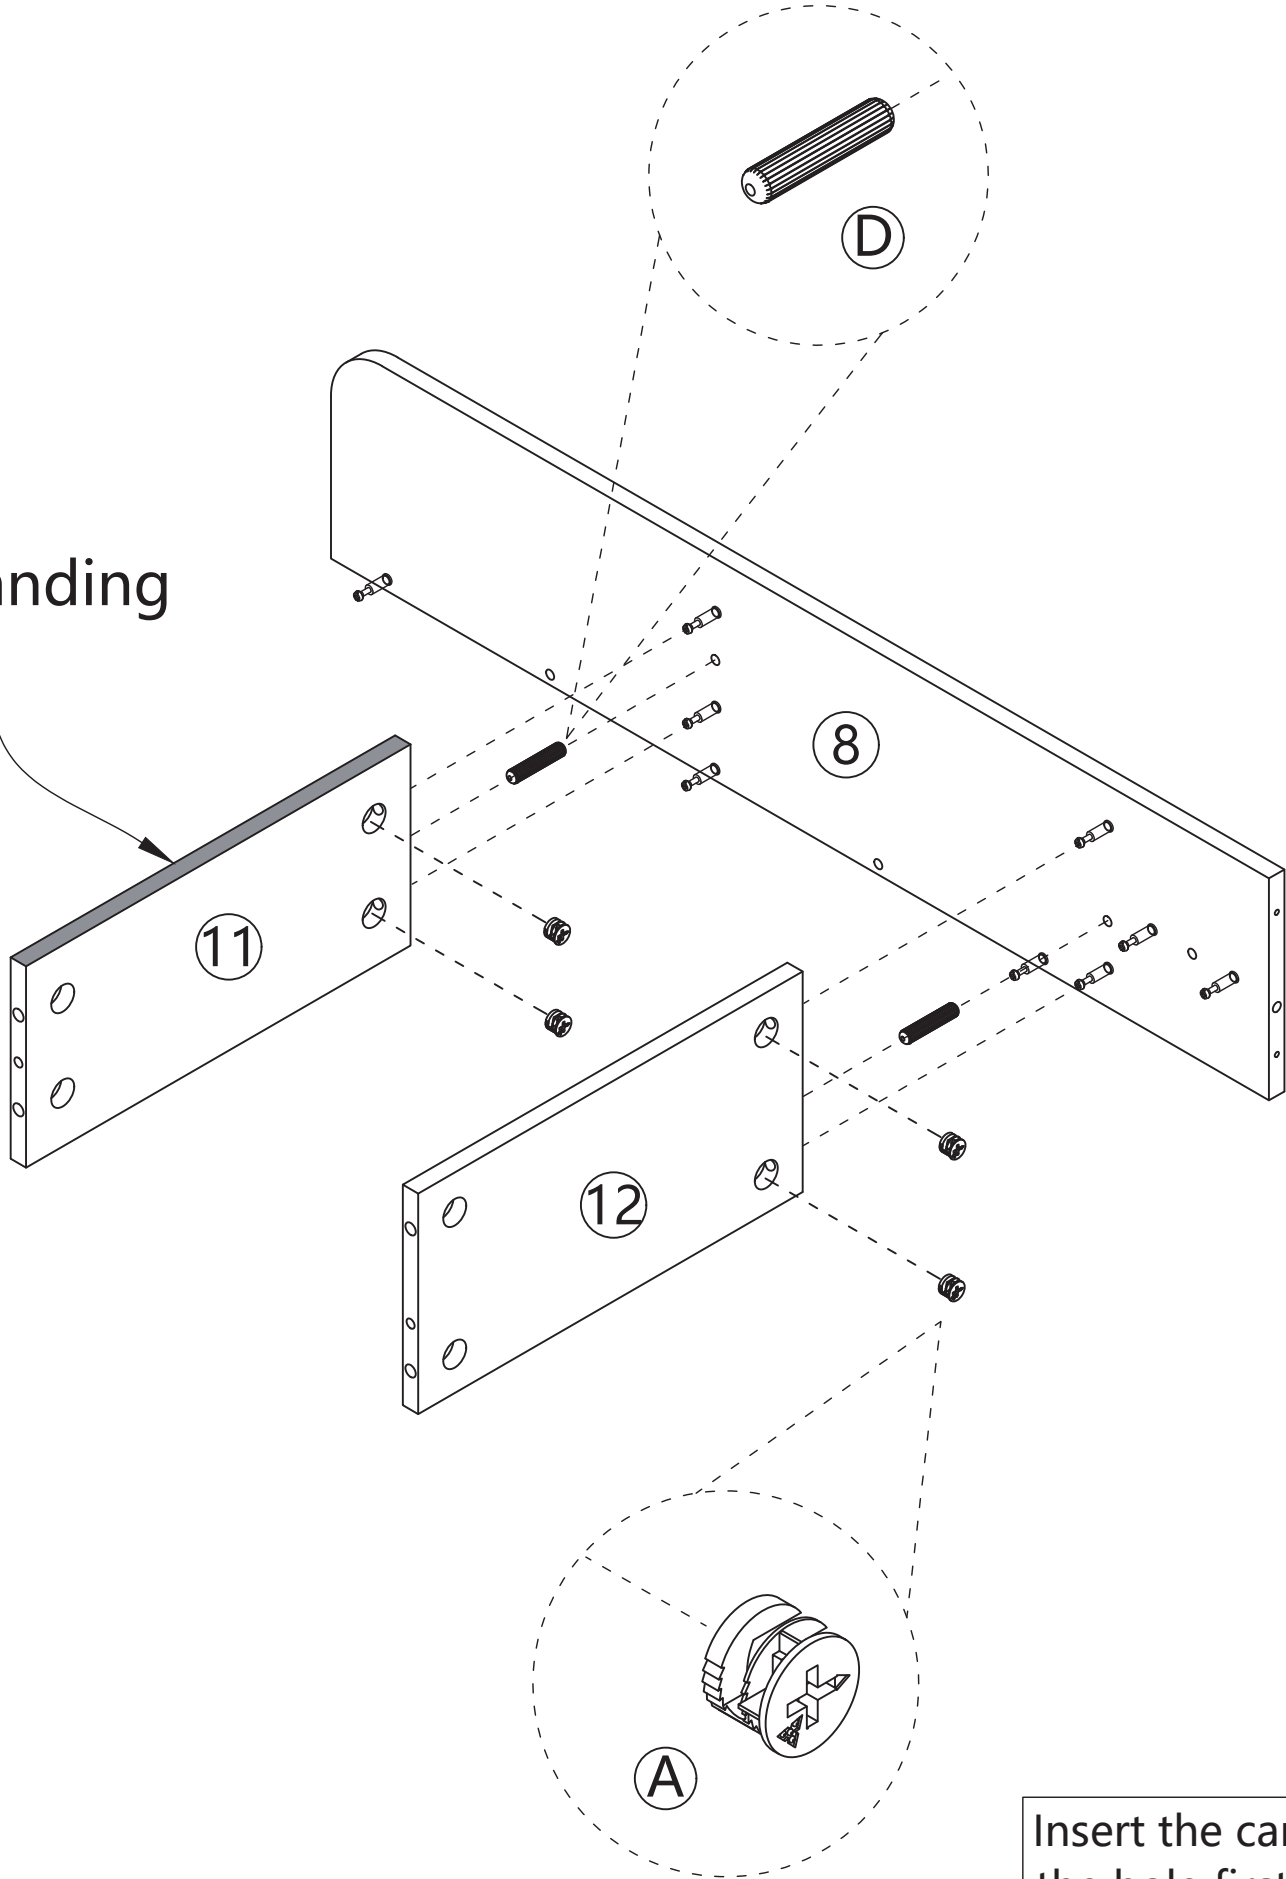




Insert the cam bolt into the hole first, then insert the cam lock and lock it.

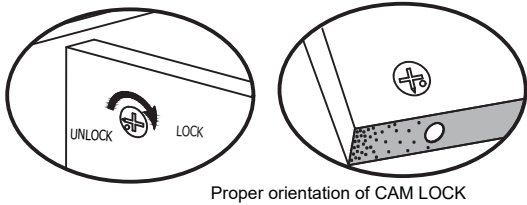

Proper orientation of CAM LOCK


STEP 9

A	X5	D	X3
			
Ø15*9.5		Ø6*30	

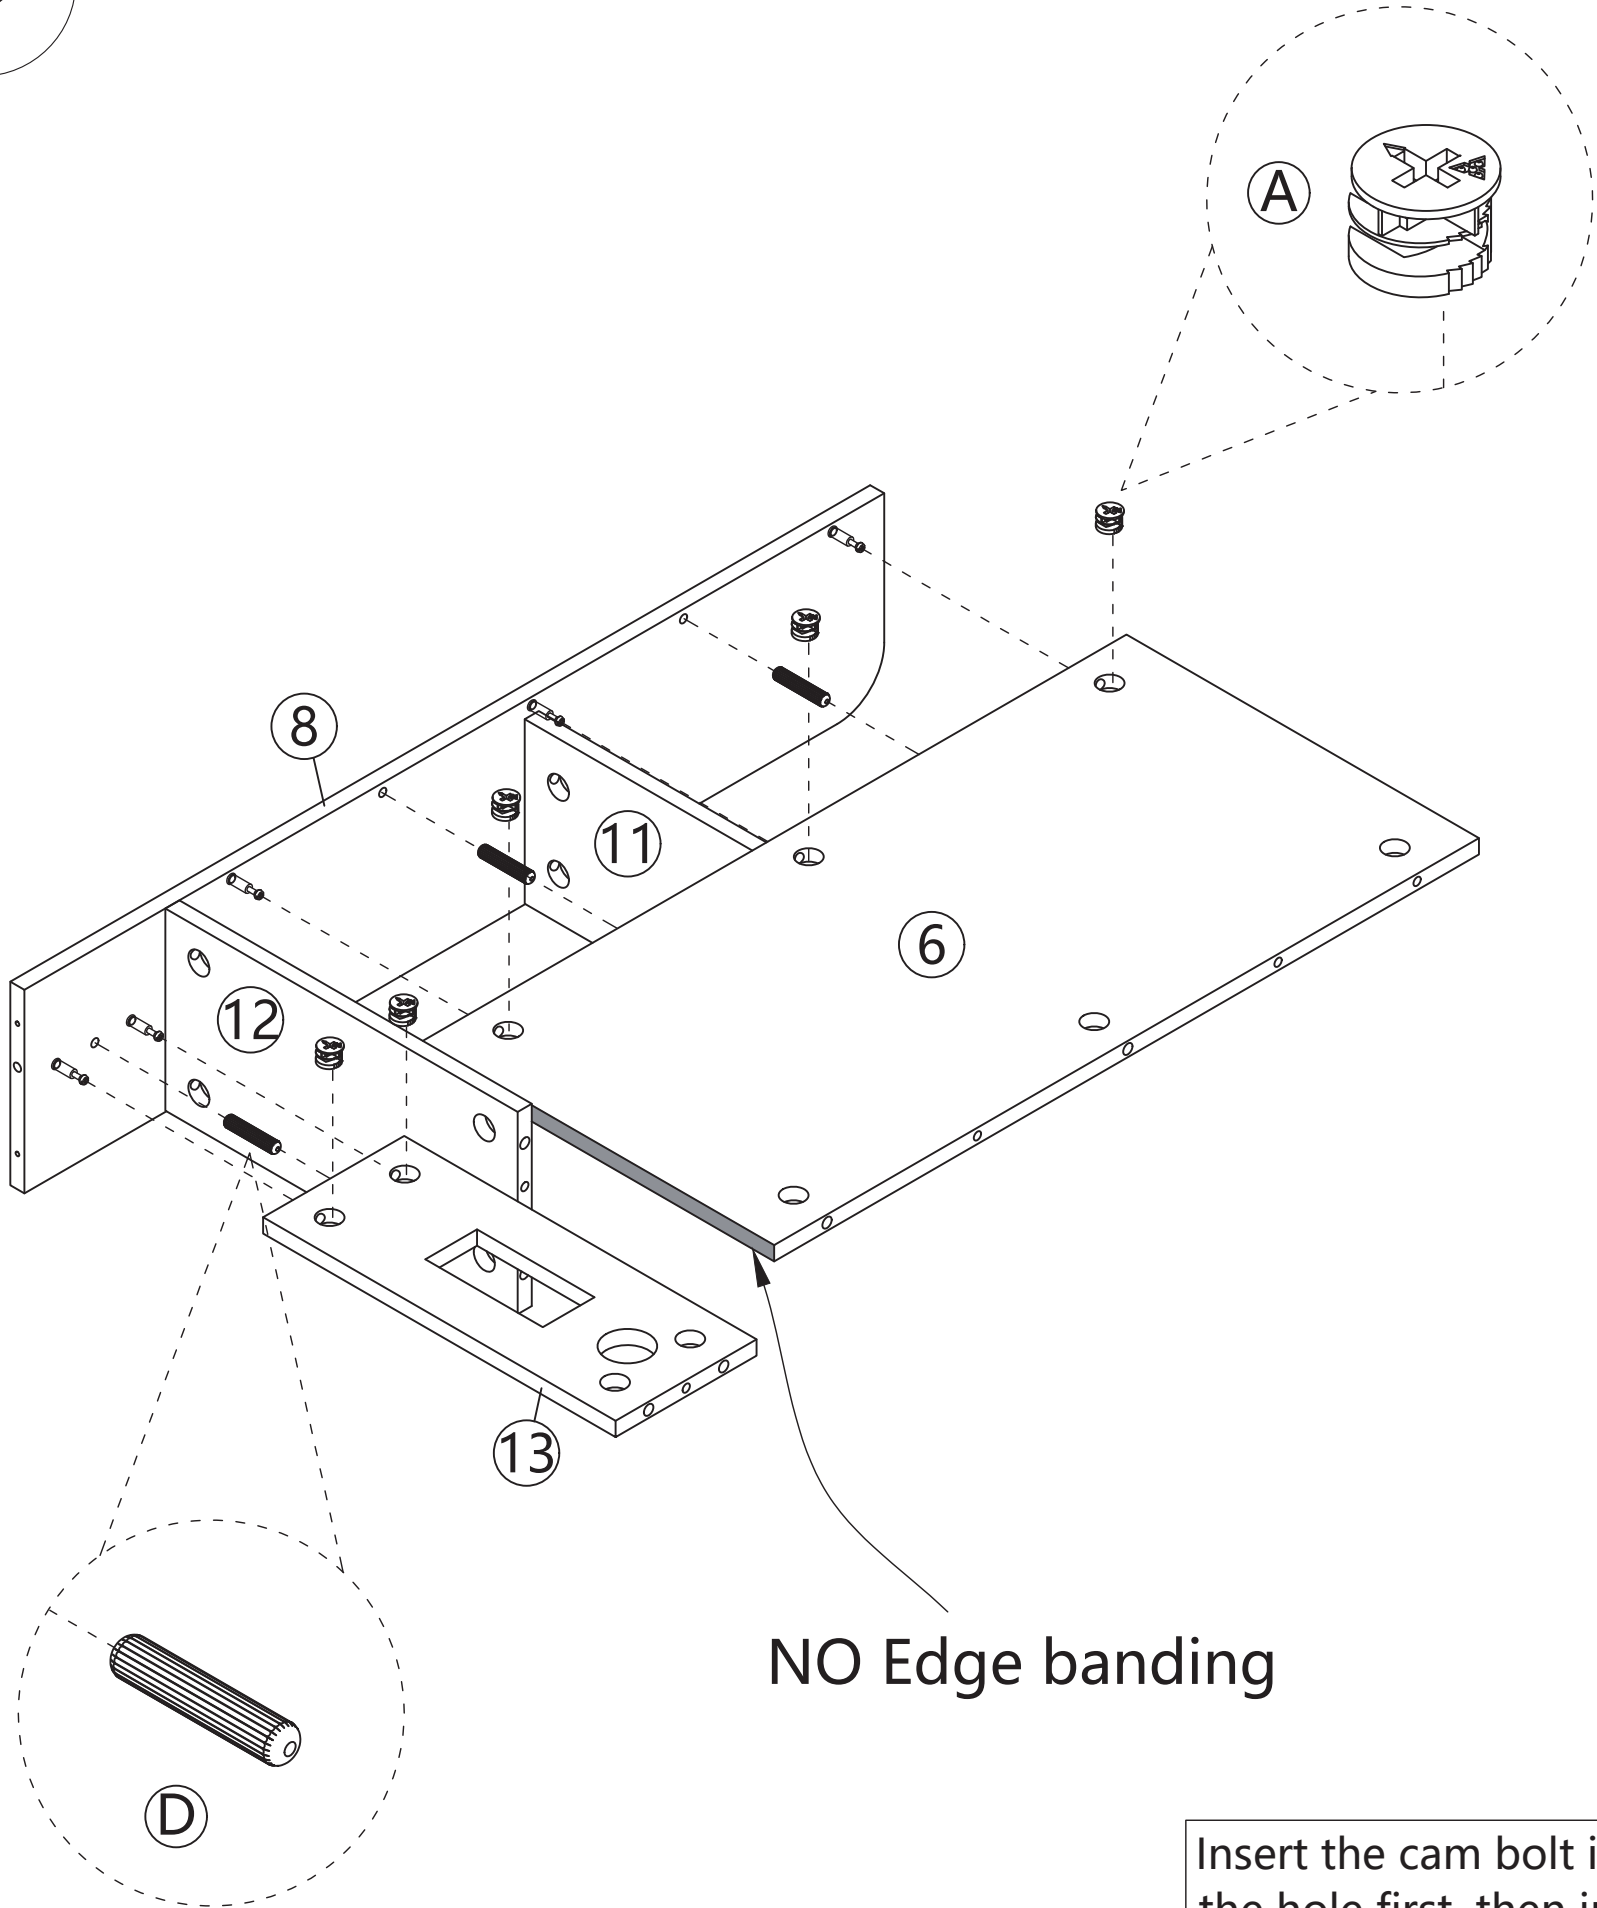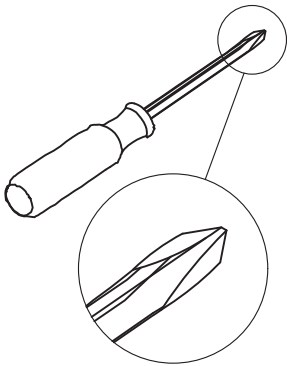


NO Edge banding

Insert the cam bolt into the hole first, then insert the cam lock and lock it.

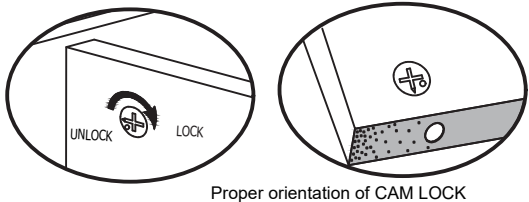



Proper orientation of CAM LOCK

STEP 10

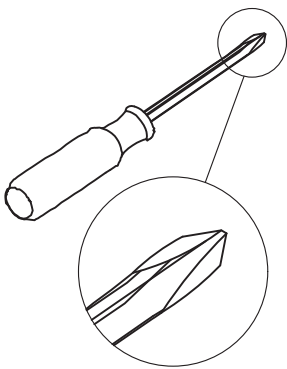


A	X9
	
Ø15*9.5	


D	X5
	
Ø6*30	

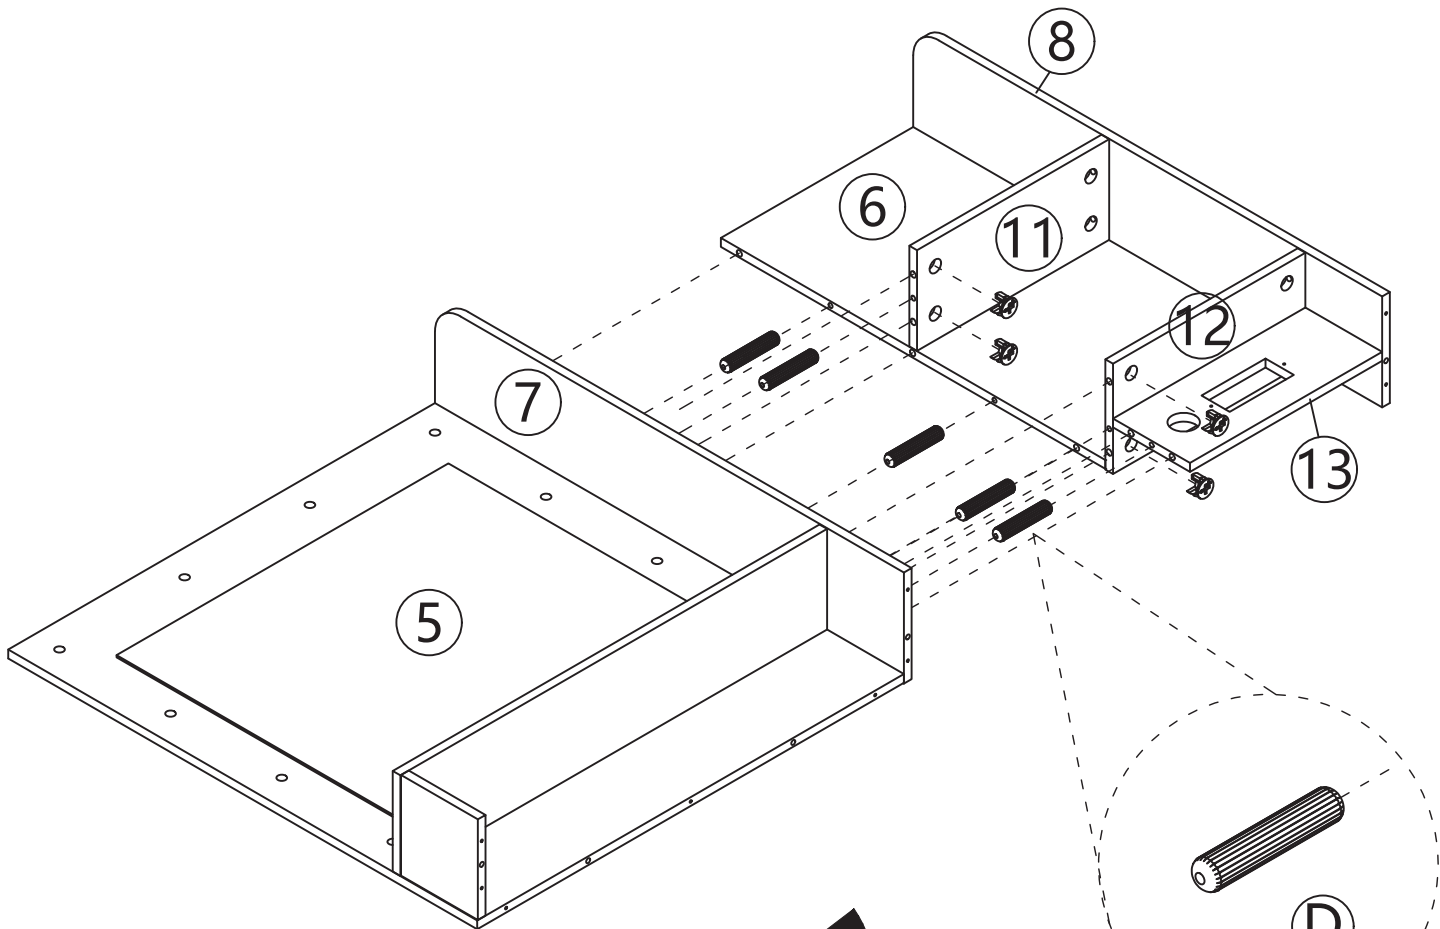

FLIP OVER

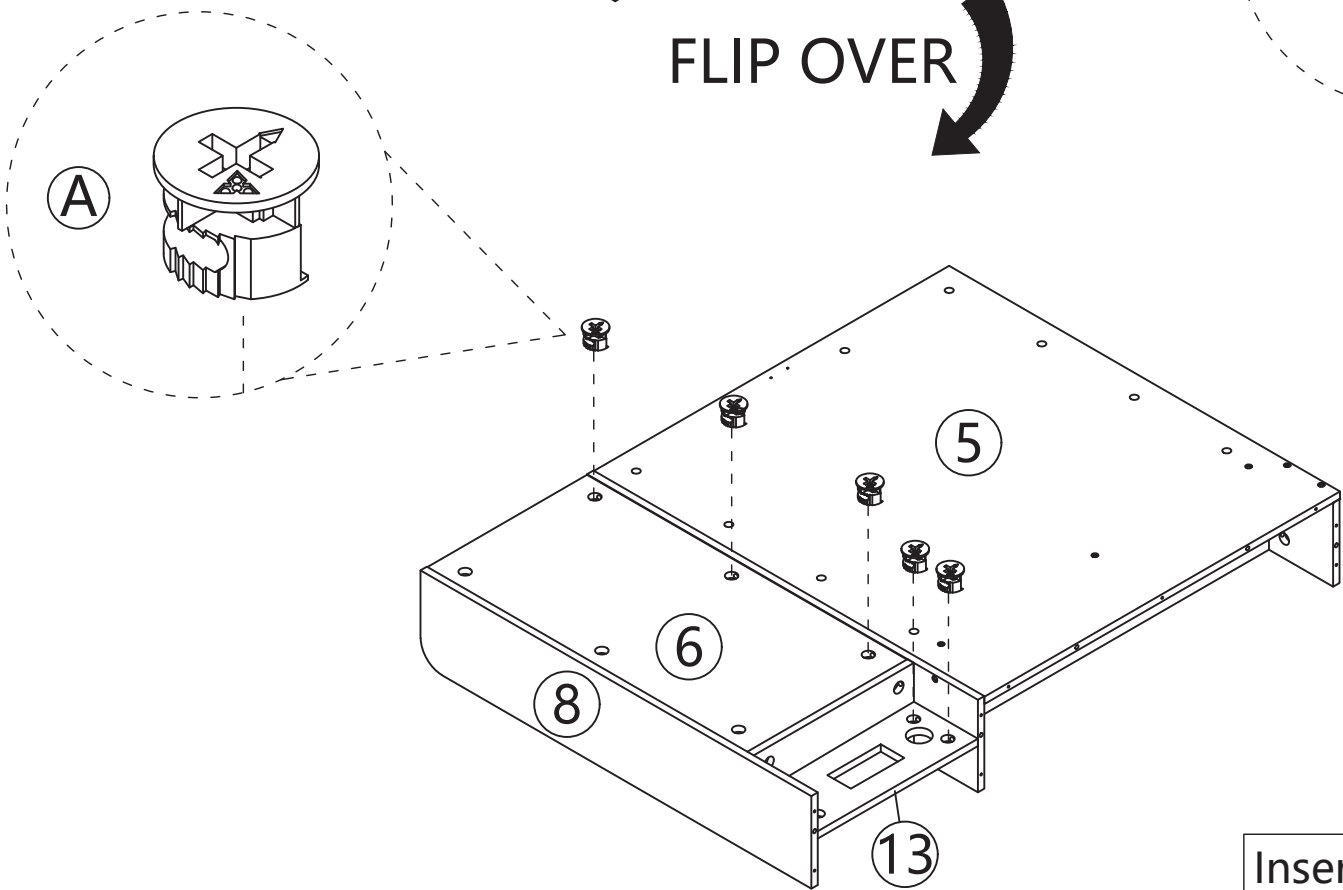

Insert the cam bolt into the hole first, then insert the cam lock and lock it.

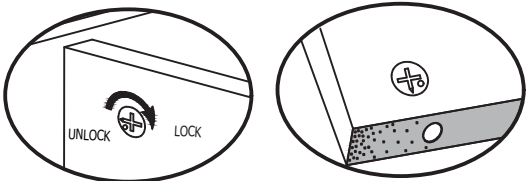








Proper orientation of CAM LOCK

STEP 11


(B)	X6
Ø6.5*35	

(D)	X5
Ø6*30	


(G)	X9
Ø4*35	

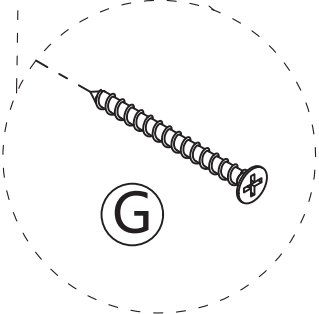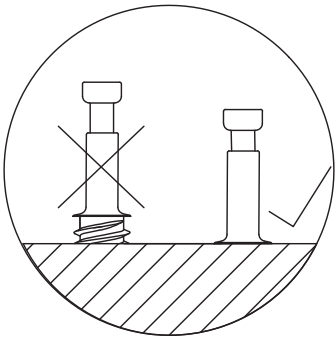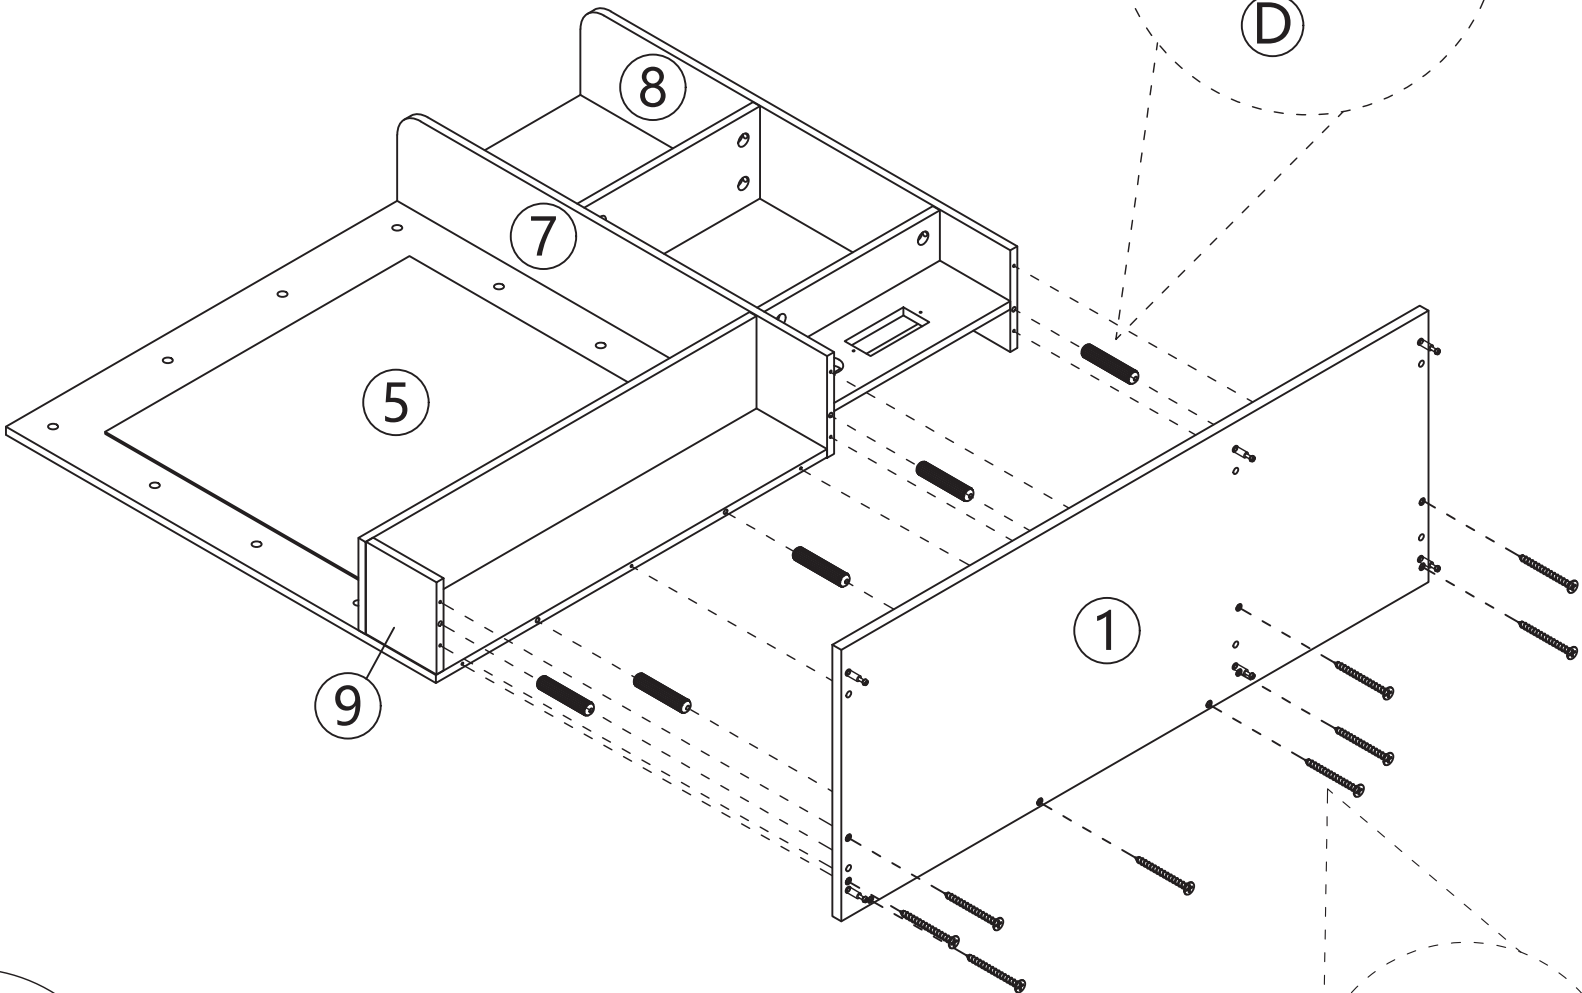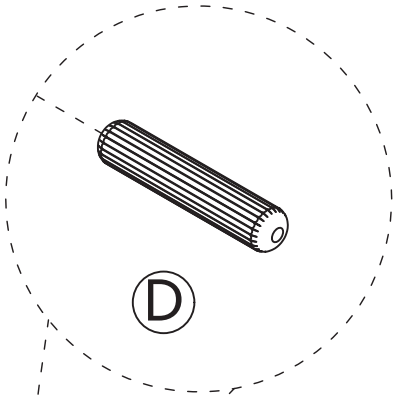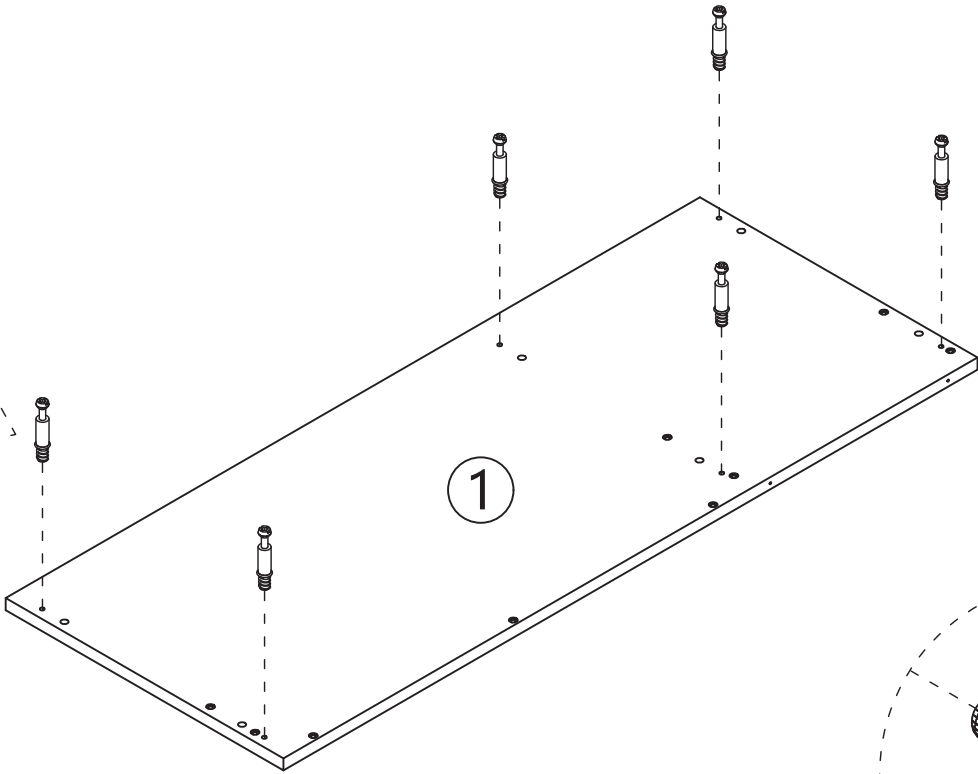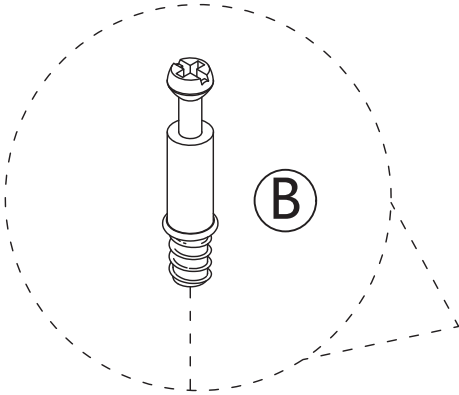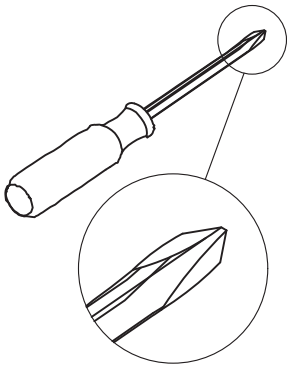


STEP 12

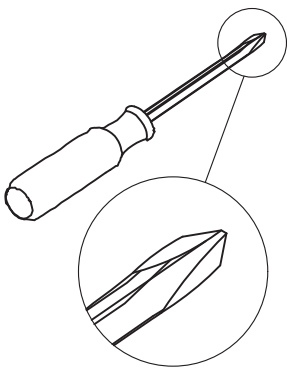


A	X6
	
Ø15*9.5	

C	X6
	
Ø8*30	


THIS STEP REQUIRES 2 PEOPLE

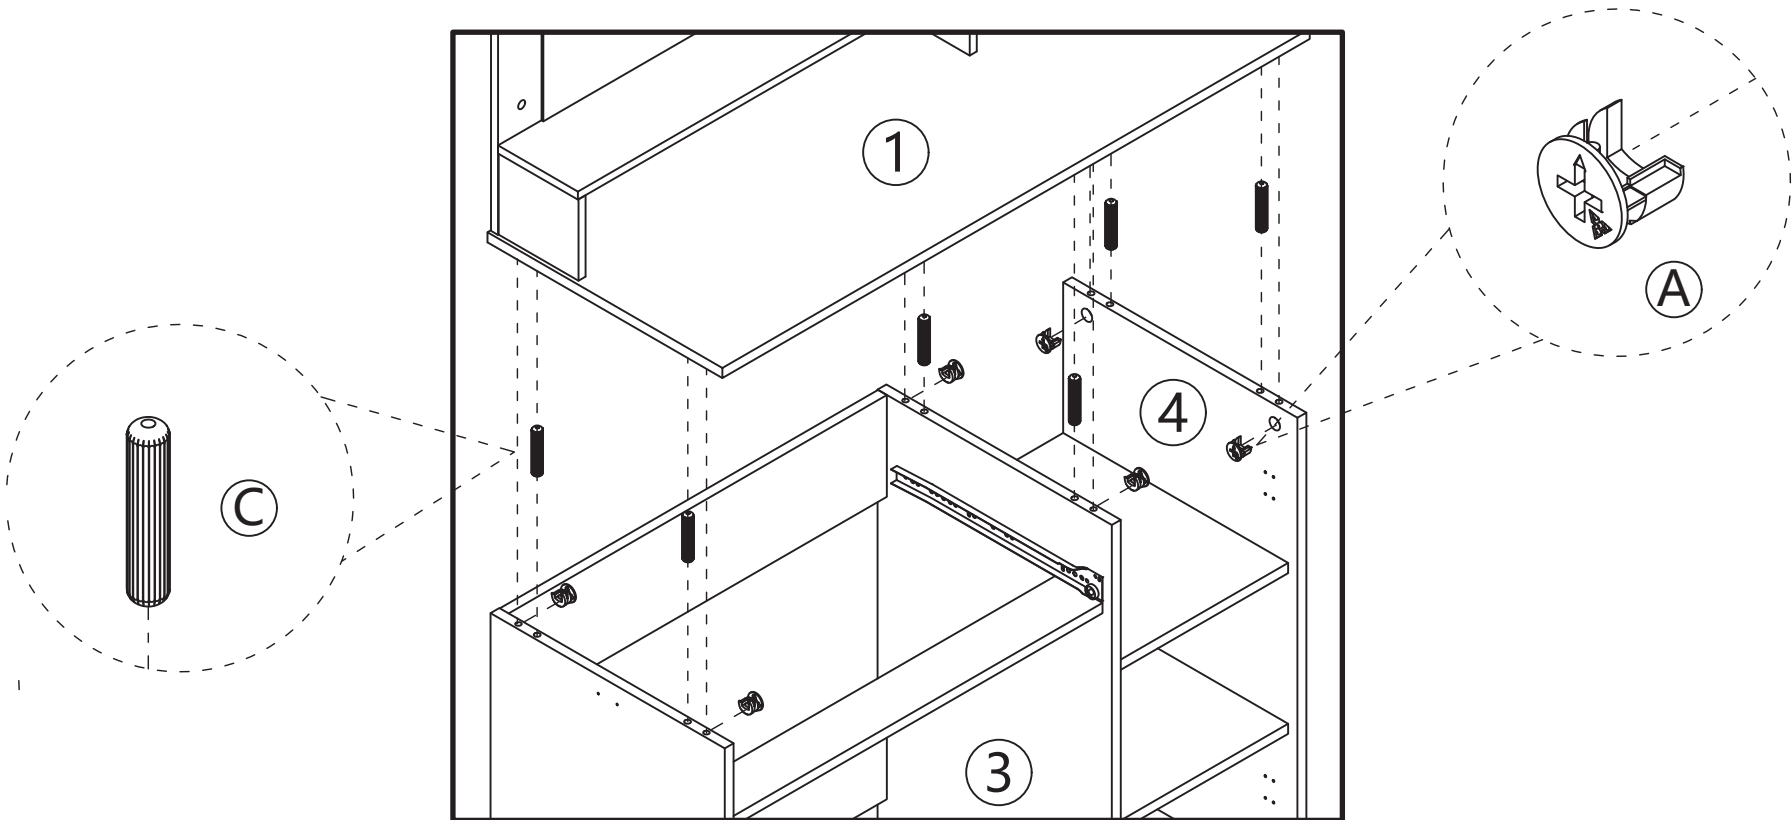


Insert the cam bolt into the hole first, then insert the cam lock and lock it.

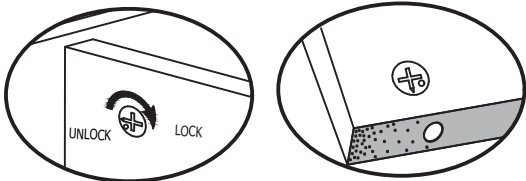

STEP 13




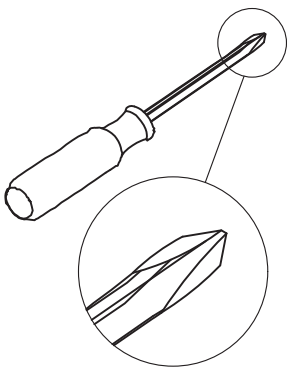


(H)	X12
	
3*14	





(I)	X2
	
4*14	



(L)	X1
	
109*99*38.5	

(S)	X1set
 	

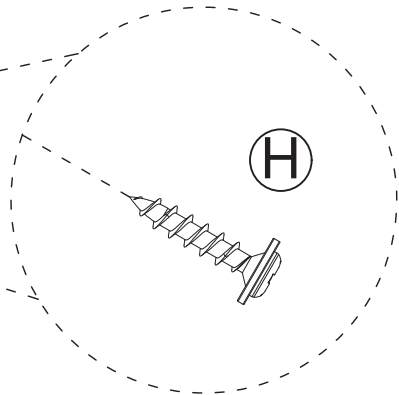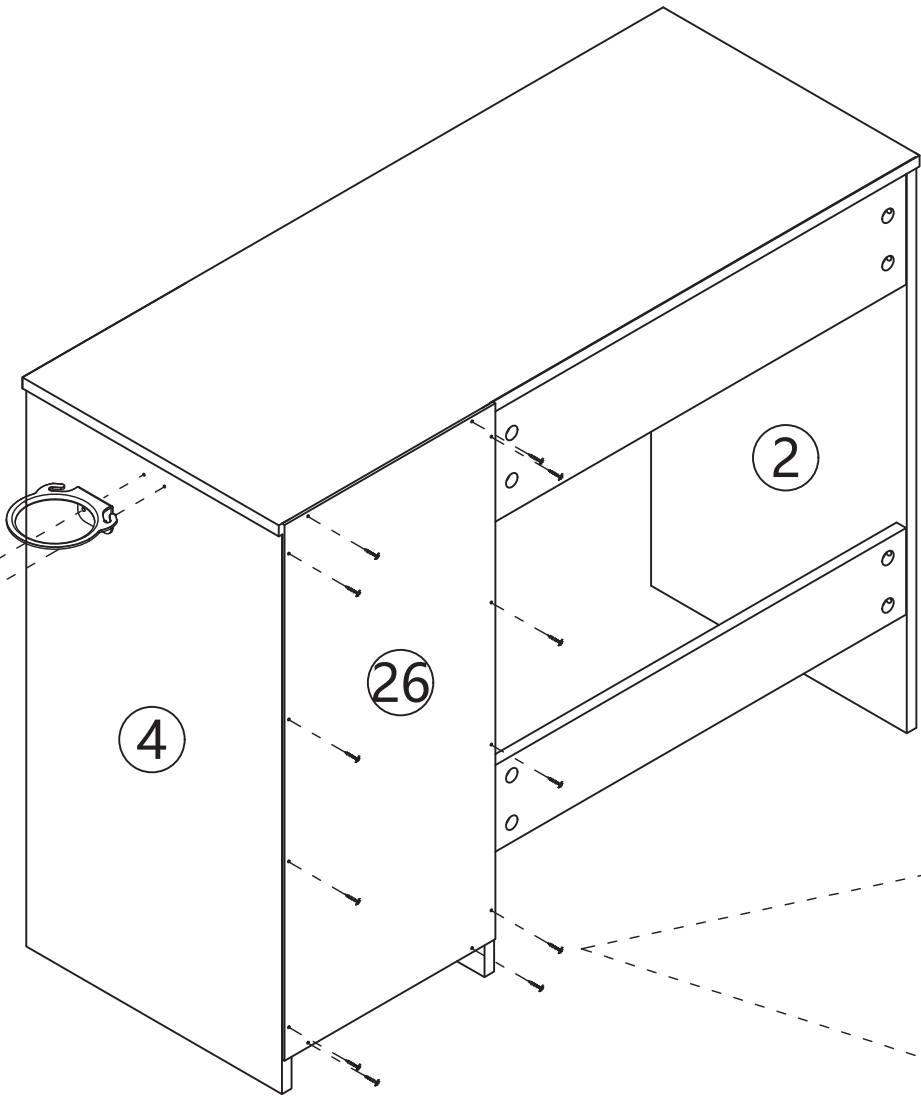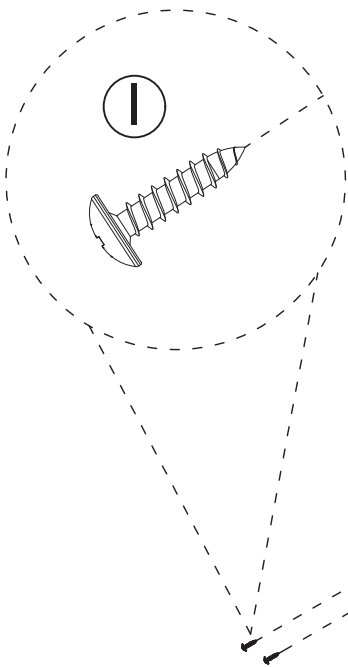
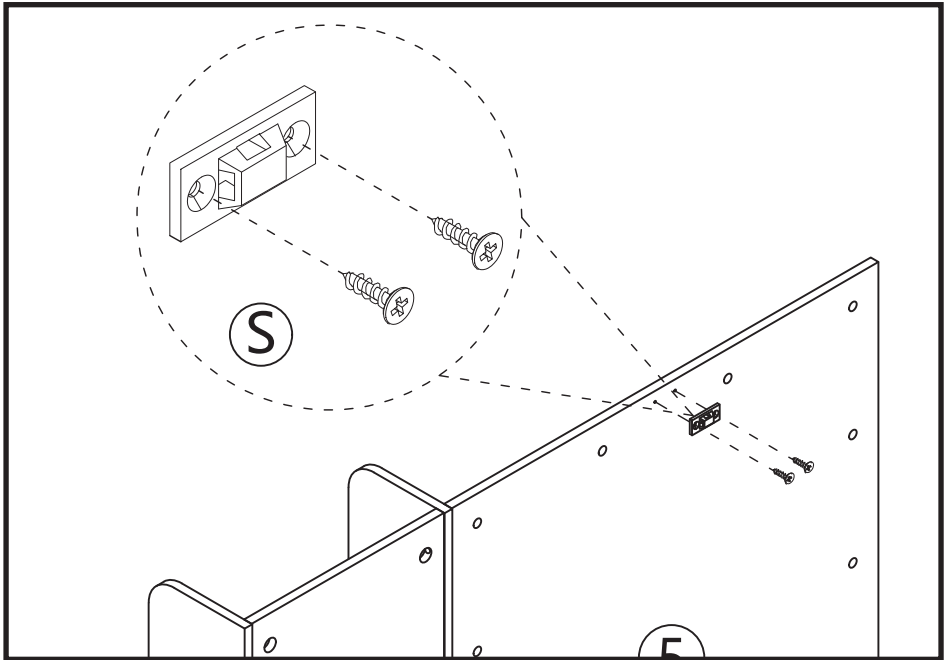


STEP 14

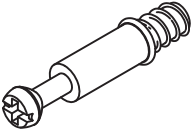
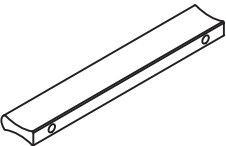

A X4  Ø15*9.5	B X4  Ø6.5*35	G X4  Ø4*35	K X1  10616*8
J X2  Ø4*18			

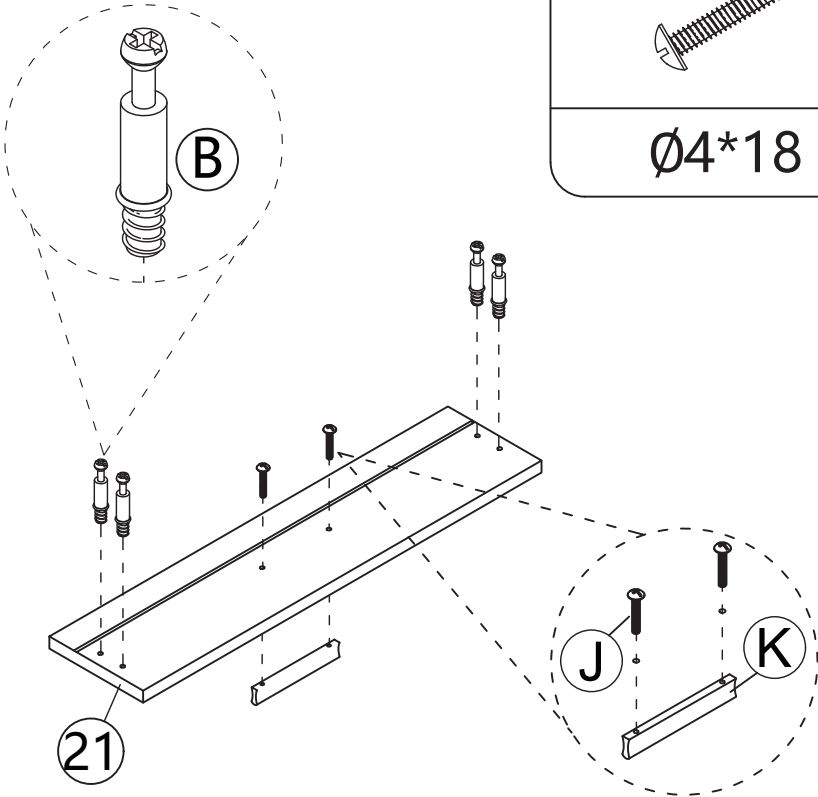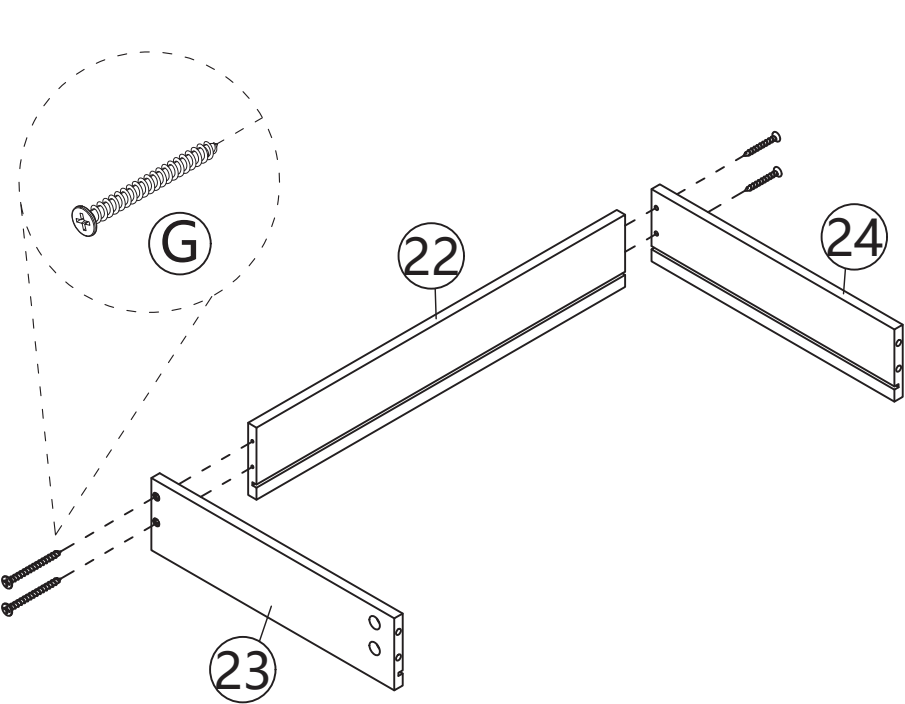

Step 1

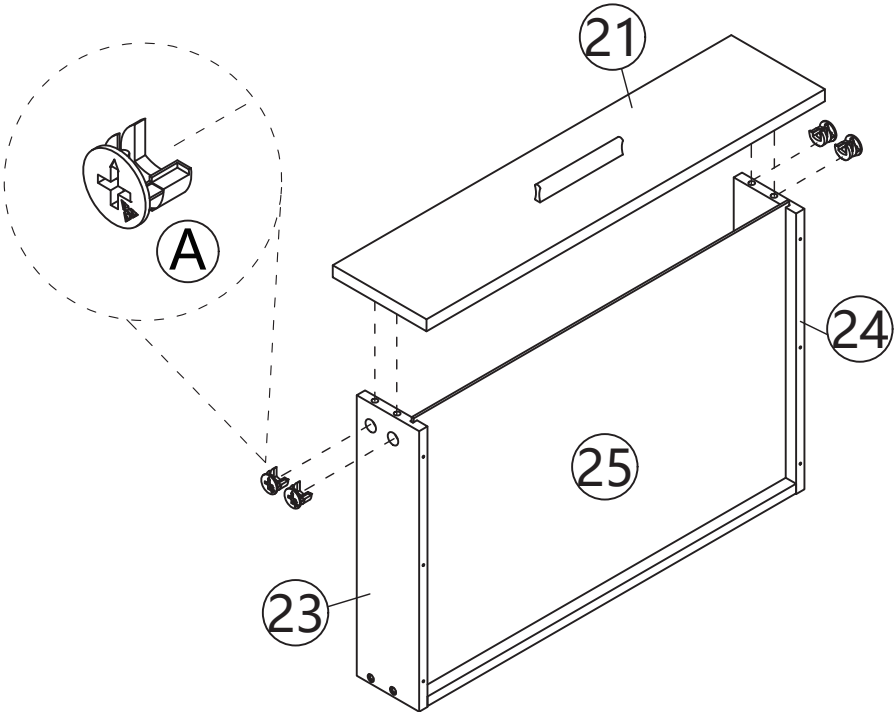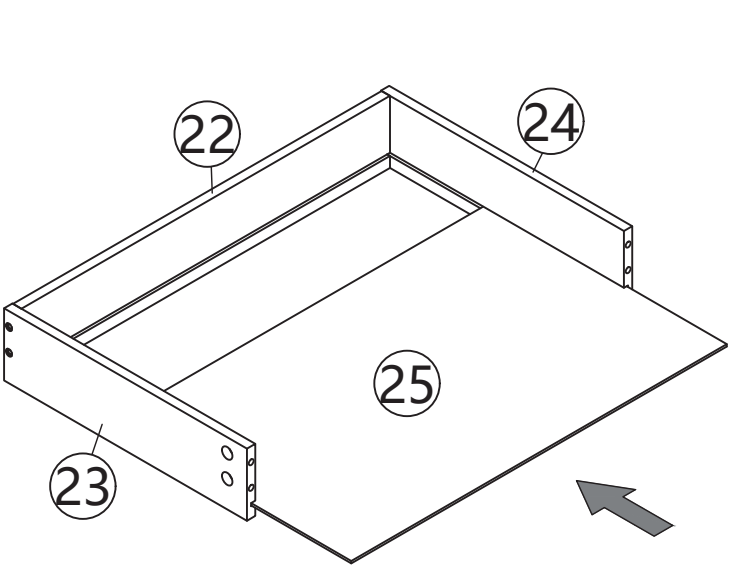


Step 3

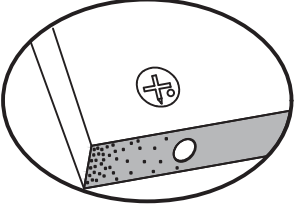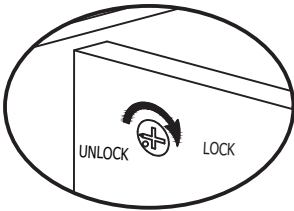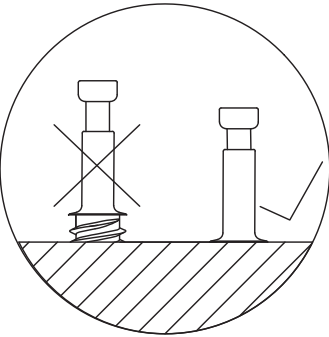


Proper orientation of CAM LOCK


Insert the cam bolt into the hole first, then insert the cam lock and lock it.


STEP 15

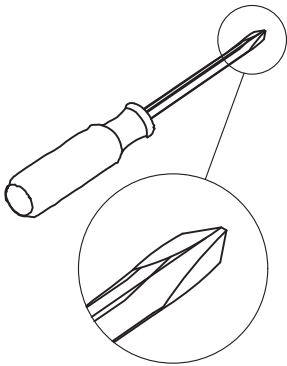




(E)	X6
	
Ø3.5*14	

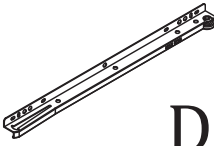(M)	X1
	
DR L=350	

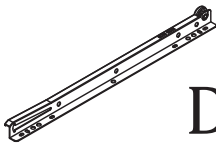
(M)	X1
	
DL L=350	

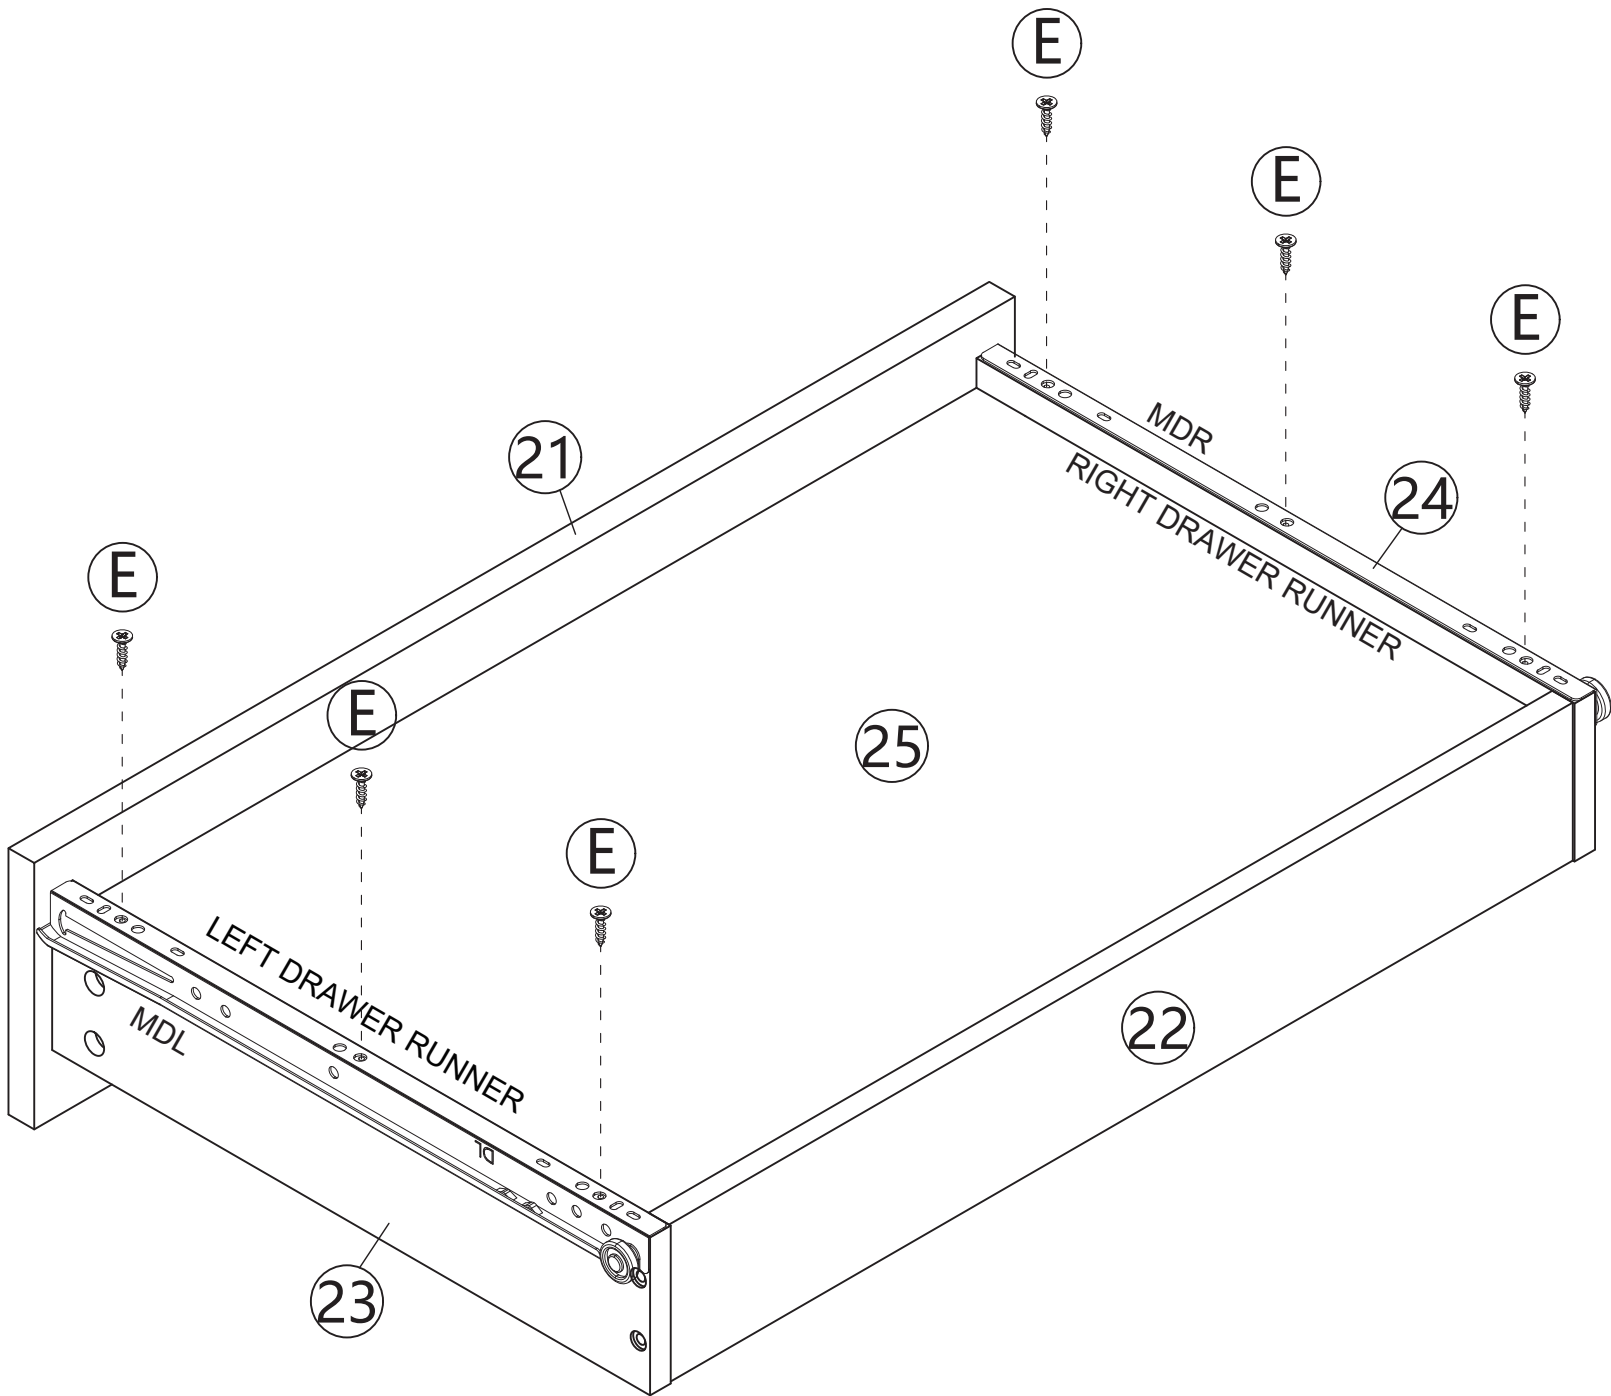

STEP 16

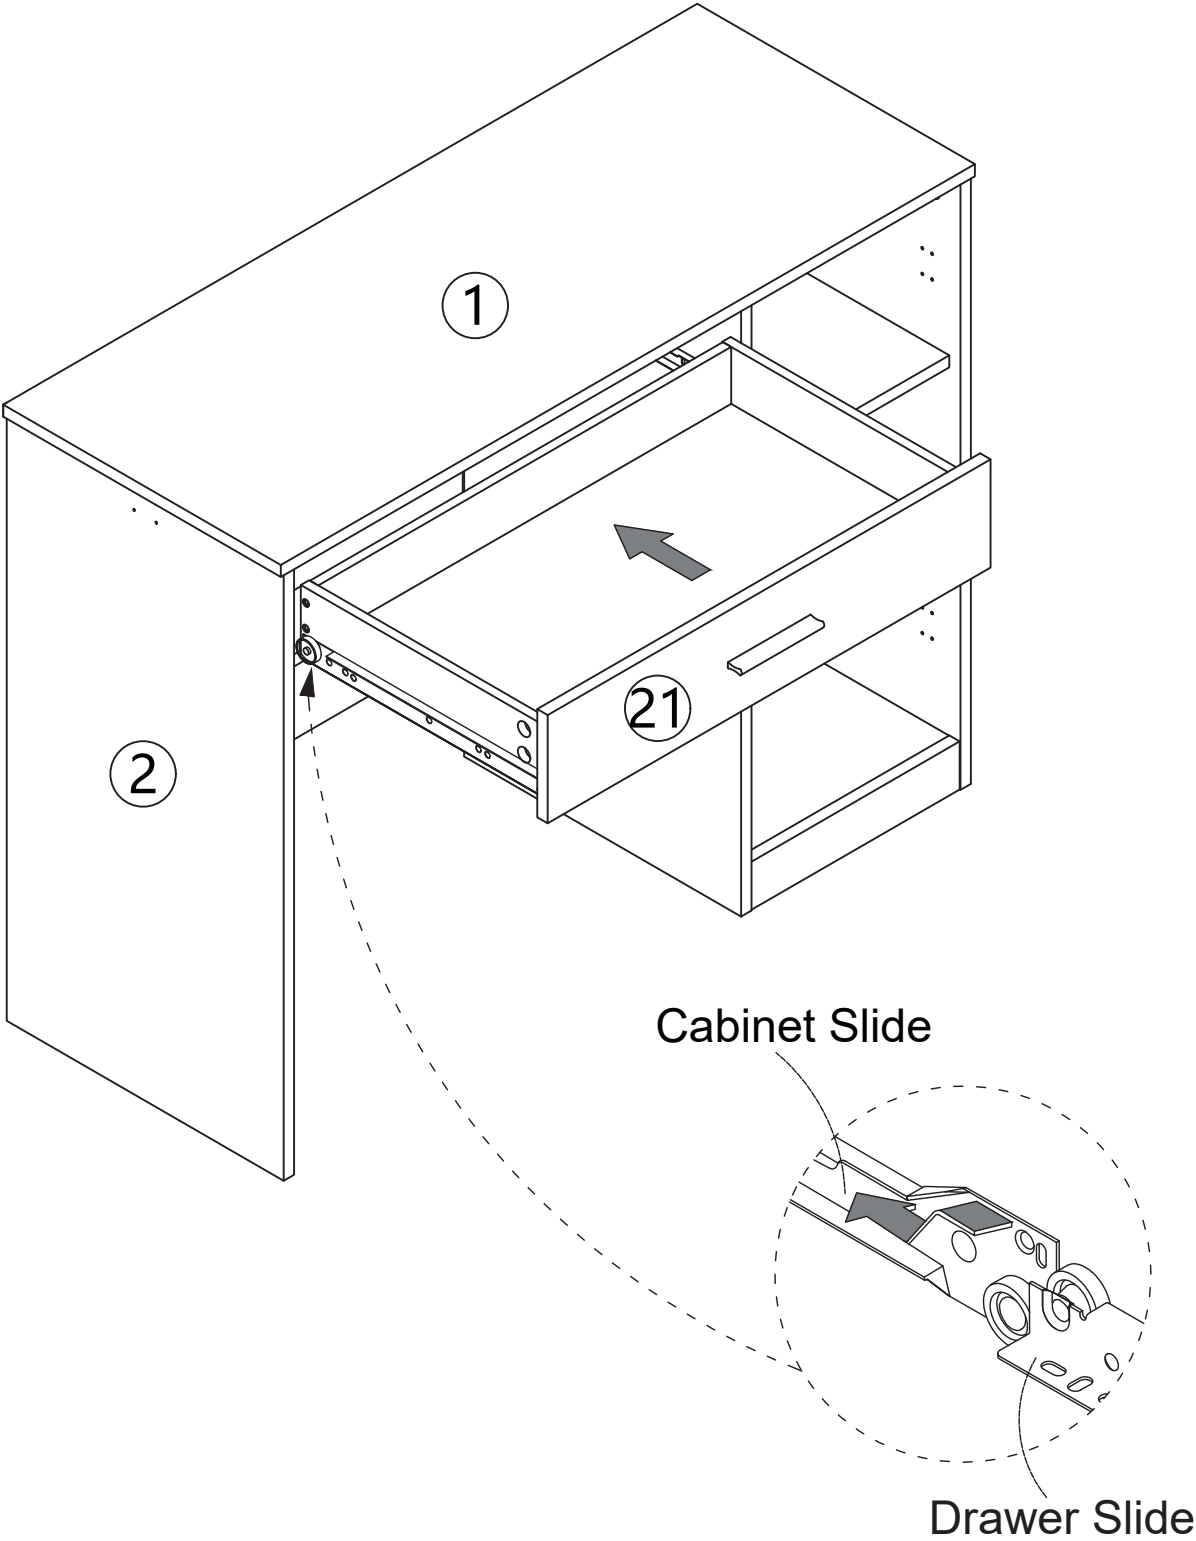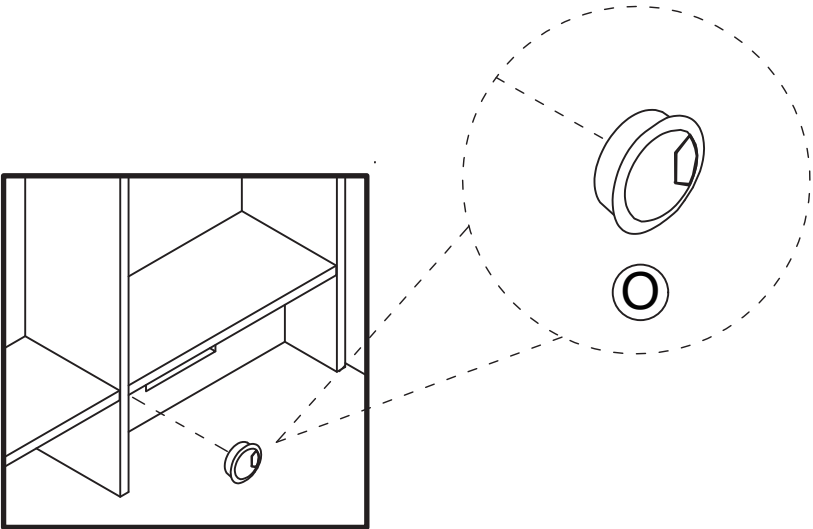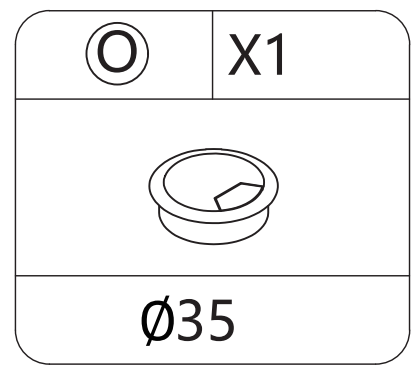



STEP 17

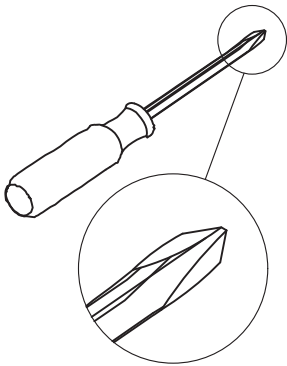


Ⓔ	X4
	
Ø3.5*14	


Ⓓ	X2
	
Ø35	

Ⓜ	X2
	
Ø4*18	

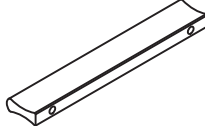Ⓚ	X1
	
106*16*8	

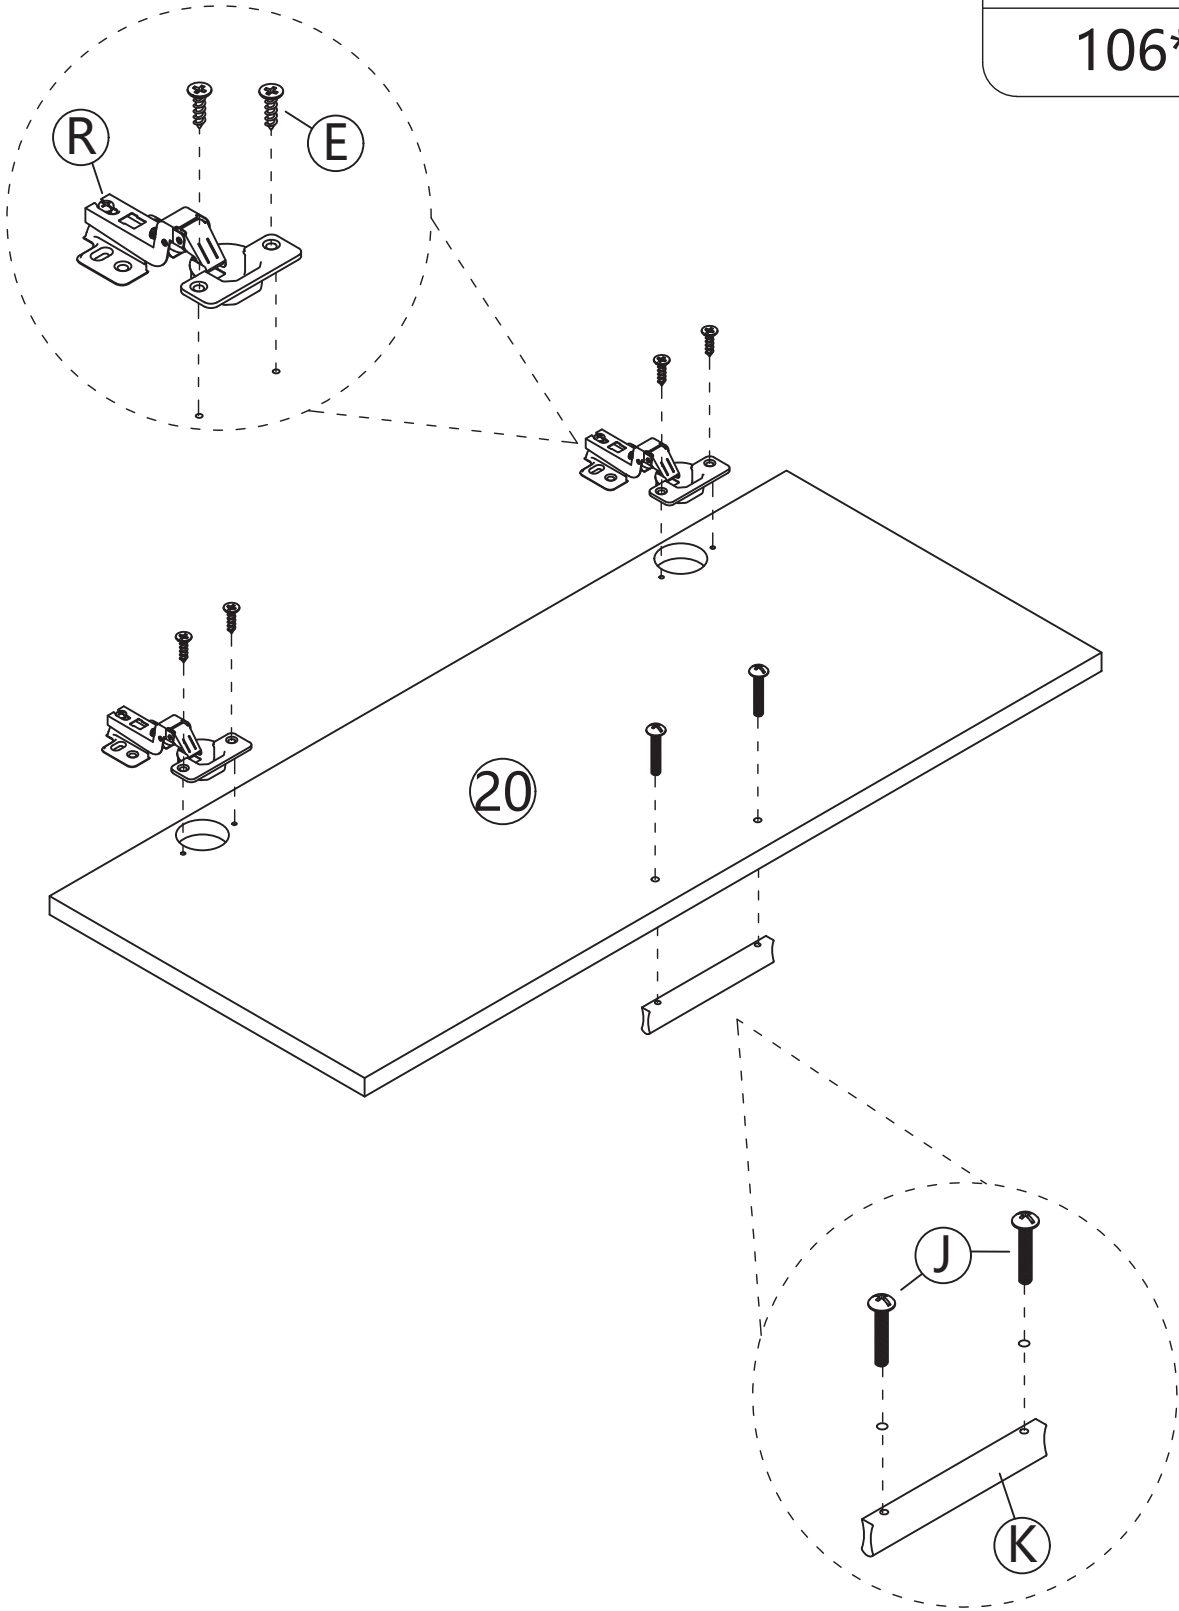






STEP 18

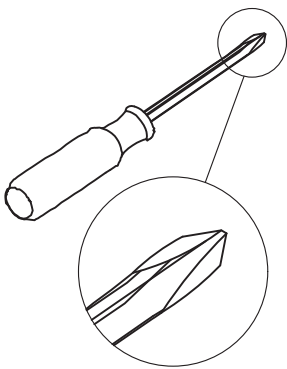



Ⓔ	X8
	
Ø3.5*14	

Ⓕ	X2
	
Ø3*12	

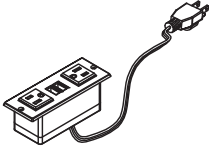Ⓖ	X1
	

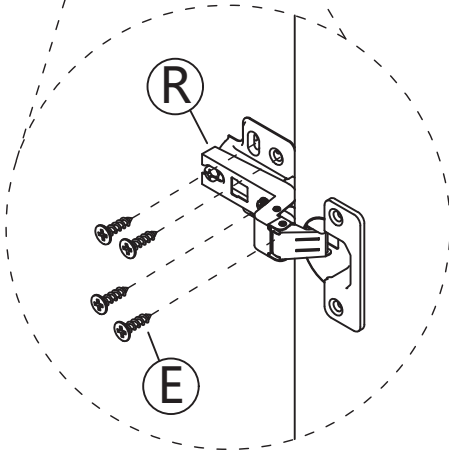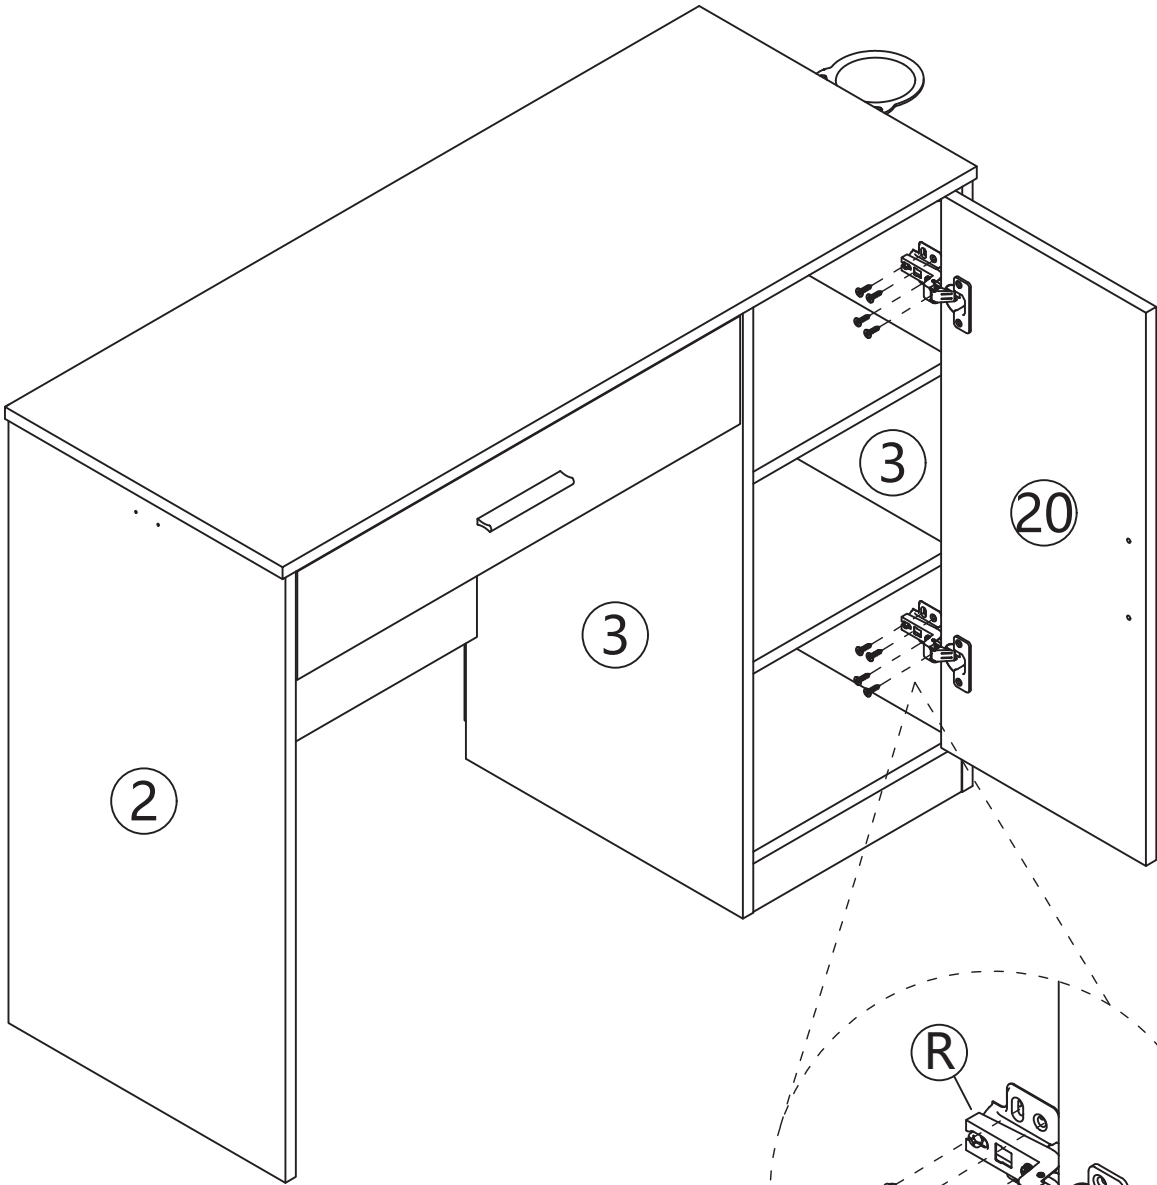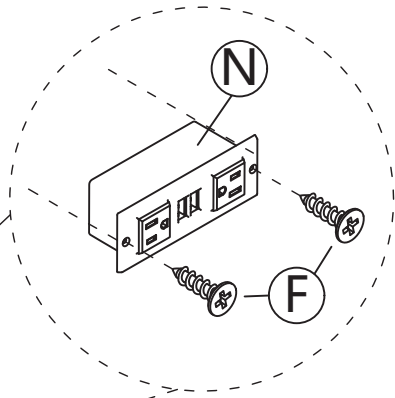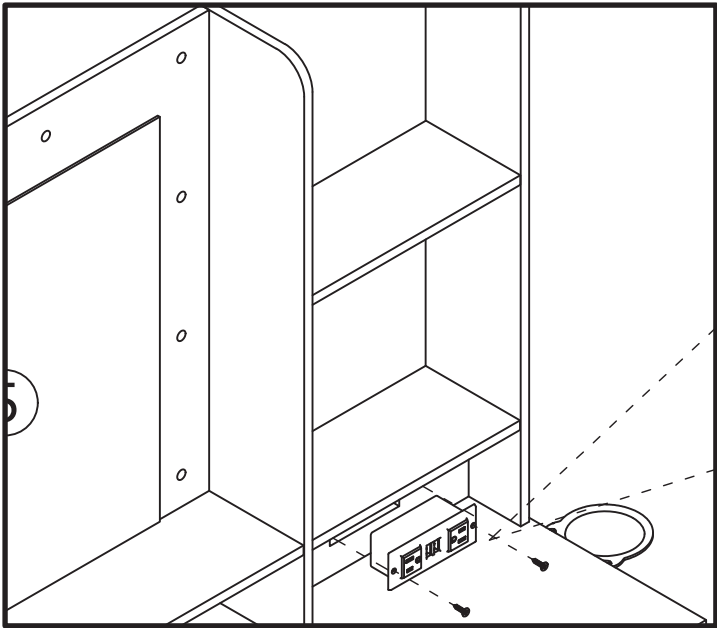


STEP 19

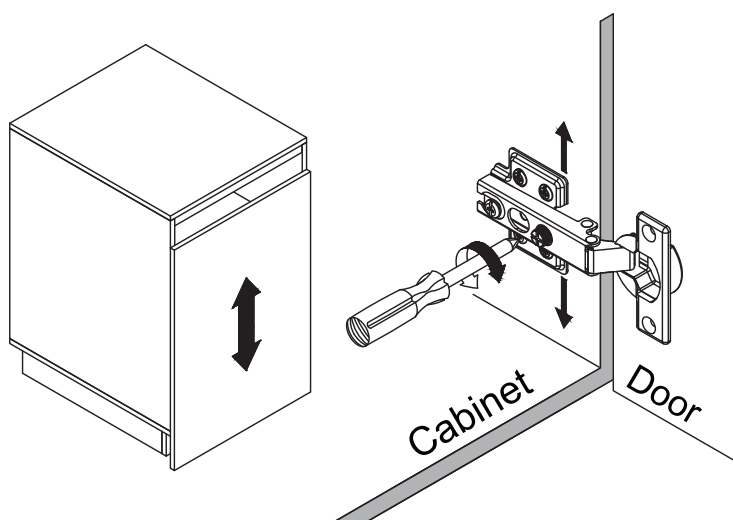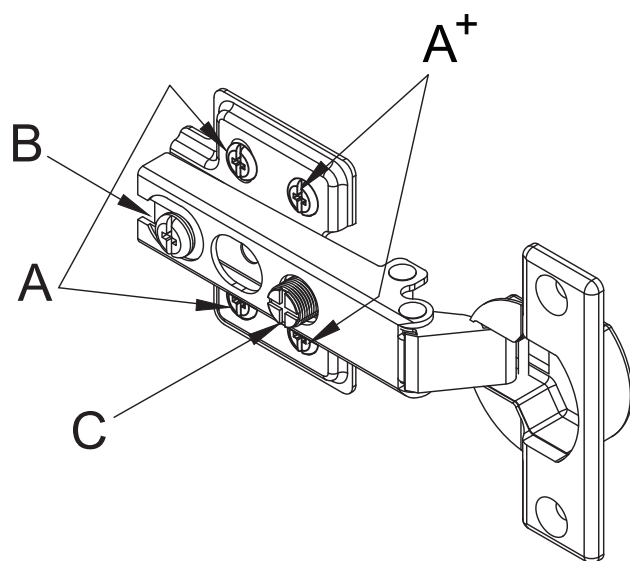


[How to adjust vertical height of the door]

- First remove the 2 screws "A+" on the hinge .
- Then loosen the 2 screws "A" on the hinge so that it can be adjusted up or down a few millimeters.
- Then tighten "A" and reinstall "A+".

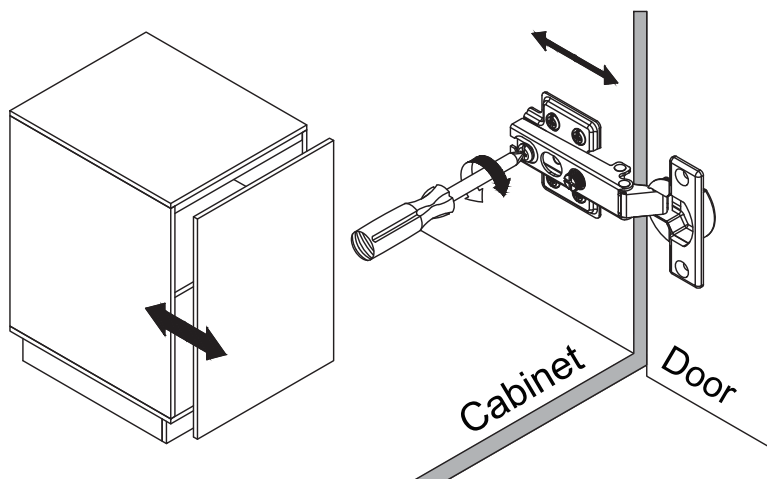

[How to adjust depth of the door]


- Loosen screw "B" and adjust the depth of the door.
- If screw "B" is loose, the depth of the door still cannot be adjusted. Simply loosen the screw "C" slightly to adjust the position of the door forward and backward.
- After adjusting the position, tighten screw "B" last.

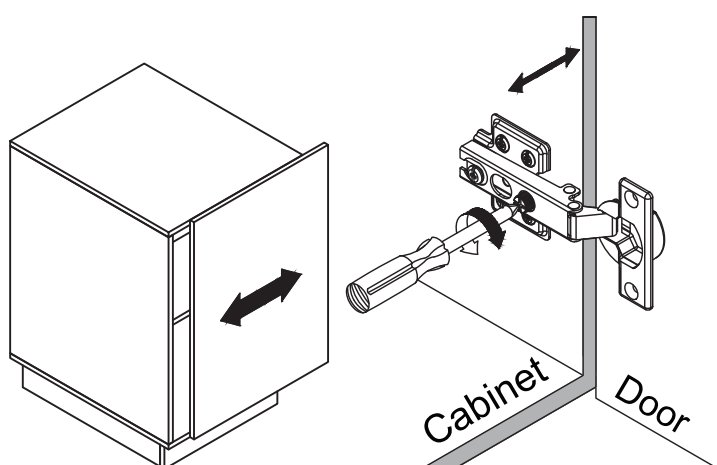


[How to adjust the level of the door]

- Turn screw "C" on hinge to adjust the level of the door.

STEP 20

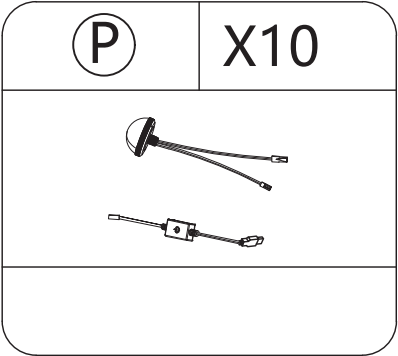


Tear off a layer of 3M polyethylene foam.

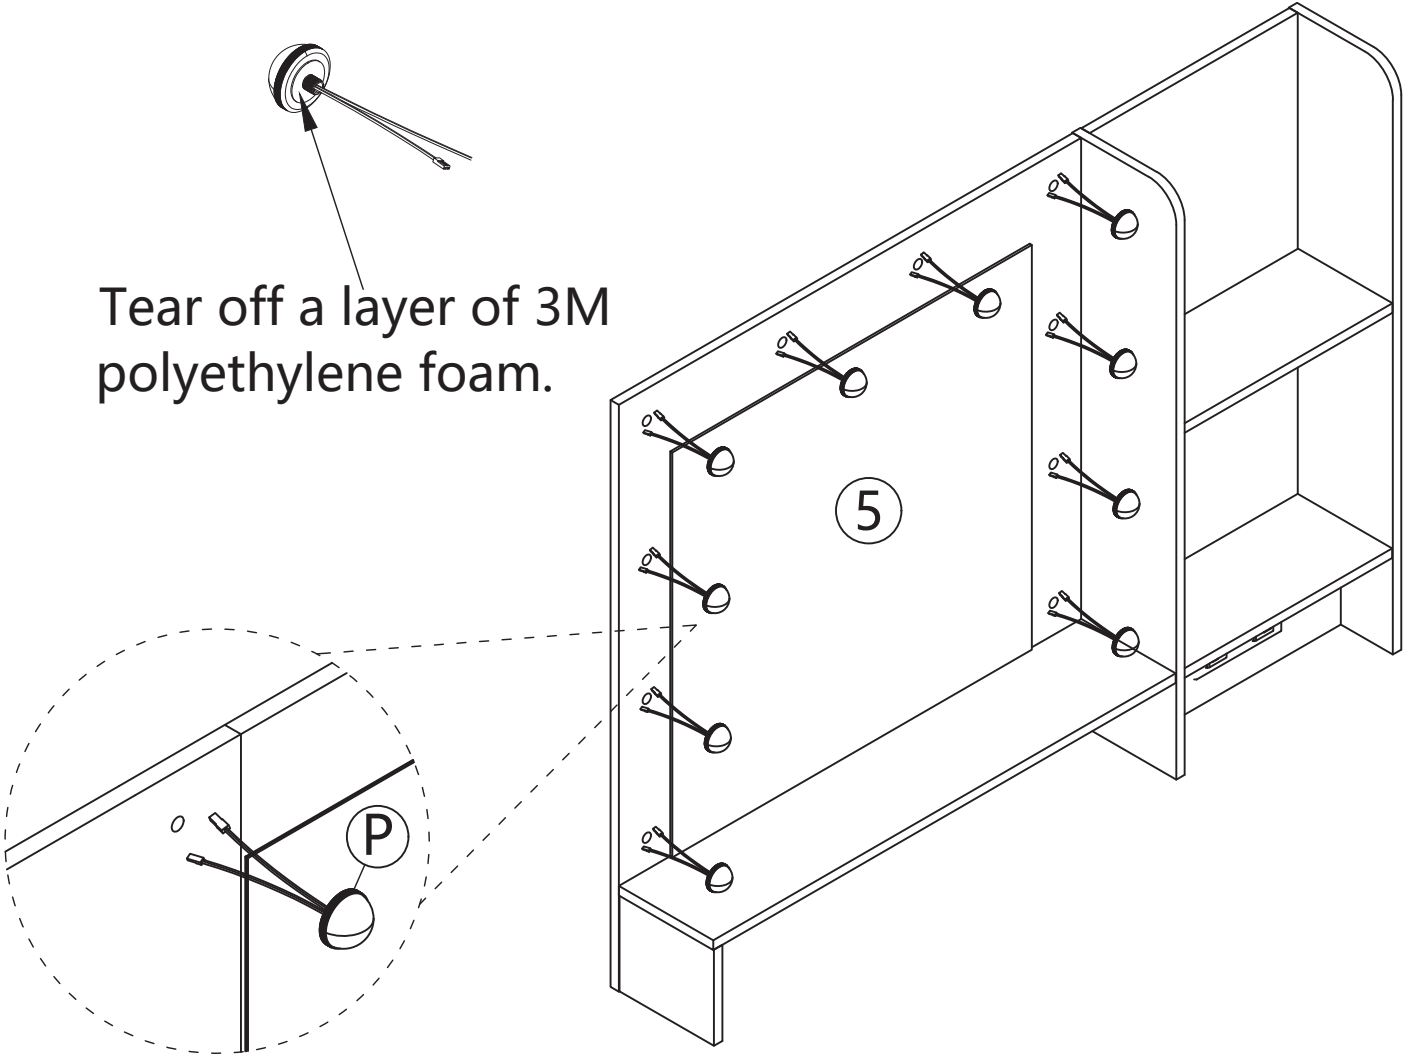


STEP 21



Pass the bulb wire through the pre punched plate, then gently press the bulb and make it adhere to the plate, and then connect the adjacent bulbs successively through the wire head slot on the opposite side (corresponding to the line of the same color).

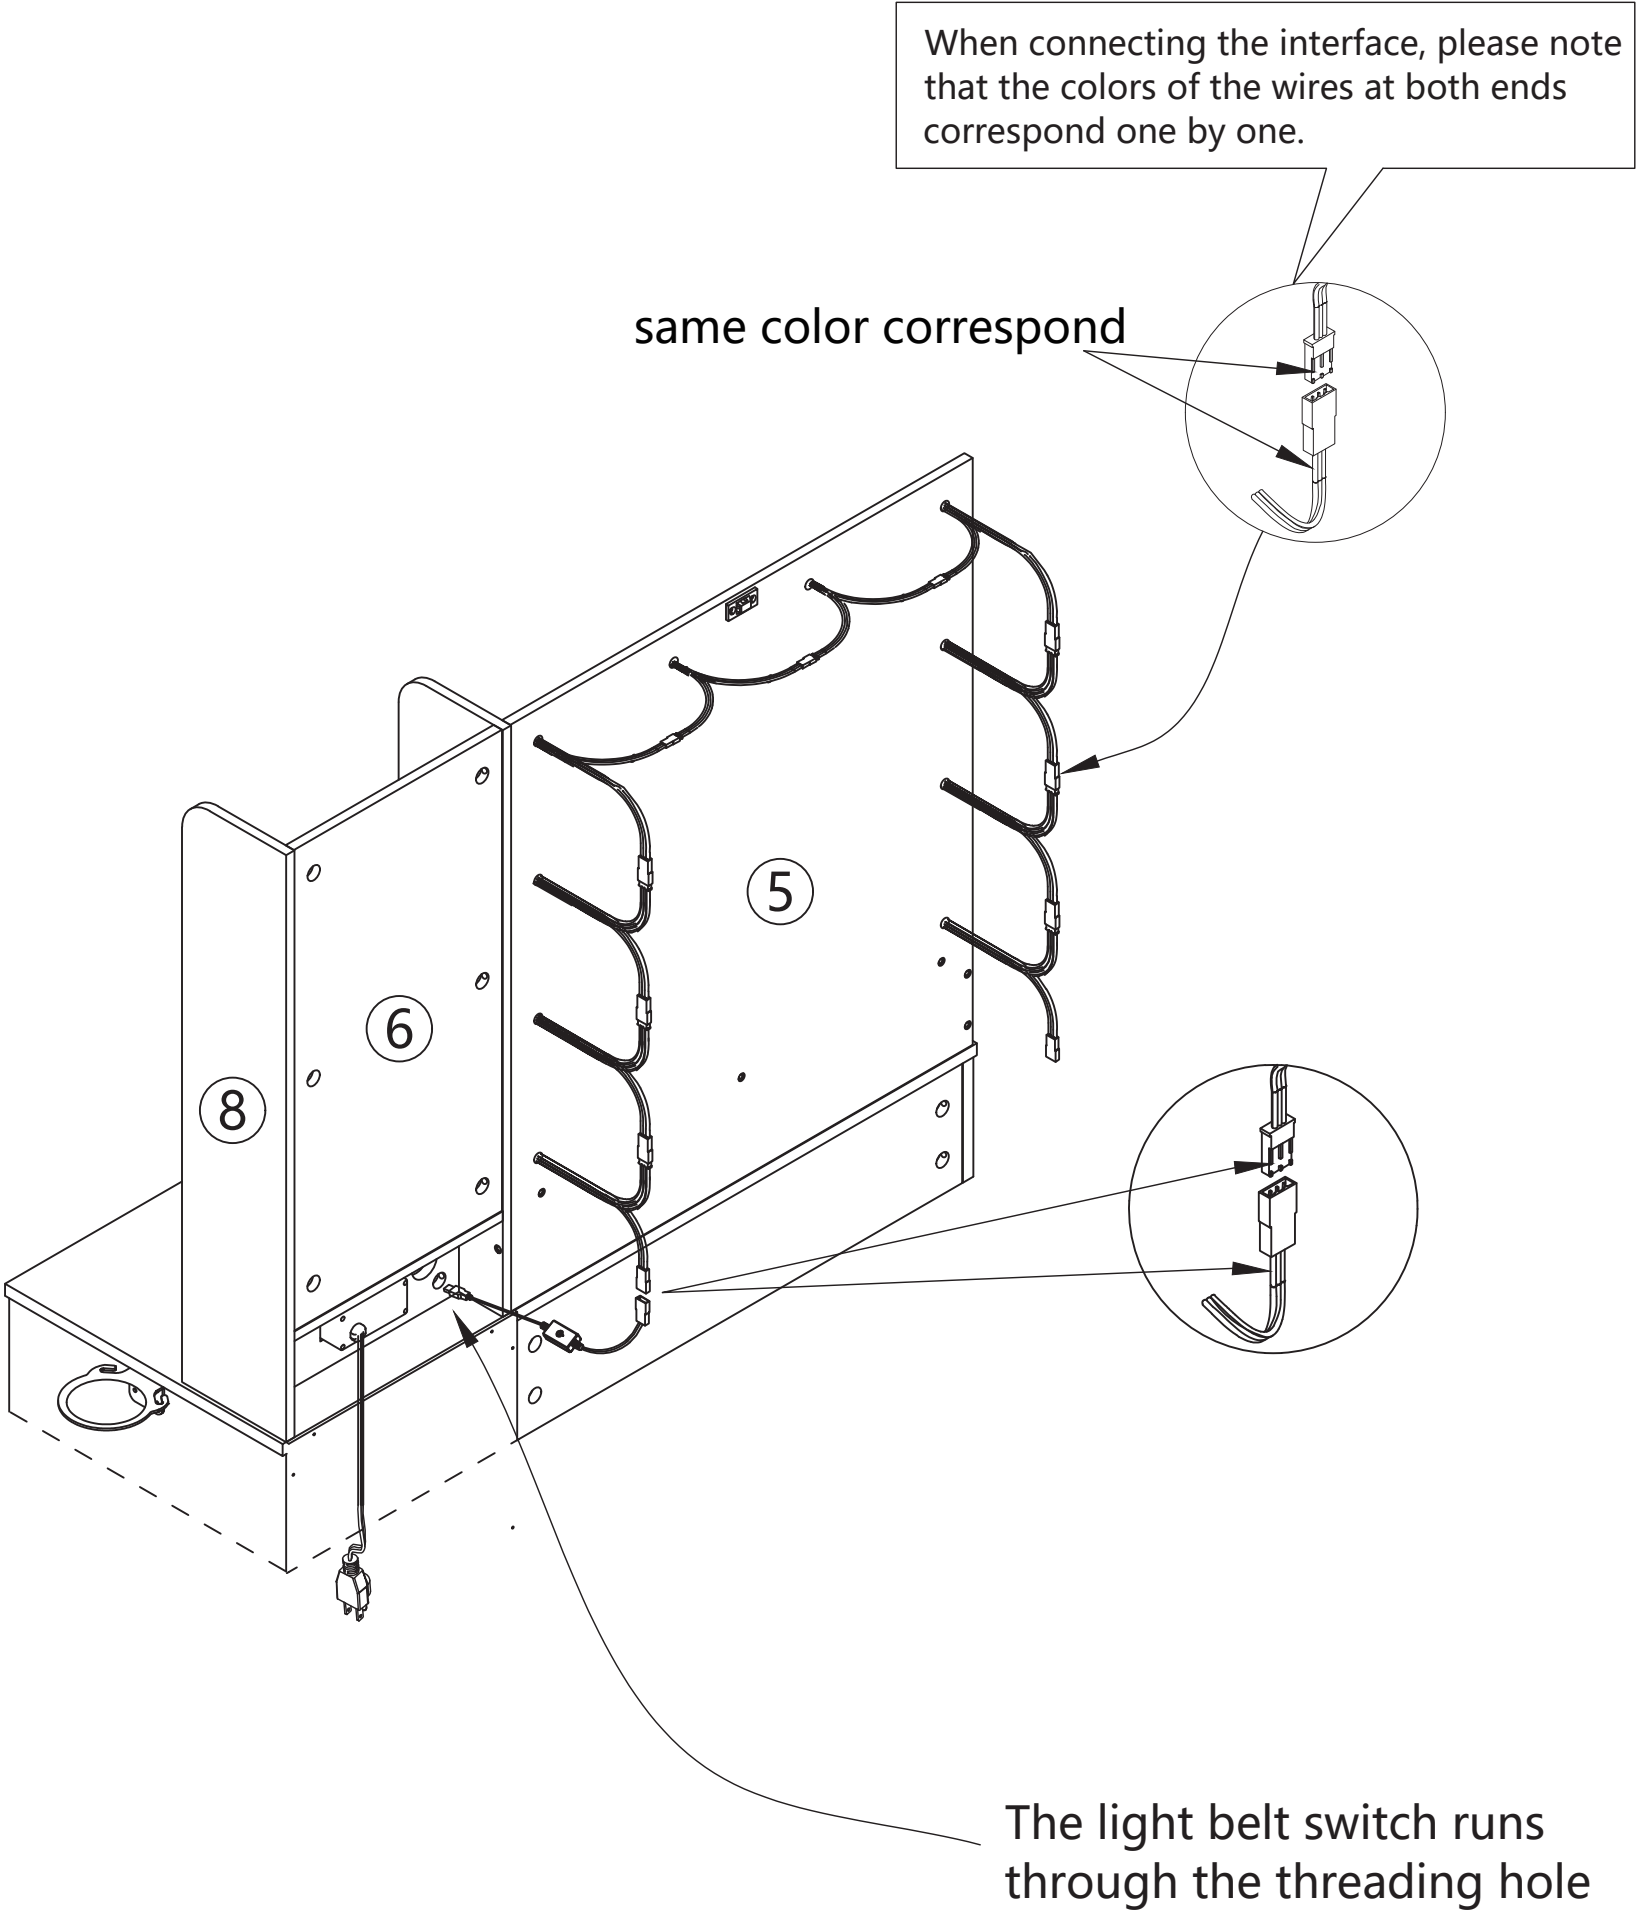

STEP 22

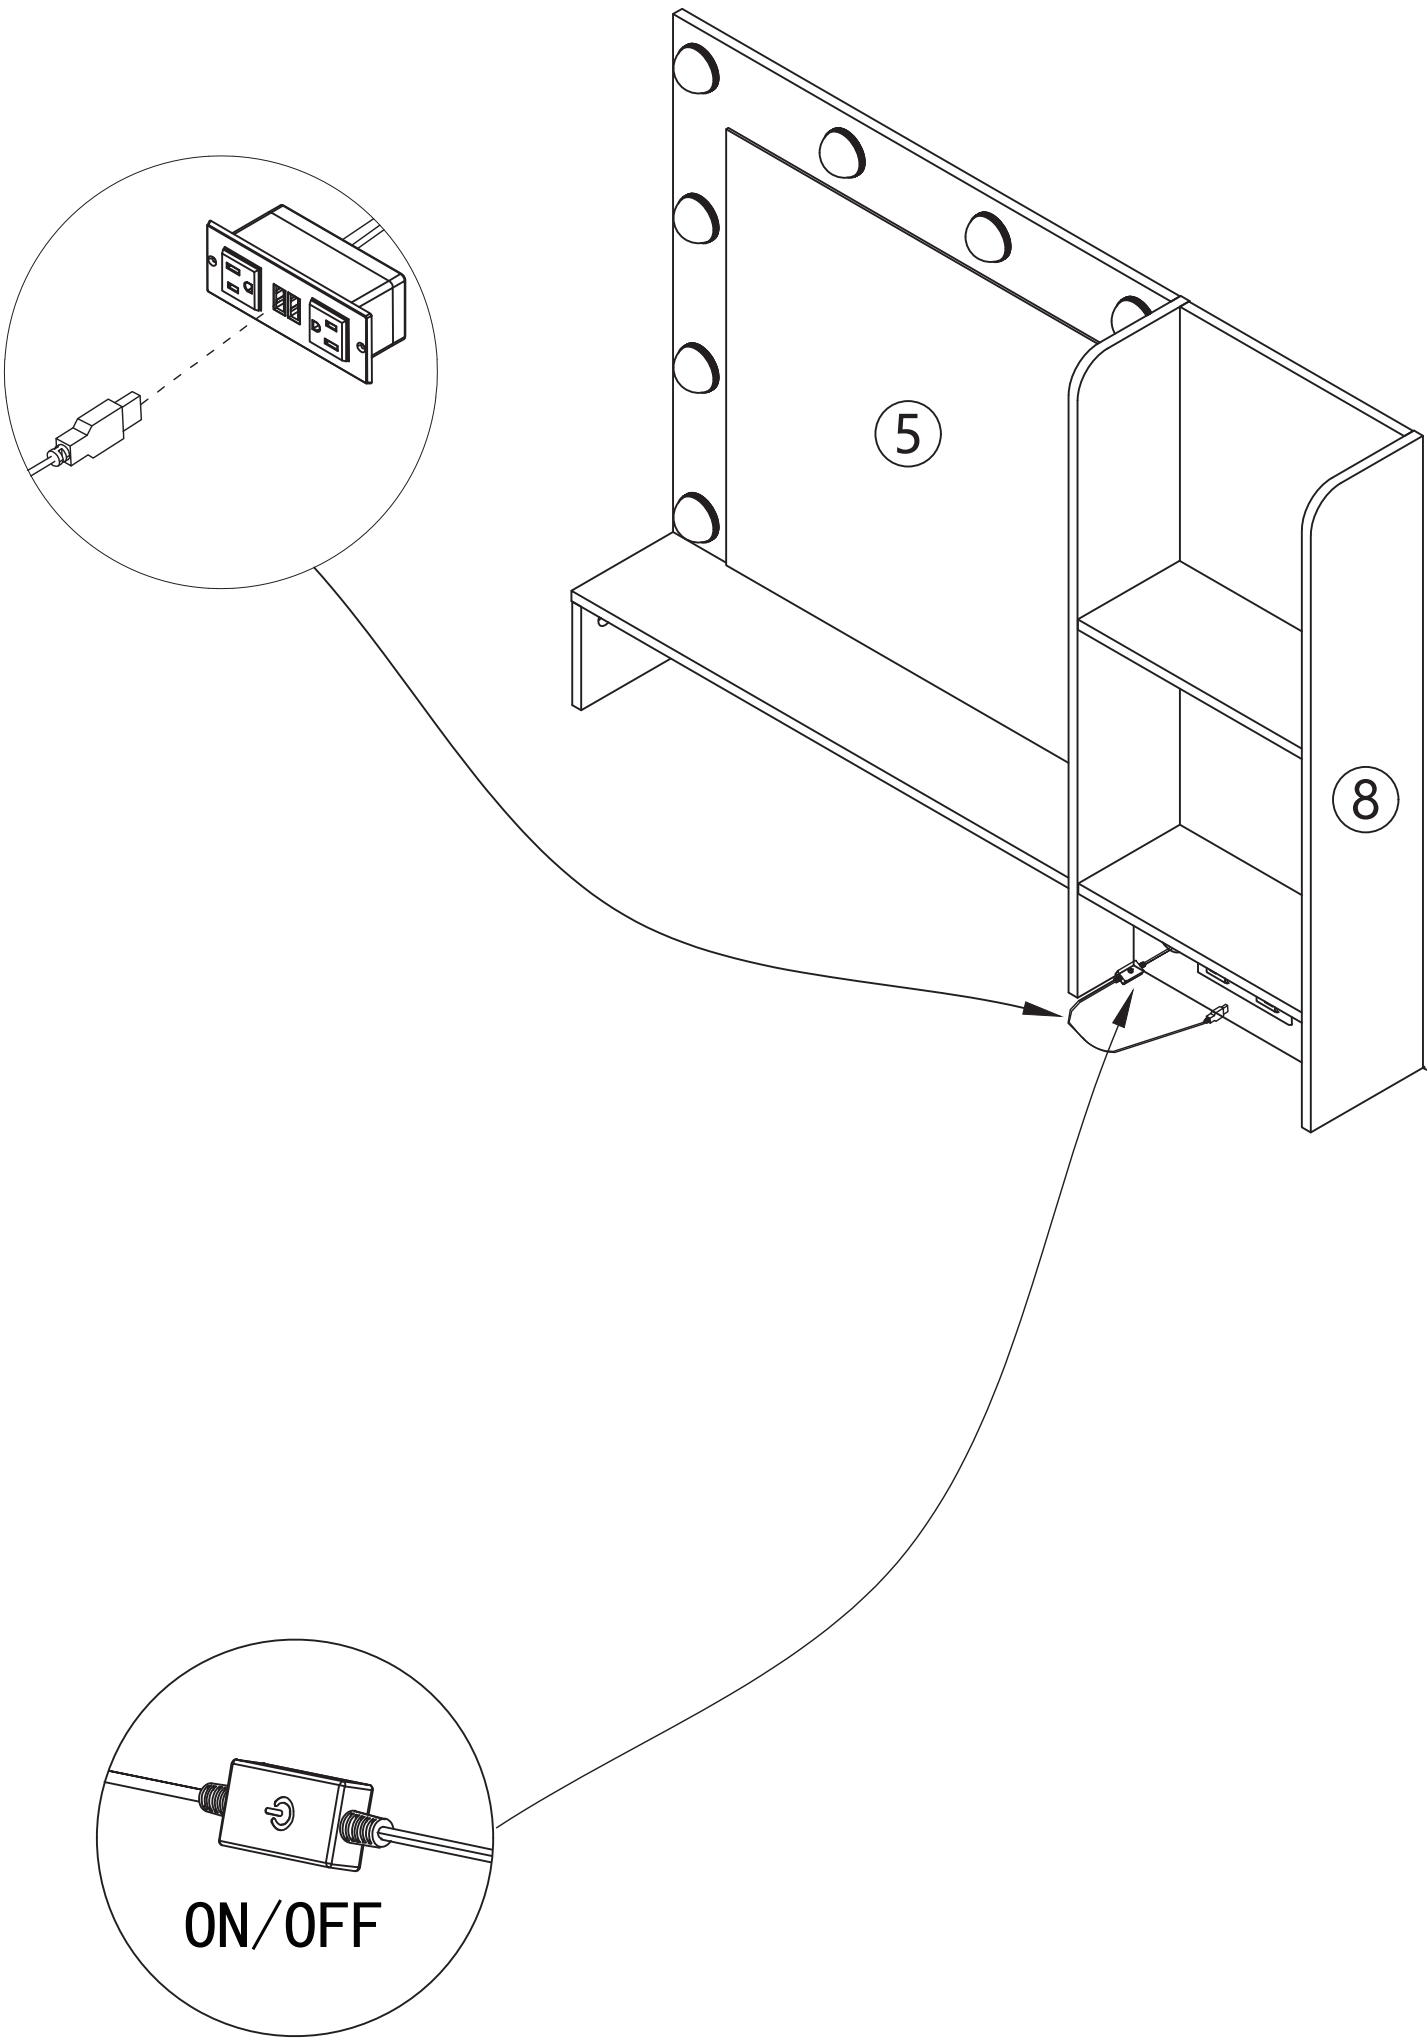

STEP 23

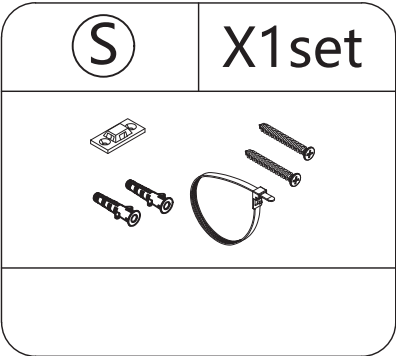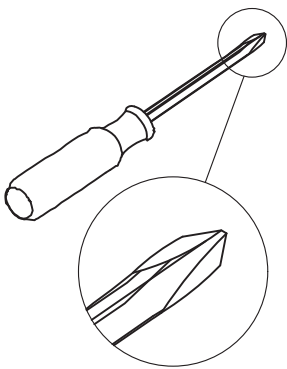


⚠ WARNING

Children have died from furniture tipover. To reduce the risk of furniture tipover:


- ALWAYS install tipover restraint provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.

This is a permanent label. Do not remove !


Install the tipping restraint hard ware

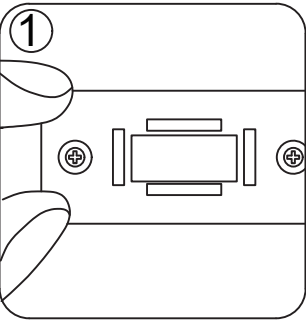


1.make mark on the wall

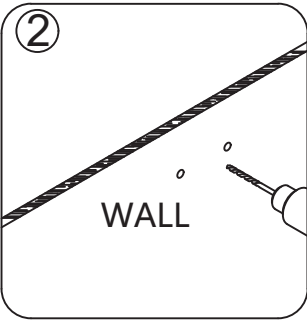


2.drill two Ø6 holes on the wall

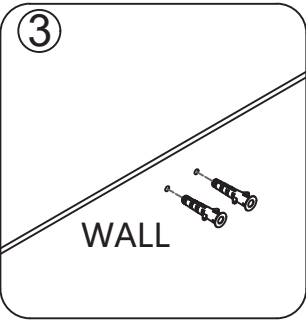

3.put two anchors in the holes

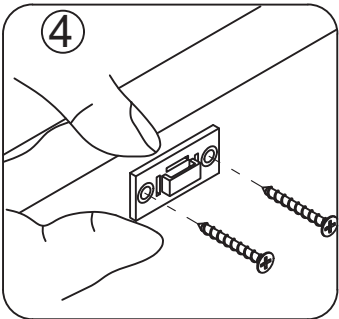

4.fix the device on the wall by the long screws

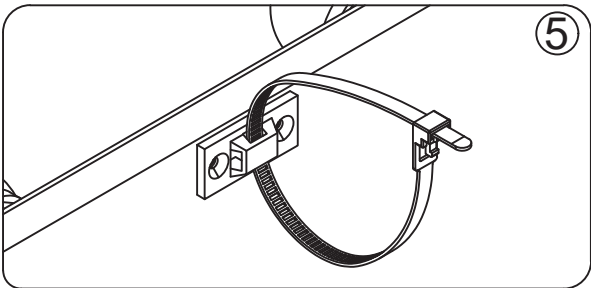

5.Push the cabinet close to the wall so that the two bases are close to each other, and then put on nylon tie to tighten it.

