






CORNER SHOWER CADDY INSTALLATION MANUAL








Dimension Table of Installation Height

Parts	Actual Usage Height
 A	17.5 ~ 27.5 IN
 C A	25.1 ~ 35.1 IN
 C B A	40 ~ 50 IN
 C B B A	54.9 ~ 64.9 IN
 C B B B A	69.8 ~ 79.8 IN
 C B B B B A	84.7 ~ 94.7 IN
 C B B B B B A	99.6 ~ 109.6 IN
 C B B B B B B A	114.5 ~ 124.5 IN
 B A	32.4 ~ 42.4 IN
 B B A	47.3 ~ 57.3 IN
 B B B A	62.2 ~ 72.2 IN
 B B B B A	77.1 ~ 87.1 IN
 B B B B B A	92 ~ 102 IN
 B B B B B B A	106.9 ~ 116.9 IN




CAUTIONS!

1. Please install vertically, do not install on sloping floors or ceilings.
2. Please install the pole on a solid floor or ceiling.
3. If your bathroom ceiling is suspended, please check its weight-bearing capacity before installation.
4. Please ensure the poles and shelves are dry before height adjustment.

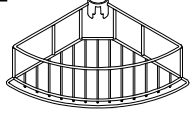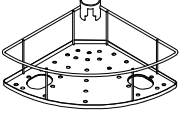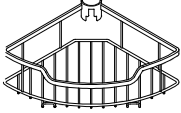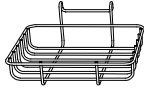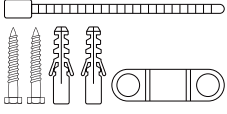A  Tension Pole 1pcs	B  Long Pole 6pcs	C  Short Pole 1pcs	D  Retaining Clip 4pcs	E  Shelf 1pcs
F  Shelf 1pcs	G  Shelf 2pcs	H  Soap Holder 1pcs	I  Large Pole End 1pcs	J  Small Pole End 1pcs
K  Anti-Tip Wall Mounting Kit				


Step 1

Loosen the poles by turning it, then connect them.

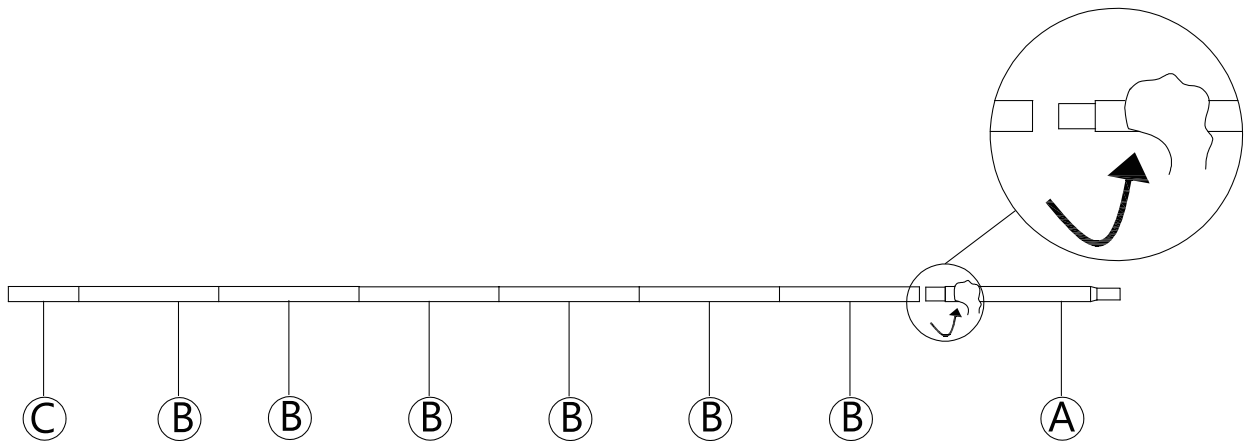


Step 2

Insert the large and small pole ends into both ends of the pole.

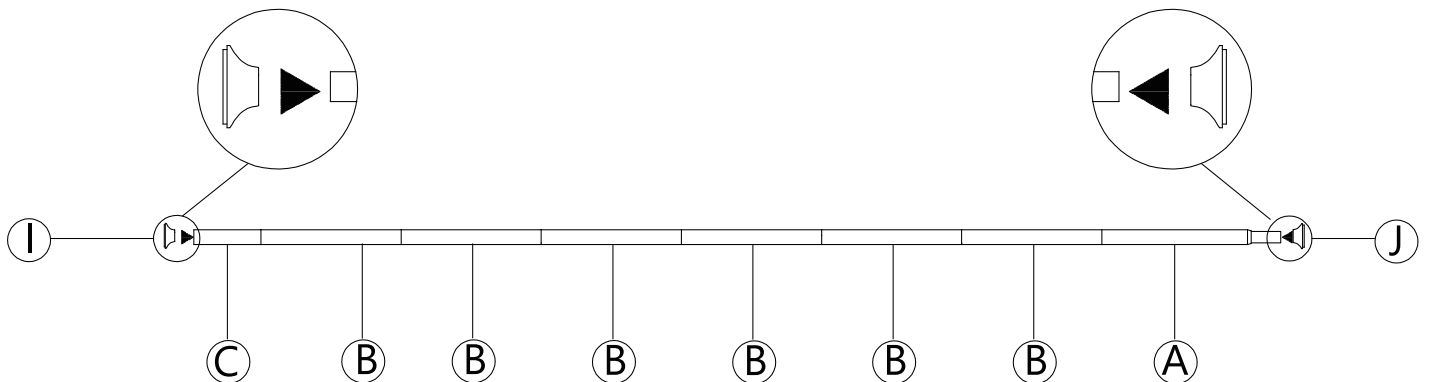


Step 3

Twist the tension pole to loosen it.

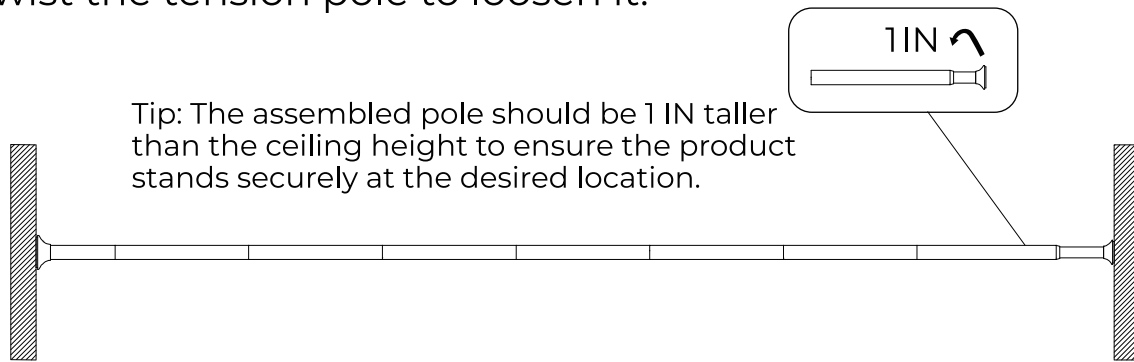


Step 4

- 1: Firstly, firmly press the assembled pole against the ceiling.
- 2: Secondly, push the pole's bottom diagonally into place to secure it.

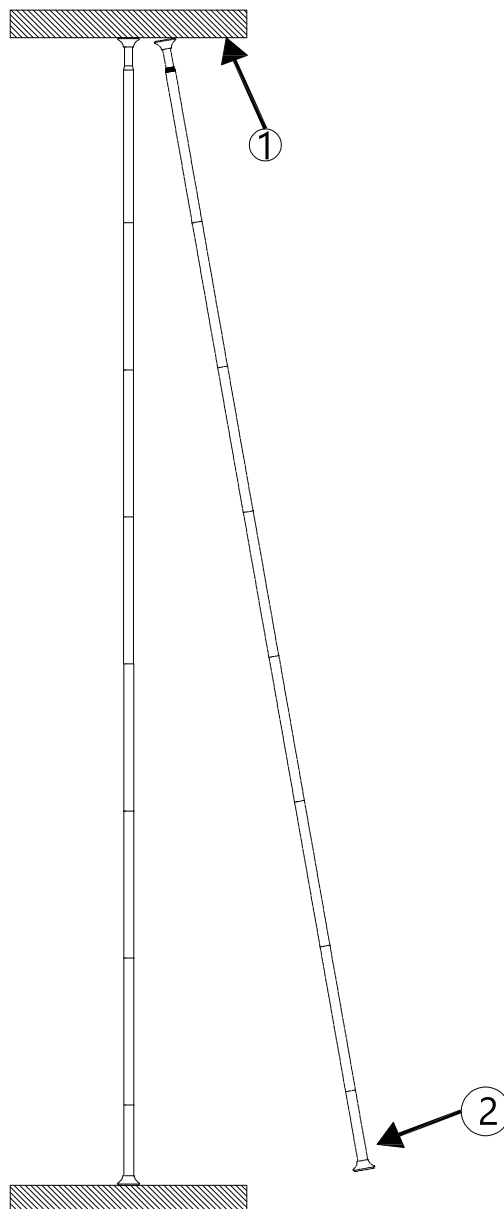

Step 5

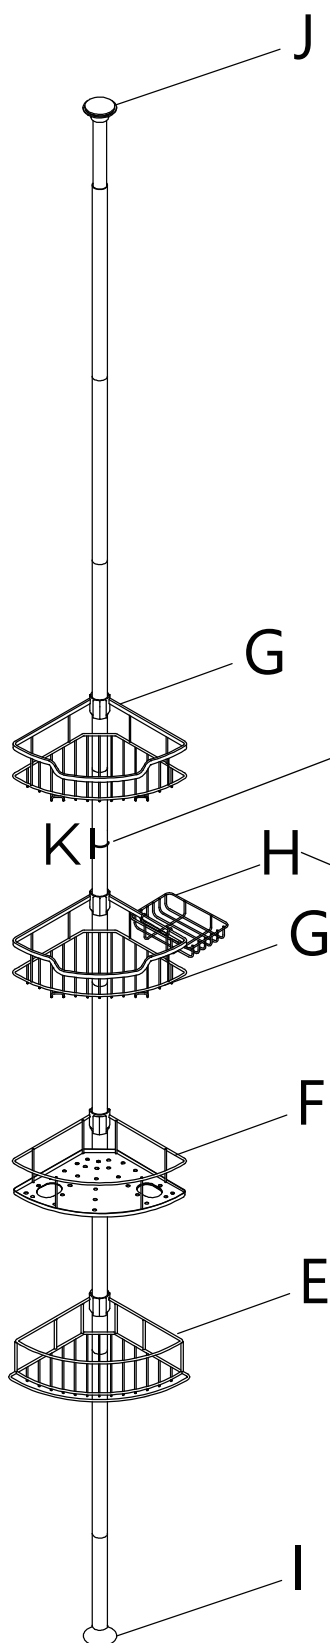

Open the retaining clip and secure it onto the tension pole. Insert the shelf into the clip and press down with both hands to secure it, then push the shelf to fully lock it into the clip.




Installing the Anti-Tip Wall Mounting Kit (K) – Optional:

This shower caddy is designed for stable tension mounting. The Anti-Tip Wall Mounting Kit is included for additional reinforcement if desired.

Note:



Installation of the Anti-Tip Wall Mounting Kit is optional. Wall drilling is required for installation. Install at the middle section of the pole for best stability.

The soap holder can be hung on the side of all four shelves. You can hang them according to your personal needs.

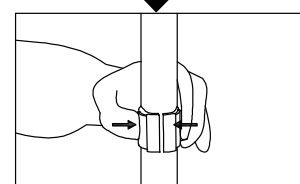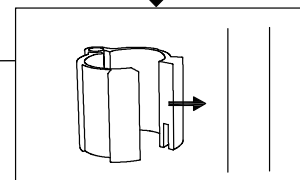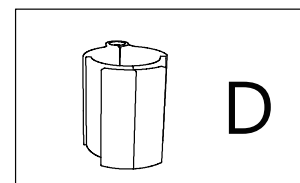

Note:

1. The retaining clip is not completely closed around the pole, attaching the shelf to it can ensure a secure grip.
2. Firm pressure is required to securely clamp the shelf in the appropriate position.

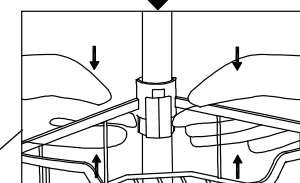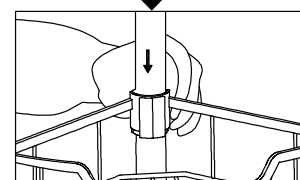


Tip for Installation:

Open the retaining clip and secure it onto the tension pole. Insert the shelf into the clip and press down with both hands to secure it, then push the shelf to fully lock it into the clip.

Step 6

Parts B (long pole) can be added or removed to adjust the height between 32 and 123 inches. To expand the adjustable range, use part C (short pole). Please refer to the dimension table for the adjustable height range.

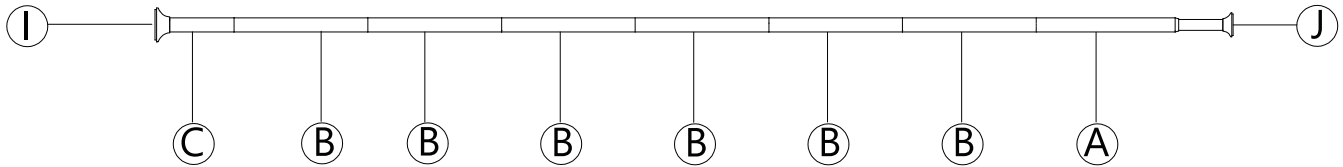

TROUBLE SHOOTING:

Q: Why aren't the clips wide enough for the pole?

A: The clips are purposely short of closing on the poles to ensure a tight fit.

Q: Why aren't the clips tight enough to stop the shelves from moving?

A: It is likely that the shelves are not pushed down enough to lock into the clip.

Q: Is the anti-tip wall mounting kit required?

A: No. Installation is optional. The shower caddy is designed for stable tension mounting. The Anti-Tip Wall Mounting Kit is included for additional reinforcement if desired.