


Sofa Table


Support

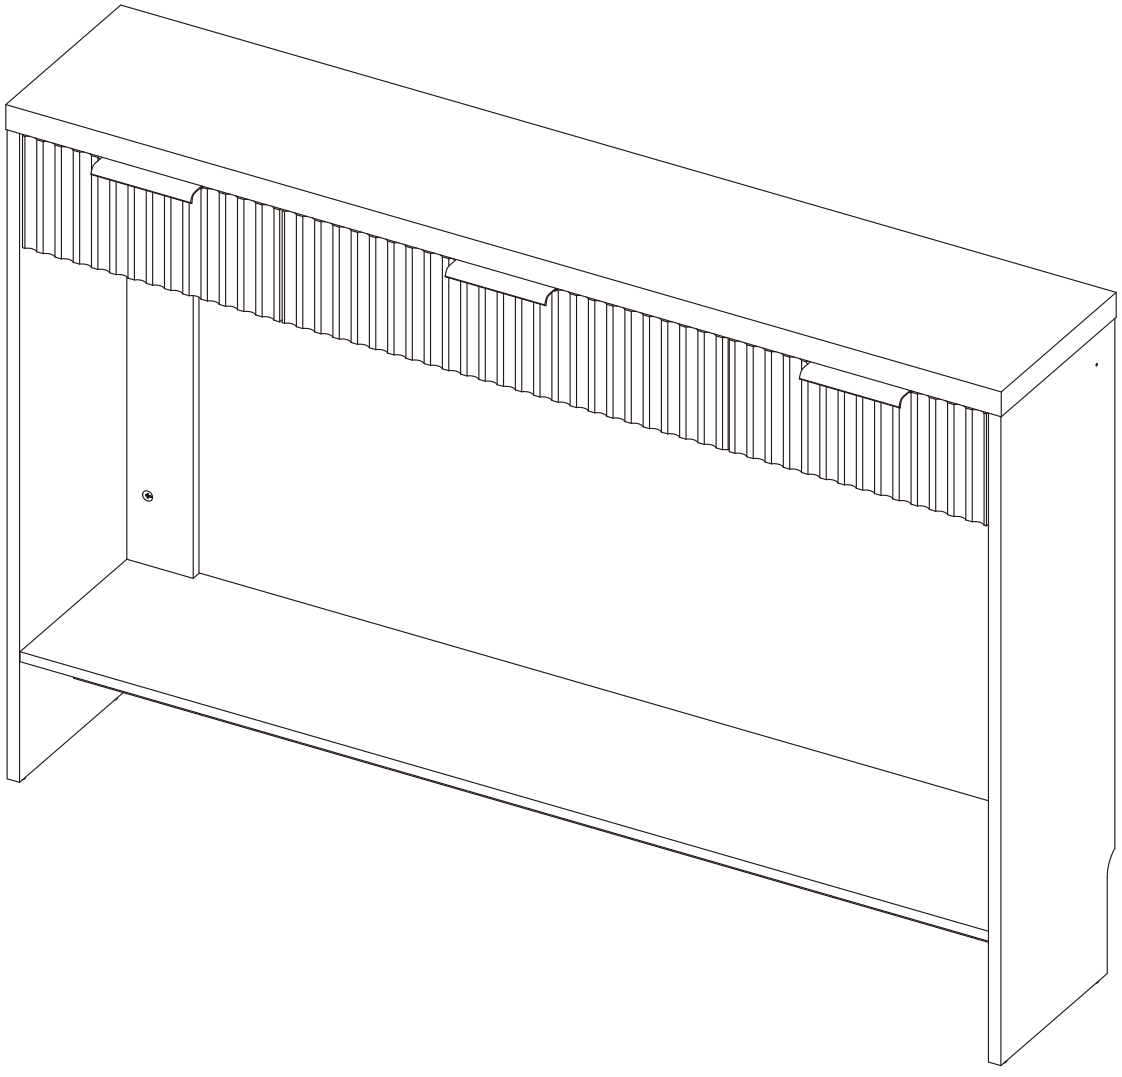


PDBFC18

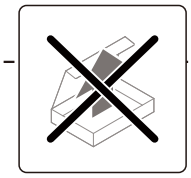

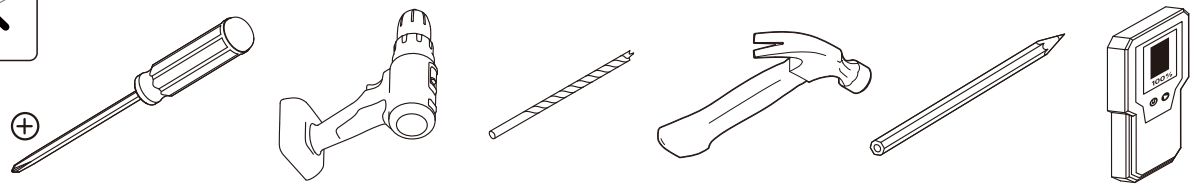


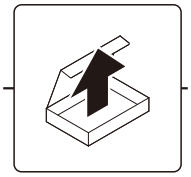

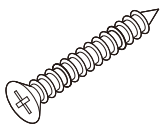


M4 x 35mm

A x 22



B x 18



C x 47




D x 47



M4 x 12mm

E x 6

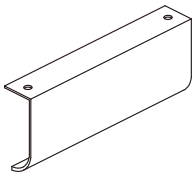

F x 3




G x 20




ST4 x 12mm

H x 2

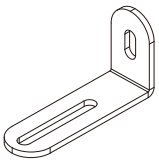

I x 2




Ø7 x 35mm


J x 2


⚠ CAUTION!

These wall anchors are for concrete ONLY. DO NOT use them in drywall or wood studs.


support@bsqworld.com

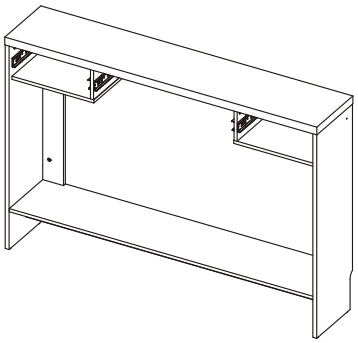


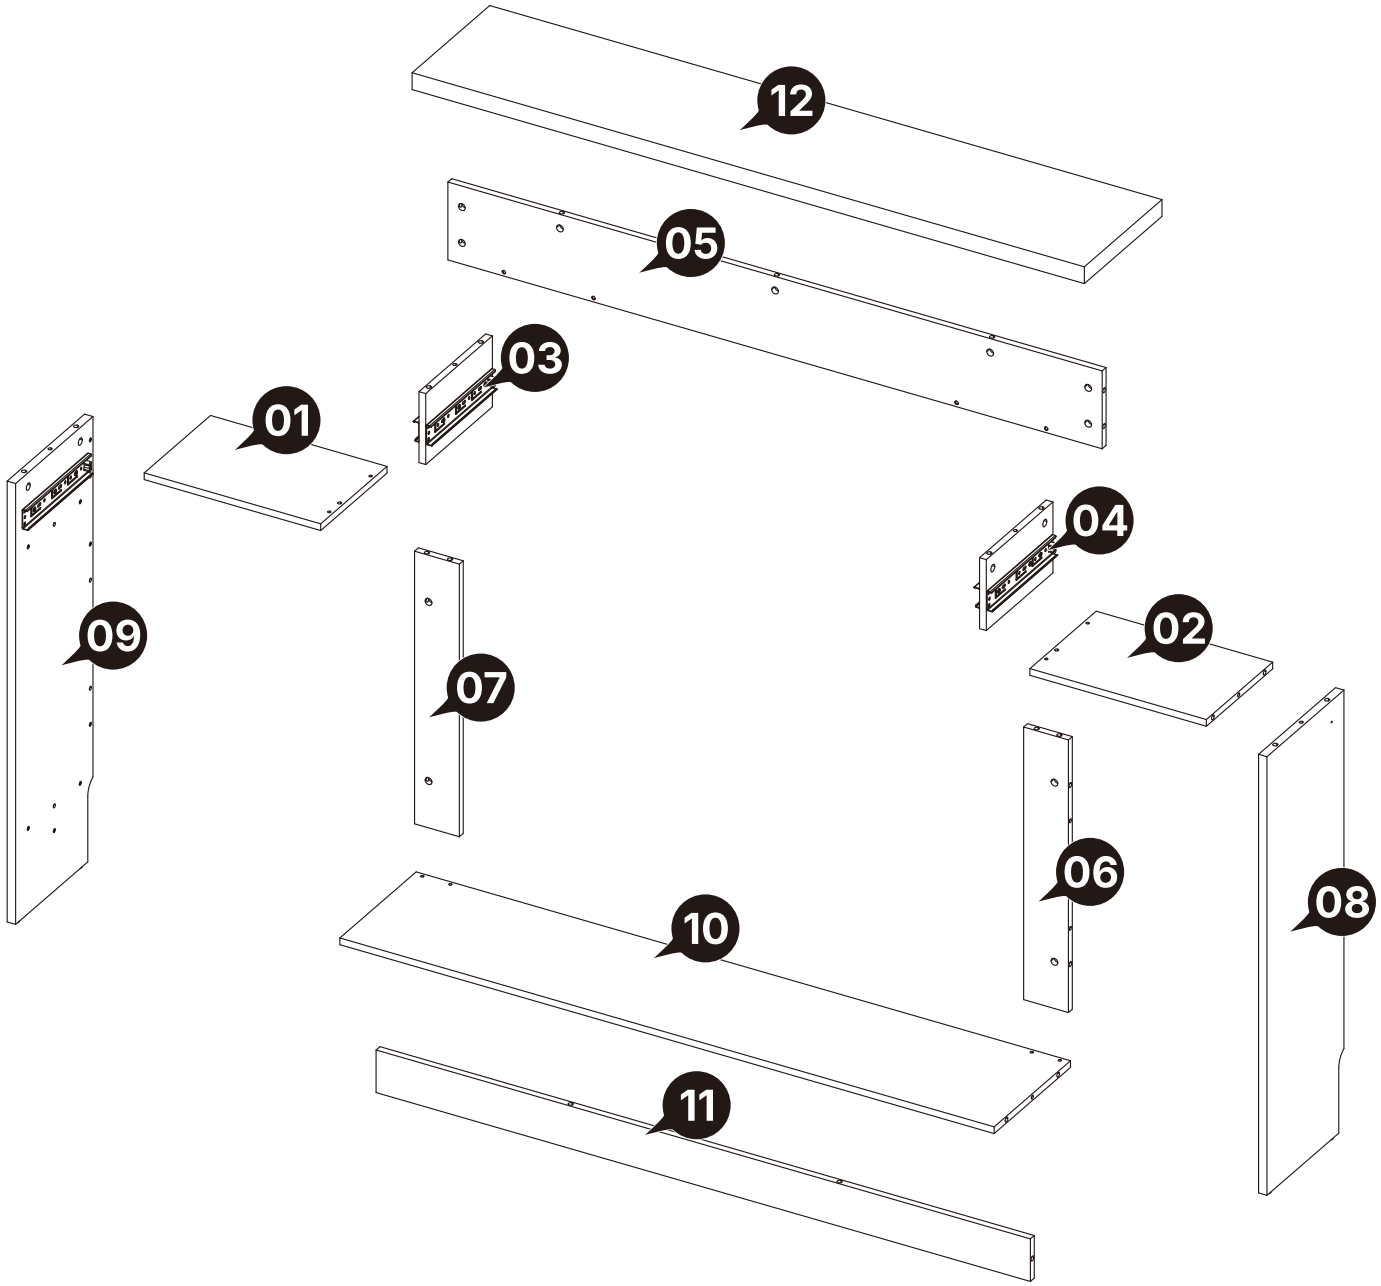


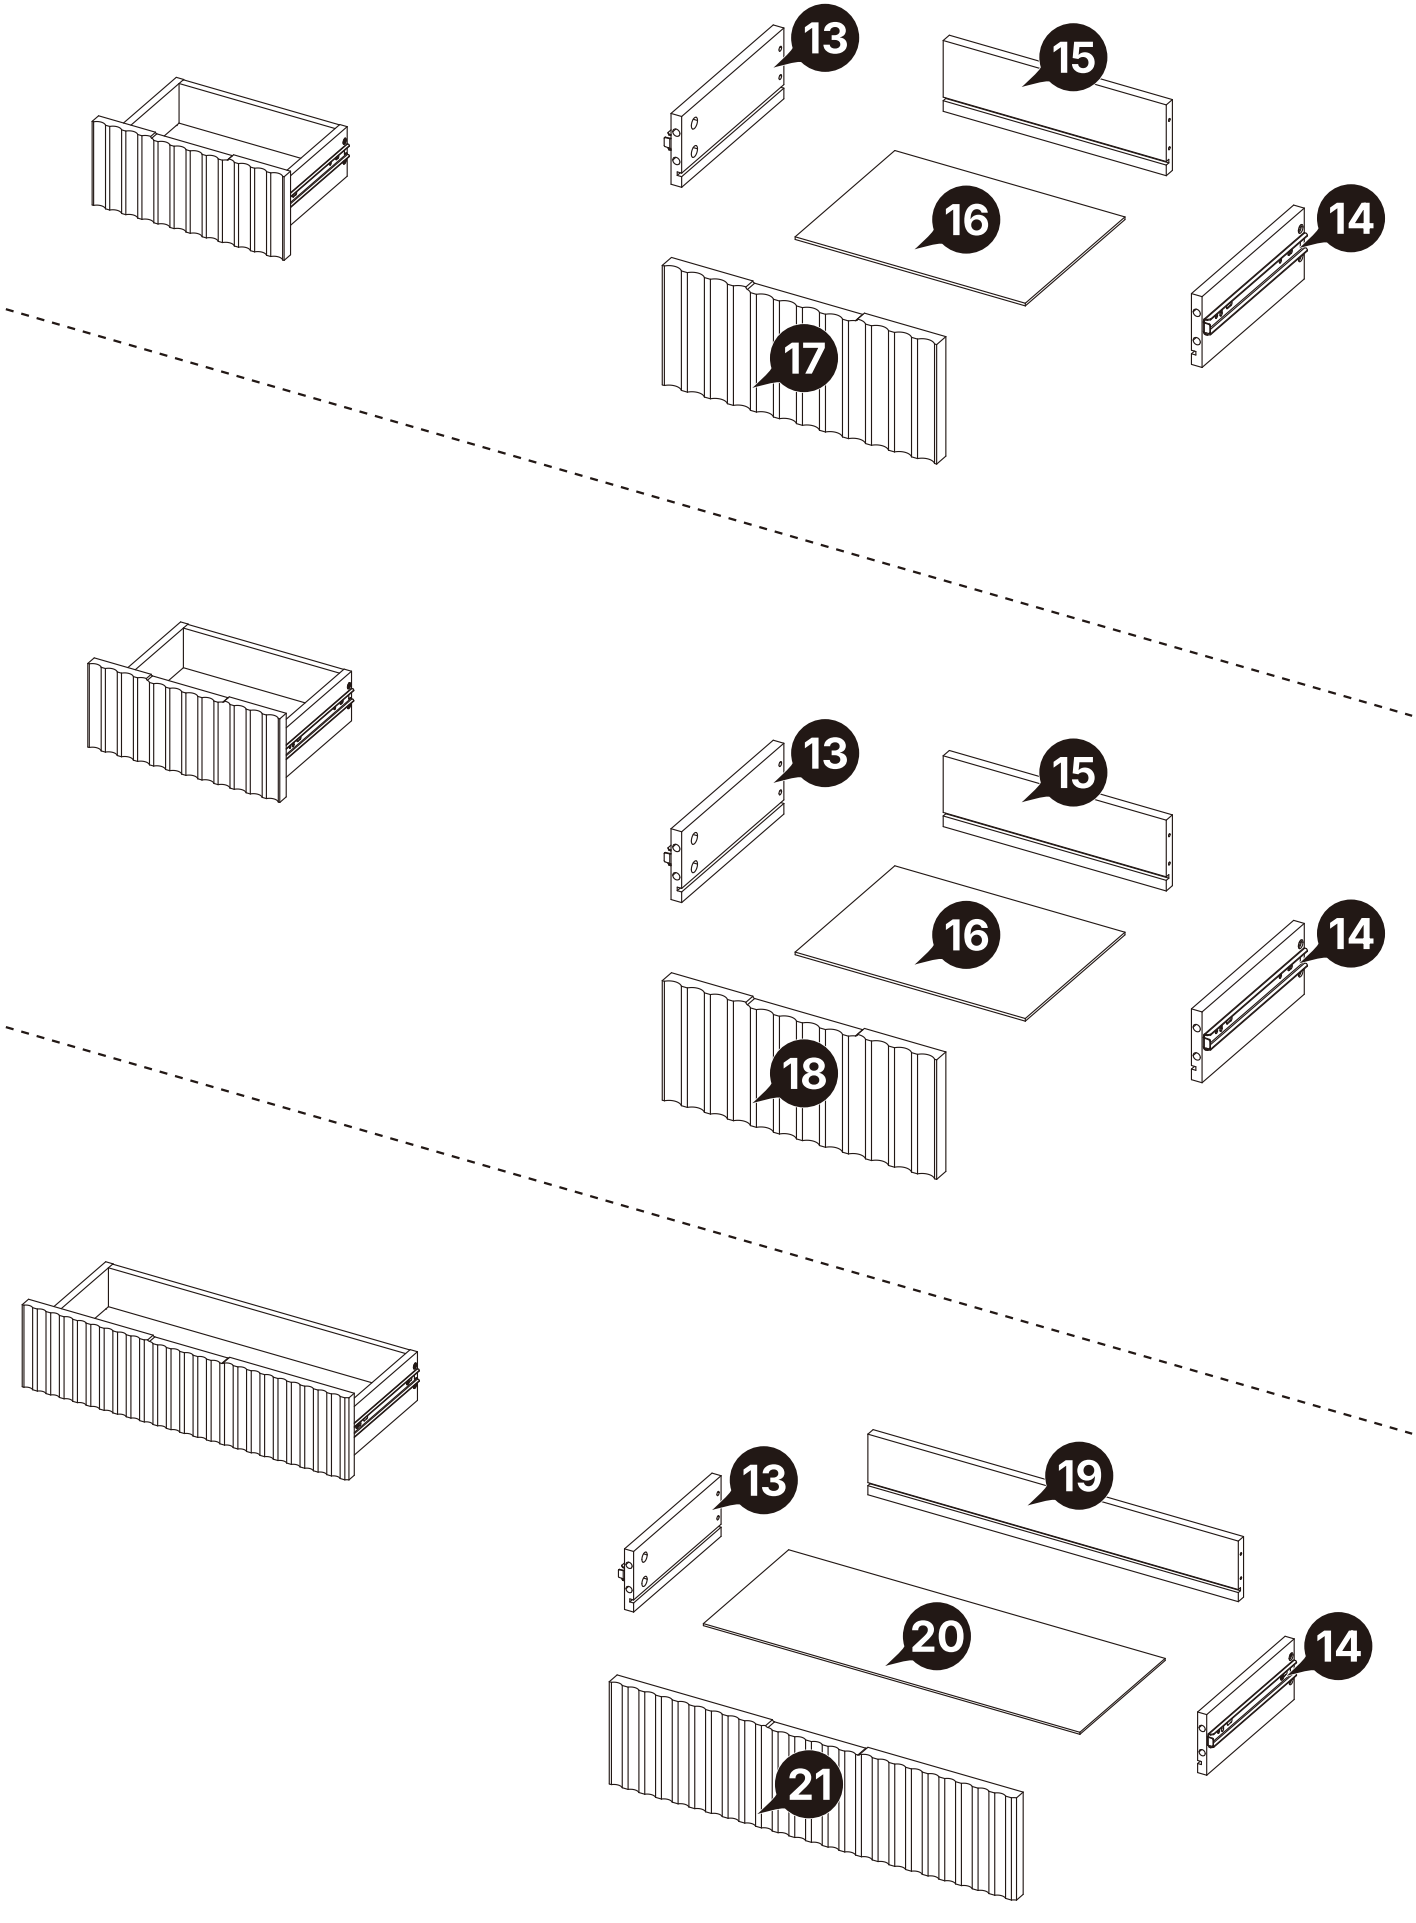

13
15
16
14
17
13
15
16
14
18
13
19
20
14
21


1 Assembling the Table Frame

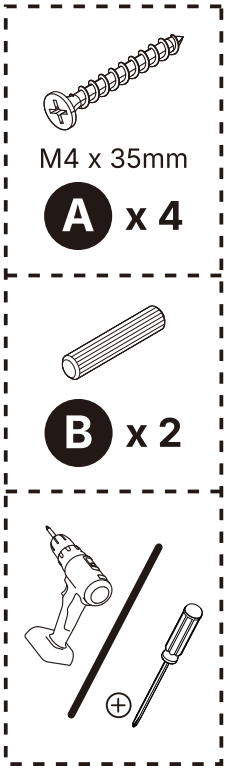


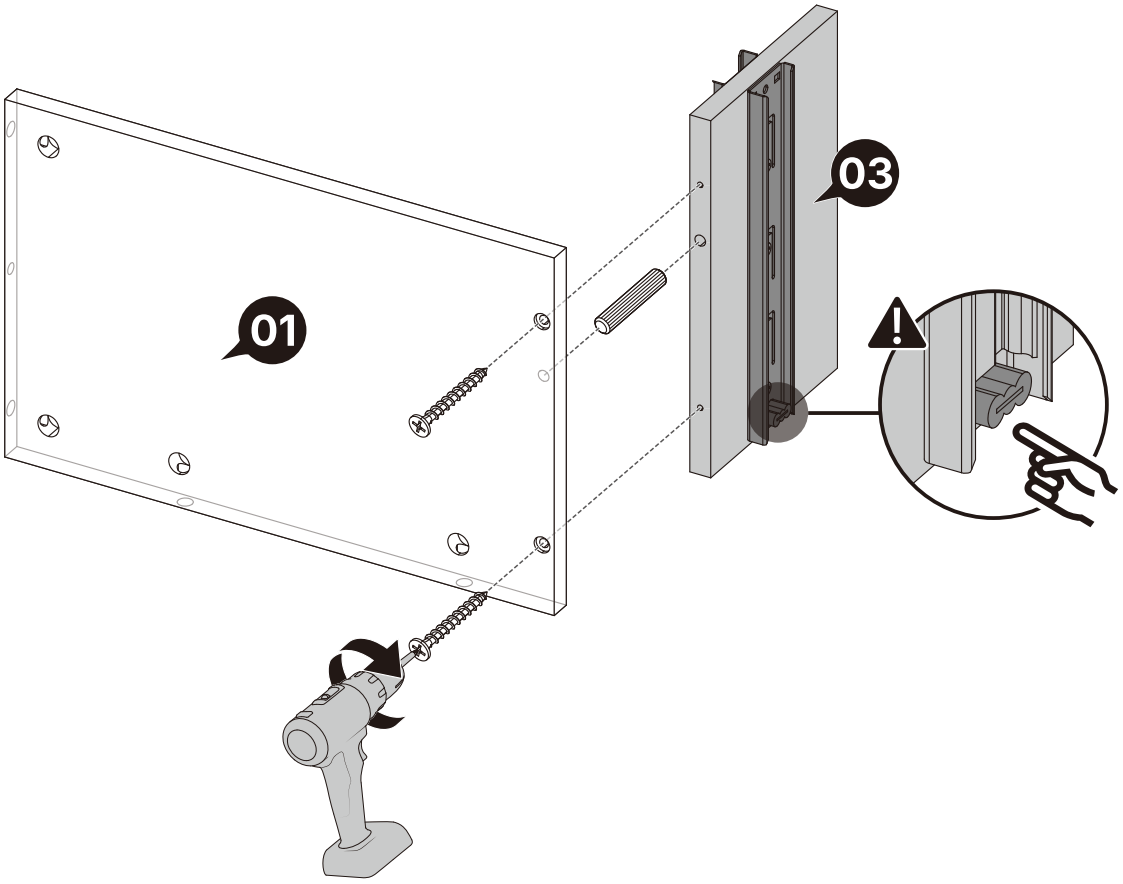


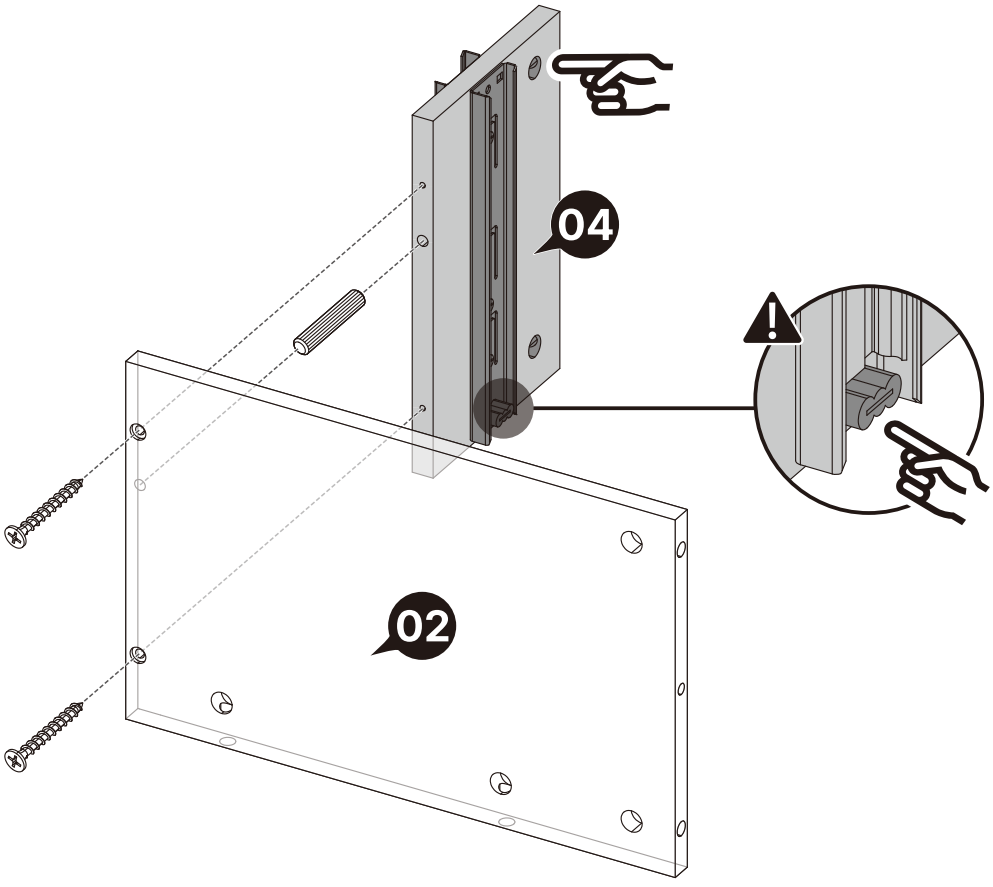


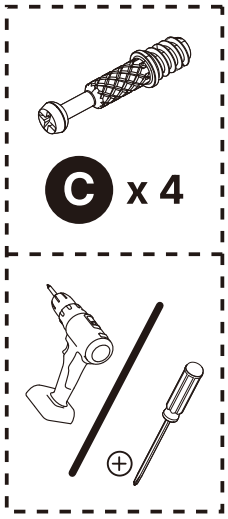

C x 4

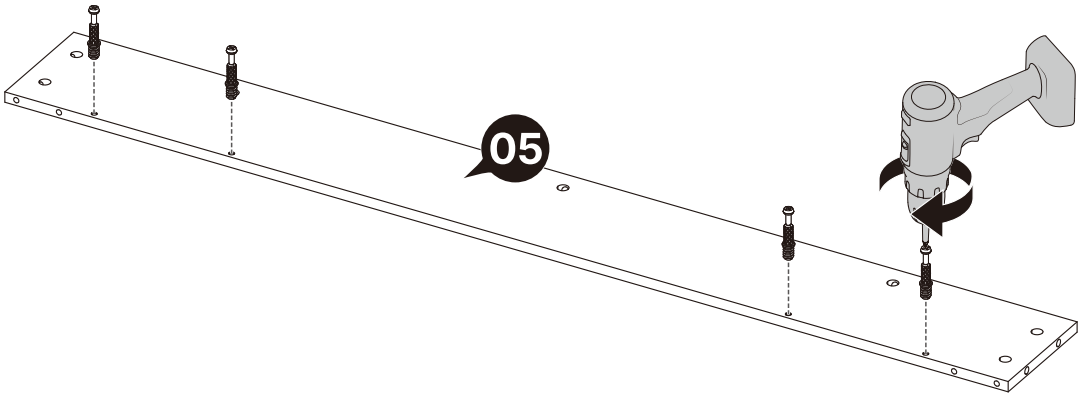

05

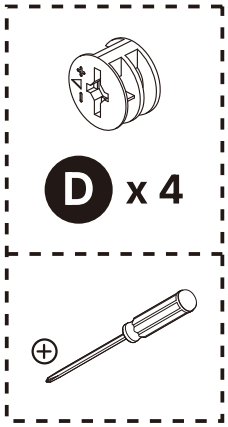

D x 4

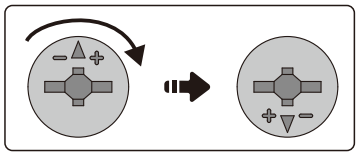


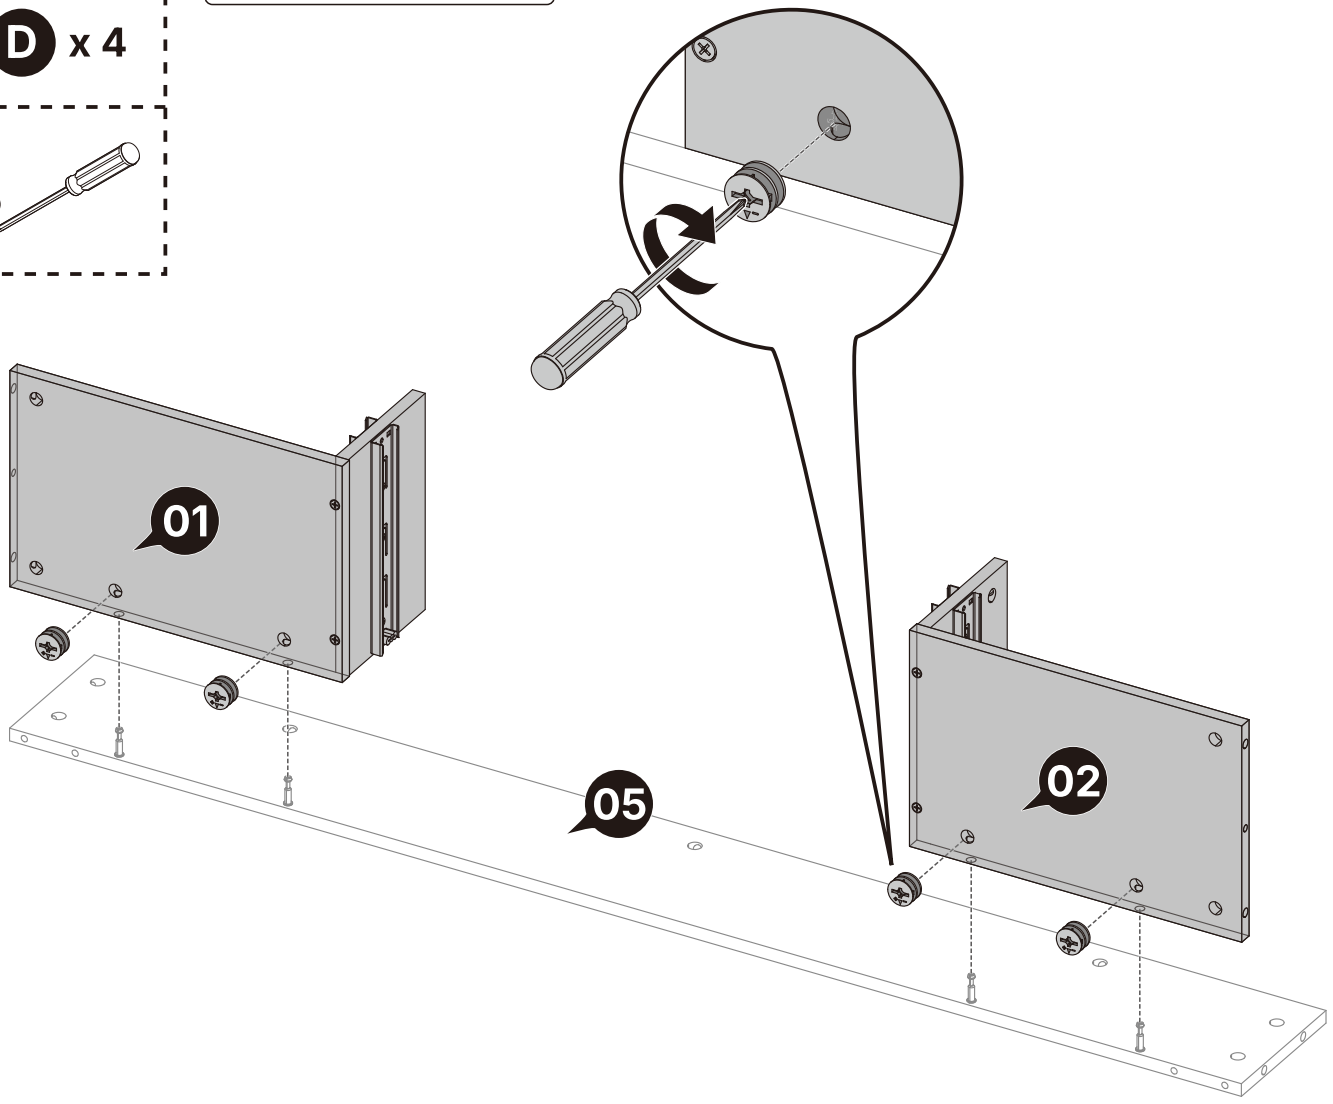

01
02
05

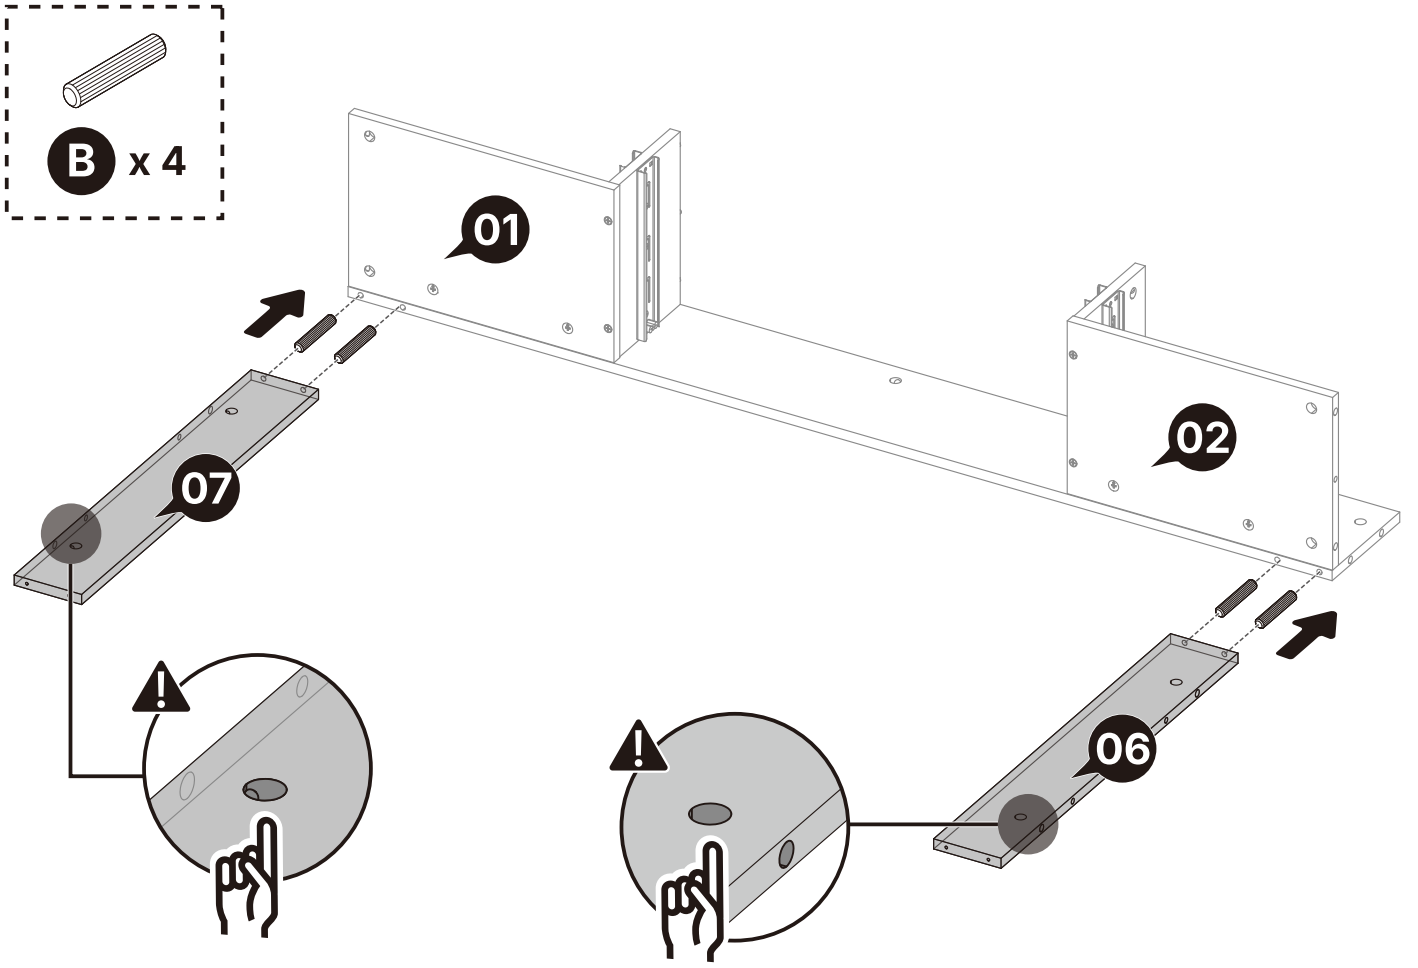

B x 4
01
02
07
06

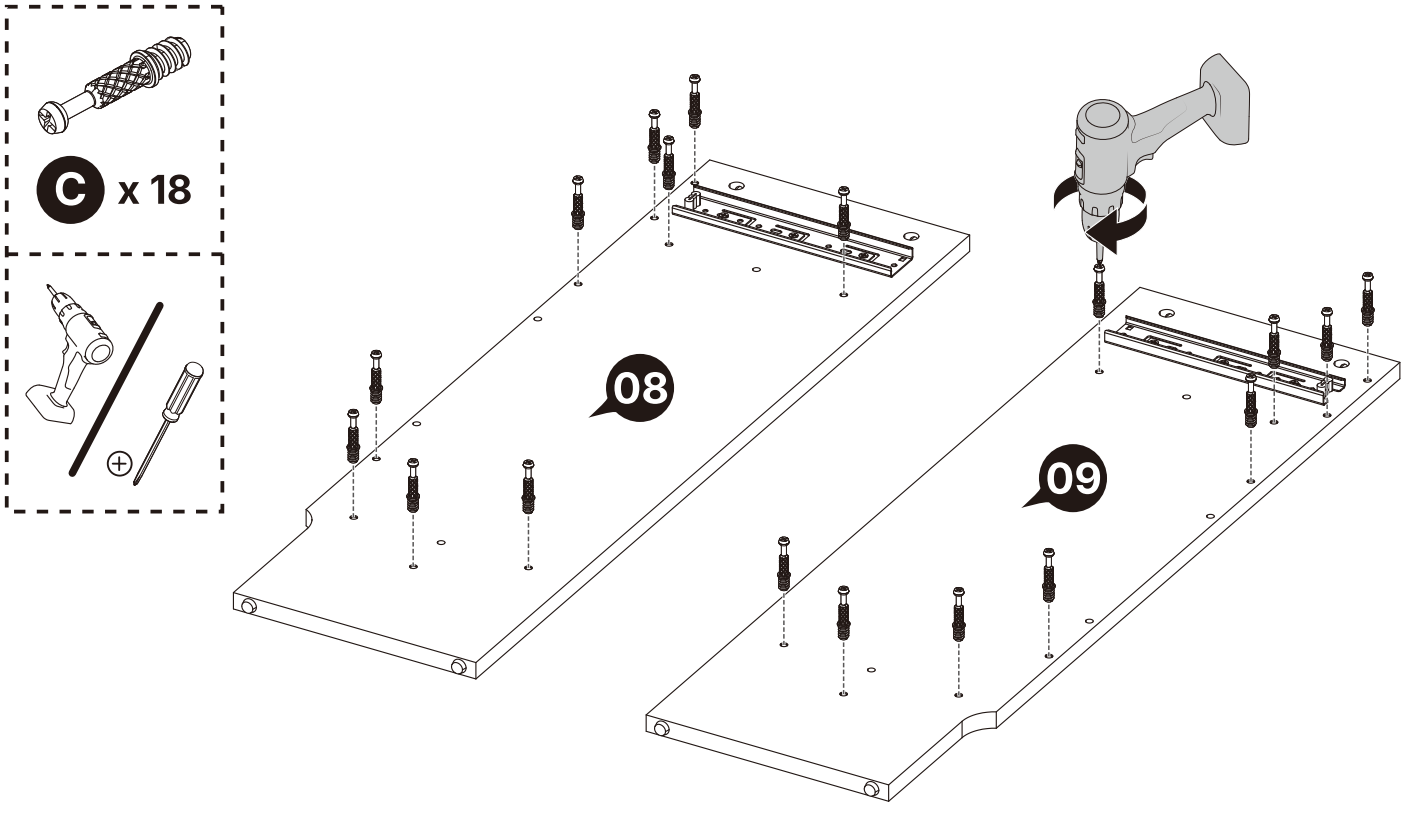

C x 18
08
09

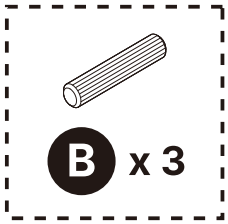

B x 3

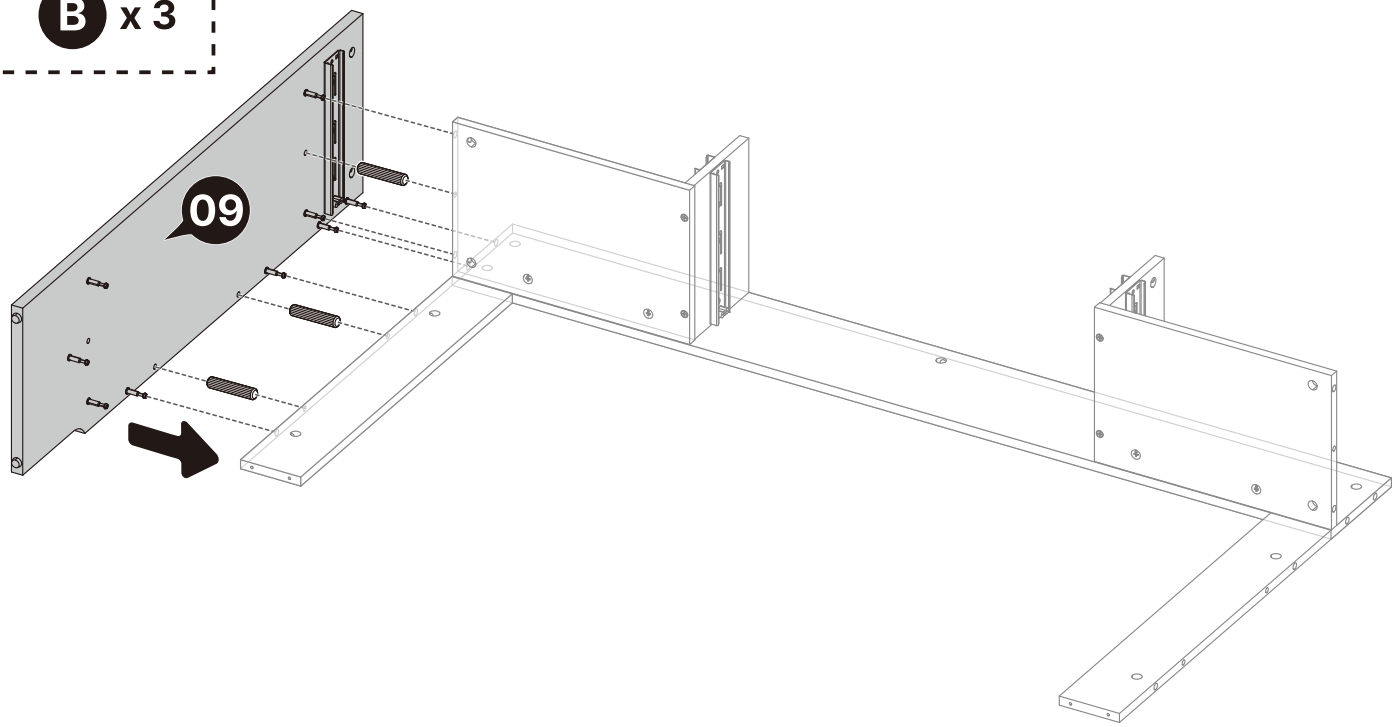

09

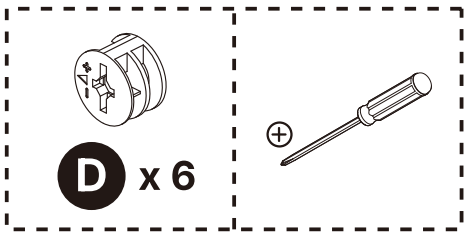

D x 6

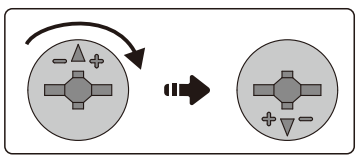


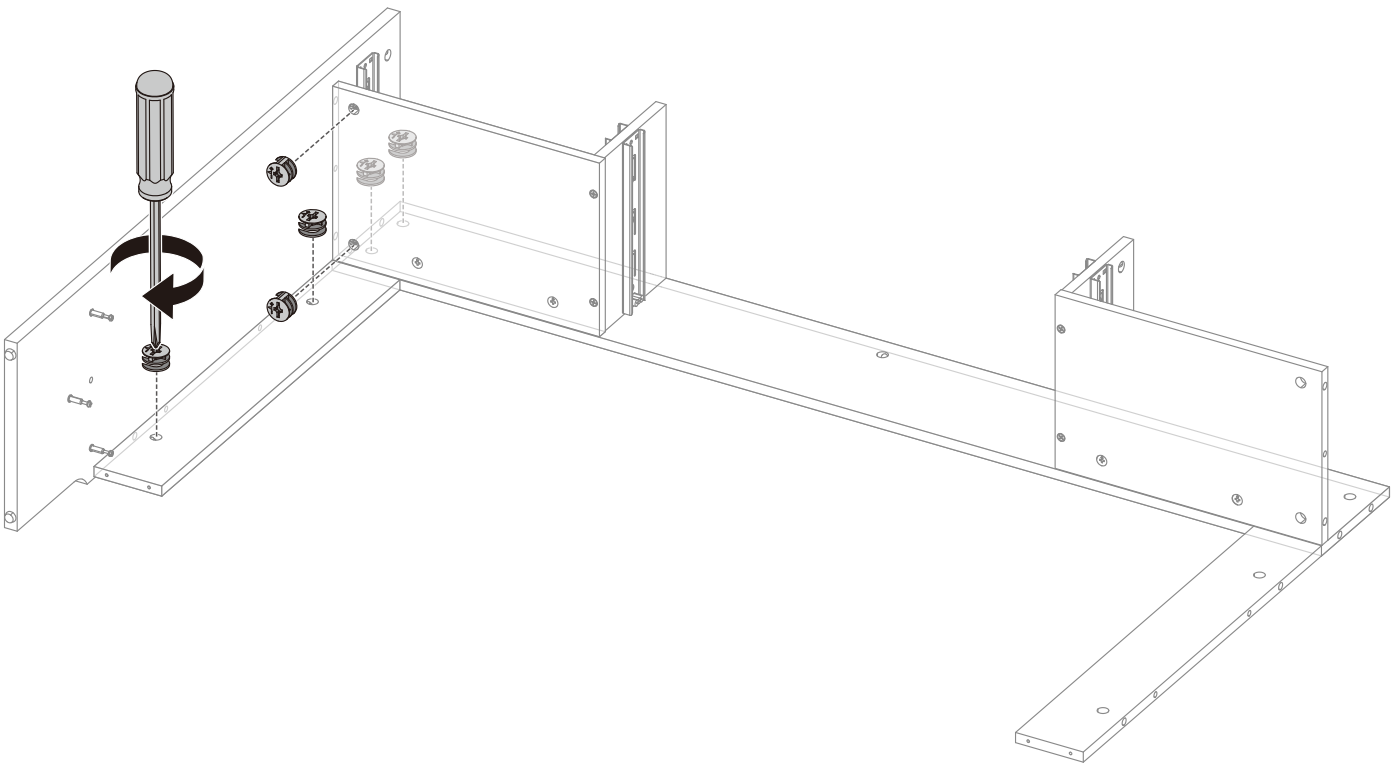


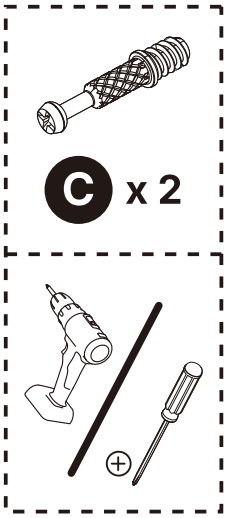

C x 2

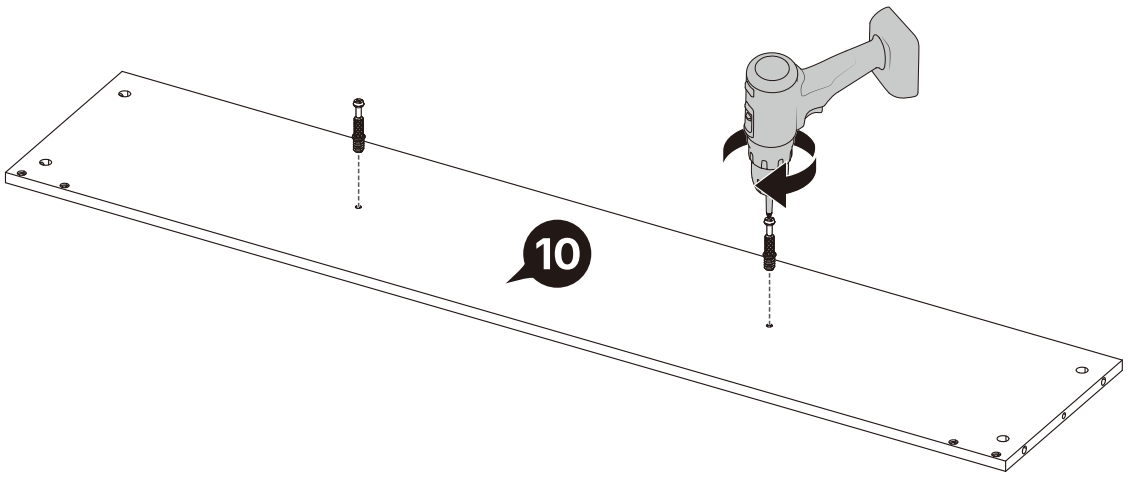

10

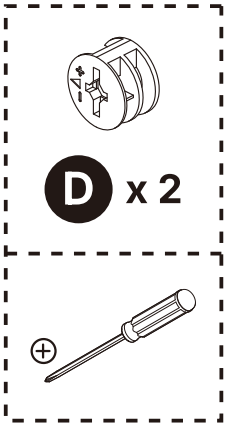

D x 2

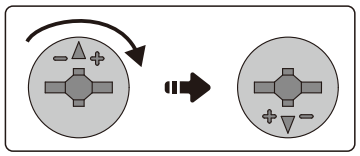


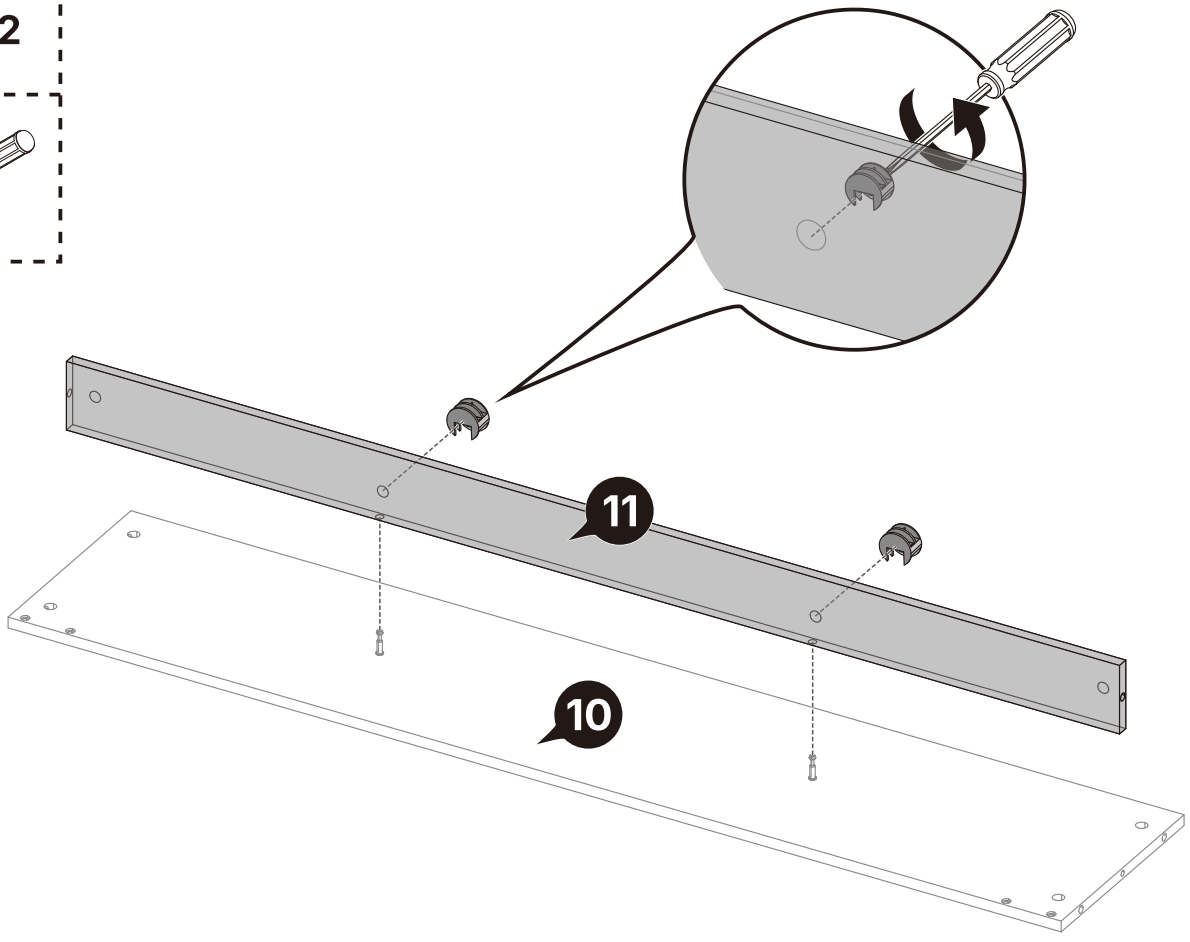

11
10

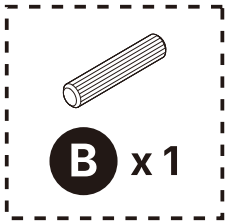

B x 1

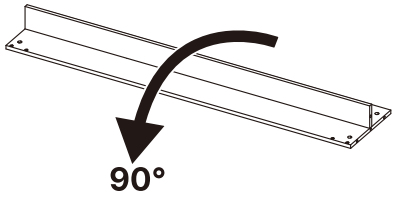

90°

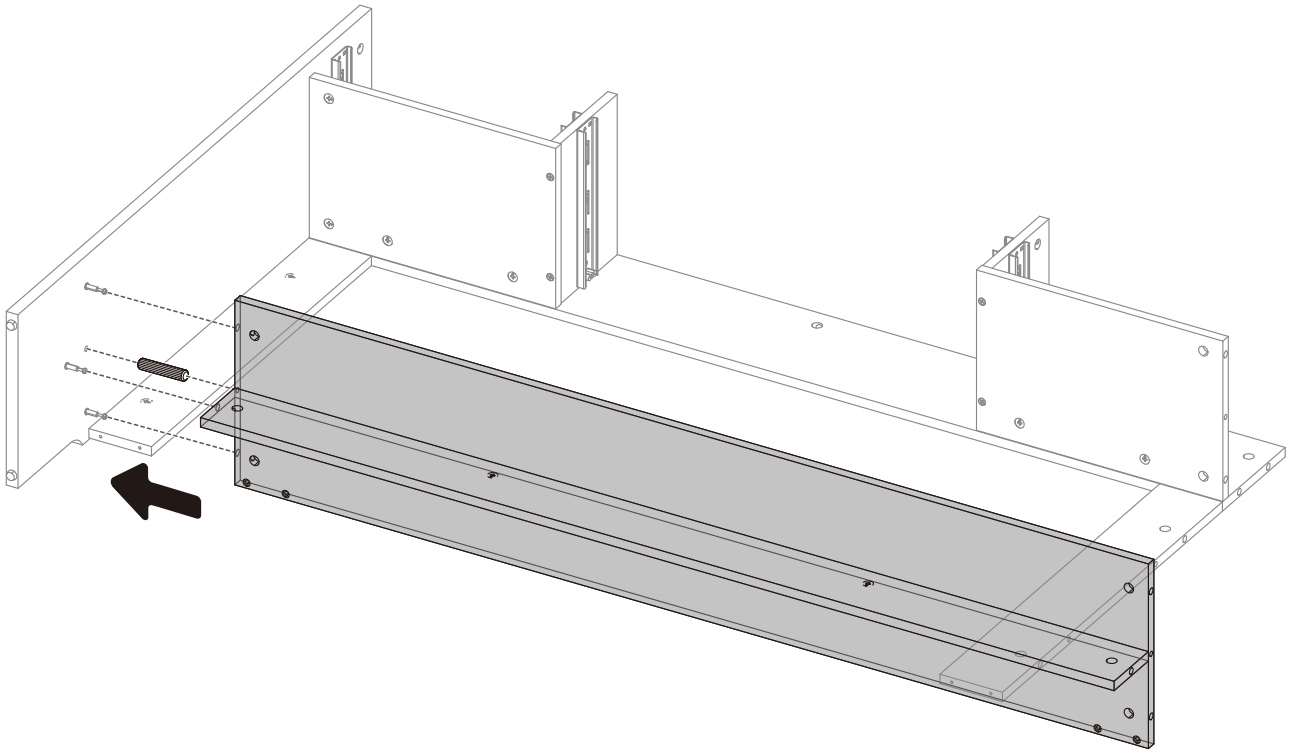


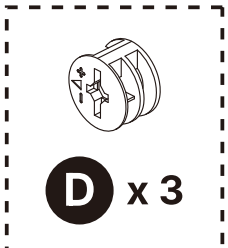

D x 3

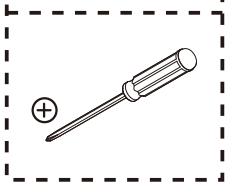

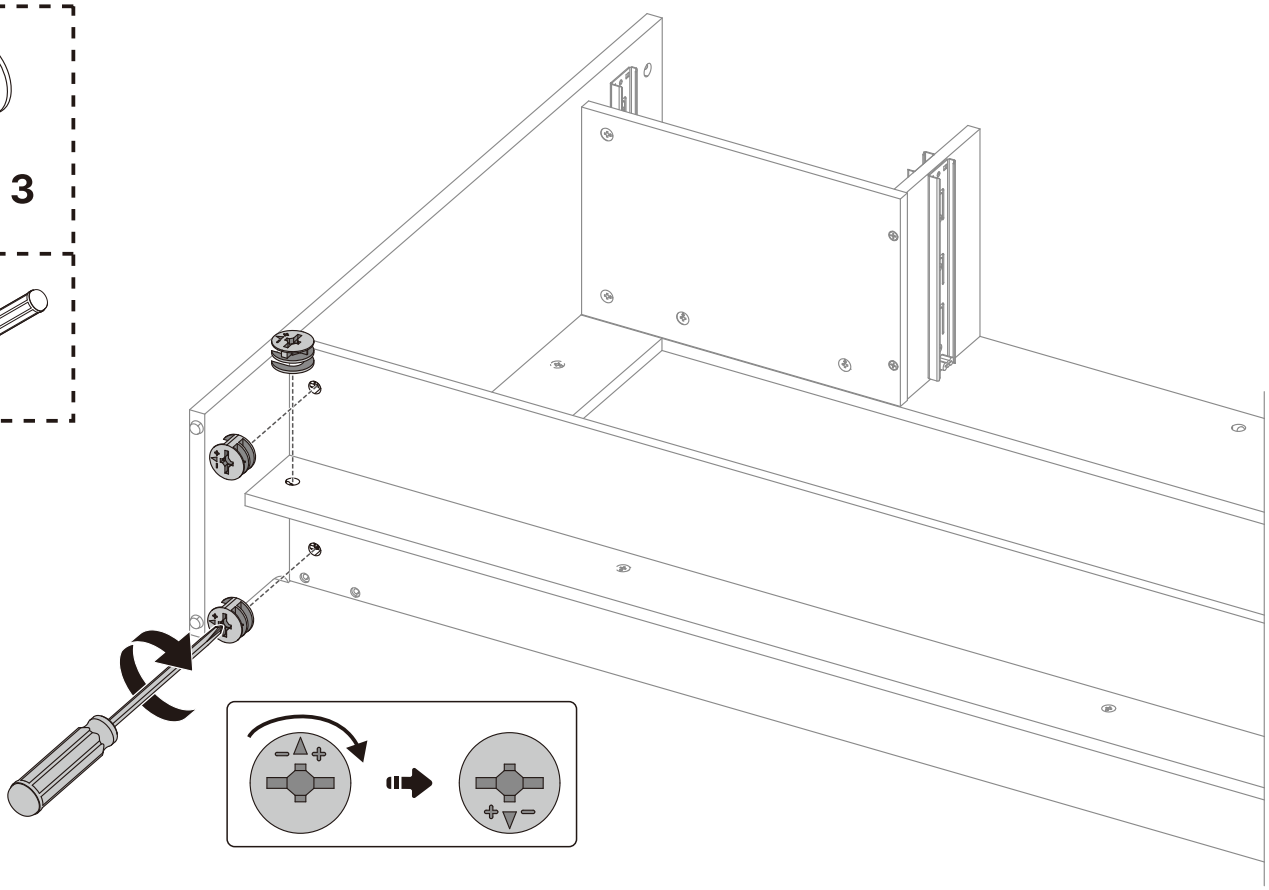


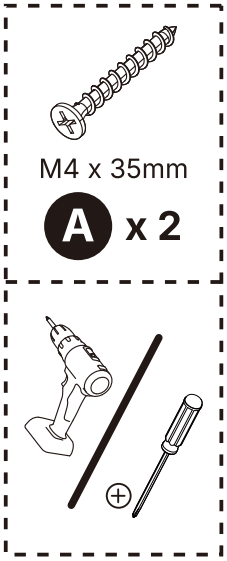

M4 x 35mm
A x 2

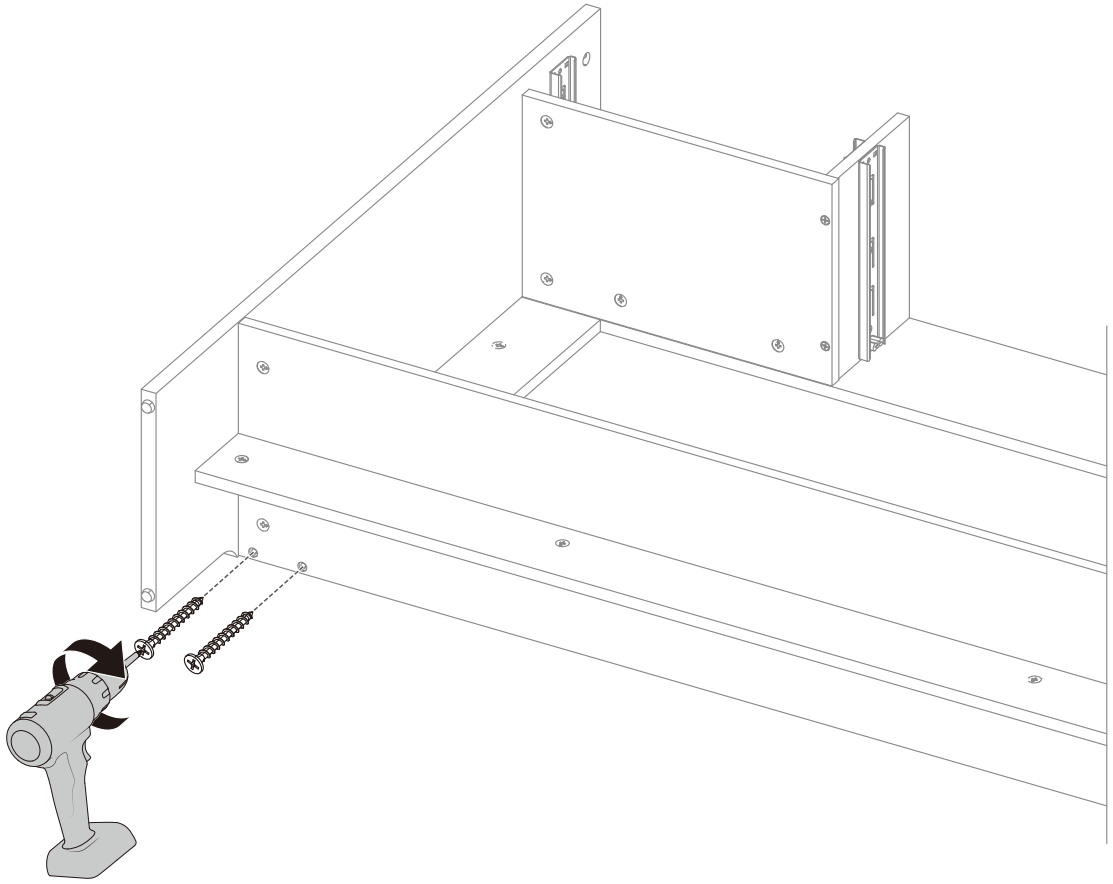


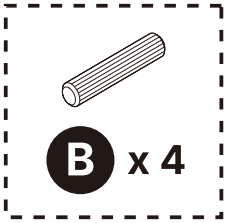

B x 4


08

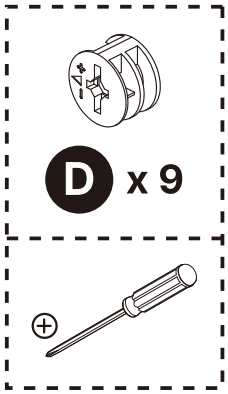

D x 9

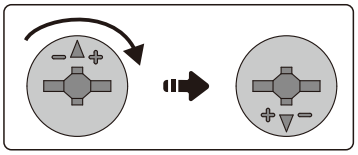


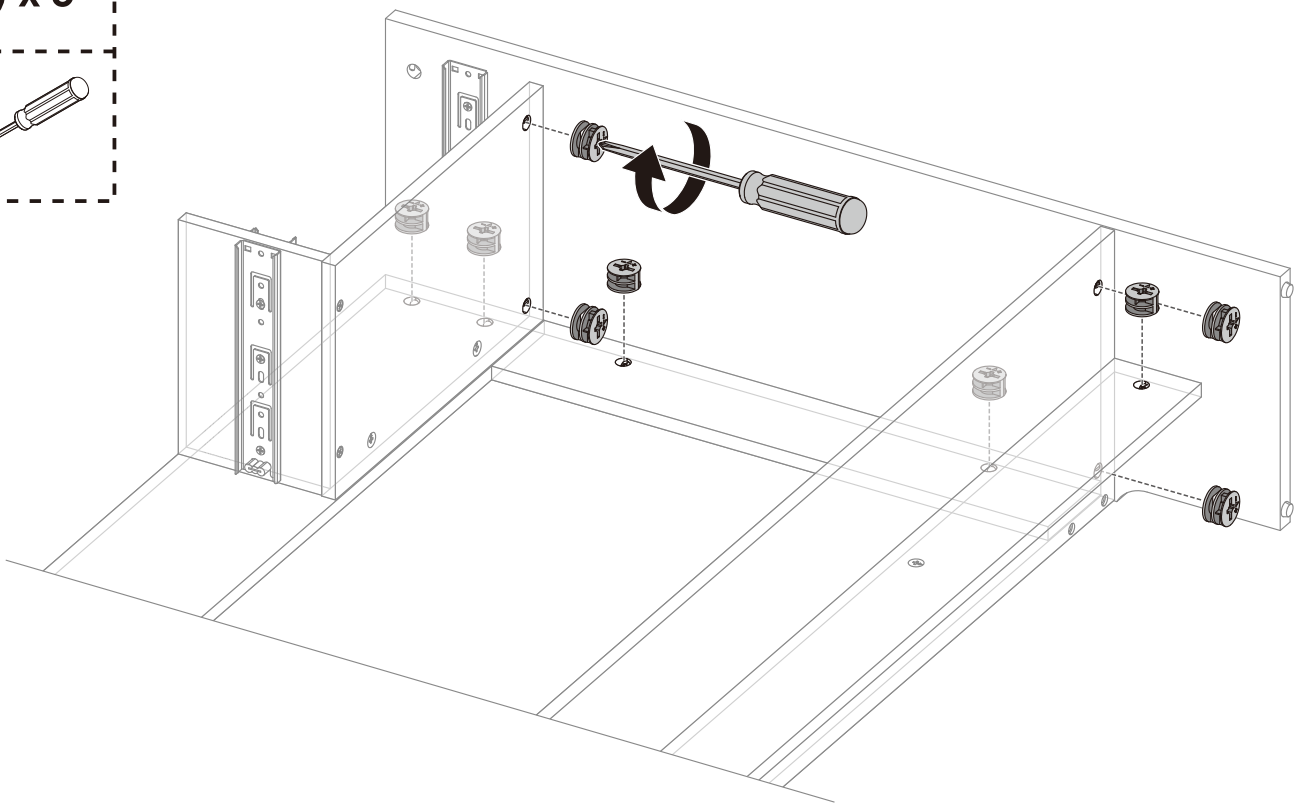


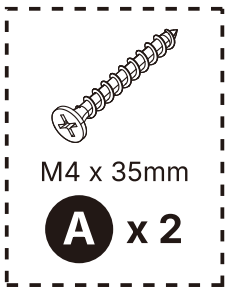

M4 x 35mm
A x 2

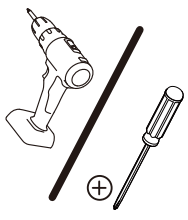


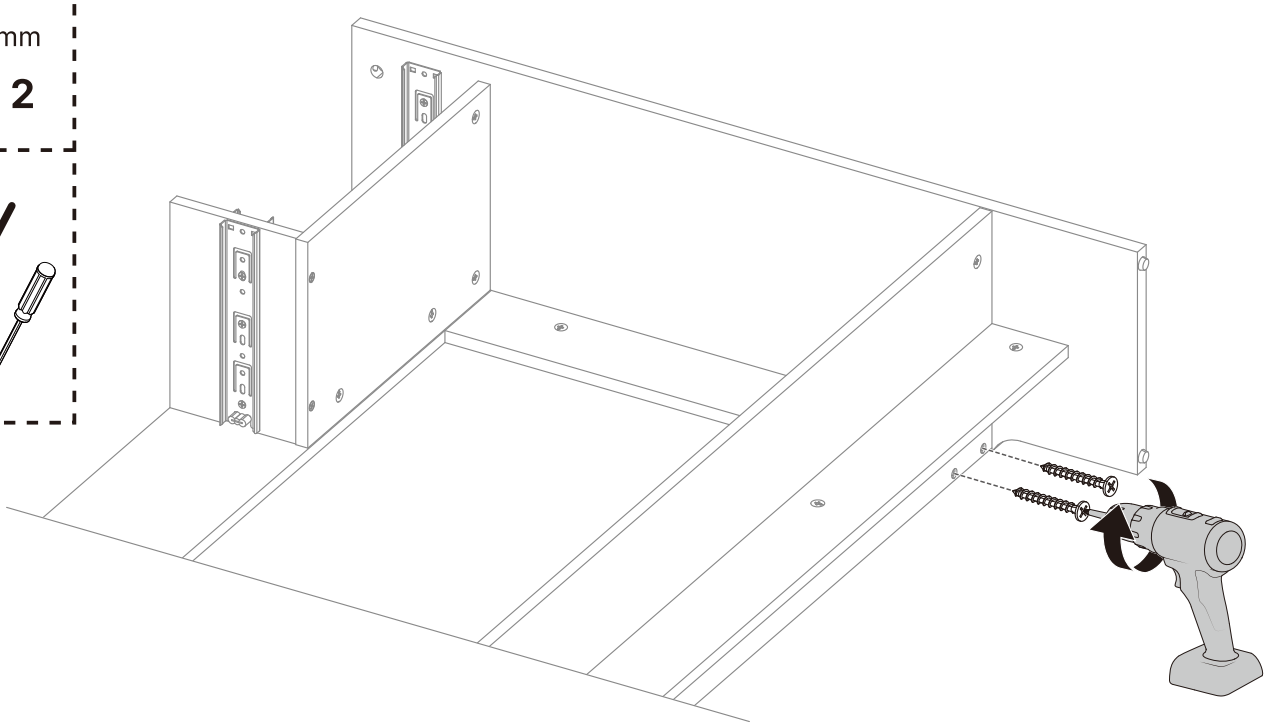


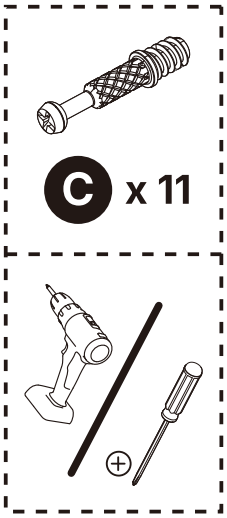

C x 11

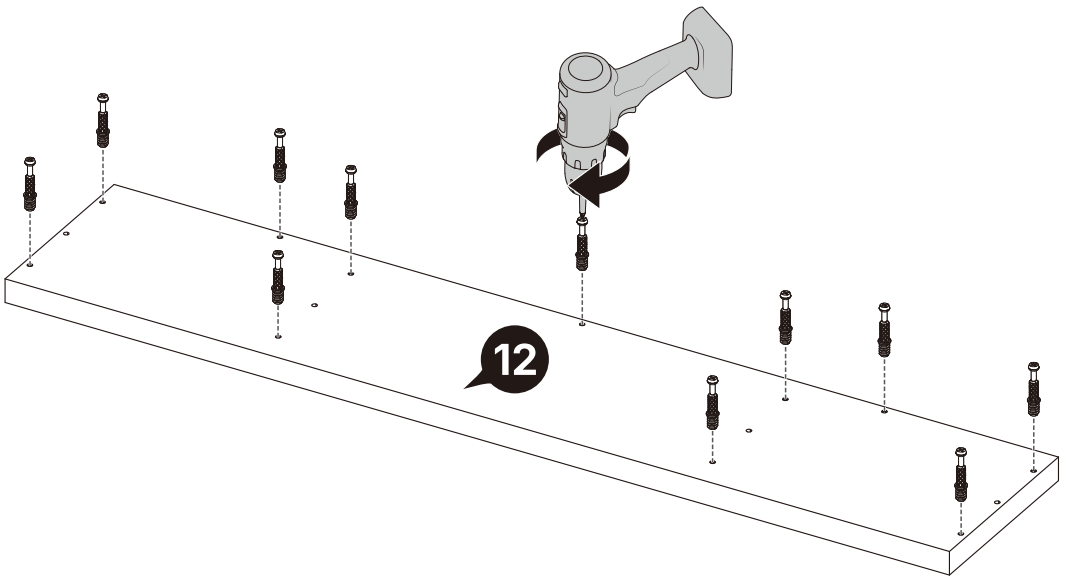

12

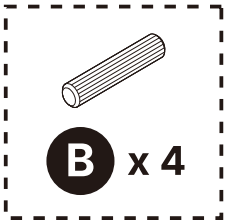

B x 4

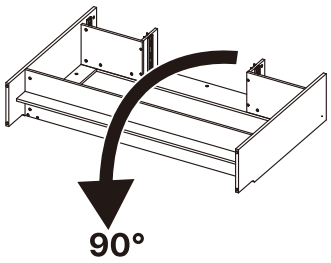

90°

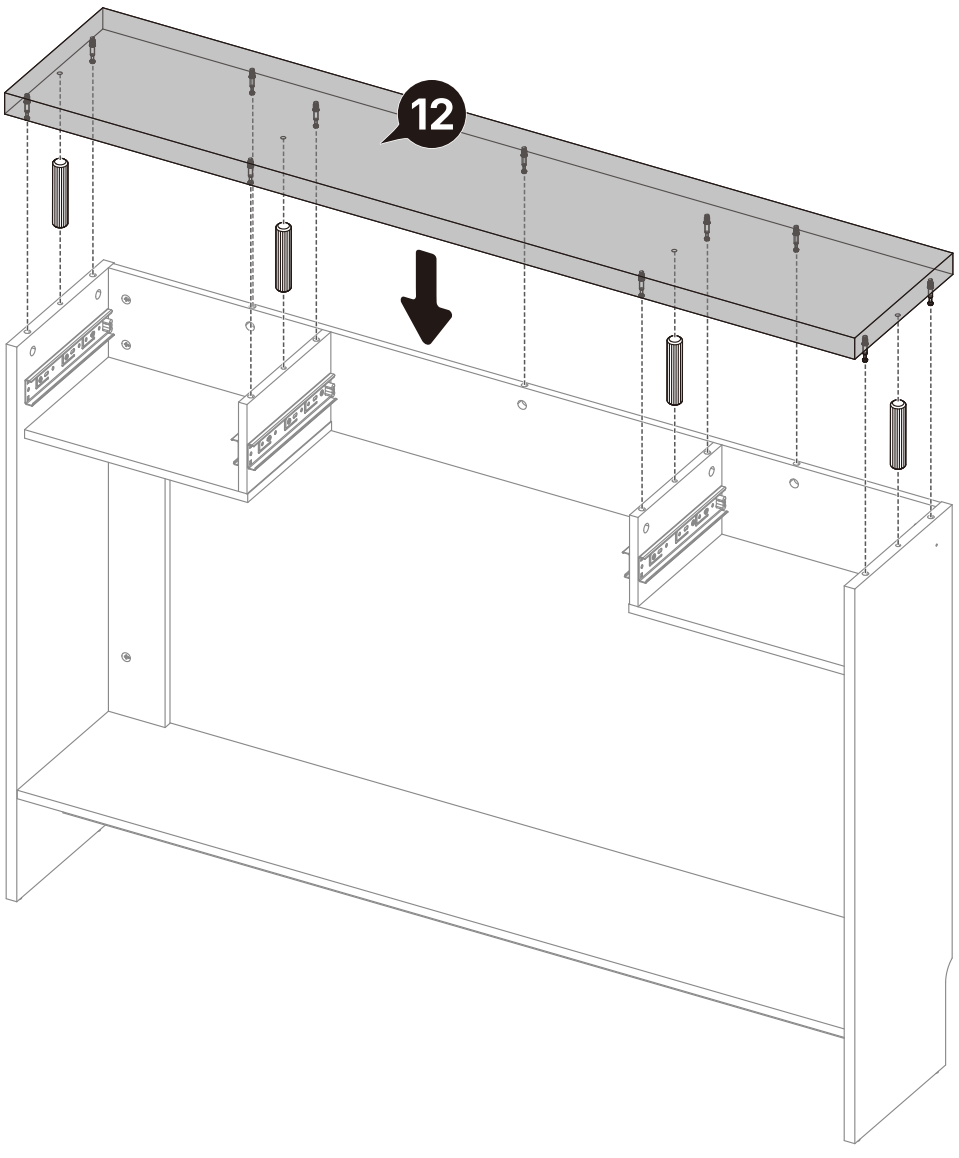
12

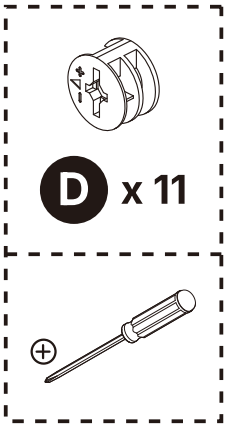

D x 11

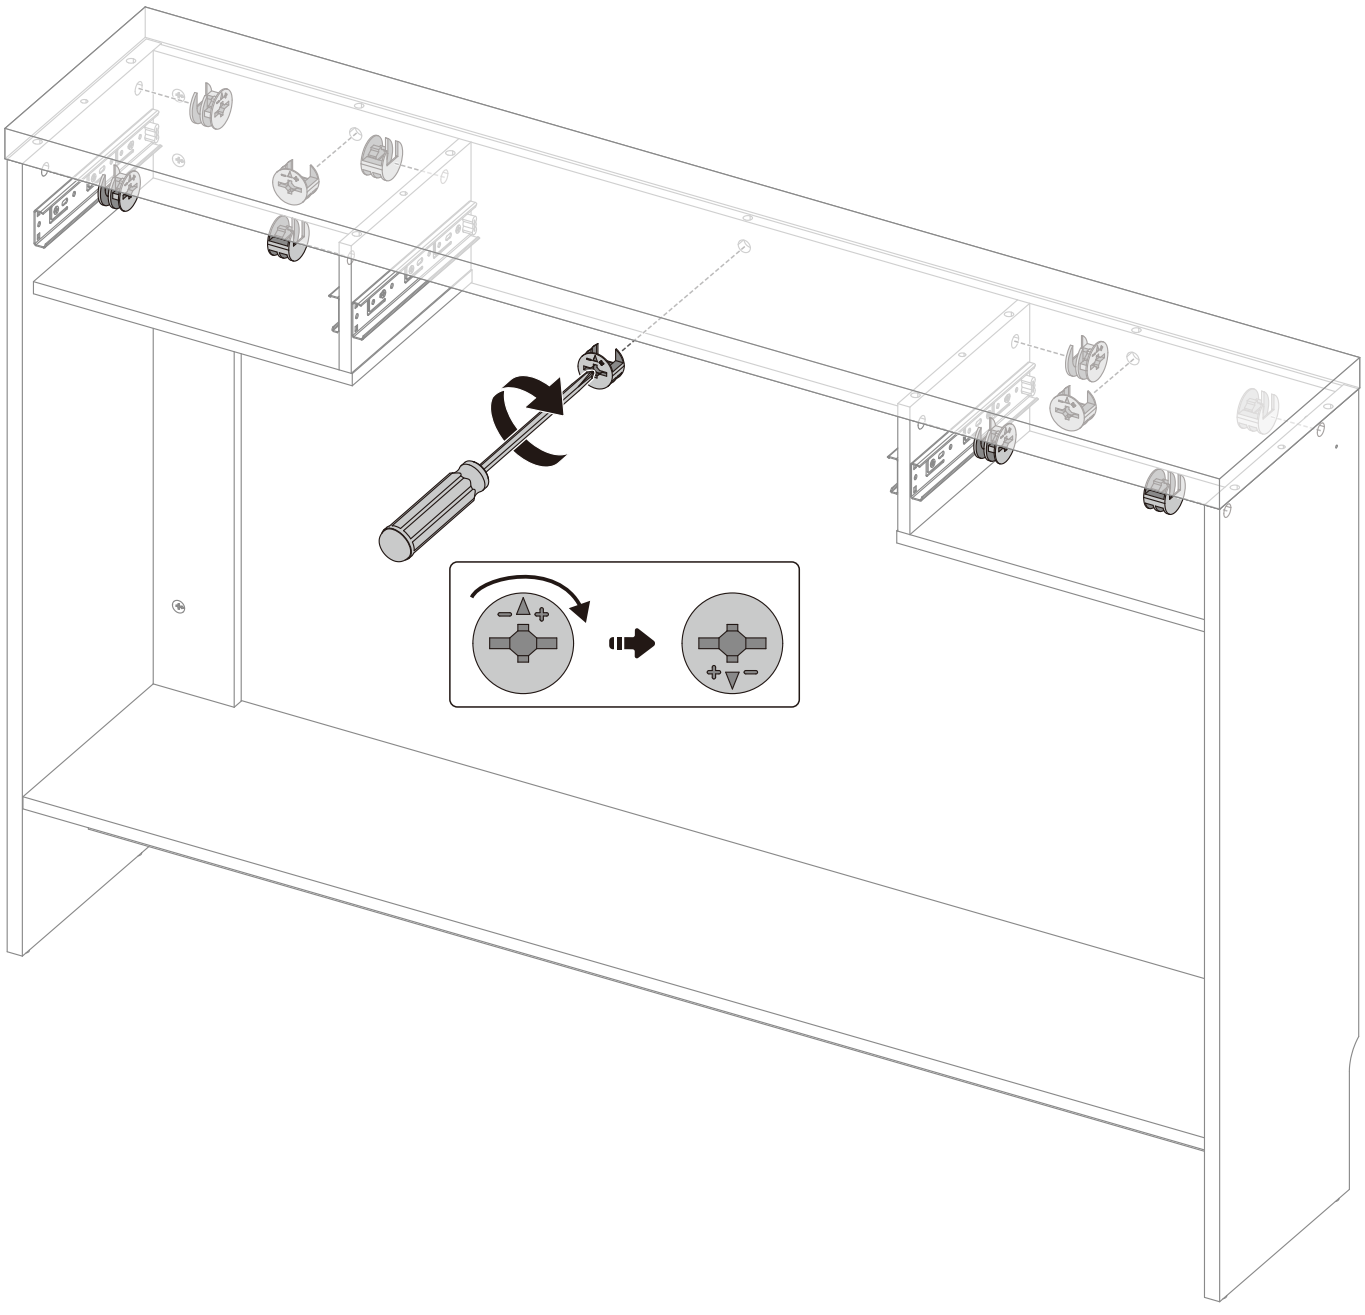

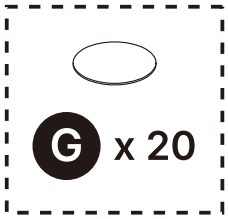
G x 20

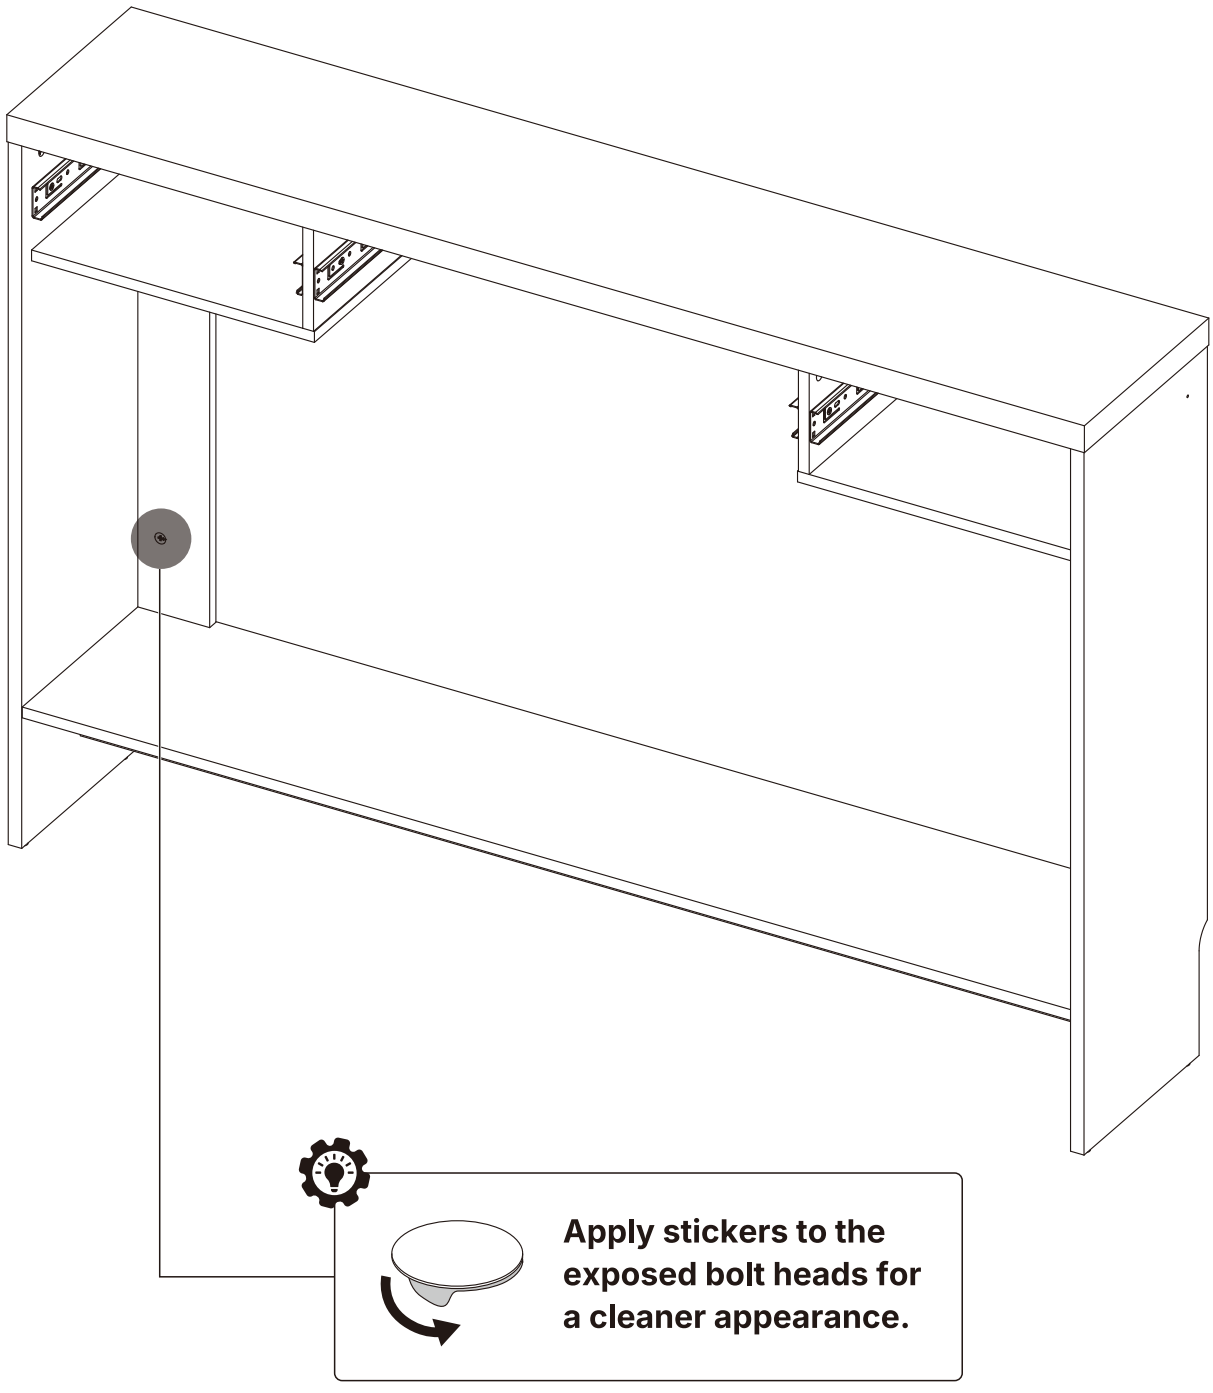

Apply stickers to the exposed bolt heads for a cleaner appearance.

2 Assembling and Attaching the Drawers

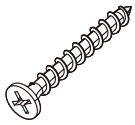


M4 x 35mm


A x 8

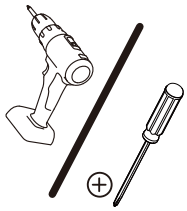



2x

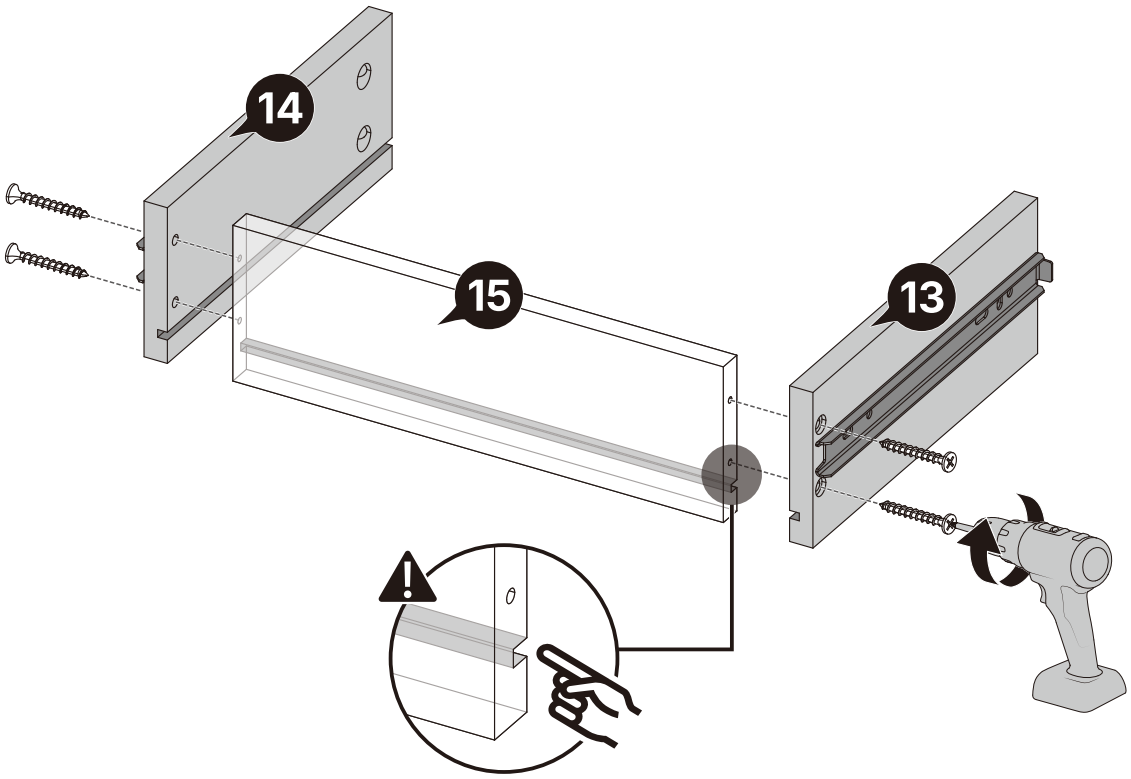



2x

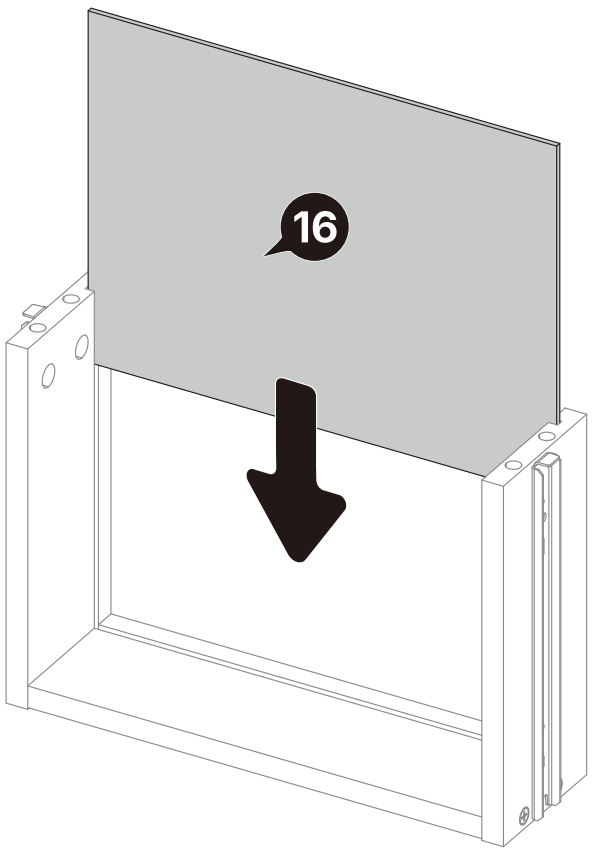


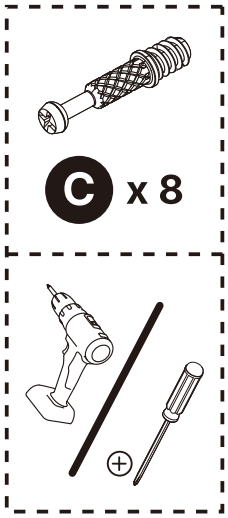

C x 8

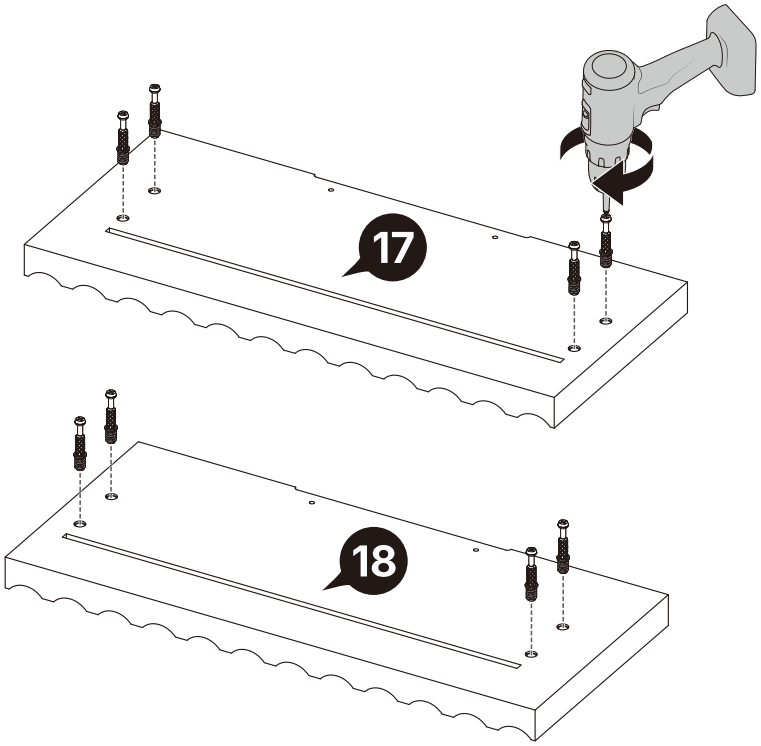

17
18

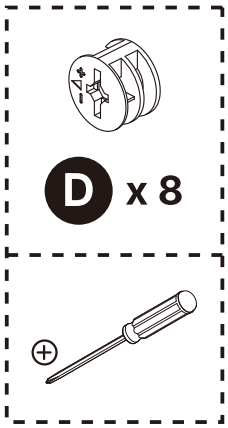

D x 8

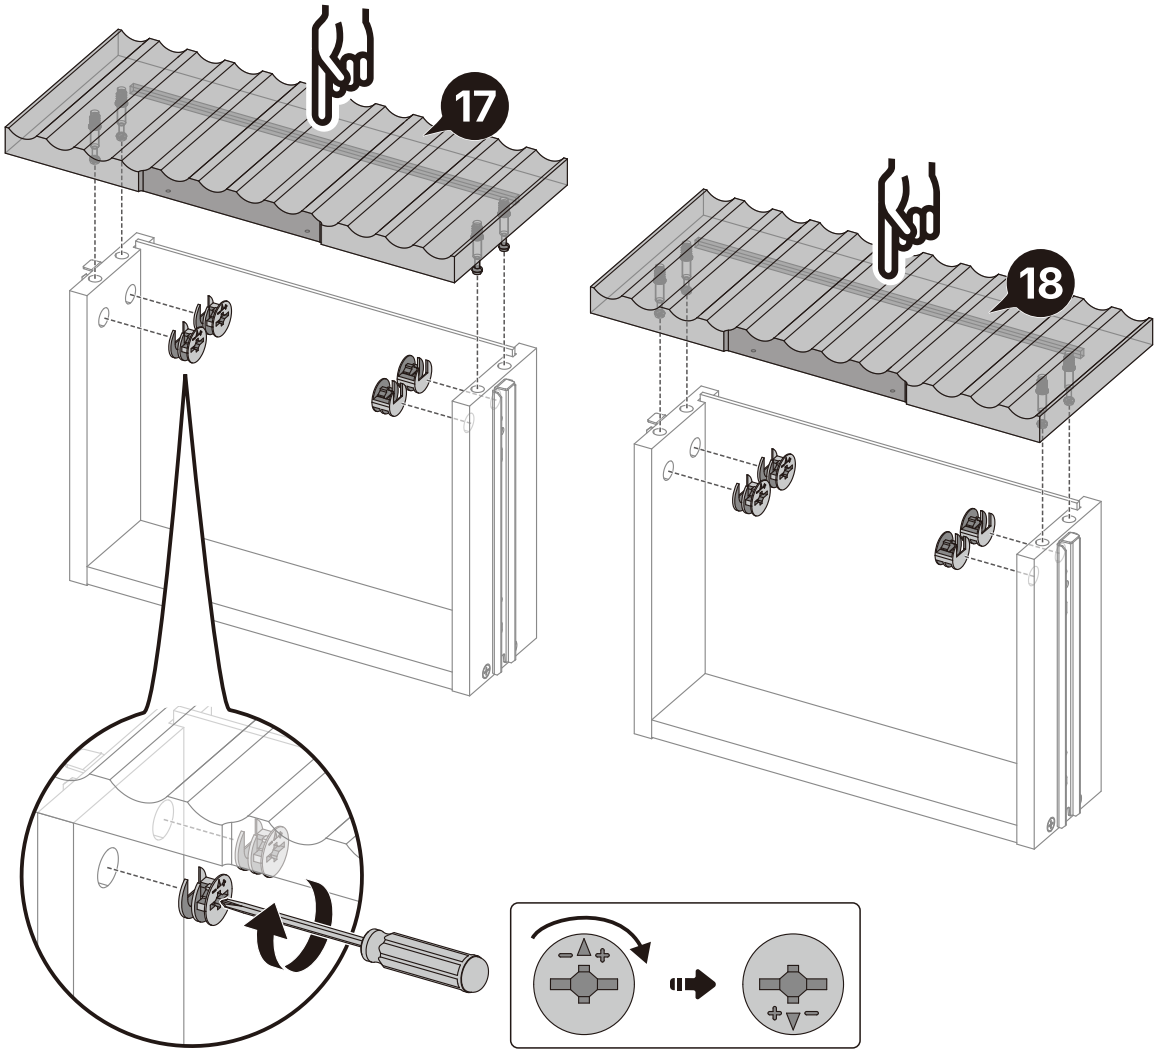

17
18

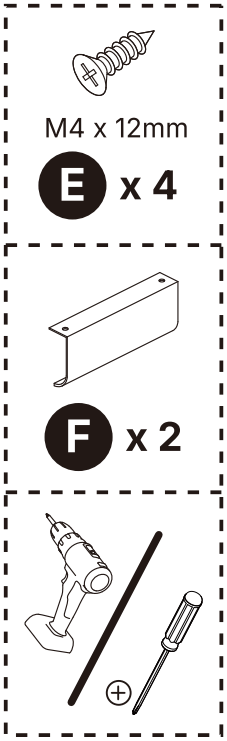

M4 x 12mm
E x 4
F x 2

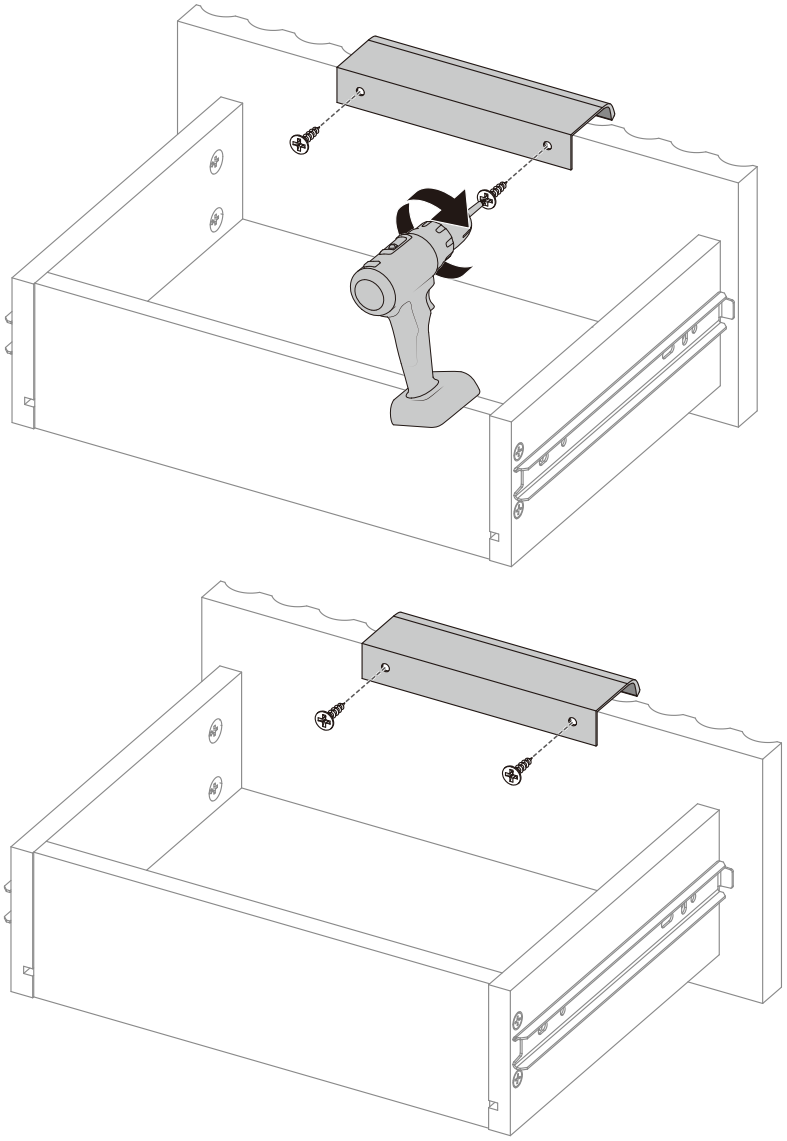


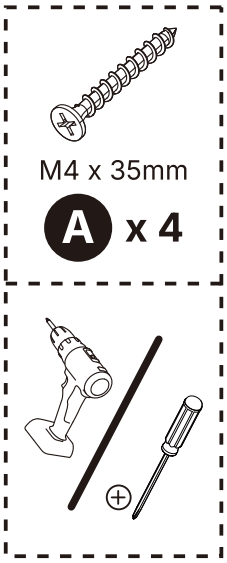

M4 x 35mm
A x 4

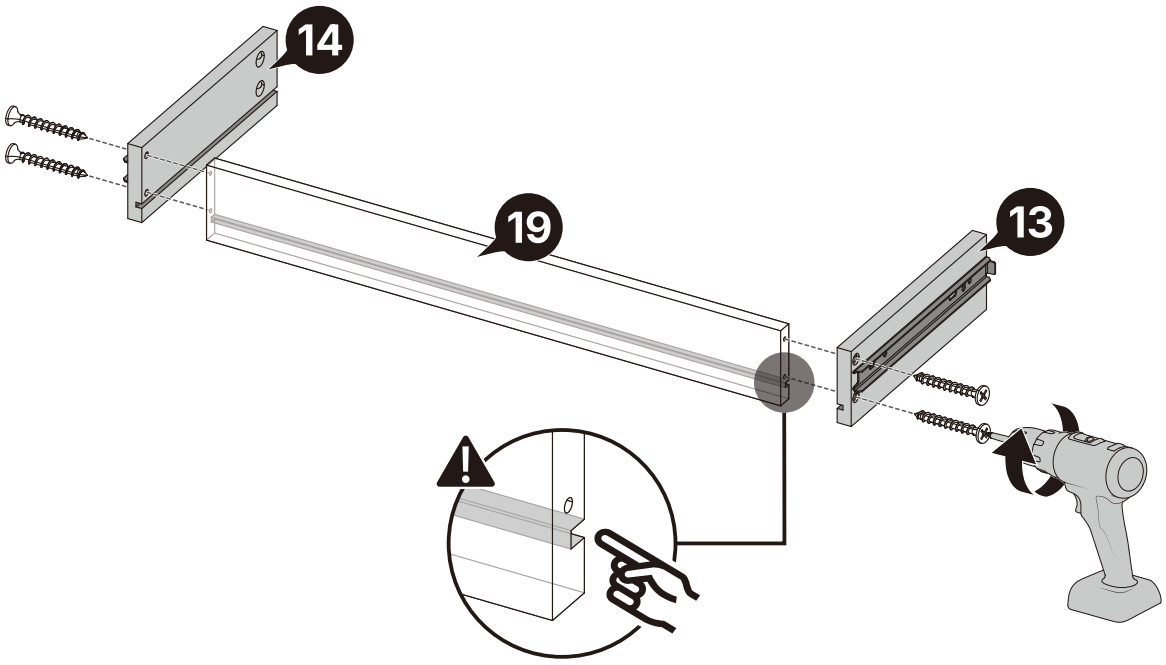

14
19
13

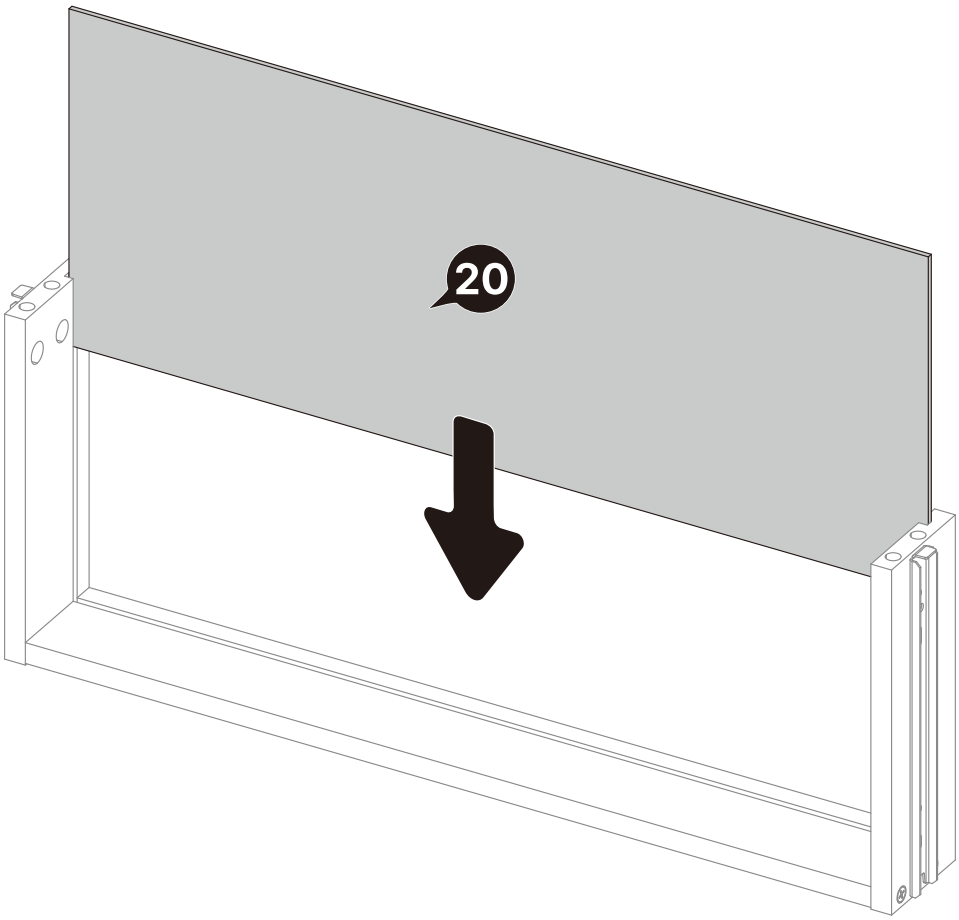

20

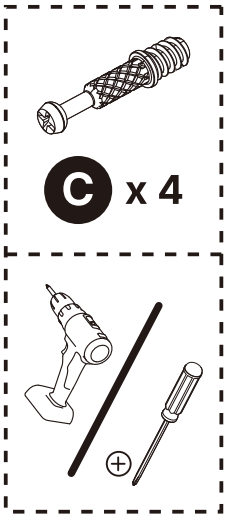

C x 4

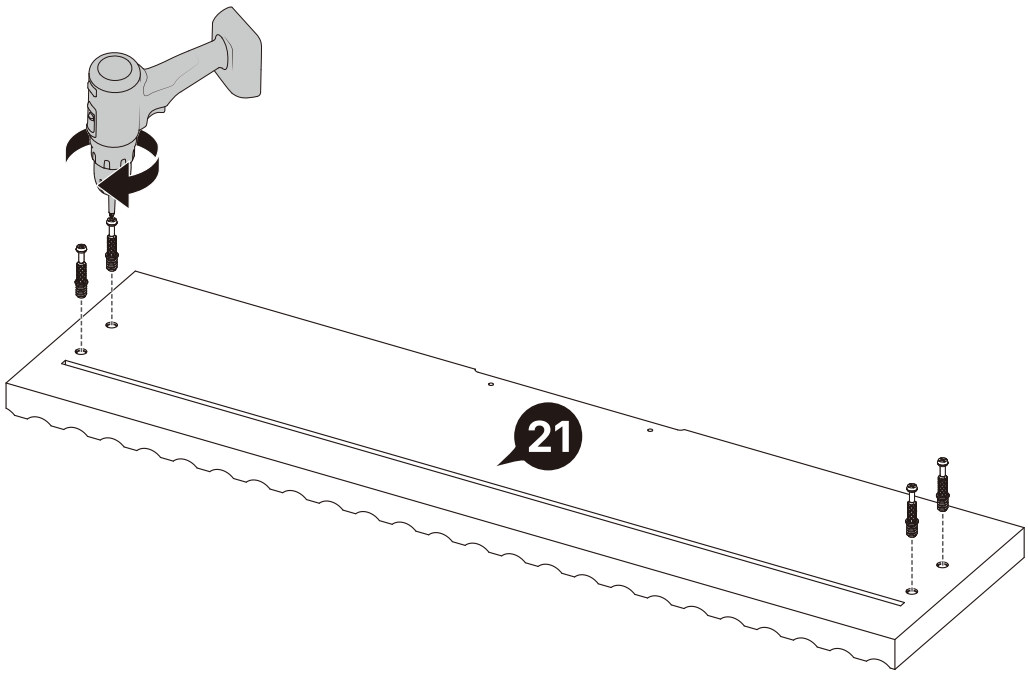

21

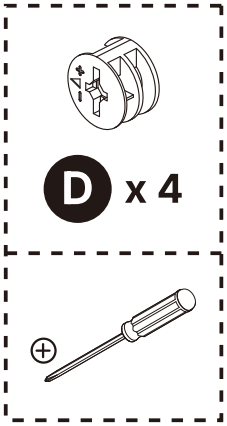
D x 4

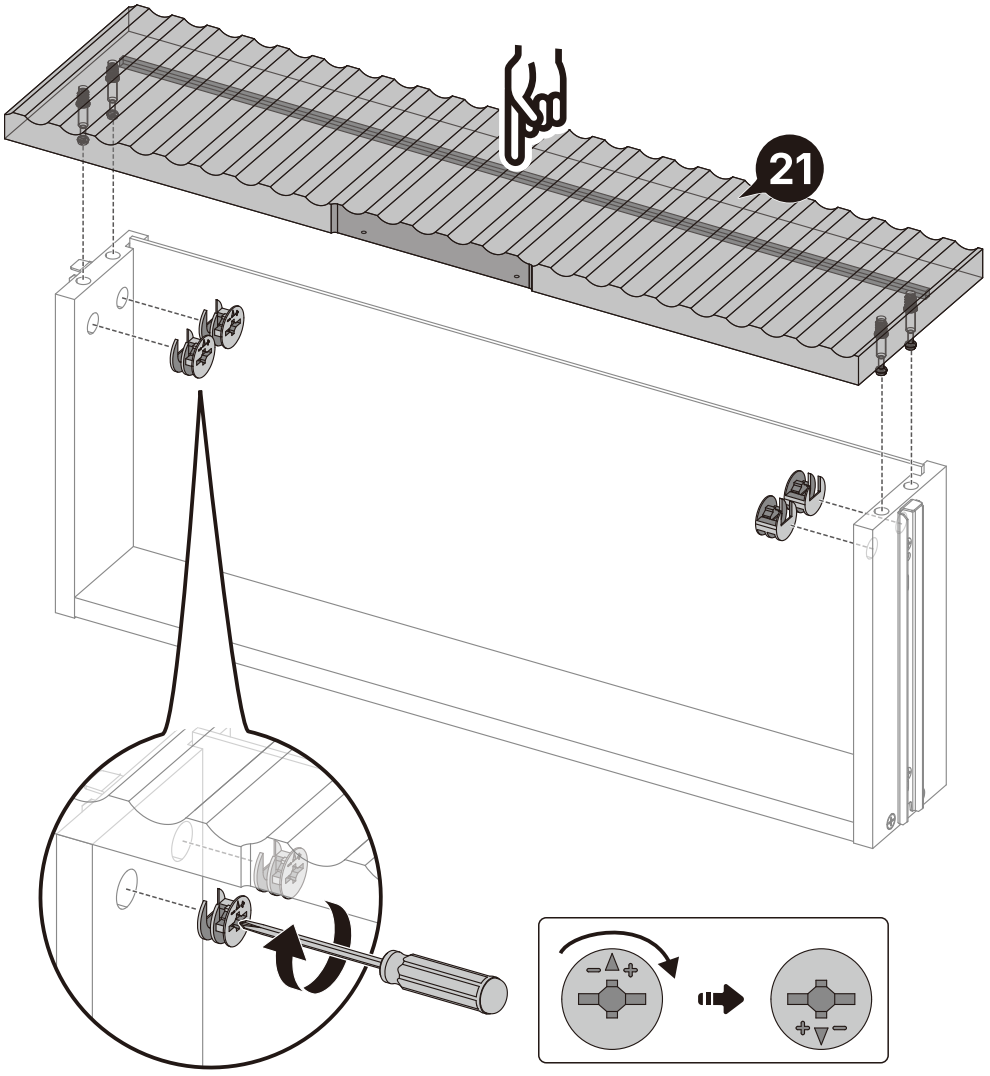
21

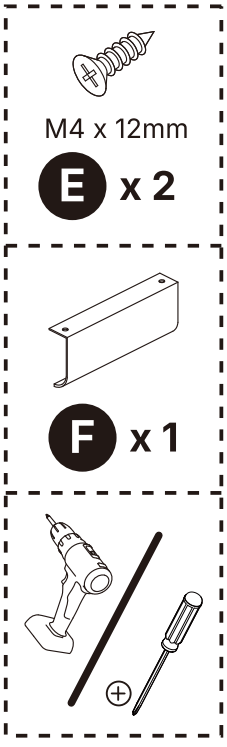

M4 x 12mm
E x 2
F x 1

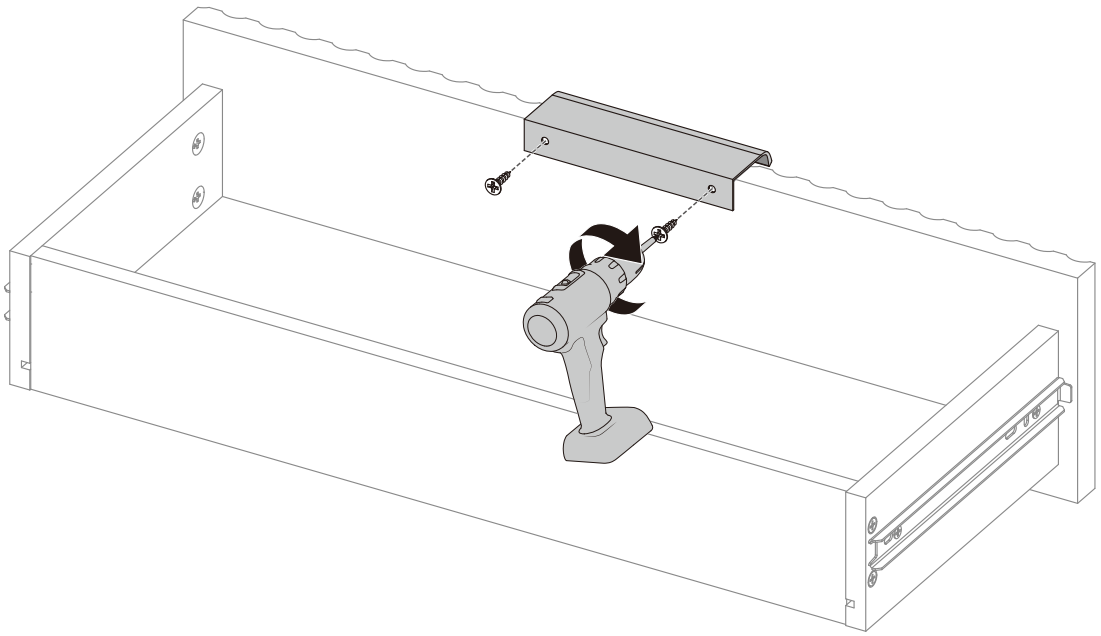


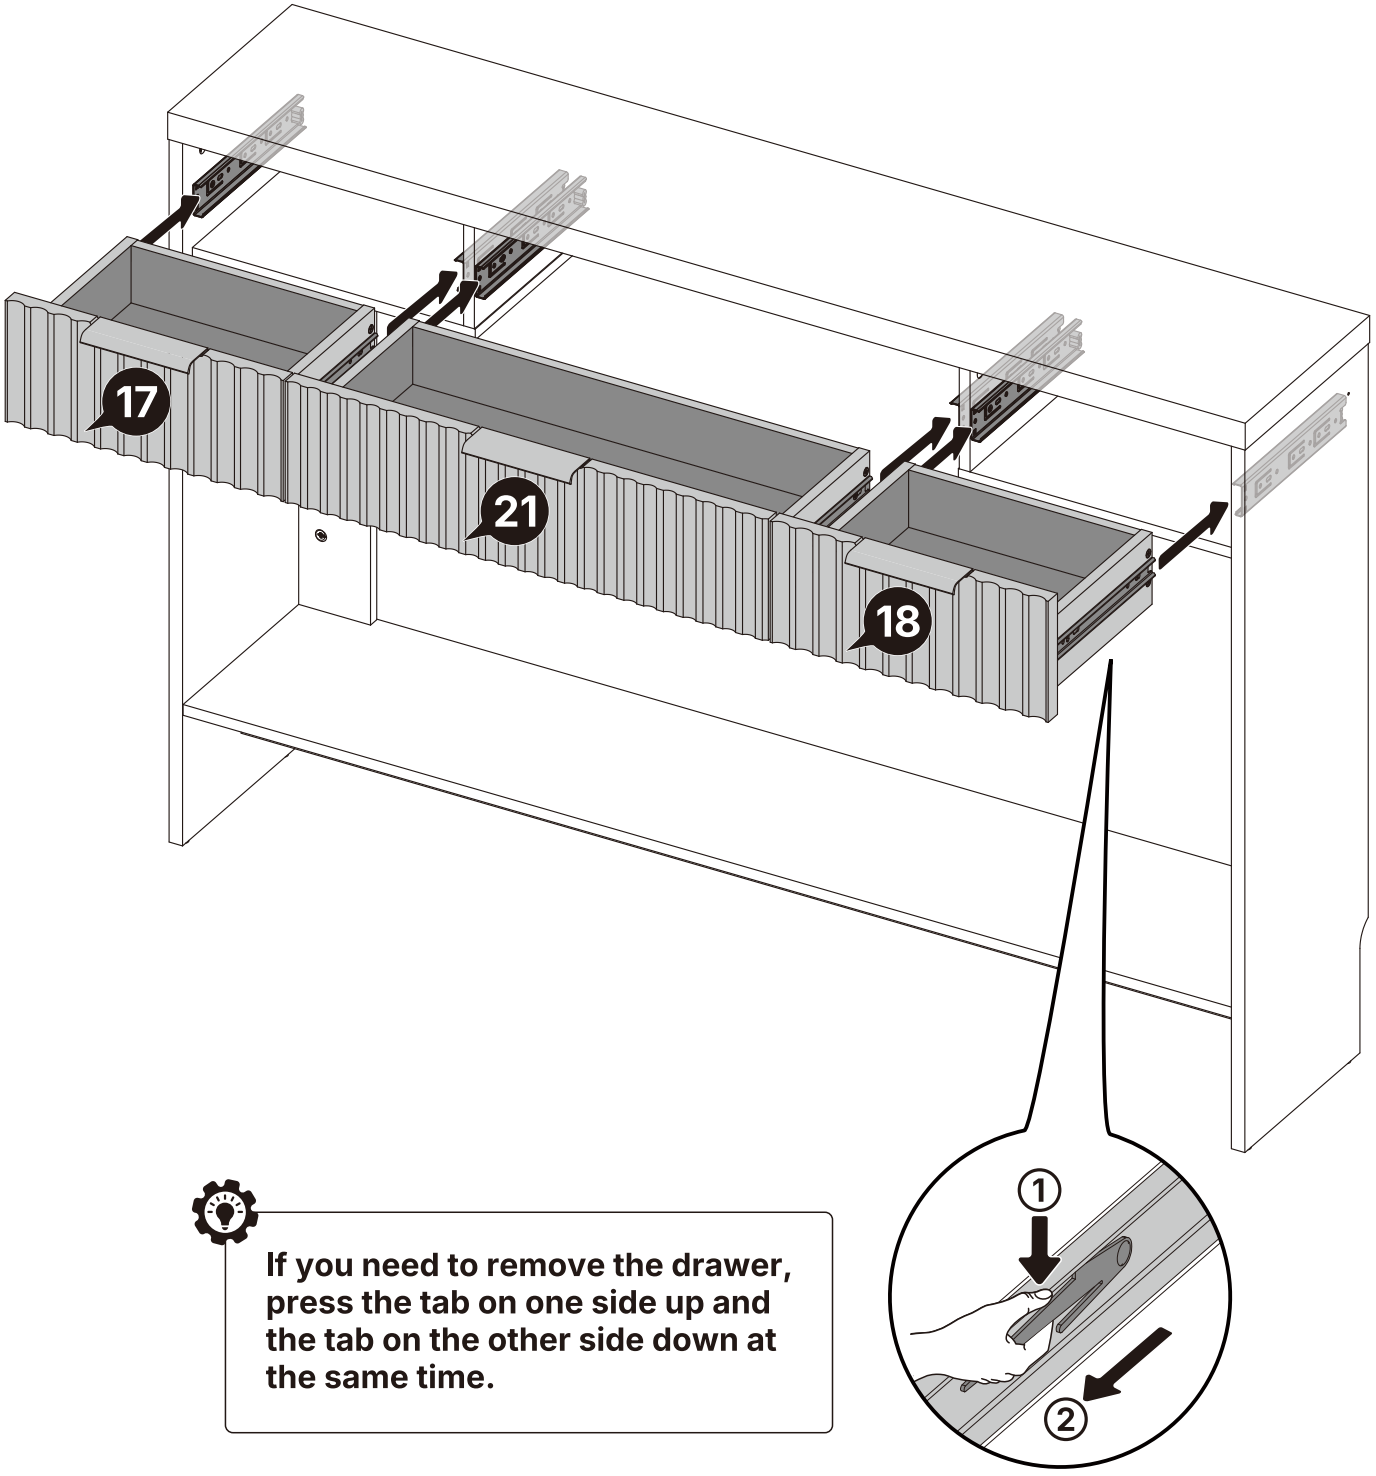

If you need to remove the drawer, press the tab on one side up and the tab on the other side down at the same time.


Drawer Alignment Adjustment

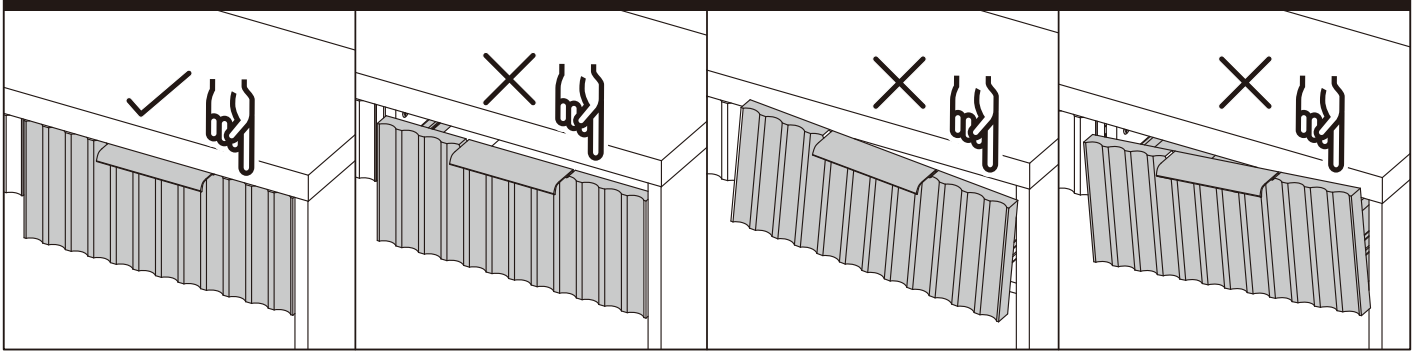

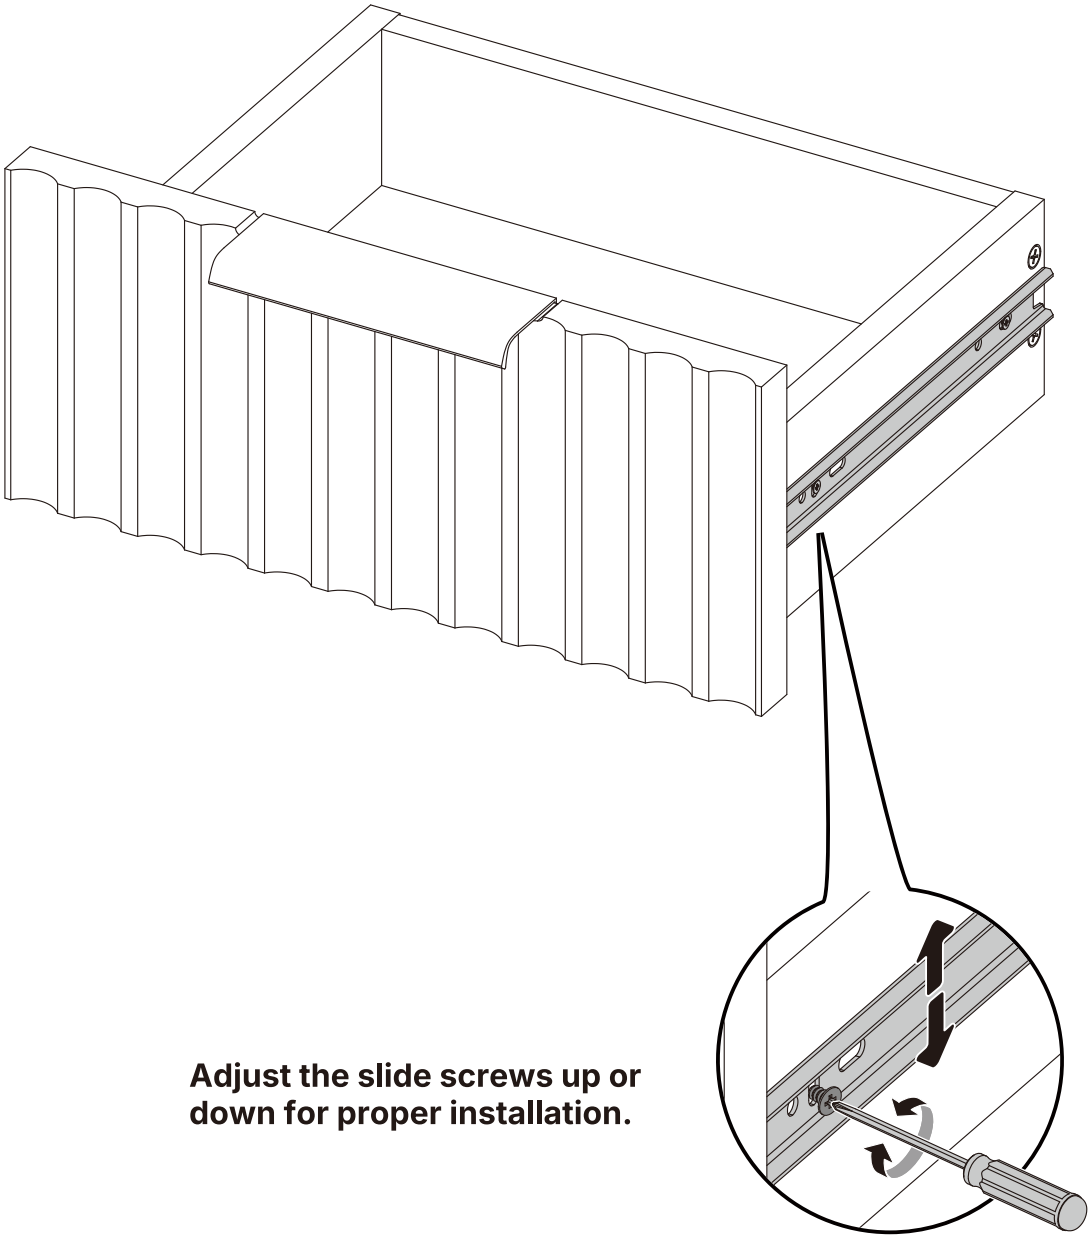


Adjust the slide screws up or down for proper installation.

Optional: Anti-Tip Kit Installation

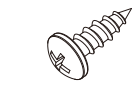


ST4 x 12mm


H x 2

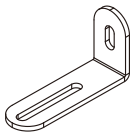


I x 2

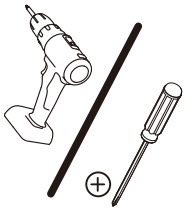


1. Secure the anti-tip brackets to both sides of the unit using short screws.

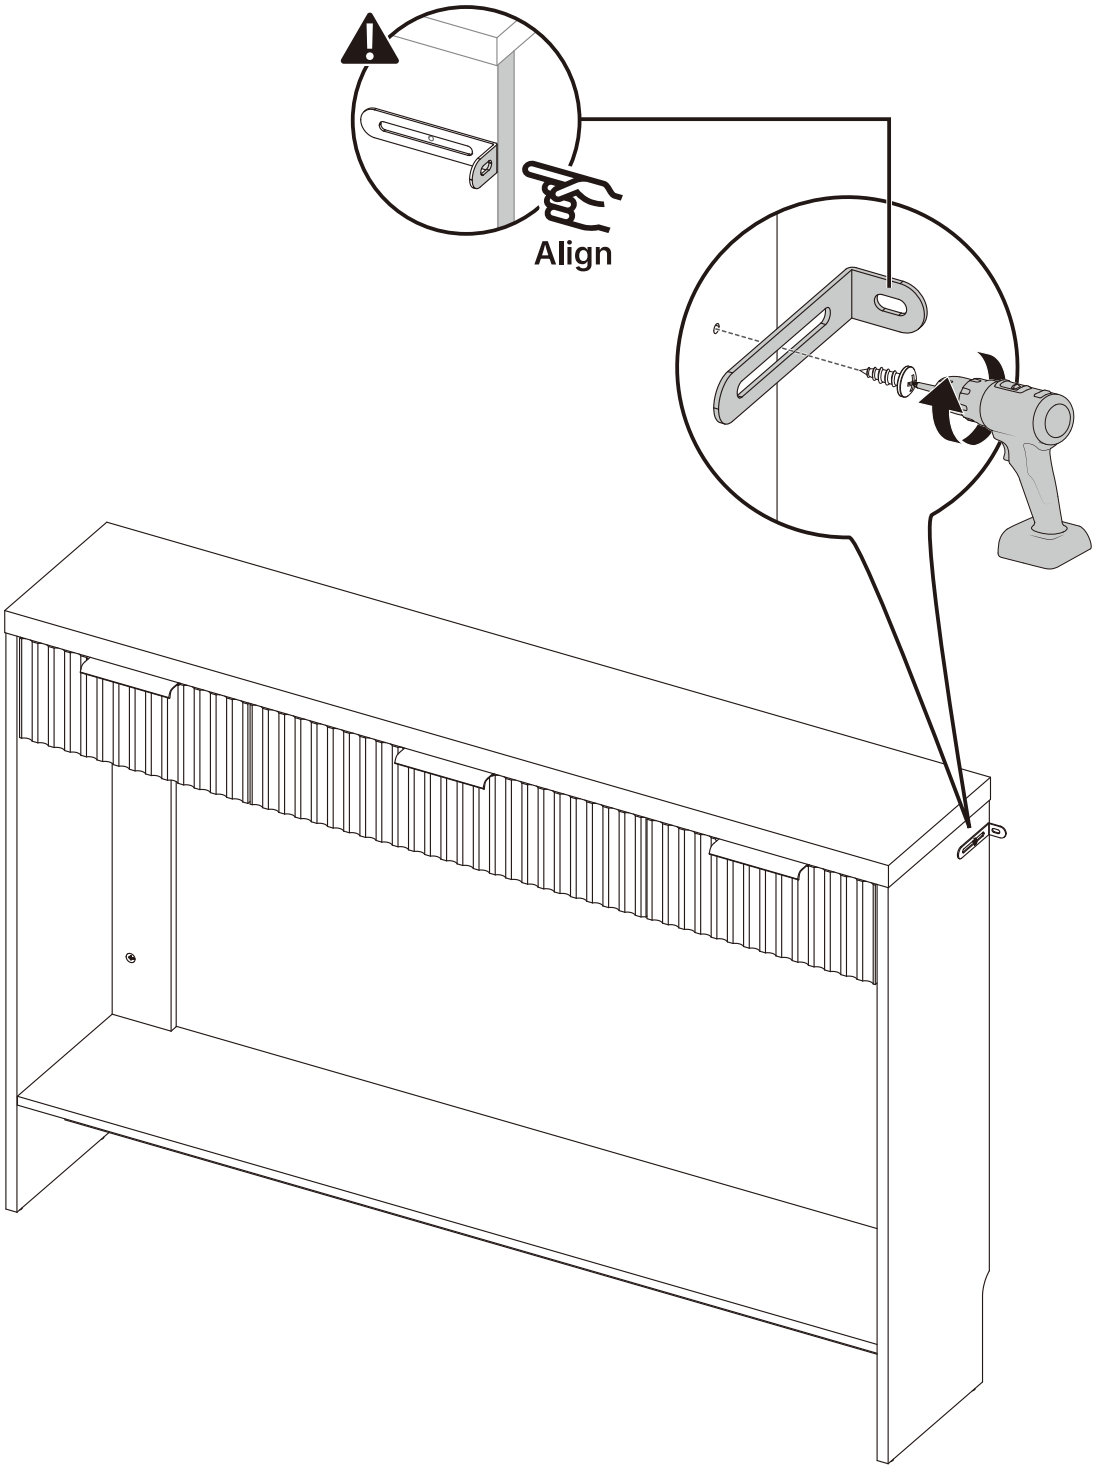

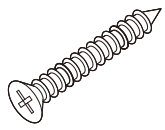


M4 x 35mm

A x 2

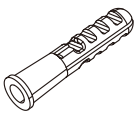

Ø7 x 35mm


J x 2

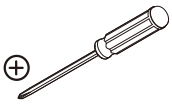


2. Determine where the unit is to be placed. If you have a wood stud wall, locate a stud using a stud finder and mark the centerline.

Drill pilot holes in the wall at the appropriate height.

Secure the anti-brackets to the wall using long screws. Use wall anchors for solid concrete. Do not use them on wood studs.

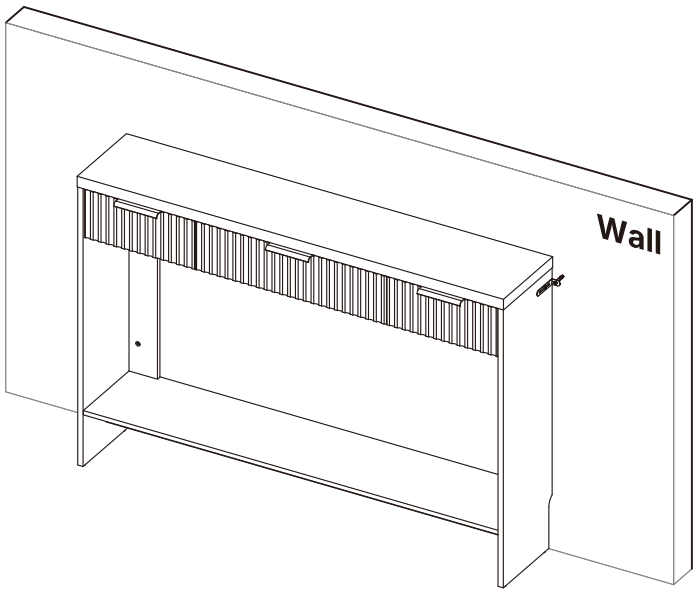

A. Wood Studs

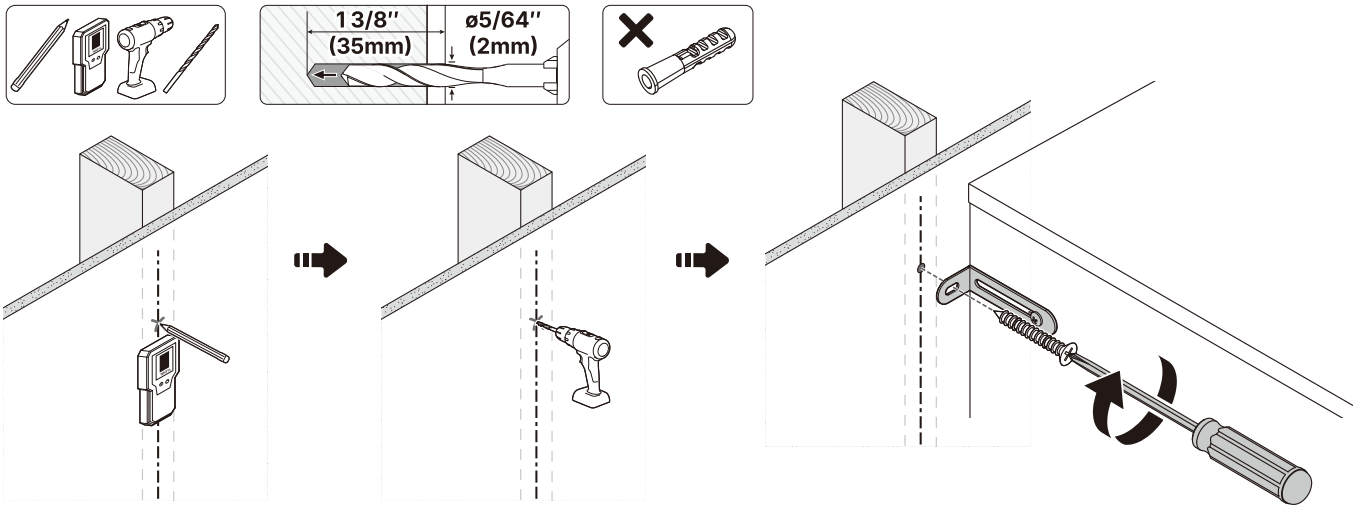

B. Solid Concrete

