
ASSEMBLY INSTRUCTIONS
3 SLIDING DOORS WARDROBE

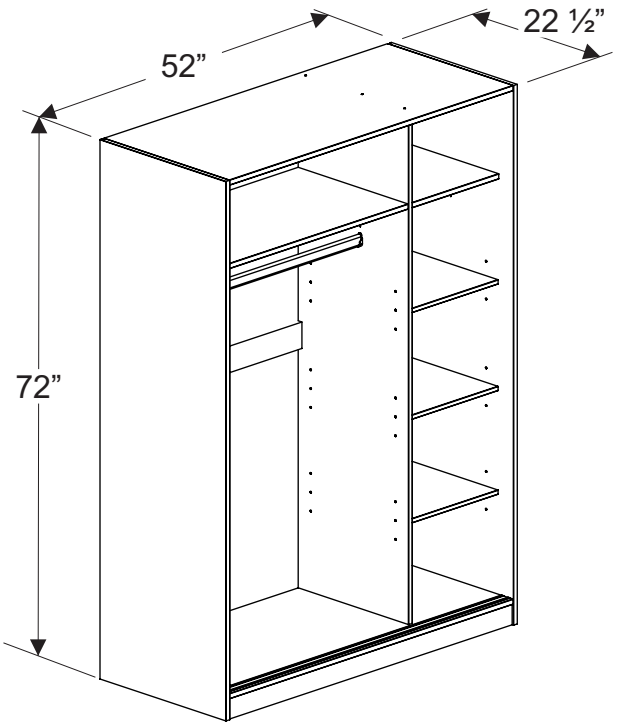





Raised Panel Doors





Louvered Doors

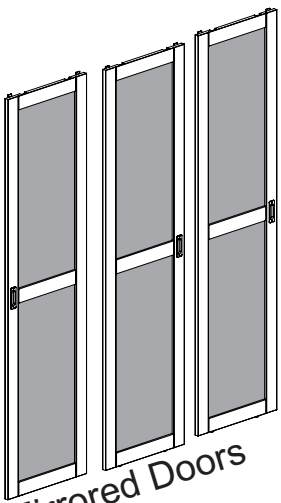

Mirrored Doors

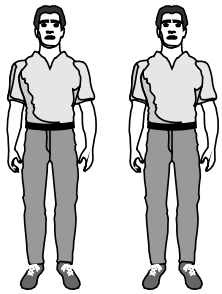

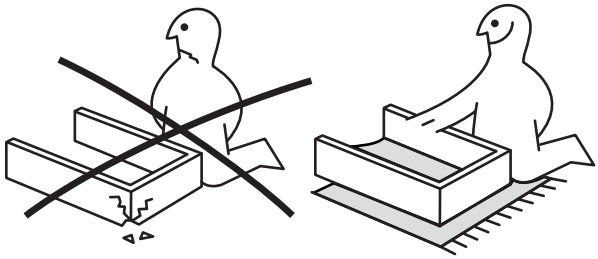


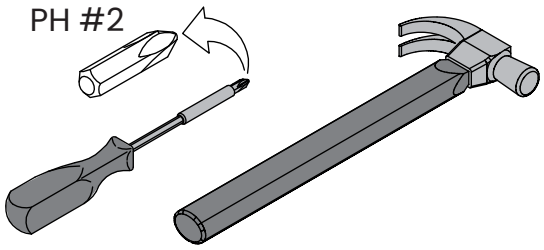


PRE-ASSEMBLY PREPARATION


- Please check the contents before assembling. A full checklist of parts is provided below.
- If any parts are missing or damaged, please contact us
- Assemble on a flat, smooth surface on top of a blanket.
- Use only low-speed power drill setting.
- Assemble as near as possible to the point of use.
- The hardware pack contains SMALL ITEMS which should be KEPT AWAY FROM YOUNG CHILDREN.

PARTS DIAGRAM








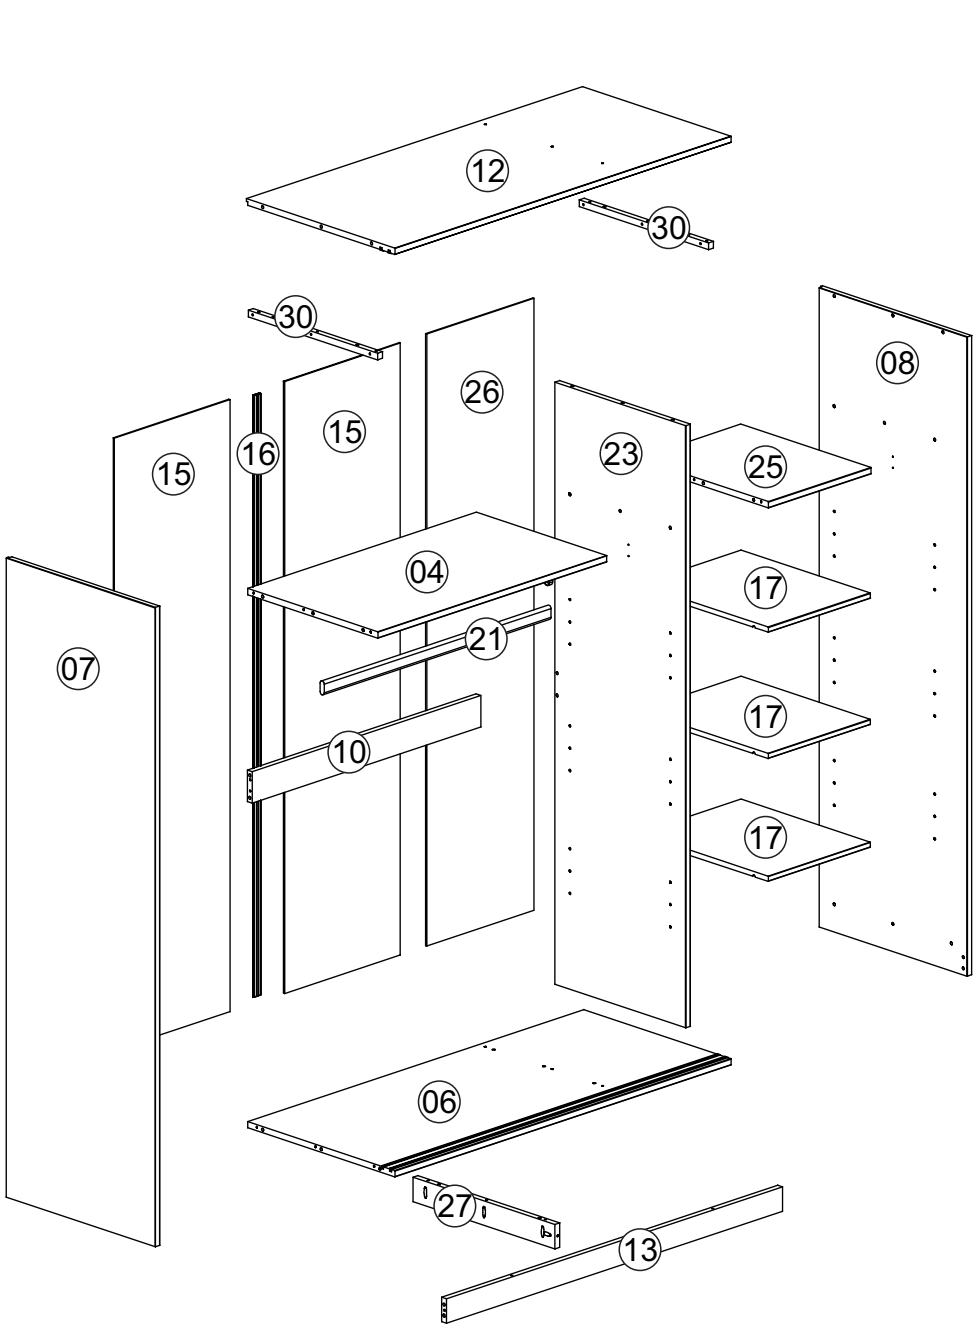



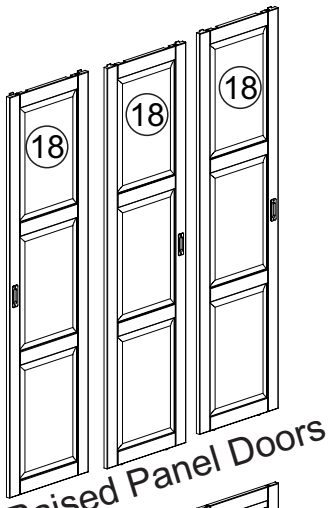




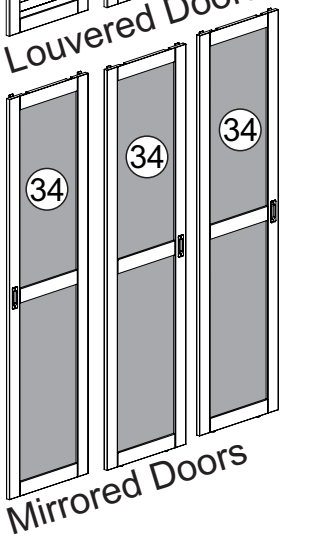

SCREWS ARE SHOWN IN ACTUAL SIZE

A1	 4,0x30	42+2
A3	 3,0x16	06+1
A4	 3,5x14	04+1
A9	 3,5x16	28+1
A16	 4,0x40	06+1
C2	 8,0x25	44+2
D4		12+1
D10		02
D27		05
E15		06
E16		06
G1	10x10	53
H2		03

FURNITURE ANTI-TIP KIT		
A8	 3,0x20	02+1
F8		02
F9		01


WARNING:
CHOKING HAZARD
Small Parts.
Adult Supervision Required.
Not for children under 3 years old.

WARNING:

FURNITURE TIPOVER CAN RESULT IN SERIOUS INJURY OR DEATH


This wardrobe includes tipover-prevention hardware that MUST BE ATTACHED TO THE WALL per the assembly instructions.

01)

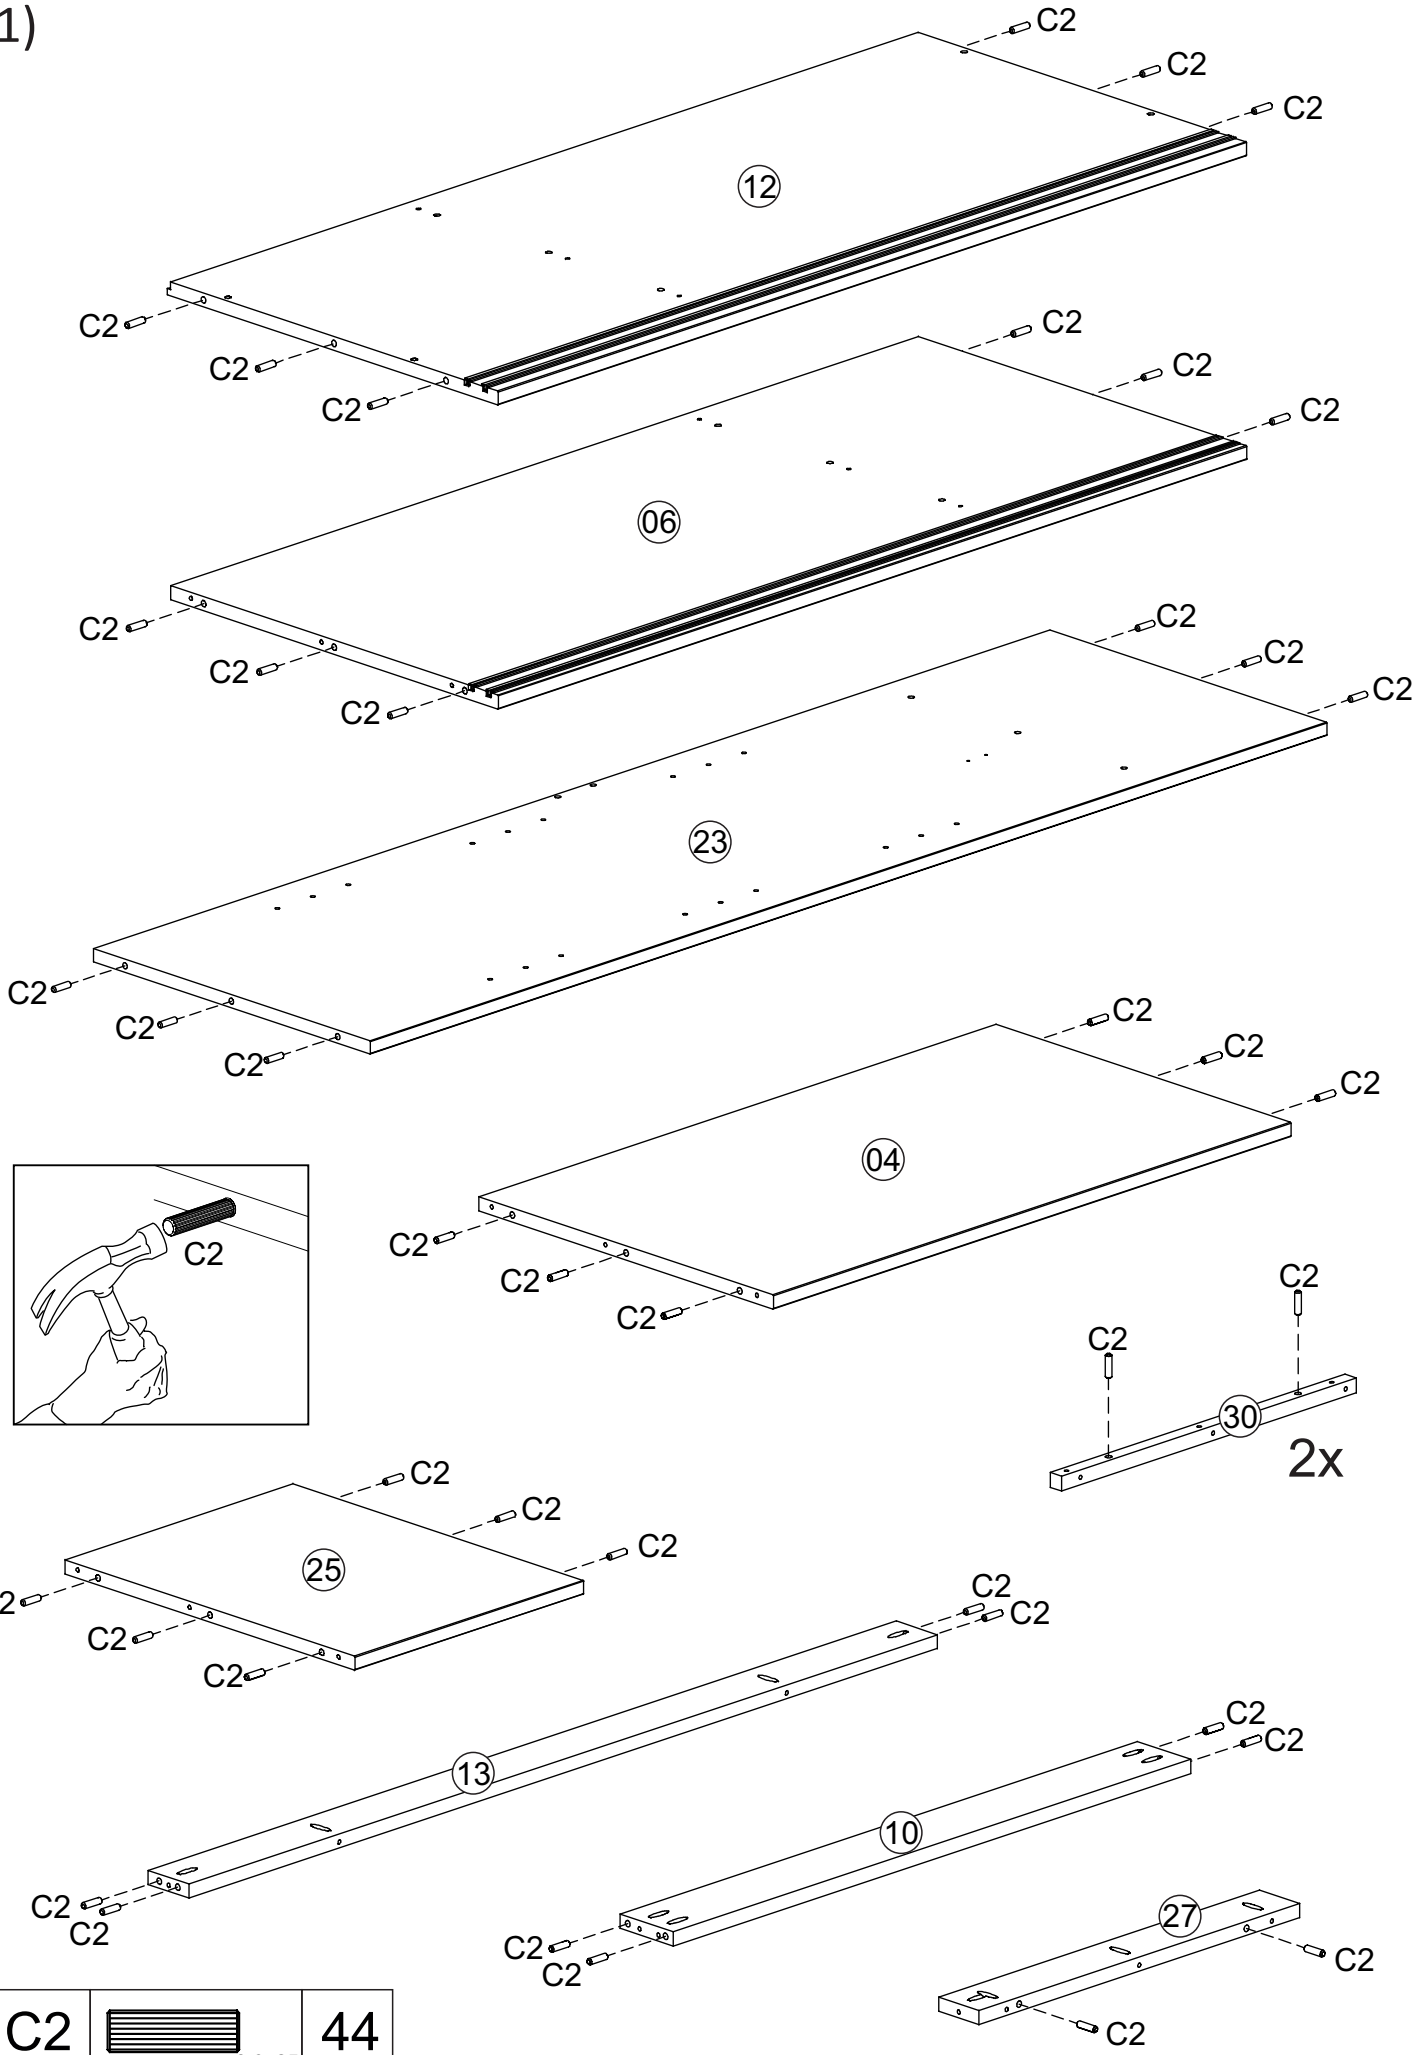

C2	8,0x25	44


02)

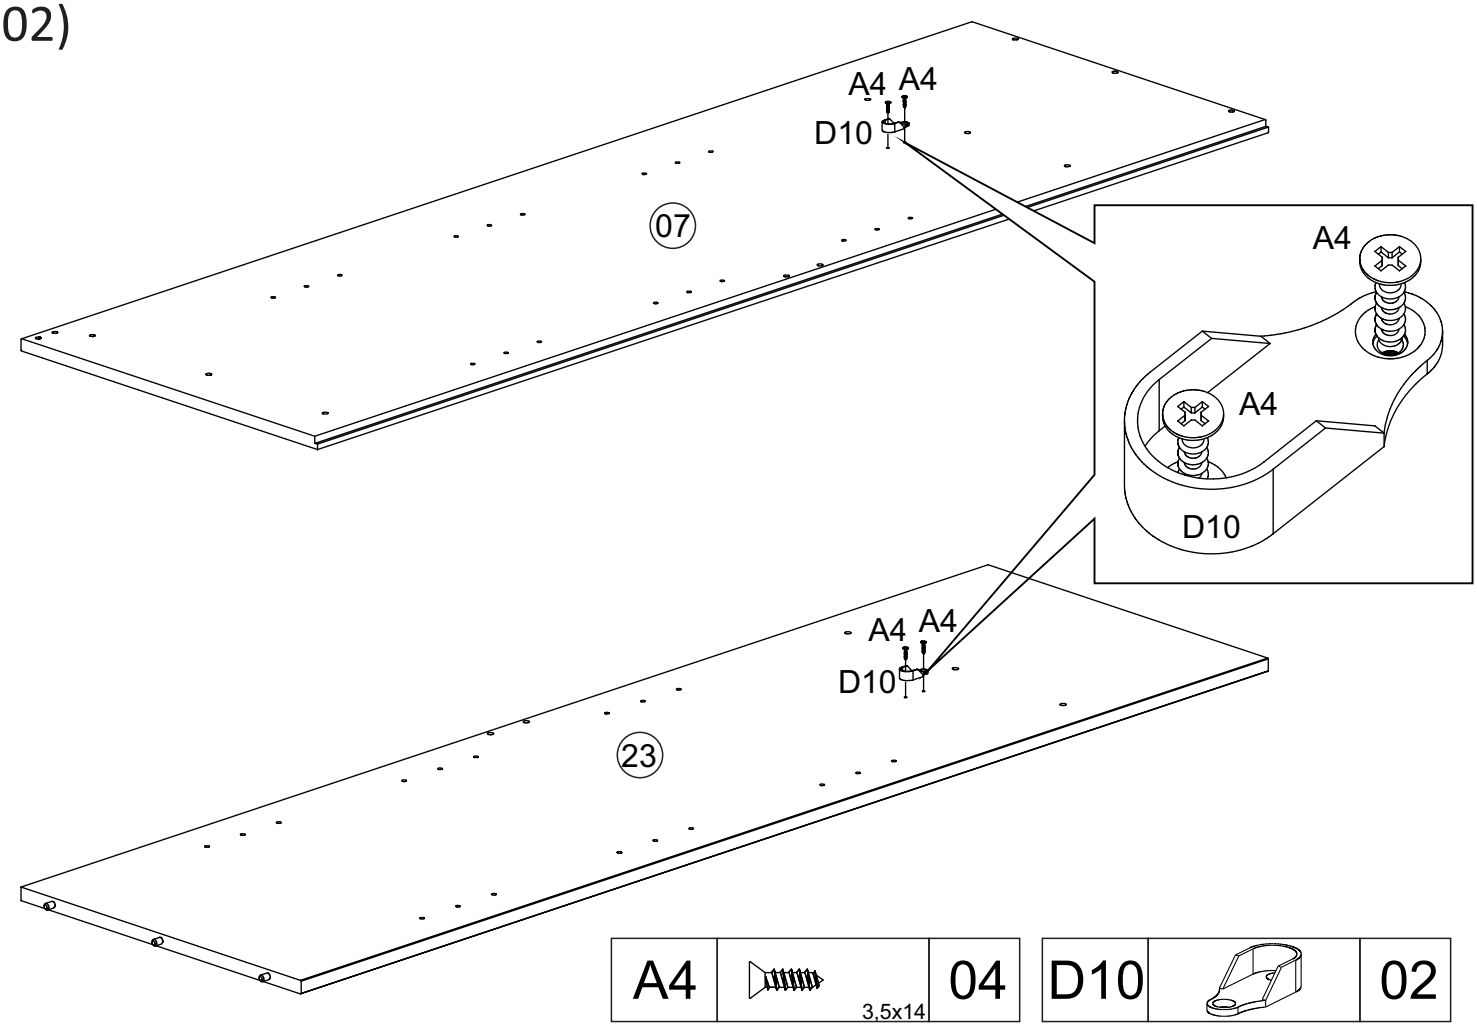

A4	3,5x14	04


D10		02

03)

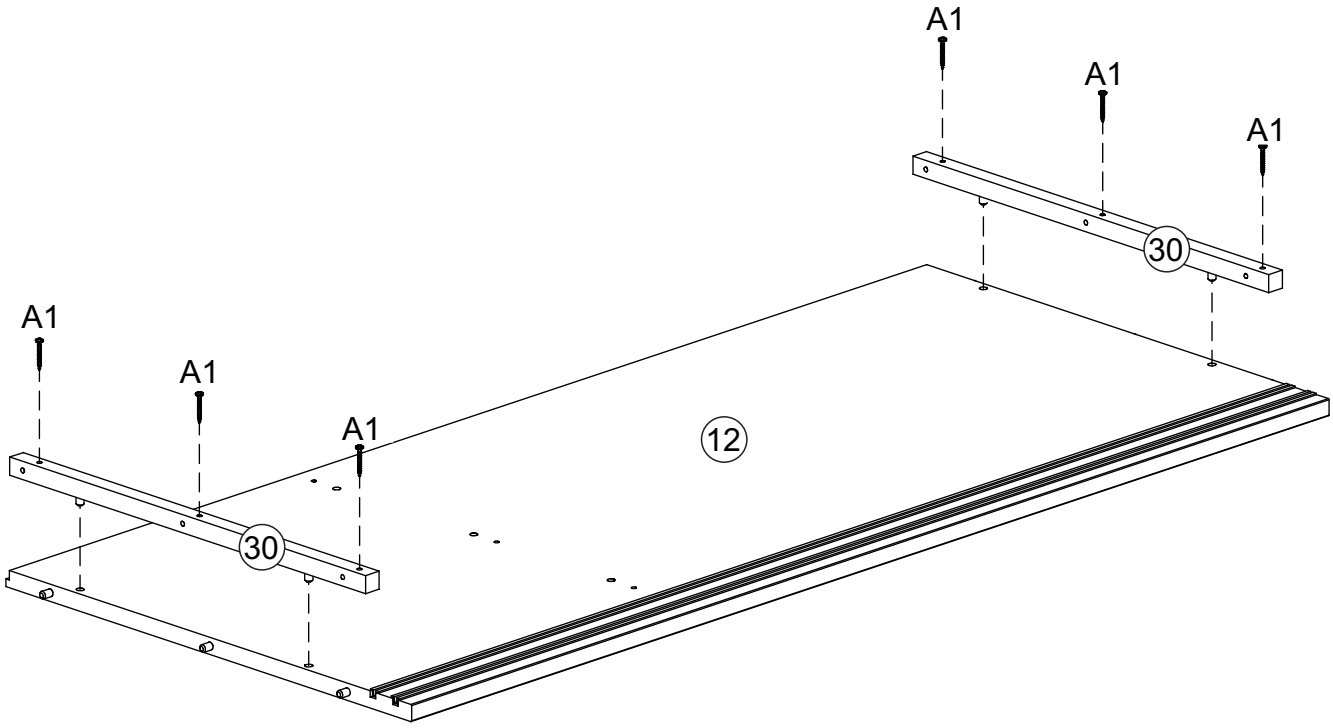


A1	4,0x30	06

04)

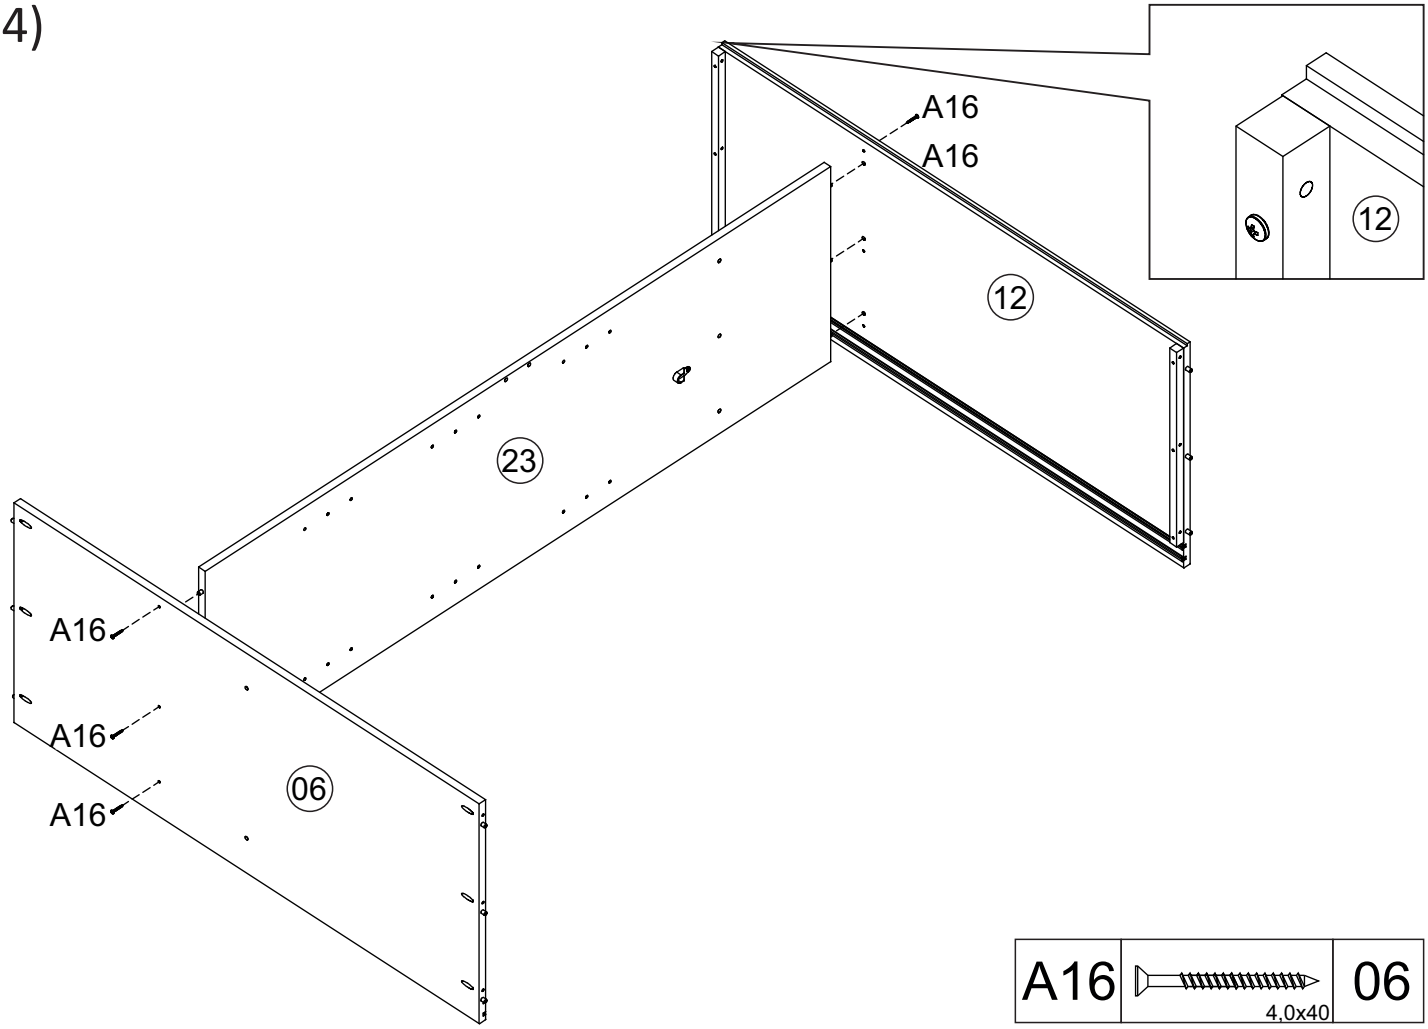


A16	4,0x40	06

05)

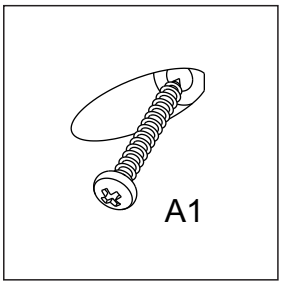


A1	4,0x30	03

06)

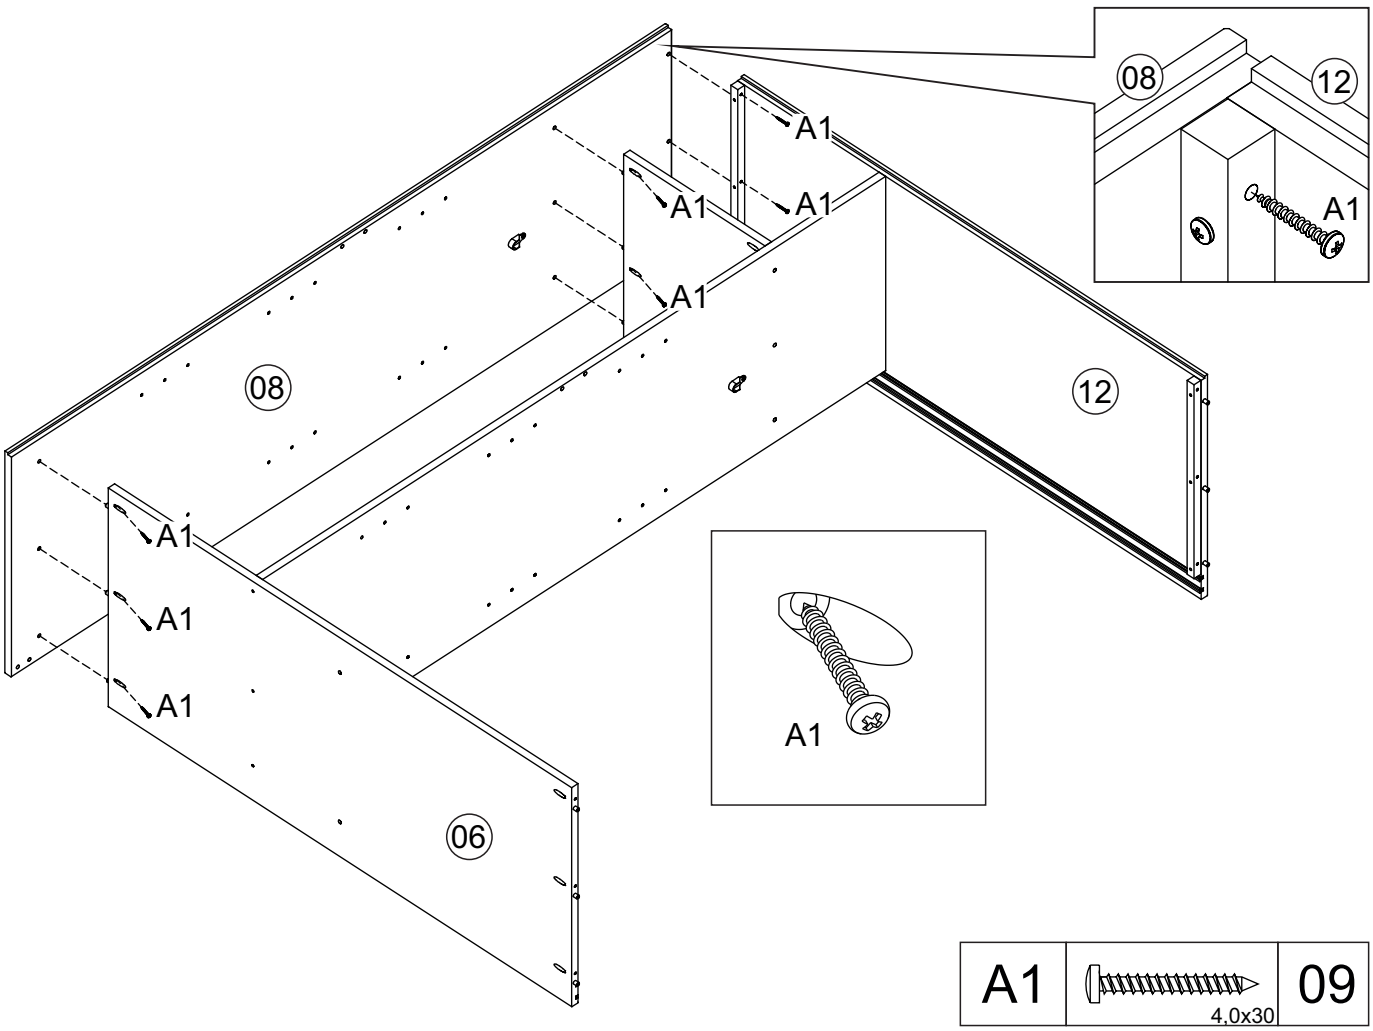


A1	4,0x30	09


07)

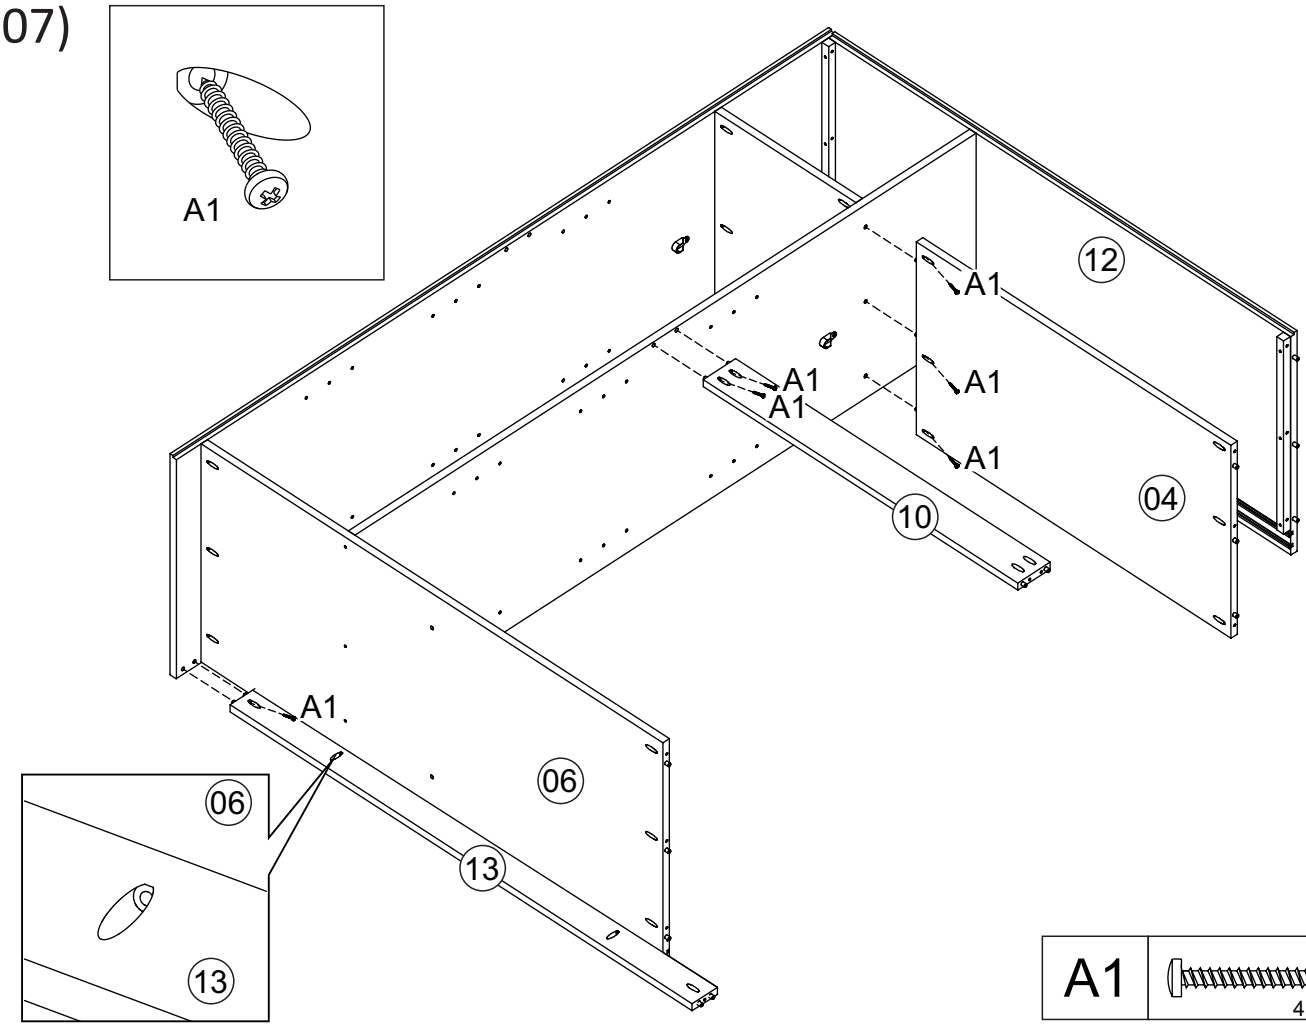


A1	4,0x30	06


08)

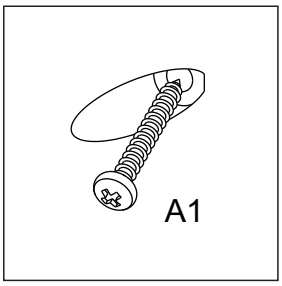

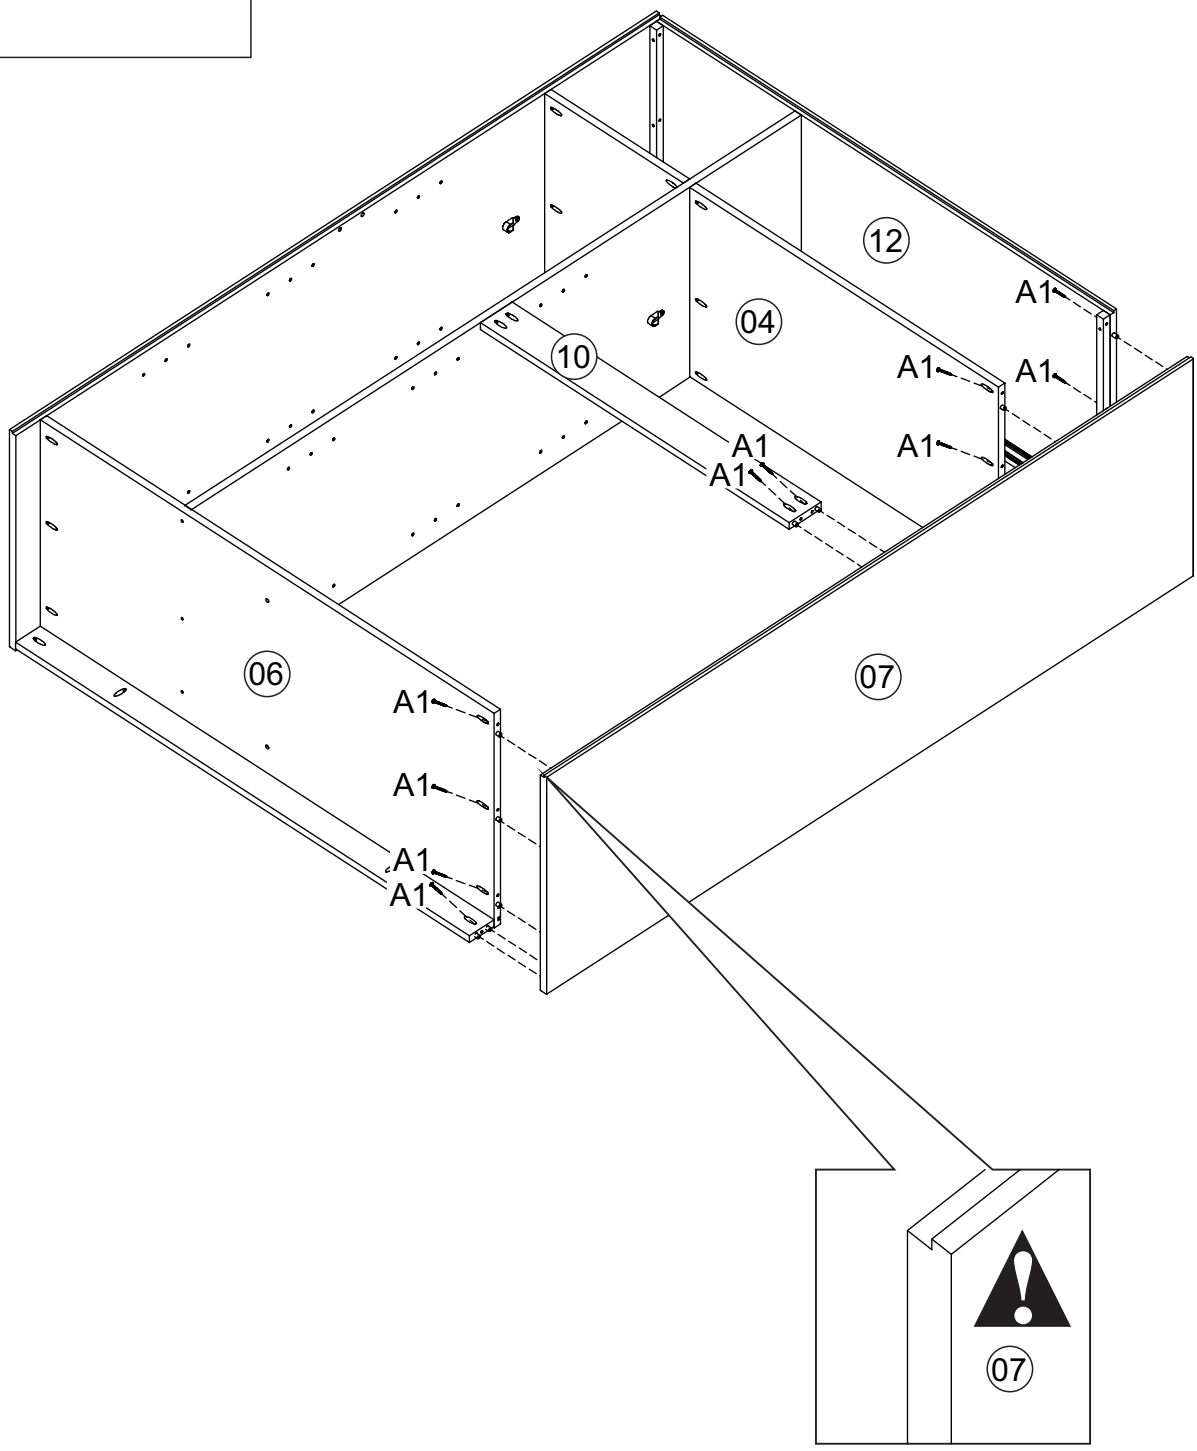


A1	 4,0x30	12

09)

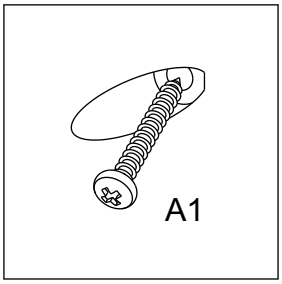


A1	4,0x30	04

10)

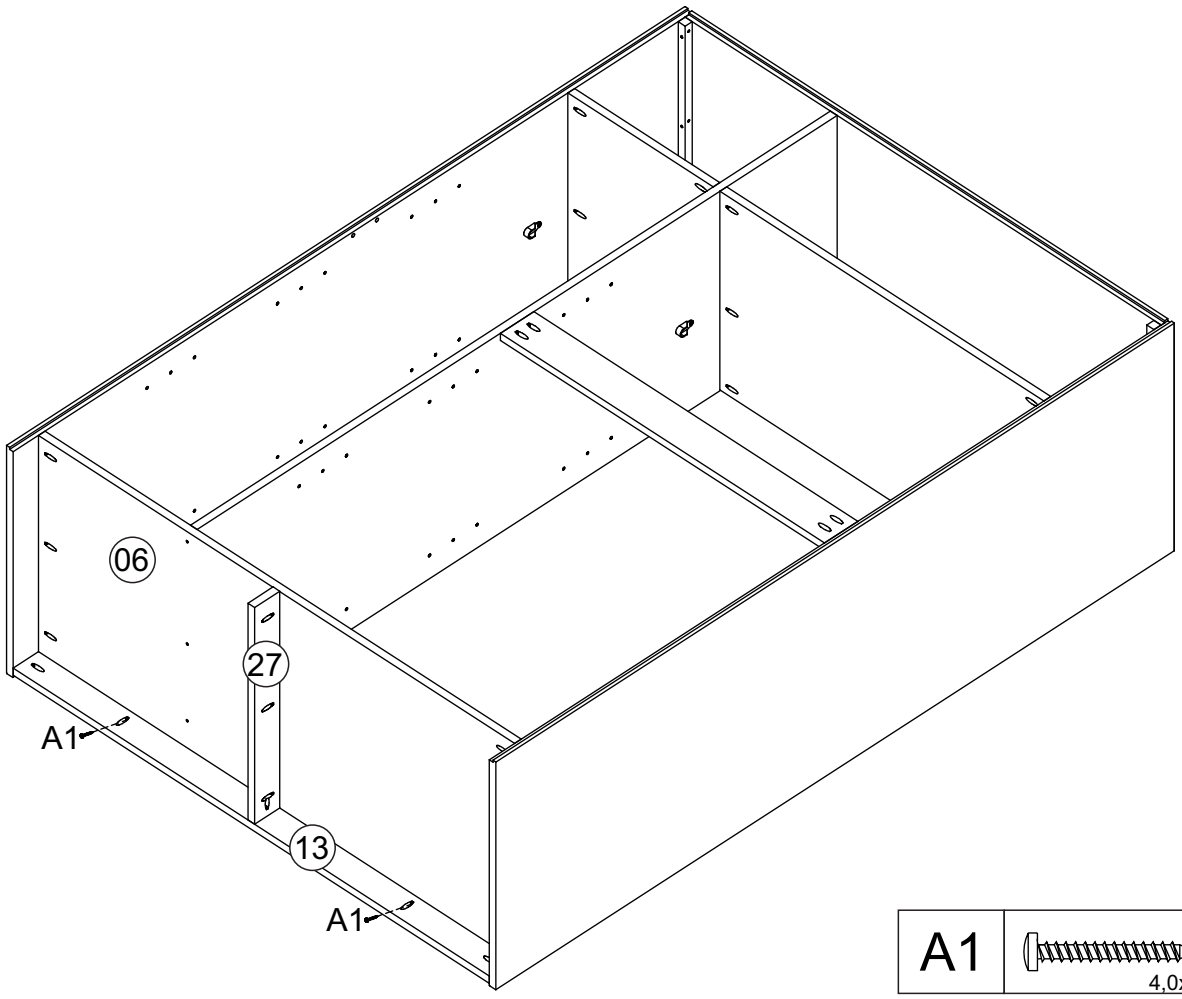


A1	4,0x30	02

11)

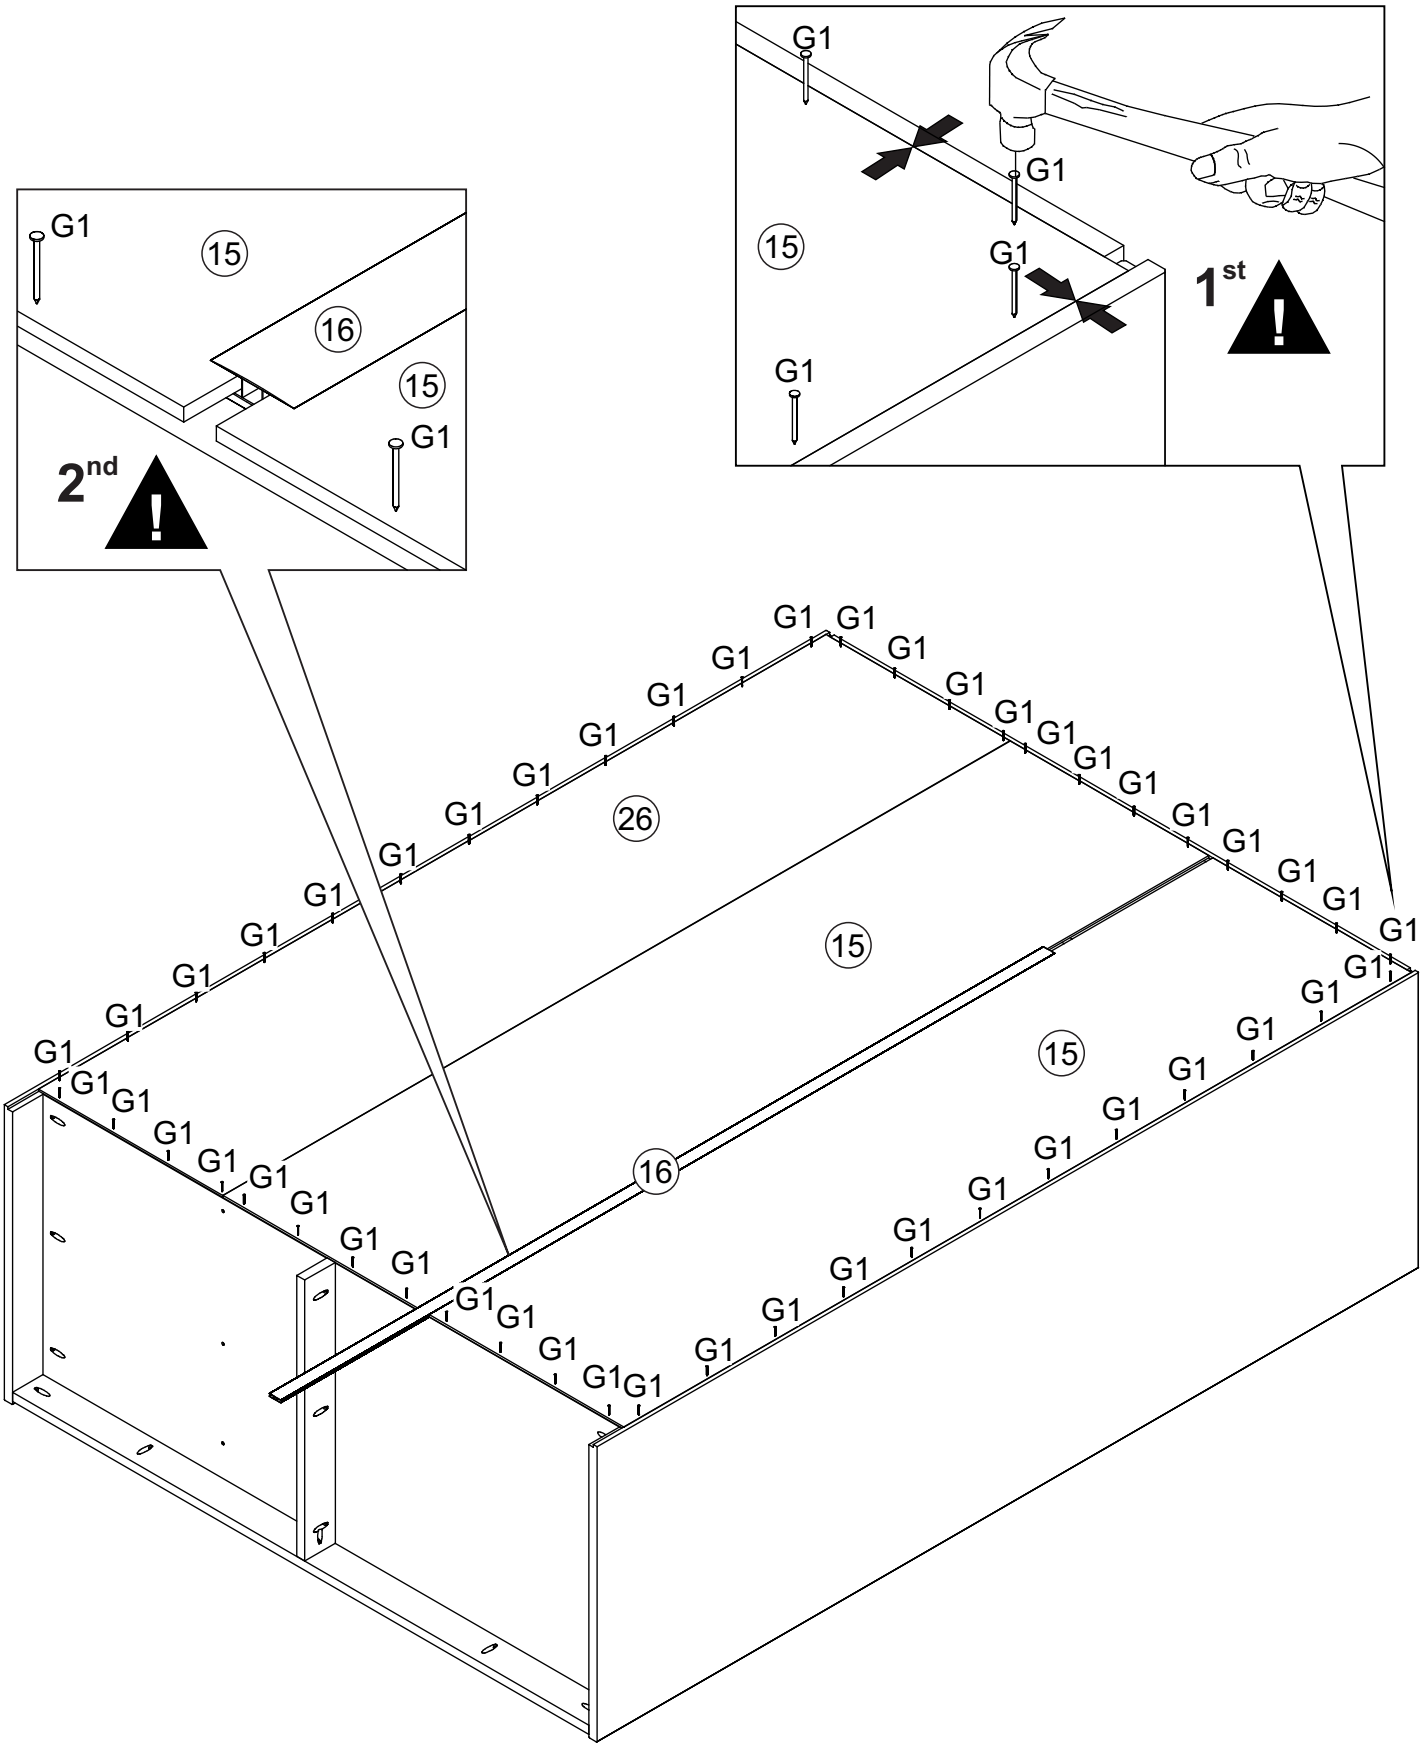



G1	10x10	48

12)

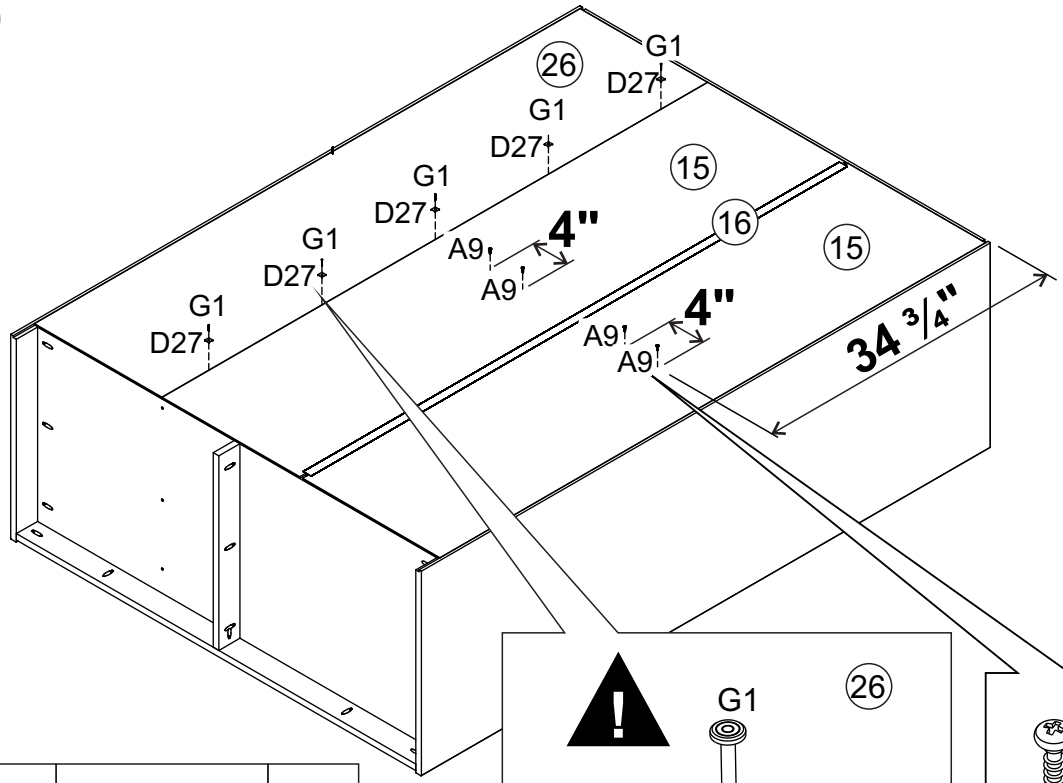



A9	3,5x16	04
D27		05
G1	10x10	05

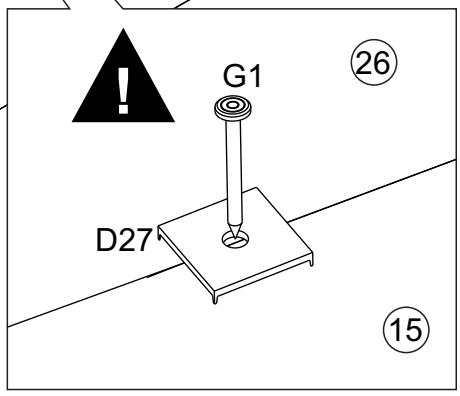


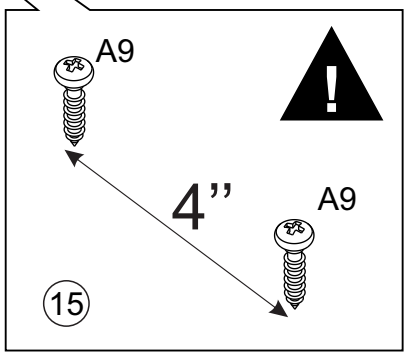

13)

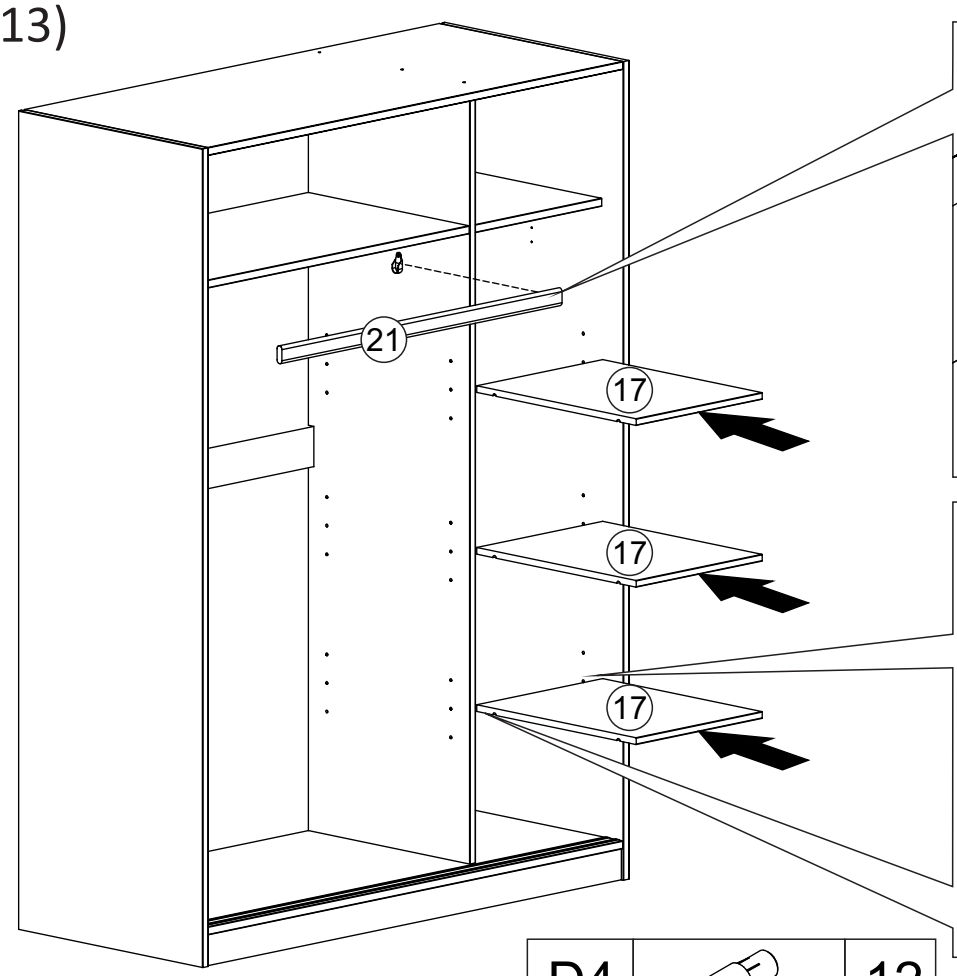


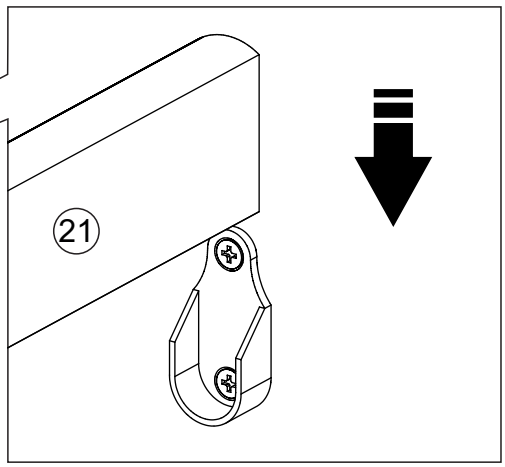

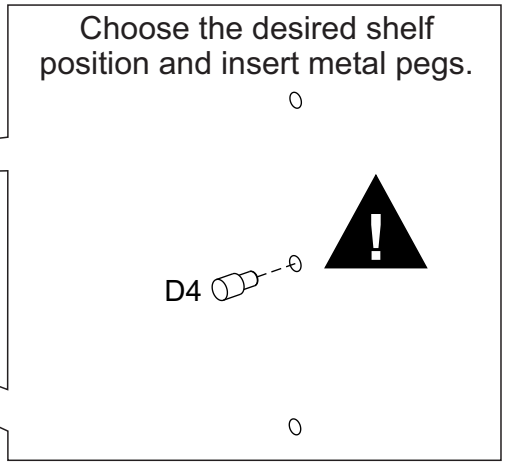


D4		12

14) Raised Panel Doors

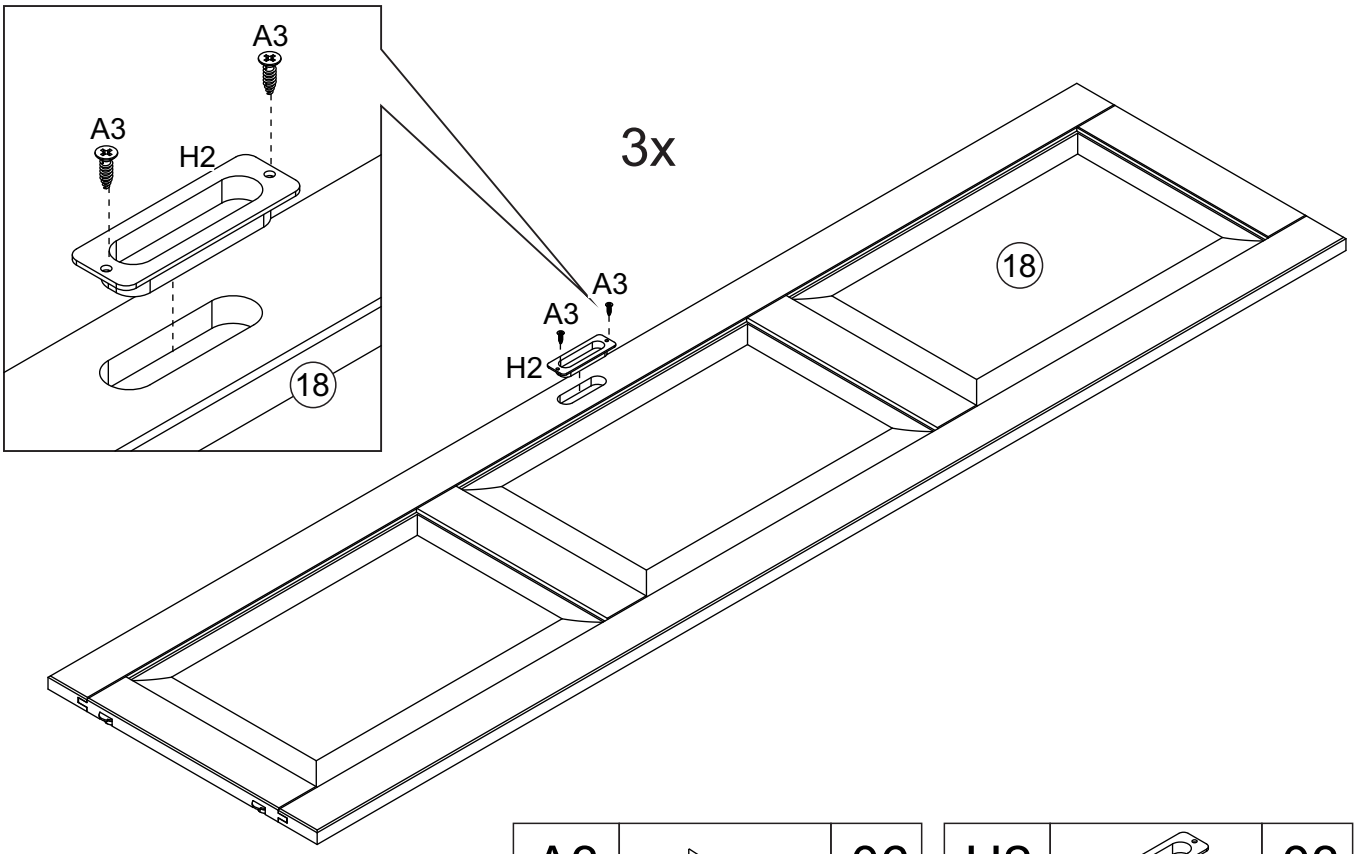


A3	3,0x16	06
H2		03

15) Raised Panel Doors

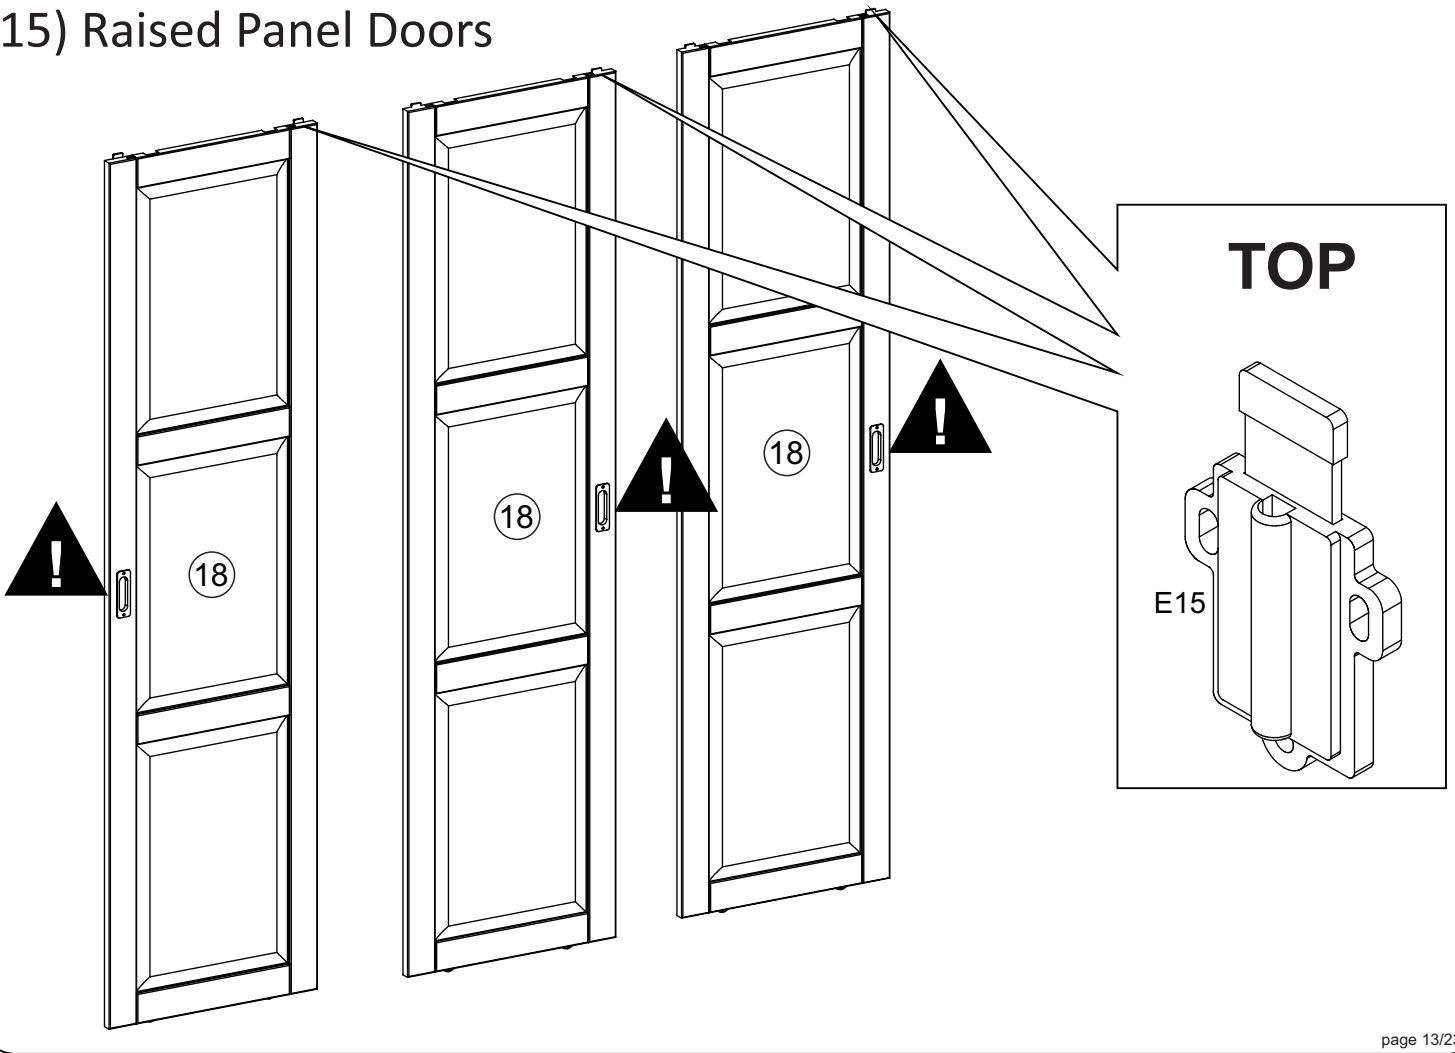


16) Raised Panel Doors

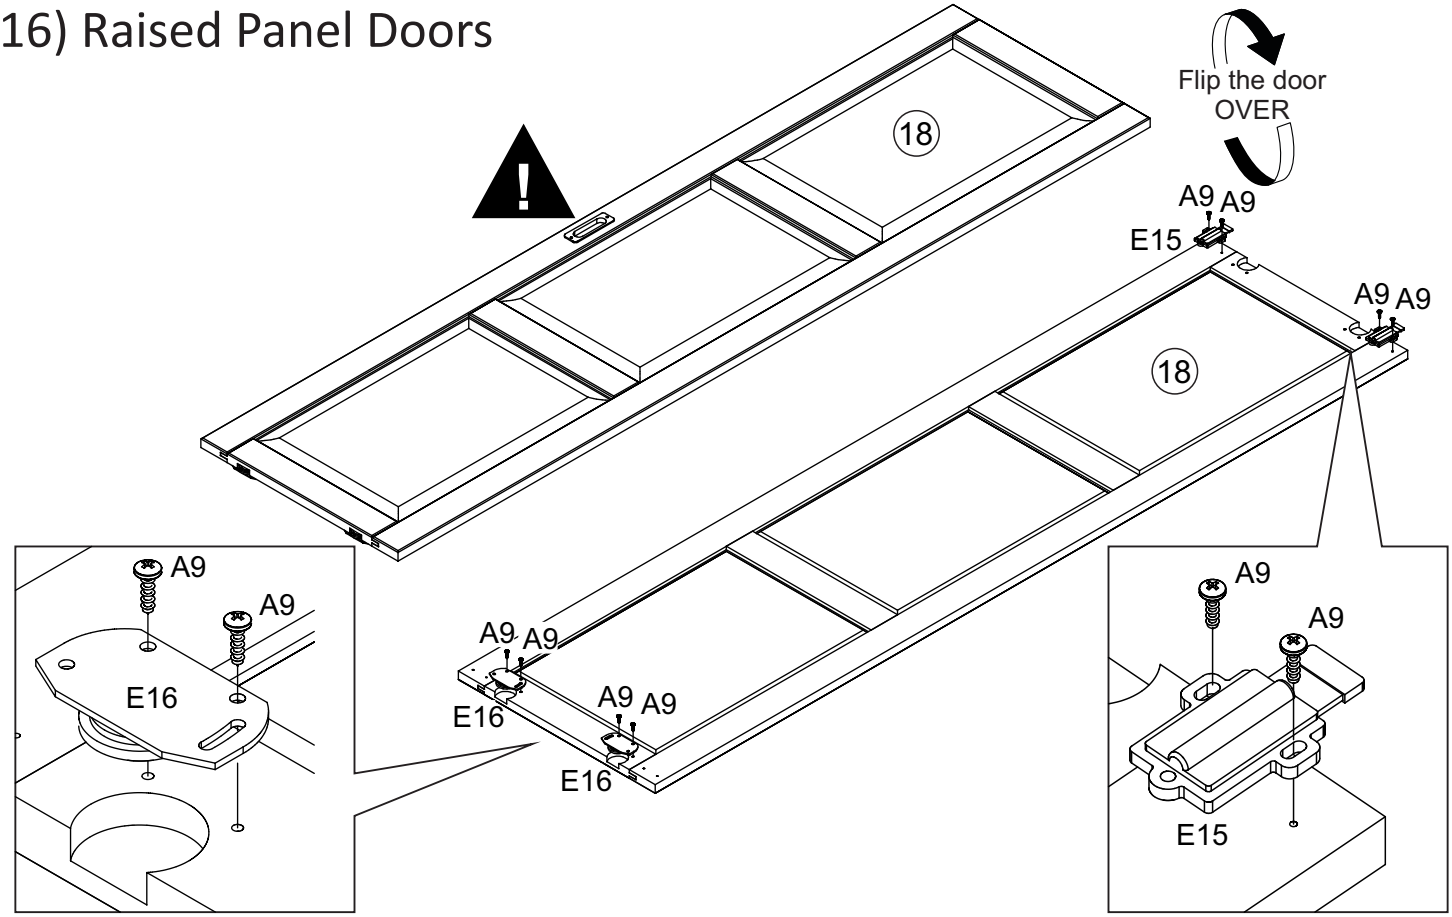


A9	3,5x16	08
E15		02
E16		02

17) Raised Panel Doors

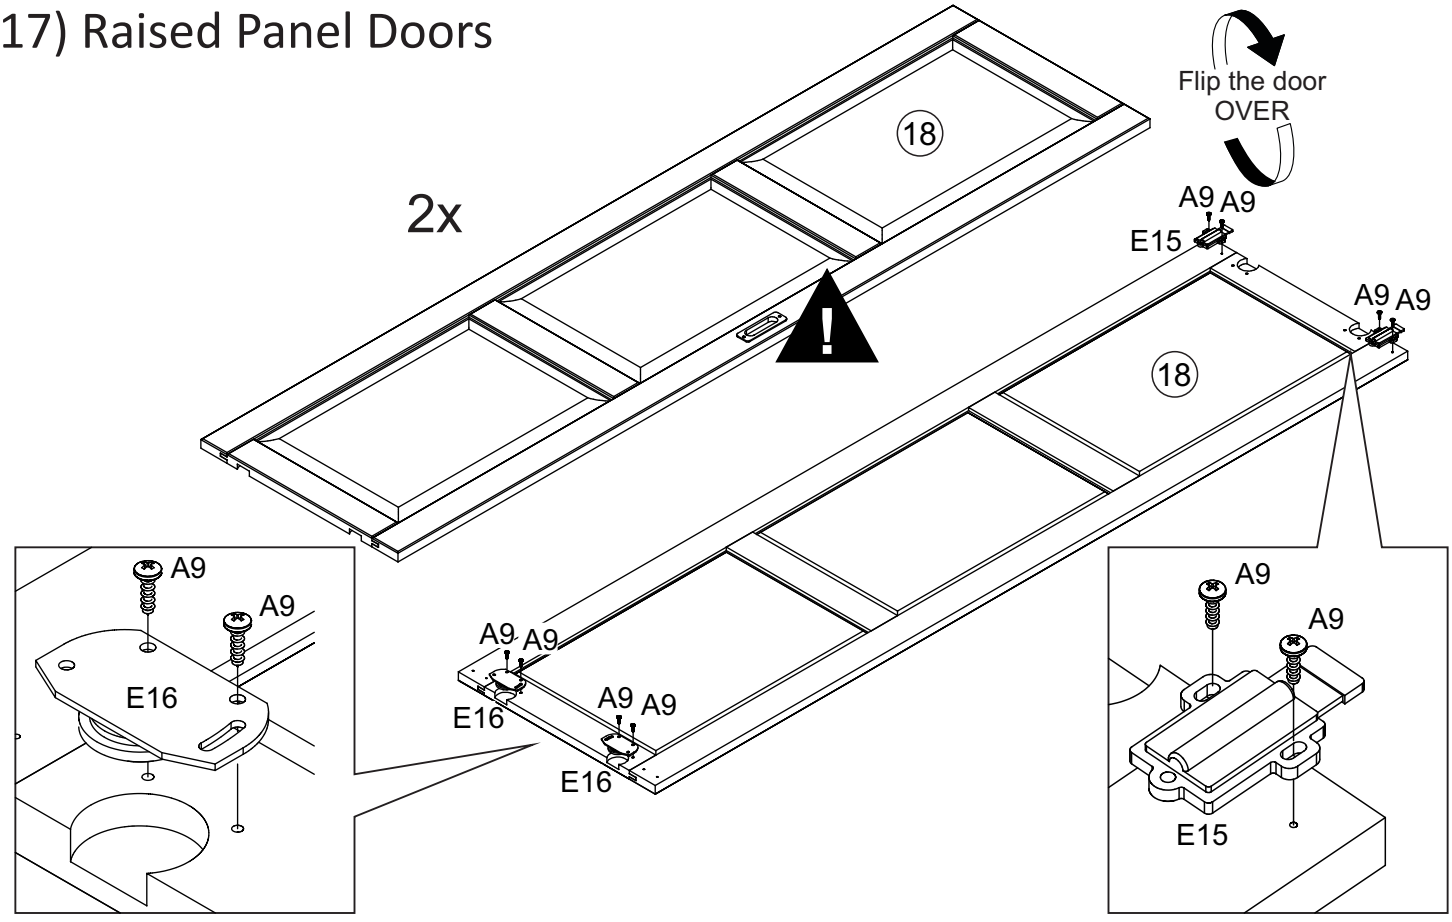


A9	3,5x16	16
E15		04
E16		04


18) Raised Panel Doors

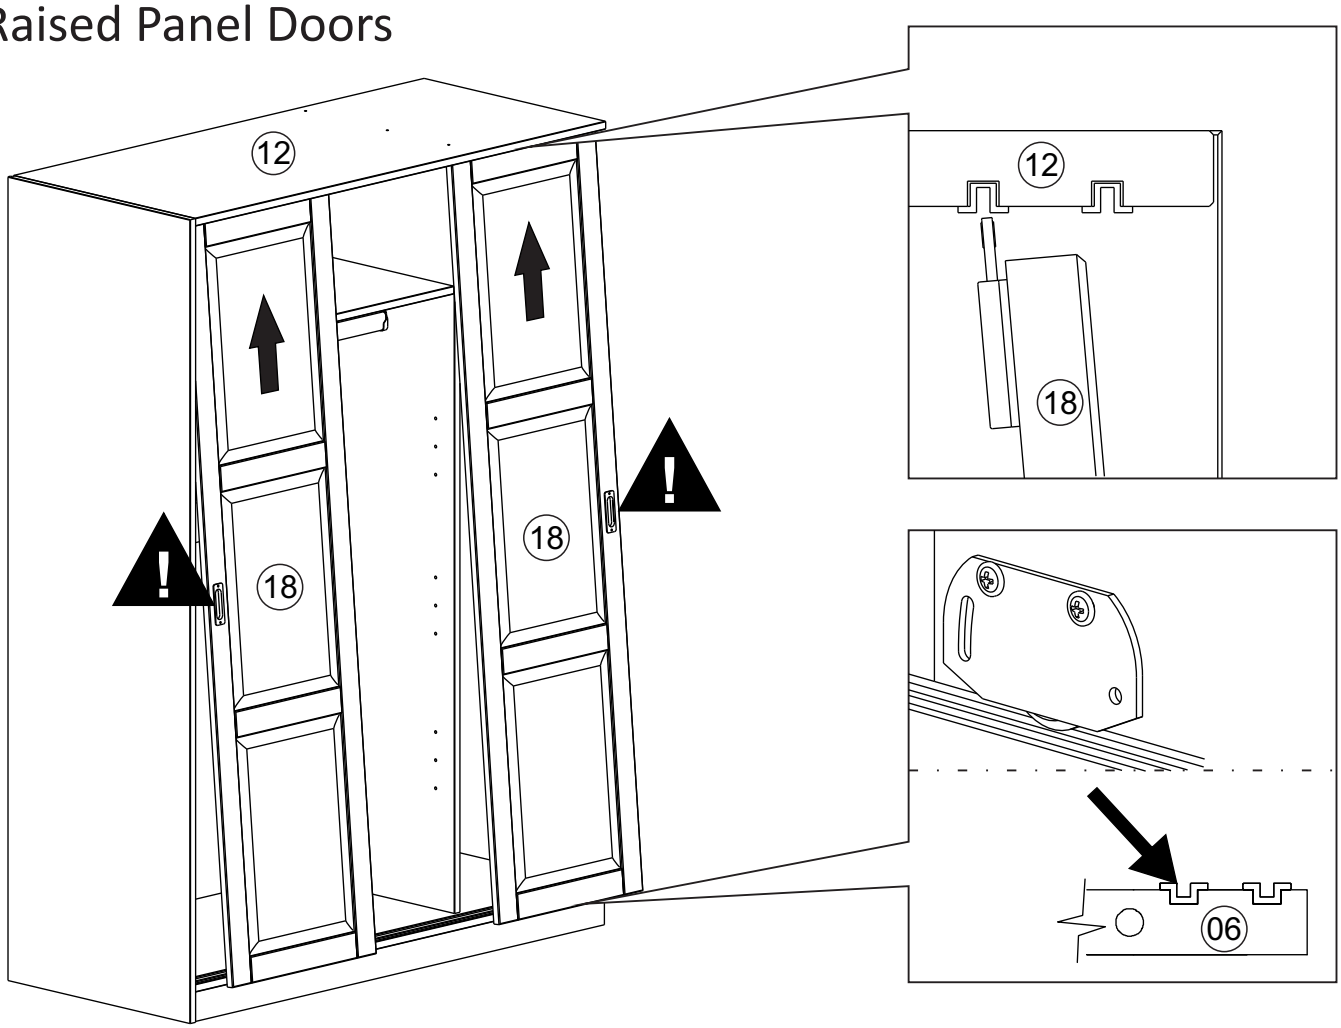

19) Raised Panel Doors

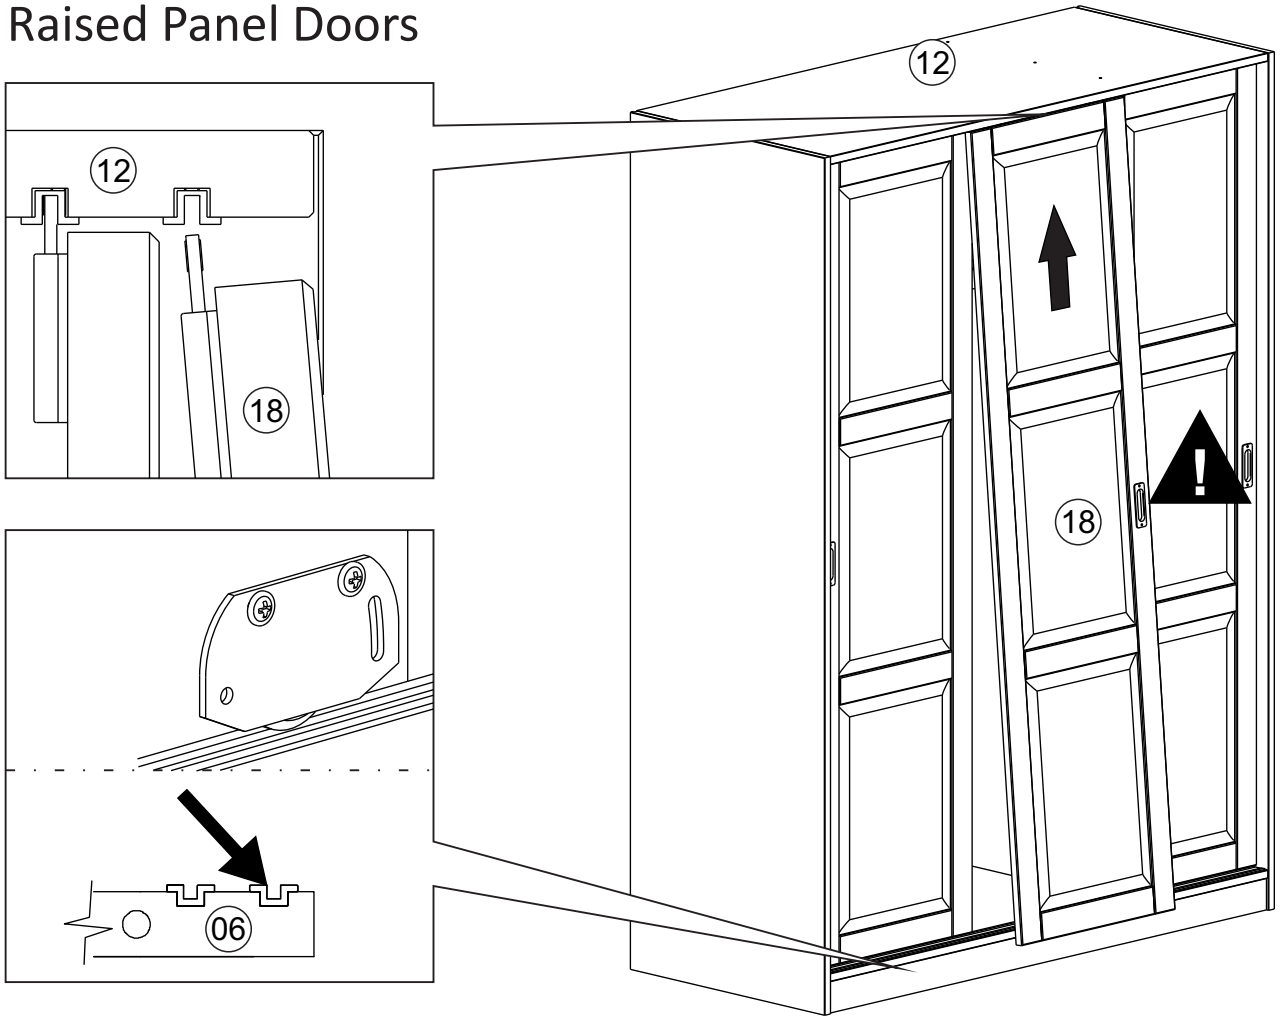


14) Louvered Doors

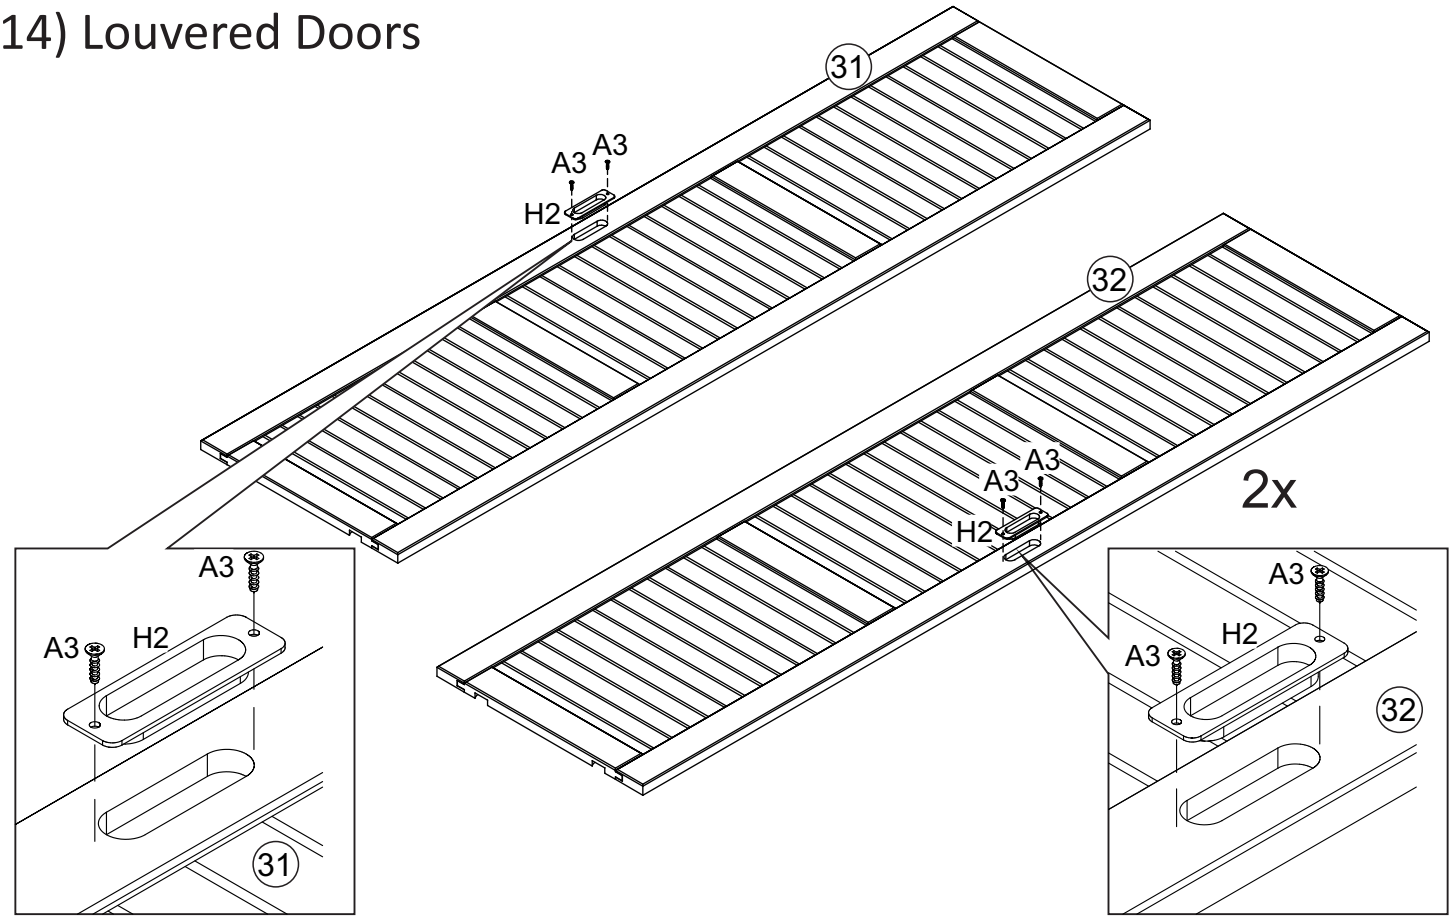


A3	3,0x16	06
H2		03

15) Louvered Doors

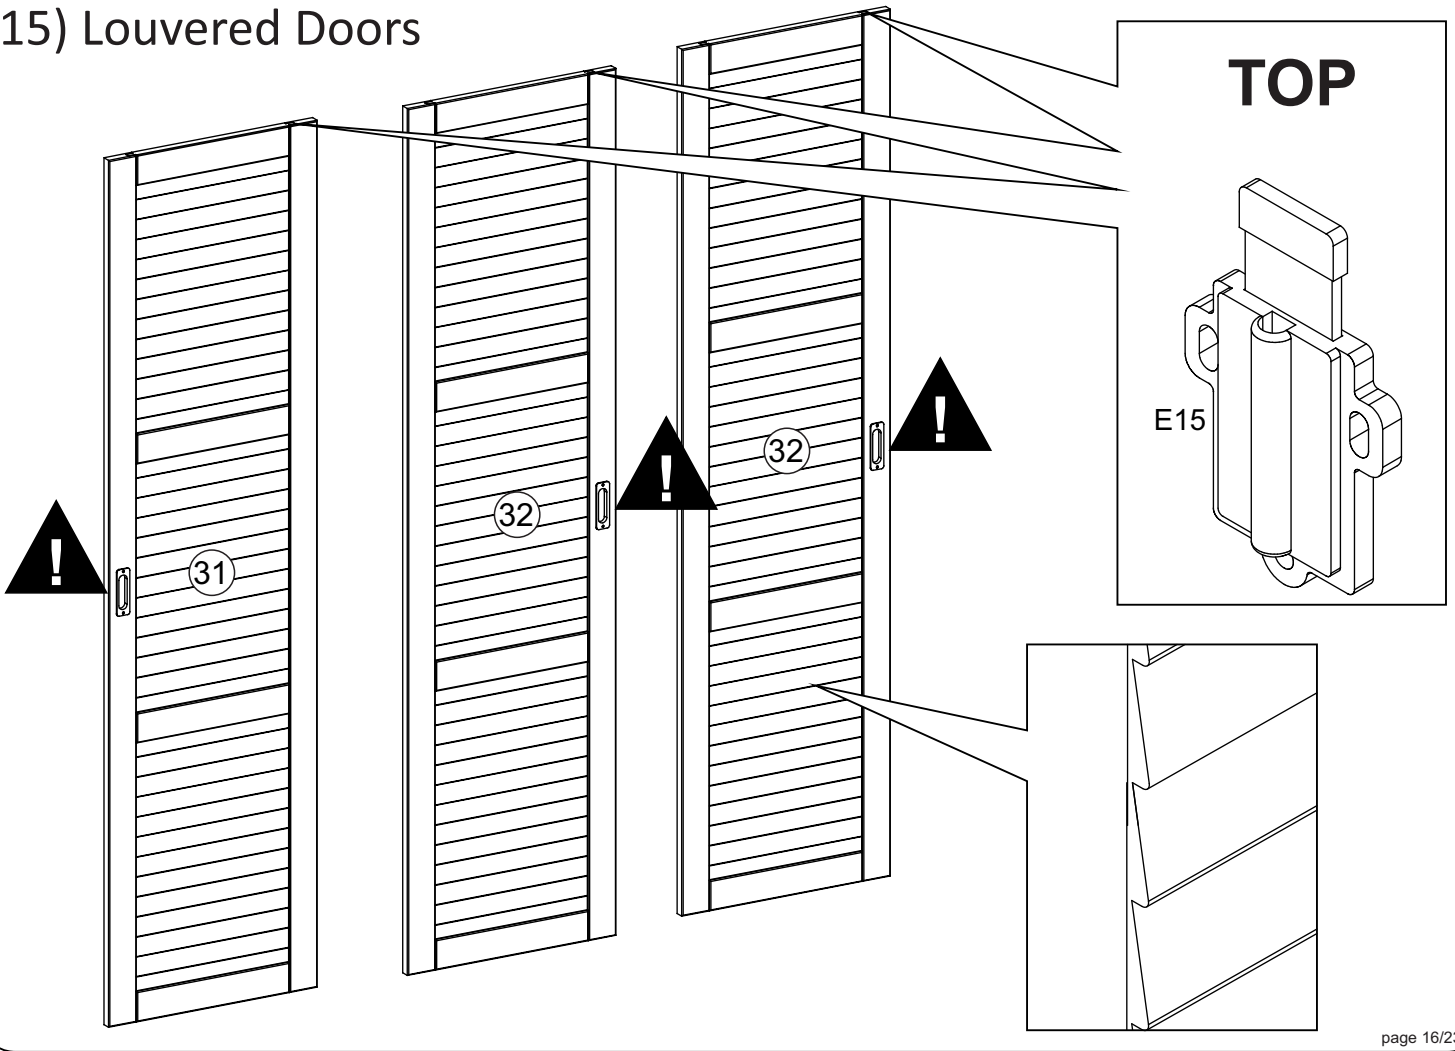


16) Louvered Doors

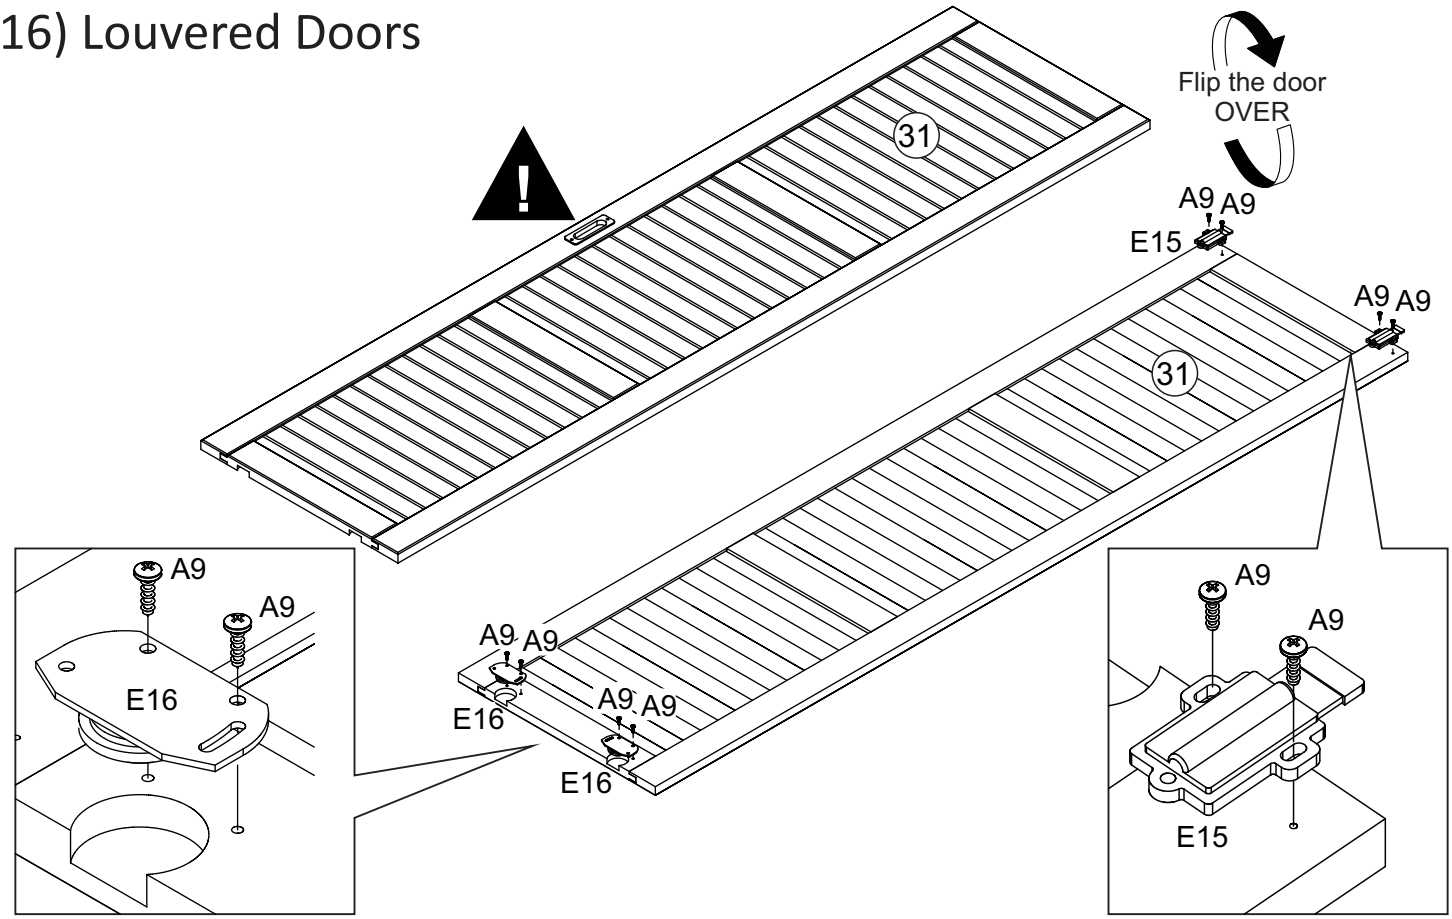


A9		08	E15		02	E16		02
	3,5x16							

17) Louvered Doors

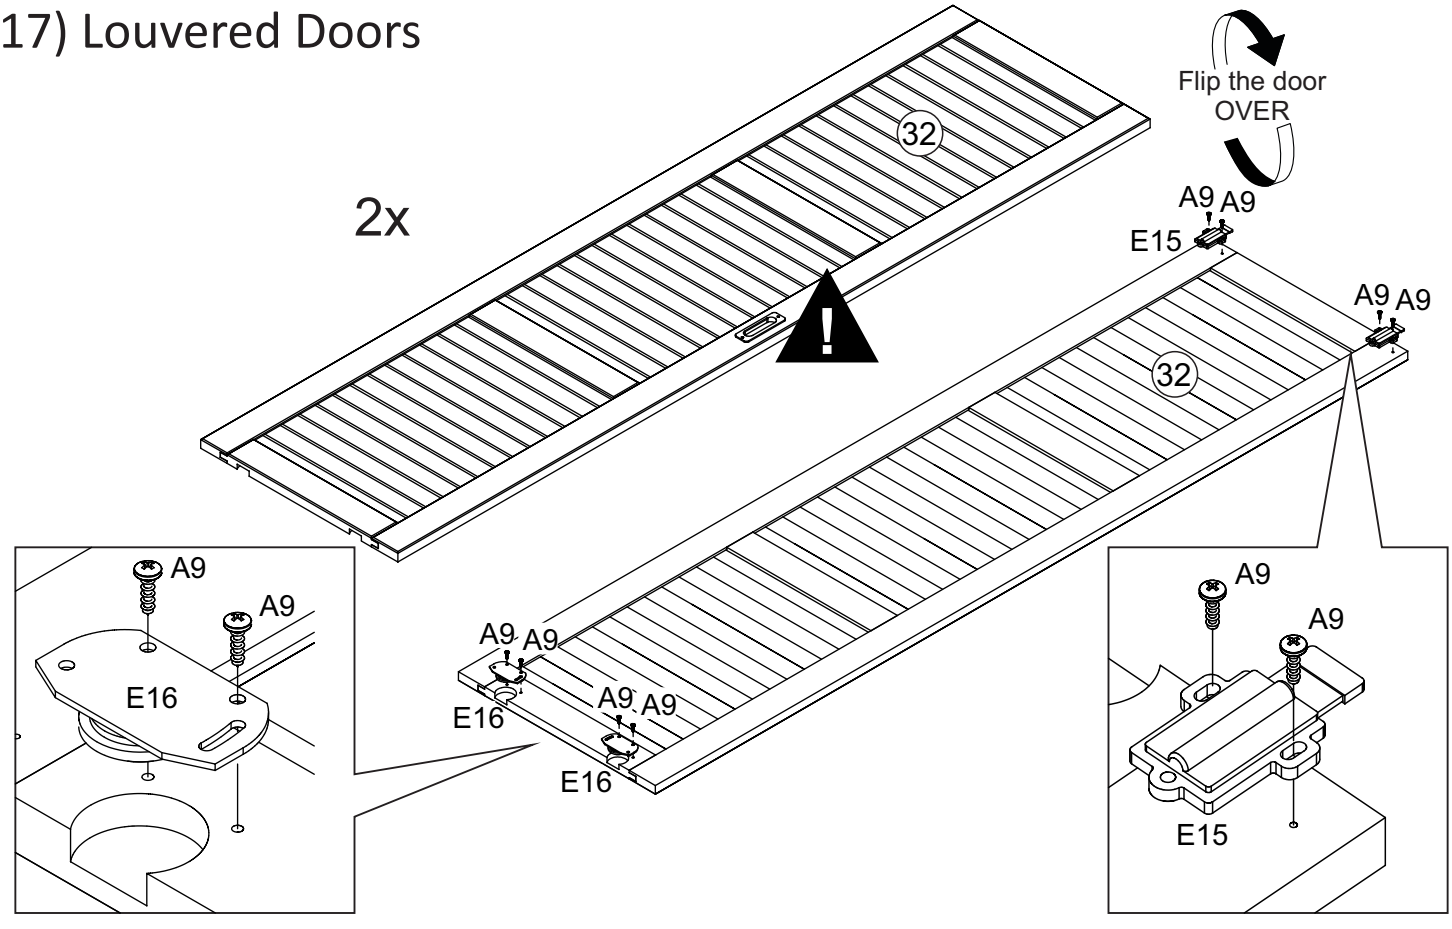


A9		16	E15		04	E16		04
	3,5x16							


18) Louvered Doors

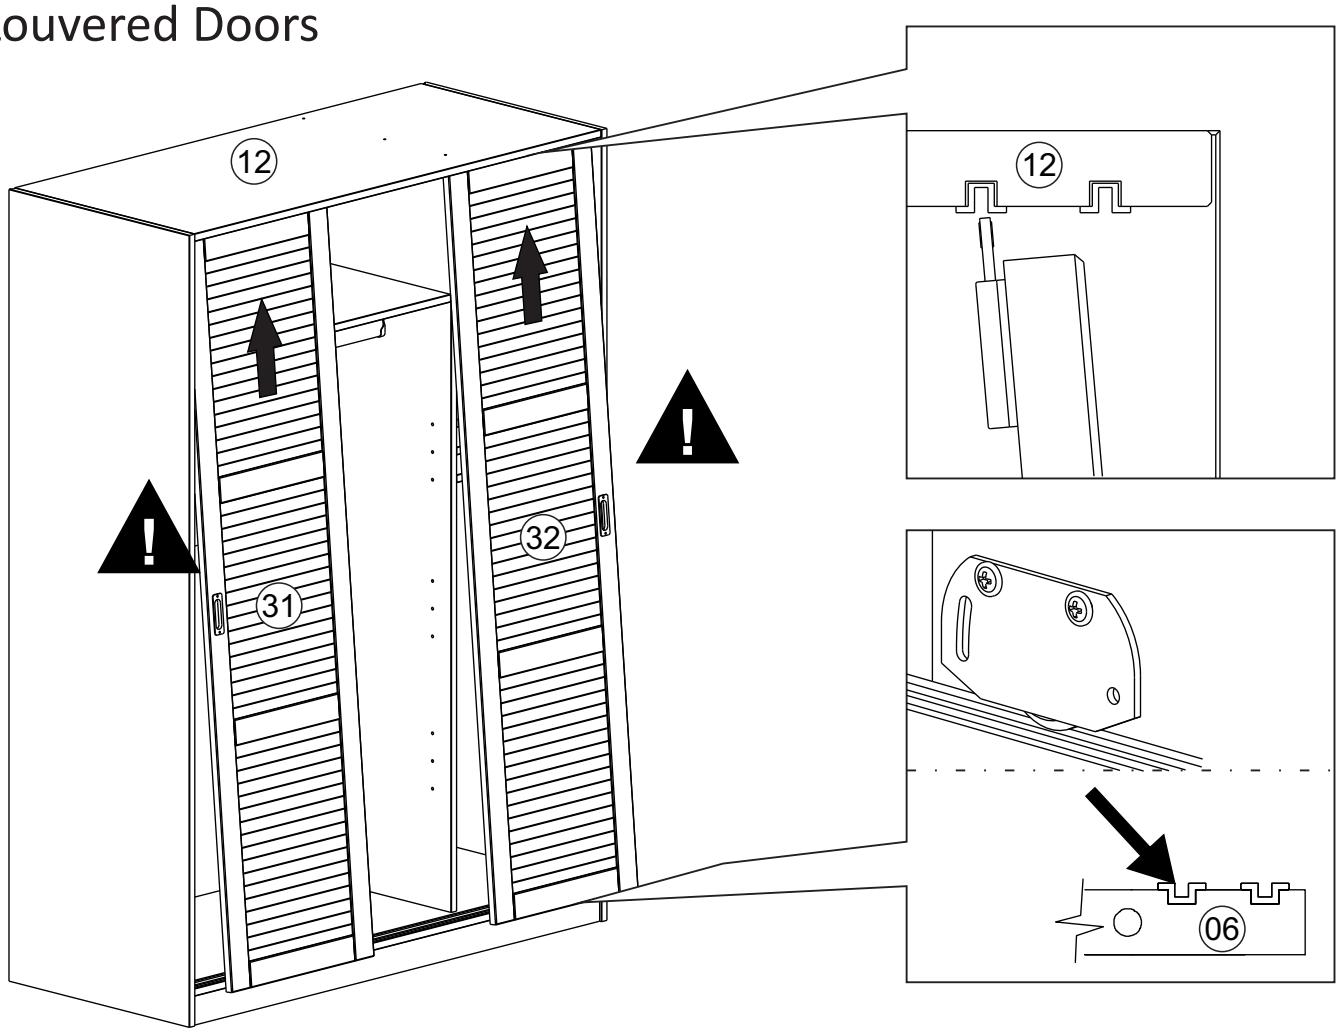

19) Louvered Doors

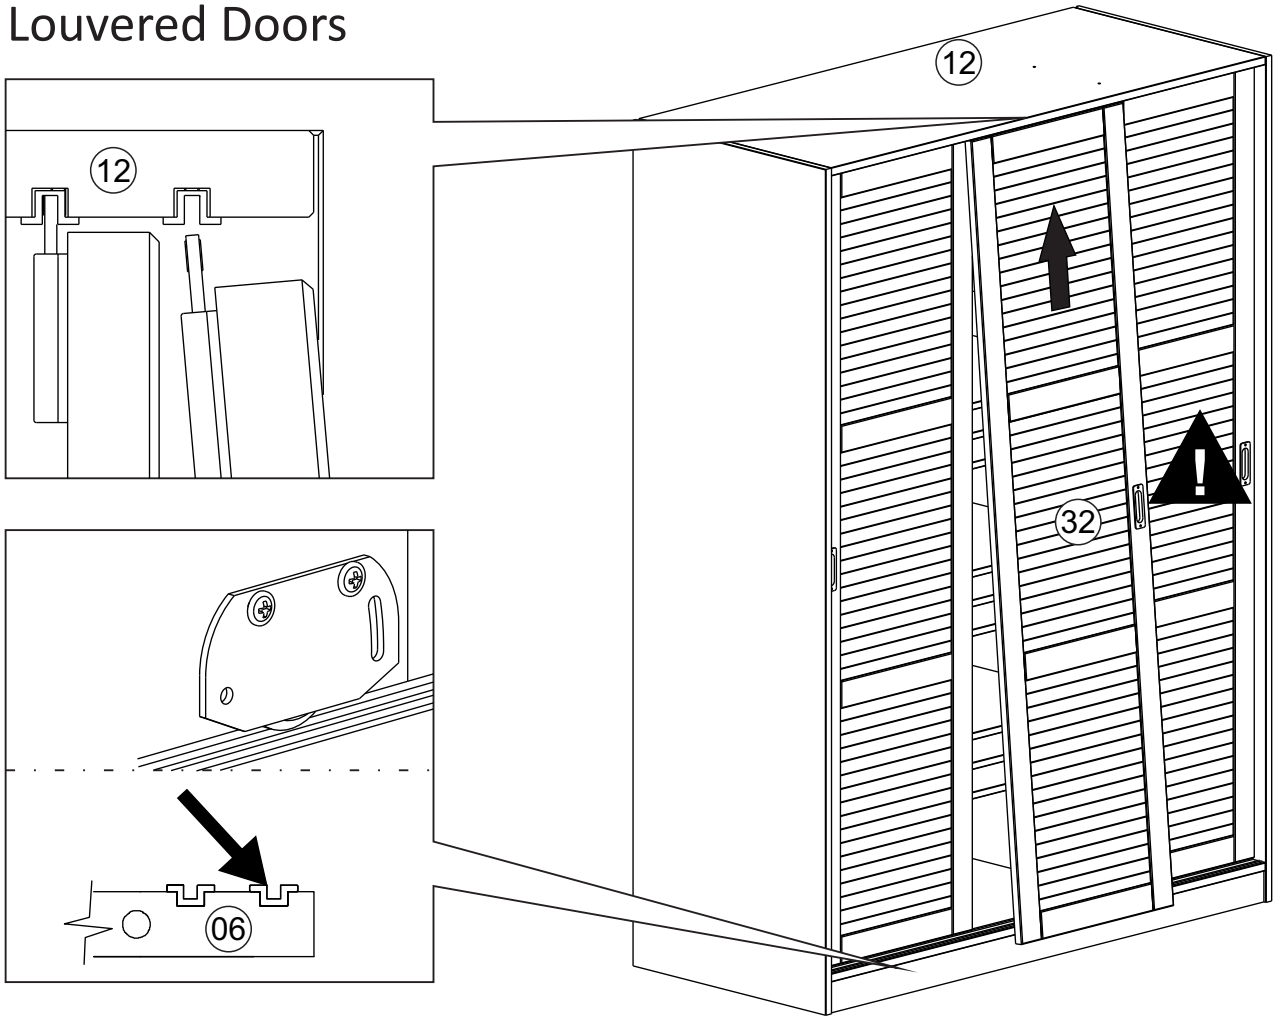


20) Mirrored Doors

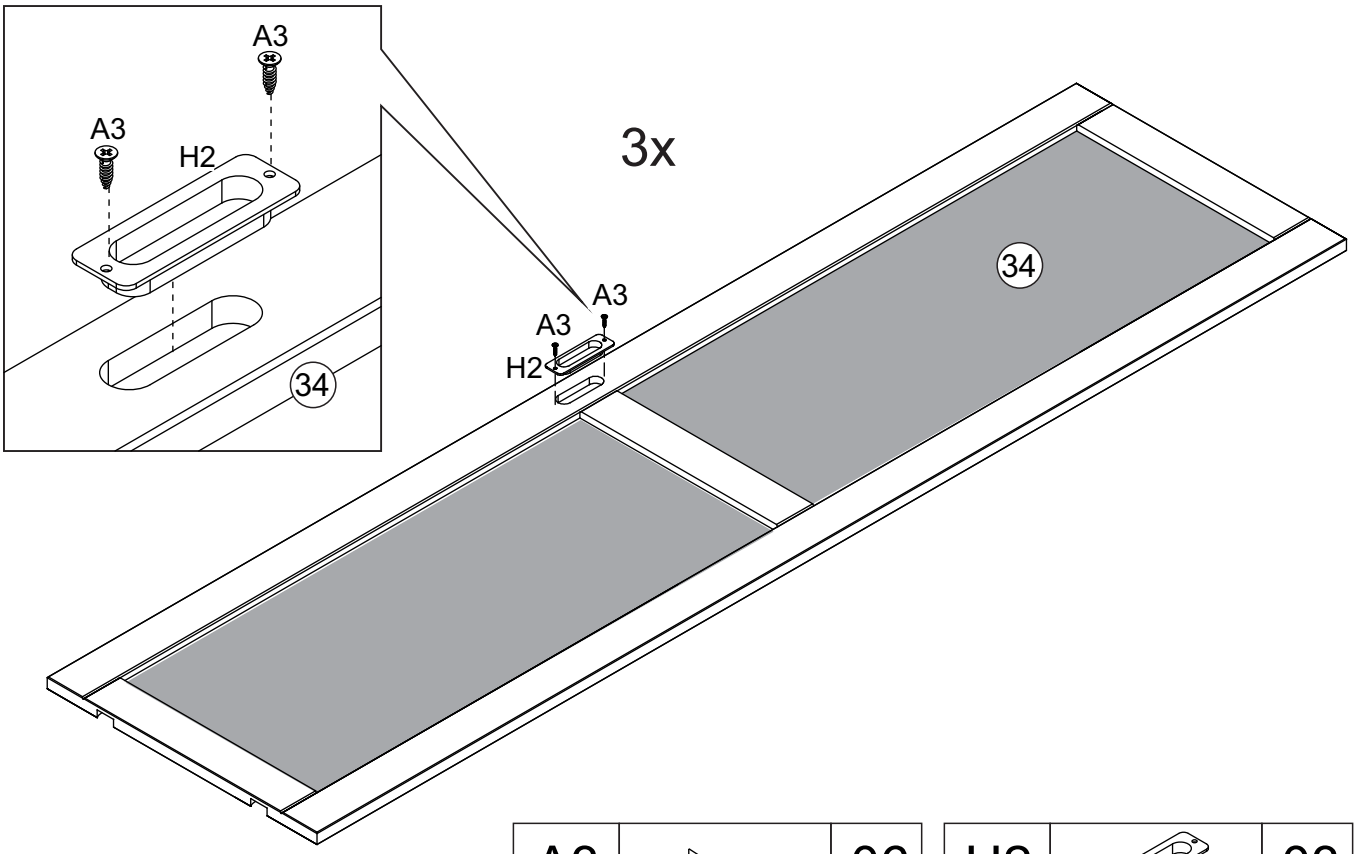


A3	3,0x16	06	H2		03

21) Mirrored Doors

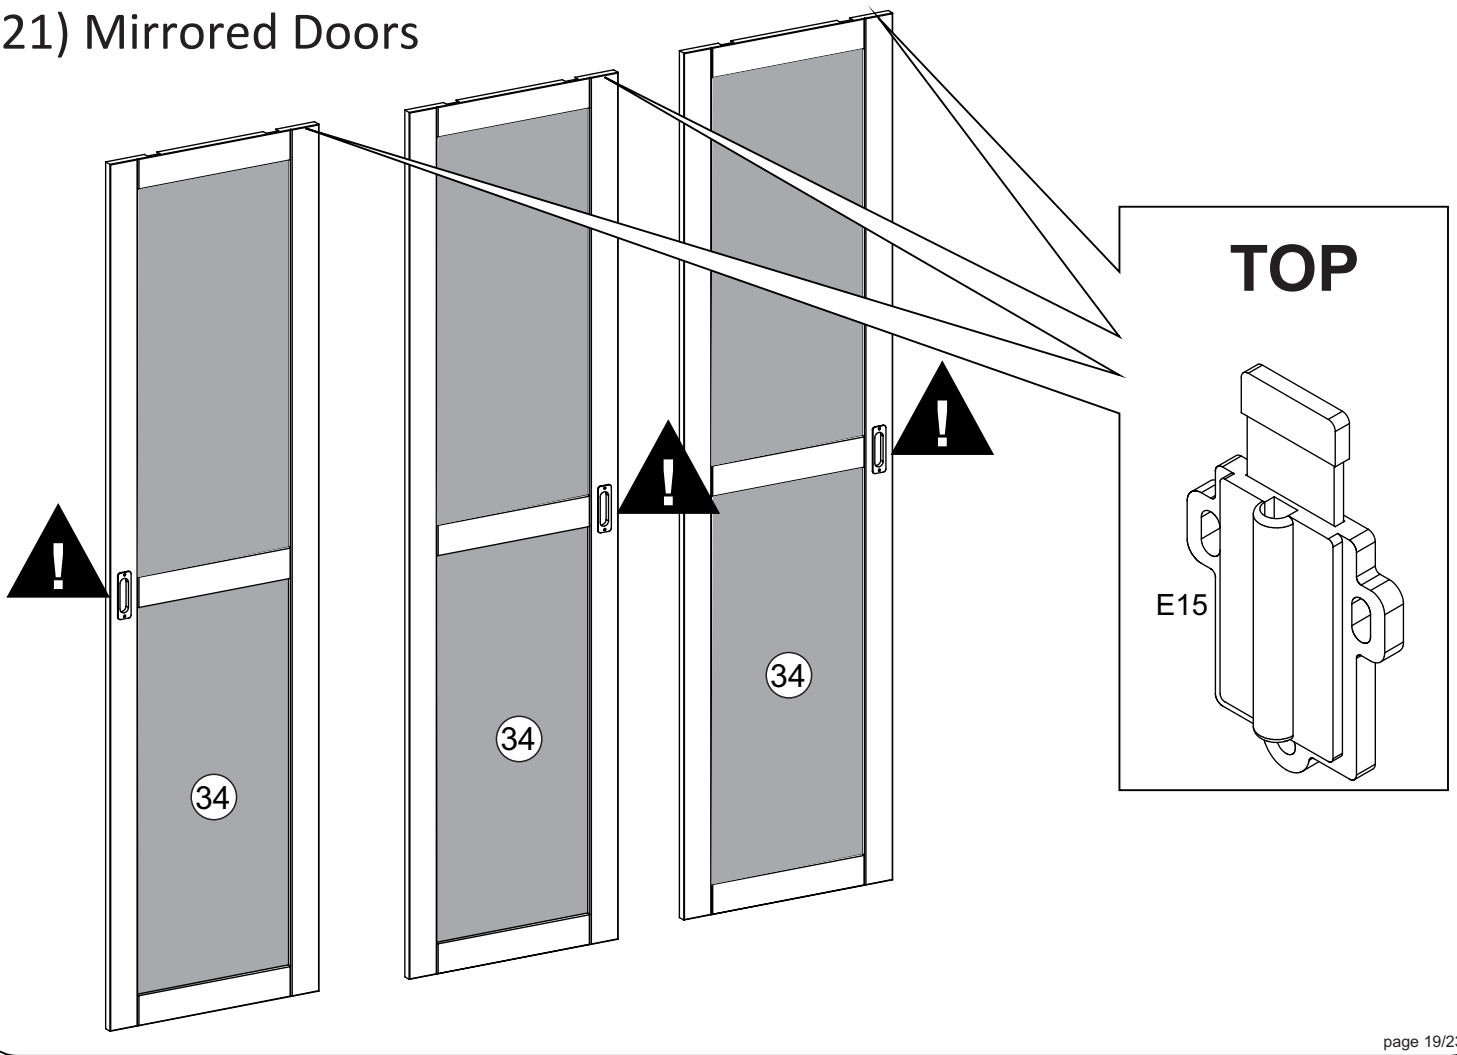


22) Mirrored Doors

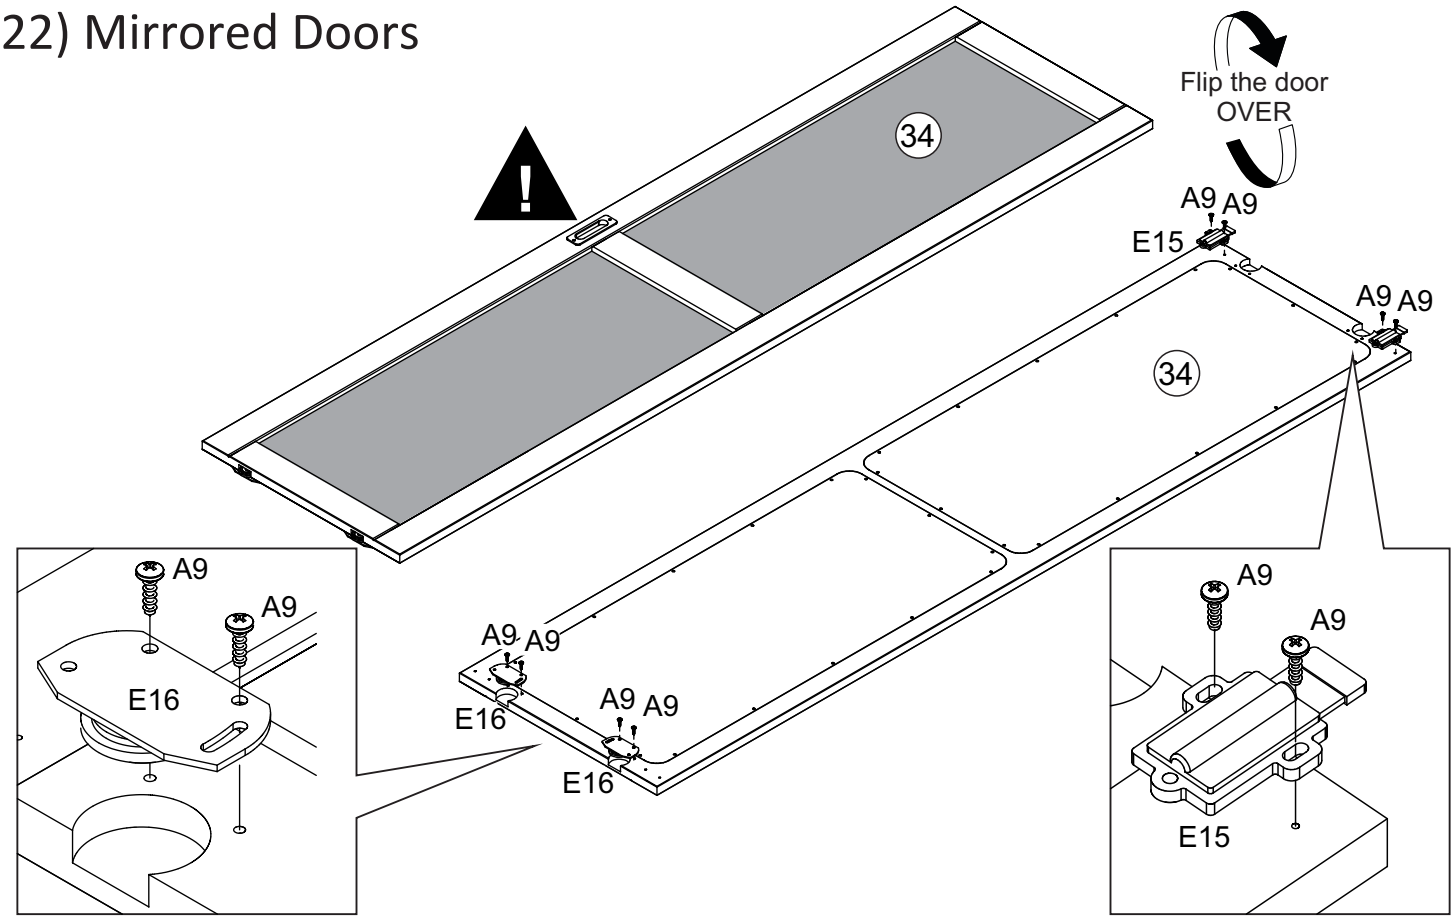


A9	3,5x16	08
E15		02
E16		02

23) Mirrored Doors

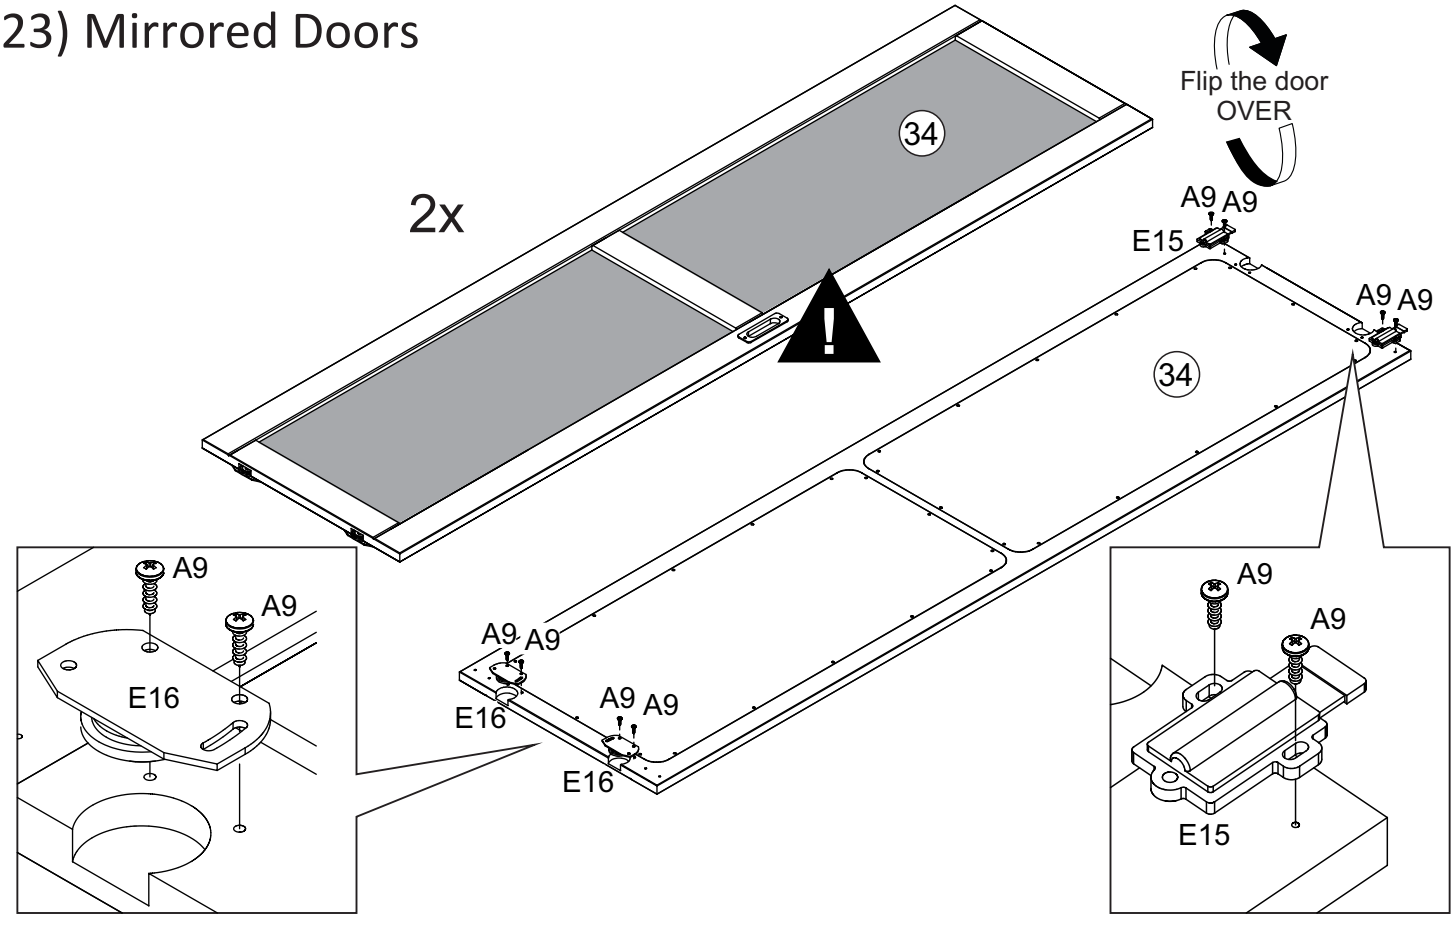


A9	3,5x16	16
E15		04
E16		04

24) Mirrored Doors

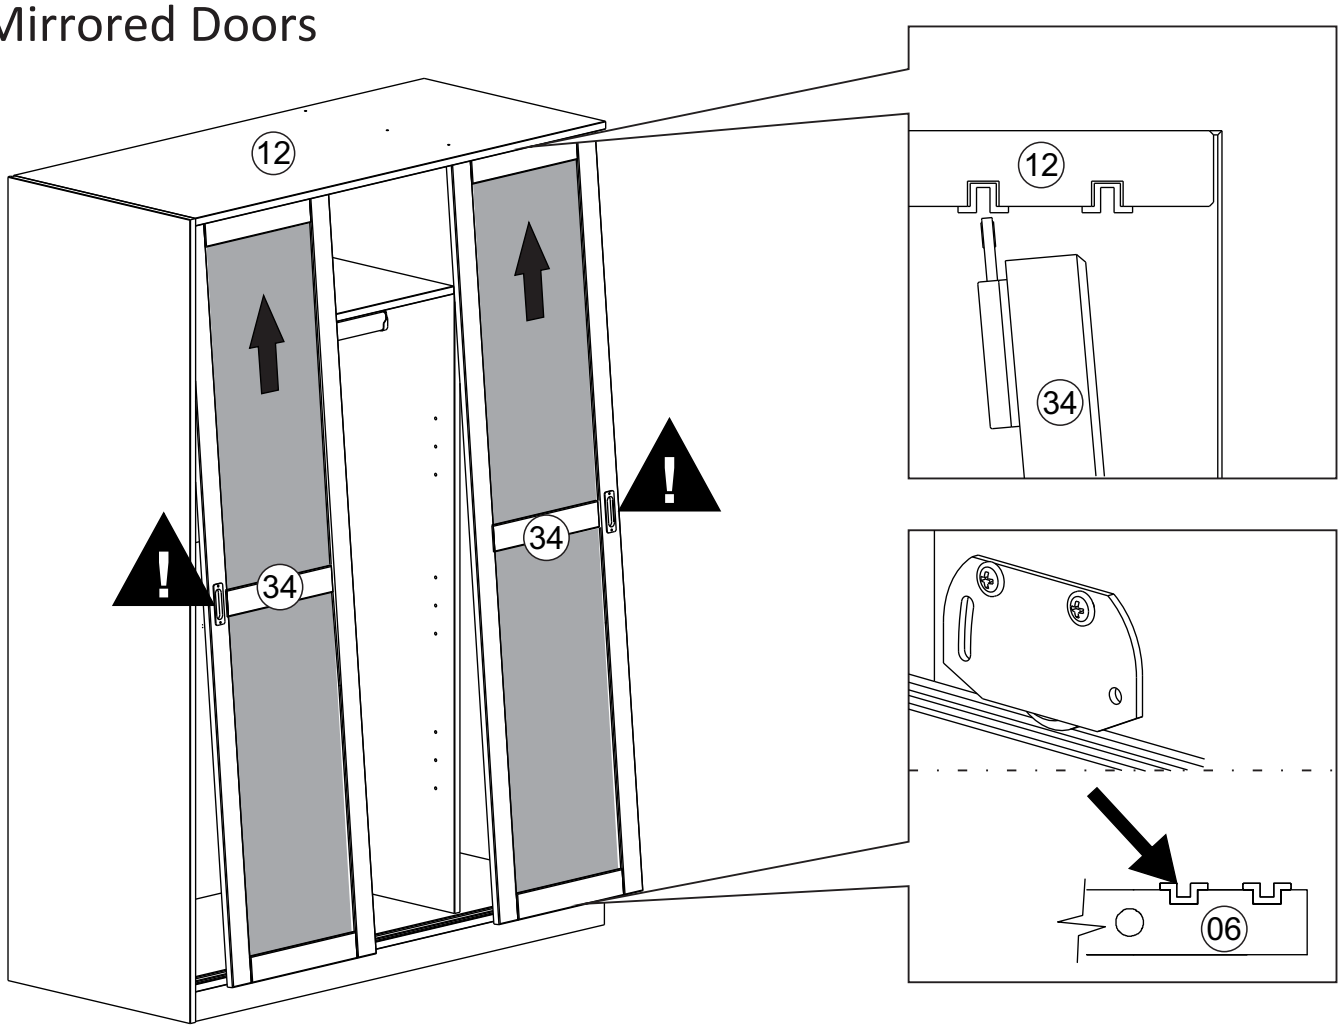


25) Mirrored Doors

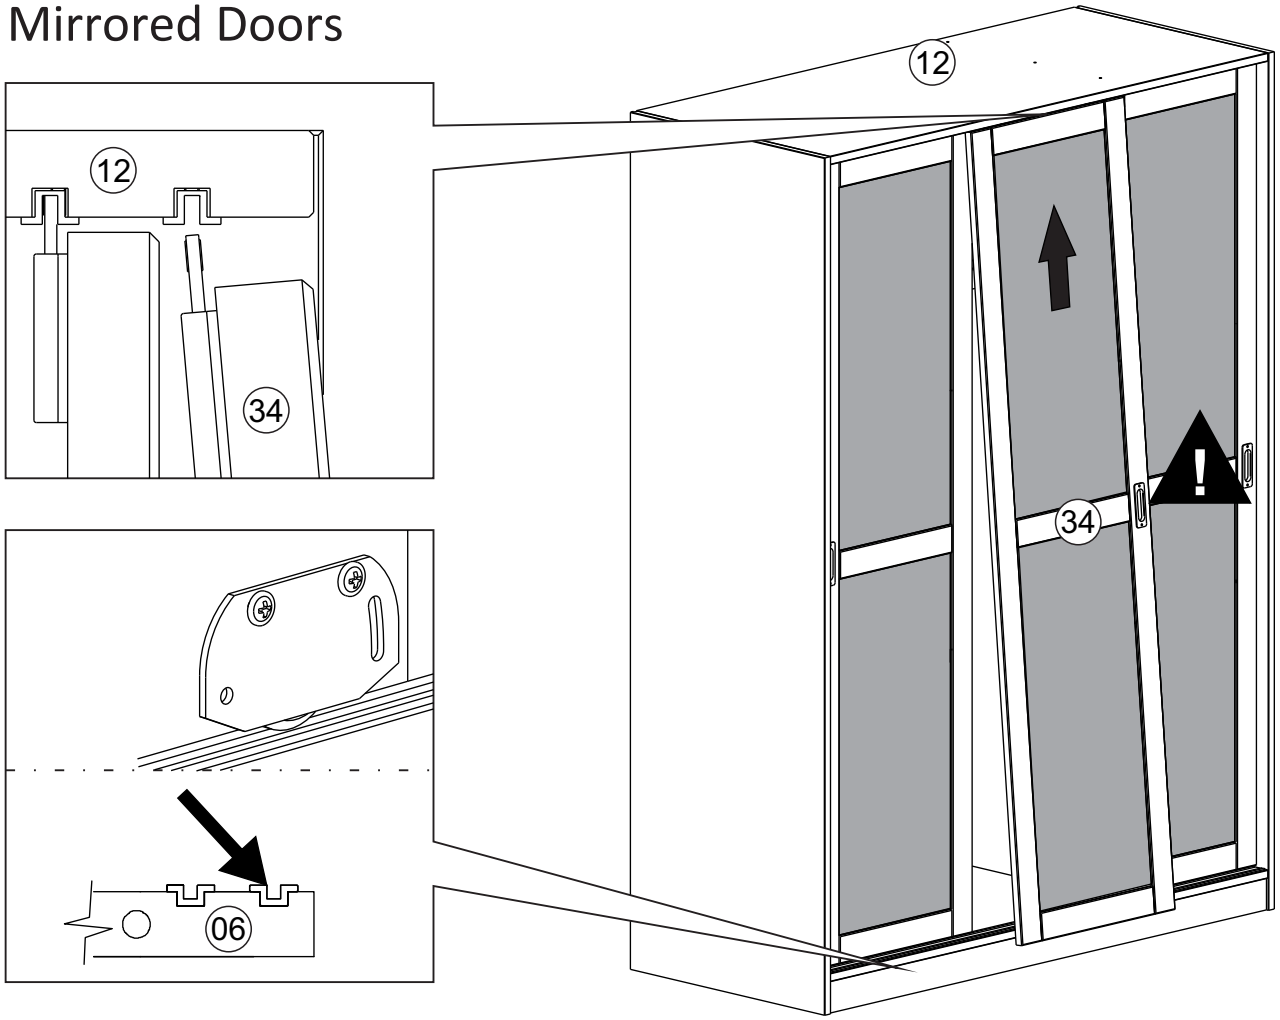


26)


Door adjustment

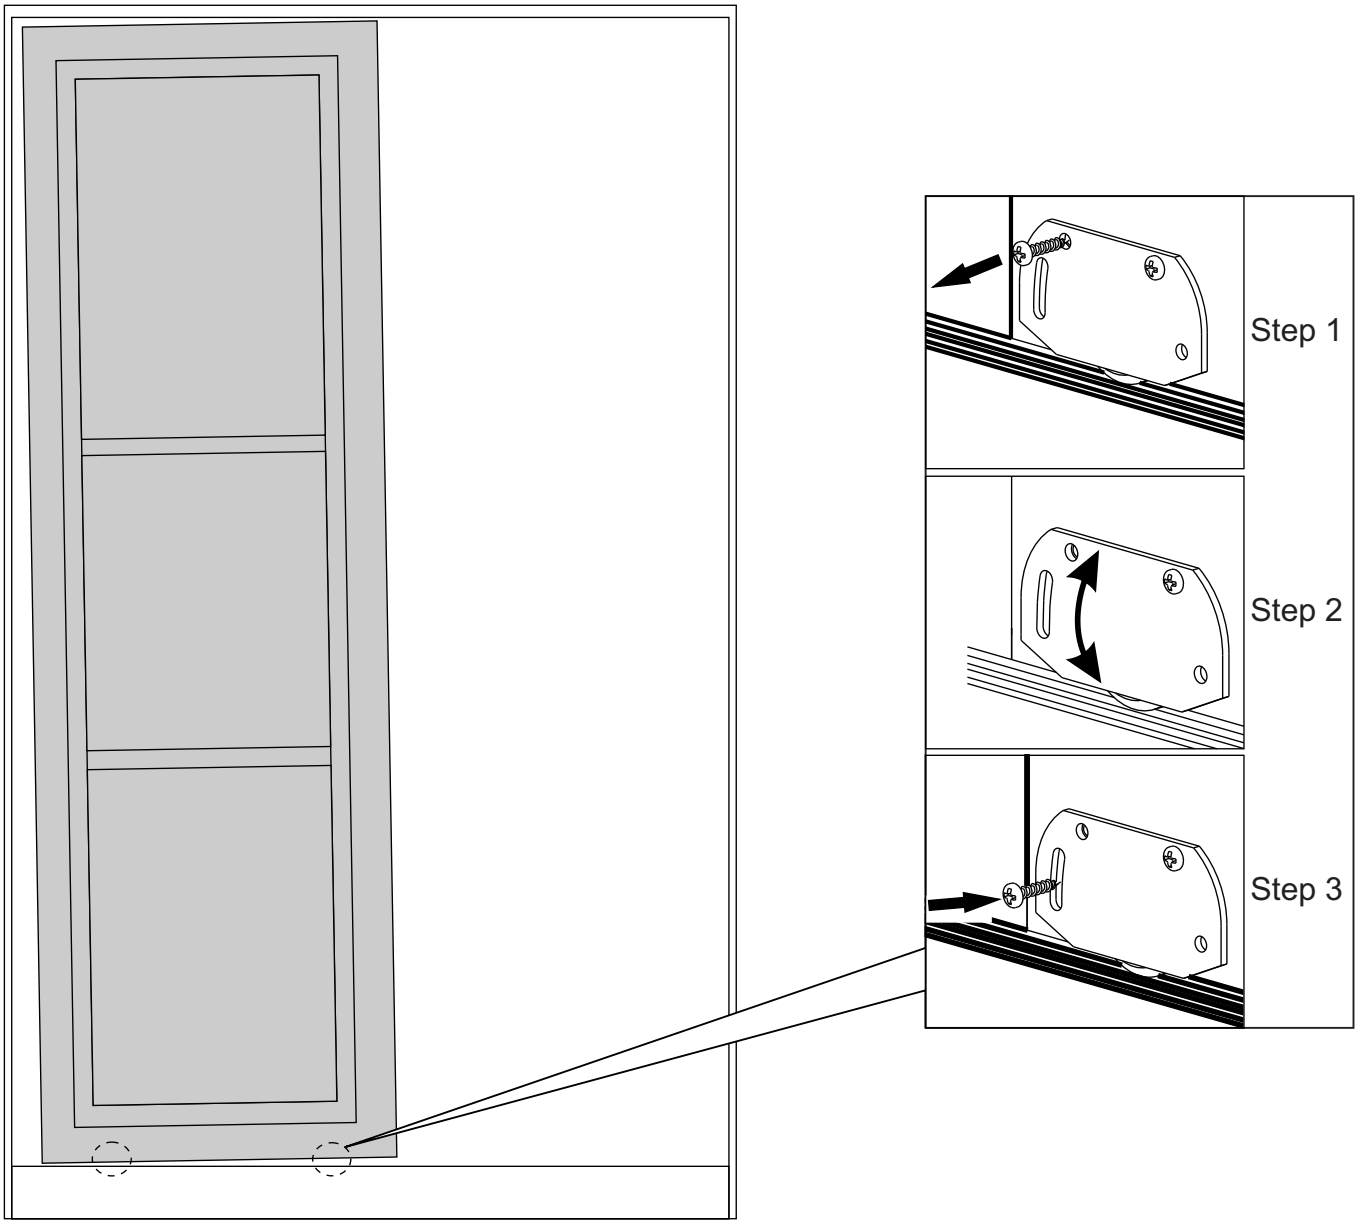


27)

FURNITURE TIPOVER PREVENTION KIT INSTALLATION

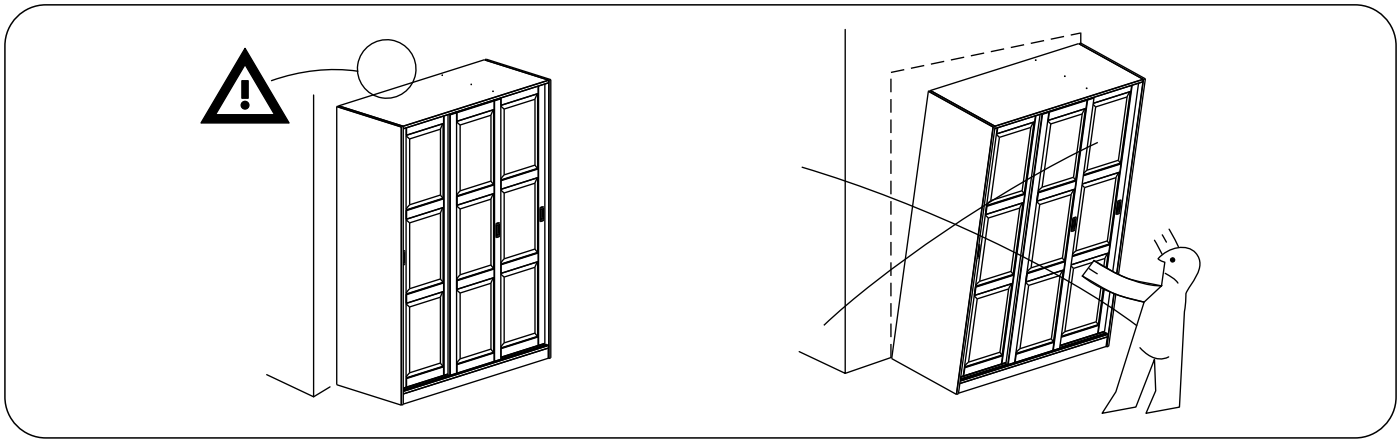

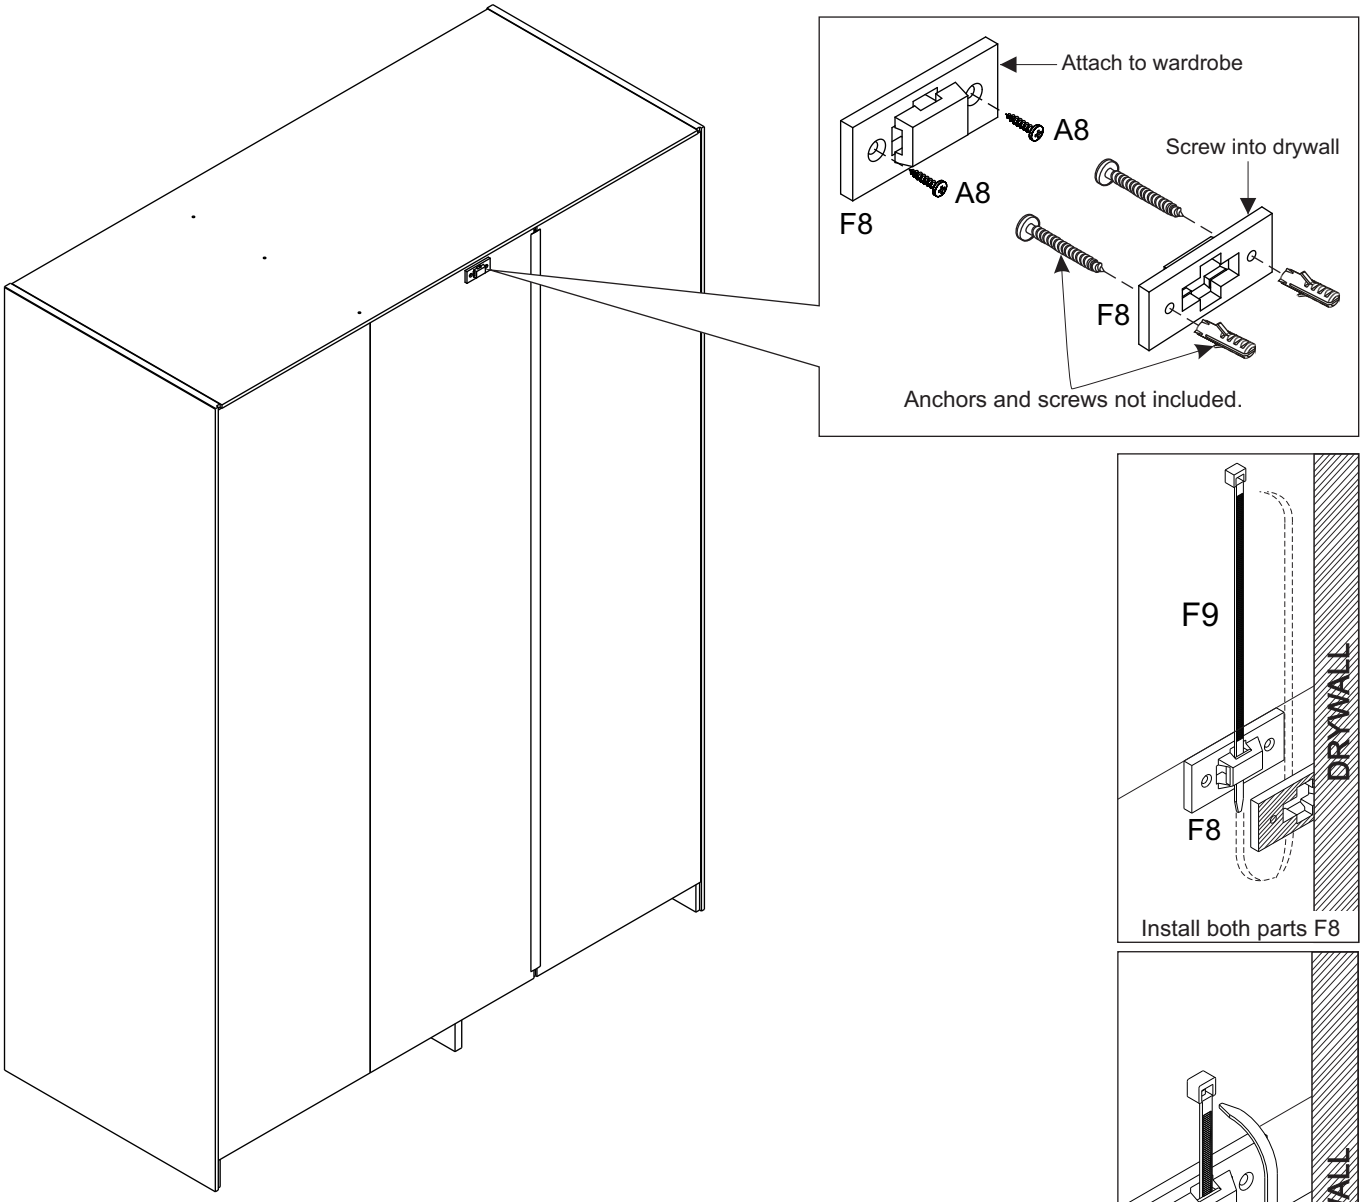

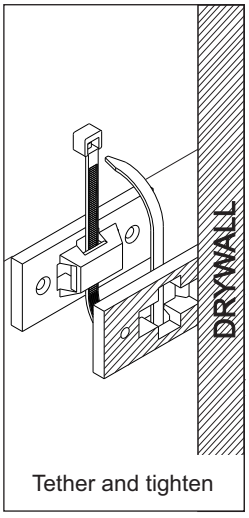

A8	3,0x20	02
F8		02
F9		01