


Panel Bed Assembly Instructions

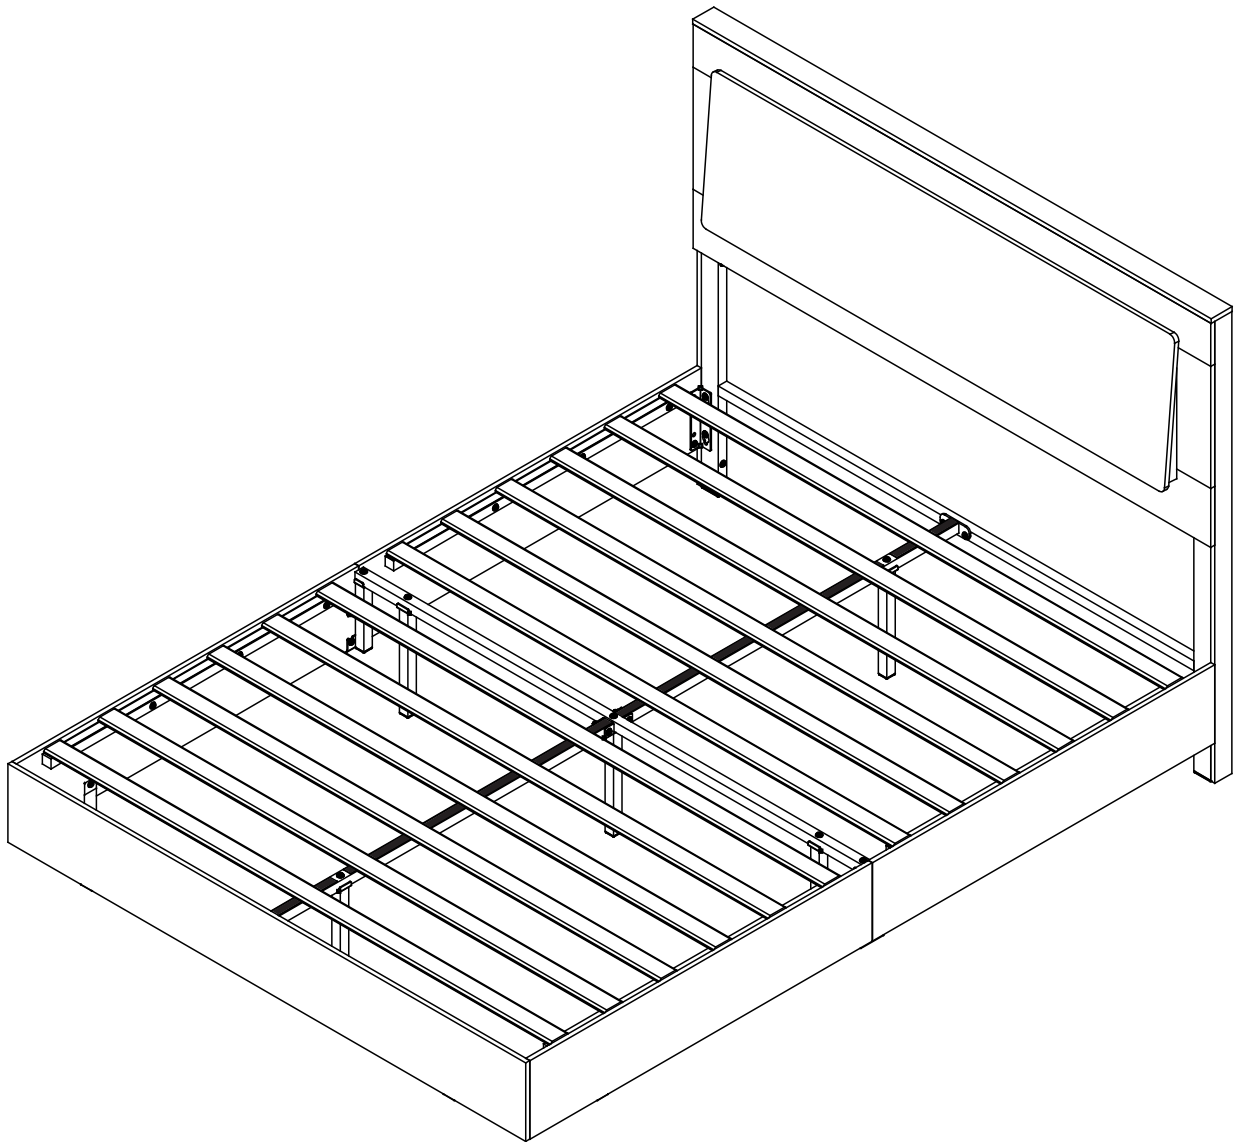



Dear Customers,

Thank you for purchasing our product. Please read this instruction manual carefully after receiving this product. It will help you assemble this product quickly, safely and correctly. You can keep this manual for future reference.

MADE IN CHINA



Please follow the instruction manuals and use a pad to protect the product during your assembly.

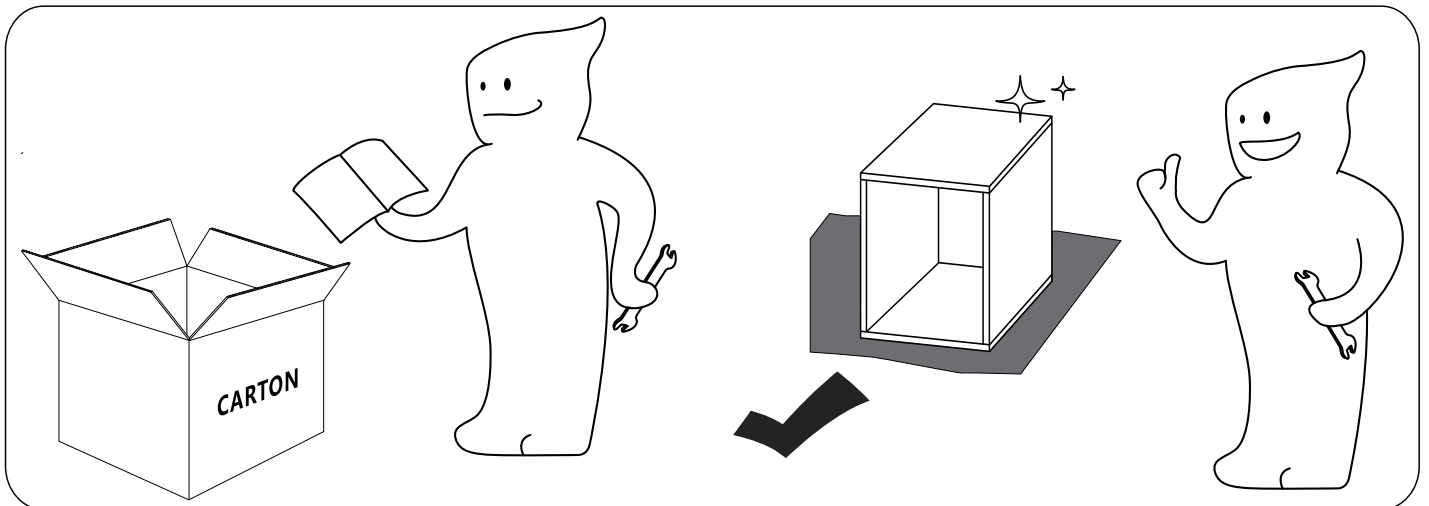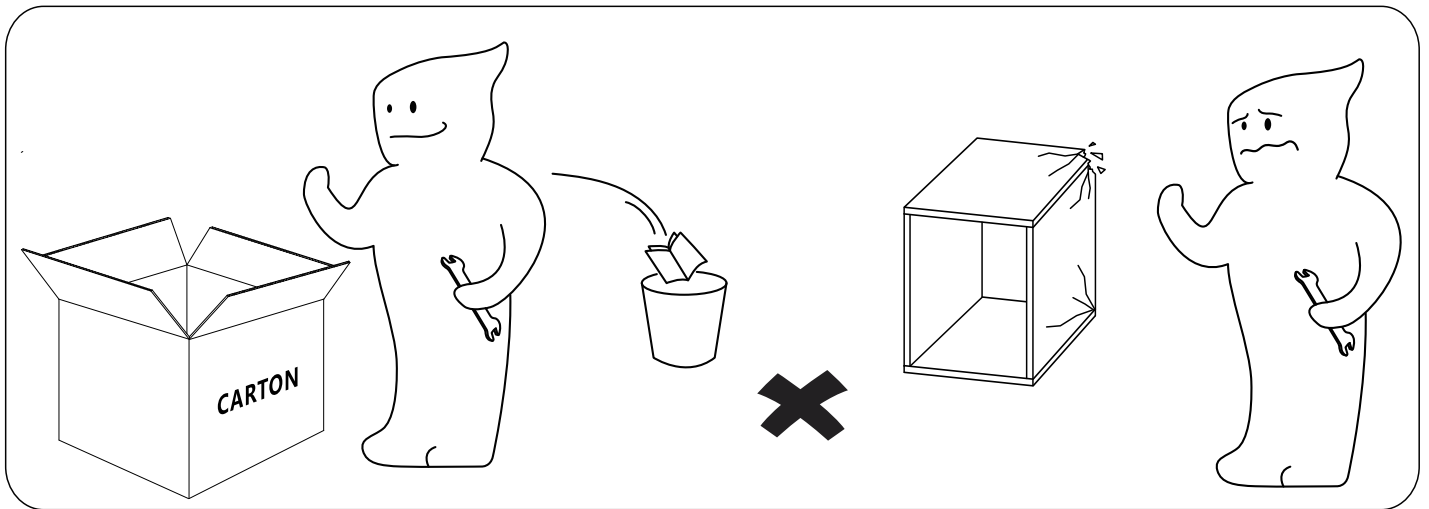


Note:

- 1. Should be assembled on flat ground to keep balance.**
- 2. Before completing the installation, do not tighten the screws.**





















For easier and better assembly, 2 or more adults are required.







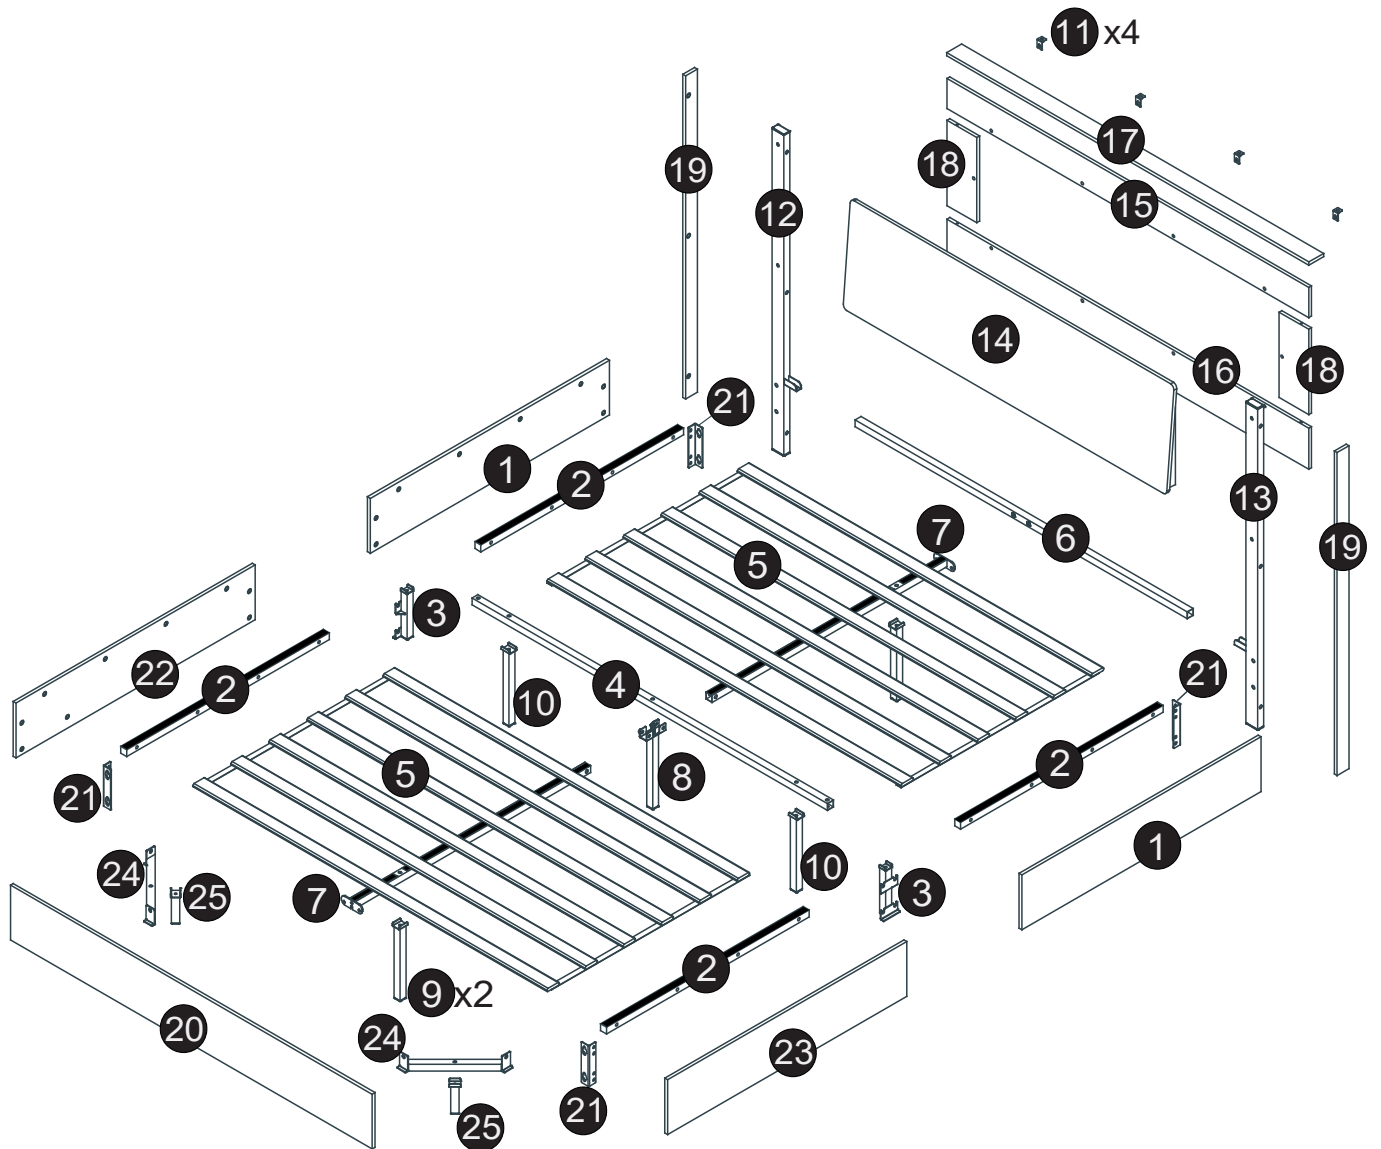










ASSEMBLY INSTRUCTIONS

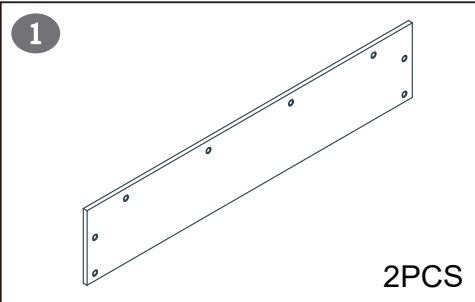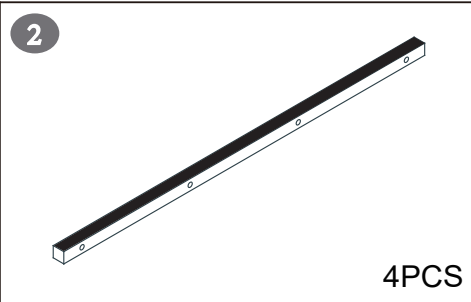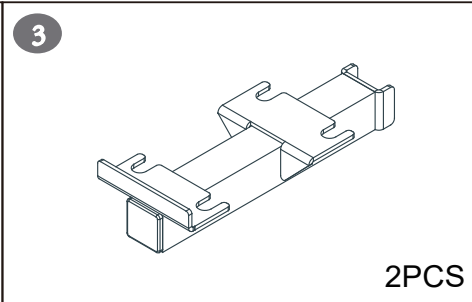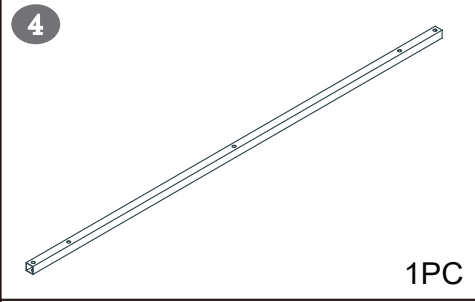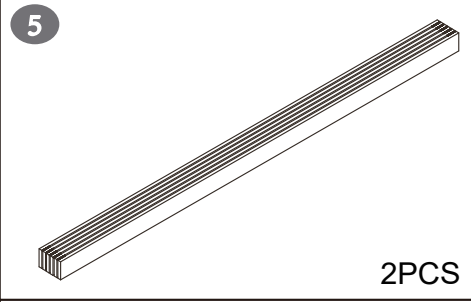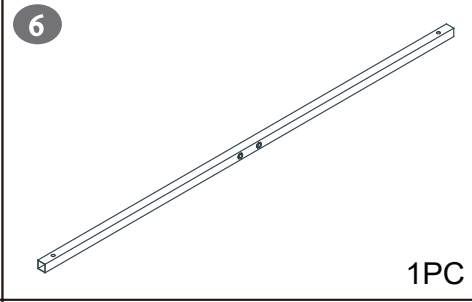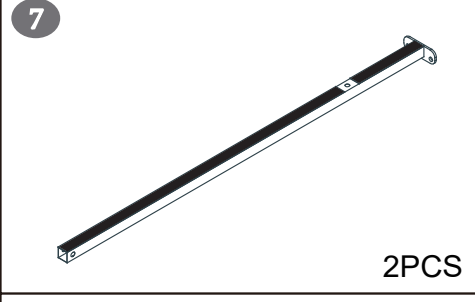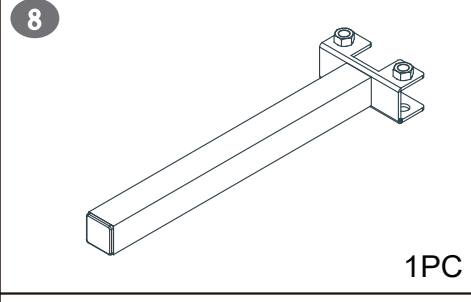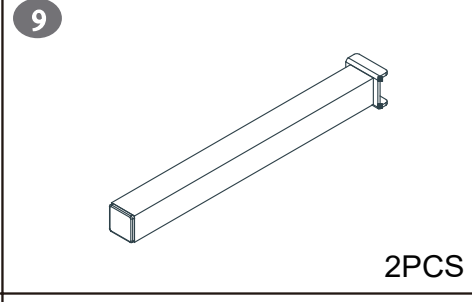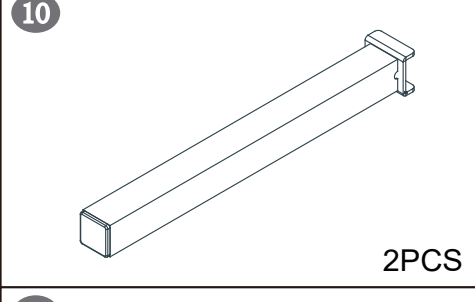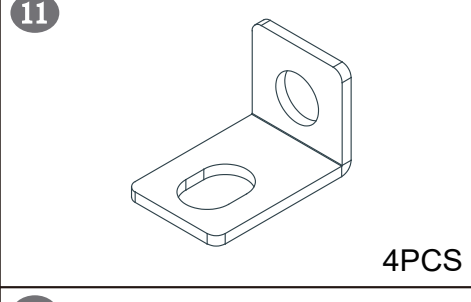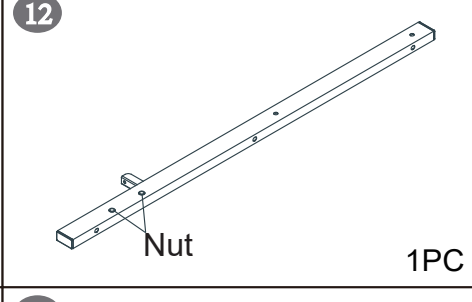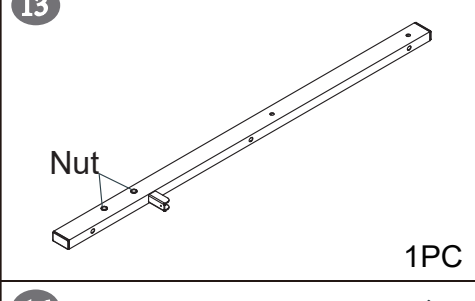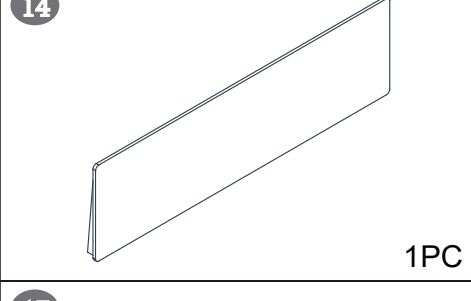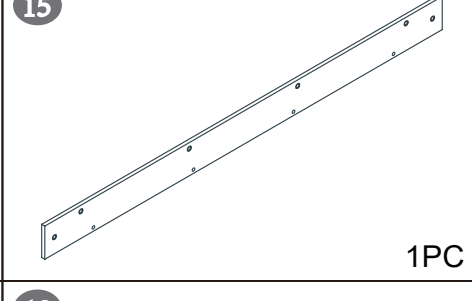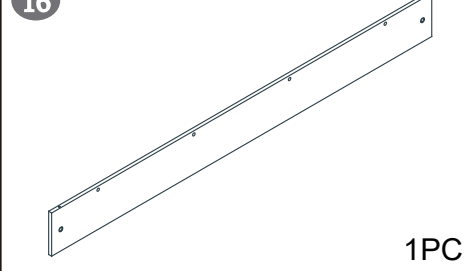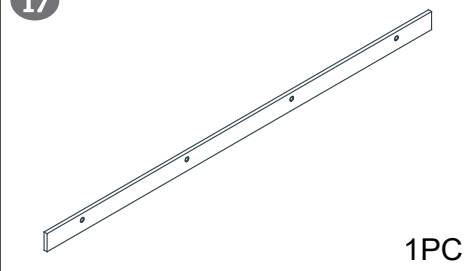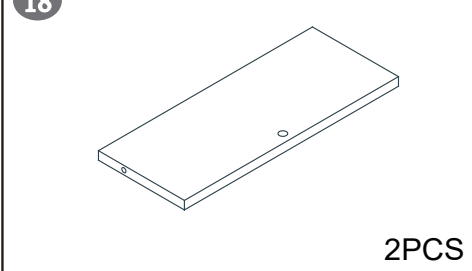

ASSEMBLY INSTRUCTIONS

 <p>1</p> <p>2PCS</p>	 <p>2</p> <p>4PCS</p>	 <p>3</p> <p>2PCS</p>
 <p>4</p> <p>1PC</p>	 <p>5</p> <p>2PCS</p>	 <p>6</p> <p>1PC</p>
 <p>7</p> <p>2PCS</p>	 <p>8</p> <p>1PC</p>	 <p>9</p> <p>2PCS</p>
 <p>10</p> <p>2PCS</p>	 <p>11</p> <p>4PCS</p>	 <p>12</p> <p>1PC</p>
 <p>13</p> <p>1PC</p>	 <p>14</p> <p>1PC</p>	 <p>15</p> <p>1PC</p>
 <p>16</p> <p>1PC</p>	 <p>17</p> <p>1PC</p>	 <p>18</p> <p>2PCS</p>

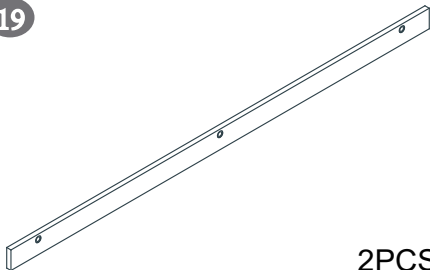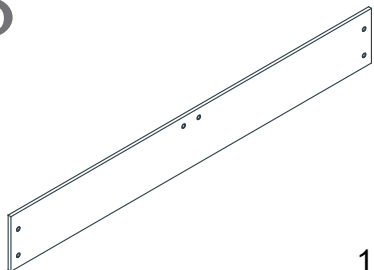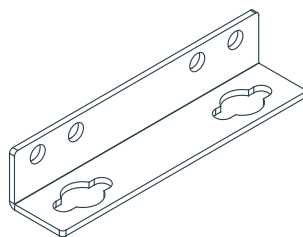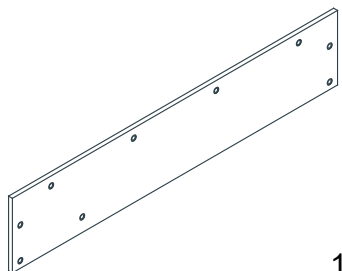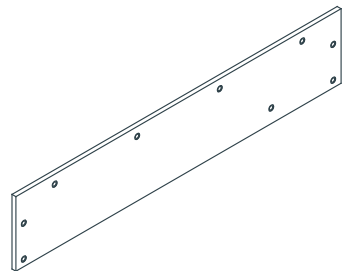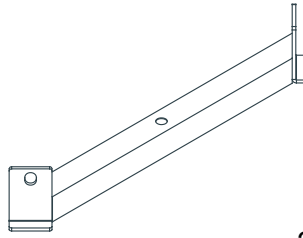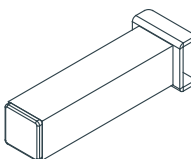
ASSEMBLY INSTRUCTIONS

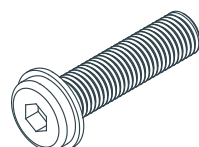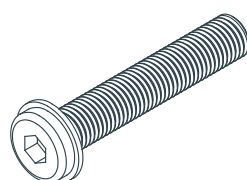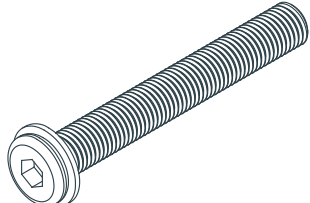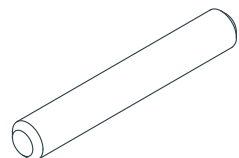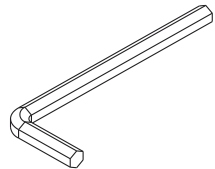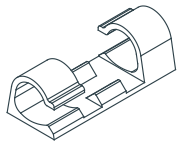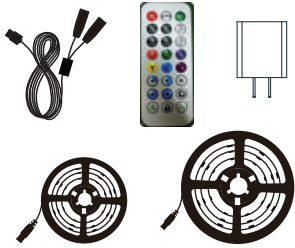19  2PCS	20  1PC	21  4PCS
22  1PC	23  1PC	24  2PCS
25  2PCS	A  M8*12 30PCS	B  white zinc M8*14 6PCS
C  M8*20 12PCS	D  M8*33 32PCS	E  M8*45 3PCS
F  M8*60 6PCS	G  $\phi 6 \times 40$ 4PCS	H  5*5 1PC
I  3PCS	K  short long 1PC	

ASSEMBLY INSTRUCTIONS


1

Peel off the adhesive on the back of the LED strip, then stick it on part (14) in the direction of the arrow.

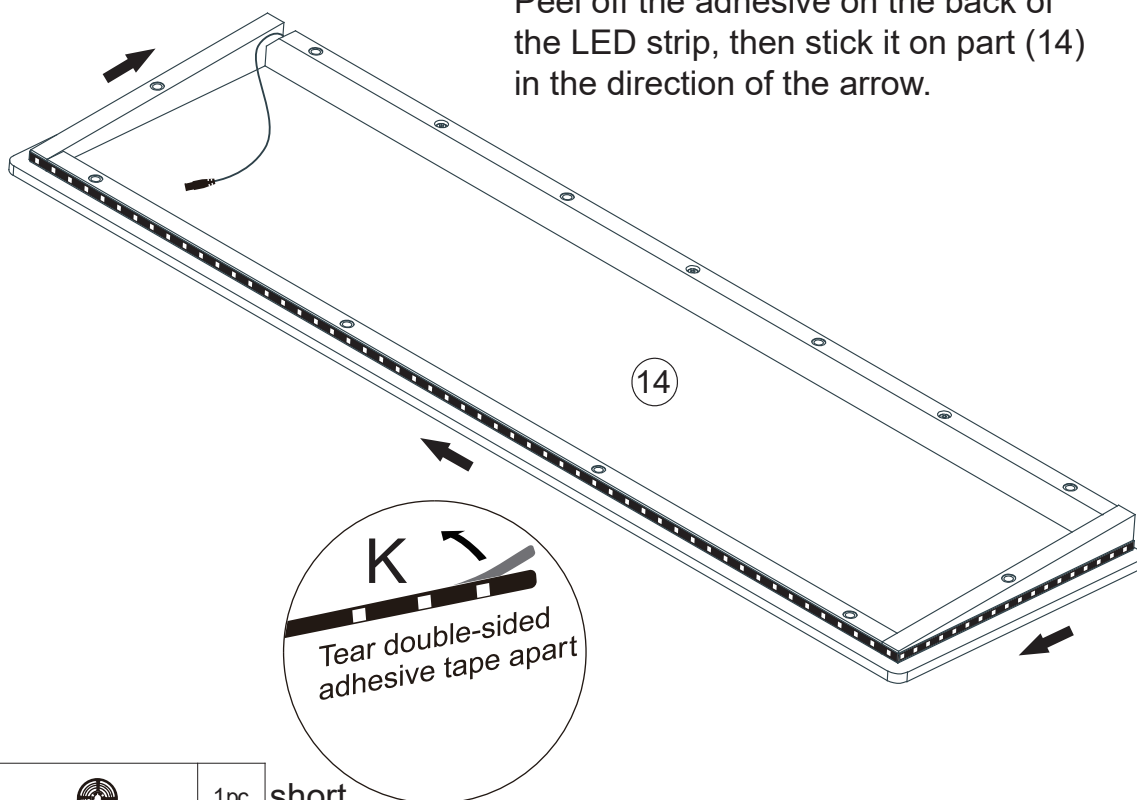

K		1pc short
---	---	-----------


2

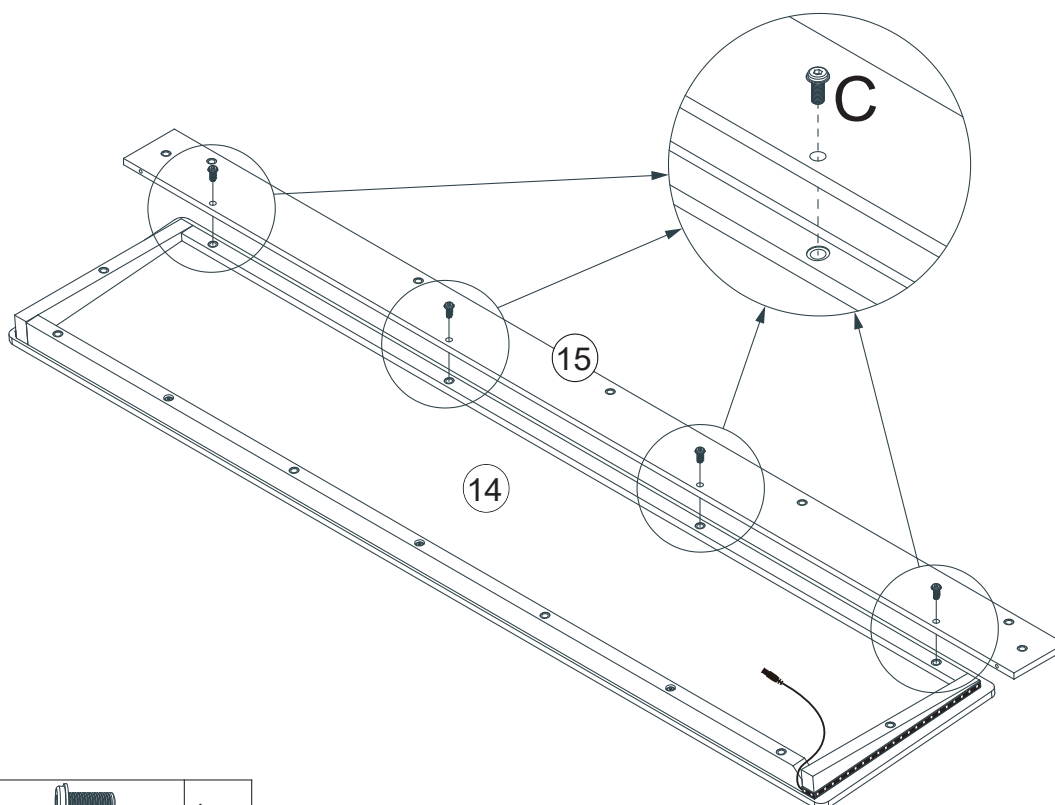


C		4 pcs
---	---	-------


ASSEMBLY INSTRUCTIONS

3

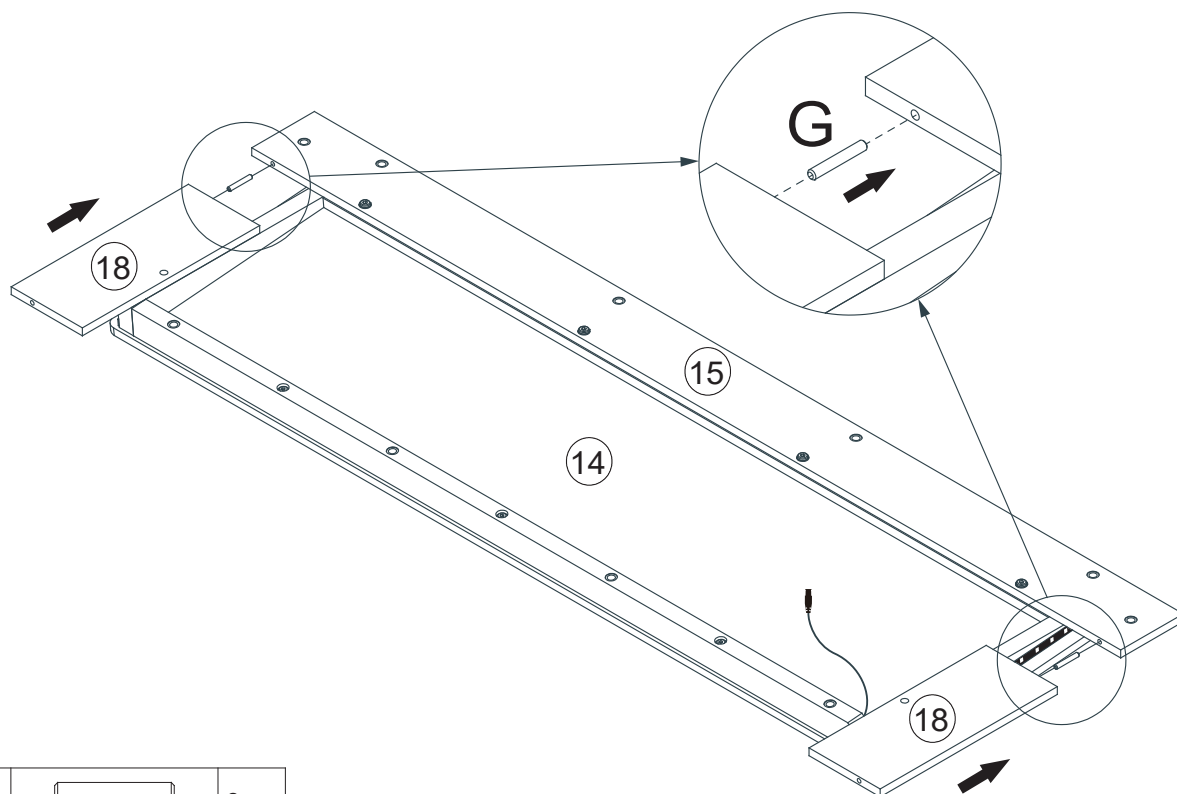

G		2 pcs
	$\varnothing 6 \times 40$	


4

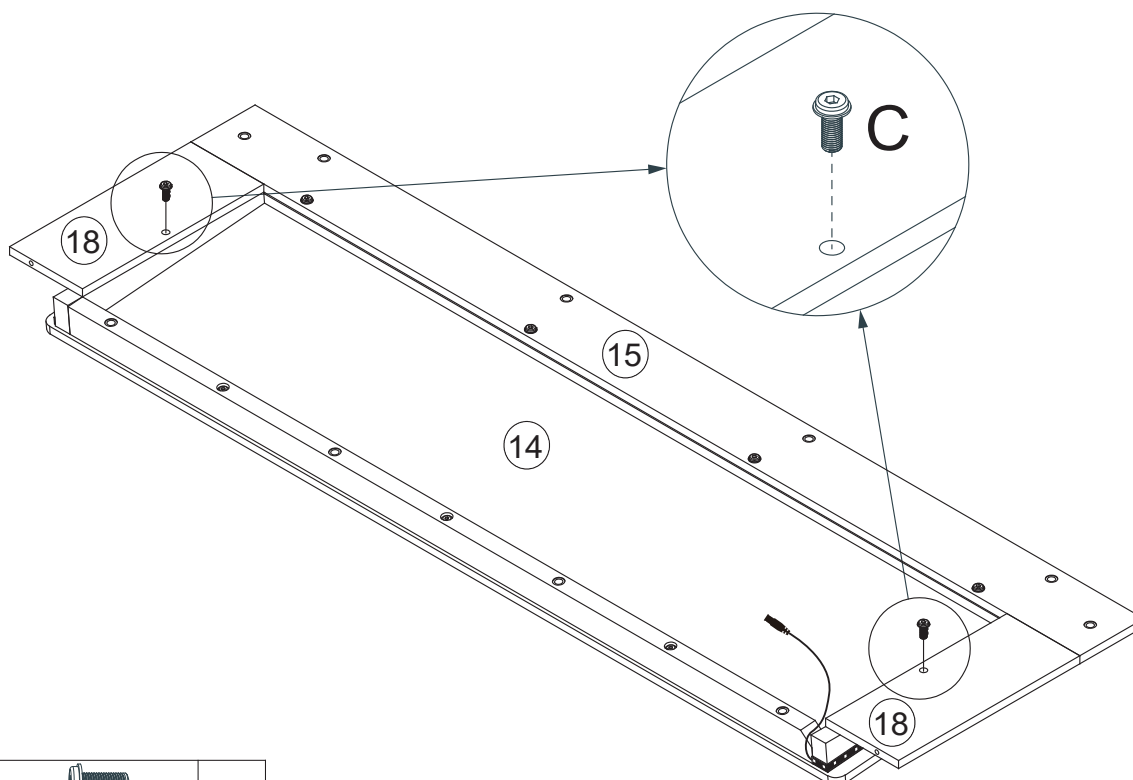


C		2 pcs
	M8x20	


ASSEMBLY INSTRUCTIONS

5

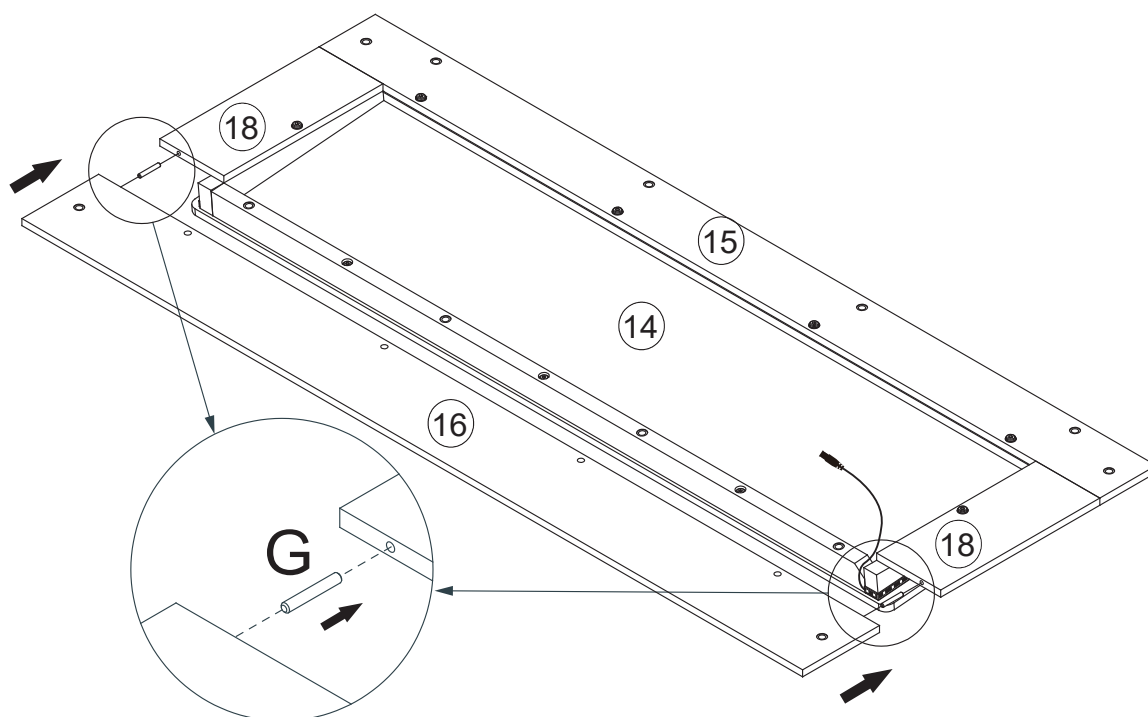

G		2 pcs
$\varnothing 6 \times 40$		


6

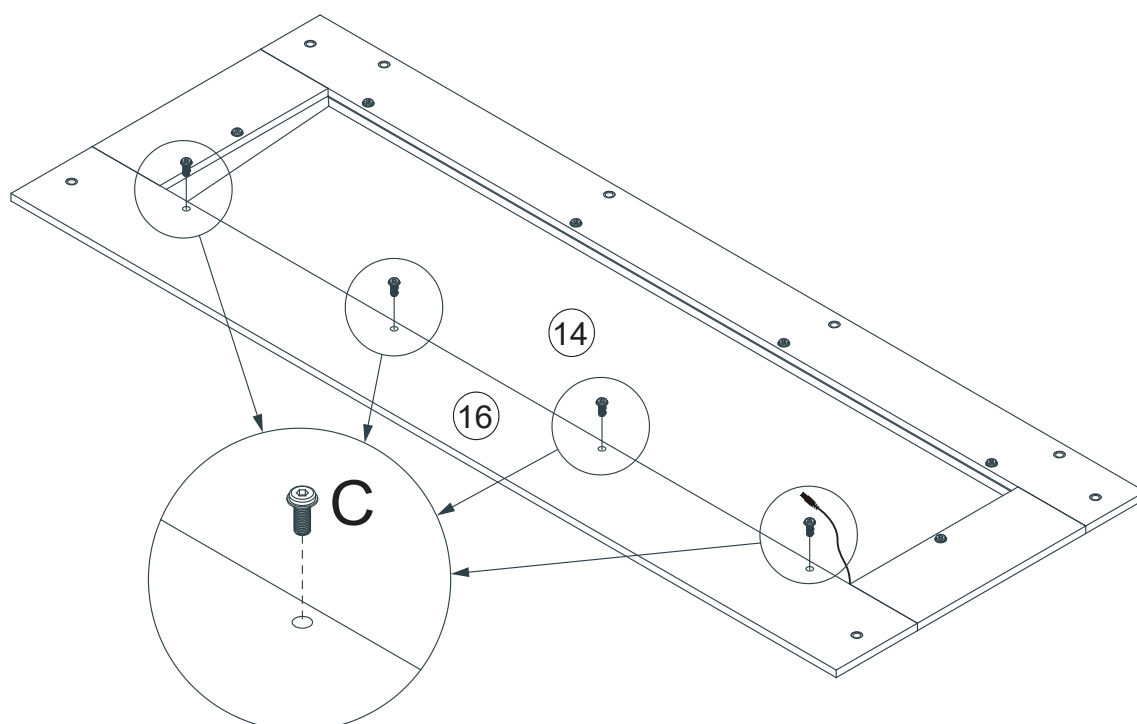

C		4 pcs
M8x20		


ASSEMBLY INSTRUCTIONS

7

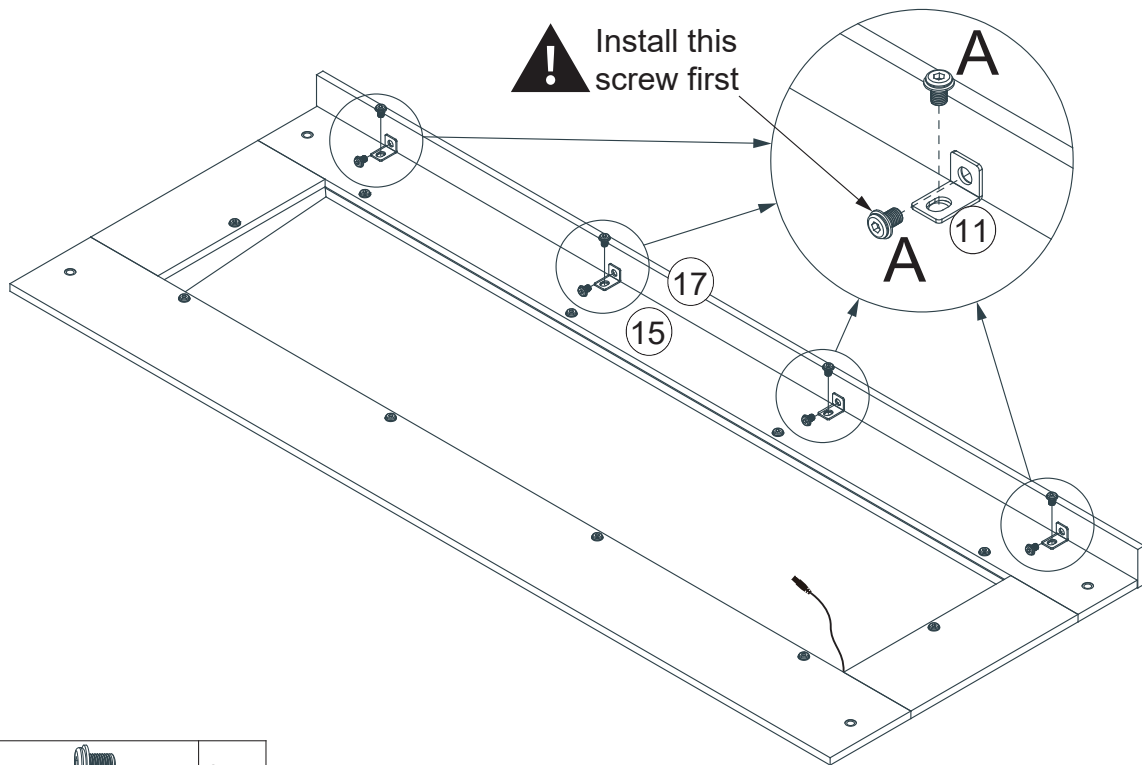

A		8 pcs
M8x12		


8

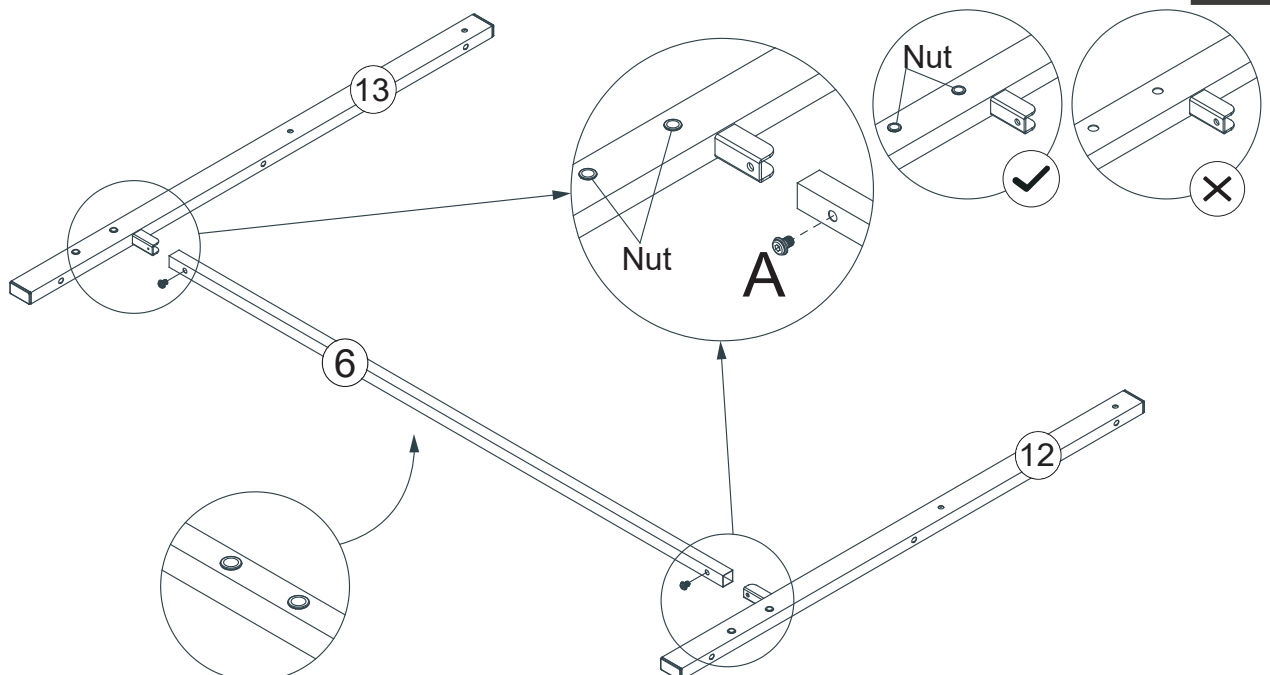


A		2 pcs
M8x12		


ASSEMBLY INSTRUCTIONS


9

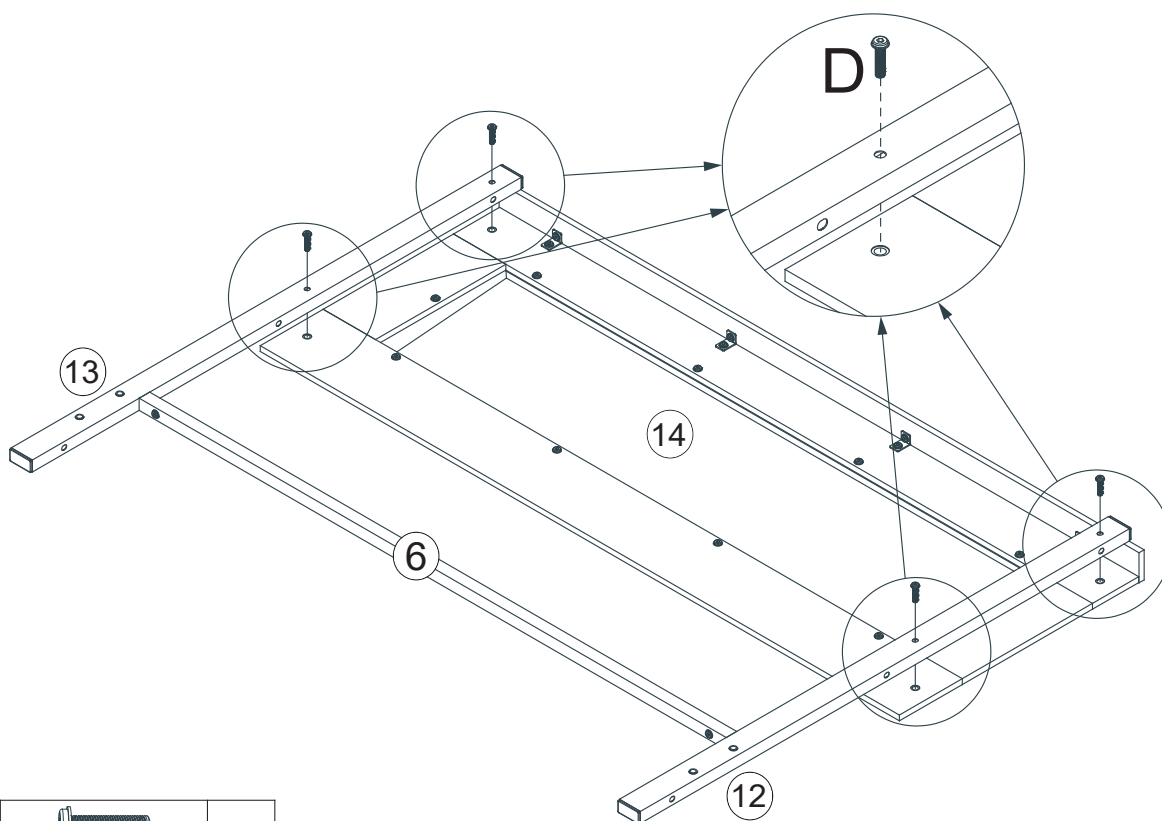

D	 M8x33	4 pcs
---	--	-------


10

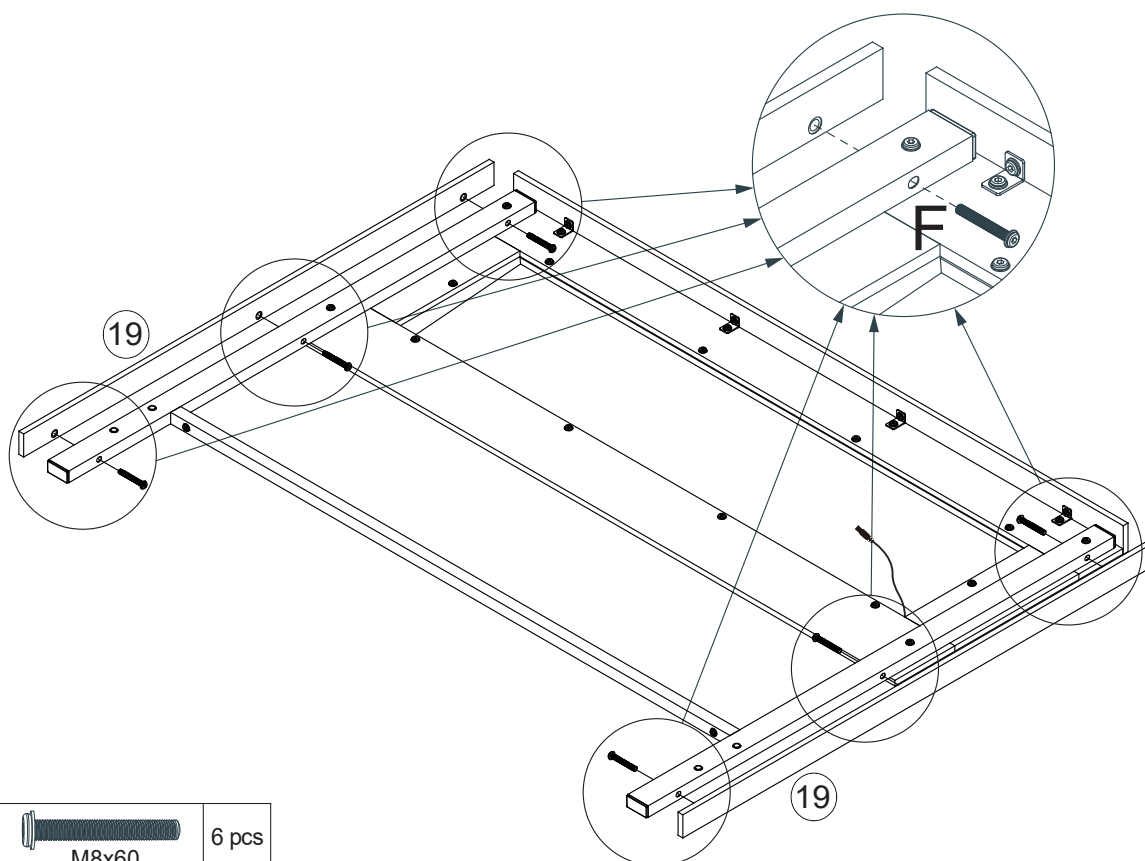


F	 M8x60	6 pcs
---	--	-------


11

x2

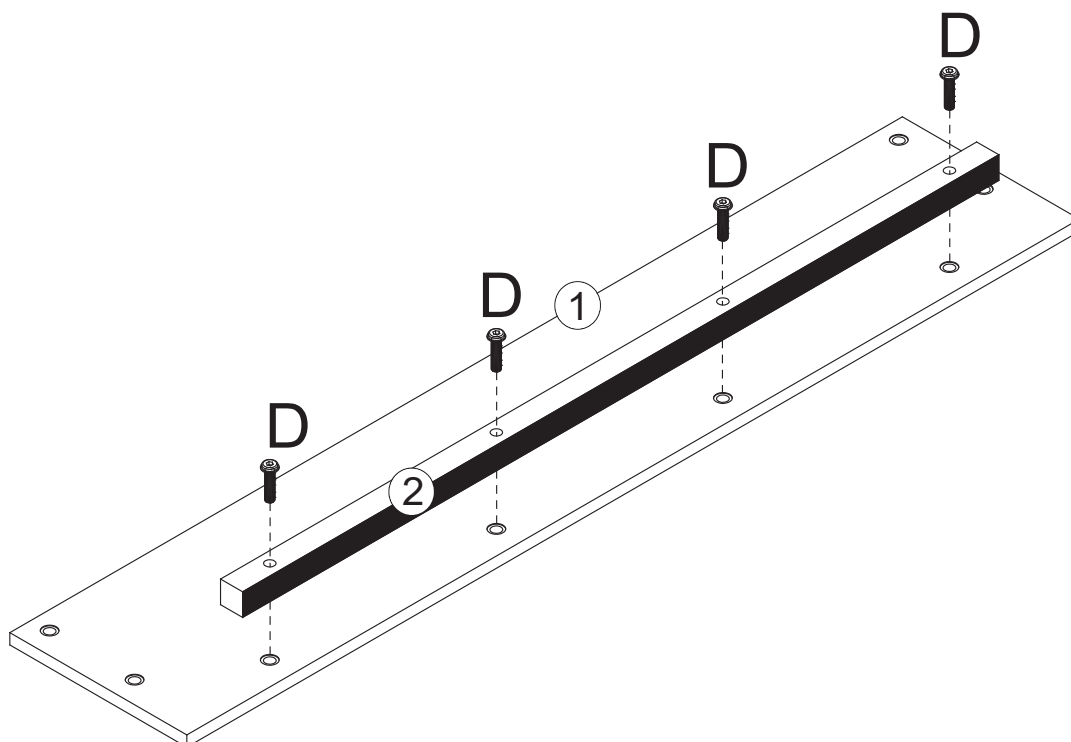

D		8 pcs
	M8x33	


12

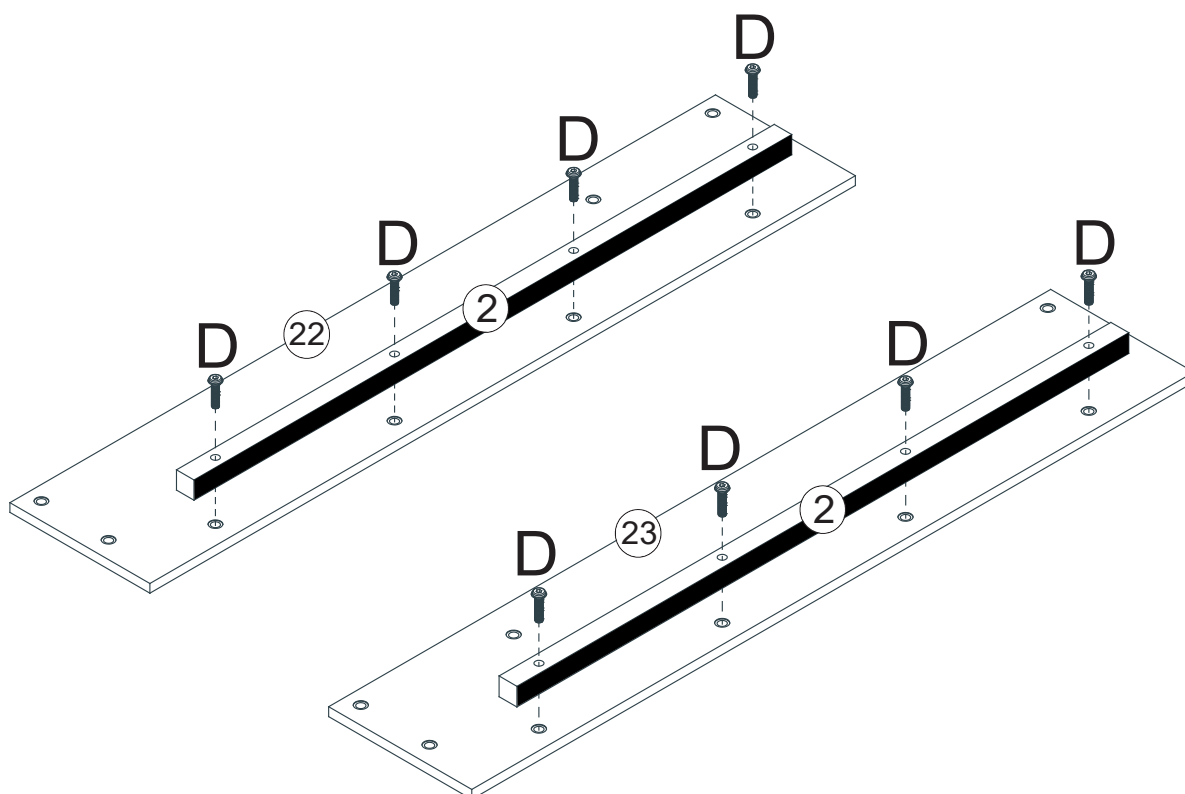


D		8 pcs
	M8x33	

ASSEMBLY INSTRUCTIONS

13

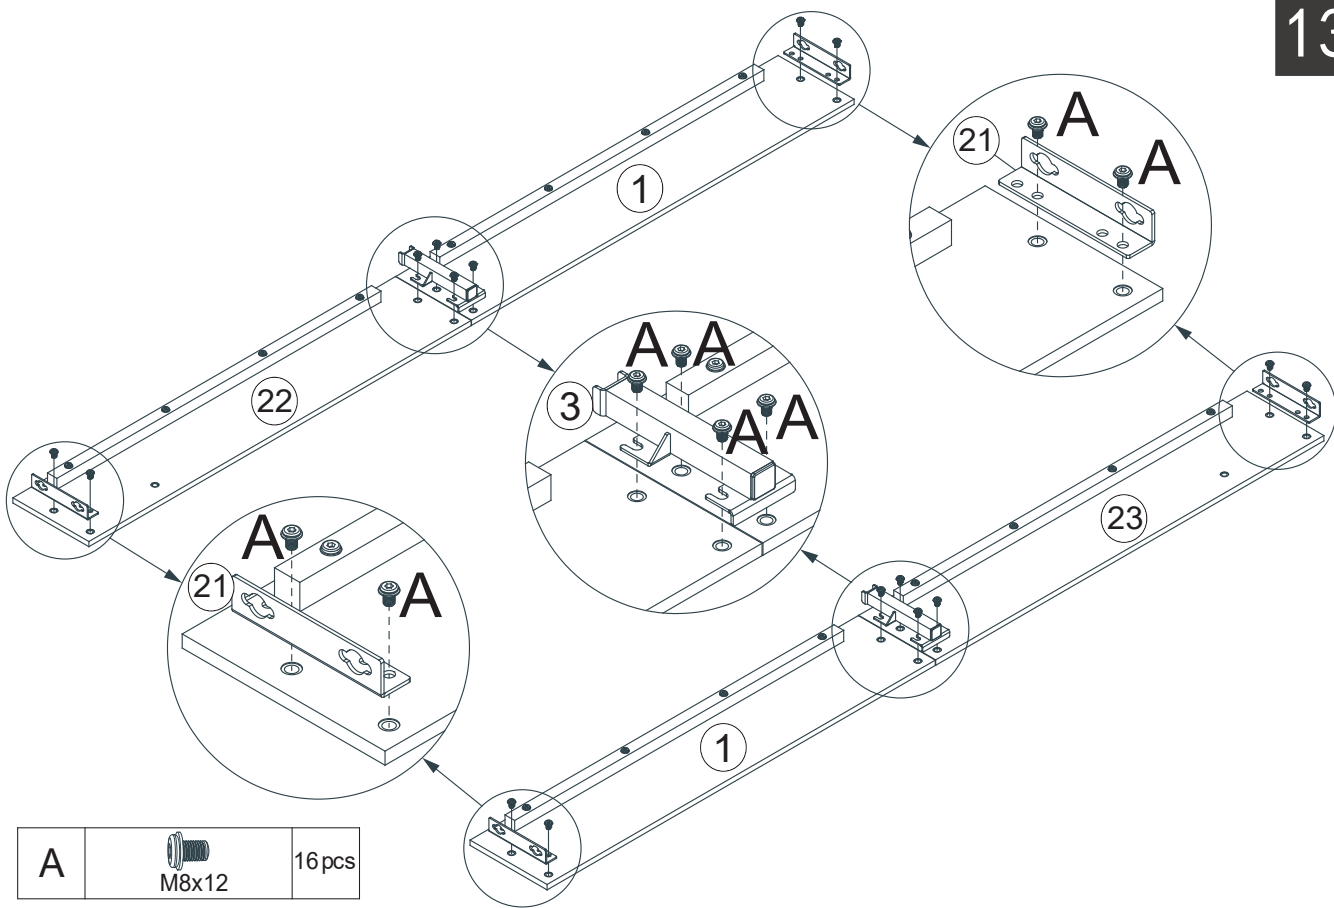


14

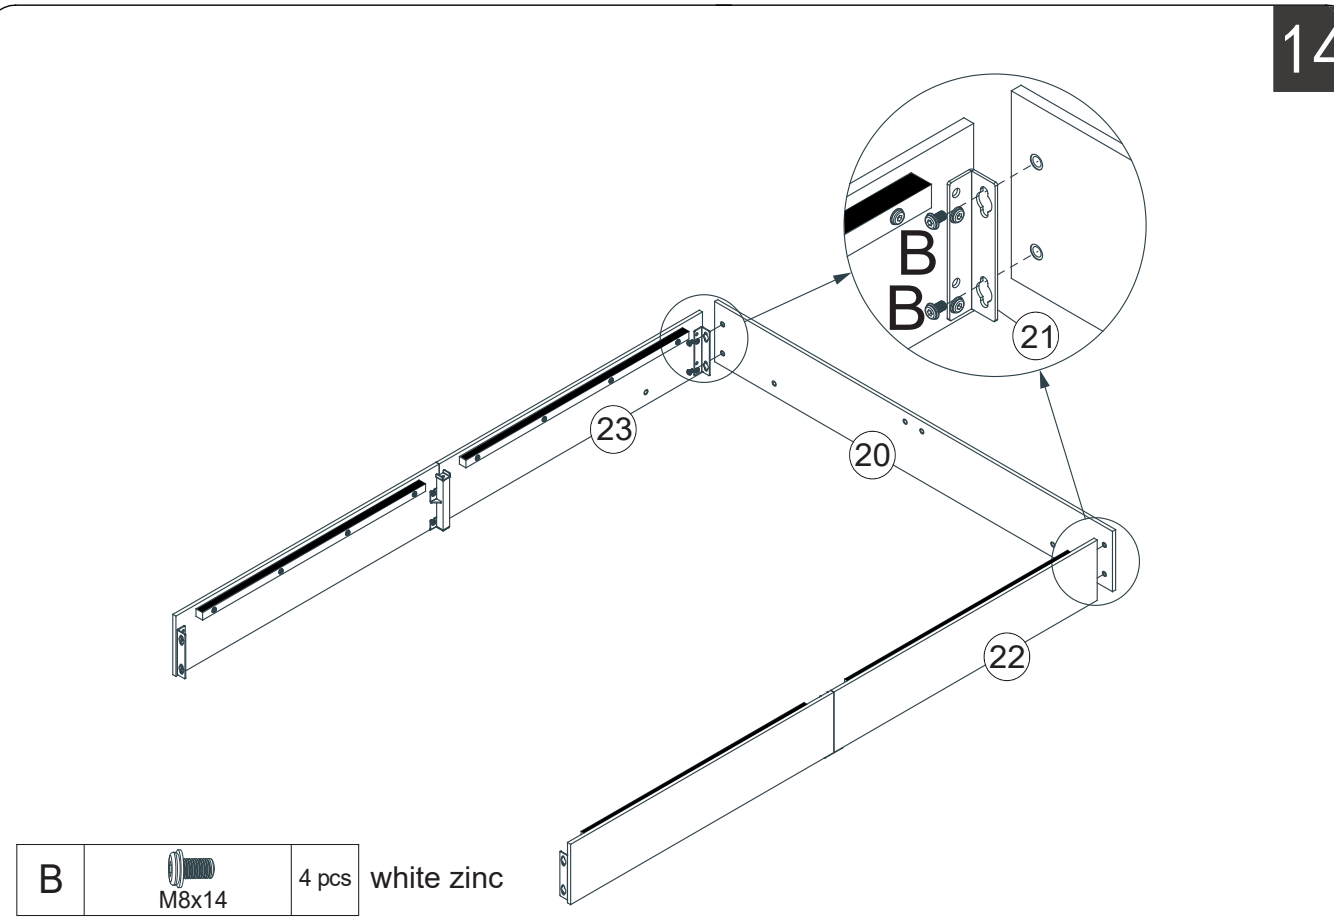


ASSEMBLY INSTRUCTIONS


15

x2

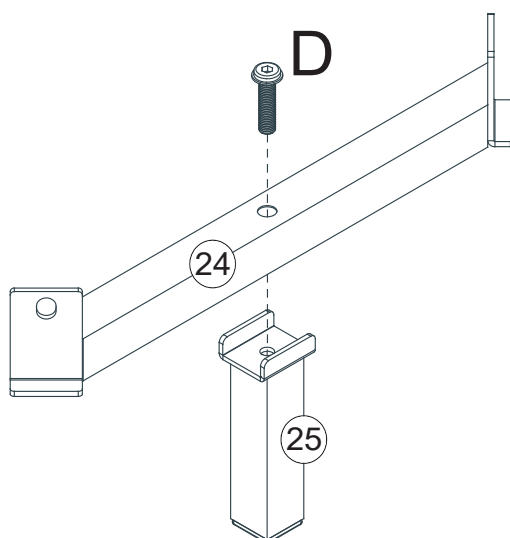

D		2 pcs
	M8x33	


16

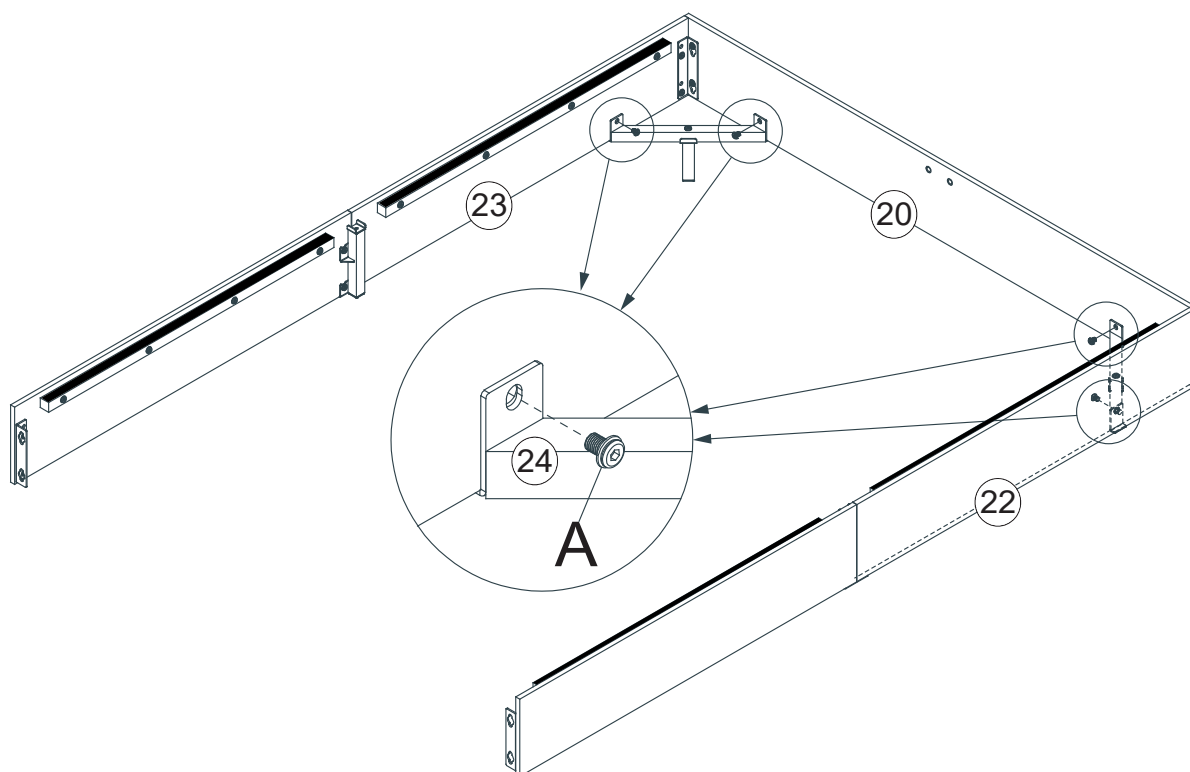


A		4 pcs
	M8x12	

ASSEMBLY INSTRUCTIONS

17

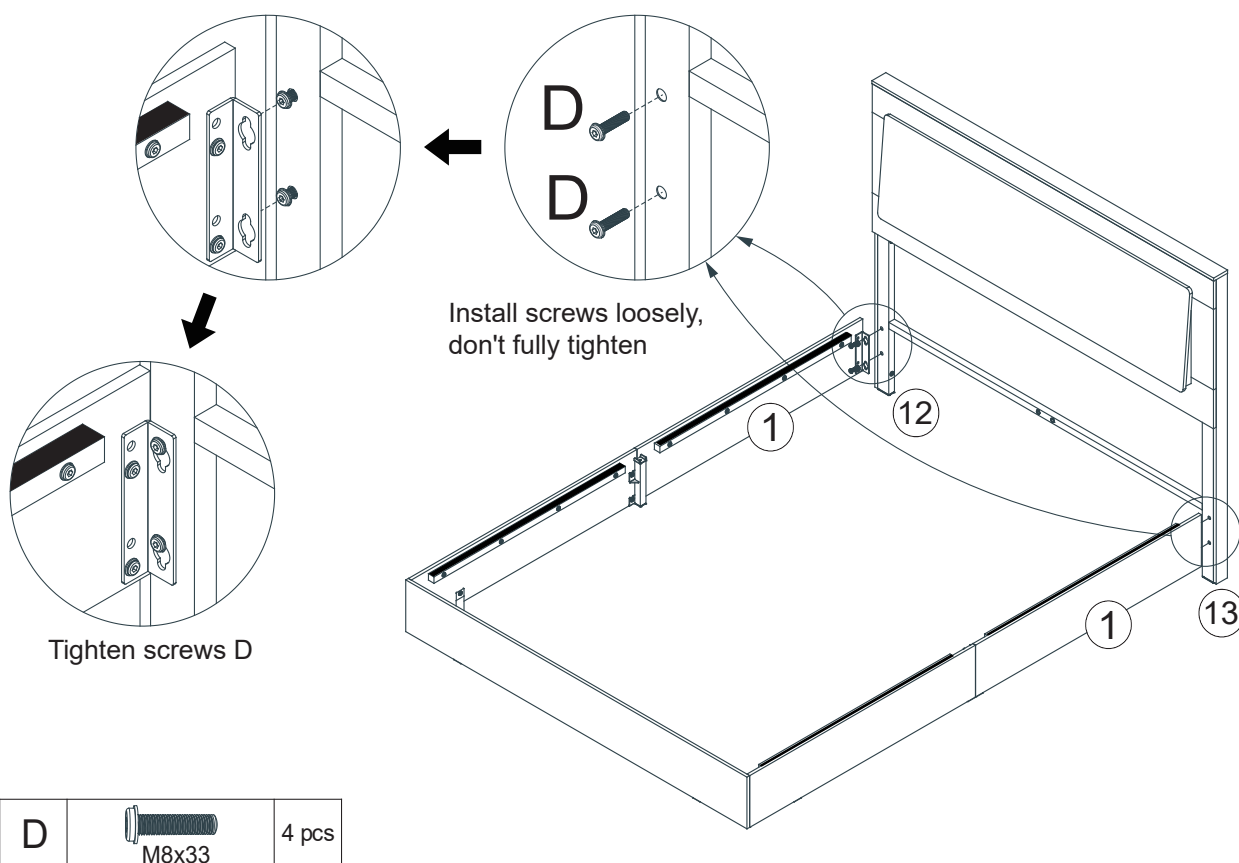


18

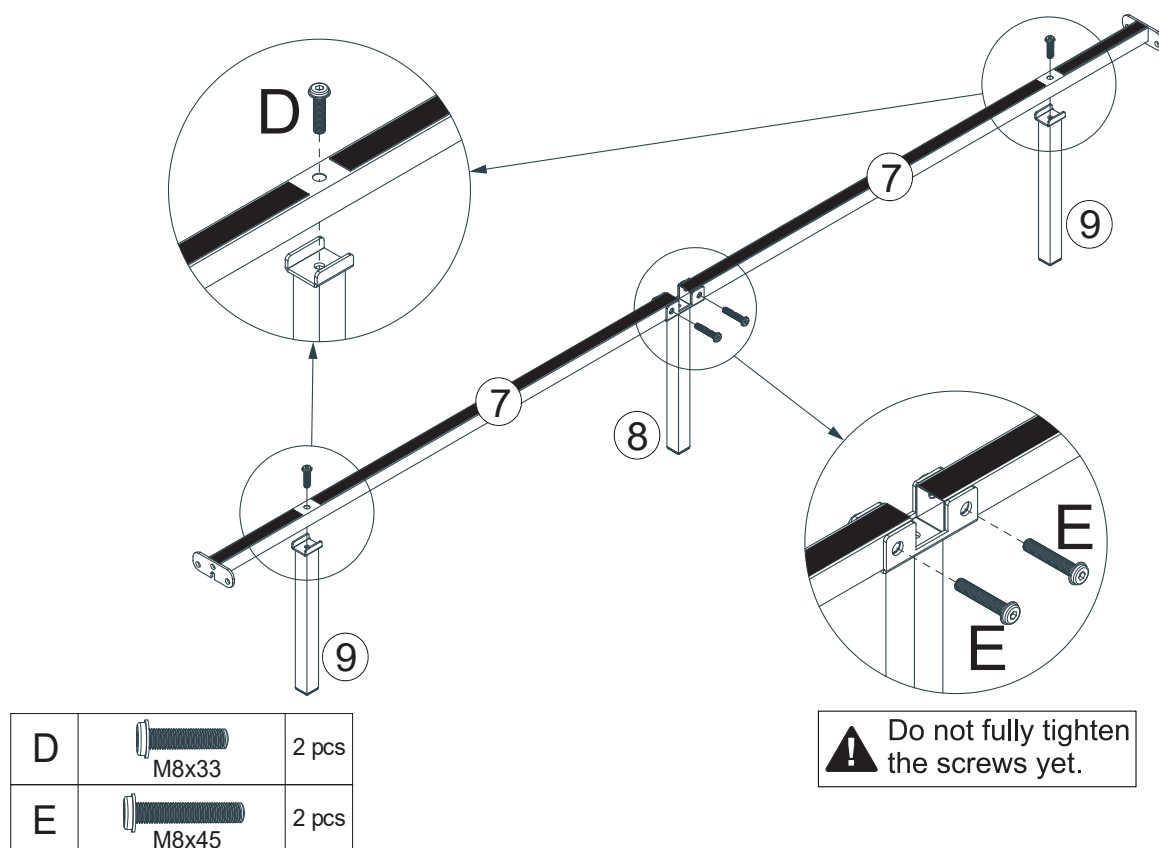



ASSEMBLY INSTRUCTIONS


19

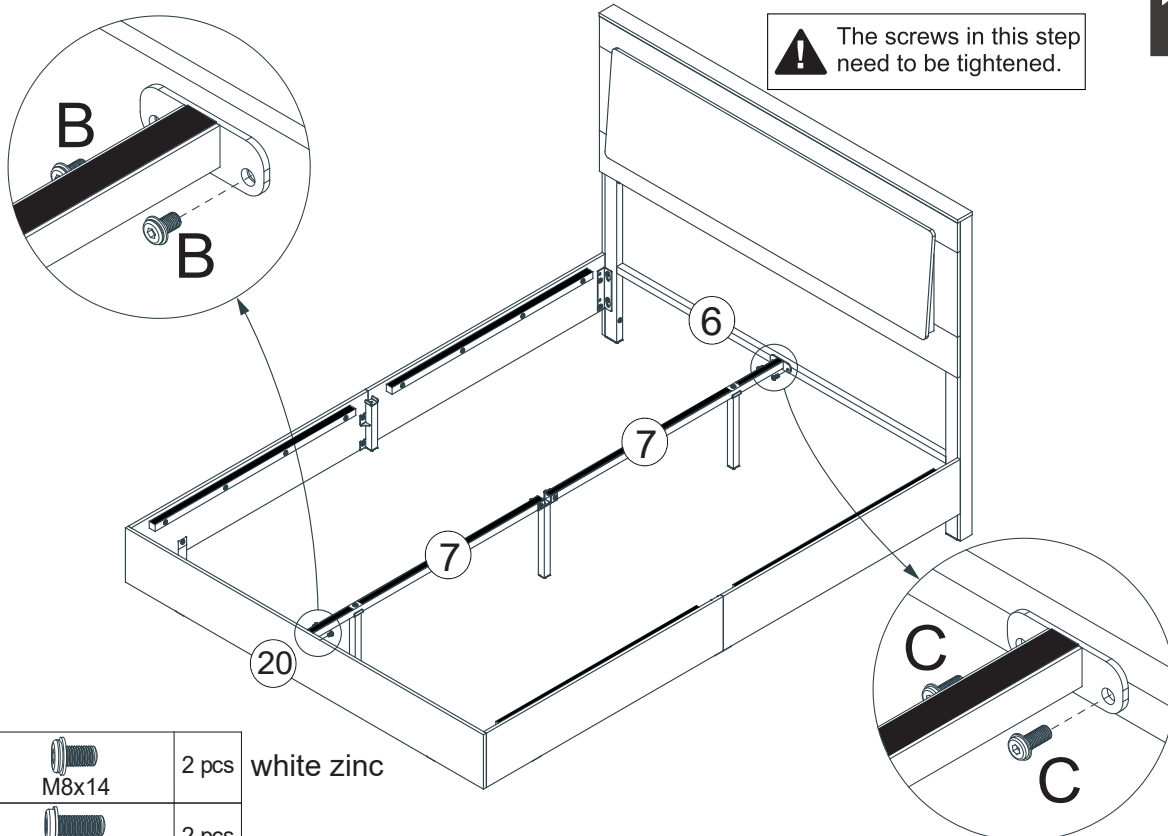! The screws in this step need to be tightened.




B	 M8x14	2 pcs	white zinc
C	 M8x20	2 pcs	

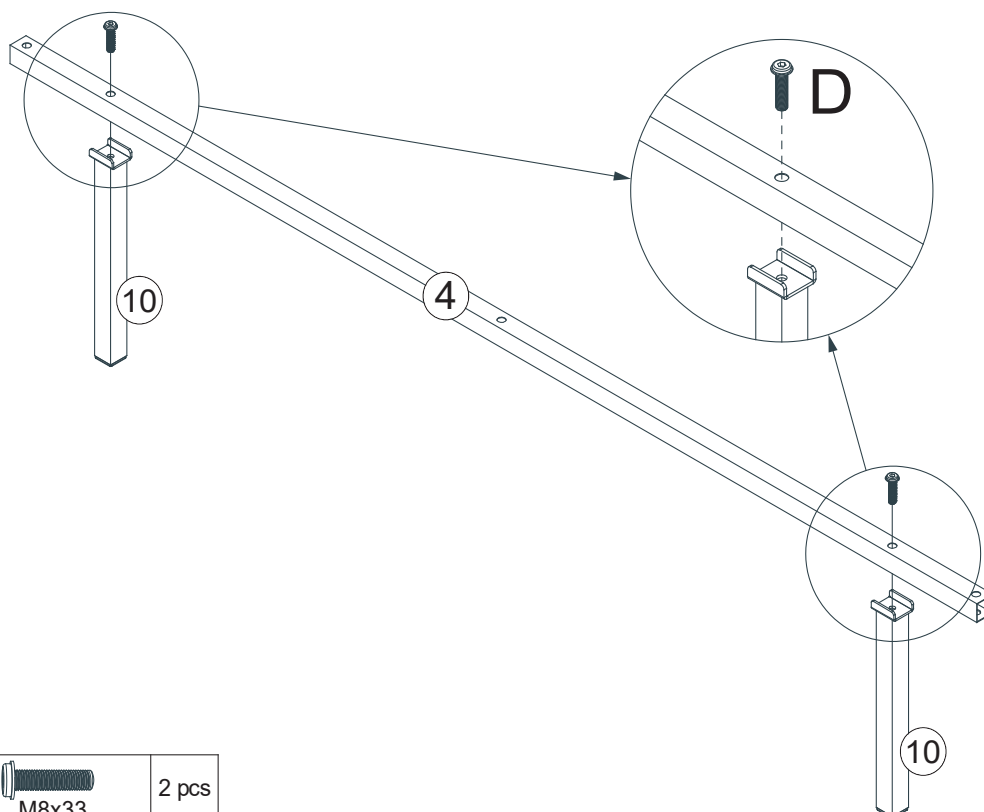

20




D	 M8x33	2 pcs
---	---	-------

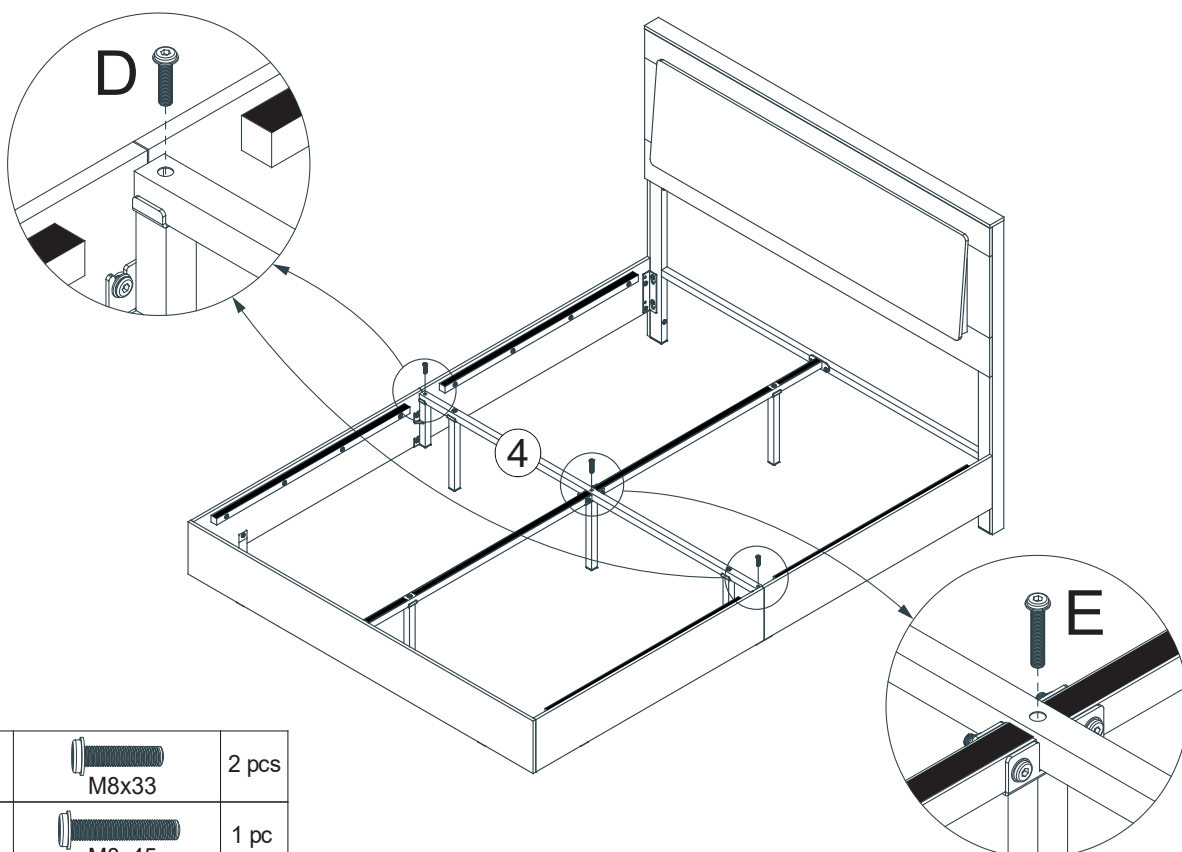21



D	 M8x33	2 pcs
E	 M8x45	1 pc


22

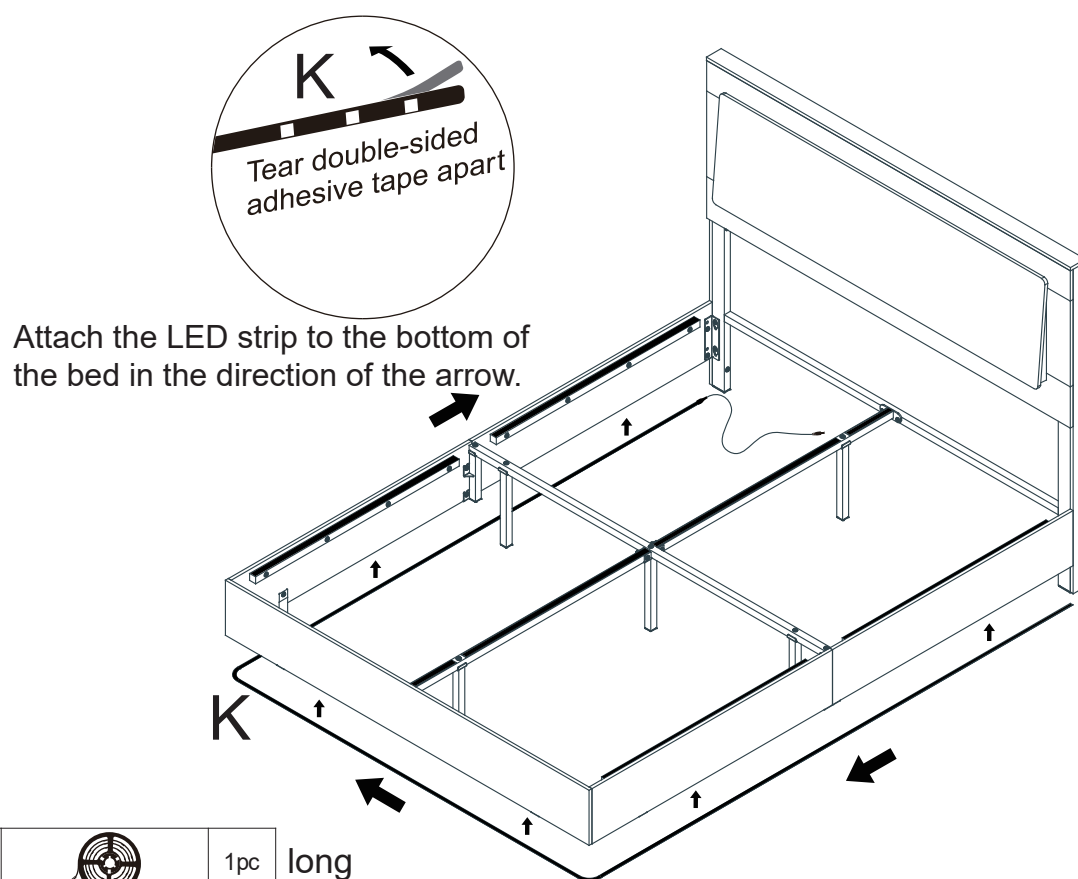

K	 1pc long	
---	--	--


Tear off adhesive tape on Part I, then stick it to part 21. Use part I to organize cables.

23

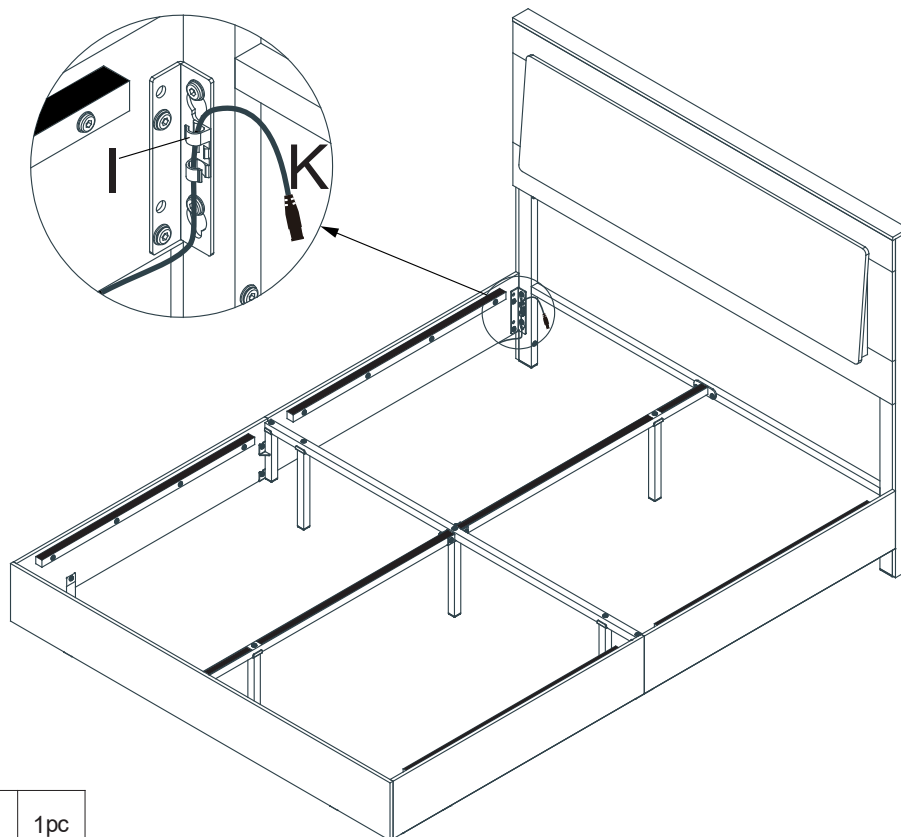


I		1pc
---	--	-----

24

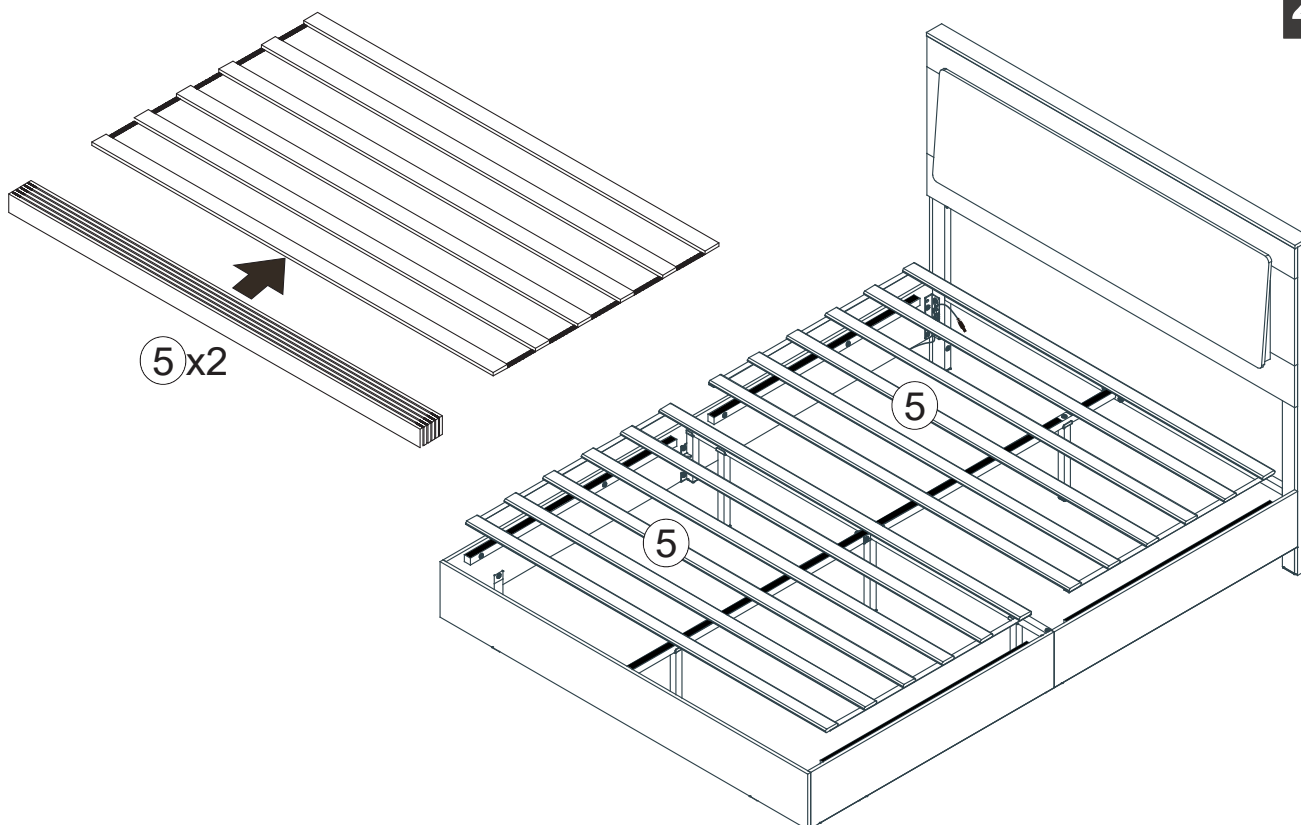



25

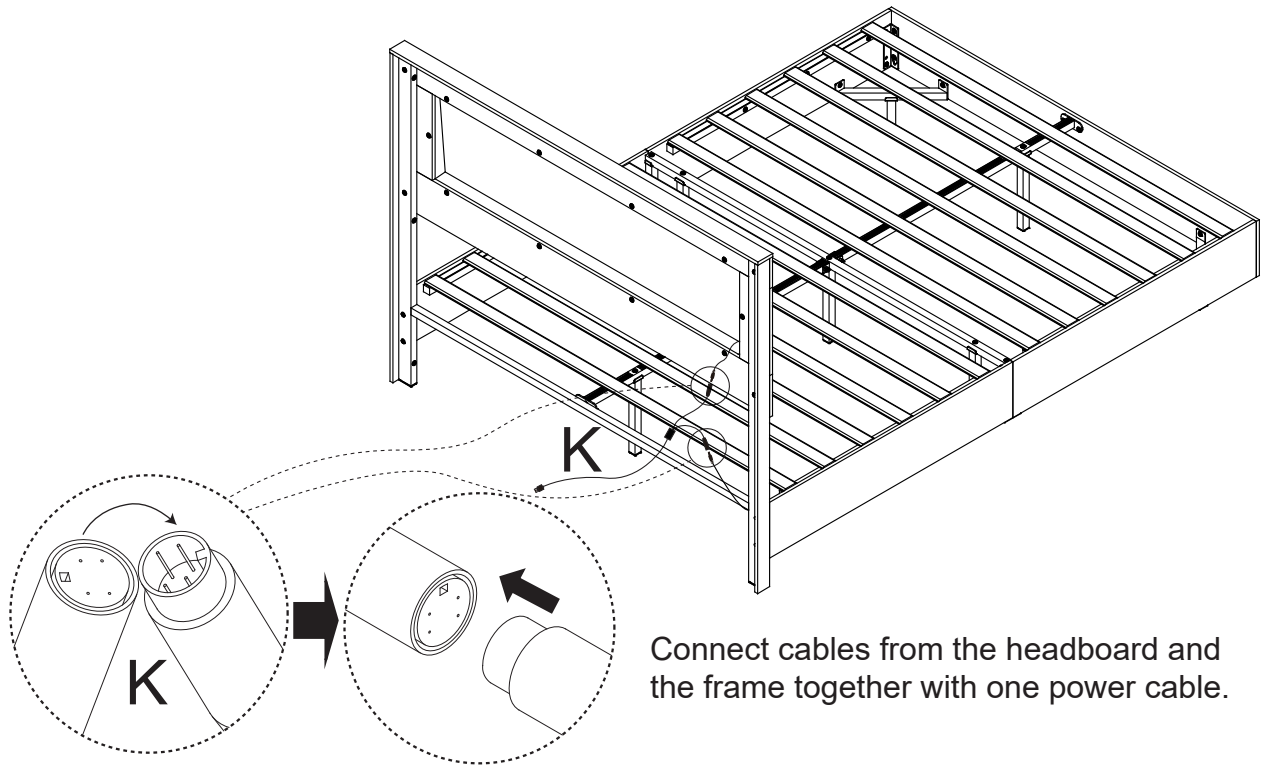

Connect cables from the headboard and the frame together with one power cable.



26

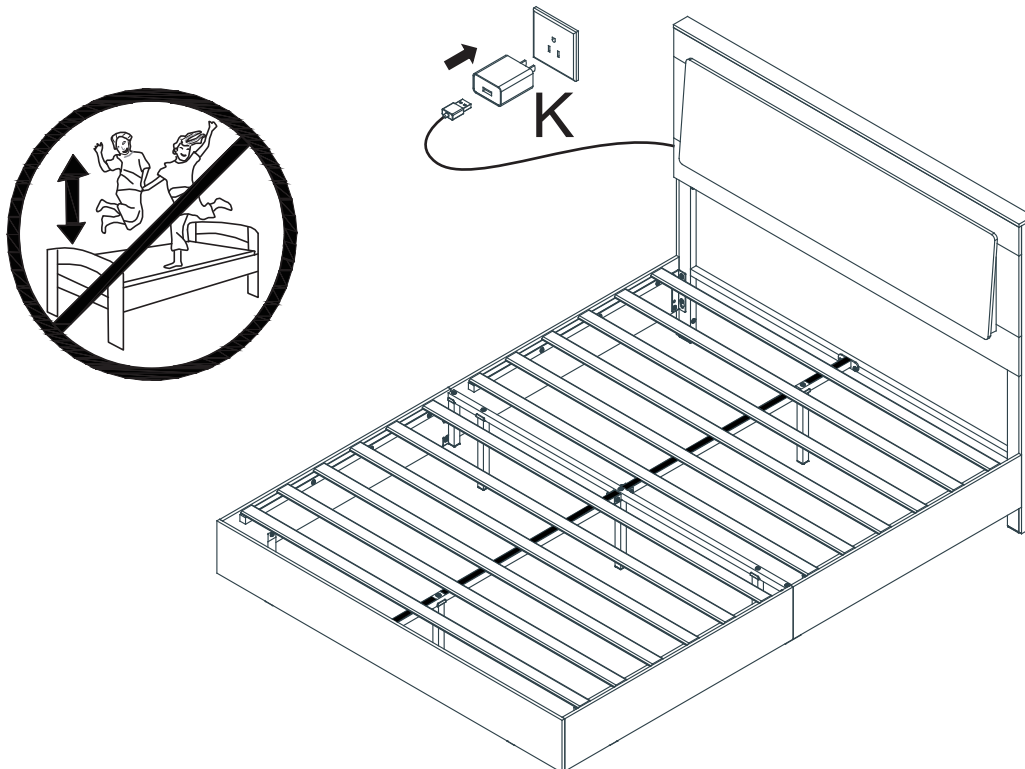

Installation Complete