




Product Installation Instructions

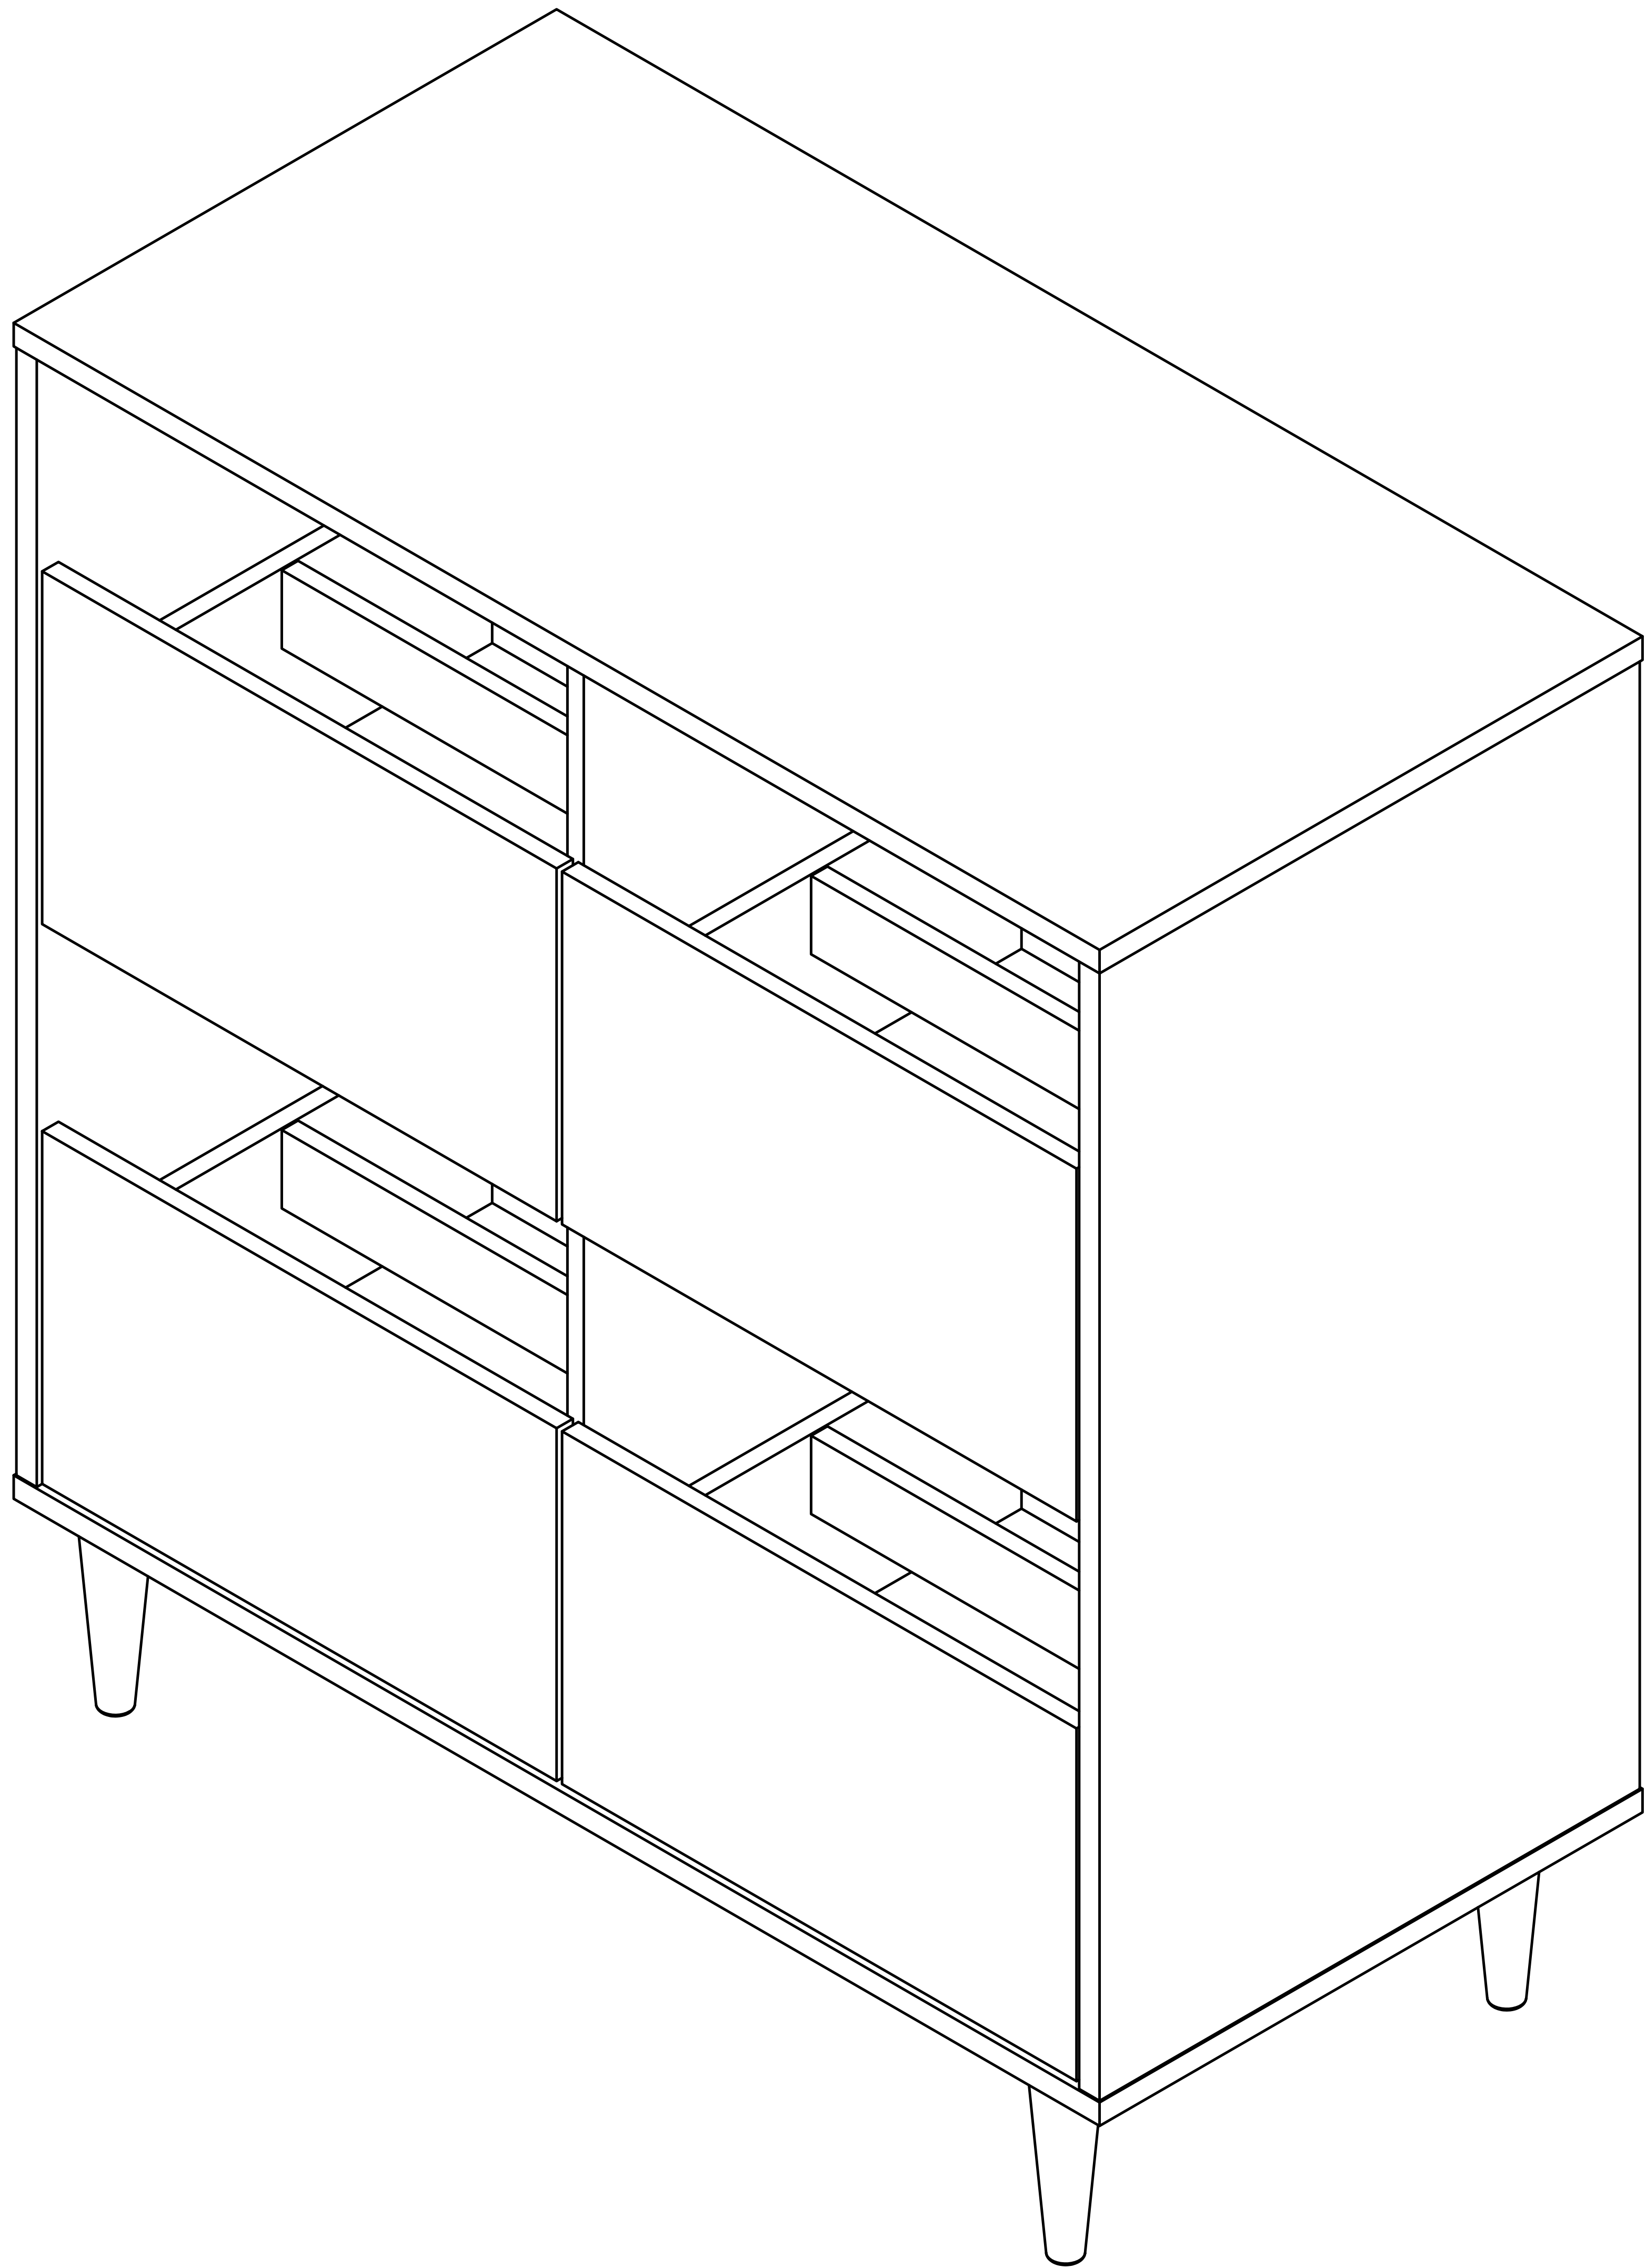


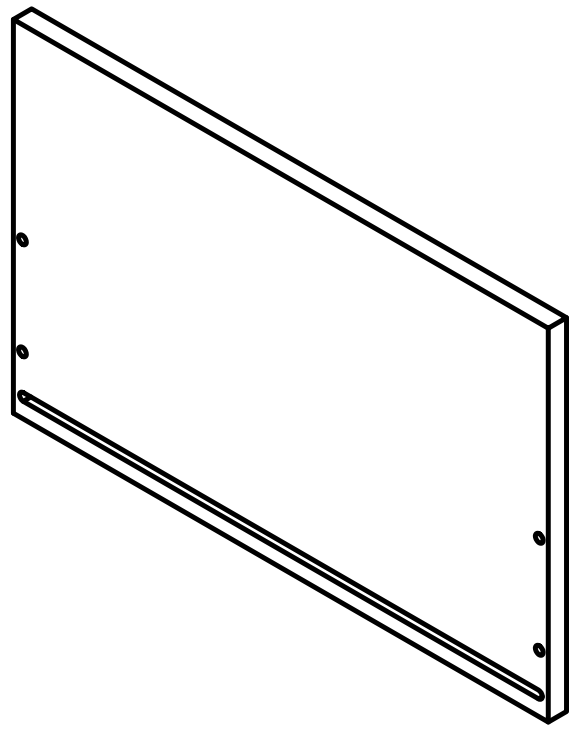


Ax4

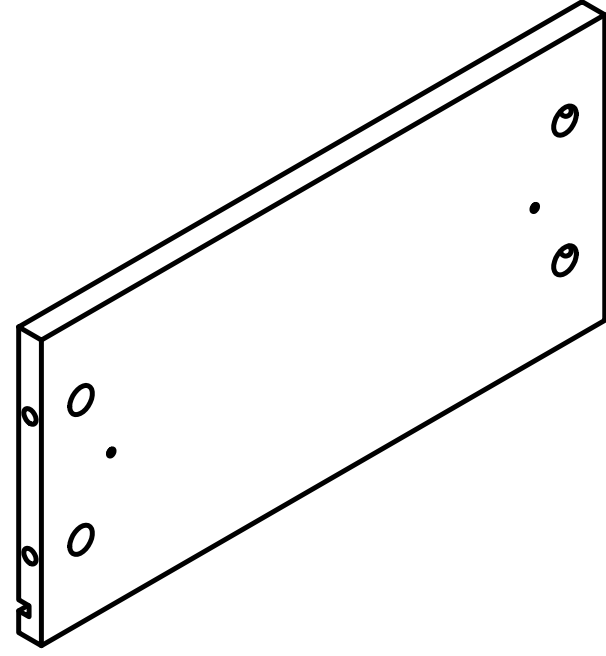


Bx8

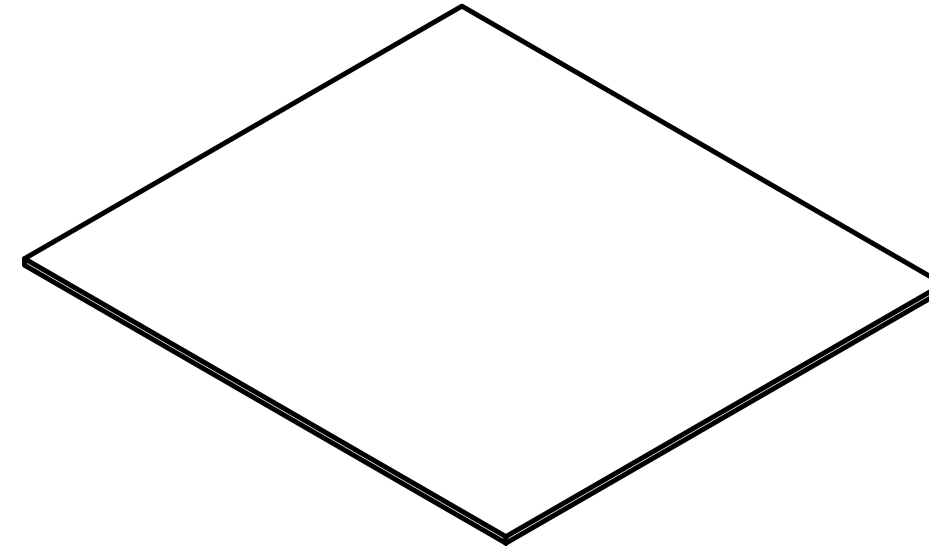


Cx4

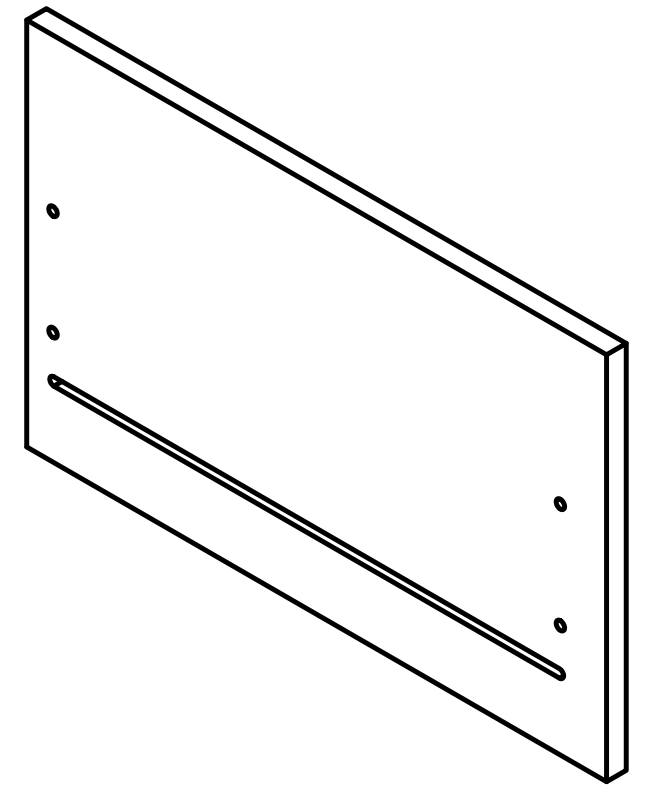


Dx2

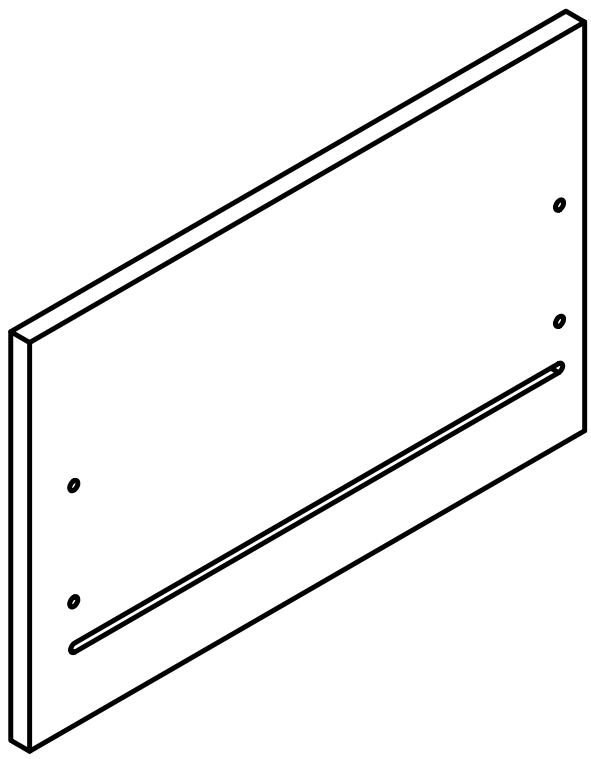


Ex2

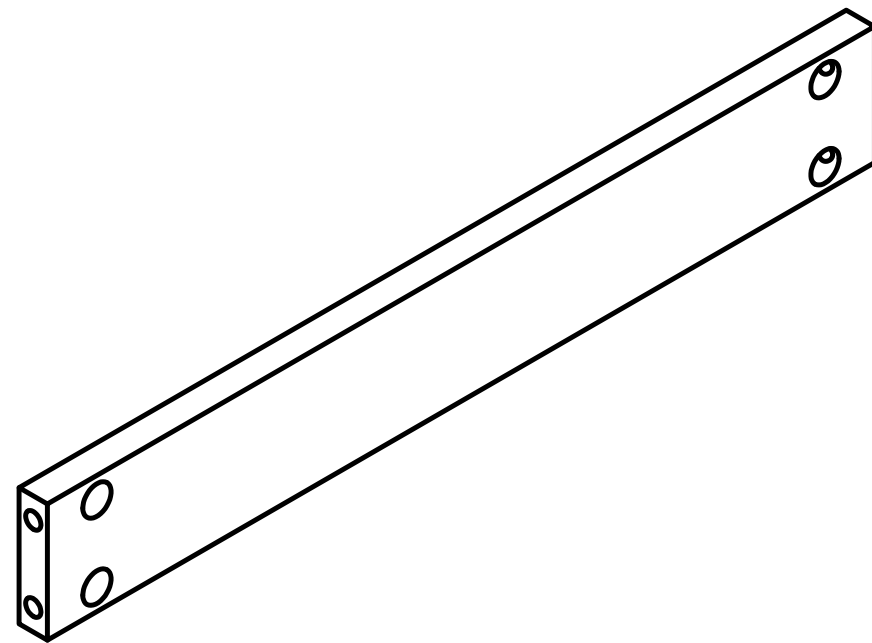


Fx4

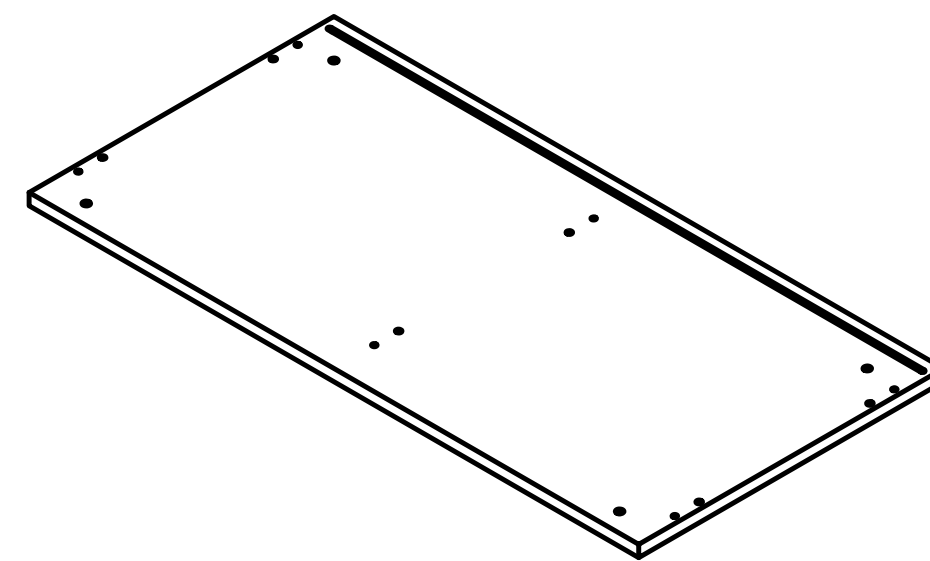


Gx1

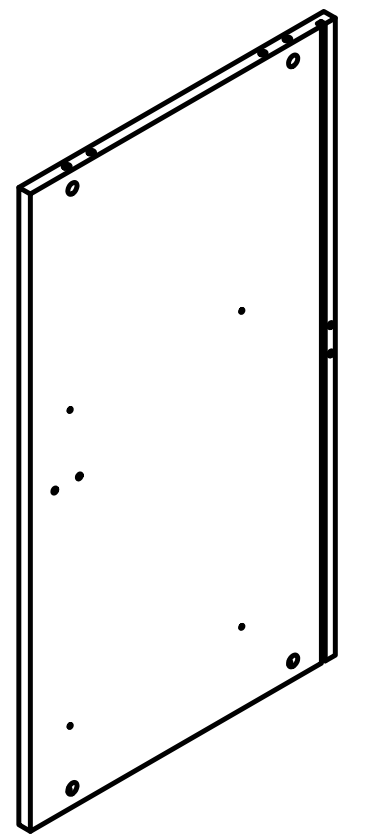


Hx1

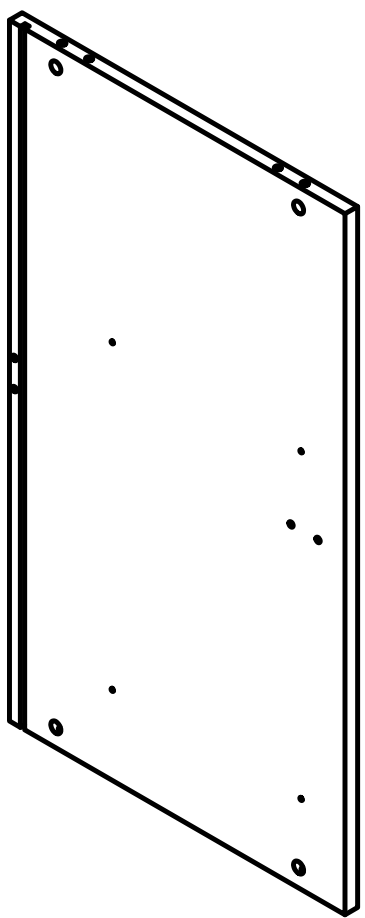


Ix1

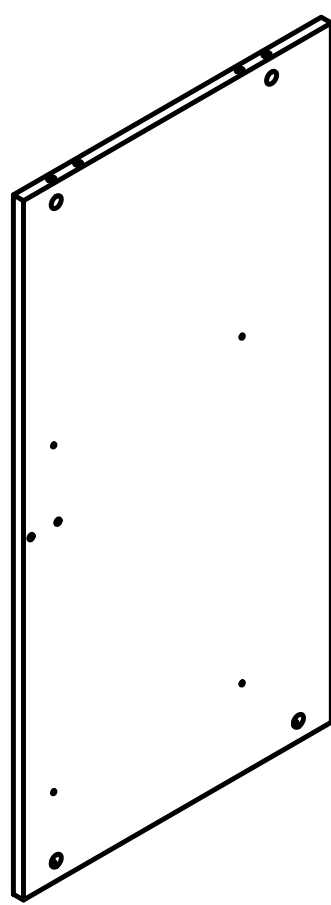


Jx1

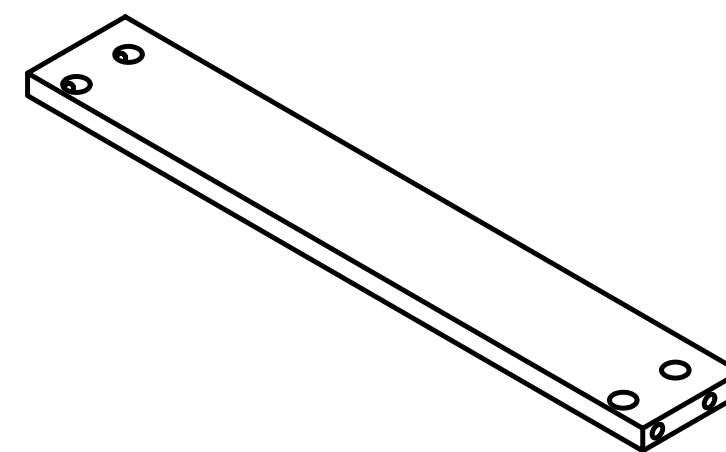


Kx1

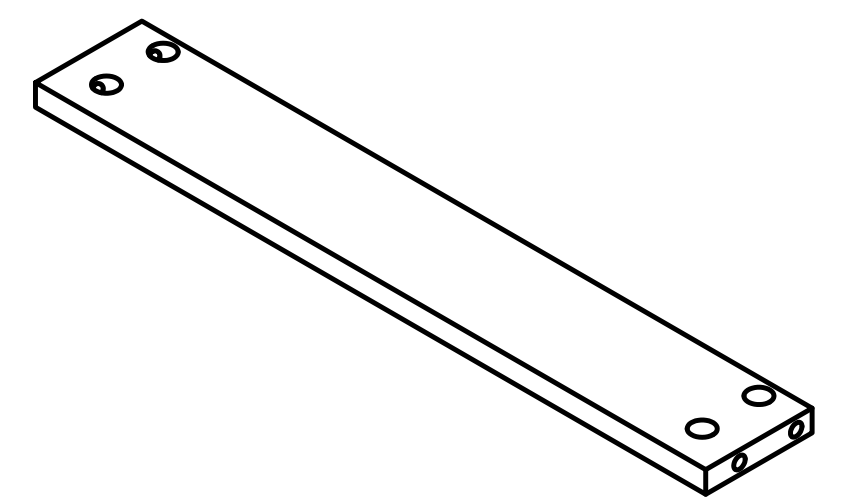


Lx1

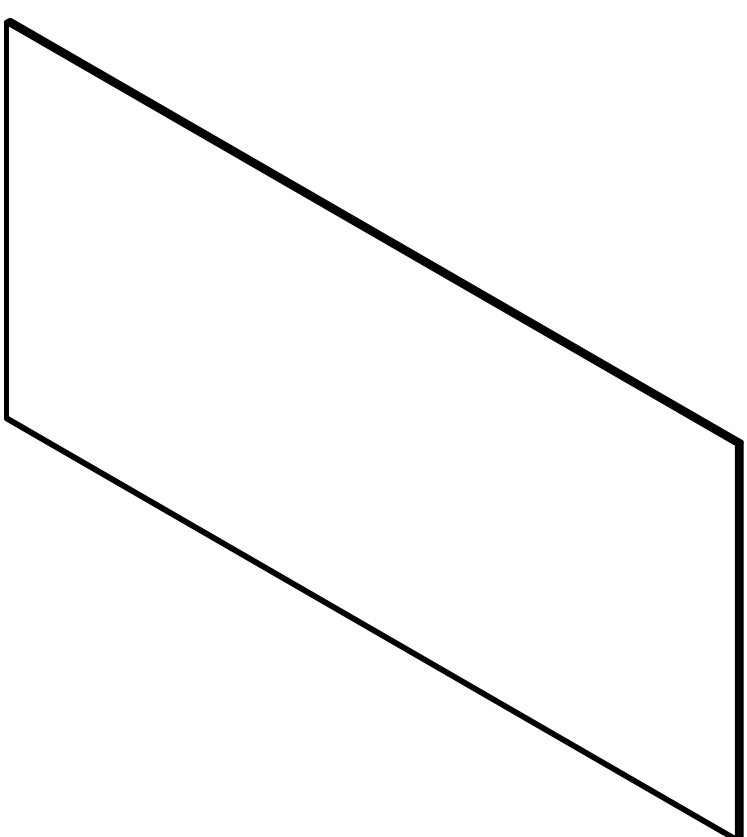


Mx2

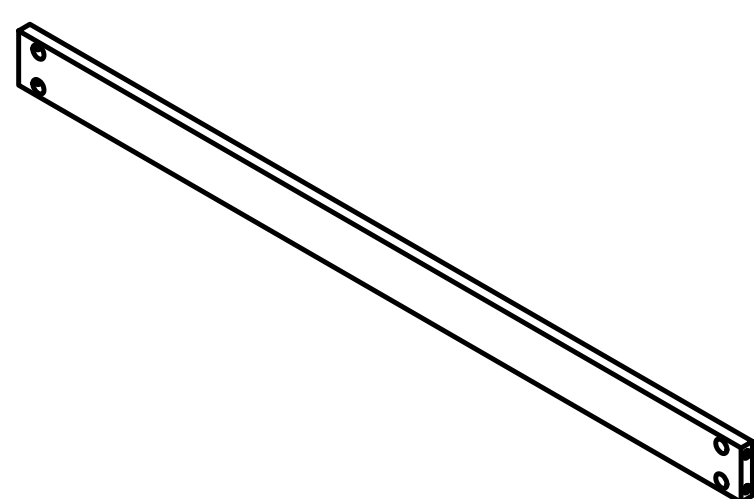


Nx1

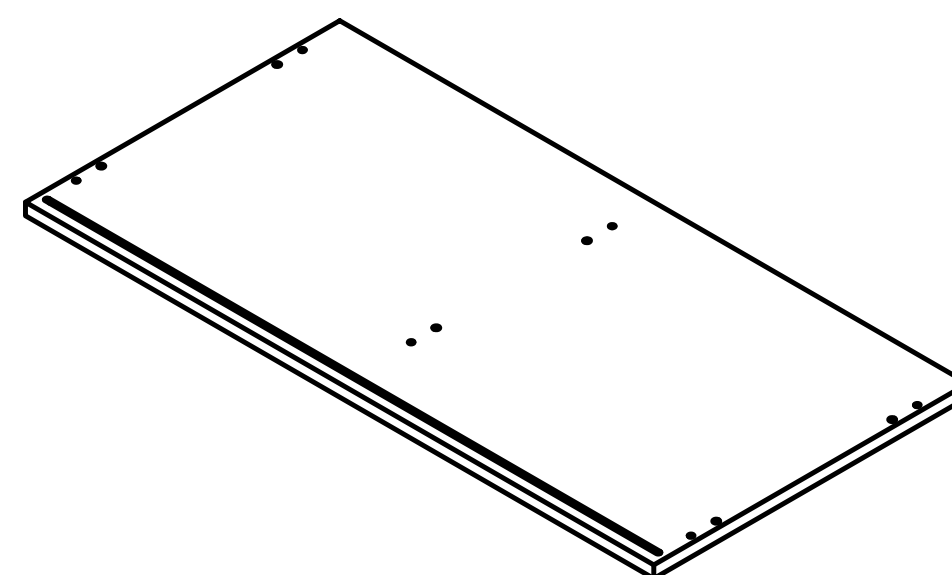











Ox1

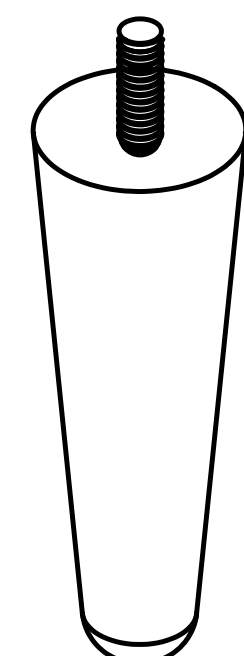


Px5

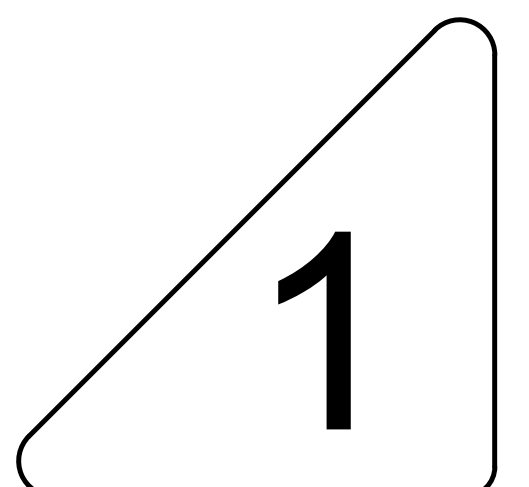


1

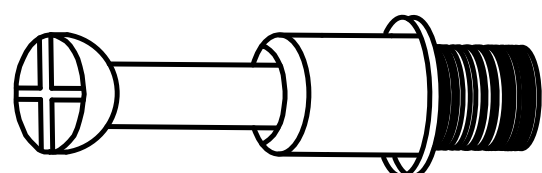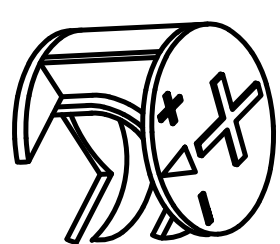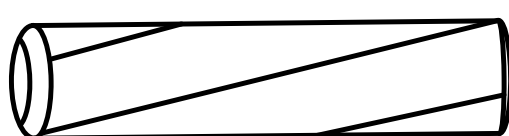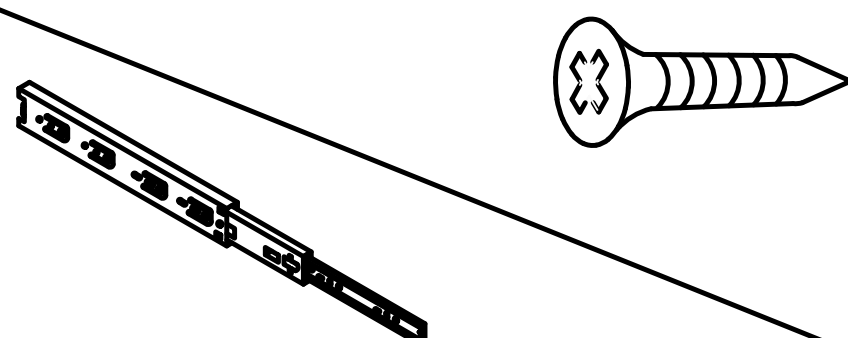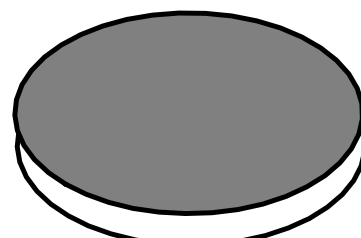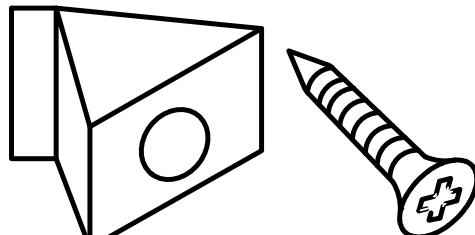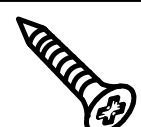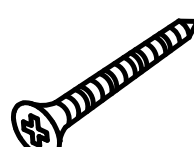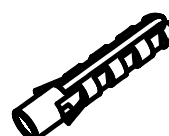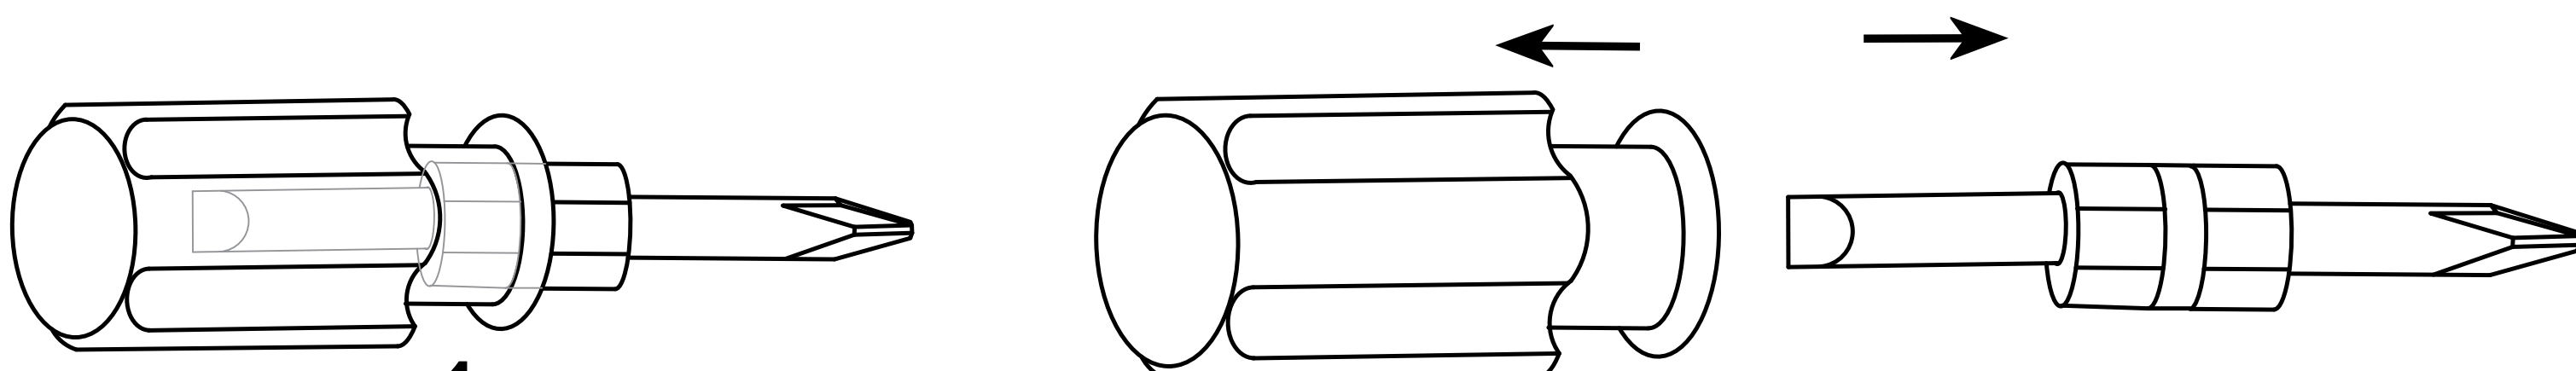Accessories list				
①		Two in one screw (6x28mm)	72pcs +5pcs	
②		Two in one nut (10x12mm)	72pcs +5pcs	
③		Wood chipping (6x30mm)	12pcs +4pcs	
④		Guide & Screw(29cm) (3x12mm)	40pcs +8pcs 8pcs	
⑤		Non-slip pads (φ12x2mm)	5pcs +1pcs	
⑥		Fixing clip & screw (3x16mm)	8pcs +1pcs	
⑦		anti-tipping tape Screw & gasket (3.5x14mm) Screw (4x45mm)	1pcs	
	 		1pcs	2pcs
	 		1pcs	1pcs
Double-head screwdriver, use as required  1pcs				
				2

Product structure decomposition

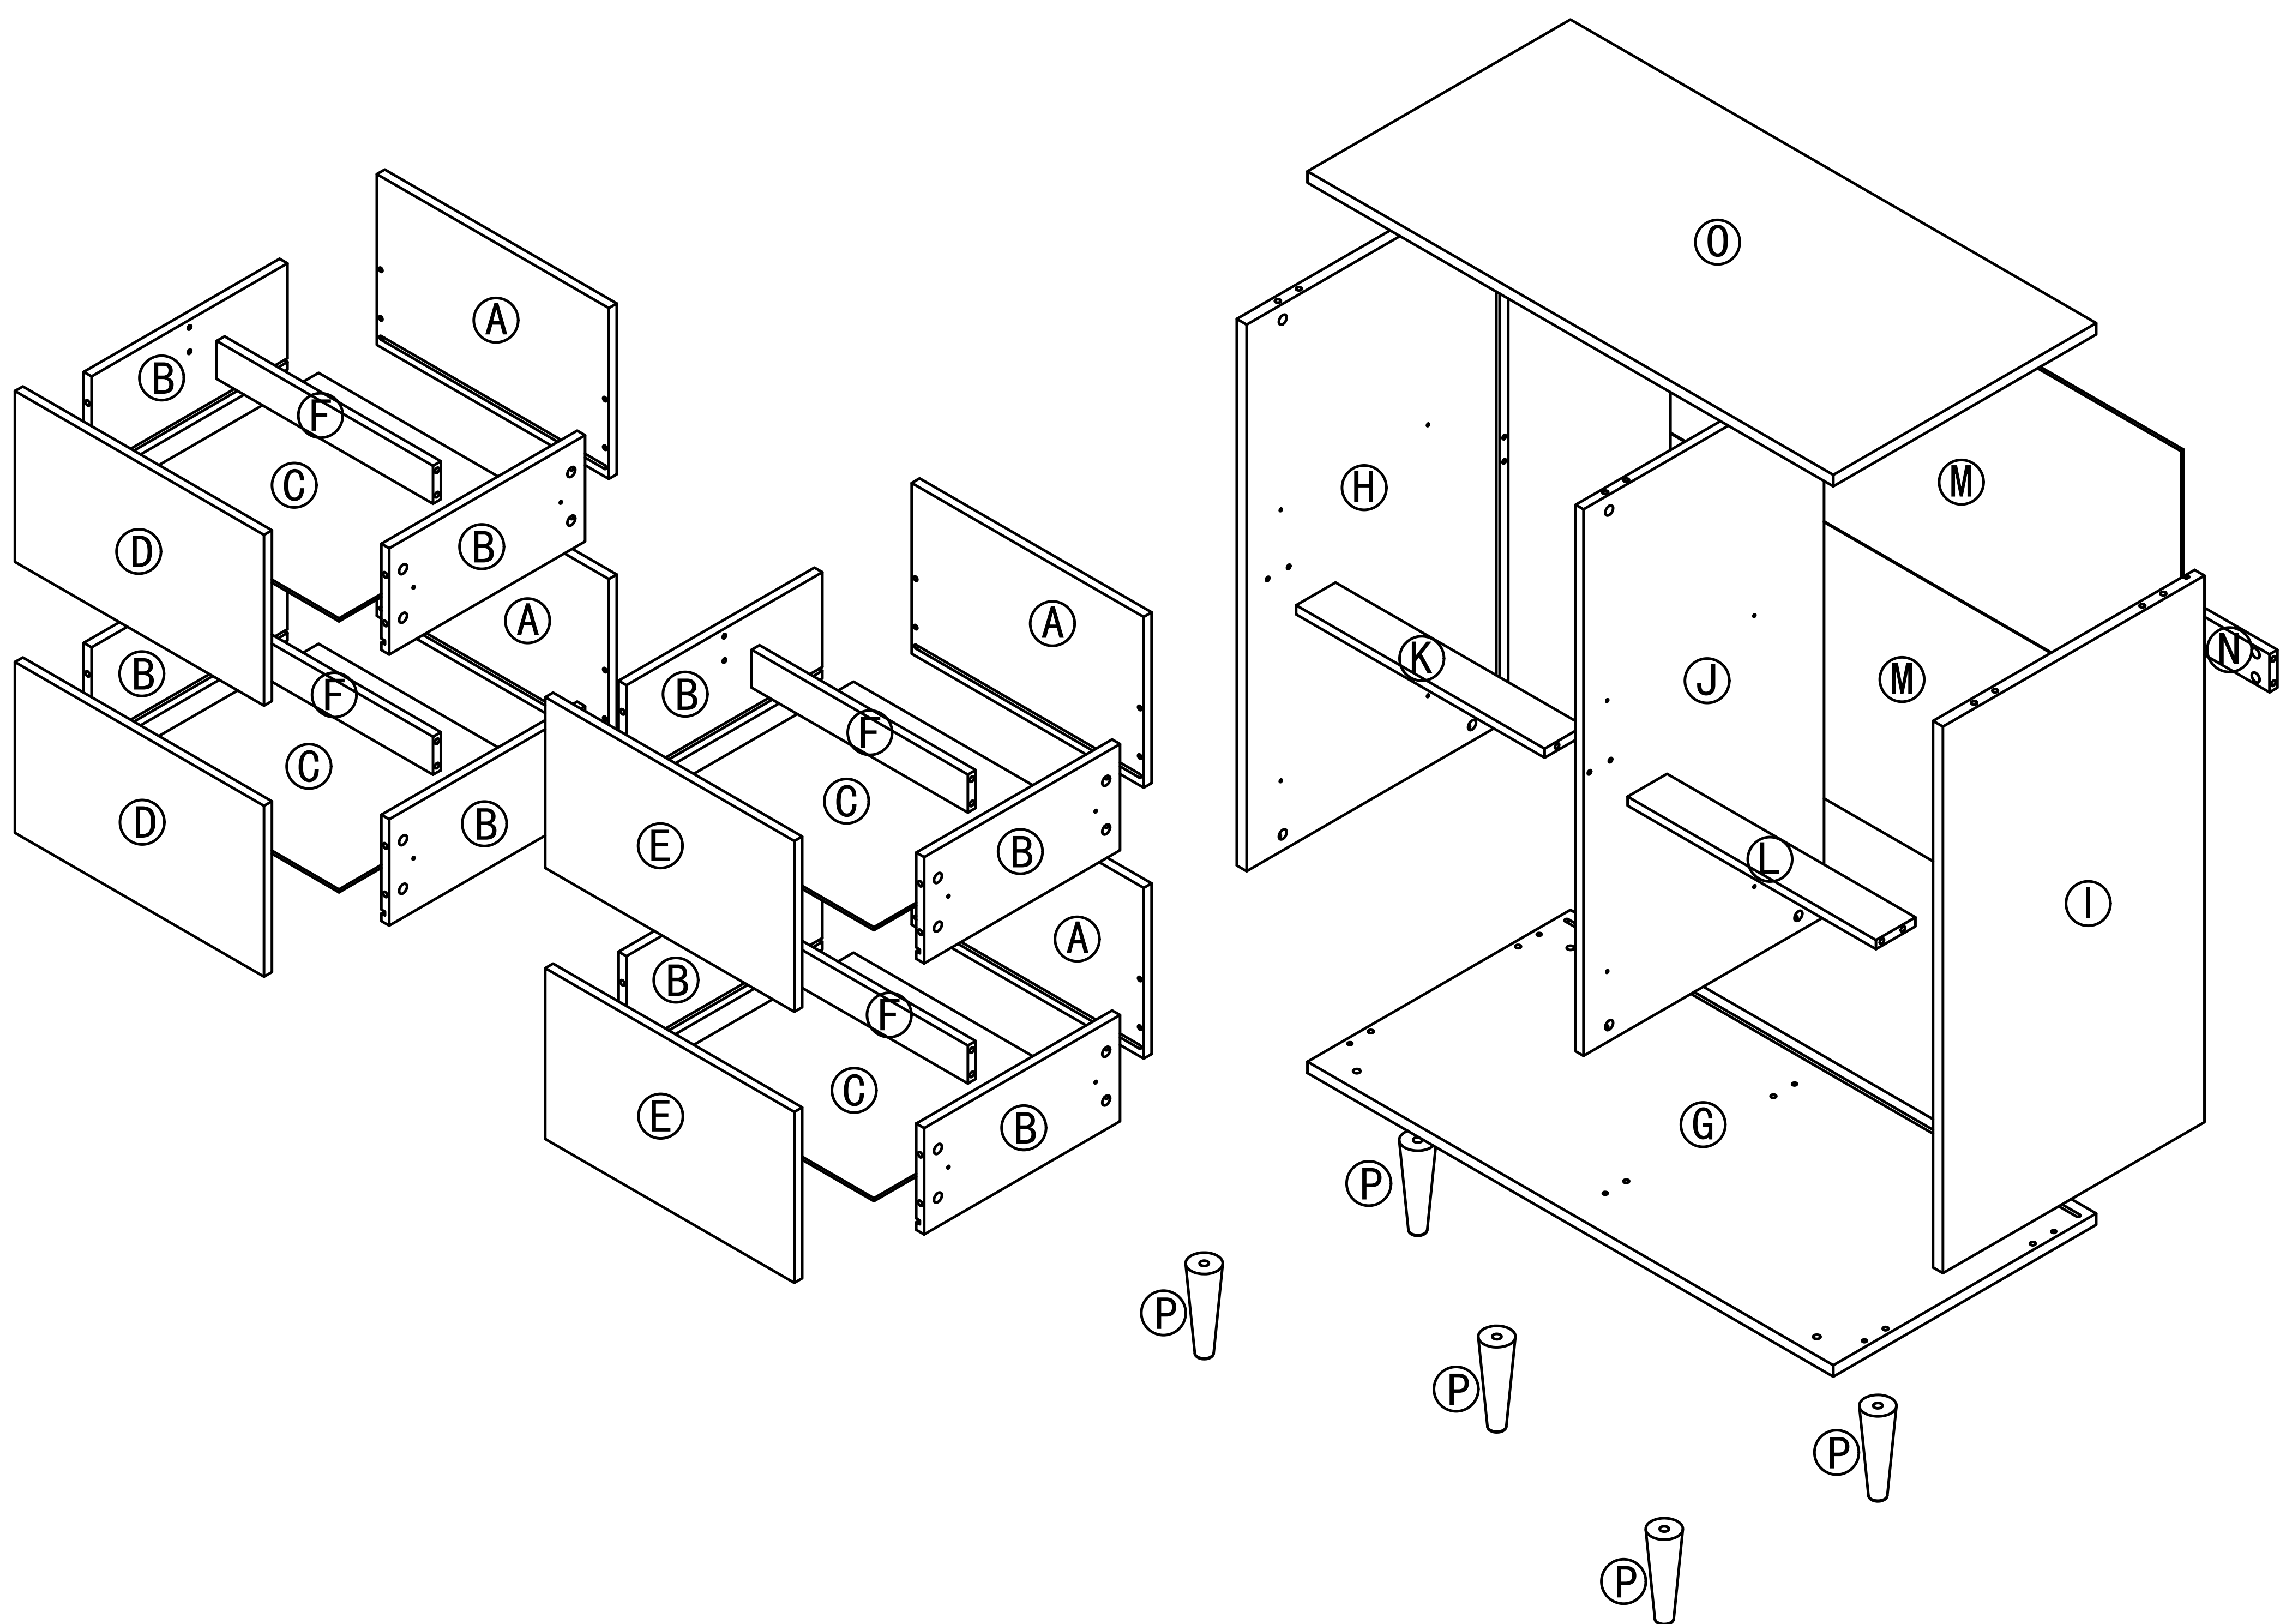


1

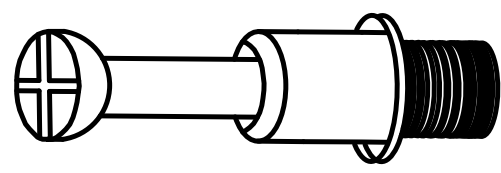


48pcs

2

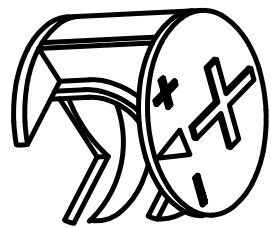


48pcs







4

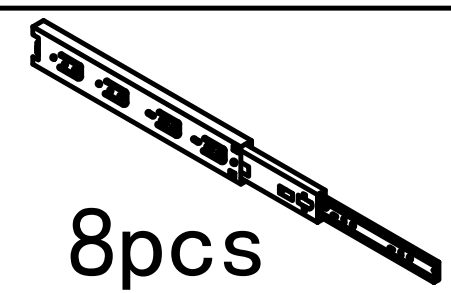

8pcs

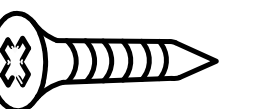


16pcs

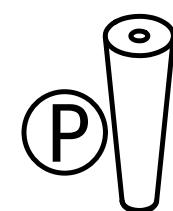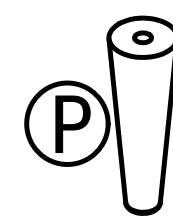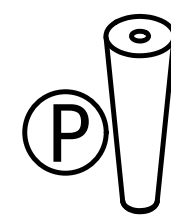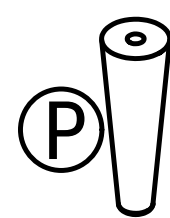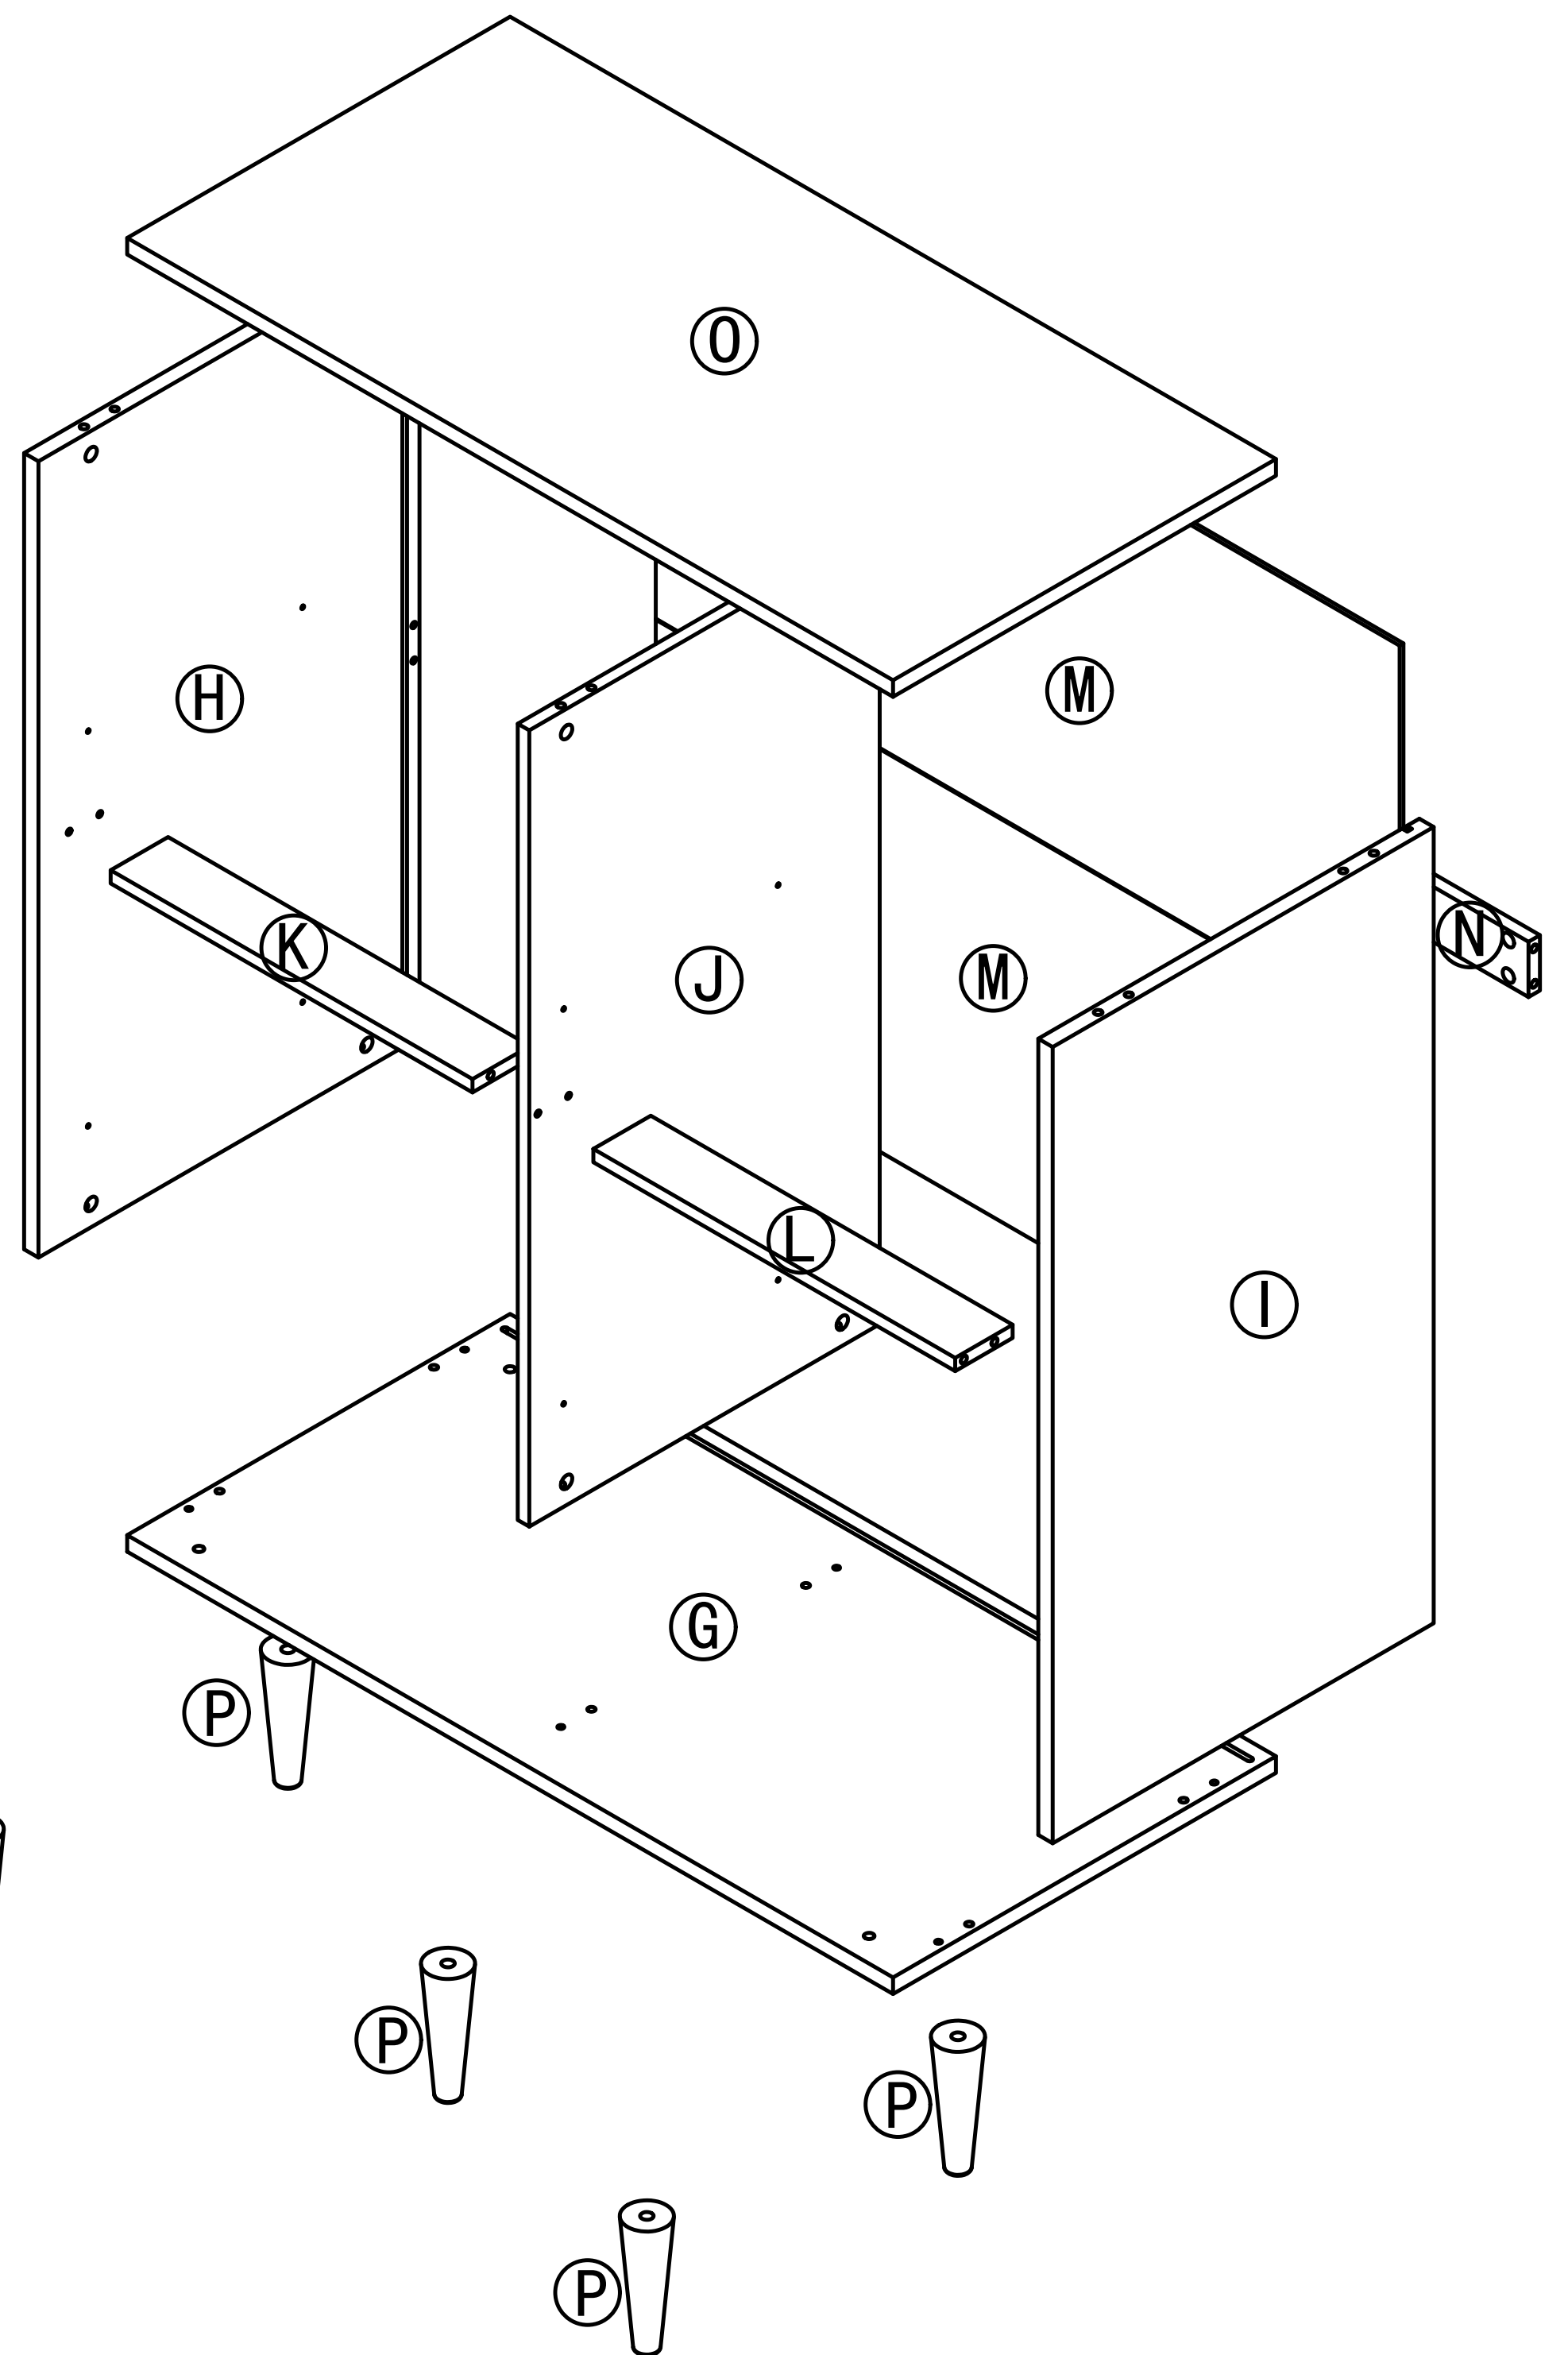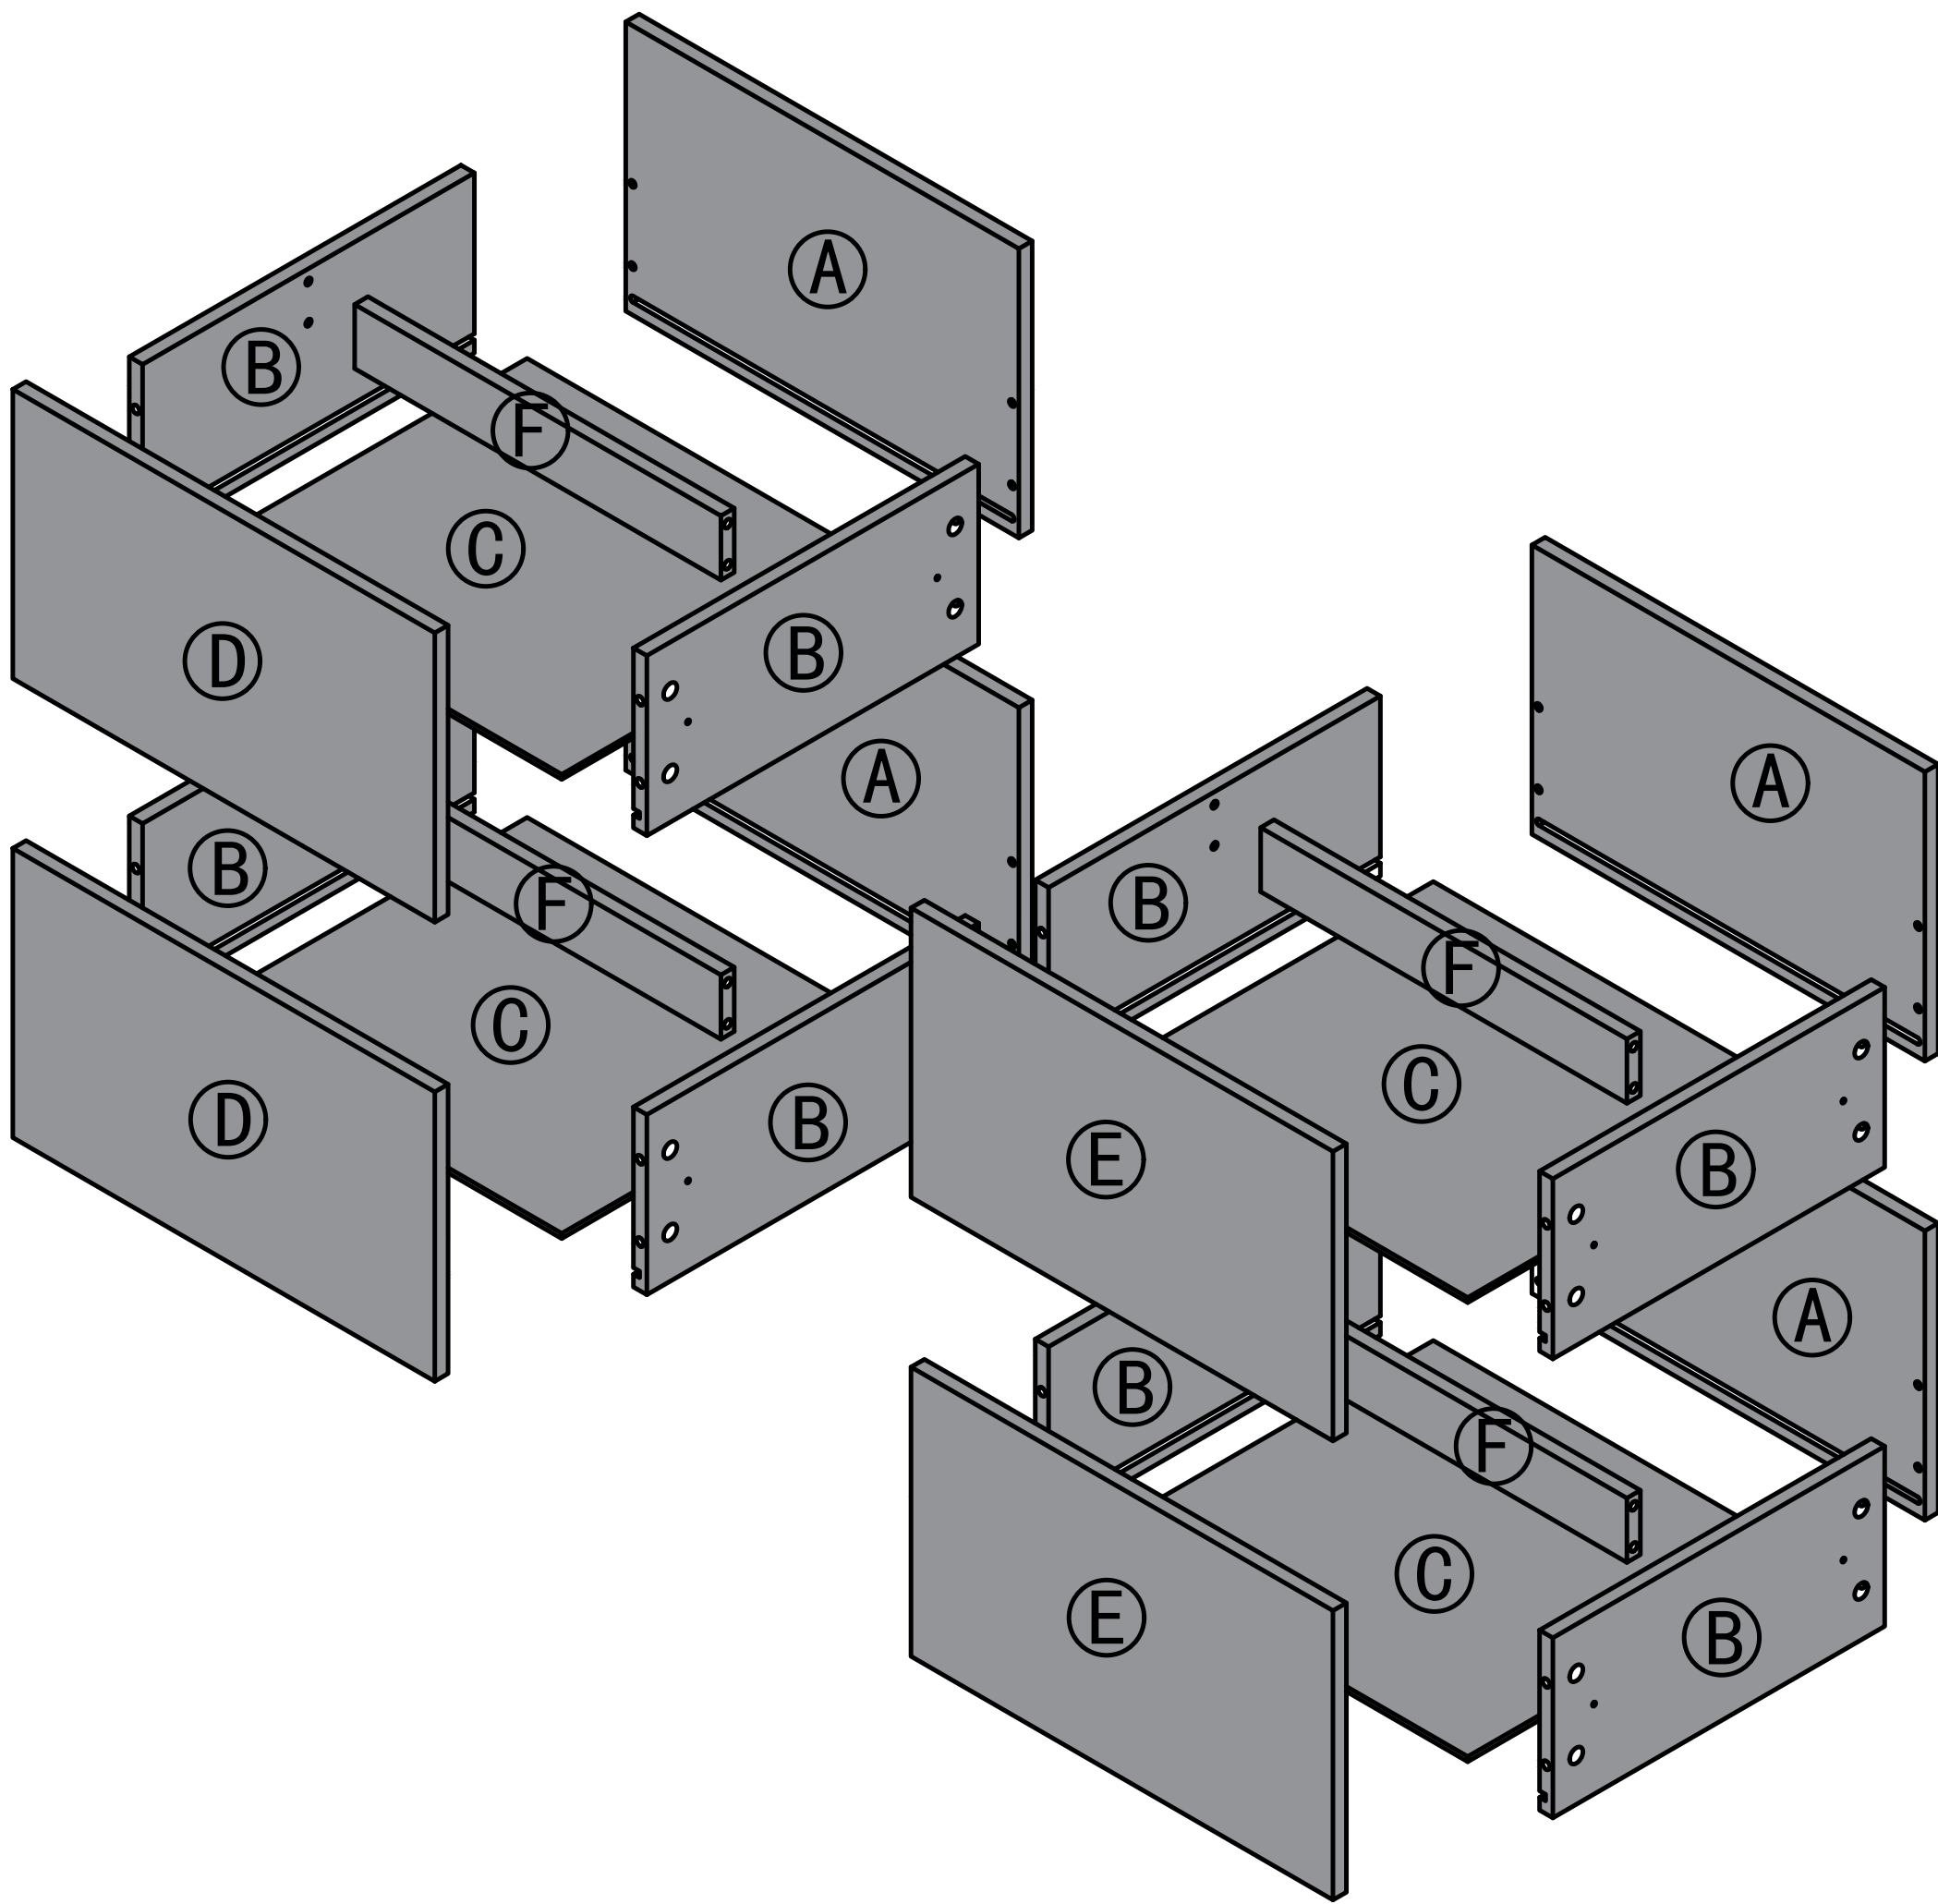


4

Use parts ① and ②




Step1

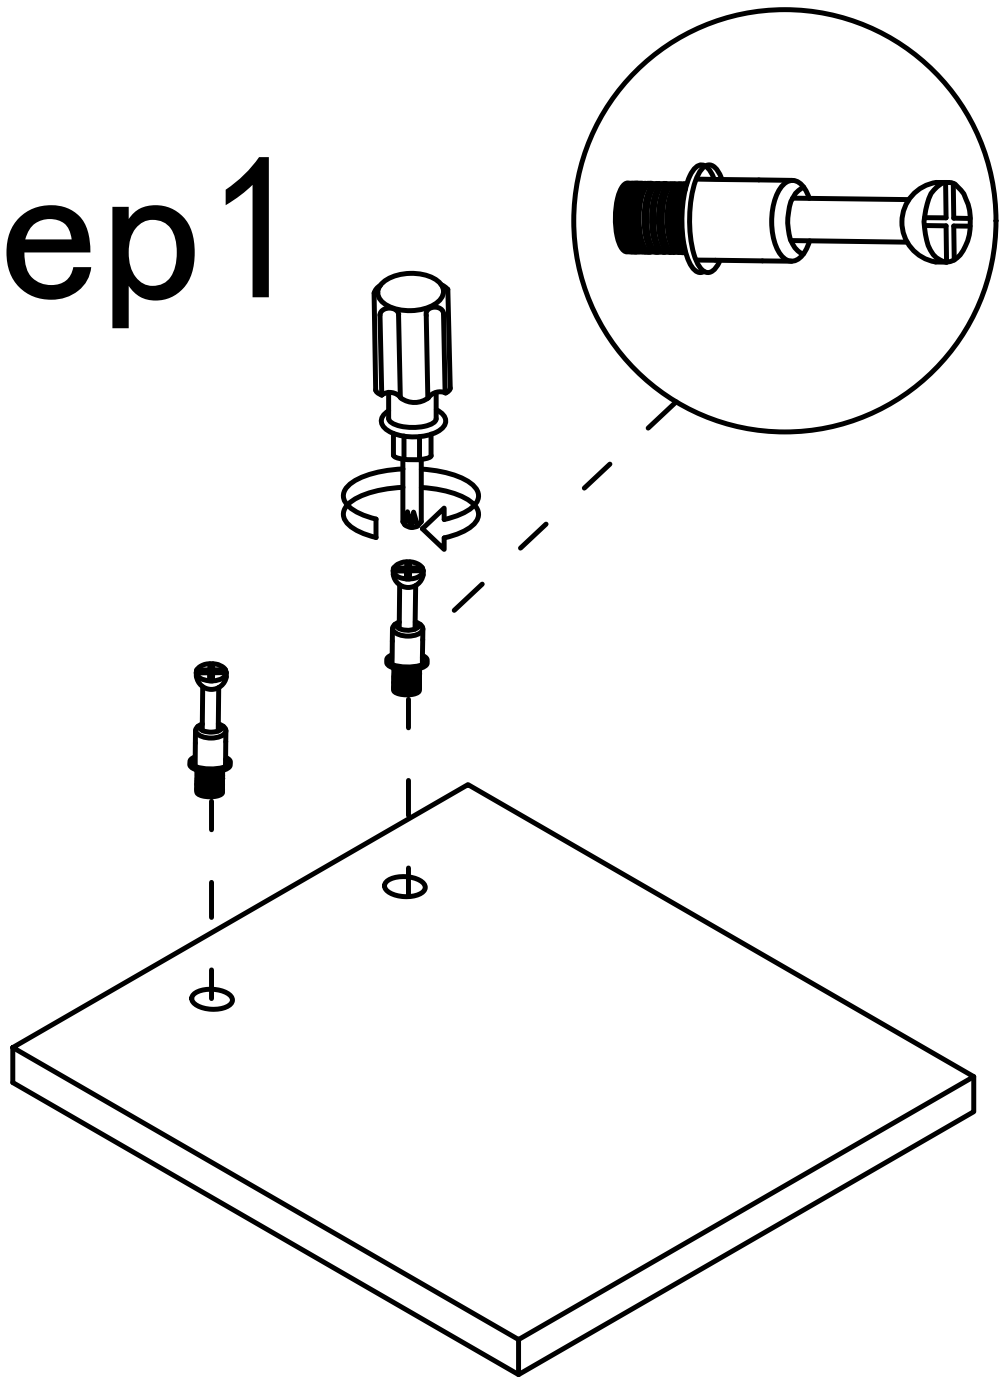

Step2

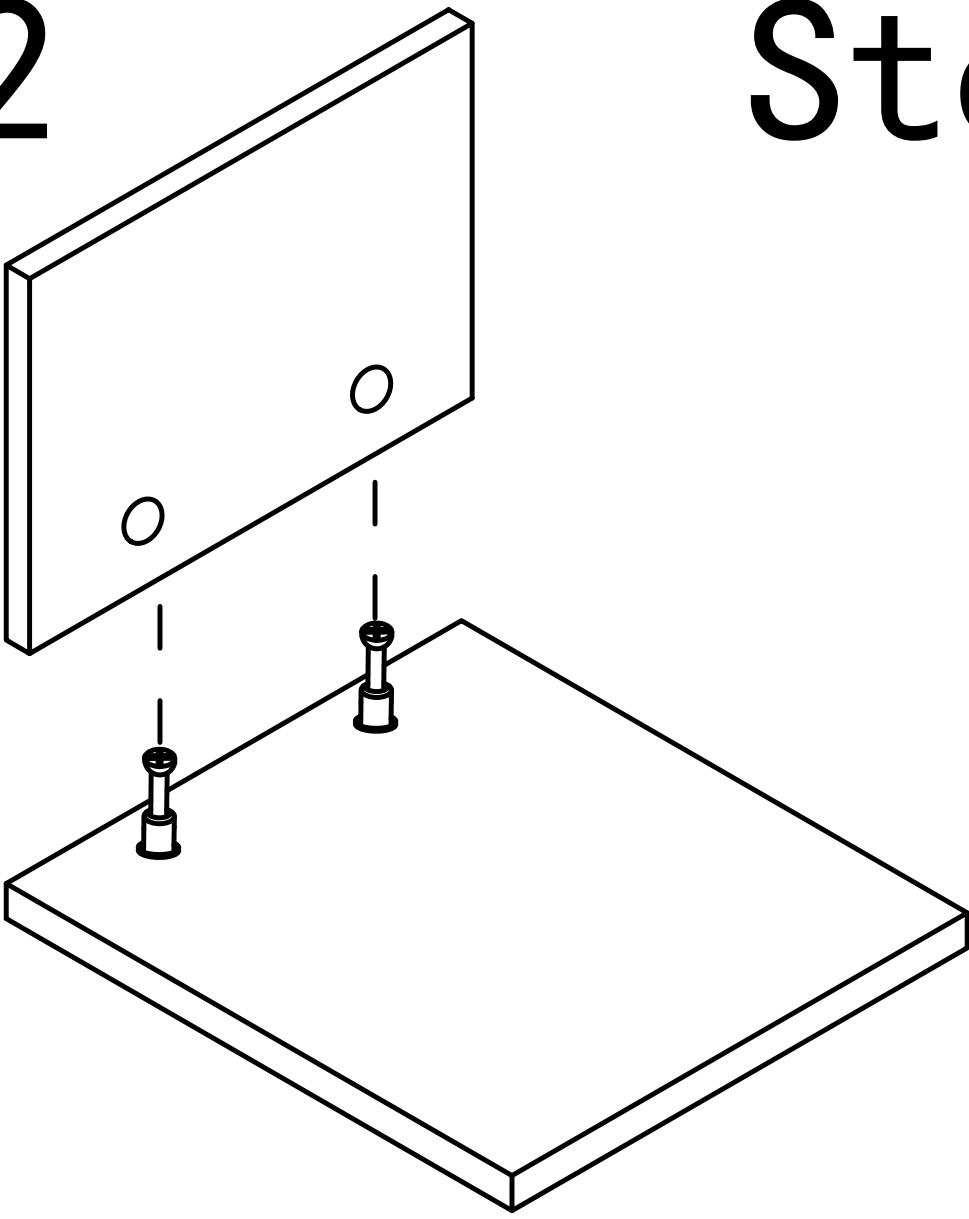



Step3

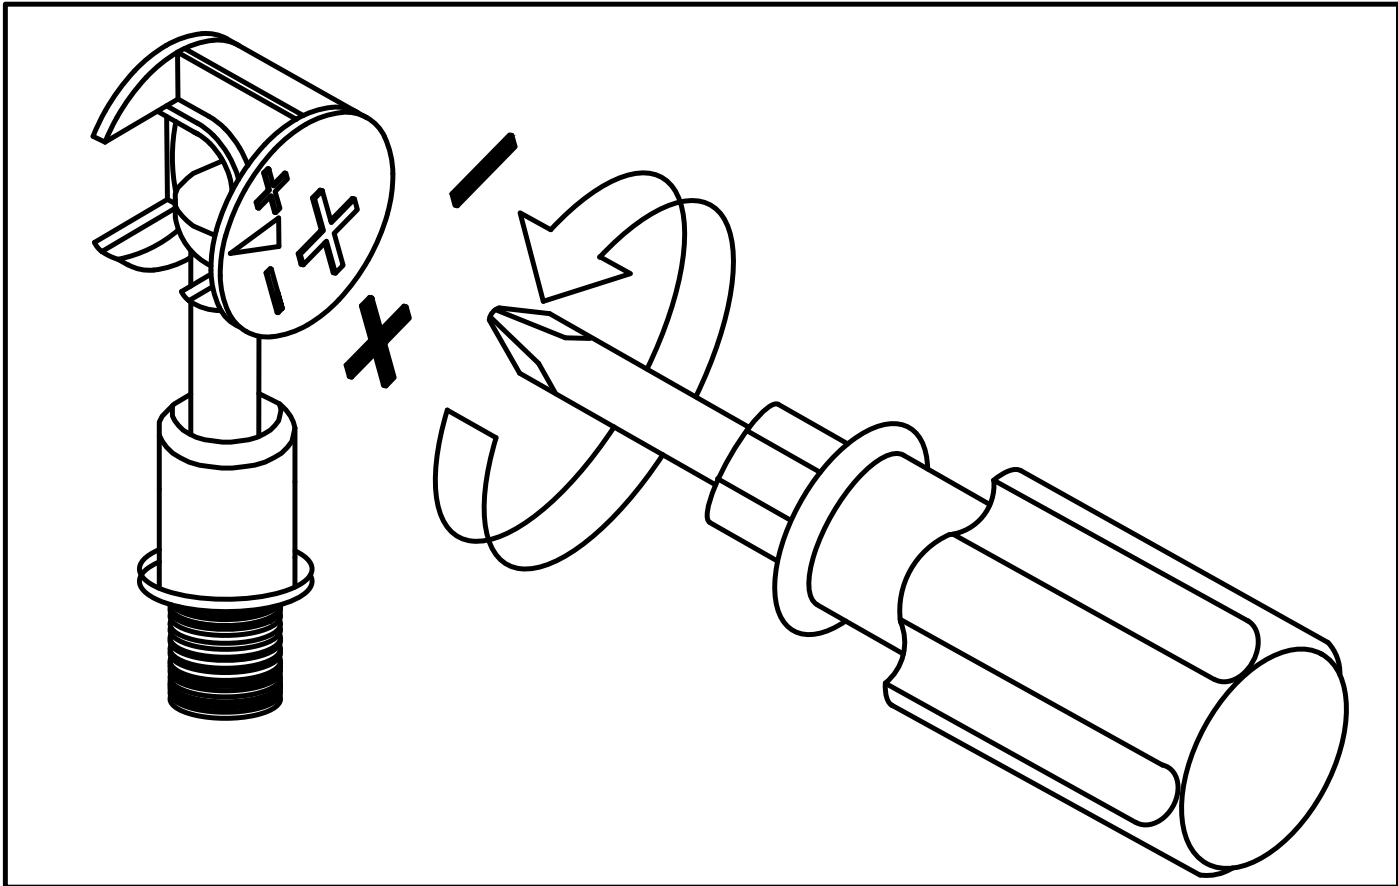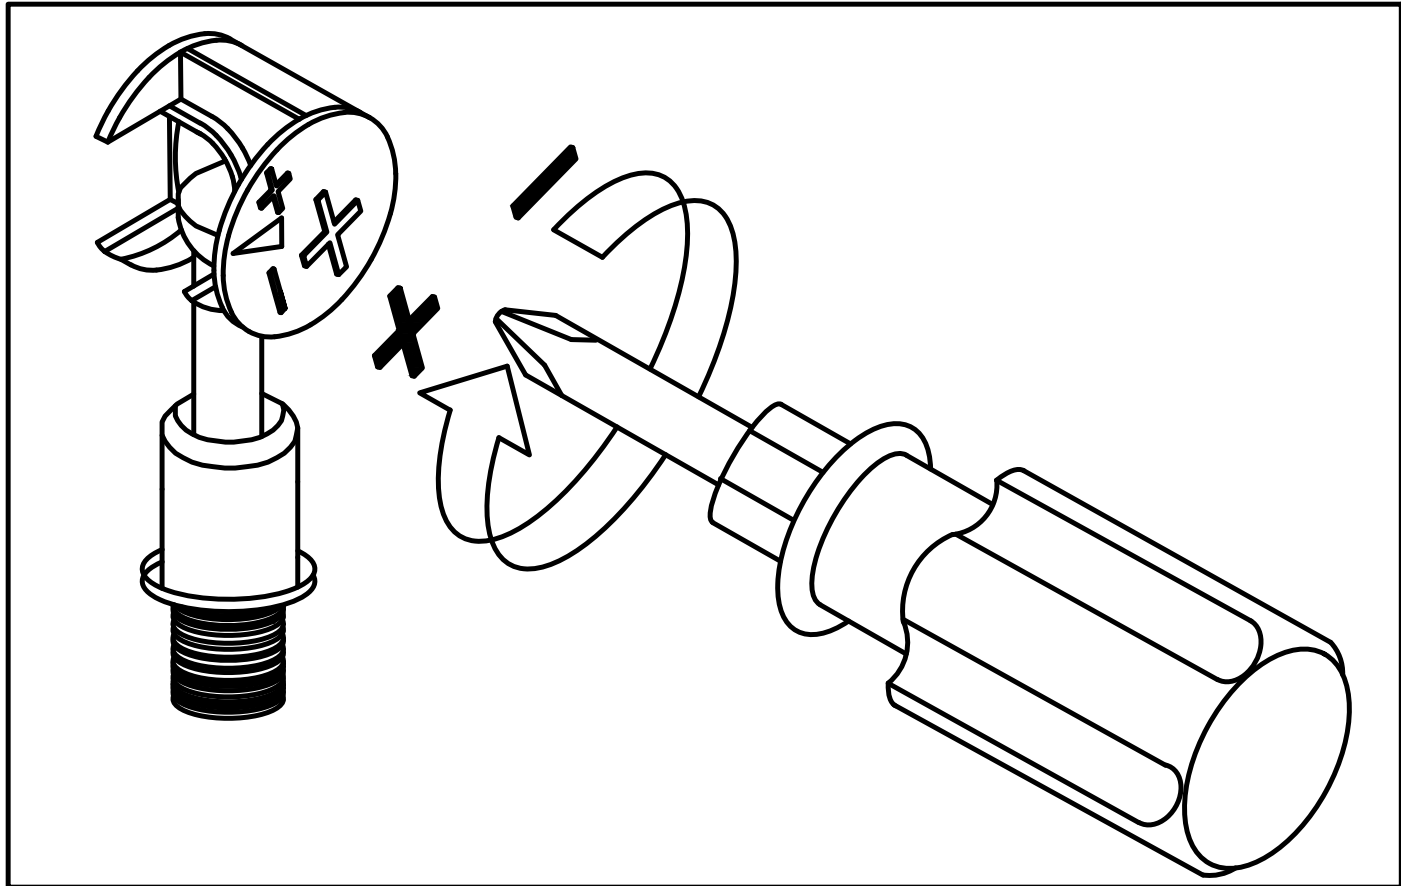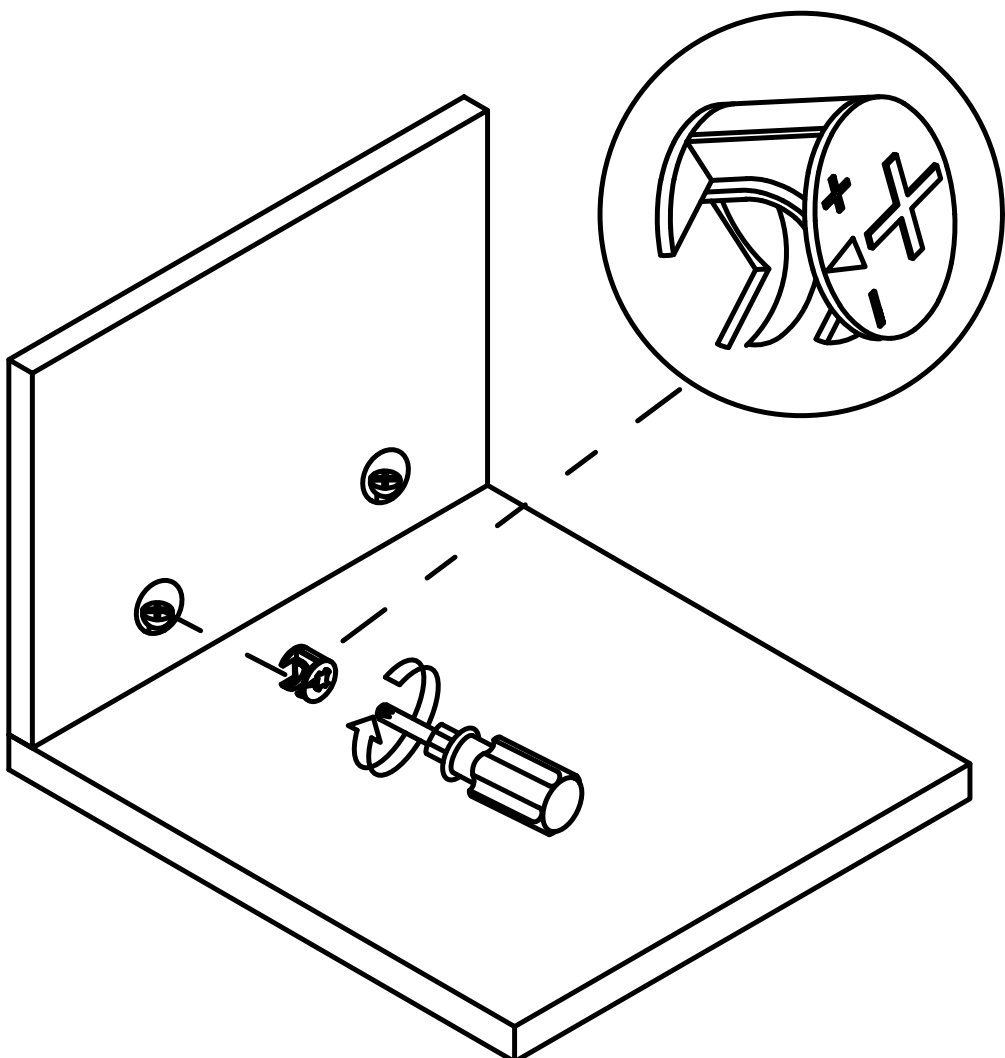

Use a screwdriver to lock in the direction of the "+" sign

Disassemble along the direction of "-" sign



Step 1

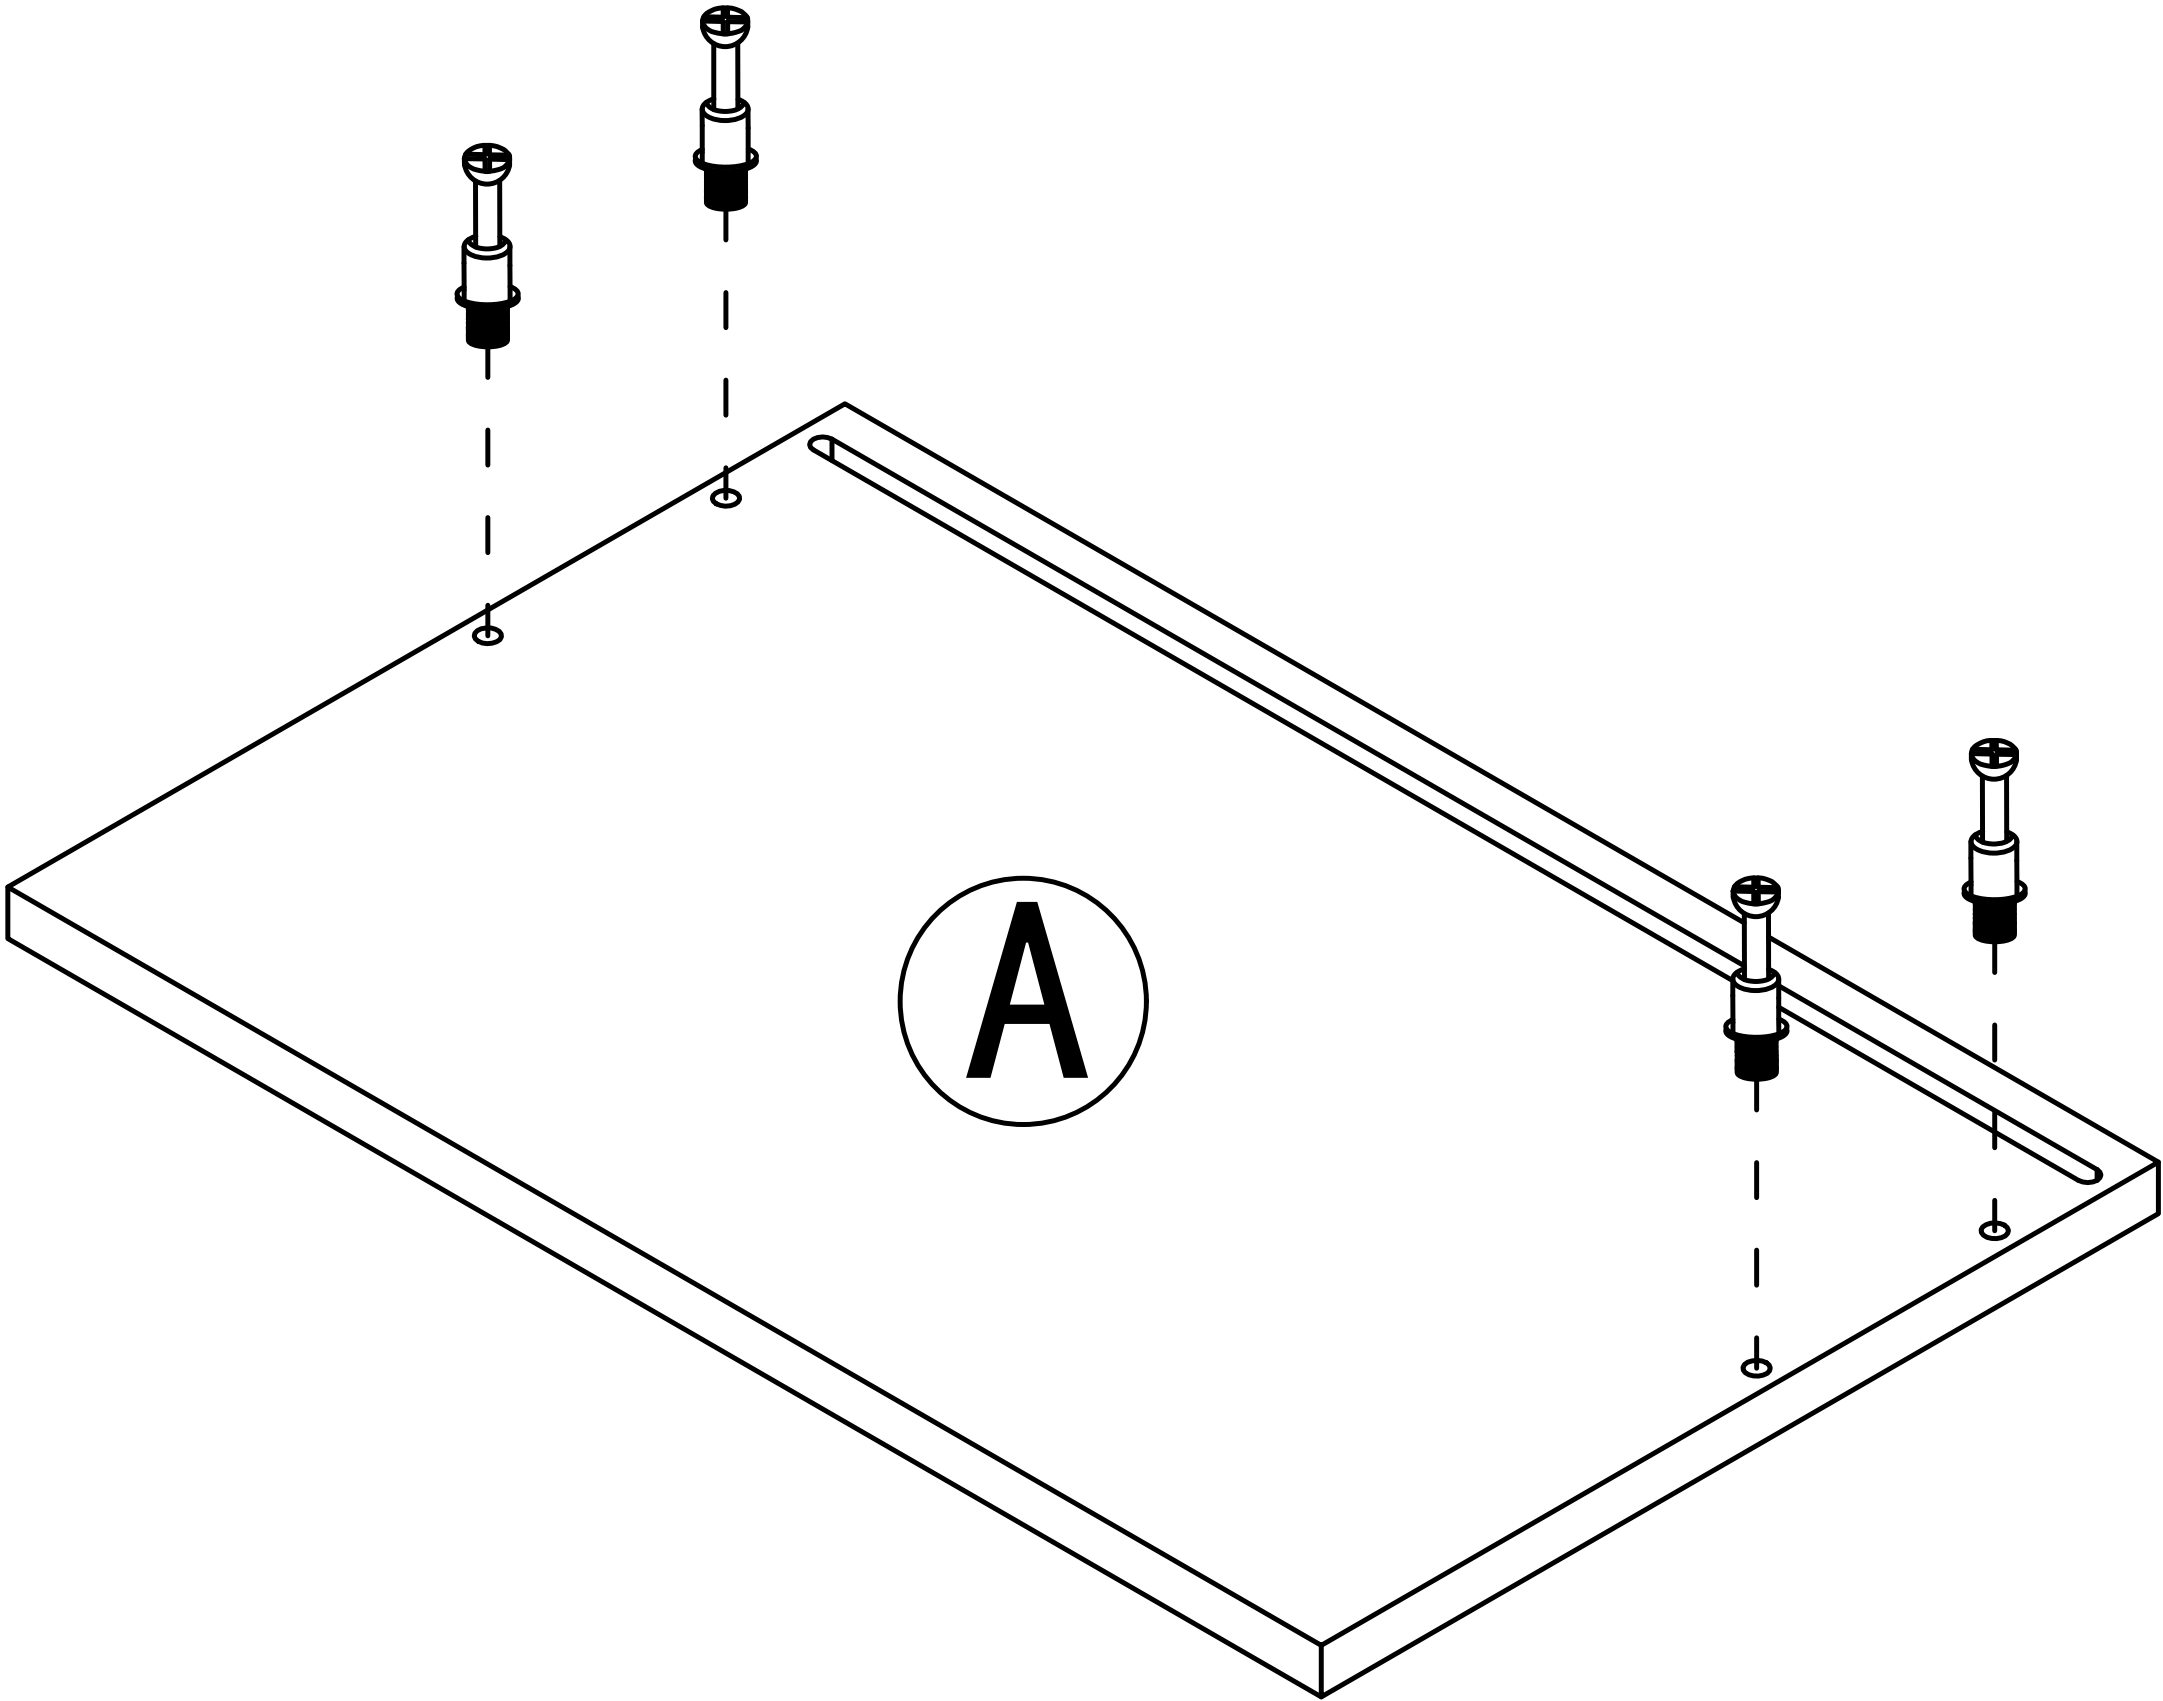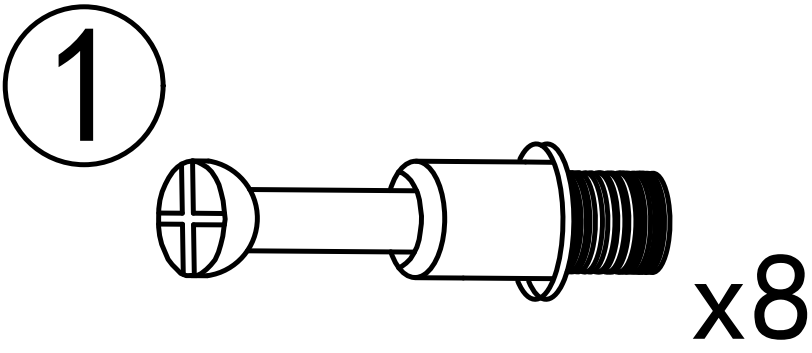

x2



5

Step 2

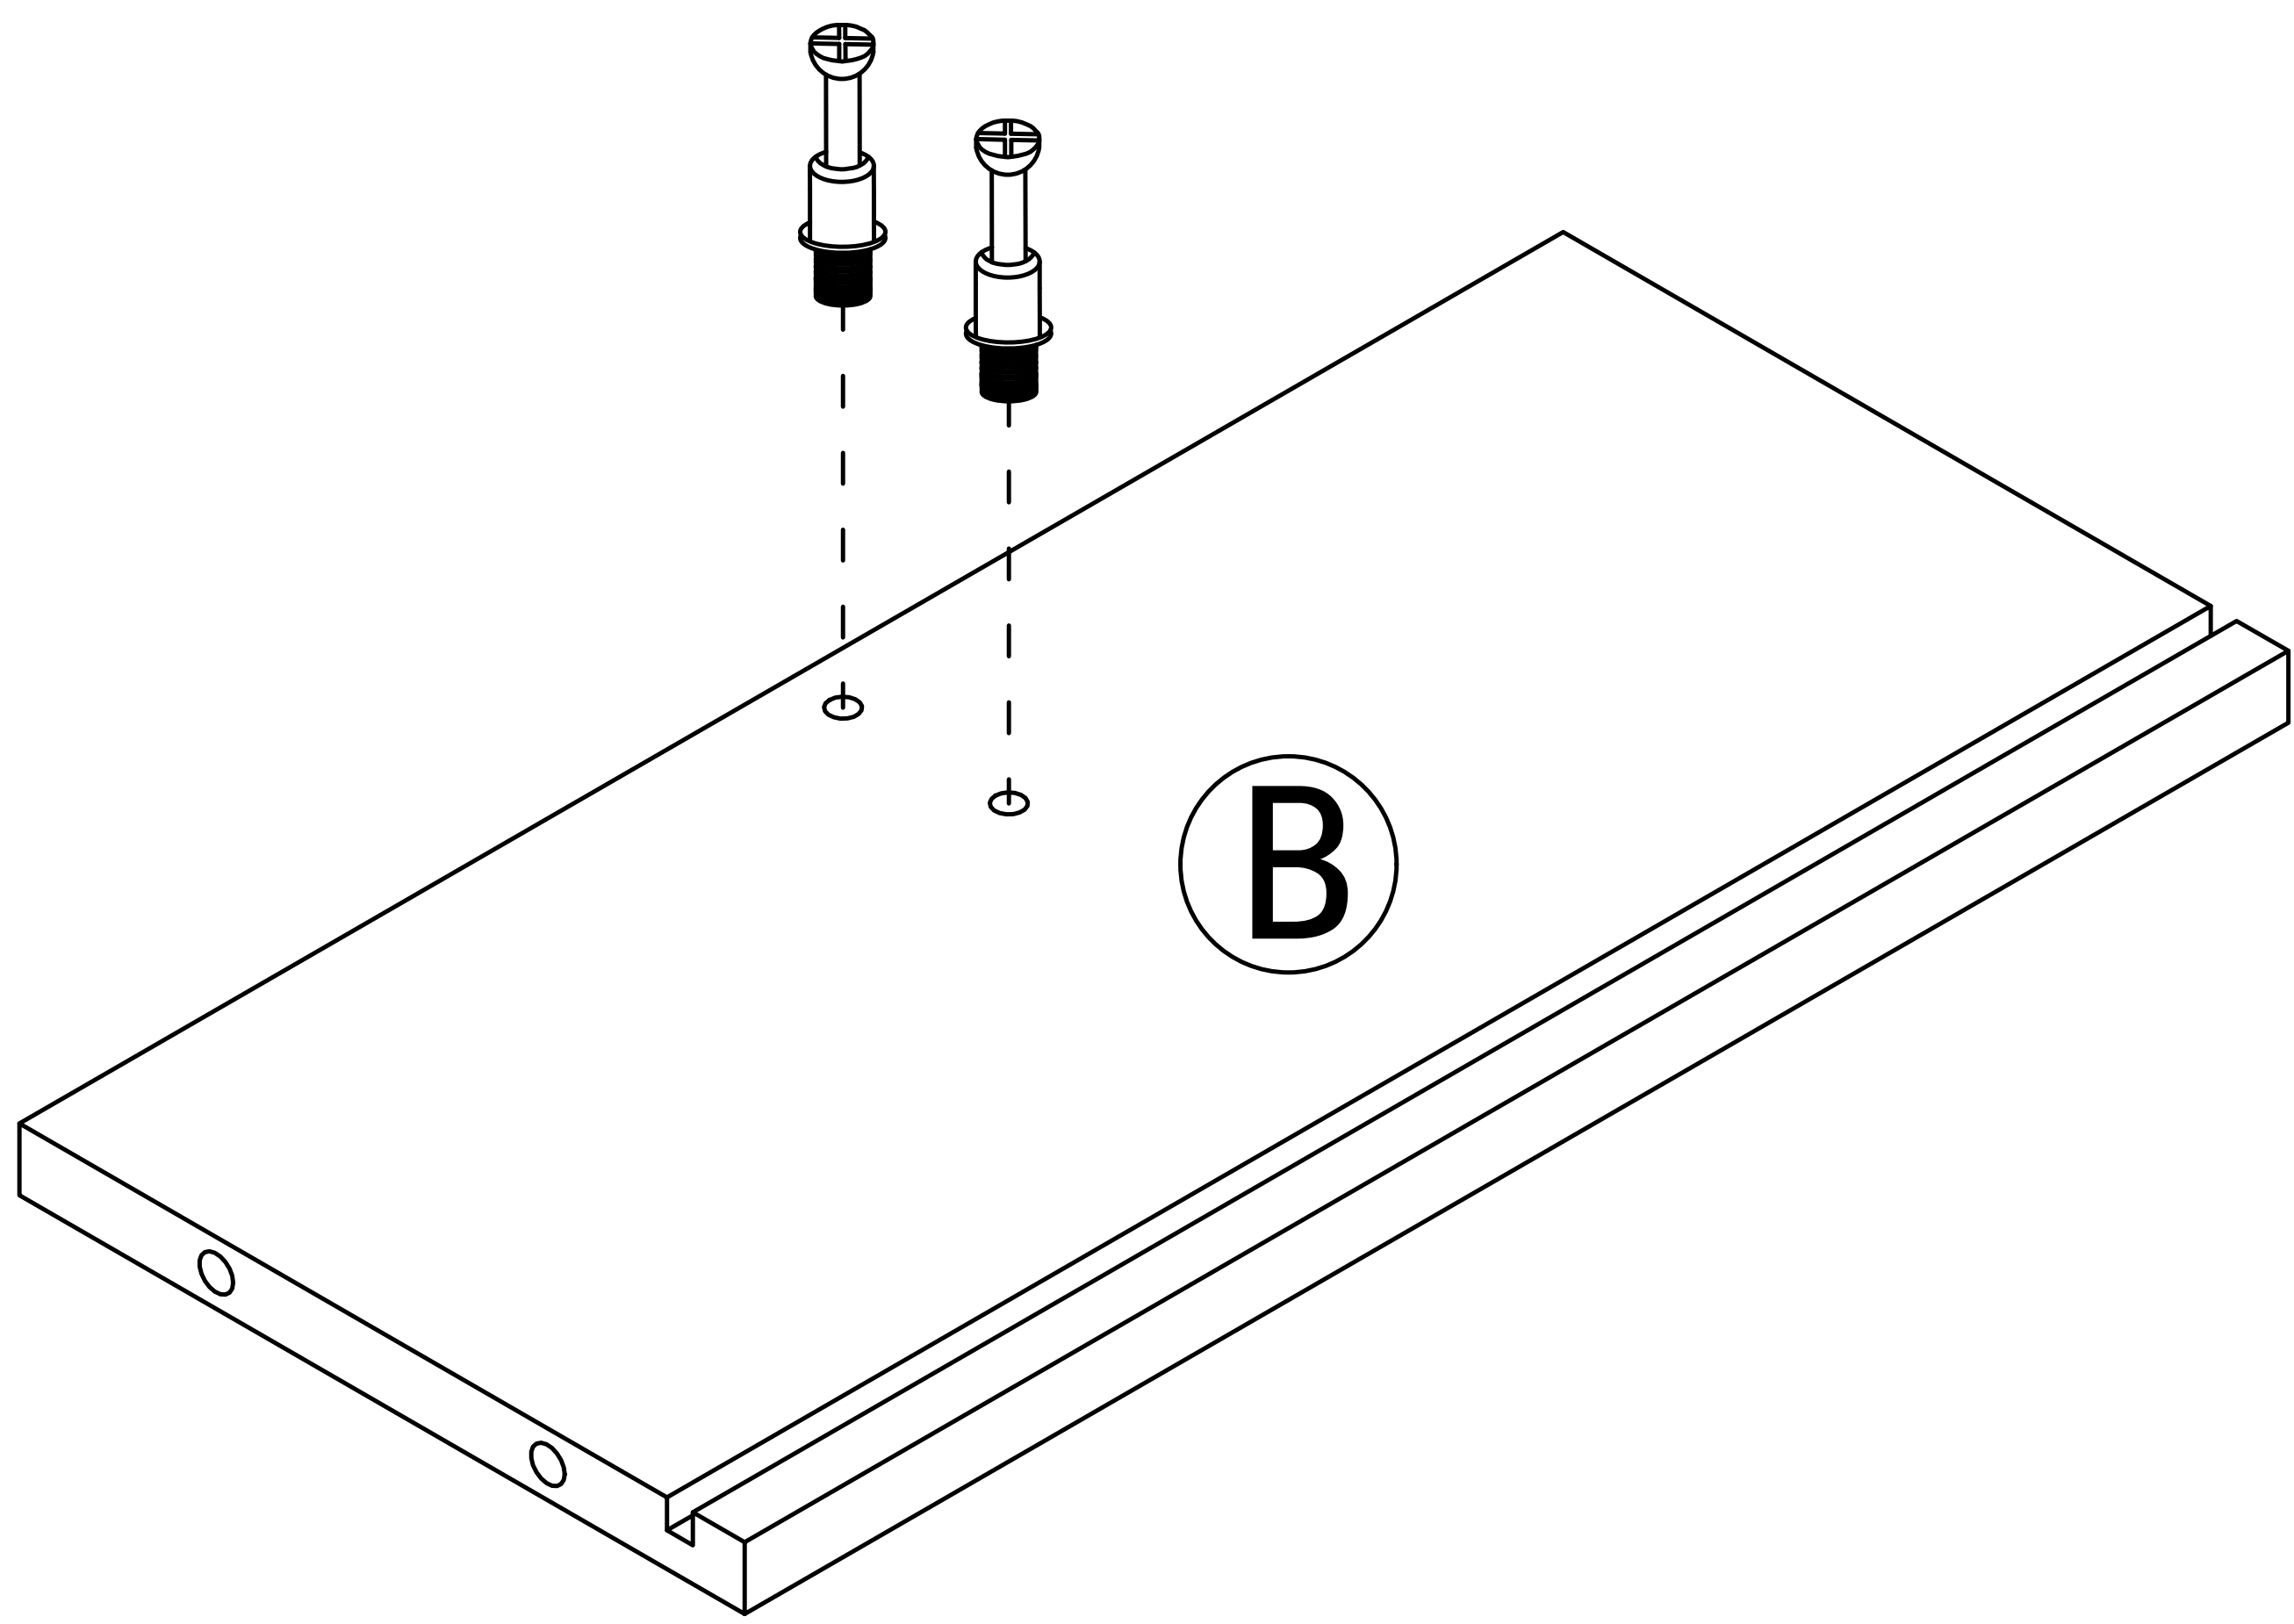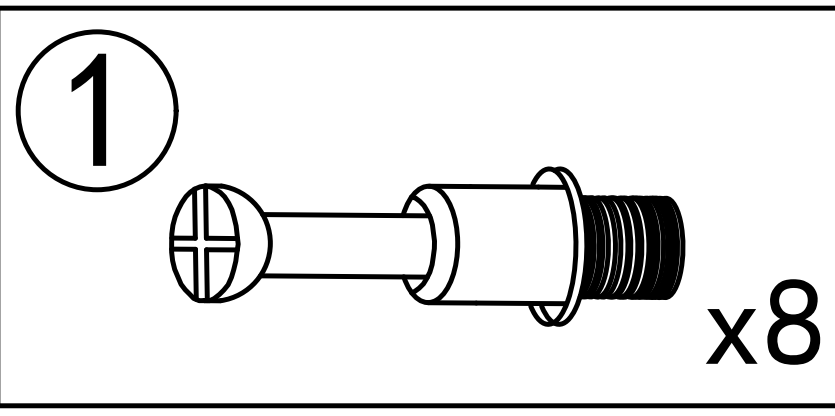


x4


Step 3

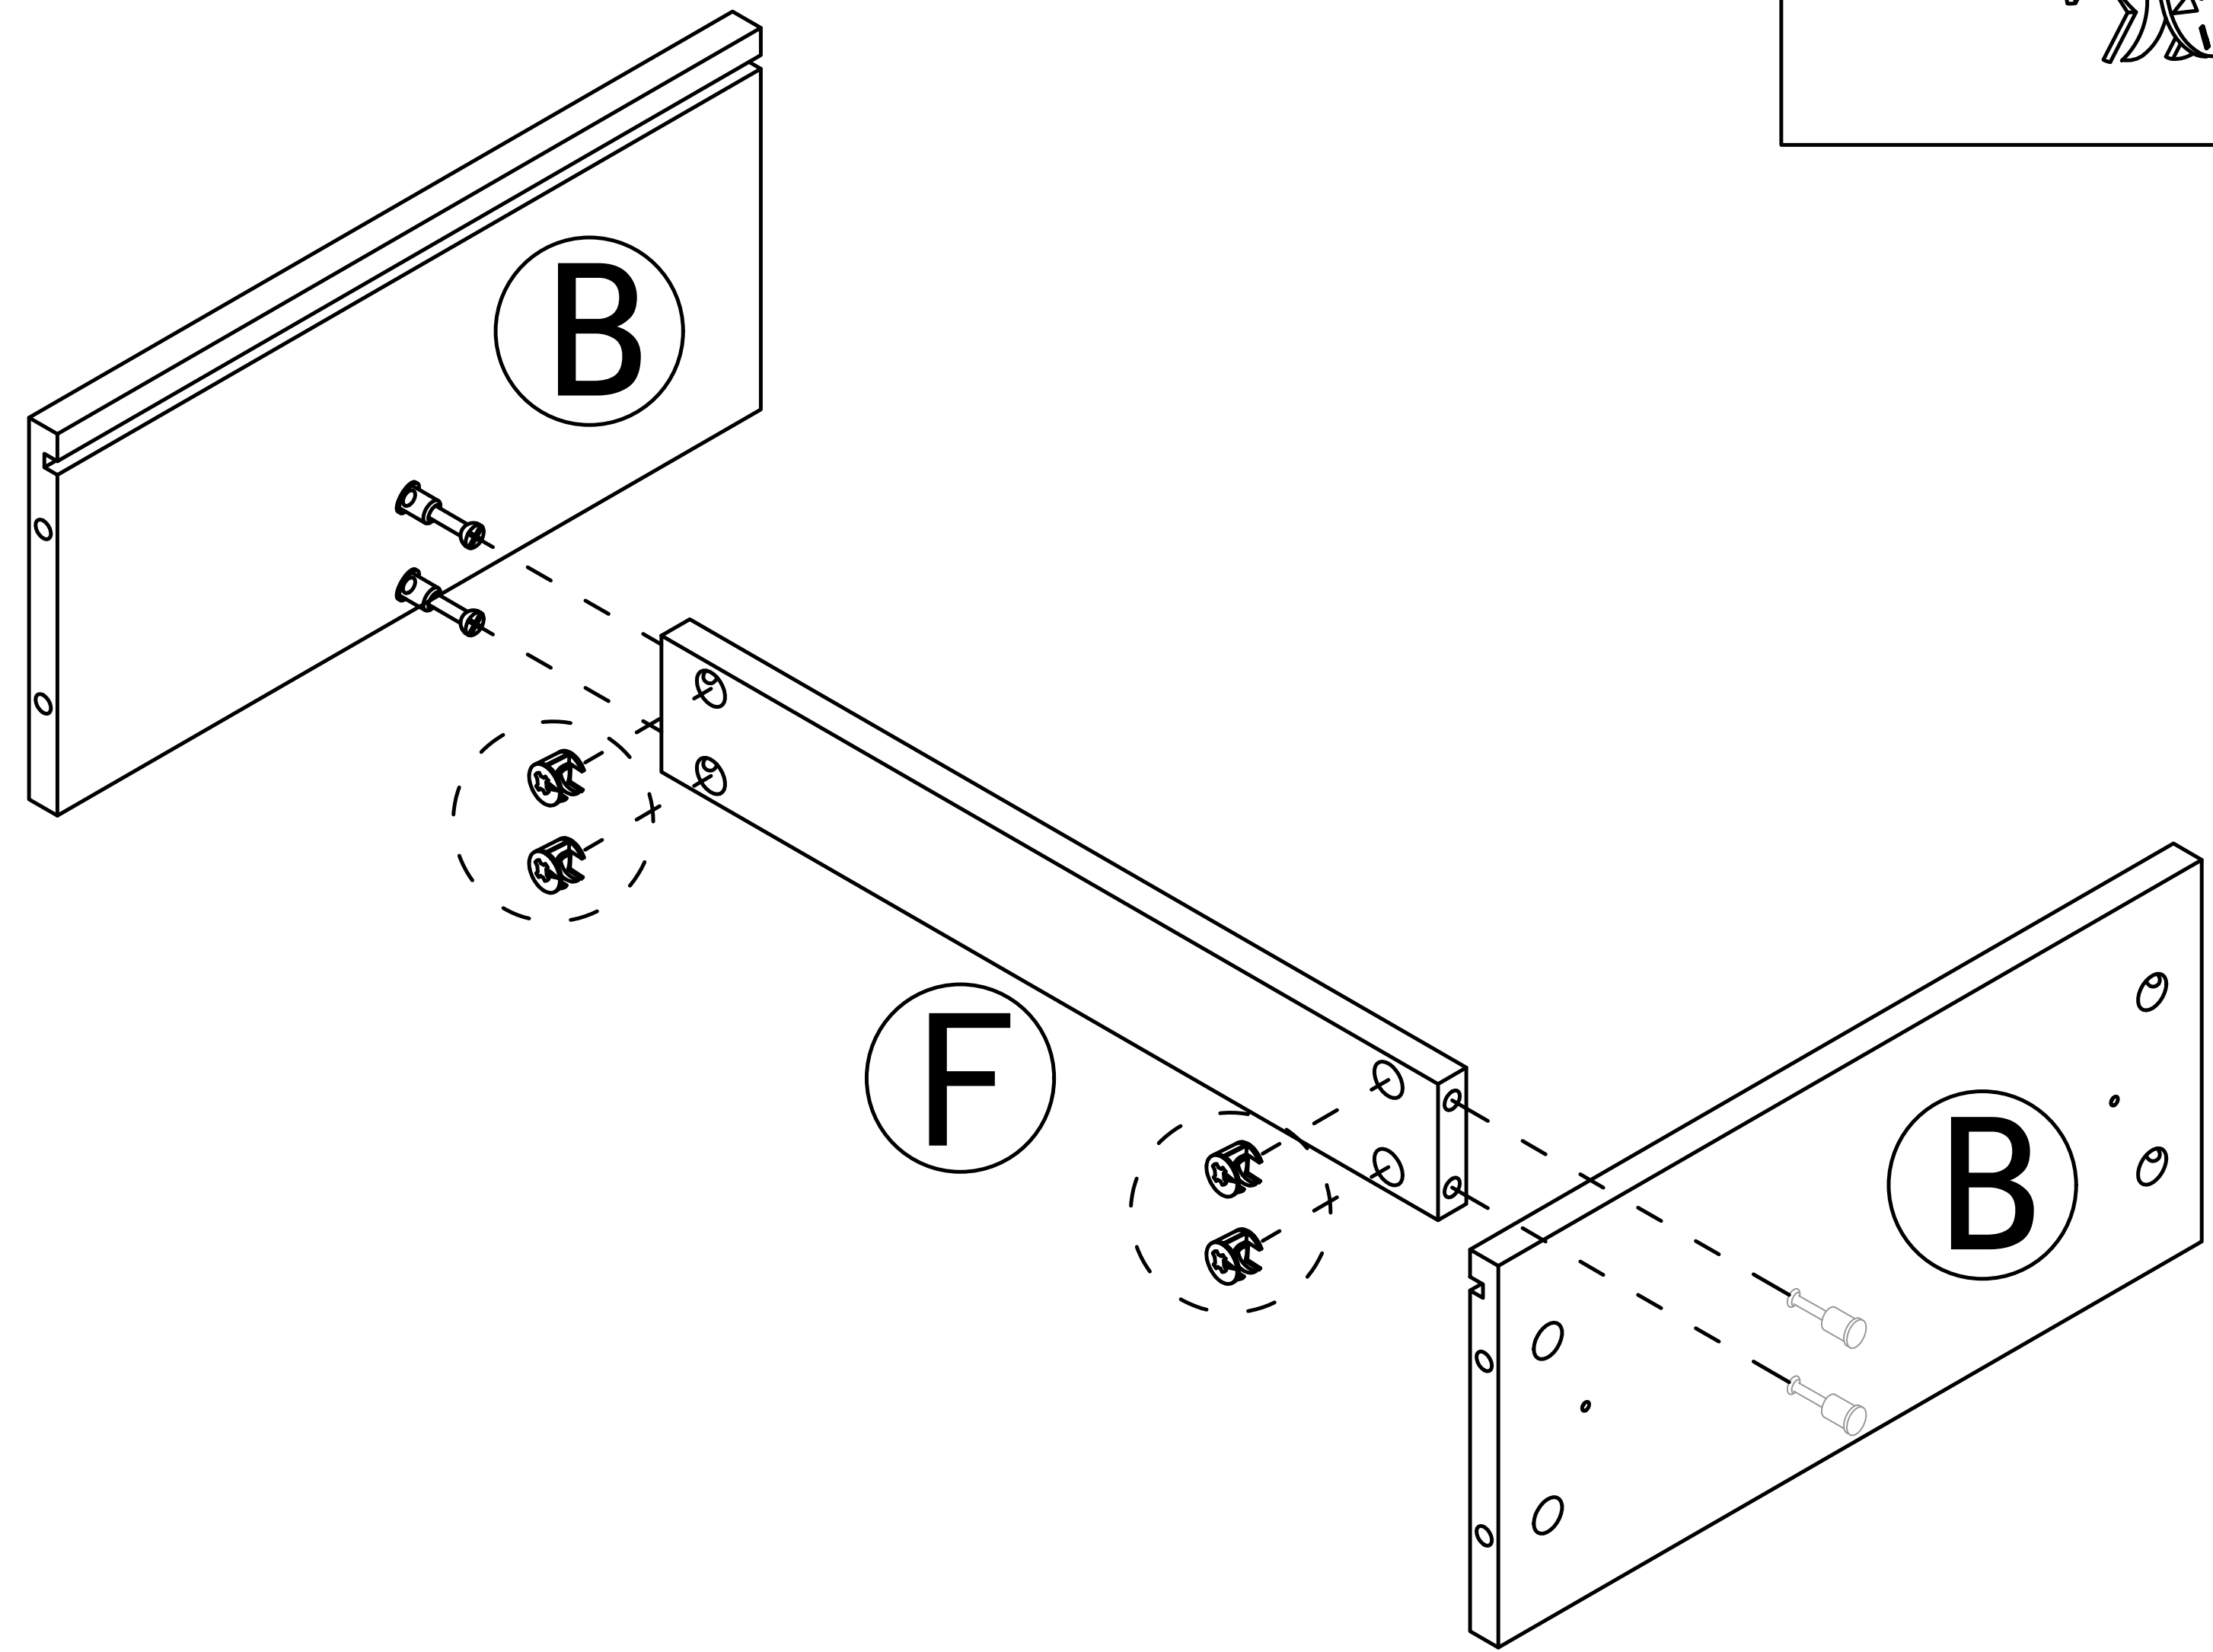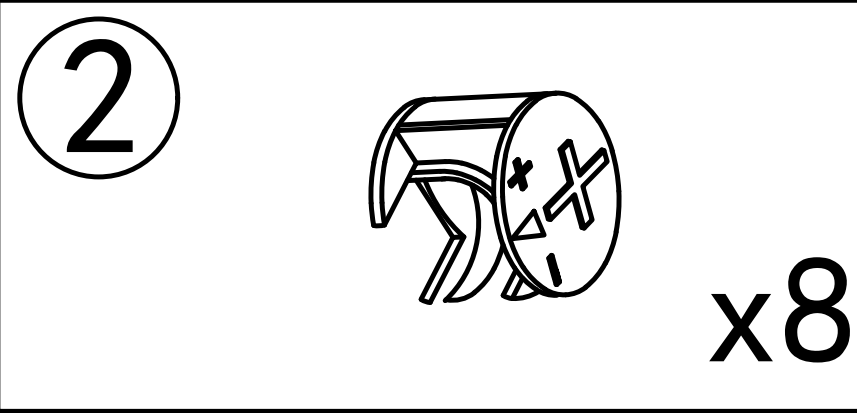

x2

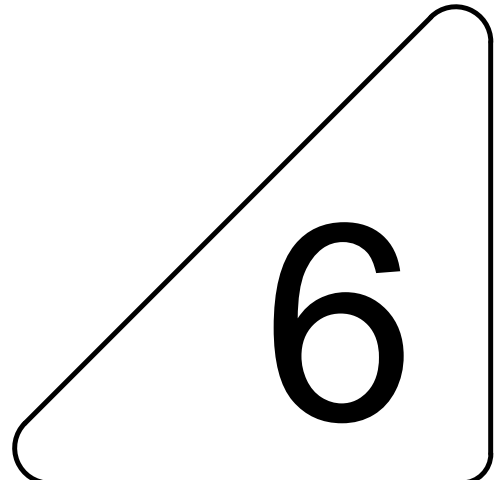


Step 4

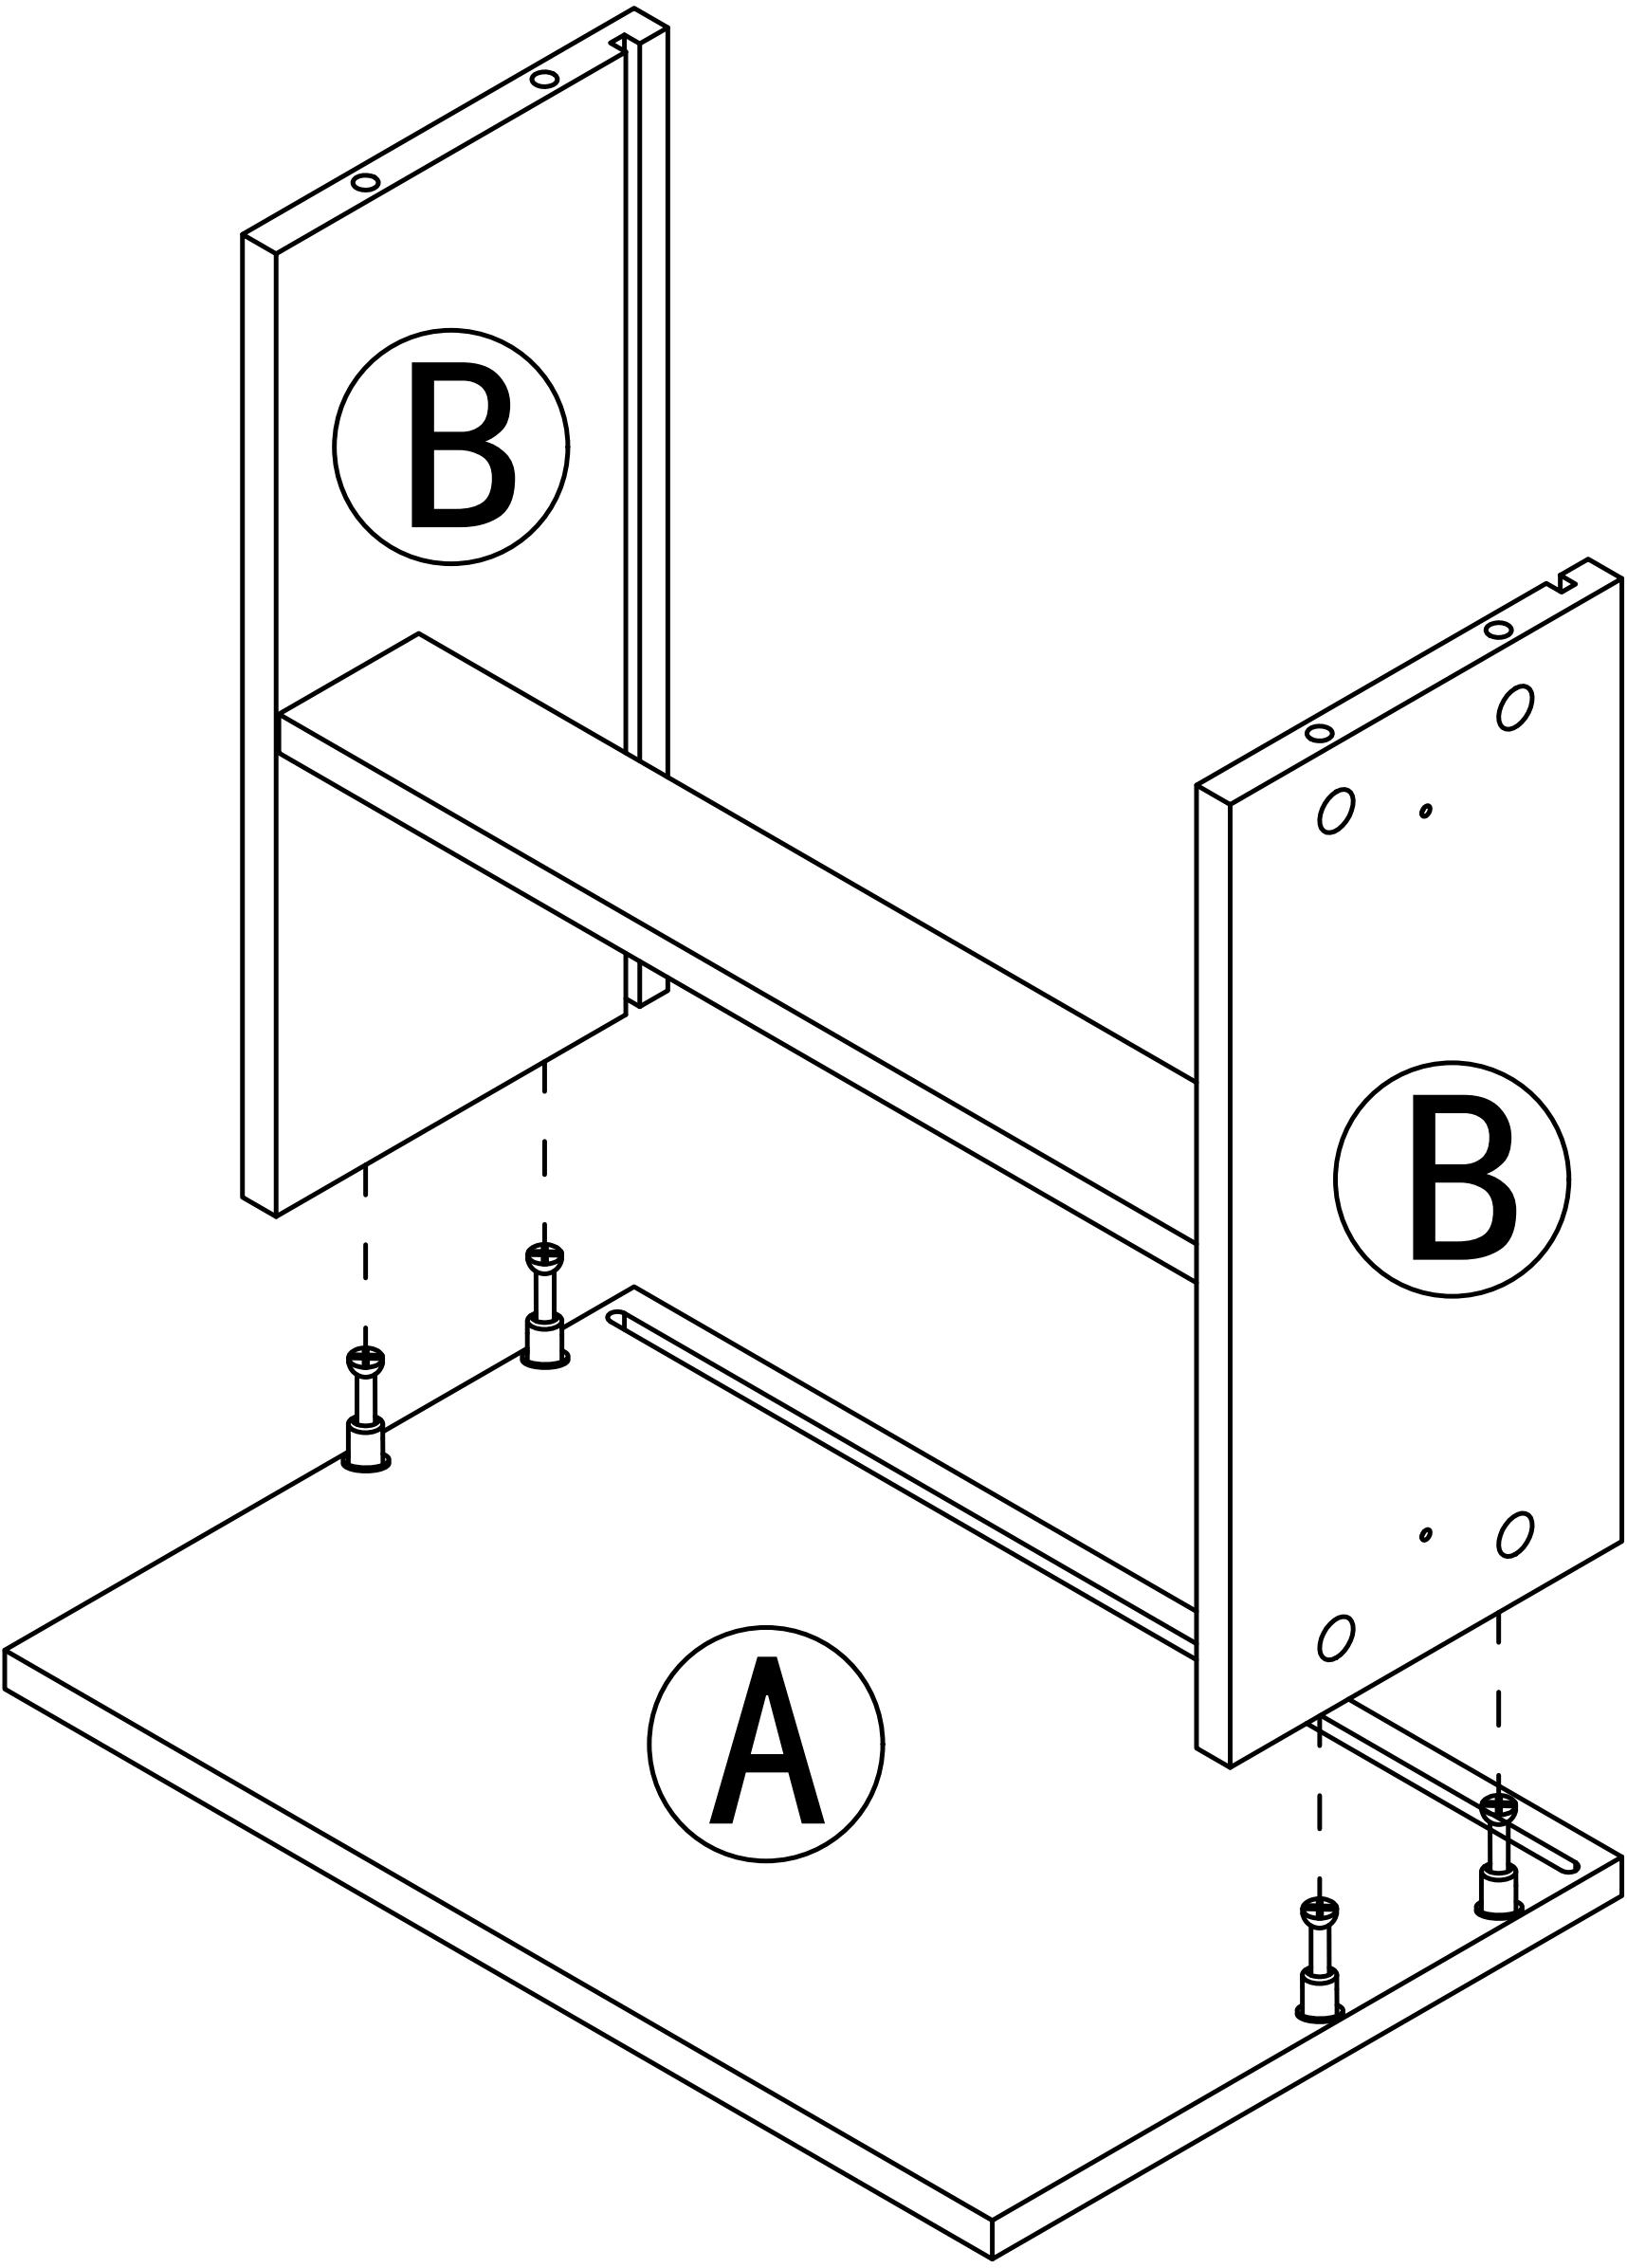

x2



Step 5

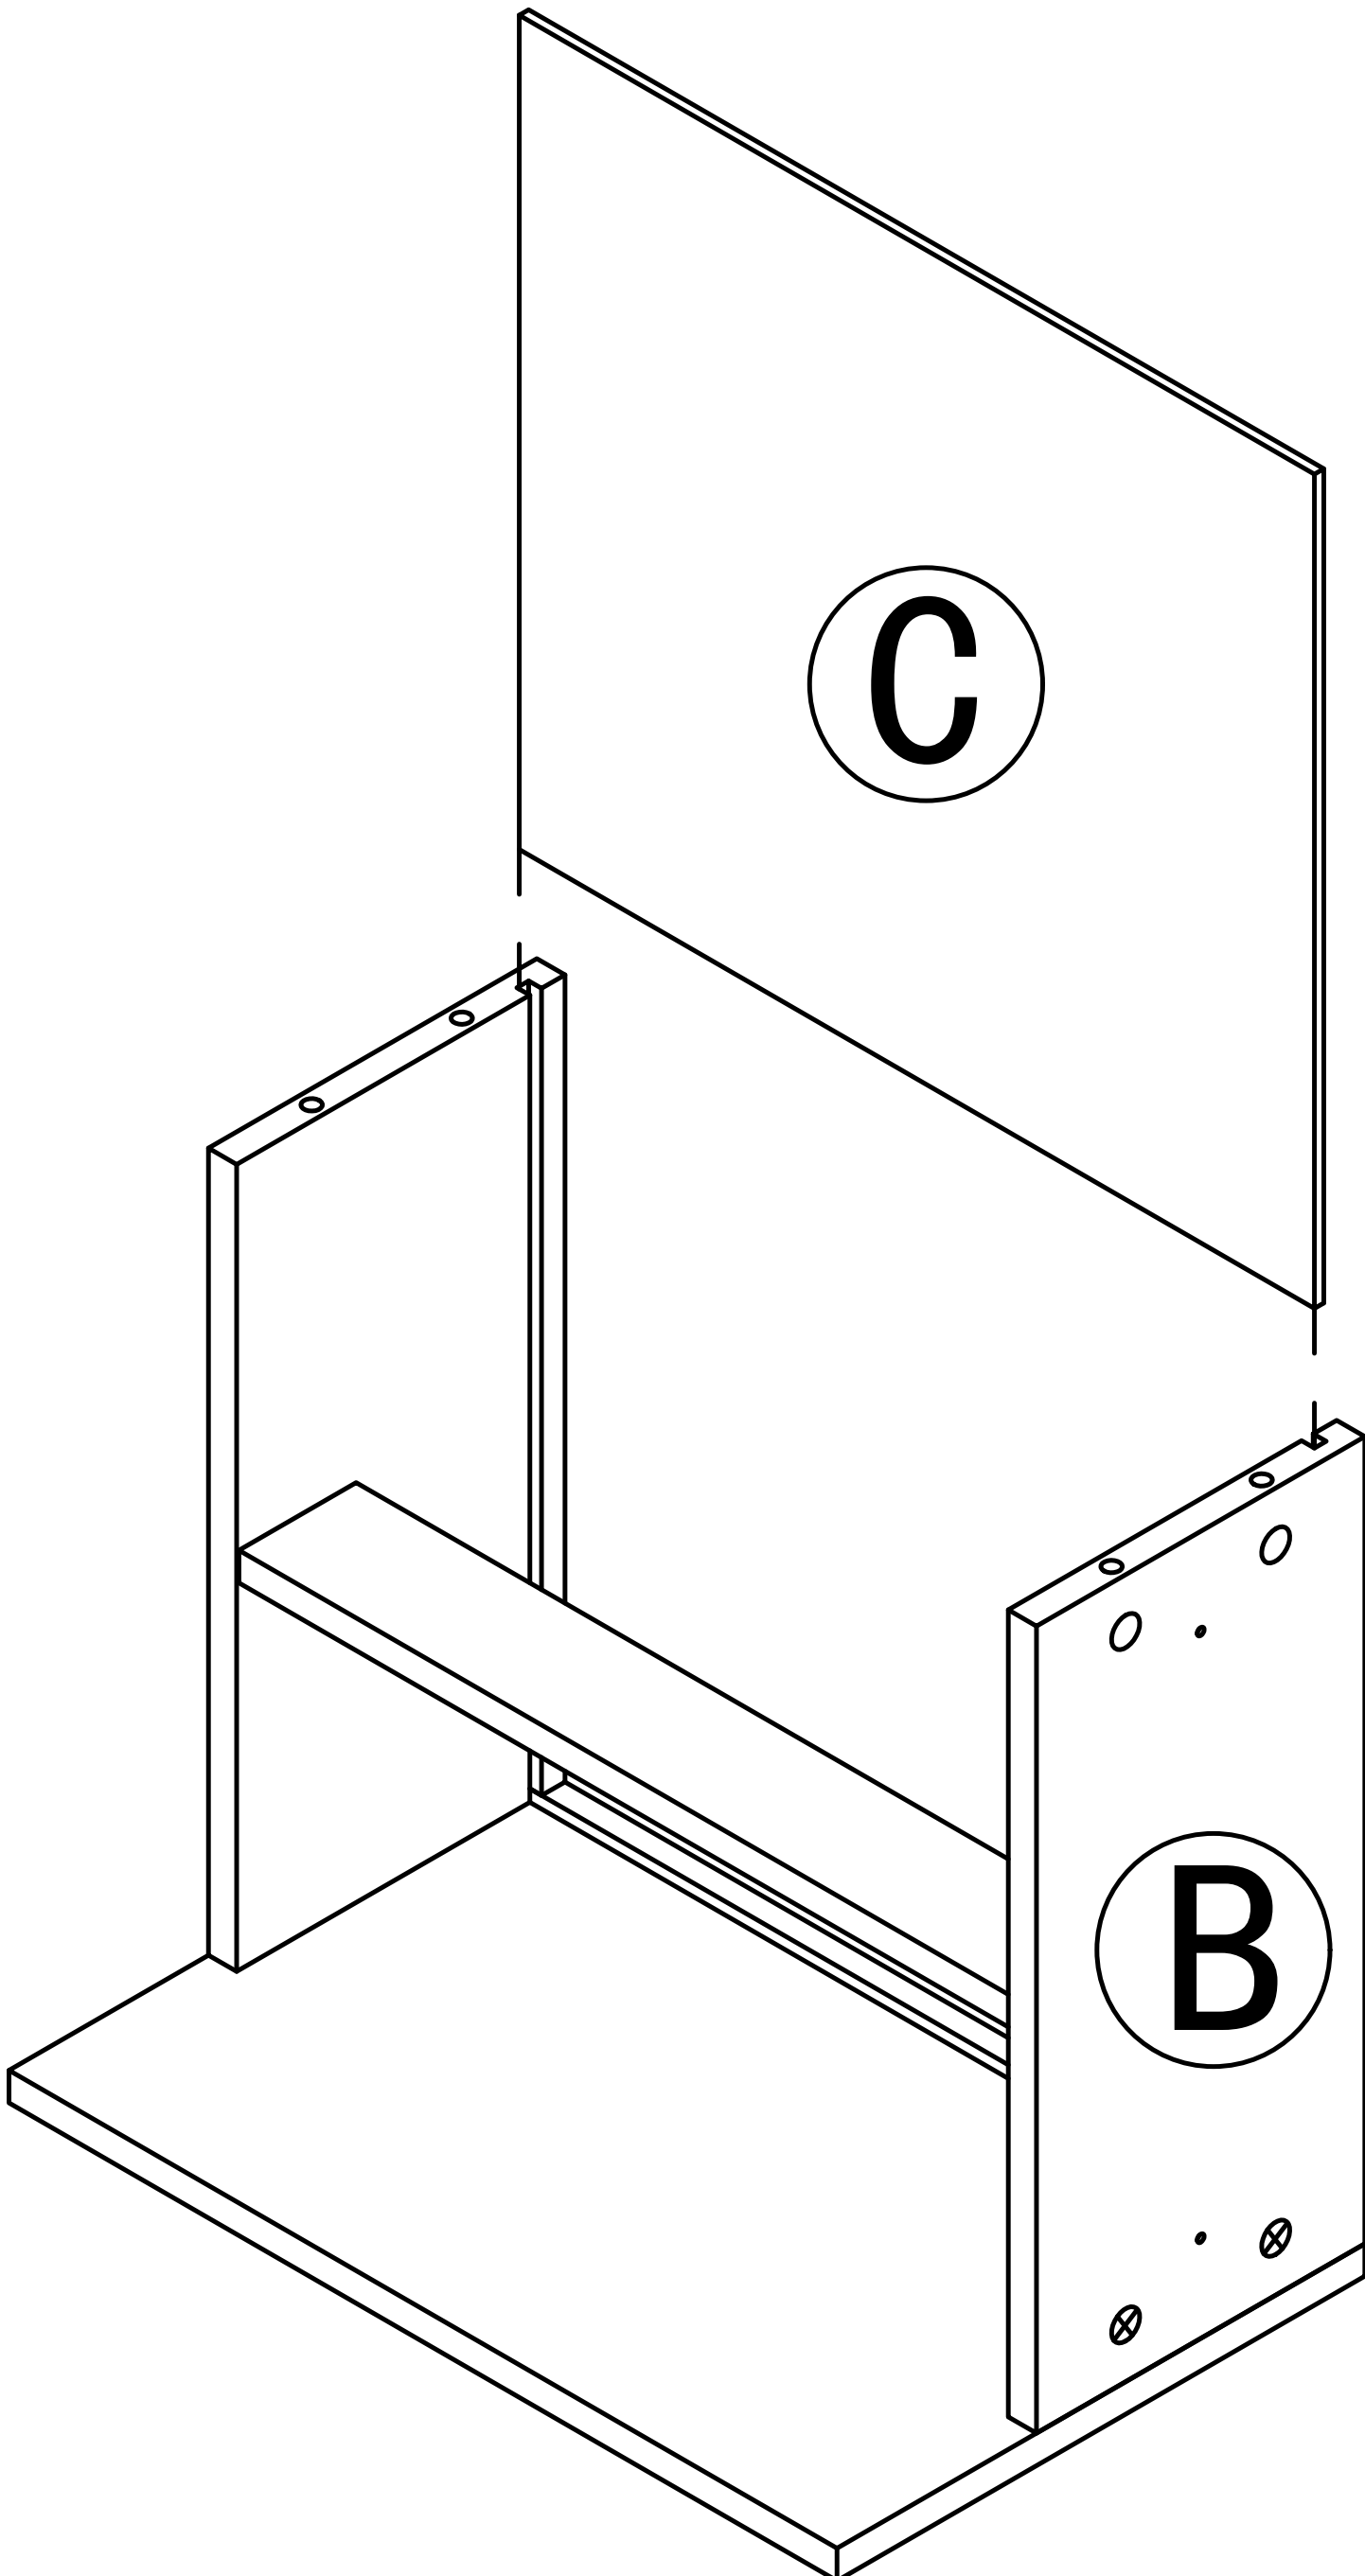



x2

7

Step 6

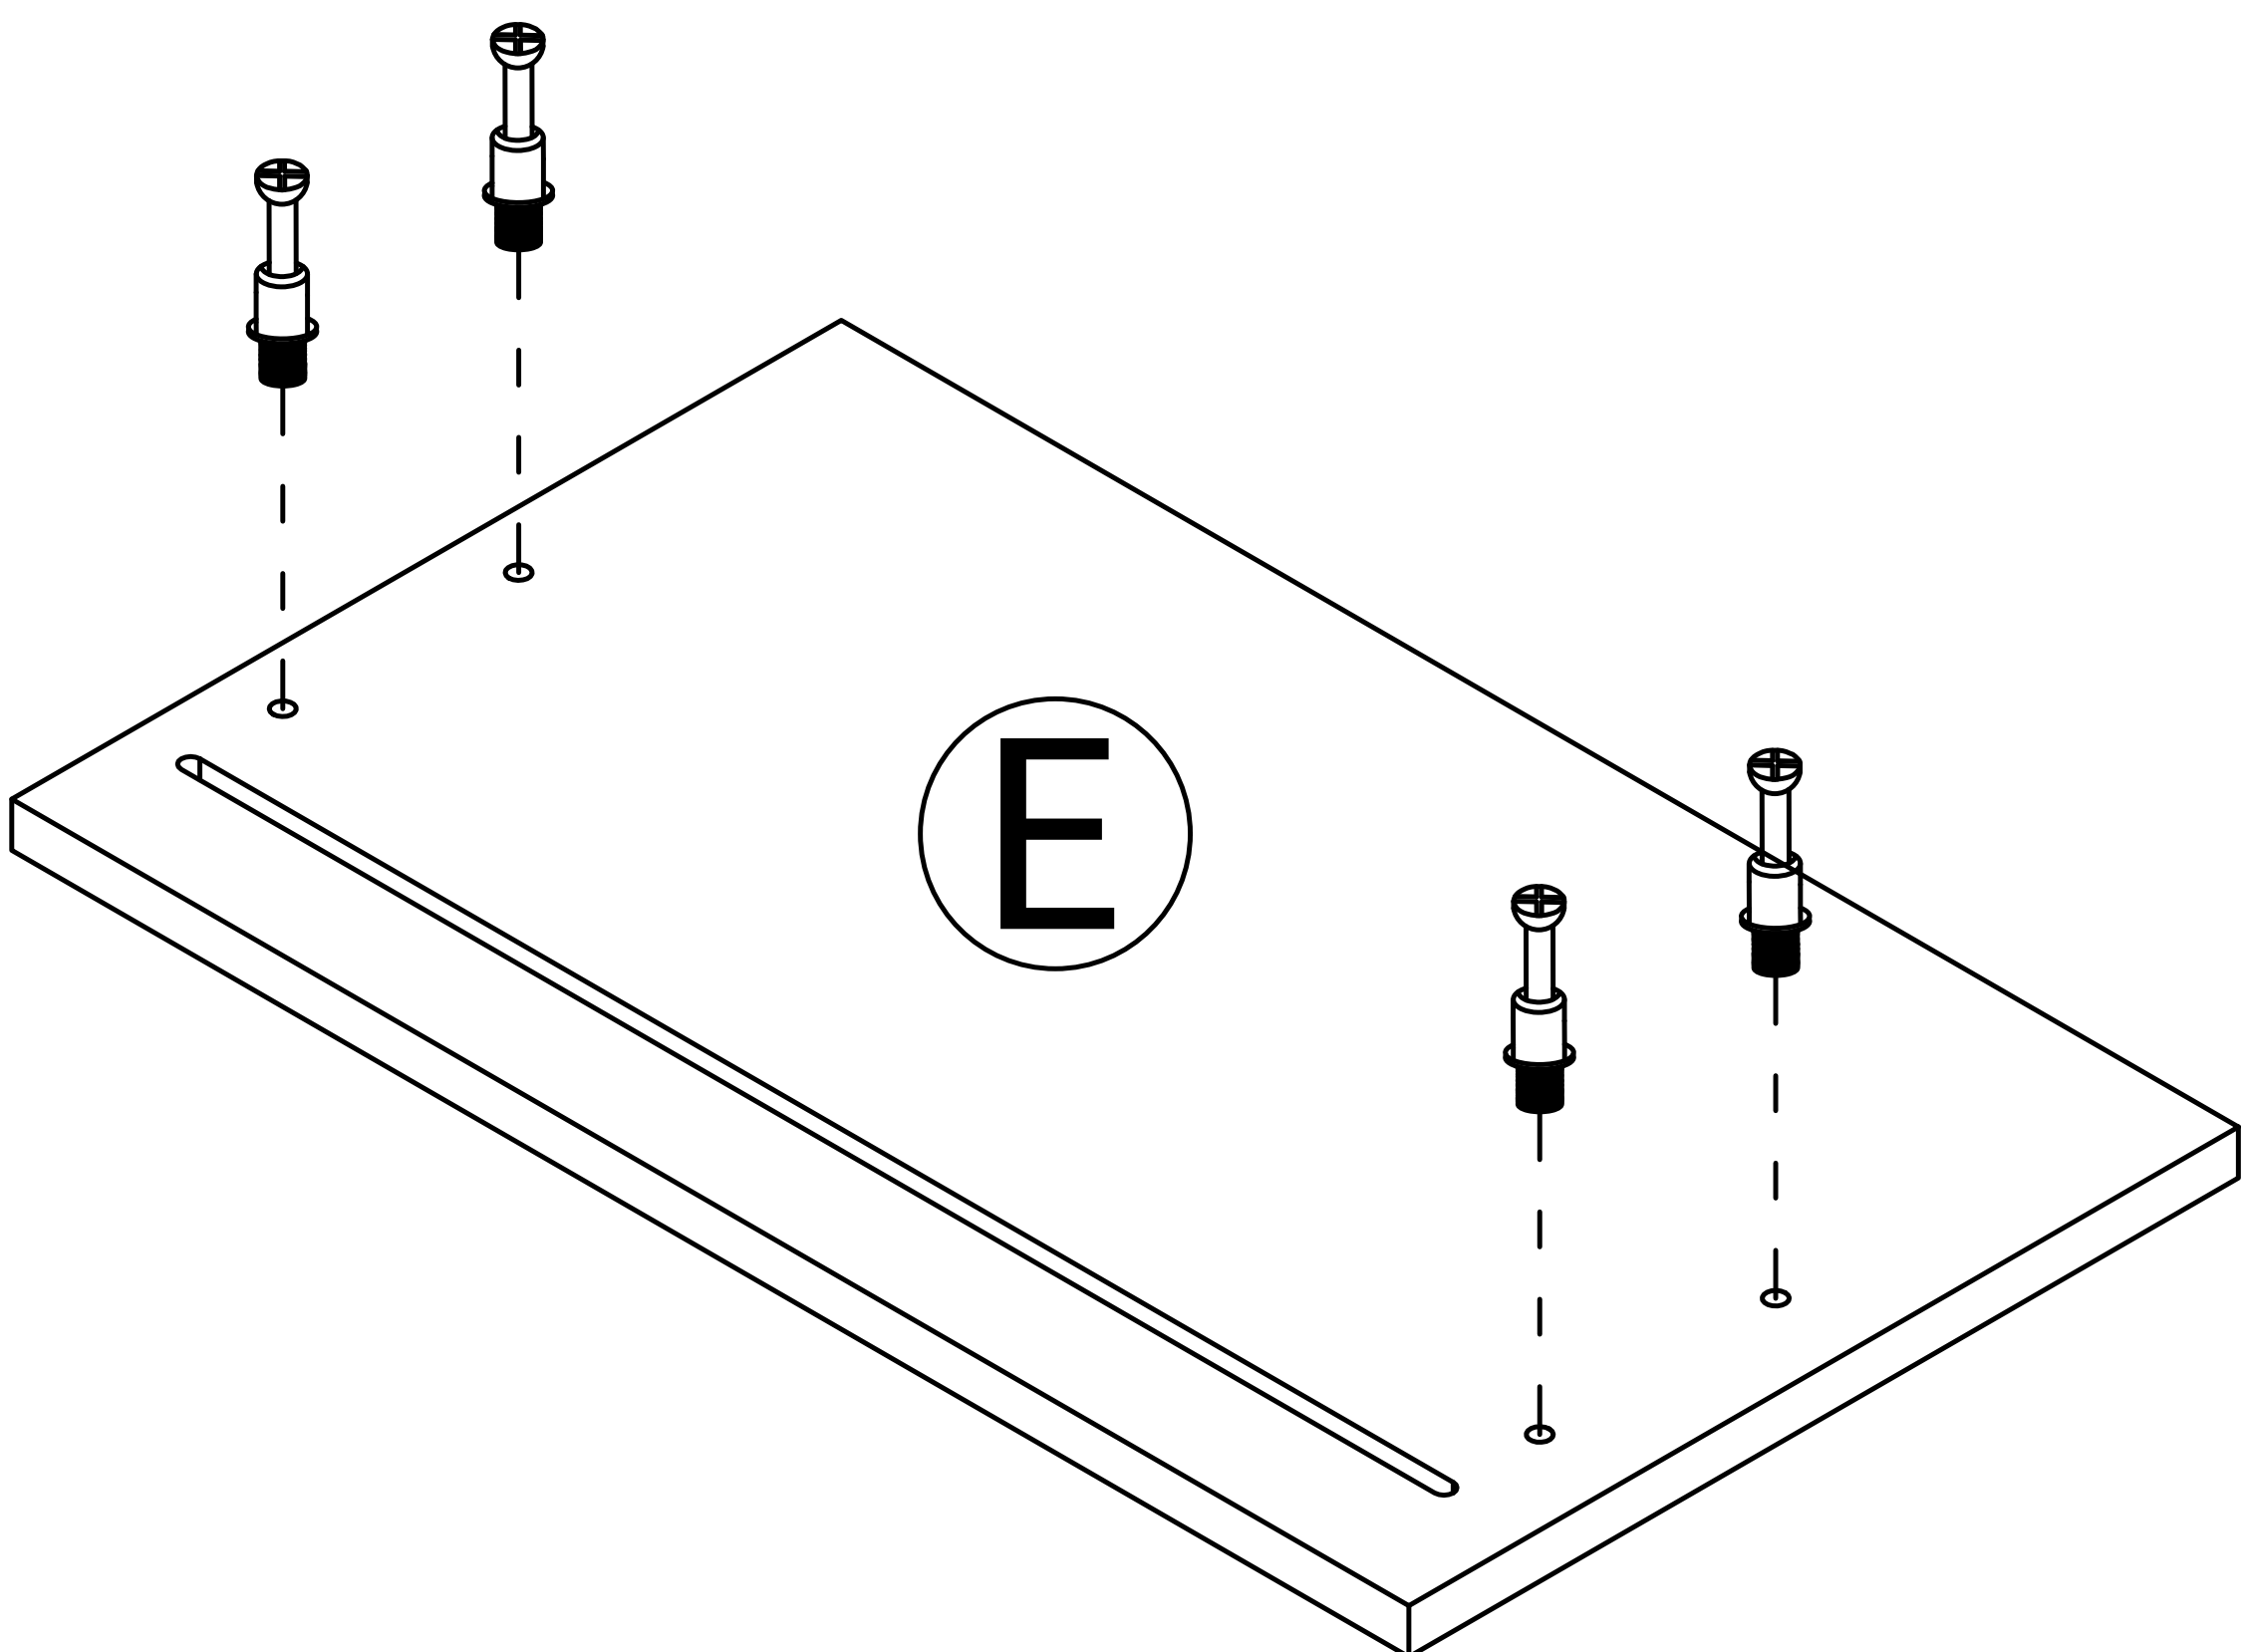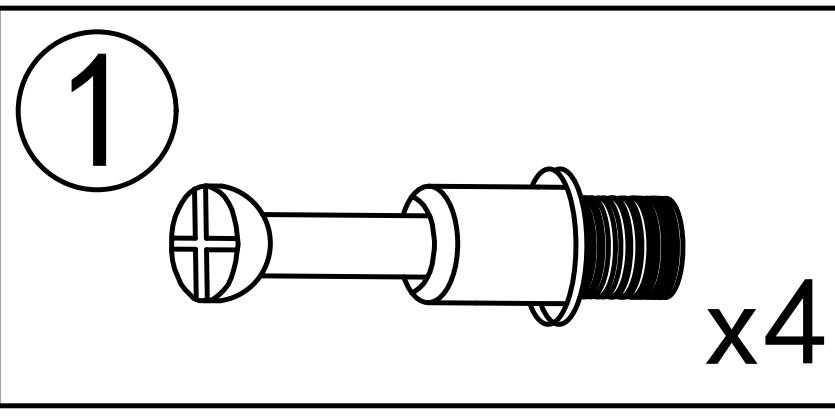



Step 7

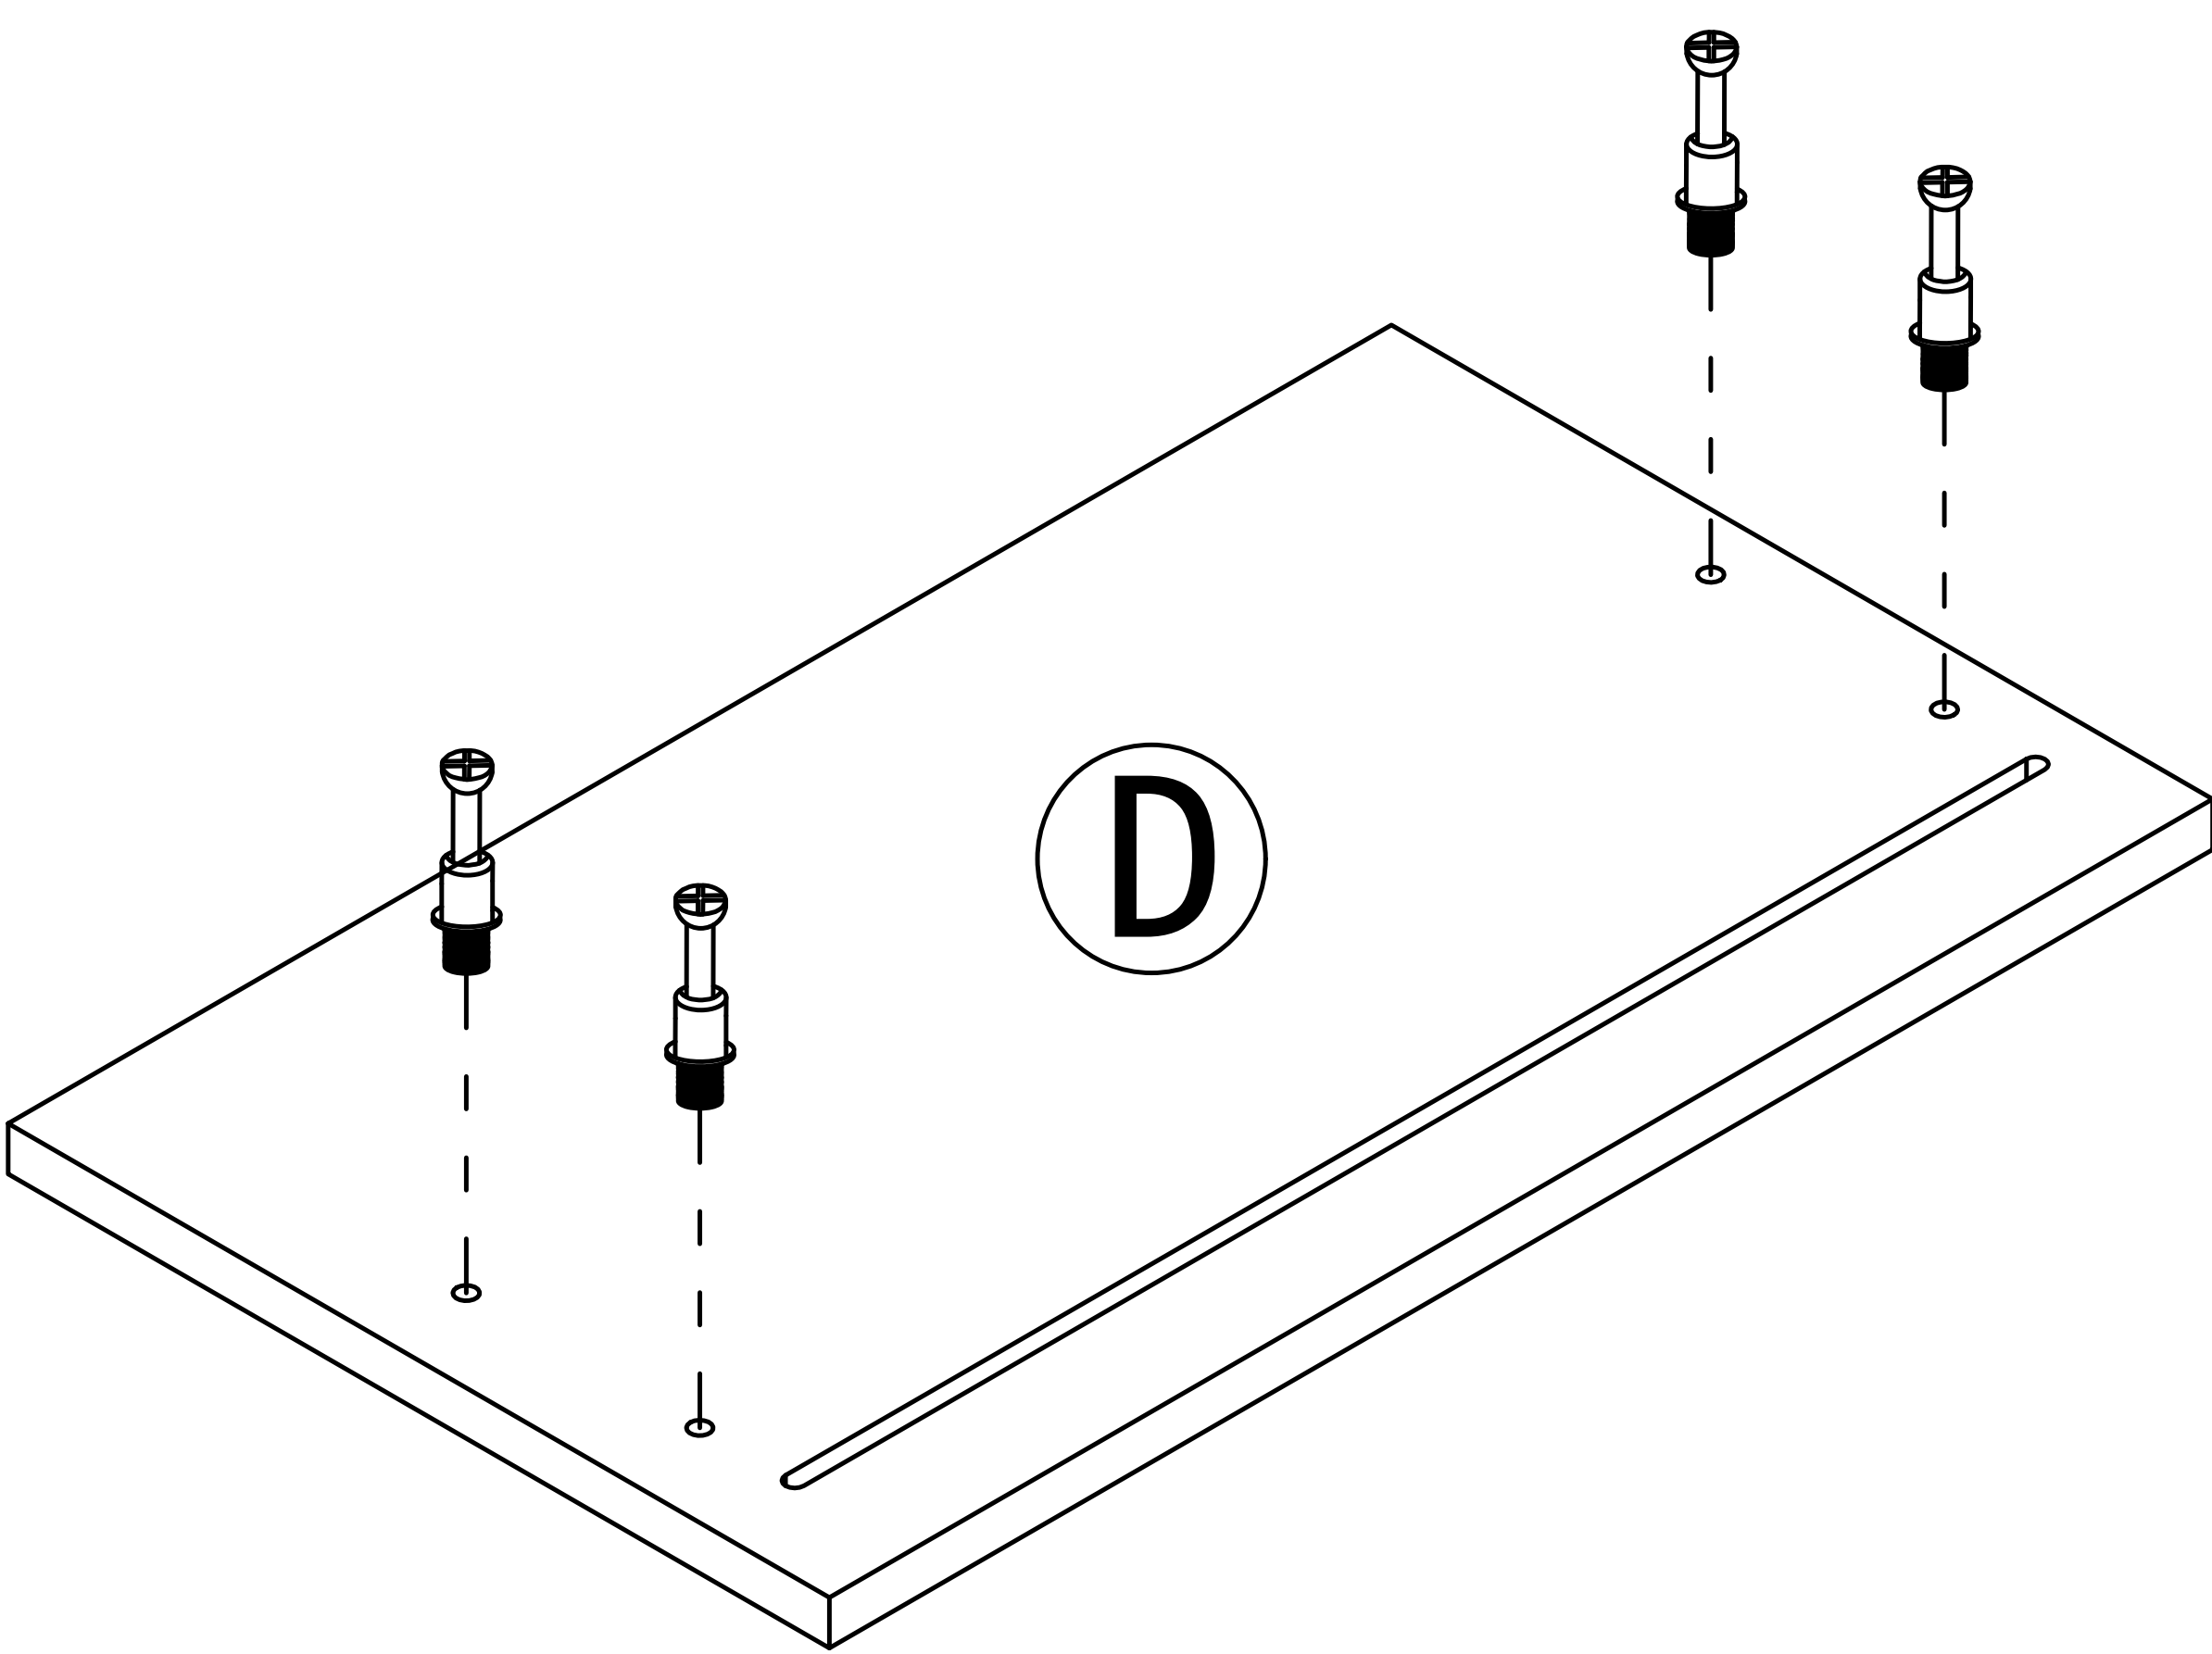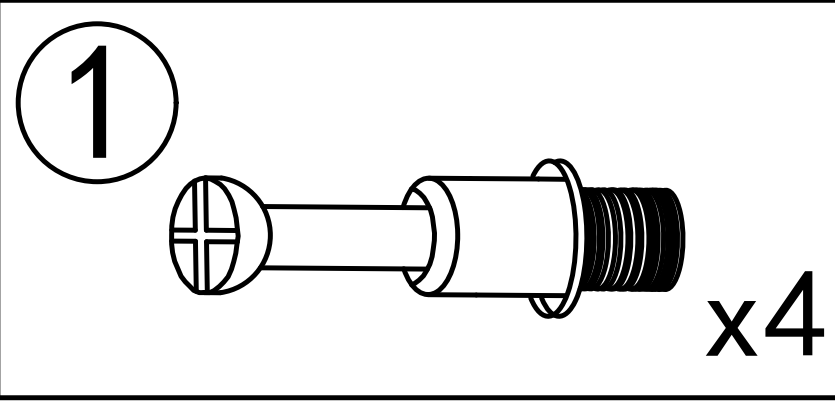

Step 8


2

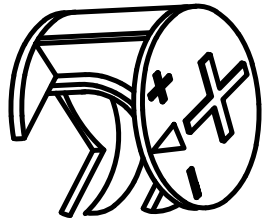
x8

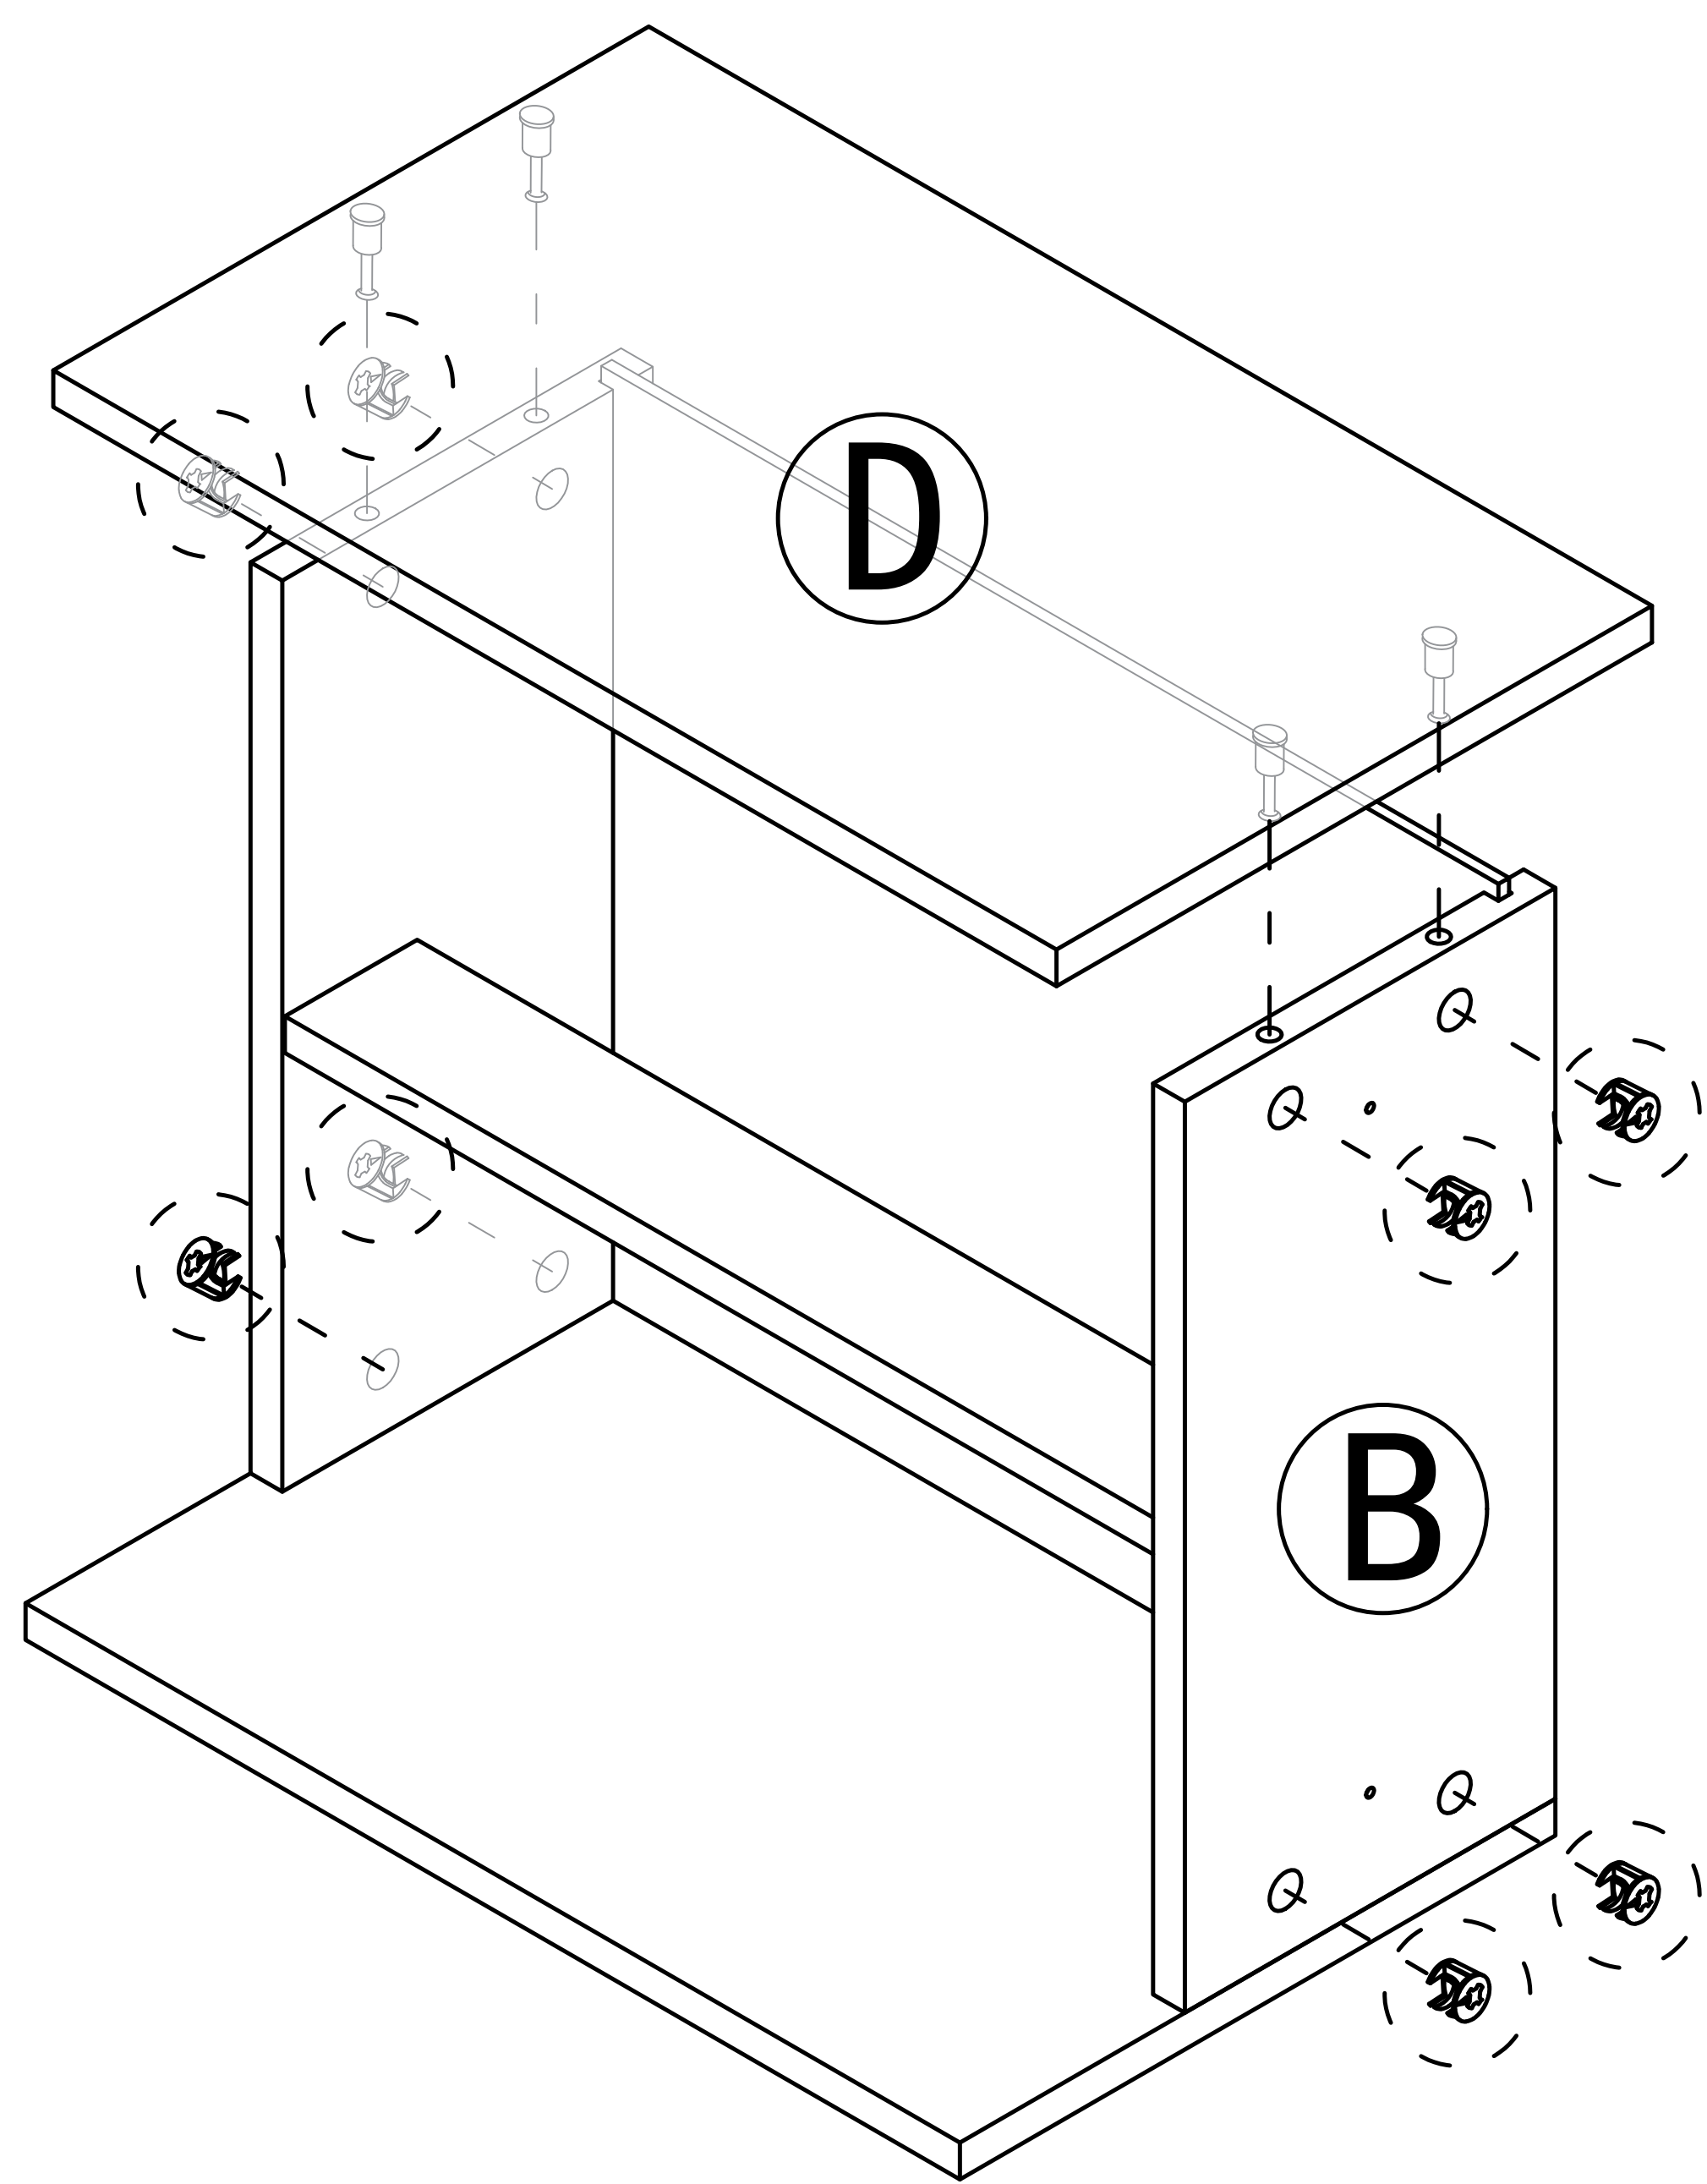

Step 9


2

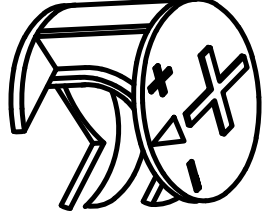
x8

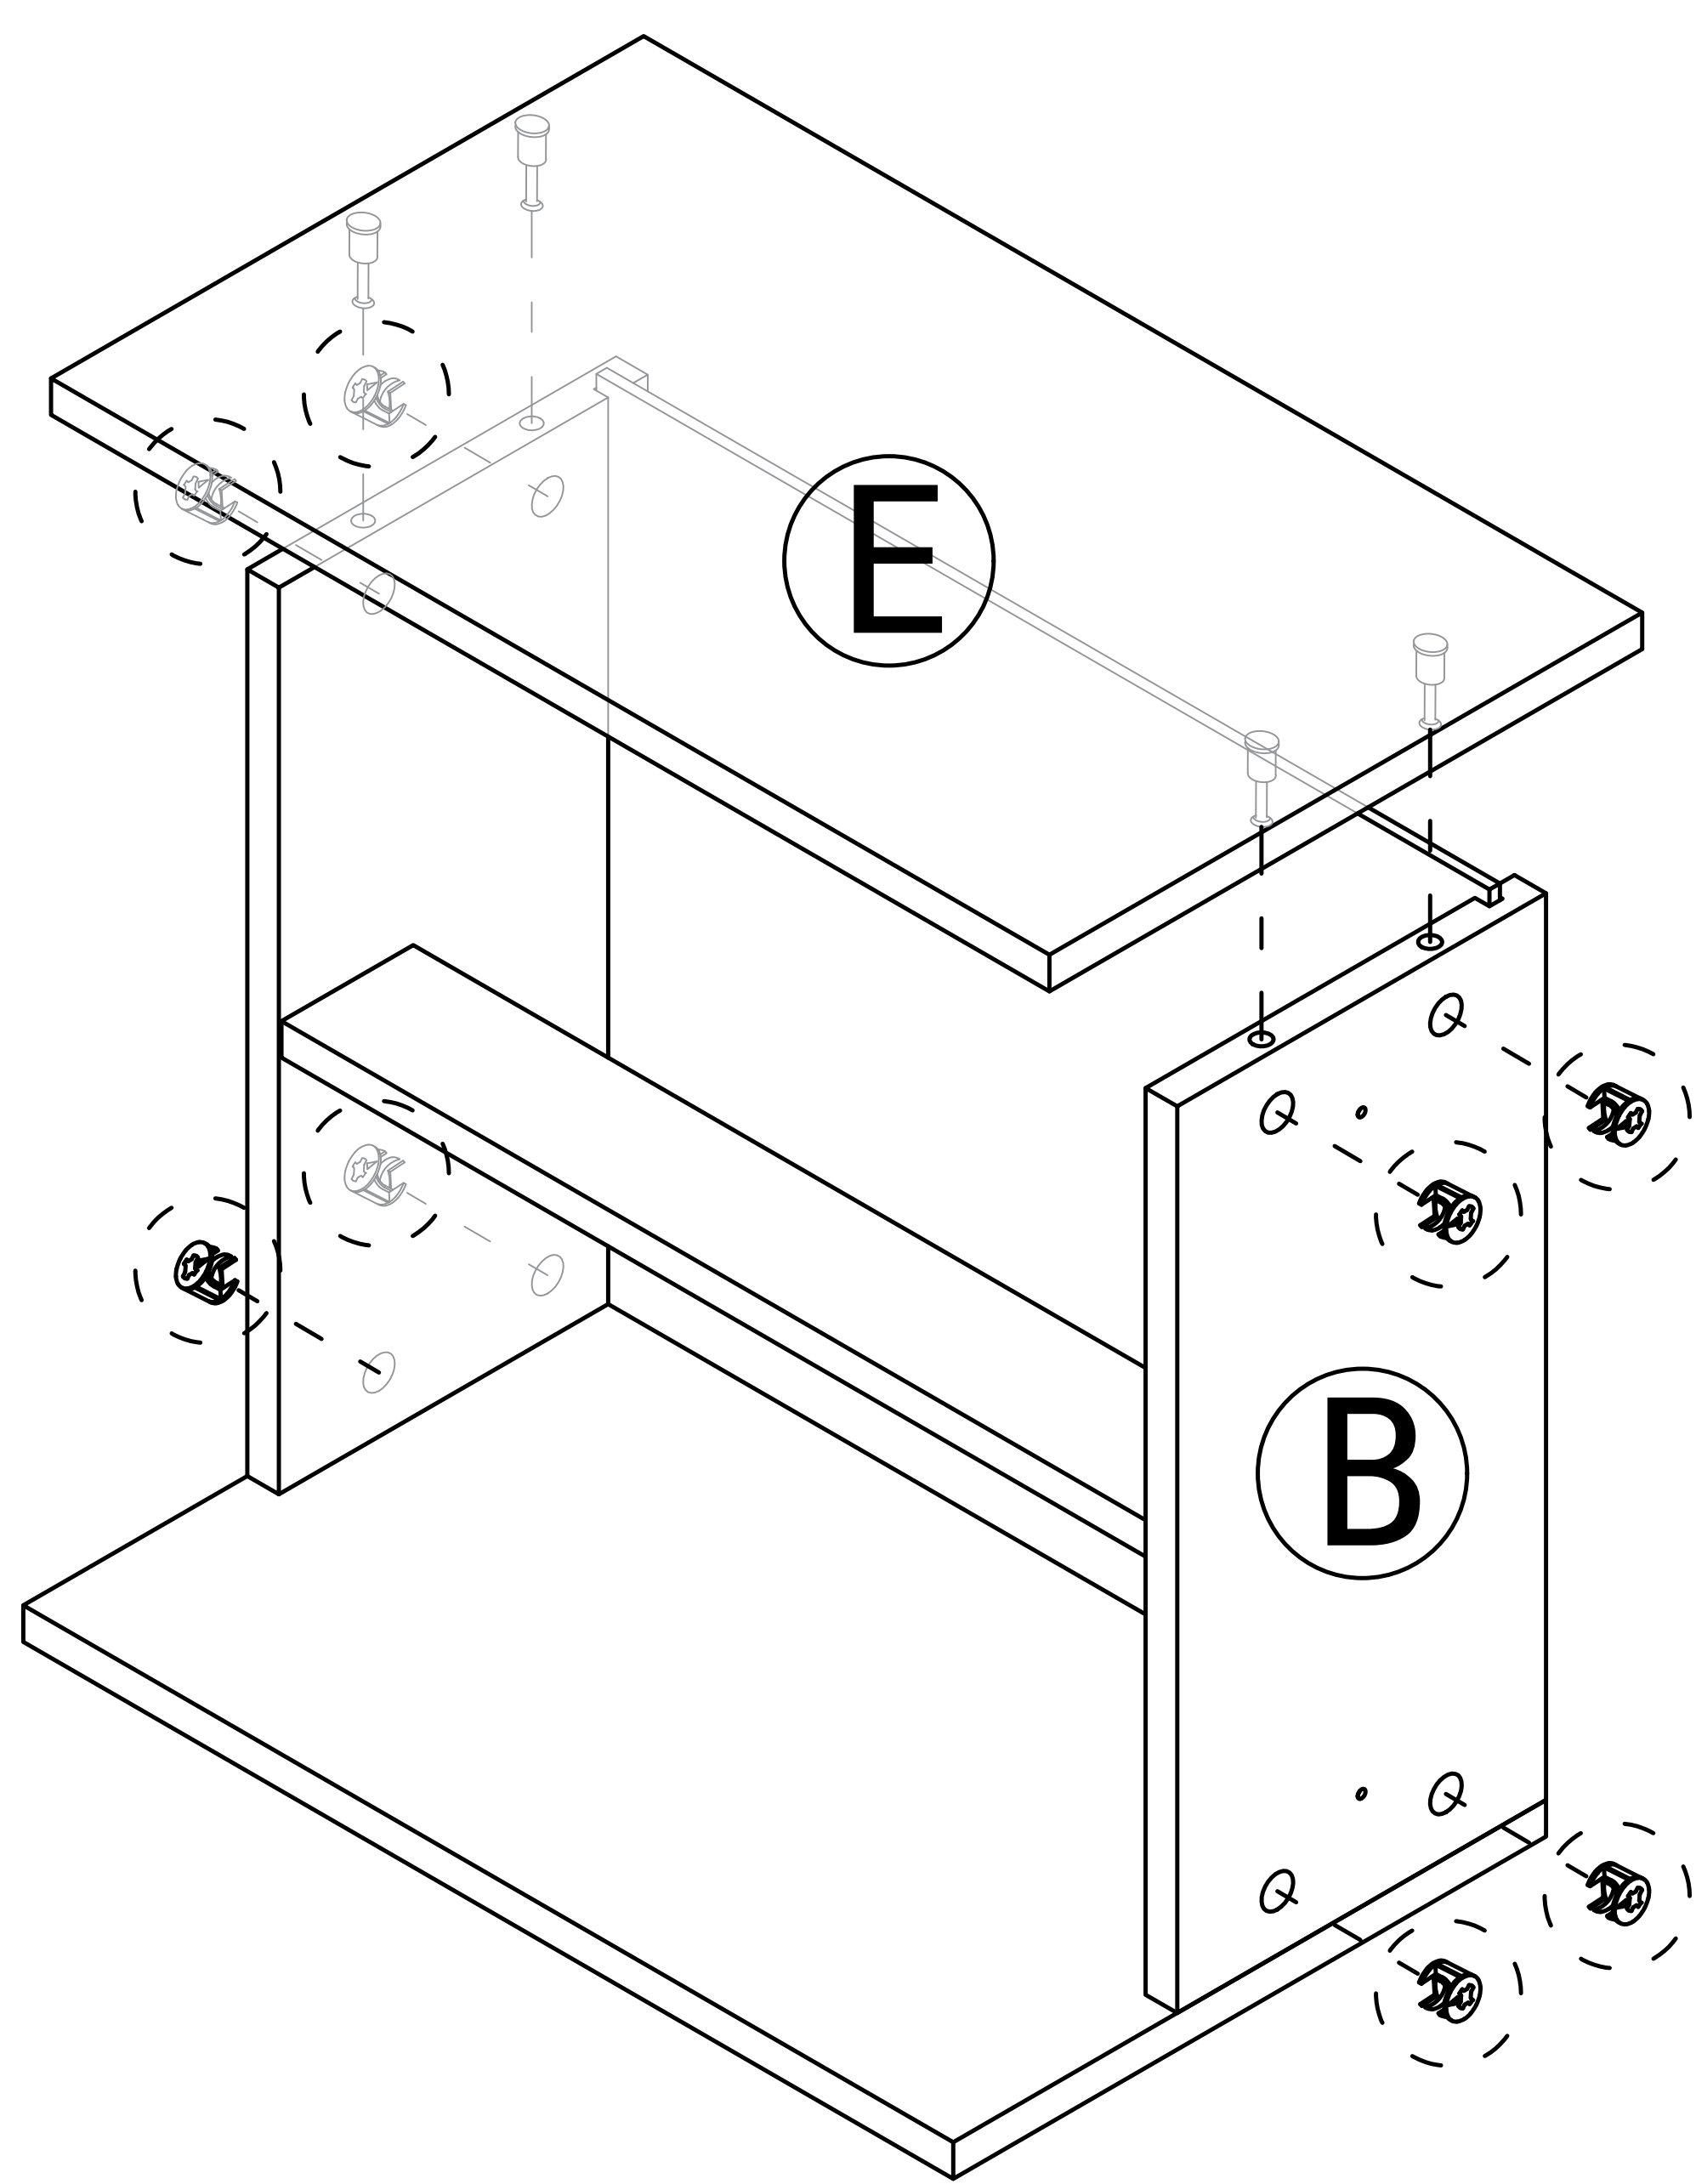


Step 10

- 1

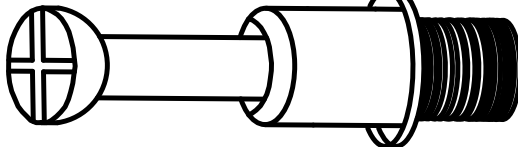x12
- 2

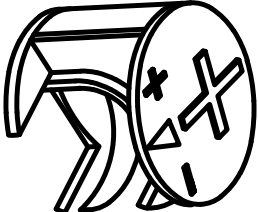x12

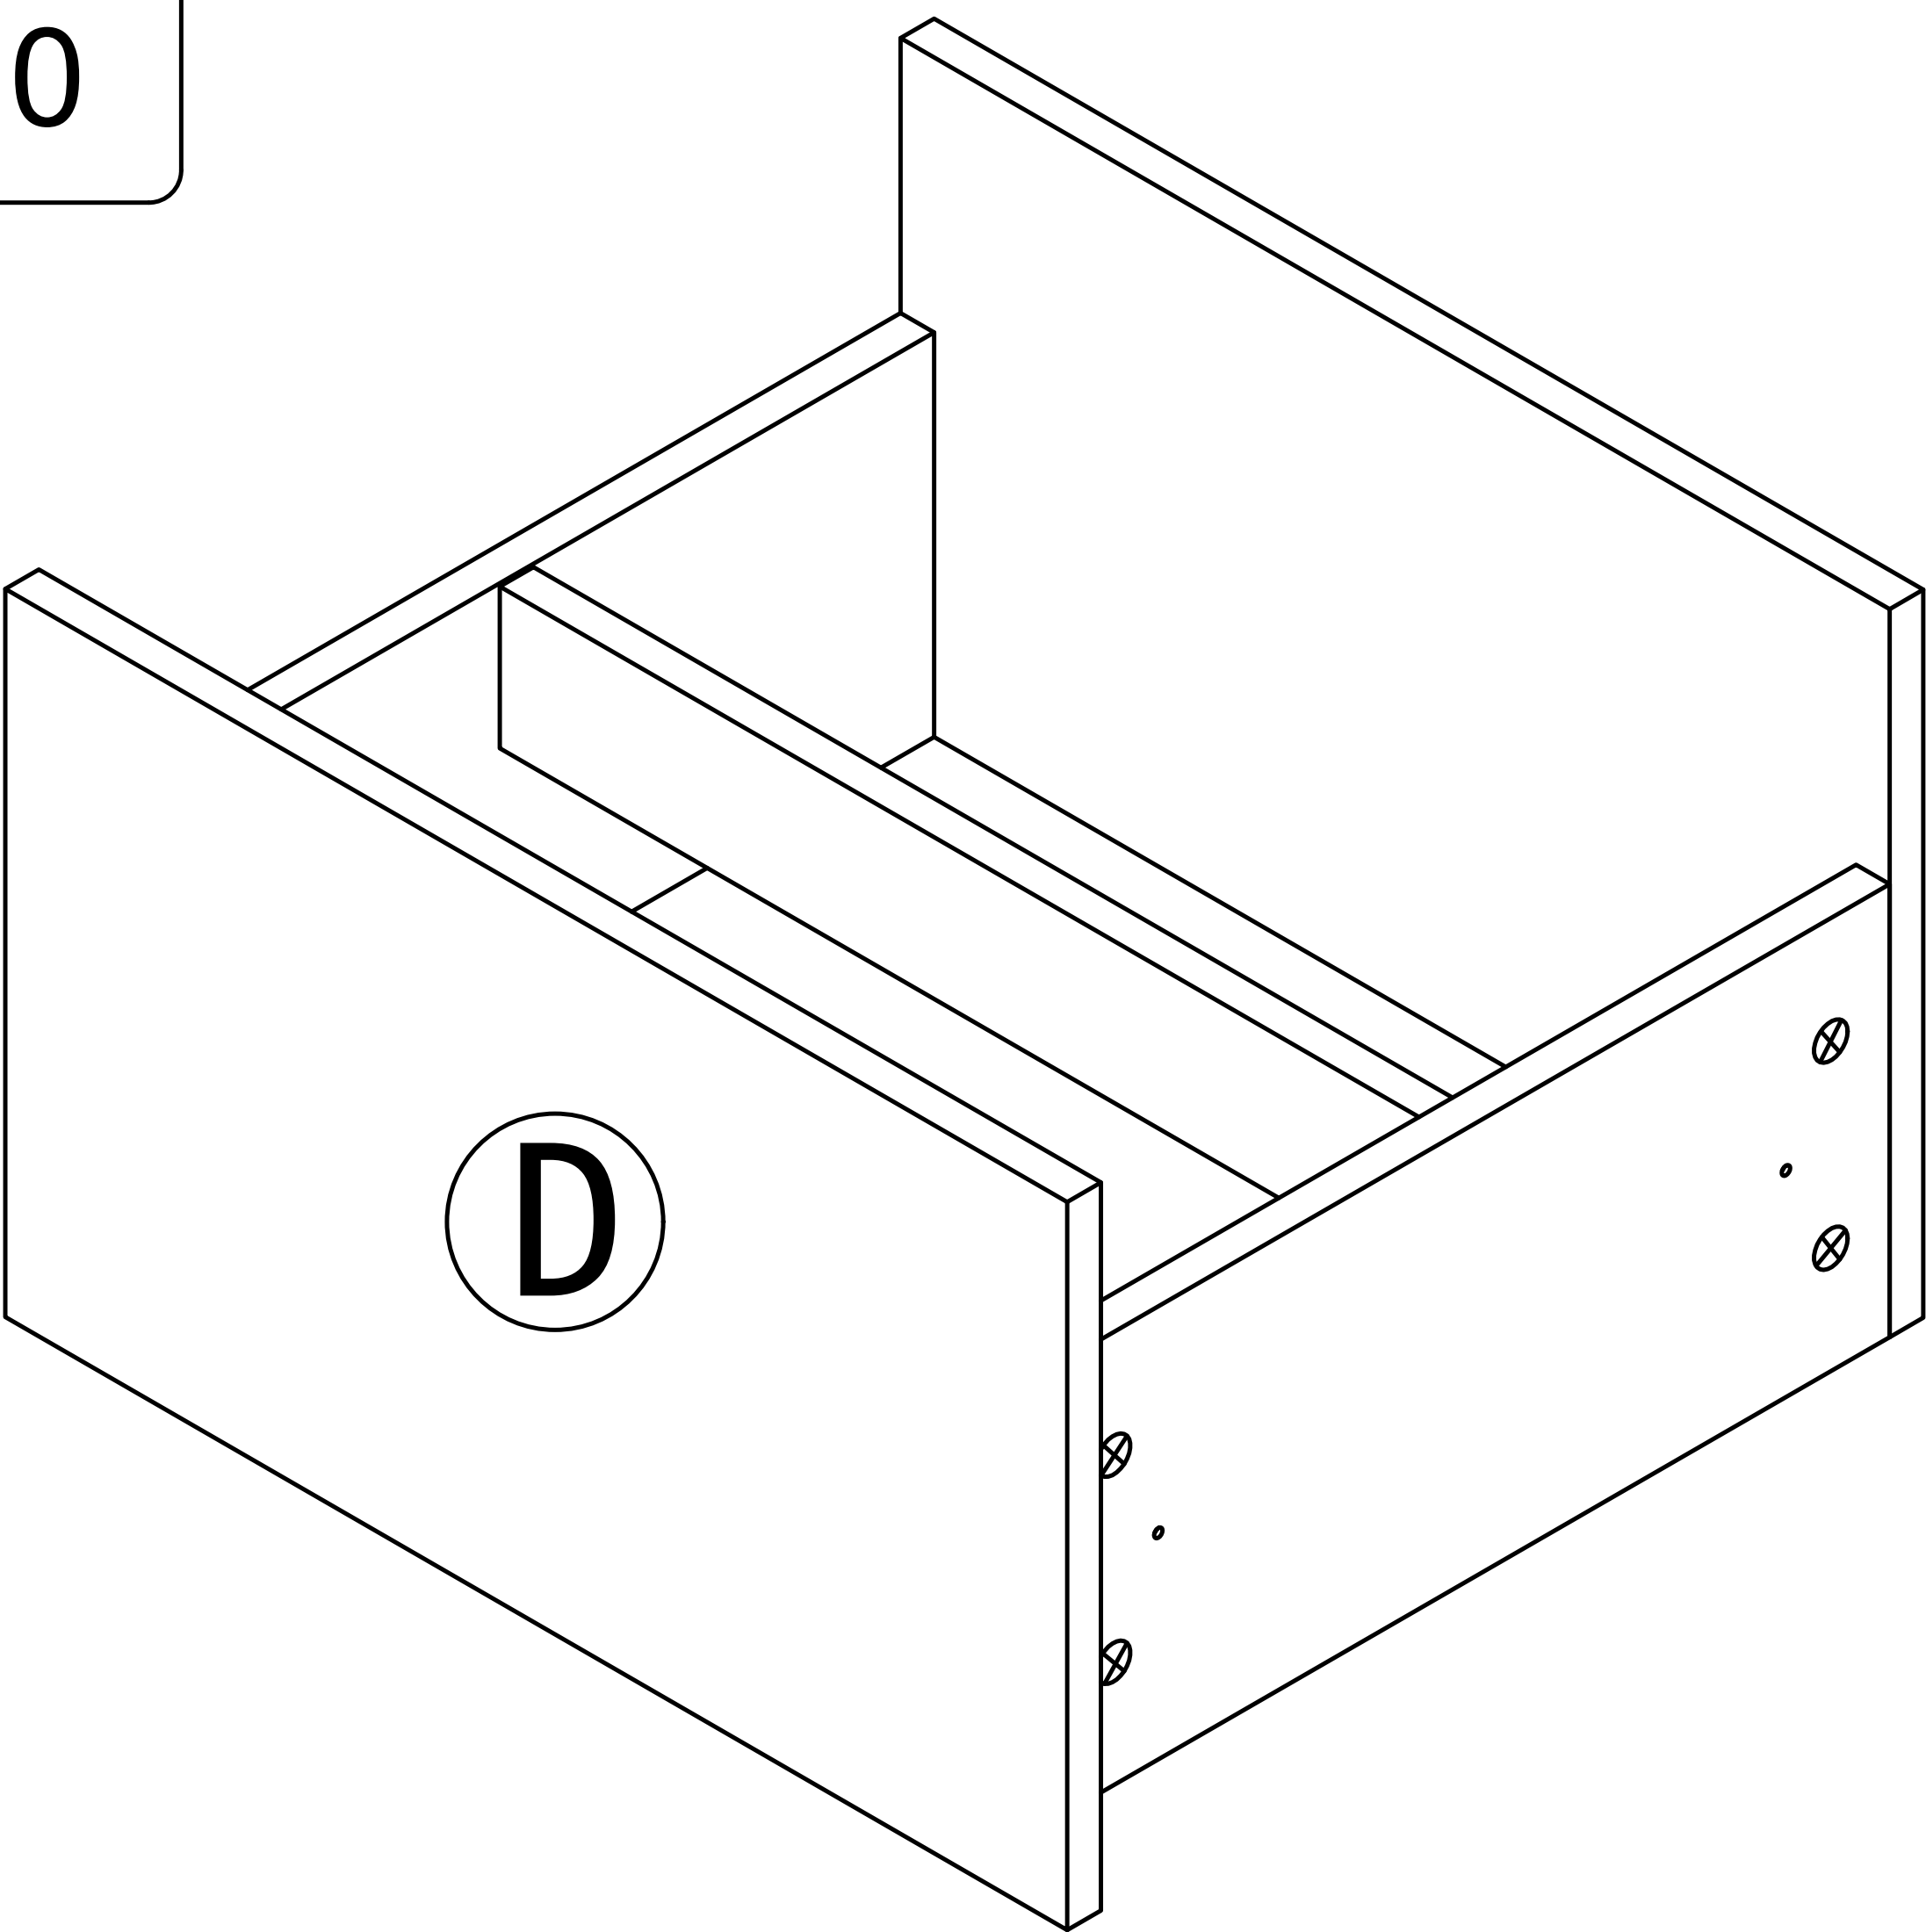



x2


Repeat the above installation steps.

Step 11

- 1

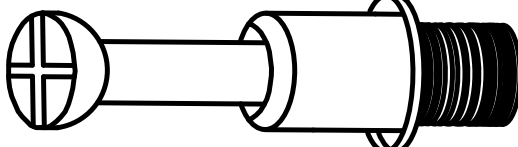x12
- 2

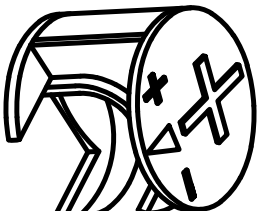
x12

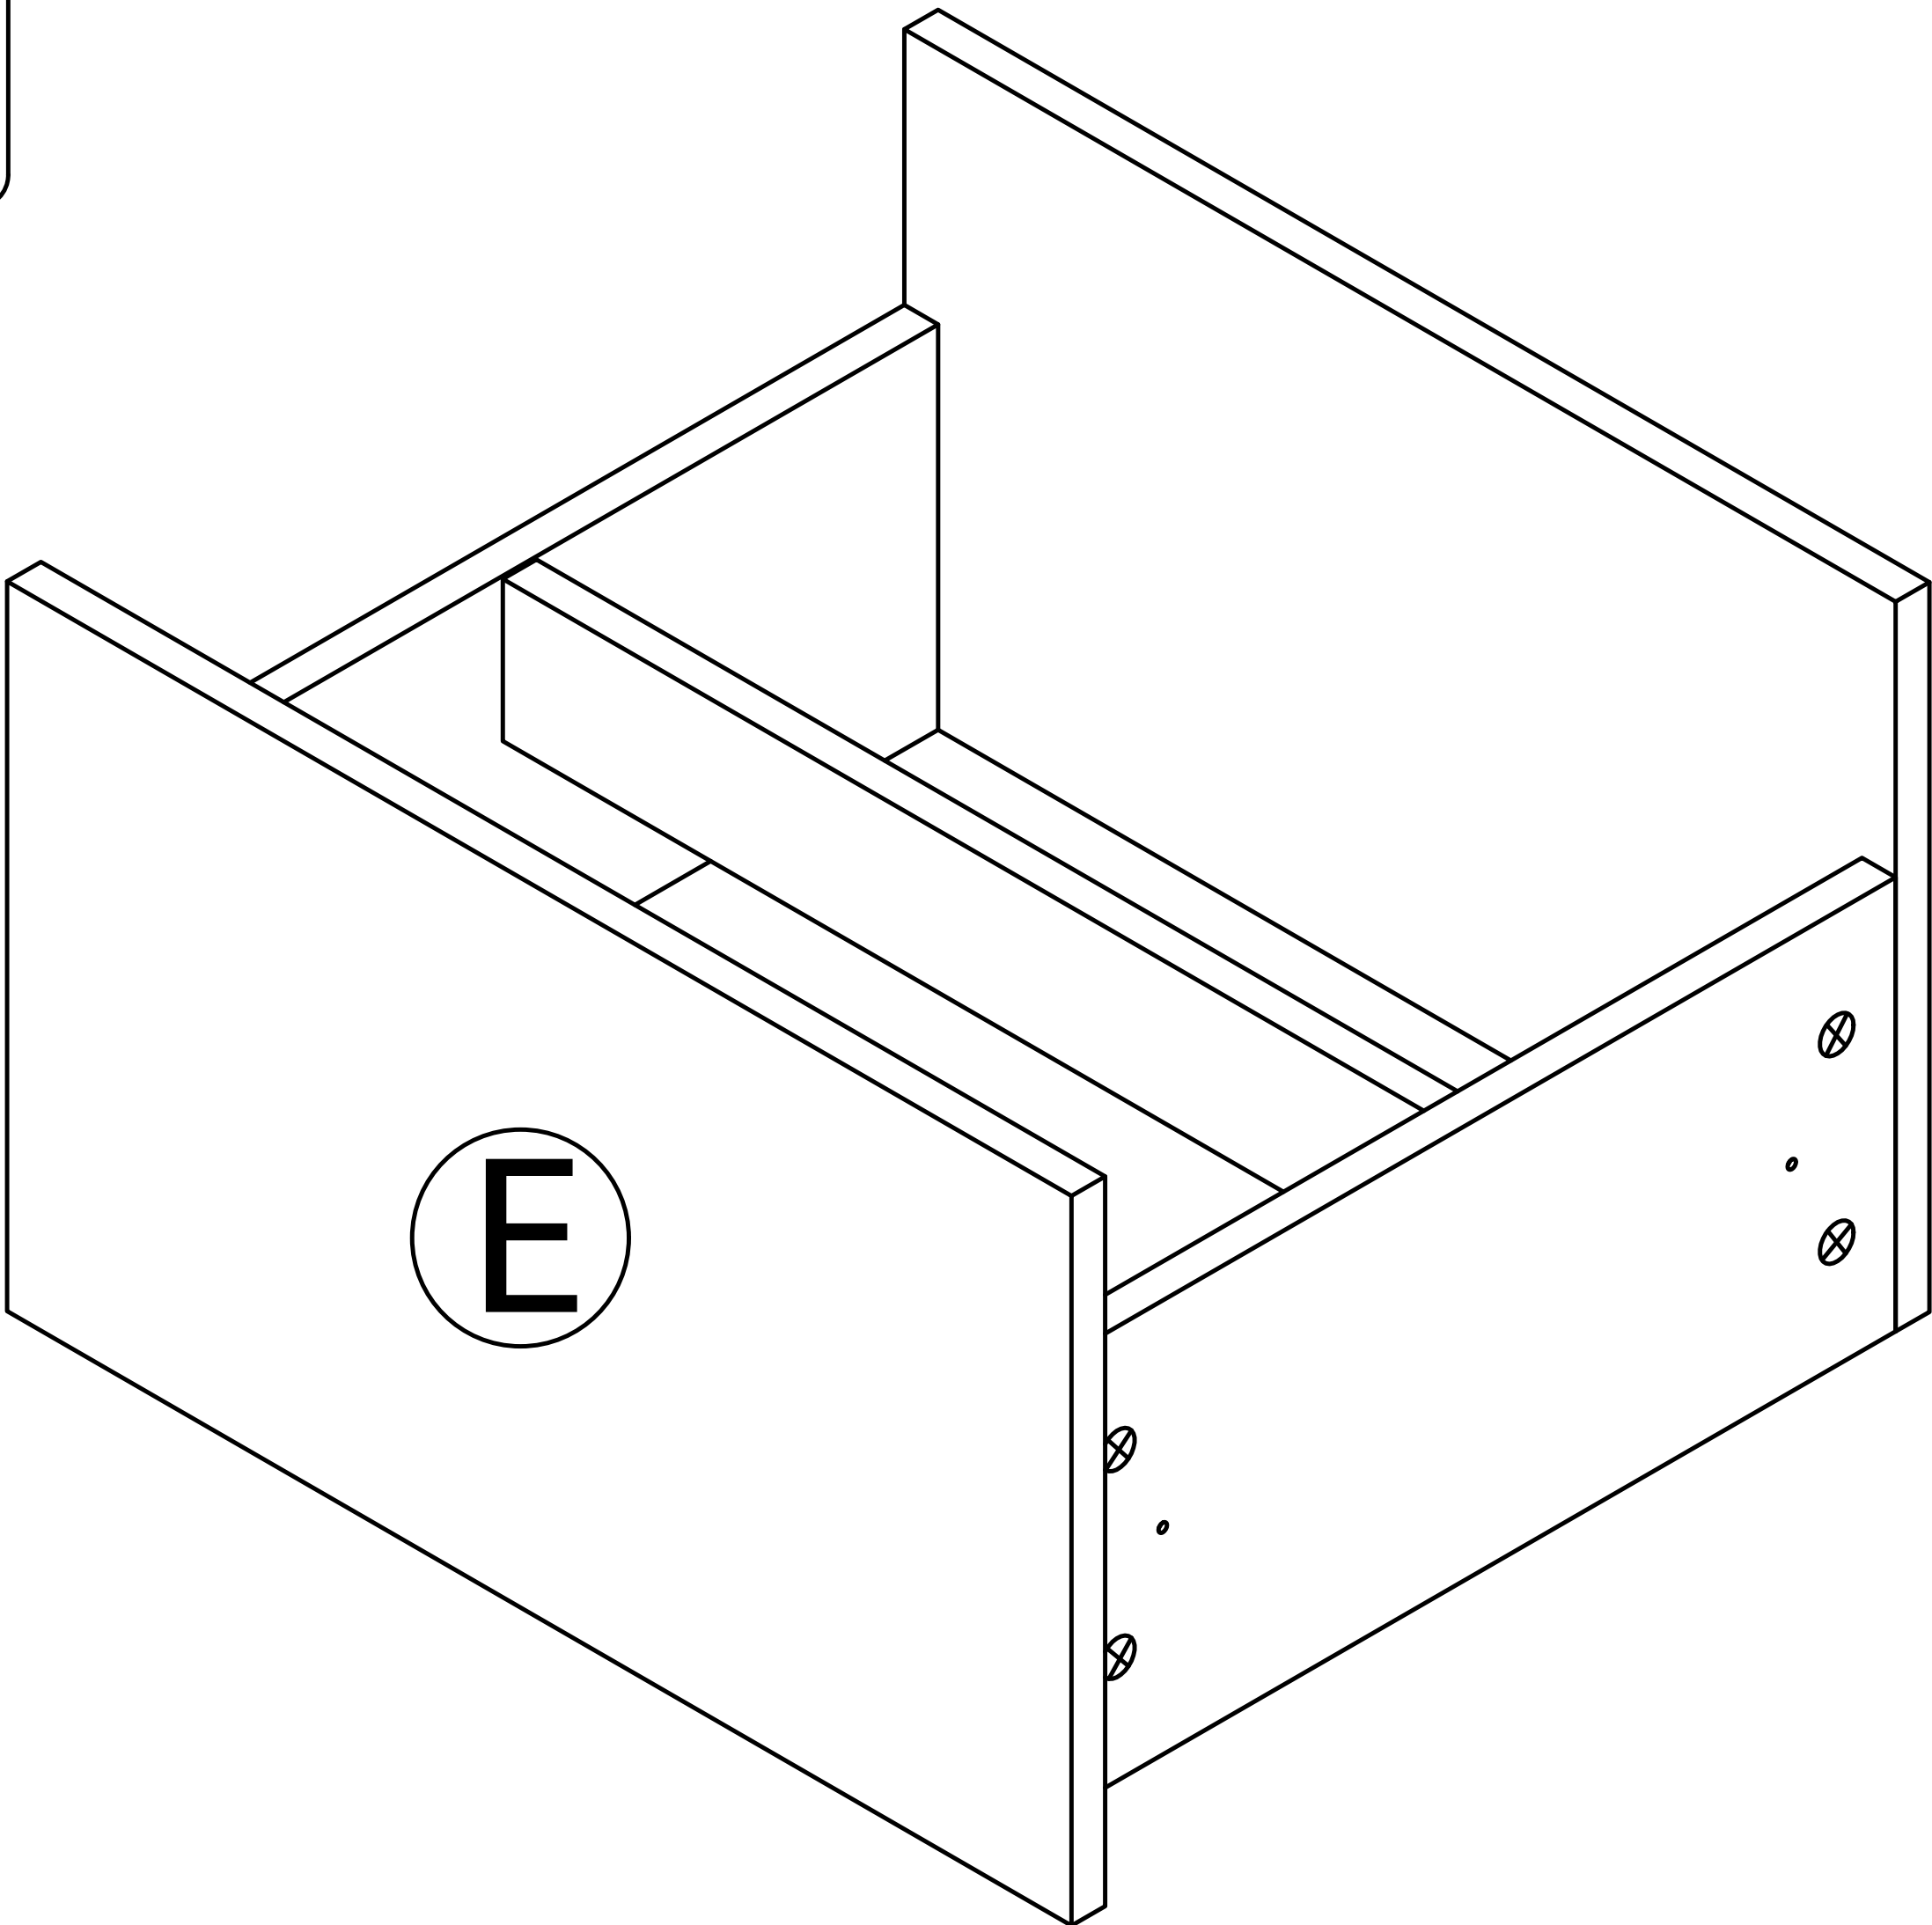

x2


Repeat the above installation steps.

Drawer rail breakdown diagram

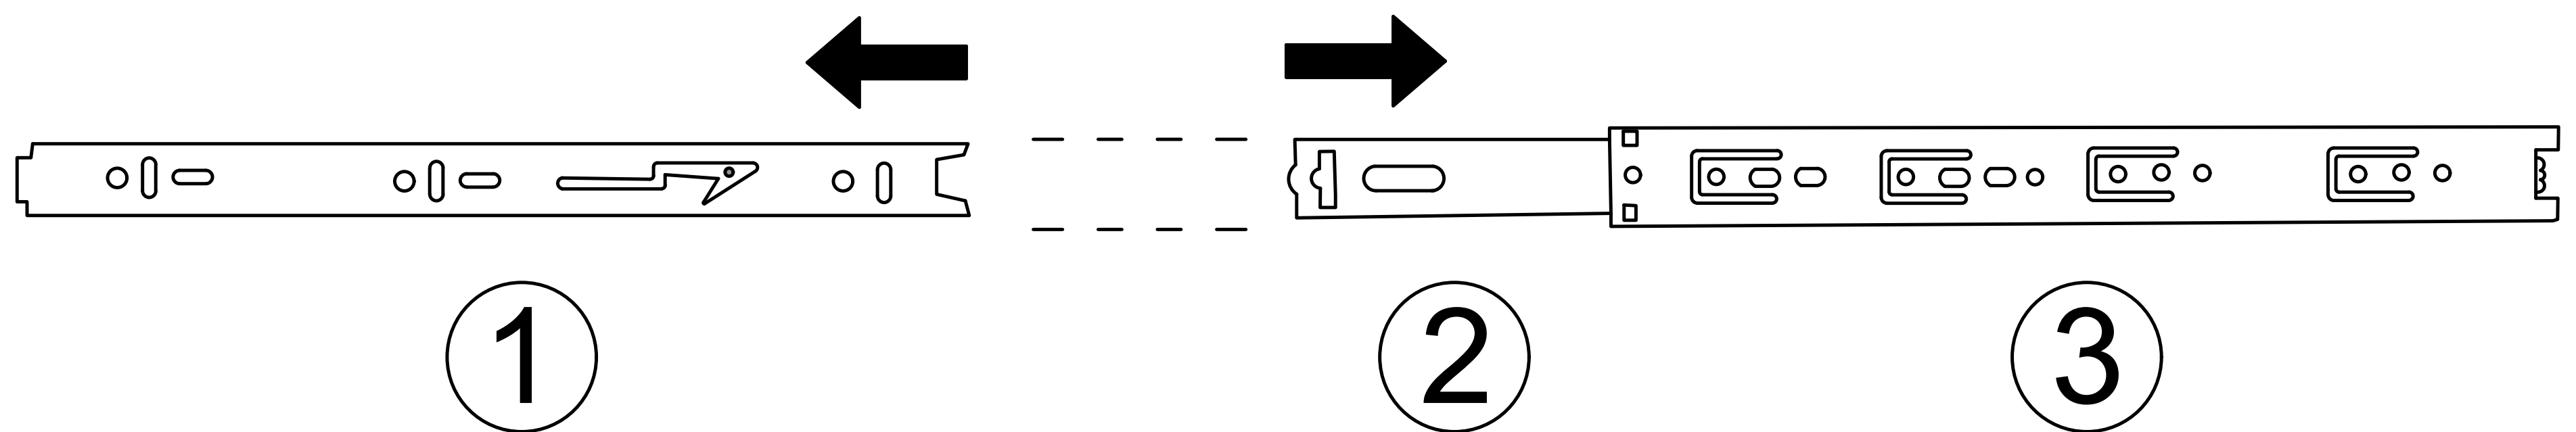



① Dismantle the schematic diagram

Step 1 : Pull the rails apart

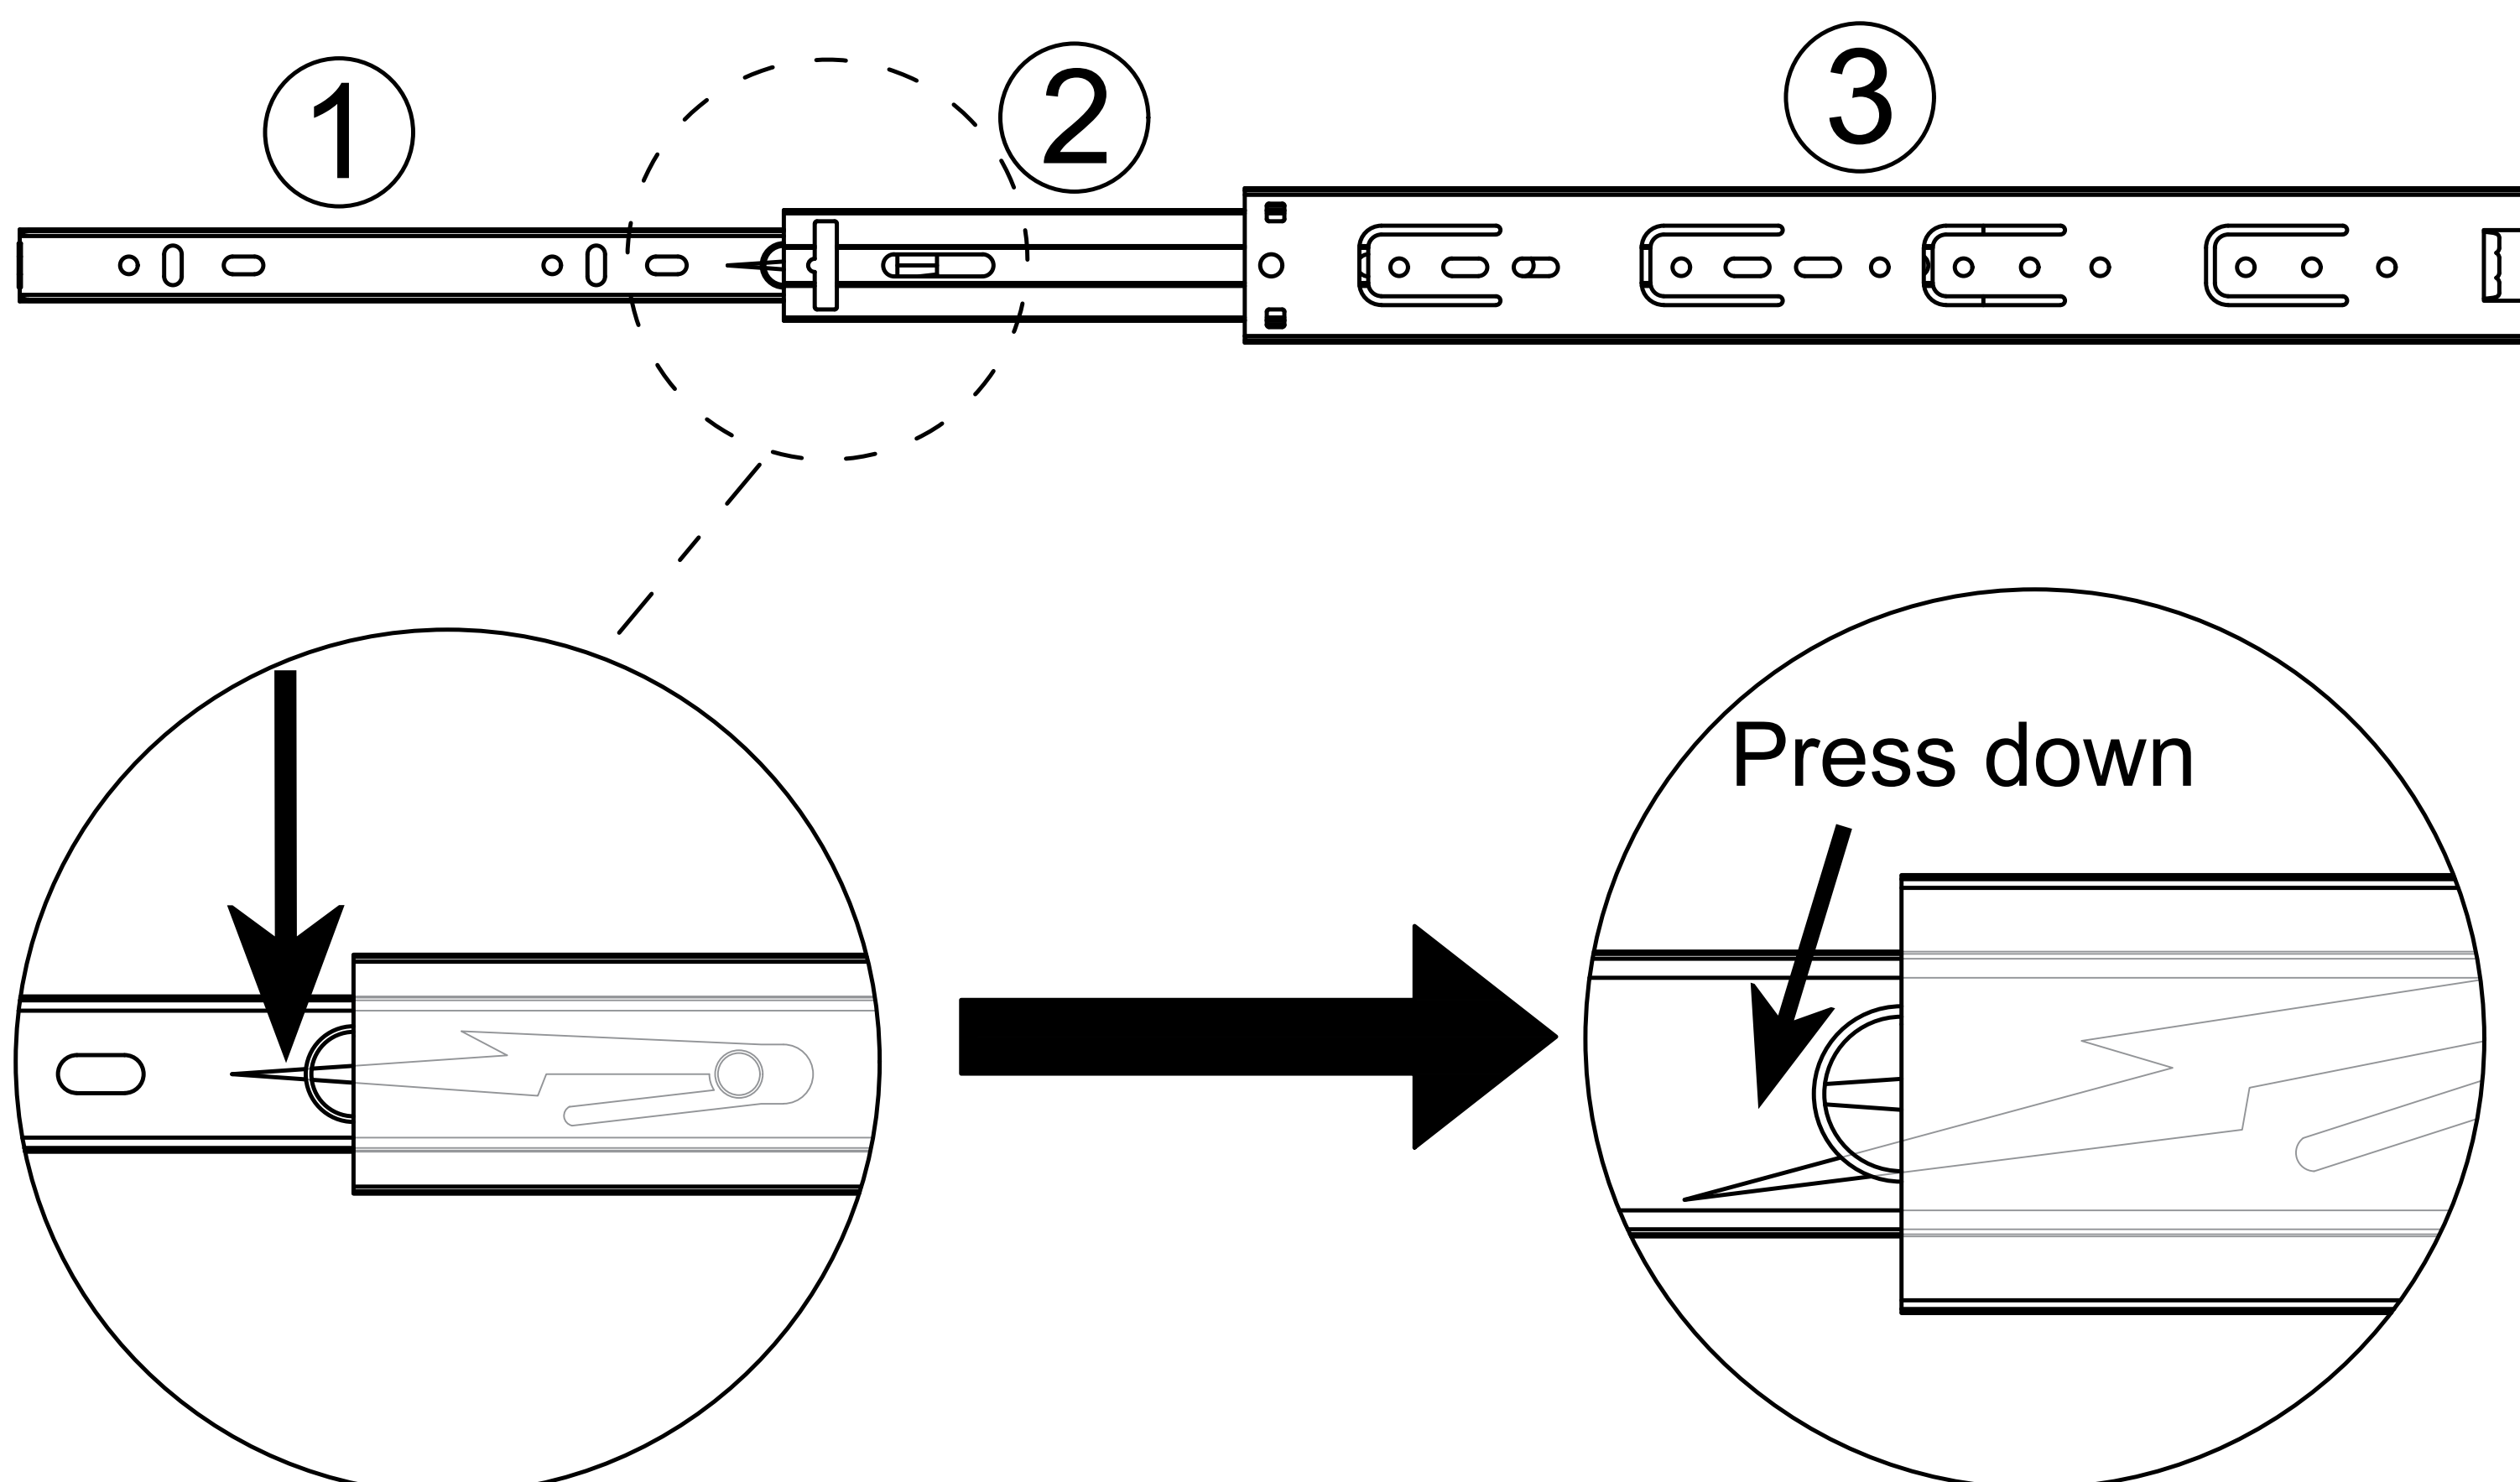


Step 2 : Press the nylon button and pull out ①.



Drawer rail decomposition completed schematic diagram









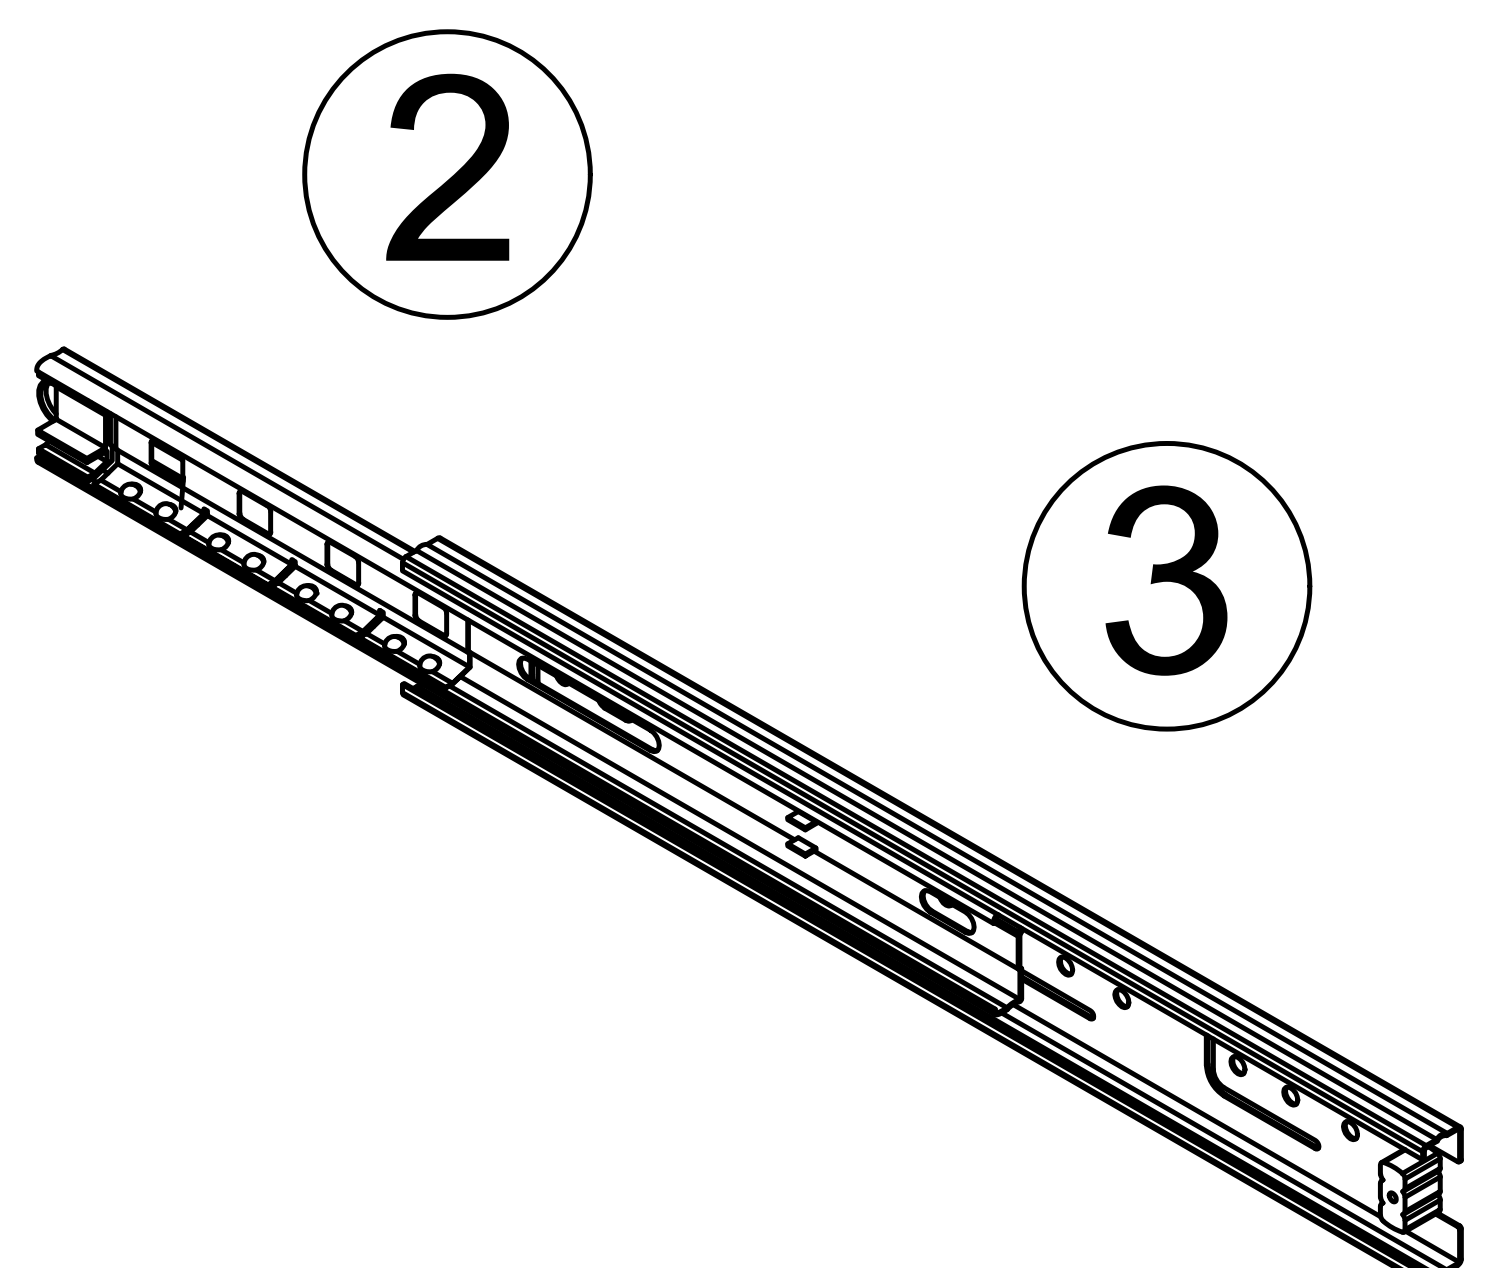
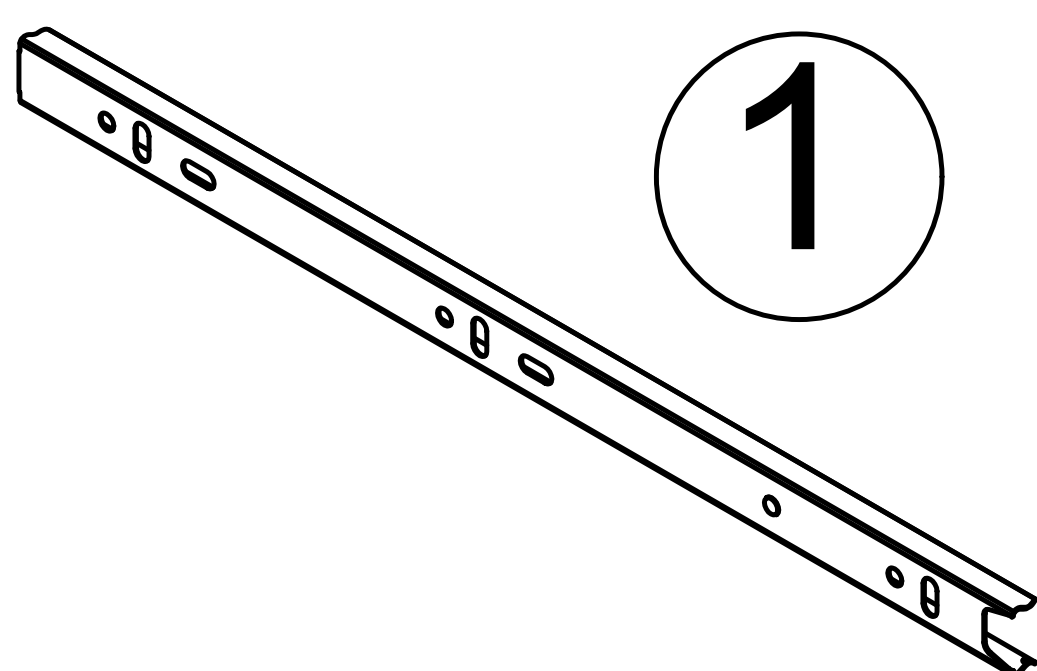








Step 12

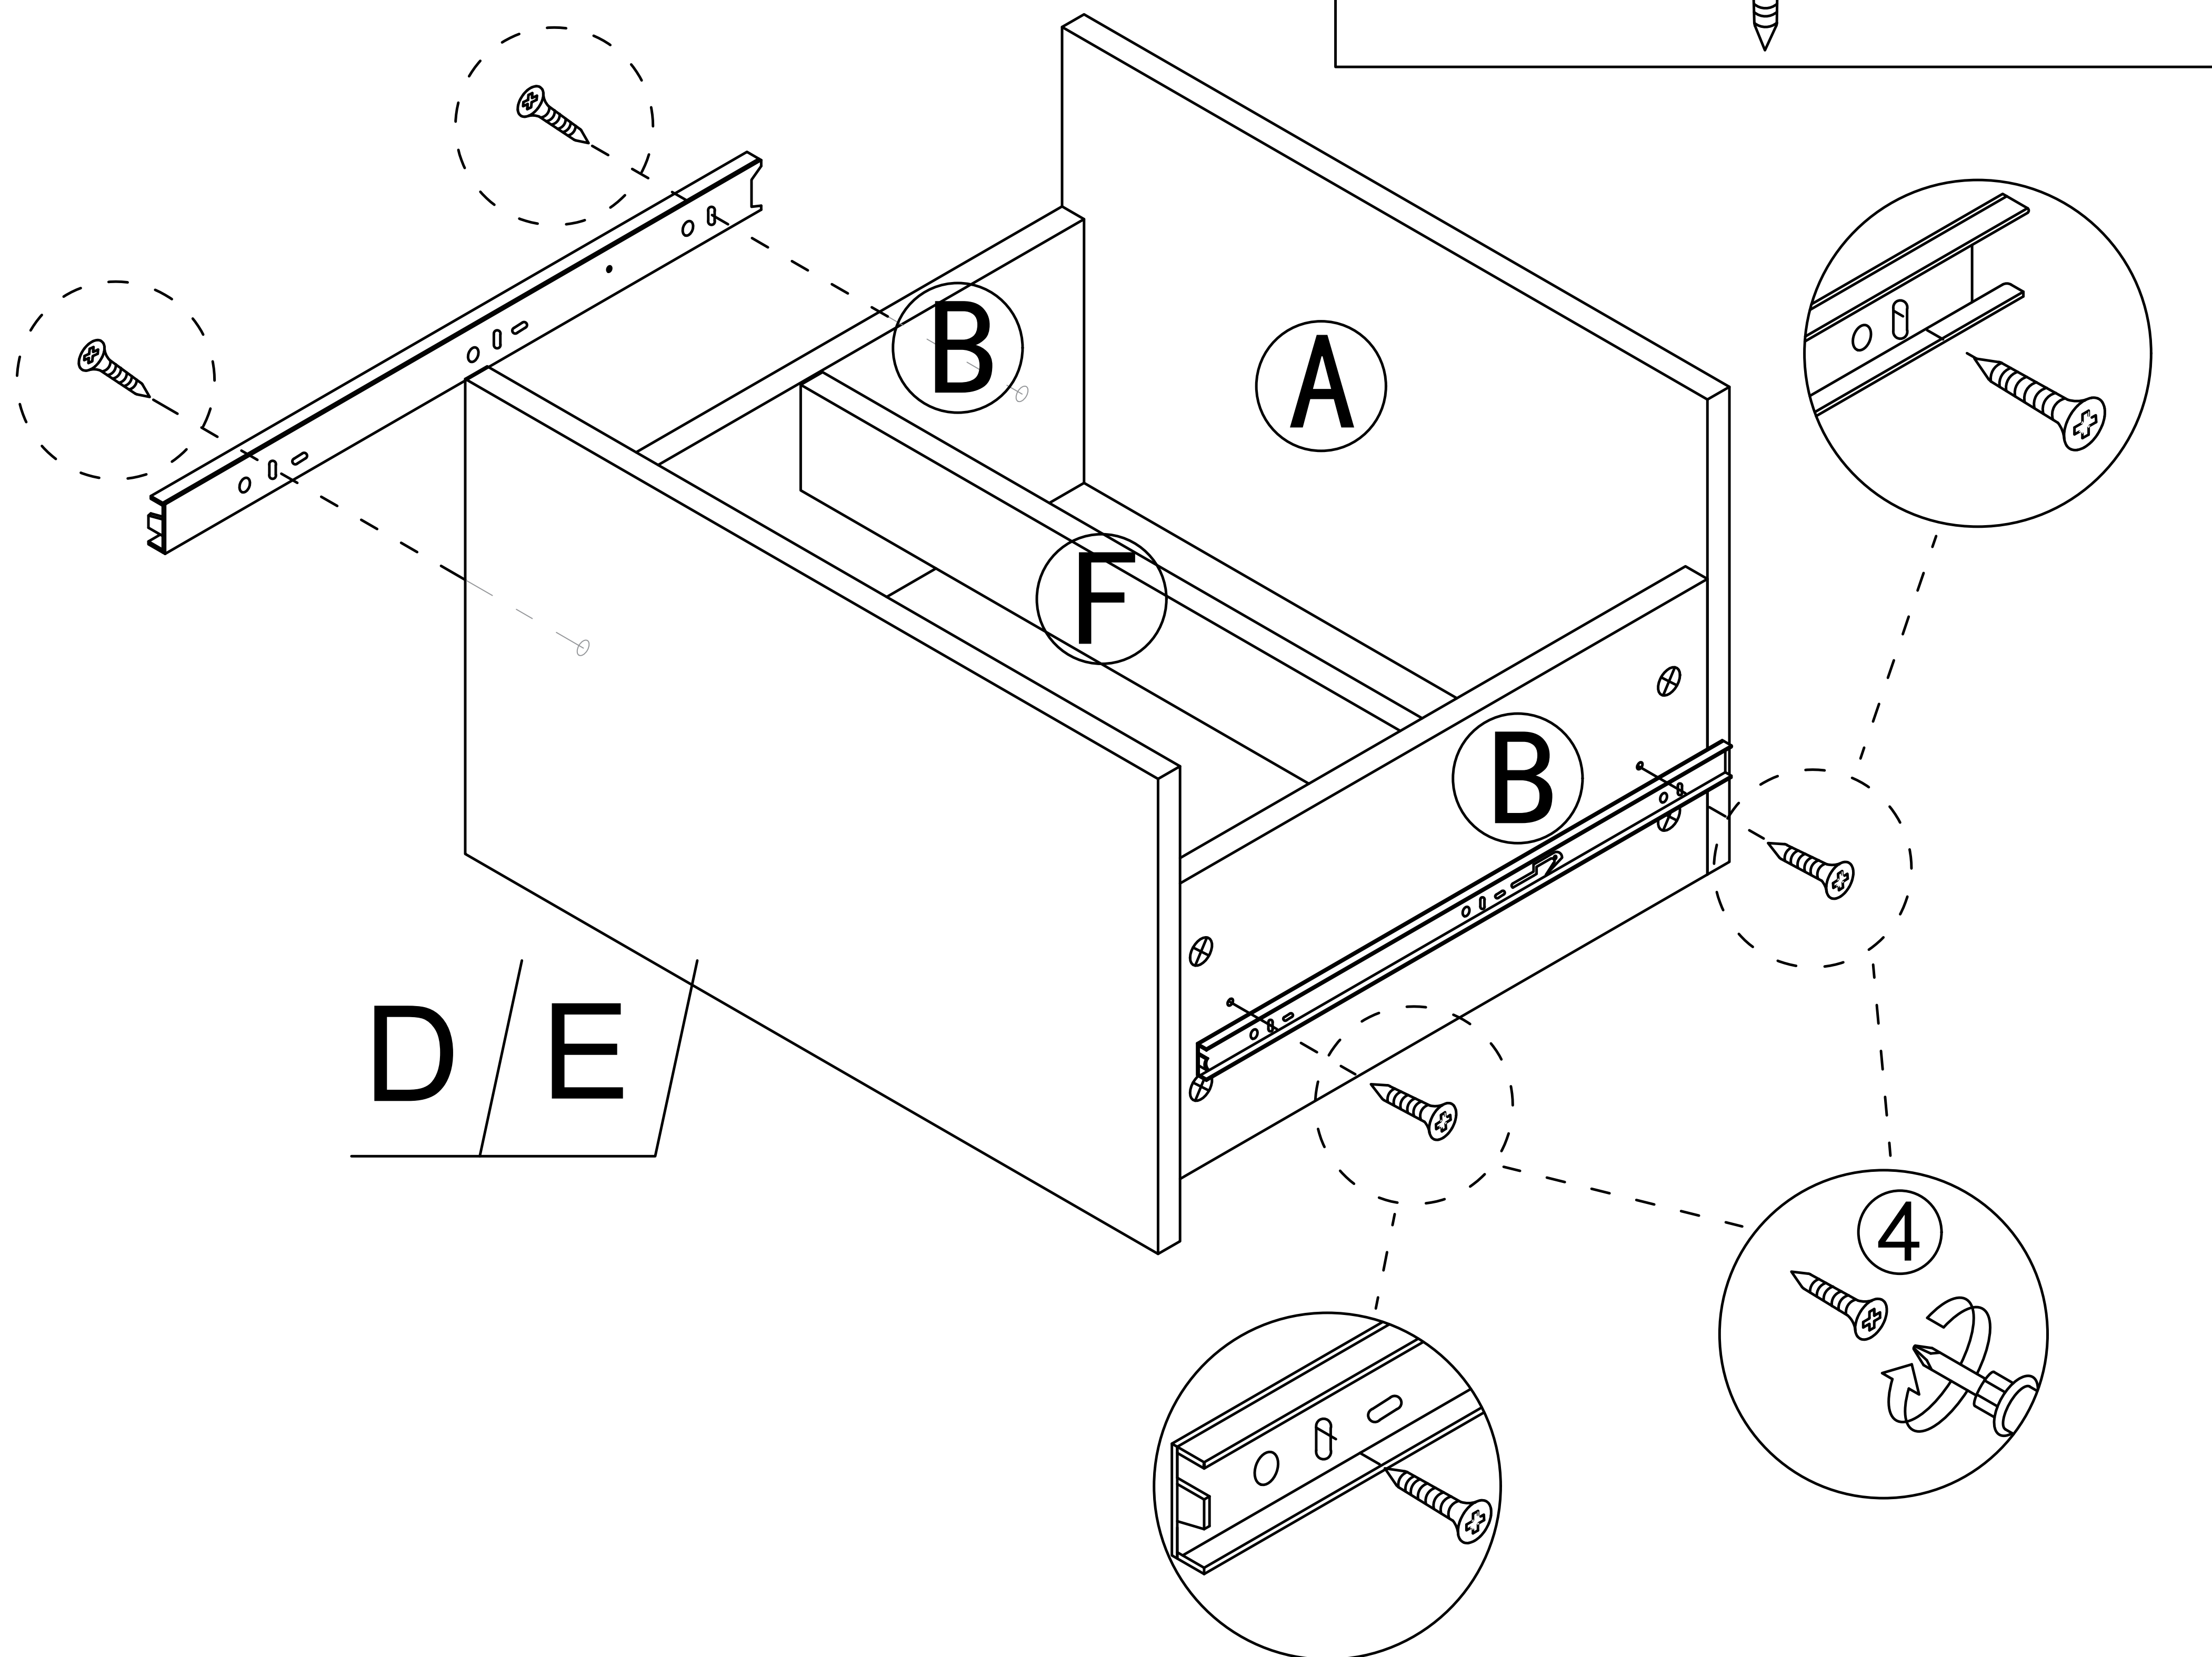


Install the guide rail according to the above steps.

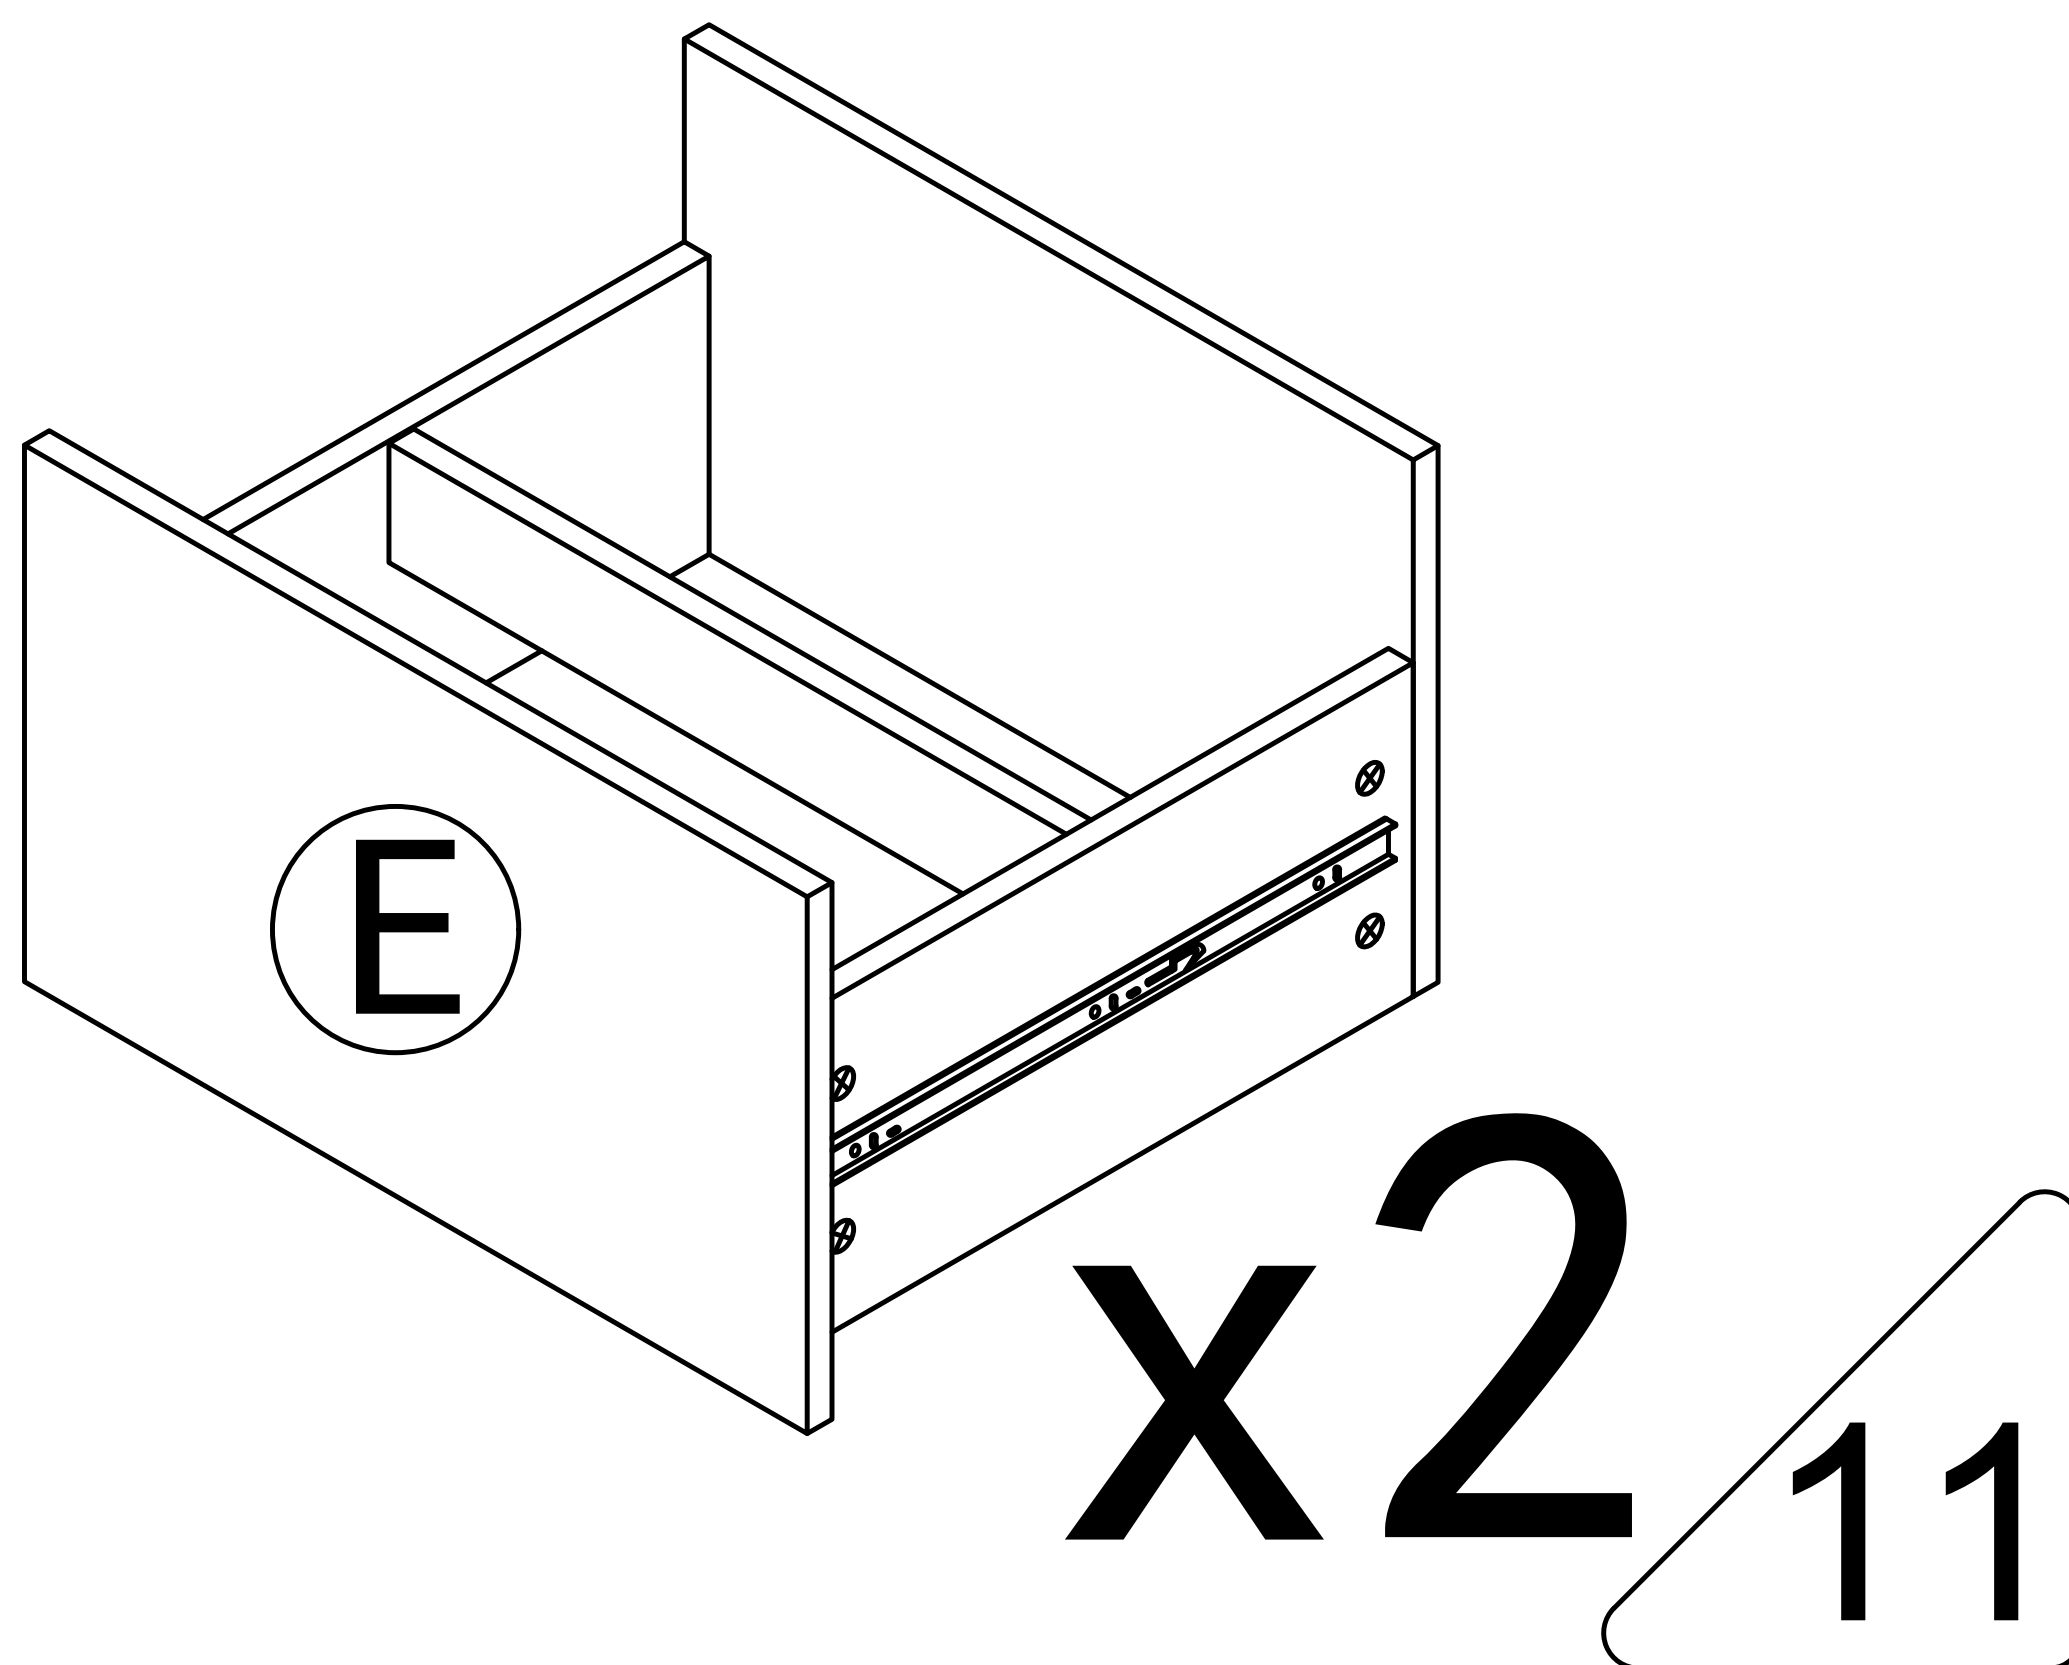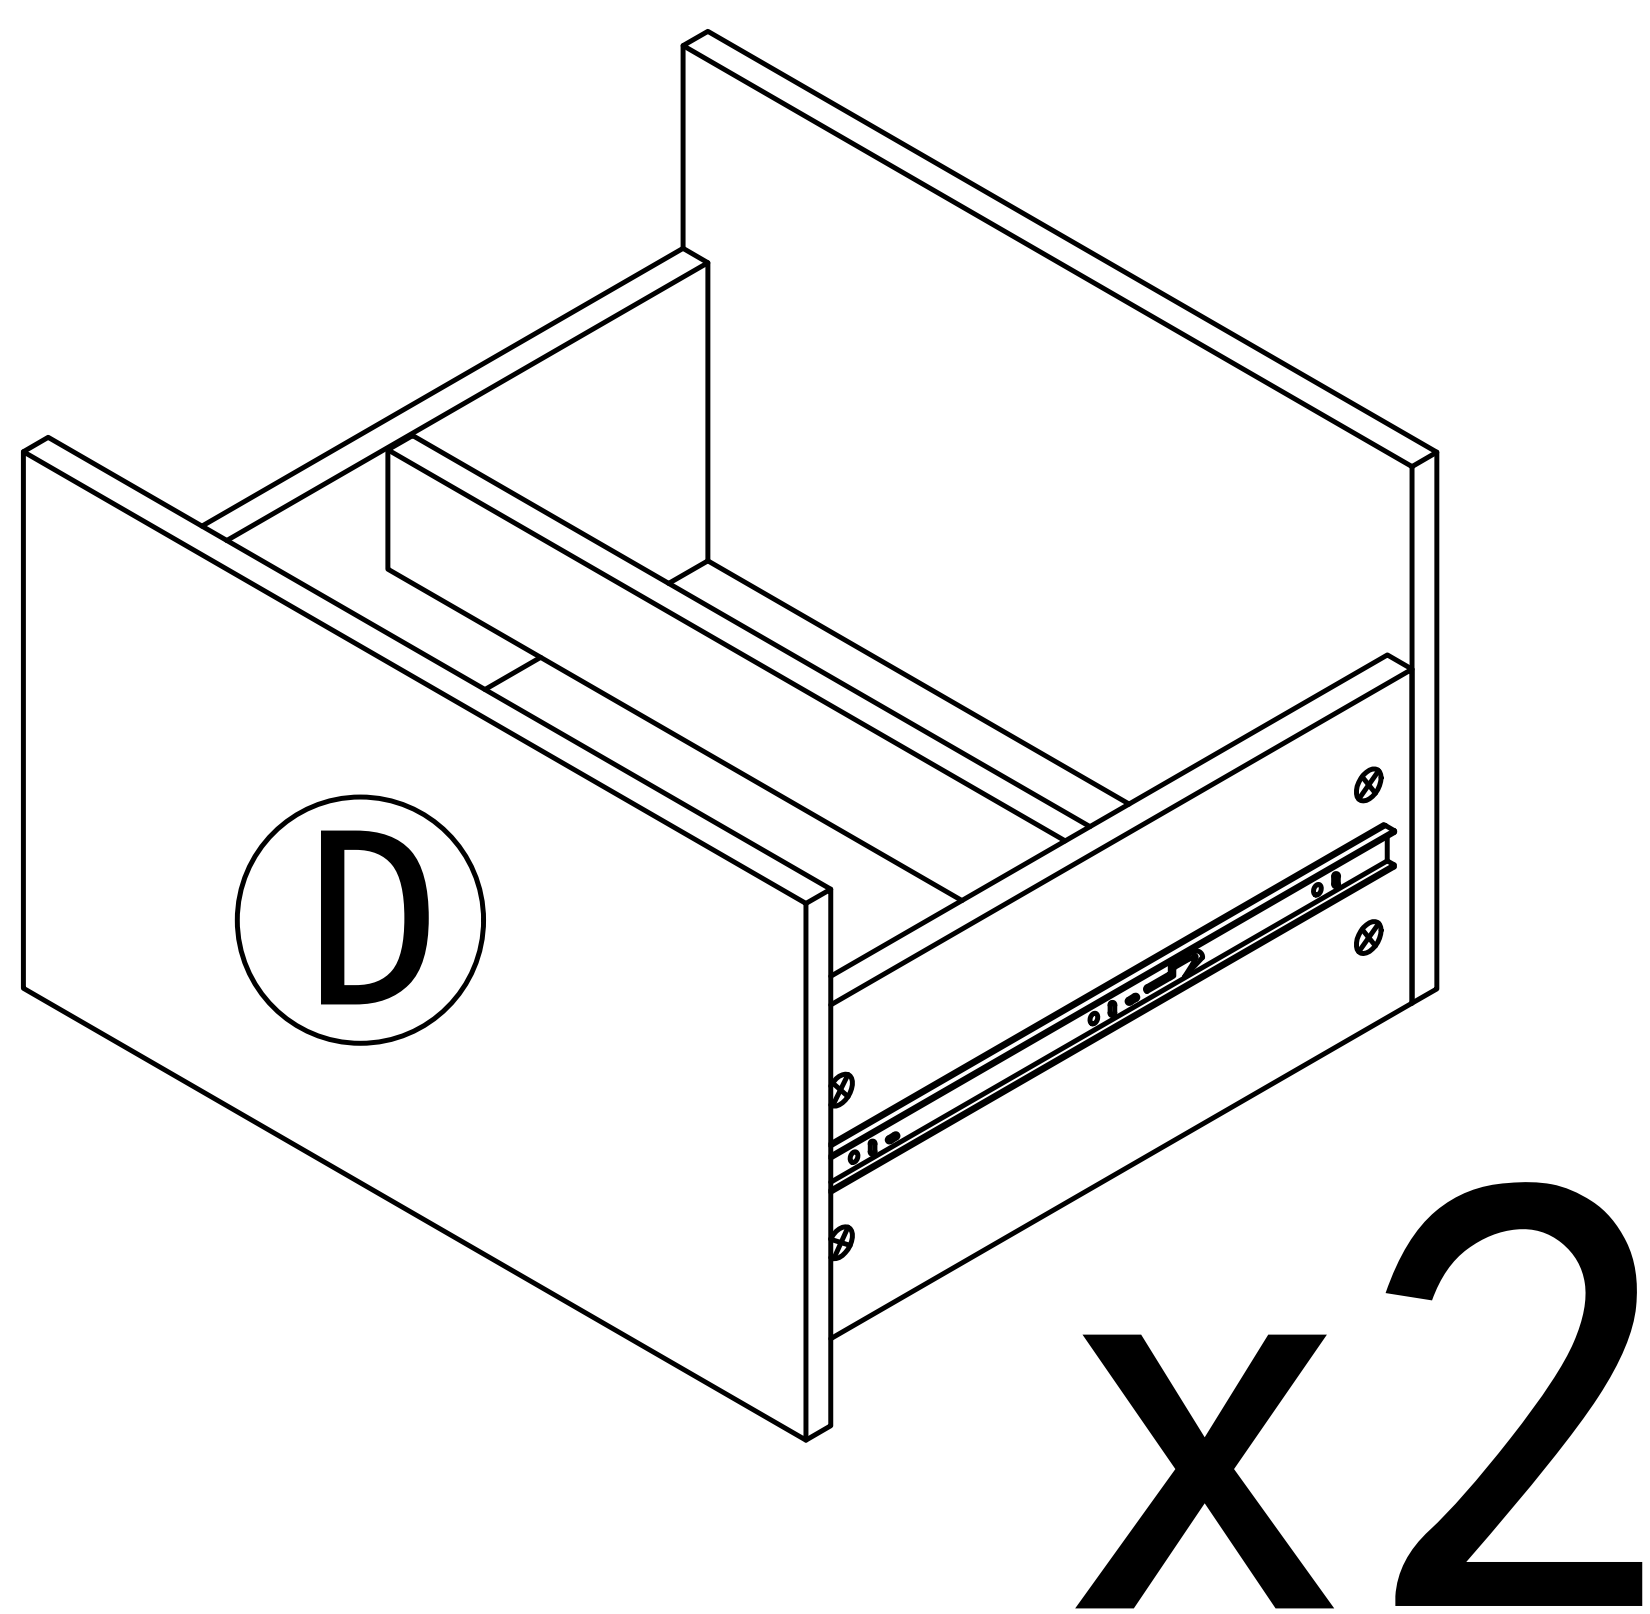

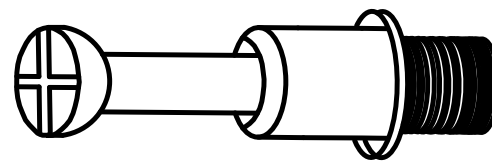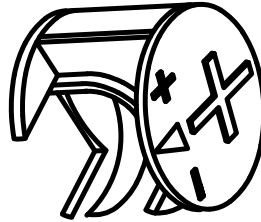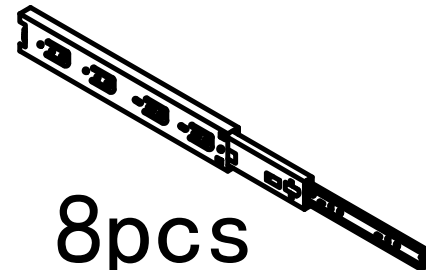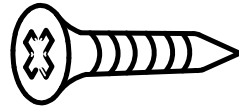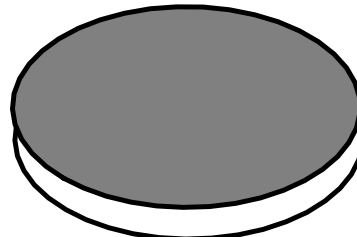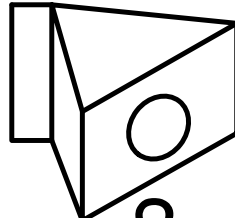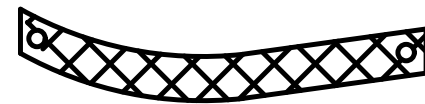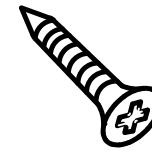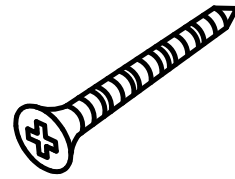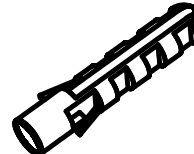
1		24pcs	2		24pcs	3		12pcs						
4		8pcs			24pcs	5		5pcs	6		8pcs			8pcs
7		1pcs			1pcs			1pcs			1pcs			2pcs

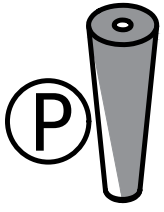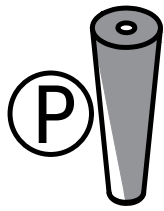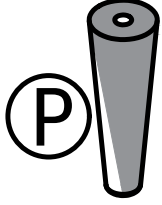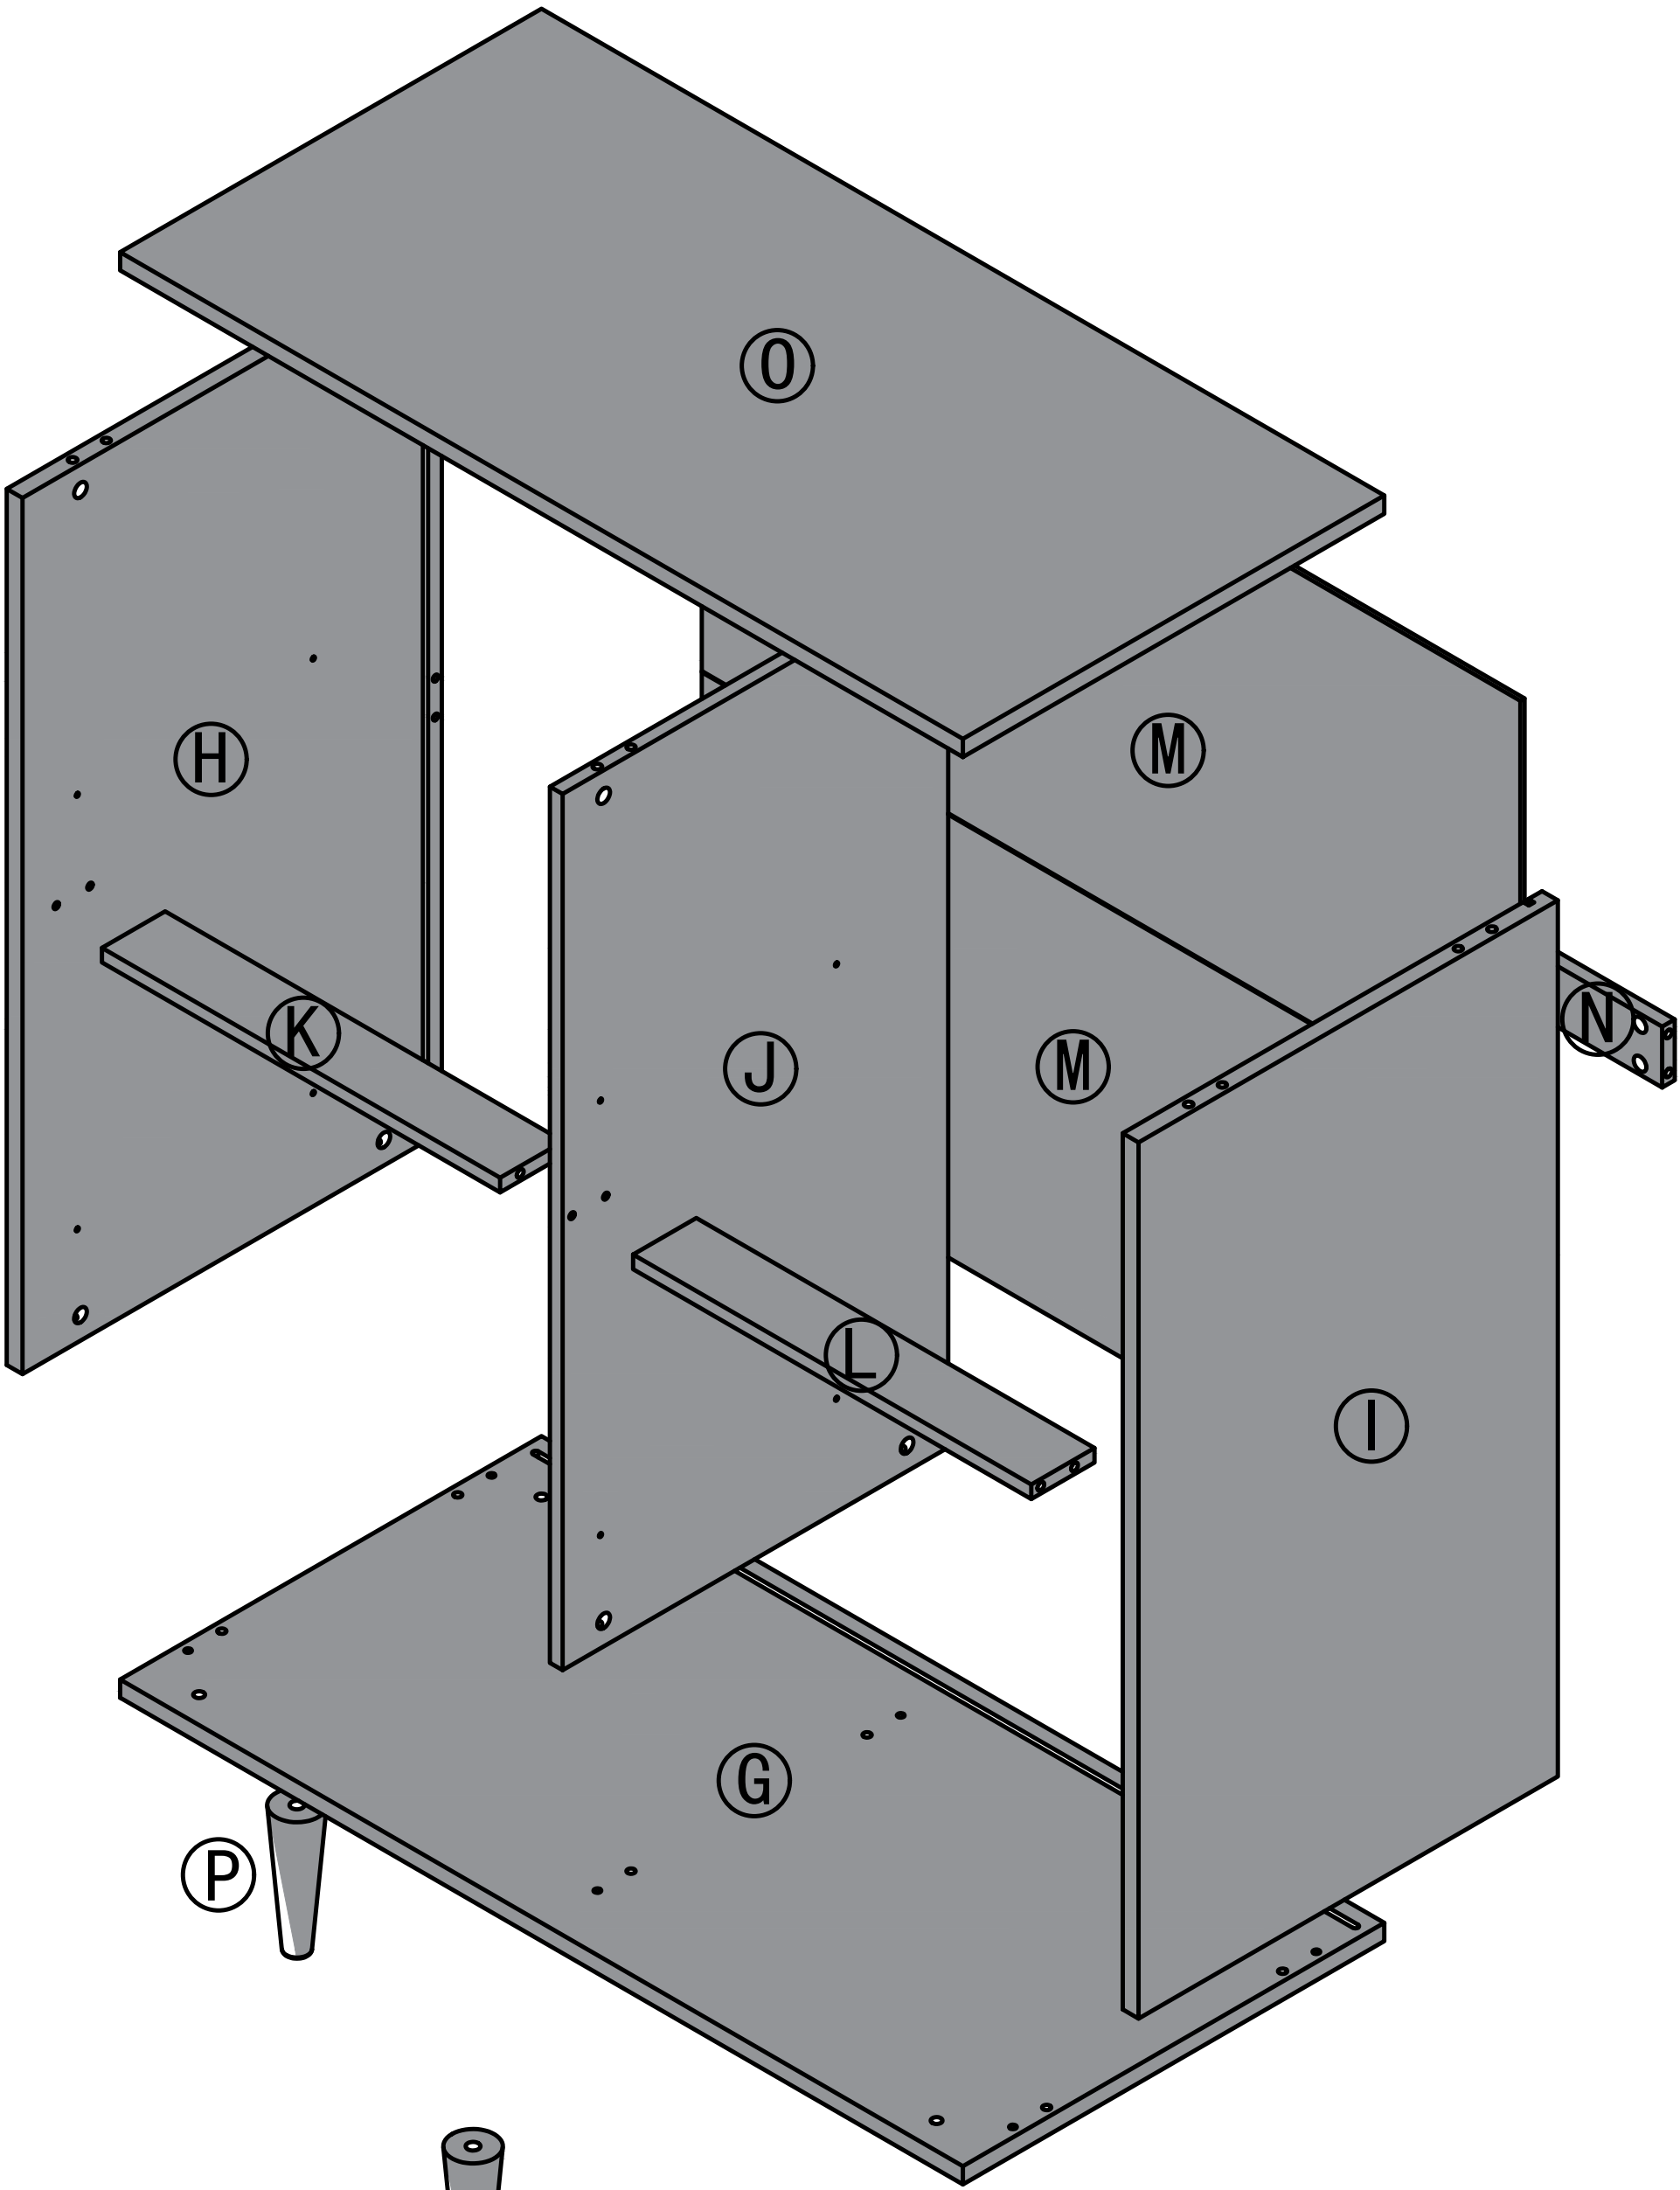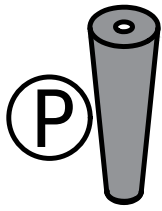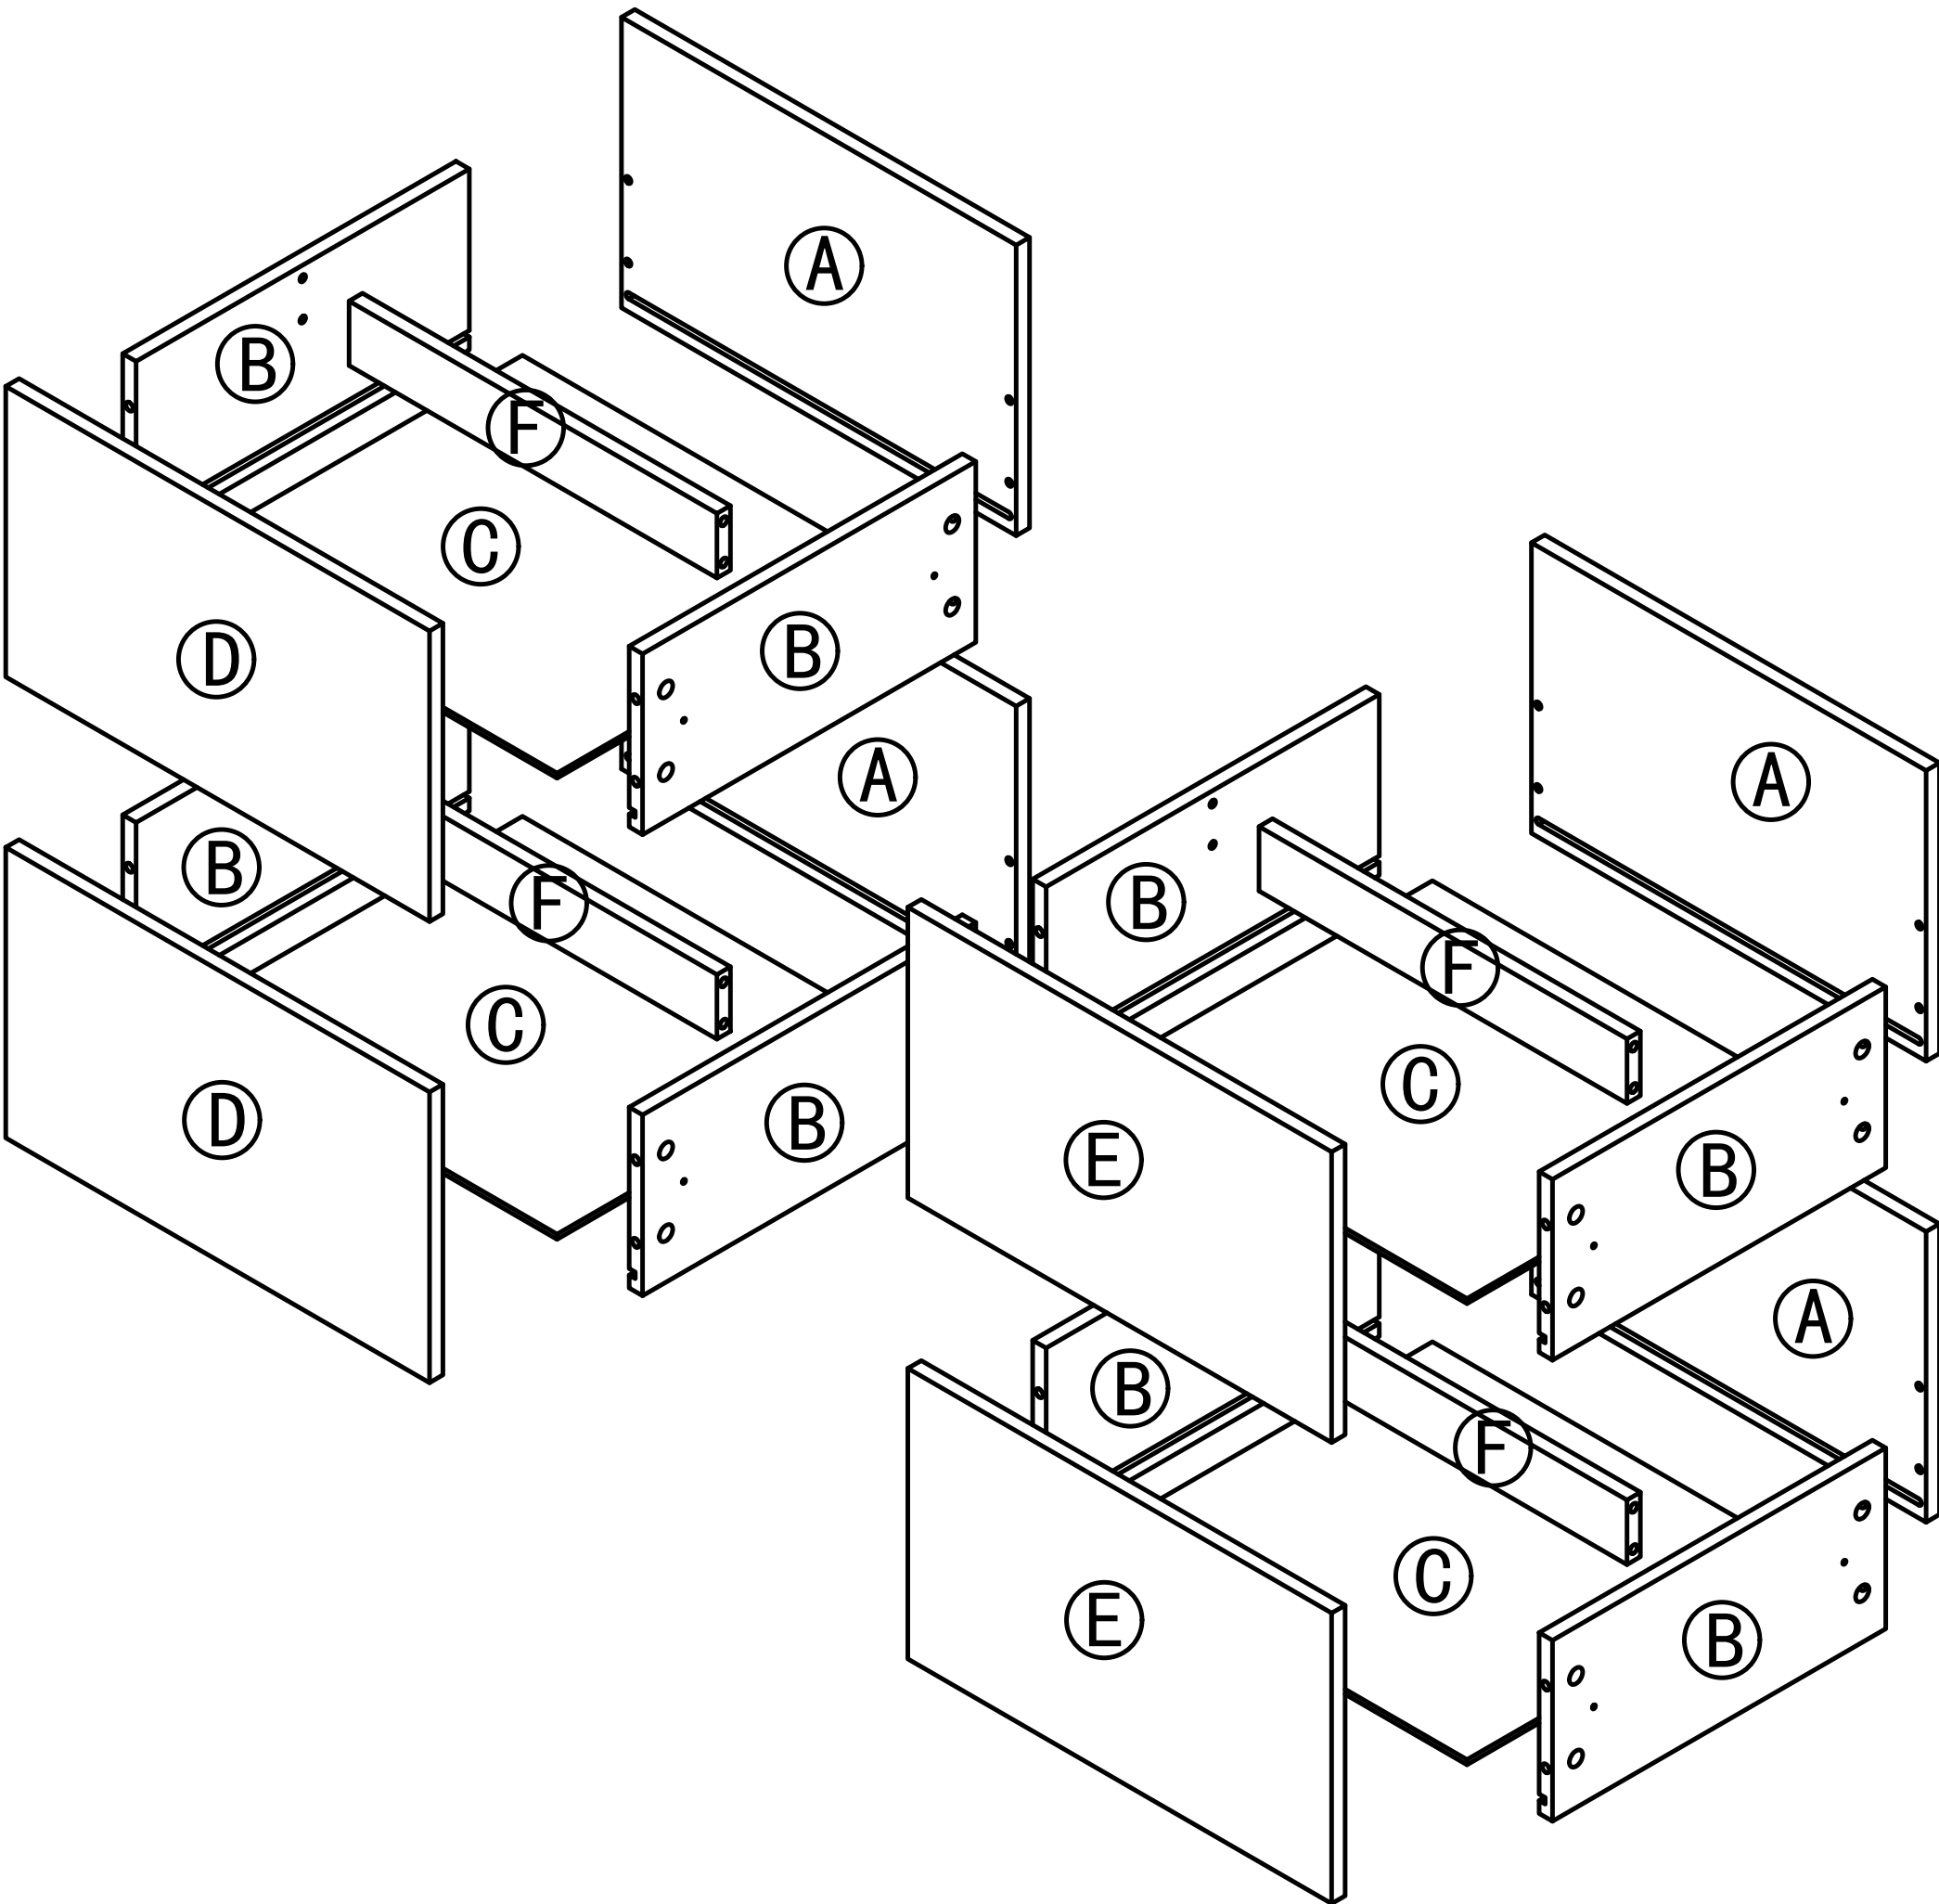

Step 13

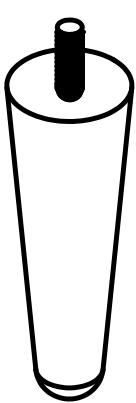


Px5

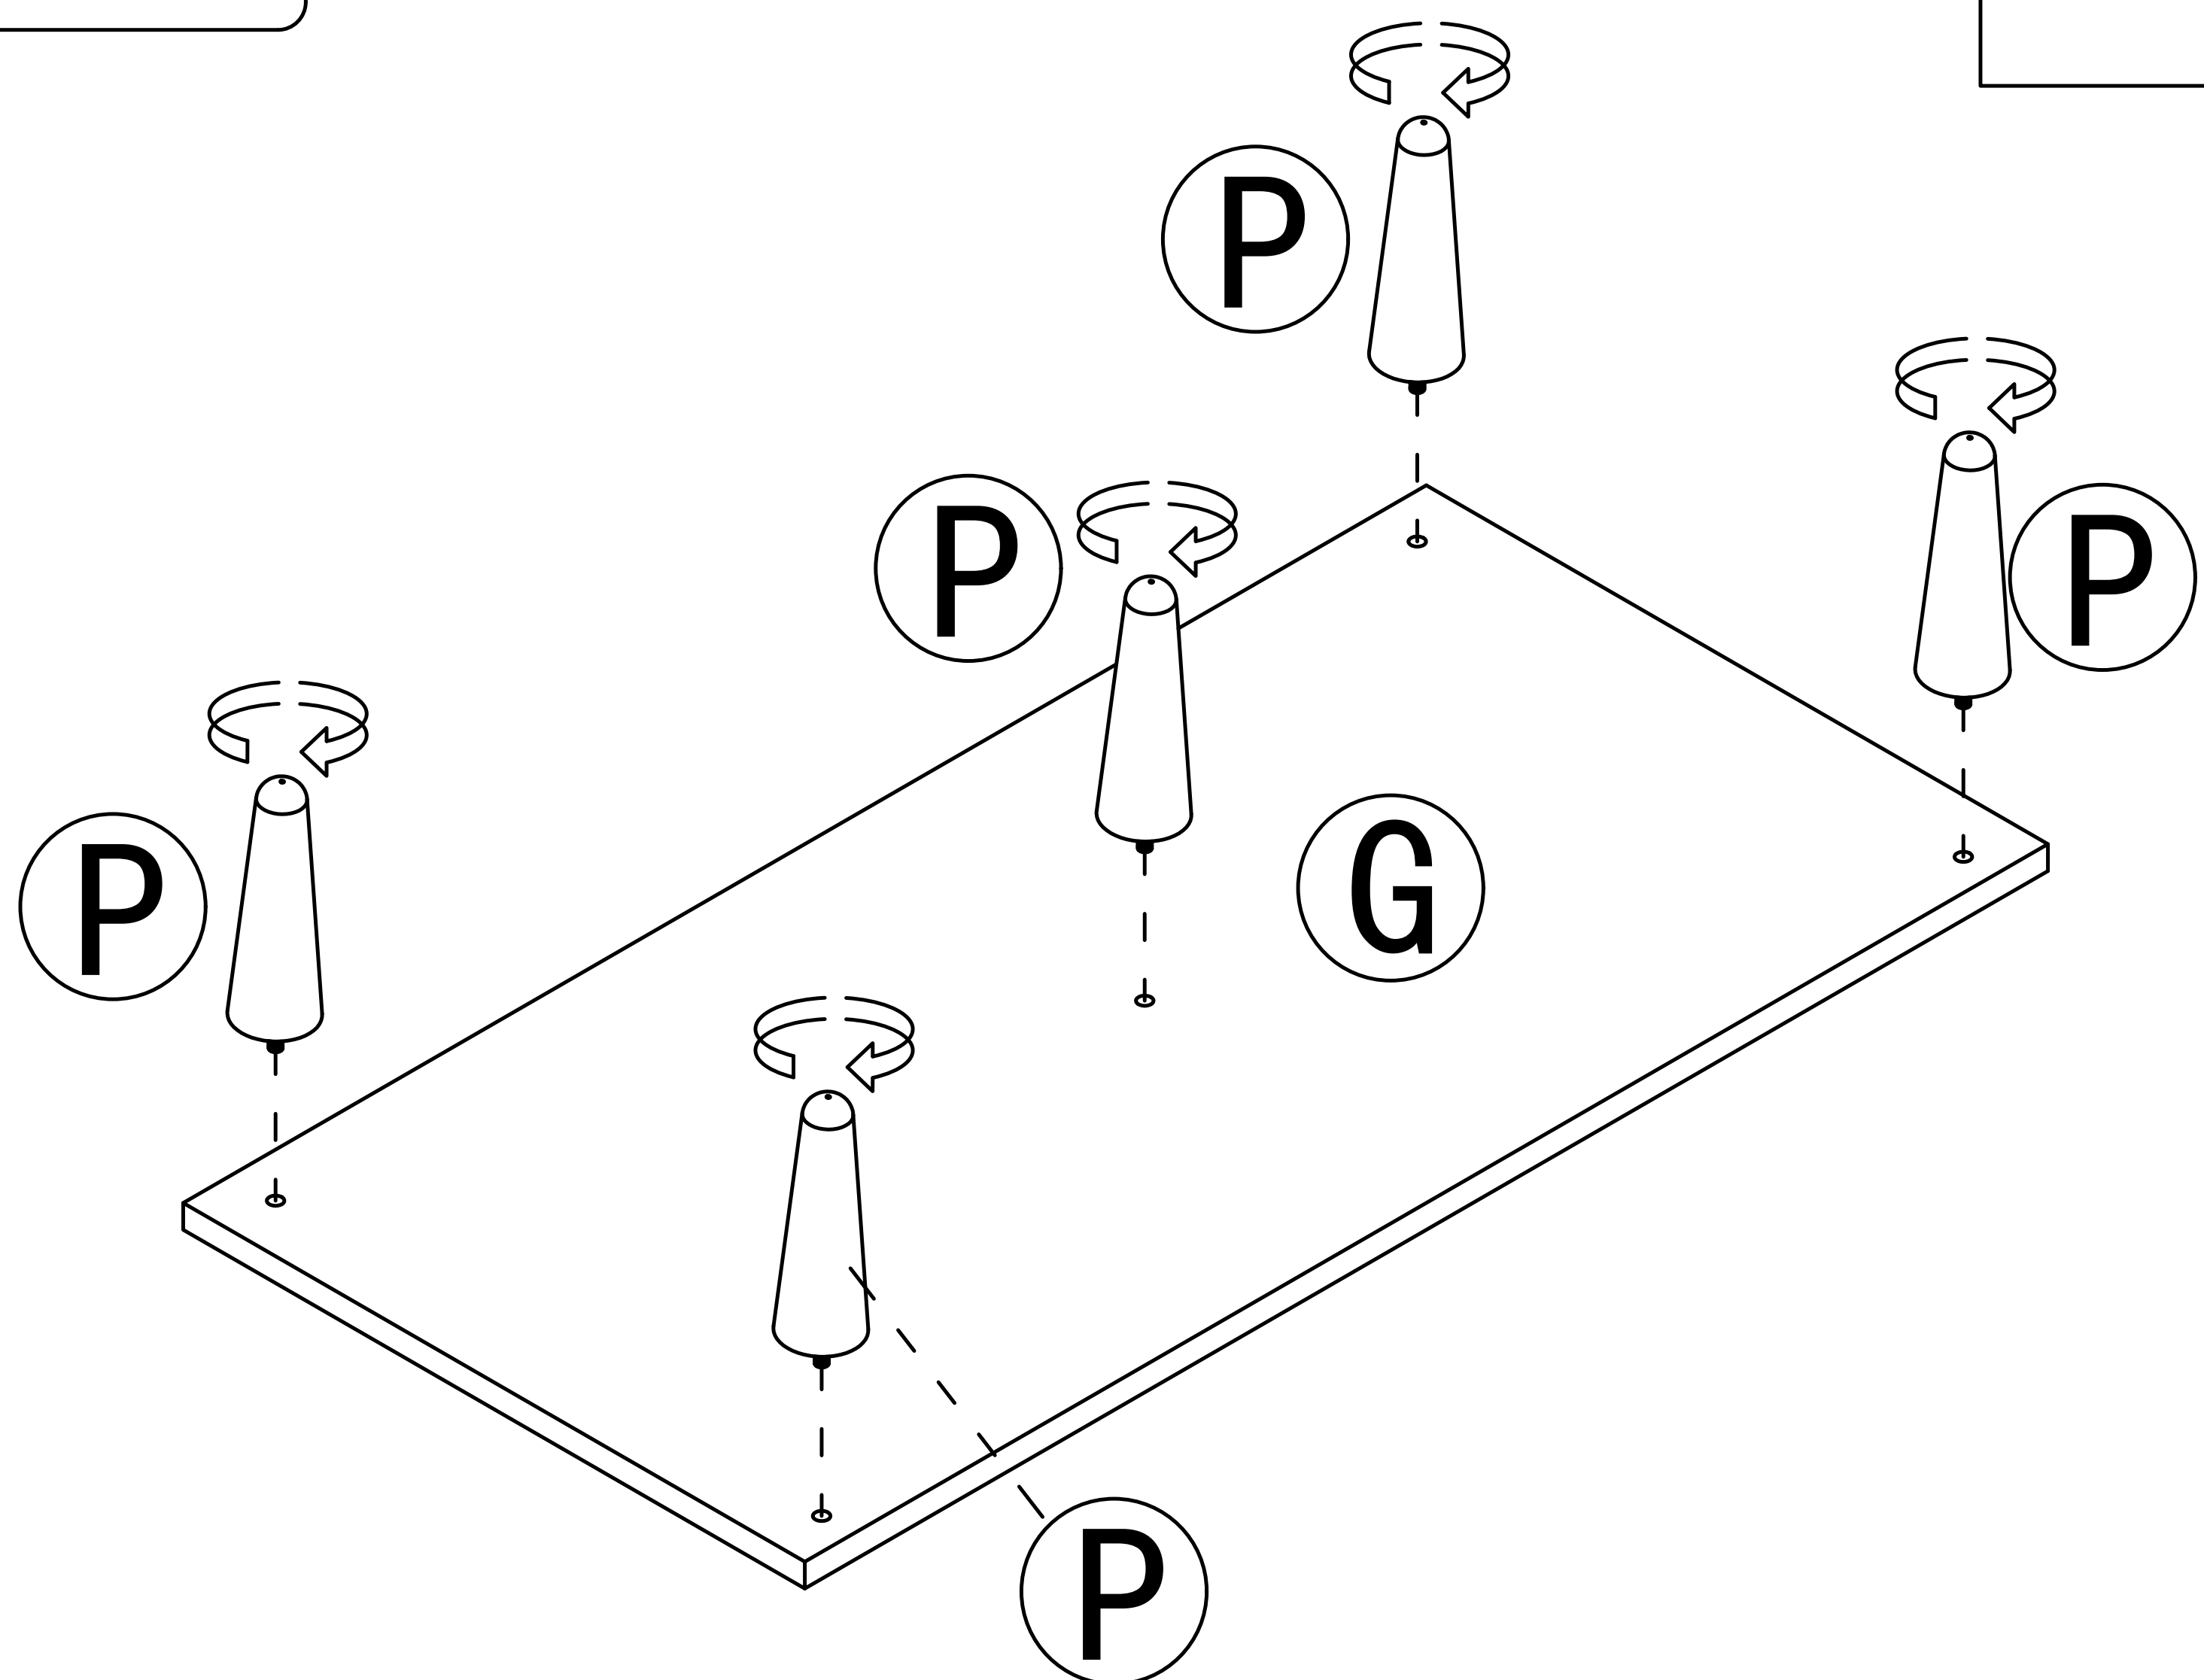


Step 14

Tear off release paper and stick the black foot pad on the board



5

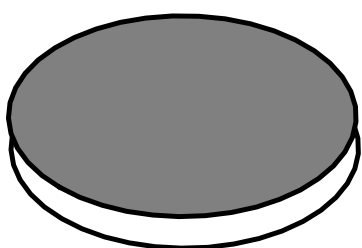


x5

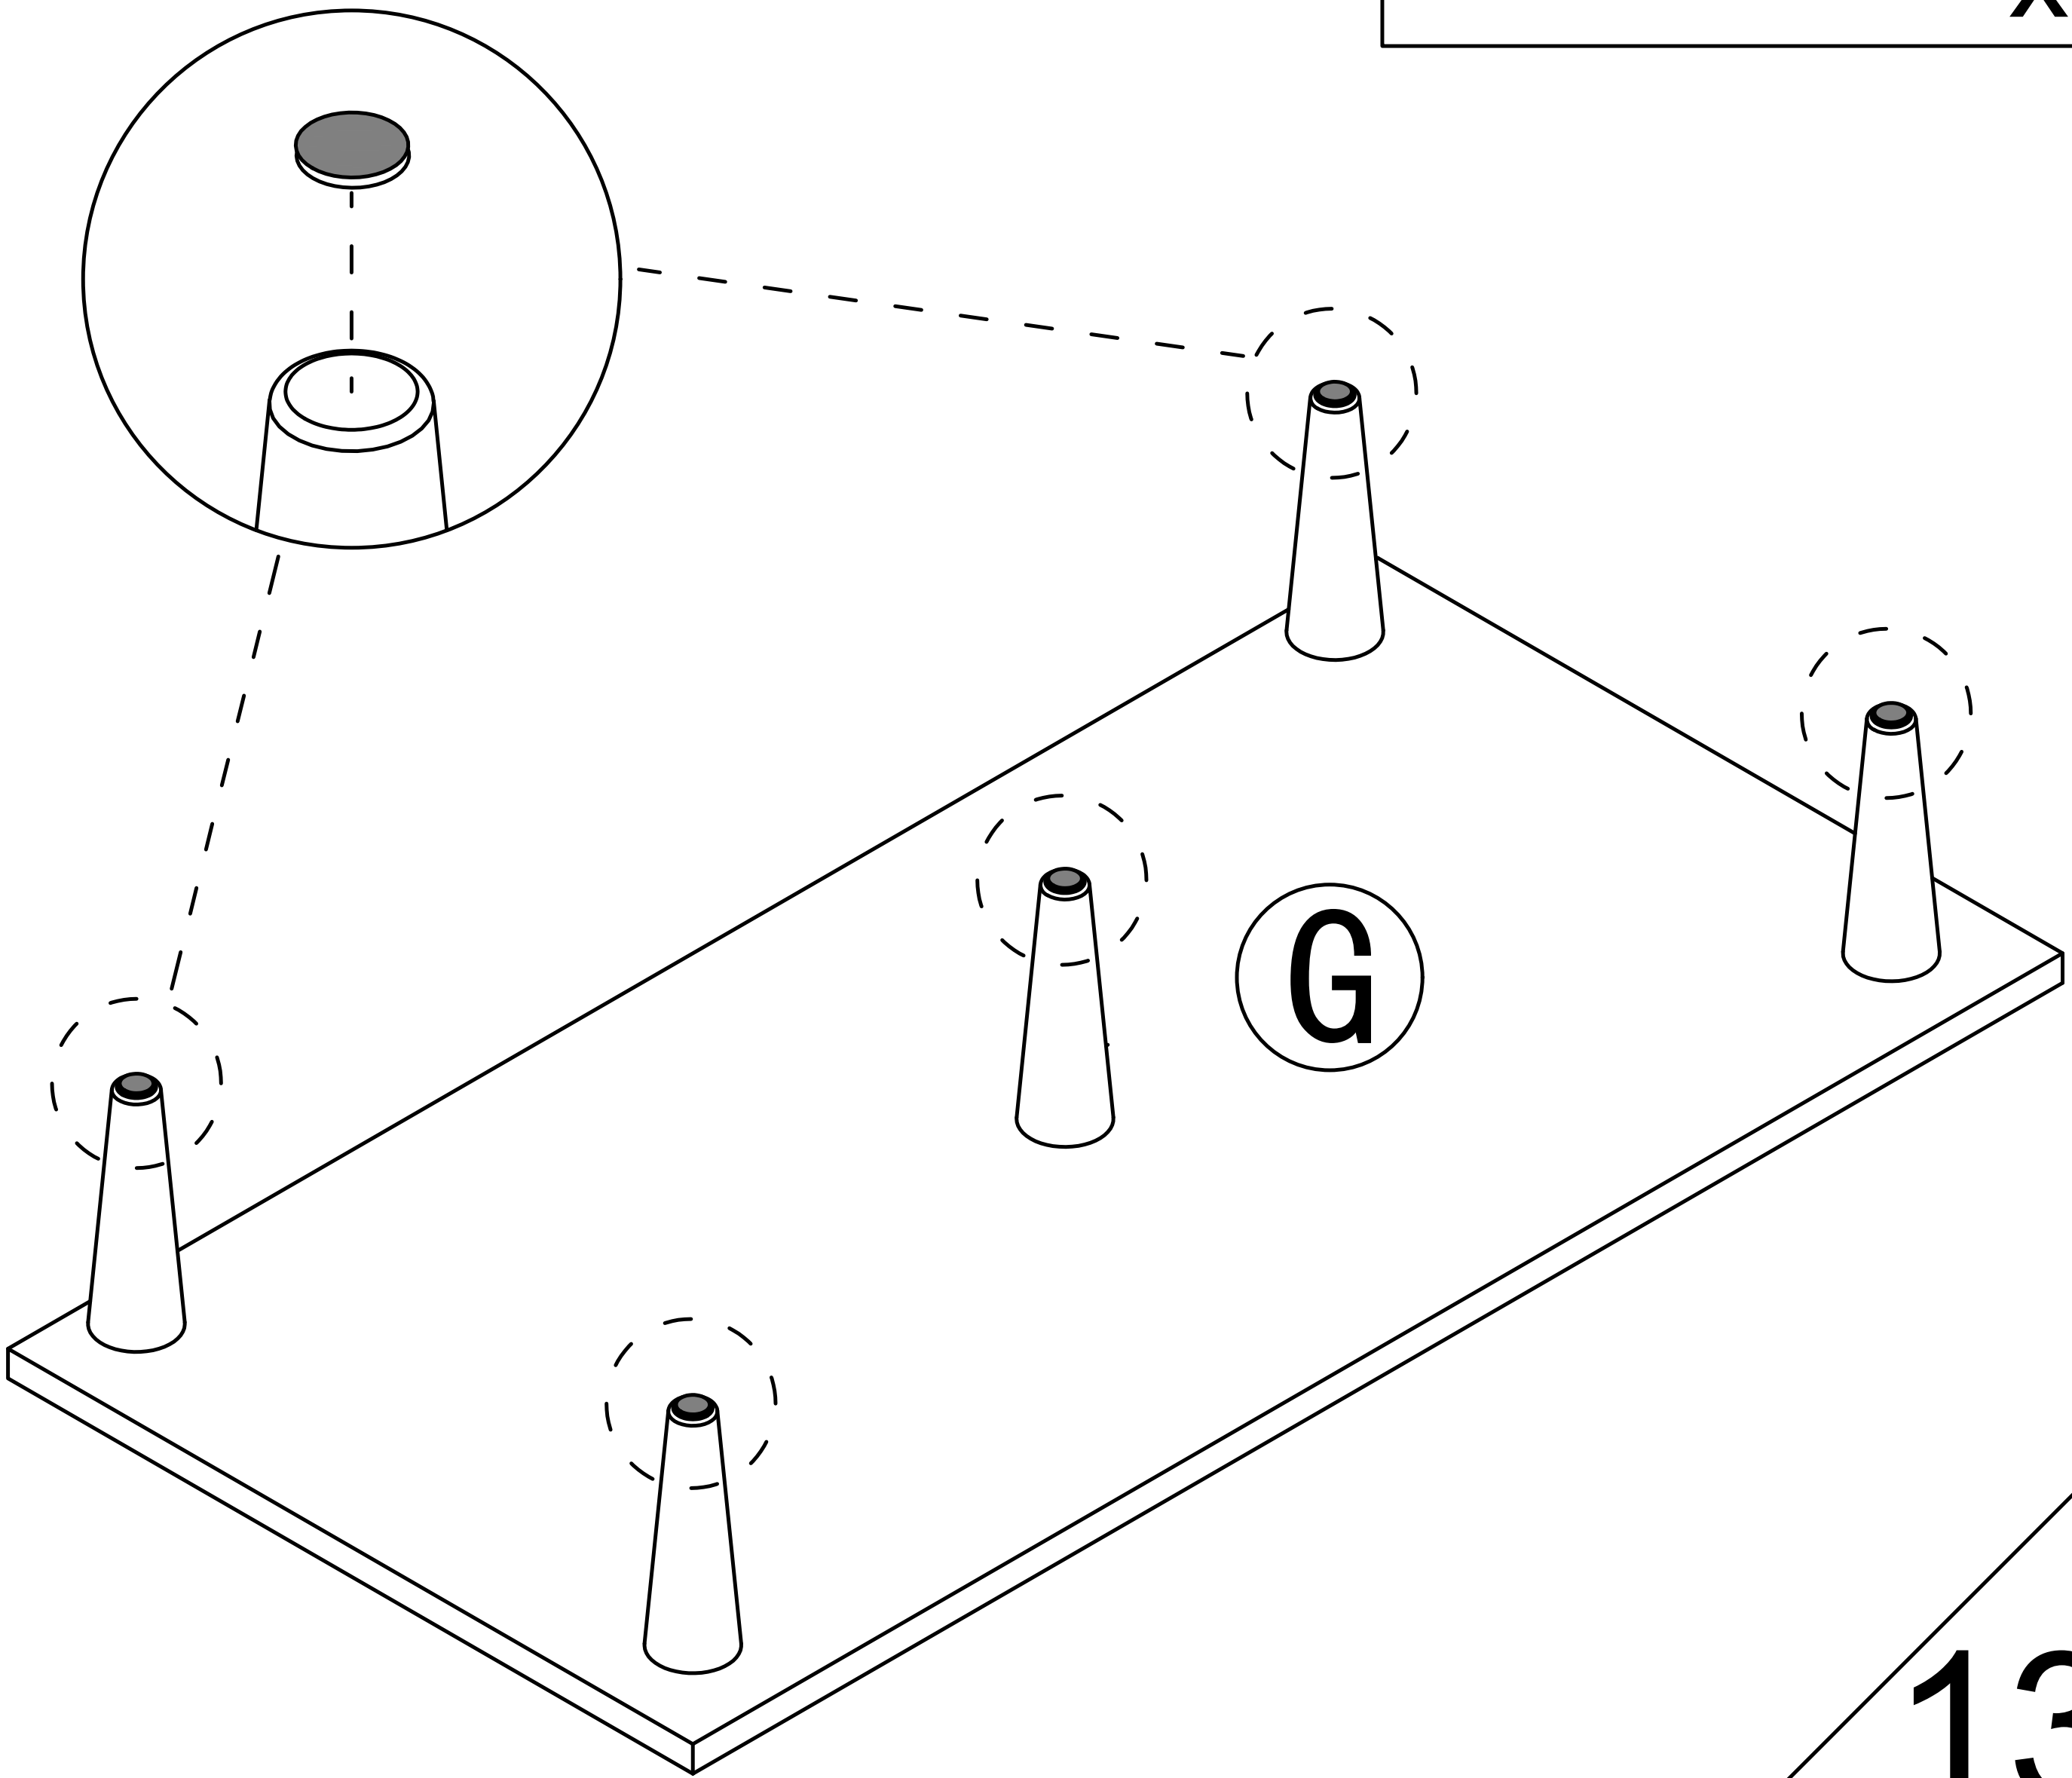


Step 15

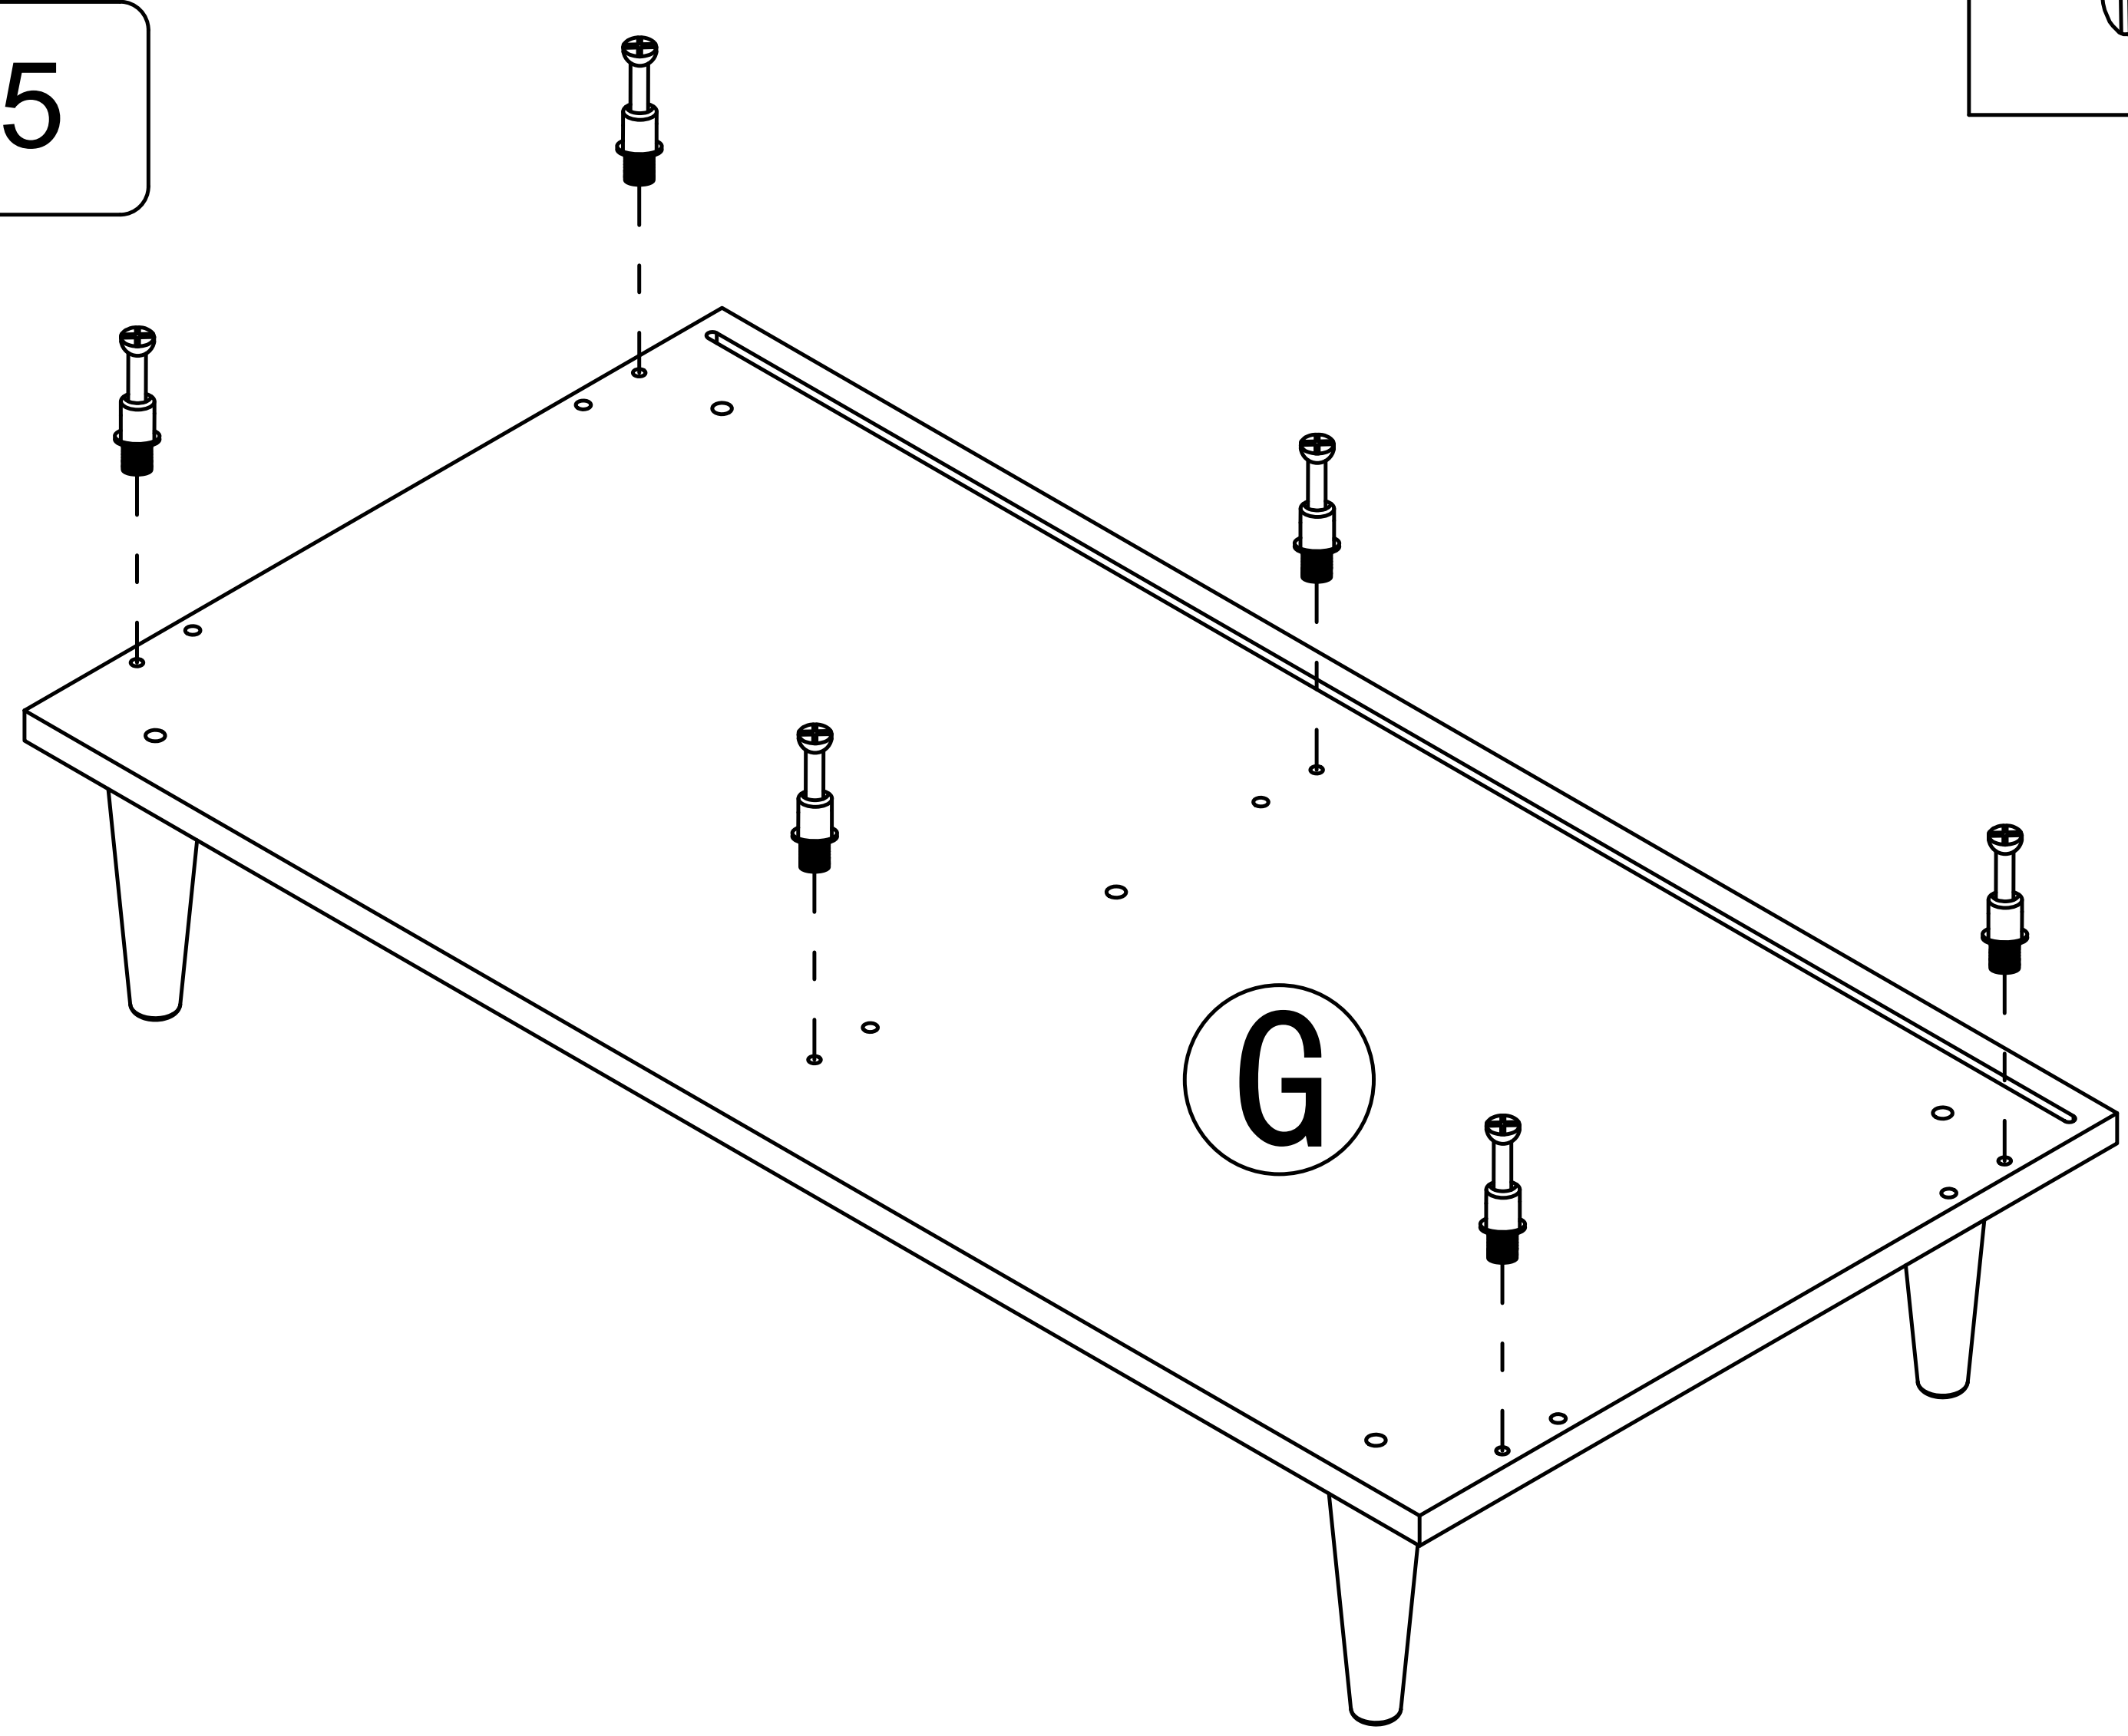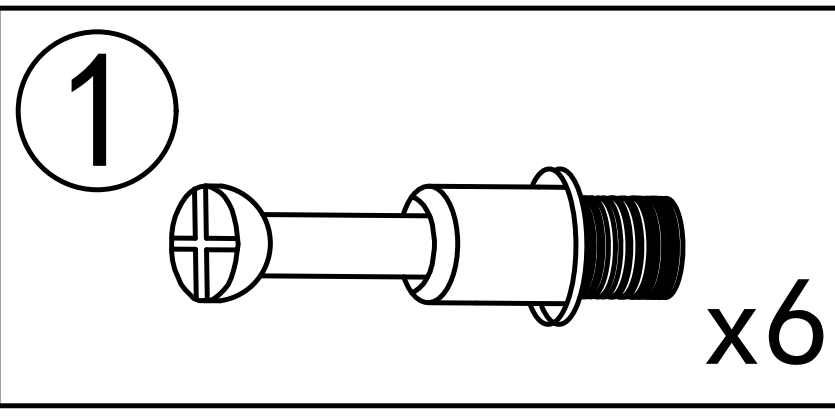



Step 16

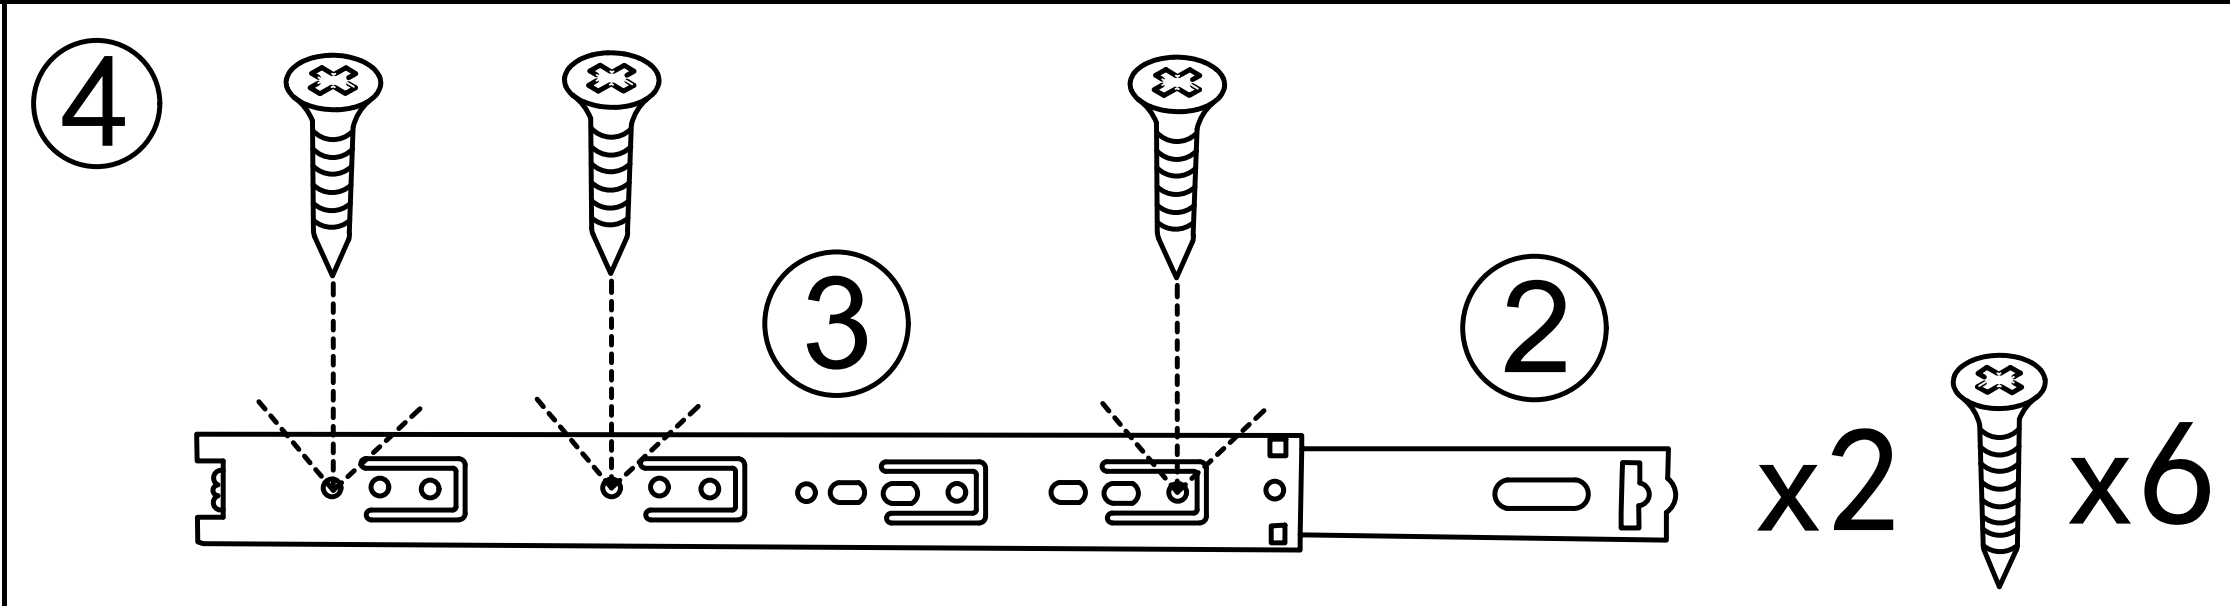



This hole is for strengthening fixed hole customers can choose to install according to their needs.

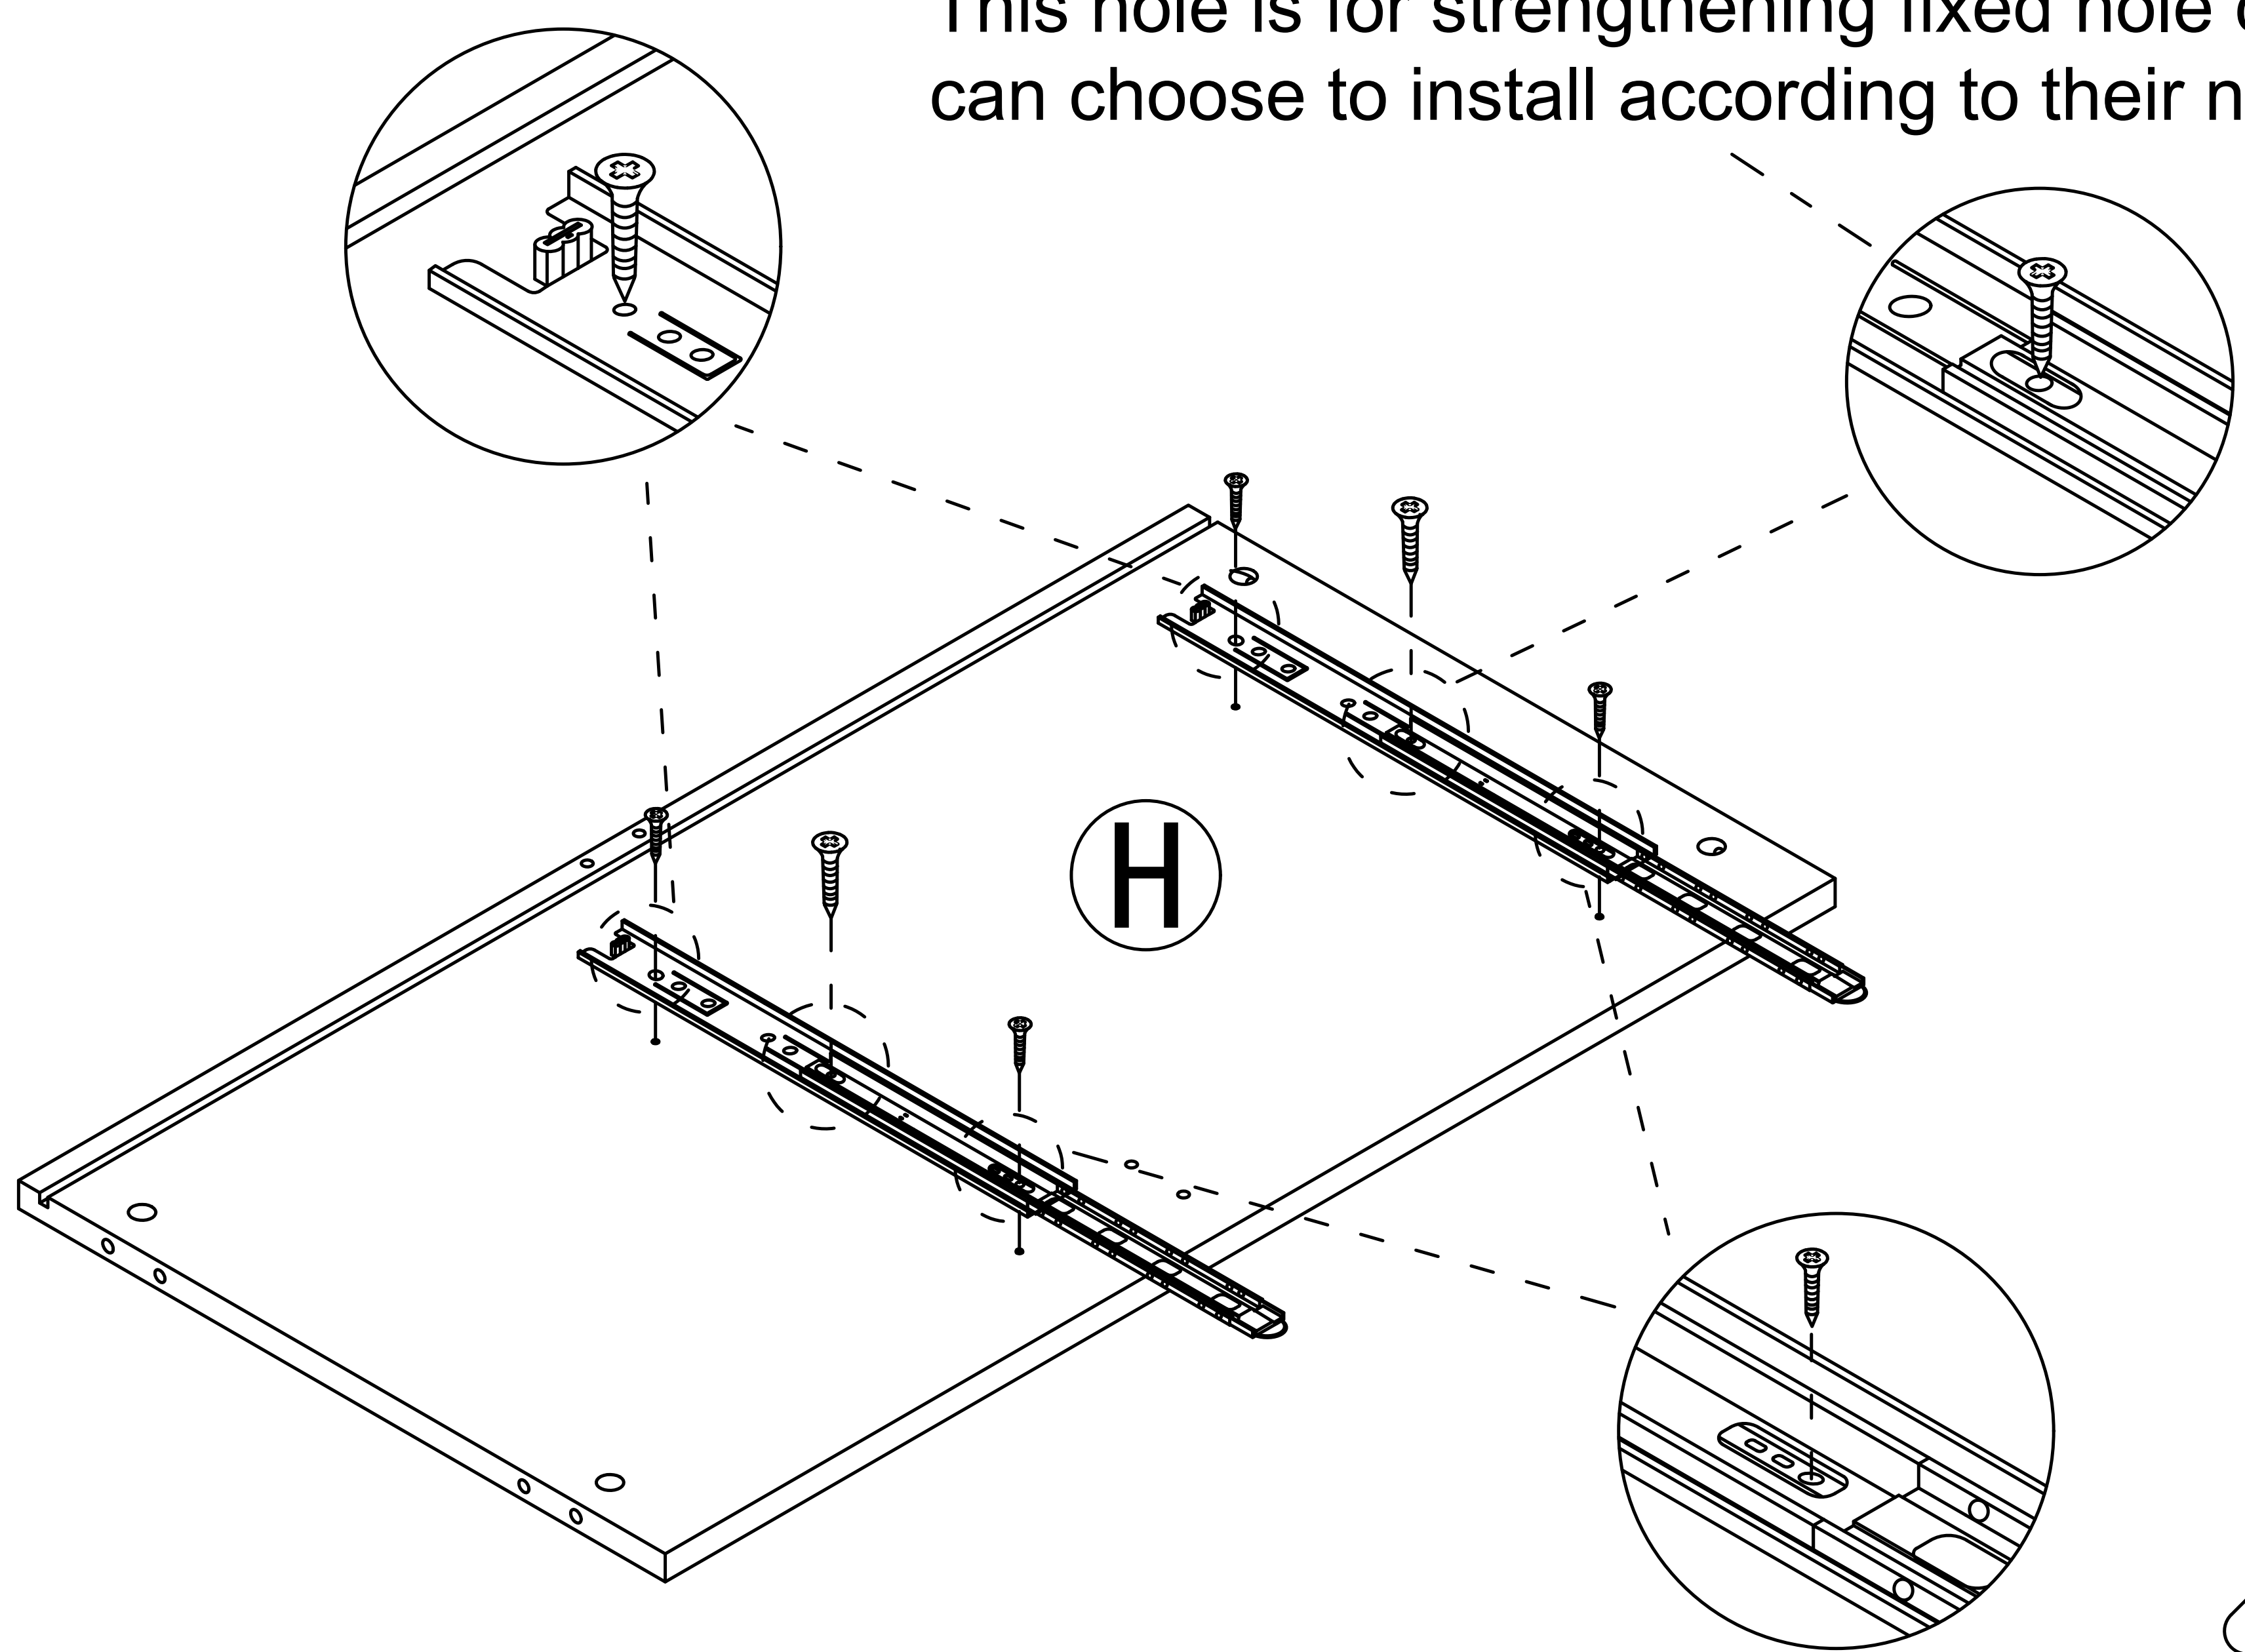

Step 17

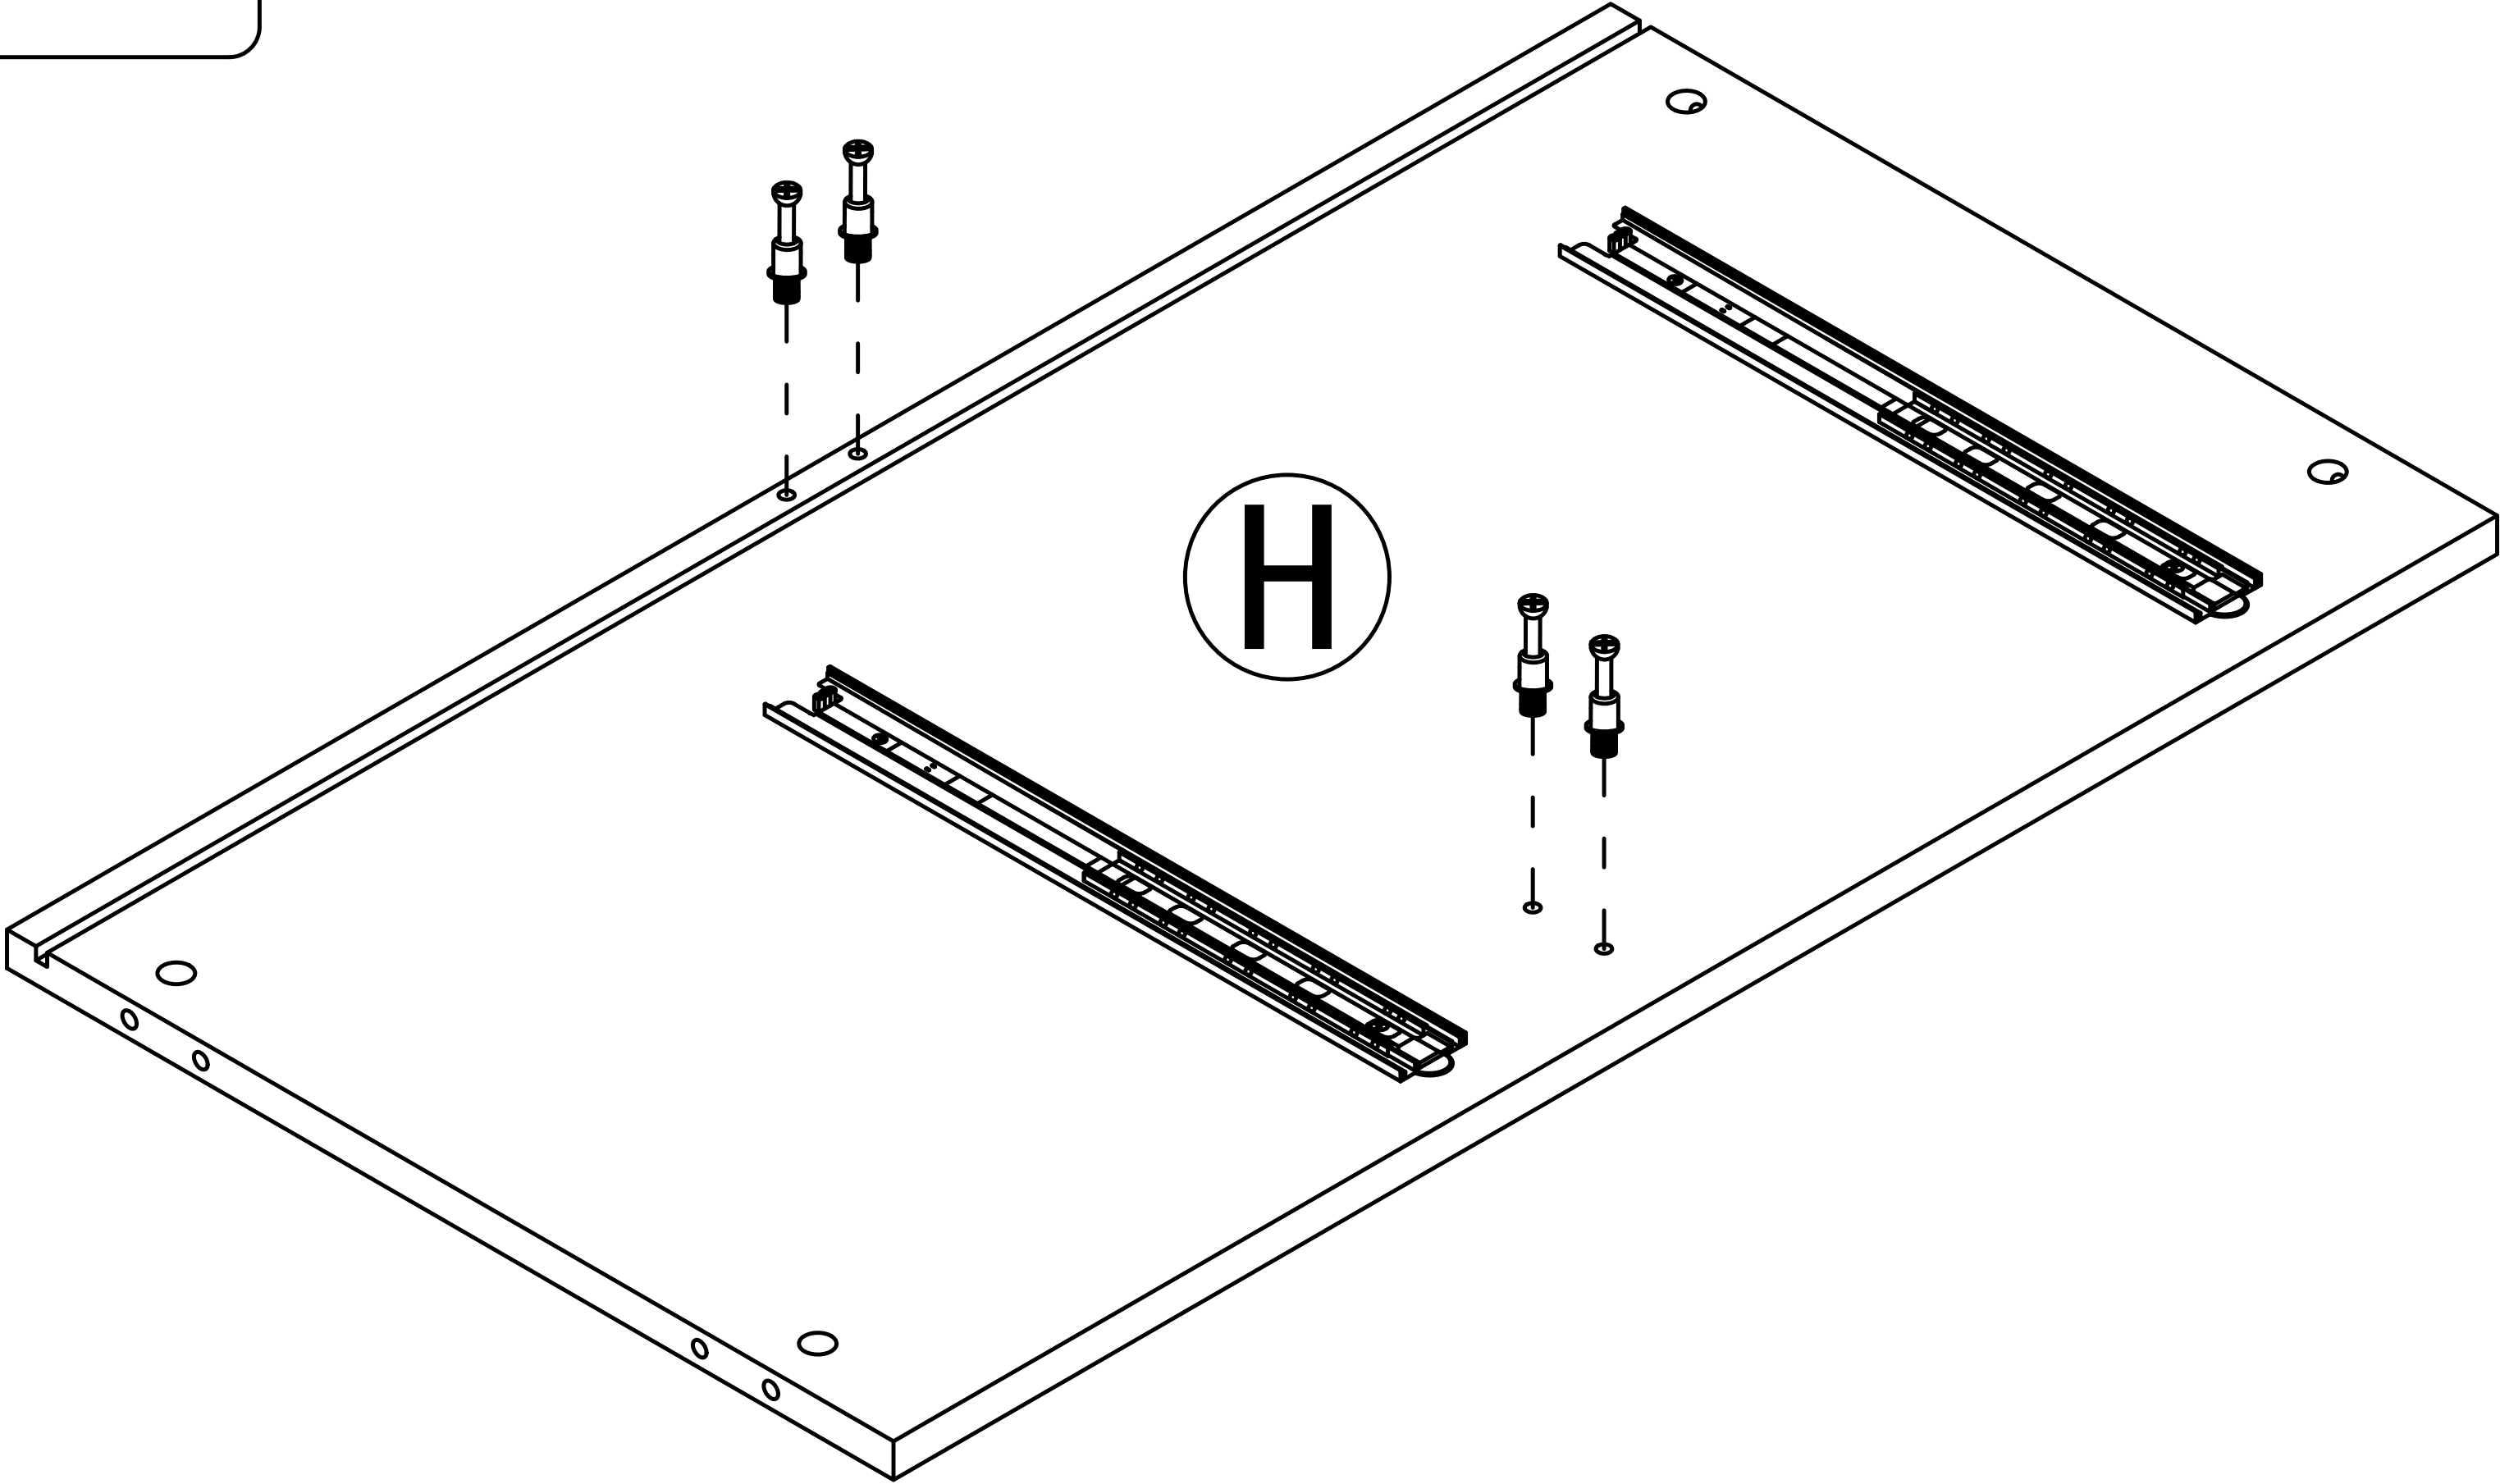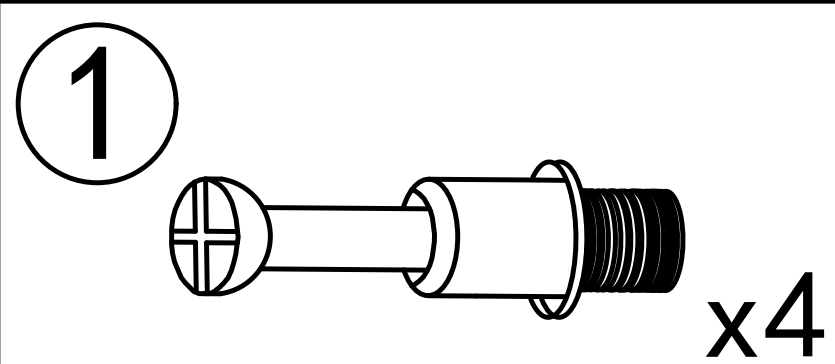


Step 18

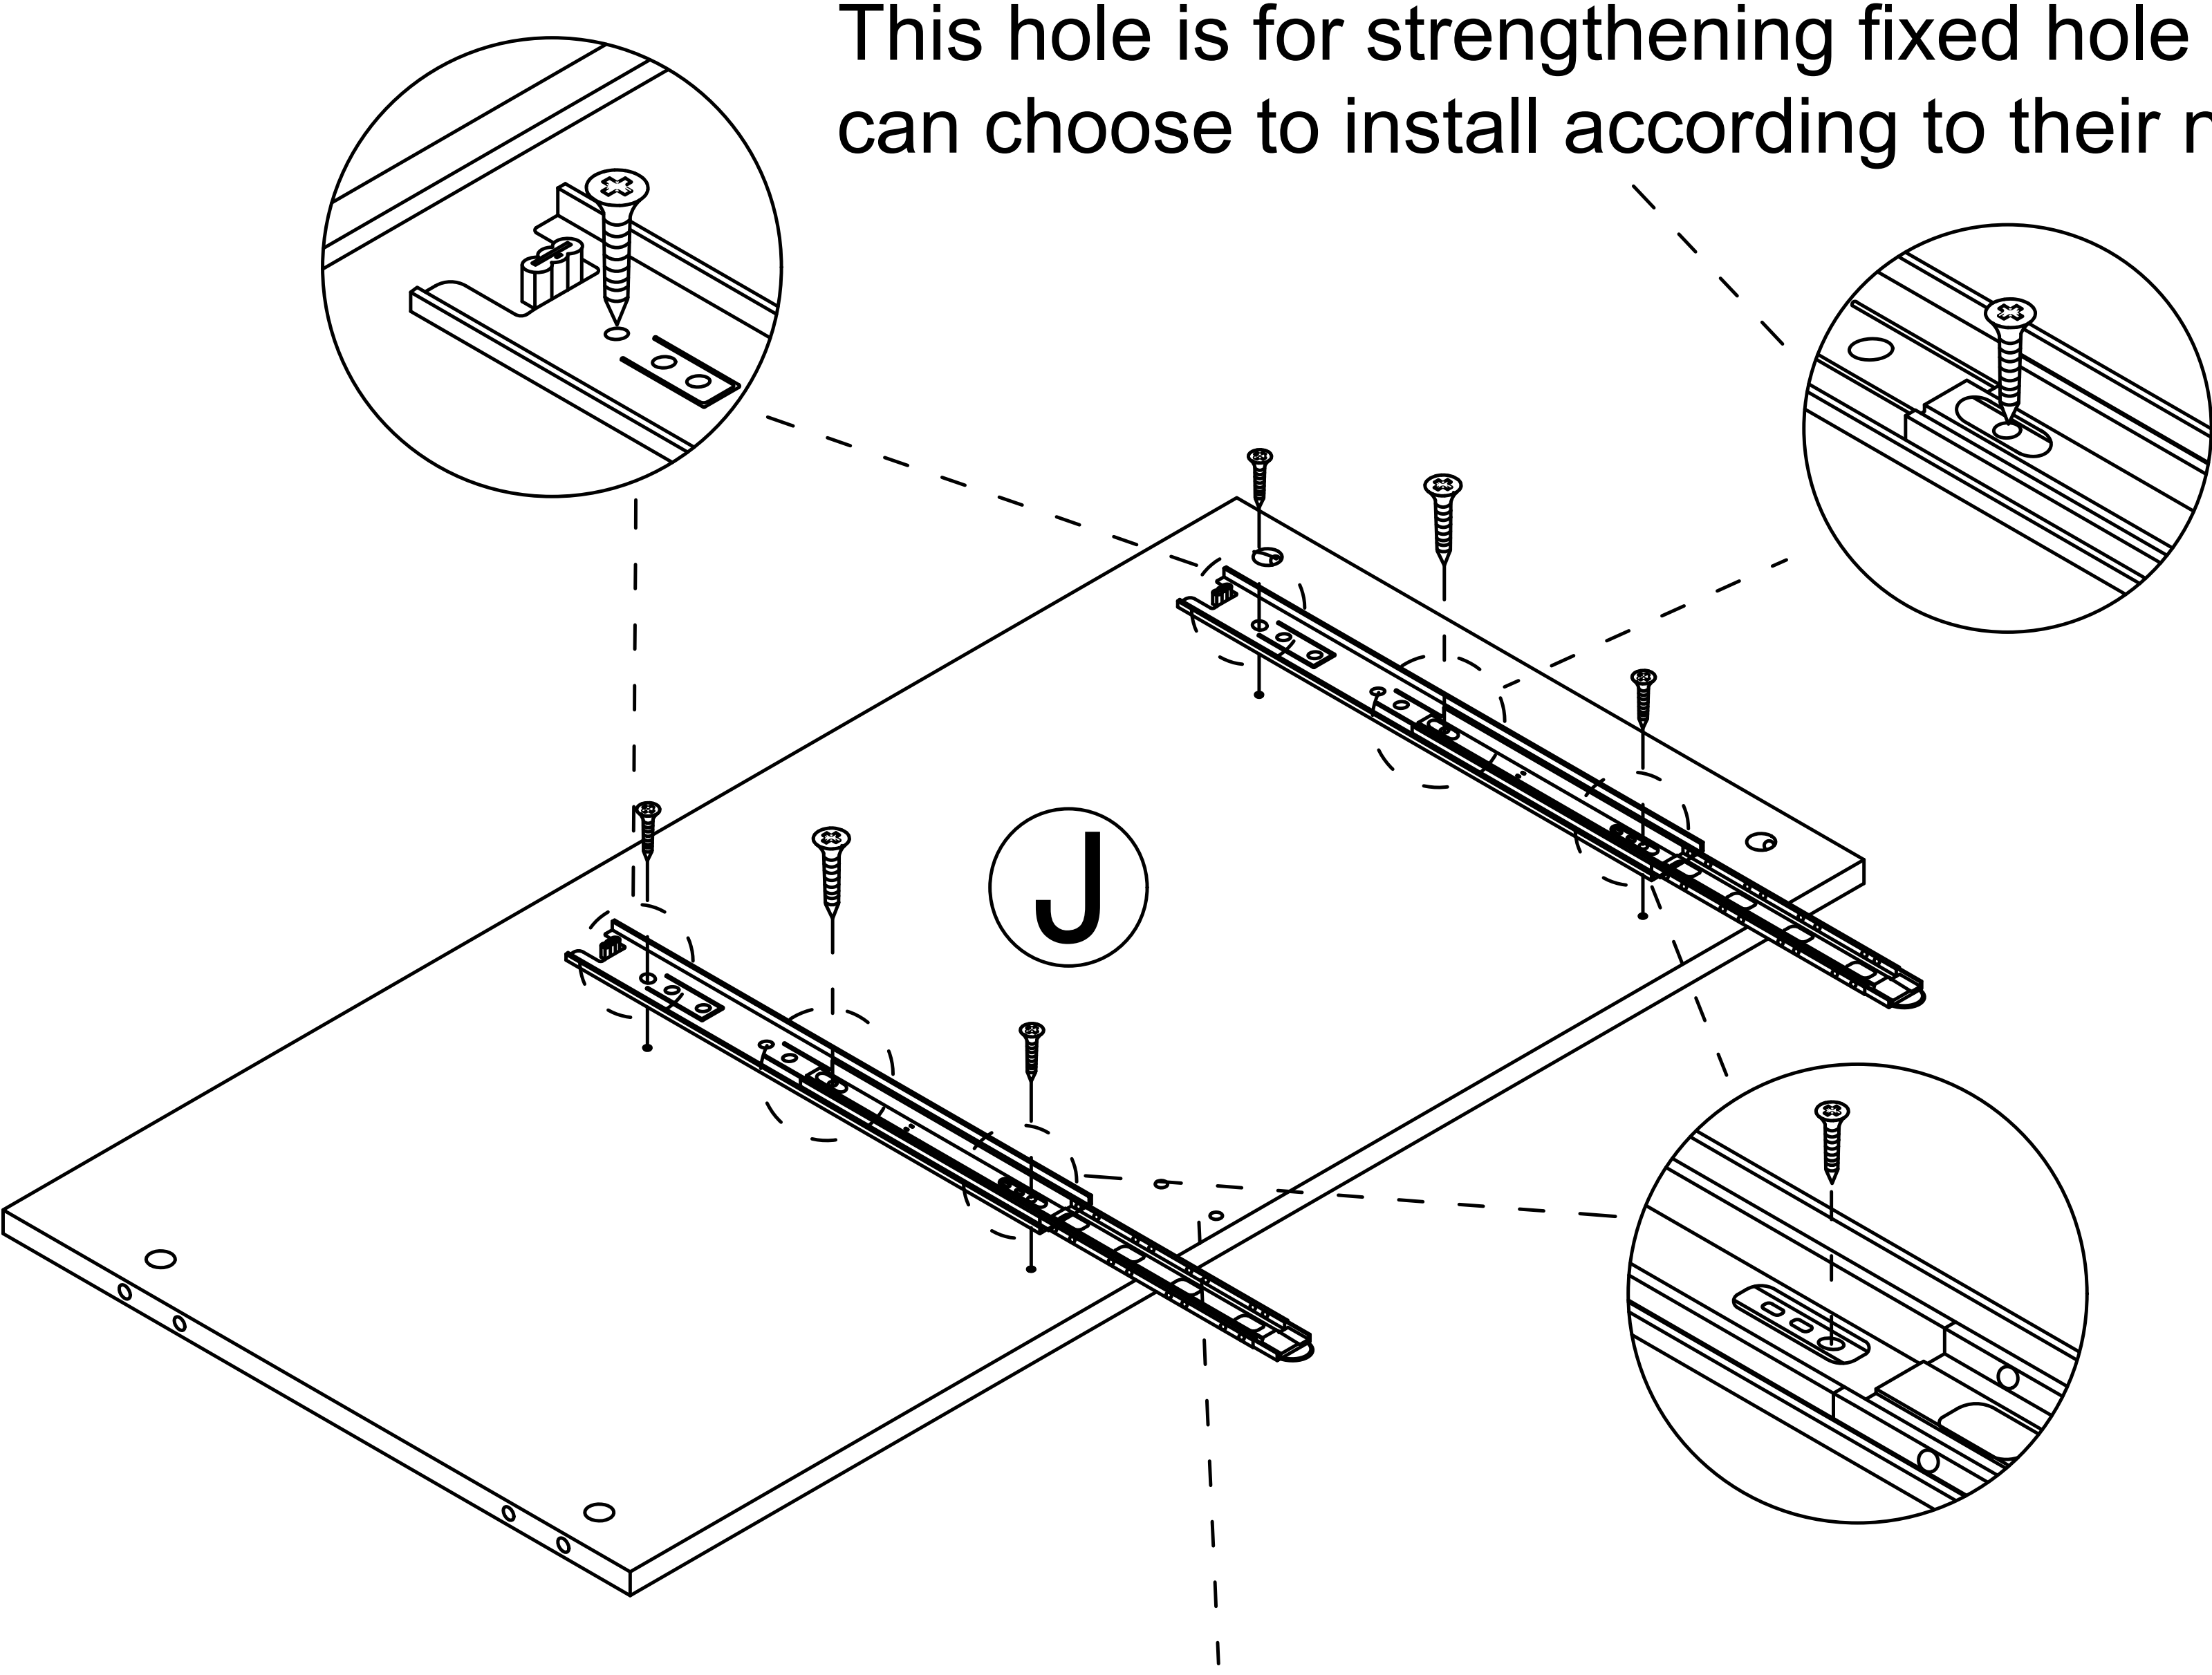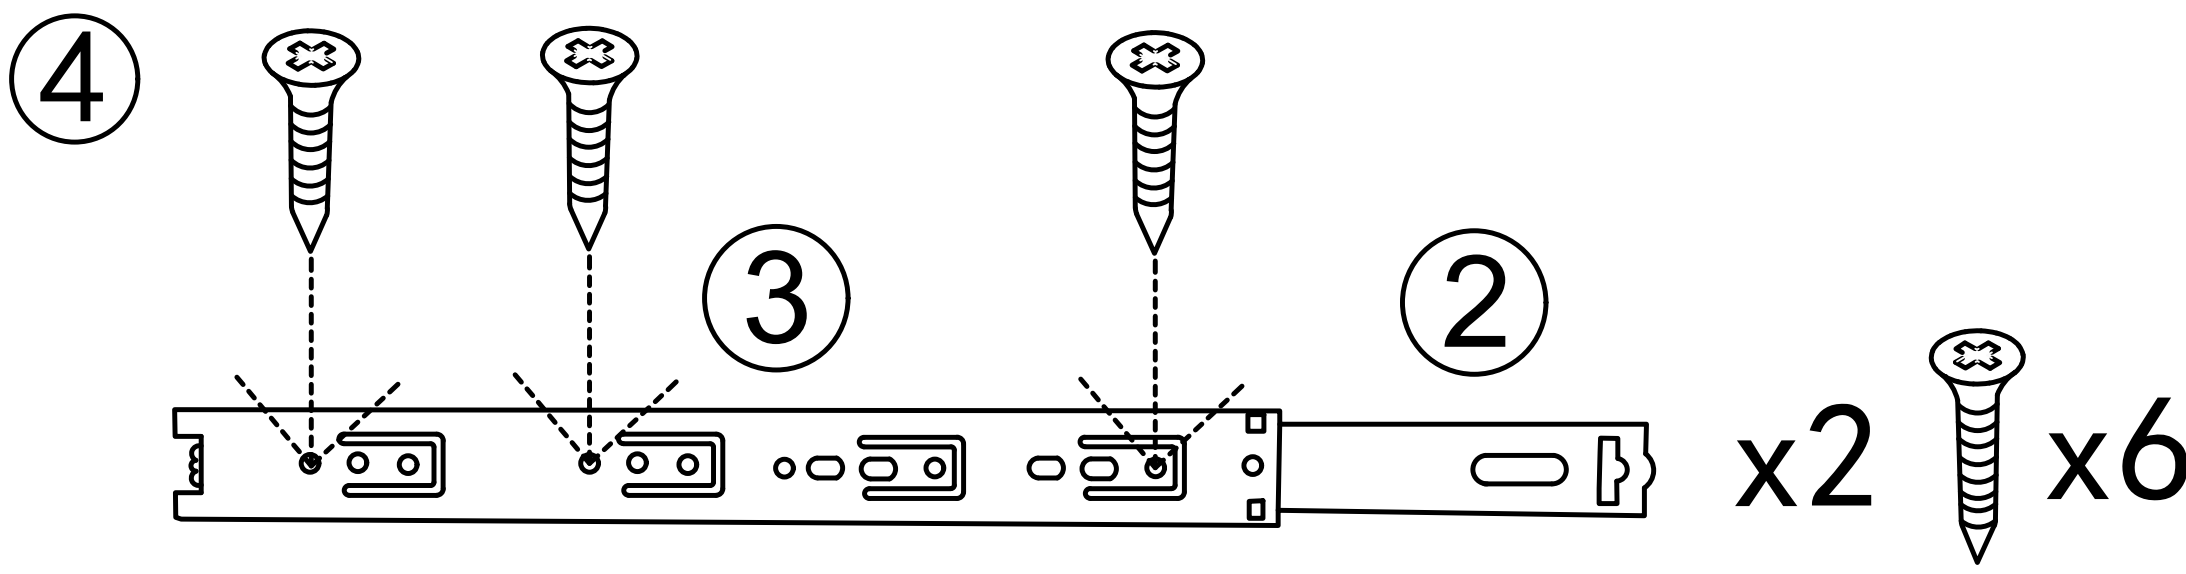


This hole is for strengthening fixed hole customers can choose to install according to their needs.

Note: There are two holes in the direction in which the guide rail extends. Do not install the guide rail upside down.

Step 19


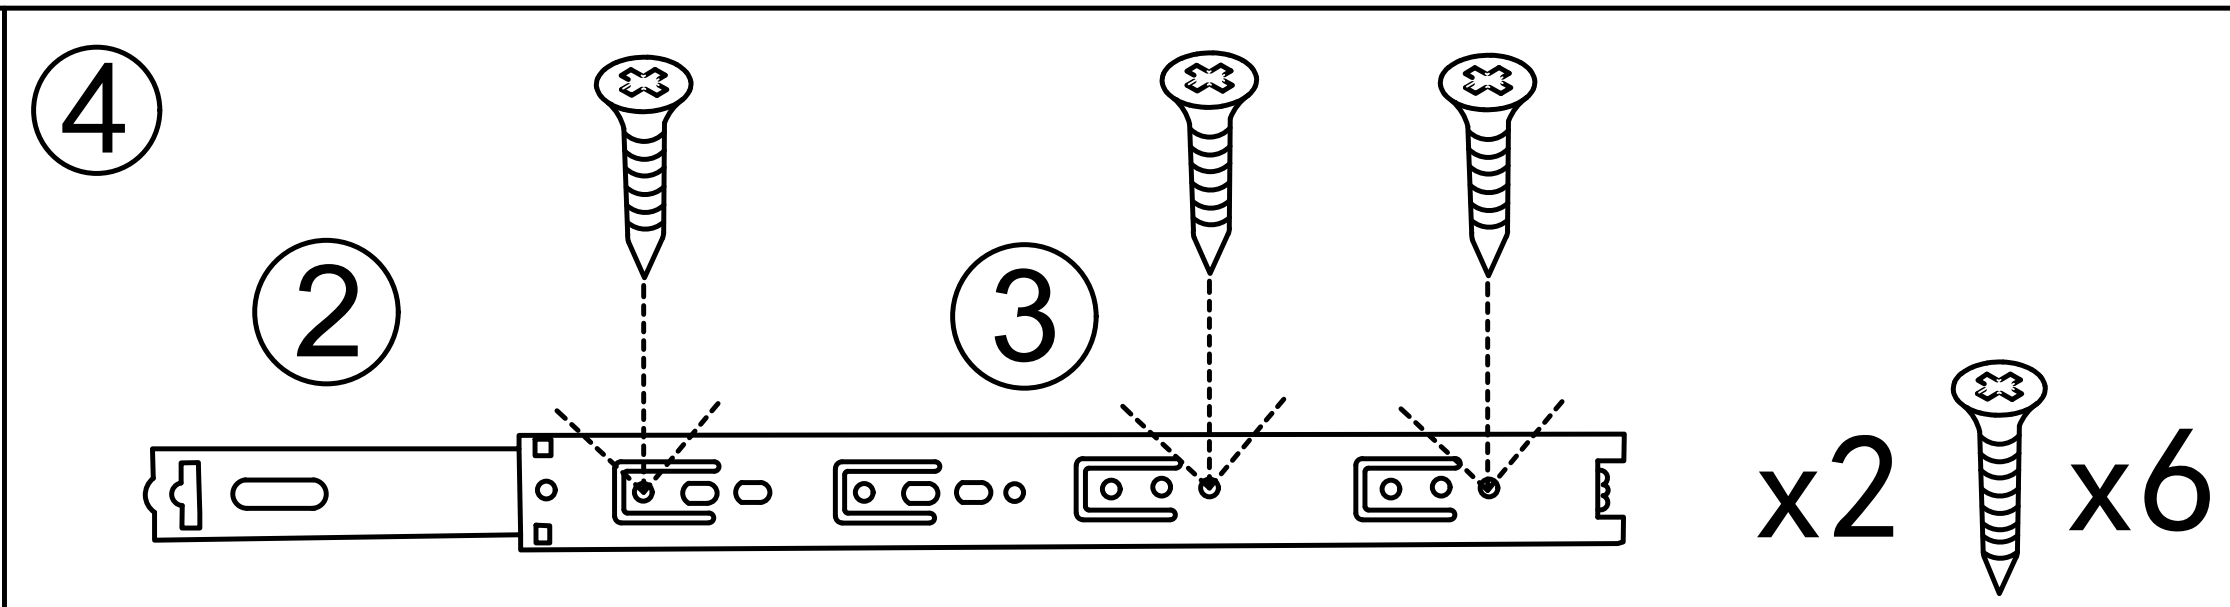


This hole is for strengthening fixed hole customers can choose to install according to their needs.


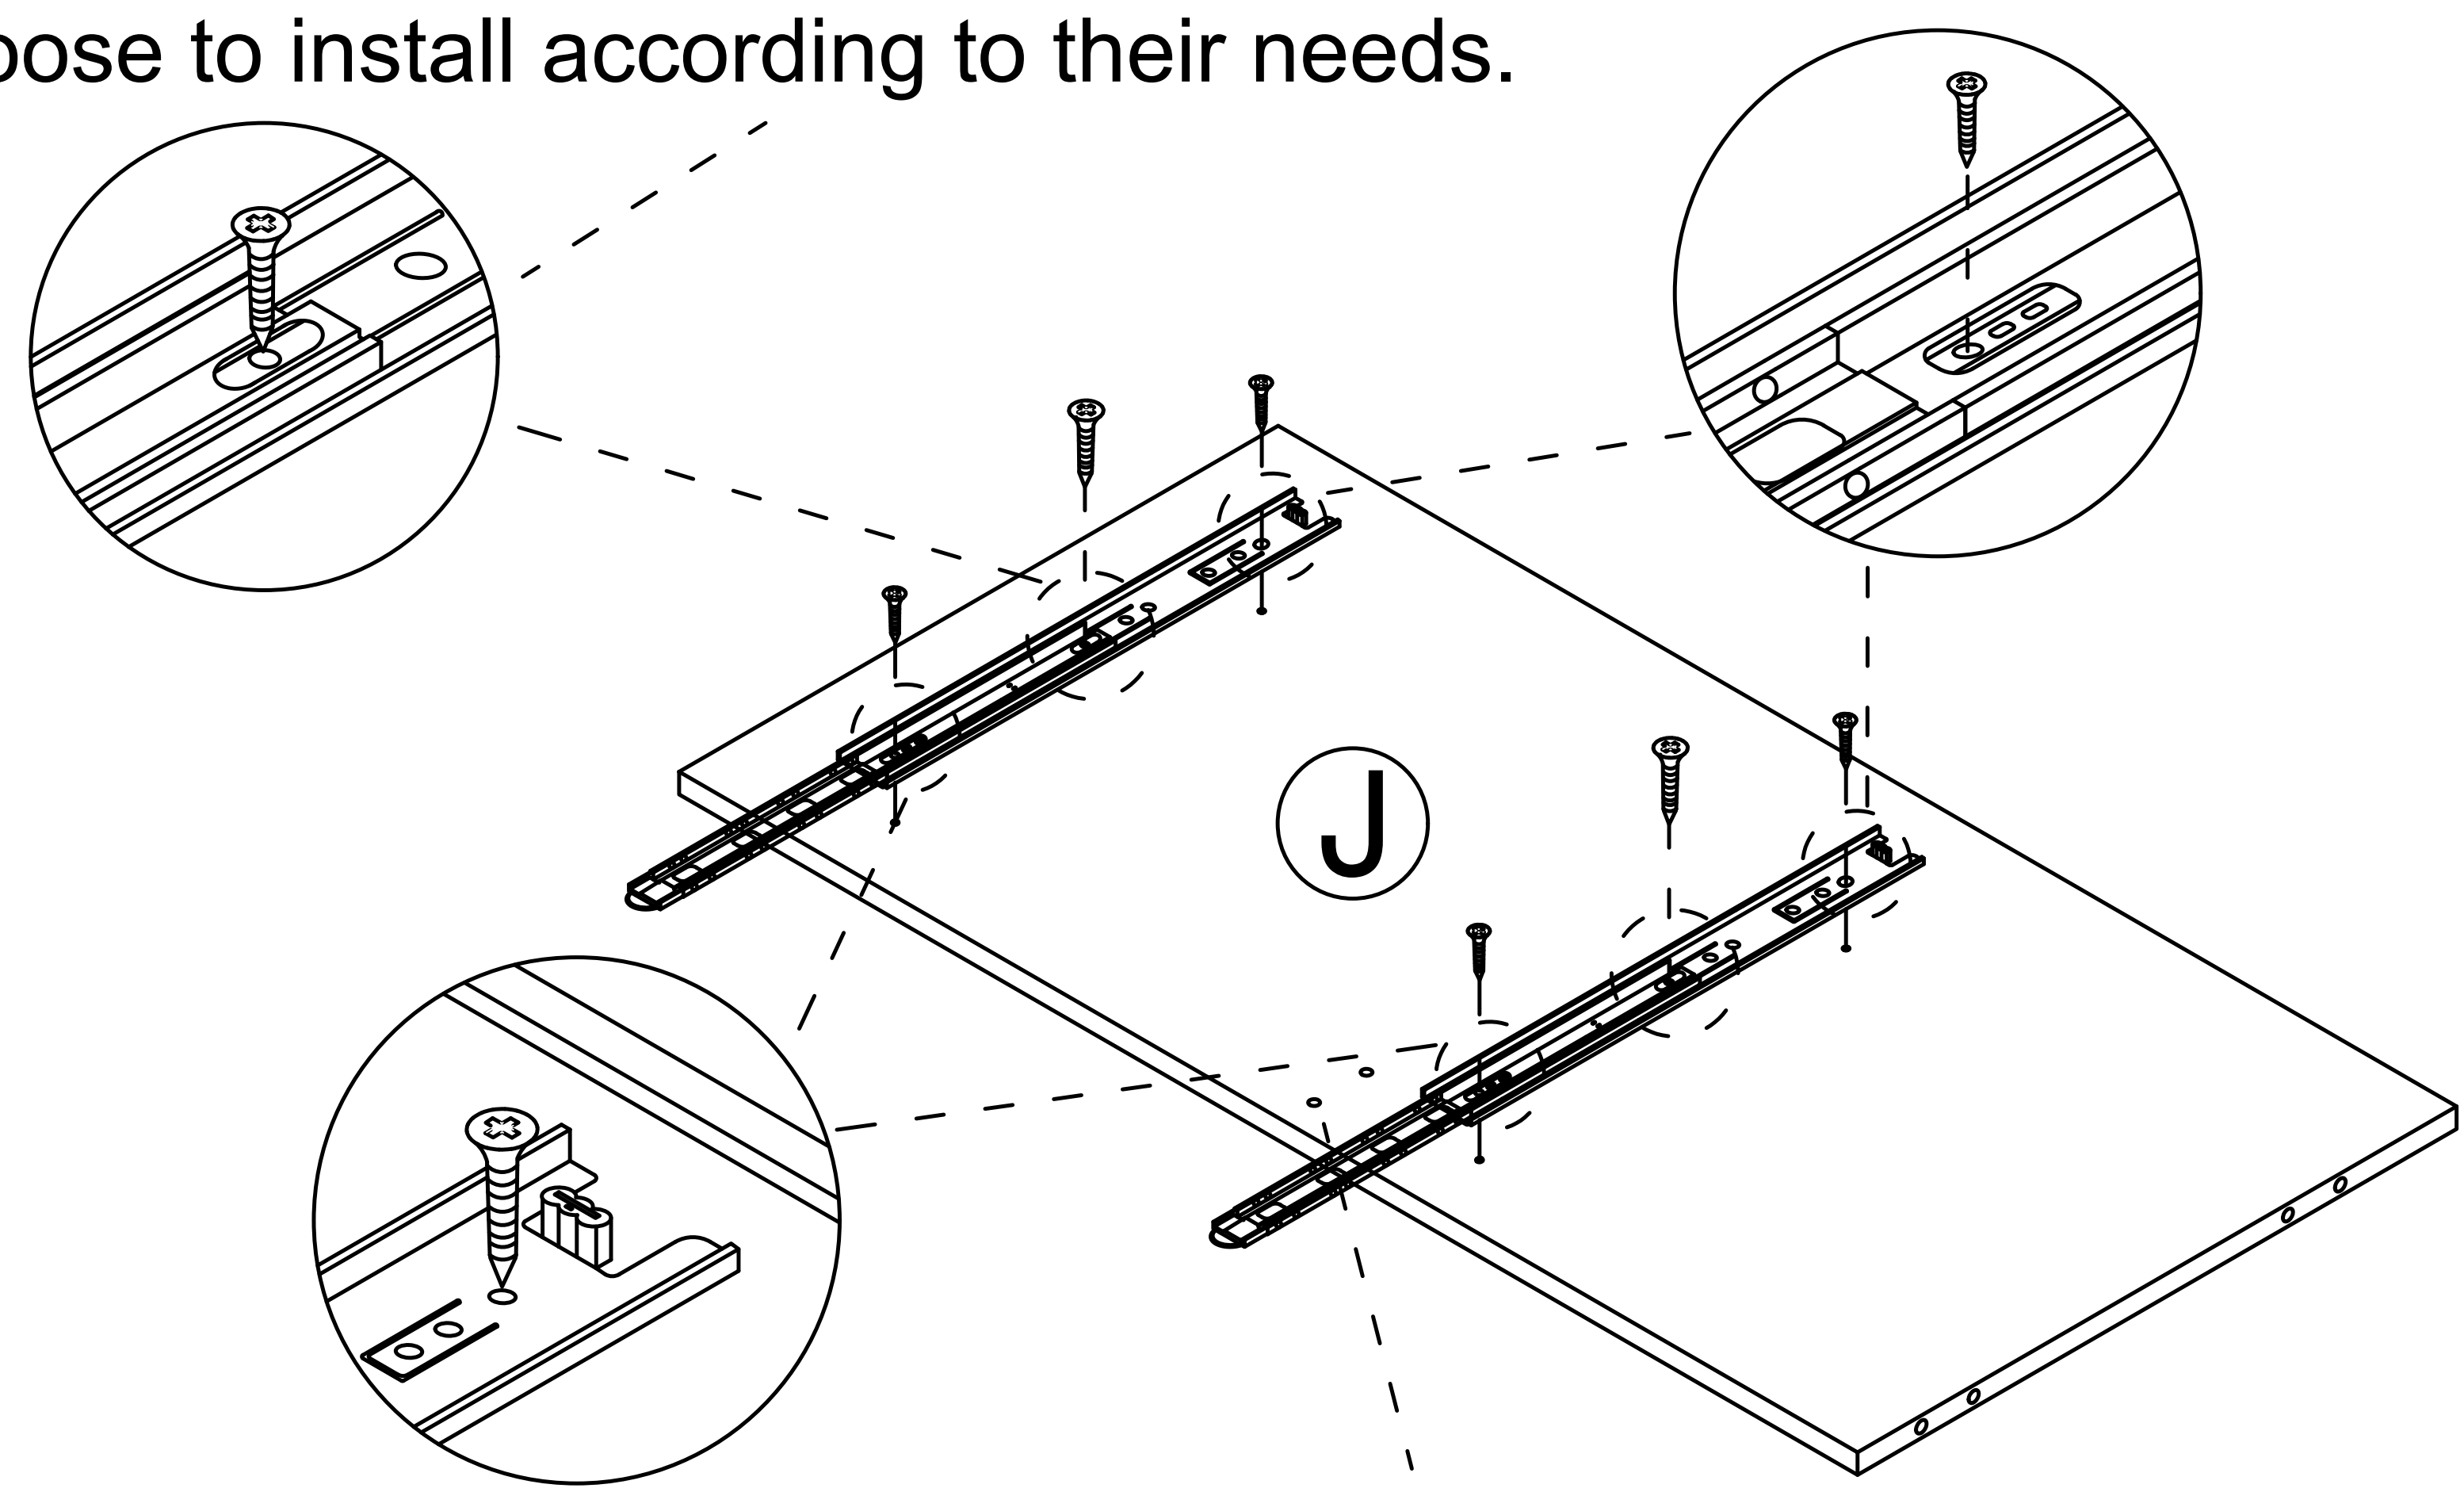


Note: There are two holes in the direction in which the guide rail extends. Do not install the guide rail upside down.


Step 20

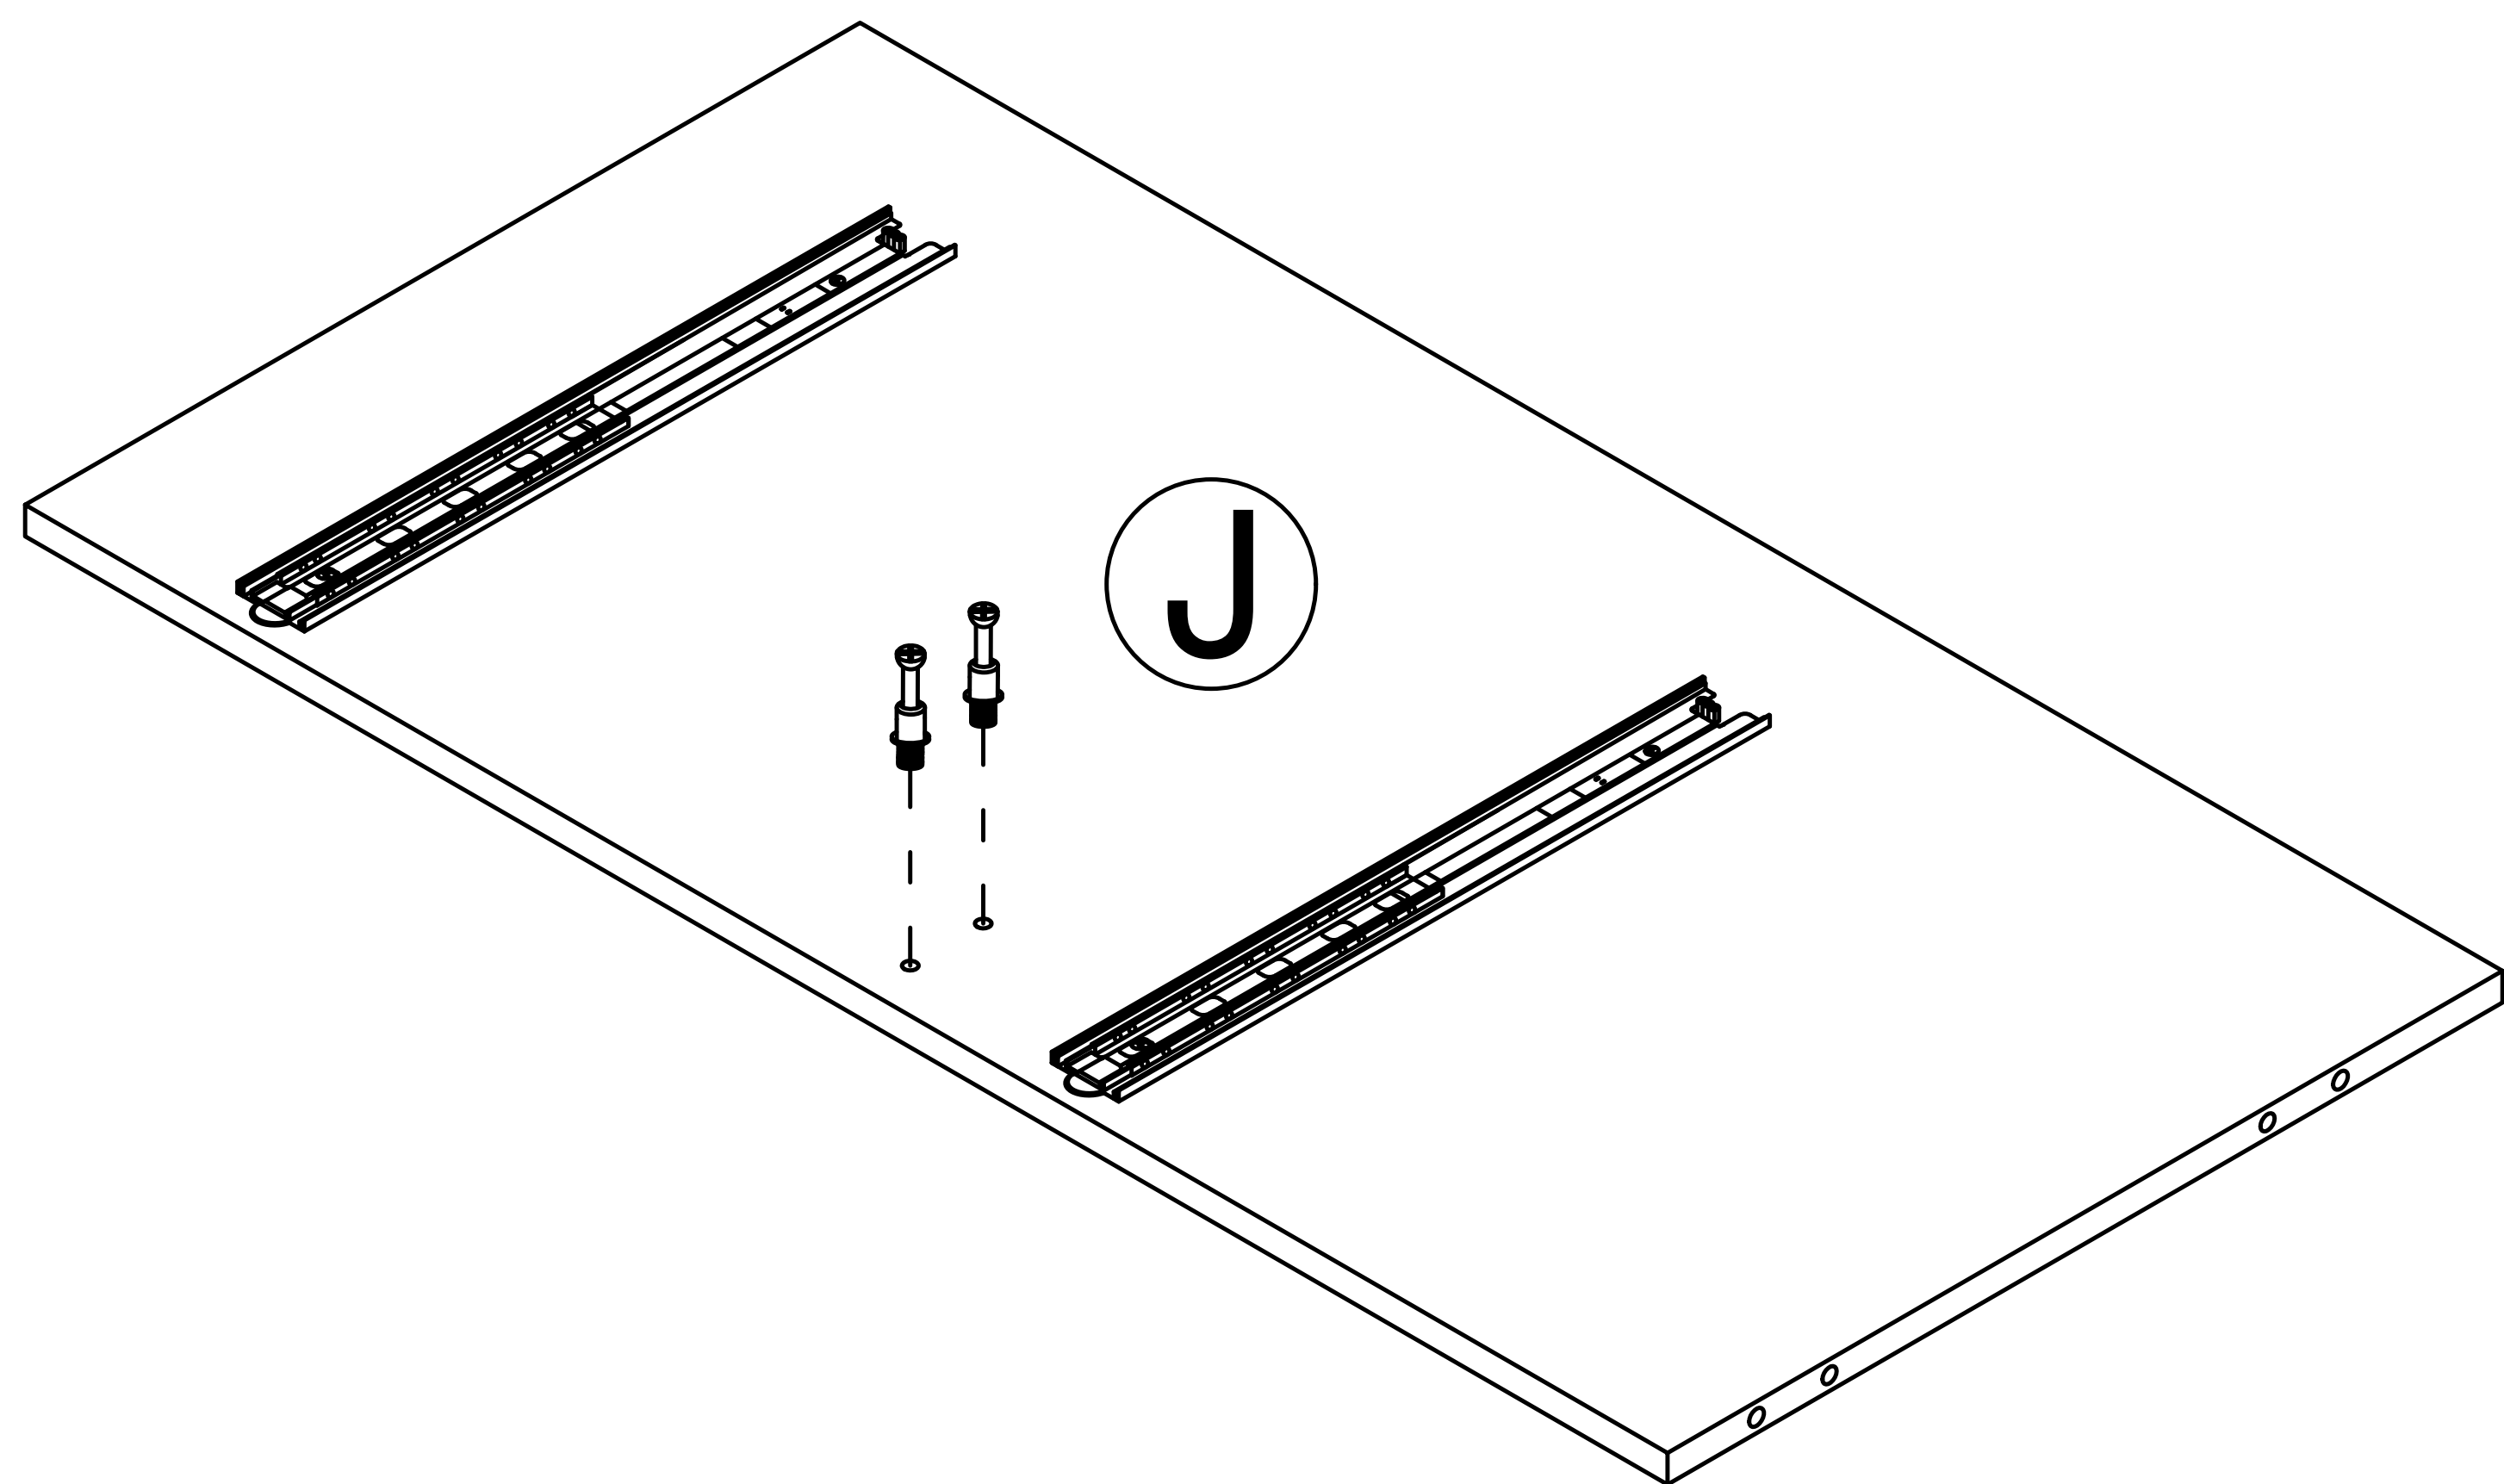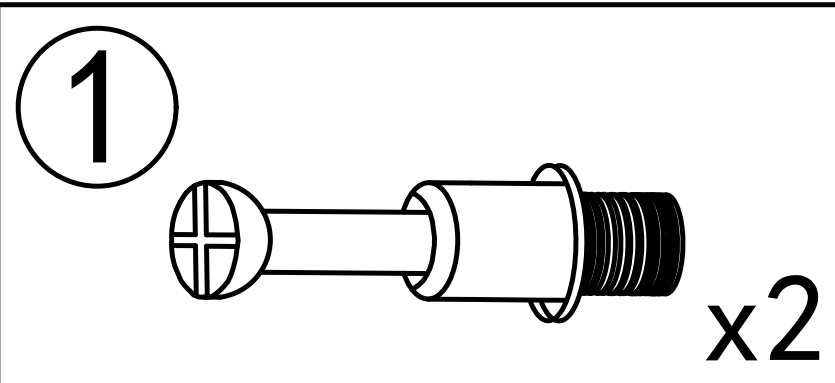


Step 21

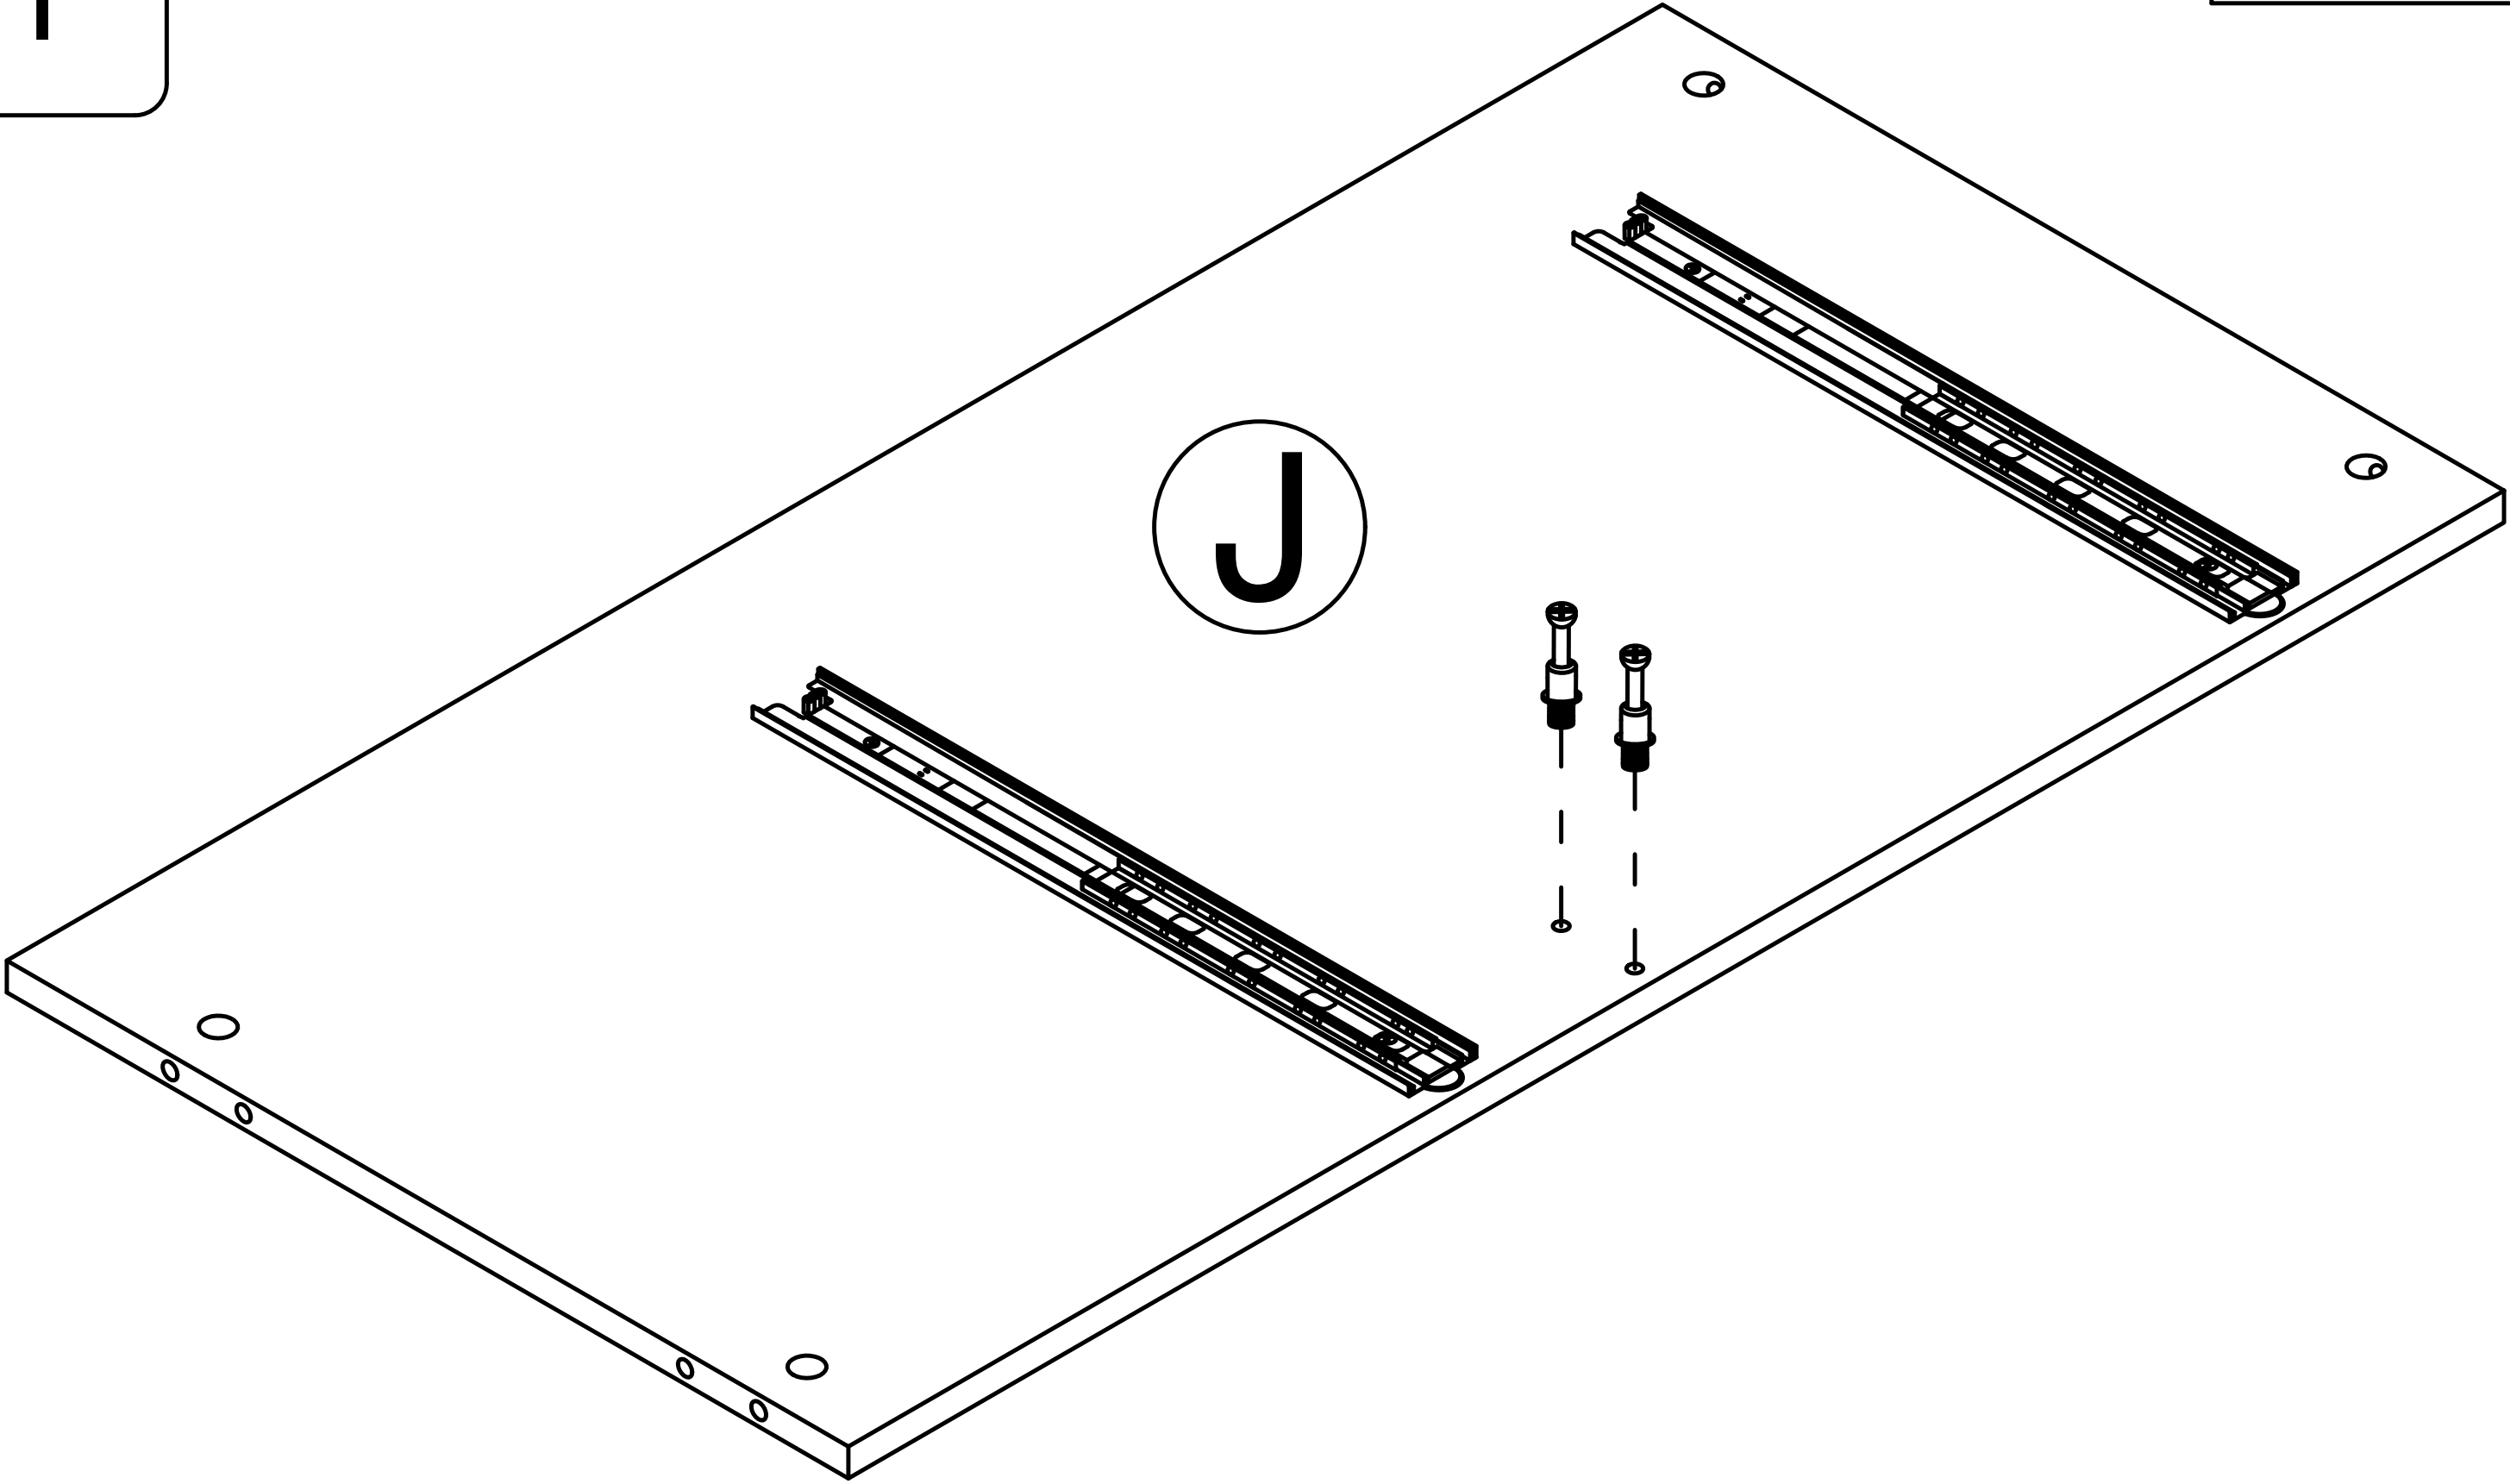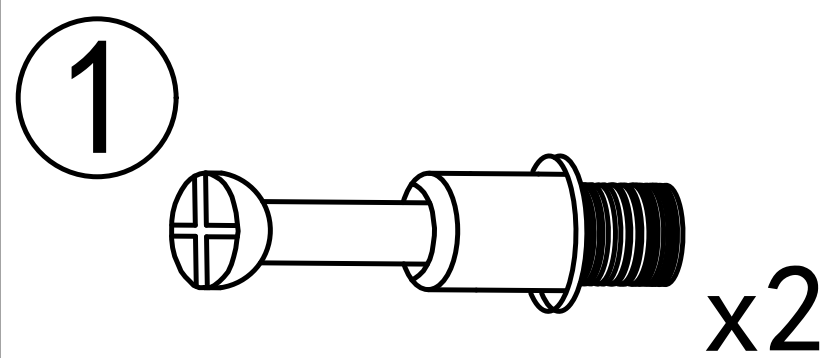



Step 22

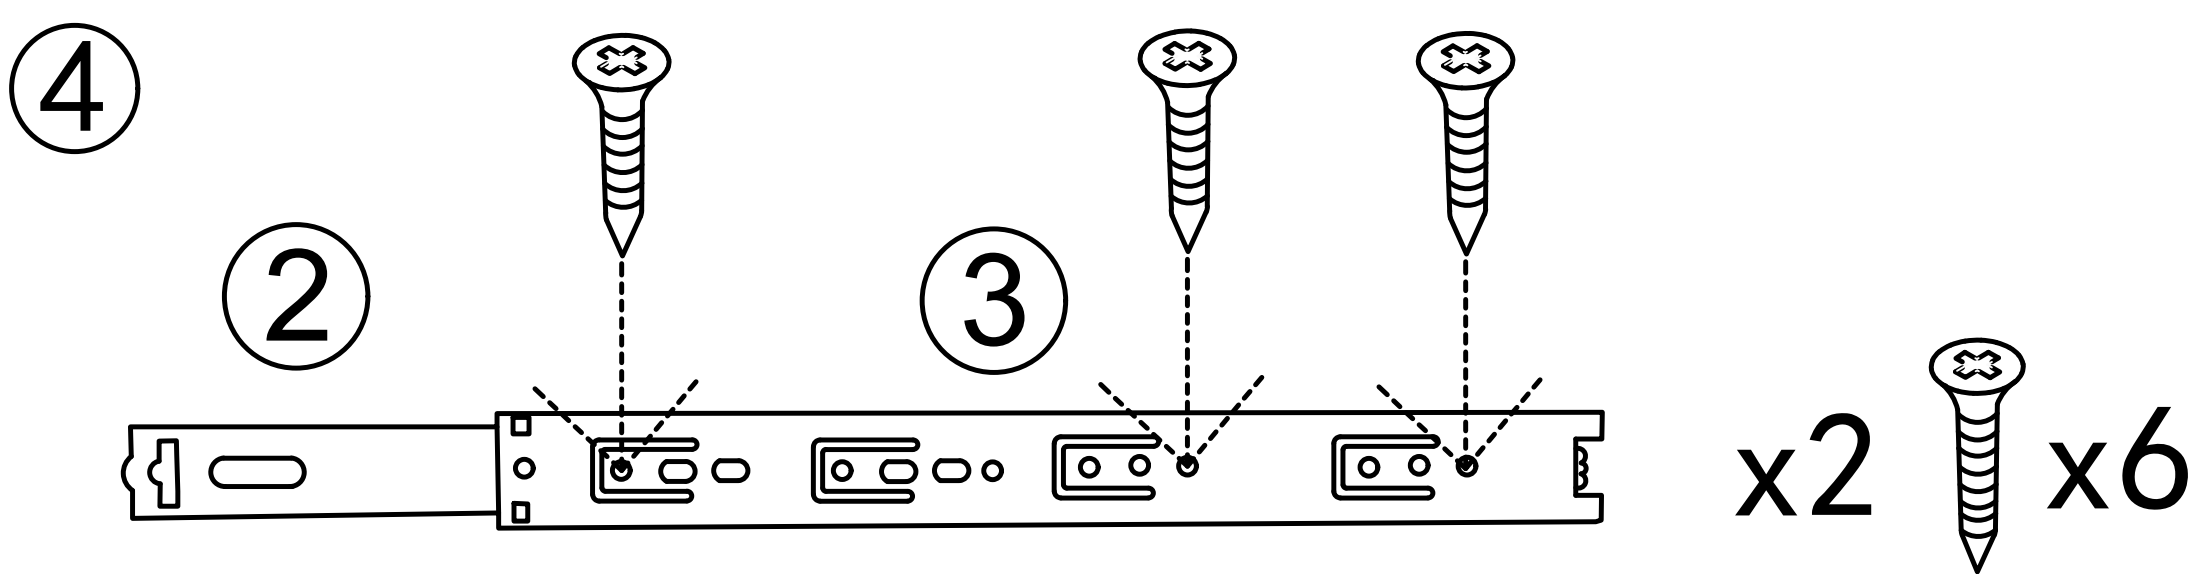



This hole is for strengthening fixed hole customers can choose to install according to their needs.

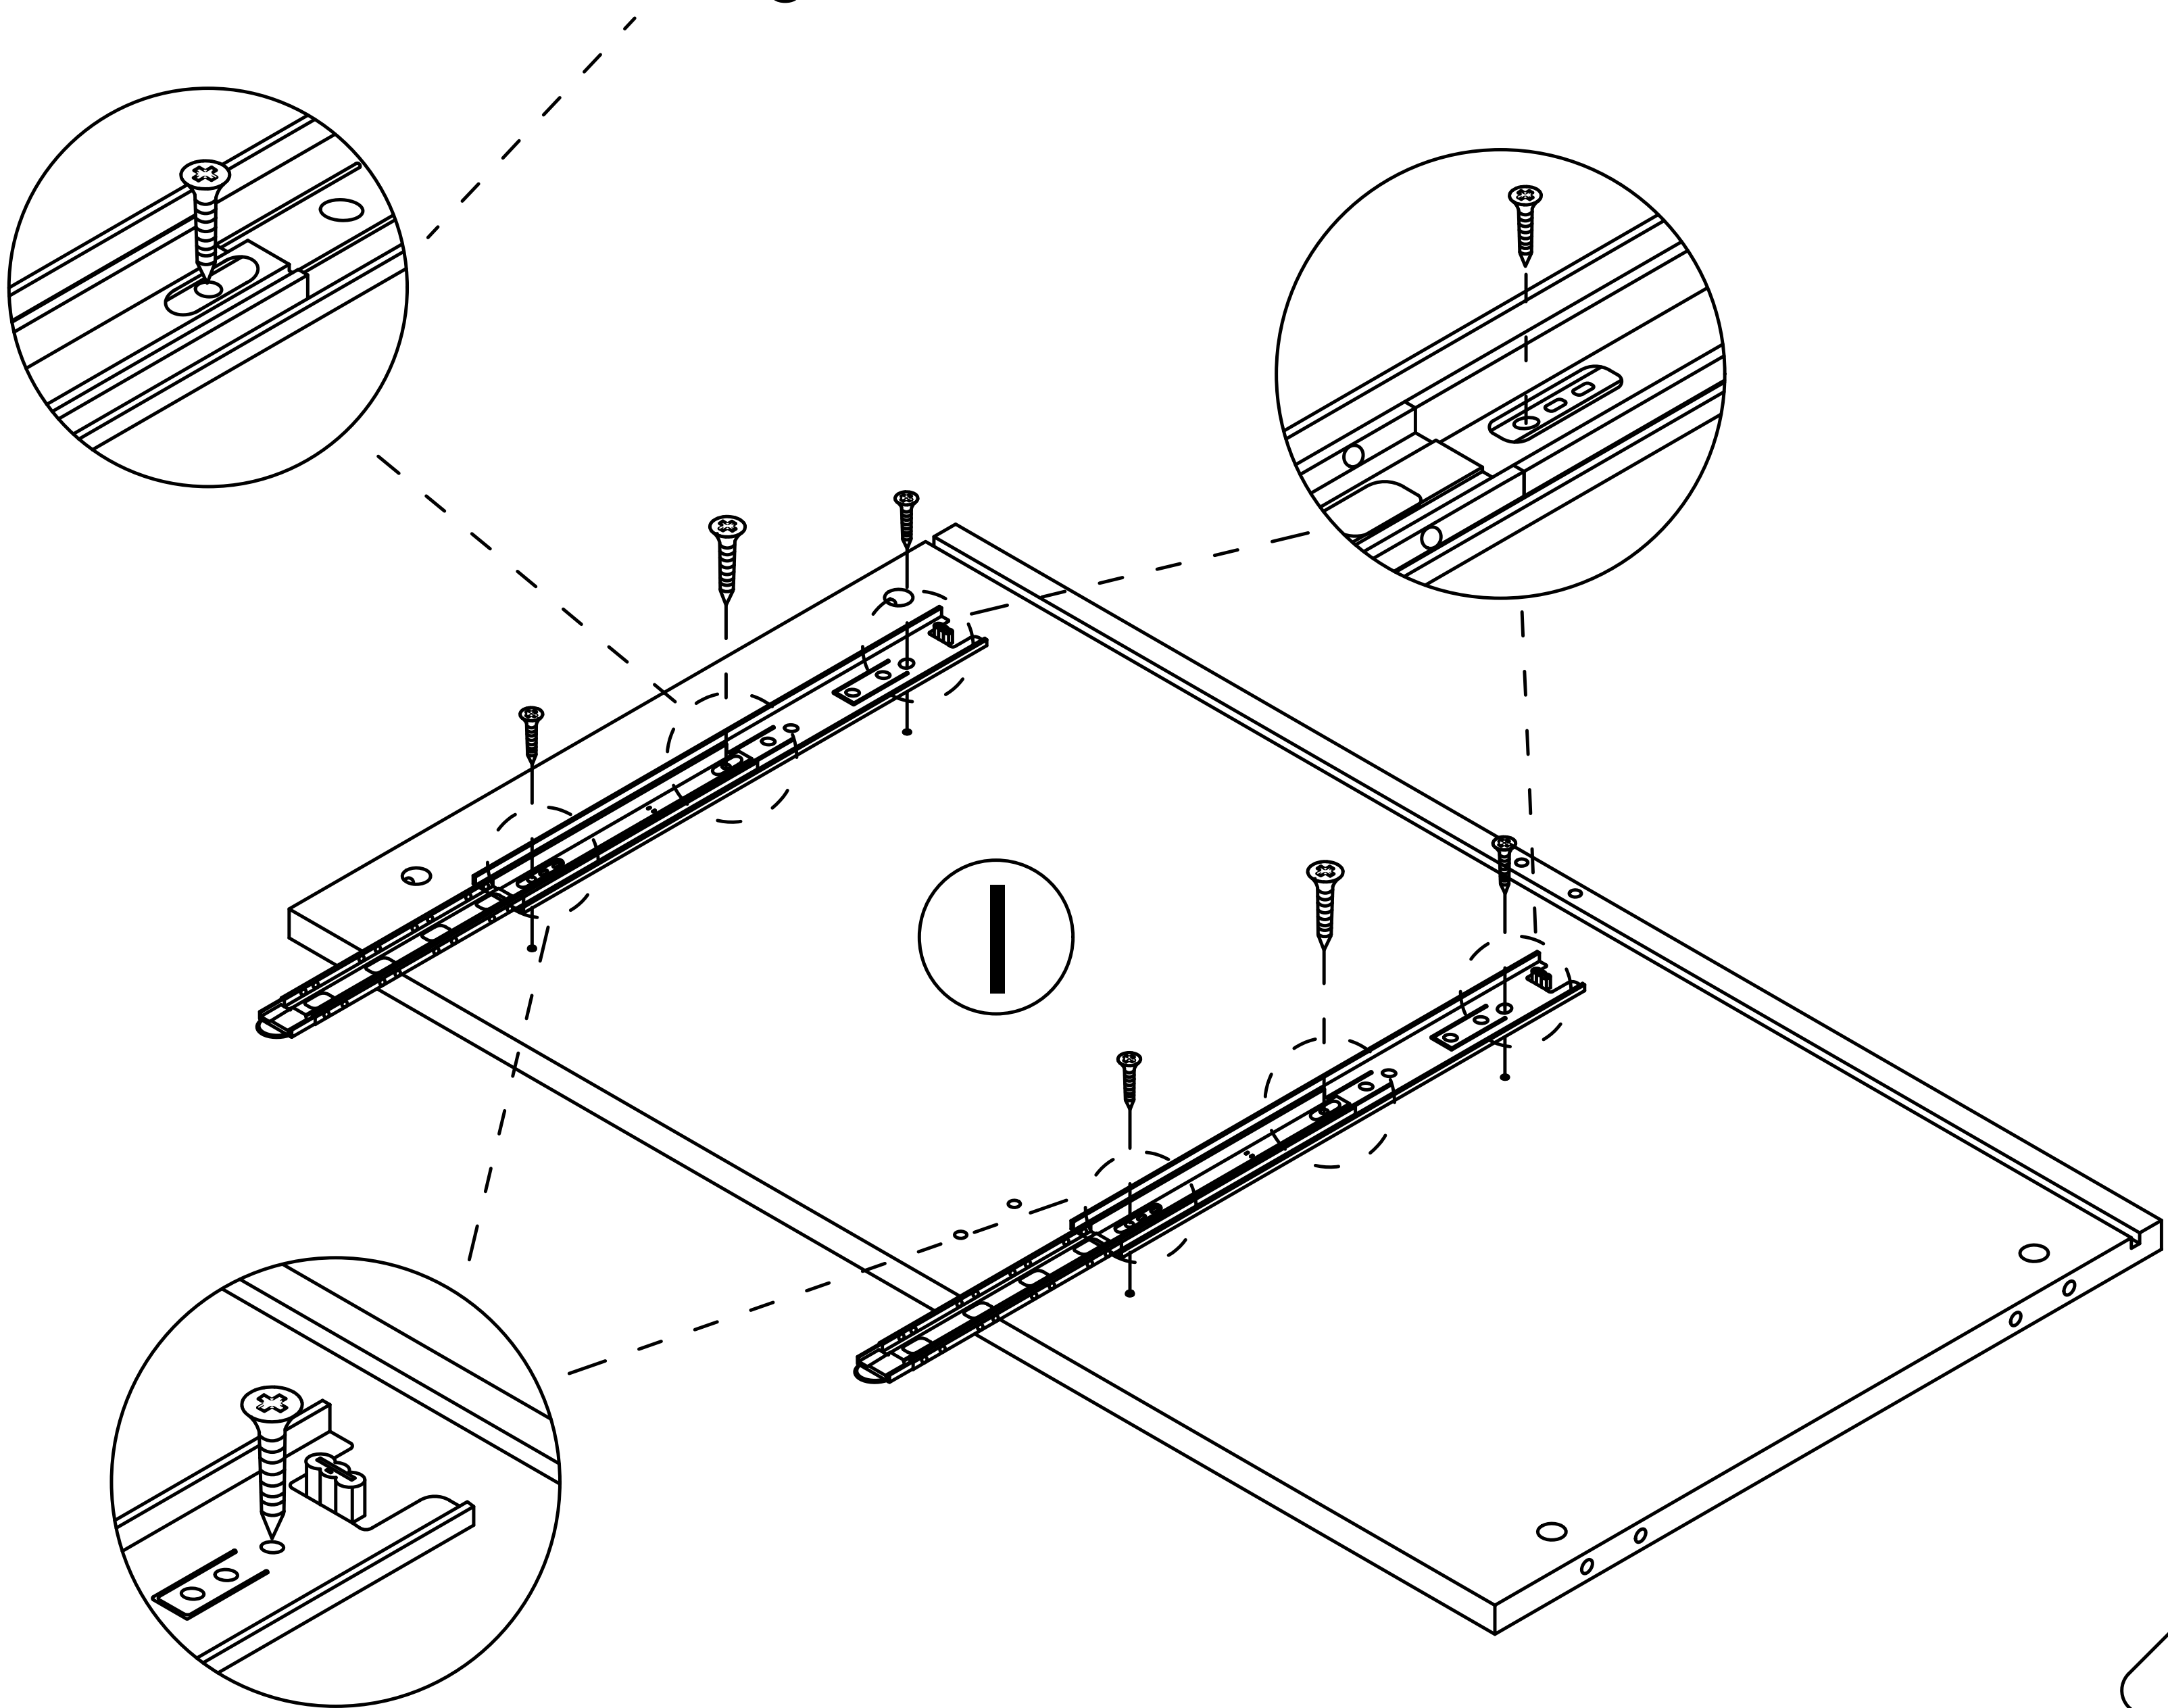

Step 23

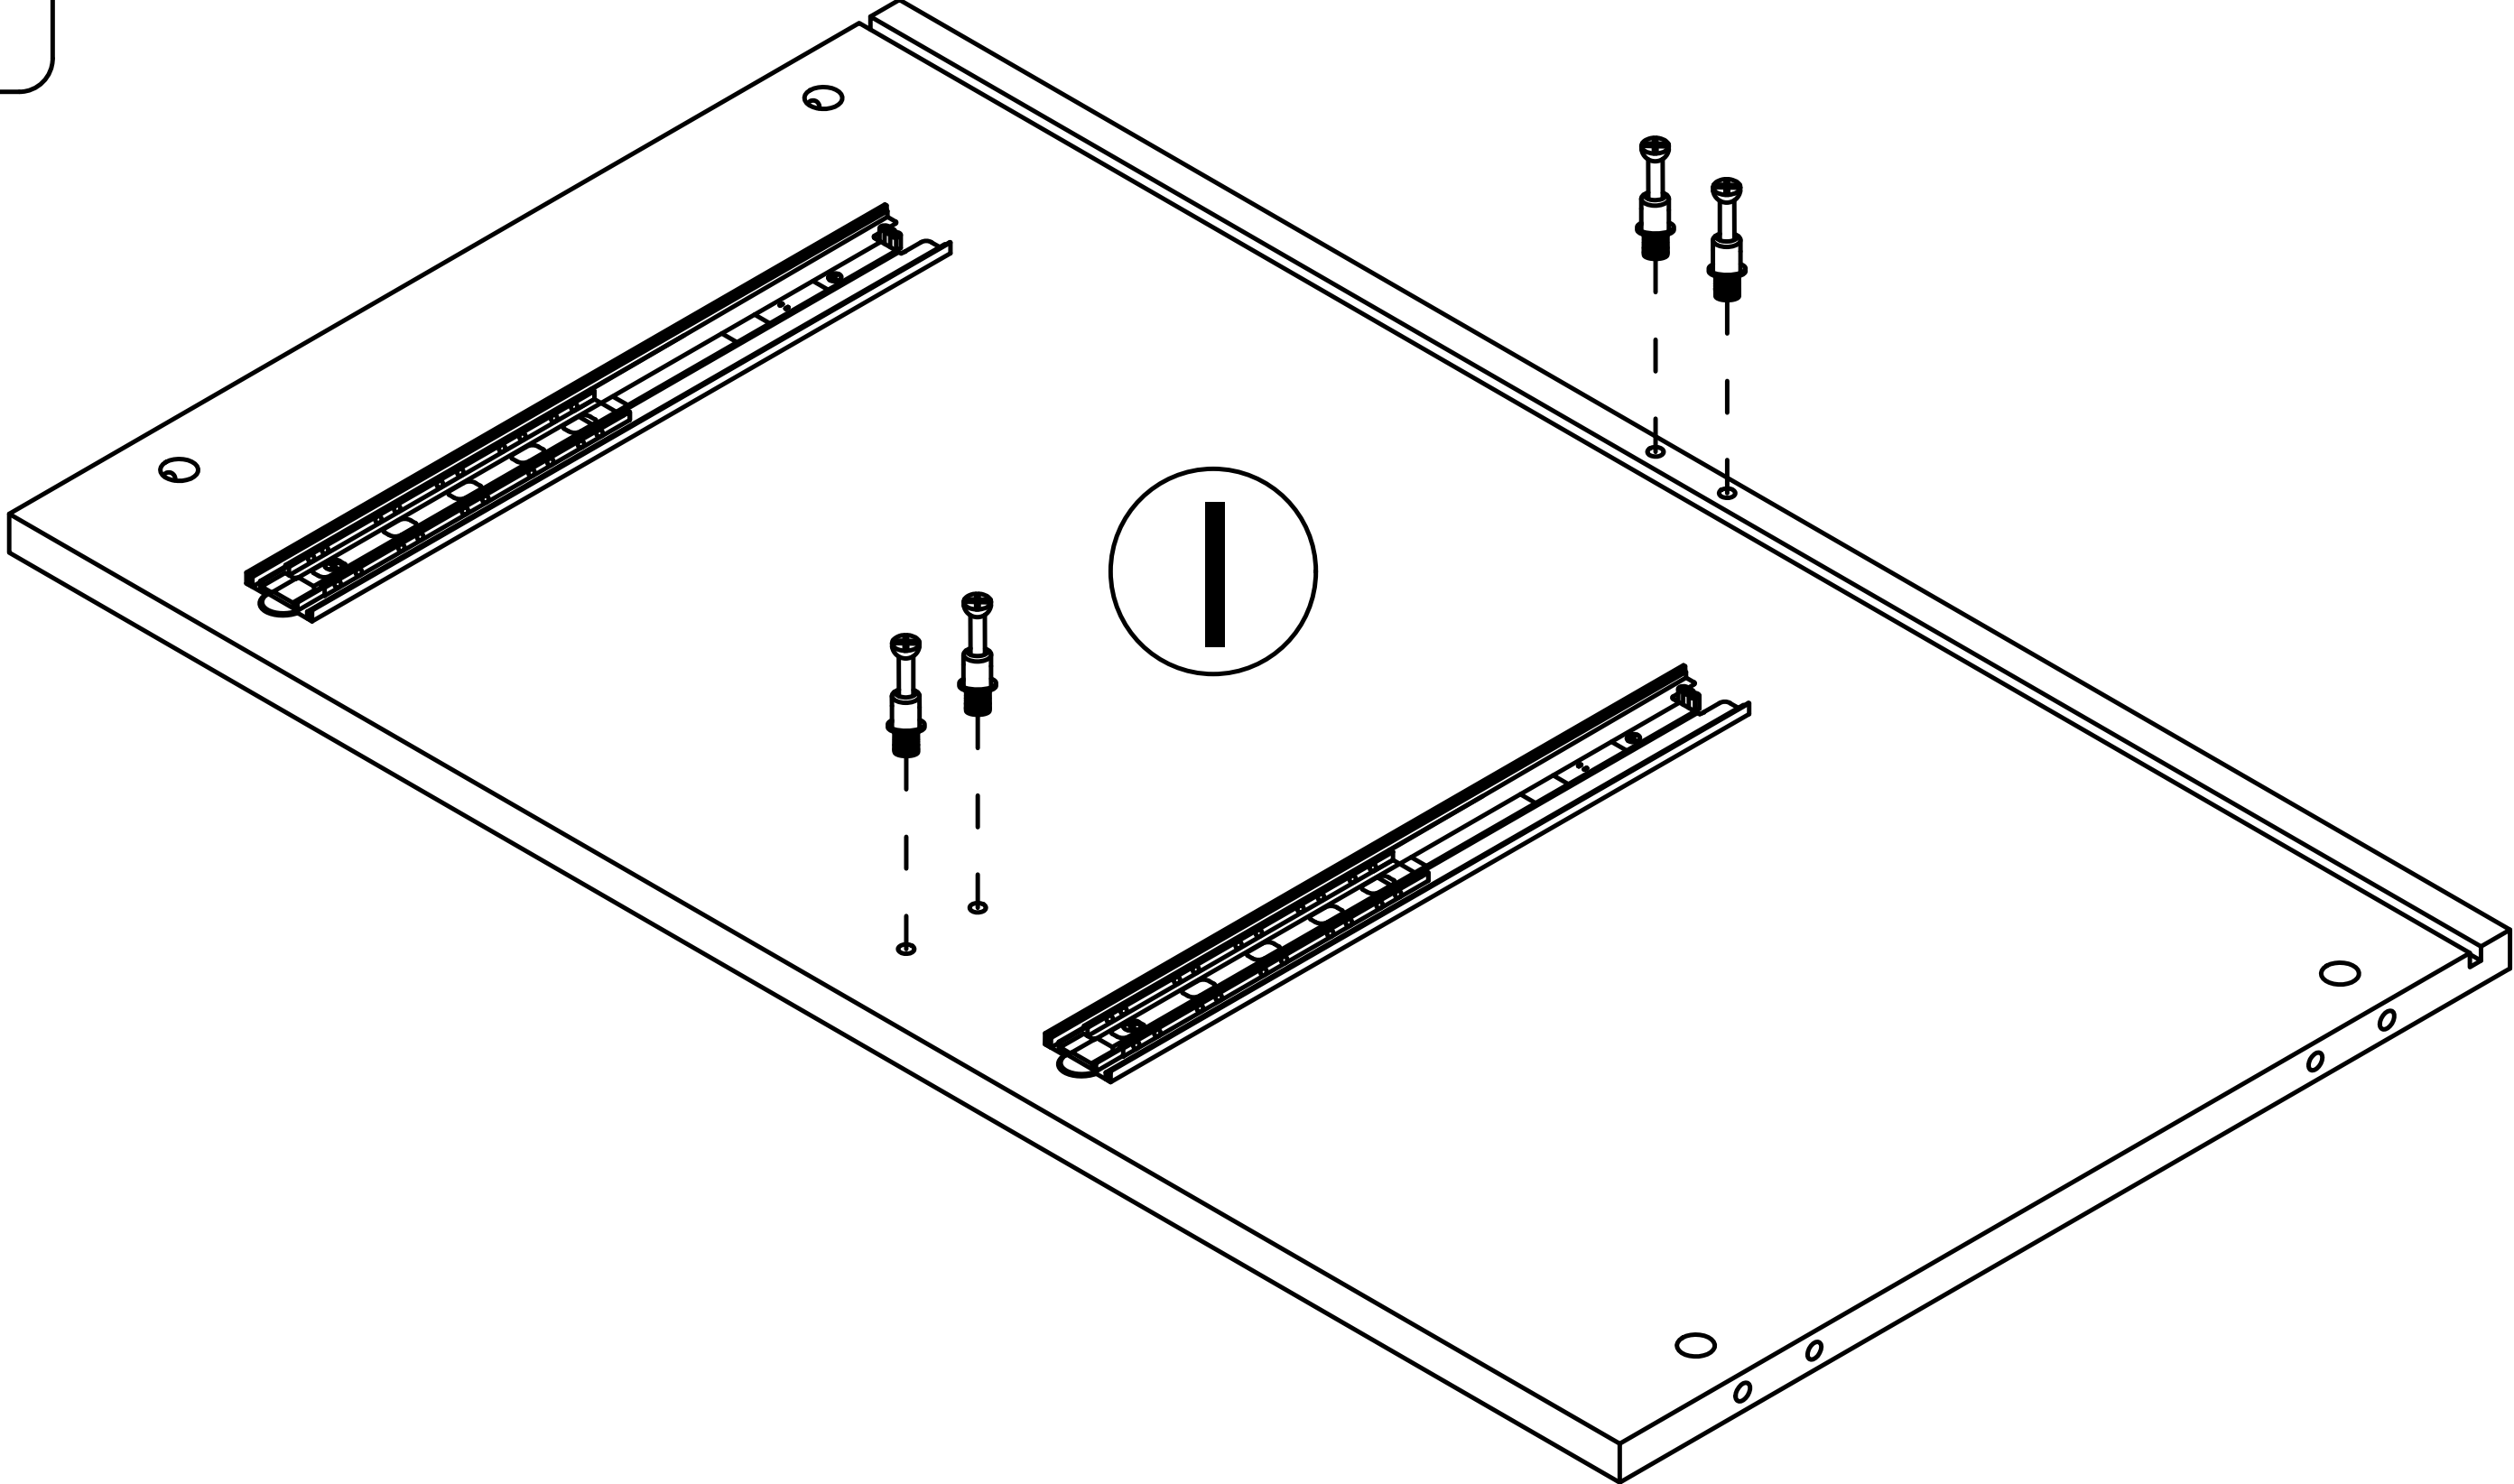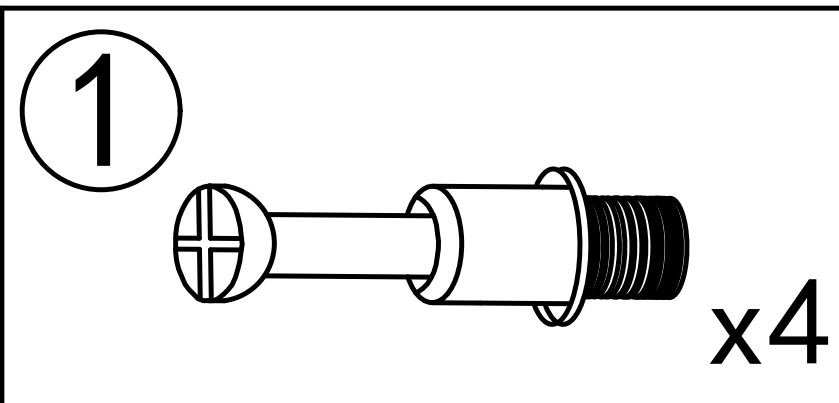



Step 24

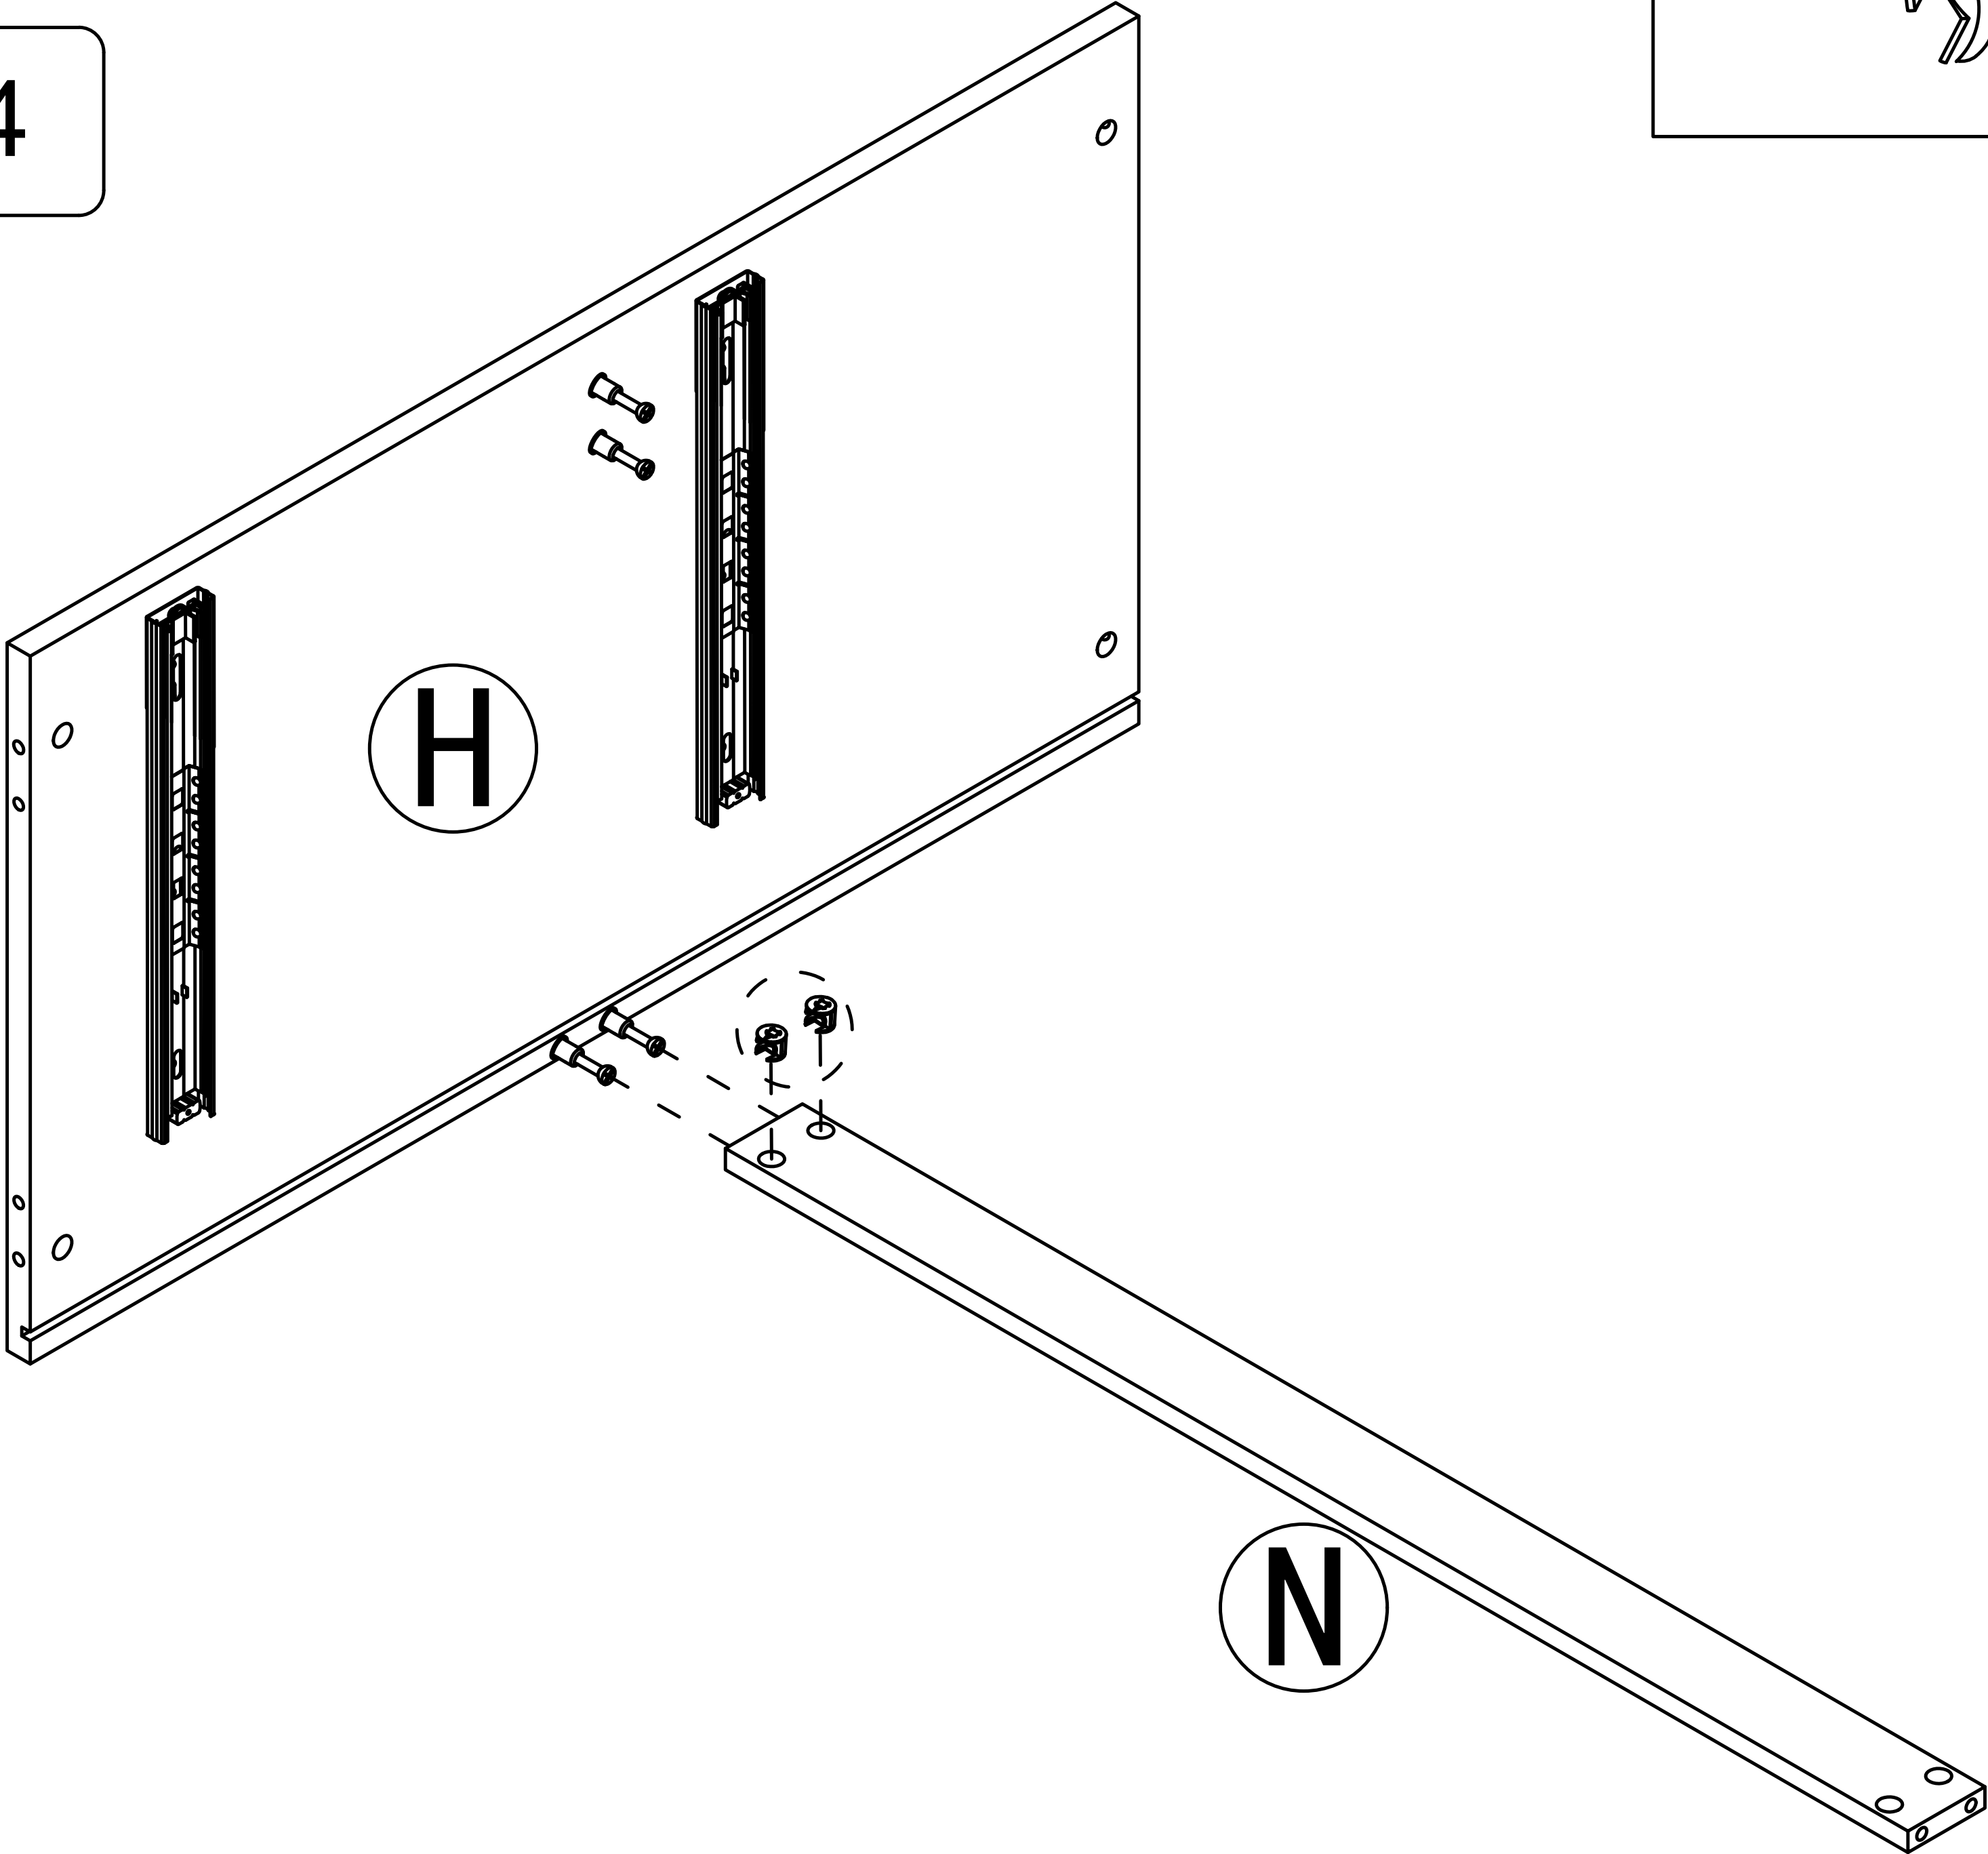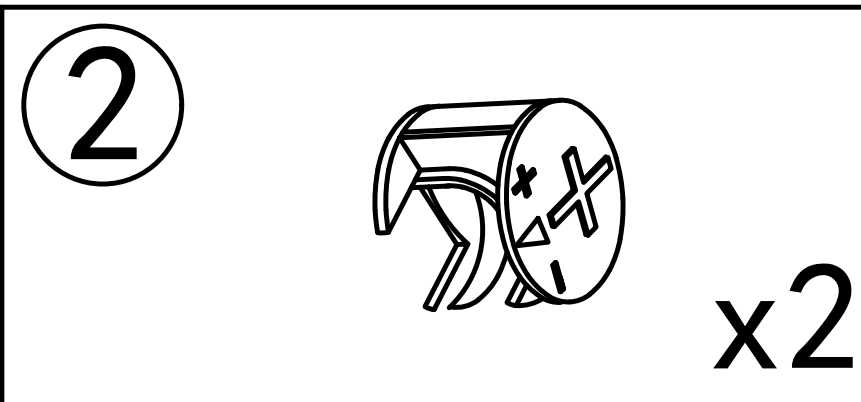

Step 25


2

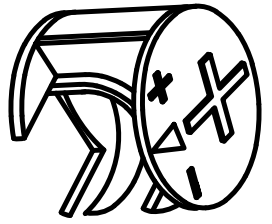
 x2

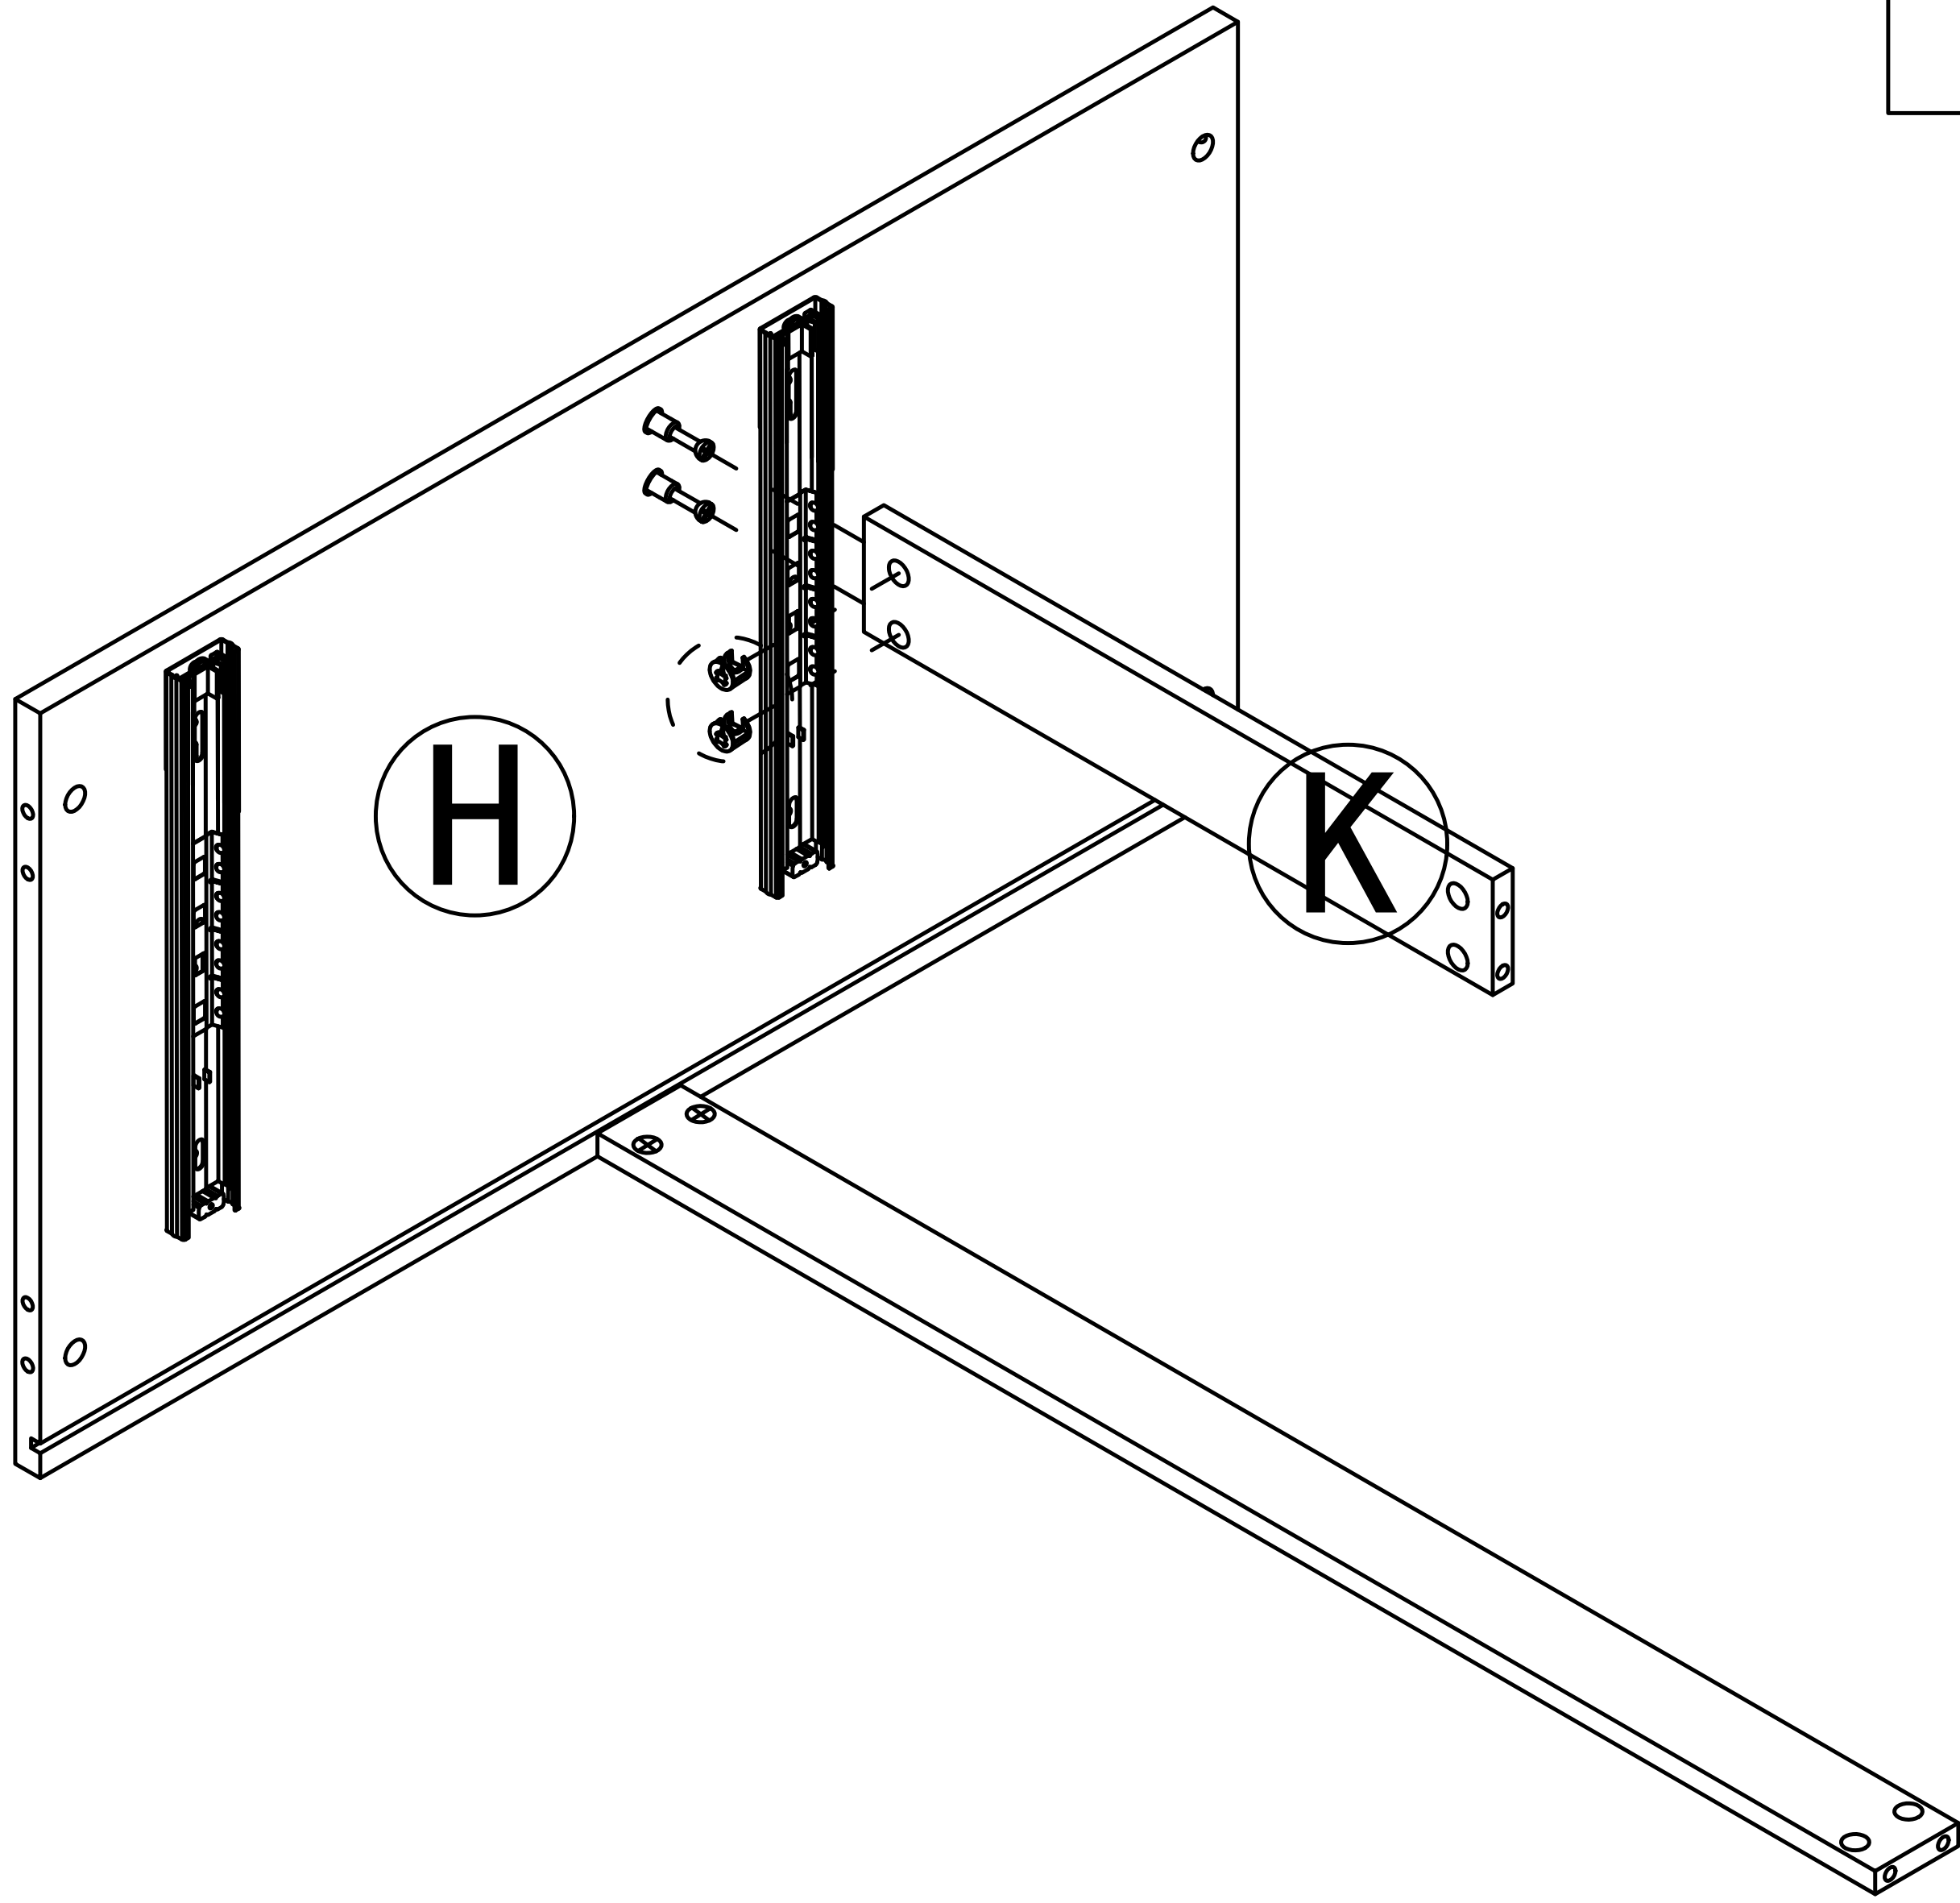


Step 26


2

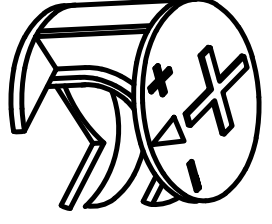 x2

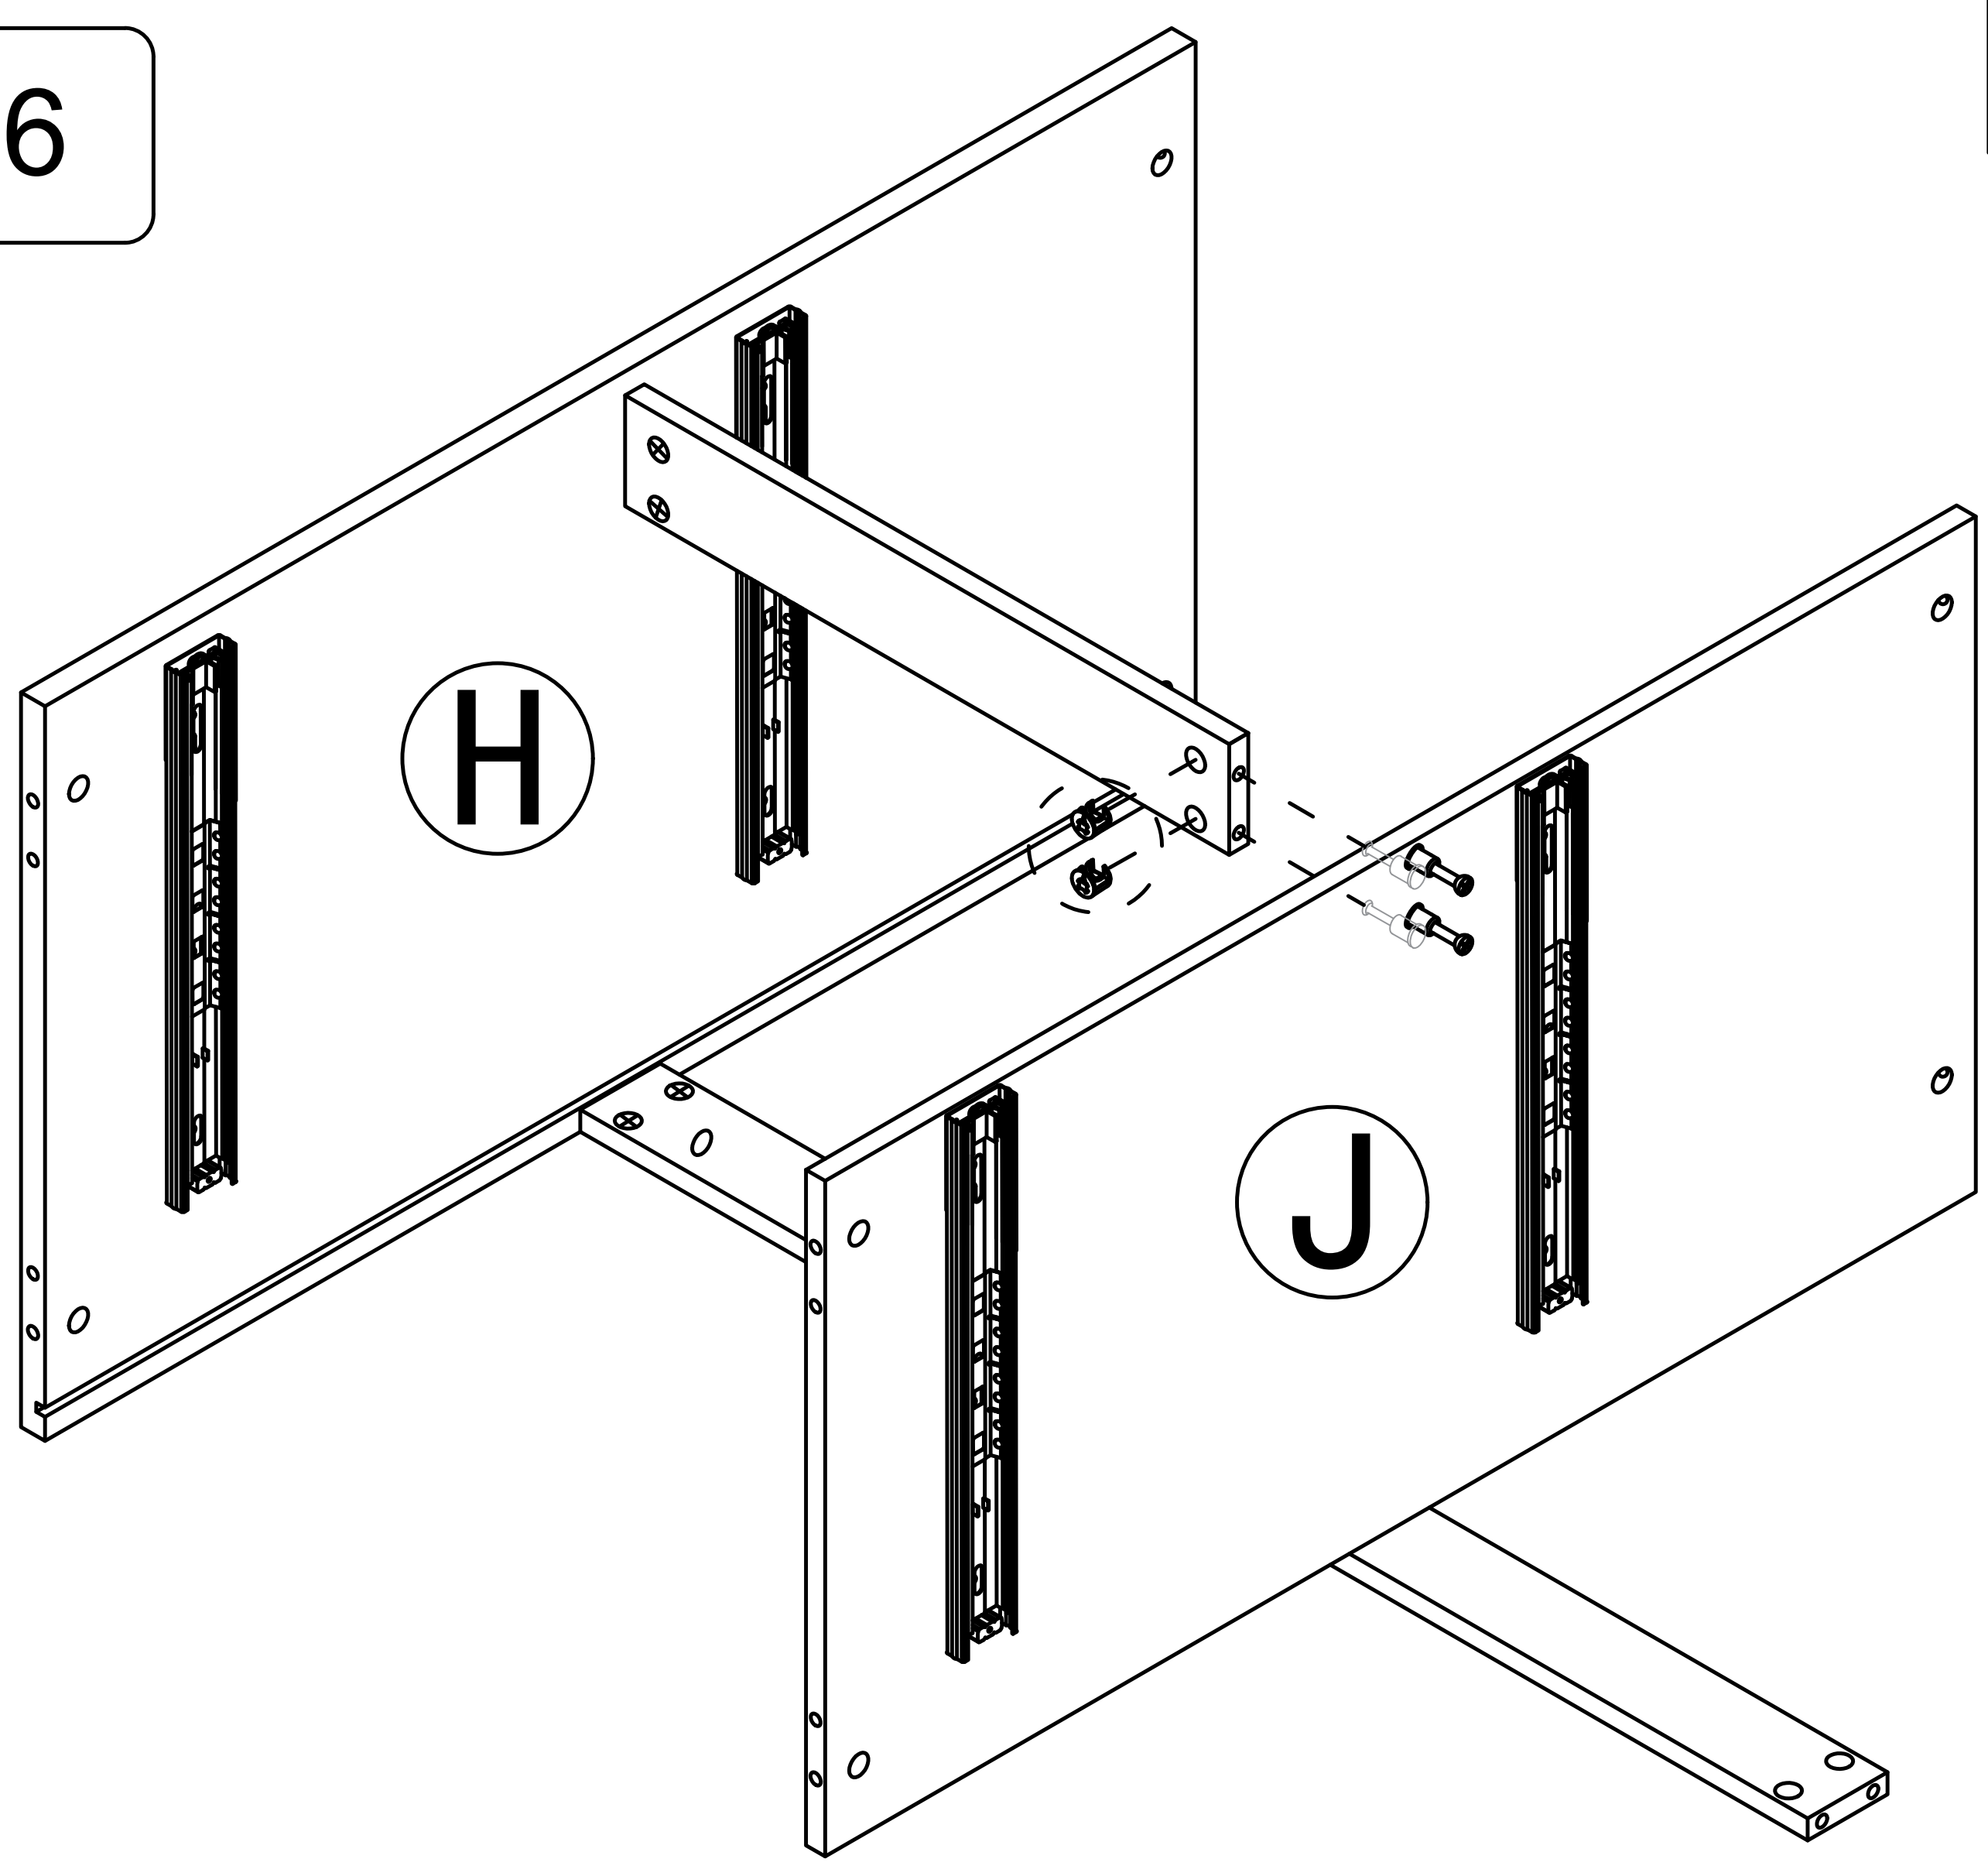



Step 27

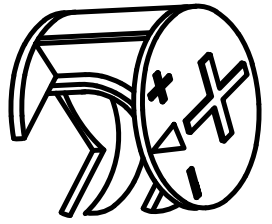2  x2

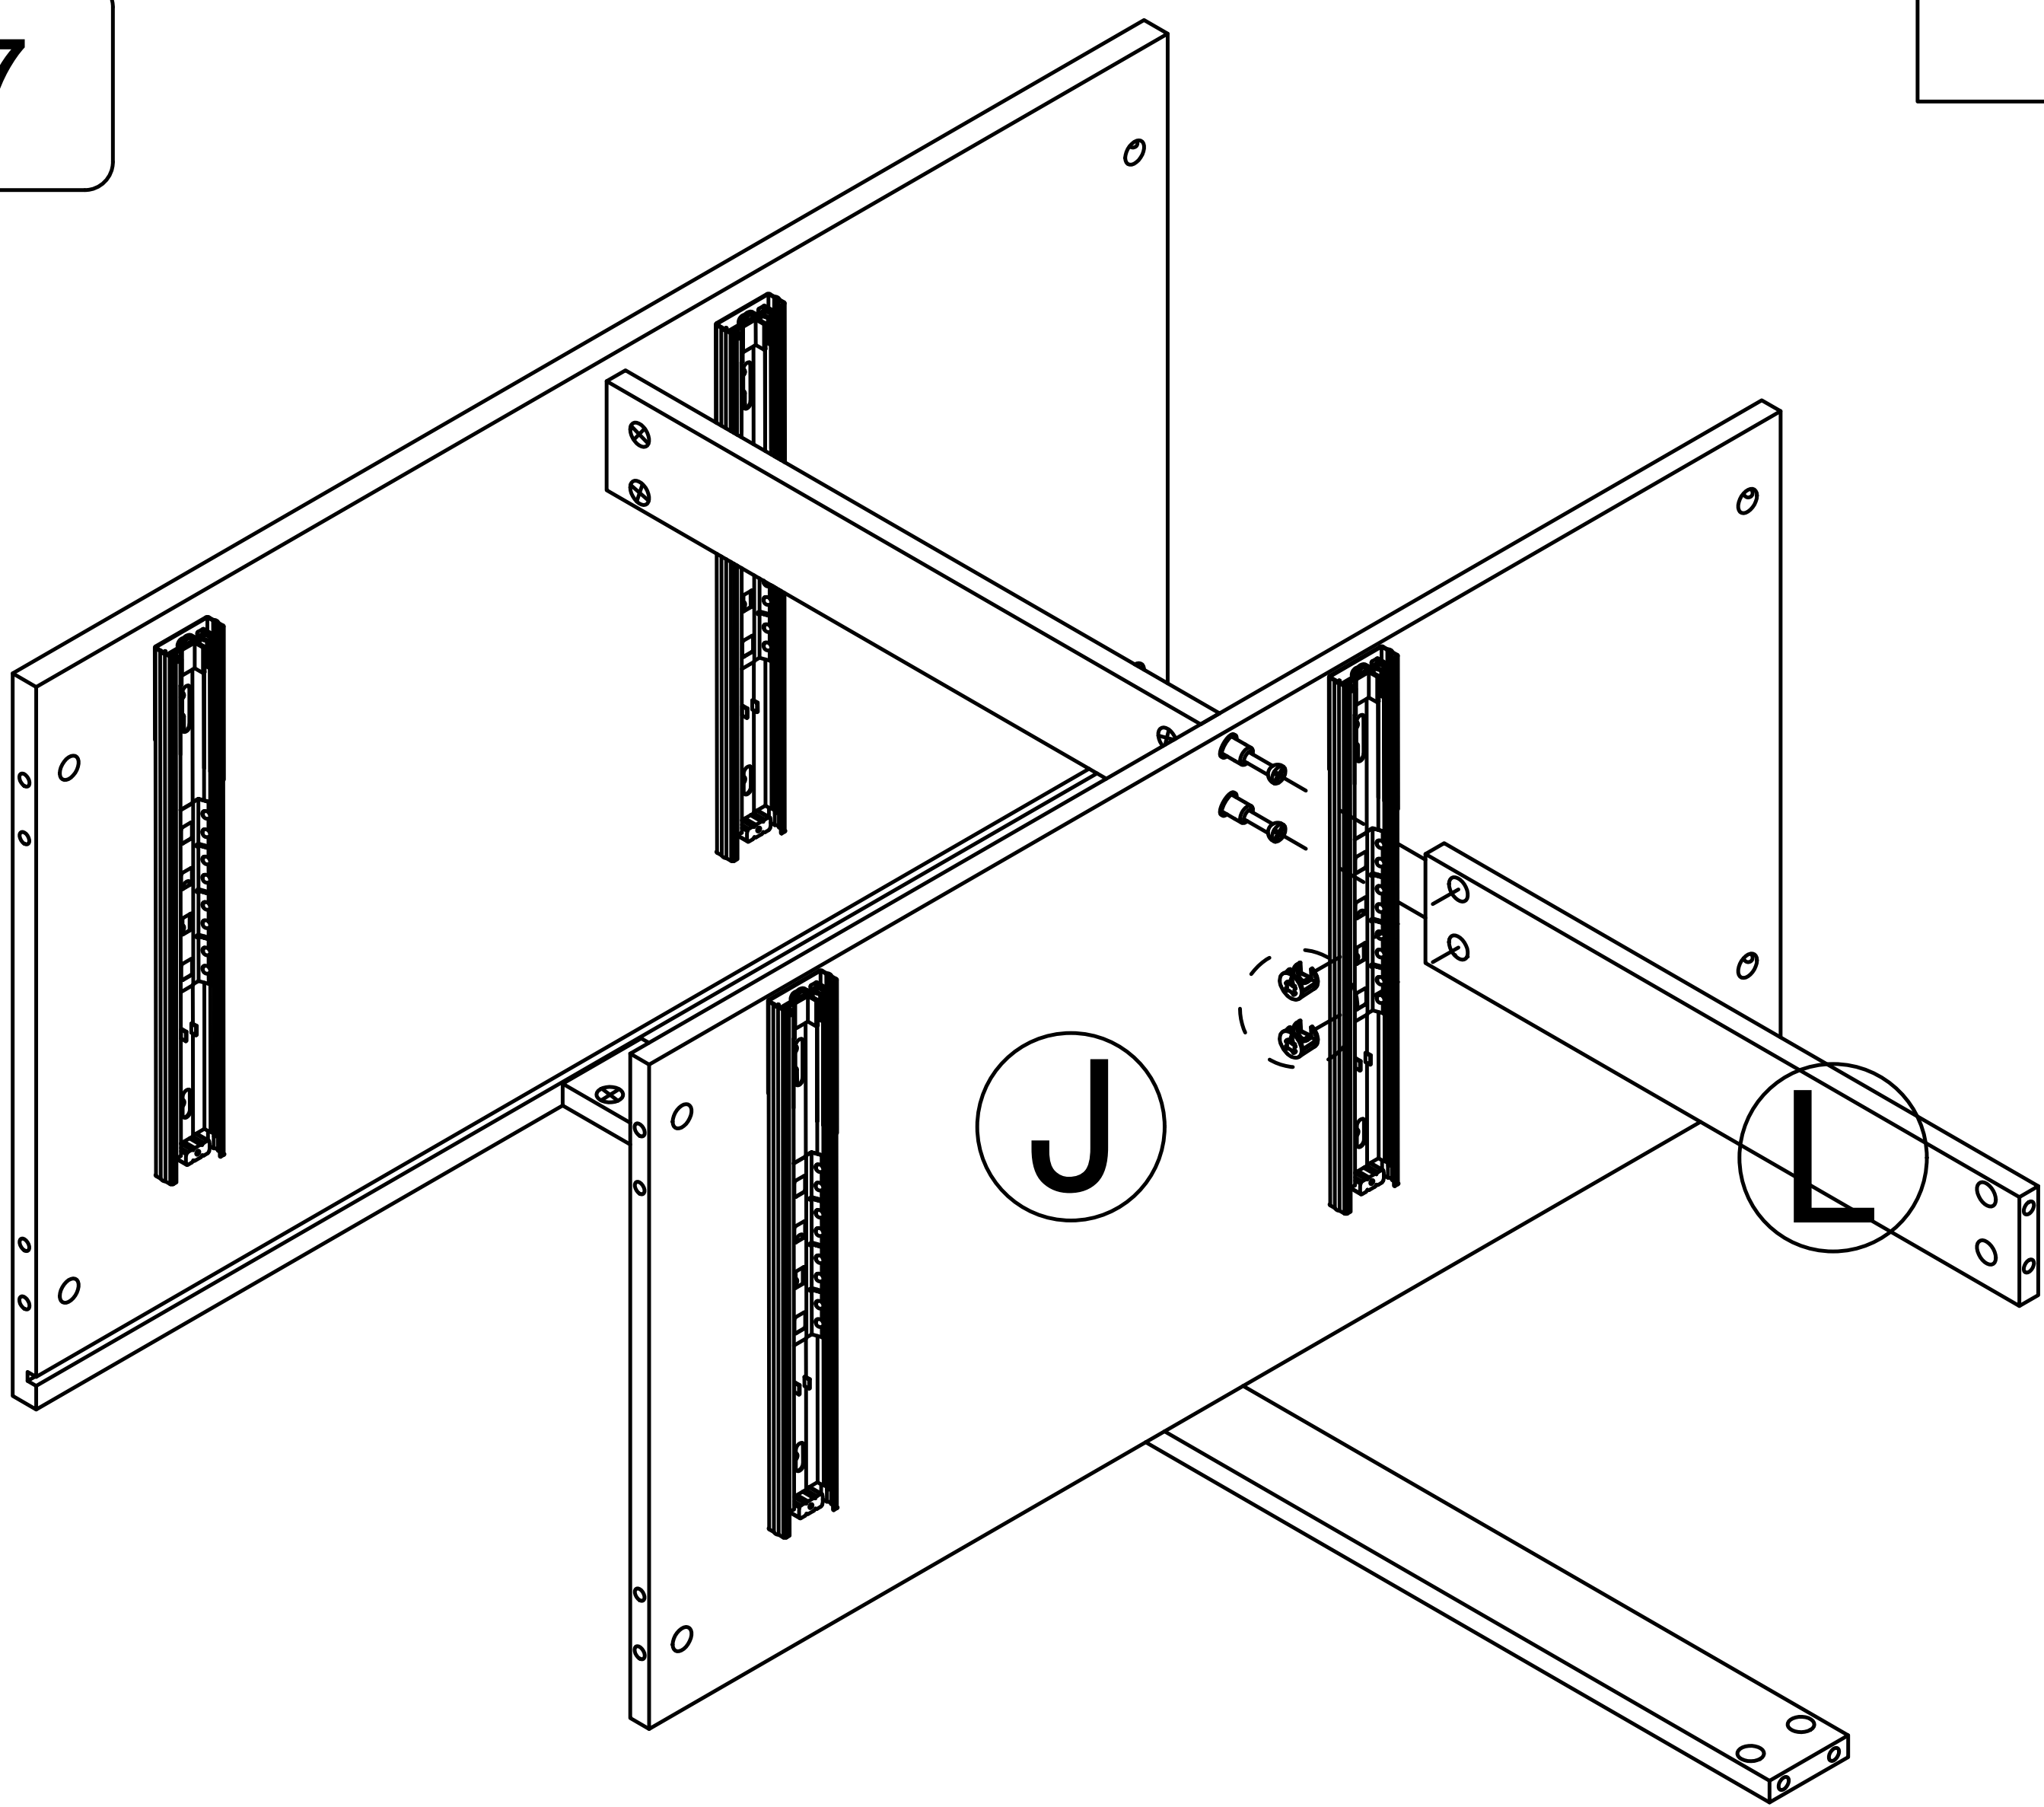


Step 28

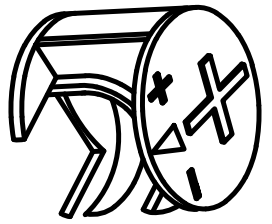2  x4

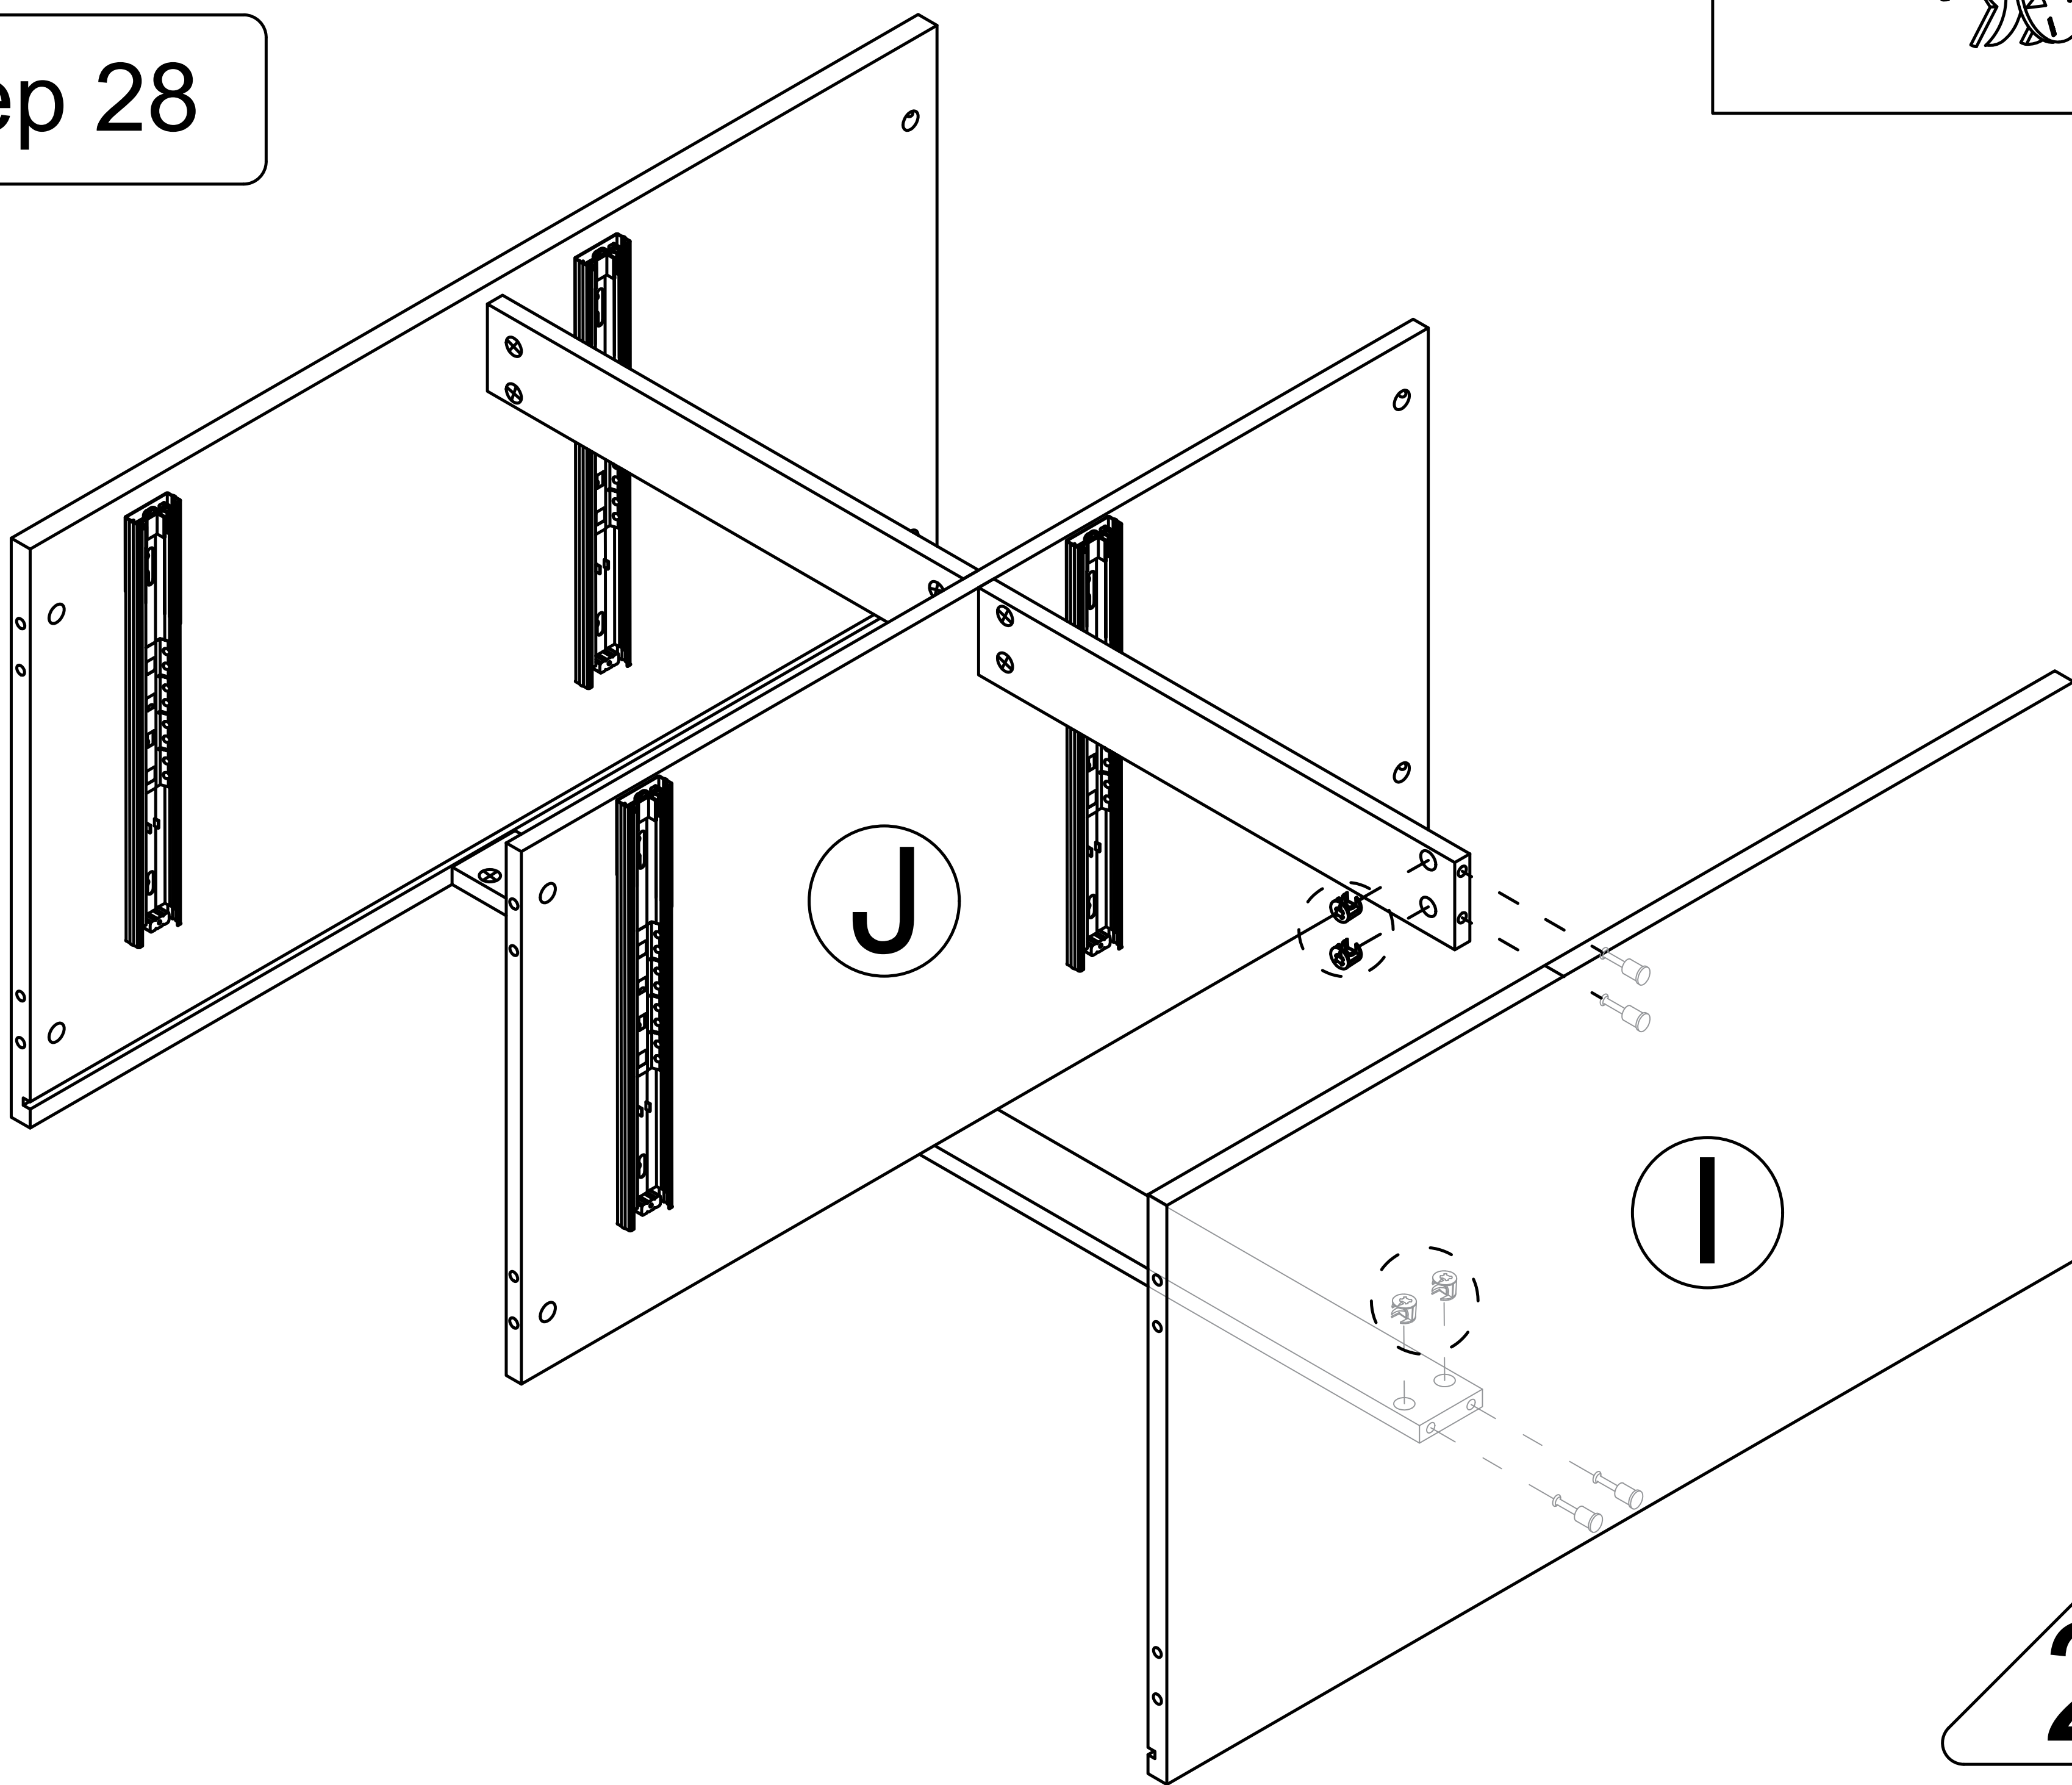


Step 29

3  x6

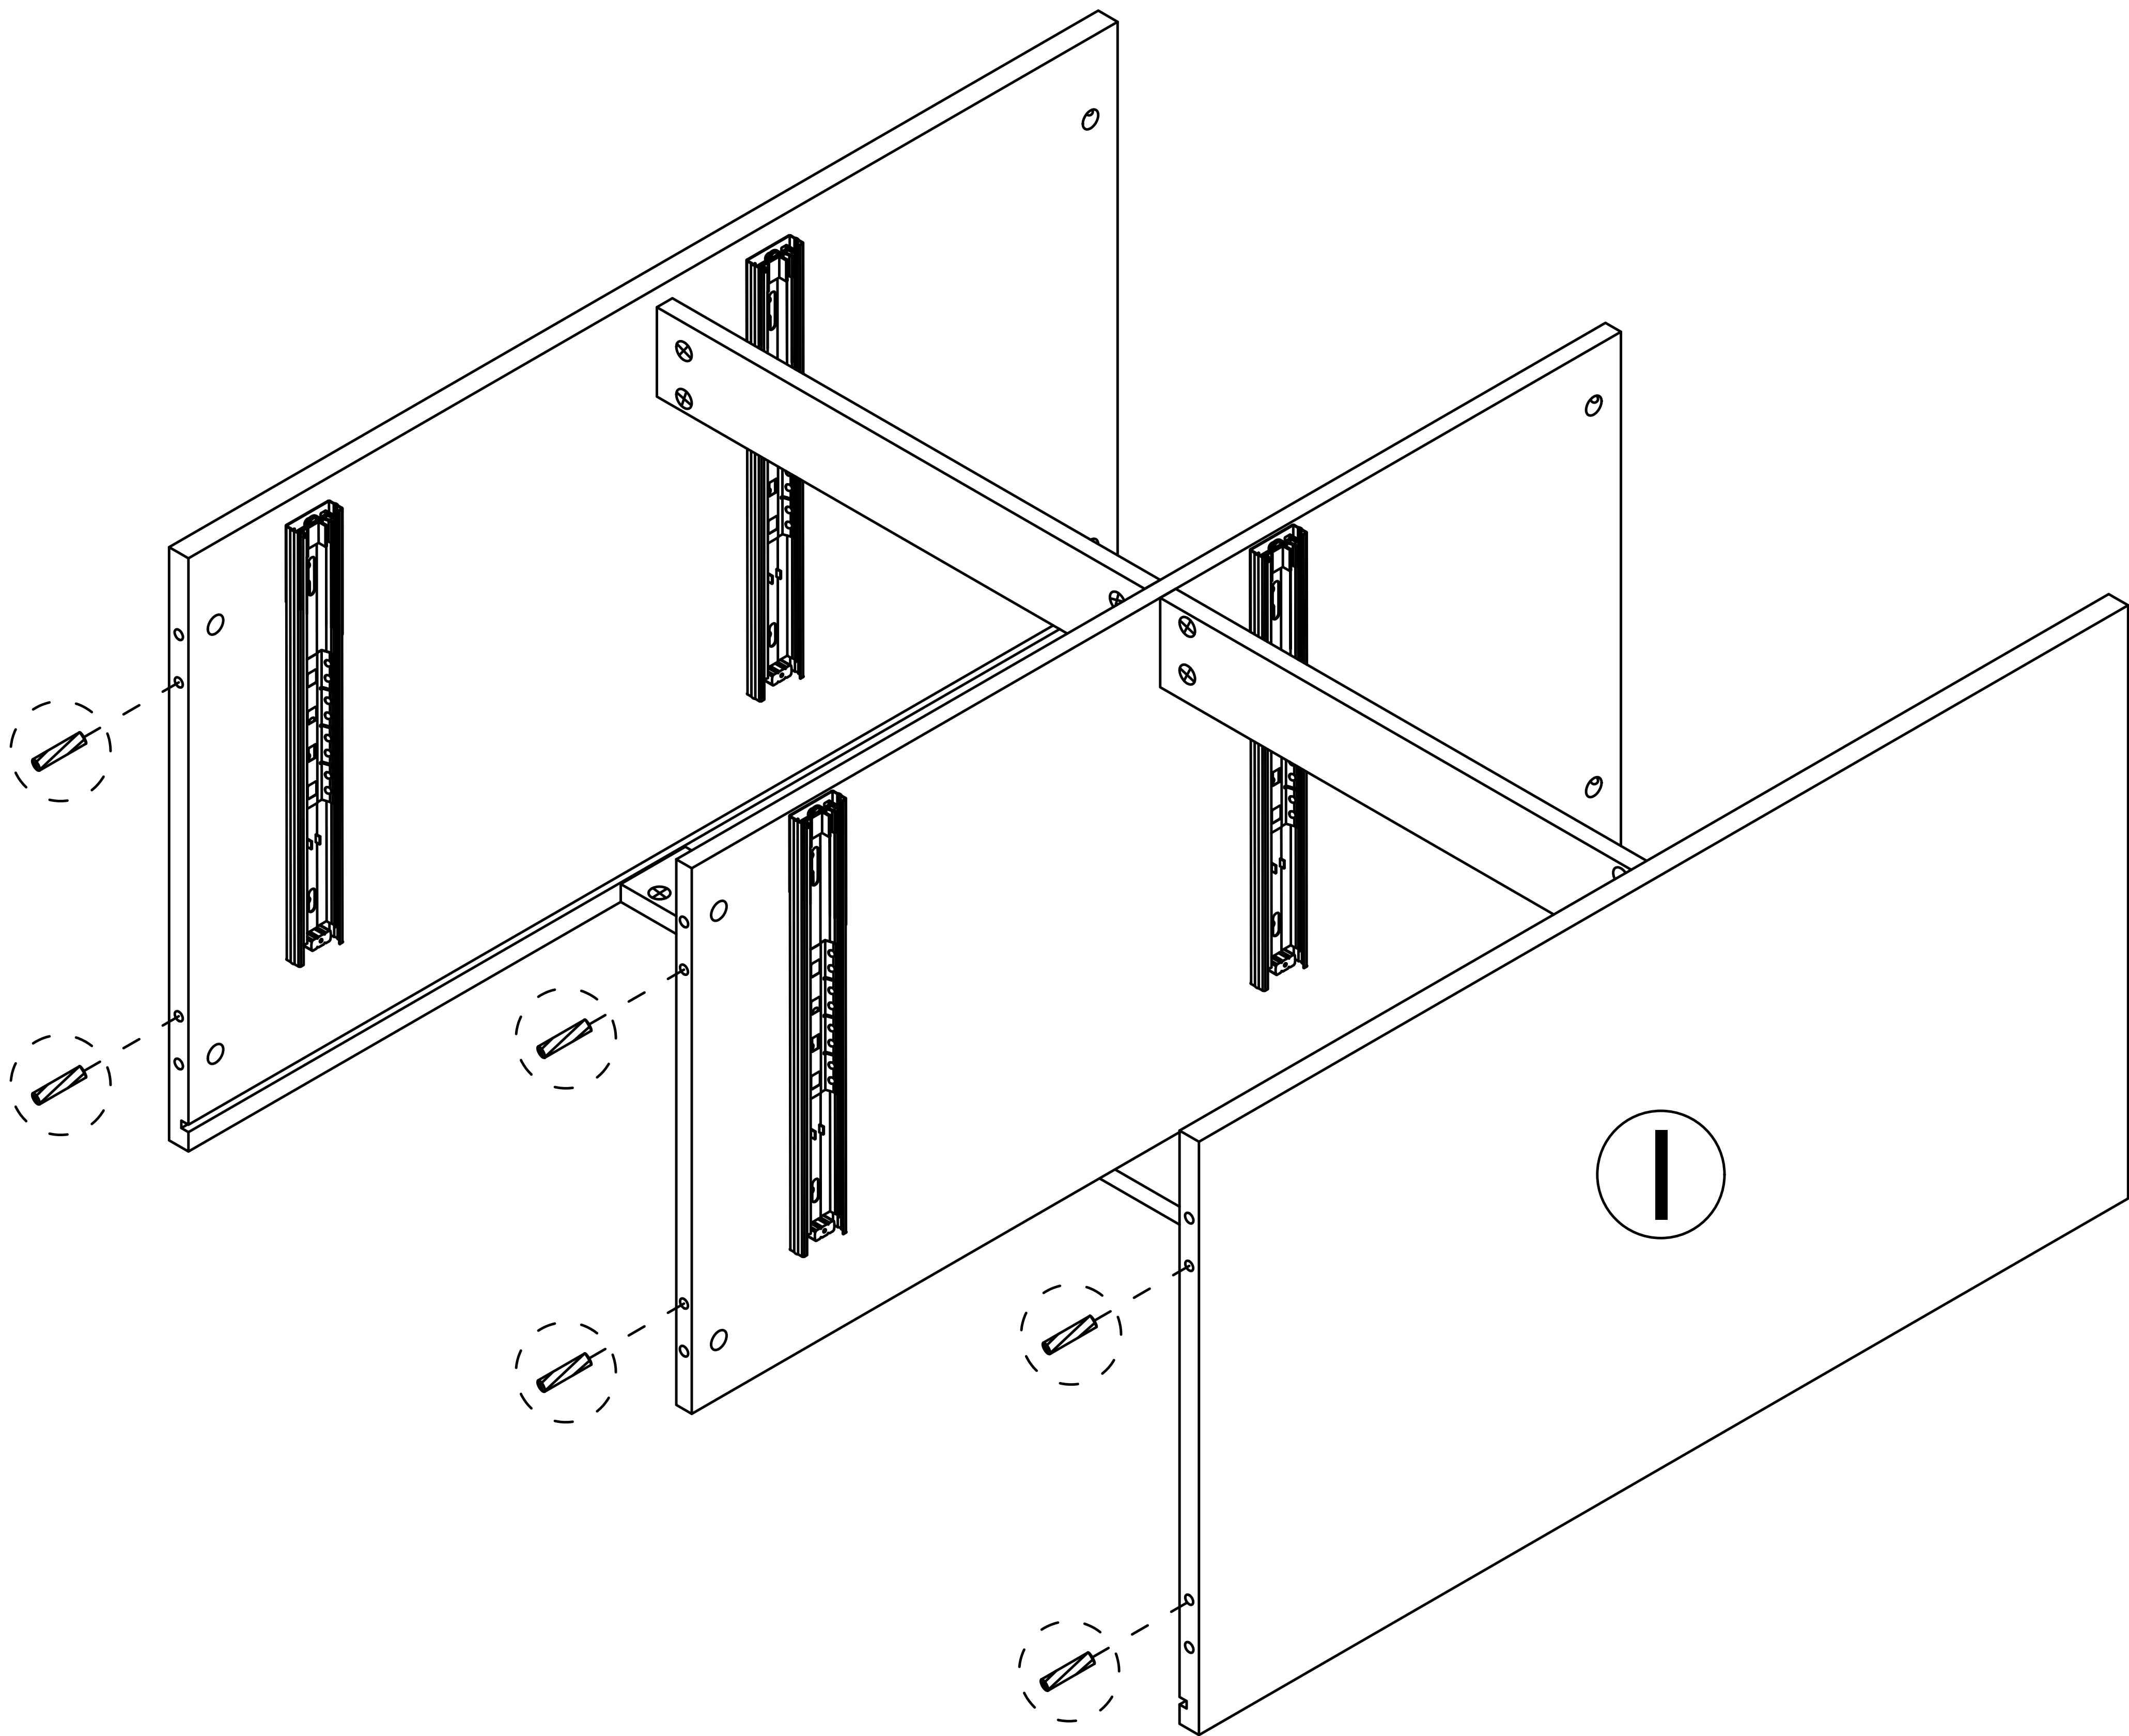


Step 30

2

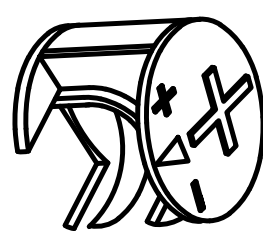


x6

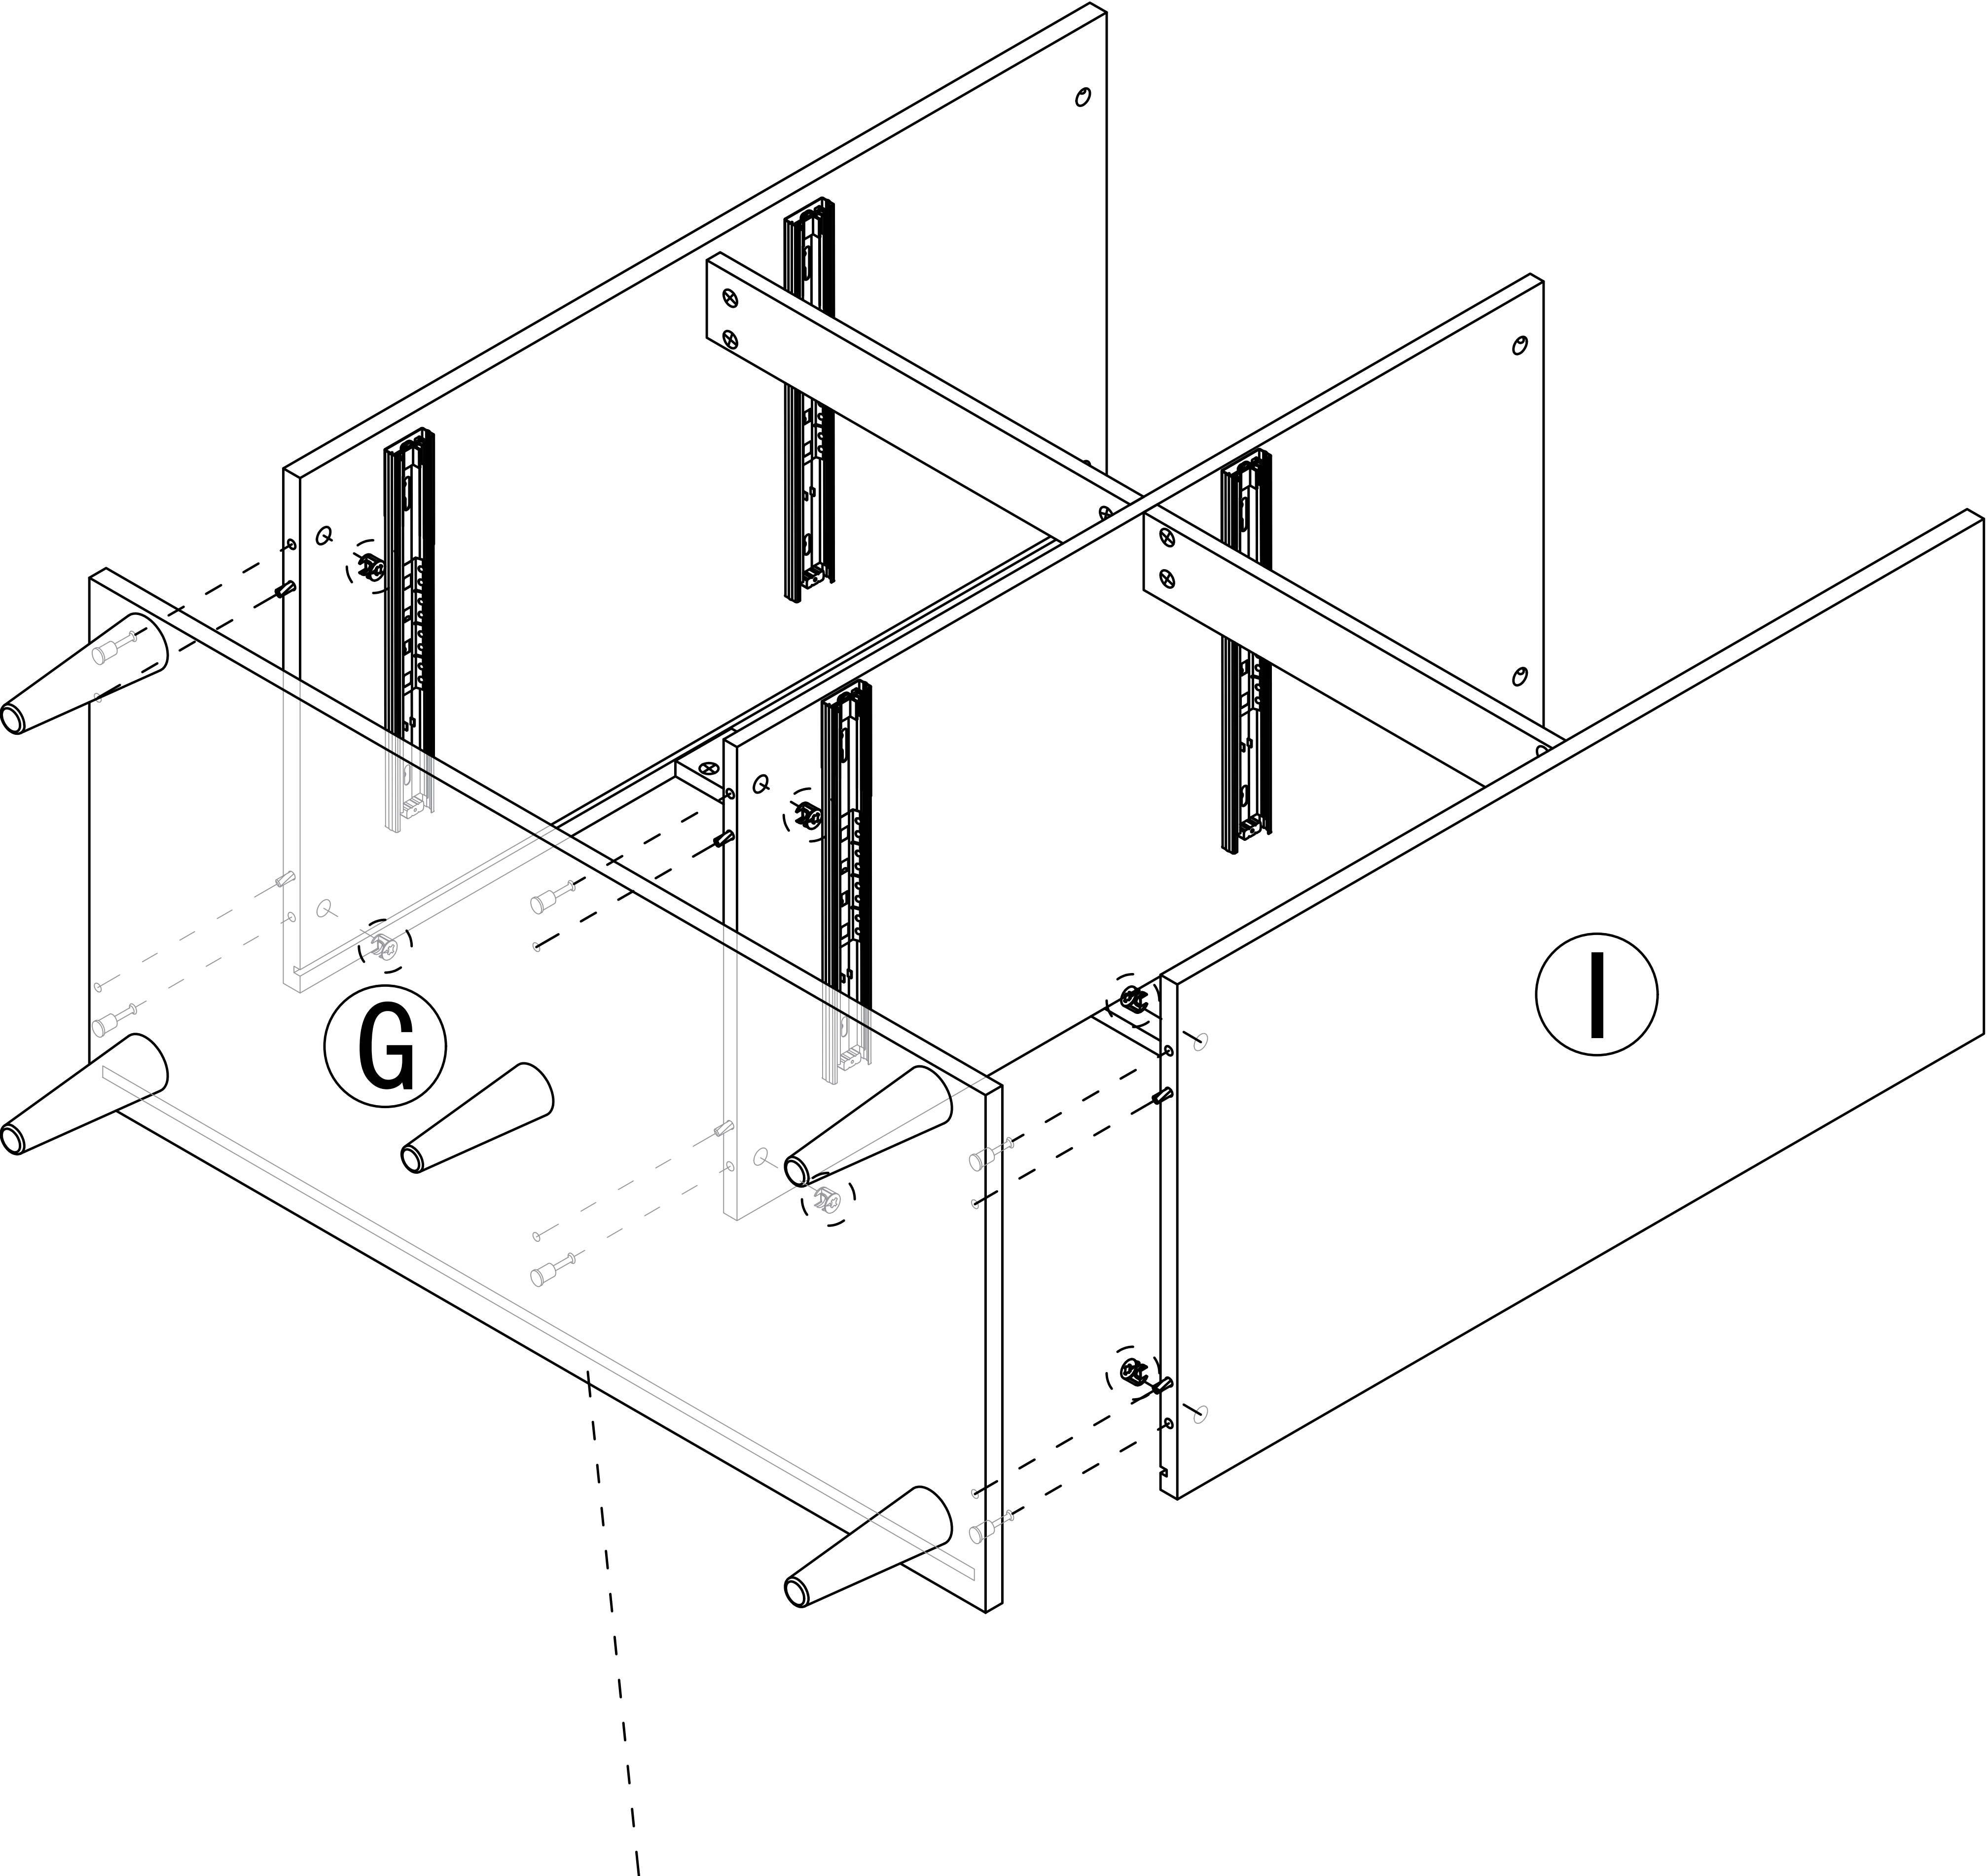



When installing the G board, pay attention to align the slot.

Step 31



3  x6

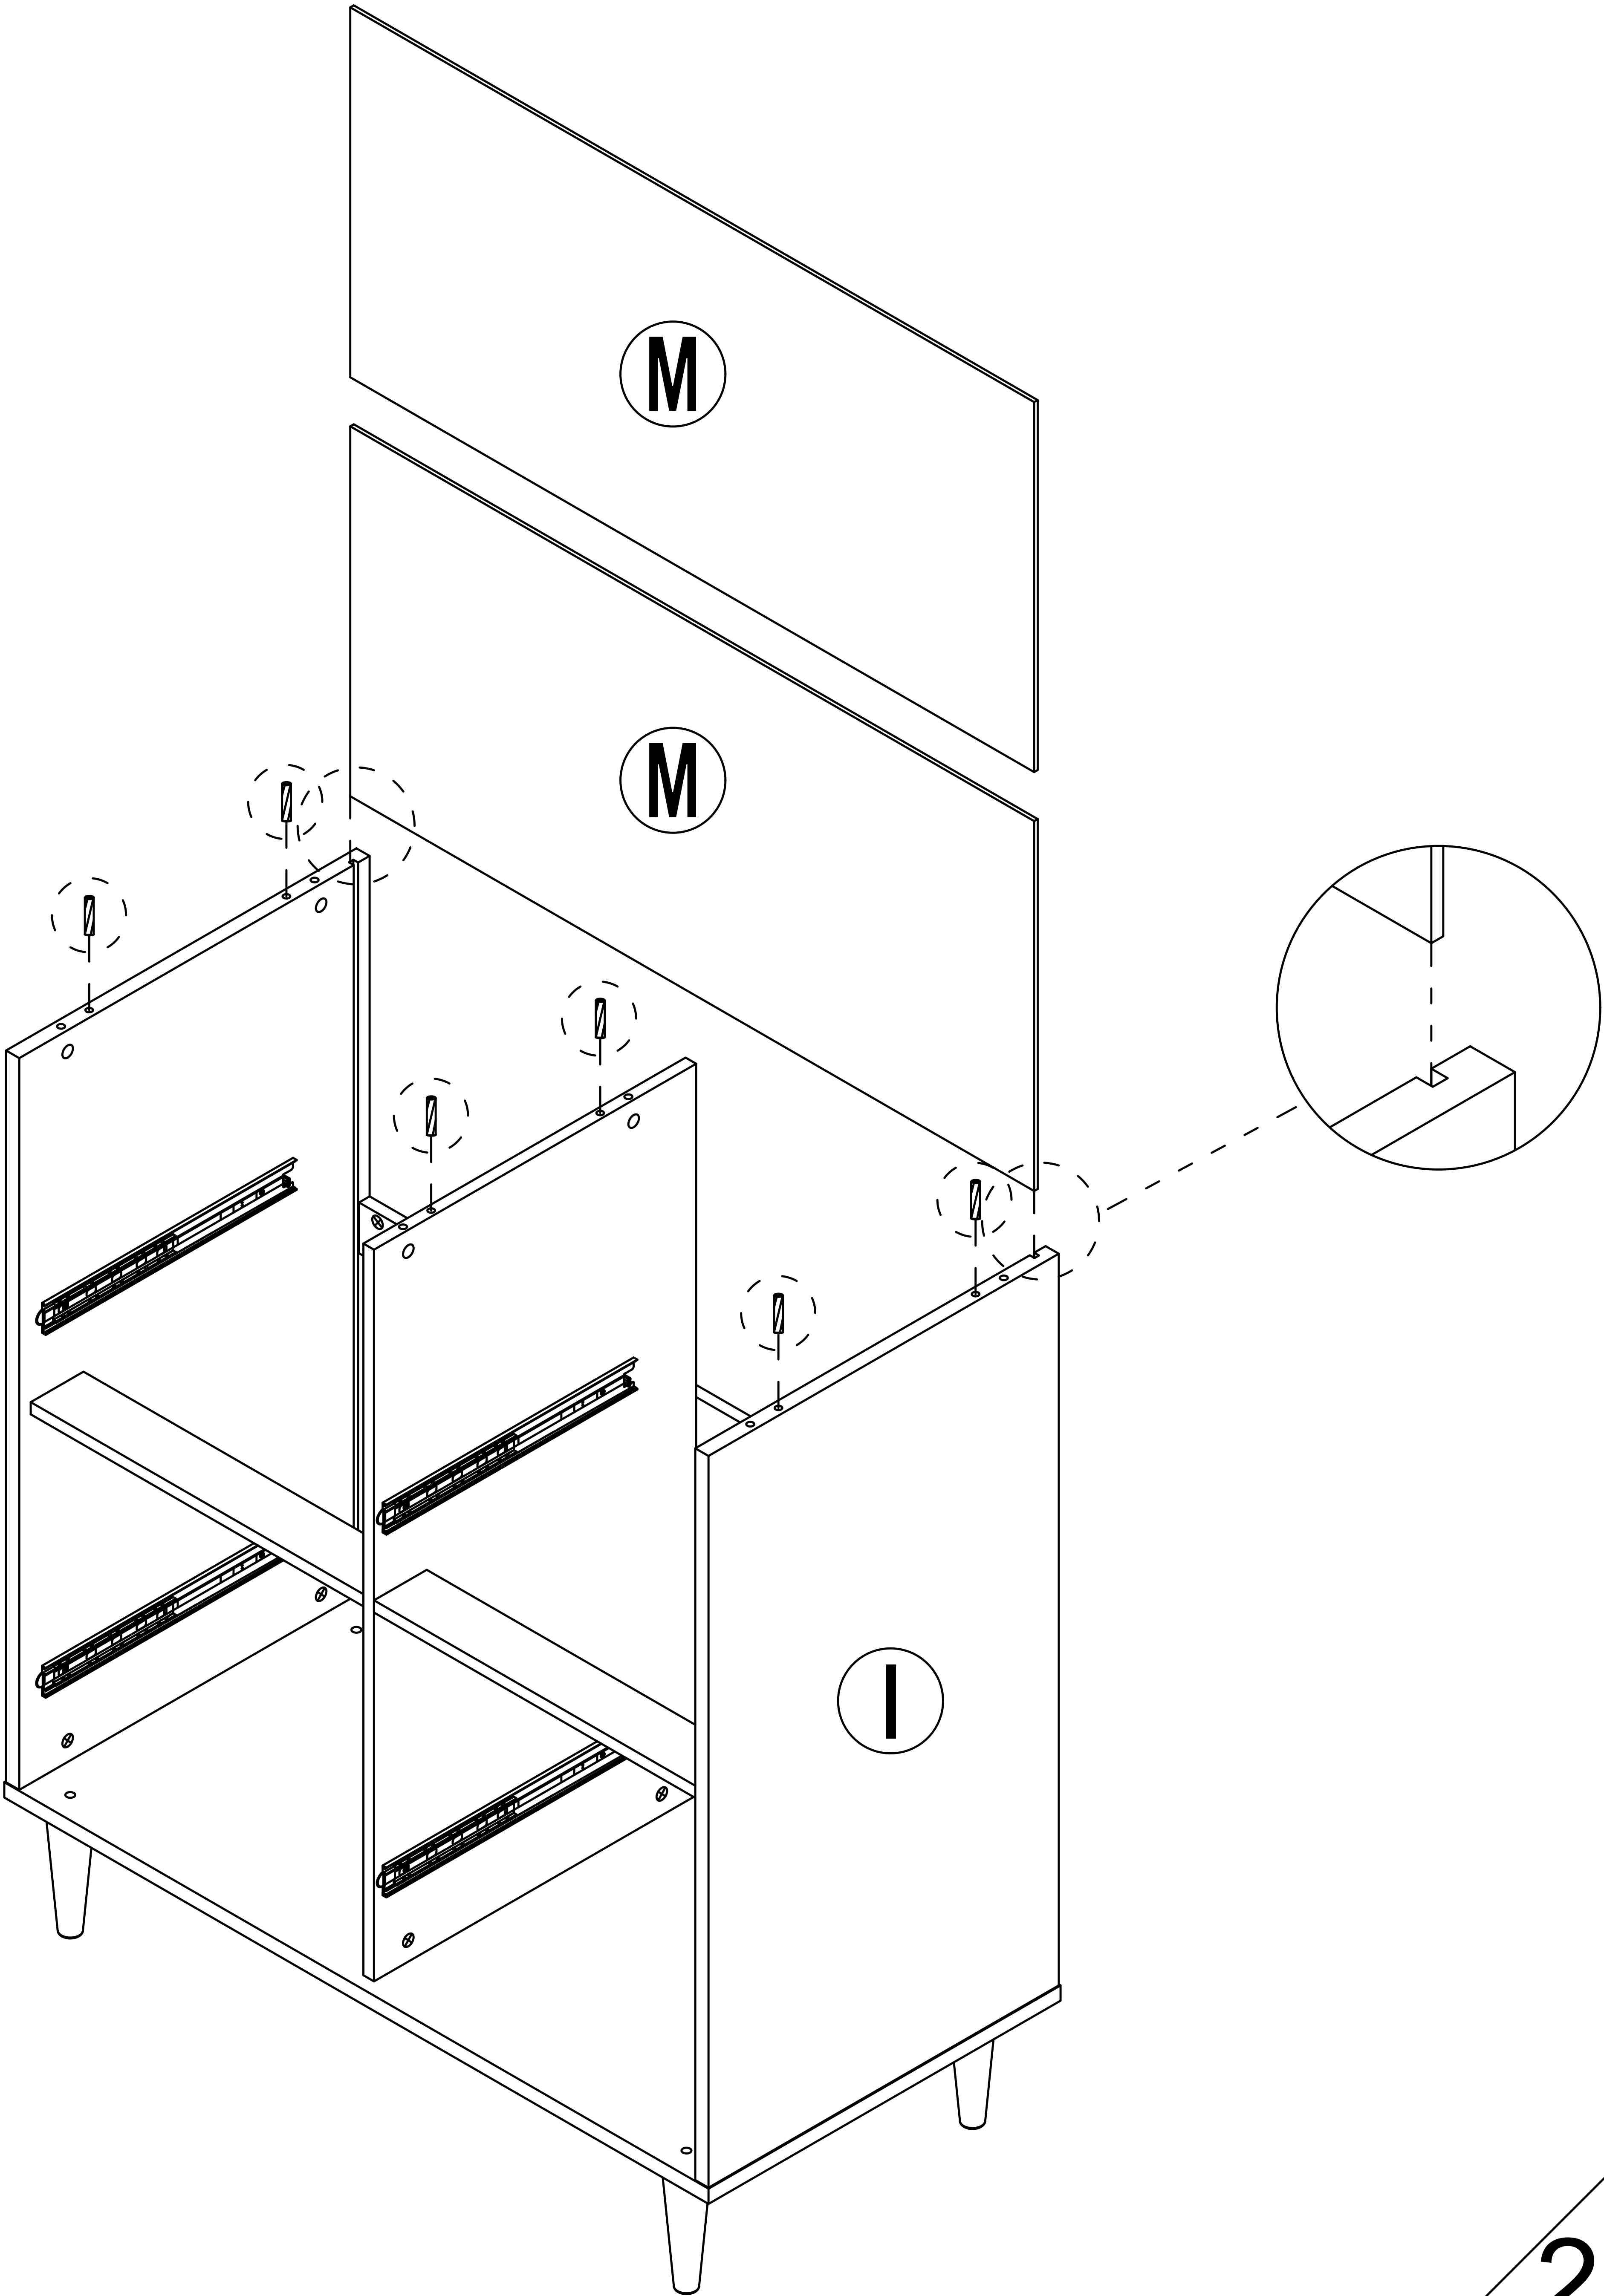


Step 32

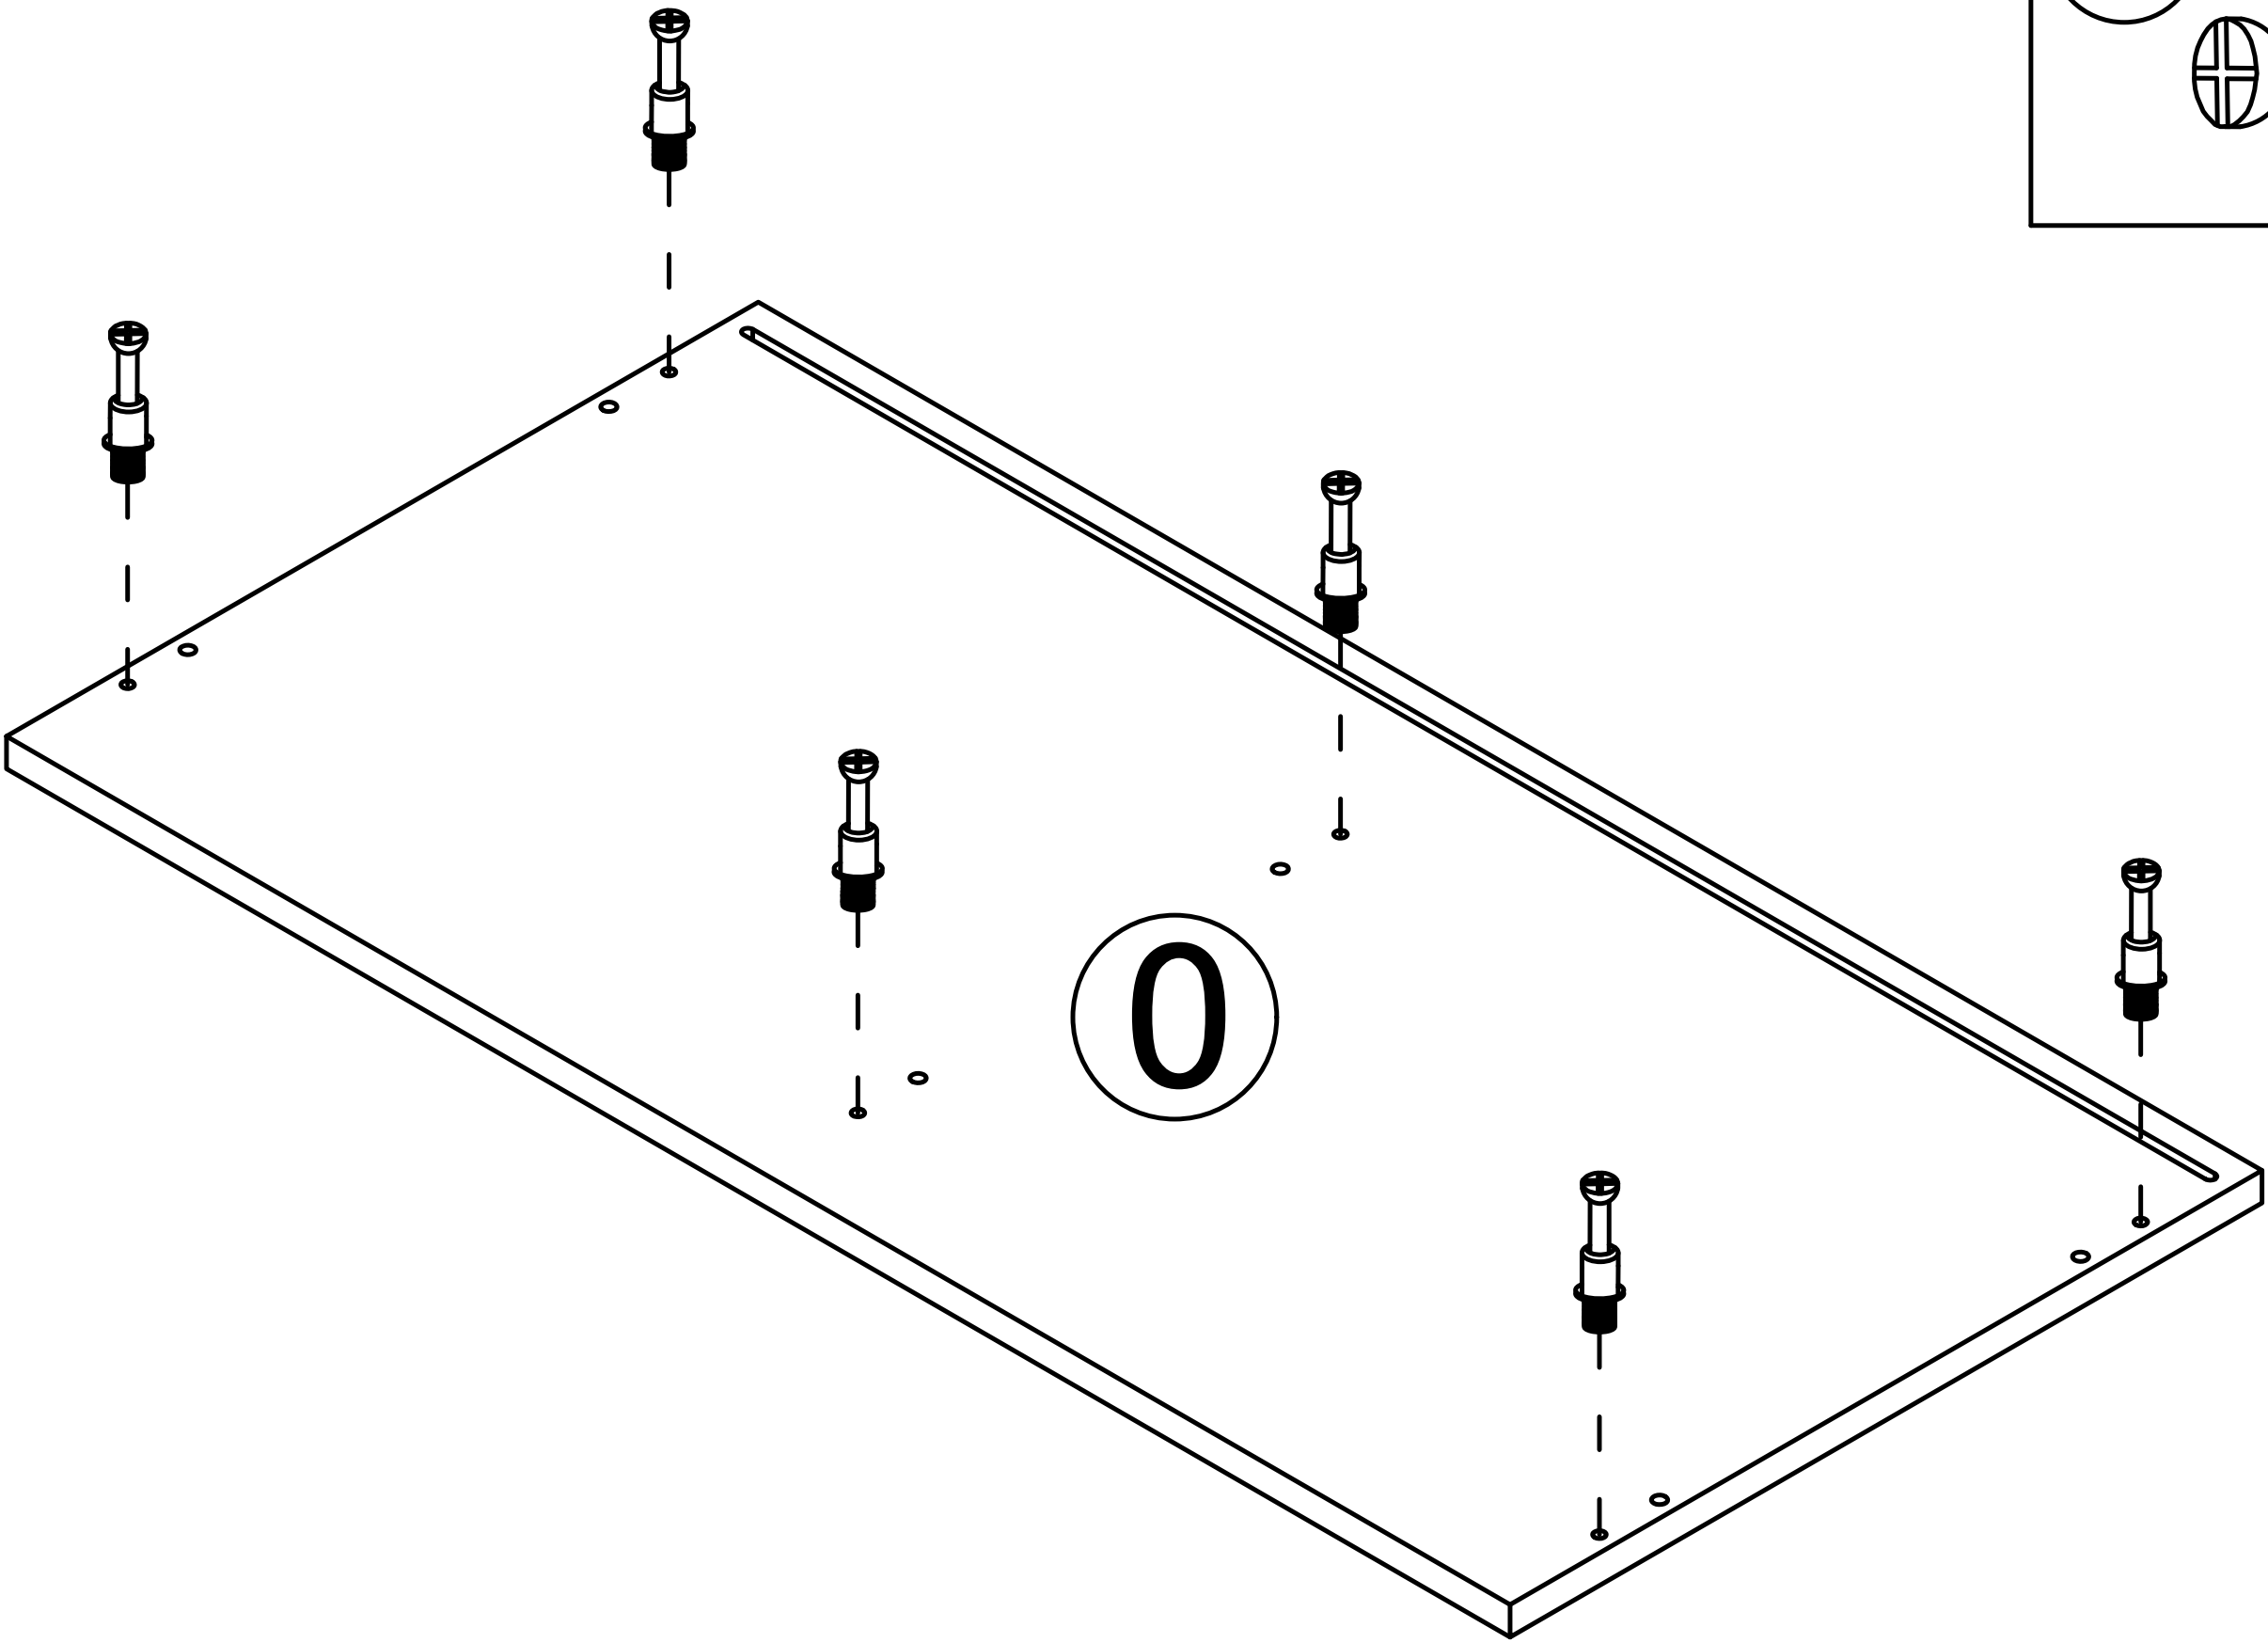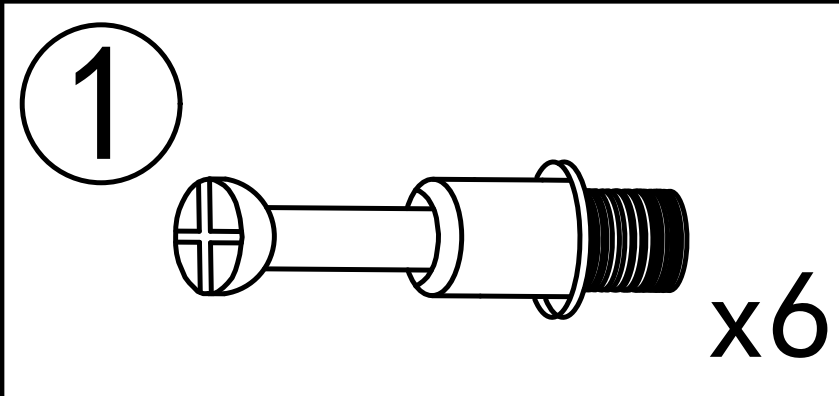

Step 33

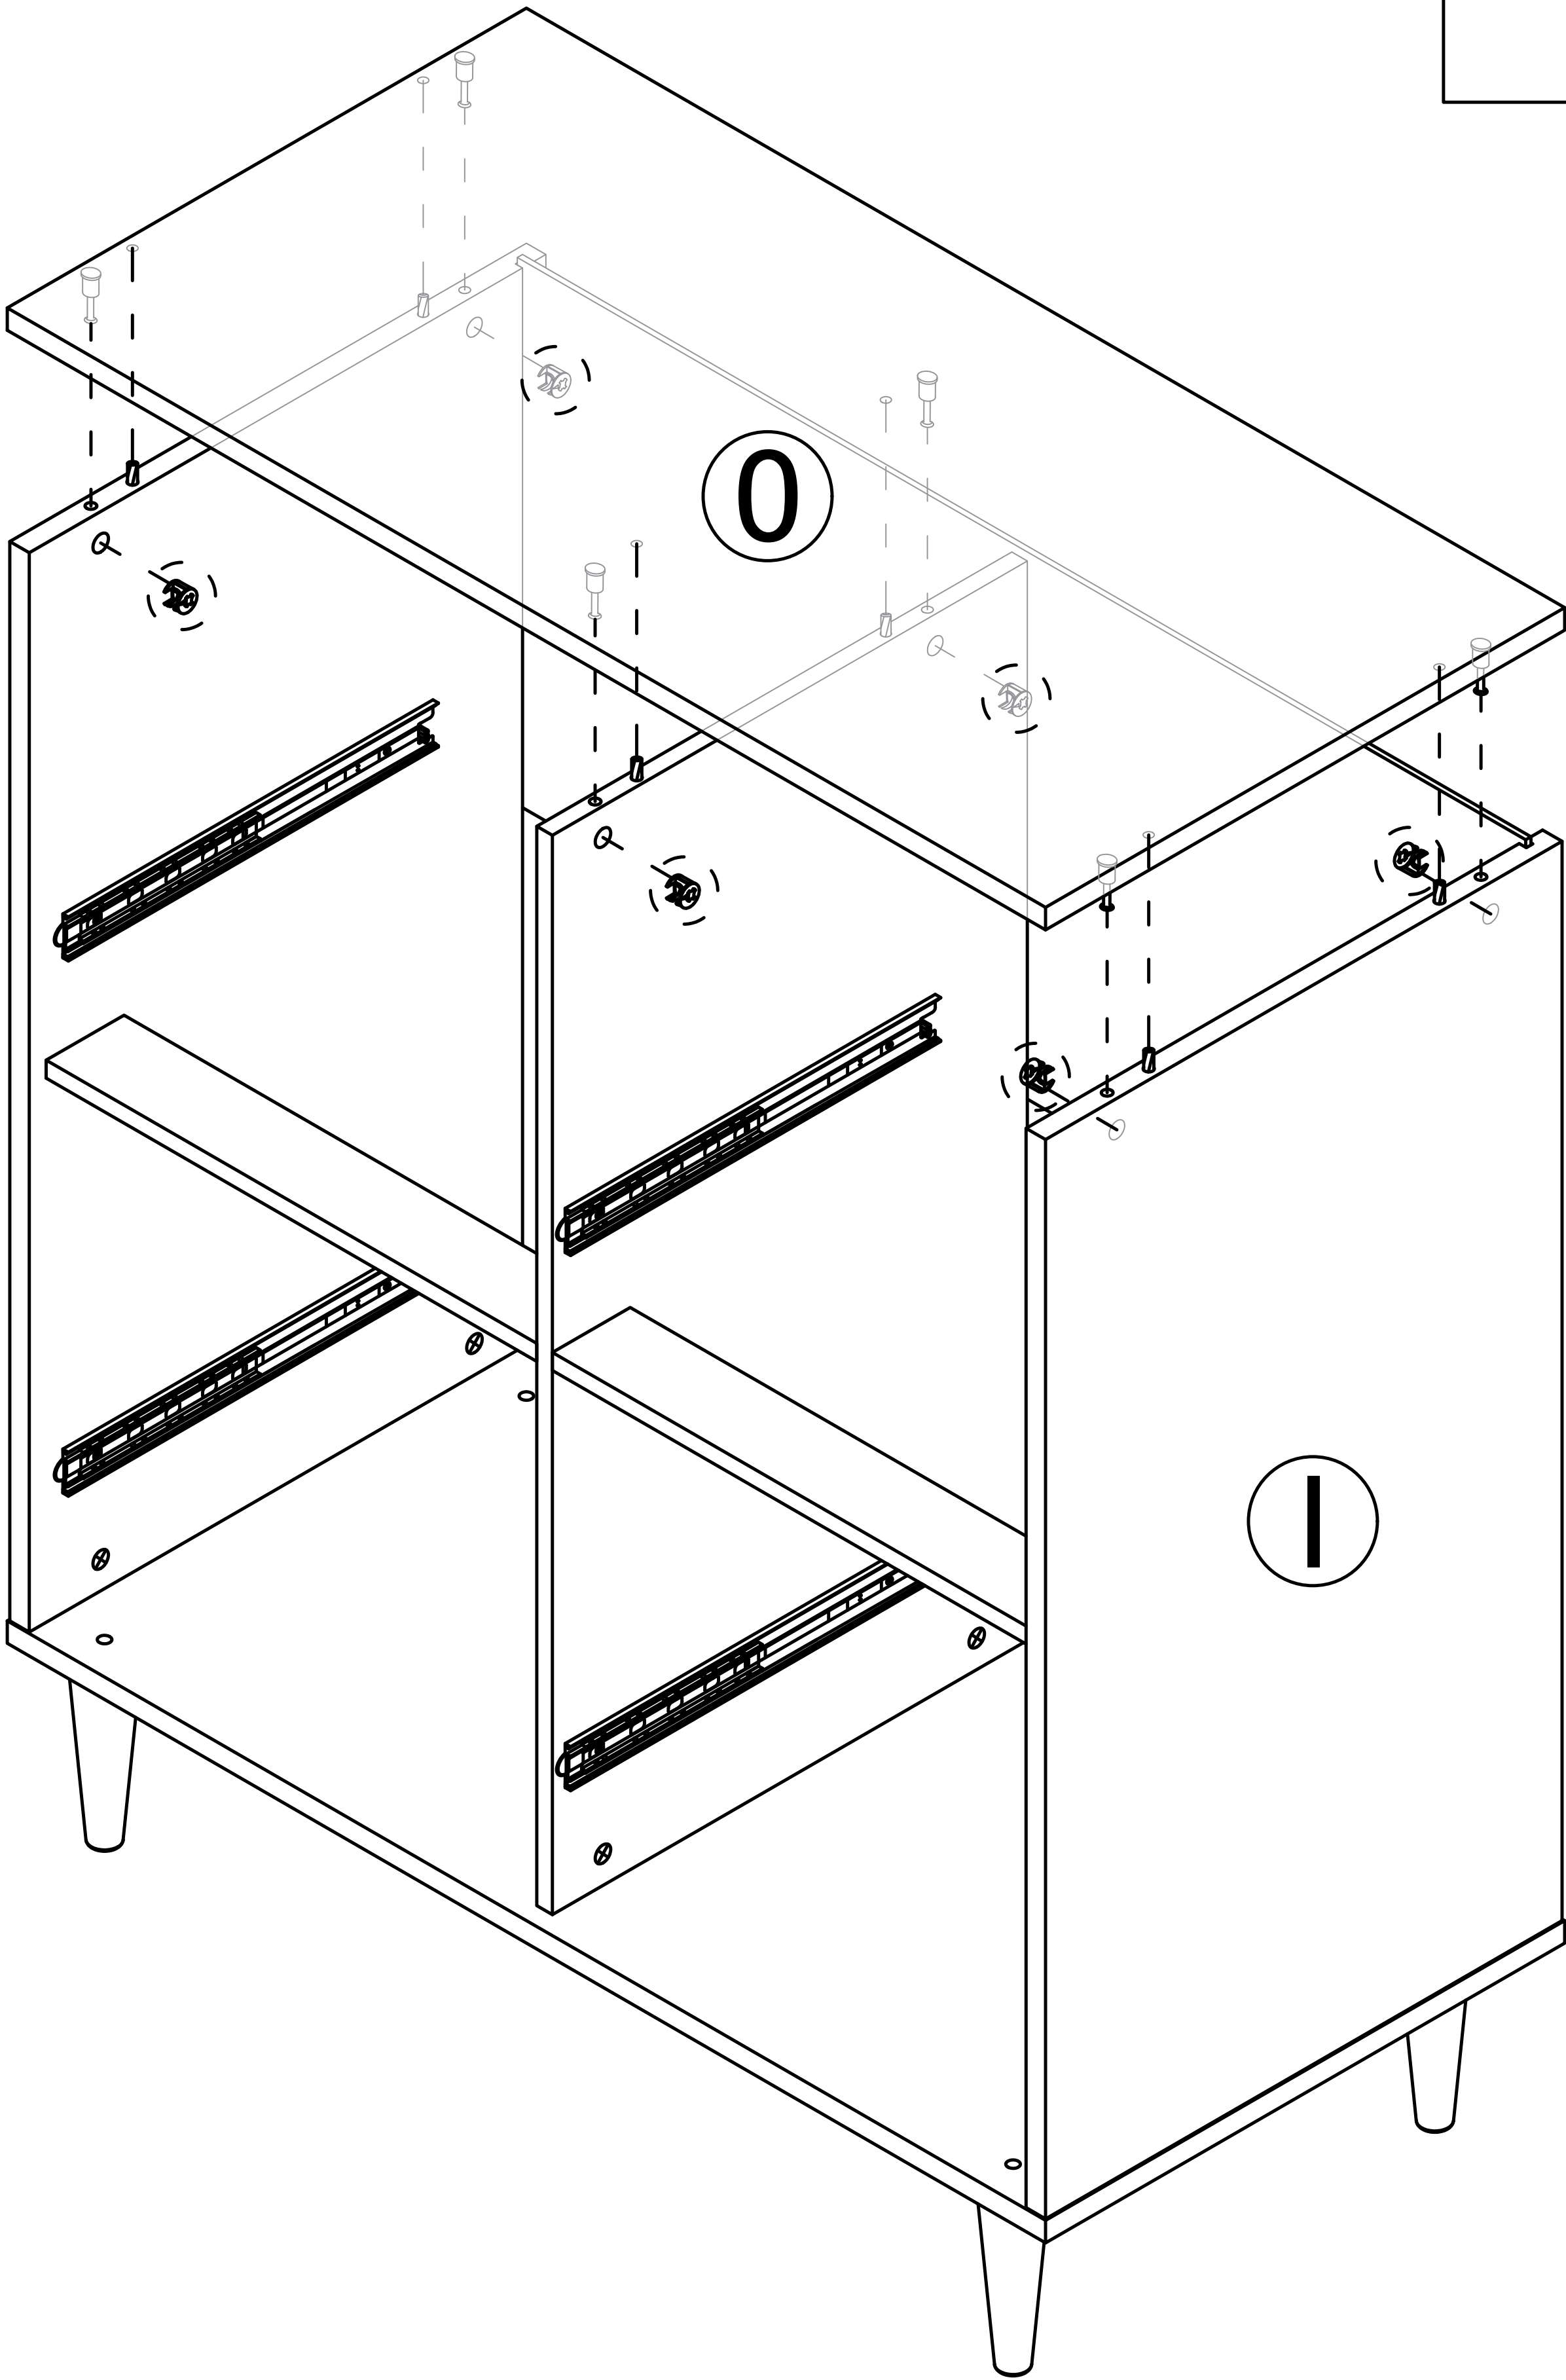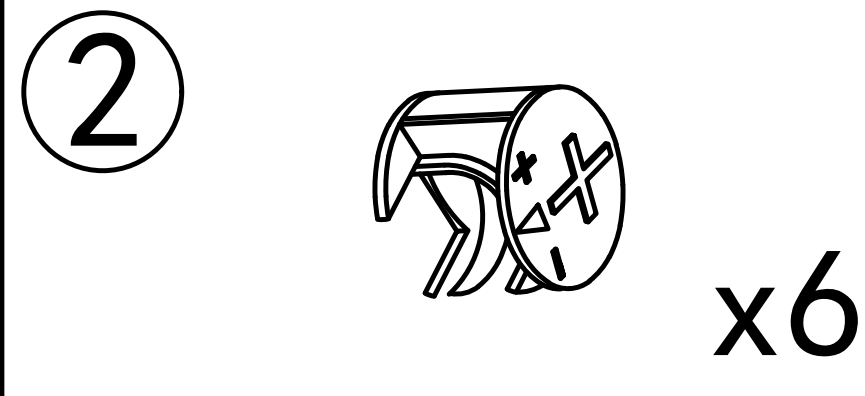


Step 34

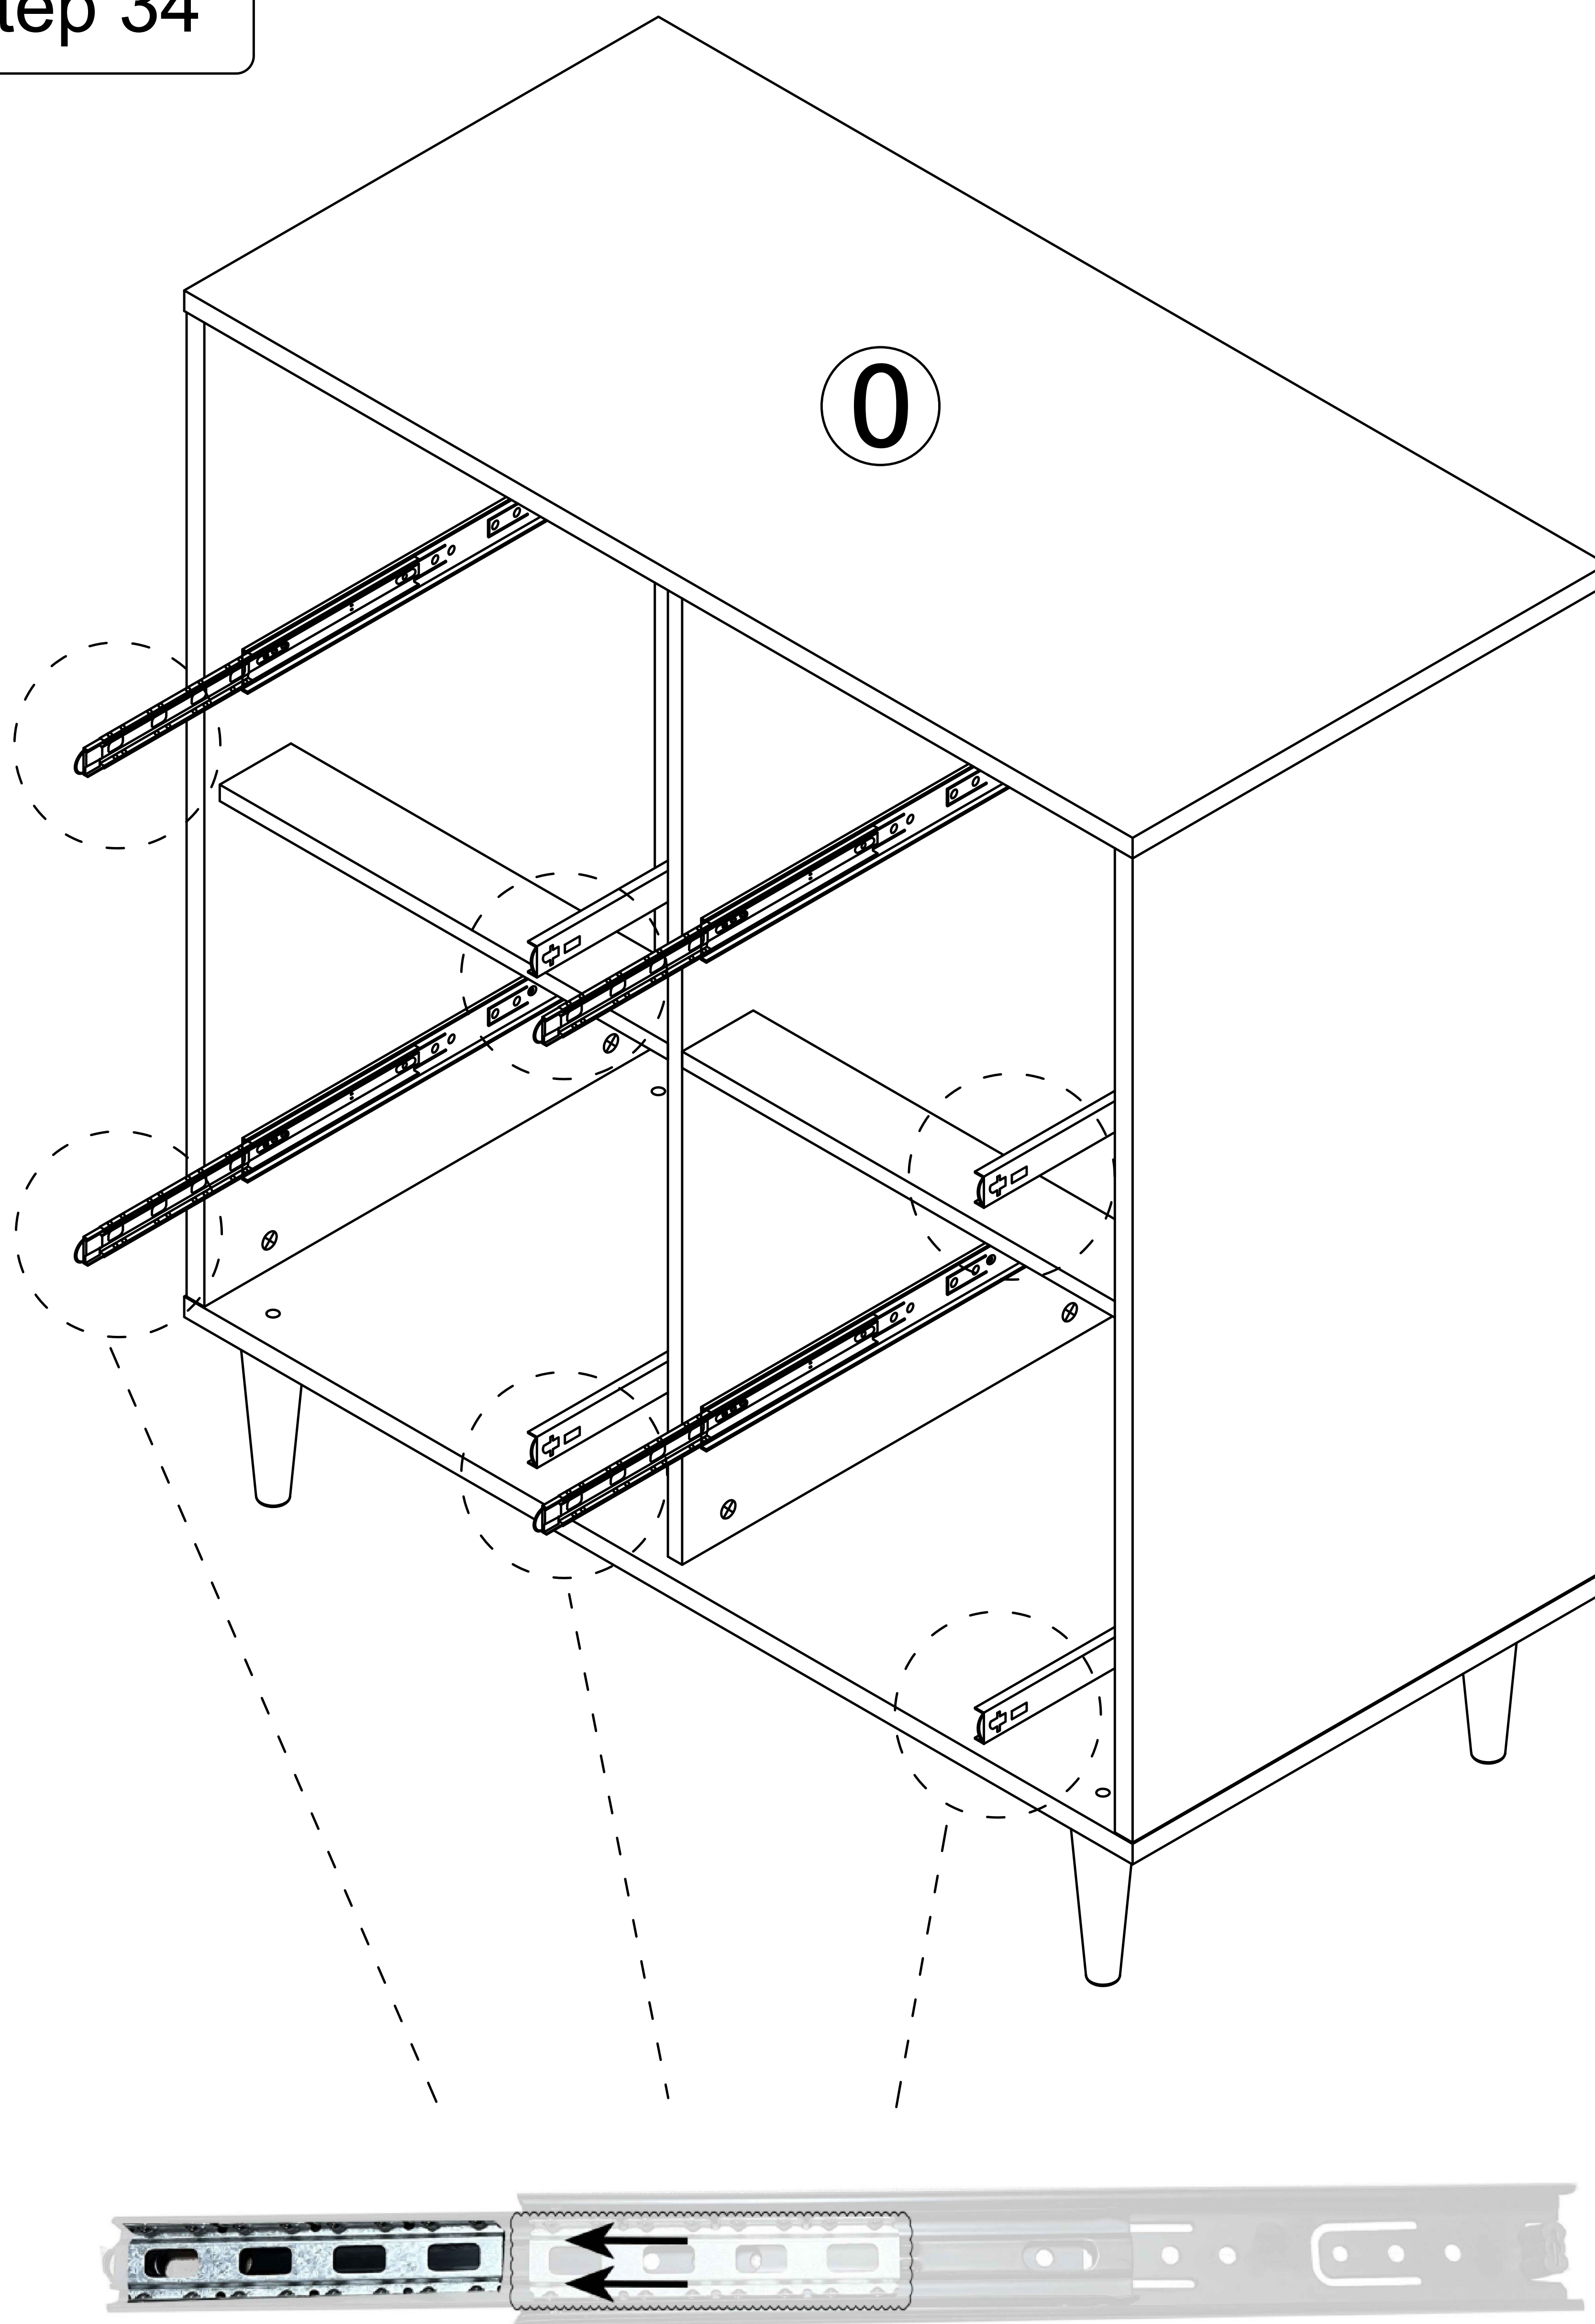


As shown, When installing the drawer,
pull the guide rail out first, Slide beads are also pulled out.

Step 35

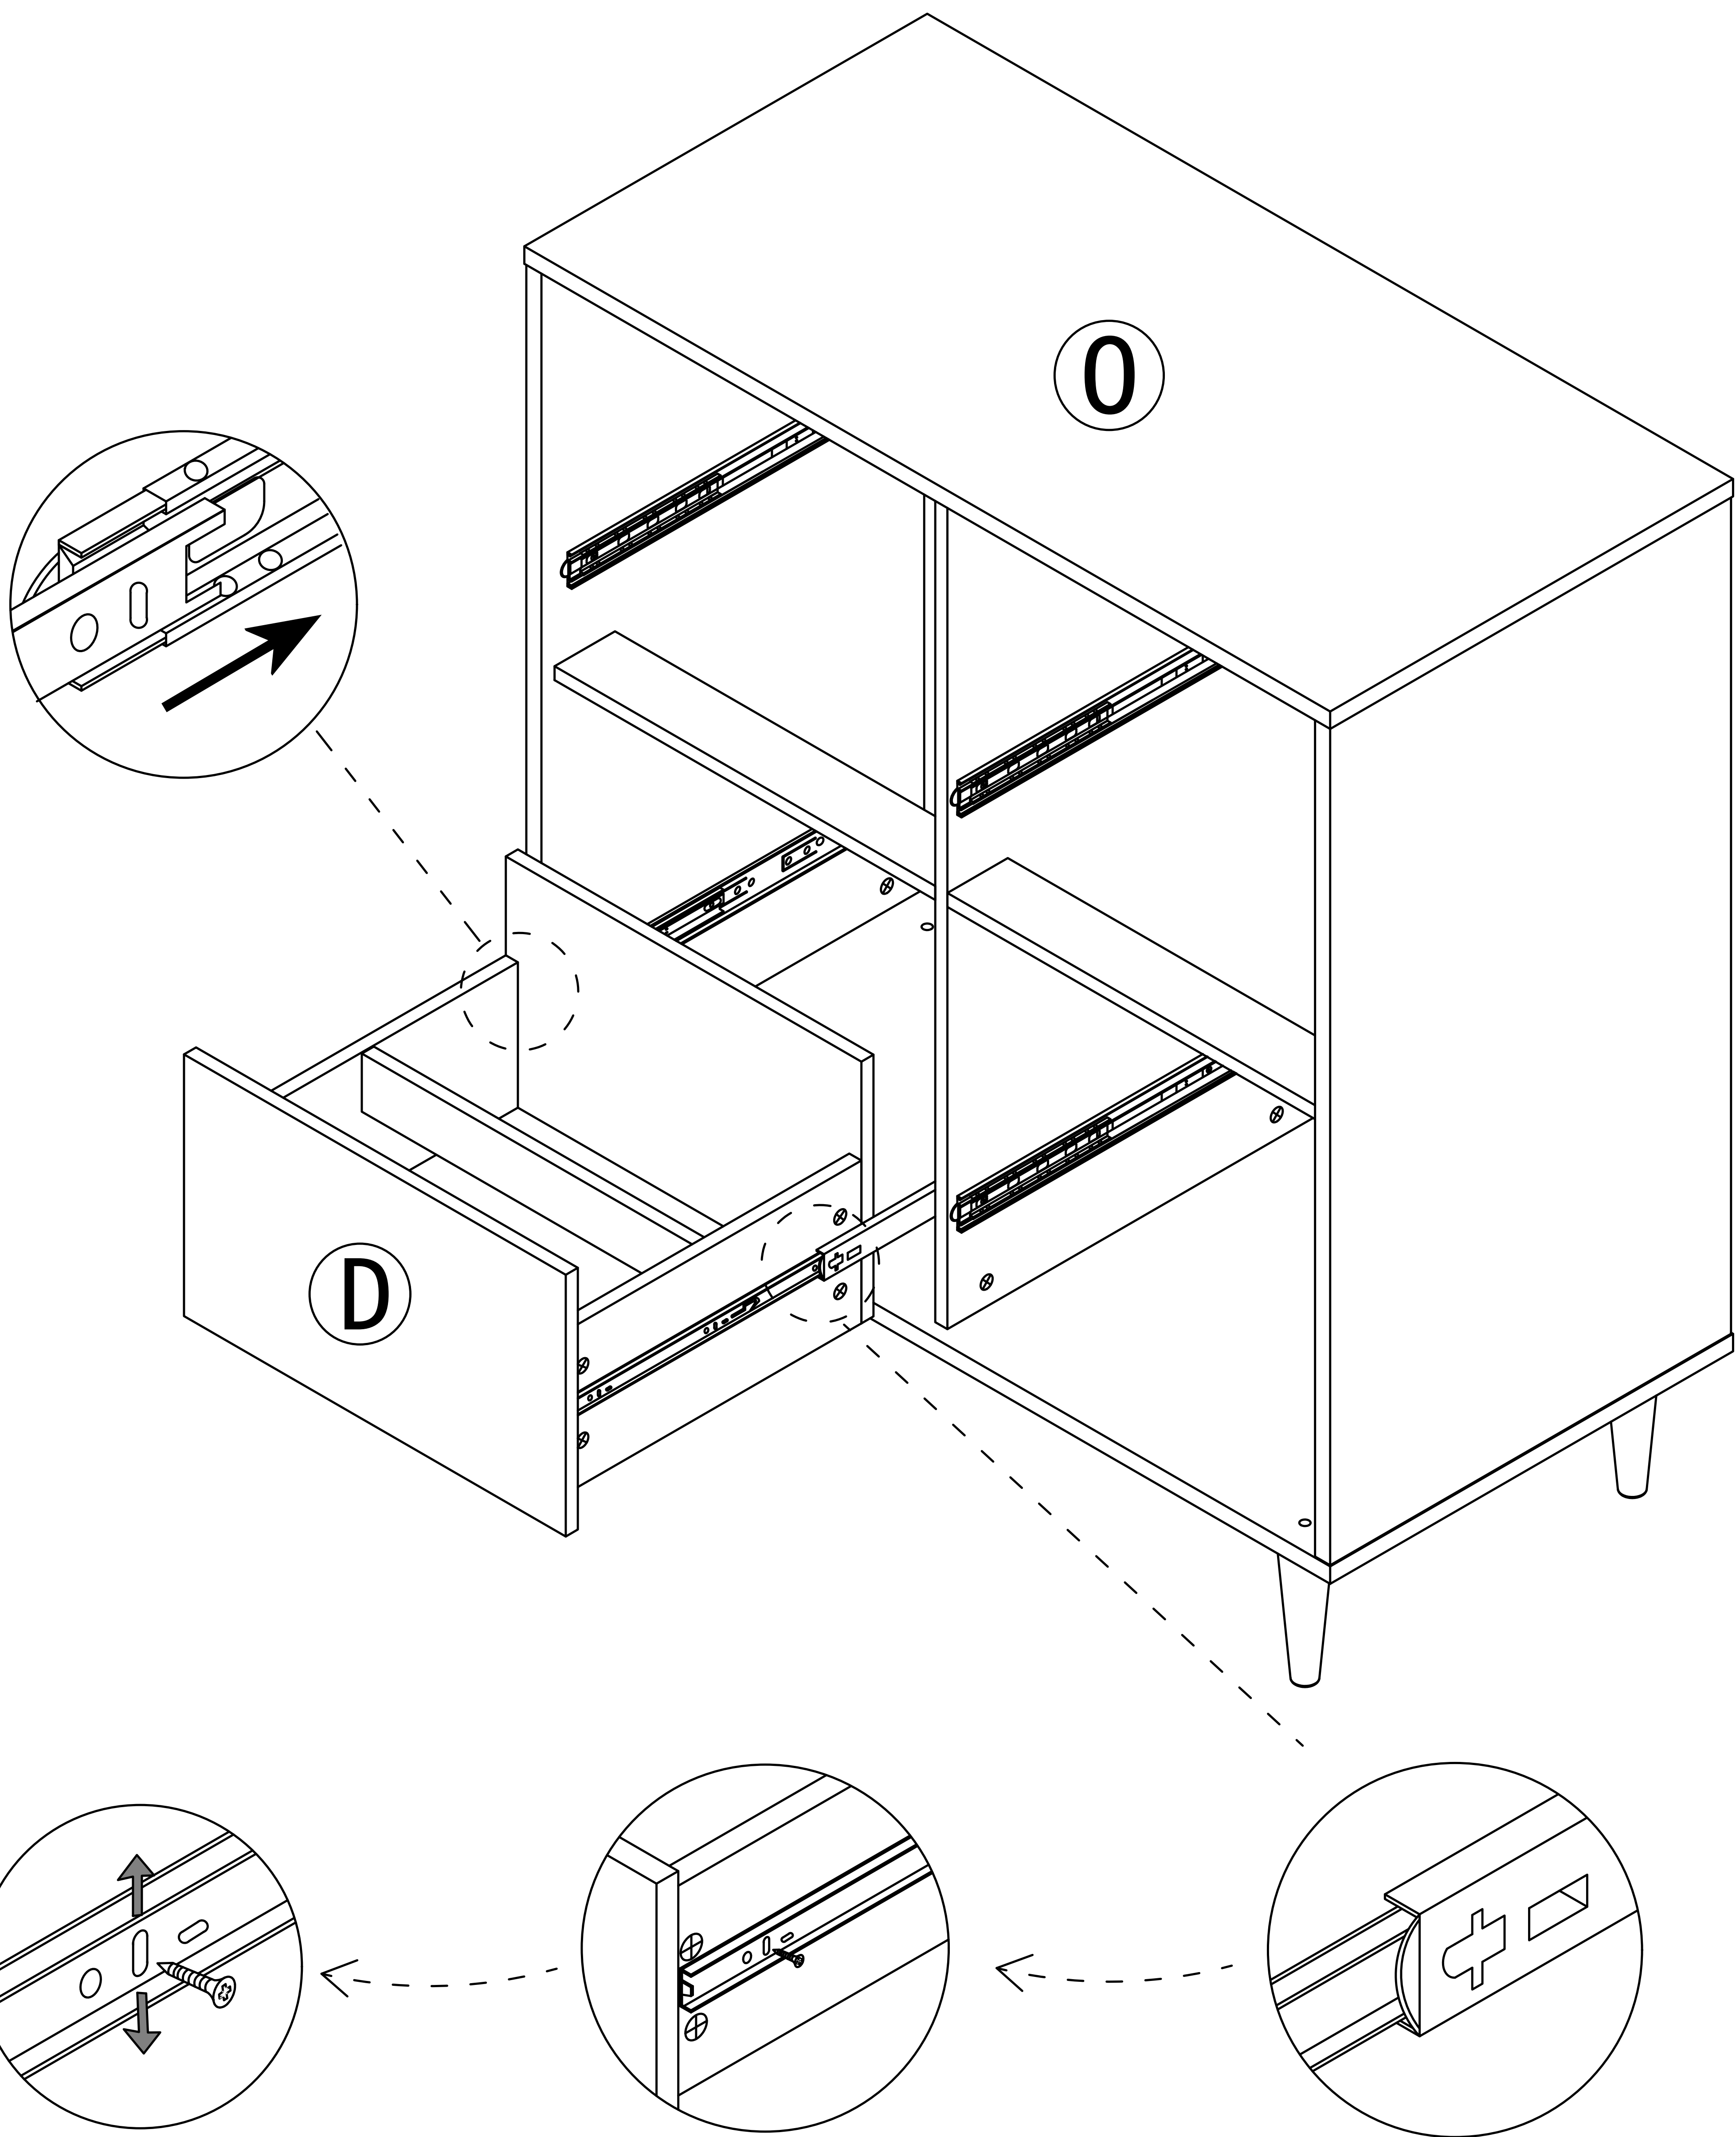

If a large gap is found after installing the drawer the slide rail can be moved up and down to adjust the gap


Step 36

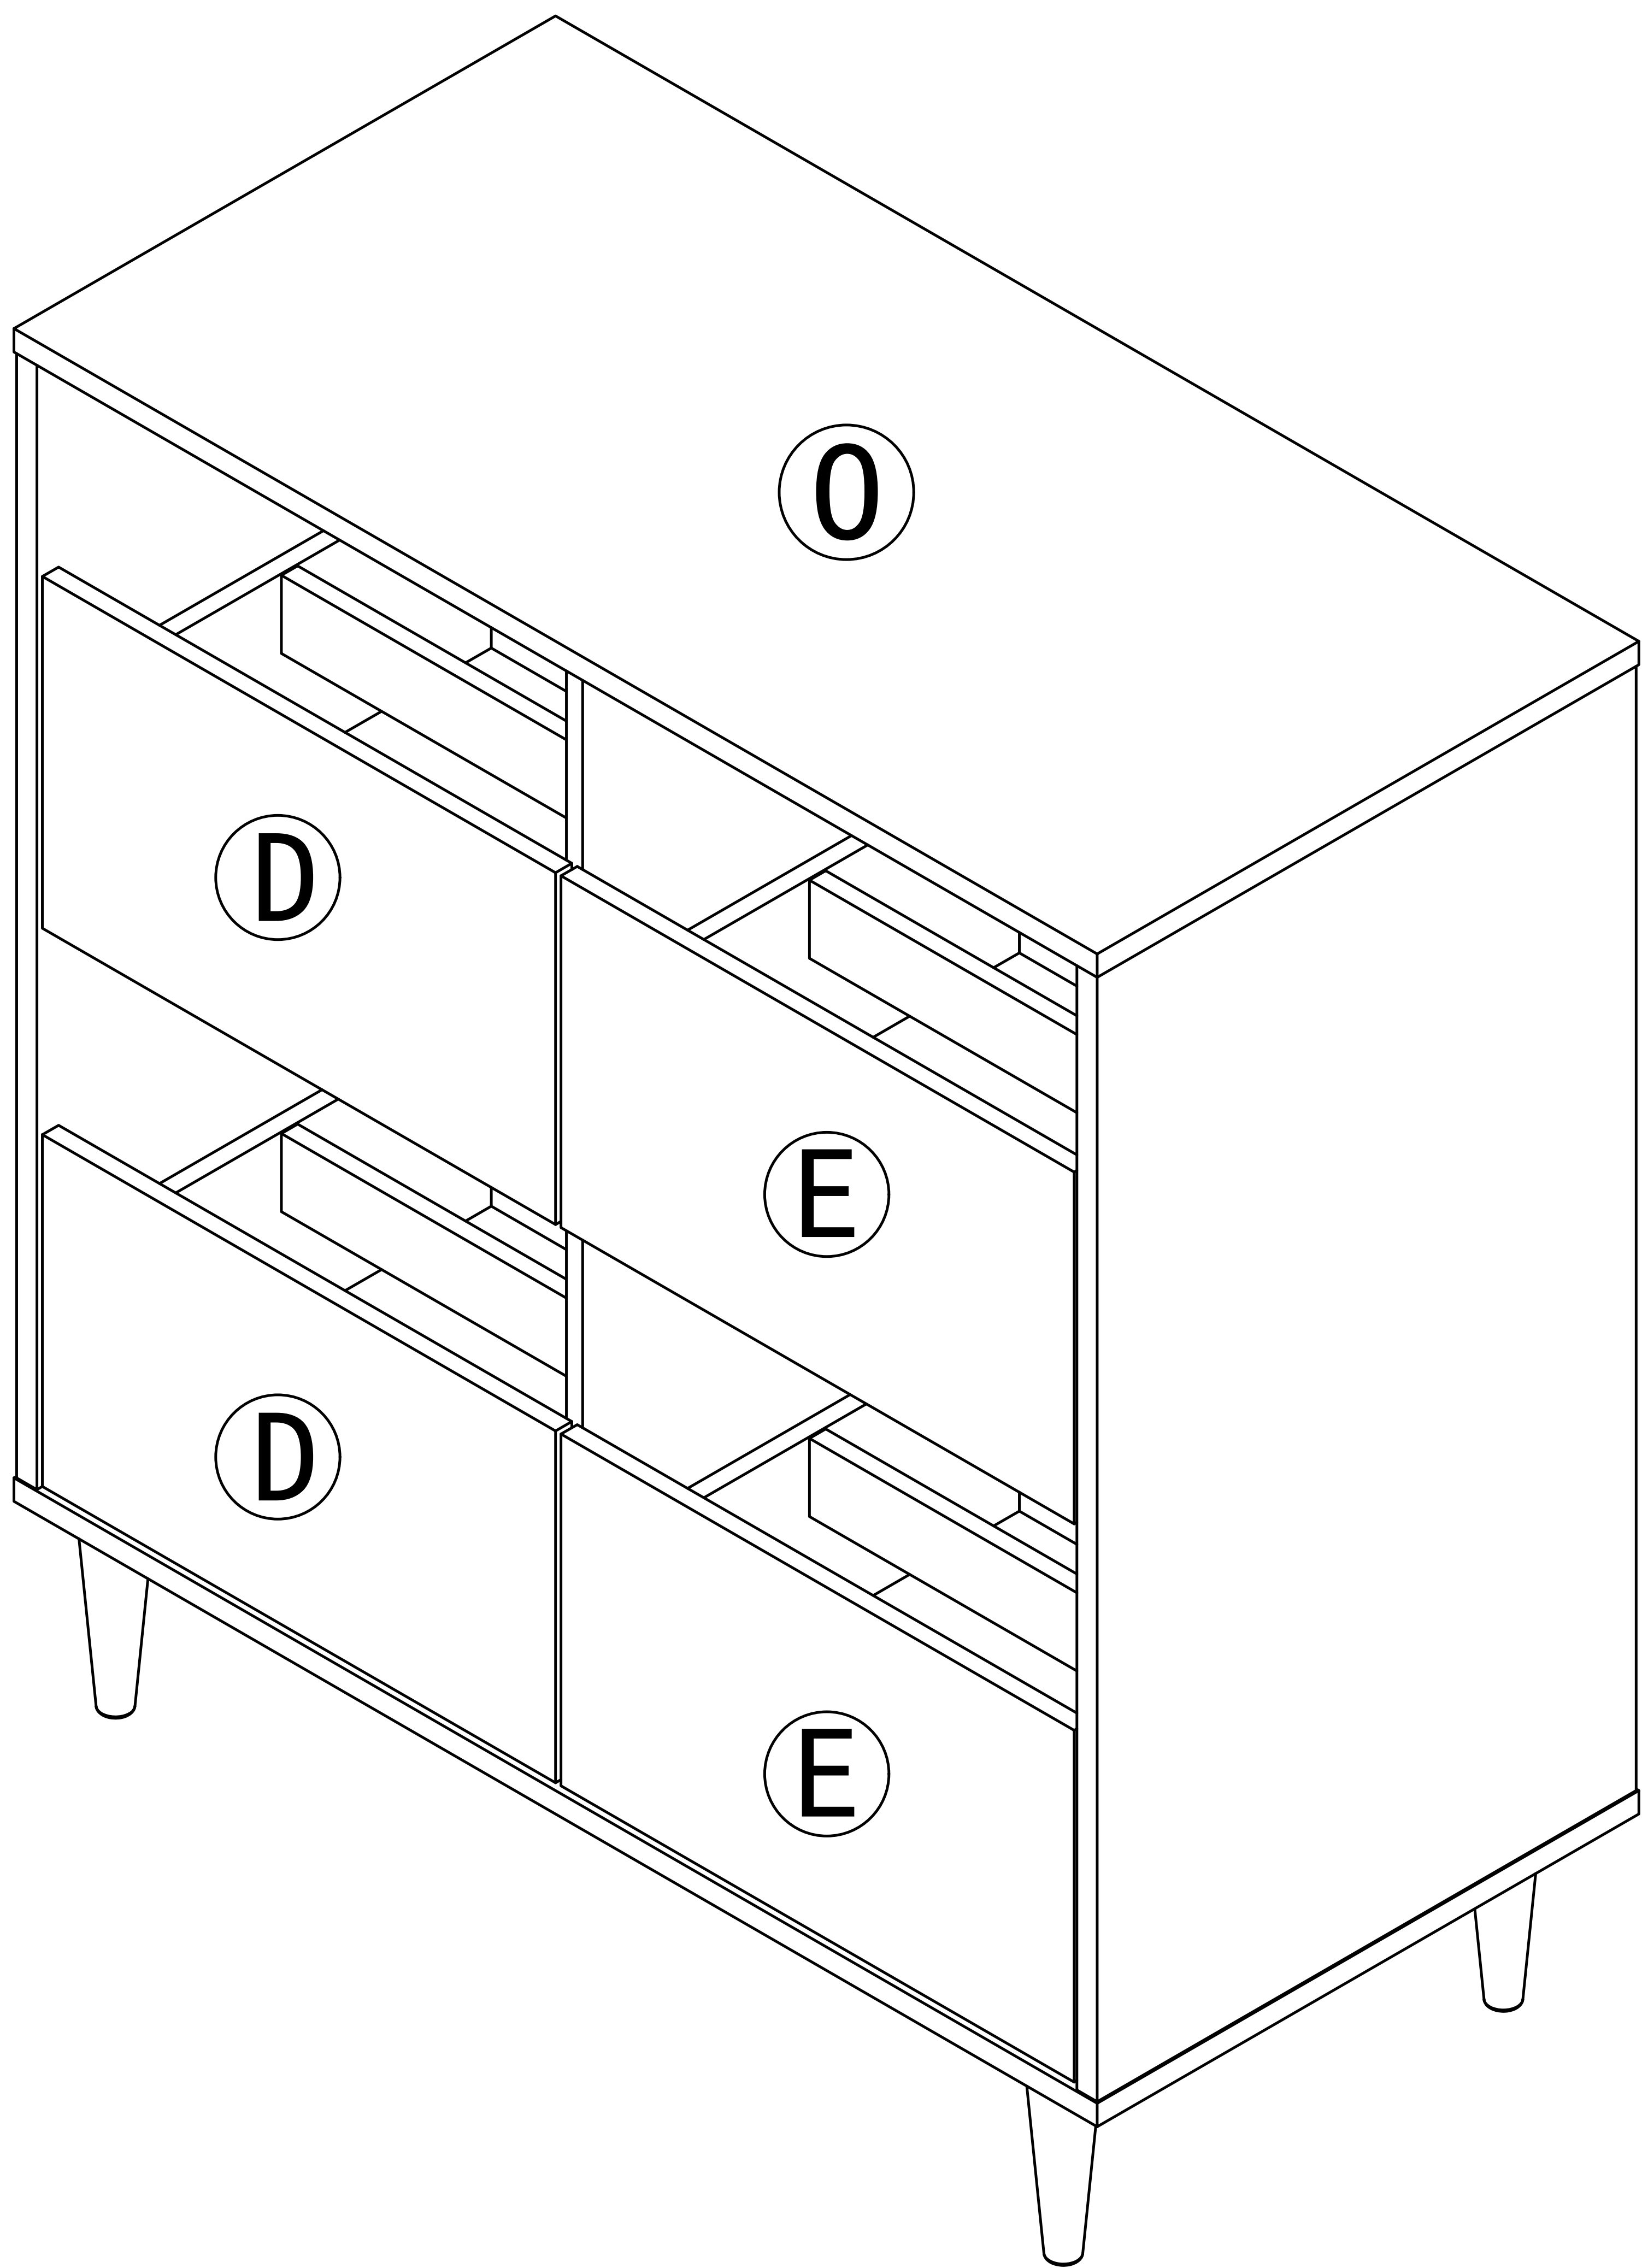


Repeat the drawer installation steps

Step 37

6

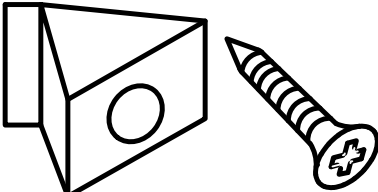


x8

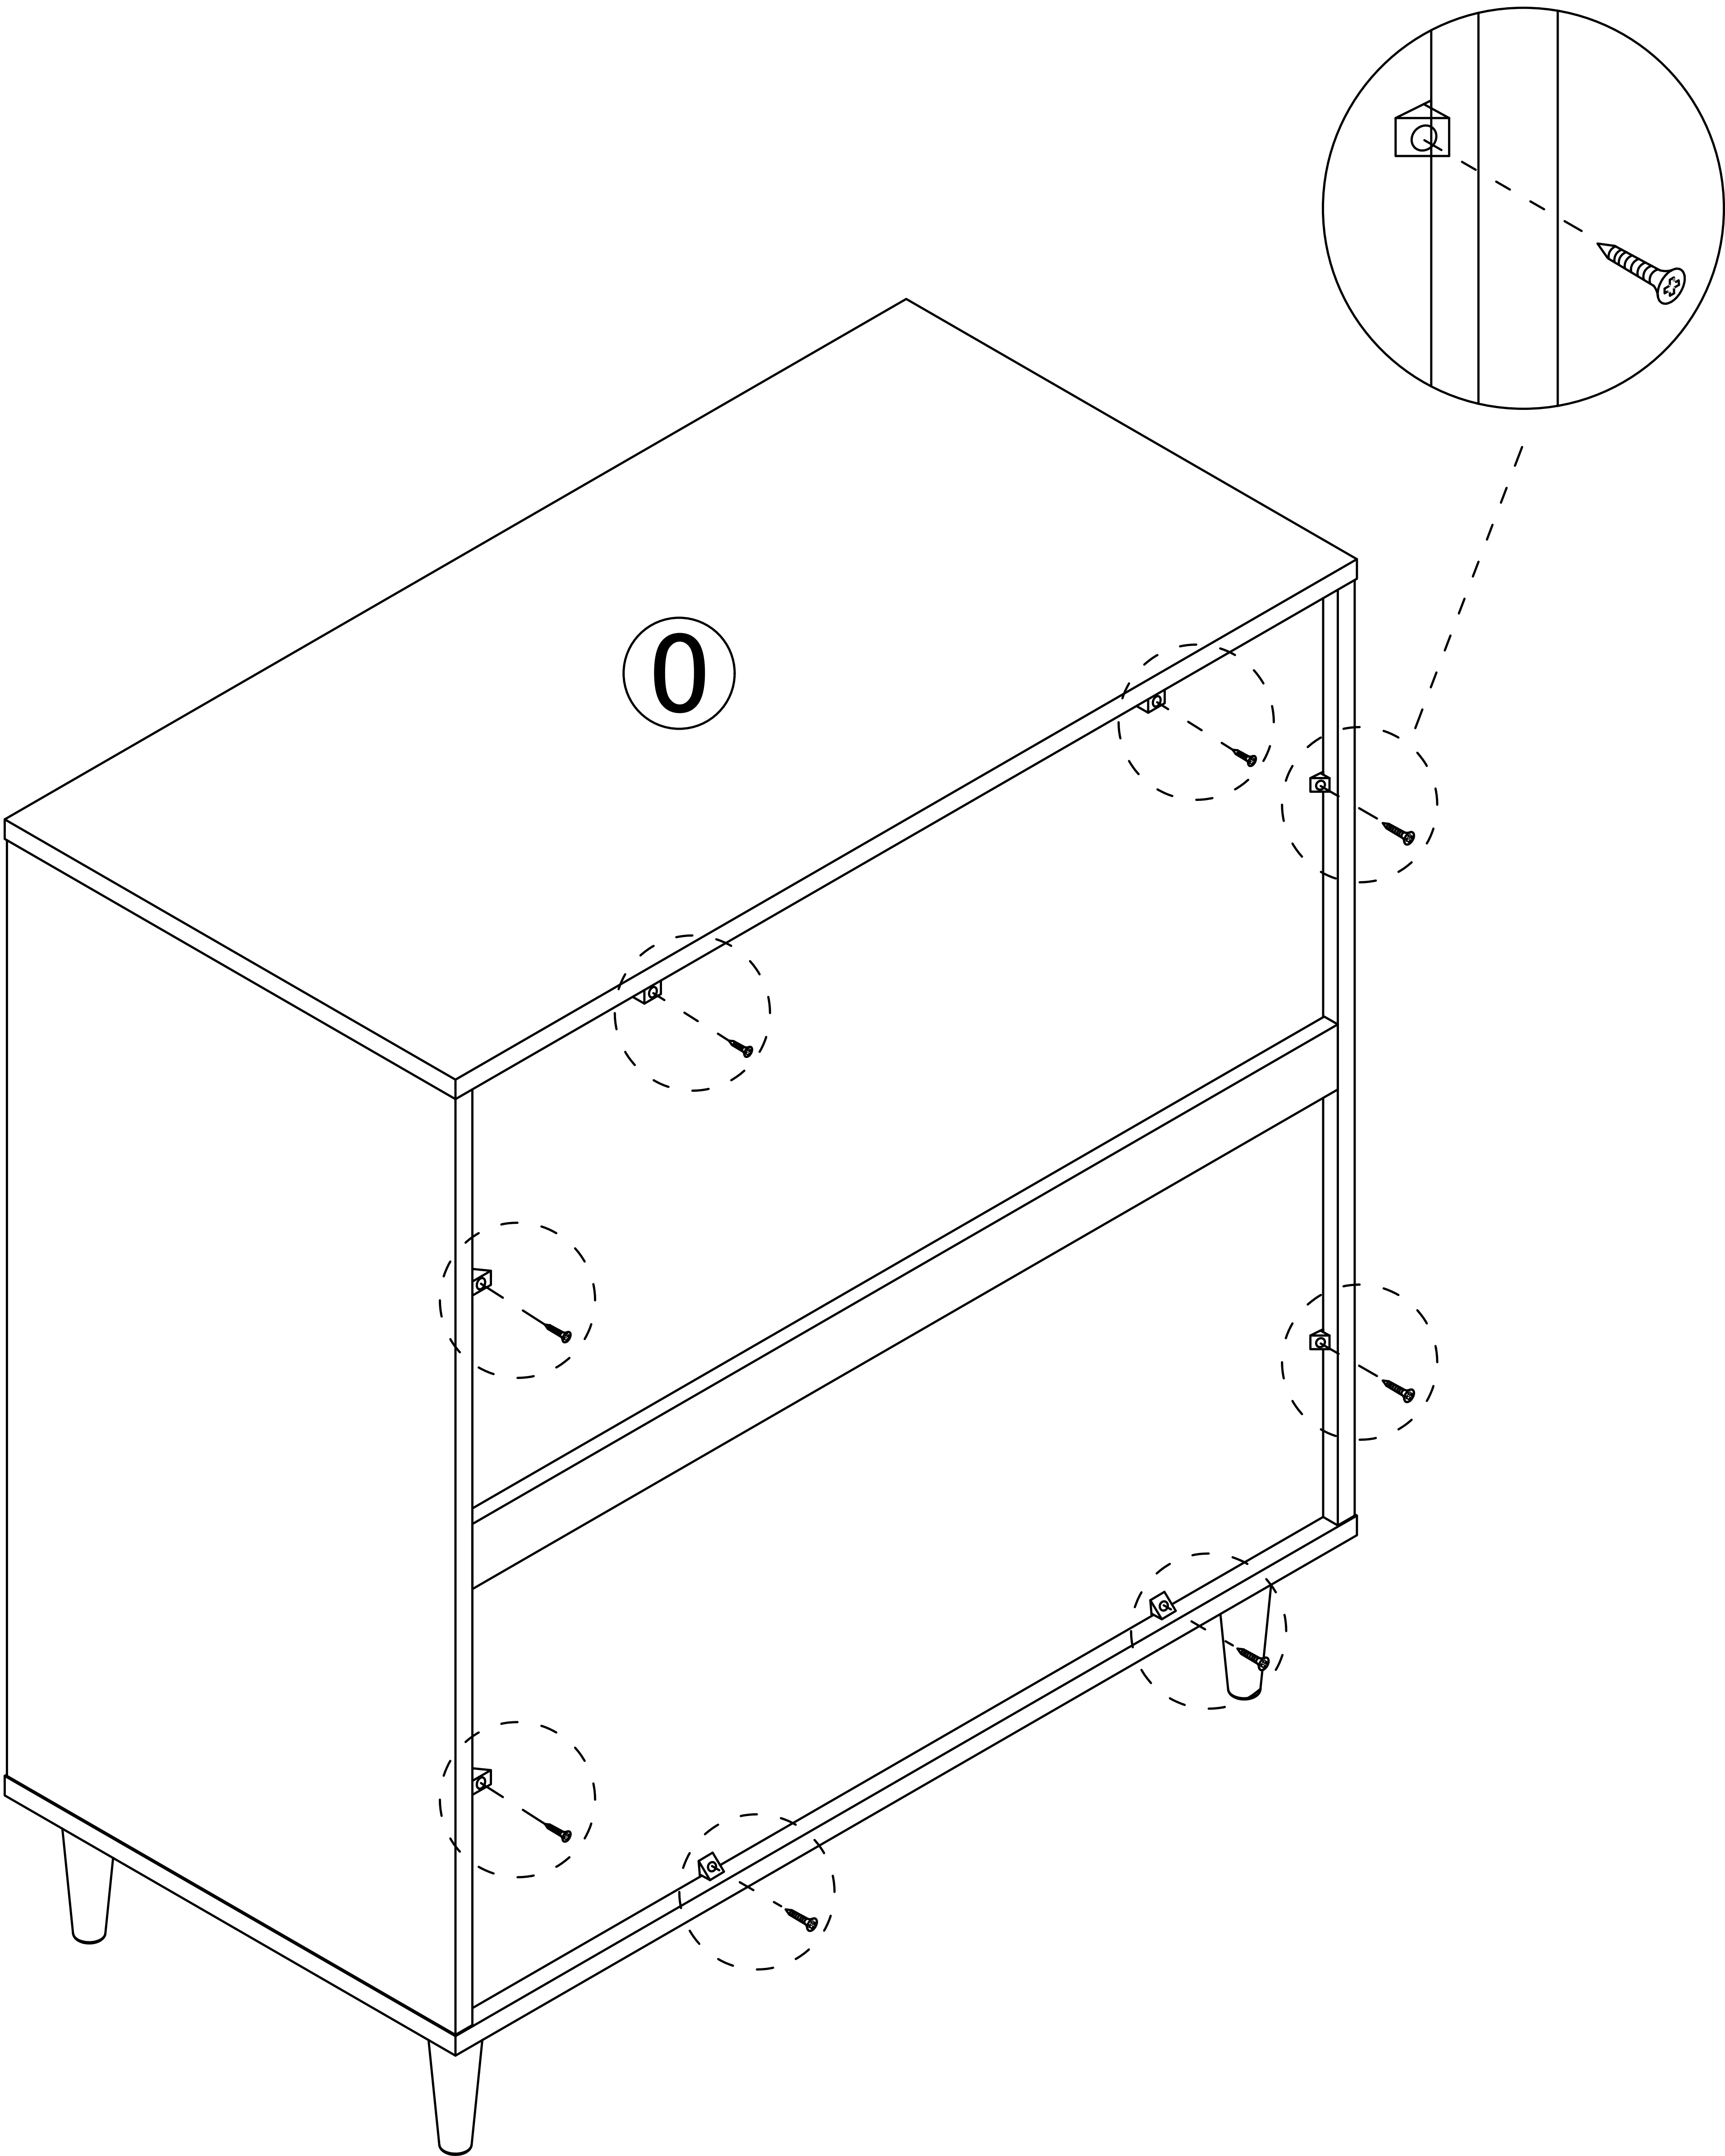

Step 38


7

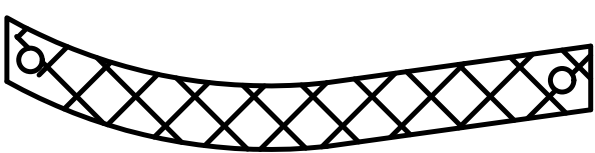



1pcs



1pcs

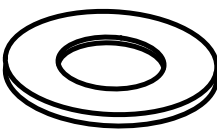


1pcs

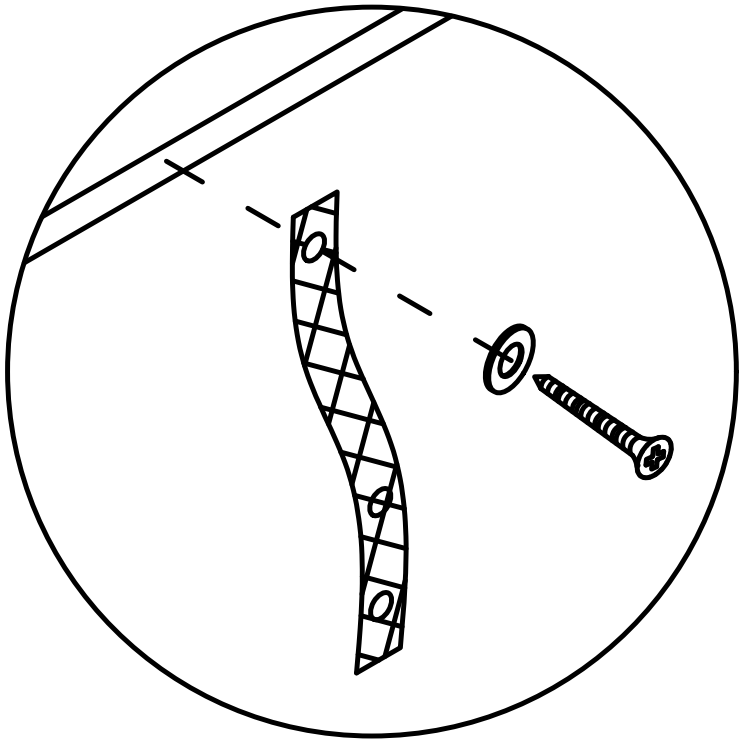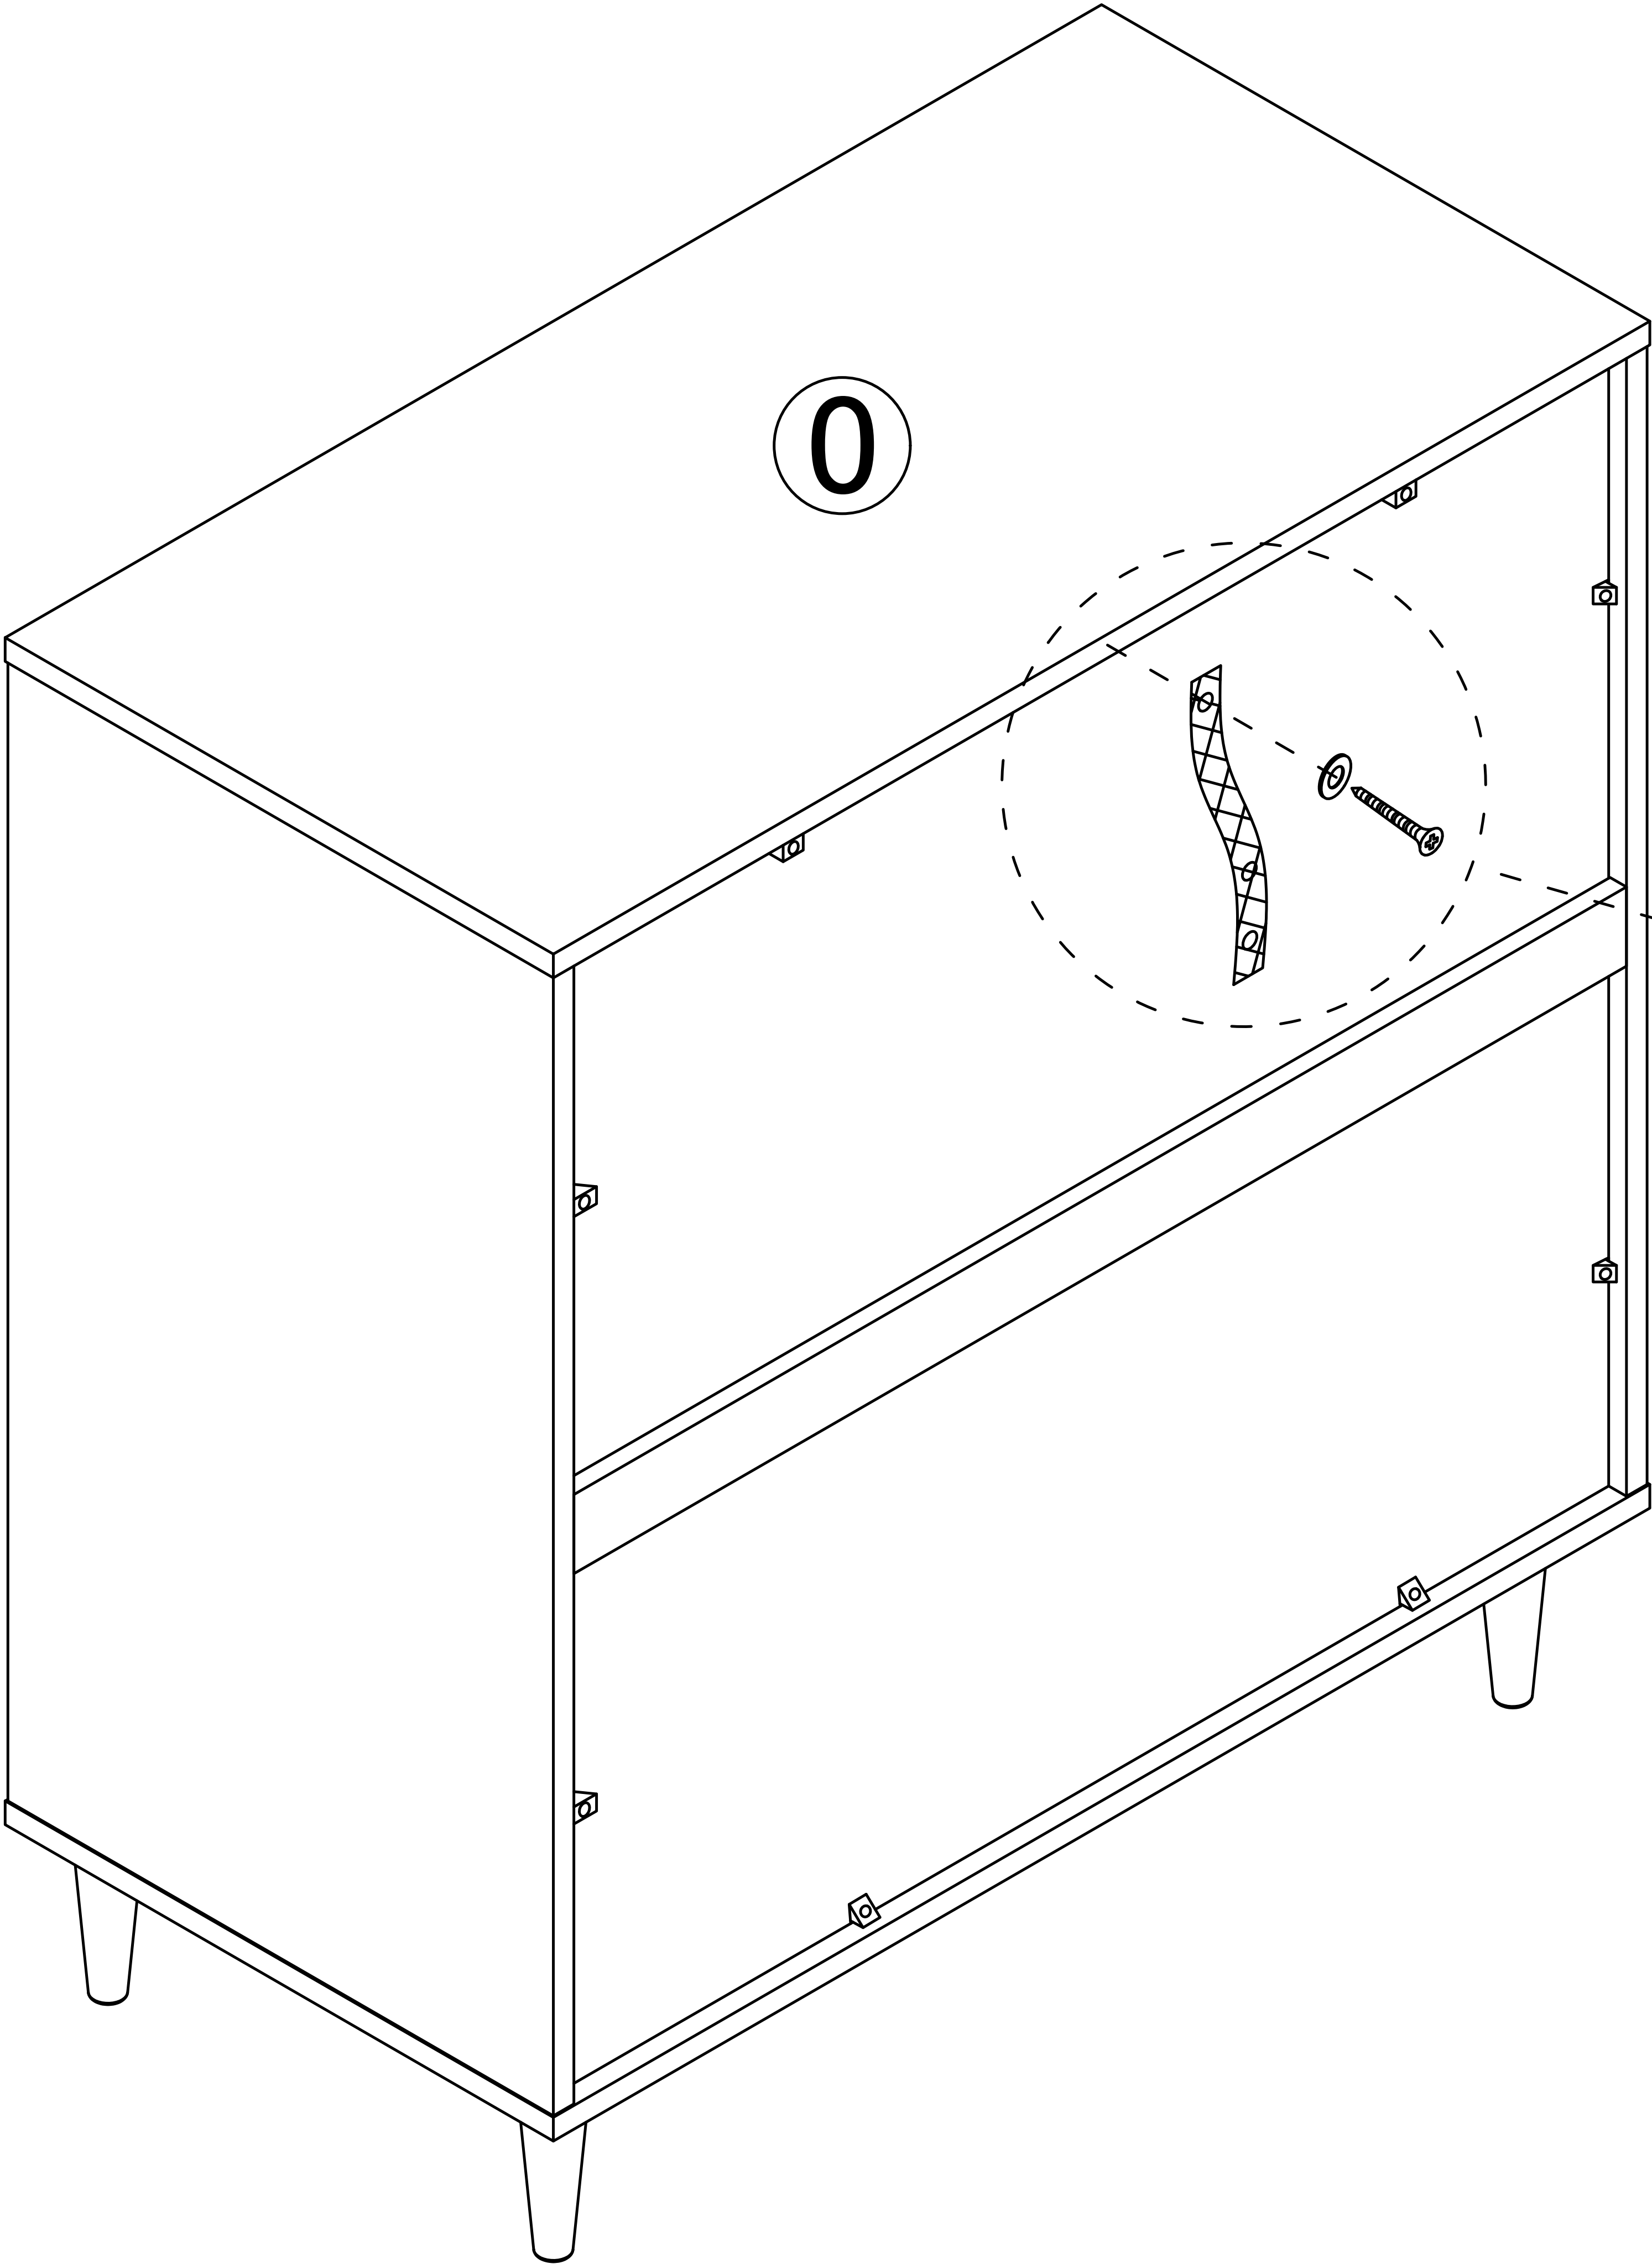


Step 39

use a ruler to measure the approximate height of the product the wall, and then mark it with a pencil.

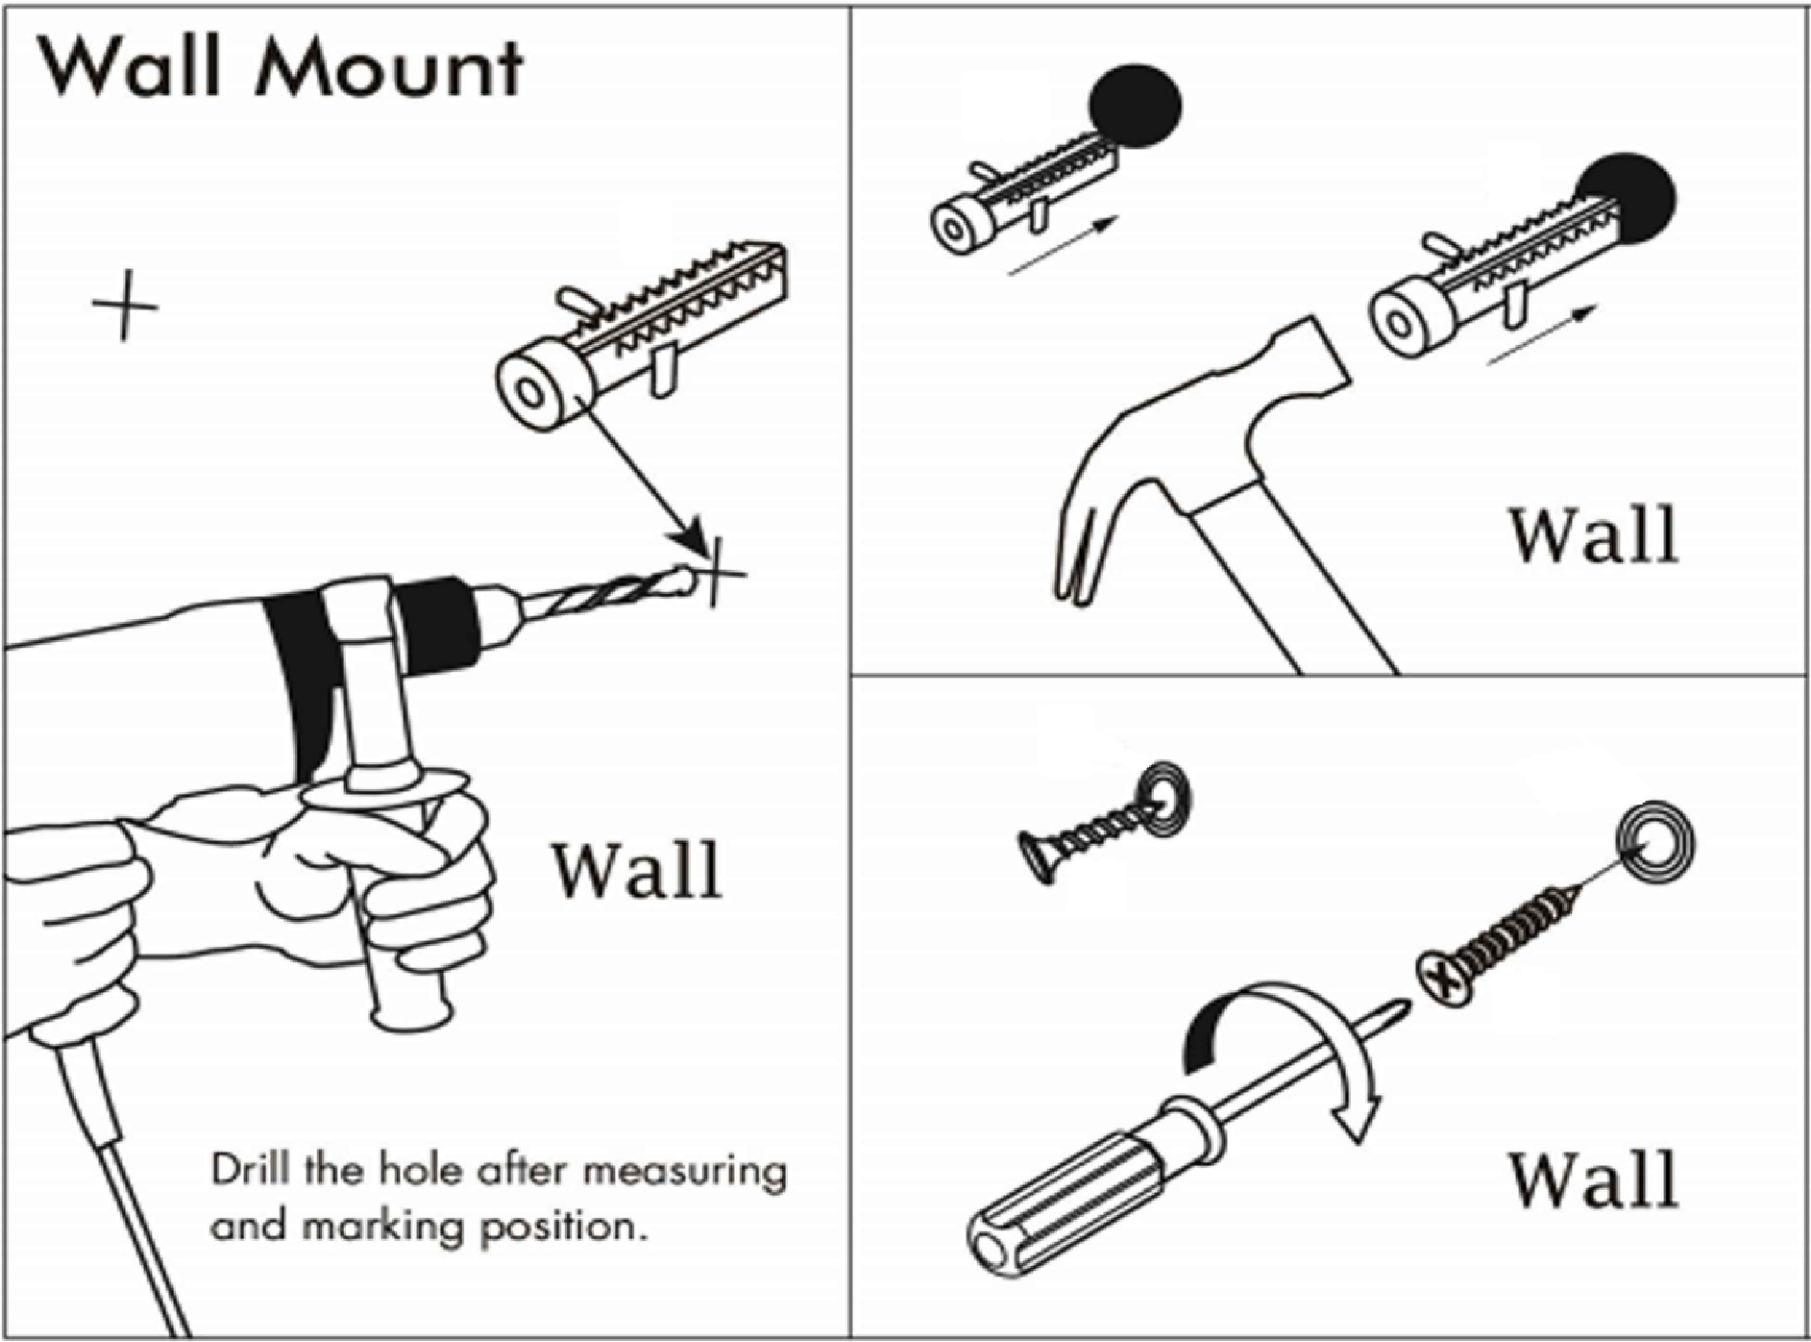

Use a tape drill to make holes in the wall that are suitable for the product screws.

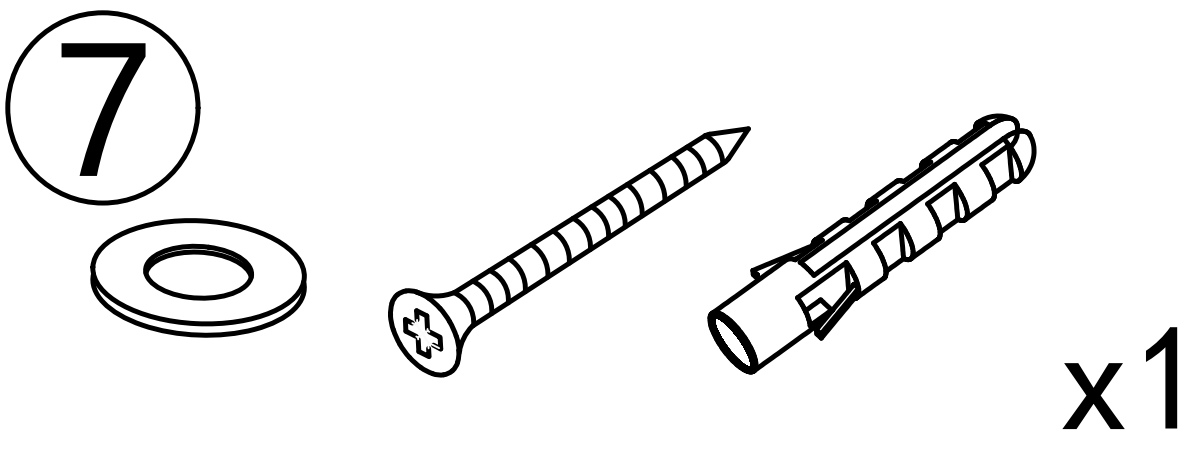

Put the expansion bolt into the hole.

Pass the matching screws through the "anti-rewind" and tighten them to fix them on the wall.

