


Bookcase Three-Tier with Cabinet Doors Installation Diagram

							
Eccentric Screw	Eccentric Bolt	3.5cm Self-tapping Screw	Small Nail	Handle*2	Handle Screw	Metal Pin	Spring Pin
A*4	B*4	C*32	D*30	E*2	F*2	G*4	H*2

Friendly Reminder: When installing, tighten the screws to 70% of their full tightness, then tighten them fully once everything is complete!

II. Installation Steps of Eccentric Parts

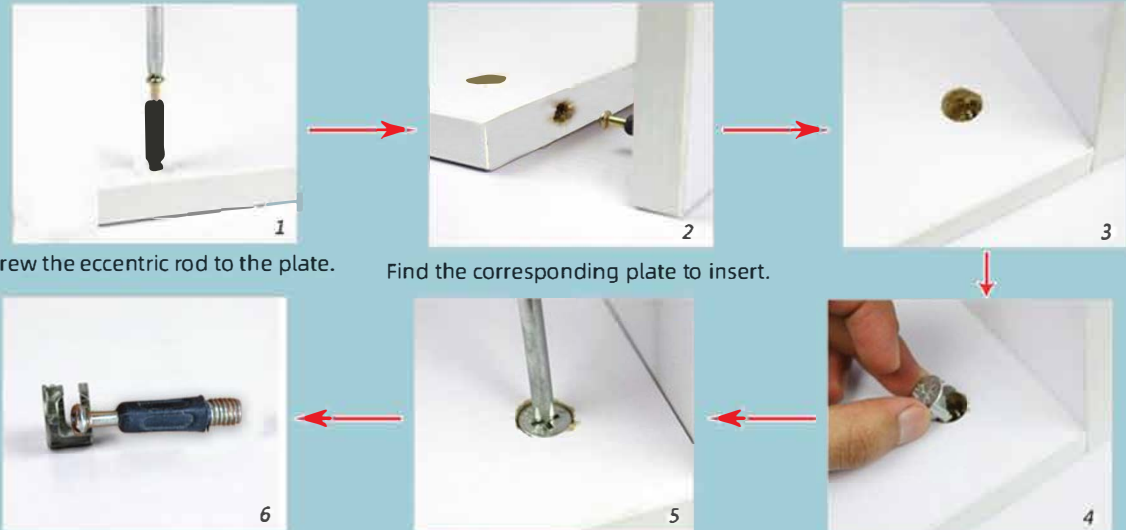

1 Screw the eccentric rod to the plate.

2 Find the corresponding plate to insert.

3


4

5


6

Rotate 180° clockwise and lock the plate left and right. Insert the eccentric bolt into the round hole.

Panel Name and Number:

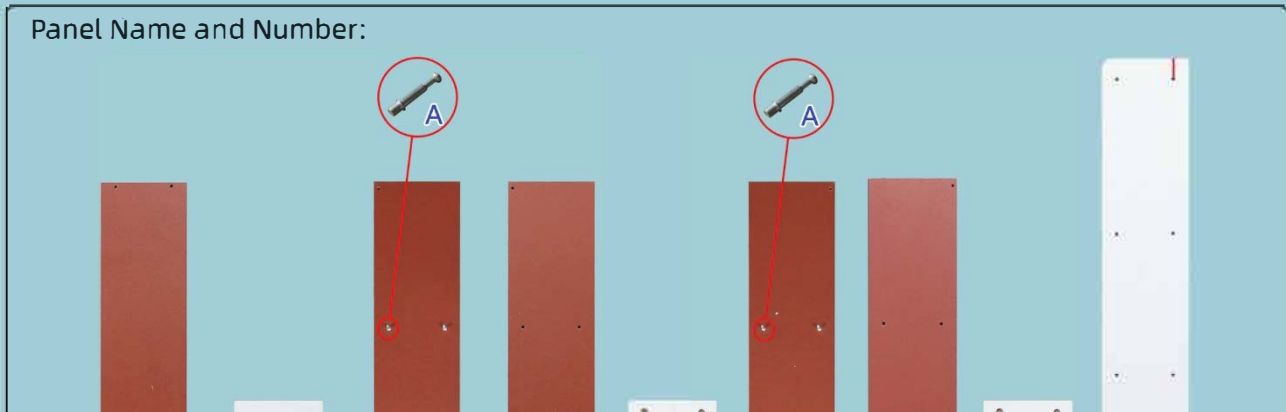

The spacing between the holes on the right side panel is longer than that on the left side panel.

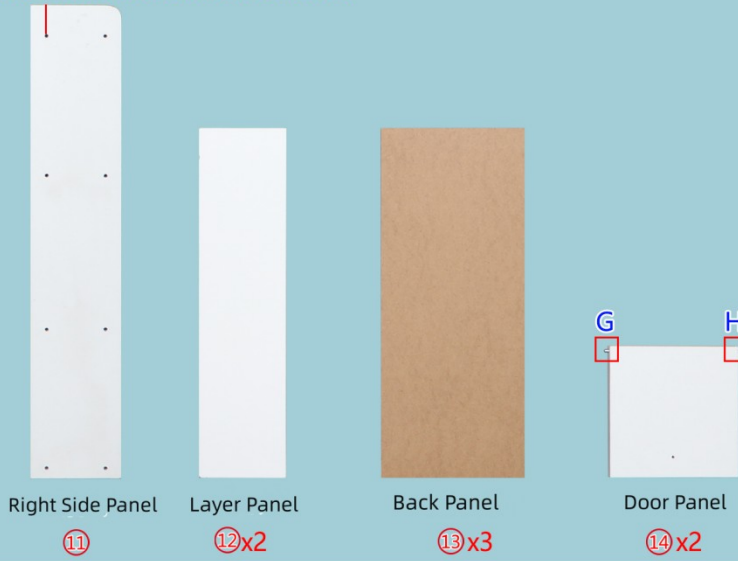


Step 1: Cabinet Installation


<1> Upper Cabinet Section









<2> Lower Cabinet Section

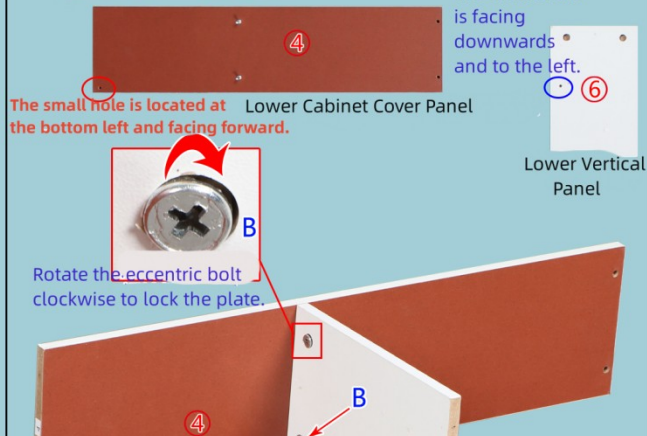



<3>

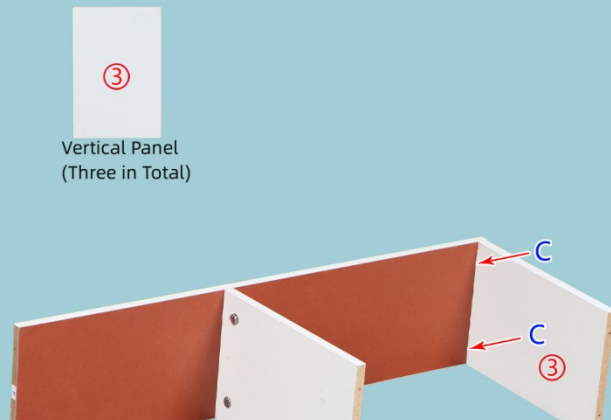

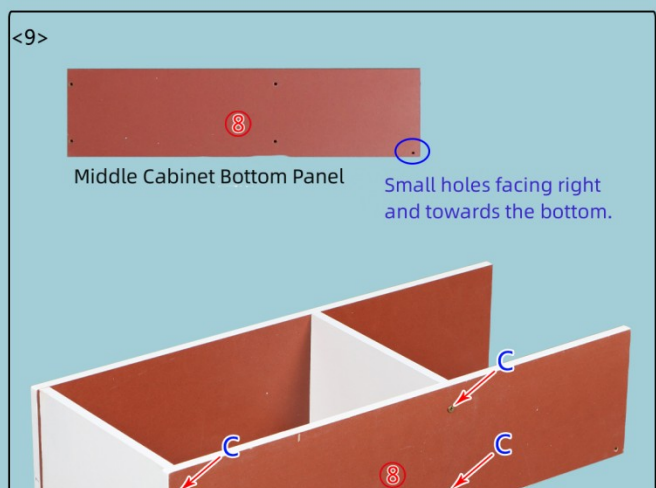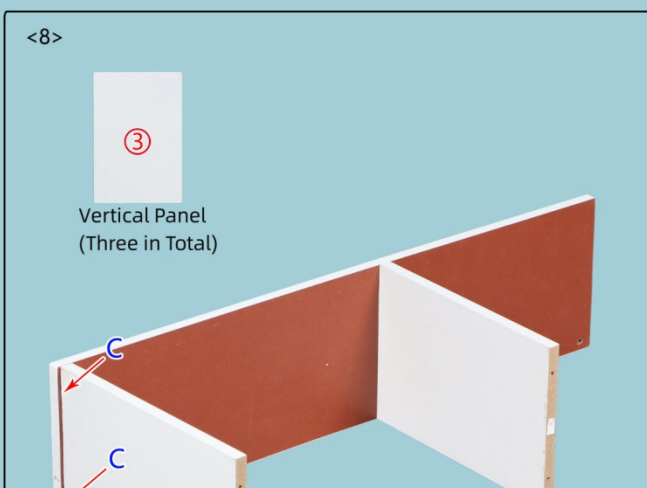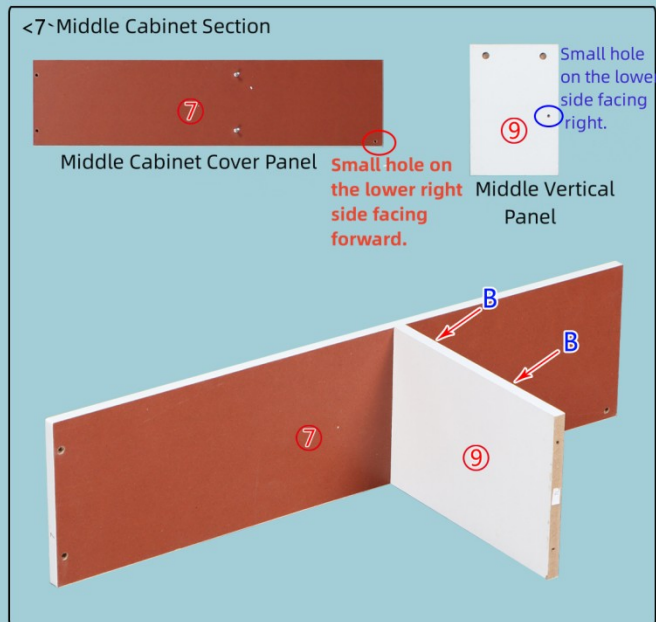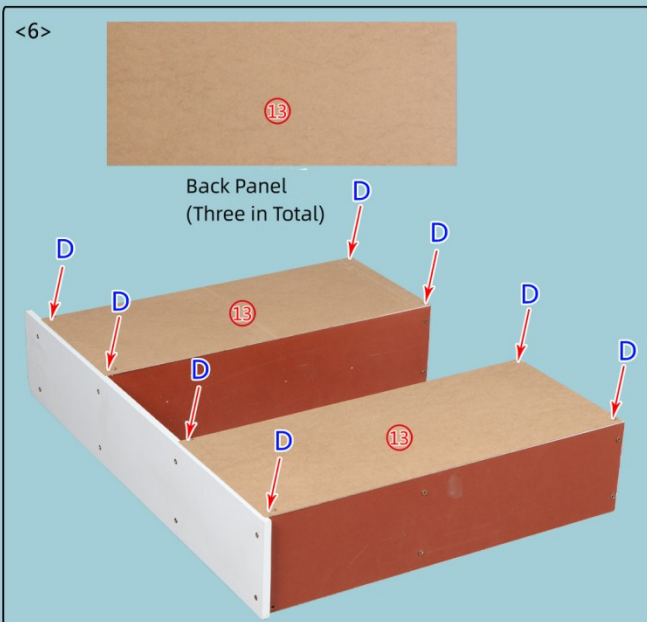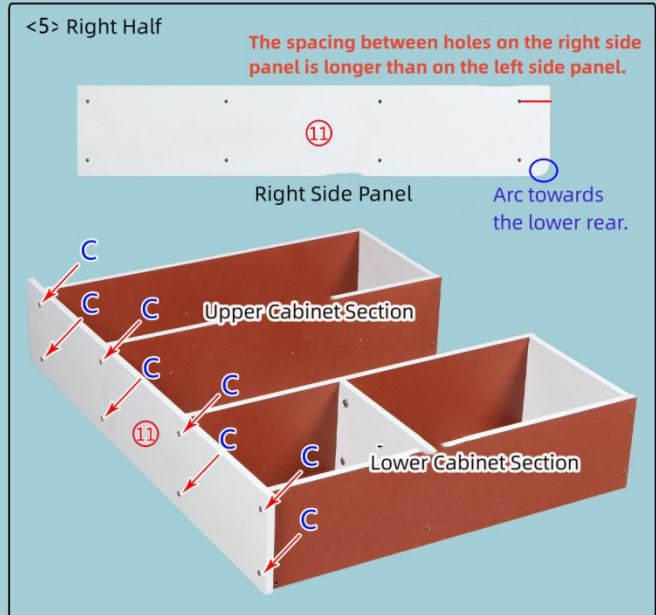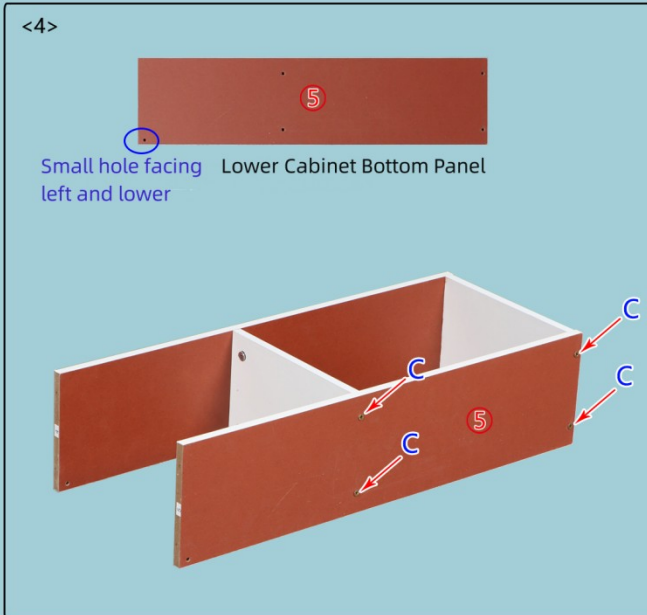


<10> Left Half

Arc towards the lower rear.

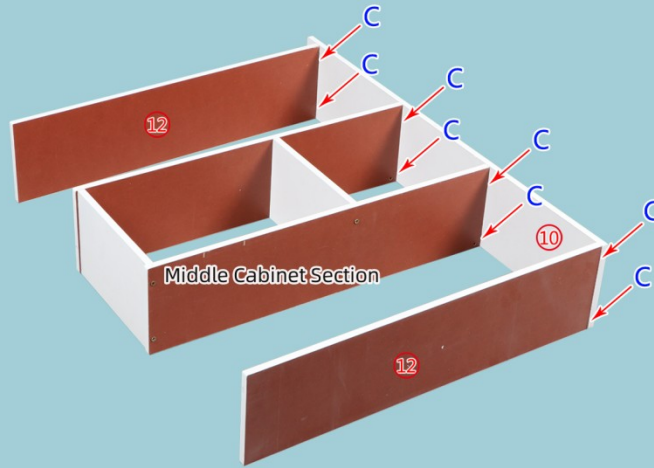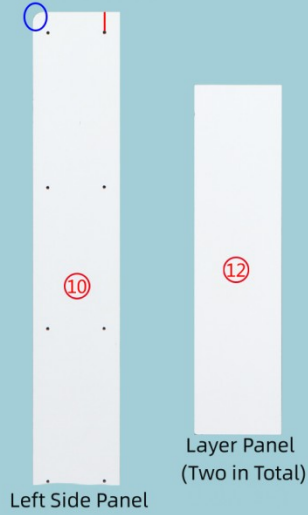

<11>


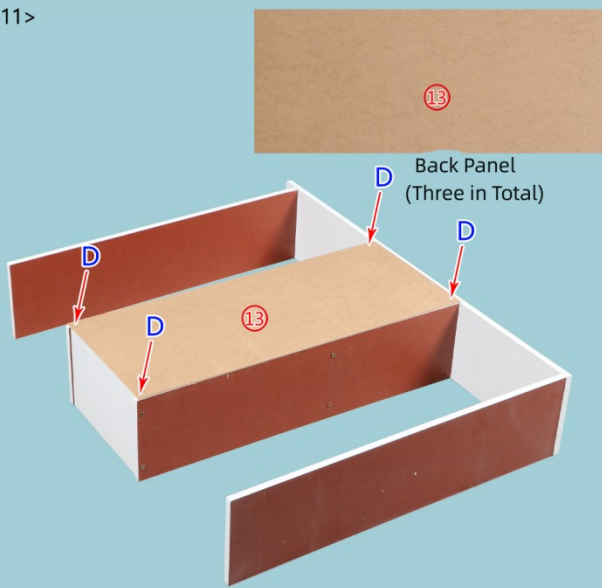


<12>



<13> Set the whole straight.

Be careful to keep it straight!

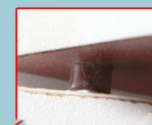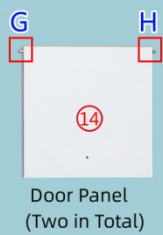

1. Insert the metal pin into the small hole on the board.

