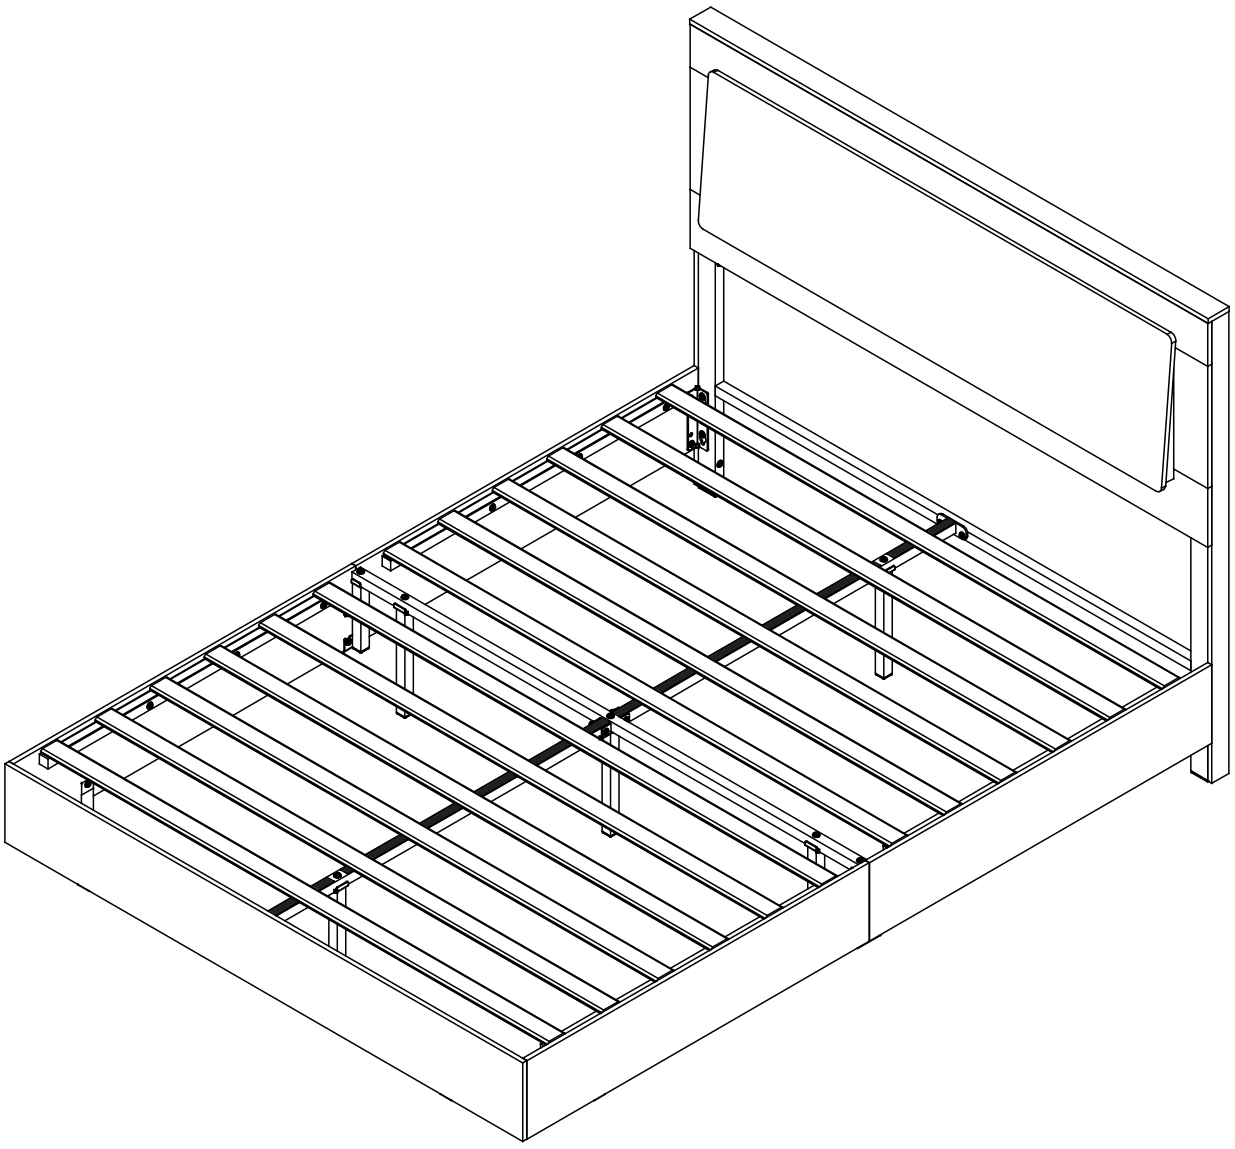
Panel Bed

Assembly Instructions



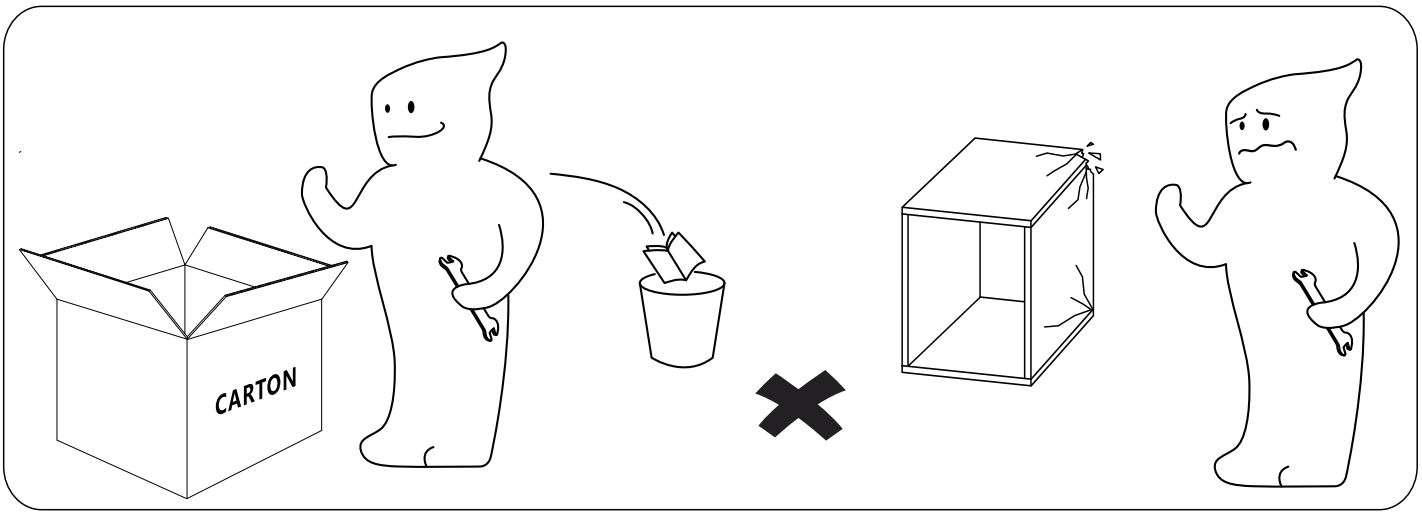
Dear Customers,

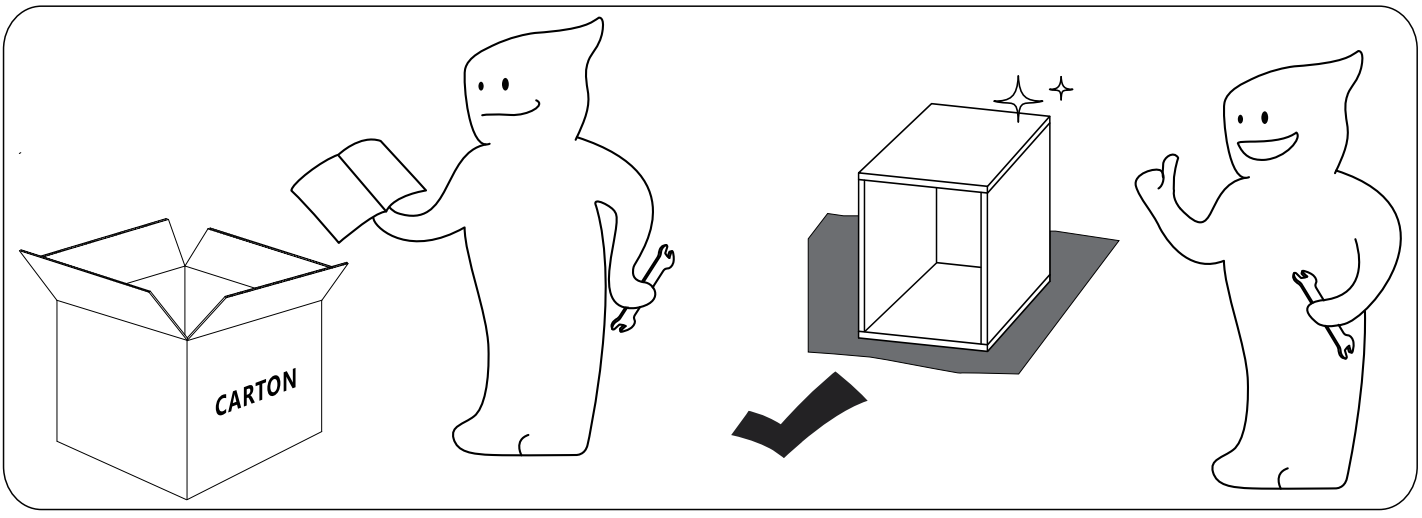
Thank you for purchasing our product. Please read this instruction manual carefully after receiving this product. It will help you assemble this product quickly, safely and correctly. You can keep this manual for future reference.

MADE IN CHINA

IMPORTANT


Please follow the instruction manuals and use a pad to protect the product during your assembly.






















Note:
1. Should be assembled on flat ground to keep balance.
2. Before completing the installation, do not tighten the screws.















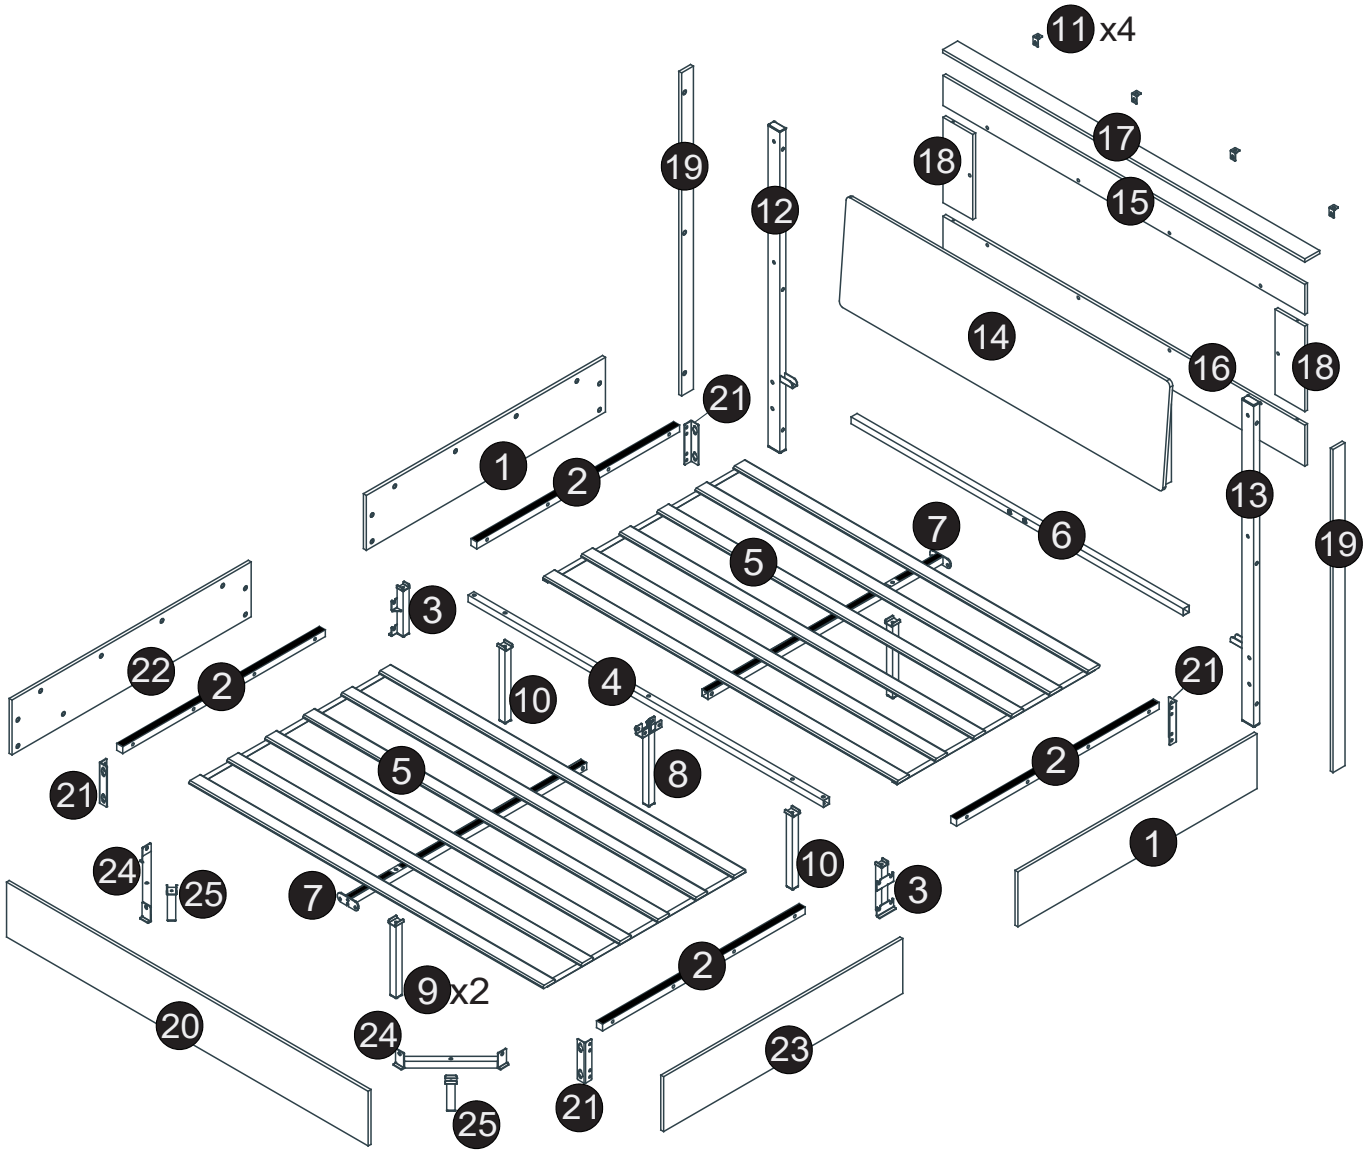
For easier and better assembly, **2** or more adults are required.


11 x4
19
12
18
17
15
14
16
18
21
1
2
13
7
6
19
5
3
22
2
10
4
21
5
8
2
21
24
25
7
10
3
1
9 x2
2
20
24
23
25
21

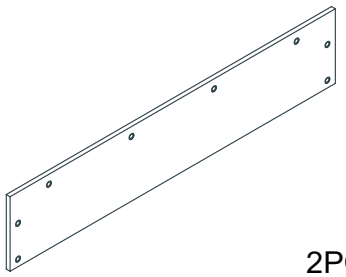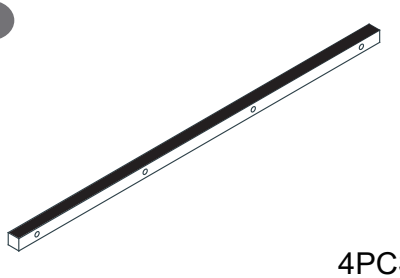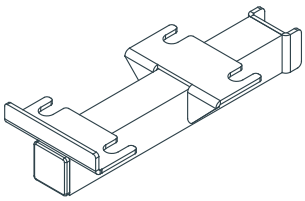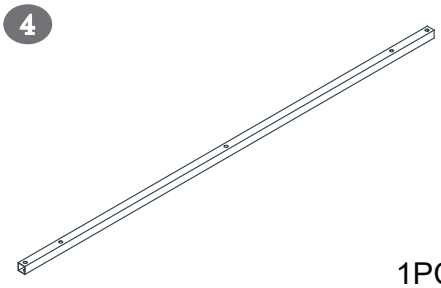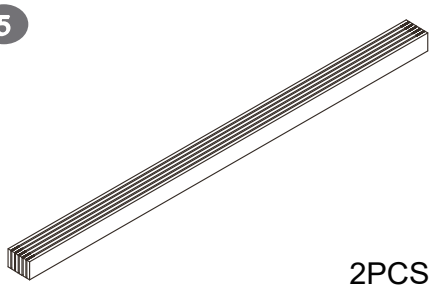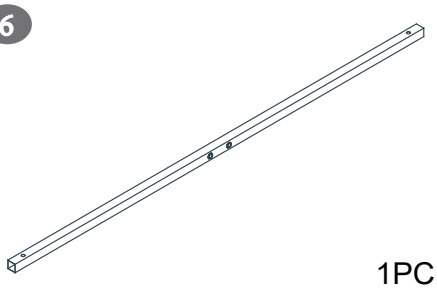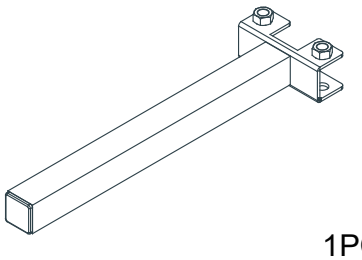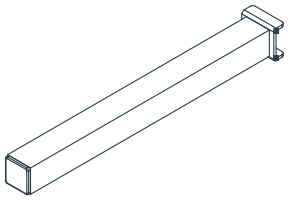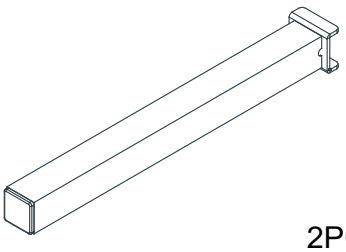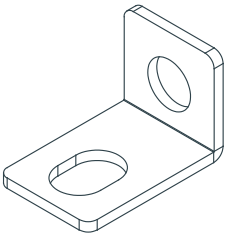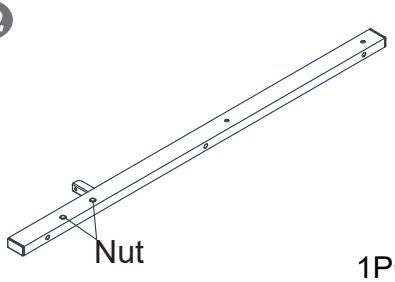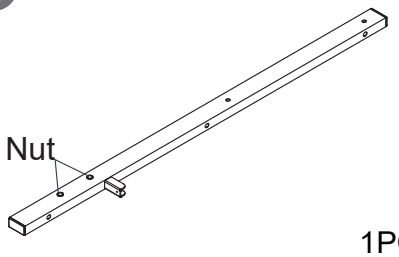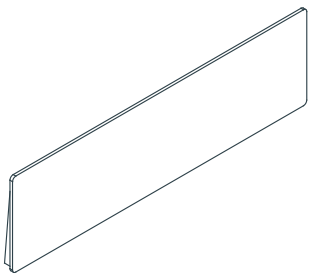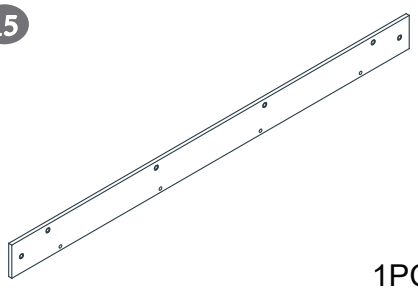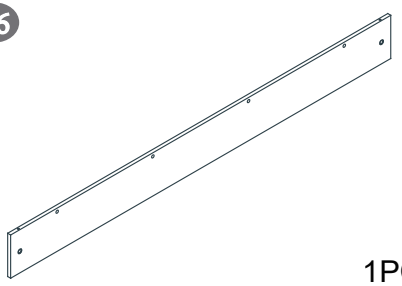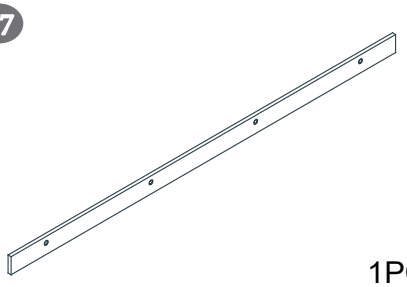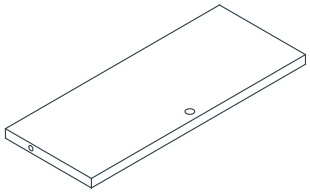ASSEMBLY INSTRUCTIONS


1  2PCS	2  4PCS	3  2PCS
4  1PC	5  2PCS	6  1PC
7  2PCS	8  1PC	9  2PCS
10  2PCS	11  4PCS	12  Nut 1PC
13  Nut 1PC	14  1PC	15  1PC
16  1PC	17  1PC	18  2PCS

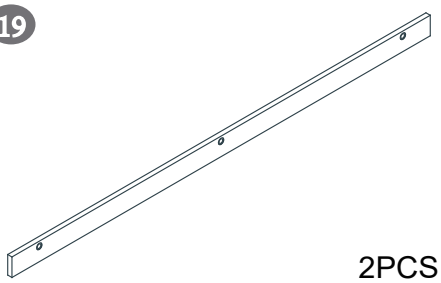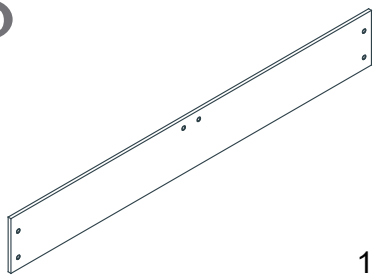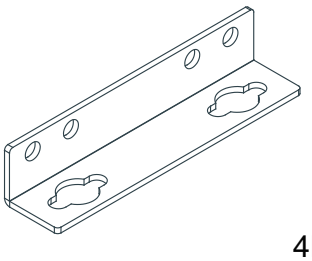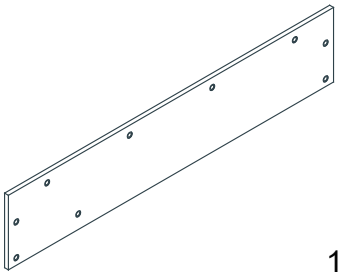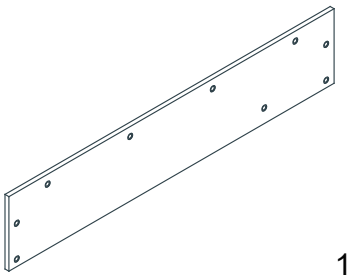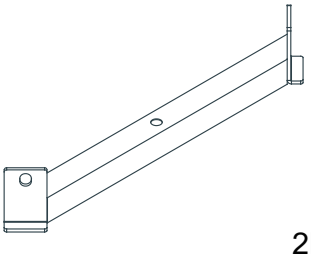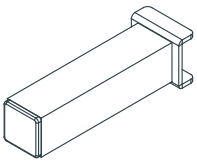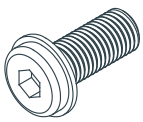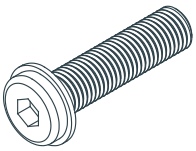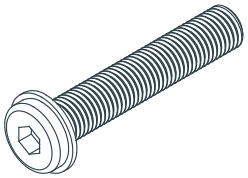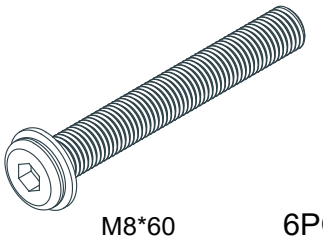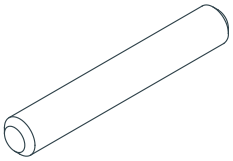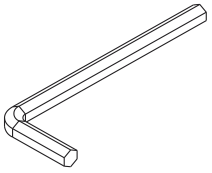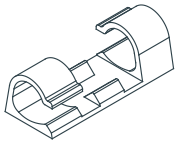ASSEMBLY INSTRUCTIONS

19  2PCS	20  1PC	21  4PCS
22  1PC	23  1PC	24  2PCS
25  2PCS	A  M8*12 30PCS	B  white zinc M8*14 6PCS
C  M8*20 12PCS	D  M8*33 32PCS	E  M8*45 3PCS
F  M8*60 6PCS	G  φ6*40 4PCS	H  5*5 1PC
I  3PCS	K  short long 1PC	


1

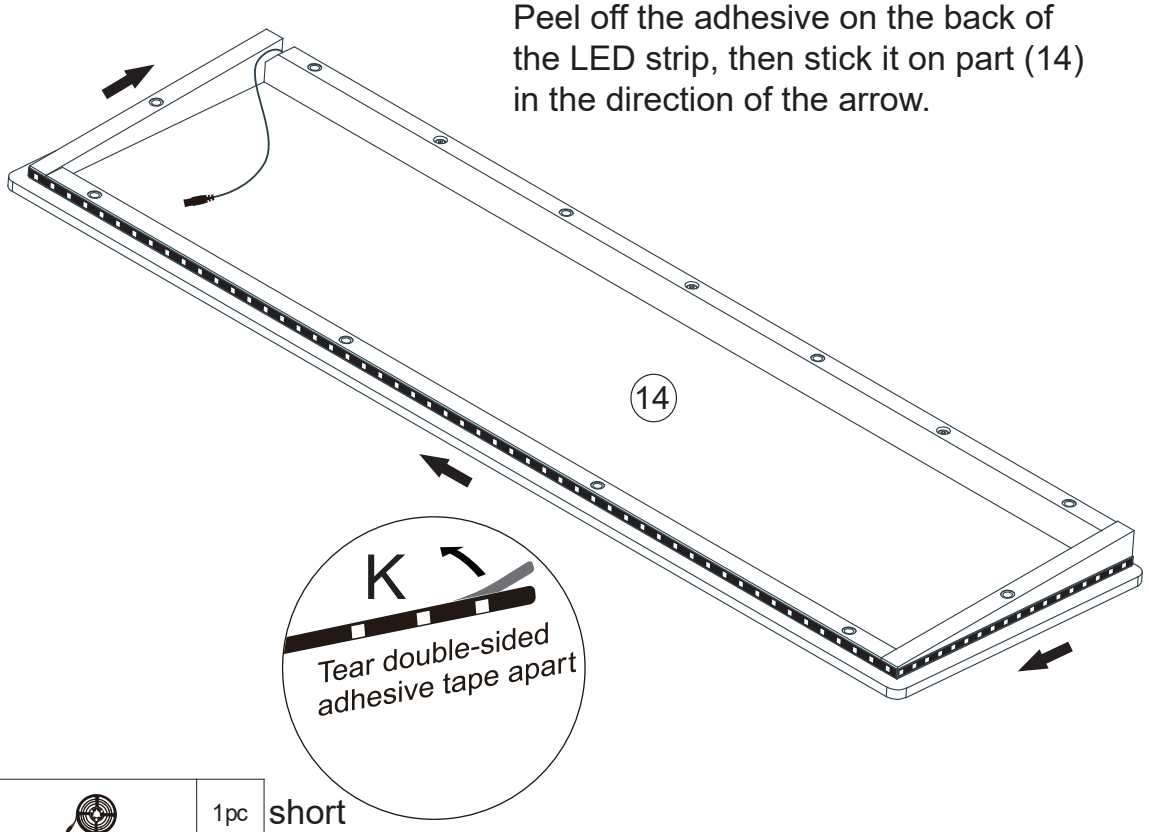Peel off the adhesive on the back of the LED strip, then stick it on part (14) in the direction of the arrow.




K		1pc	short

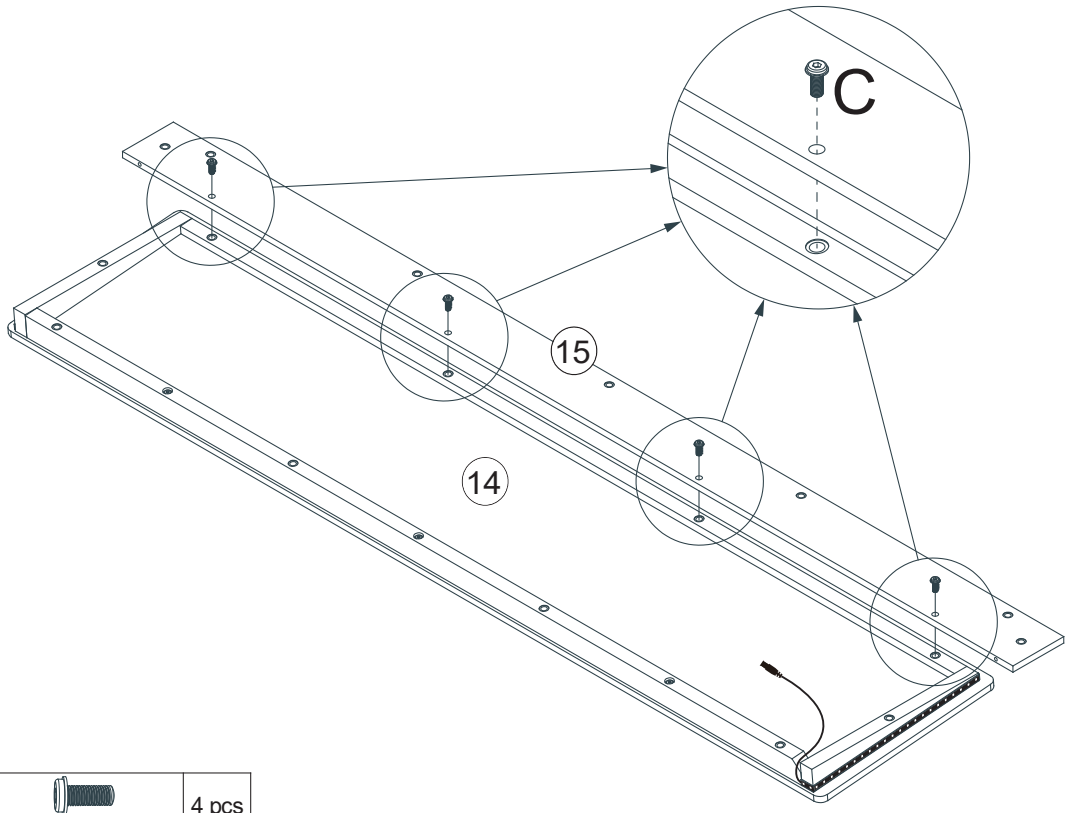2




C	M8x20	4 pcs	

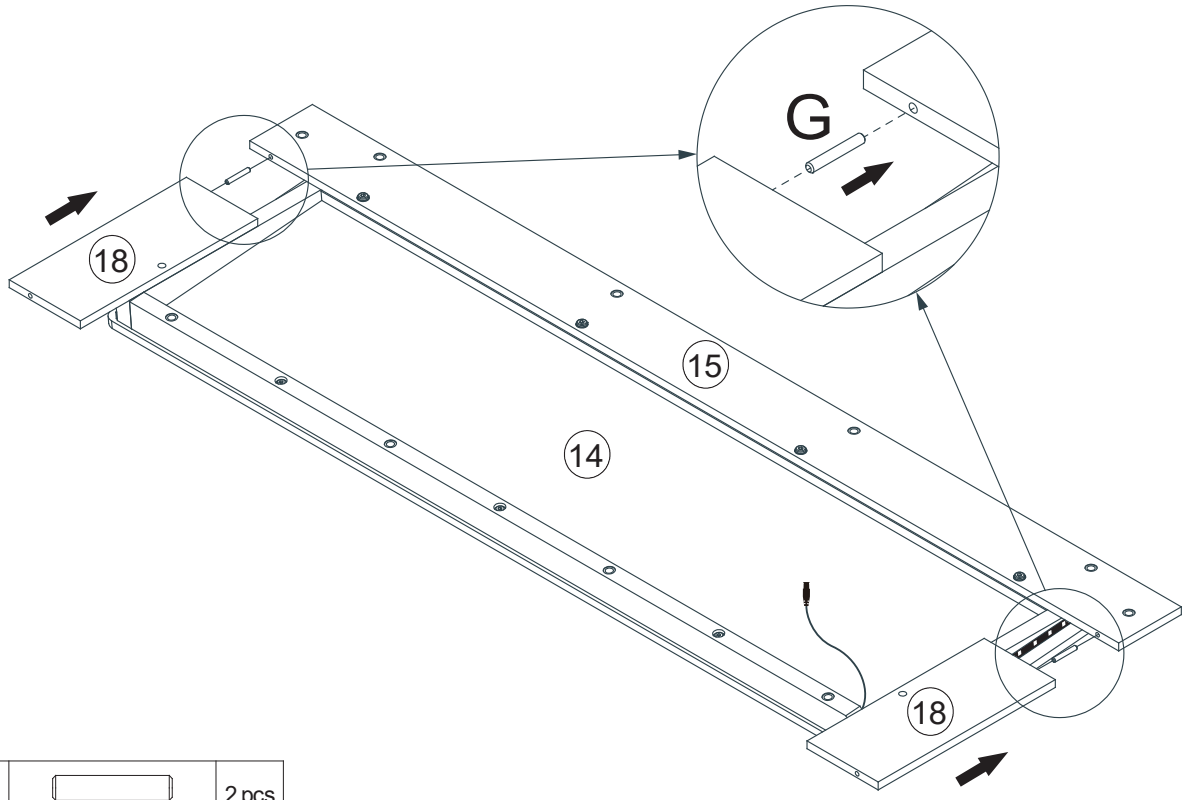3




G	φ6x40	2 pcs

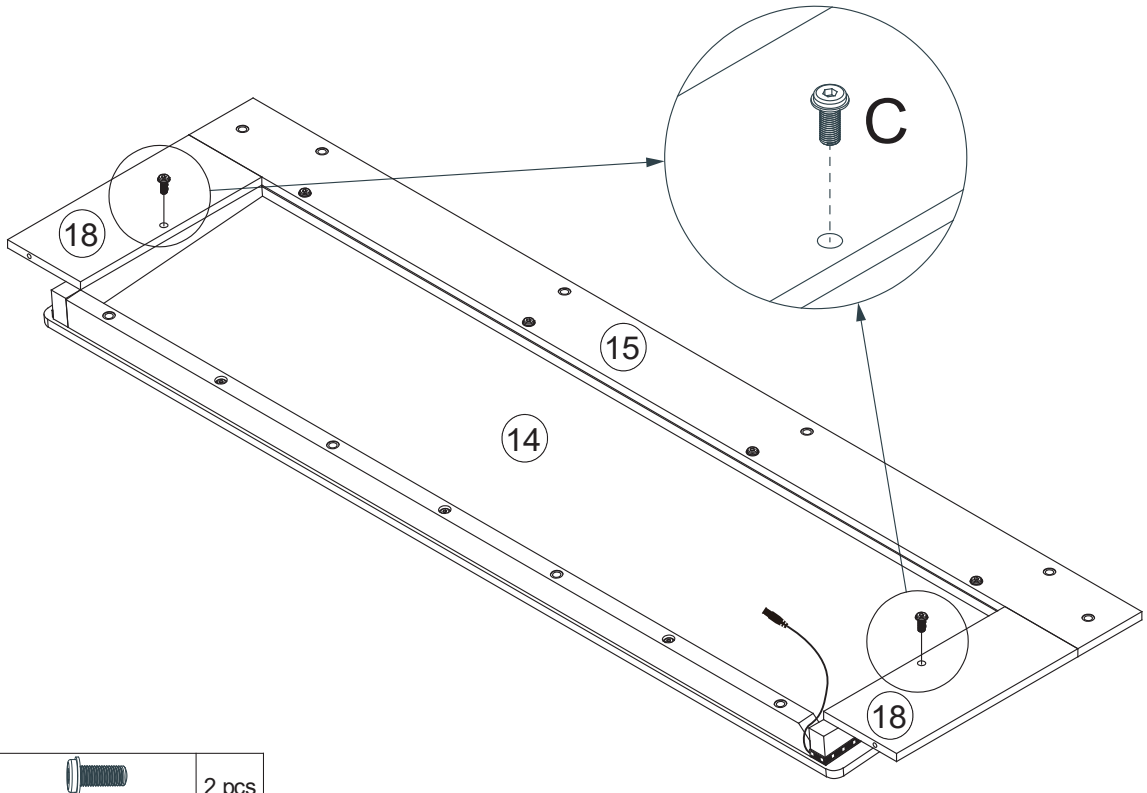4




C	M8x20	2 pcs

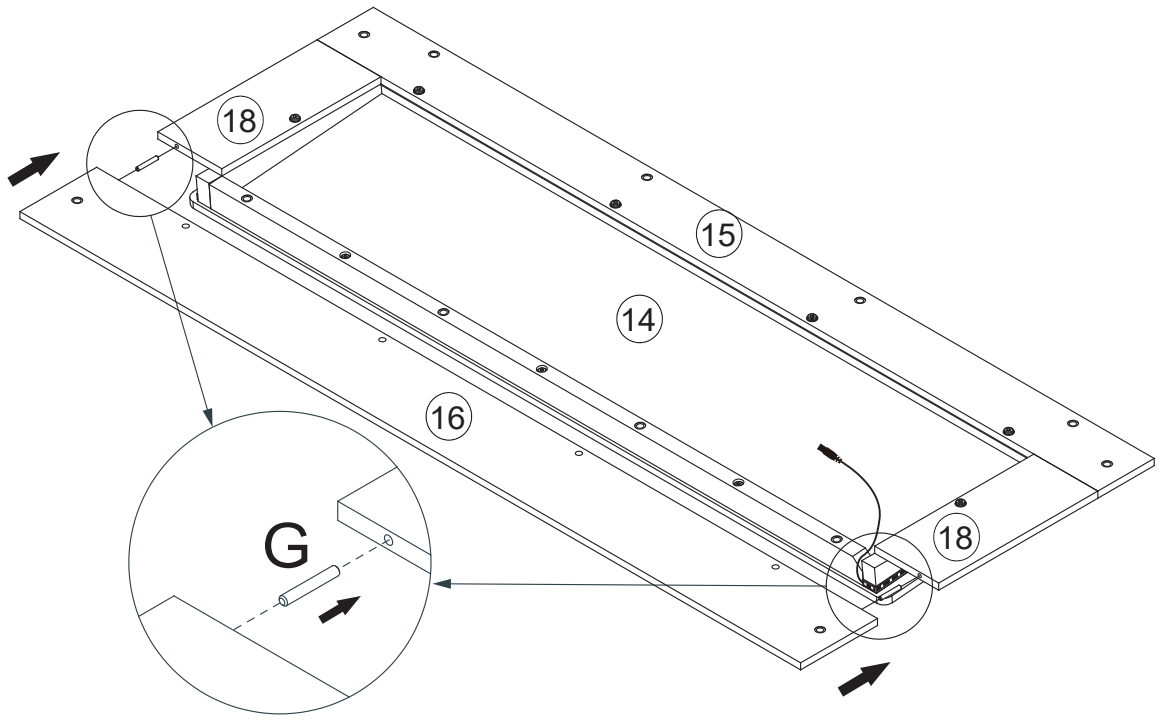5




G	φ6x40	2 pcs

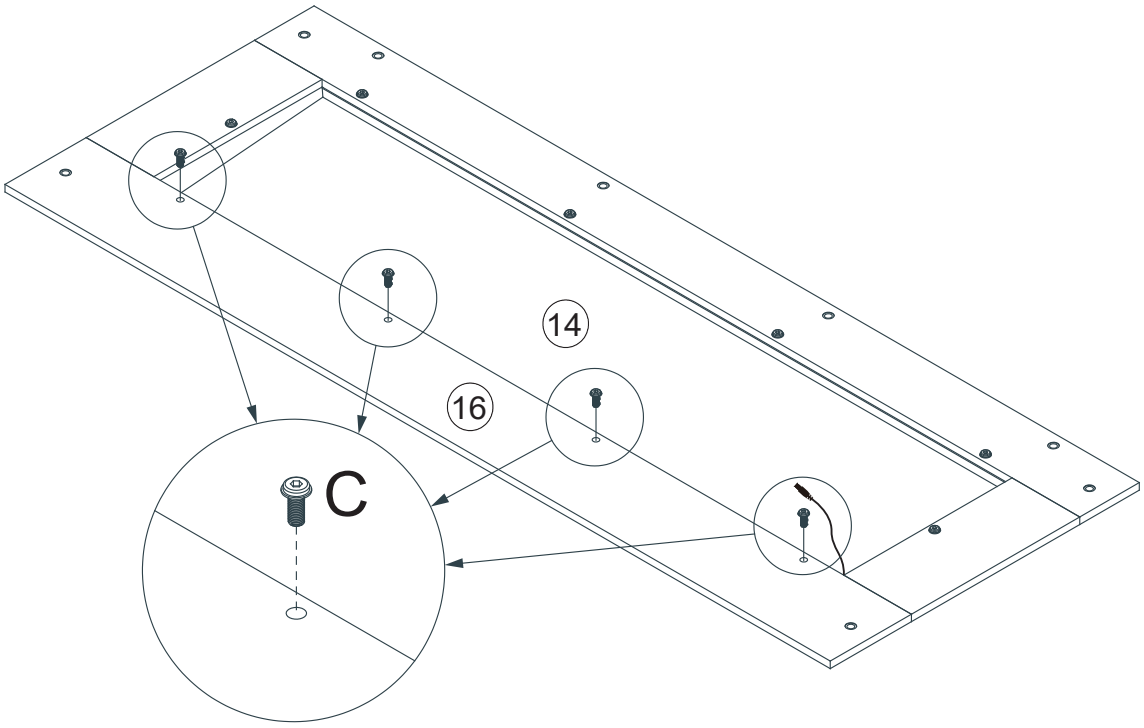6




C	M8x20	4 pcs

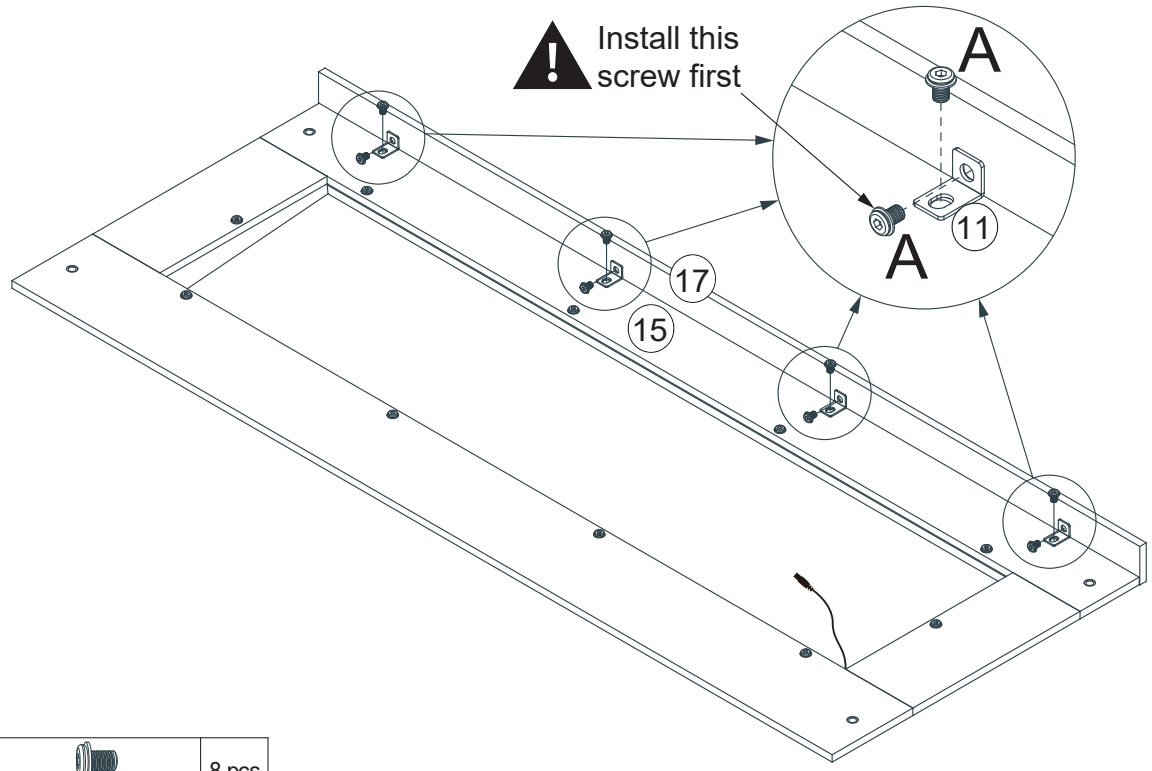7




A	M8x12	8 pcs

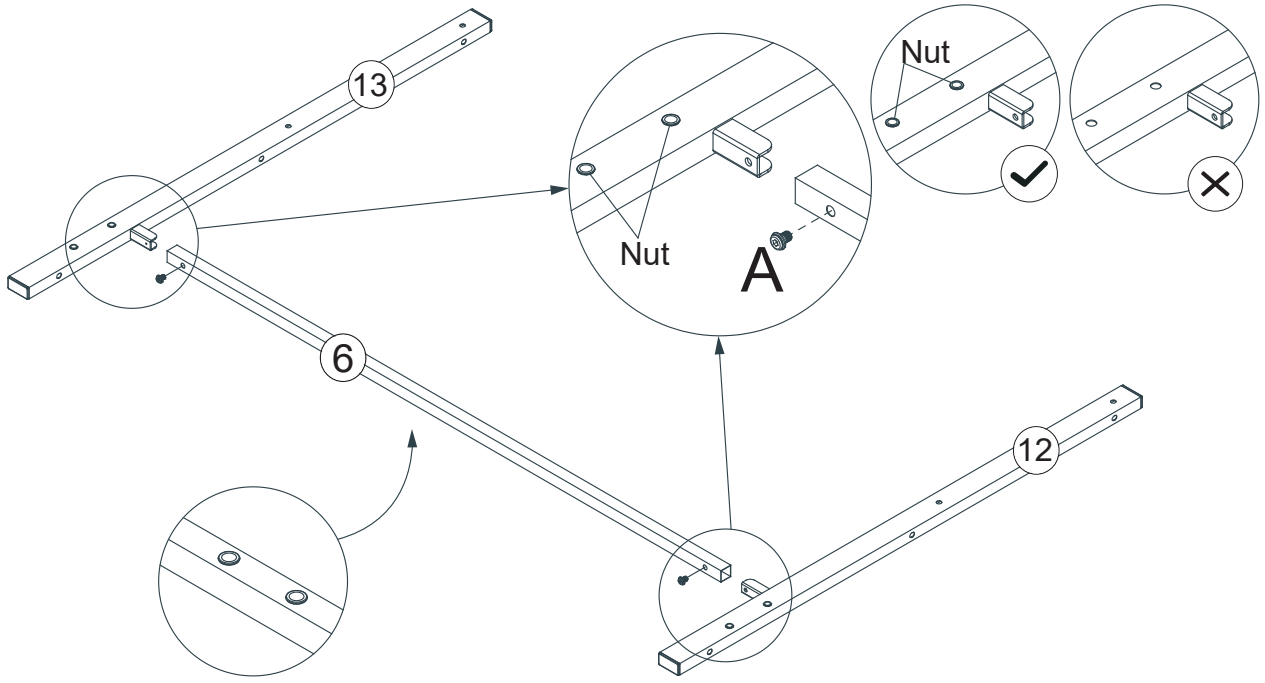8




A	M8x12	2 pcs

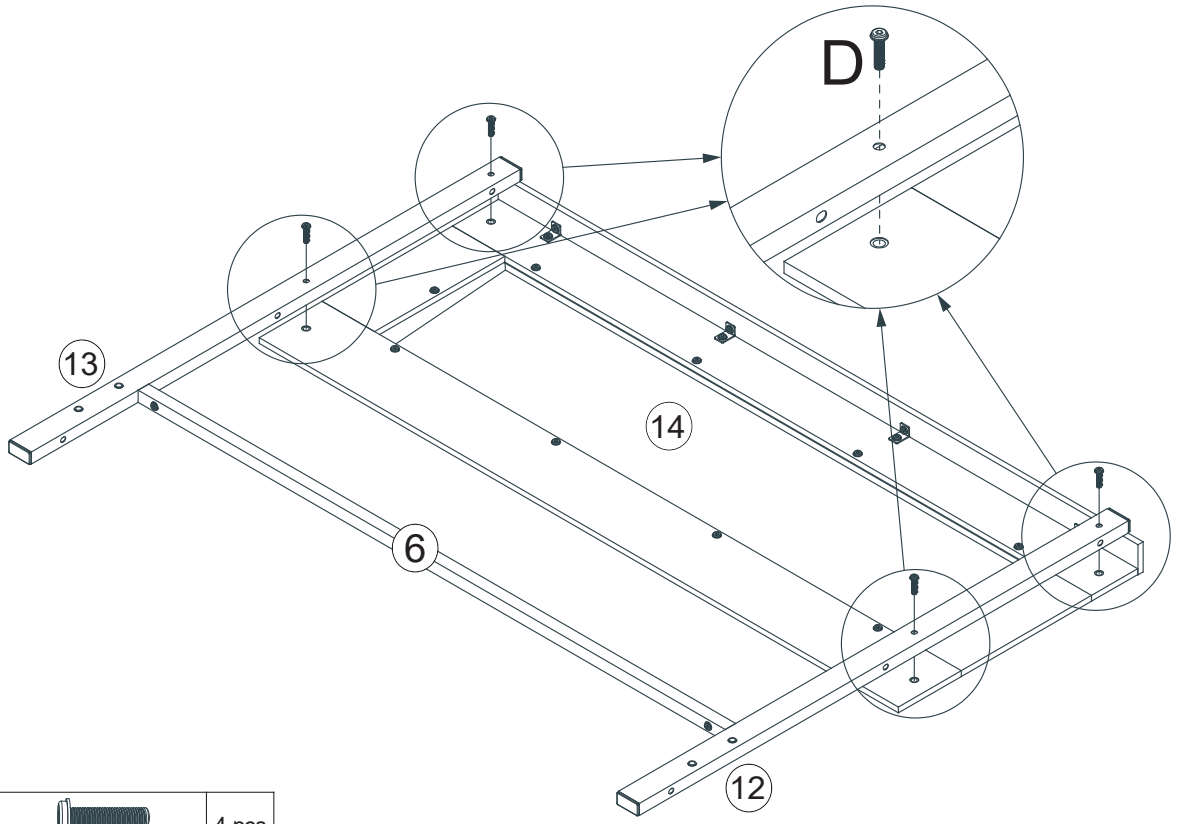9



D	M8x33	4 pcs

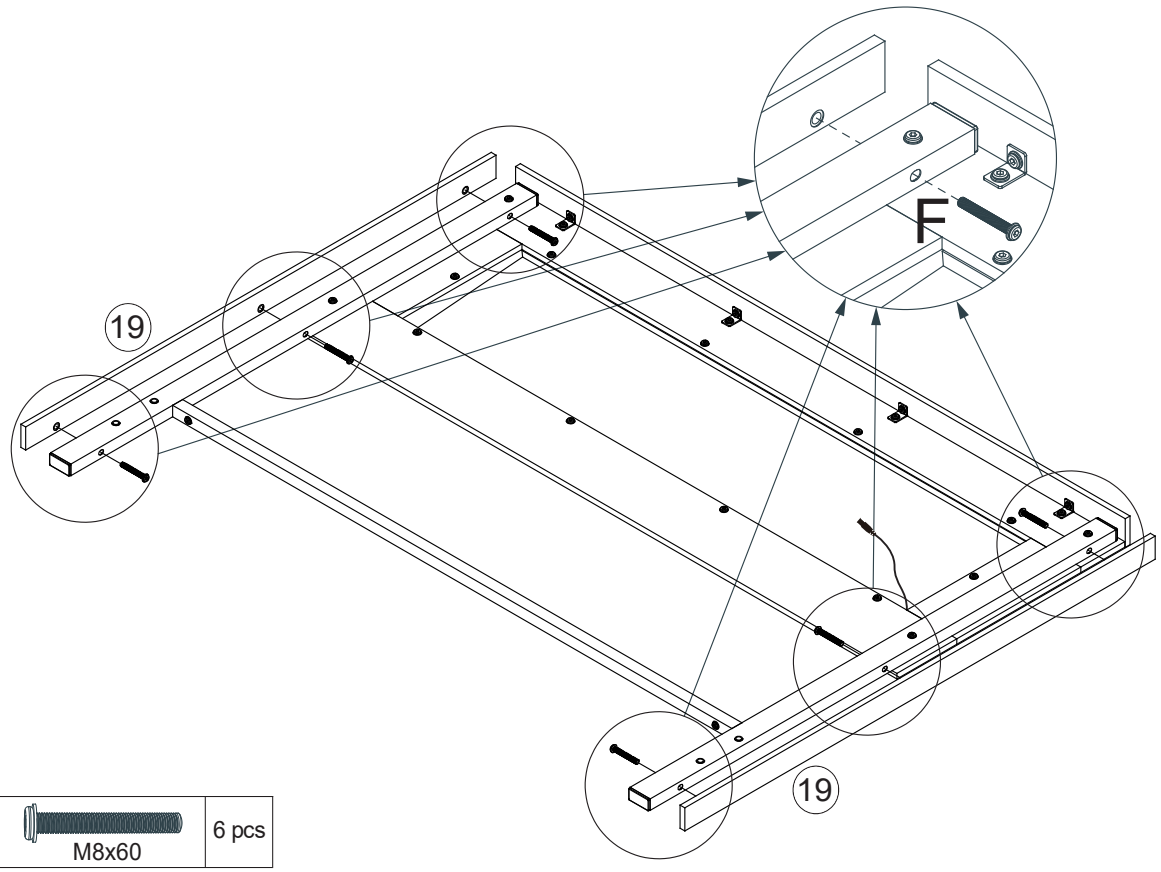
10



F	M8x60	6 pcs


11

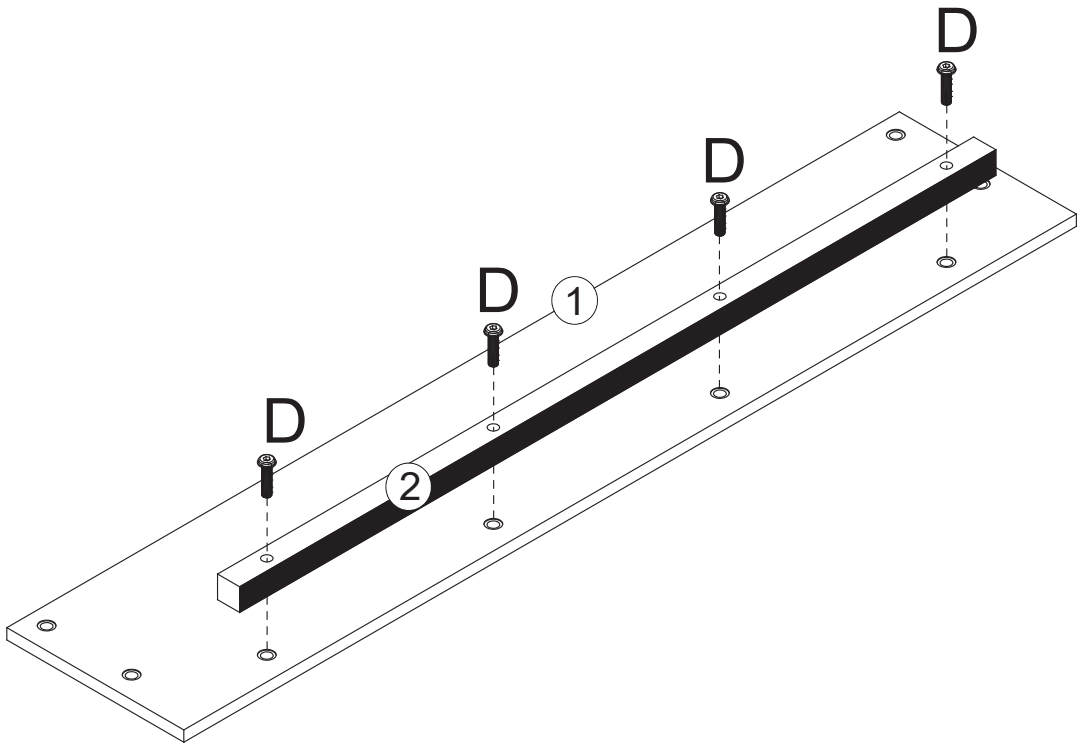x2




D	M8x33	8 pcs

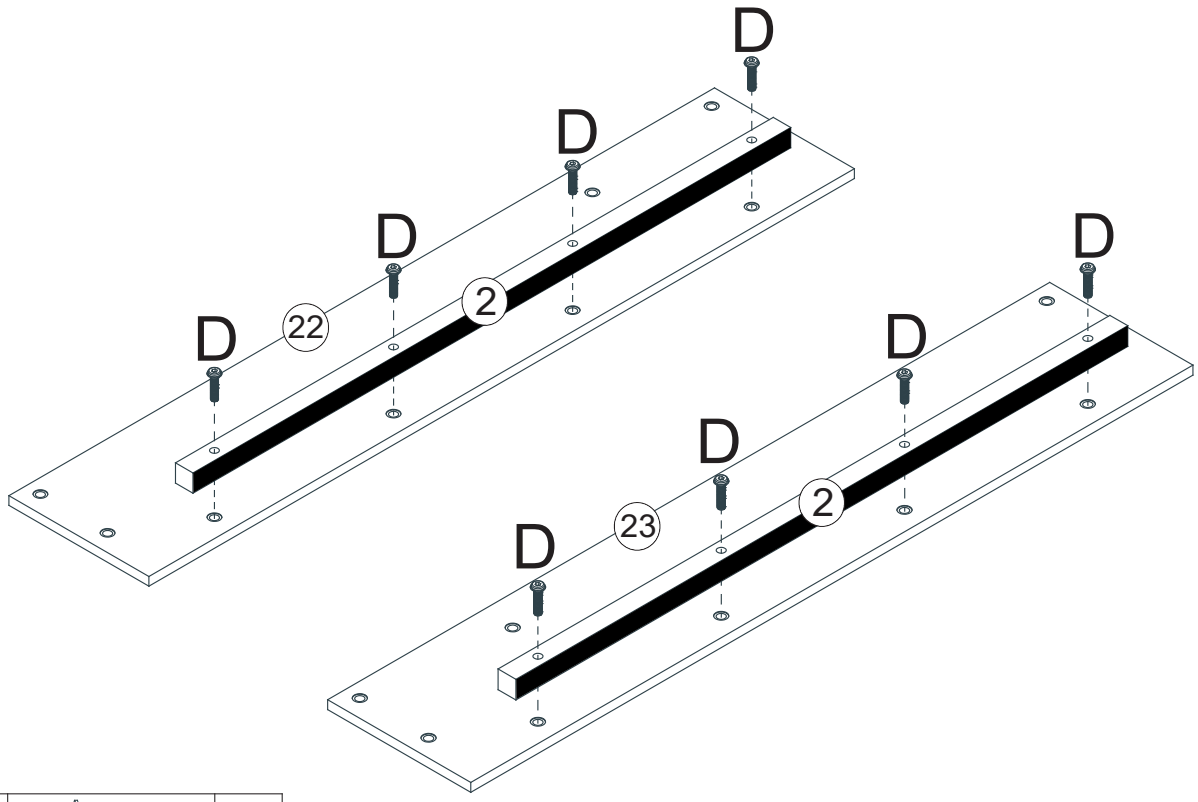12




D	M8x33	8 pcs

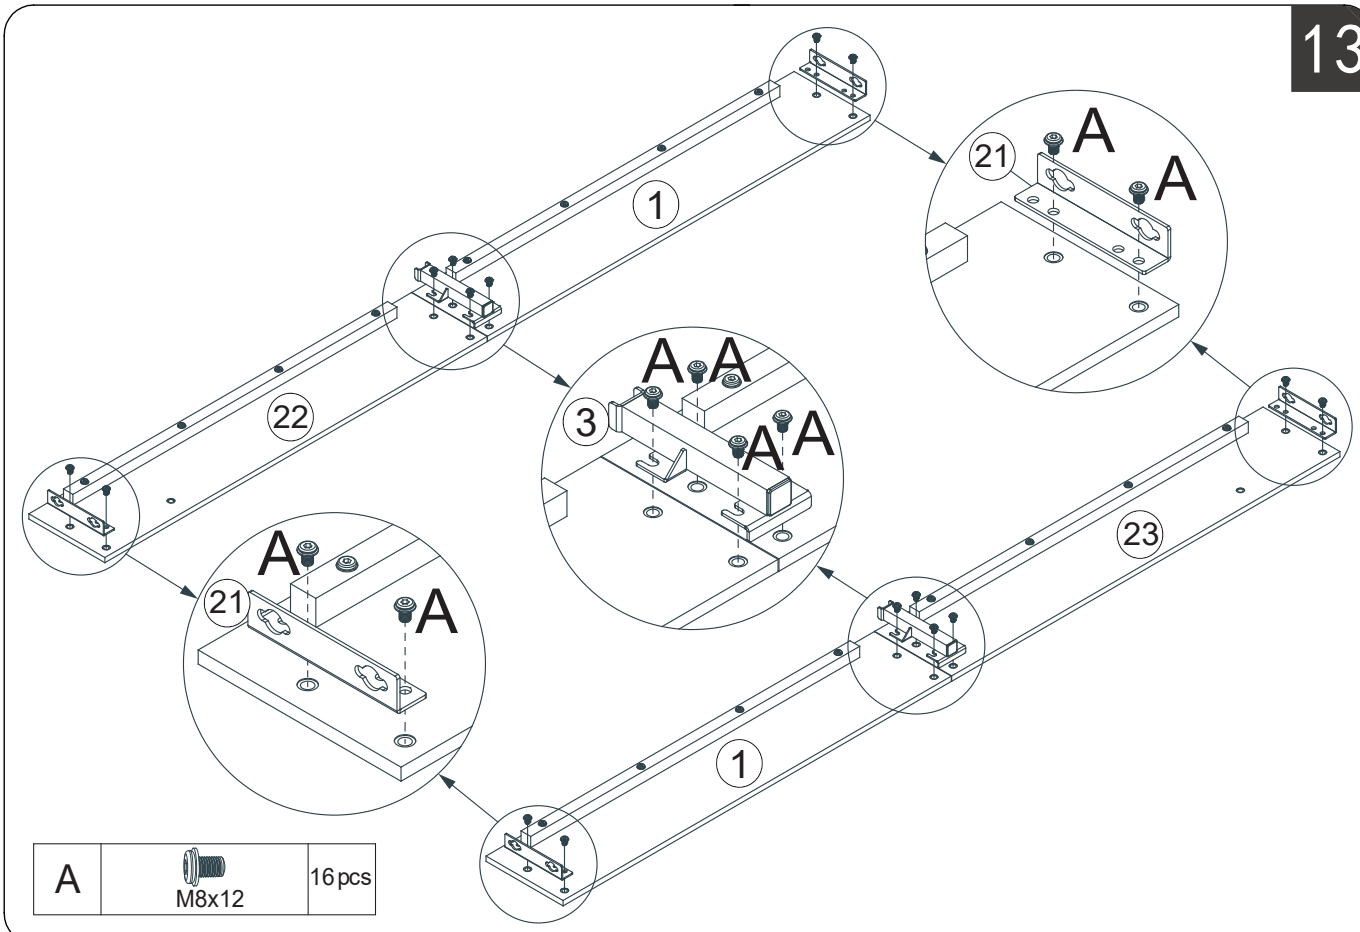13



A	M8x12	16 pcs

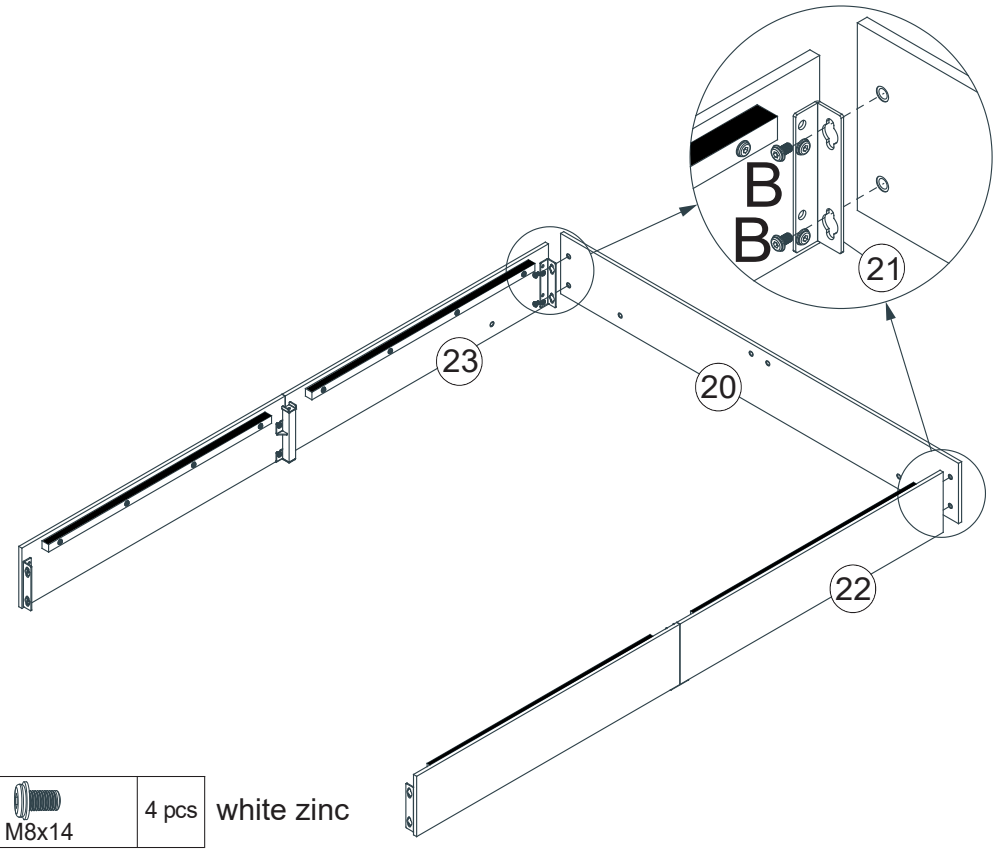
14



B	M8x14	4 pcs	white zinc


15

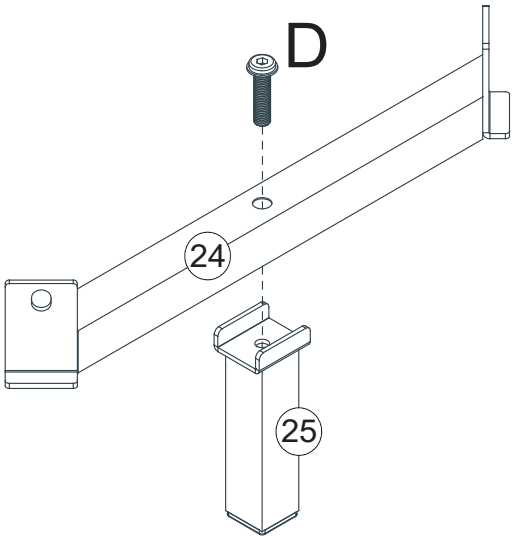x2




D	M8x33	2 pcs

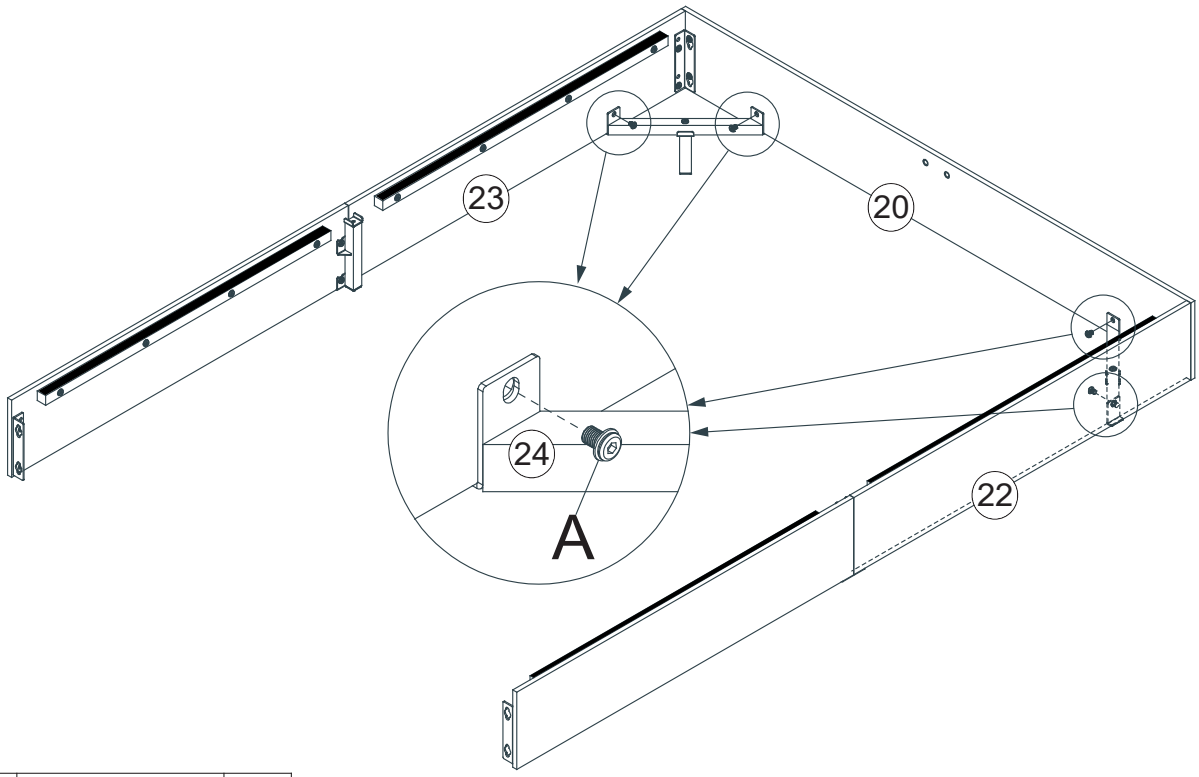16




A	M8x12	4 pcs

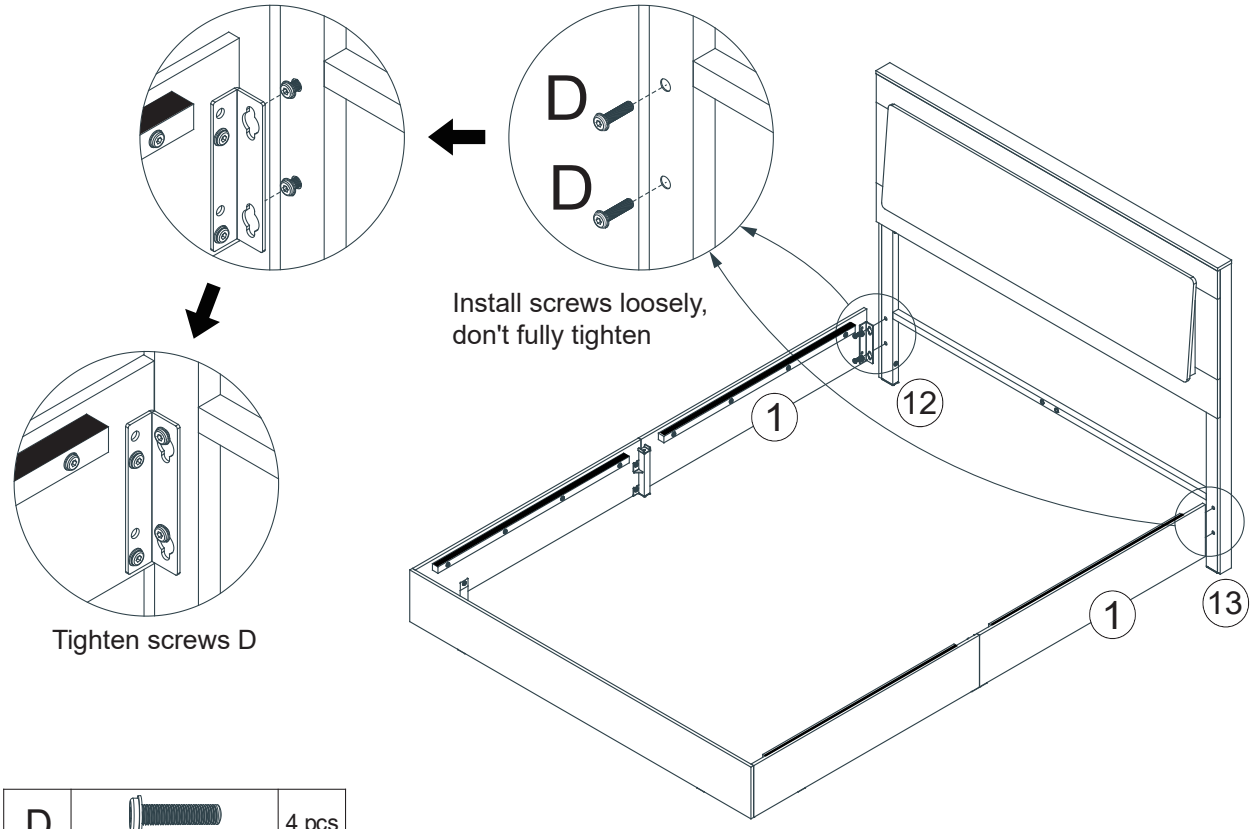17



D	M8x33	4 pcs

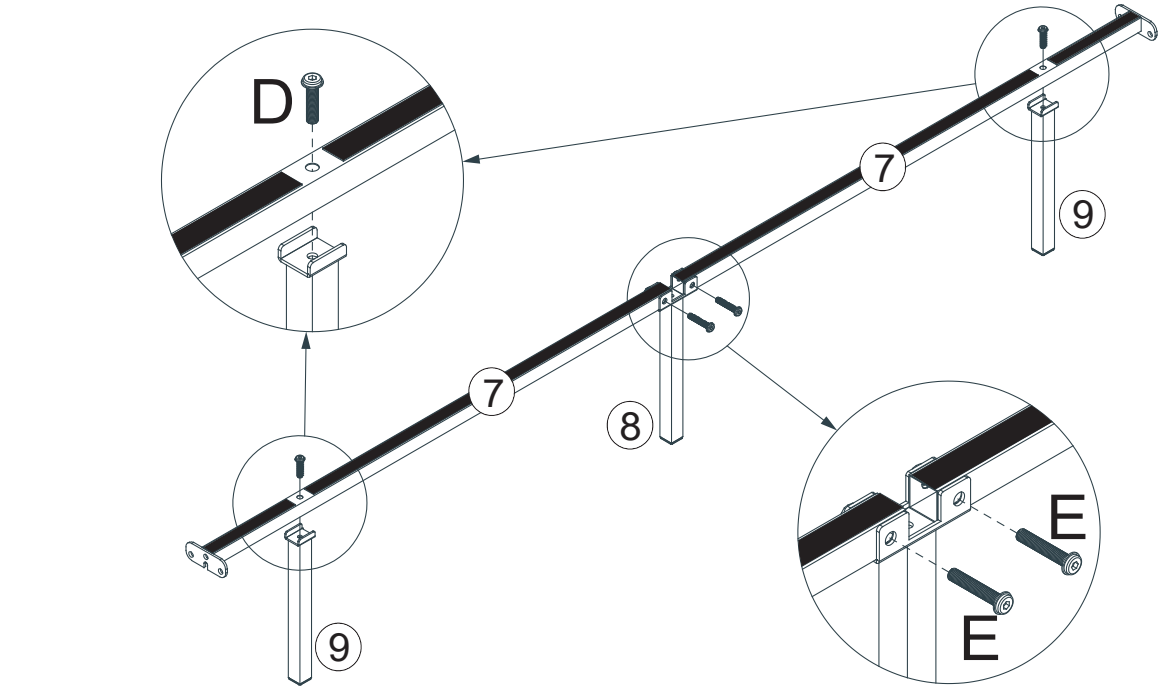
18



D	M8x33	2 pcs
E	M8x45	2 pcs


⚠ Do not fully tighten the screws yet.

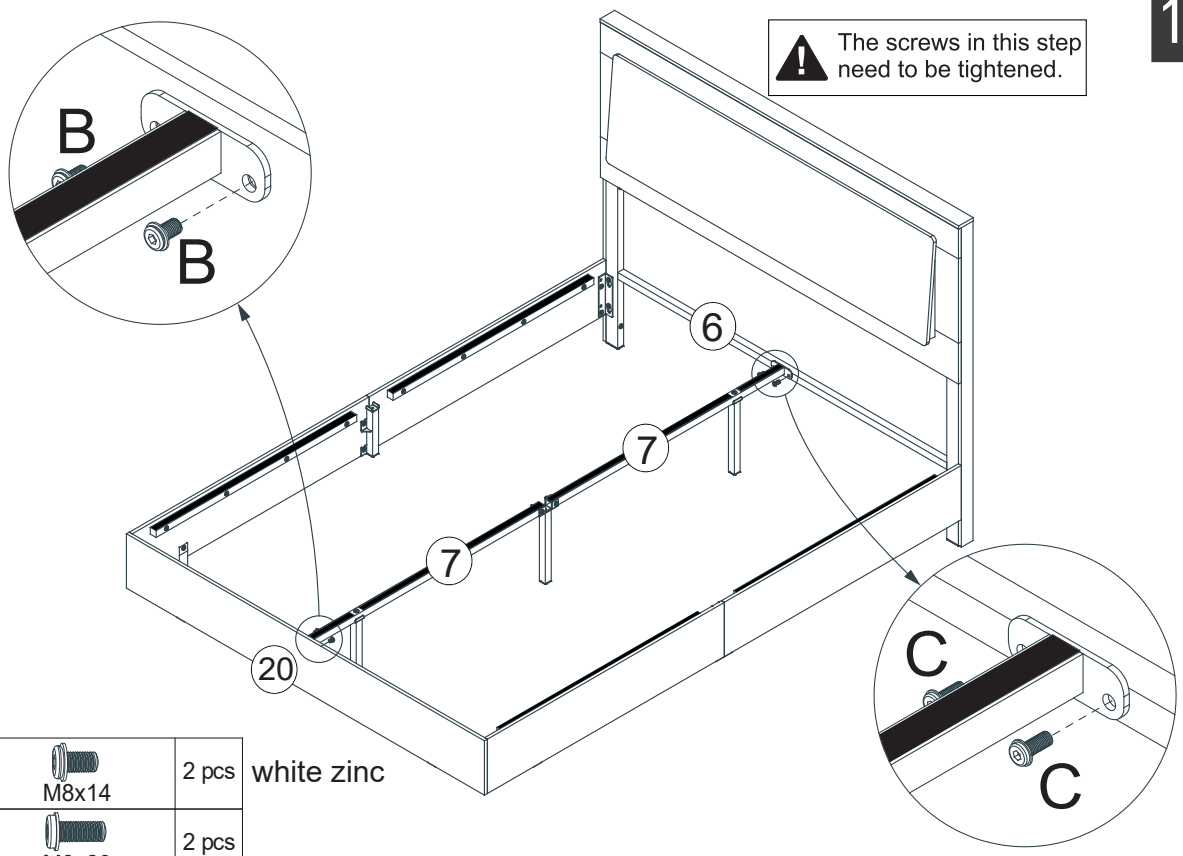19




B	M8x14	2 pcs	white zinc
C	M8x20	2 pcs	

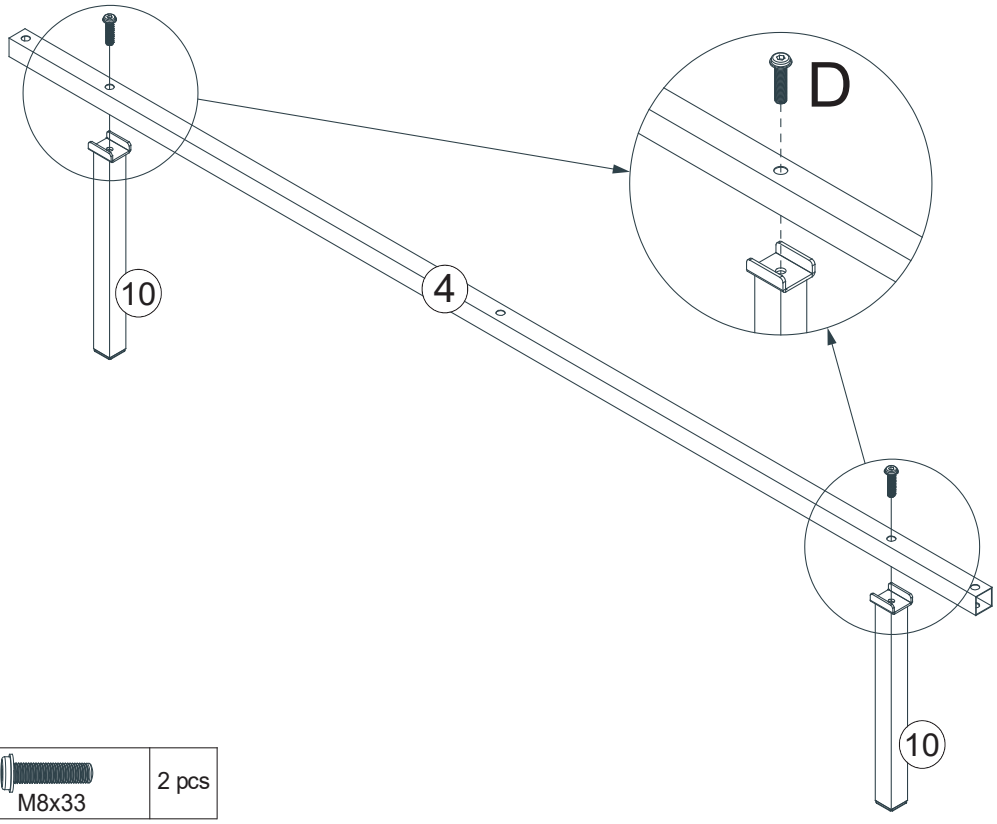20




D	M8x33	2 pcs

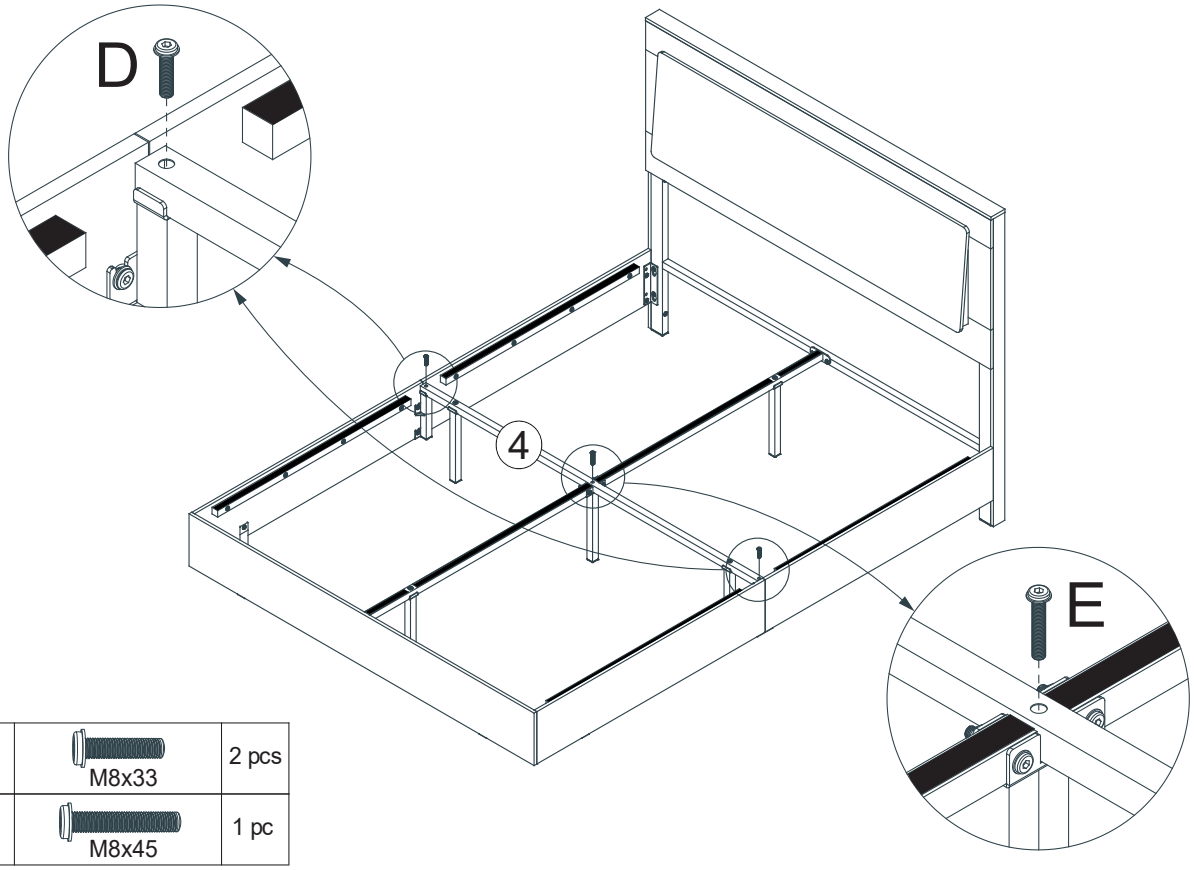21



D	M8x33	2 pcs
E	M8x45	1 pc

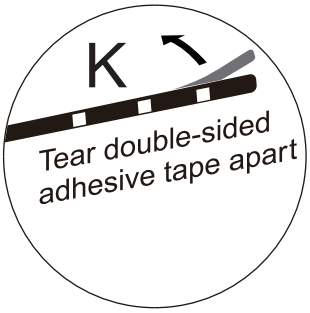22




Attach the LED strip to the bottom of the bed in the direction of the arrow.

K		1pc	long


23

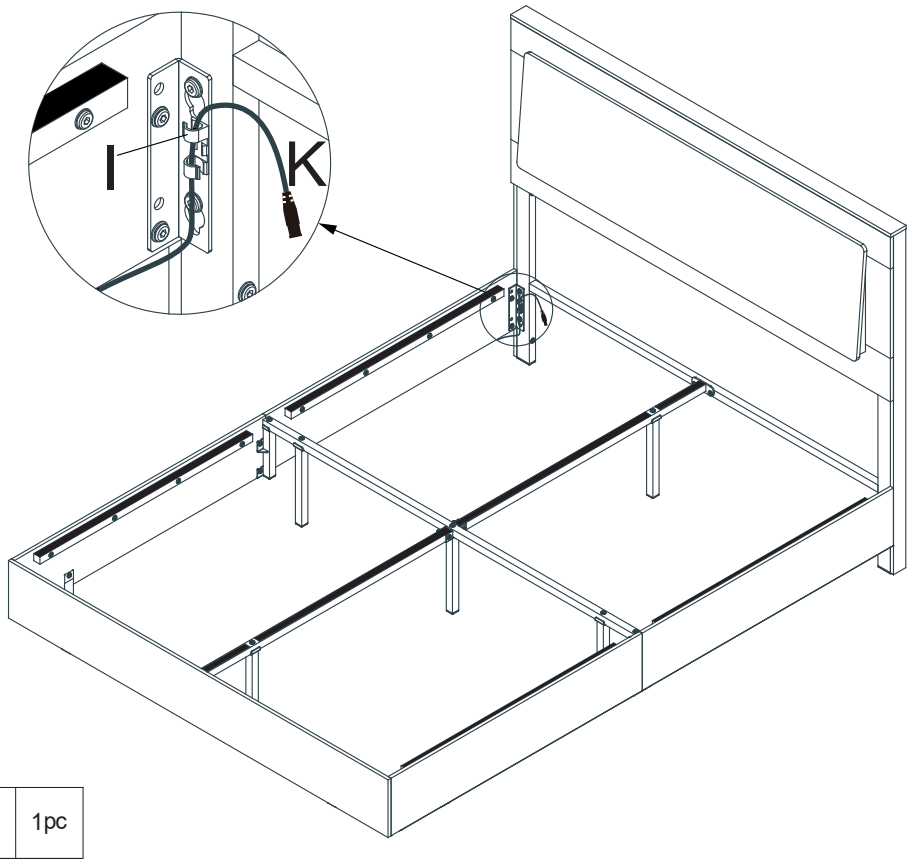Tear off adhesive tape on Part I, then stick it to part 21.Use part I to orgainze cables.




I		1pc

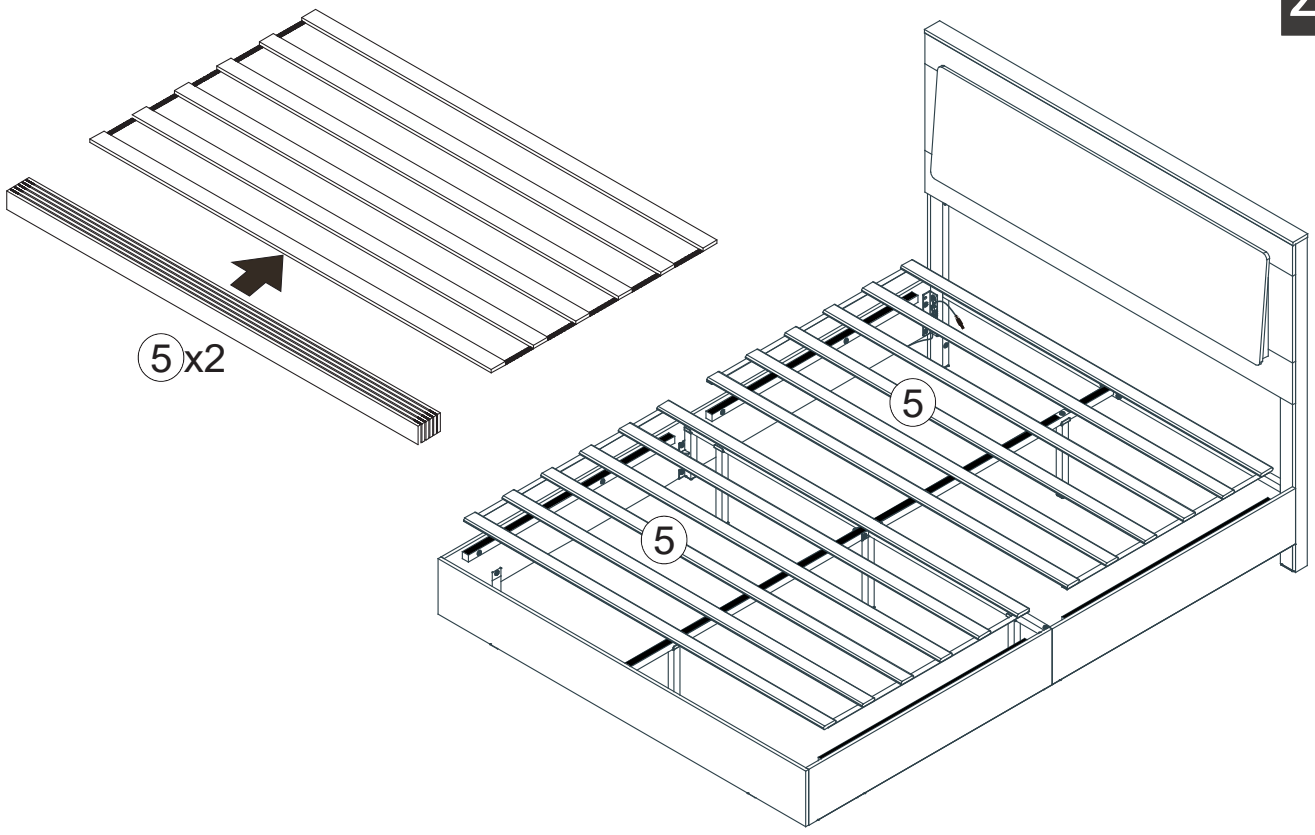24




25

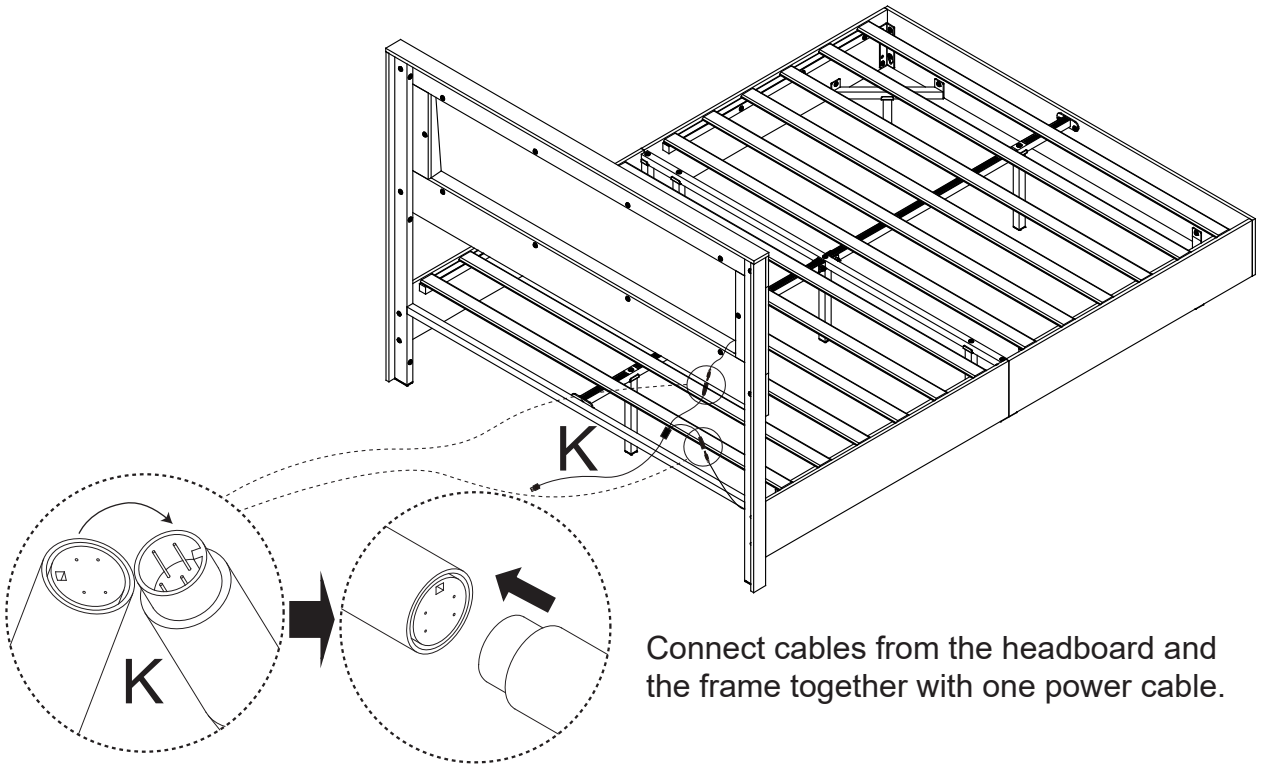

Connect cables from the headboard and the frame together with one power cable.

K		1pc

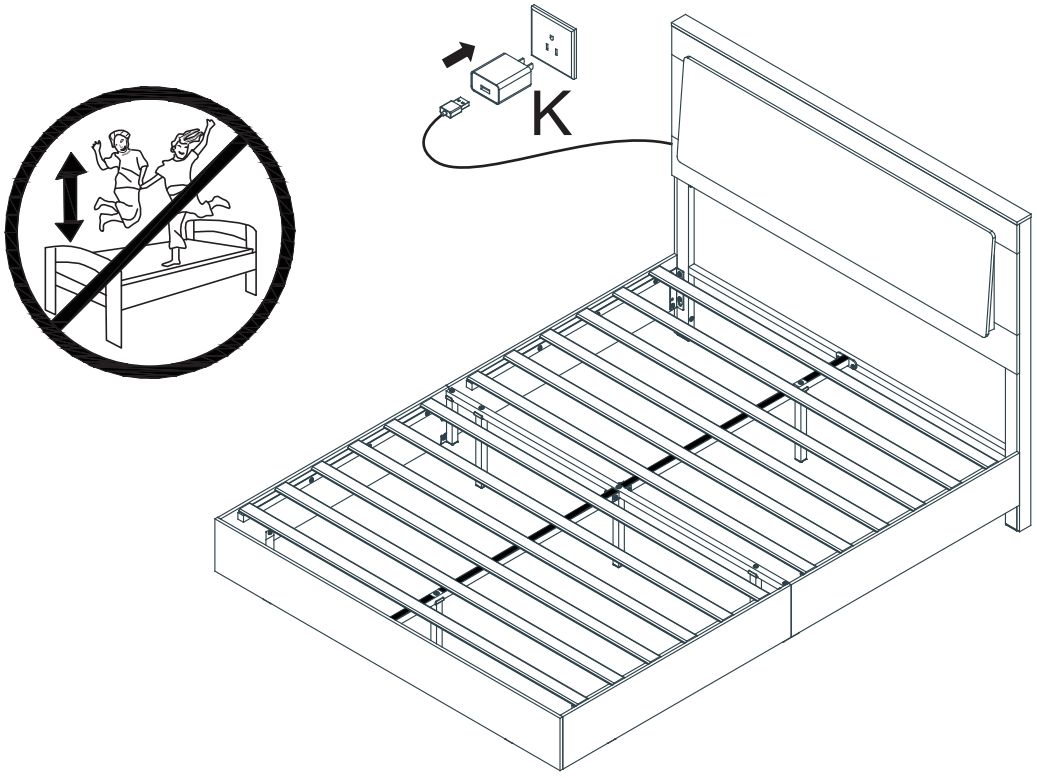26



K		1pc

Installation Complete