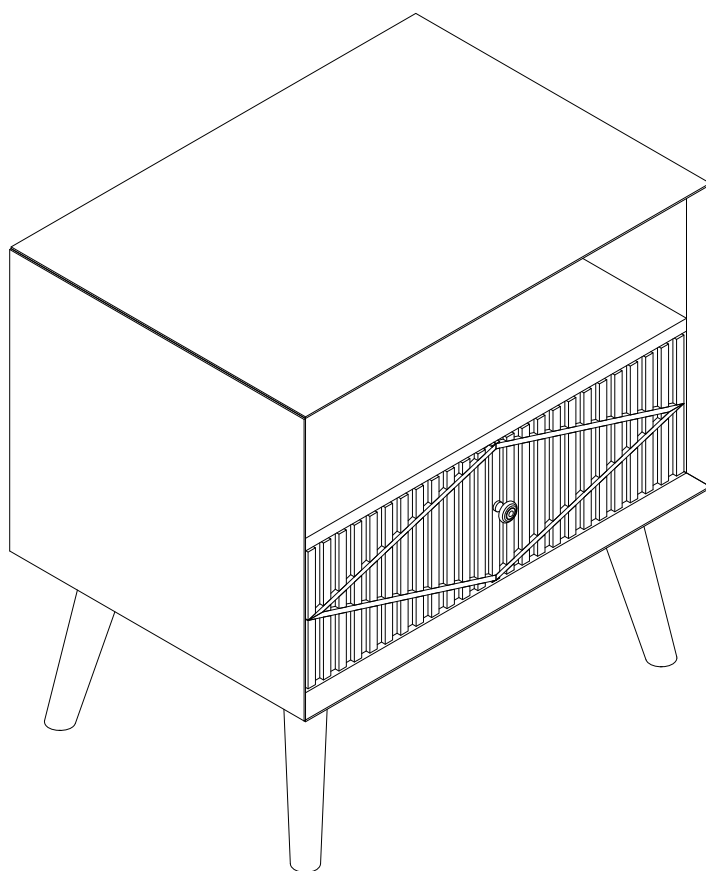


ITEM NO.ZX0182

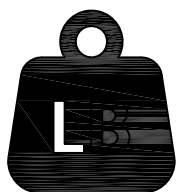


NOTE:

This brochure contains IMPORTANT safety info. Please read and keep for future reference.

MAINTAINANCE AND WARNING





- 1.Keep furniture away from heat sources.
- 2.Do not clean furniture with harsh cleaner or polishes.Do not use detergents,solvents,abrasives,spray packs or leather cleaner. Use non-color mild soa with warm water to clean spills(Mix 1:10 soap to water).
- 3.Do not place furniture under direct sunlight,material will possibly fade over time.
- 4.Do not use on site dry cleaning machine.Children should not climb or jump on the furniture.
- 5.Do not write on furniture that is not protectedby a padded barrier.
- 6.Not for commercial use,only for residential use.



Weight Limitation














80 LBS

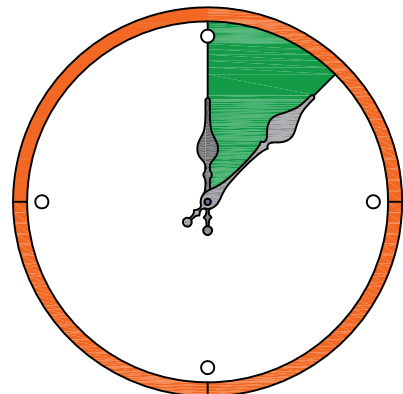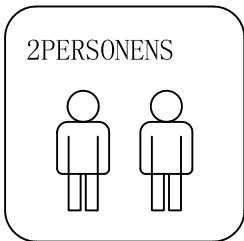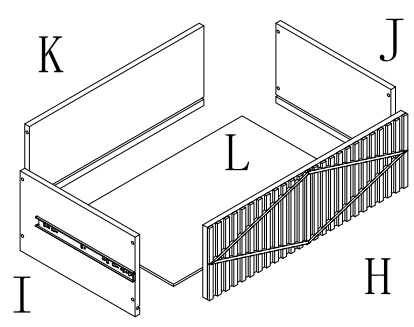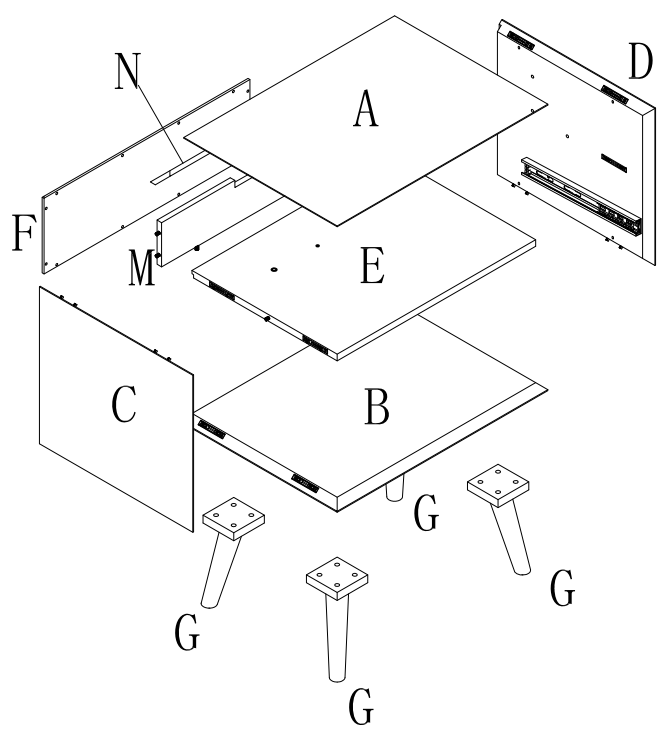EXPLOSIVE VIEW








Around 55 min

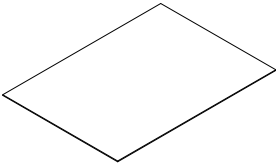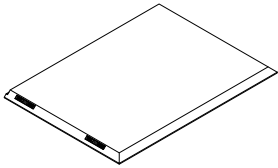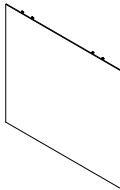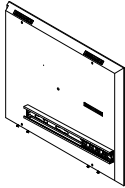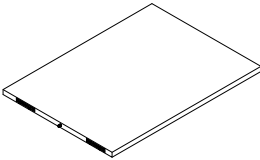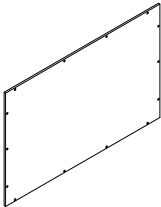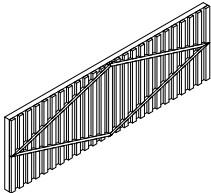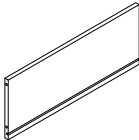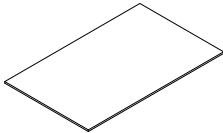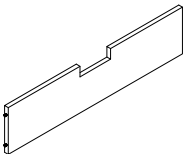
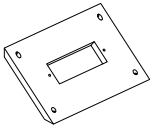
PARTS LIST 1

A x1 	B x1 	C x1 	D x1 
E x1 	F x1 	G x4 	H x1 
I x1 	J x1 	K x1 	L x1 
M x1 	N x1 		

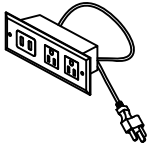


HARDWARE LIST

#1	x1		#2	x1		#3	x14		#4	x1		#5	x2		#6	x2	
																	
					Ø4*40MM			Ø4*25MM						Ø3*12MM			Ø4*39MM
#7	x2		#8	x1		#9	x2		#10	x2		#11	x12		#12	x16	
																	
											Ø4*20MM			Ø3*15MM			Ø6*25MM

TOOL LIST

#13	x1	#14	x1
			
		M6	


HARDWARE SPARE LIST

#3	x1	#11	x1	#12	x1
					
Ø4*25MM		Ø3*15MM		Ø6*25MM	

ASSEMBLY INSTRUCTIONS

STEP-1

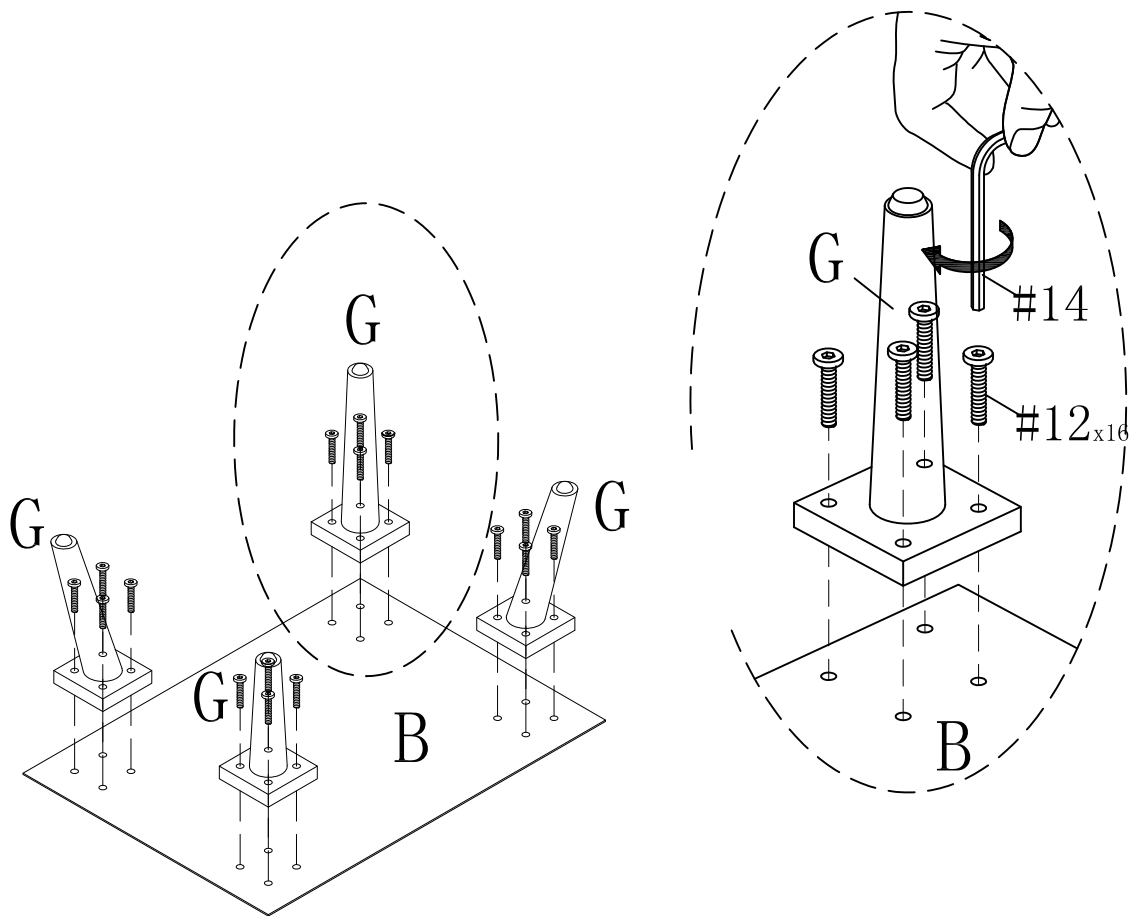1. install leg G on of bottom panel B, ensure the corresponding holes are aligned and fix with bolt #12, then tighten the bolt with an Allen key #14.




#12	x16	#14	x1
			
ø6*25MM		M6	

ASSEMBLY INSTRUCTIONS

STEP-2

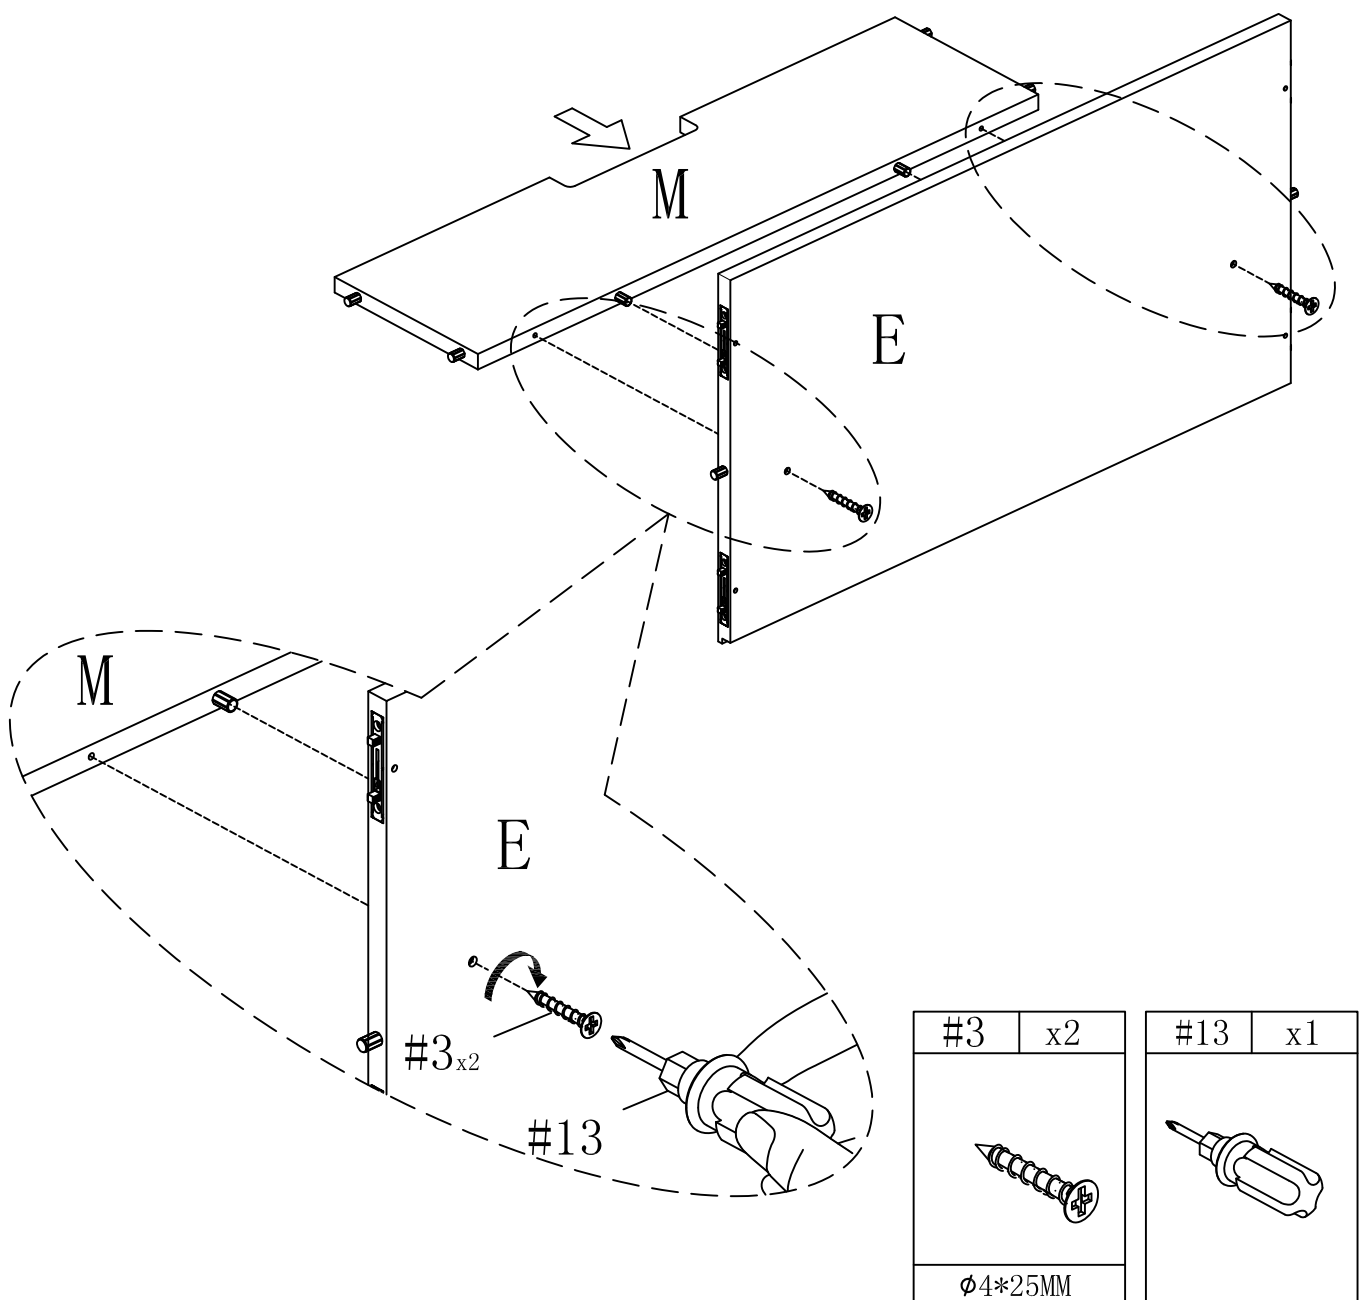
1.Insert part (M) into part (E),make sure all holes align .aligned and fix with screw #3 then tighten the screw with screwdriver #13.





ASSEMBLY INSTRUCTIONS

STEP-3

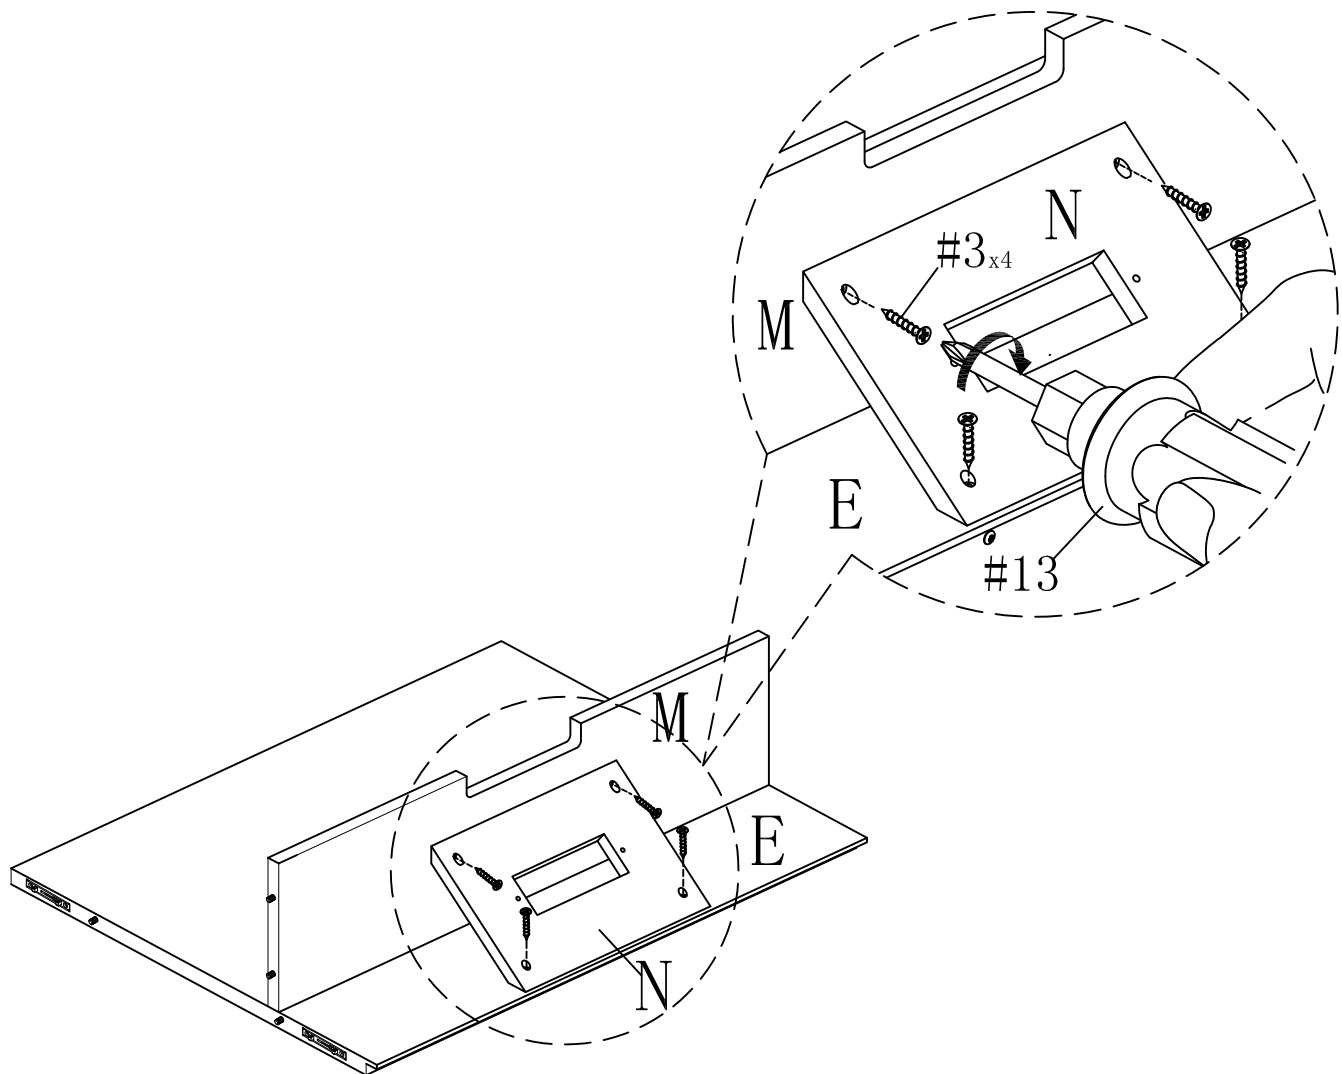1.insert part (N) into the preassembled step 2,make sure all holes aligned and use screw #3 to attach them , tighten screw #3 with screwdriver #13.






#3	x4	#13	x1
			
Ø4*25MM			

ASSEMBLY INSTRUCTIONS

STEP-4

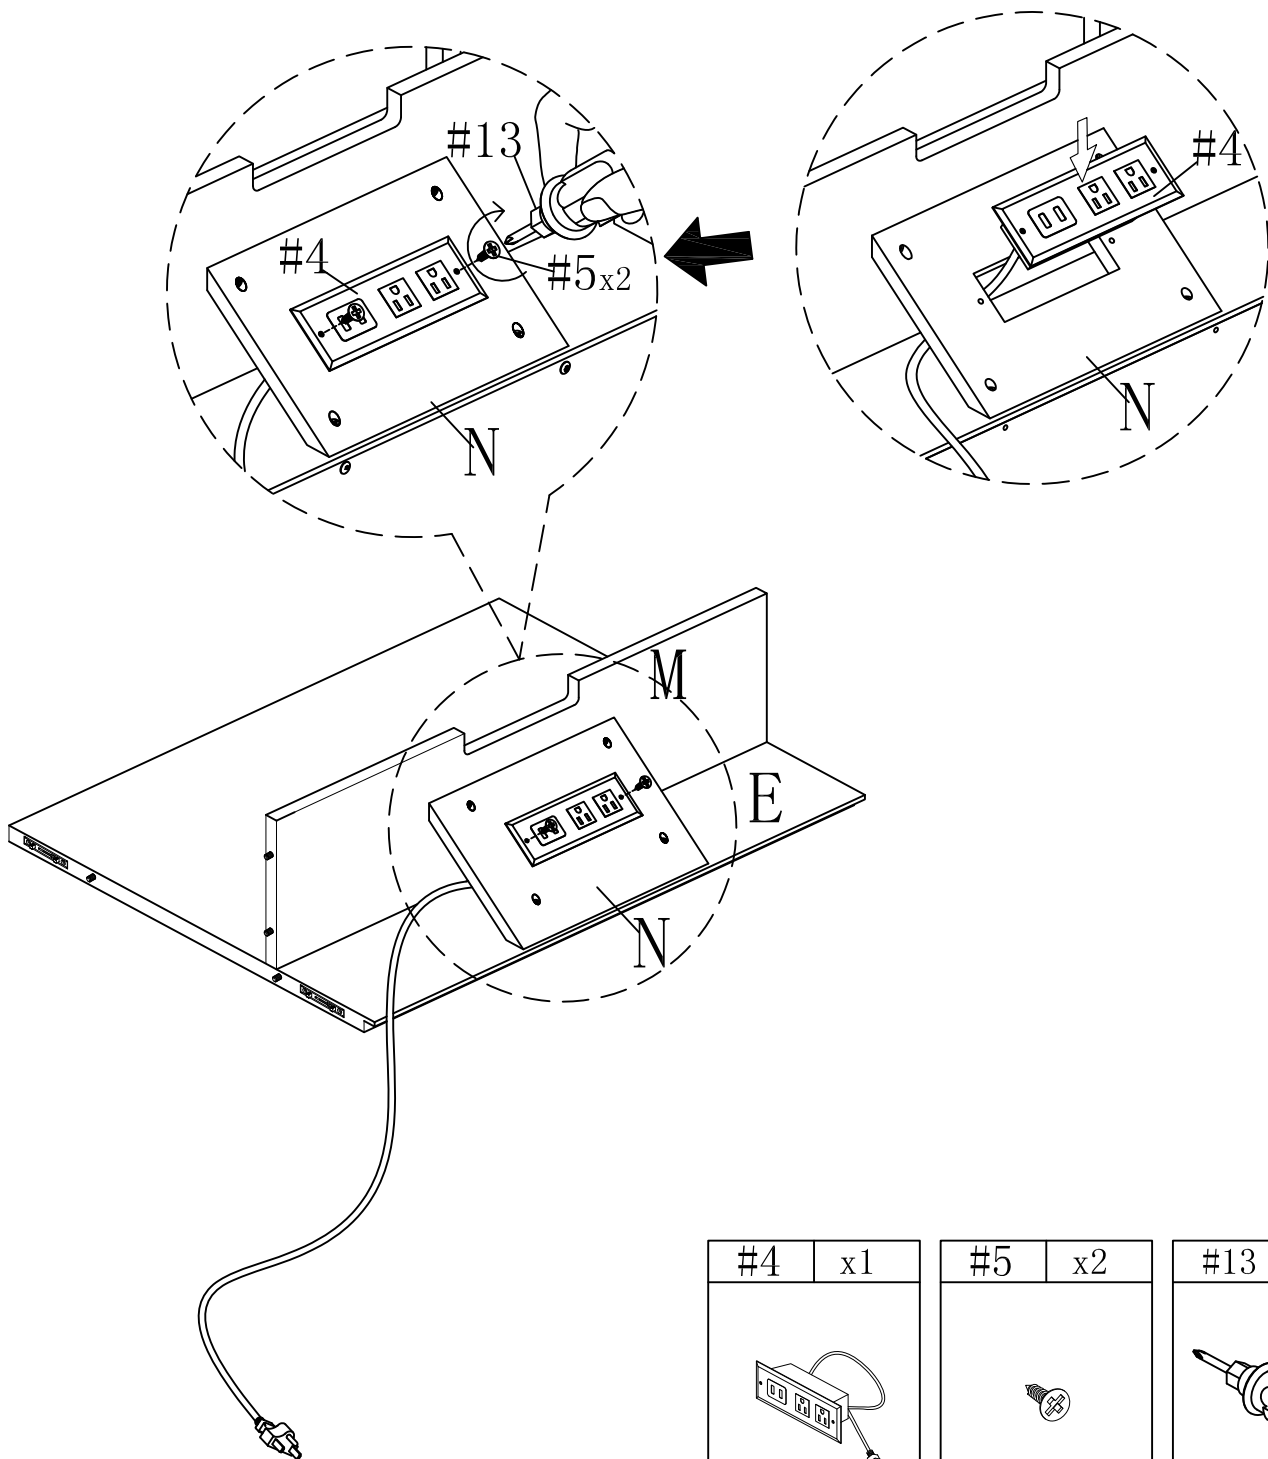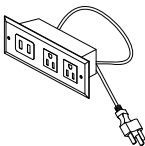1.insert part #4 into the preassembled step 3,make sure all holes aligned and use screw #5 to attach them , tighten screw #5 with screwdriver #13.




#4	x1	#5	x2	#13	x1
					
		Ø3*12MM			

ASSEMBLY INSTRUCTIONS

STEP-5

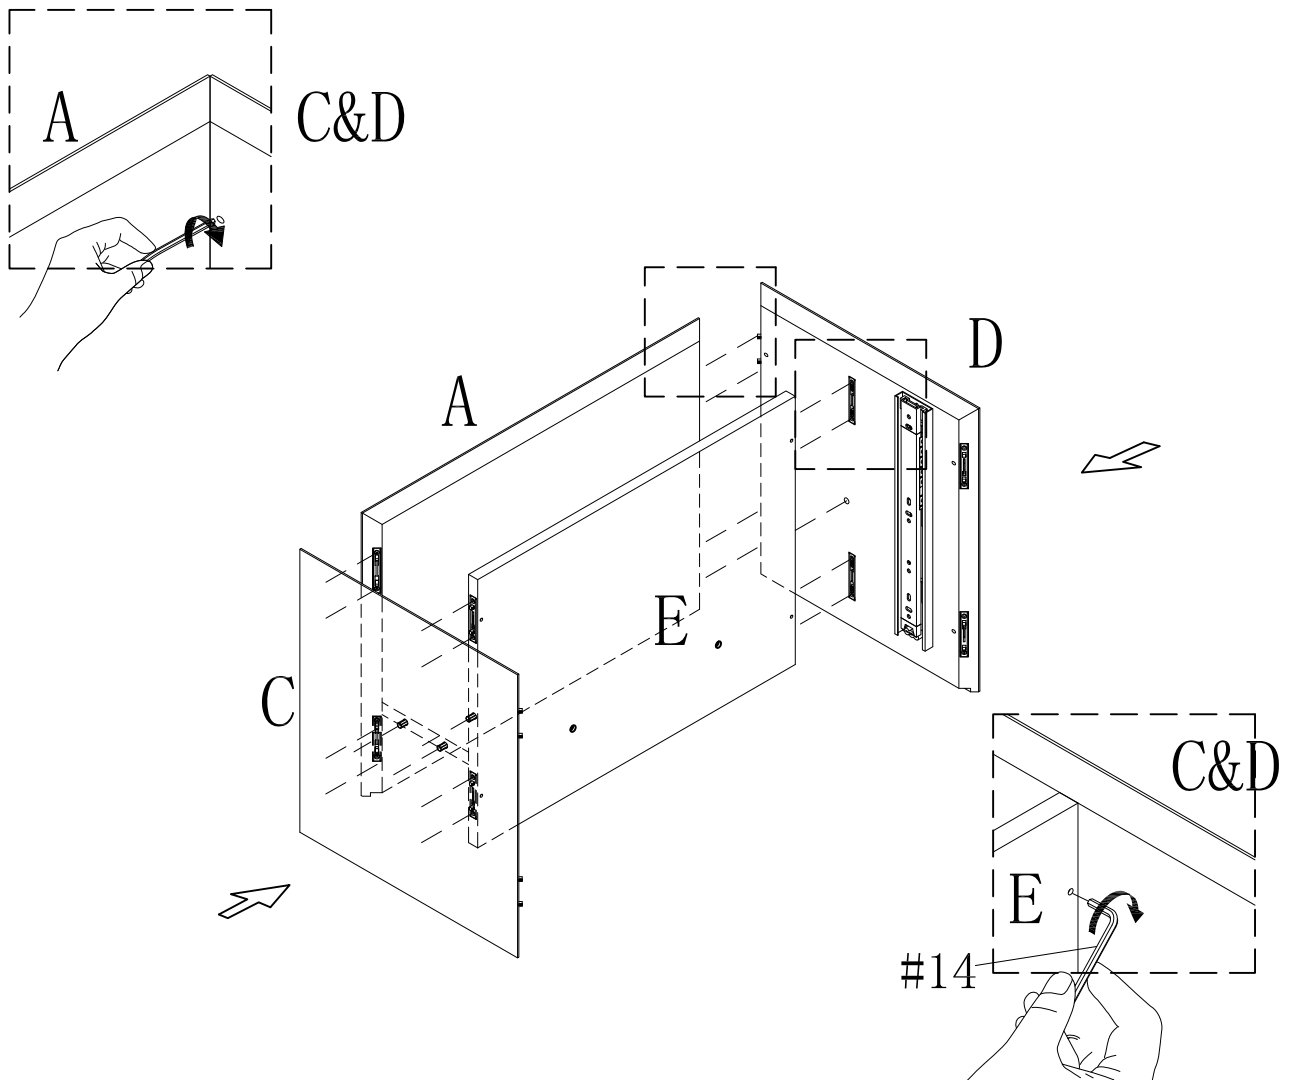1.connect (C&D) to (A&E) to ensure the holes are aligned,amake sure all holes aligned and then tighten it with allen key #14 as picture show.







#14	x1
	
M6	

ASSEMBLY INSTRUCTIONS

STEP-6

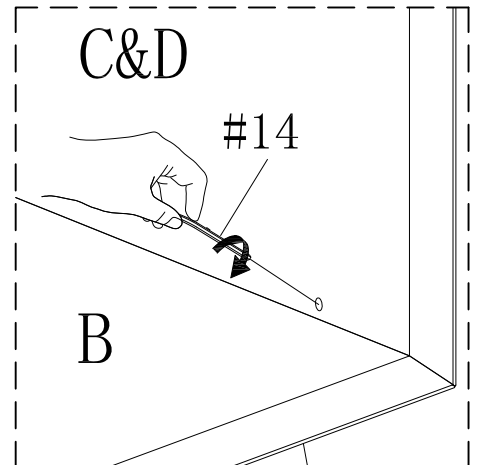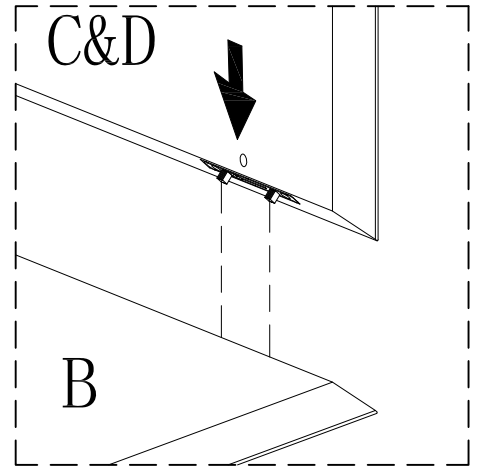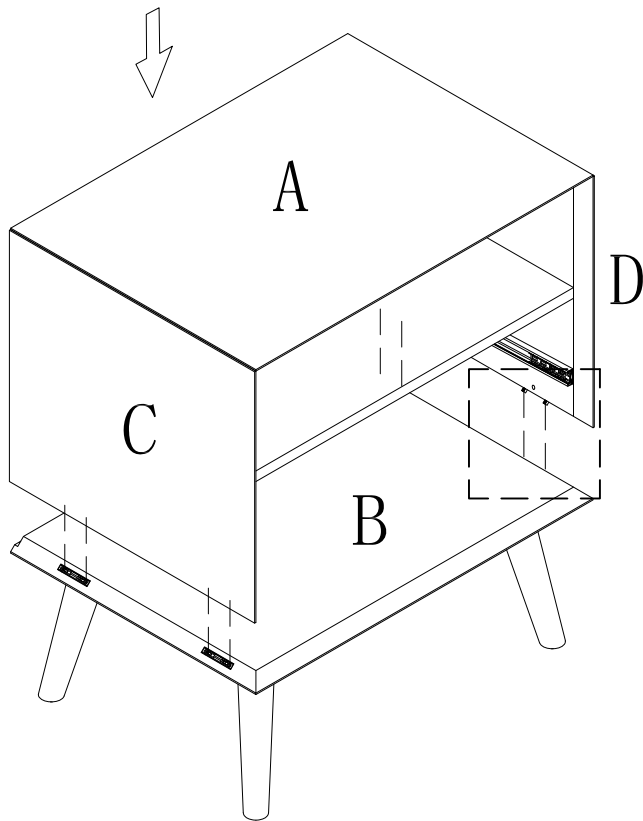1.Insert panel (C/D) into the corresponding hole of bottom(B), make sure all holes aligned and use allen key (#14) to tighten it as picture show.









#14	x1
	
M6	

ASSEMBLY INSTRUCTIONS

STEP-7

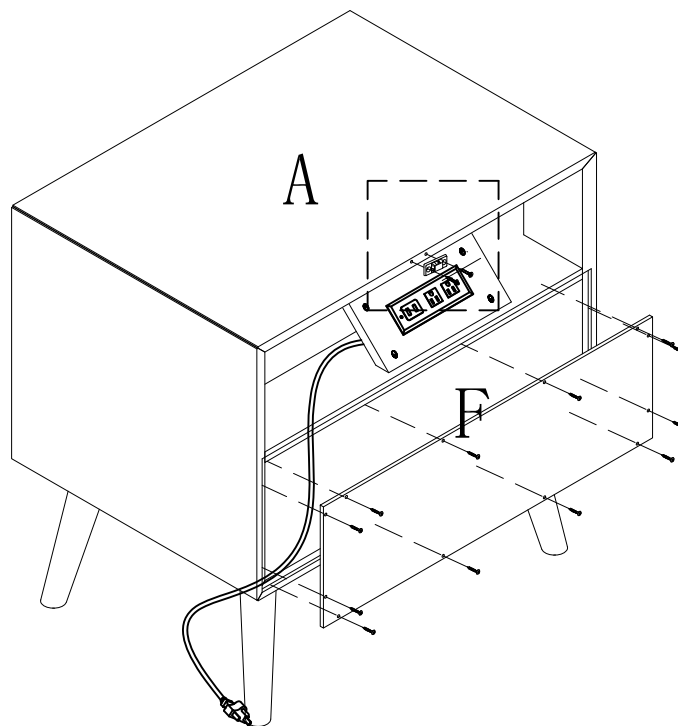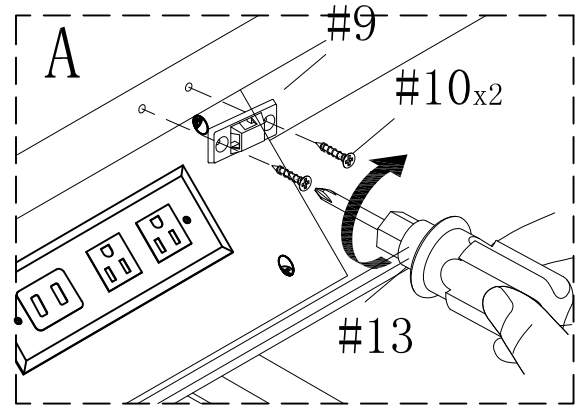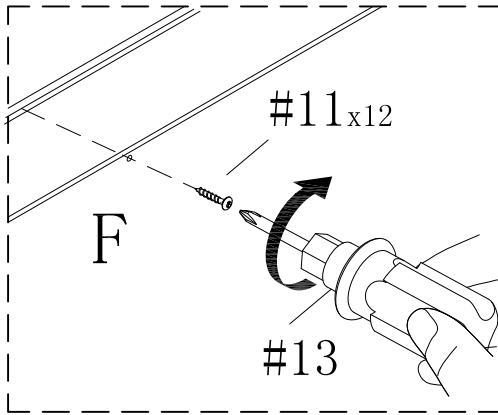1. Attach back panel (F) to the unit pre-assembled on step 6 with screw #11, tight it with screwdriver #13, attach bracket #9 to back panel (A) with screw #10, tight screw with screwdriver #13.




#9	x1	#10	x2	#11	x12	#13	x1
							
		Ø4*20MM		Ø3*15MM			

ASSEMBLY INSTRUCTIONS

STEP-8

1.Connect part (I&J) to part H using screw #3 and tighten it with screwdriver #13.

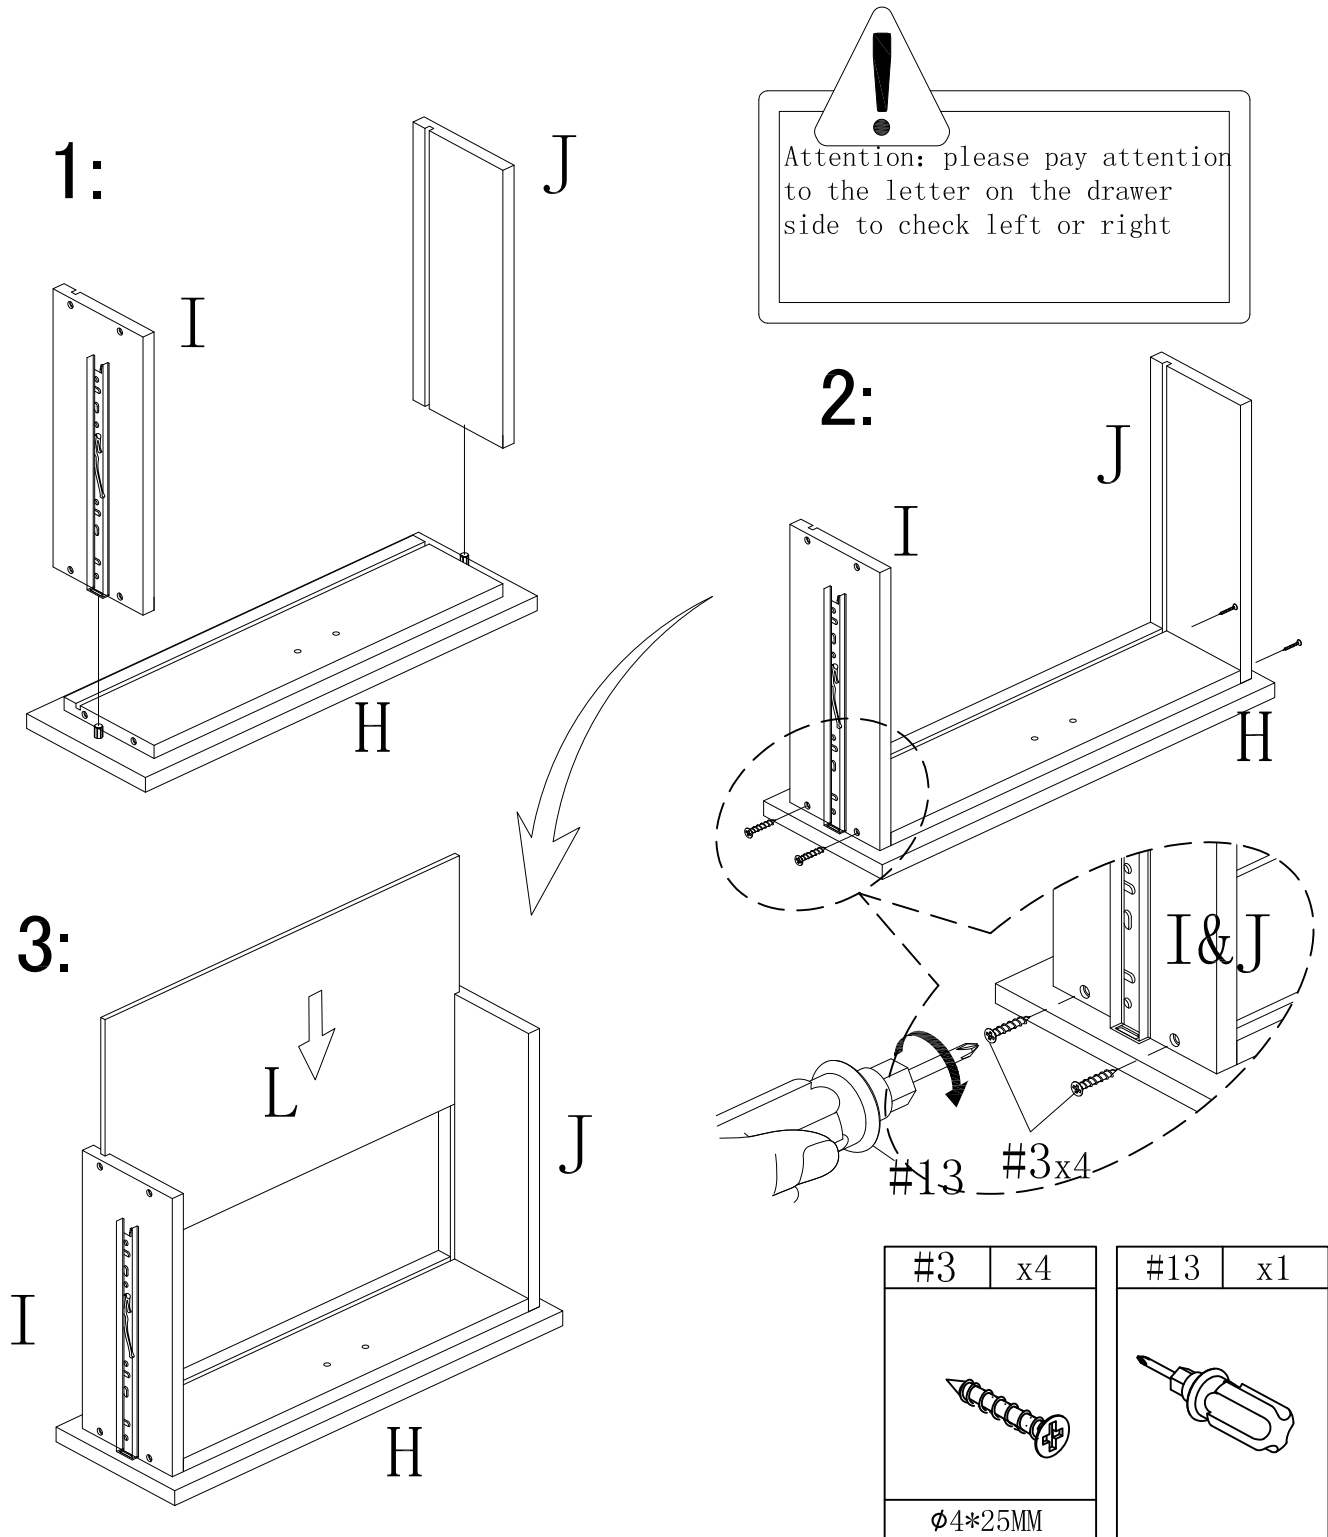
2.slide in the part (L) into the groove in part (I&J). make sure they are also in groove in part (H).






ASSEMBLY INSTRUCTIONS

STEP-9

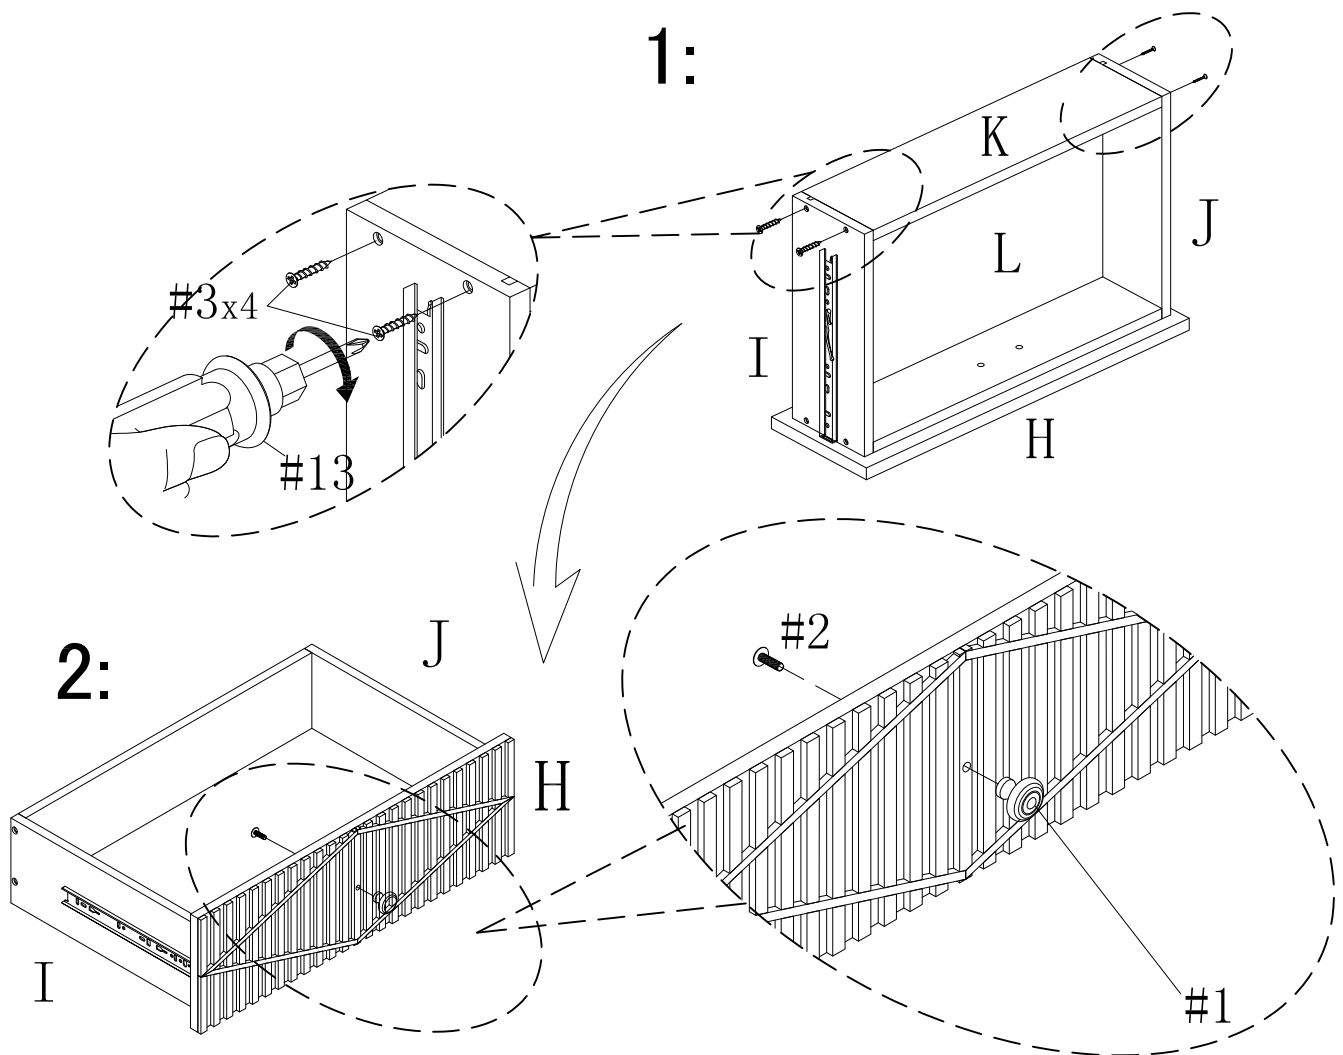
- 1.Connect the (K) and (I&J) using screw #3 , and tighten it with screwdriver #13.
- 2.Install handle #1 to panel (H) using bolt #2 and tighten it with screwdriver #13.





#1	x1	#2	x1	#3	x4	#13	x1
							
		Ø4*40MM		Ø4*25MM			

ASSEMBLY INSTRUCTIONS

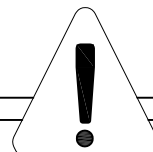
STEP-10



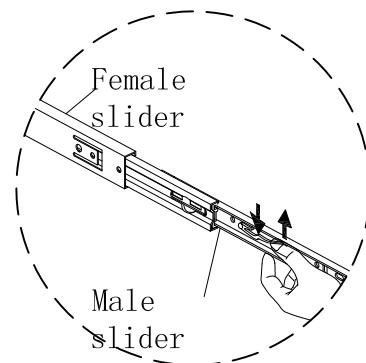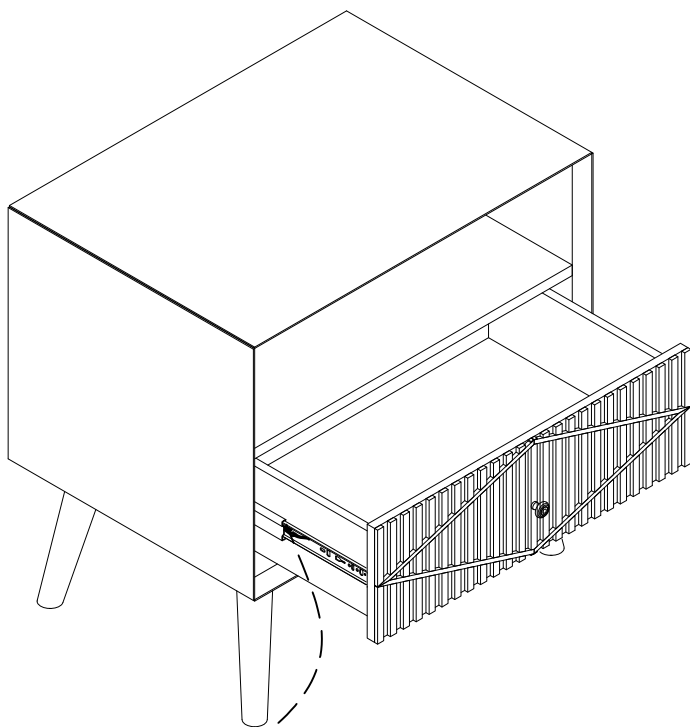Attention: When installing the drawer, slide the steel ball slide rail of side panel to the most front as picture show.




Schematic diagram of slide rail disassembly

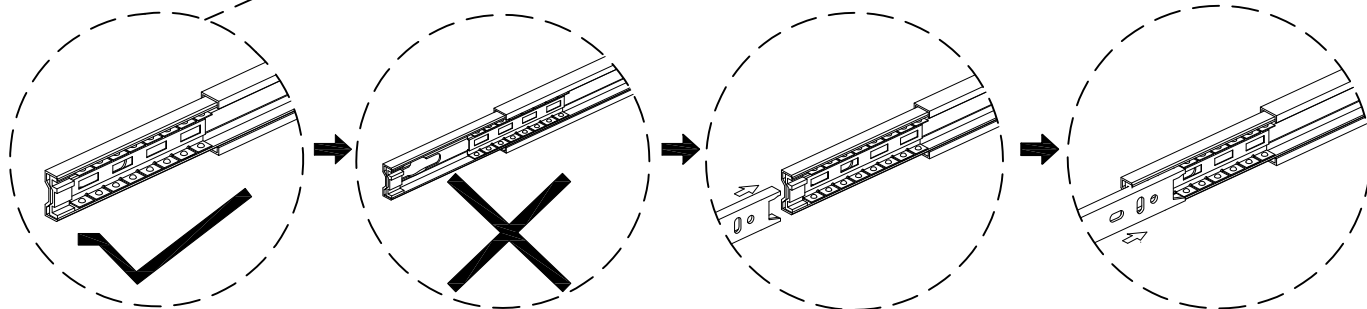

ASSEMBLY INSTRUCTIONS

STEP-11






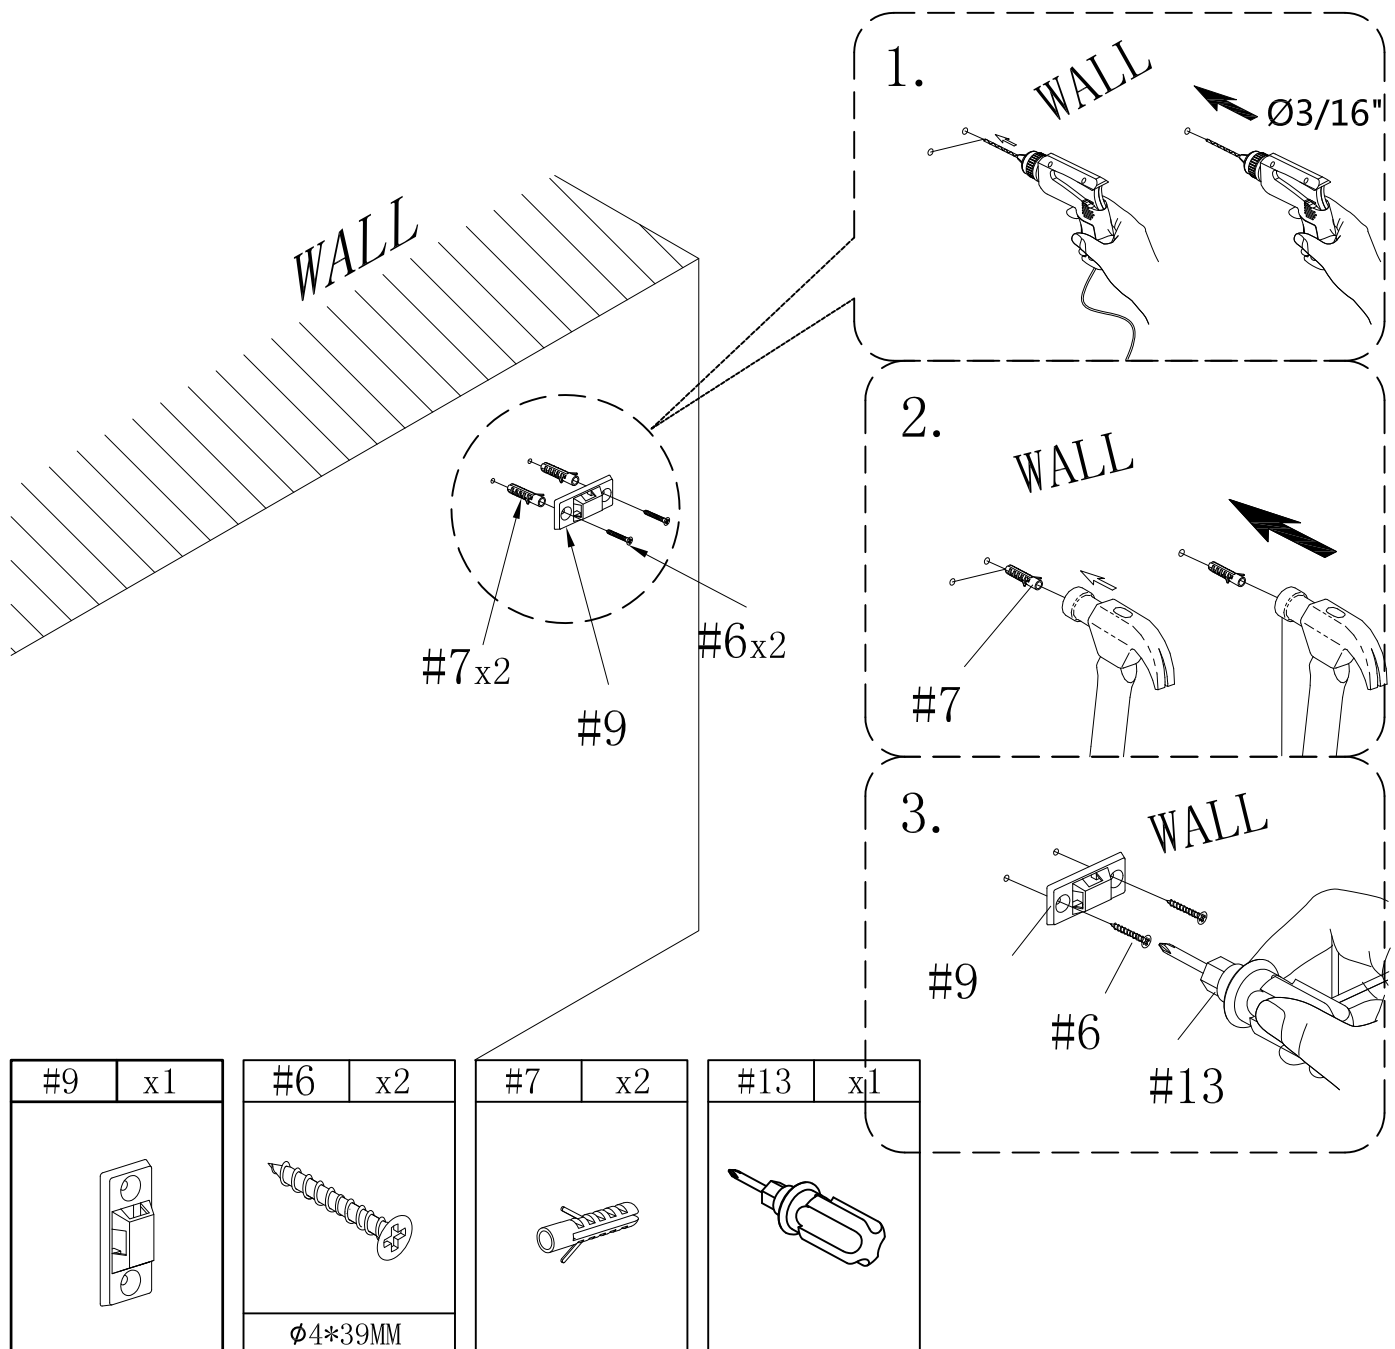
1. Install the anti-collapse device.
2. Mark the position on the wall, that corresponds to the location of part #9 on the panel (A); Drill and insert the expandable screw #10 by hammer.
3. Assemble the part #9 to the wall. Align the hole in the part #9 with the expandable screw #7, use screw #6 to attach it and tighten by screwdriver #13.



ASSEMBLY INSTRUCTIONS

STEP-12

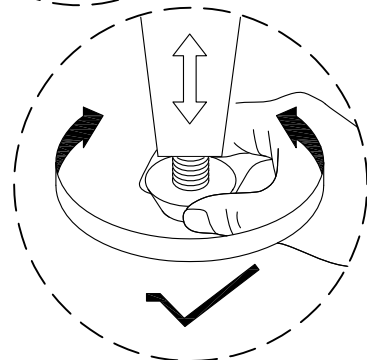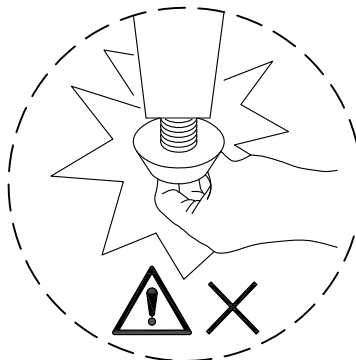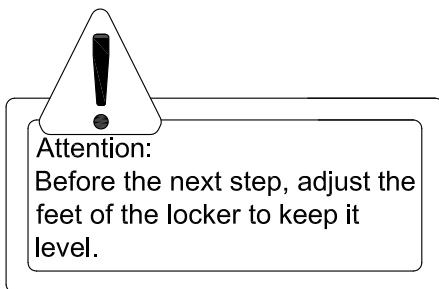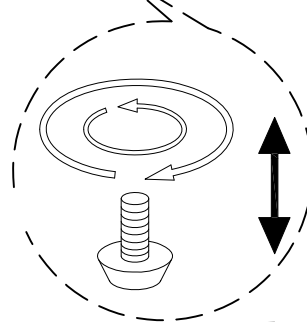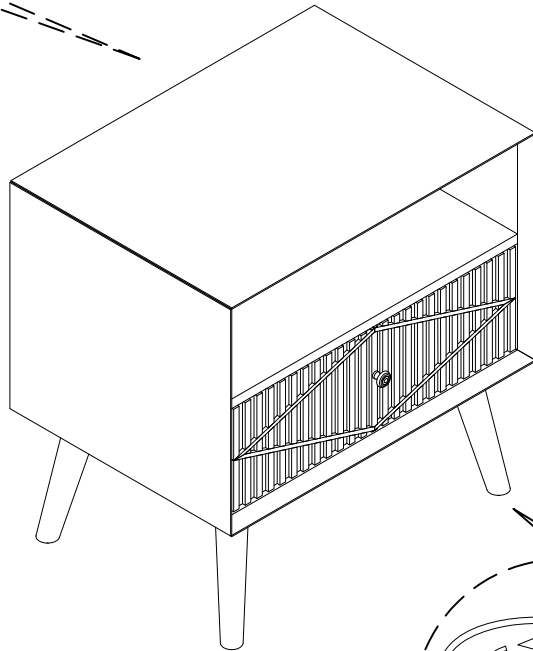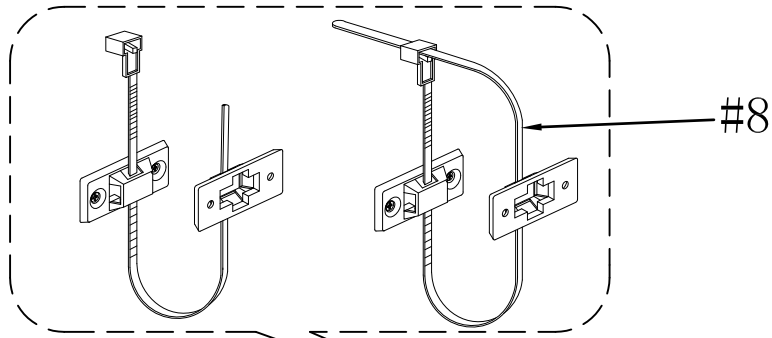1. Attach the unit to the wall with tie #8 Anti-tipping hardware must be used for this product to avoid tipping and injury. If the unit is not stable , please adjust the adjustable level.



WARRANTY

1. We strive to offer high-quality products, and we also try our best to satisfy each and every customer that orders from us with product or service as needed.
2. We provide 30 days warranty starting from the time you receive the item. Each customer must provide a record of their order such as the order number, or item receipt for any items that are out of the warranty period you may also still receive.
3. Replacement parts by purchasing them with our company if they are available.

Are you having difficulty
With assembly? Missing parts?
Please send email with your order No to
HKXIMU2026@126.COM
For return, please check the return policy with
the retailer or market place you bought from.

Appreciate your purchasing from us.
Pop up your life by our furniture piece!