


---

# J9P001BSOM

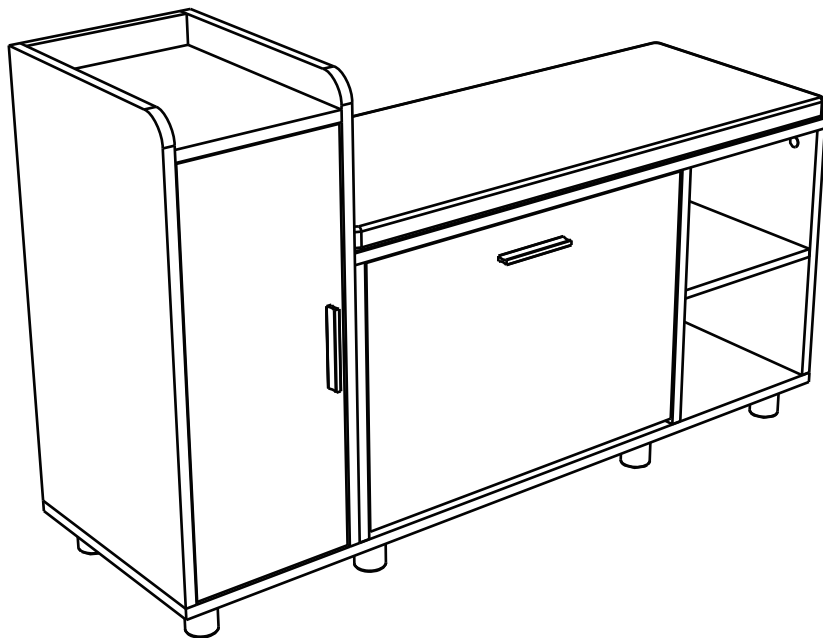


As this item contains many parts, please read the installation instruction carefully before installation and complete the installation with the cooperation of your partner. Please use tools properly and carefully. If you have any questions about the product and installation, please contact us.

**[hosoteservice@gmail.com](mailto:hosoteservice@gmail.com)**

Our professional after-sales team will serve you online all day.

---

# Before You Start

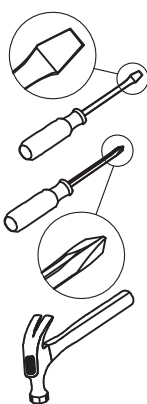

- ✓ Read through each step carefully and follow the proper order
- ✓ Separate and count all your parts and hardware
- ✓ Give yourself enough room for the assembly process
- ✓ Have the following tools: Flat Head Screwdriver, #2 Phillips Head Screwdriver and Hammer
- ✓ Caution: If using a power drill or power screwdriver for screwing, please be aware of to slow down and stop when screw is tight. Failure to do so may result in stripping the screw.

# Helpful Hints


PEOPLE NEEDED FOR ASSEMBLY: 1-2

- Open your item in the area you plan to keep it to avoid excessive heavy lifting.
- Identify, sort and count the parts before attempting assembly.
- Compression dowels are lightly tapped in with a hammer.
- Slides are labeled with an **R** (right) and **L** (left) for proper placement.
- Make sure to always face the point on the top of the Cam Lock towards the outer edge.
- Use all the nails provided for the back panel and spread them out equally.
- Back panel must be used to make sure your unit is sturdy.
- Do NOT use harsh chemicals or abrasive cleaners on this item.
- Never push, pull, or drag your furniture.




# Board Identification


Not actual size

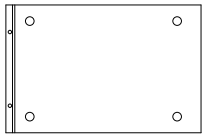

①



②




③




④




⑤




⑥




⑦

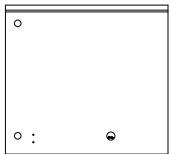


⑧

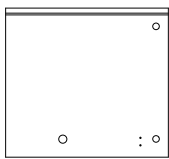

⑨

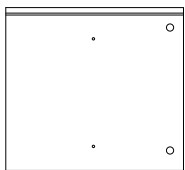

⑩




⑪




⑫



⑬

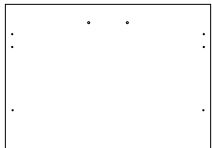

⑭




⑮



⑯ x2



⑰



⑱




⑲















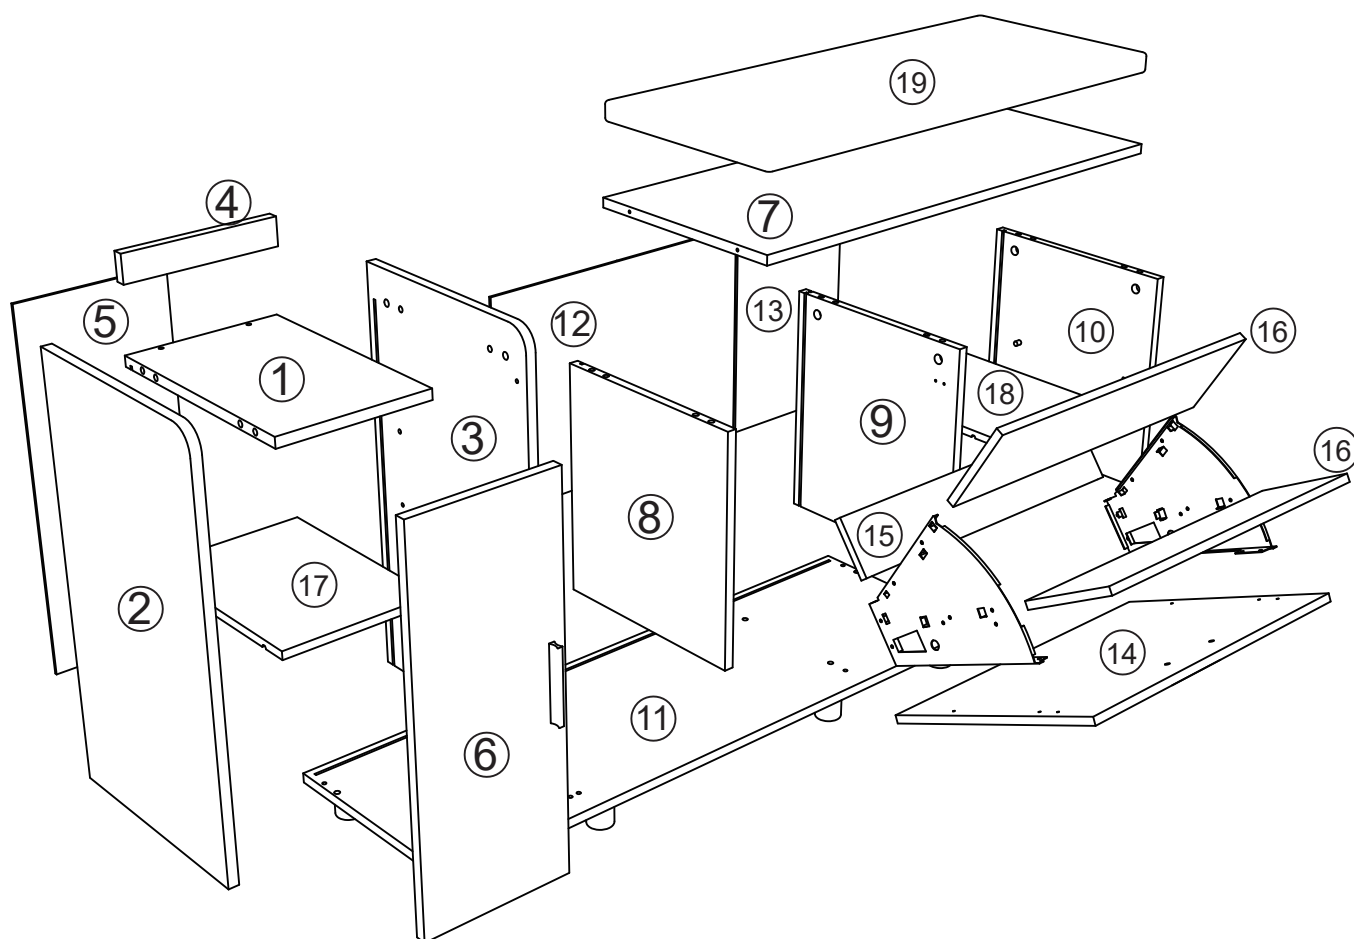


---

# Board Identification

Not actual size




# Part List

 M6X35MM <b>A1</b>   10PCS	 15X11MM <b>A2</b>   10PCS	 M8X30MM <b>A3</b>   20PCS	 M5X35MM <b>A4</b>   14PCS
 M3X12MM <b>A5</b>   9PCS	 M3X12MM <b>A6</b>   54PCS	 x2  x2  x2 M4X14mm M4X18mm <b>B</b>   1PC	 x12  x2 M3.5X16MM <b>C</b>   2PCS
  x2  x2  x2  x2 <b>D</b>   1PC	 <b>E</b>   8PCS		


## Cam Lock Fastening System


This Cam Lock Fastening System will be used throughout the assembly process.

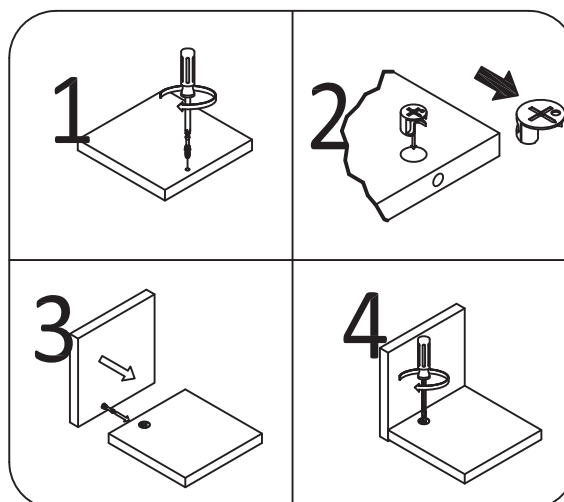



# STEP1

---

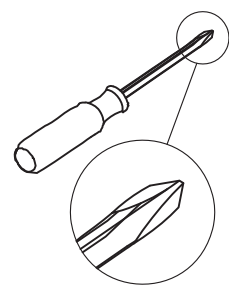


 M6X35MM	
A1	4PCS


 M8X30MM	
A3	4PCS

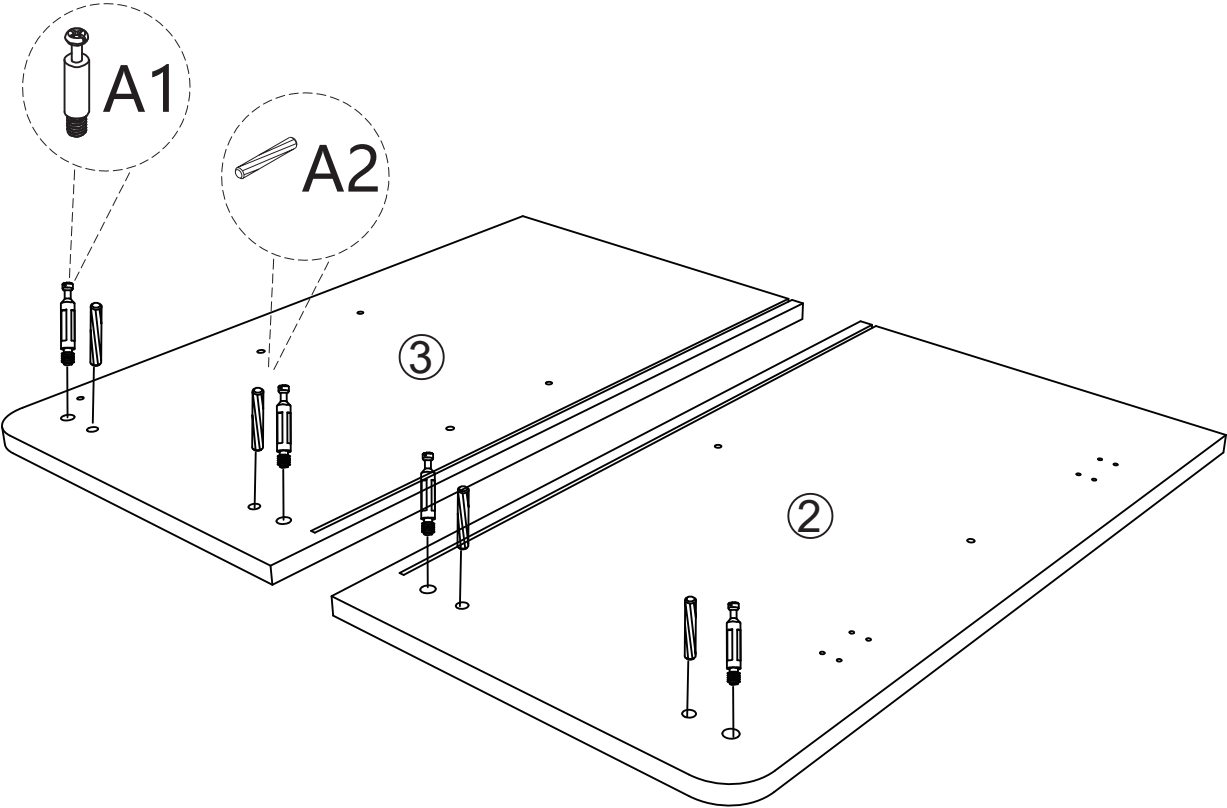


# STEP2


---

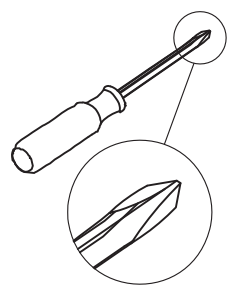

	
M5X35MM	
A4	2PCS



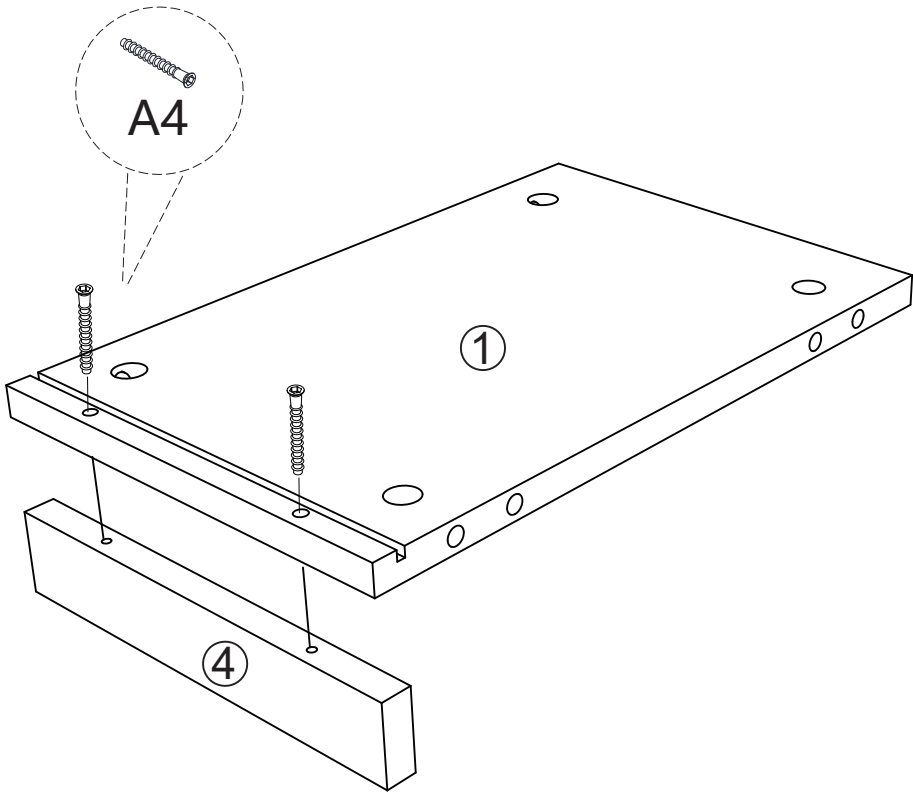


# STEP3



15X11MM

A2	4PCS
----	------

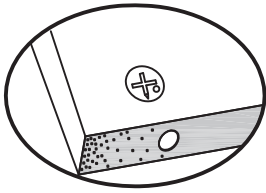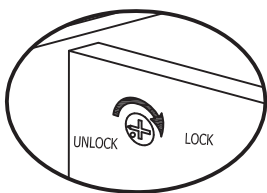
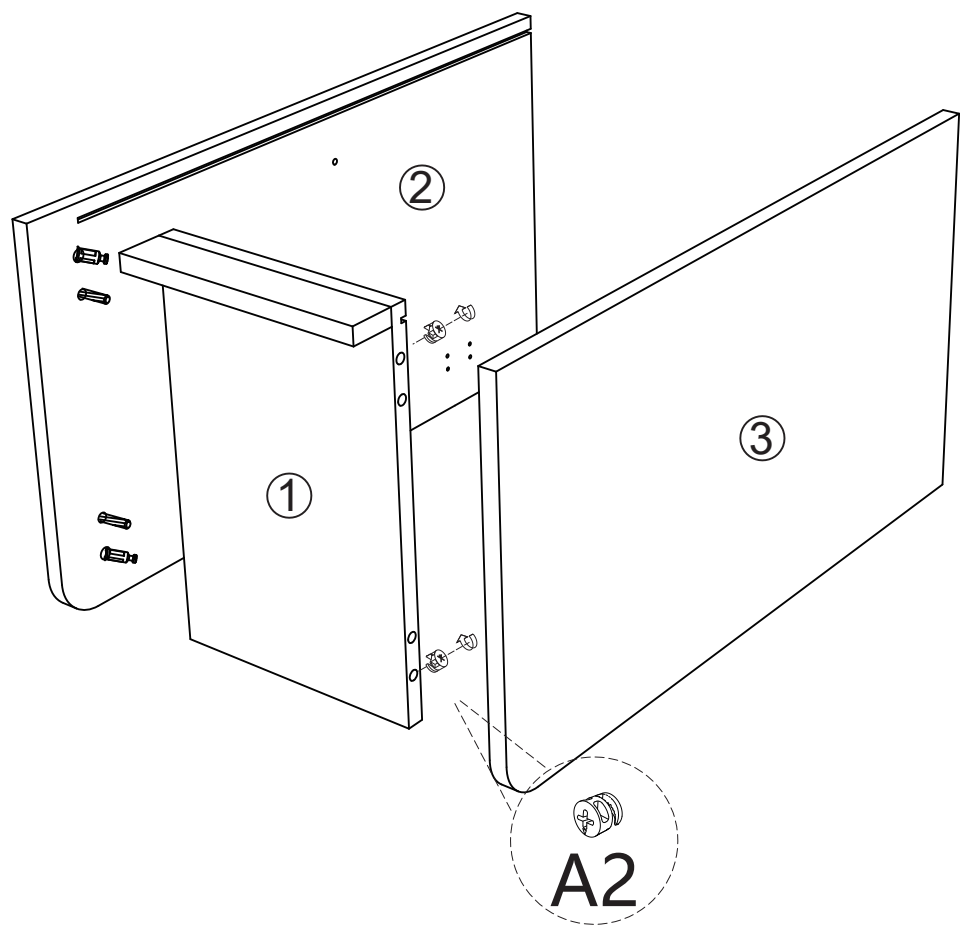


Proper orientation of CAM LOCK





# STEP4


---

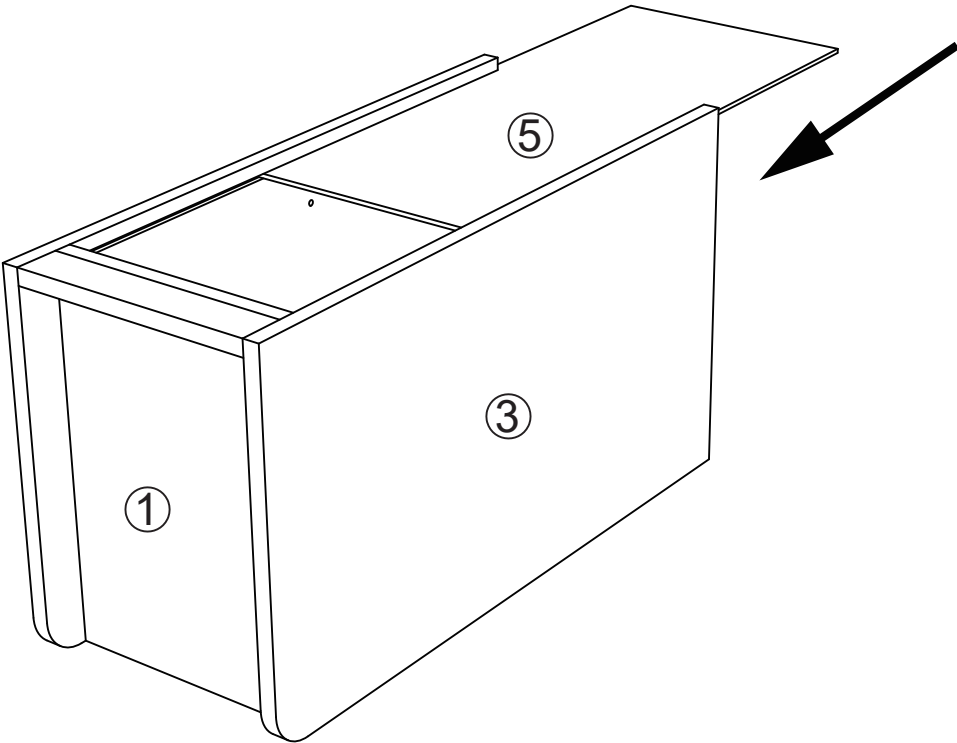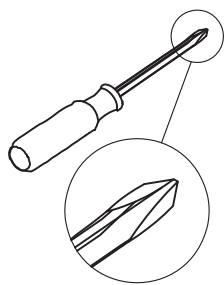



# STEP5

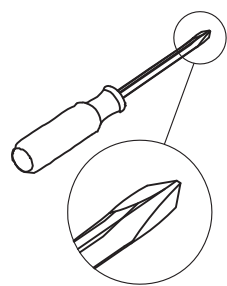


 M6X35MM	
A1	6PCS

 M8X30MM	
A3	6PCS

	
D	2PCS


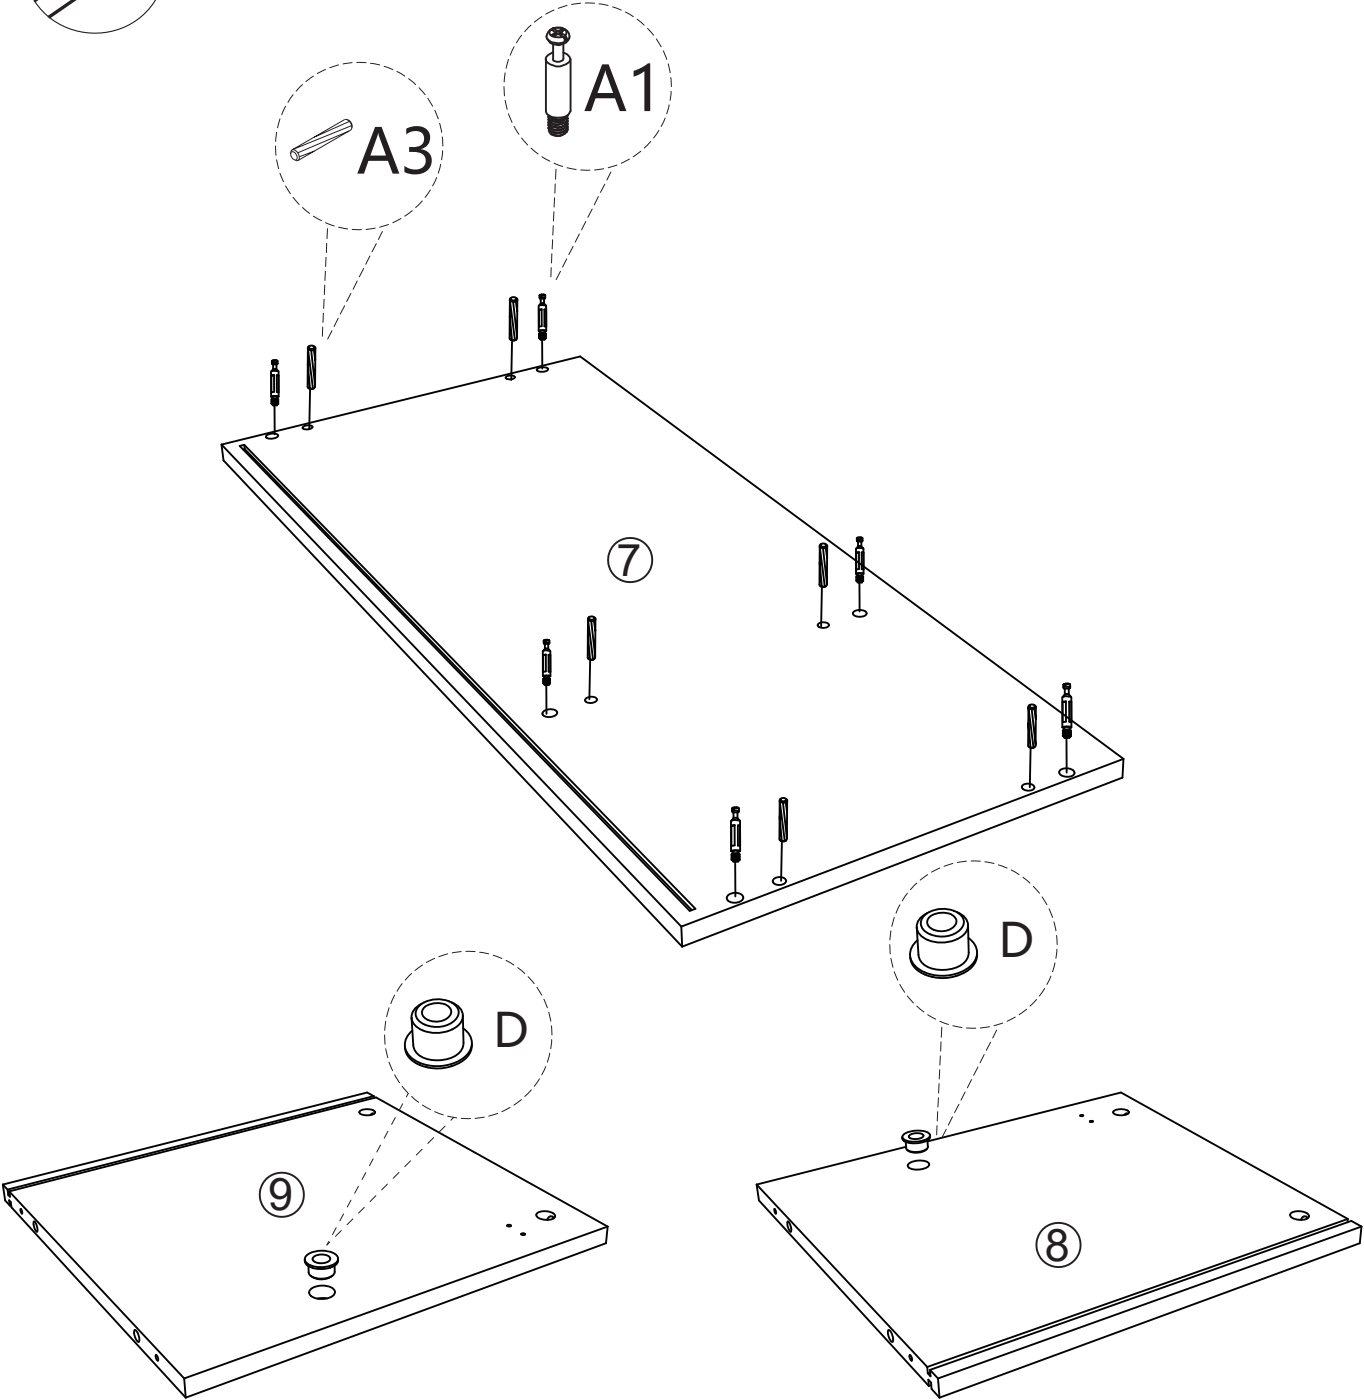


# STEP6



15X11MM


A2	6PCS
----	------

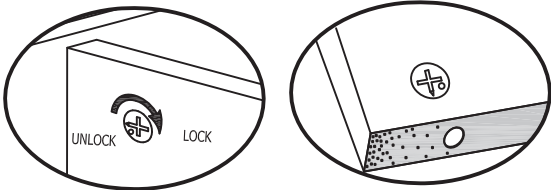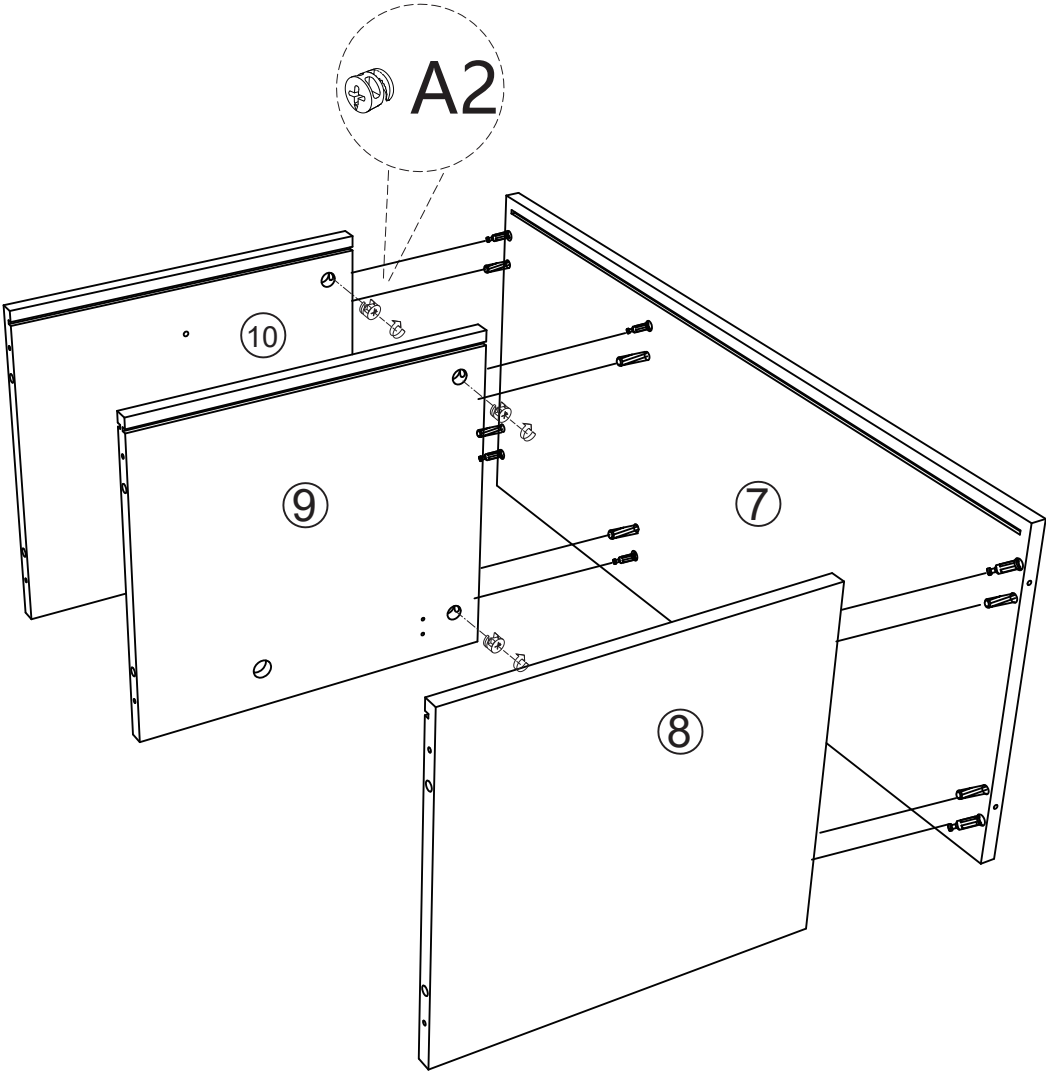

Proper orientation of CAM LOCK


# STEP7

---

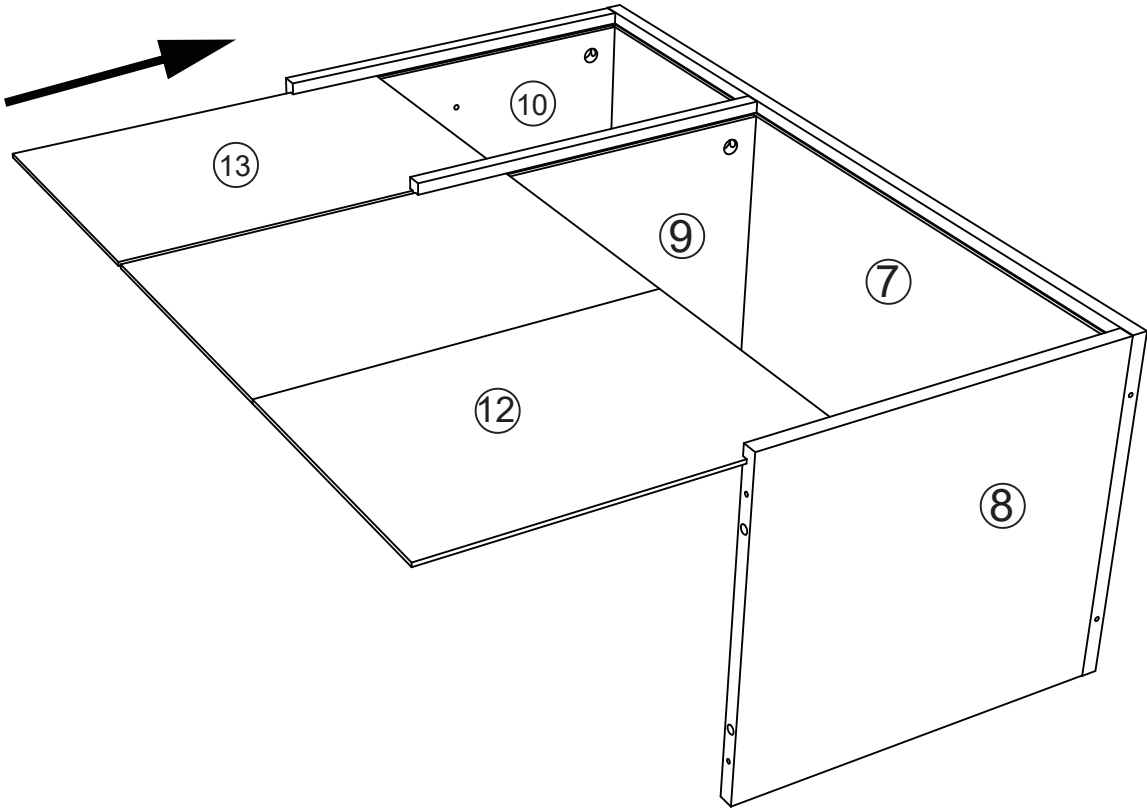


# STEP8

---




M5X35MM

A4	2PCS
----	------

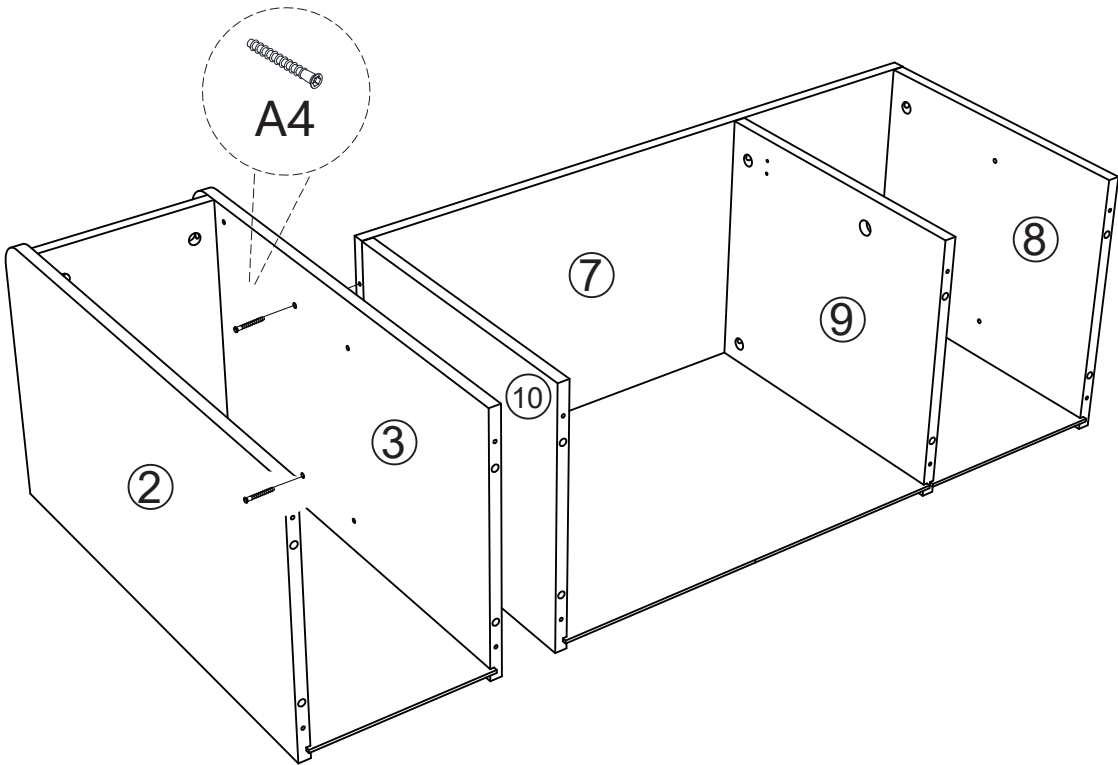


# STEP9




M8X30MM

A3	10PCS
----	-------




M5X35MM

A4	10PCS
----	-------

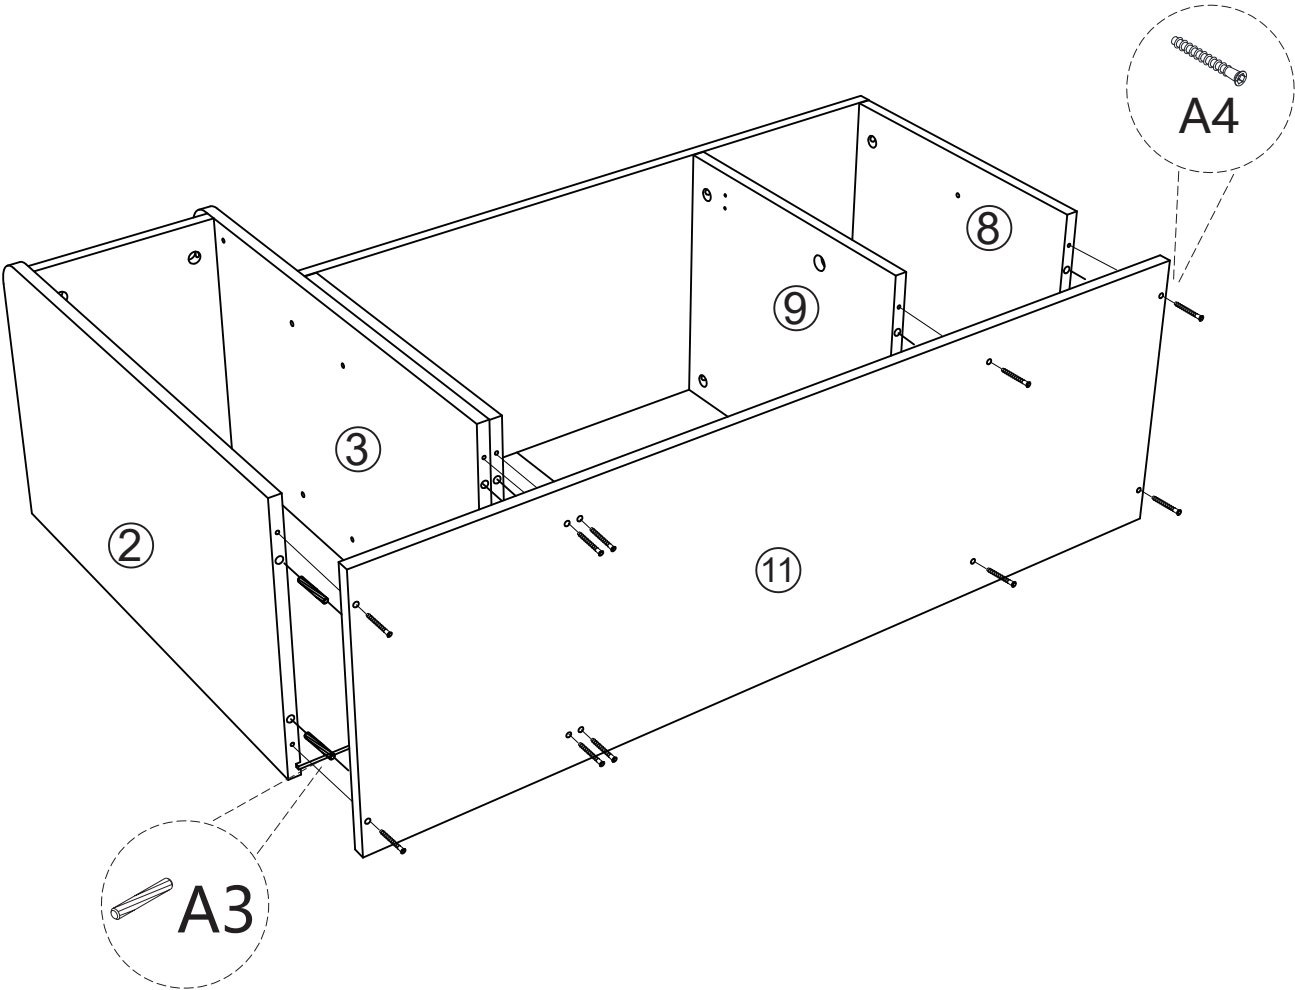


# STEP 10

---




M3X12MM




A6	32PCS
----	-------

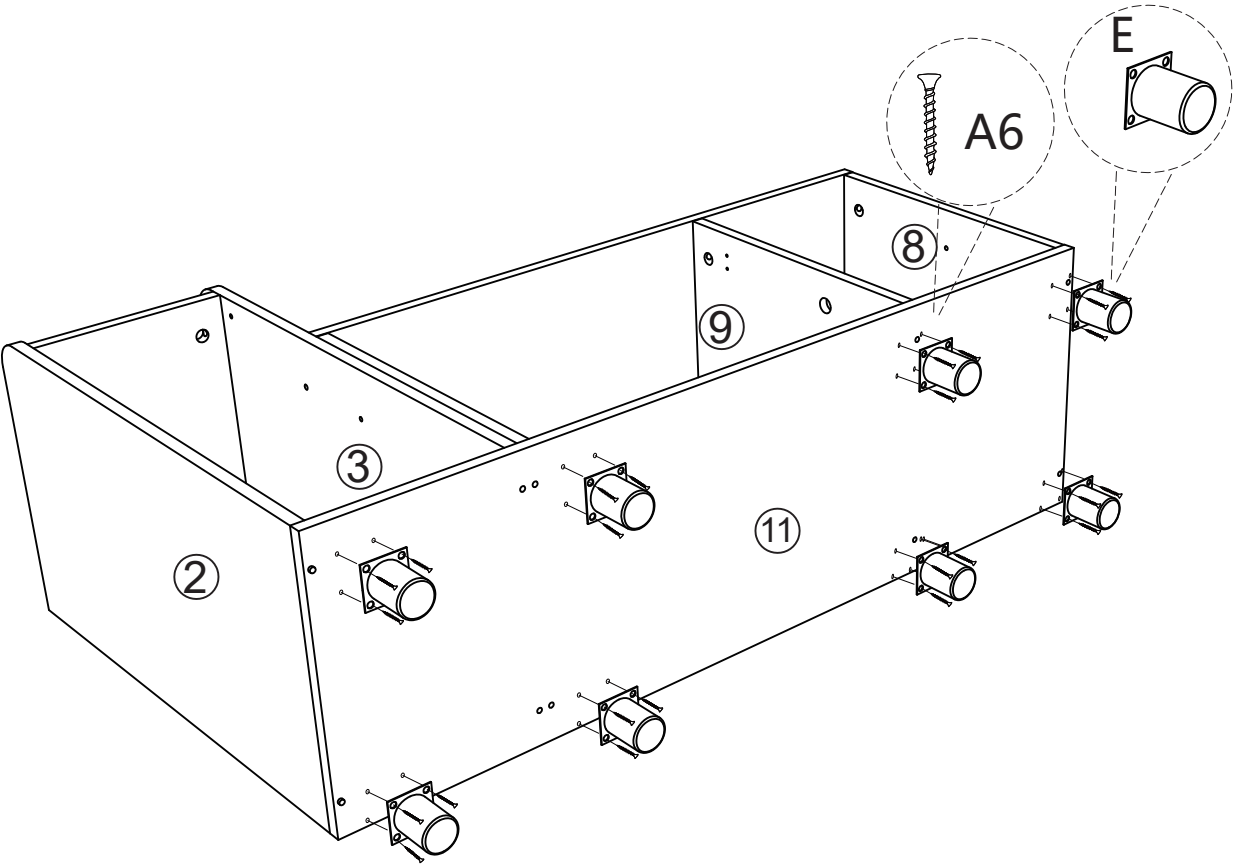


E	8PCS
---	------




# STEP 11

 x2		 x2
		M4X14mm
		 x2
		M4X18mm
<b>B</b>		<b>1PC</b>

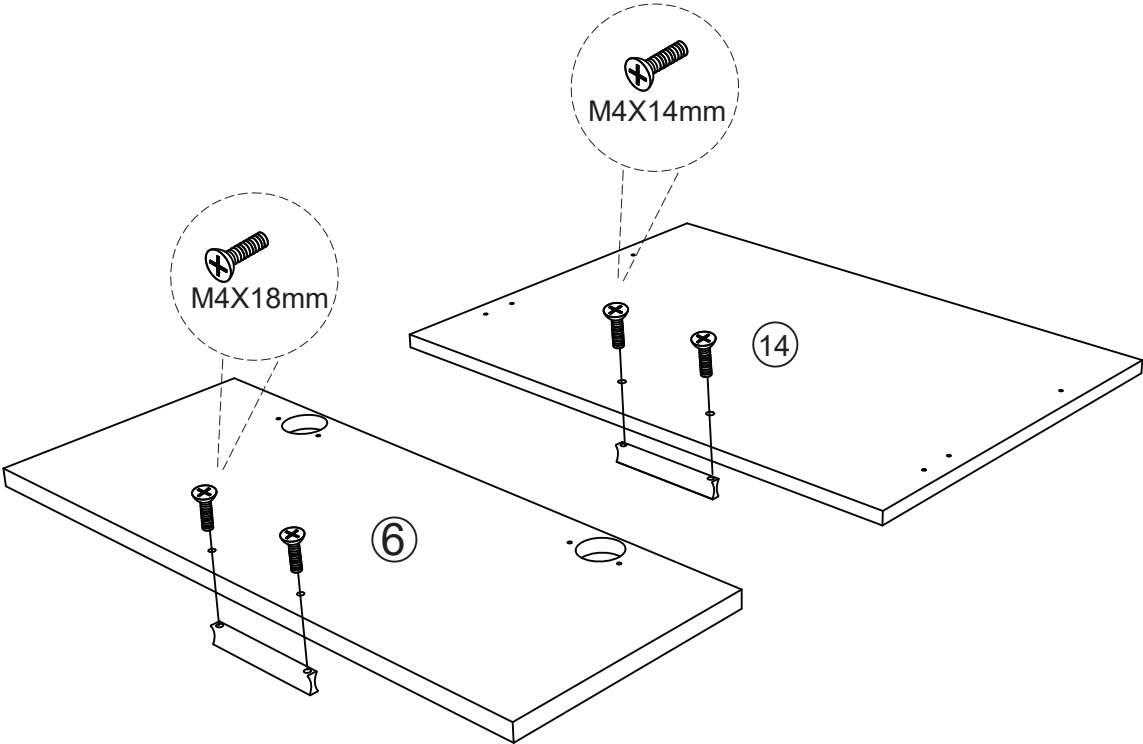





# STEP 12






D	1PCS
---	------

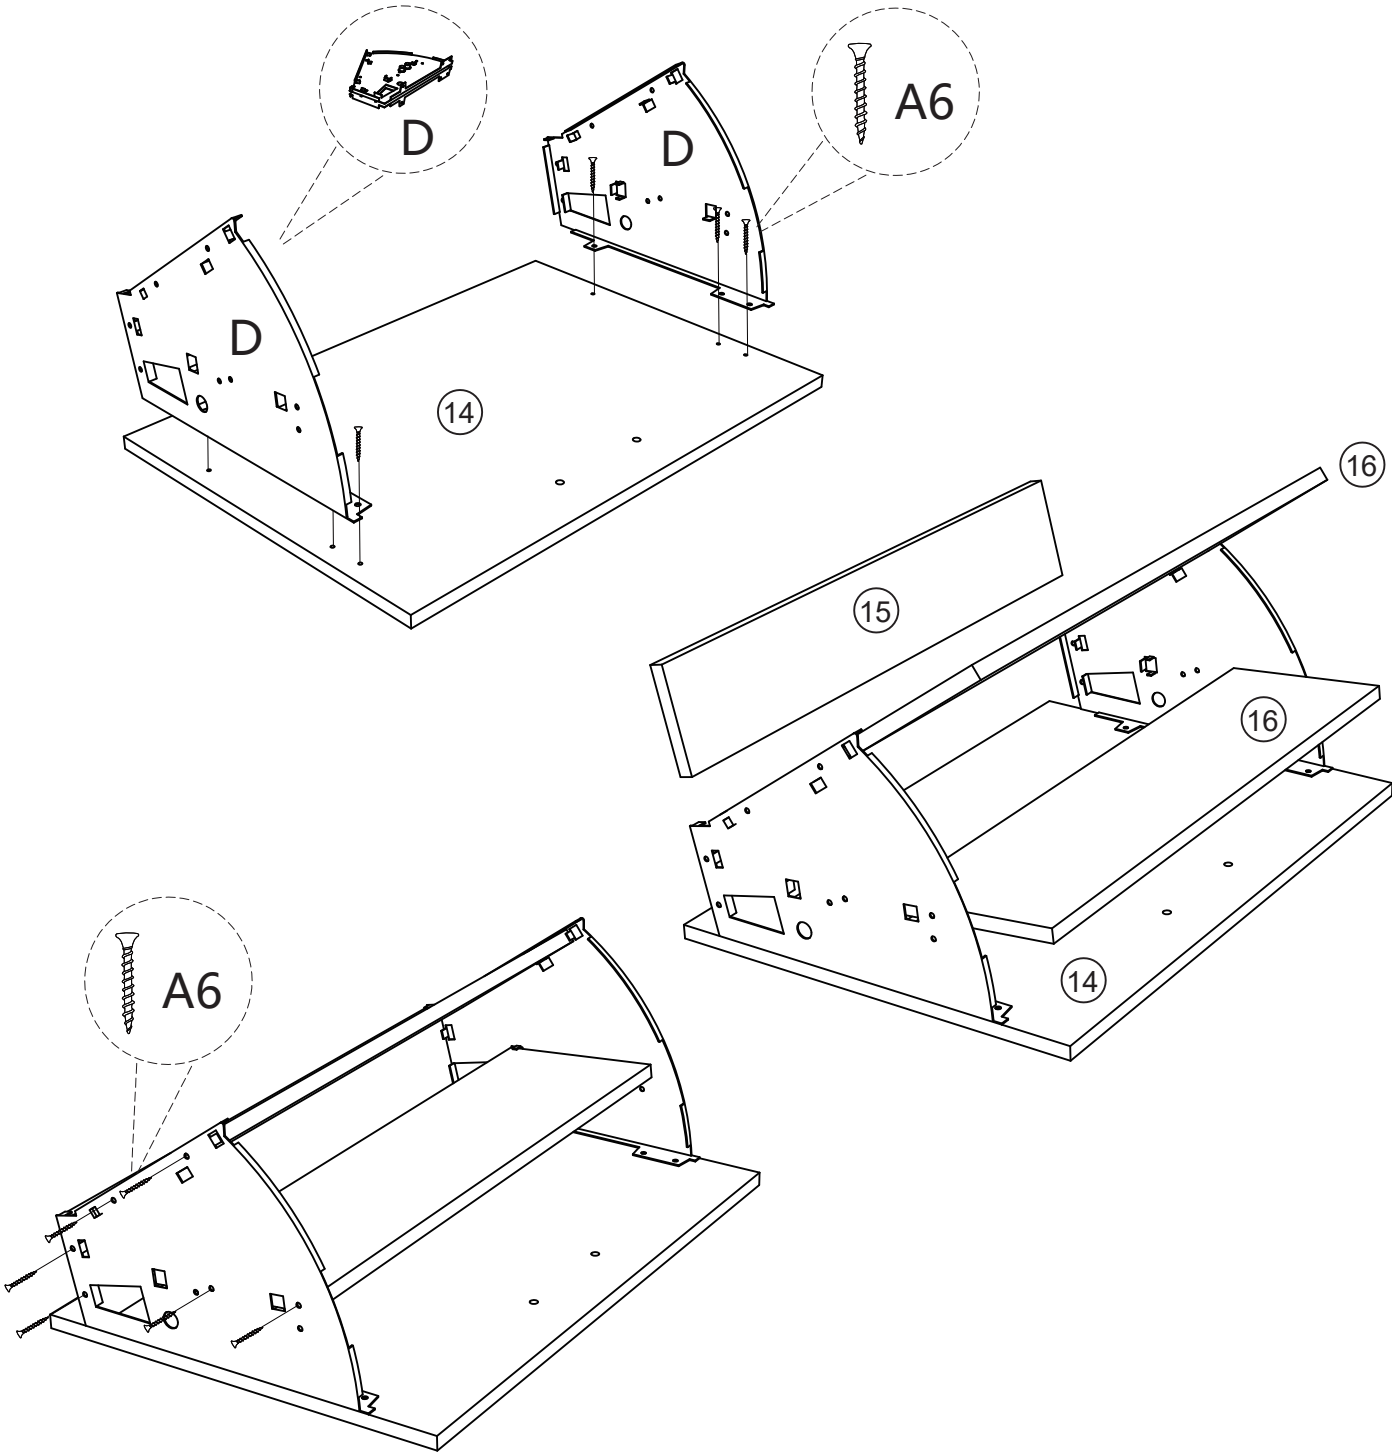



M3X12MM	
A6	18PCS



# STEP 13

 x2	
 x2	
 x2	
D	1PCS


 M3X12MM	
A6	4PCS

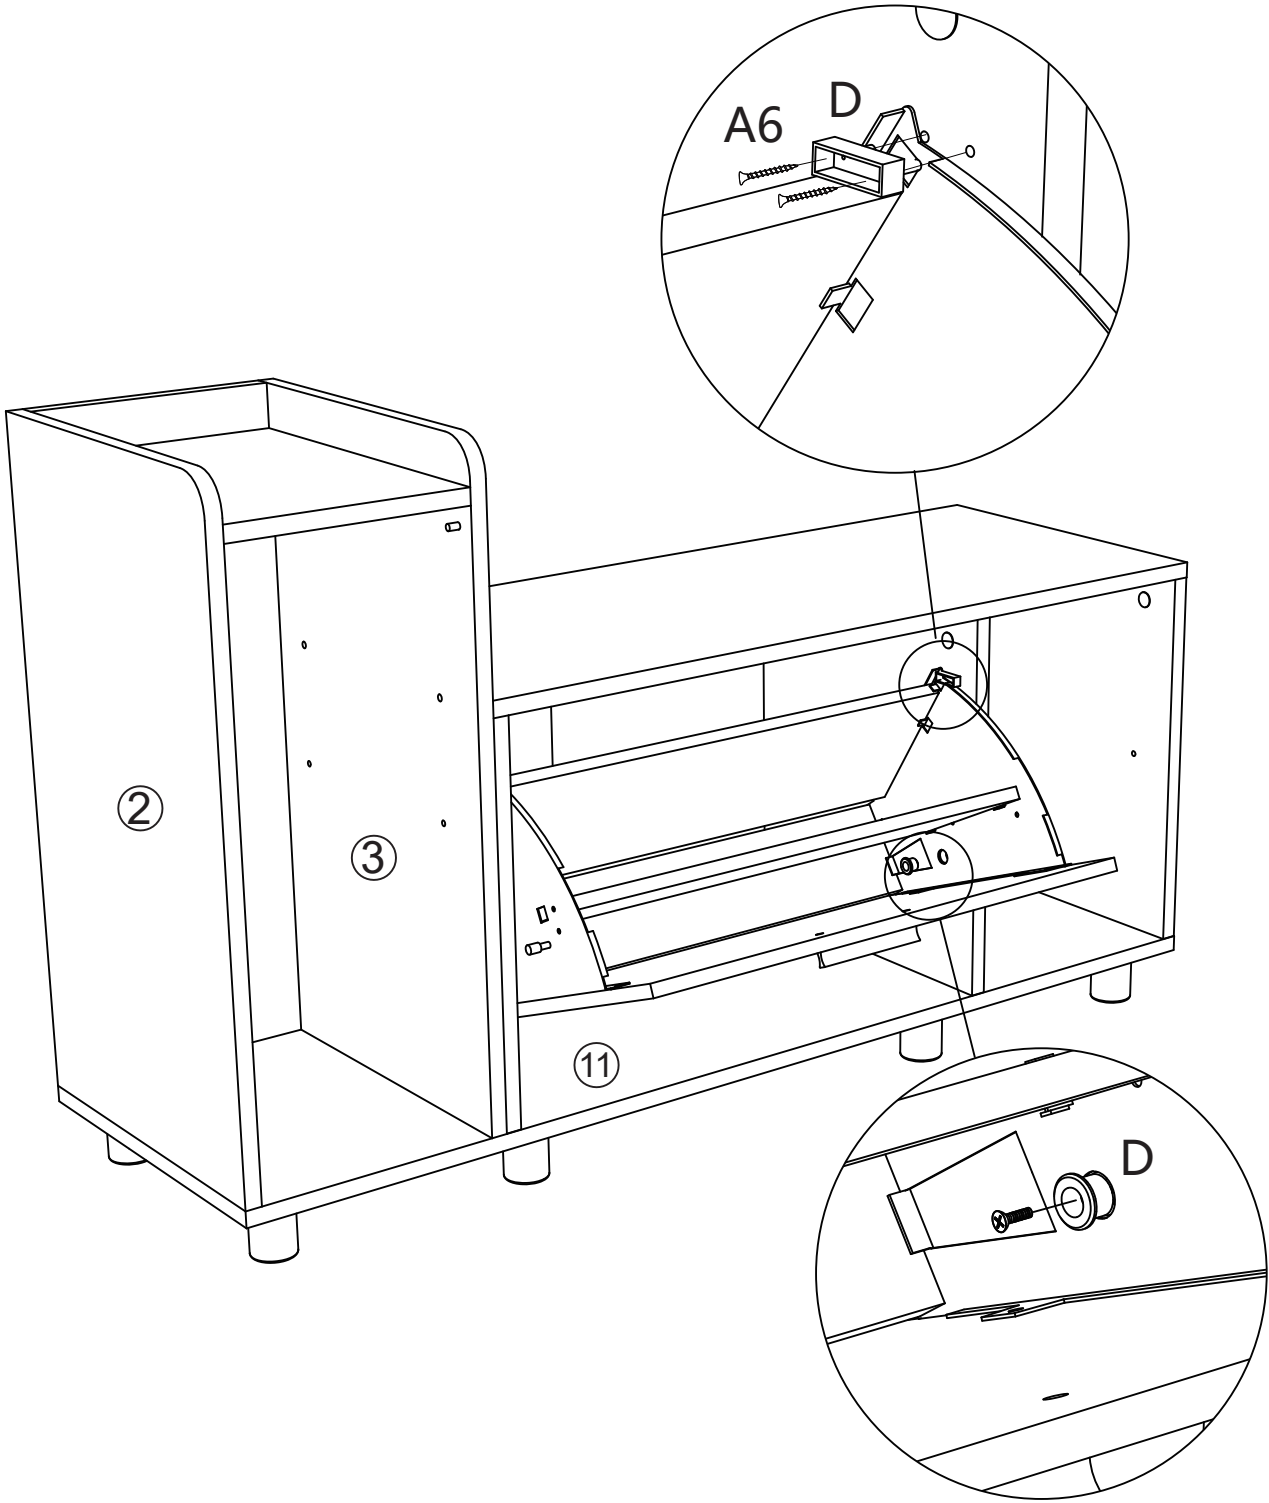


# STEP 14


---

A5	8PCS
----	------

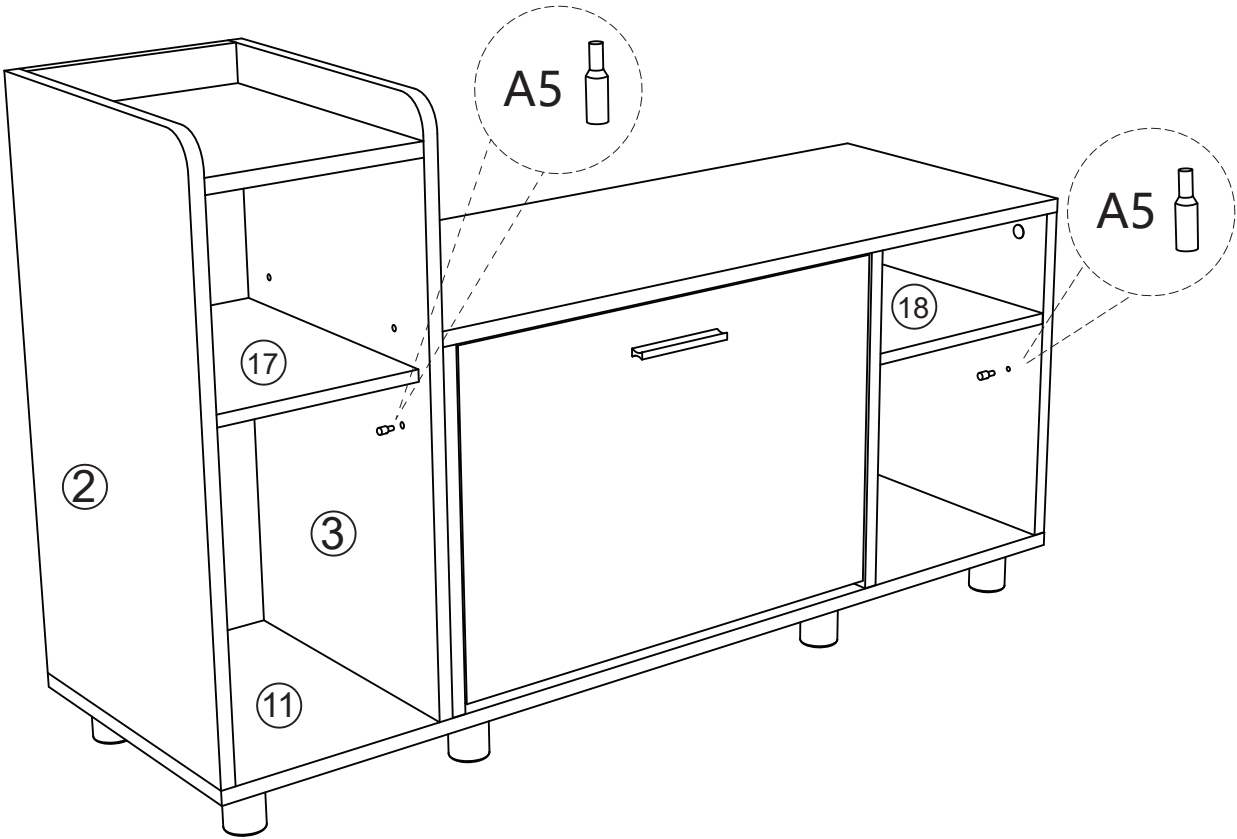

# STEP 15

 x2

 x12  
M3.5X16MM

C	2PCS
---	------

