

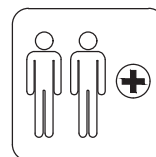
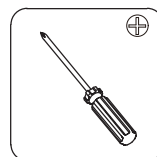
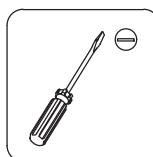


HLG029


Version:2.0

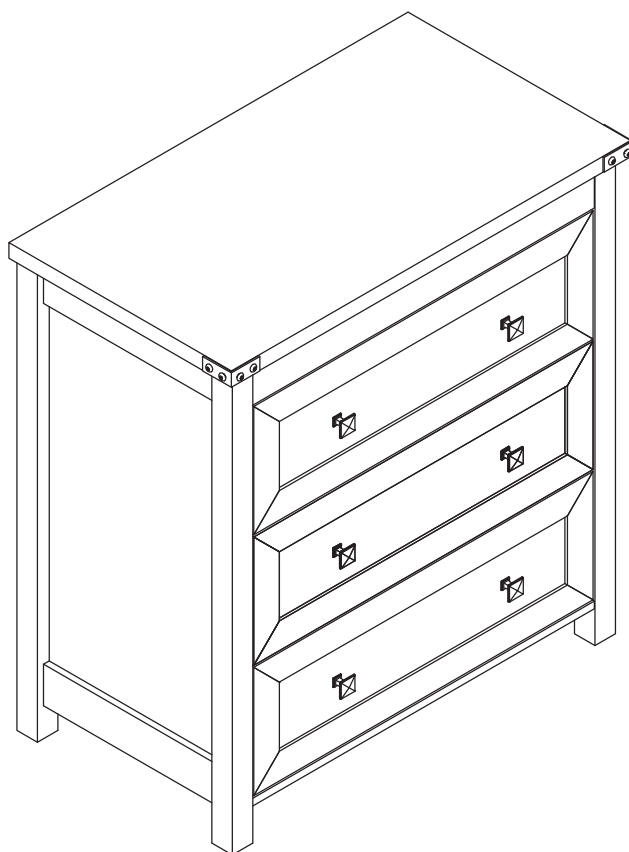


EN_IMPORTANT, RETAIN FOR FUTURE REFERENCE: READ CAREFULLY.

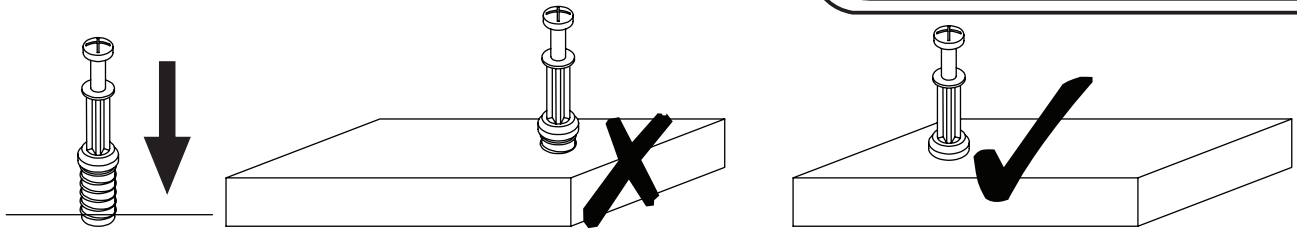


EN_QUICKFIT: Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

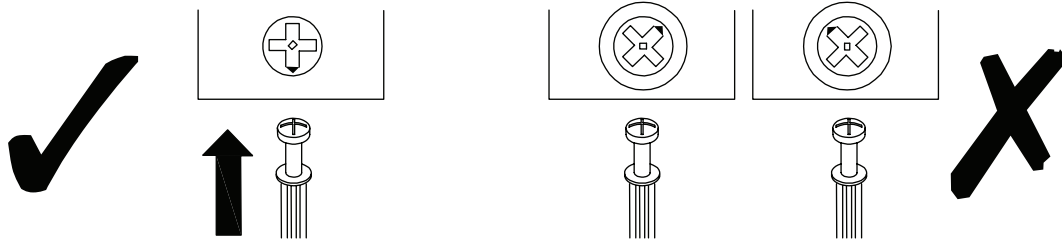











EN_CAM LOCK: When fitting cam lock, ensure starting position is correct before you insert connecting quickfit.




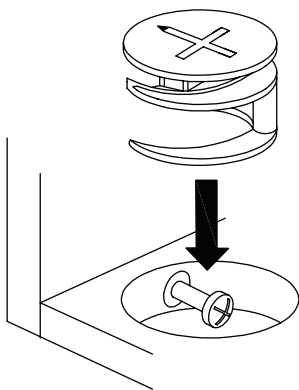




EN_Quickfit head should be in the centre of the cam lock when the two panels are joined.
Cam lock should be inserted before quickfit.

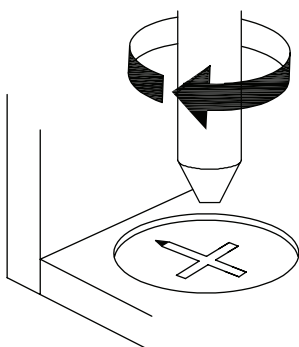

EN_Turn cam lock clockwise to tighten.

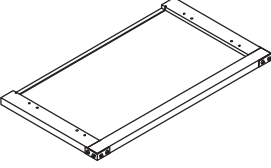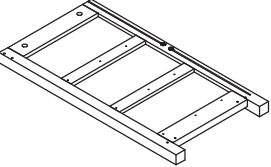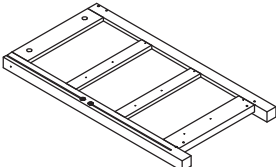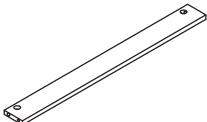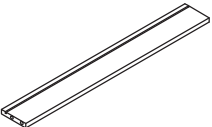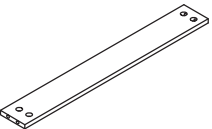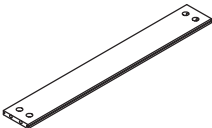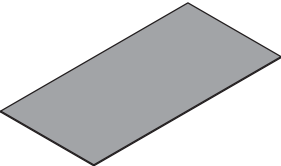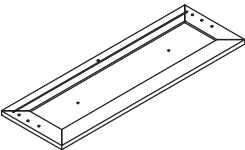NO.	PARTS	QTY	SPARE
1		x1	
2		x1	
3		x1	
4		x1	
5		x1	
6		x1	
7		x1	
8		x2	
9		x3	
10		x3	

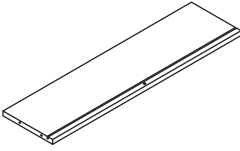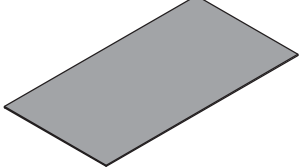NO.	PARTS	QTY	SPARE
11		x3	
12		x3	
13		x3	
14		x3	
	 Hardware Kit		

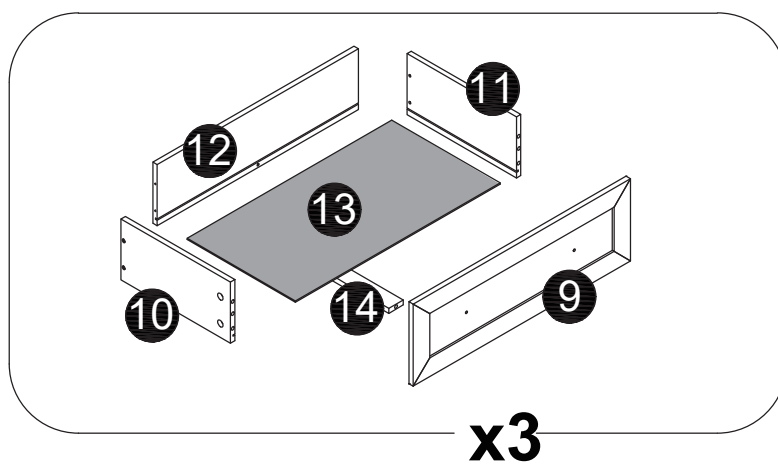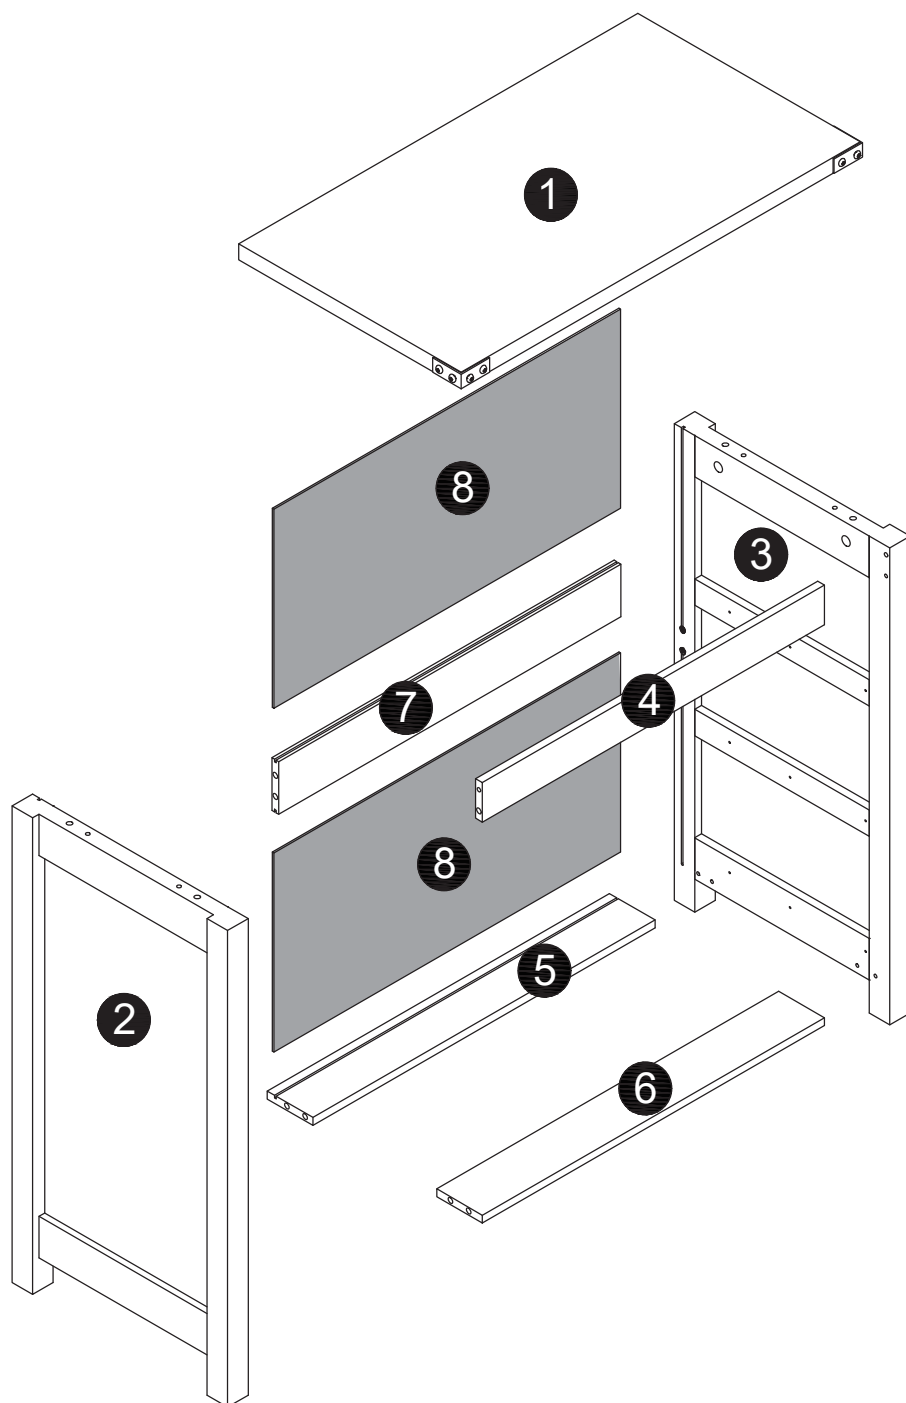


A x33 Ø6x35mm +2(spare)	B x33 Ø15x10mm +2(spare)	C x12 Ø6x30mm +1(spare)	D x17 Ø4x35mm +1(spare)	E x36 Ø3.5x12mm +3(spare)	F x6
					
G x8	H x4	I x2 Ø6x30mm	J x2 Ø4x14mm	K x2	CL x3 L300mm
					
CR x3 L300mm	DL x3 L300mm	DR x3 L300mm			
					

A x15	C x6	D x15
		

x3

01

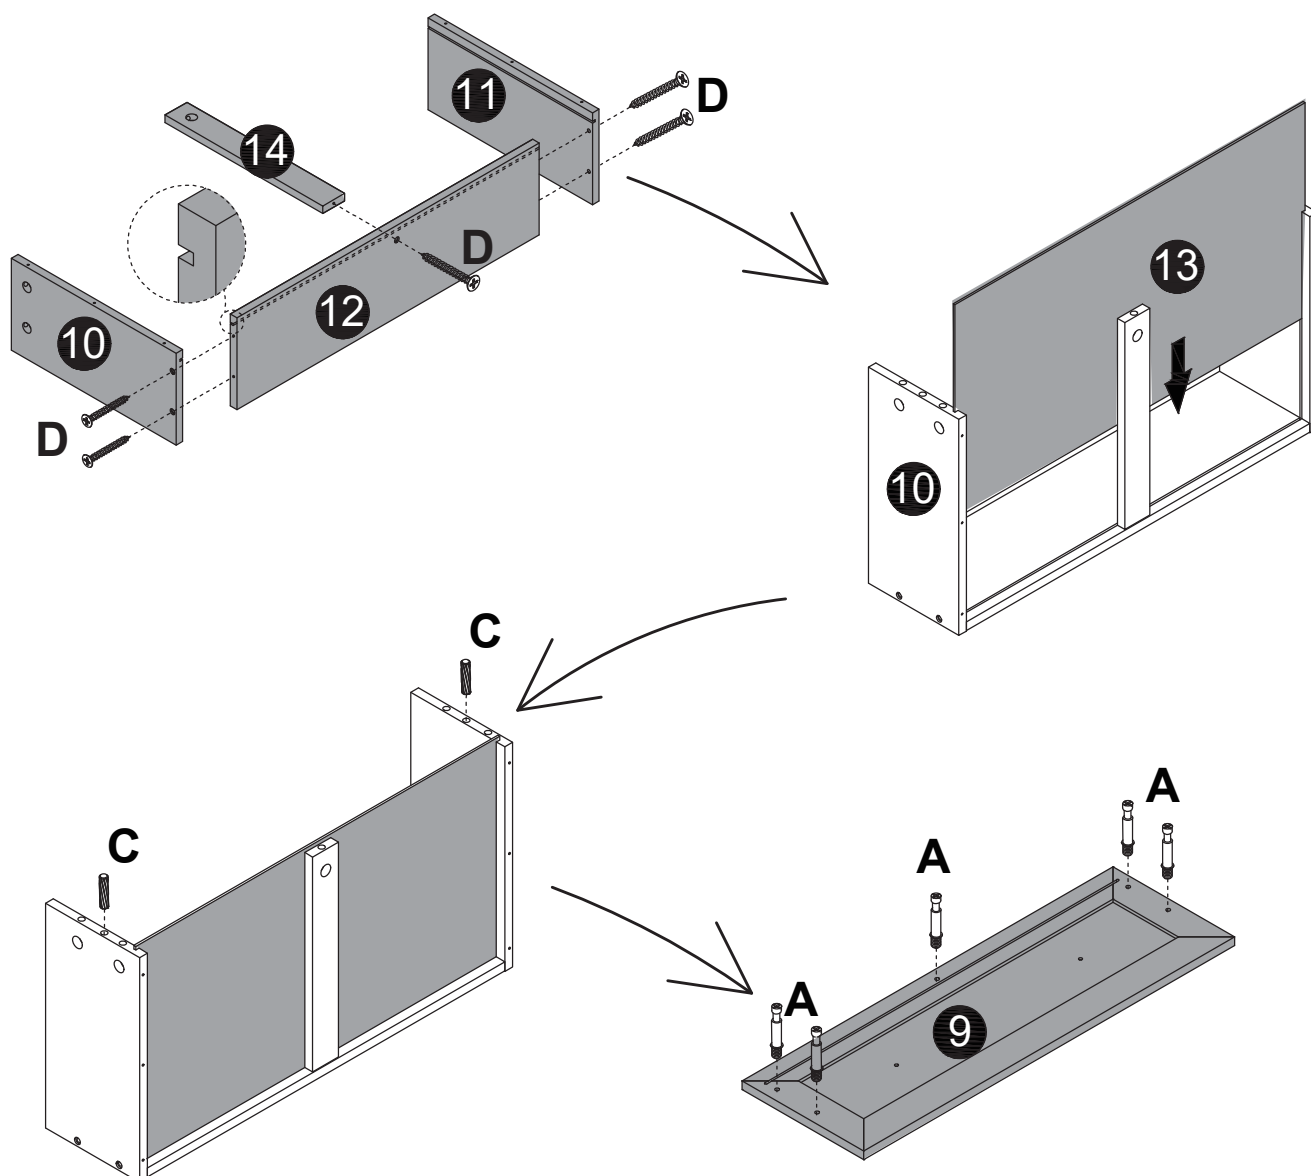


B x15

F x6



x3



02

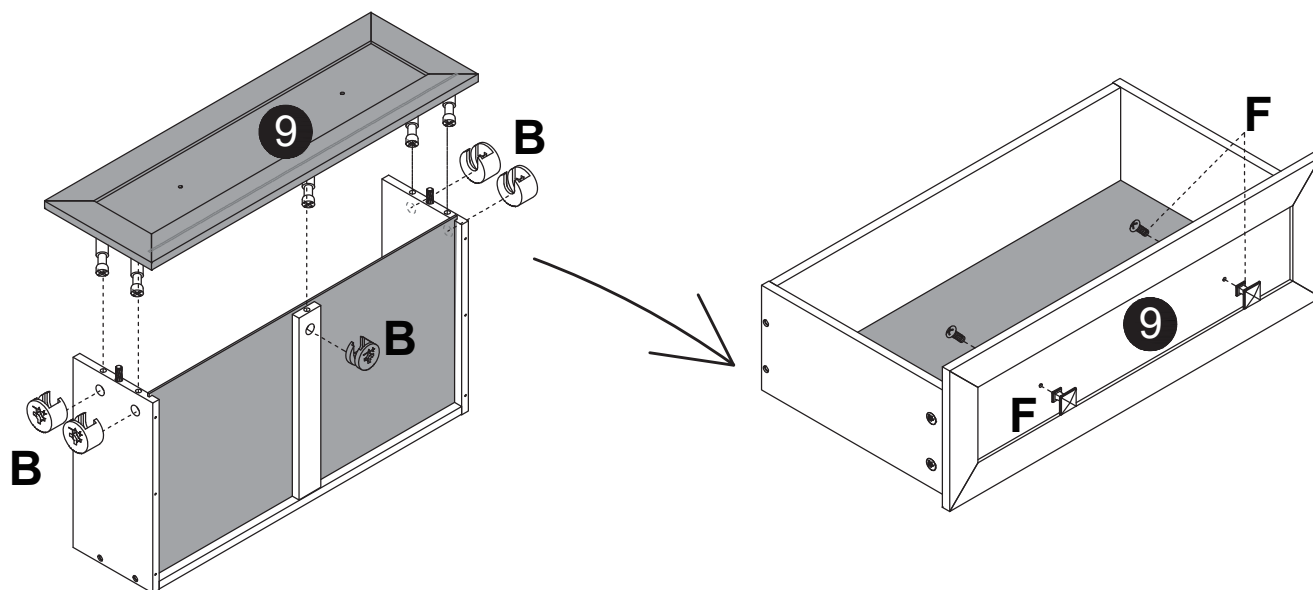

E x18


DL x3



DR x3



x3

03

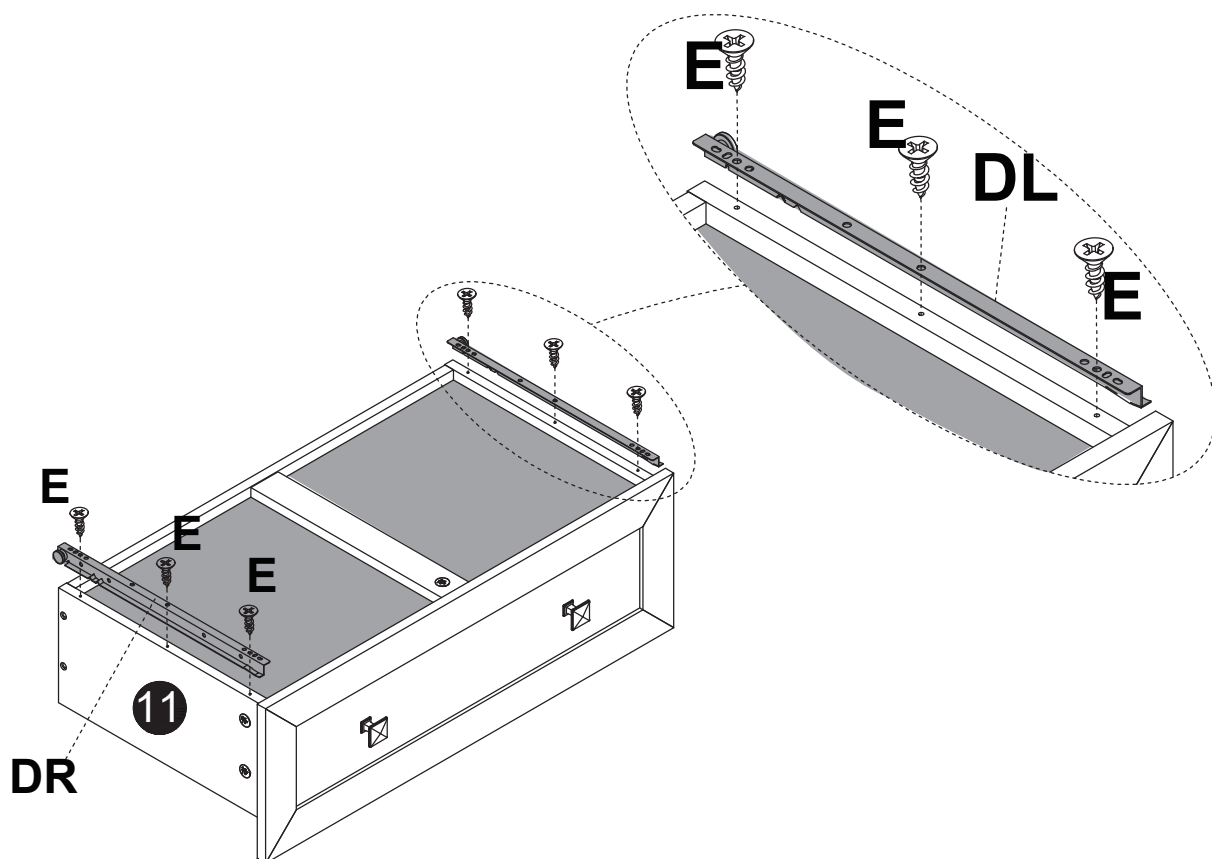

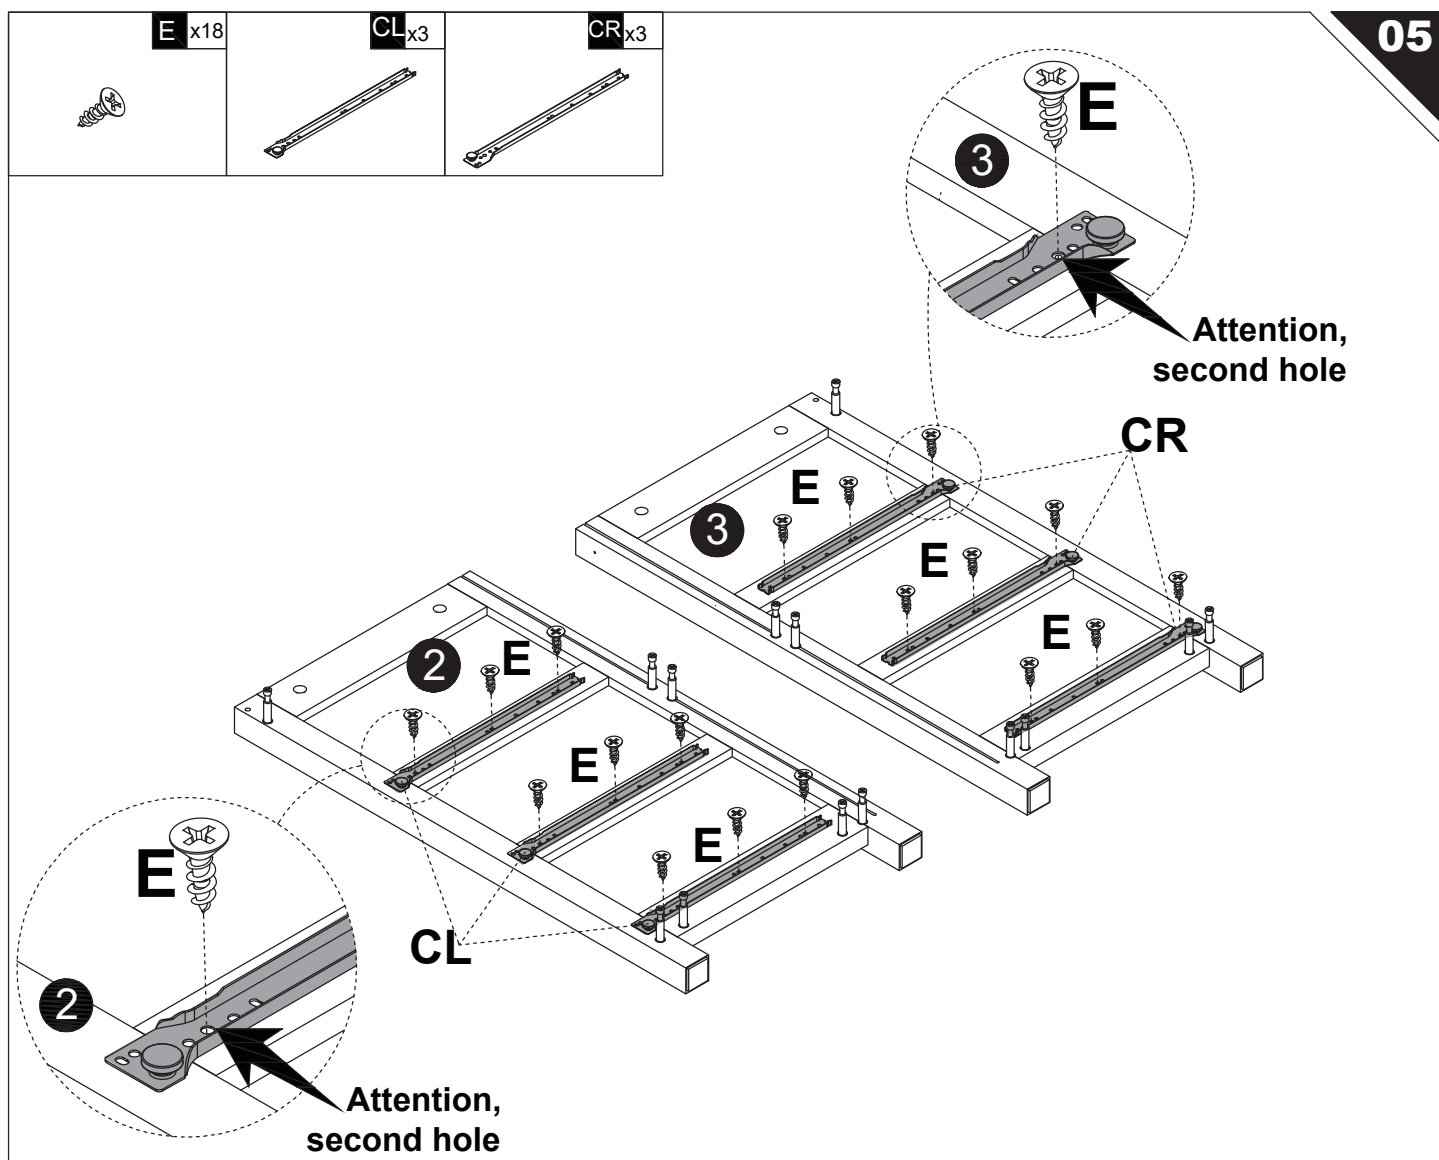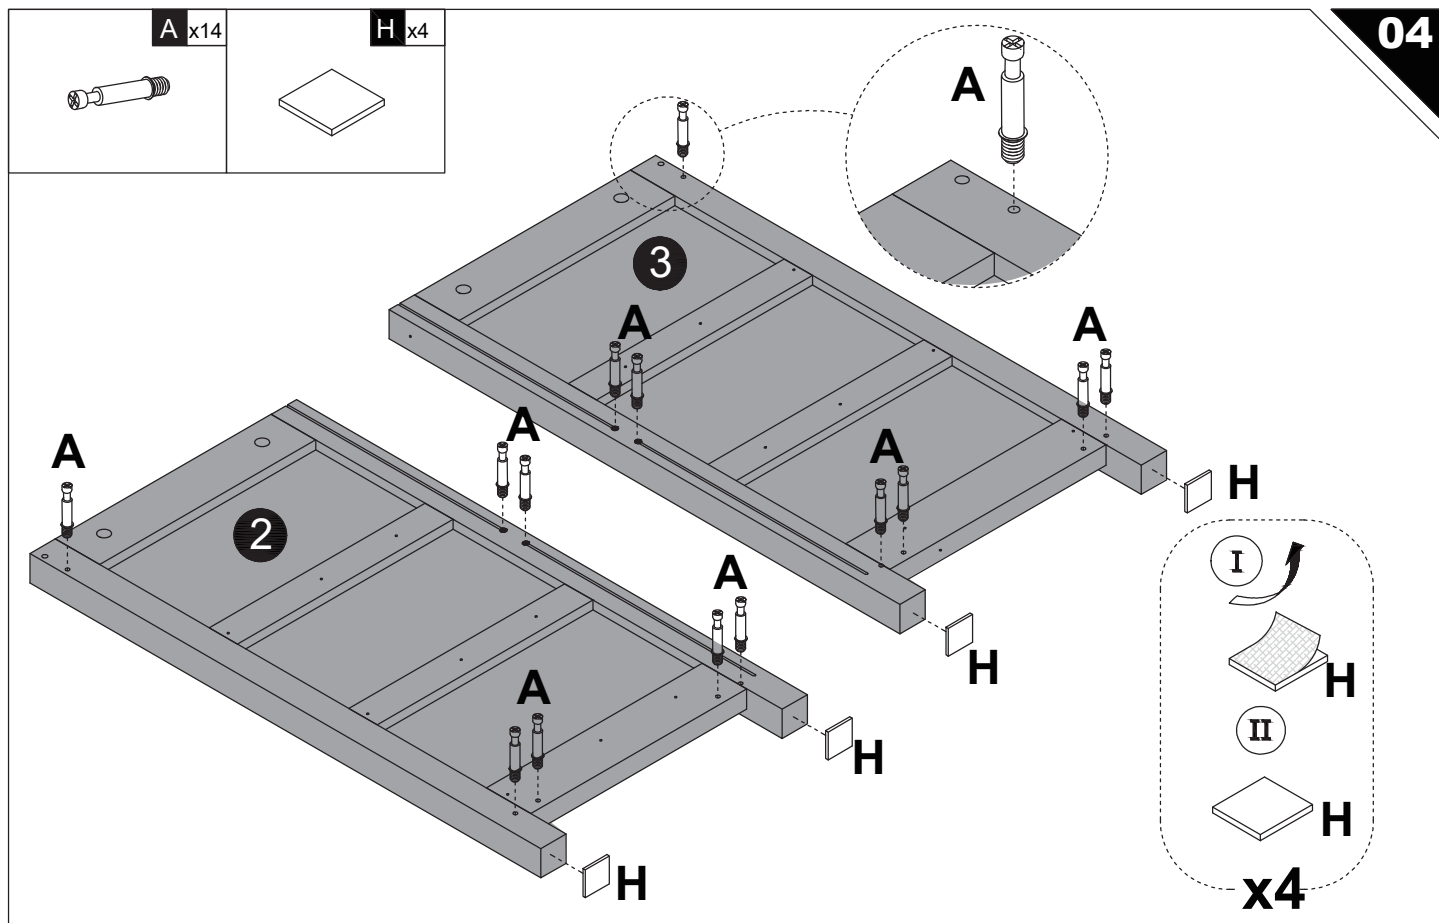


B x1

C x2



06

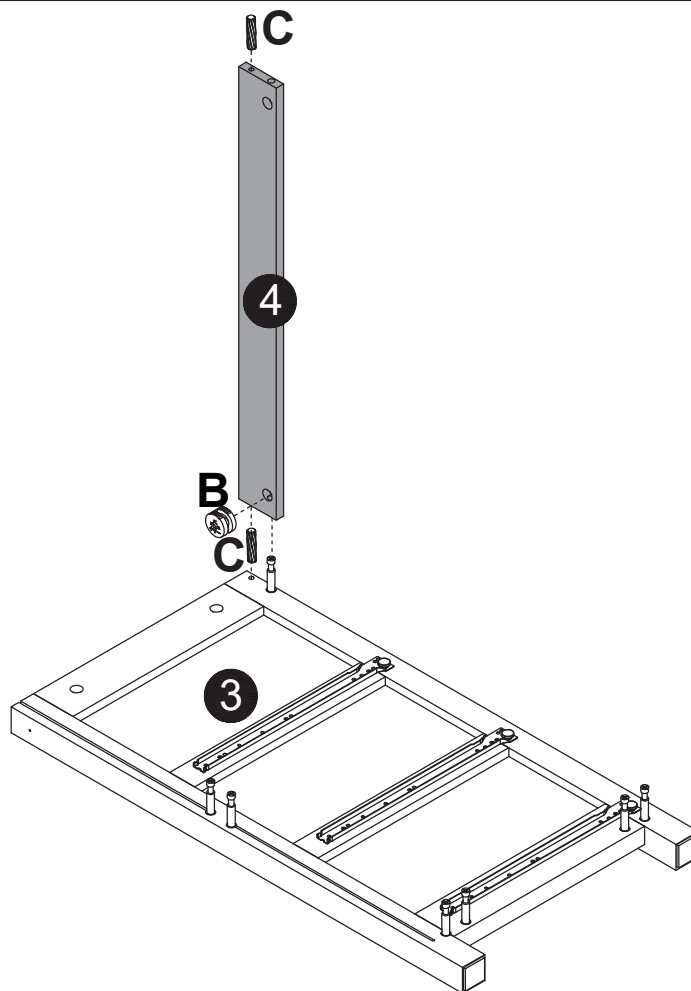


B x6




07

Notice

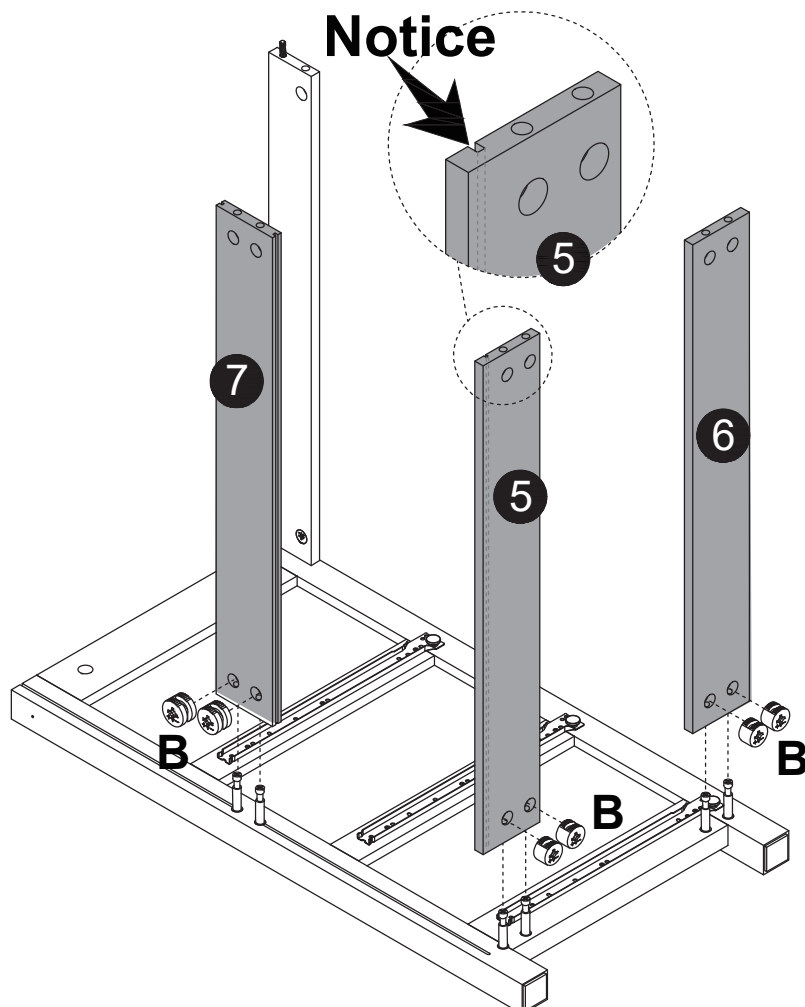


08

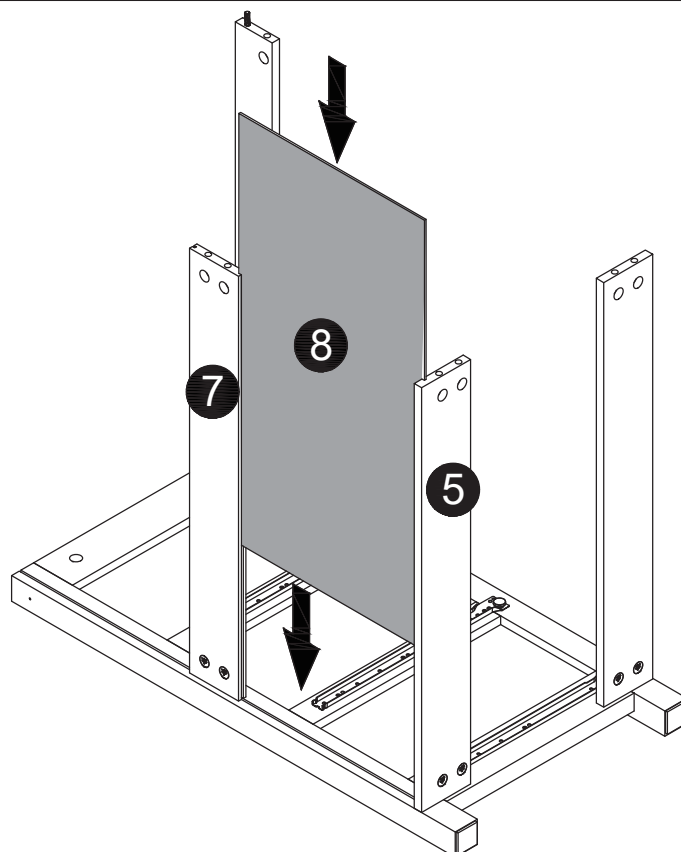

B x7




09

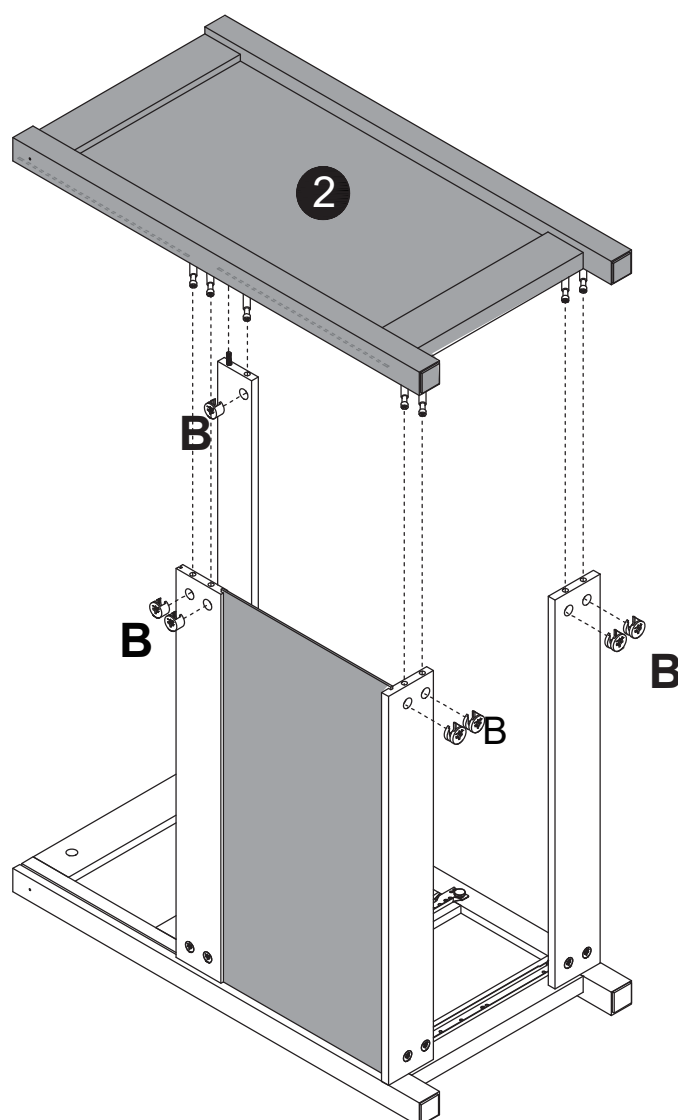

C x4




10

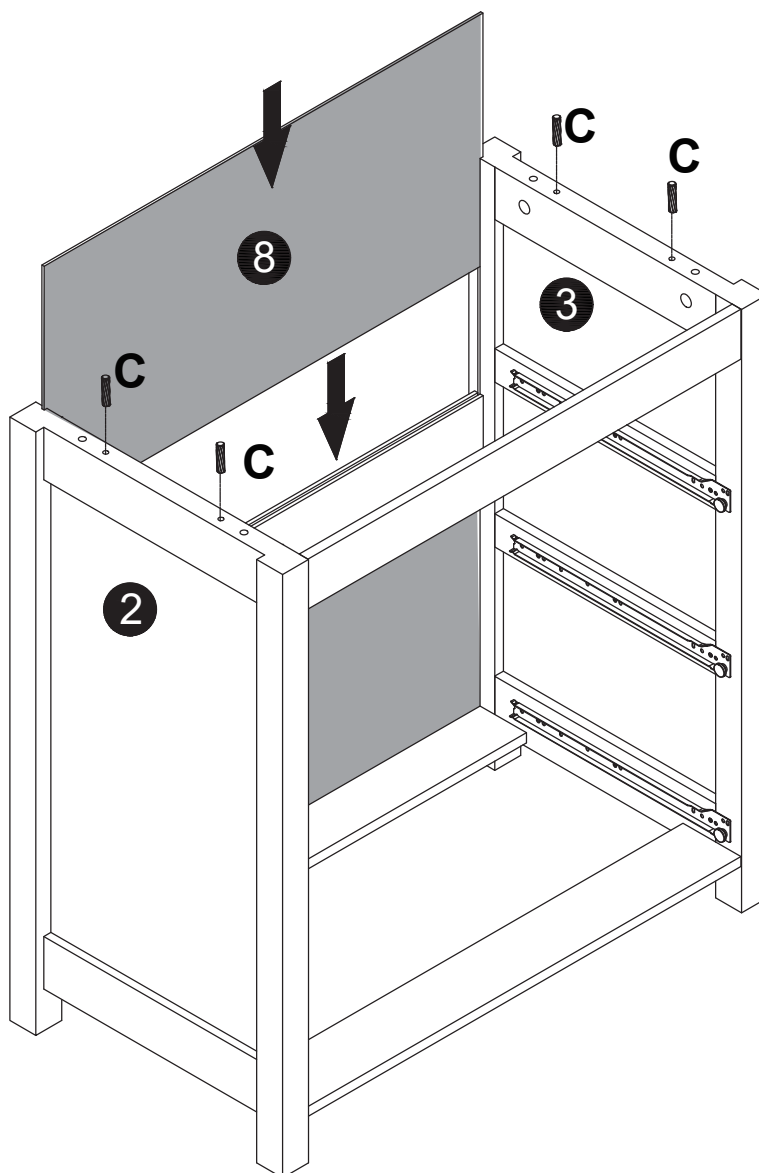


A x4






11


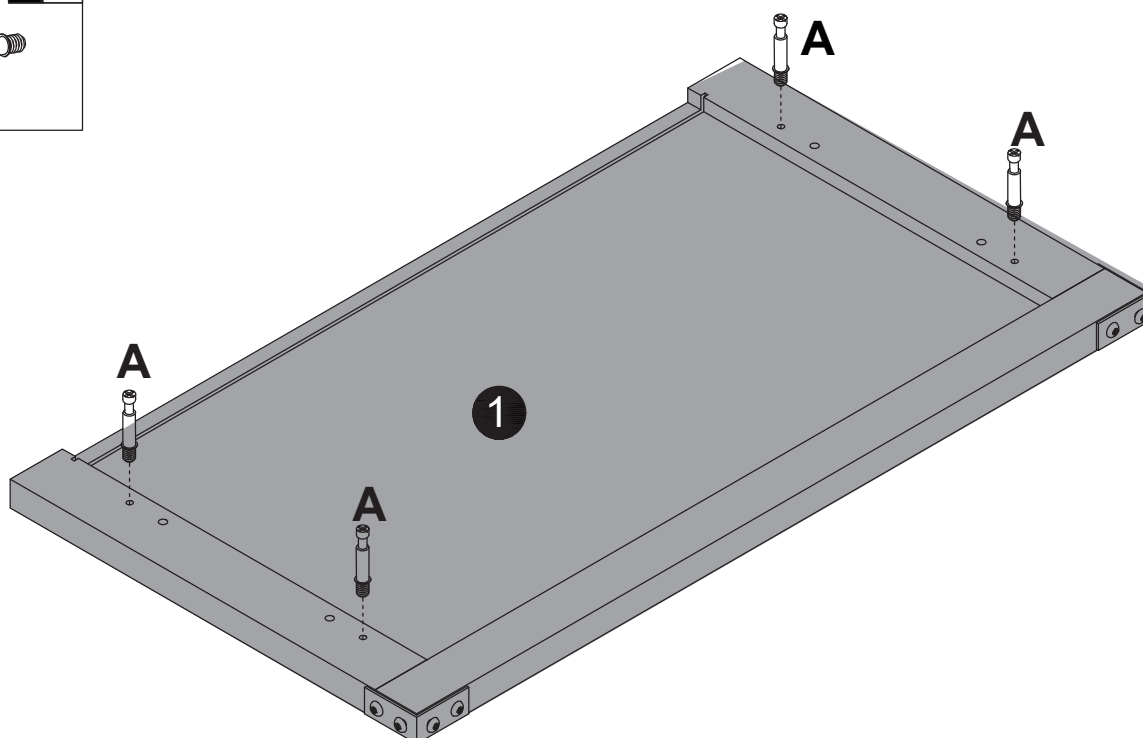


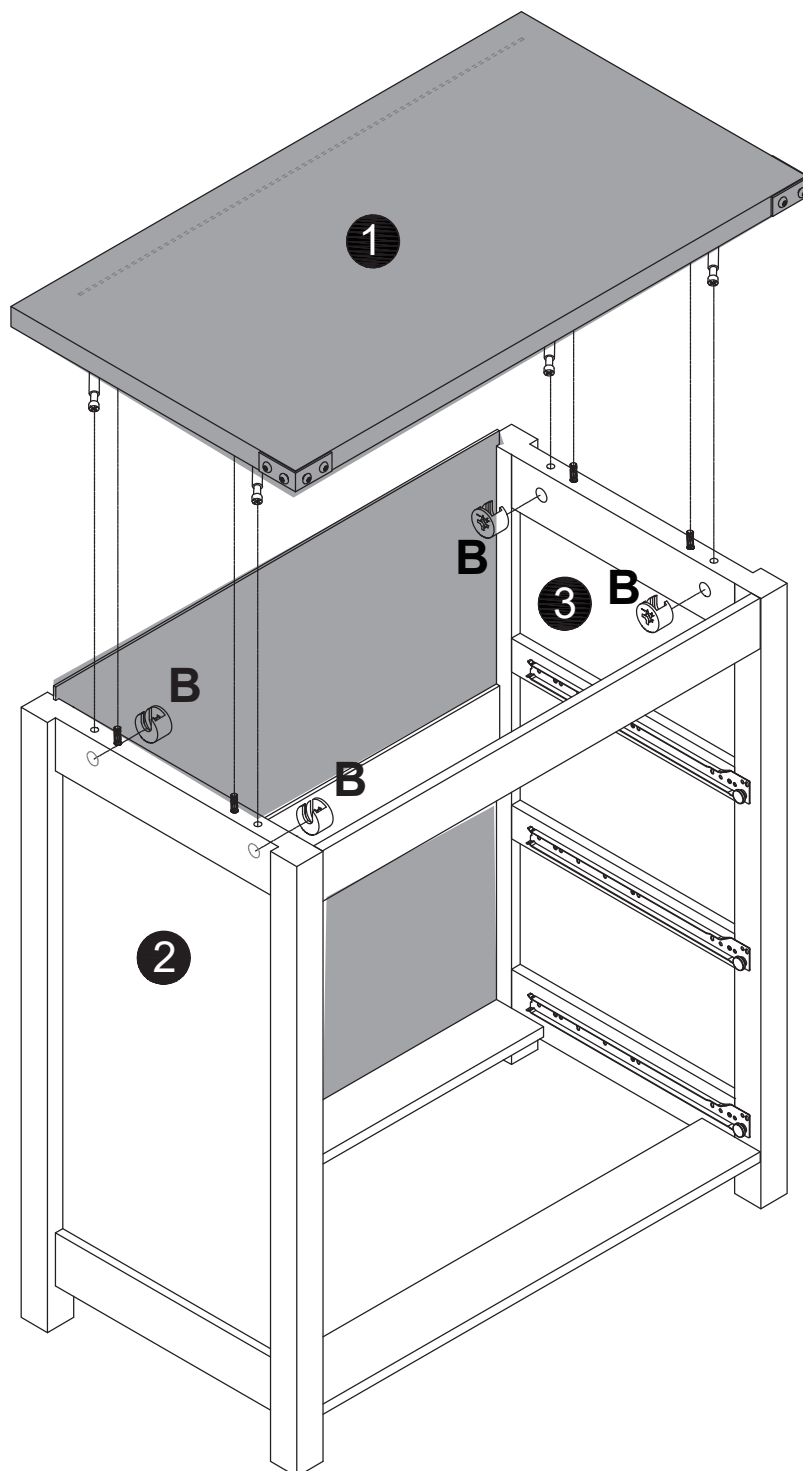

G x8

13

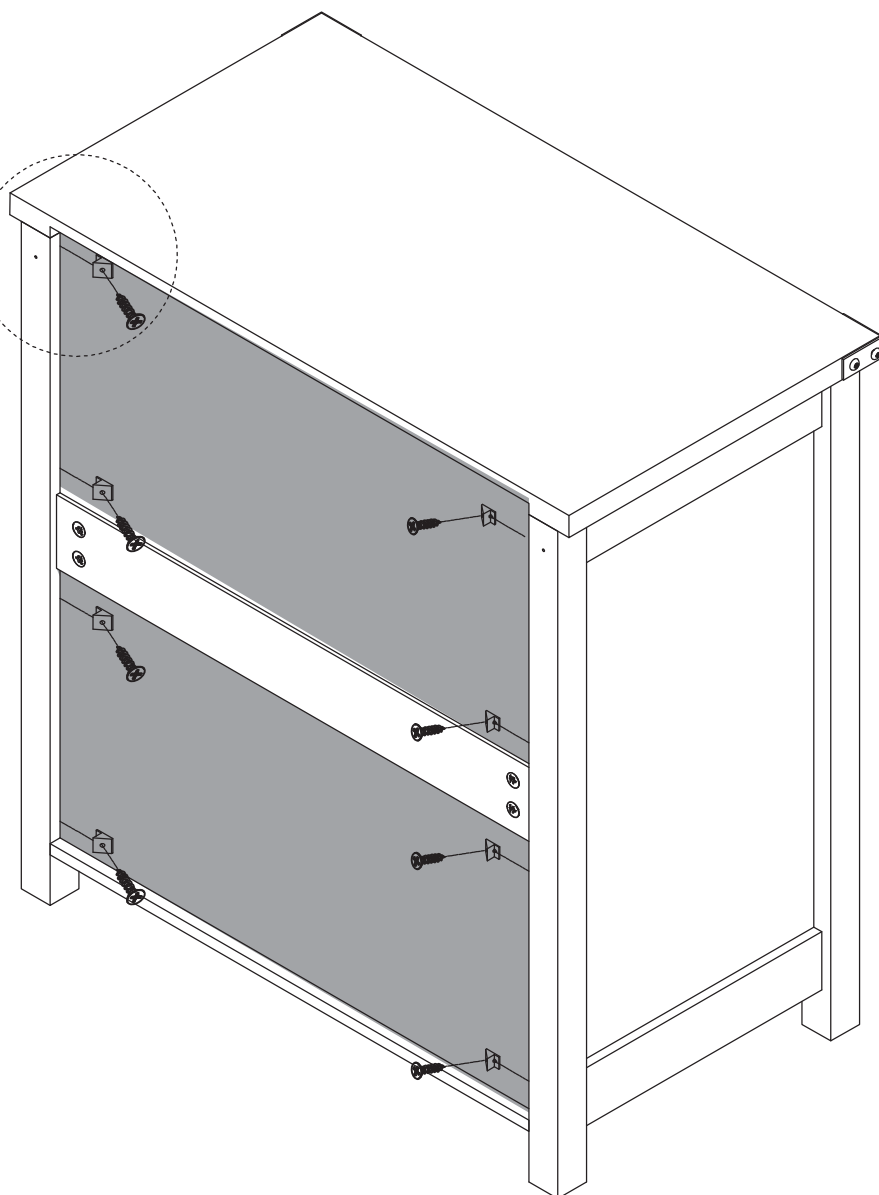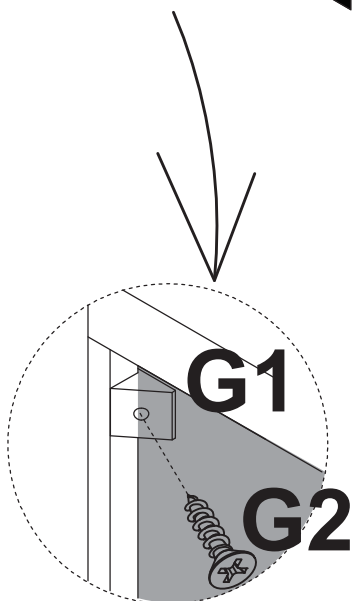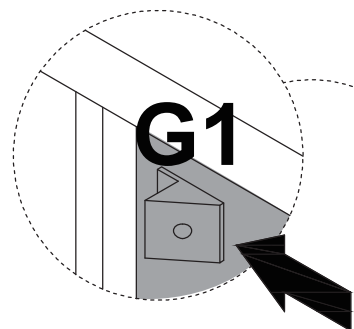

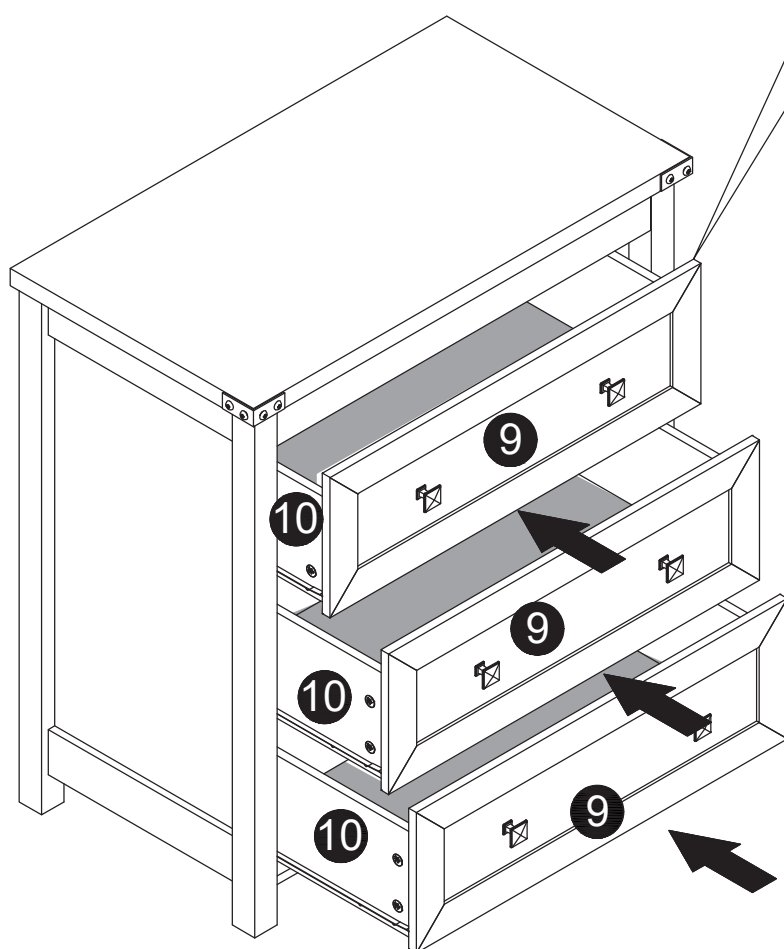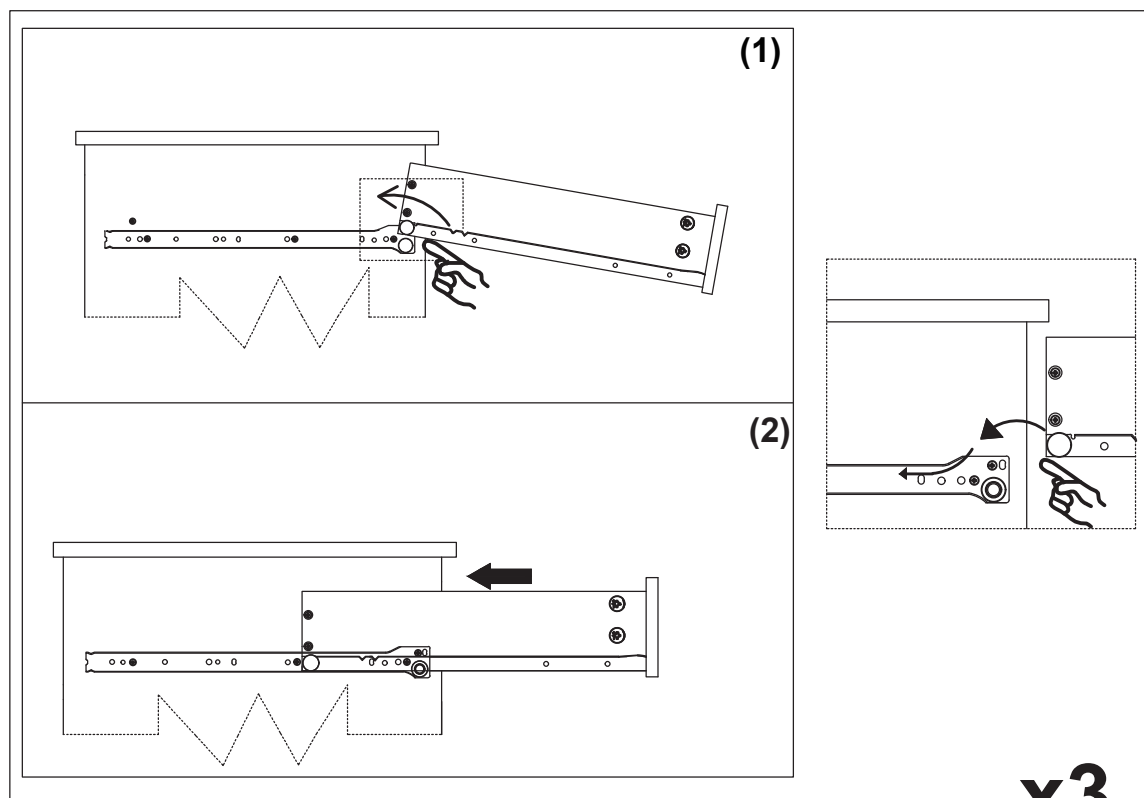

D x2



I x2



J x2



K x2




K



(1)x2

First fix the anti-rewind screw in the reserved hole of the product.


WALL

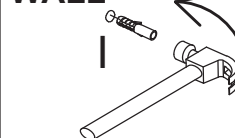

(4)x2


Then, put the expansion bolt into the hole

WALL

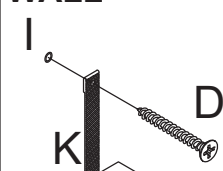

(5)x2

Finally, pass the matching screws through the "anti-rewind" and tighten them to fix them on the wall.

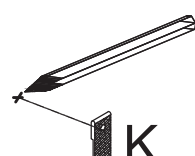

(2)x2

then, use a ruler to measure the approximate height of the product on the wall, and then mark it with a pen.

WALL

+
drilling hole
Ø6x30mm



(3)x2

Then use a tape drill to make holes in the wall that are suitable for the product screws.

WALL

