


INSTALLATION INSTRUCTIONS

Alcove Bathtub

CONDRIS


Suggested Installation Tools

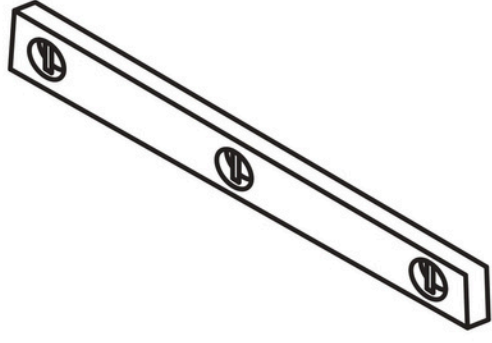

Level




Square

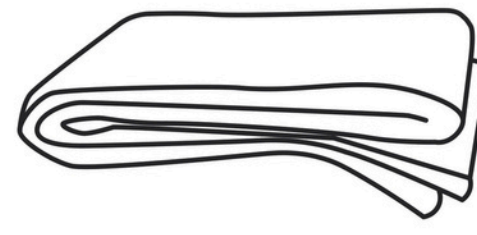

Towel






Wrench

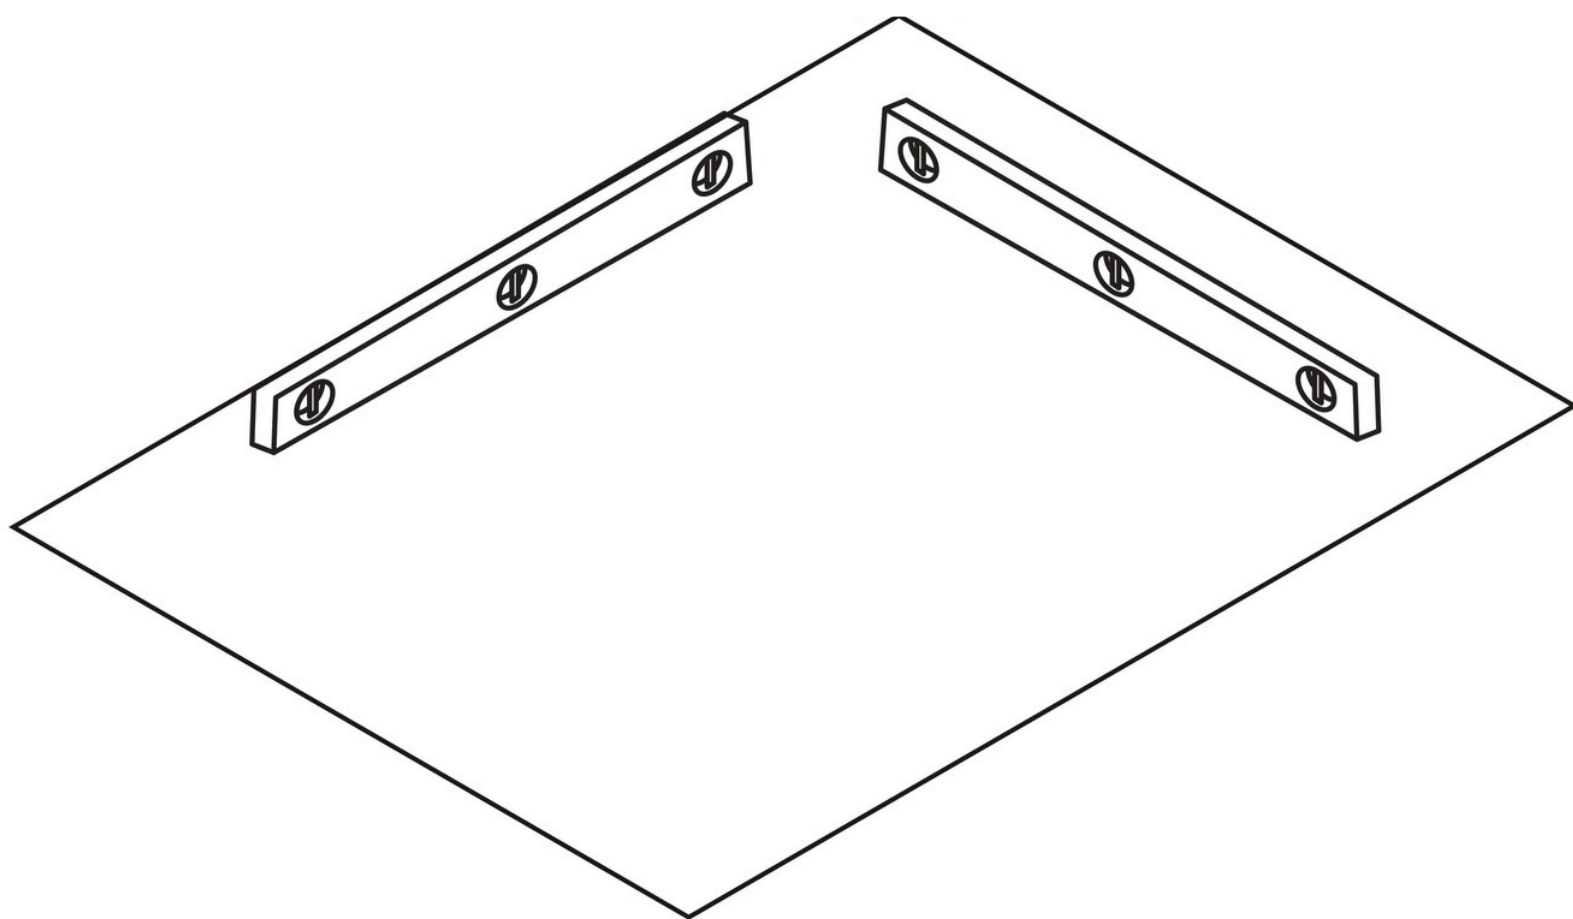


1. Please check the floor is level or not before installation as the above picture.

2. The feet are height-adjustable please adjust the feet as the above picture if necessary

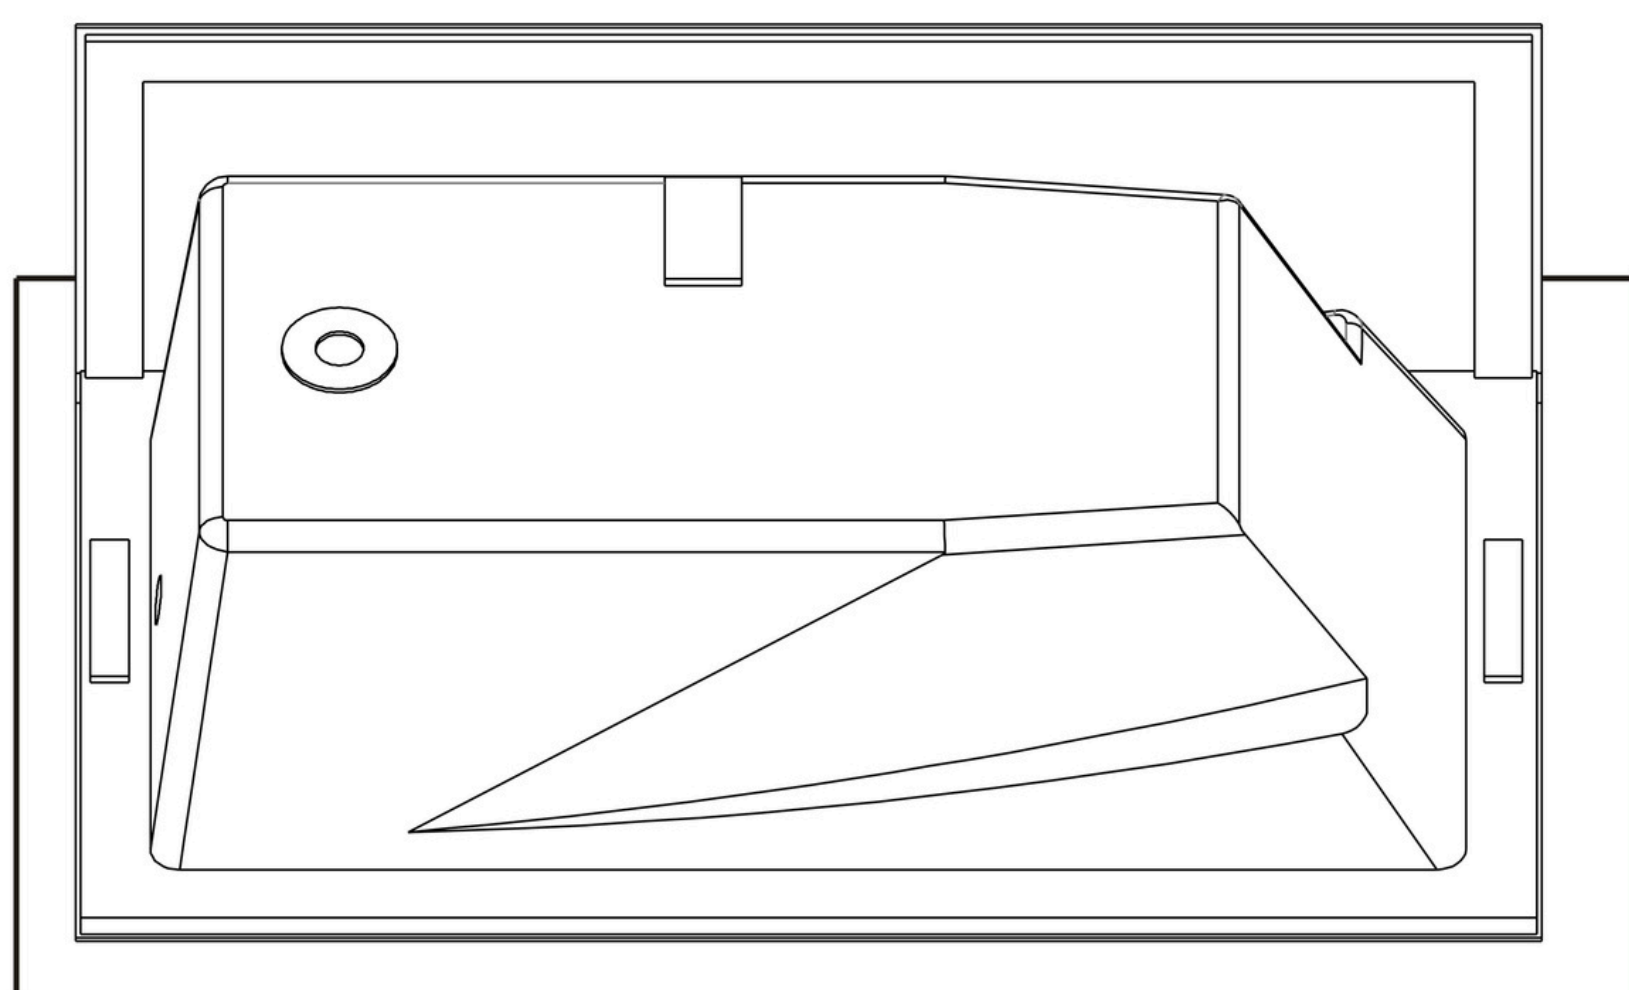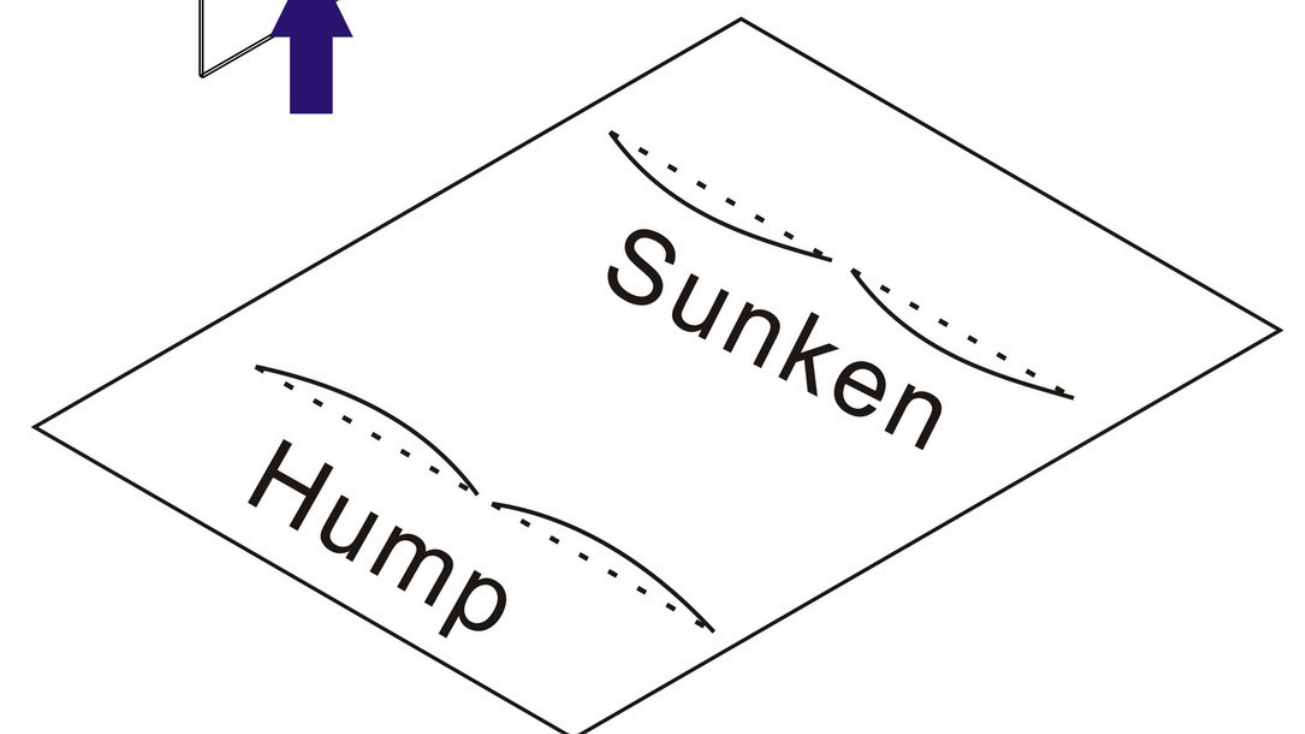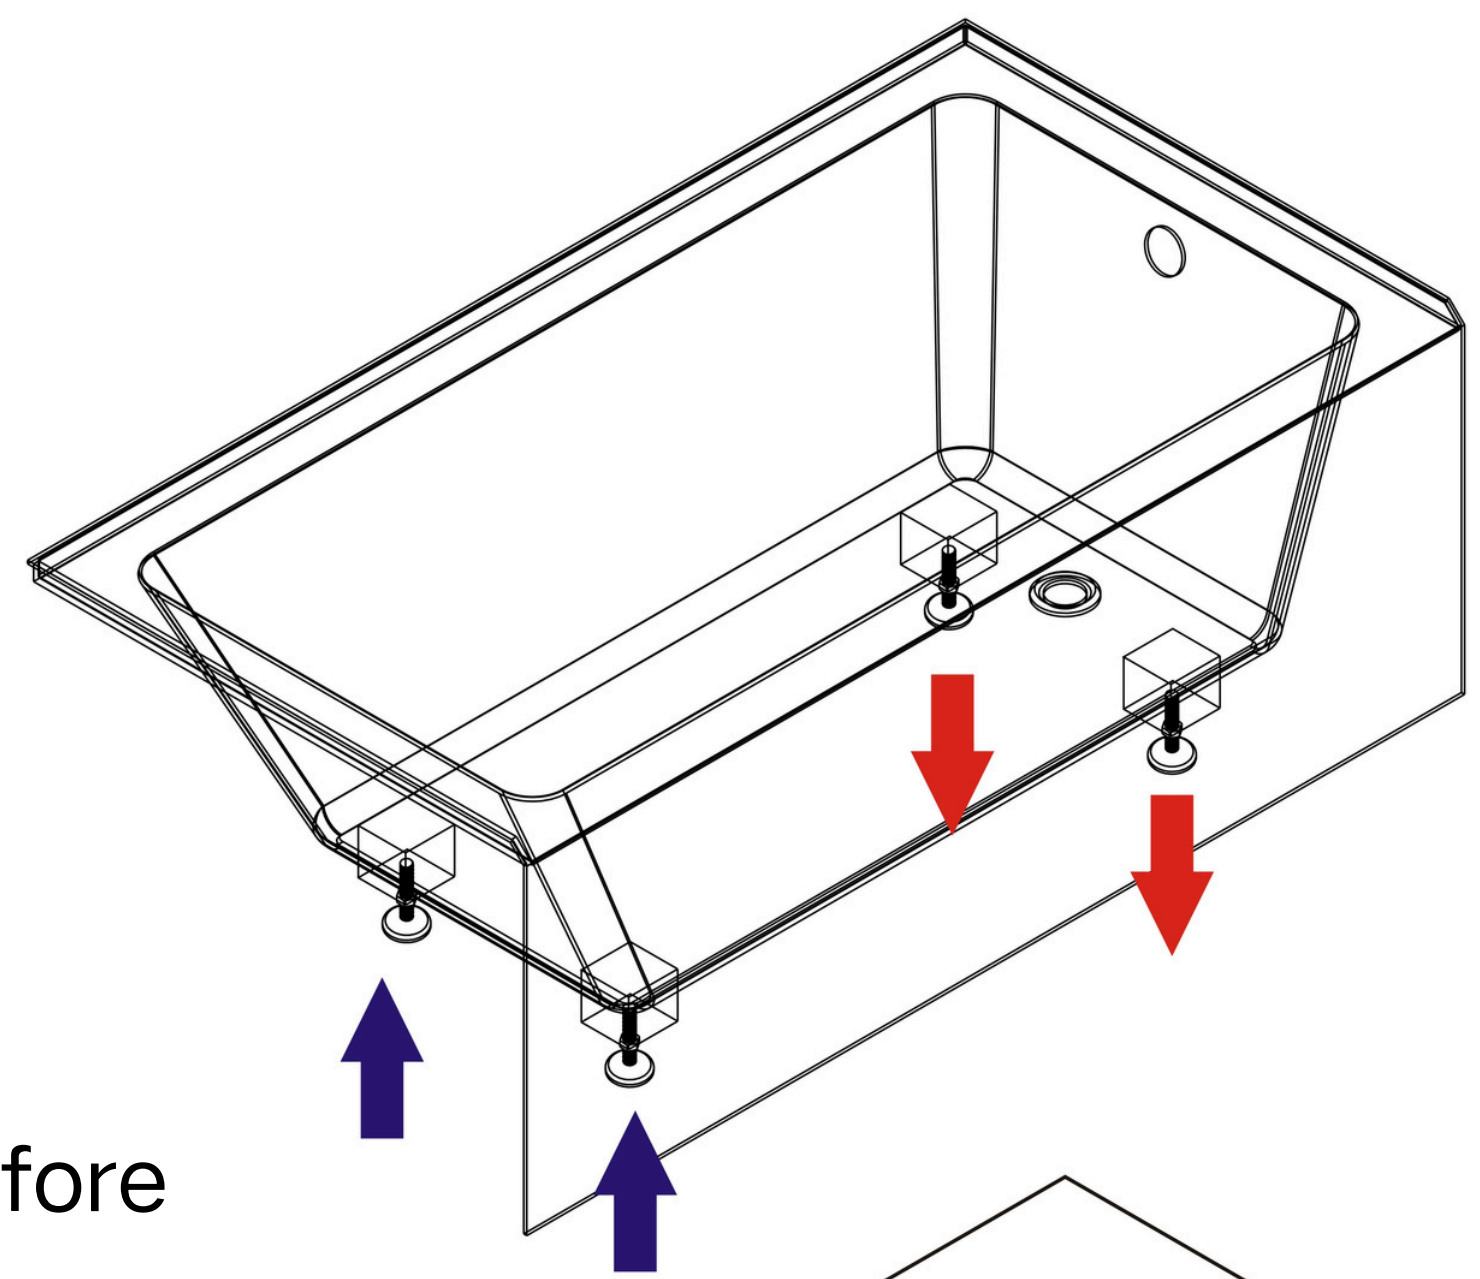

3. Please place the bathtub upside down on the mat to avoid damaging.

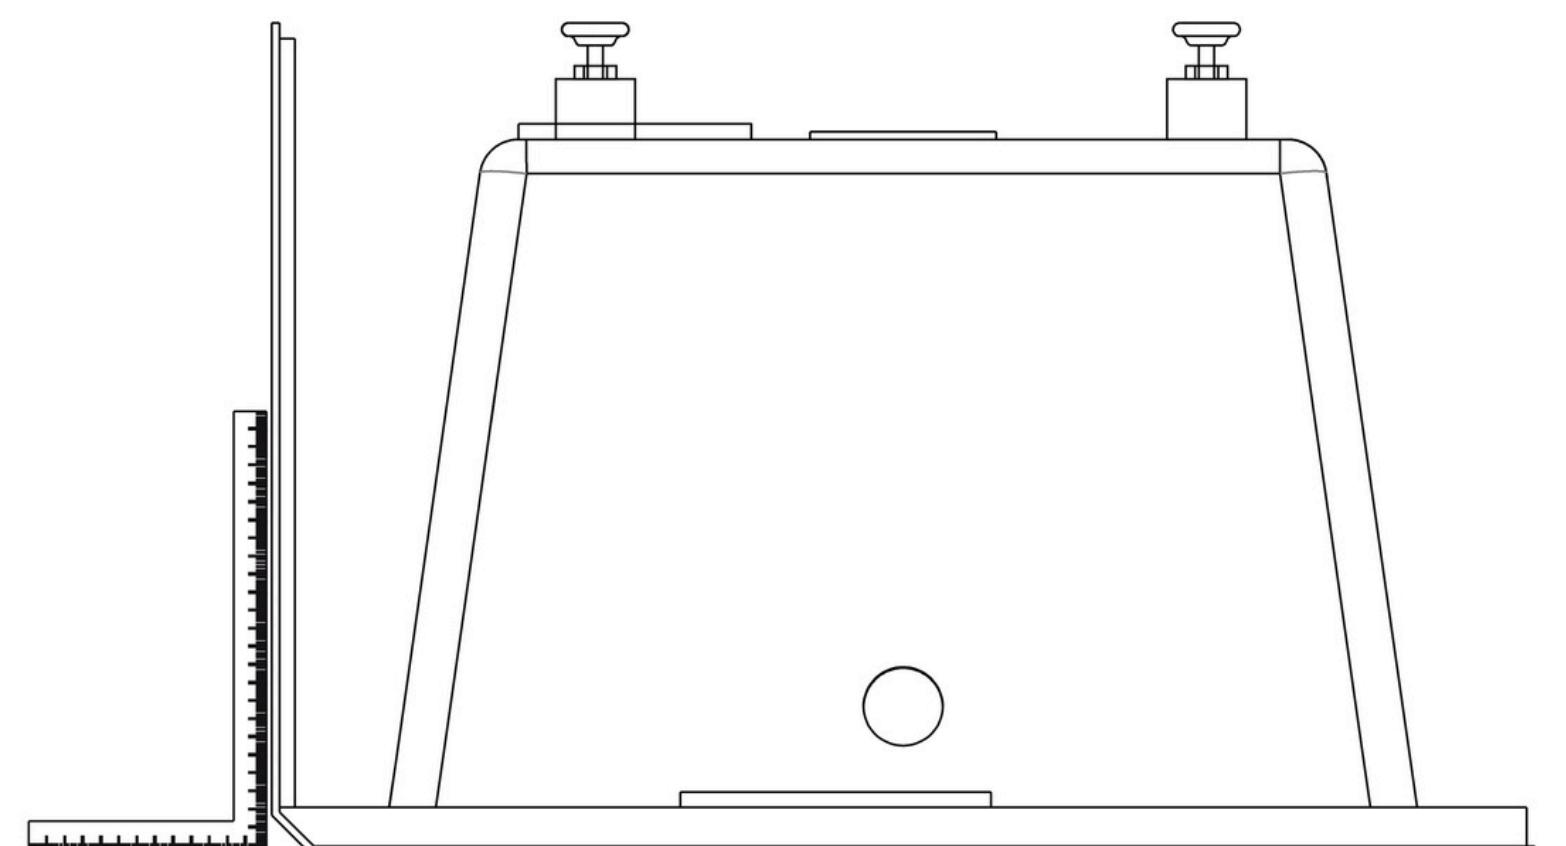


4. Please check the flange is vertical or not.

INSTALLATION INSTRUCTIONS



Alcove Bathtub

CONDRIS

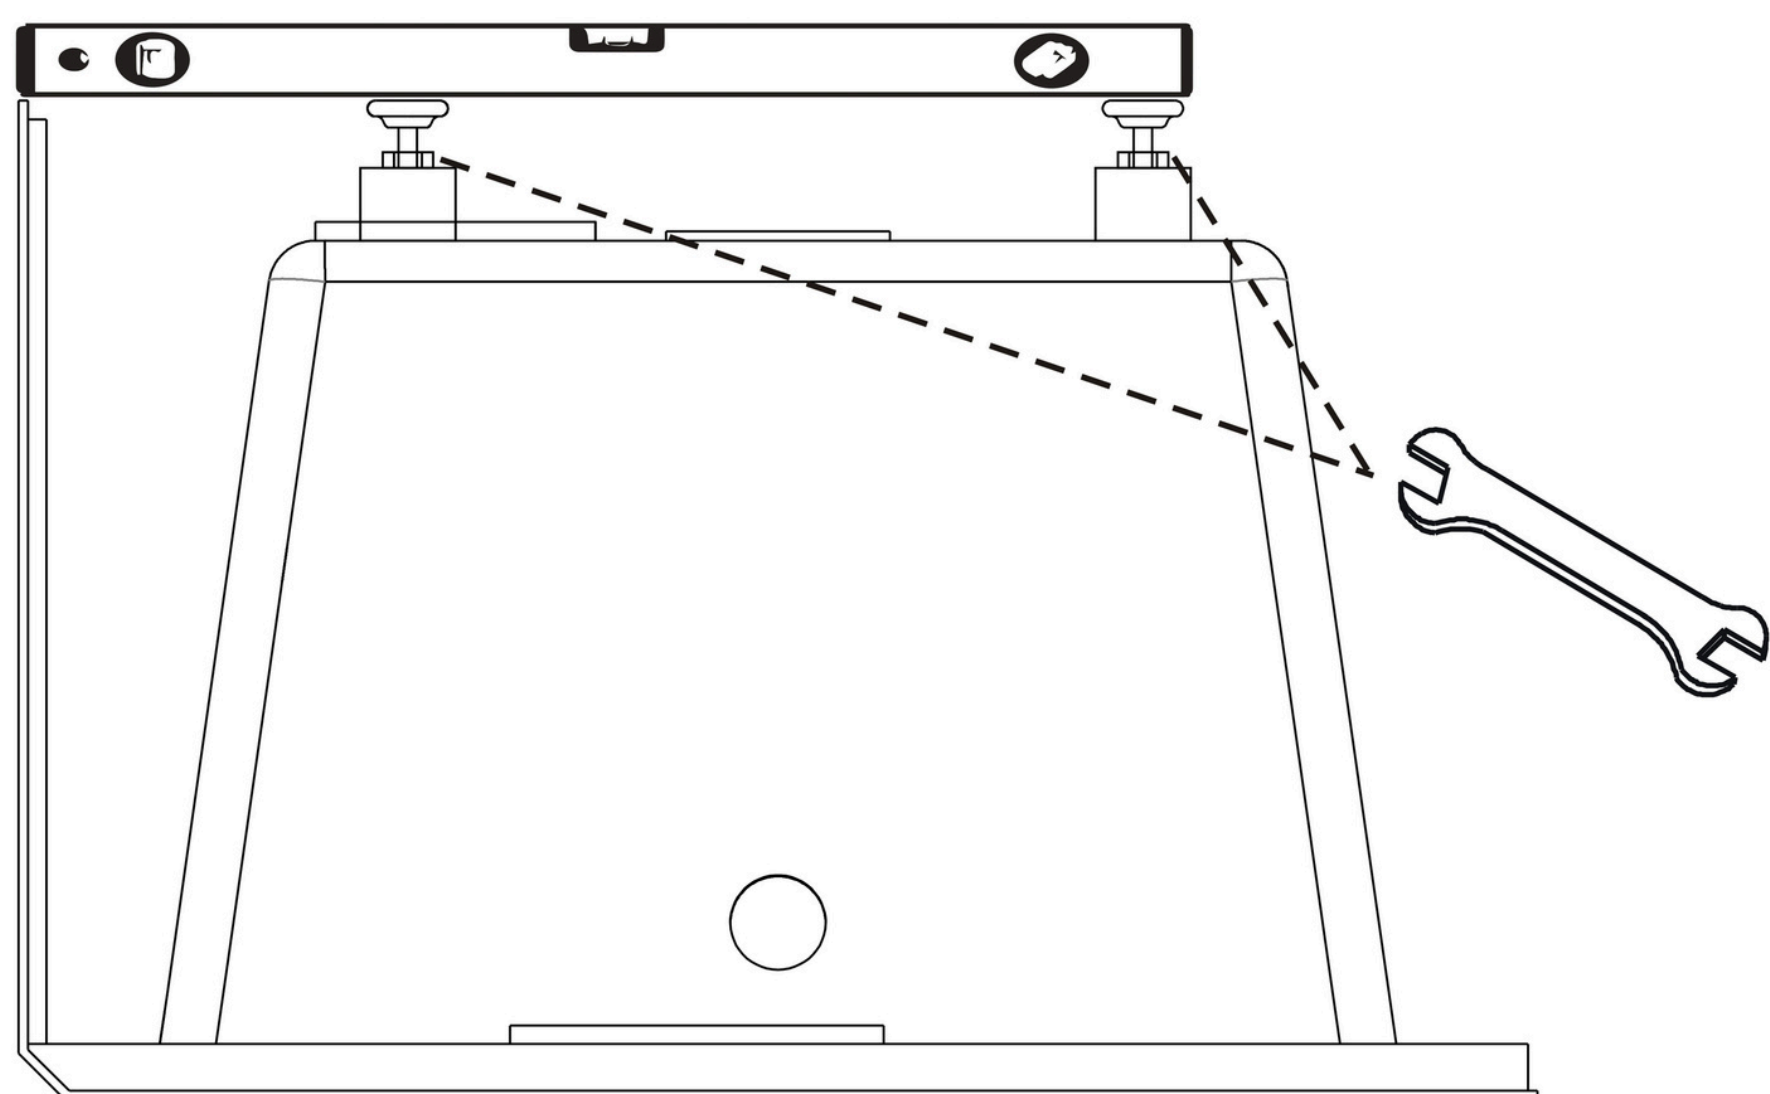

5. Please check the feet are level or not, since they may be loosen during long-distance delivery.

6. Please clean the bathtub by towel.

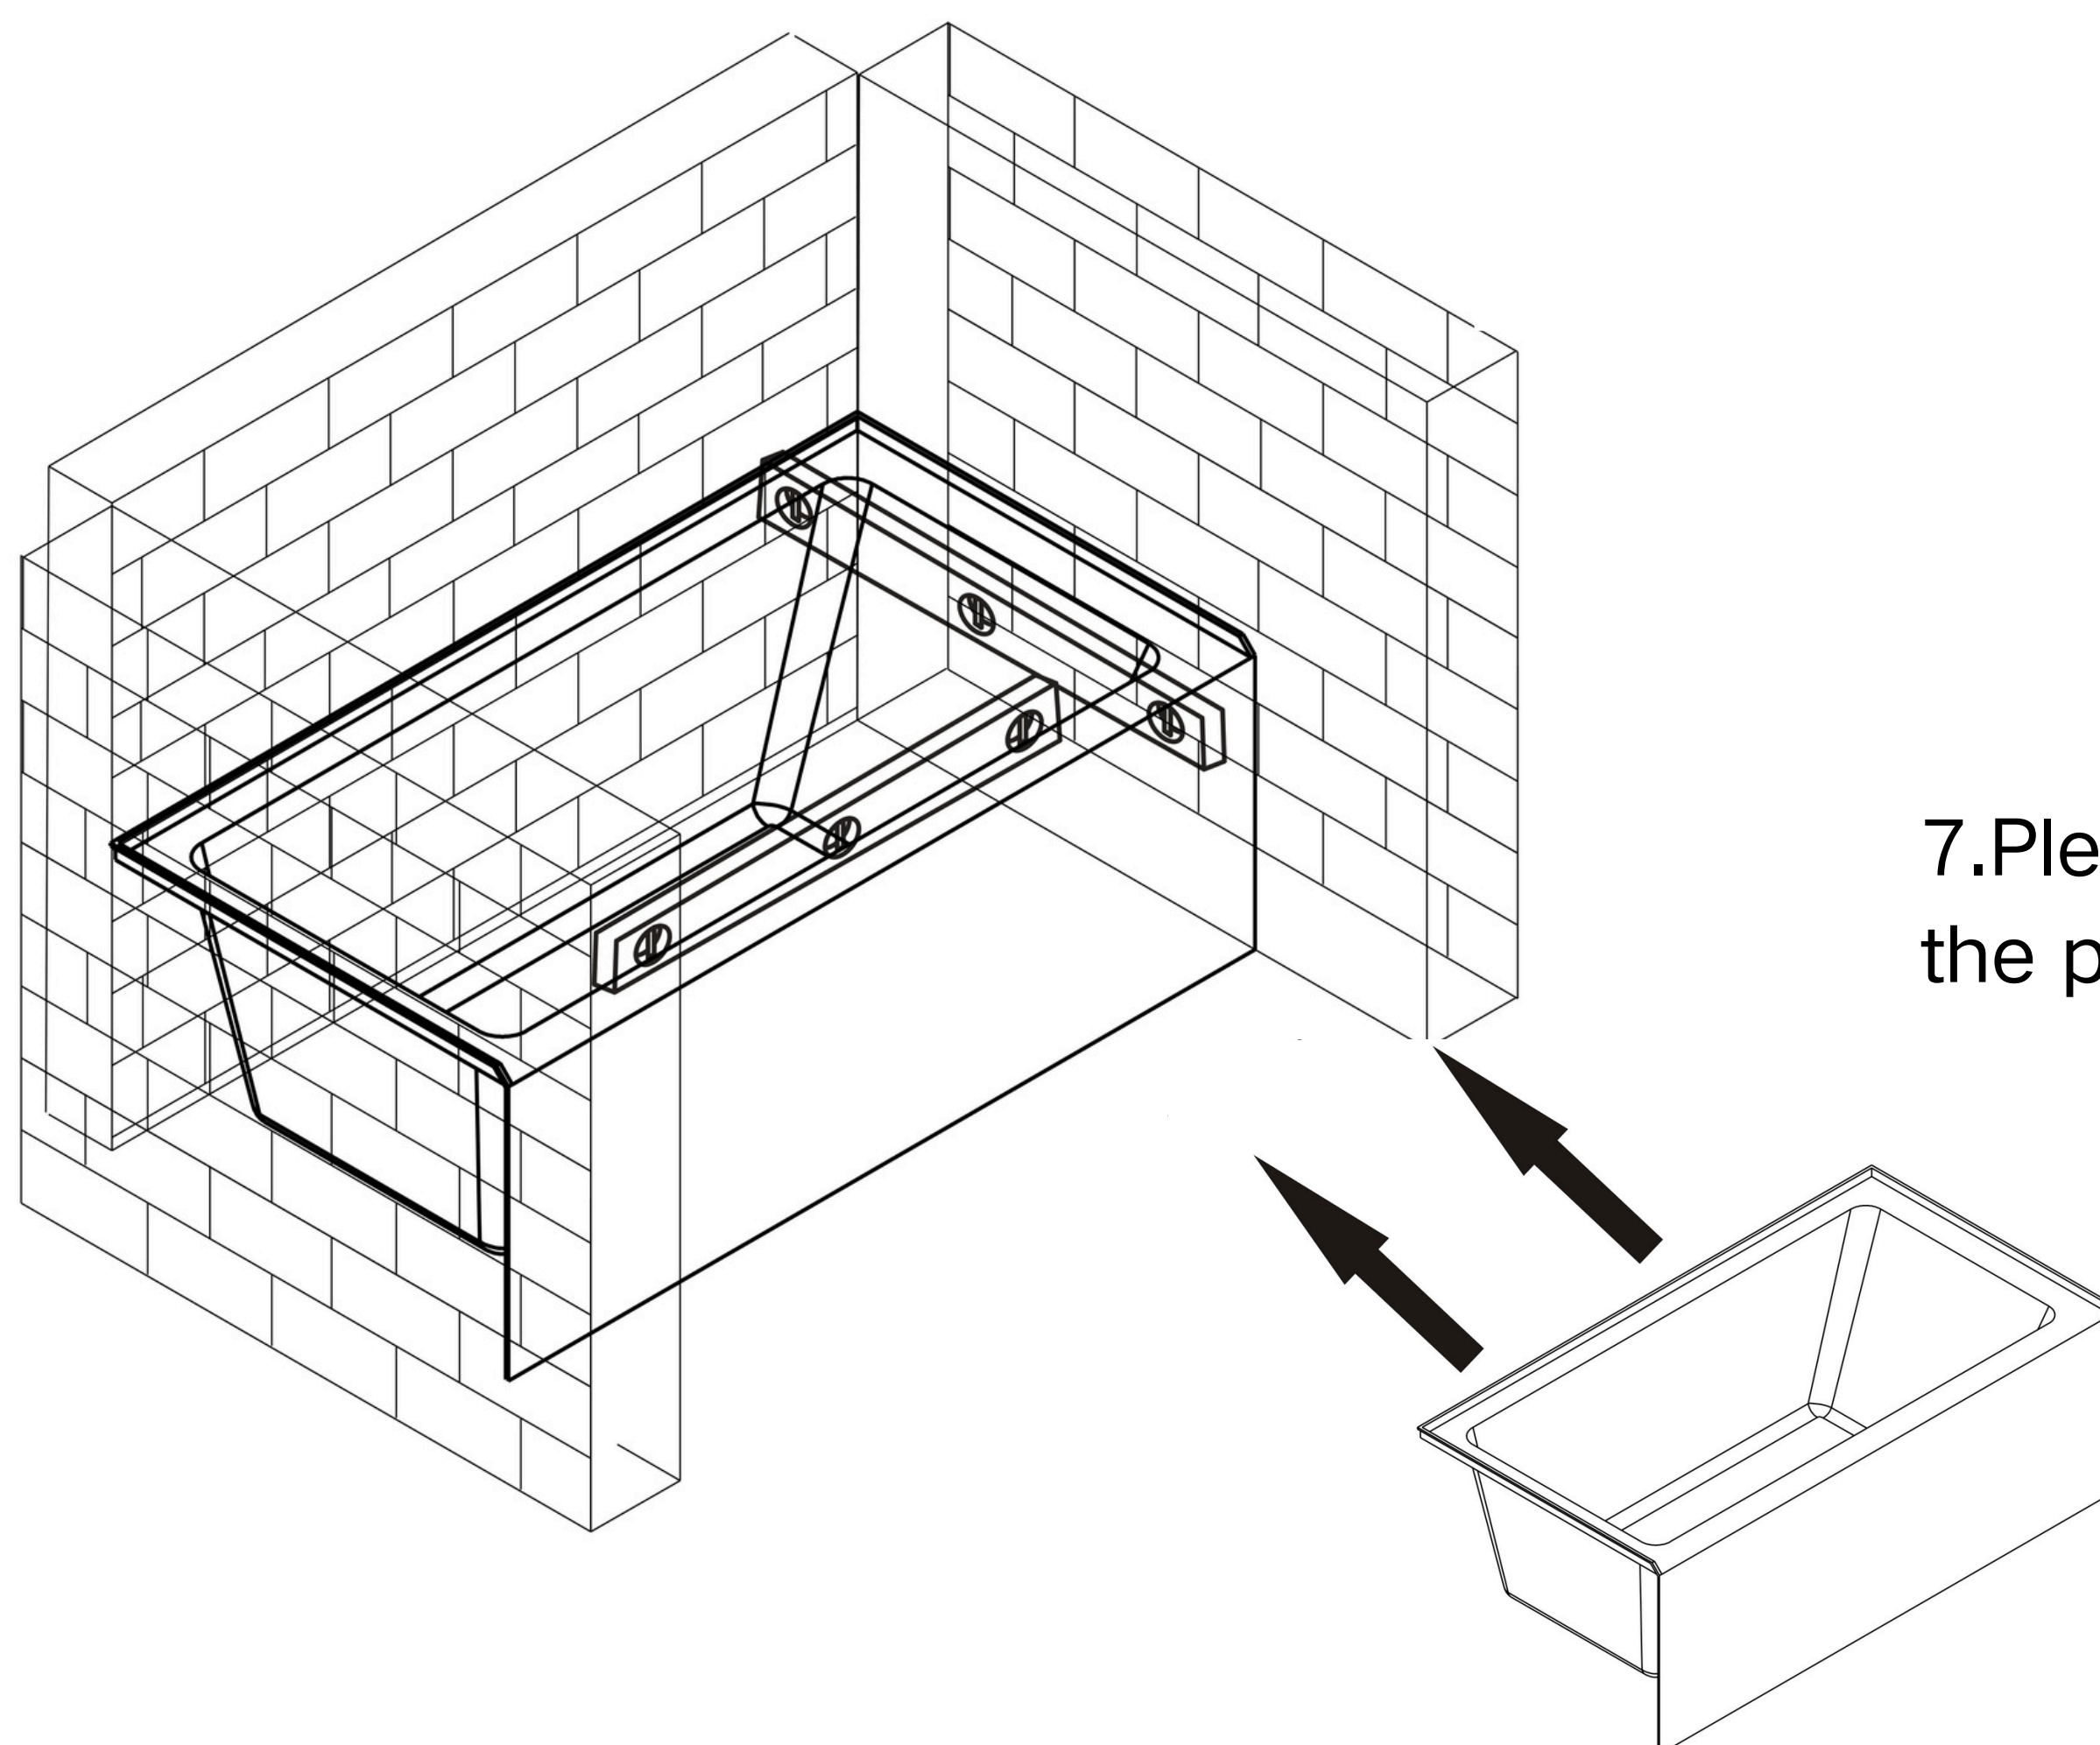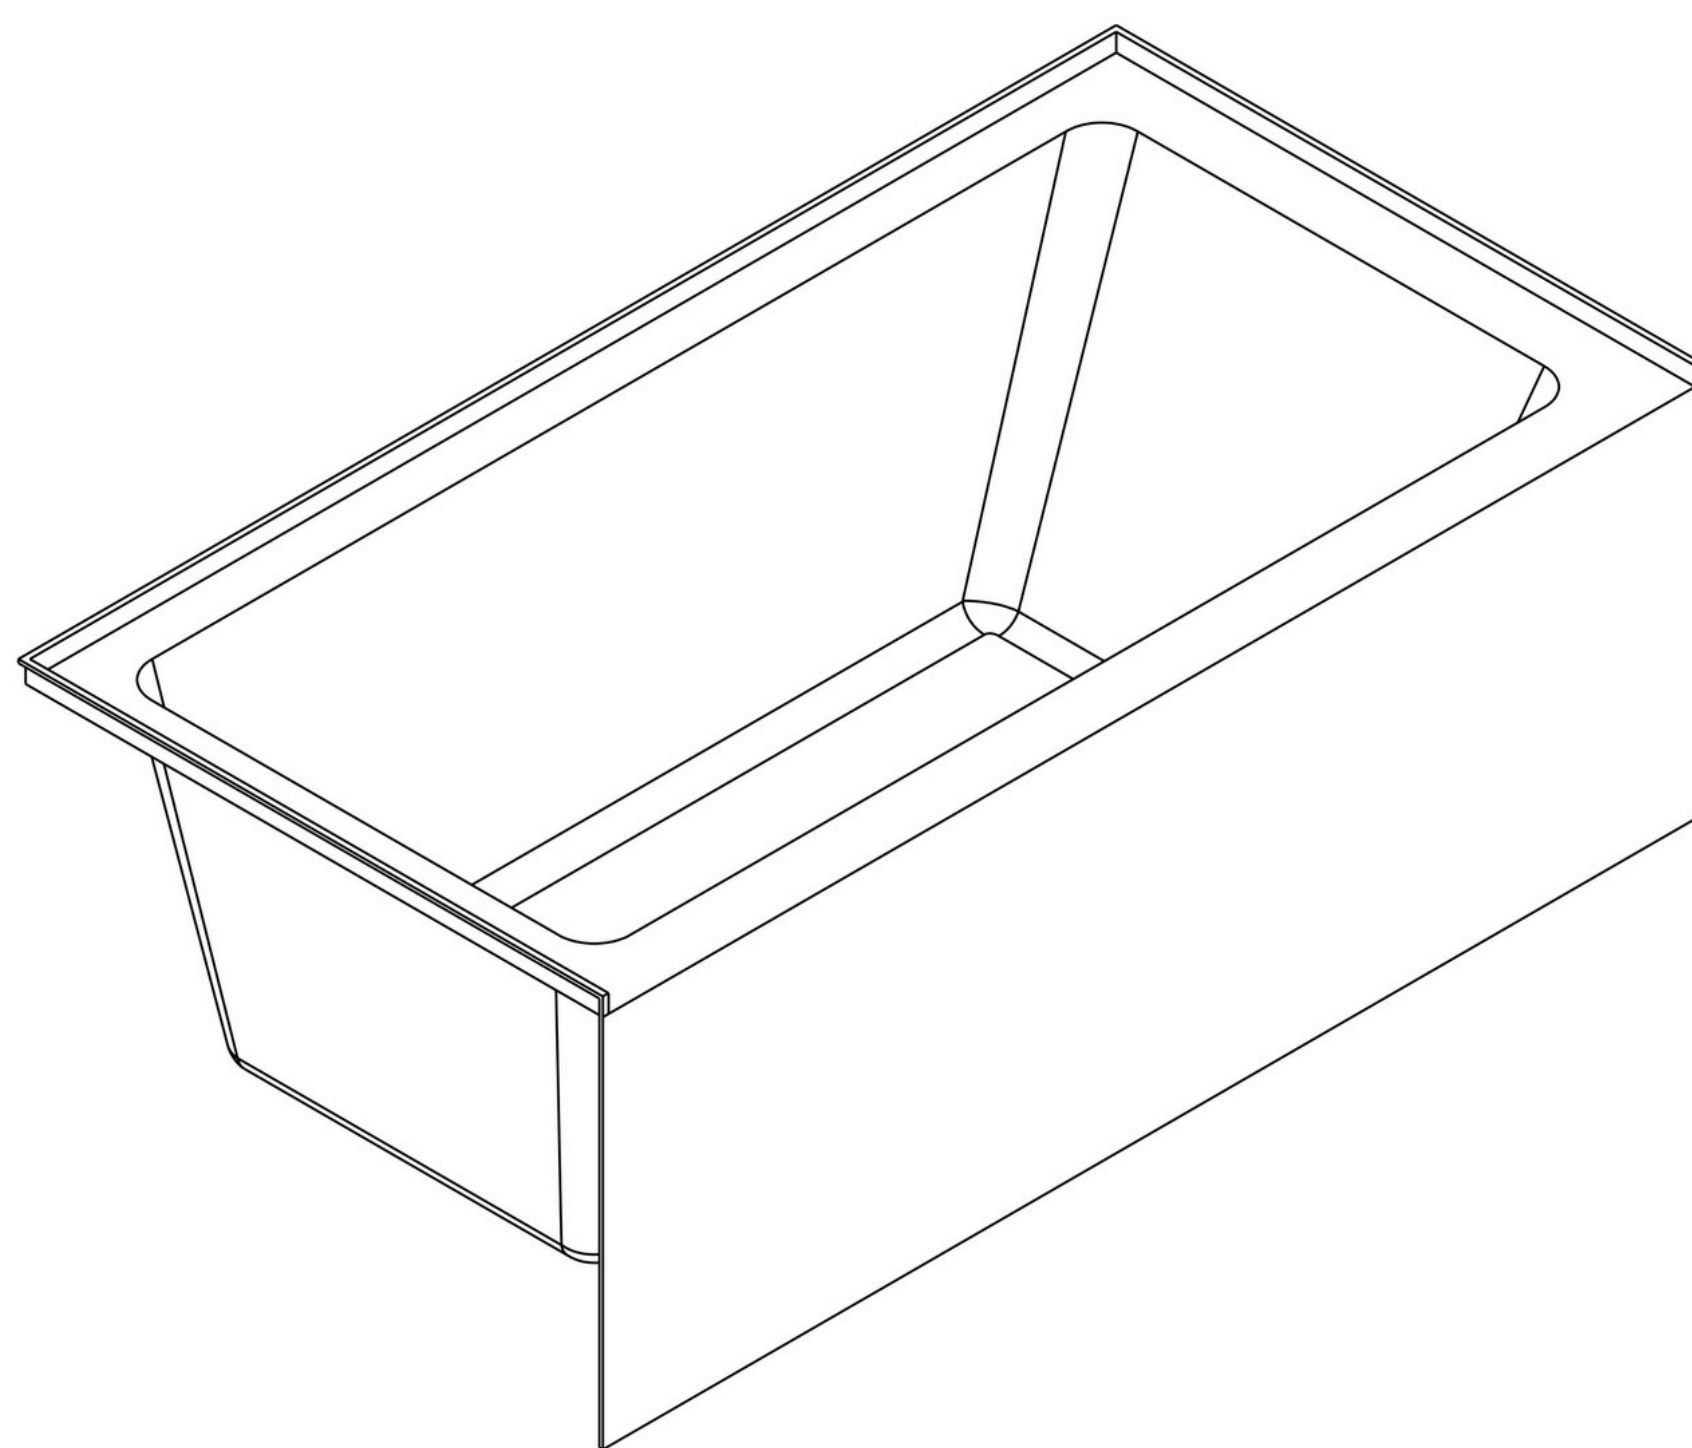

7. Please put the bathtub as the picture.