



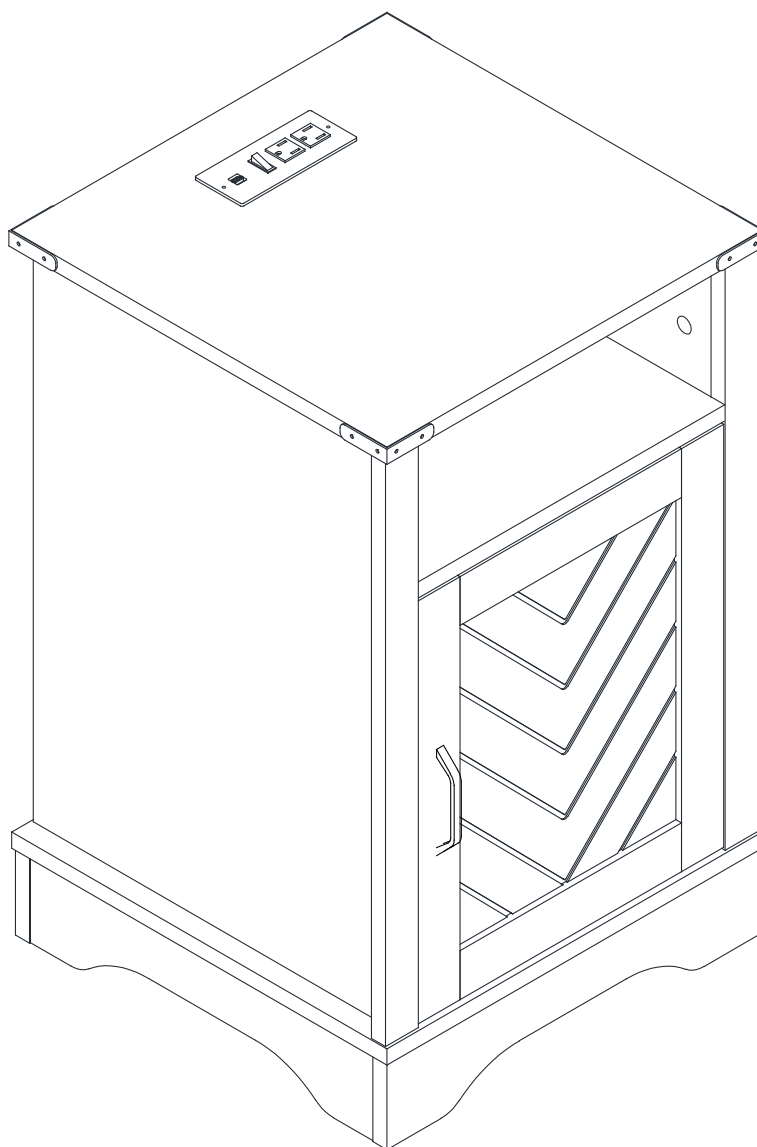

THIS INSTRUCTION BOOKLET CONTAINS **IMPORTANT** SAFETY INFORMATION.
PLEASE READ AND KEEP FOR FUTURE REFERENCE.

Before You Start

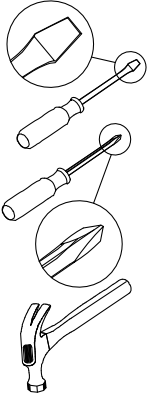

- ✓ Read through each step carefully and follow the proper order
- ✓ Separate and count all your parts and hardware
- ✓ Give yourself enough room for the assembly process
- ✓ Have the following tools: Flat Head Screwdriver, #2 Phillips Head Screwdriver and Hammer
- ✓ Caution: If using a power drill or power screwdriver for screwing, Please slow down or stop when the screw is tightened. Otherwise it may cause the screws to peel off.

Helpful Hints










PEOPLE NEEDED FOR ASSEMBLY: 1-2

- Open your item in the area you plan to keep it to avoid excessive heavy lifting.
- Identify, sort and count the parts before attempting to assembly.
- Compression dowels are lightly tapped in with a hammer.
- Slides are labeled with an **R** (right) and **L** (left) for proper placement.
- Make sure to always face the point on the top of the Cam Lock towards the outer edge.
- Use all the nails provided for the back panel and spread them out equally.
- Back panel must be used to make sure your unit is sturdy.
- Do NOT use harsh chemicals or abrasive cleaners on this item.
- Never push, pull, or drag your furniture.




Board Identification


Not actual size

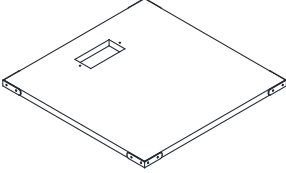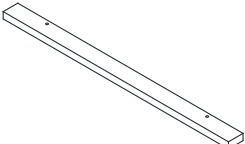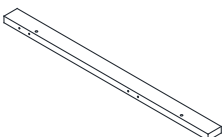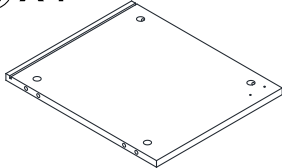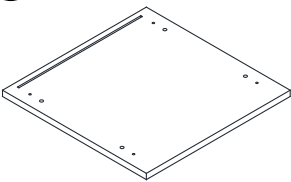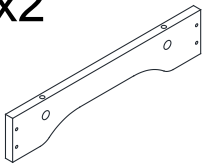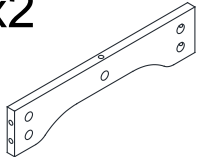①x1  Roof Plate	②x1  Left Side Plate	③x1  Right Side Plate	④x1  Front Vertical Bar Of Side Panel
⑤x1  Front Vertical Bar Of Right Side Panel Connected To Door	⑥x1  Right Hand Upper Fixing Plate	⑦x1  Bottom Plate	⑧x1  Right Hand Door Frame
⑨x2  Front And Rear Cross Bars Under Base Plate	⑩x2  Left And Right Vertical Bars Under Bottom Plate	⑪x1  Back Panel	


Part List

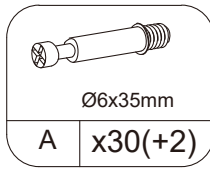

Cam Bolt

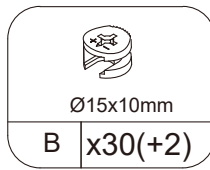


Cam Lock

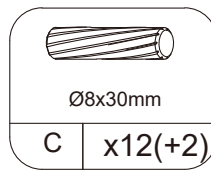


Dowel




Handle Bolt

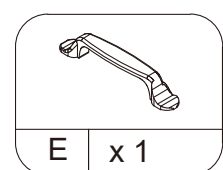


Hold Hands

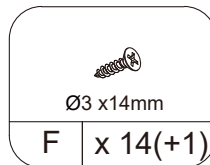


Screw

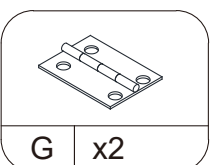


Hinge

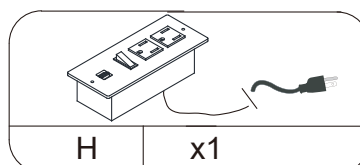


SOCKET

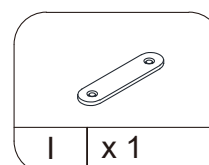


Door Stopper

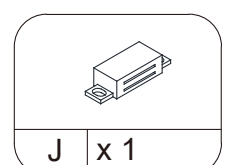


Door Stopper

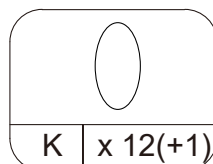

Sticker

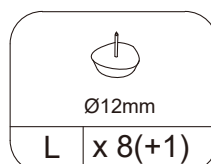


Foot Nail

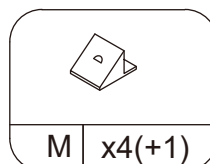


Back Buckle



Back Buckle Screw

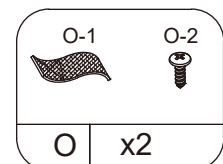


Anti-Fall Strip Large Flat Head Screw

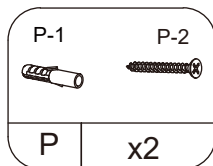


Plastic Expansion Self-Tapping Screw

Cam Lock Fastening System











This Cam Lock Fastening System will be used throughout the assembly process.

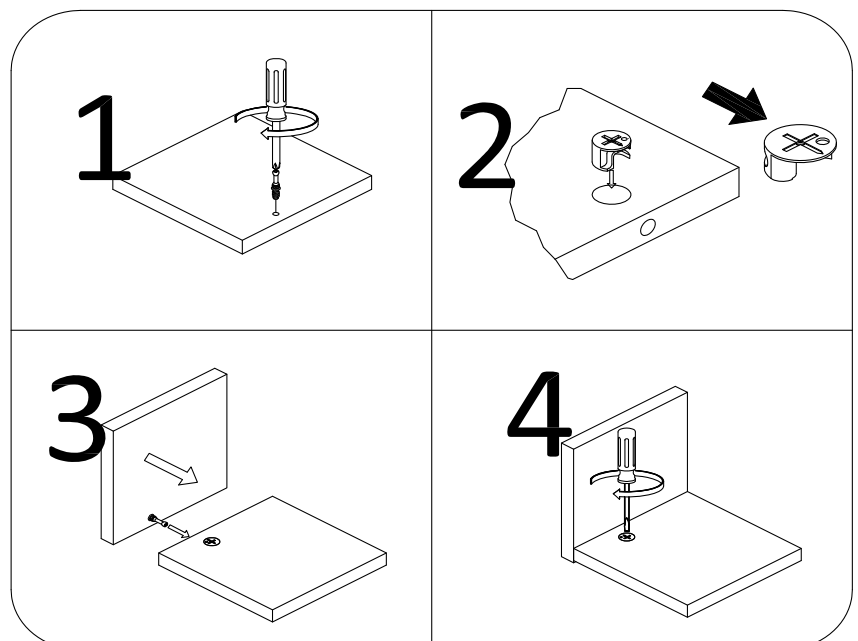








Board Identification

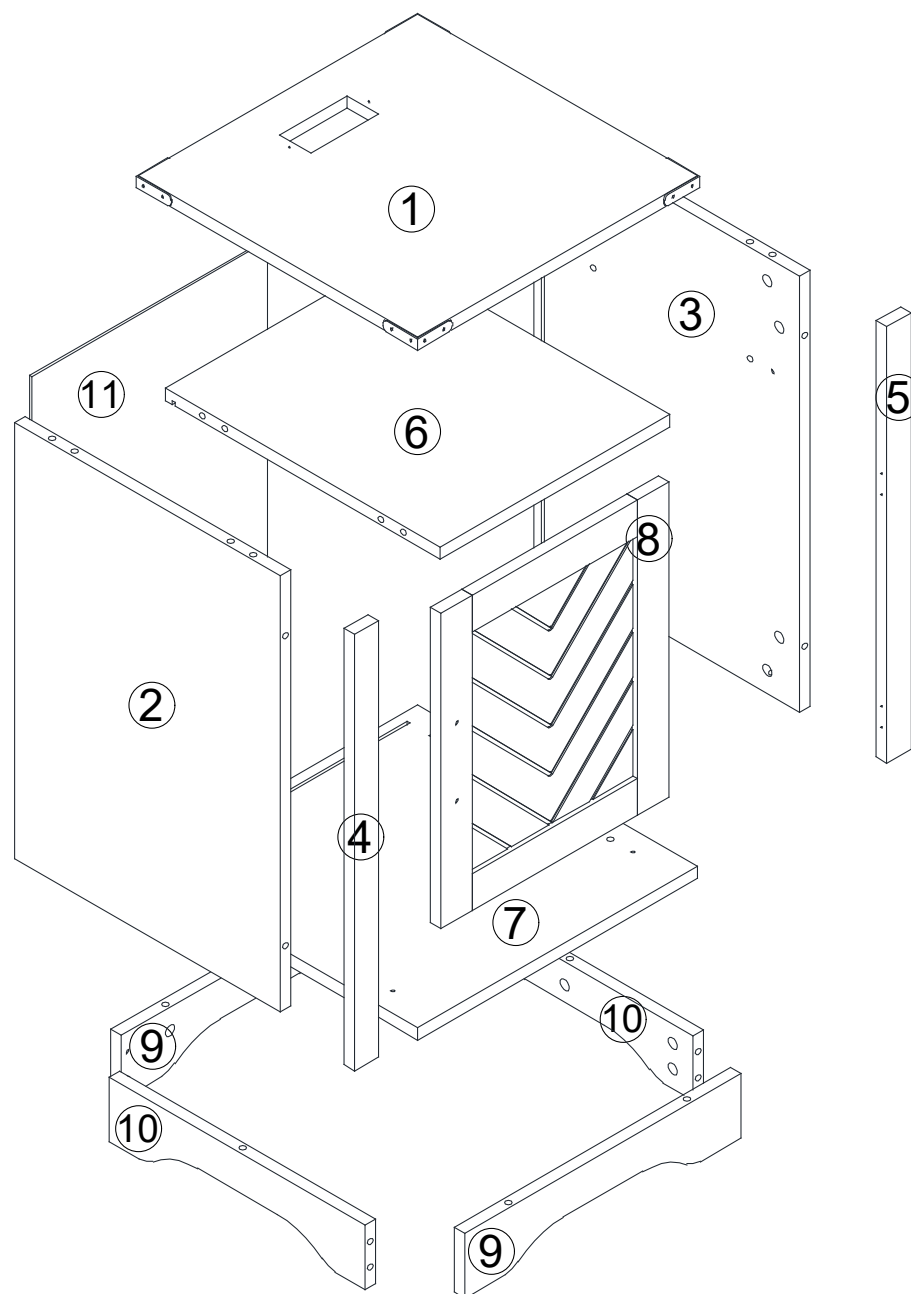










STEP 1

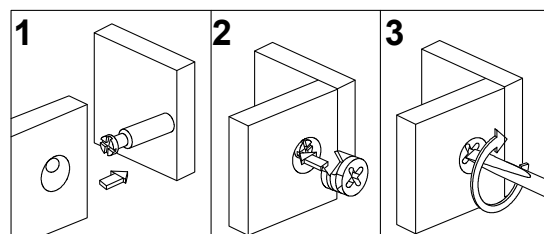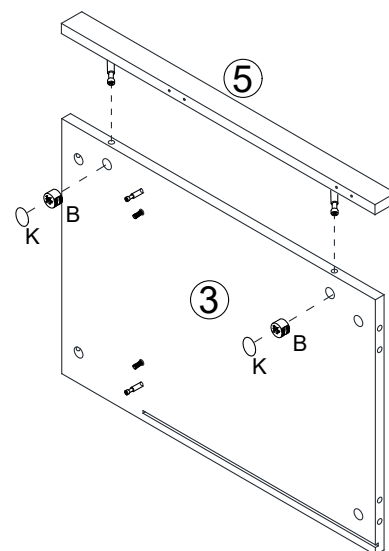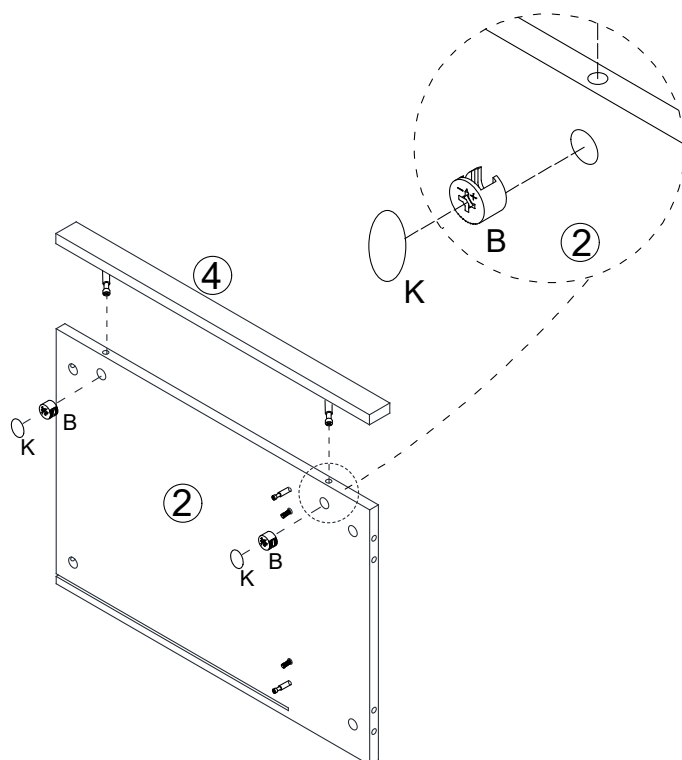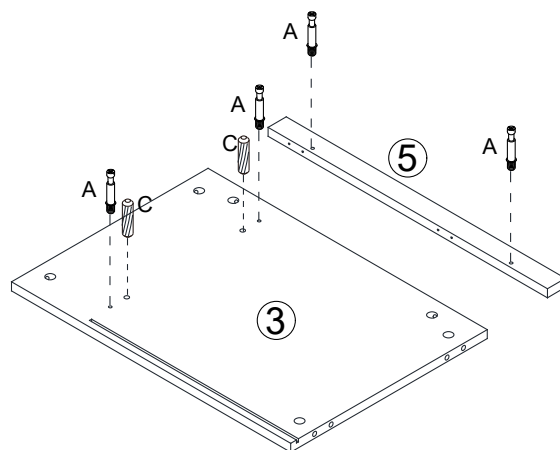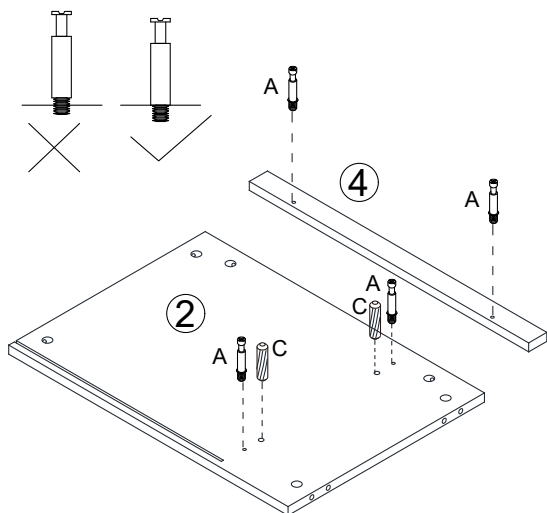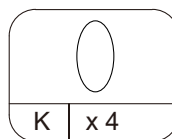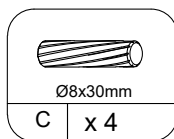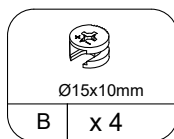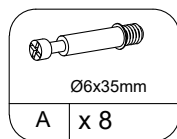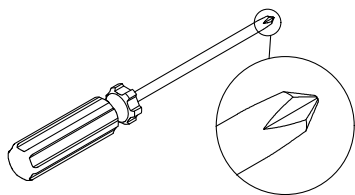


STEP 2

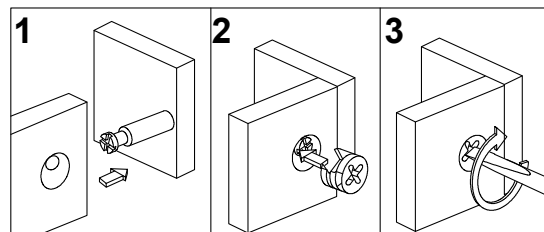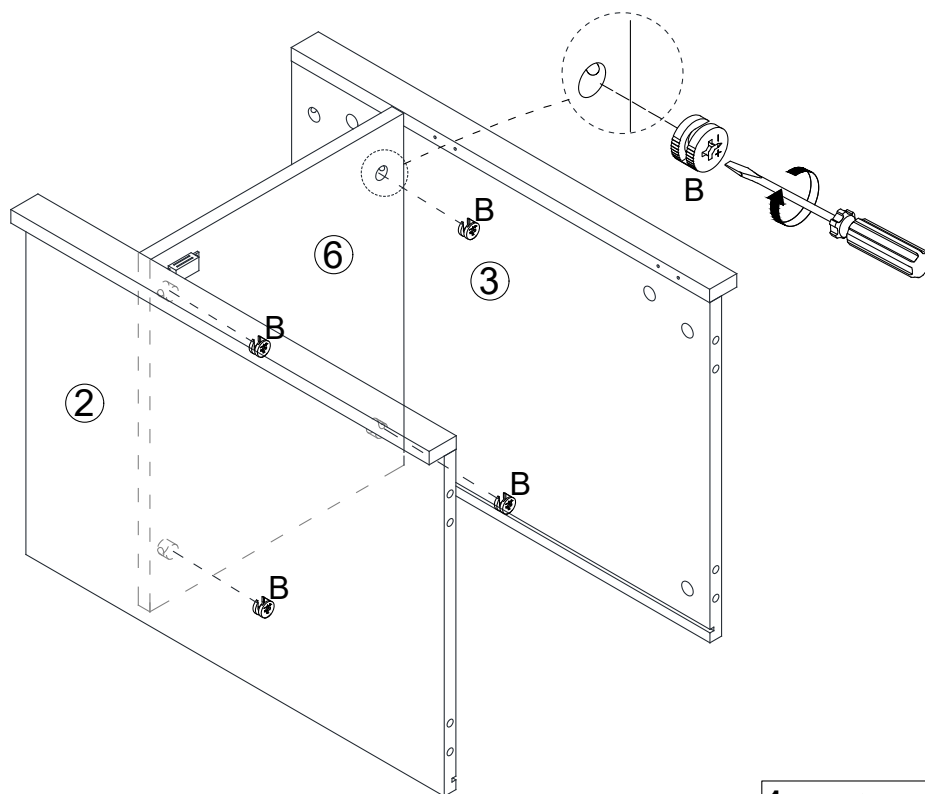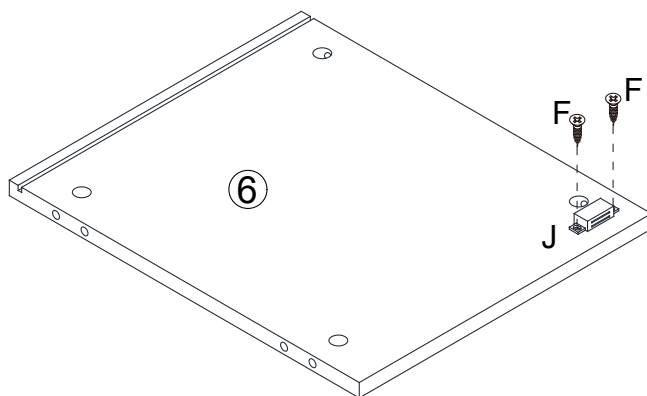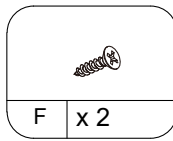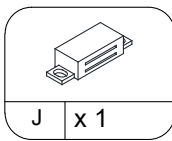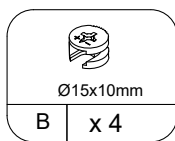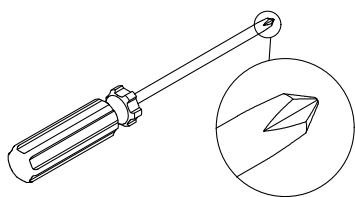










STEP 3

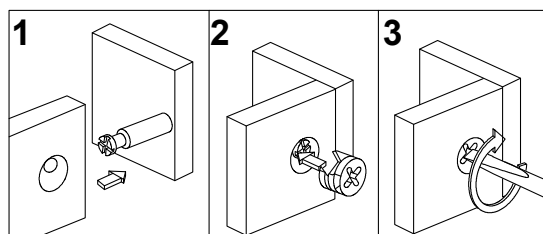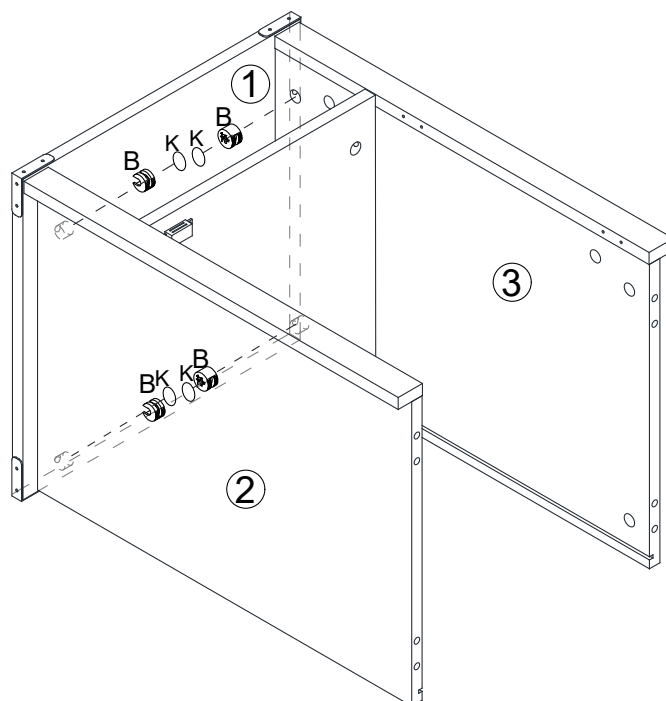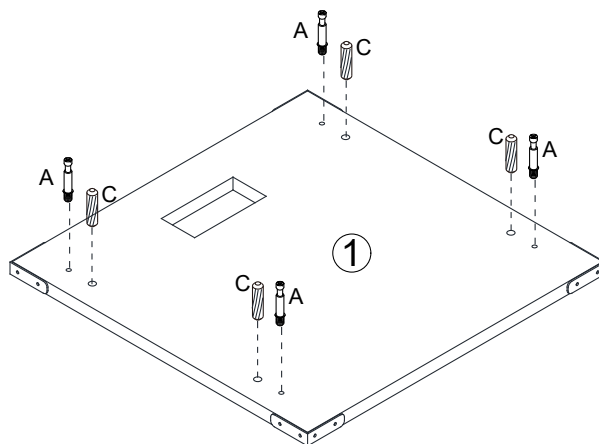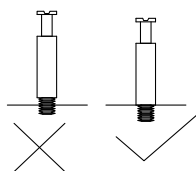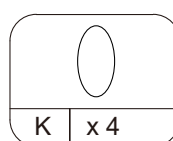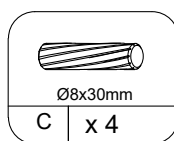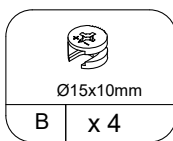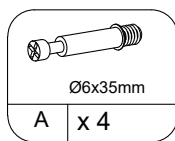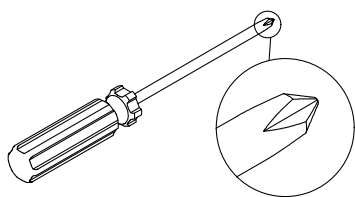





STEP 4

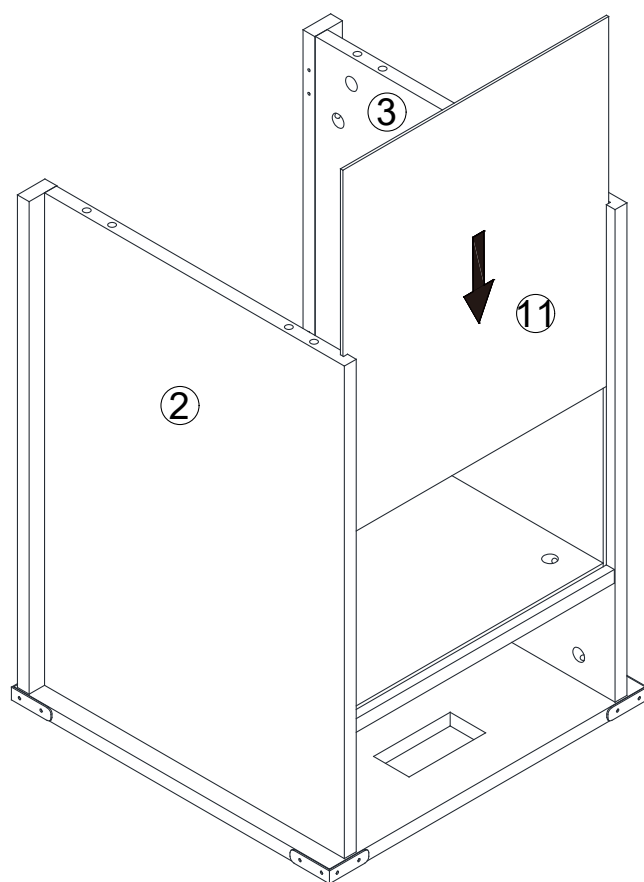








STEP 5

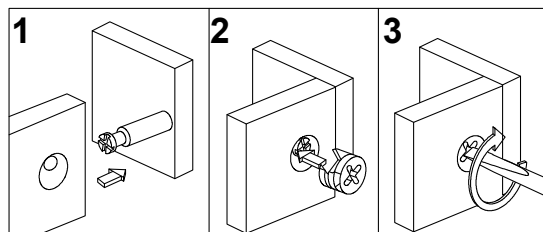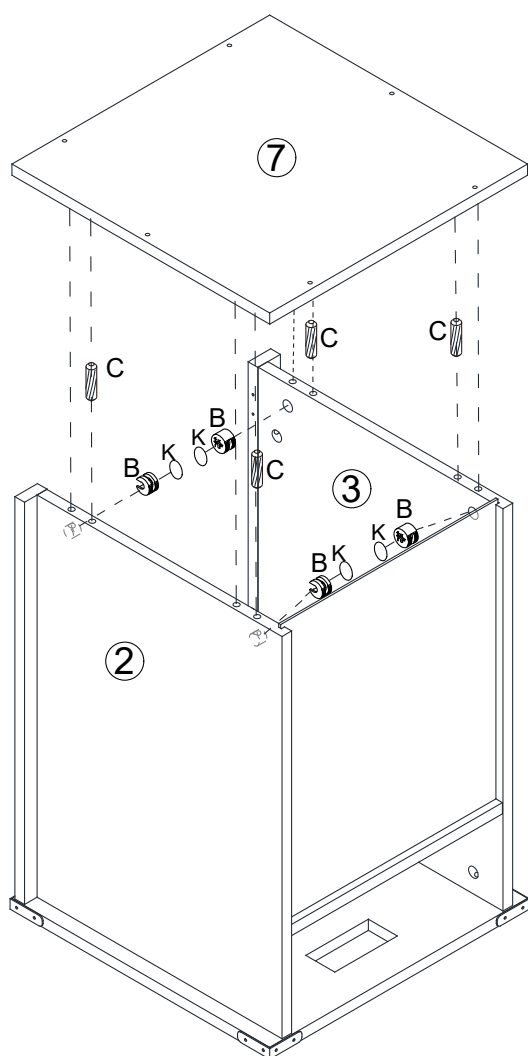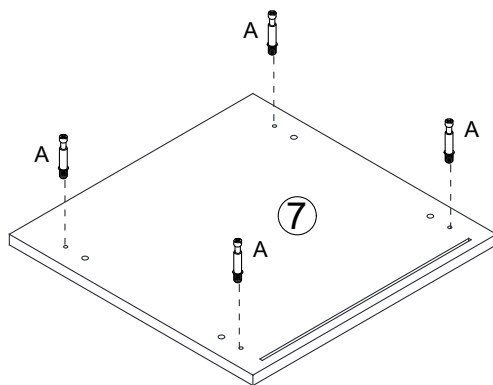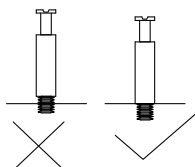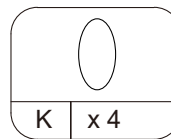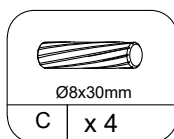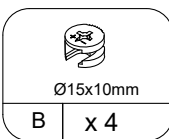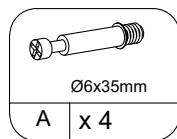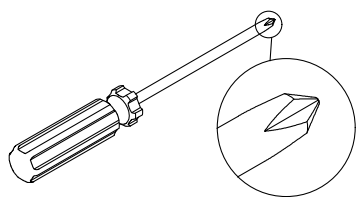







STEP 6

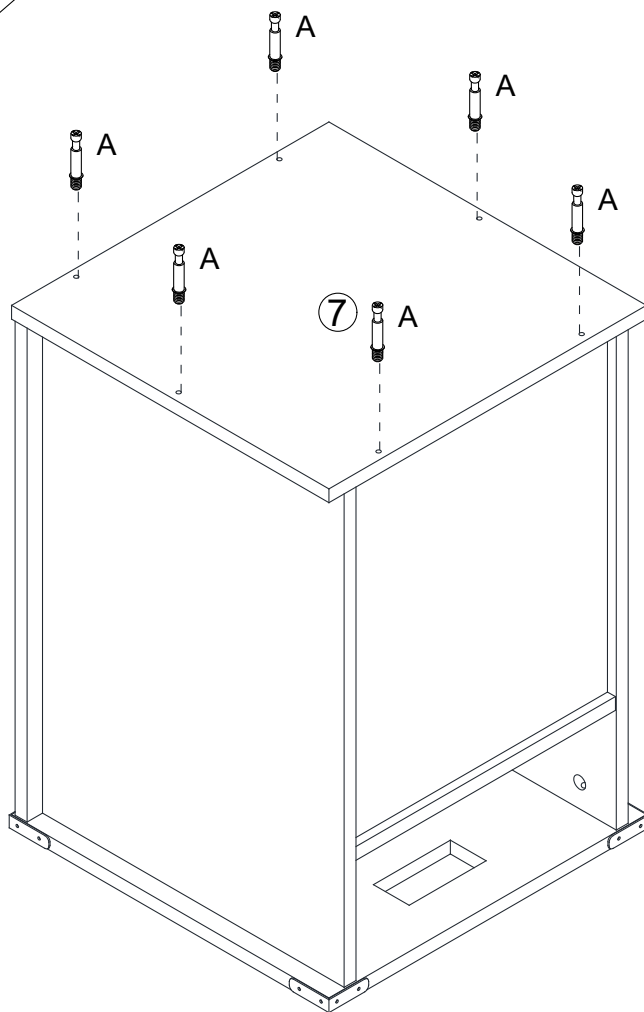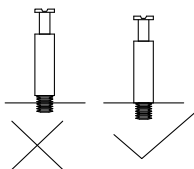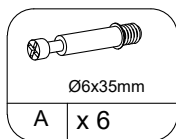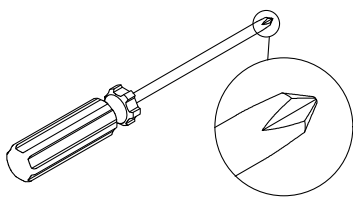










STEP 7

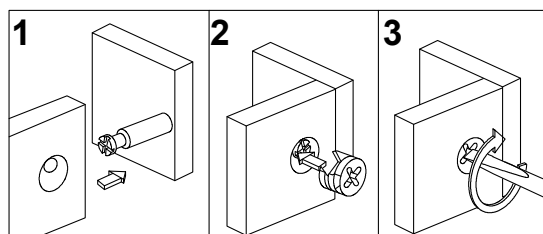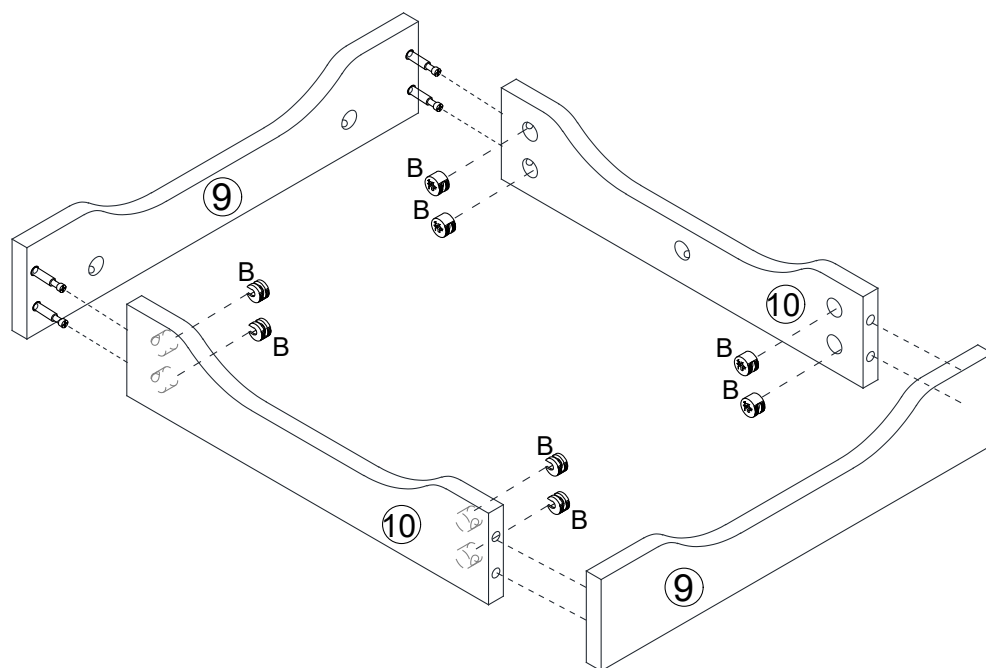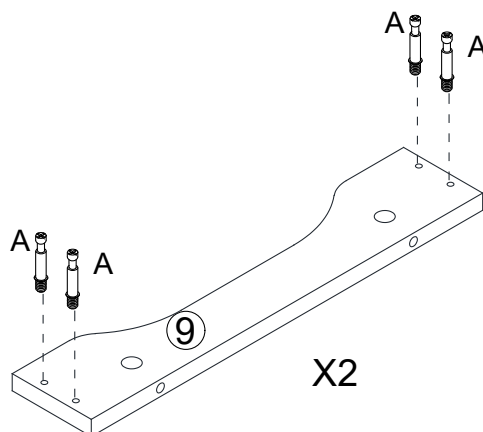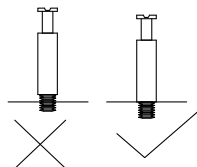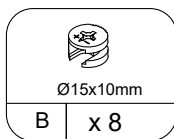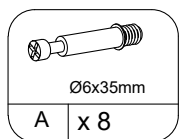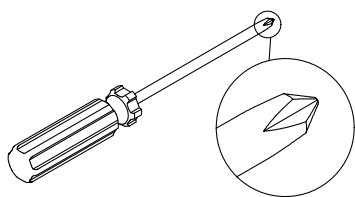





STEP 8

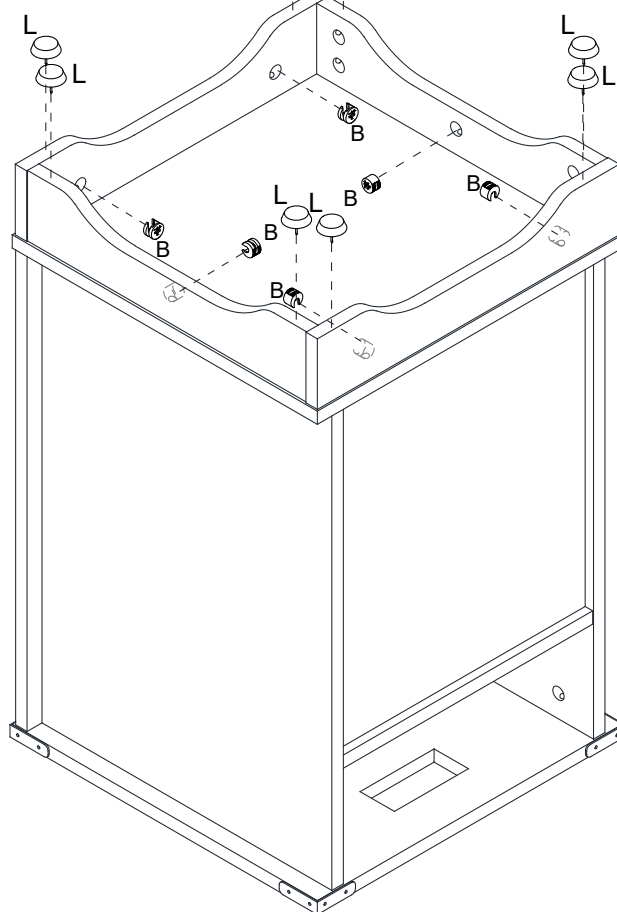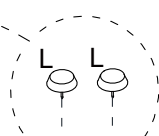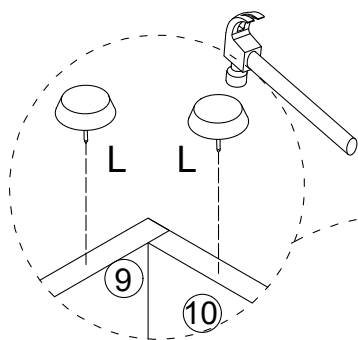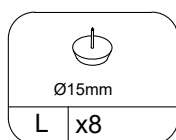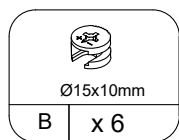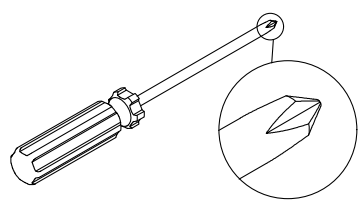




STEP 9

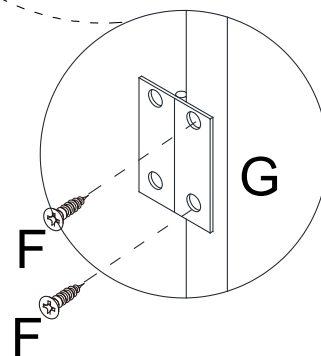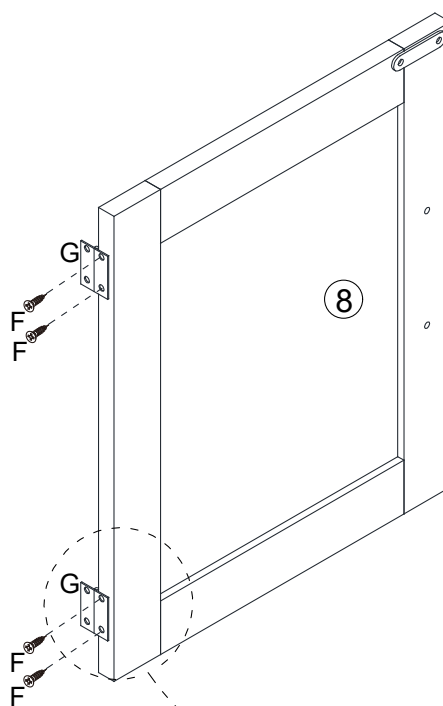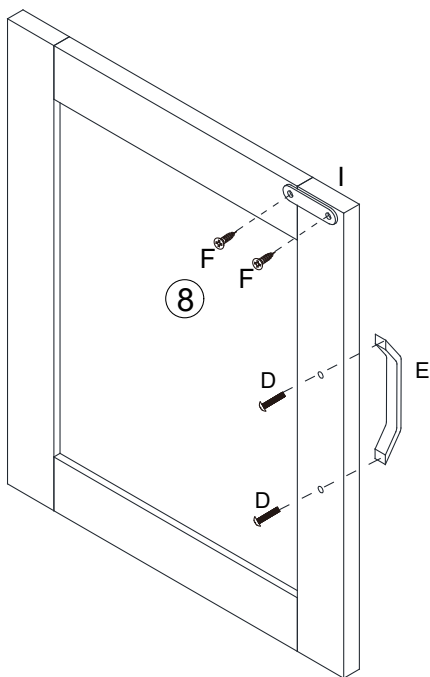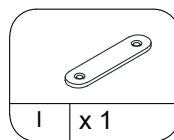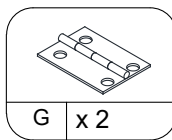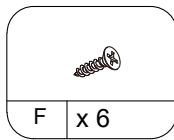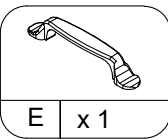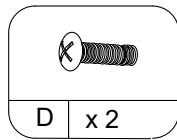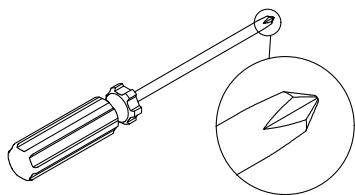


STEP 10

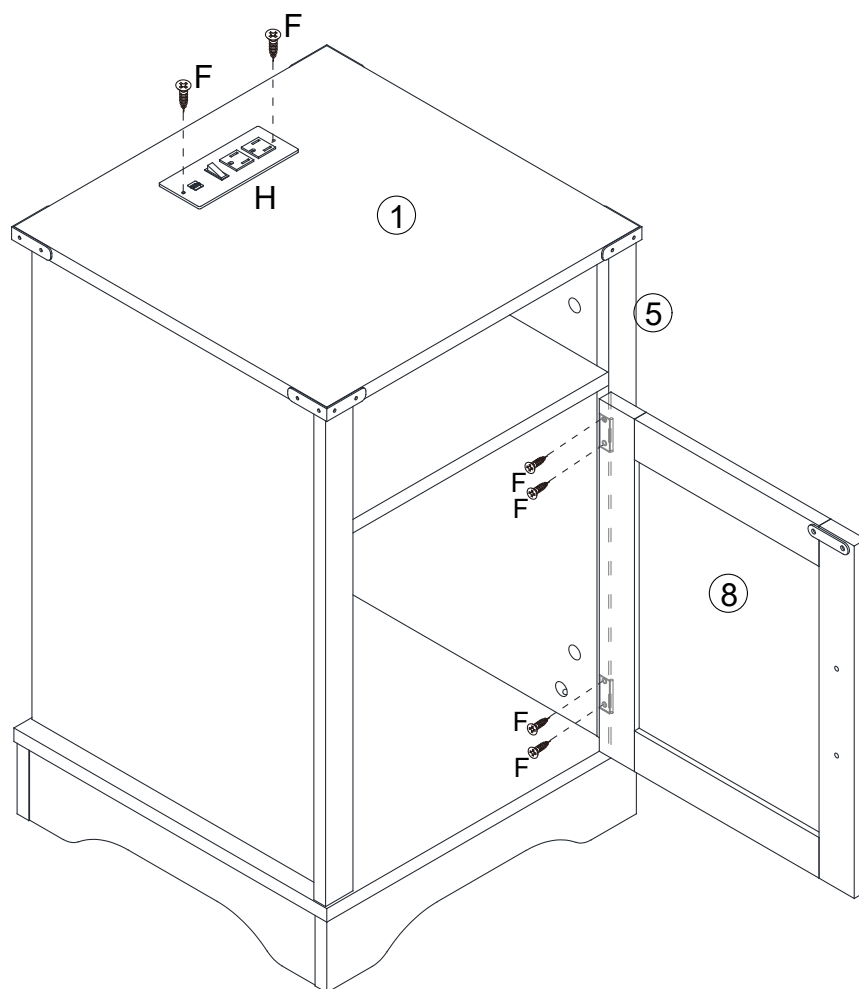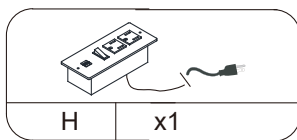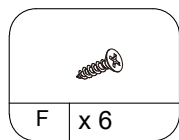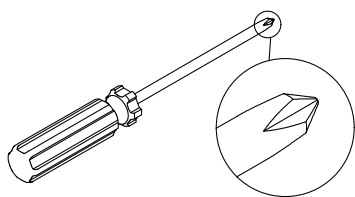


STEP 11

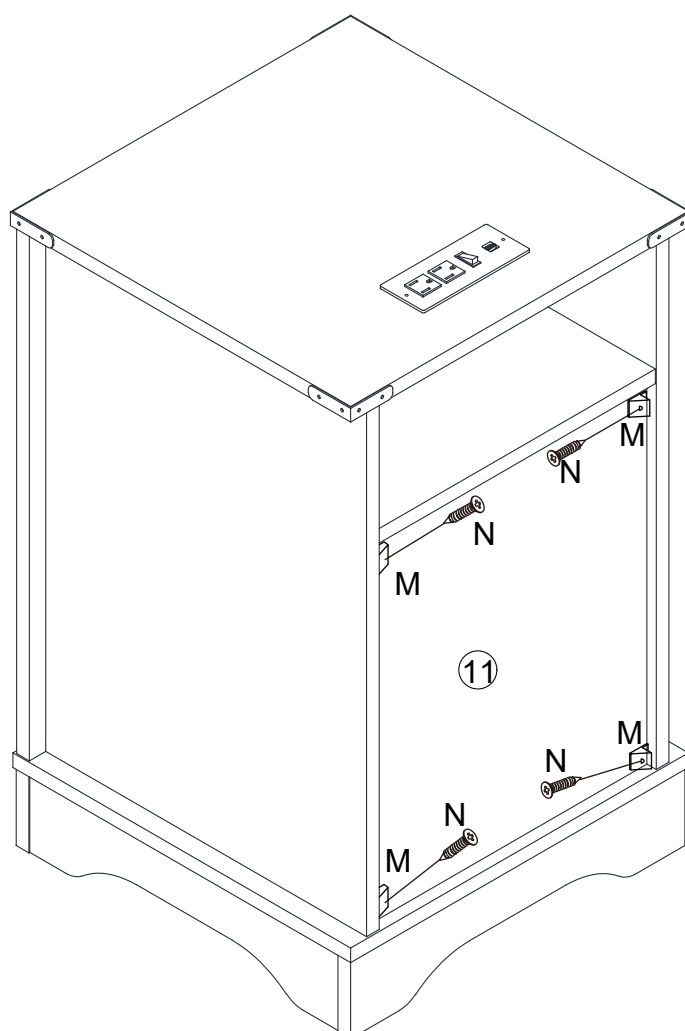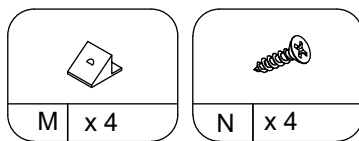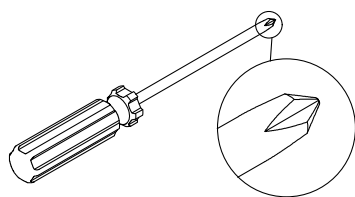

STEP 12

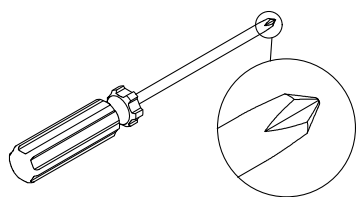

O-1	O-2
	
O	x2

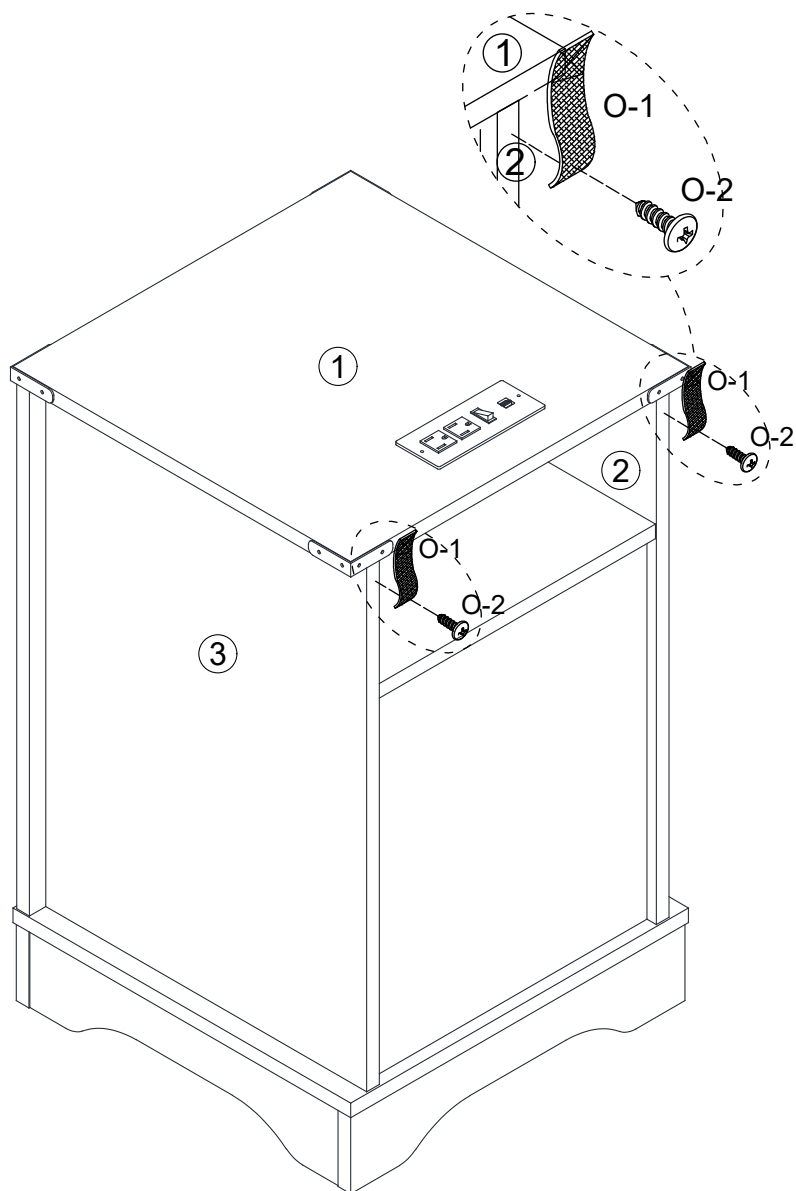

STEP 13

