



Instructions for use: The cabinet legs should be designed to avoid lateral stress. When moving, please lift vertically off the ground. Dragging may cause loose connectors, affecting stability and service life

## ATTENTION

If there is any missing, please kindly send us messages to let us know the part number of missing part regarding to the first page of instructions.

Please also provide your full address, recipient name and contact phone number so that we can send replacement to you as soon as possible.

Children have died from furniture tipover. To reduce the risk of furniture tipover. ALWAYS install tipover restraint provided.



# BEFORE STARTING

## Before Using Product



- Read each step carefully before starting. It is very important that each step is performed in the correct order. If these steps are not followed in sequence, assembly difficulties will occur.
- Make sure all parts are included.
- Work in a spacious area and near where the unit will be used, preferably on a carpet, or use a piece of the cardboard packaging to protect your floor and product.
- For a smooth assembly process, we suggest you keep a lite tightness for all the screws during assembly. After the whole product is assembled, firmly tighten all the screws.



## WARNING


- Do not allow children to climb on unit.
- Avoid sharp objects or corrosive chemicals to prevent damage to the product.
- During assembly, keep parts and packaging materials away from children and pets as there could be potential injury and choking hazards.
- Please make sure that all objects are removed before moving the assembled unit.
- The unit must be team lifted, not dragged or pushed. Failure to do so could cause instability, product collapse, and/or serious injury.
- Be careful when using power tools to assemble your furniture. Power tools may strip or damage the parts.

# QUICKFIT

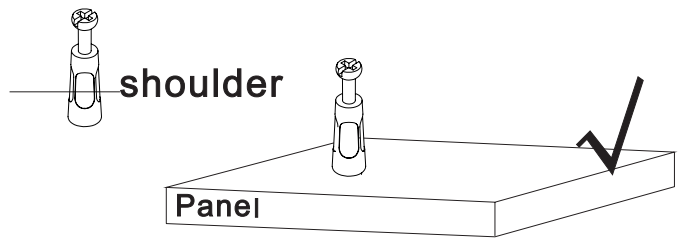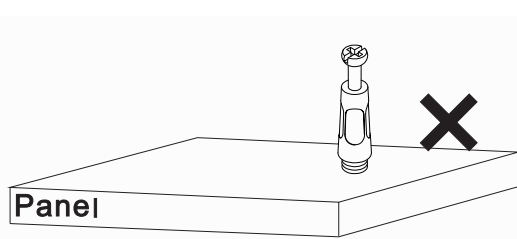


Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

# CAM LOCK

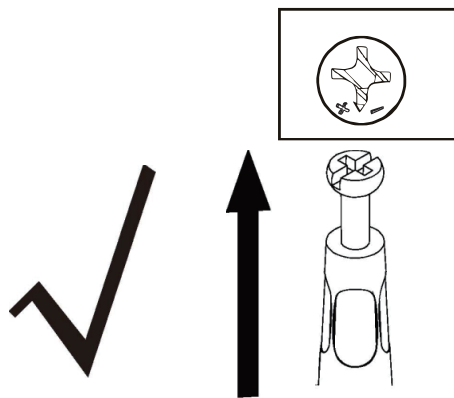


CORRECT

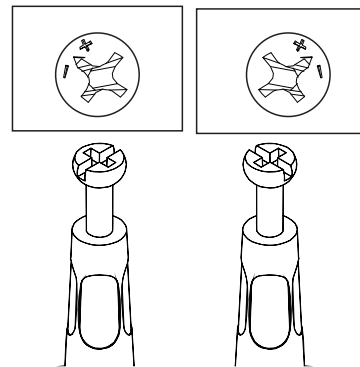


WRONG

When fitting cam lock, ensure starting positions is correct before you insert cam lock to quickfit.


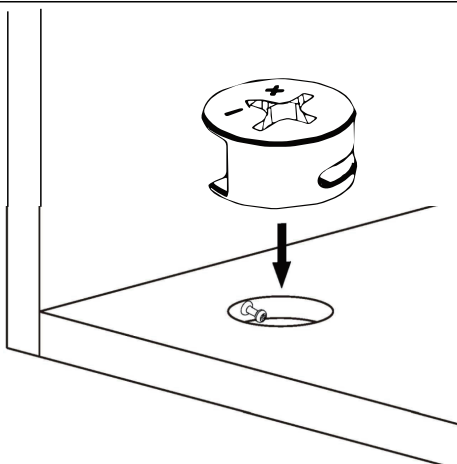


Quickfit head should be in the center of the cam lock. When the two panels are joined. Cam lock should be inserted before quickfit.

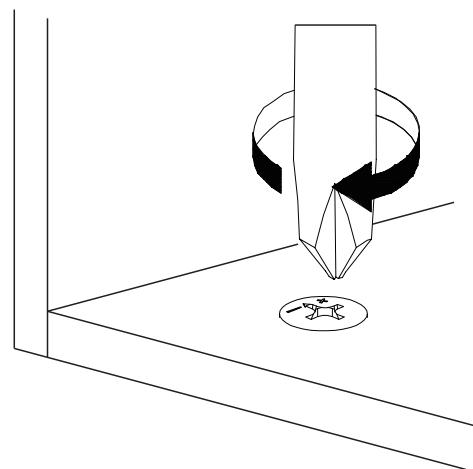


Turn cam lock clockwise to tighten.
















If the top Panel collapses or bends  
Please adjust according to the following image

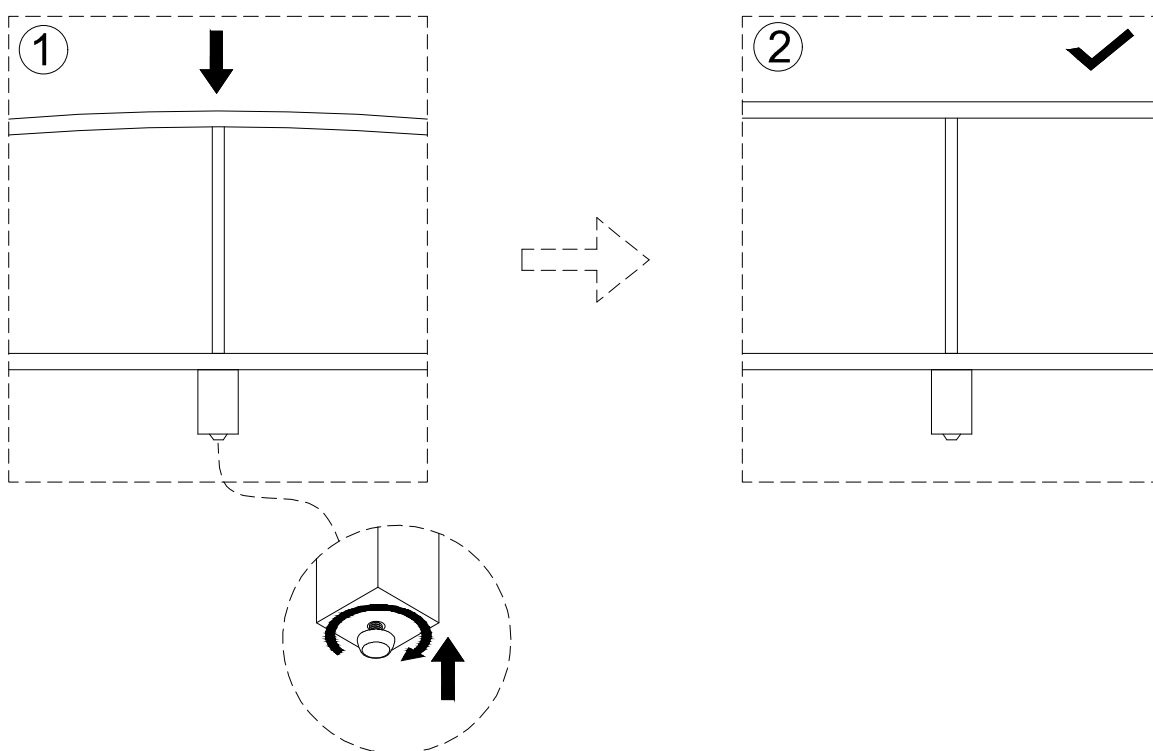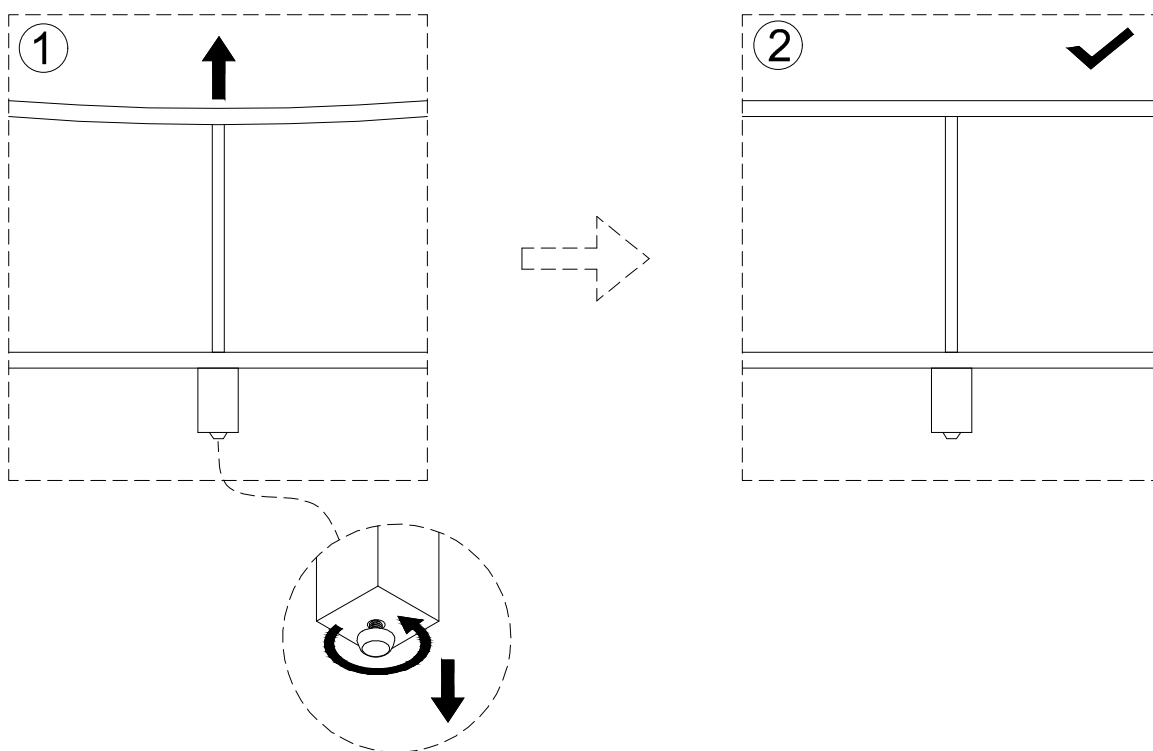










# PART LIST

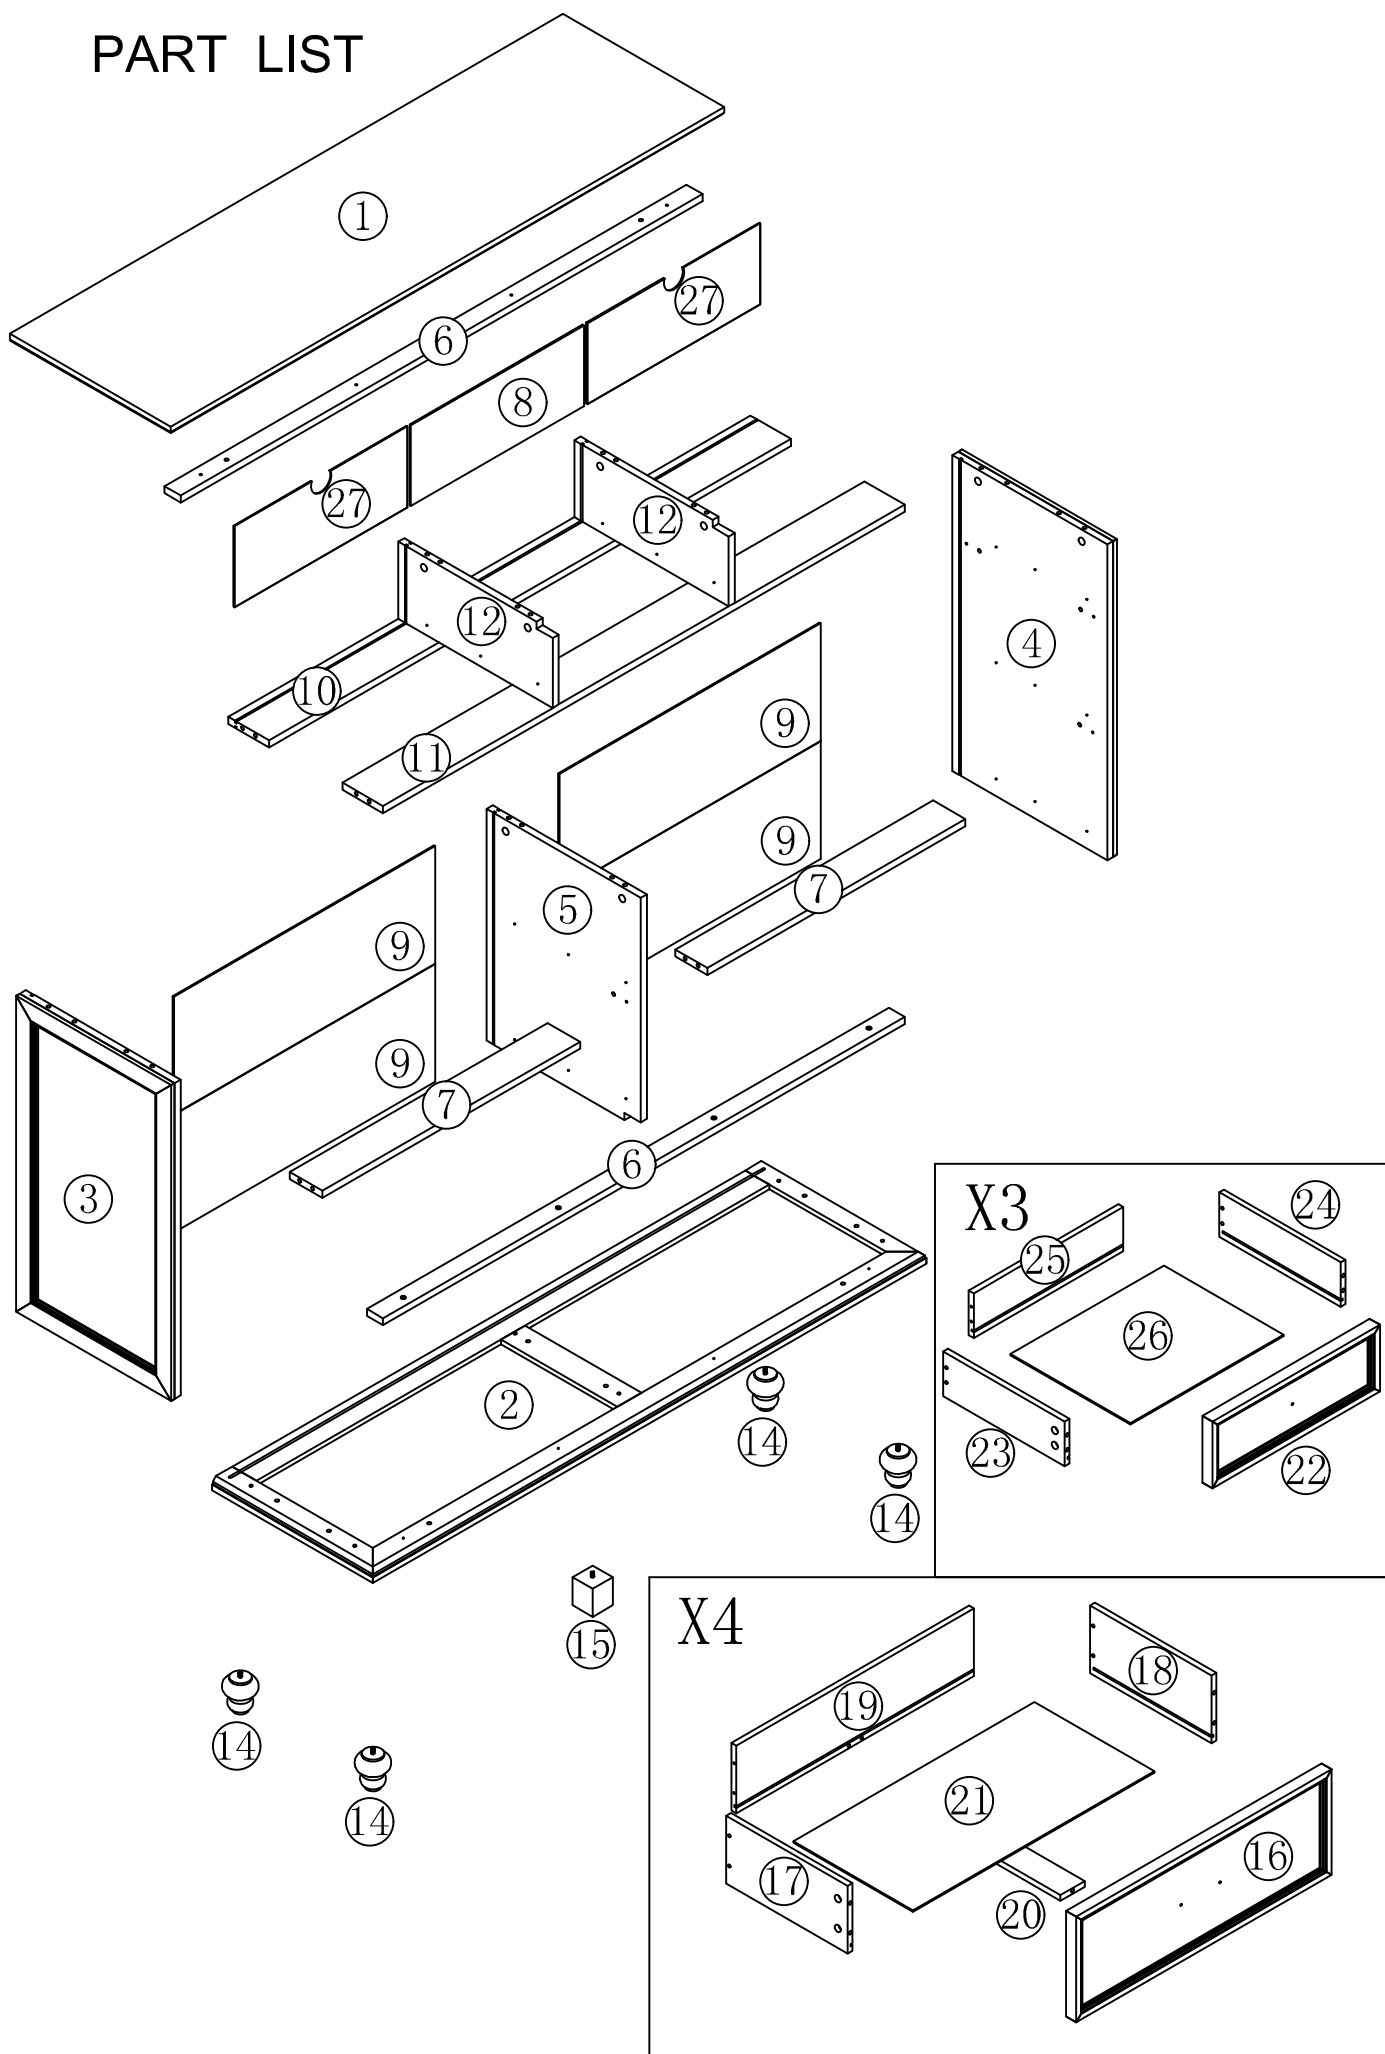






PART LIST
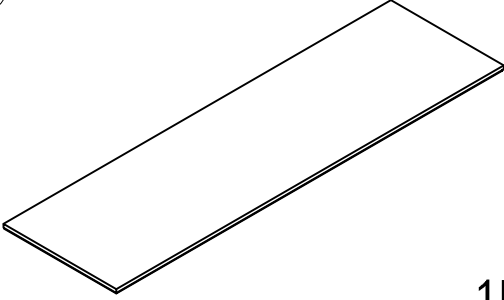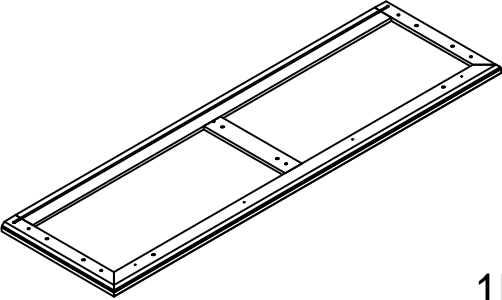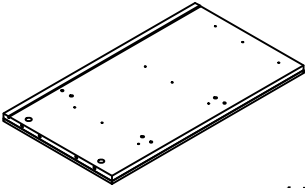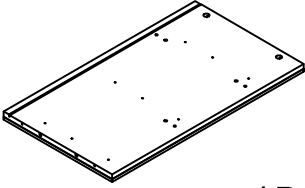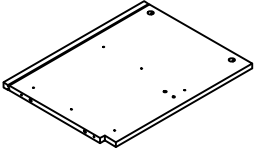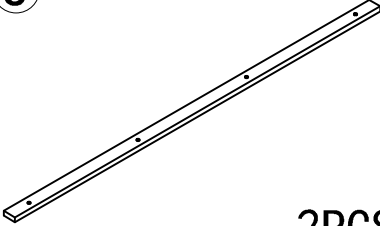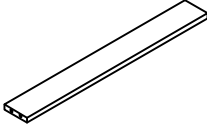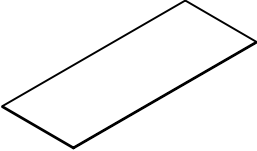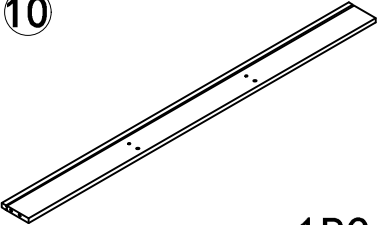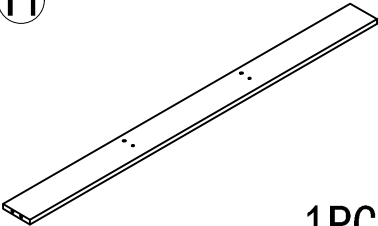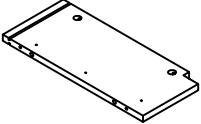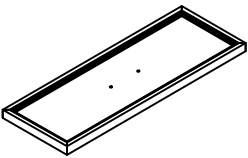
|                                                                                                                             |                                                                                                                             |                                                                                                                               |
|-----------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------|
| <div>①</div> <div></div> <div>1PC</div>    | <div>②</div> <div></div> <div>1PC</div>   |                                                                                                                               |
| <div>③</div> <div></div> <div>1PC</div>    | <div>④</div> <div></div> <div>1PC</div>    | <div>⑤</div> <div></div> <div>1PC</div>    |
| <div>⑥</div> <div></div> <div>2PCS</div>  | <div>⑦</div> <div></div> <div>2PCS</div> | <div>⑧</div> <div></div> <div>1PC</div>  |
| <div>⑨</div> <div></div> <div>4PCS</div> | <div>⑩</div> <div></div> <div>1PC</div> | <div>⑪</div> <div></div> <div>1PC</div>  |
| <div>⑫</div> <div></div> <div>2PCS</div> | <div>⑭</div> <div></div> <div>4PCS</div> | <div>⑮</div> <div></div> <div>1PC</div>  |
| <div>⑯</div> <div></div> <div>4PCS</div> | <div>⑰</div> <div></div> <div>4PCS</div> | <div>⑱</div> <div></div> <div>4PCS</div> |

PART LIST

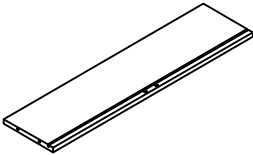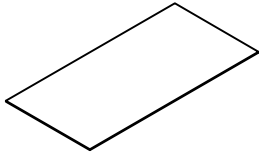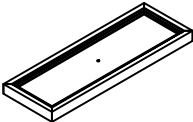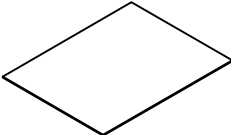
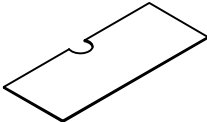
|                                                                                                                             |                                                                                                                             |                                                                                                                               |
|-----------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------|
| <div>19</div> <div></div> <div>4PCS</div>  | <div>20</div> <div></div> <div>4PCS</div>  | <div>21</div> <div></div> <div>4PCS</div>  |
| <div>22</div> <div></div> <div>3PCS</div>  | <div>23</div> <div></div> <div>3PCS</div>  | <div>24</div> <div></div> <div>3PCS</div>  |
| <div>25</div> <div></div> <div>3PCS</div> | <div>26</div> <div></div> <div>3PCS</div> | <div>27</div> <div></div> <div>2PCS</div> |

# HARDWARE LIST

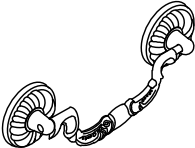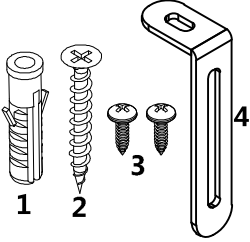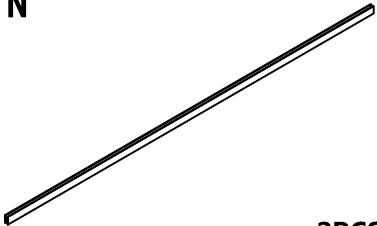
|                                                                                                                                                  |                                                                                                                                                       |                                                                                                                                                      |
|--------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------|
| <p><b>A</b></p>  <p><math>\phi 6 \times 35</math> (50+3)PCS</p> | <p><b>B</b></p>  <p><math>\phi 15 \times 9.5</math> ( 50+3 ) PCS</p> | <p><b>C</b></p>  <p><math>\phi 8 \times 30</math> (32+2)PCS</p>   |
| <p><b>D</b></p>  <p><math>\phi 5 \times 40</math> (46+3)PCS</p> | <p><b>E</b></p>  <p>4PCS</p>                                         | <p><b>F</b></p>  <p><math>\phi 4 \times 8</math> (11+1)PCS</p>    |
| <p><b>G</b></p>  <p><math>\phi 3 \times 15</math> (20+2)PCS</p> | <p><b>H</b></p>  <p>(20+2)PCS</p>                                    | <p><b>I</b></p>  <p><math>\phi 4 \times 30</math> (8+1)PCS</p>    |
| <p><b>J</b></p>  <p>7SET</p>                                  | <p><b>K</b></p>  <p><math>\phi 3 \times 12</math> (72+3)PCS</p>    | <p><b>L</b></p>  <p><math>\phi 4 \times 12</math> (12+1)PCS</p> |
| <p><b>M</b></p>  <p>2PCS</p>                                  | <p><b>N</b></p>  <p>2PCS</p>                                       | <p><b>O</b></p>  <p>3PCS</p>                                    |
|  <p>3PCS</p>                                                  |  <p>1PC</p>                                                        |                                                                                                                                                      |




J X7SET



CL



CR




DL




DR



E

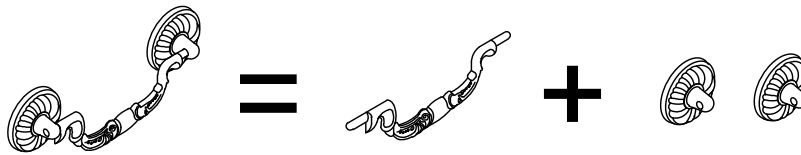


K



3mm


L




4mm




M =




1



2





3

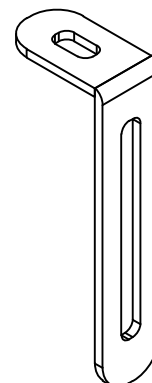



4

# STEP 1

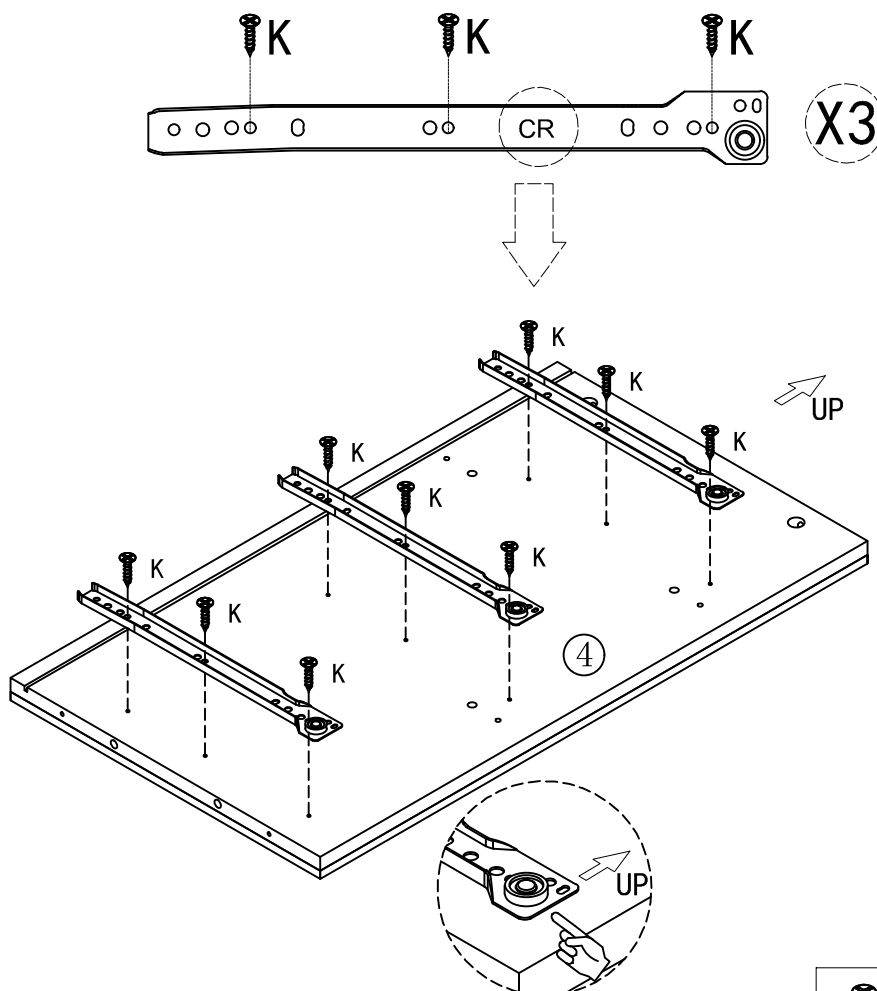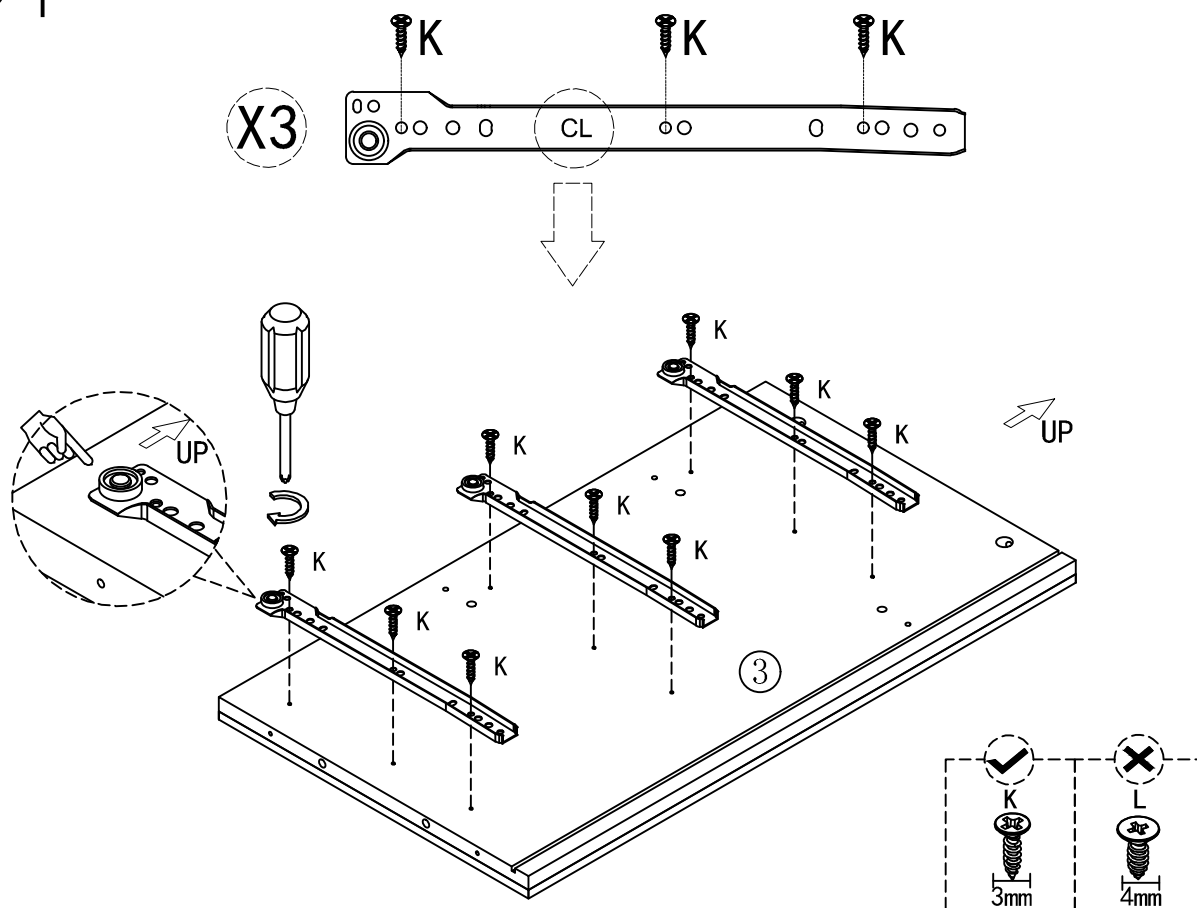



K X 18PCS

## STEP 2

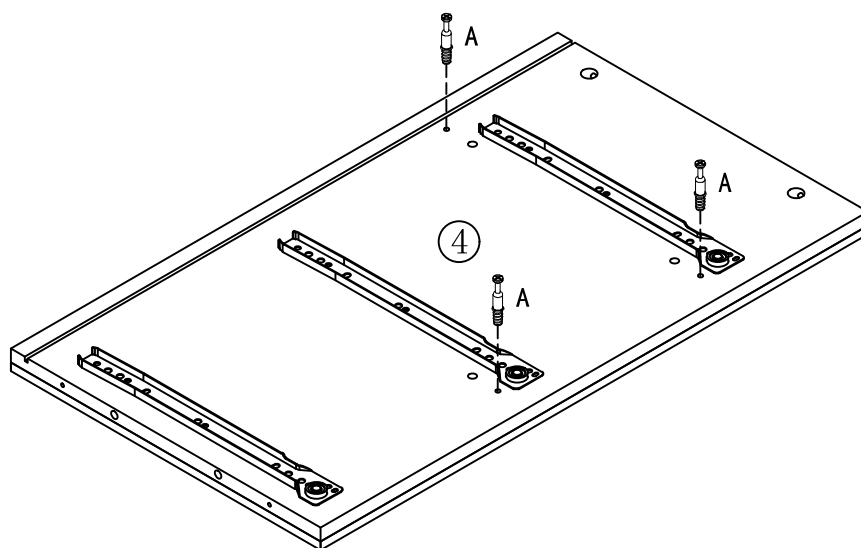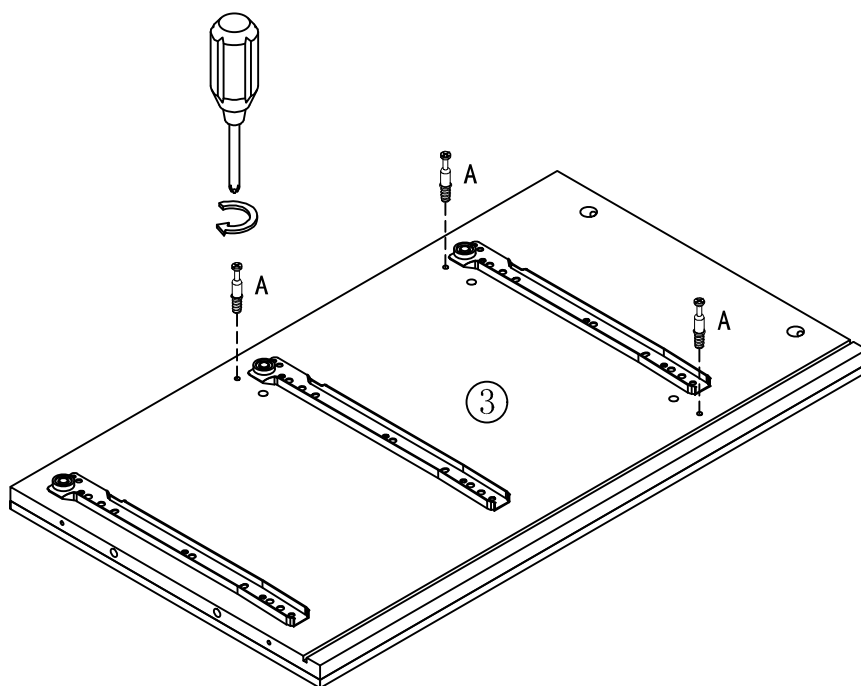

A X 6PCS



STEP 3

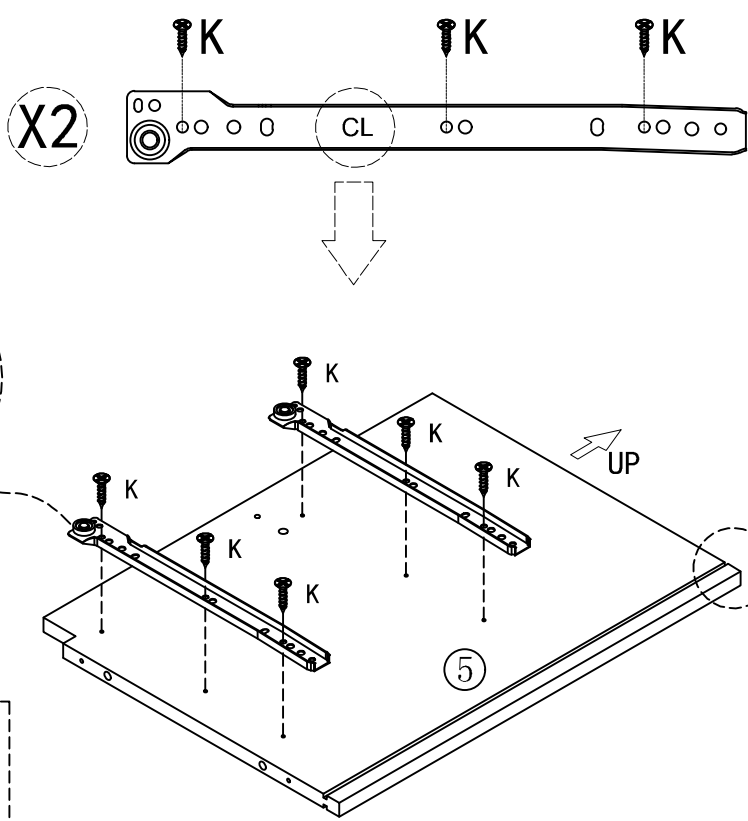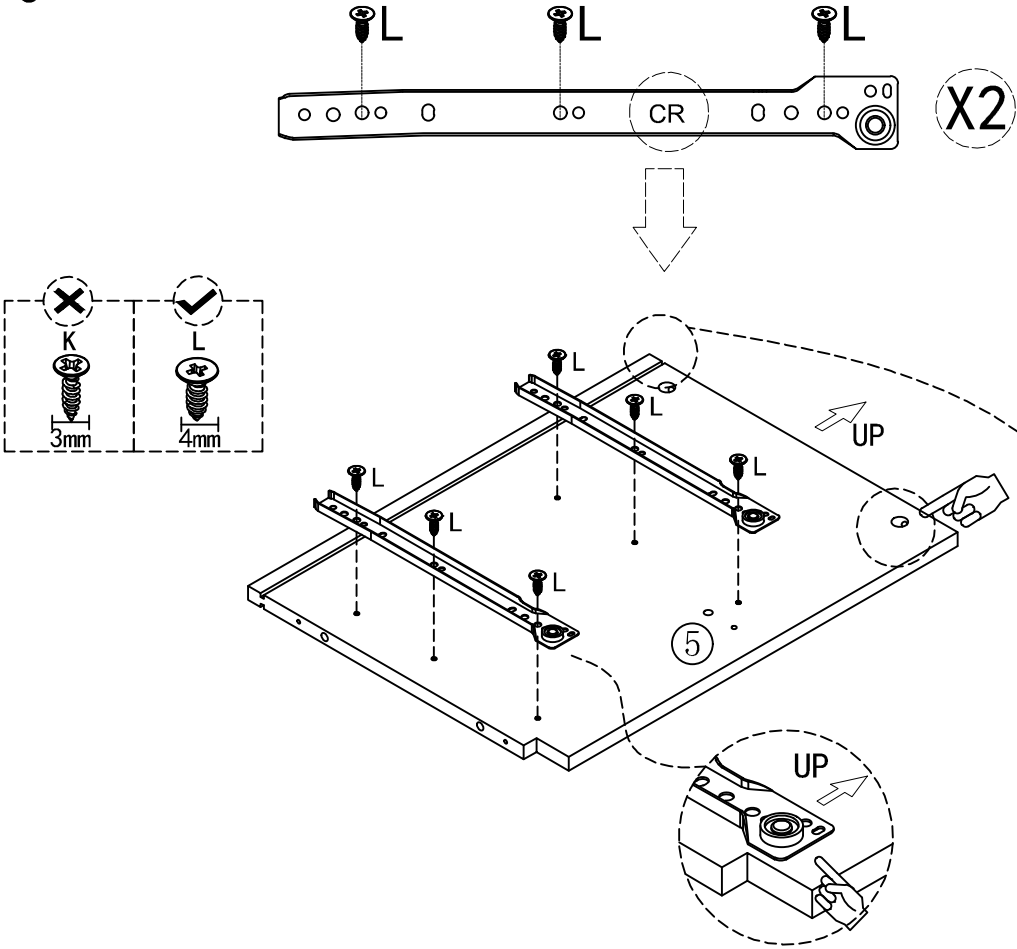

ROTATE 180°

|                                                                                       |          |
|---------------------------------------------------------------------------------------|----------|
|  | K X 6PCS |
|  | L X 6PCS |


## STEP 4

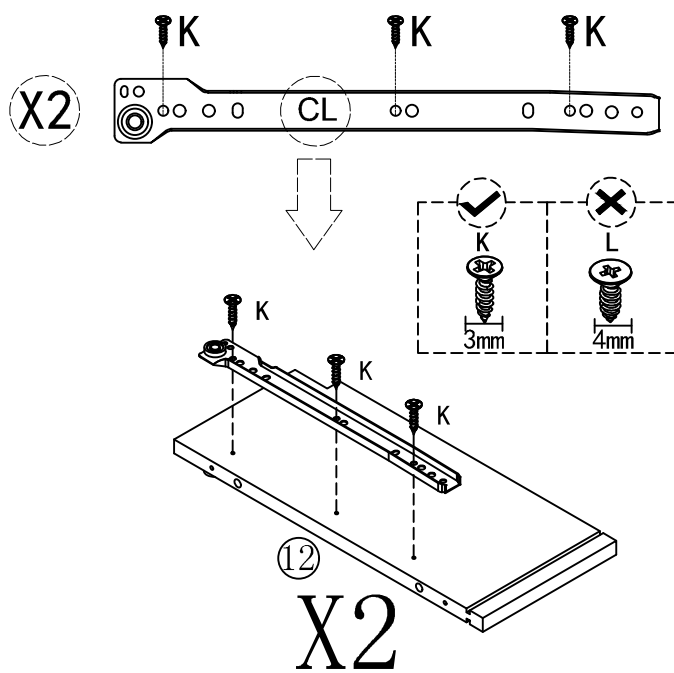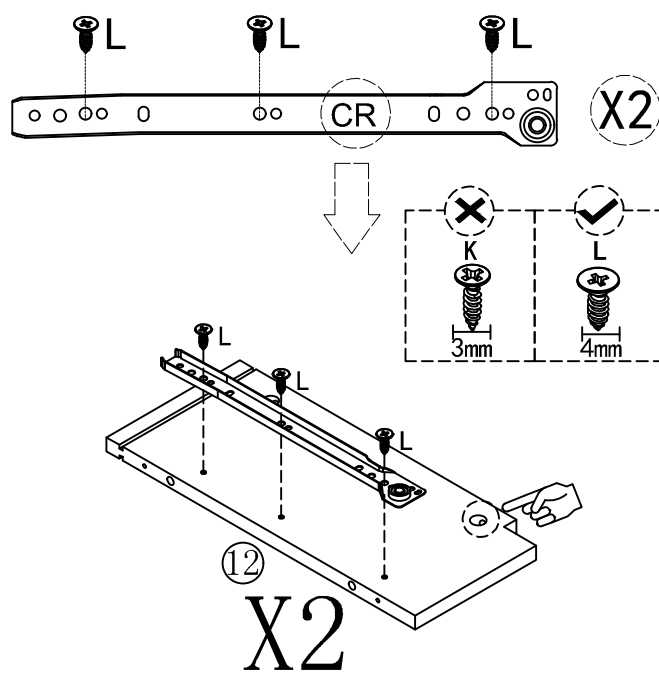

1 ROTATE 180° 2


|                                                                                       |          |
|---------------------------------------------------------------------------------------|----------|
|   | K X 6PCS |
|  | L X 6PCS |

## STEP 5

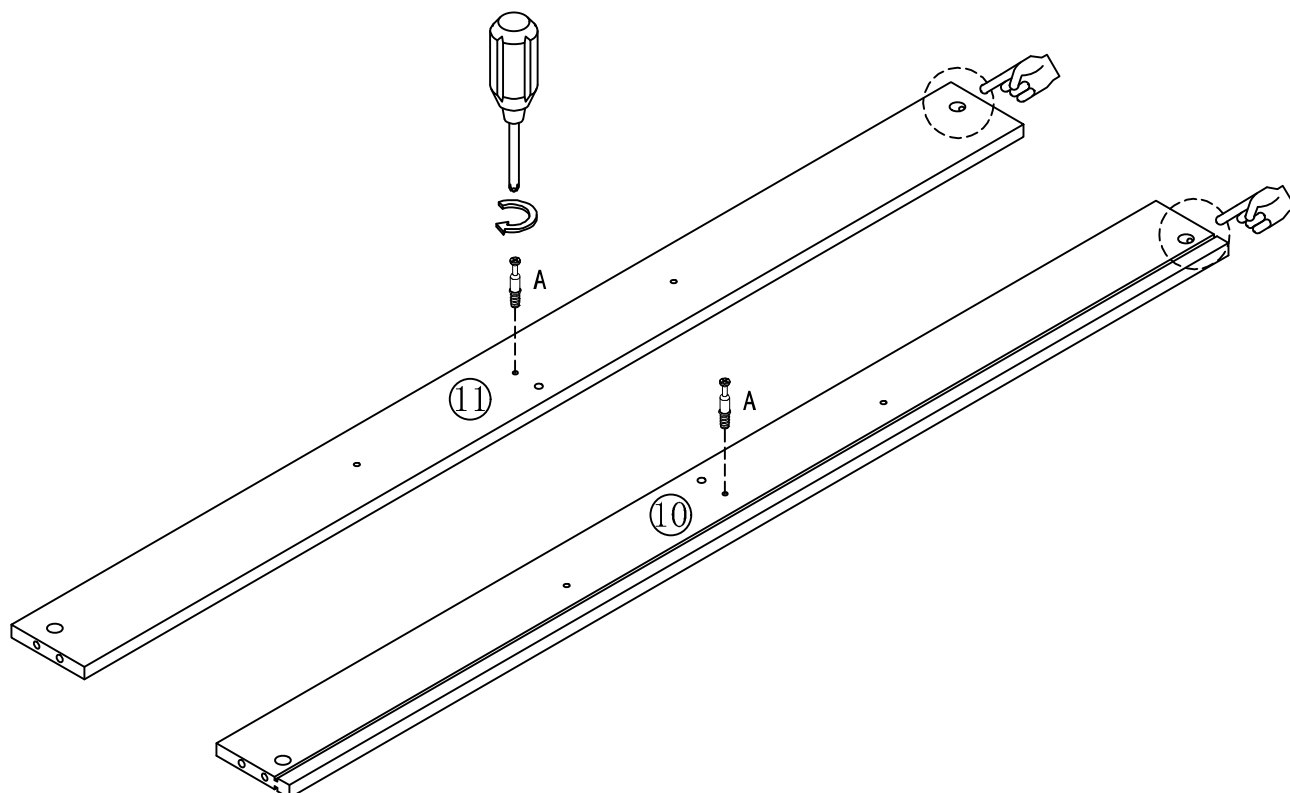


|                                                                                       |          |
|---------------------------------------------------------------------------------------|----------|
|  | A X 2PCS |
|---------------------------------------------------------------------------------------|----------|

## STEP 6

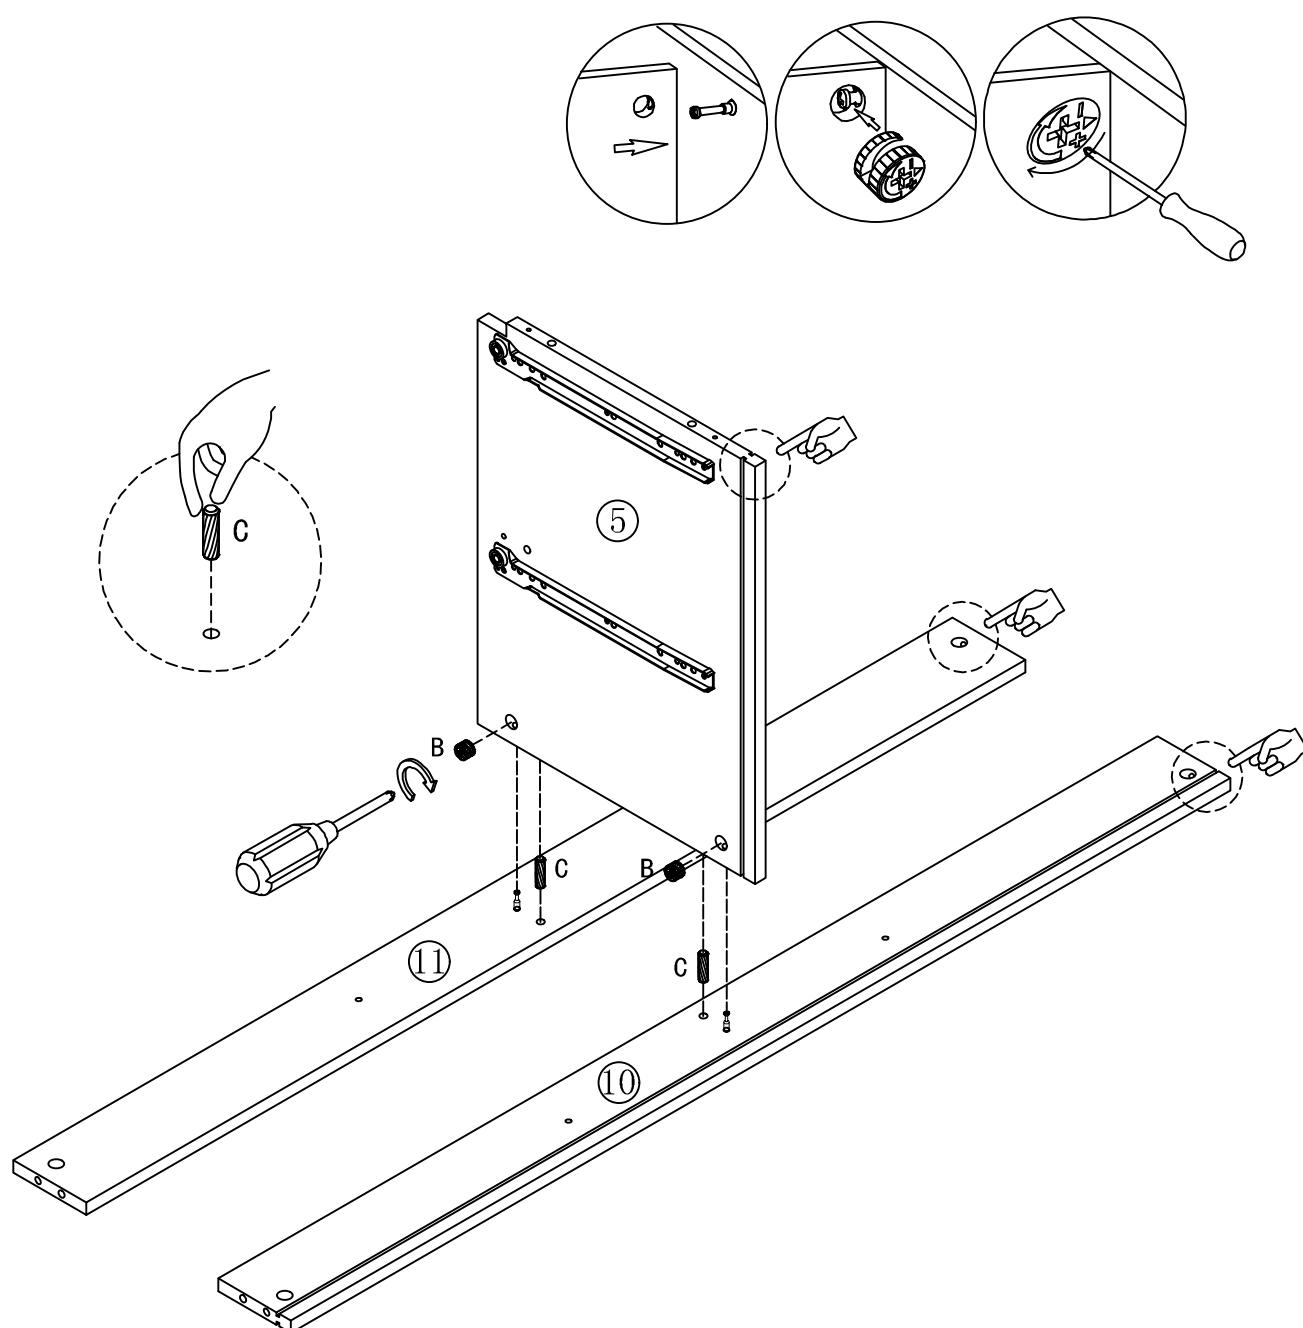


|                                                                                       |          |
|---------------------------------------------------------------------------------------|----------|
|  | B X 2PCS |
|  | C X 2PCS |

## STEP 7

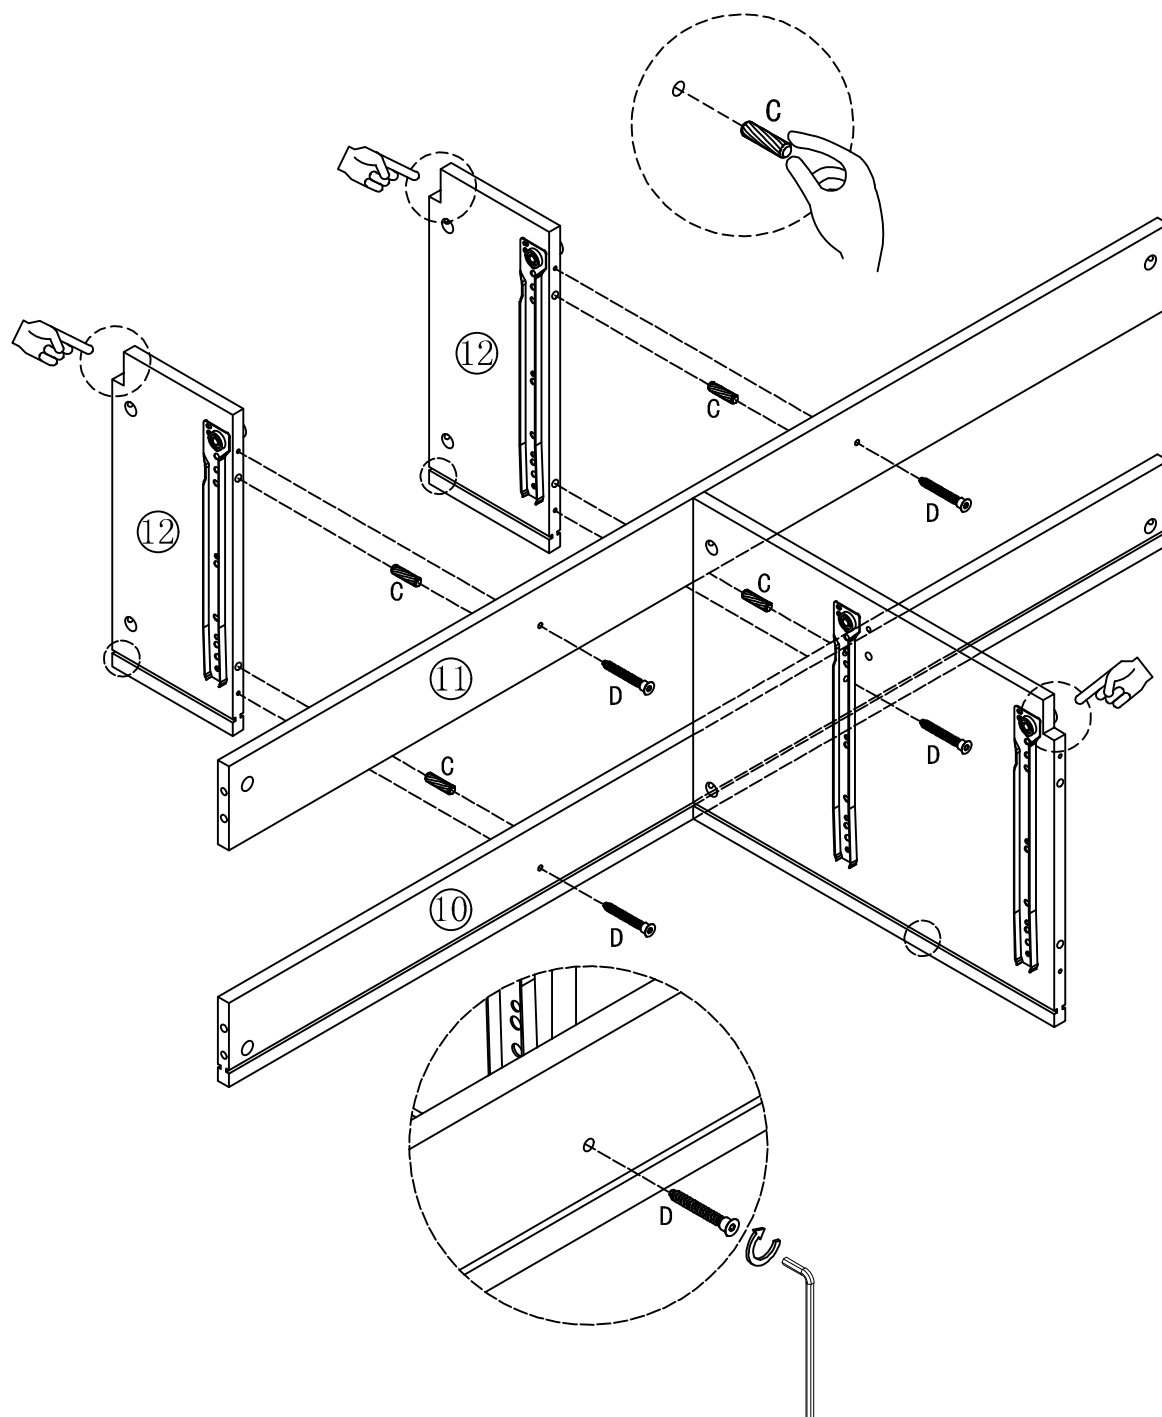



|                                                                                       |          |
|---------------------------------------------------------------------------------------|----------|
|  | C X 4PCS |
|  | D X 4PCS |

## STEP 8

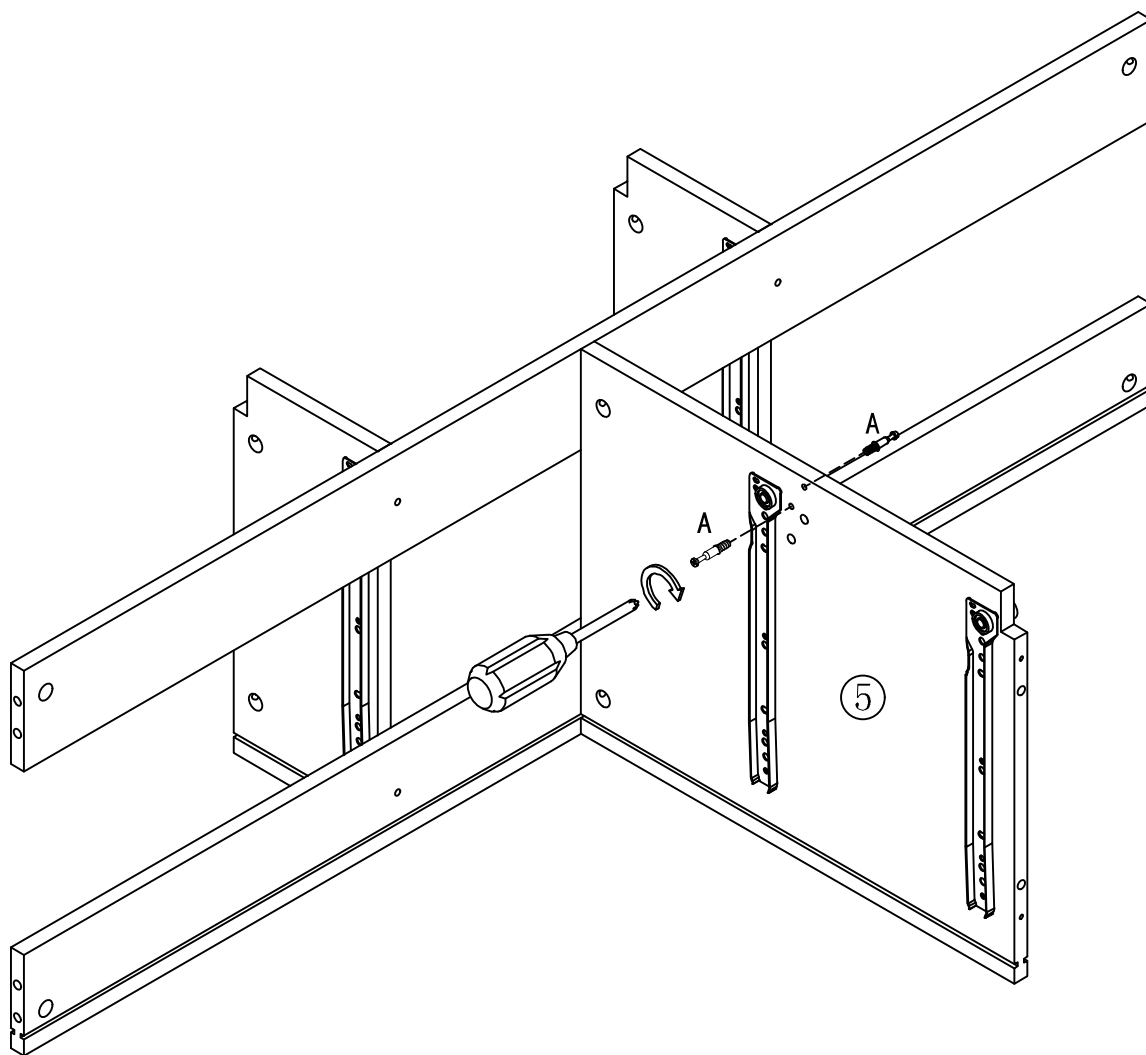


A X 2PCS

# STEP 9

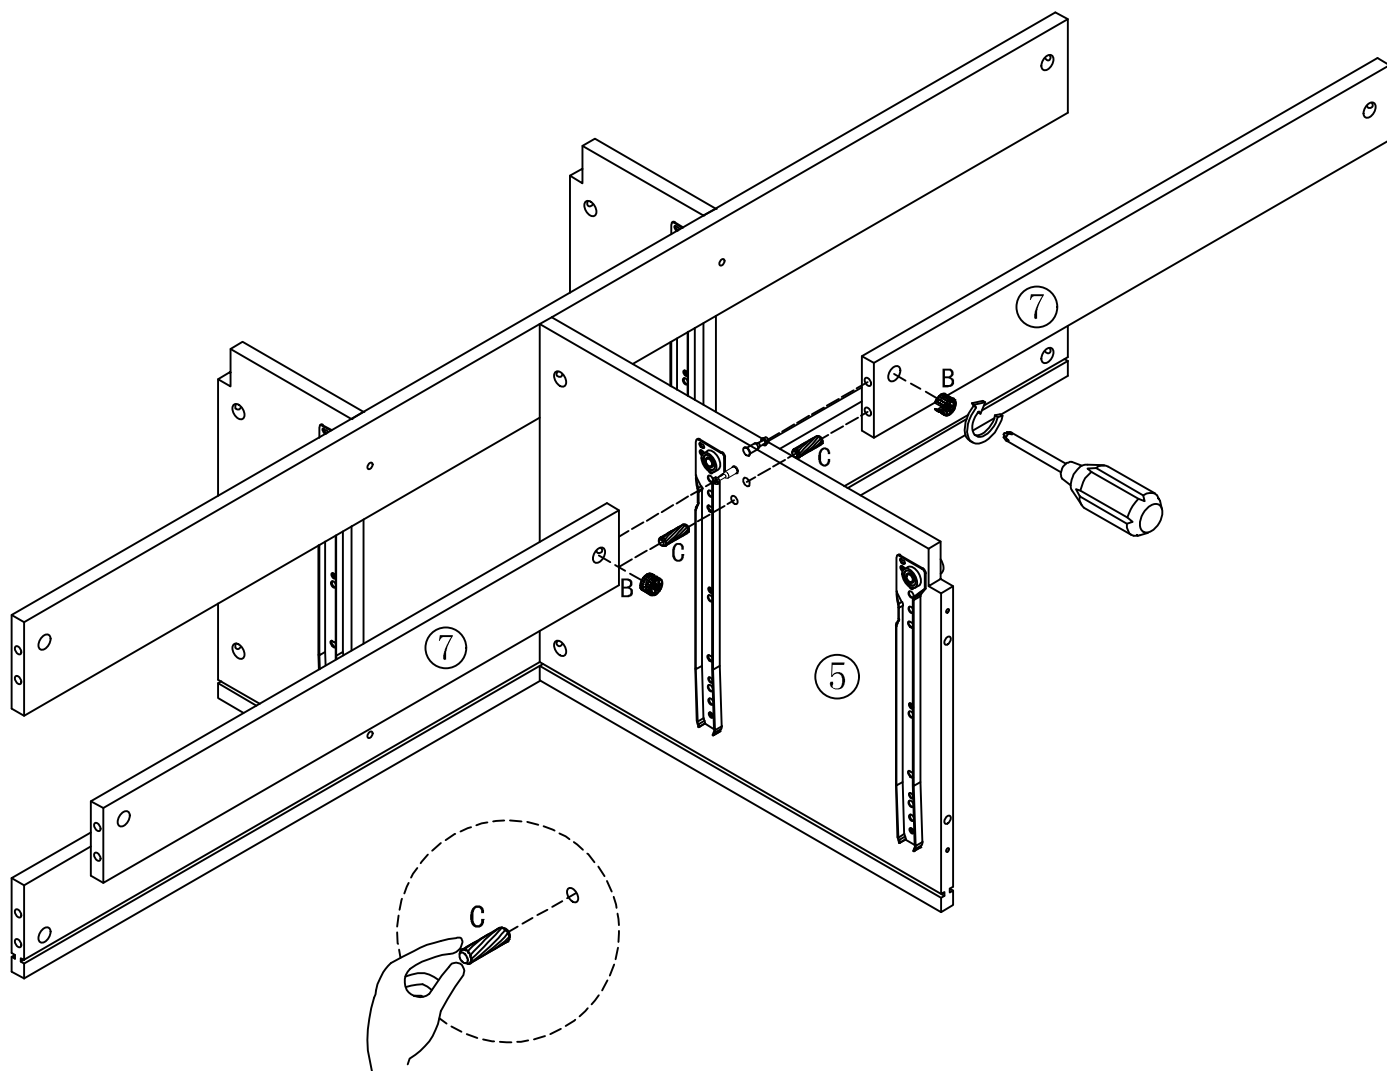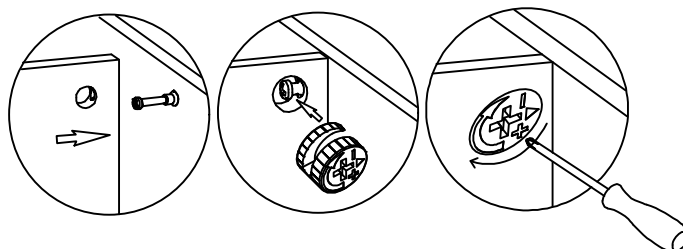


|                                                                                       |          |
|---------------------------------------------------------------------------------------|----------|
|  | B X 2PCS |
|  | C X 2PCS |

# STEP 10

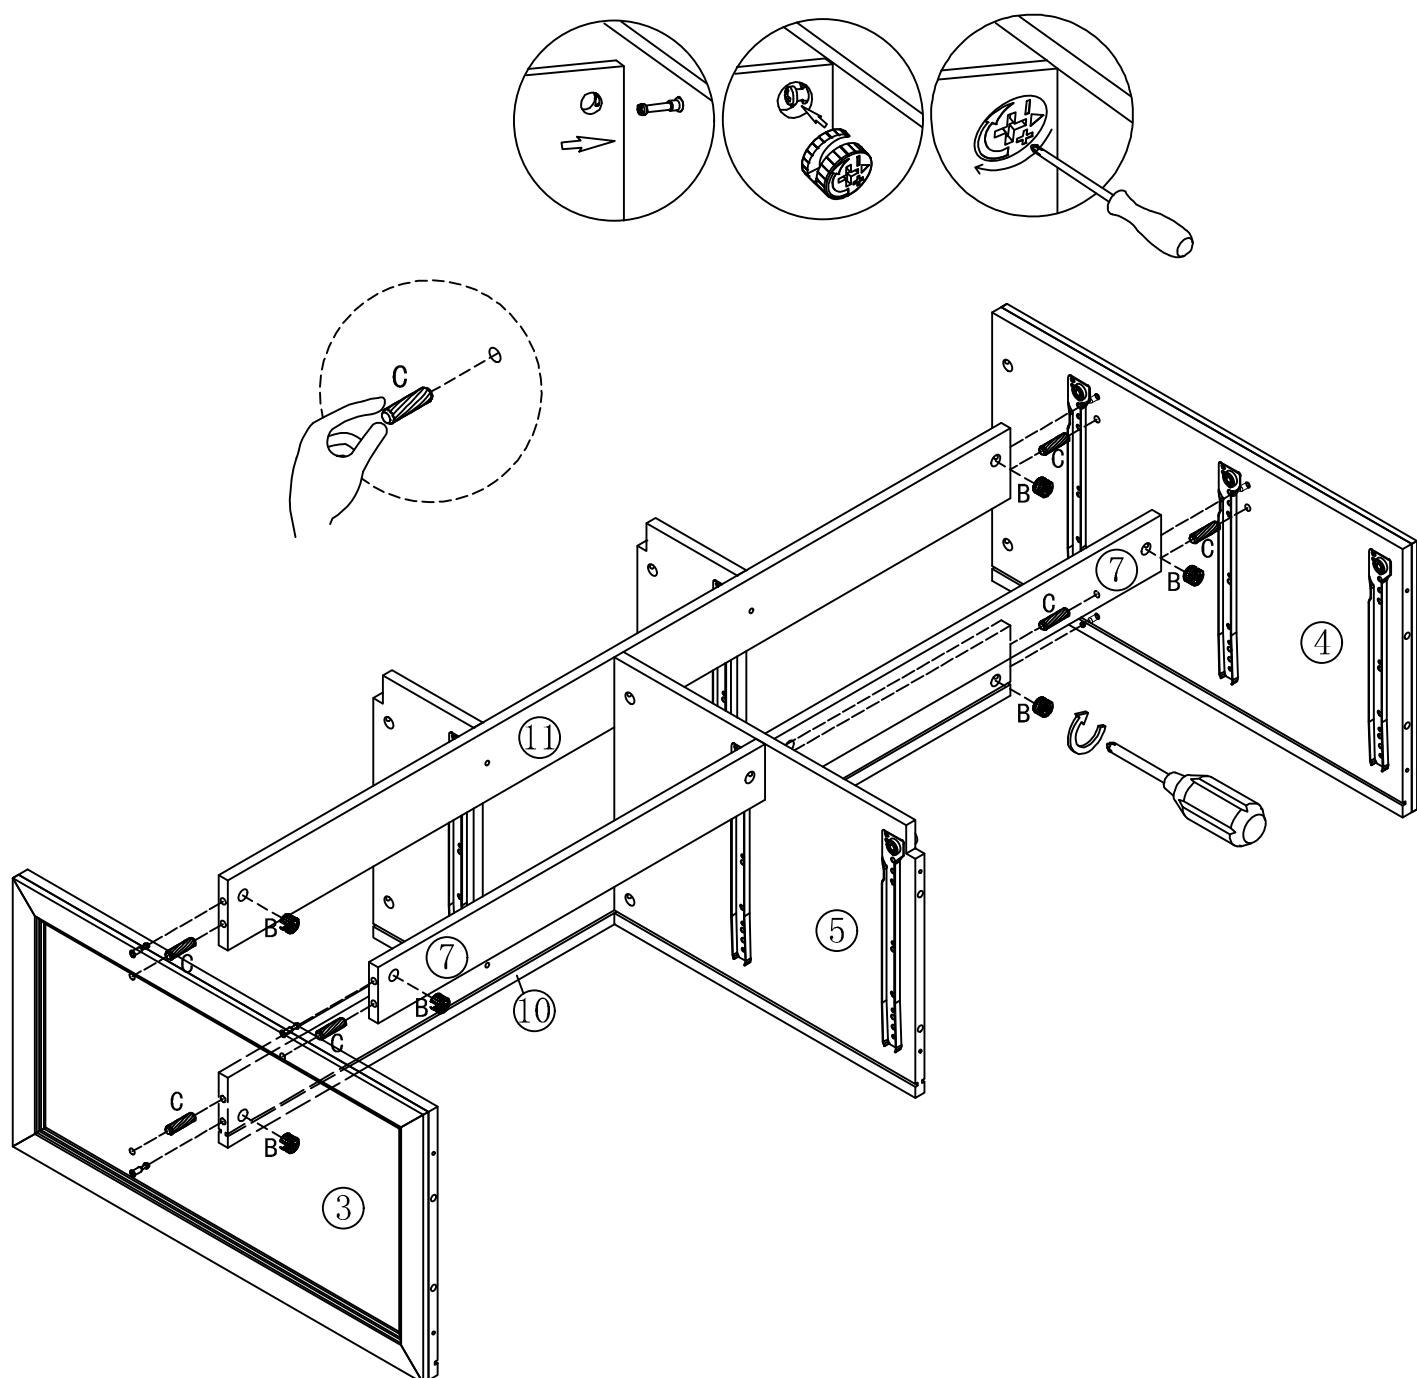


|                                                                                       |          |
|---------------------------------------------------------------------------------------|----------|
|  | B X 6PCS |
|  | C X 6PCS |

## STEP 11

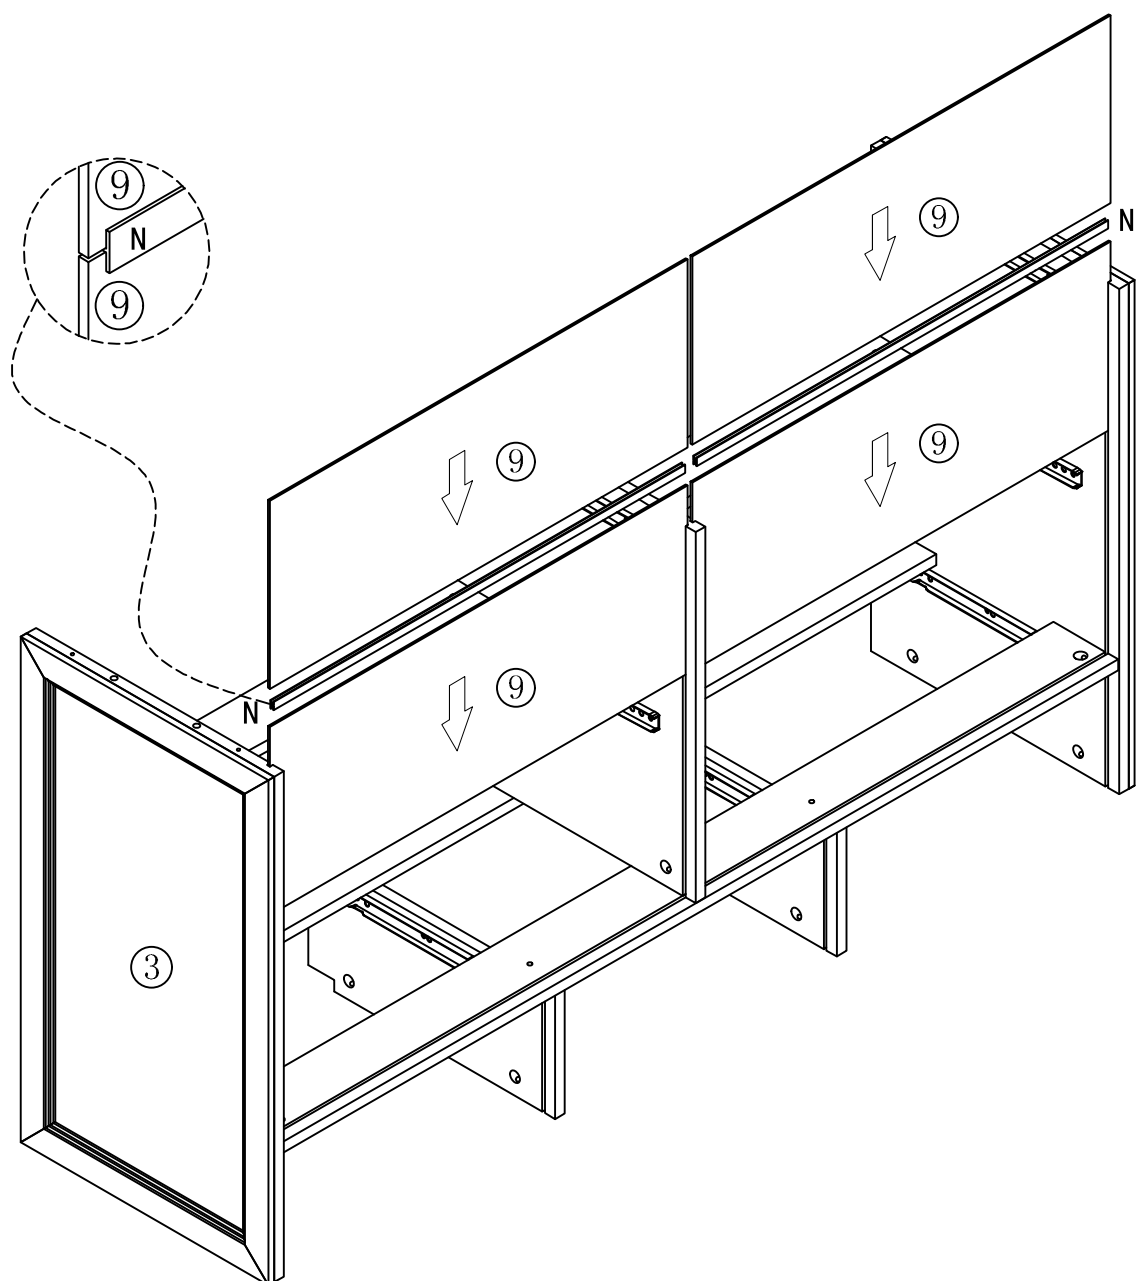


|                                                                                       |          |
|---------------------------------------------------------------------------------------|----------|
|  | N X 2PCS |
|---------------------------------------------------------------------------------------|----------|


## STEP 12

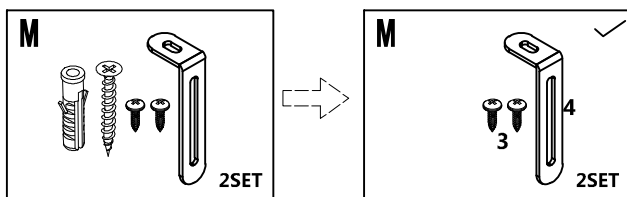


Note: Put the anti-tip device M4 on the top, near the back side, and fix it with a screw M3.

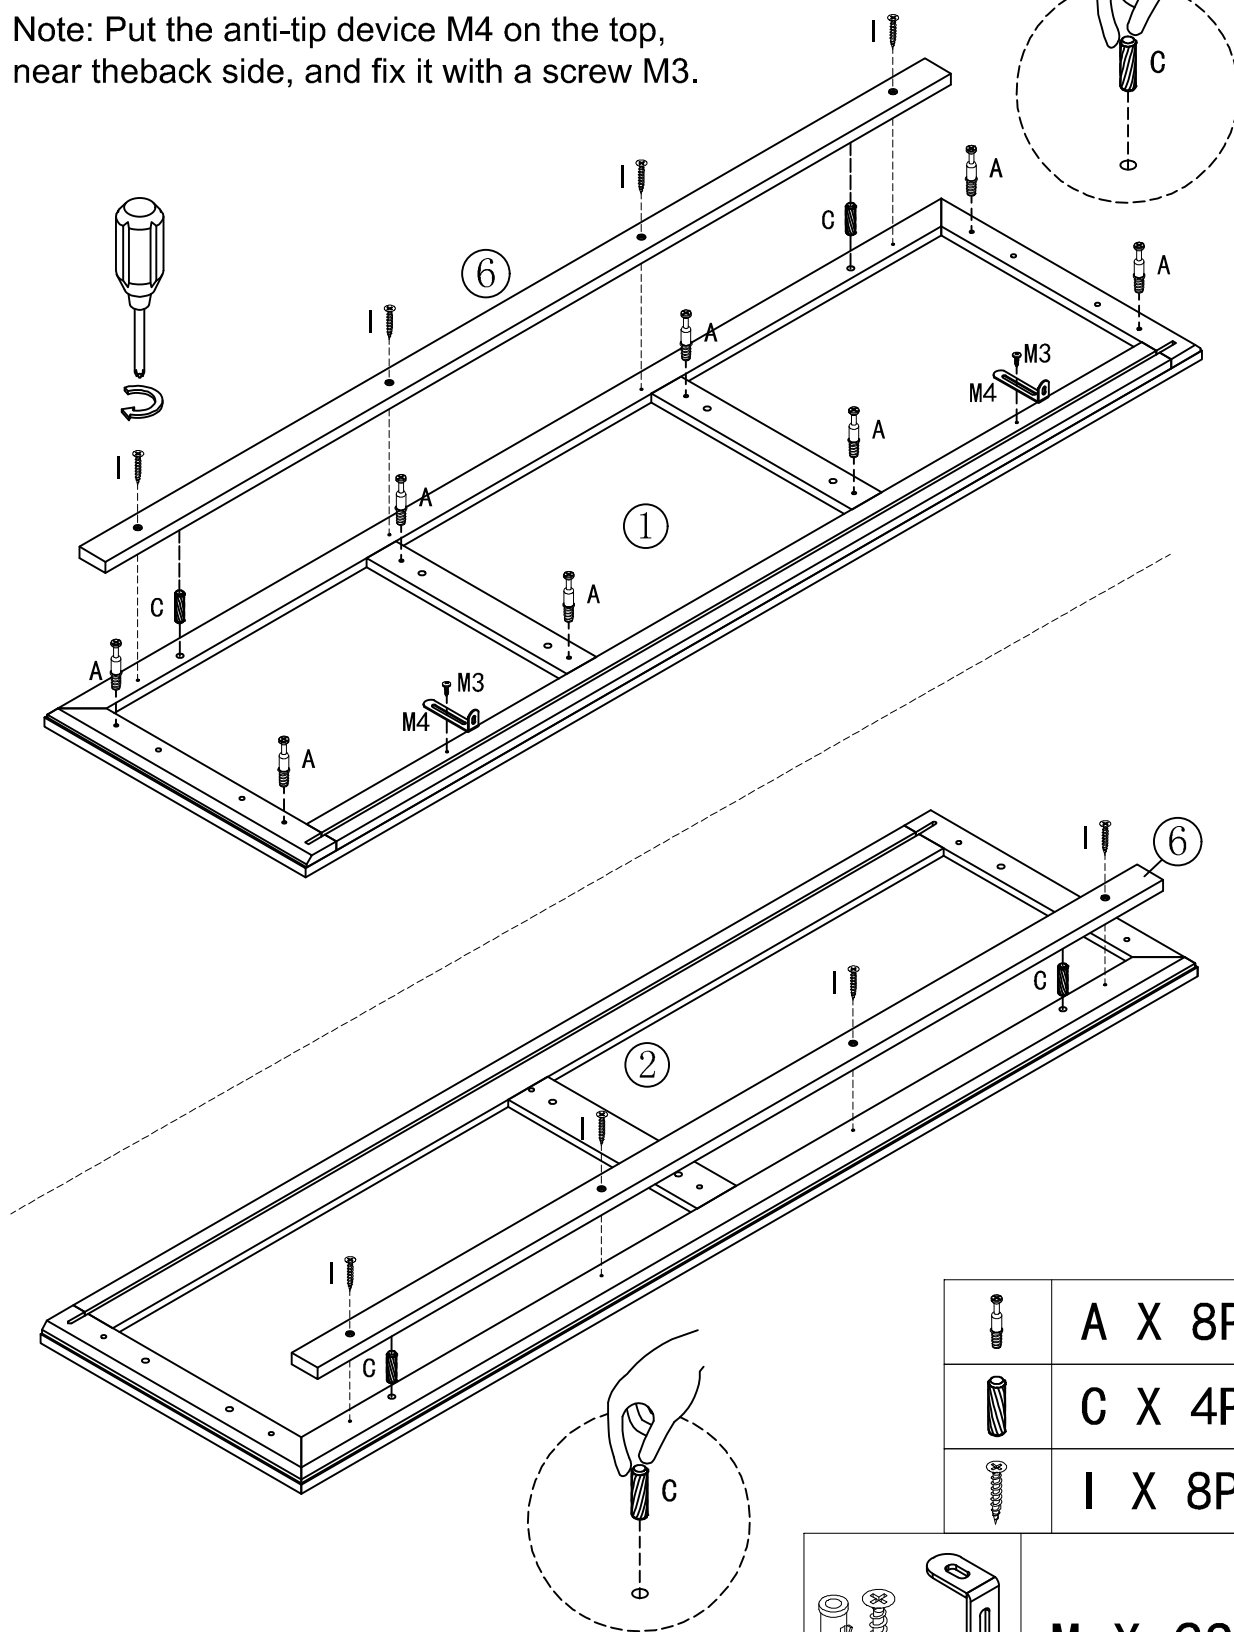

|                                                                                       |          |
|---------------------------------------------------------------------------------------|----------|
|  | A X 8PCS |
|  | C X 4PCS |
|  | I X 8PCS |

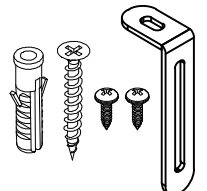
|                                                                                      |          |
|--------------------------------------------------------------------------------------|----------|
|  | M X 2SET |
|--------------------------------------------------------------------------------------|----------|

## STEP 13

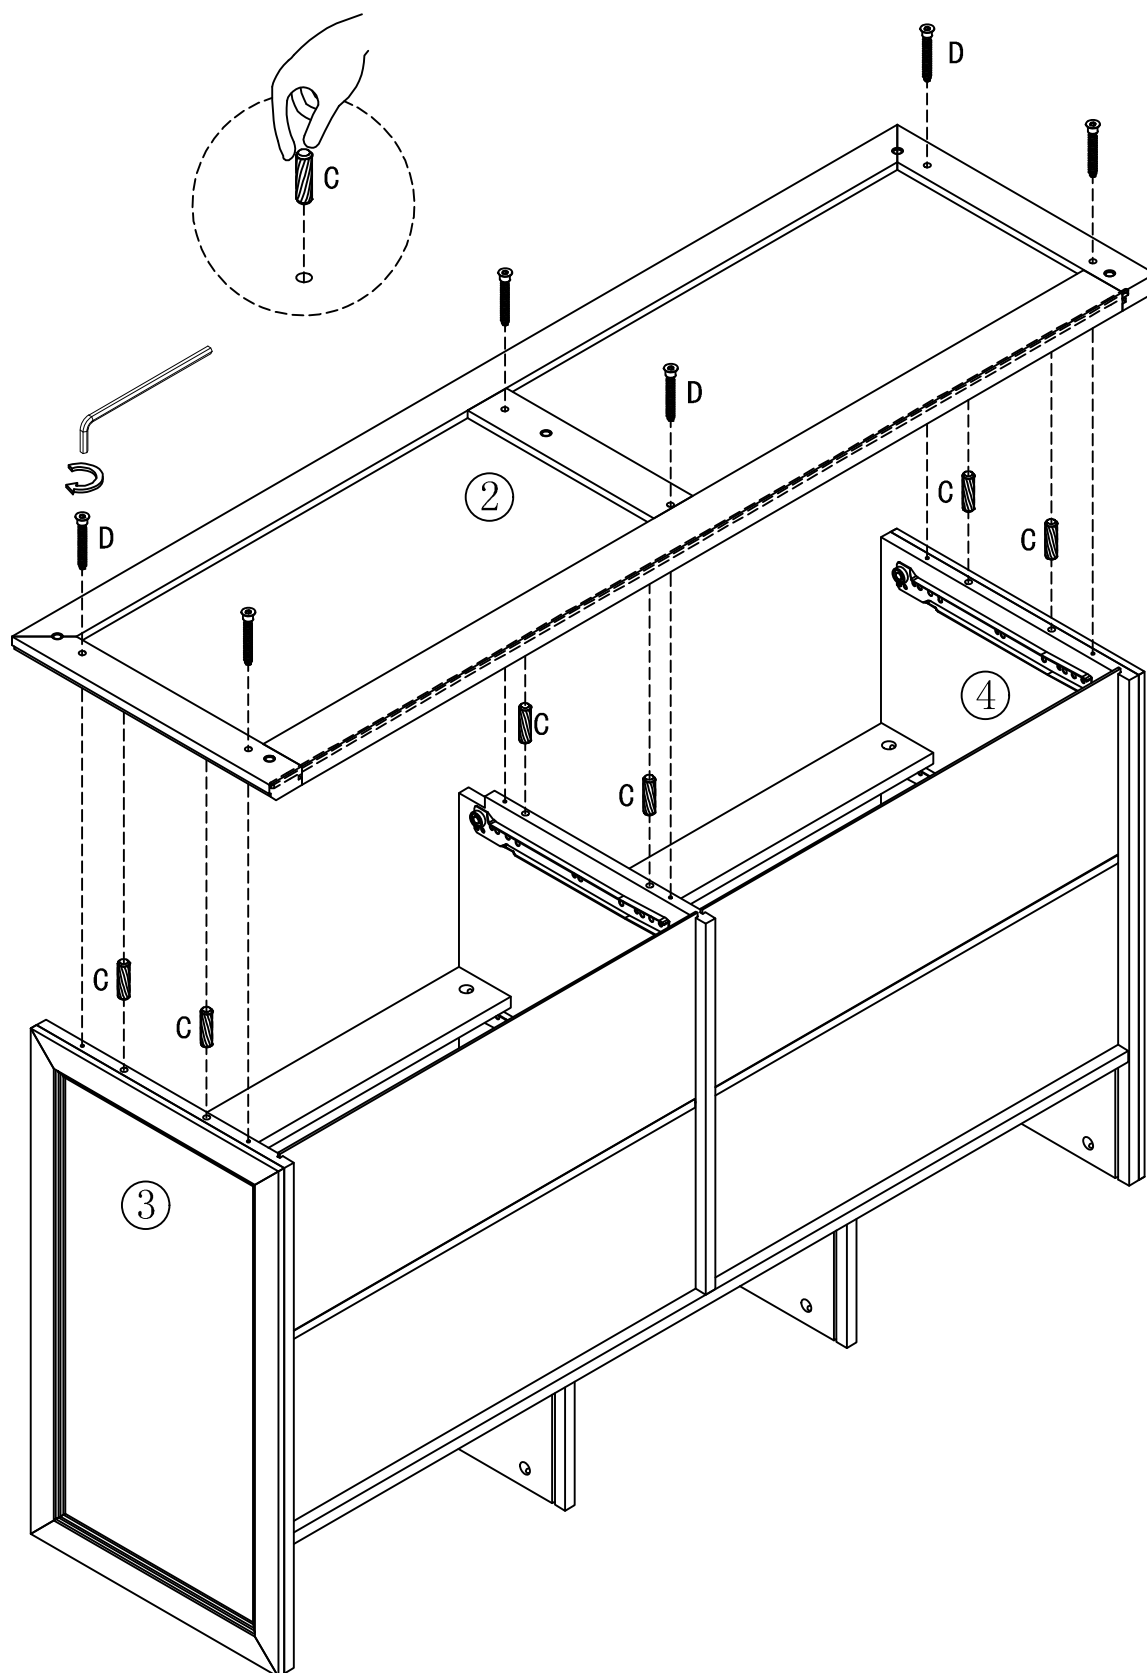


|                                                                                       |          |
|---------------------------------------------------------------------------------------|----------|
|  | C X 6PCS |
|  | D X 6PCS |

## STEP 14

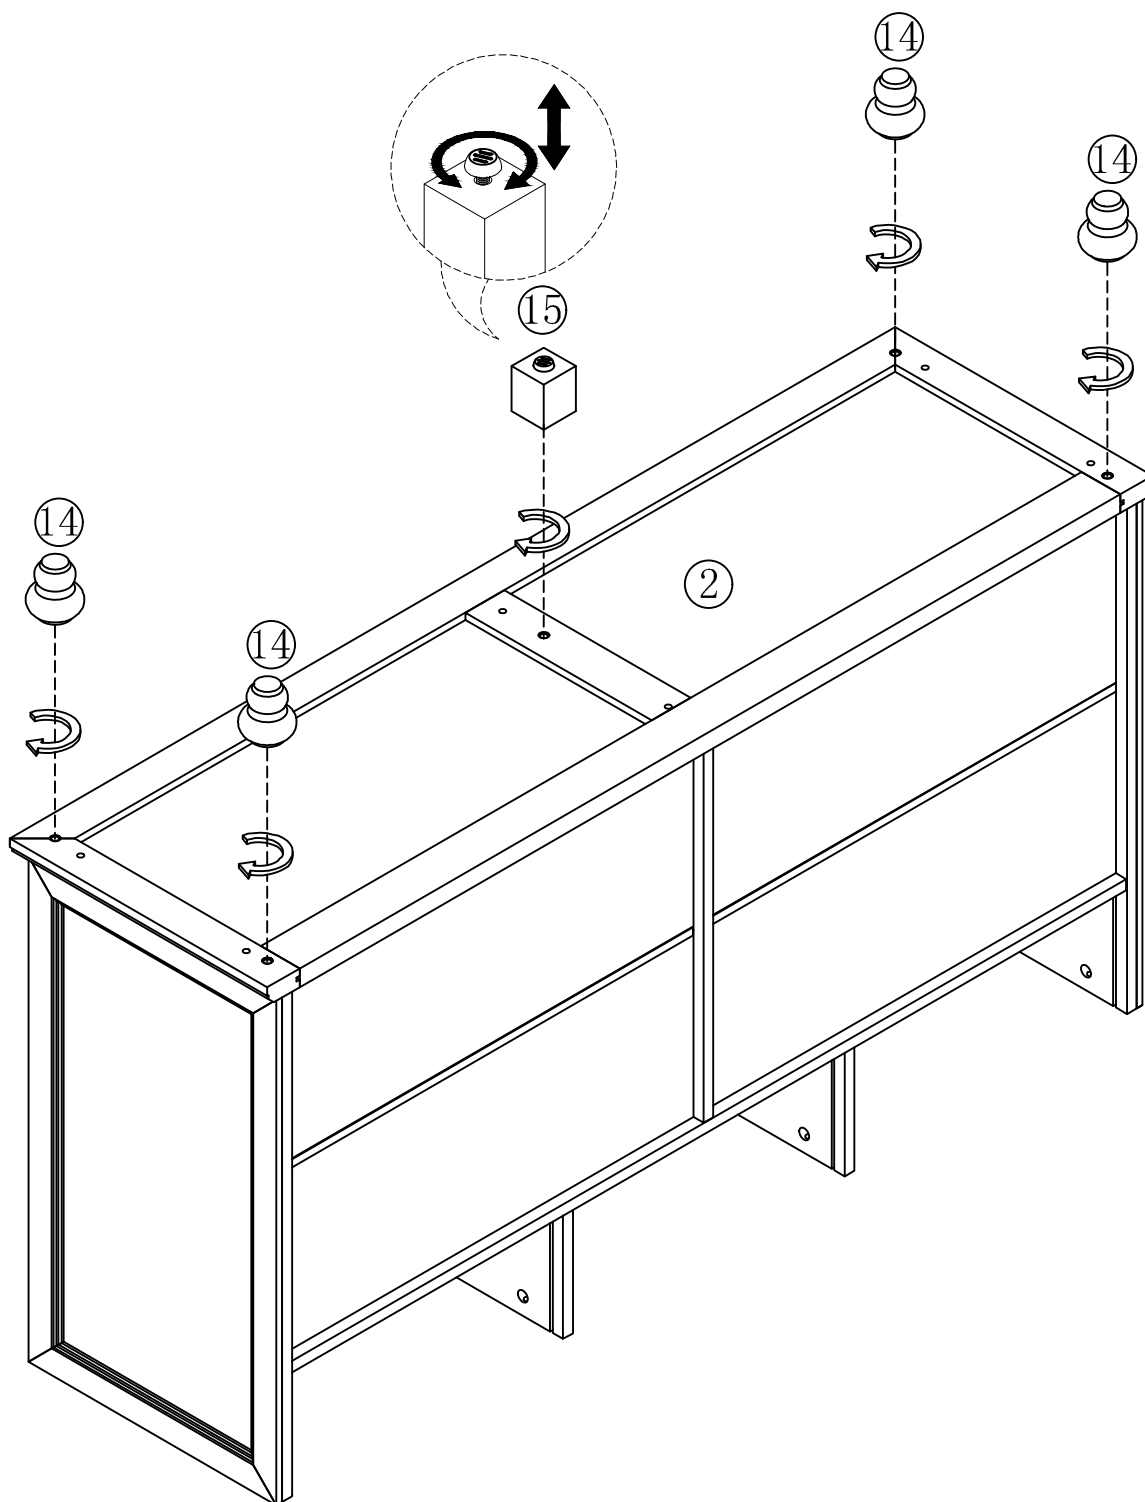


## STEP 15

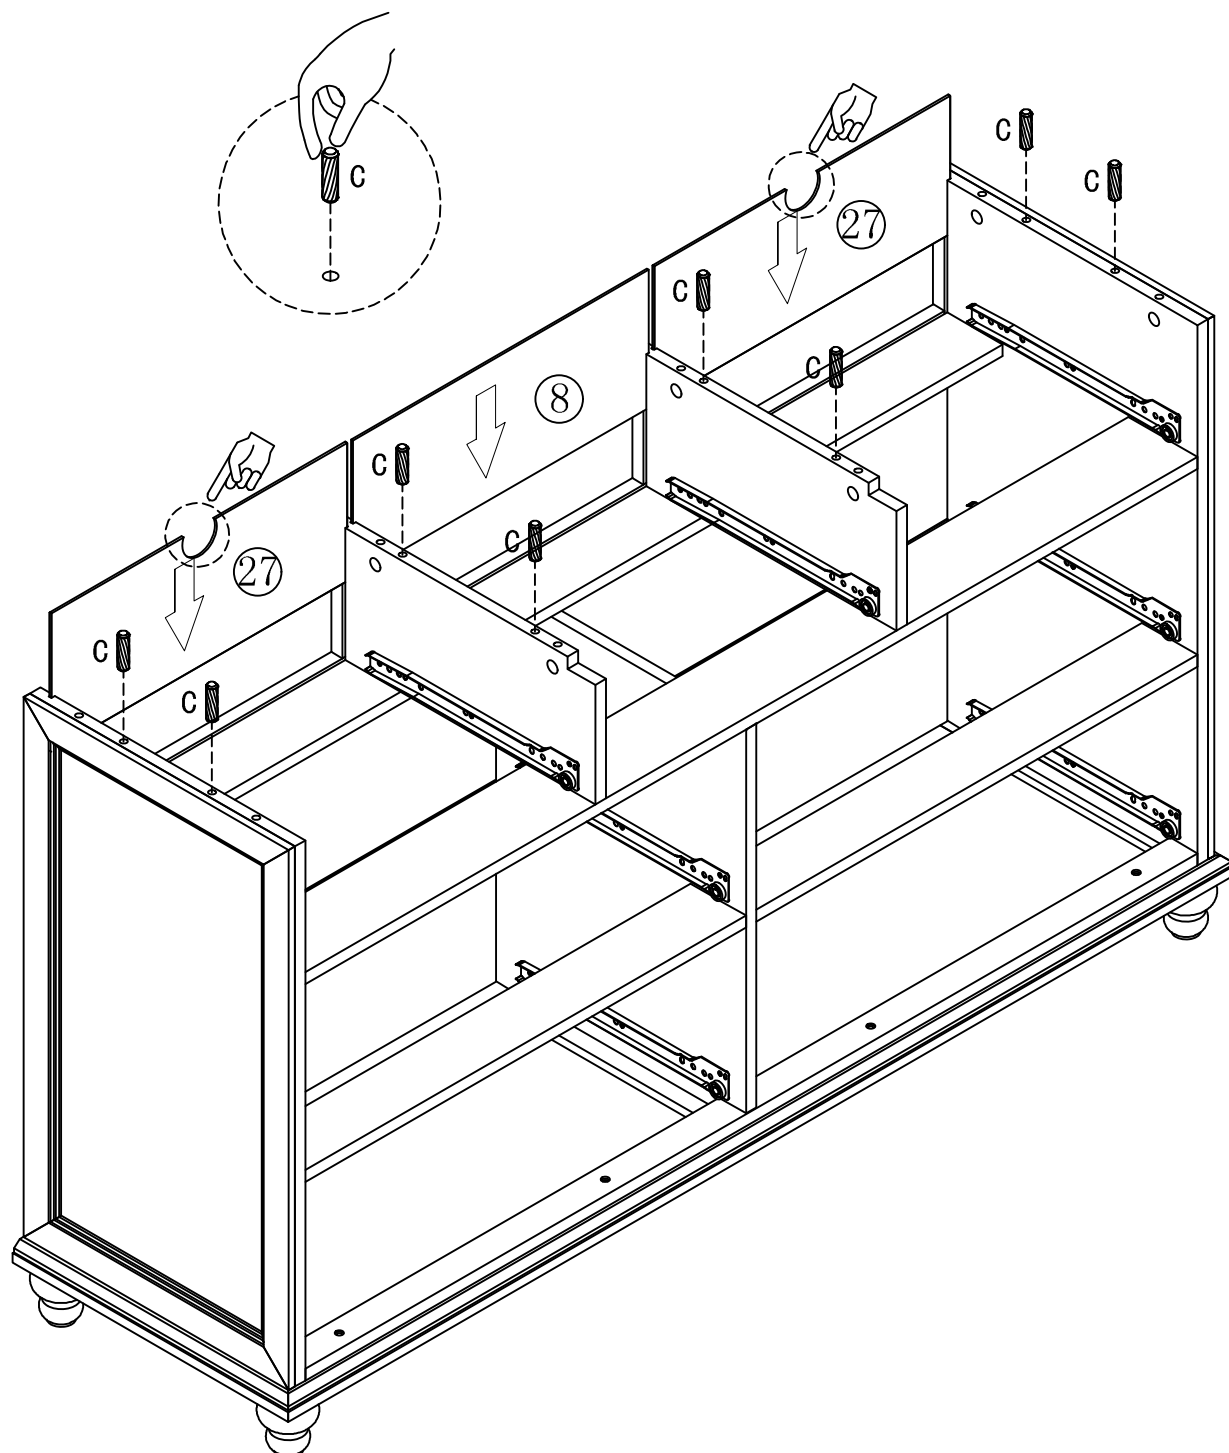

C X 8PCS


## STEP 16

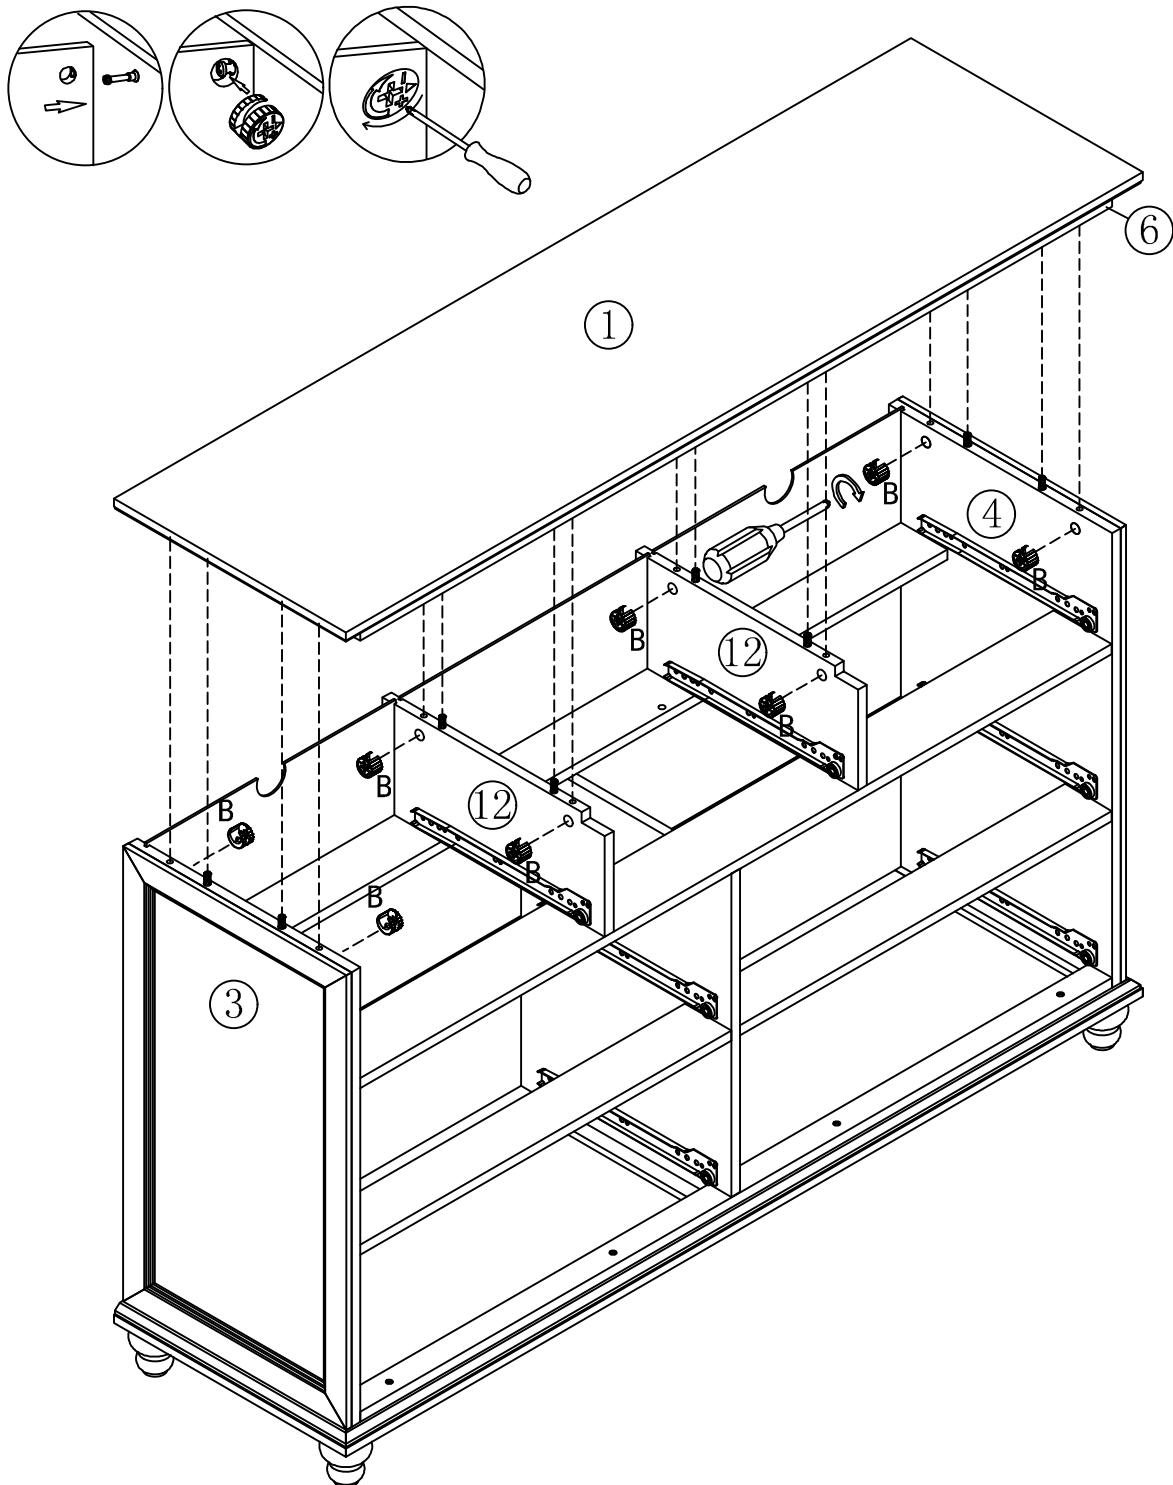

B X 8PCS


## STEP 17

NOTE: To prevent the cabinet from wobbling please be sure to install the back panel fasteners.

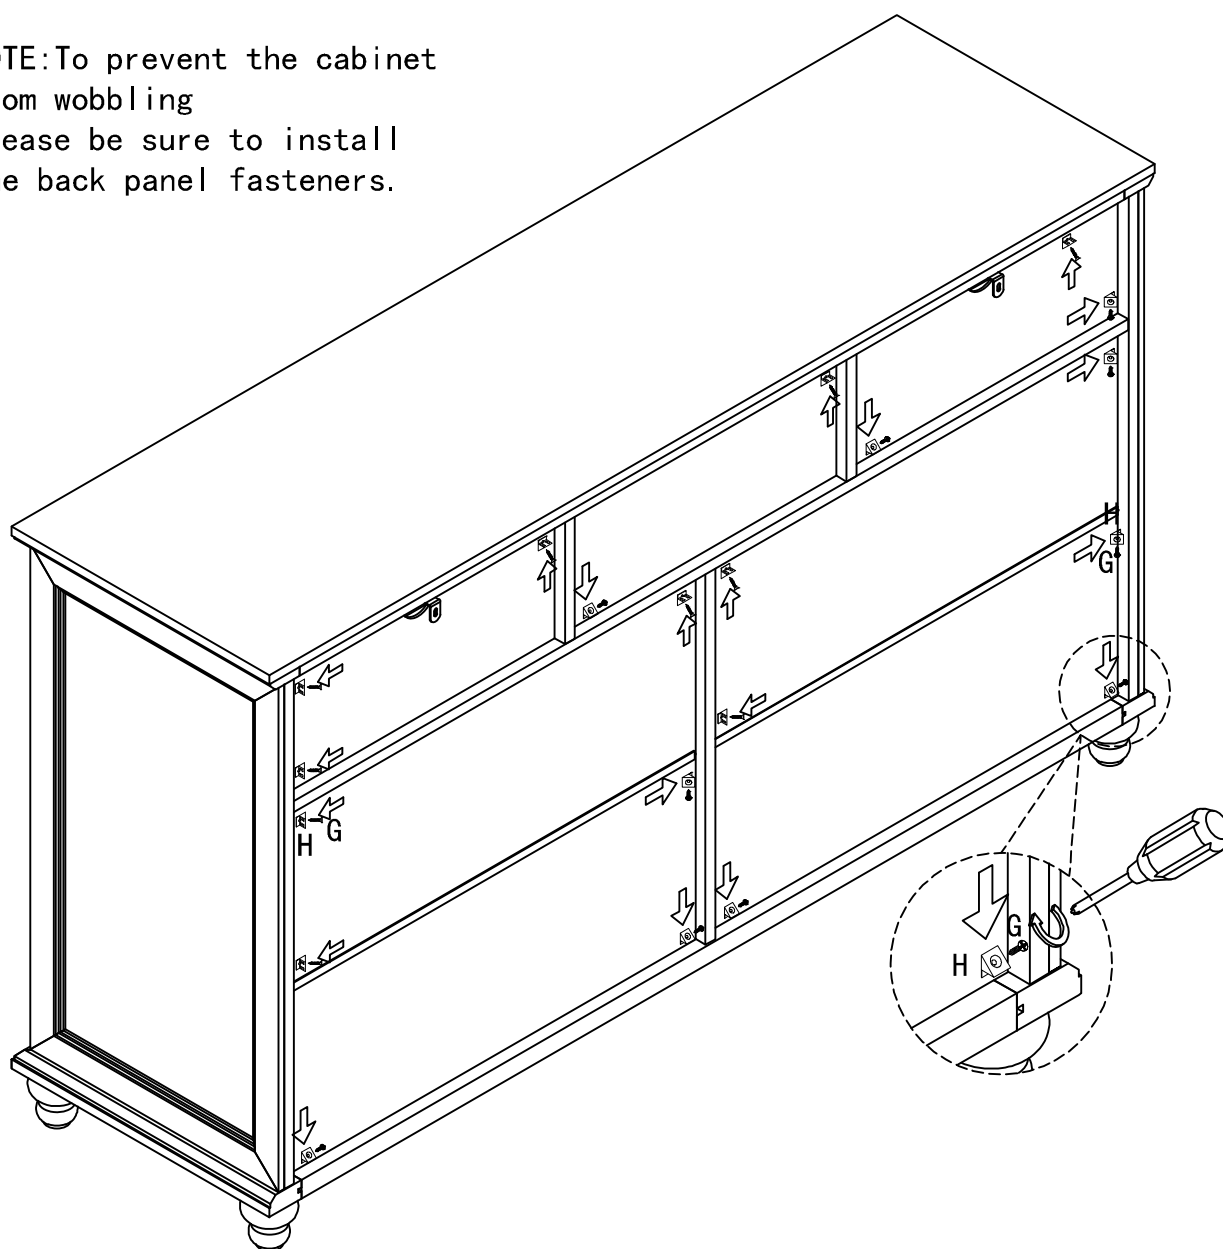

|                                                                                       |           |
|---------------------------------------------------------------------------------------|-----------|
|  | H X 20PCS |
|  | G X 20PCS |




## STEP 18

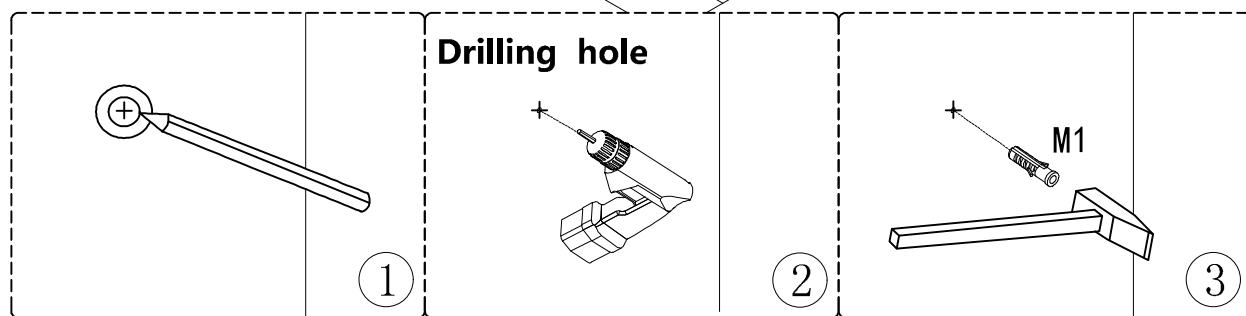



Drill a hole in the wall, then hammer the M1 into the wall with a hammer

**WALL**

Note: Follow step  
Link M4 and M1 with a M2 using a  
screwdriver, and assembly it tightly.

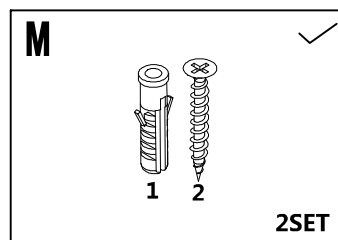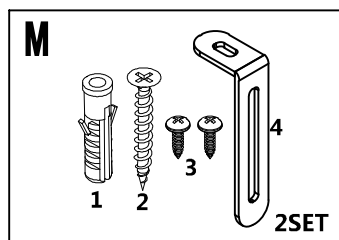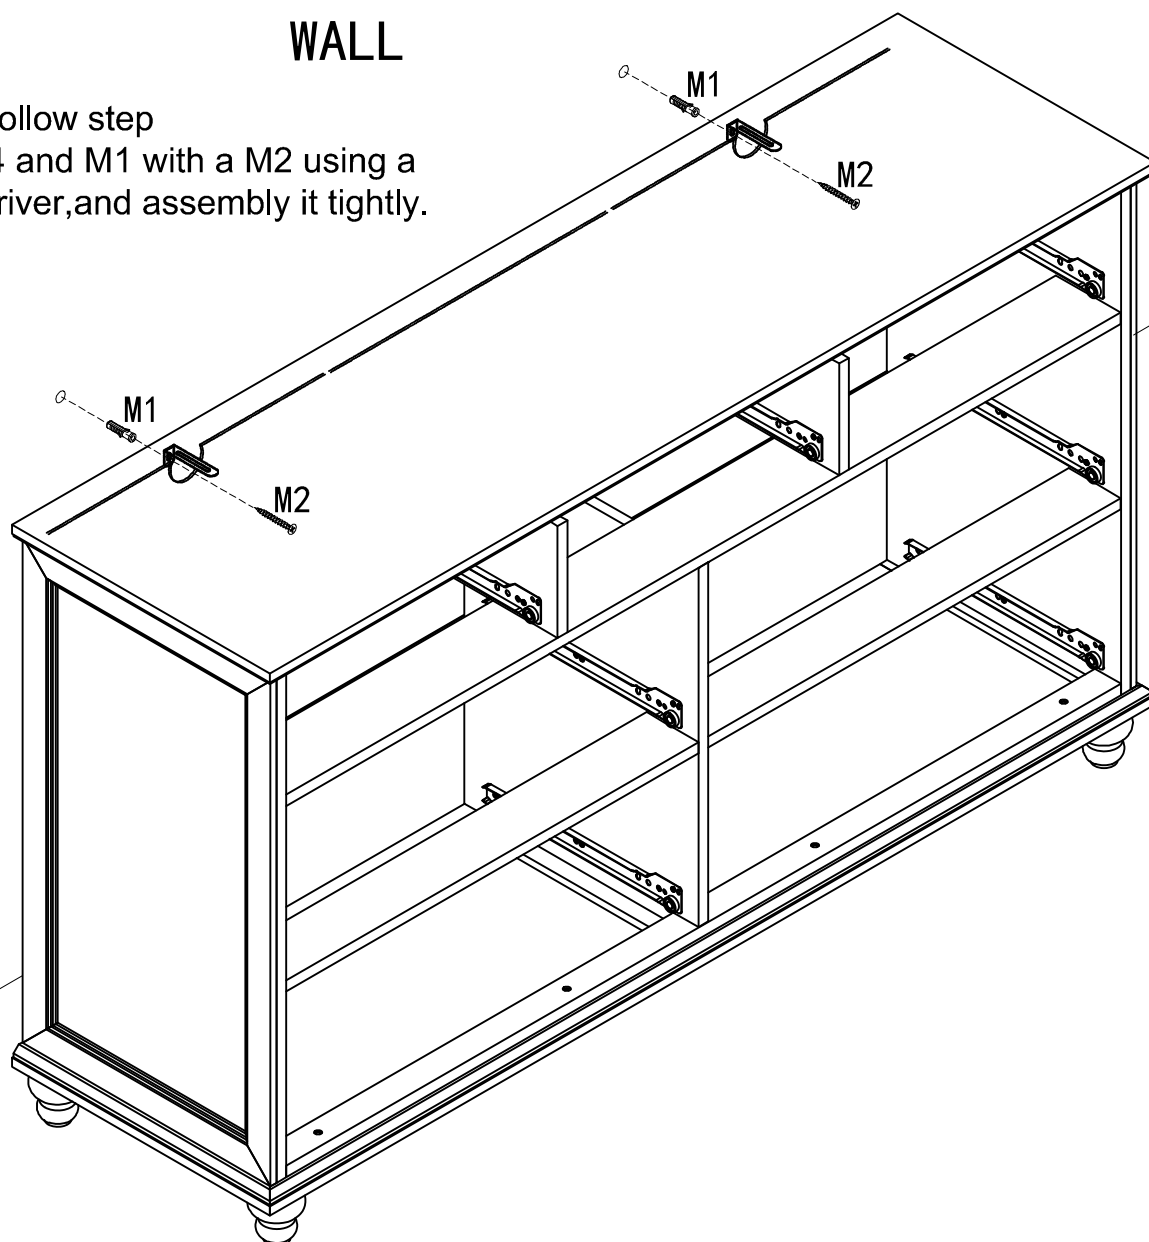


## STEP 19

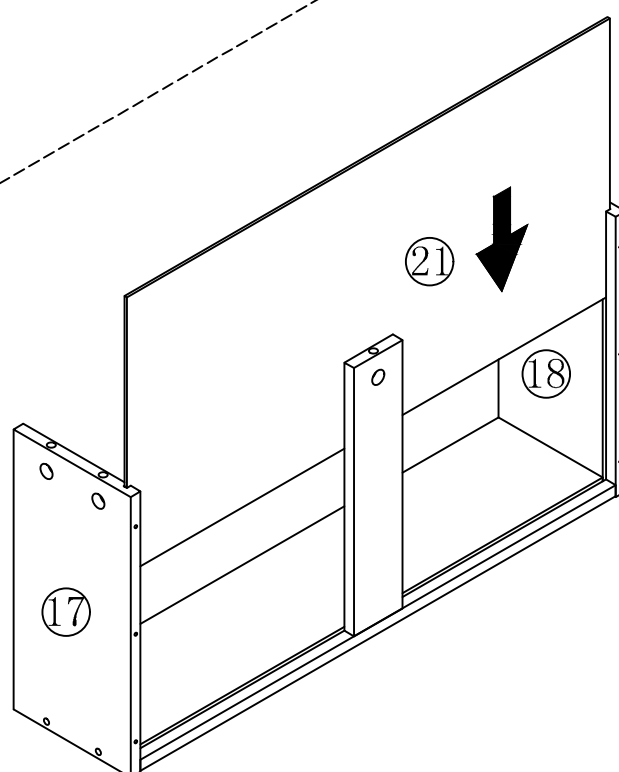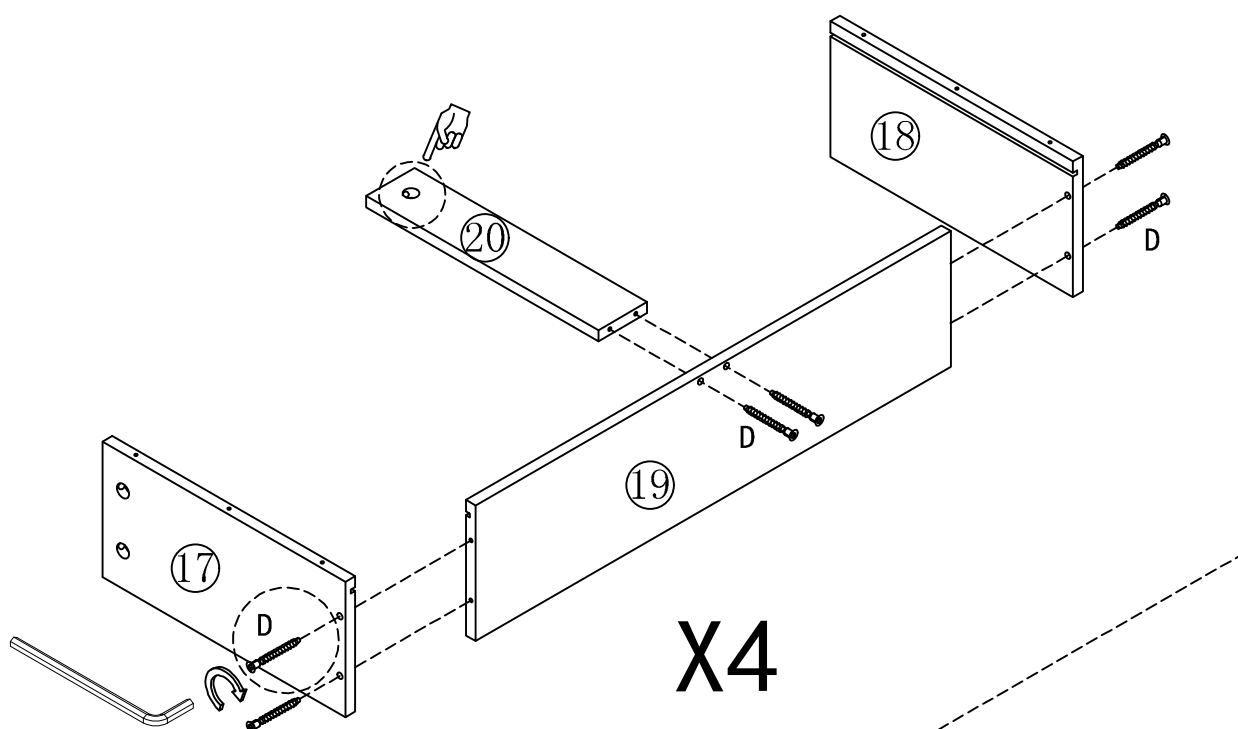


D X 24PCS

# STEP 20

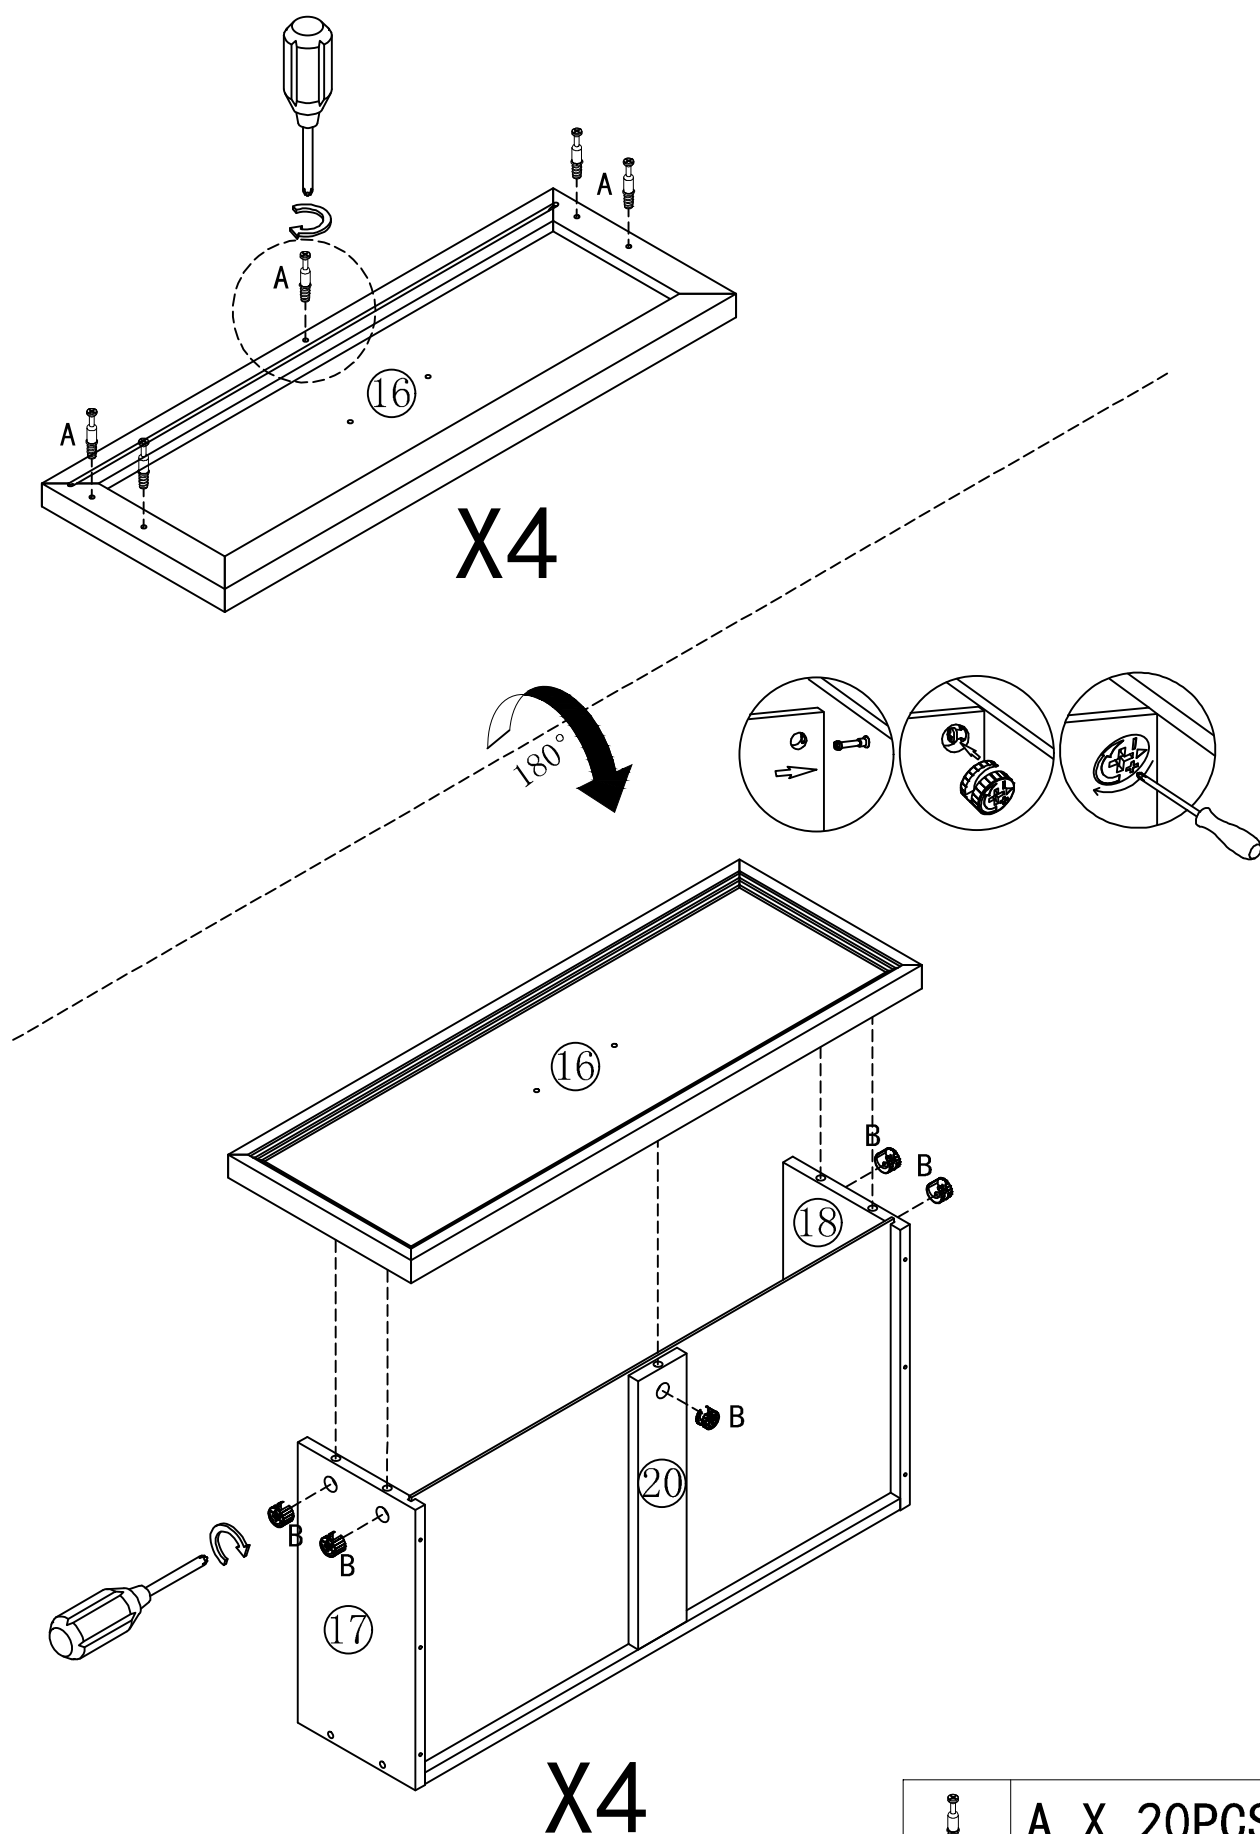




|                                                                                       |           |
|---------------------------------------------------------------------------------------|-----------|
|  | A X 20PCS |
|  | B X 20PCS |

## STEP 21

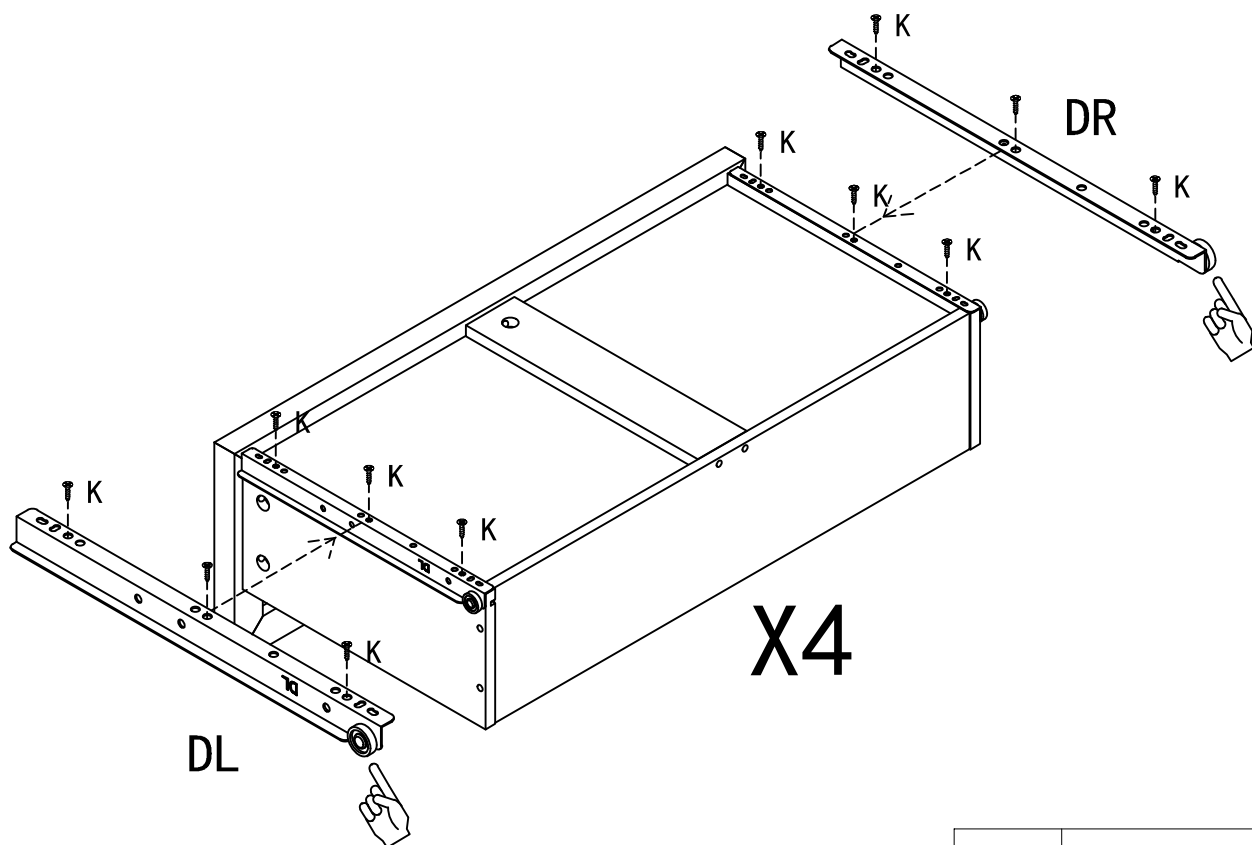

K X 24PCS

## STEP 22

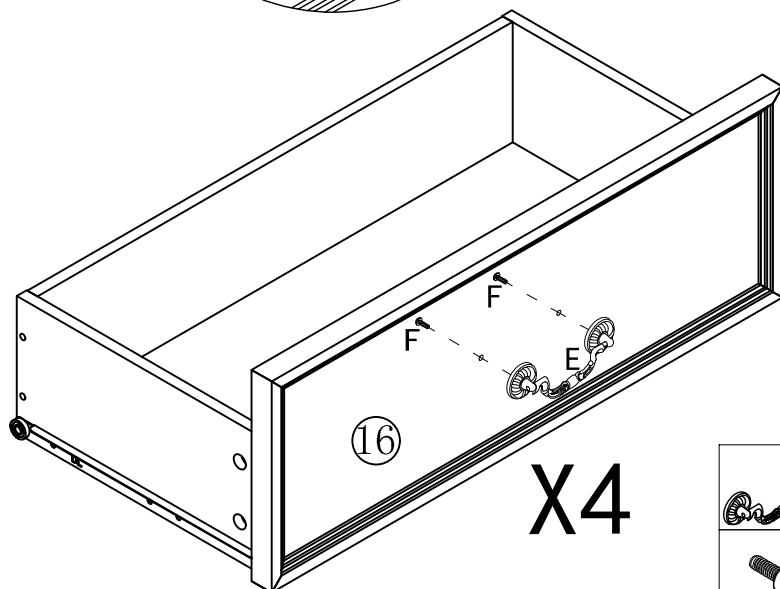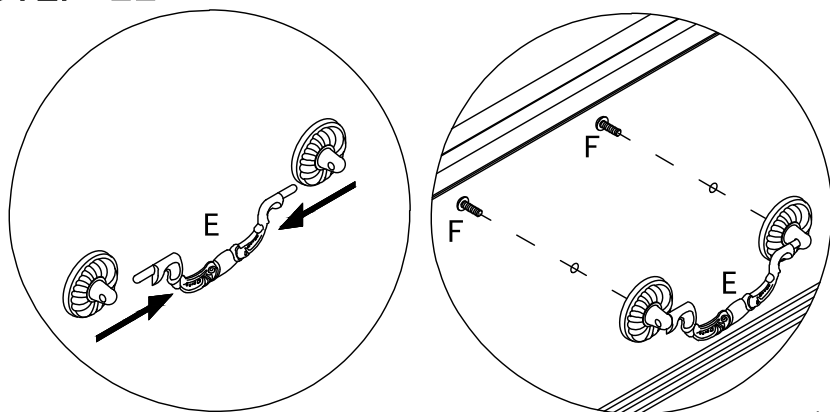


E X 4PCS




F X 8PCS

## STEP 23

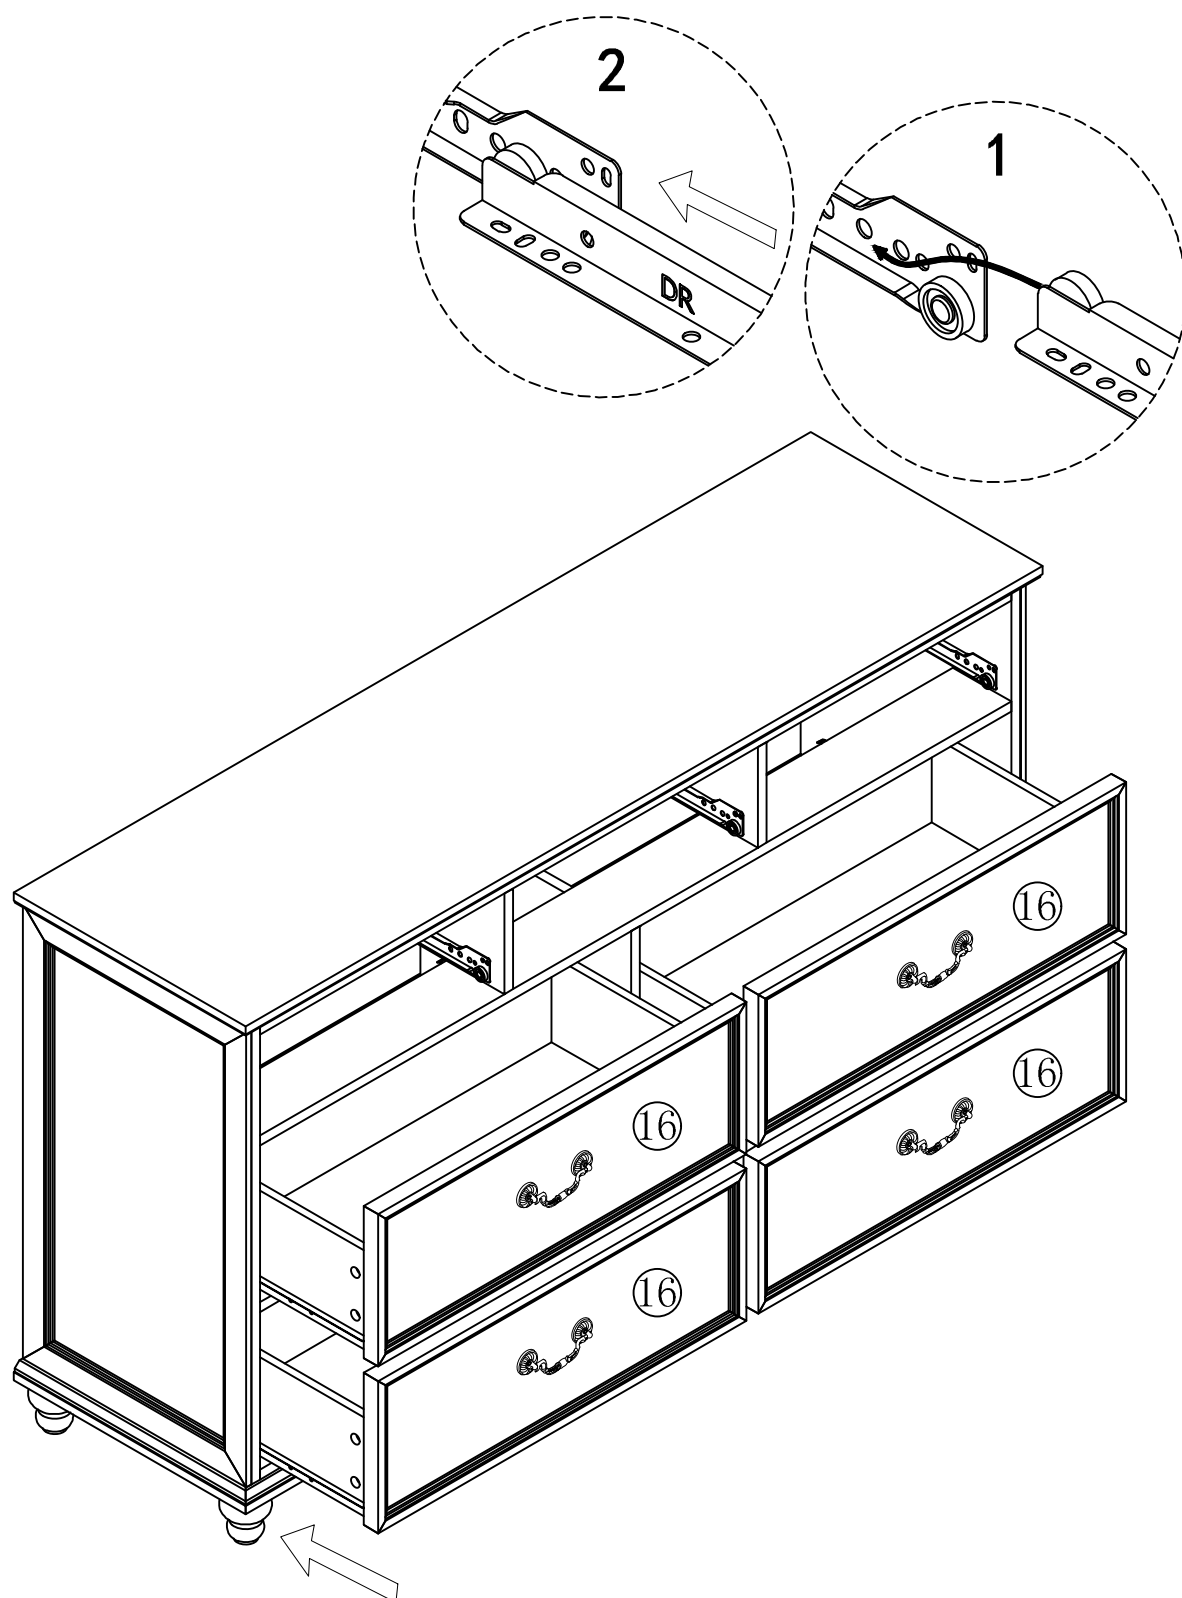


## STEP 24

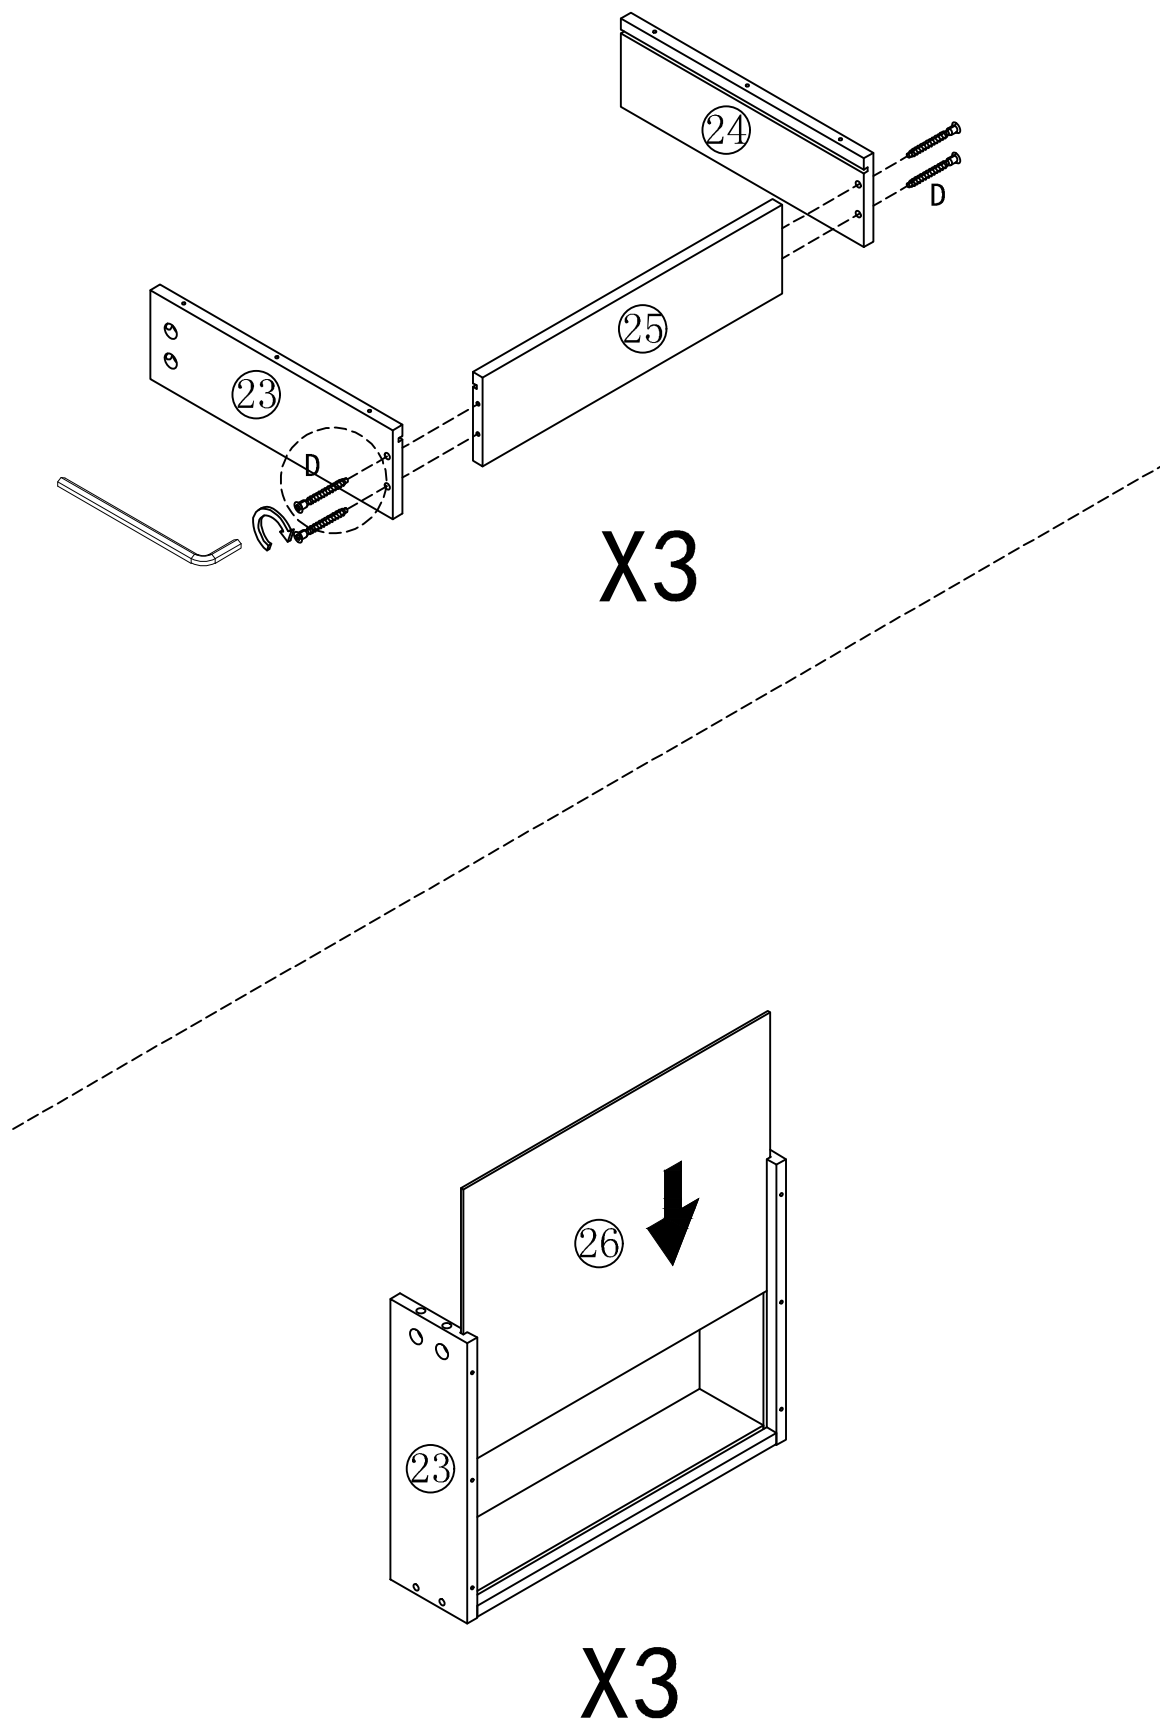


D X 12PCS

STEP 25

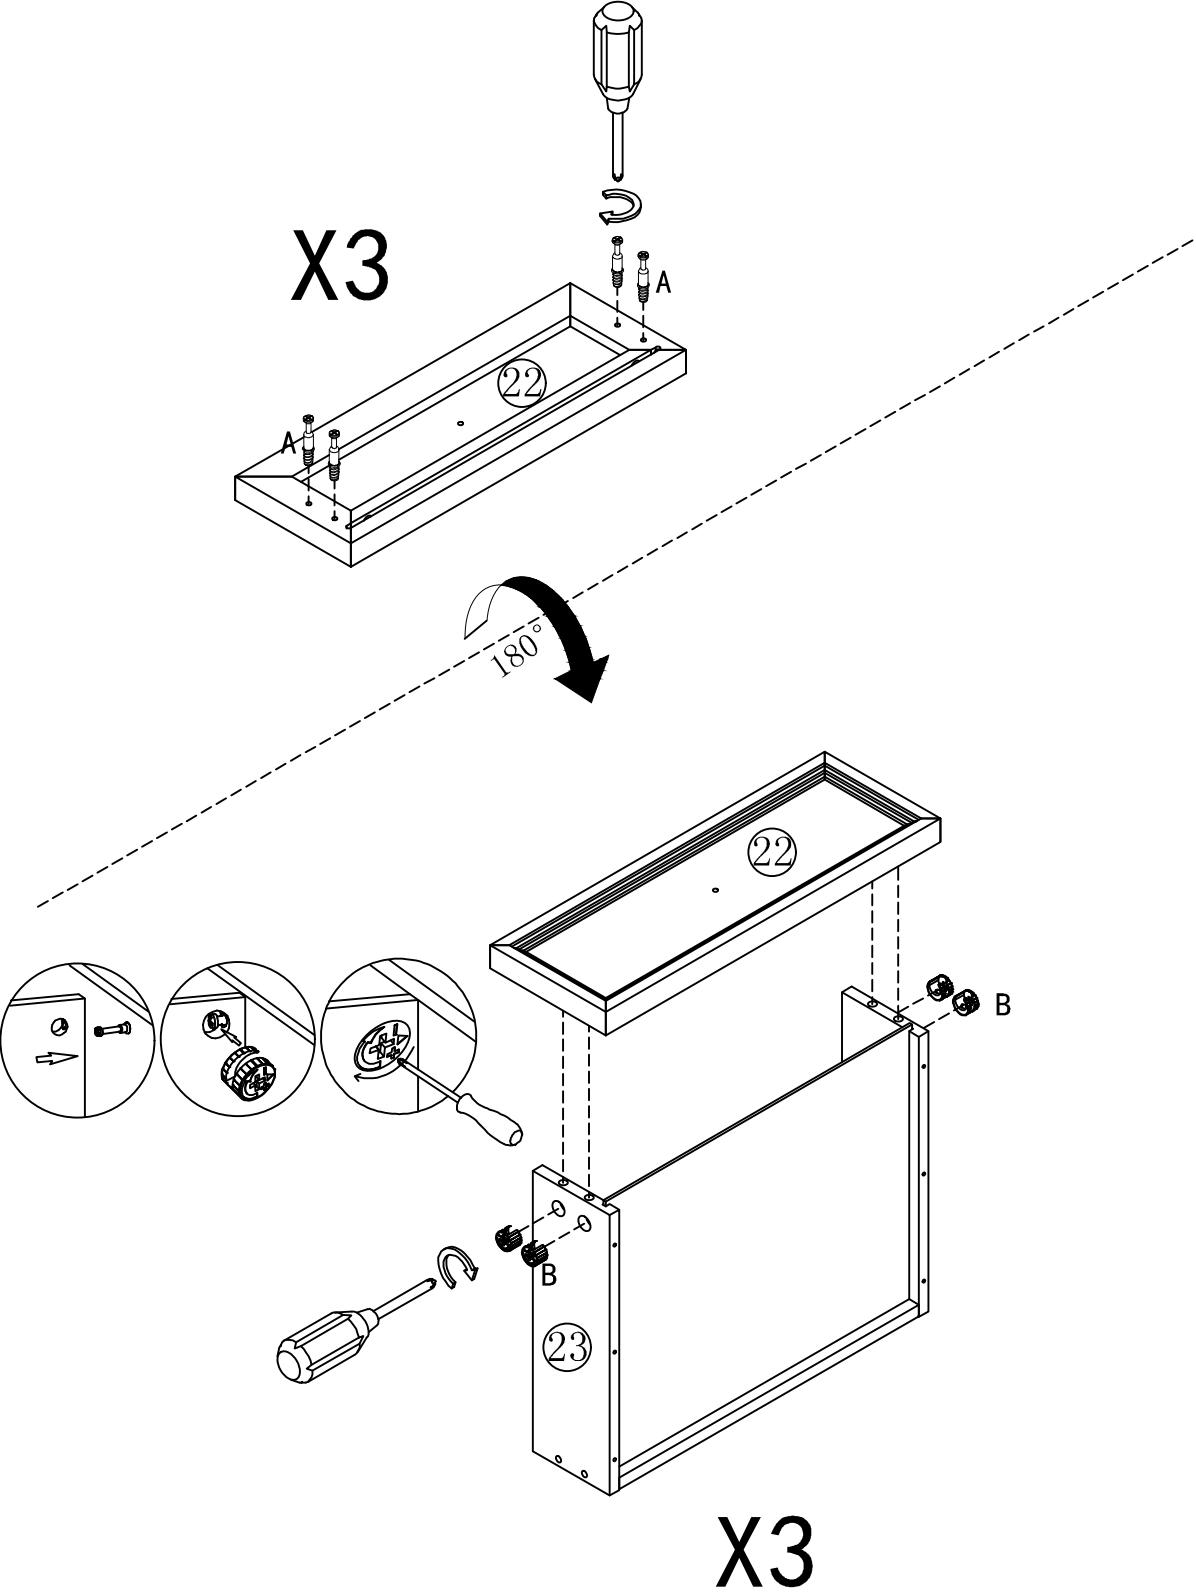


|                                                                                       |           |
|---------------------------------------------------------------------------------------|-----------|
|  | A X 12PCS |
|  | B X 12PCS |

STEP 26

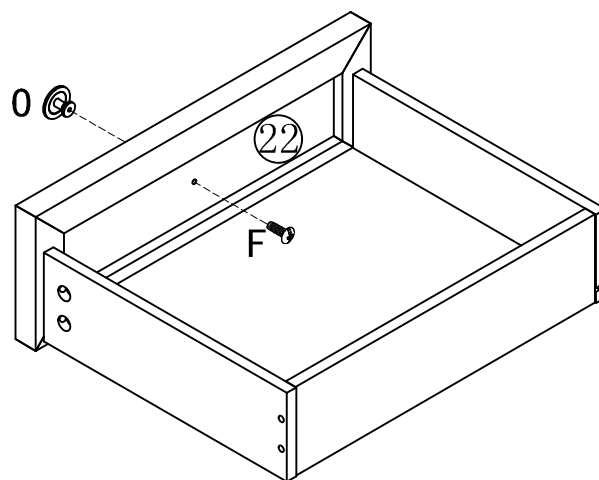

X3

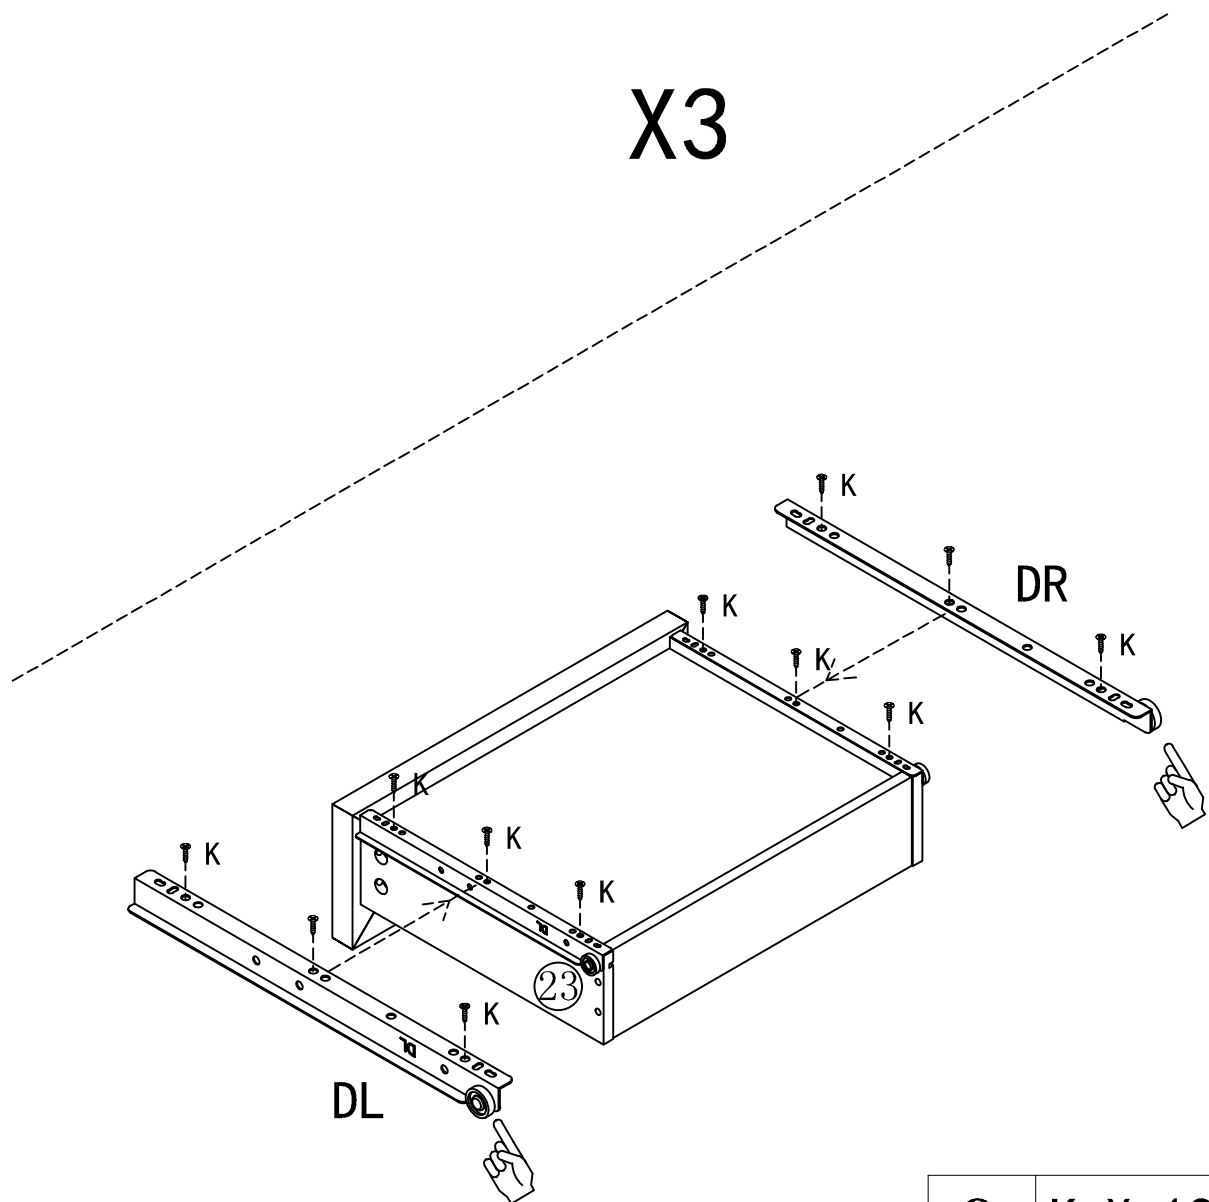

X3

|                                                                                       |           |
|---------------------------------------------------------------------------------------|-----------|
|  | K X 18PCS |
|  | O X 3PCS  |
|  | F X 3PCS  |

## STEP 27

