

















Dog Crate

DY420P302450
DY420P302451



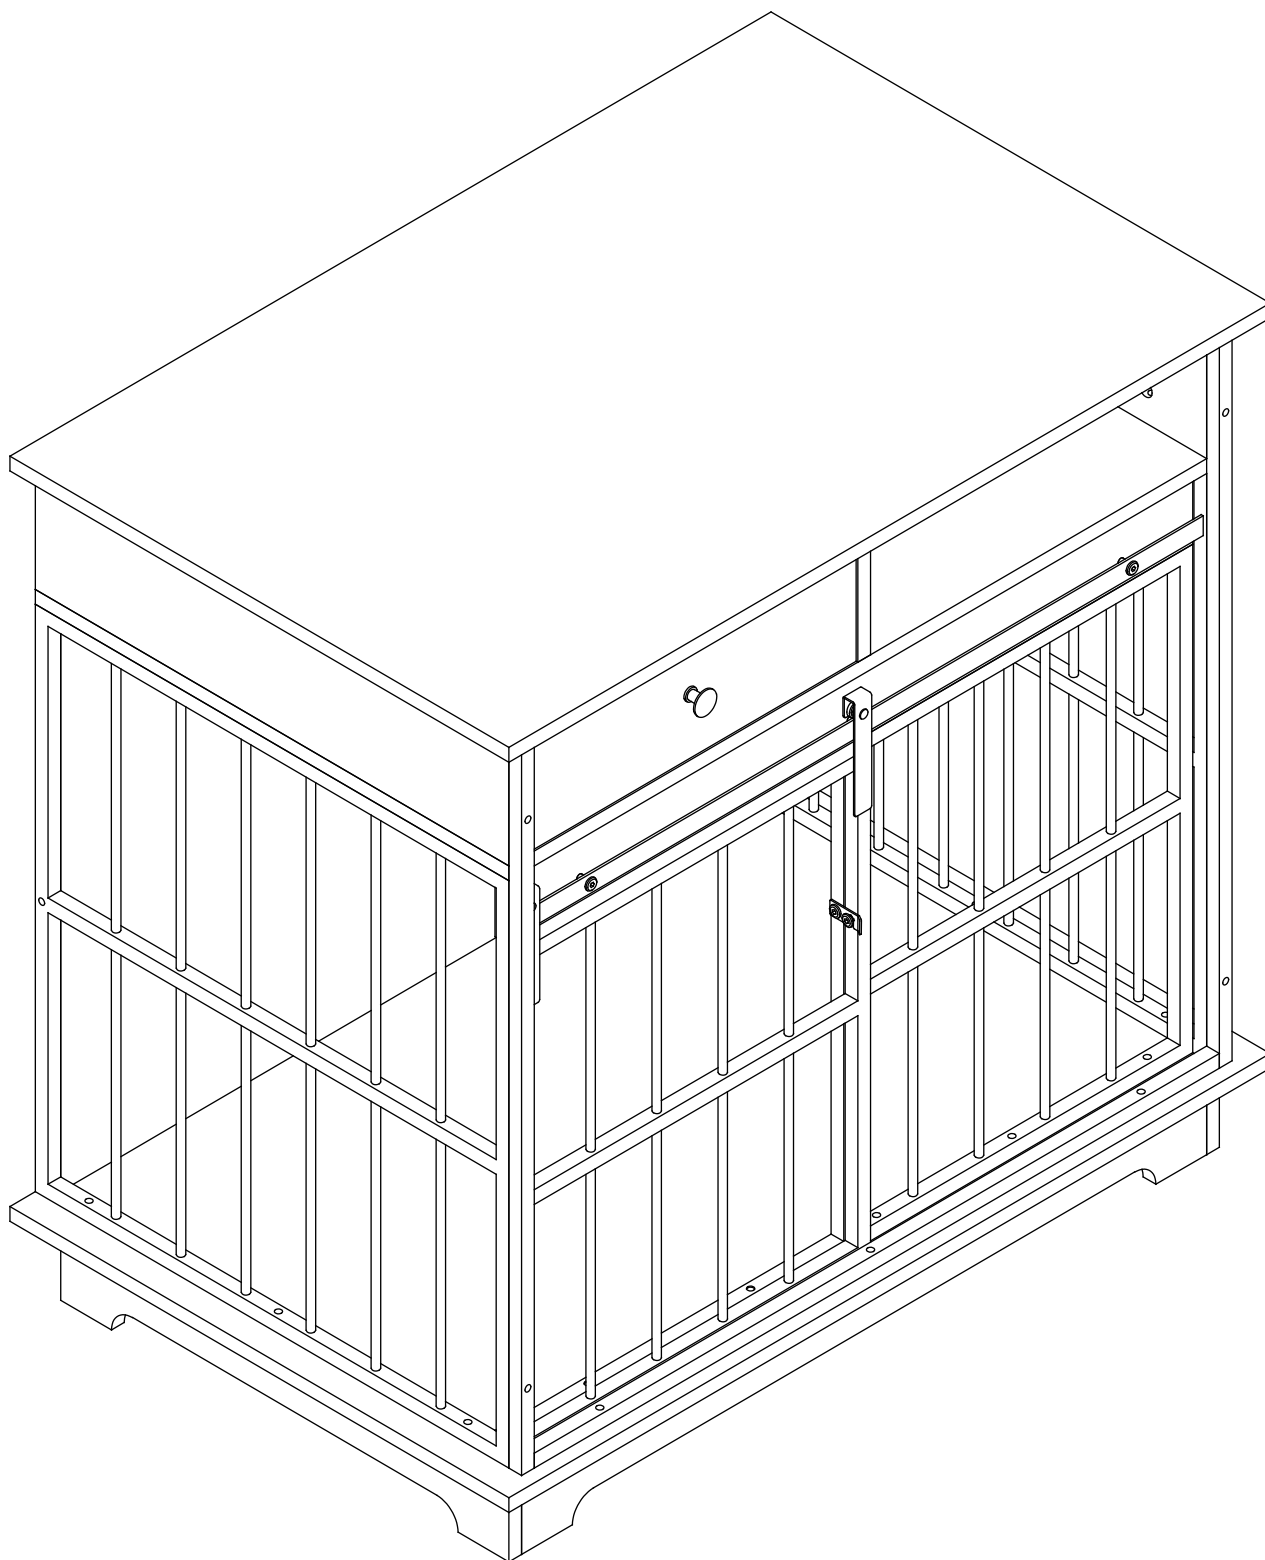


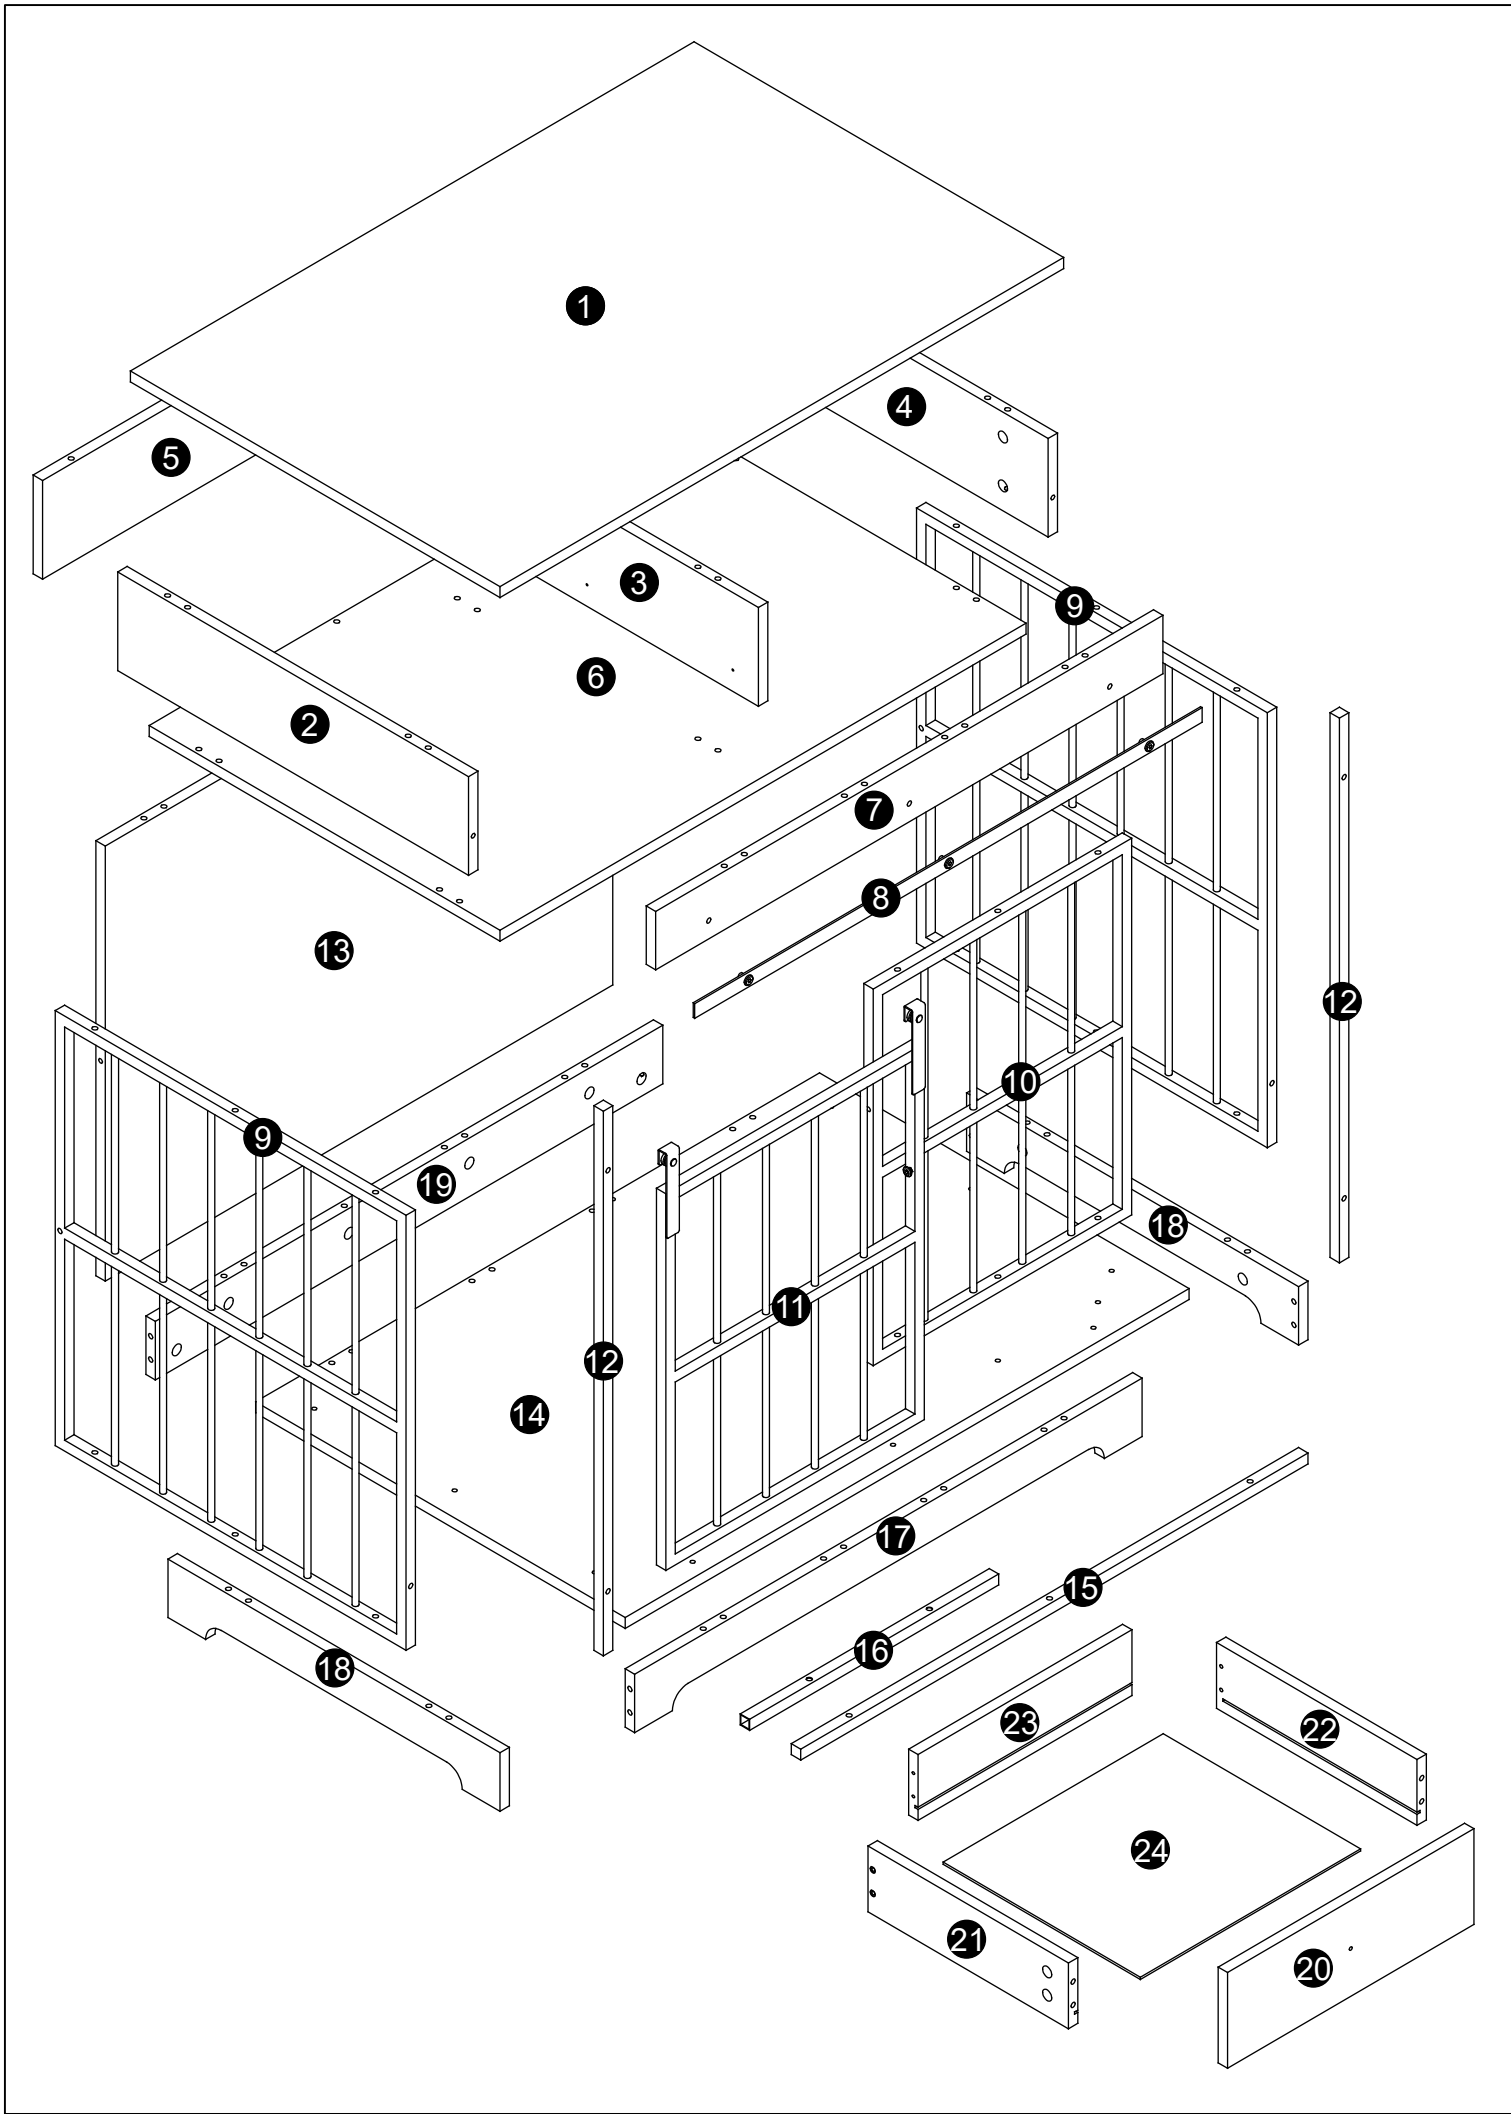


Hardwareliste

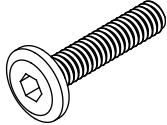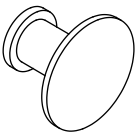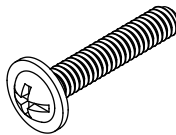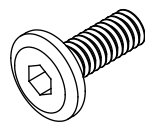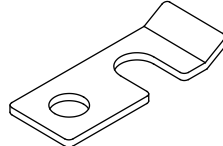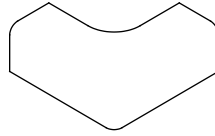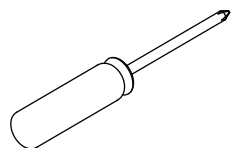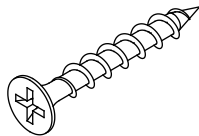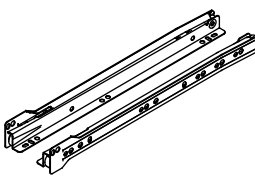A x 52  7x40mm	B x 52  15x10mm	C x 40 	D x 8 	E x 32 
F x 1 	G x 1 	H x 1 	I x 1 	J x 4 
K x 1 	L x 1 	M x 4 	N x 1 	


Installation method of three
in one rod and buckle

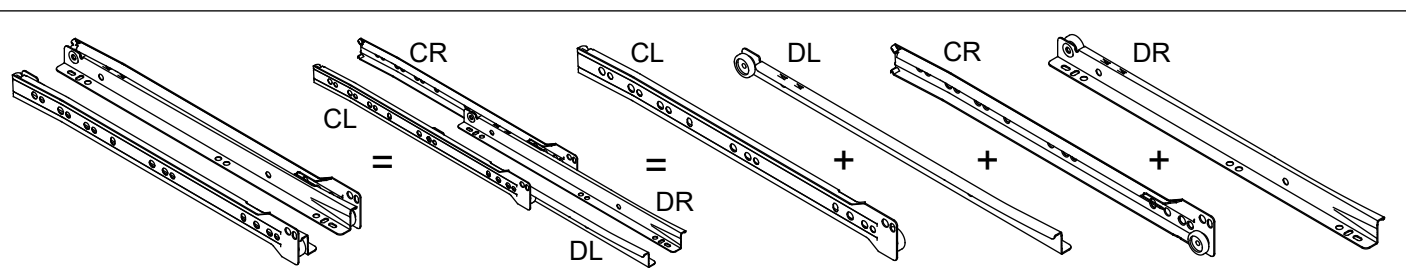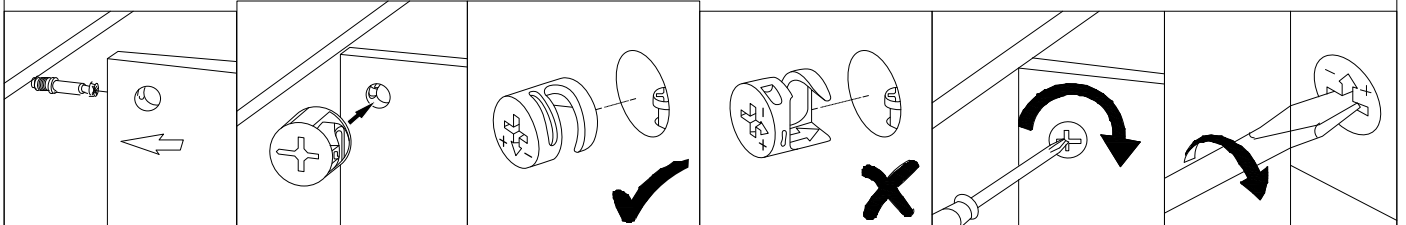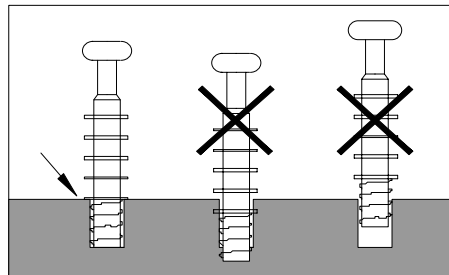


STEP 1

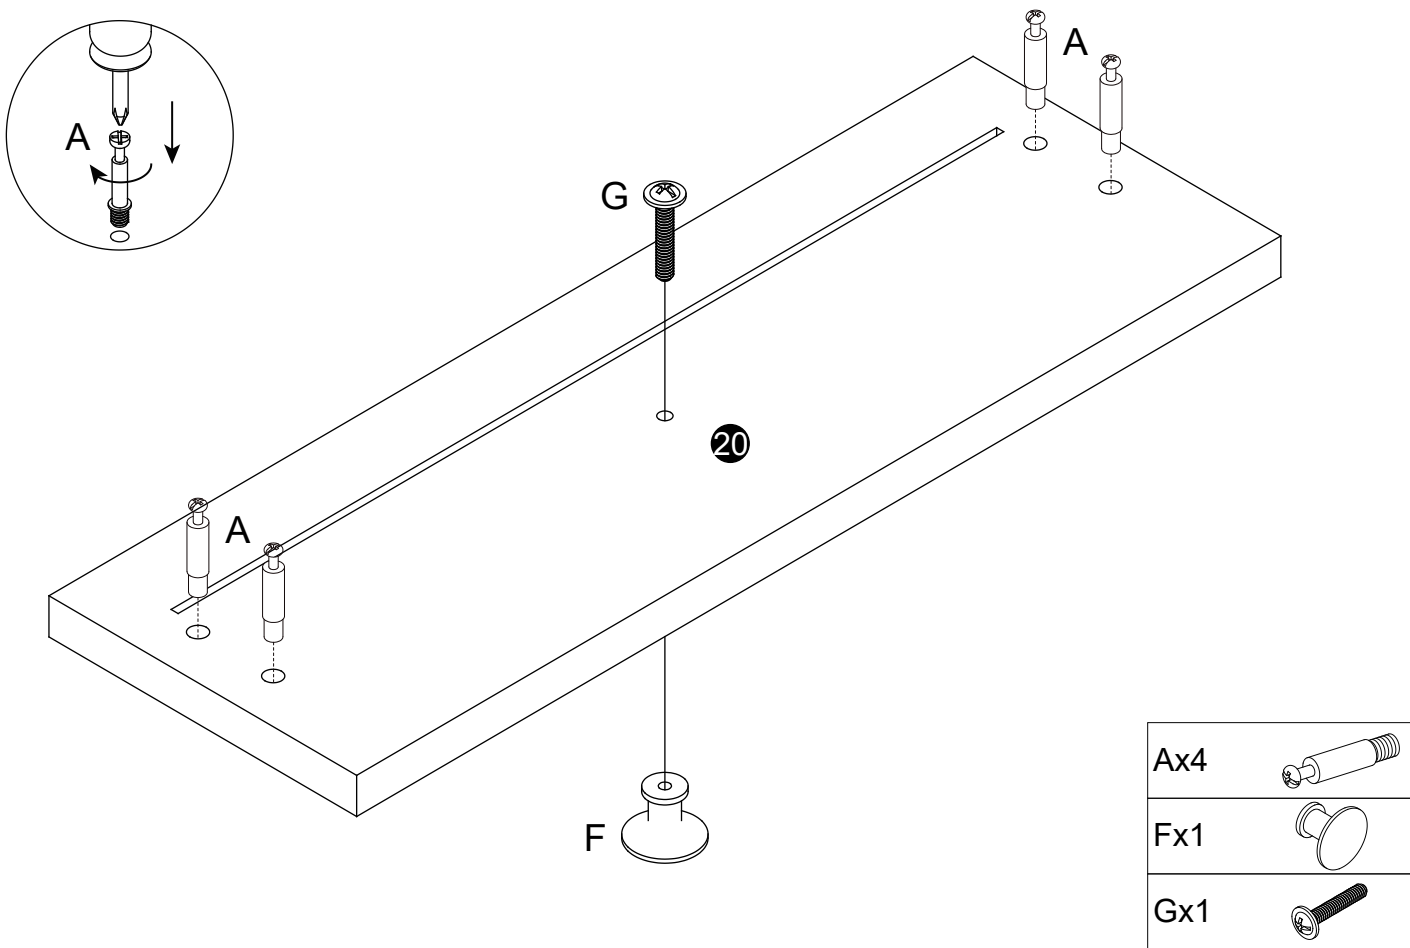

STEP 2

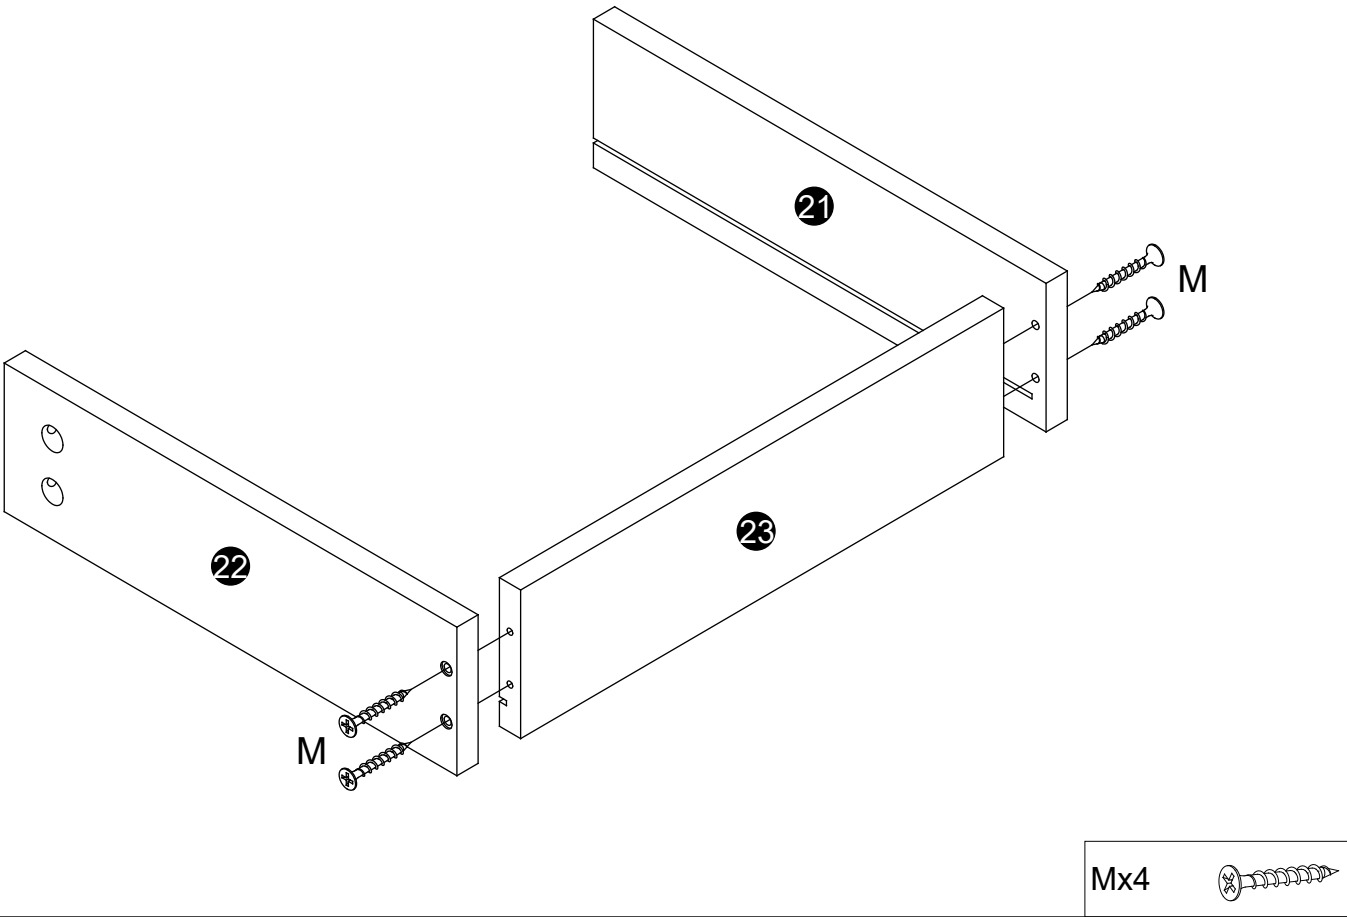


STEP 3

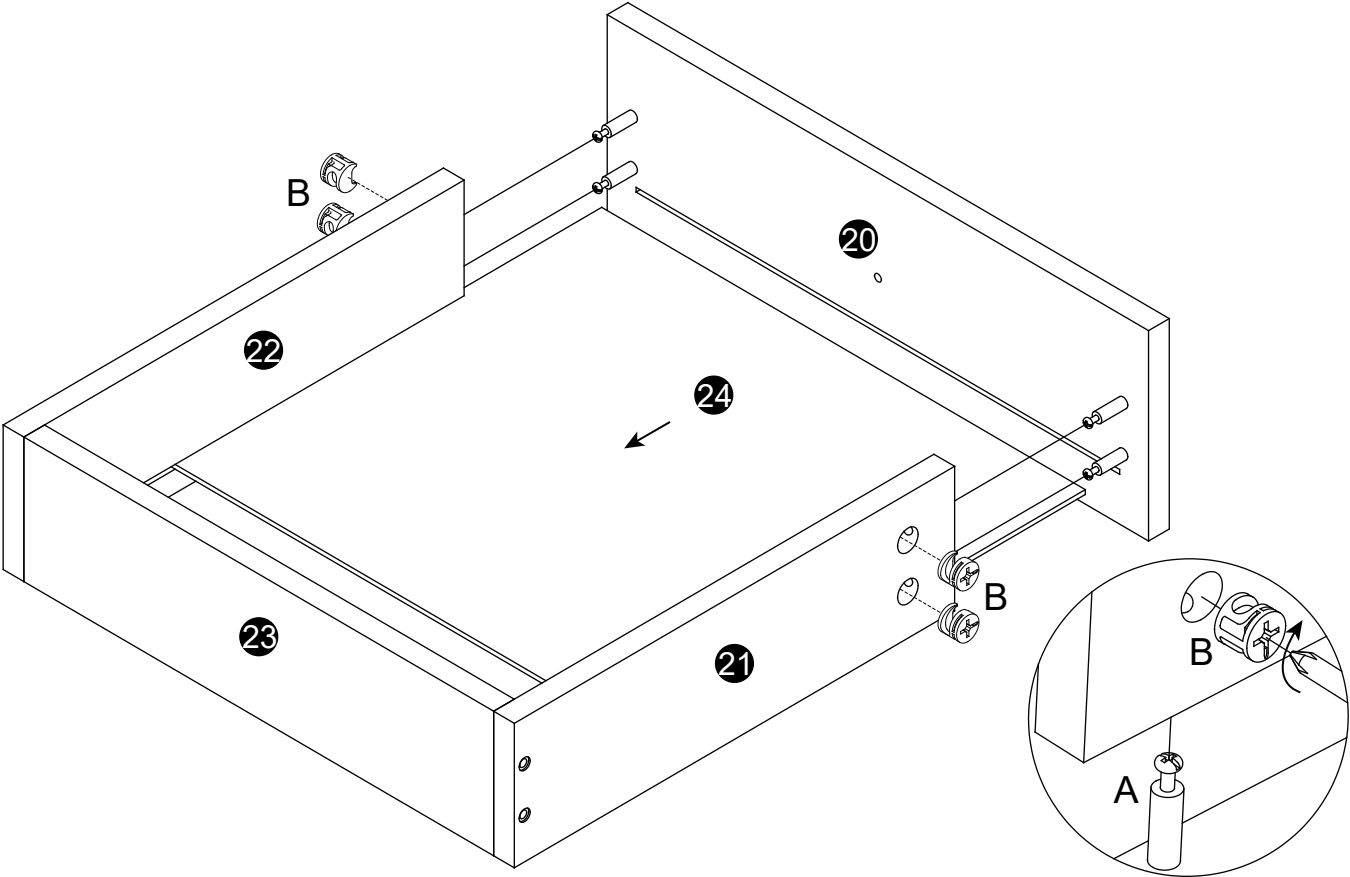


Bx4



STEP 4

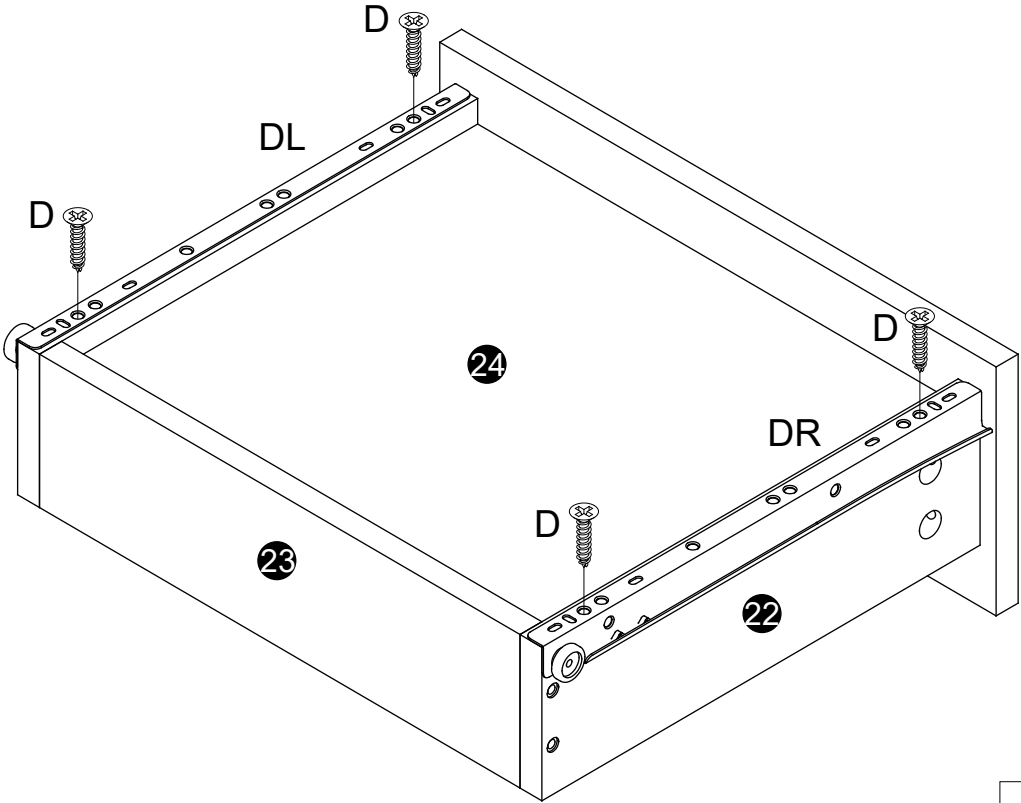



Dx4



Nx1






STEP 5

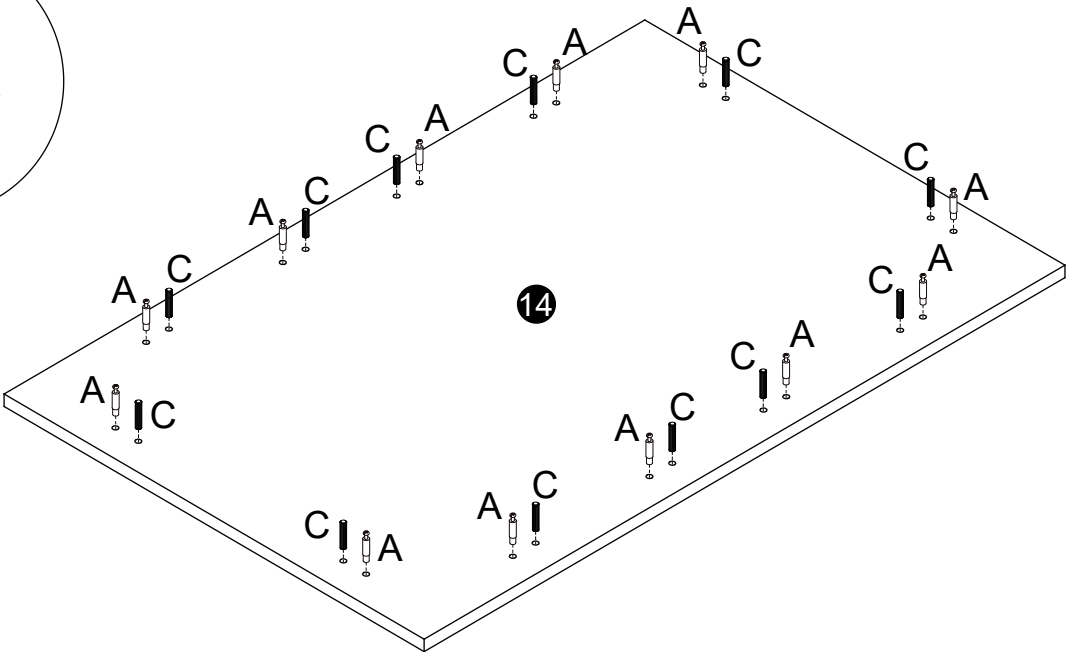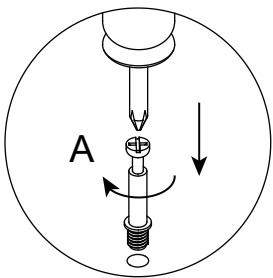


Ax12	
Cx12	

STEP 6

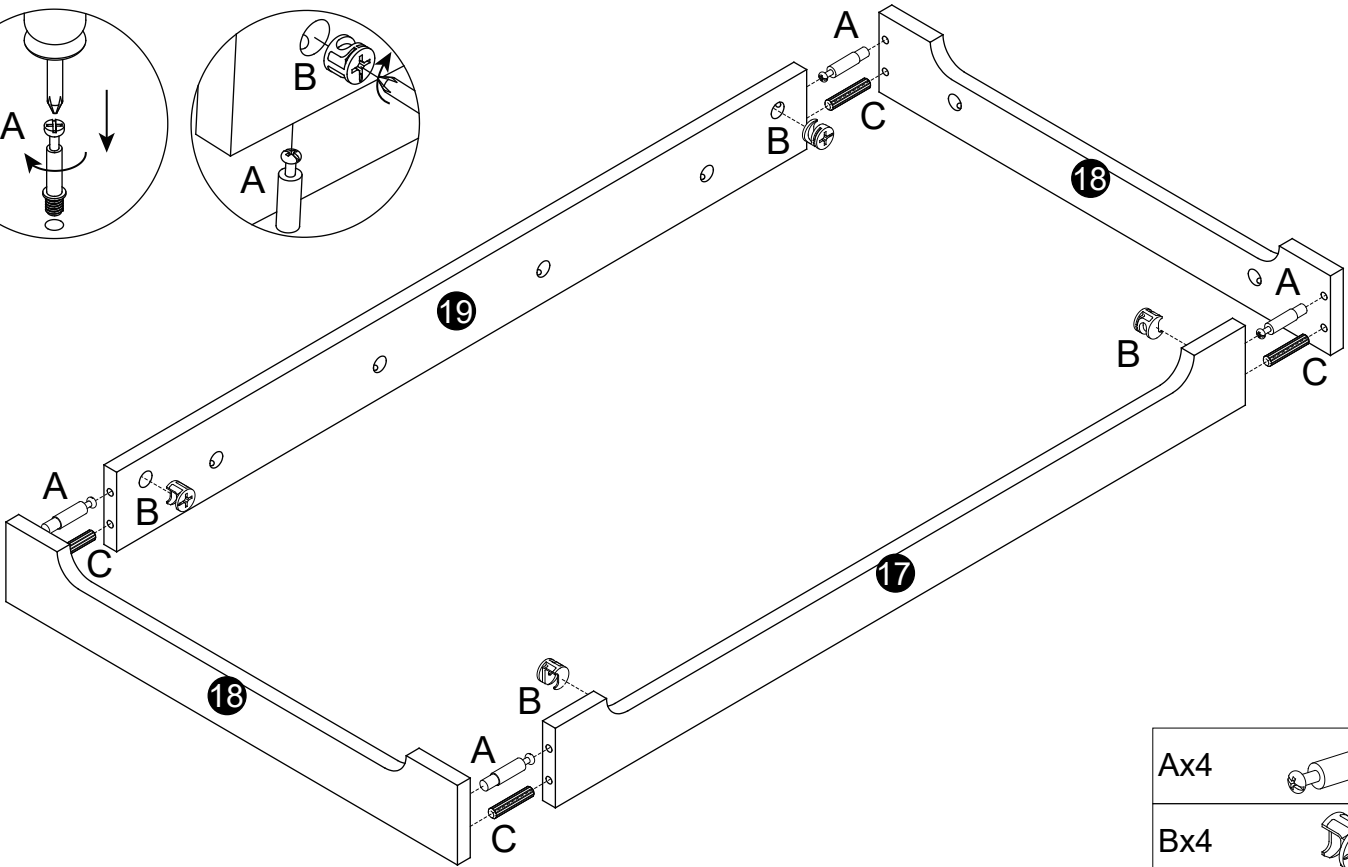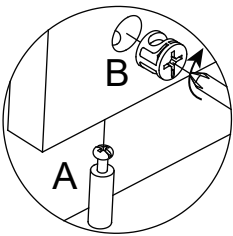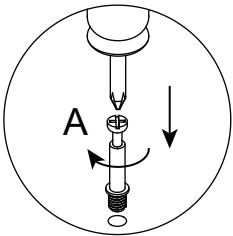

Ax4	
Bx4	
Cx4	


STEP 7

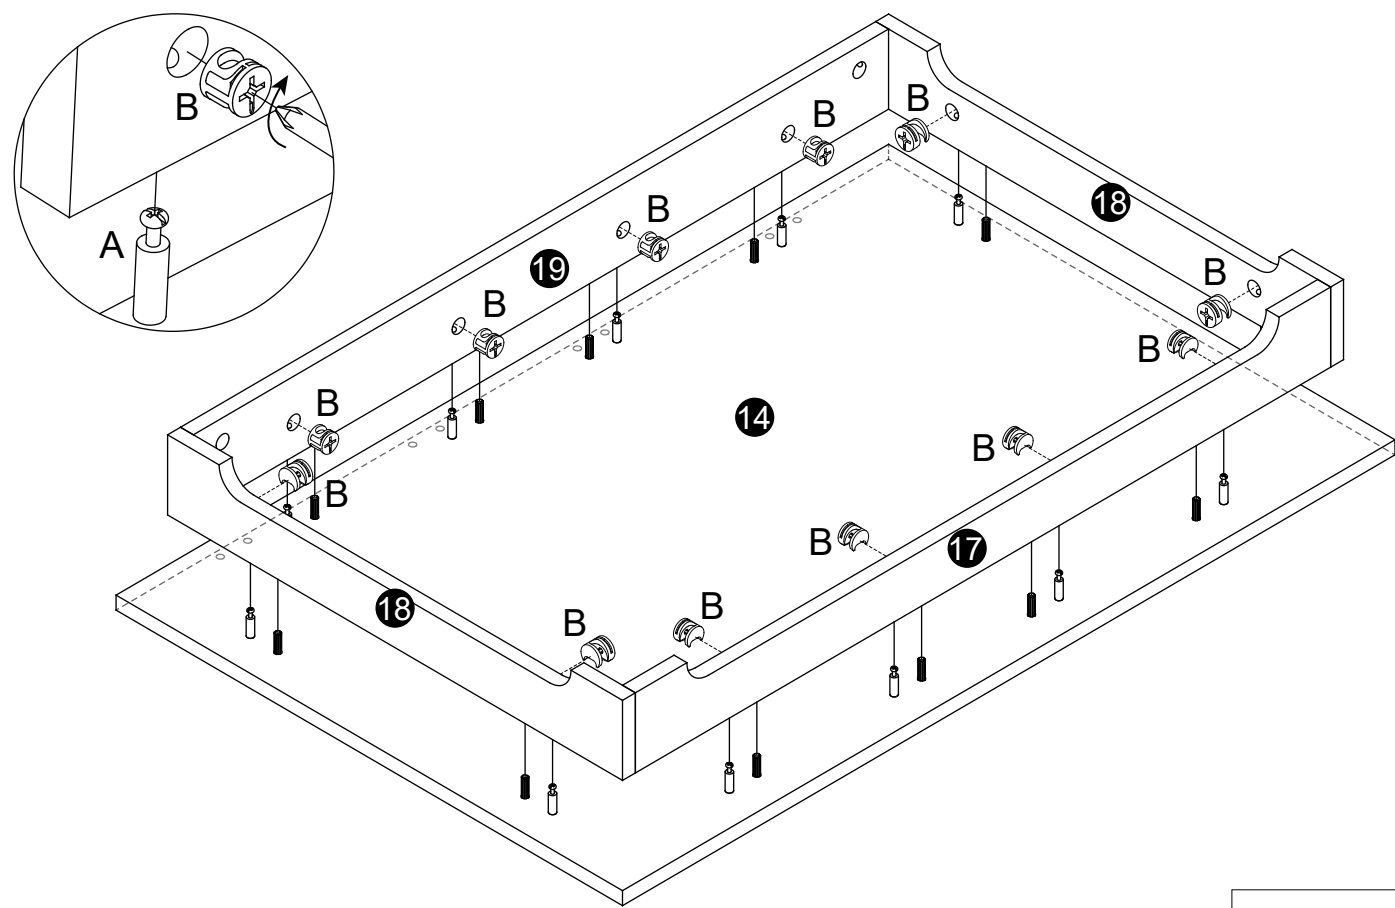


Bx12



STEP 8

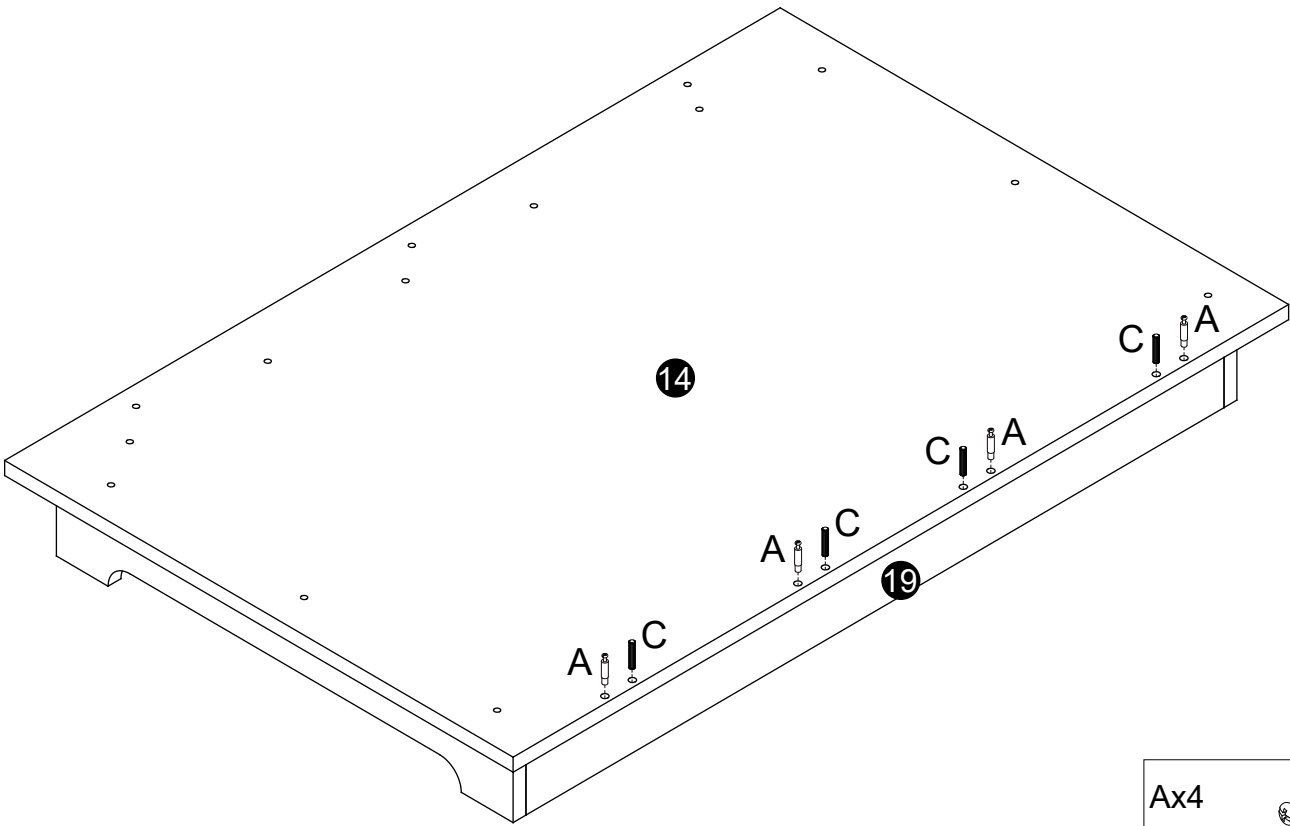


Ax4



Cx4




STEP 9

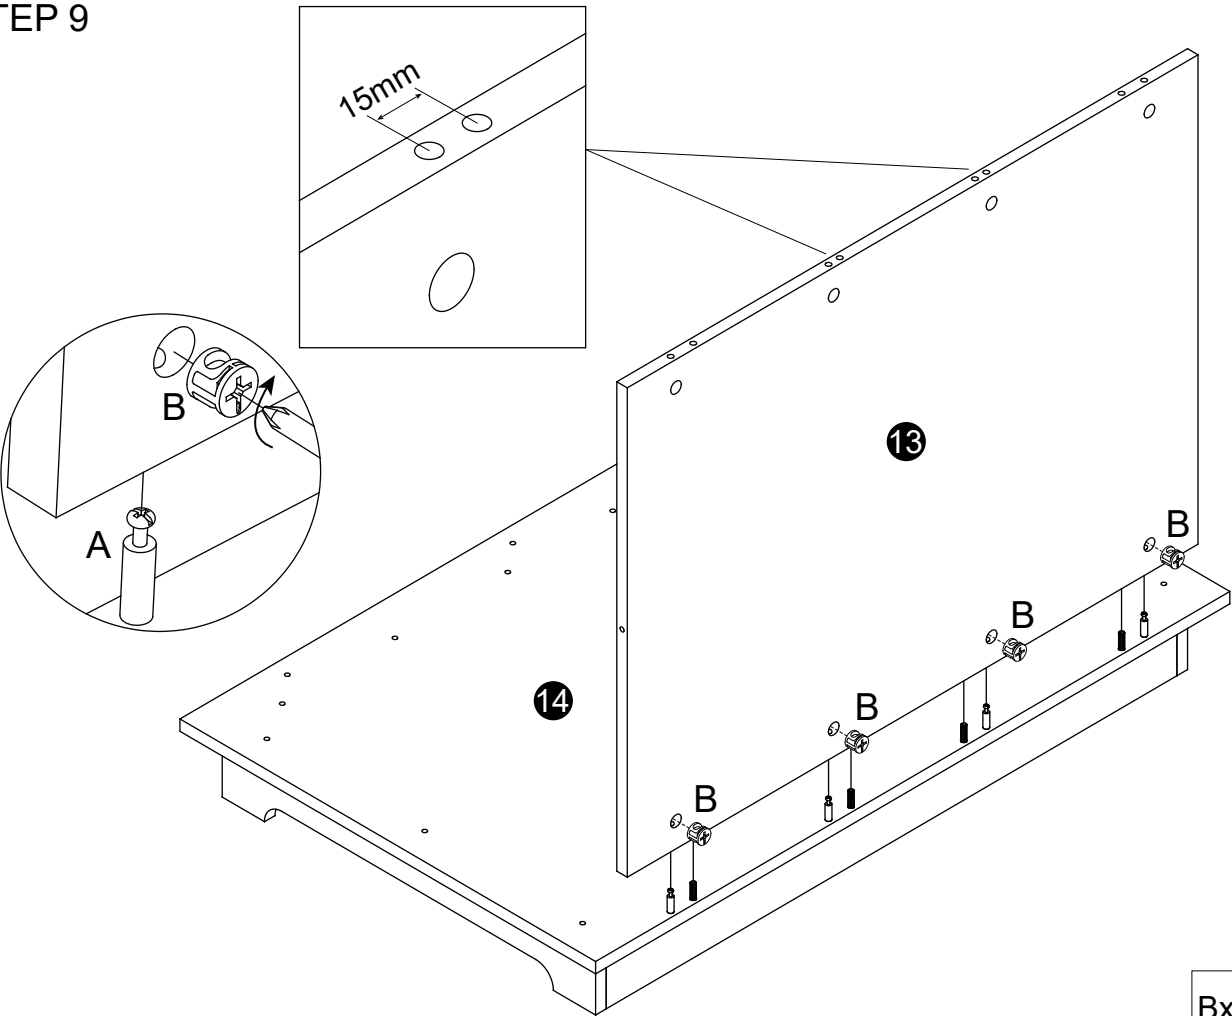


Bx4




STEP 10

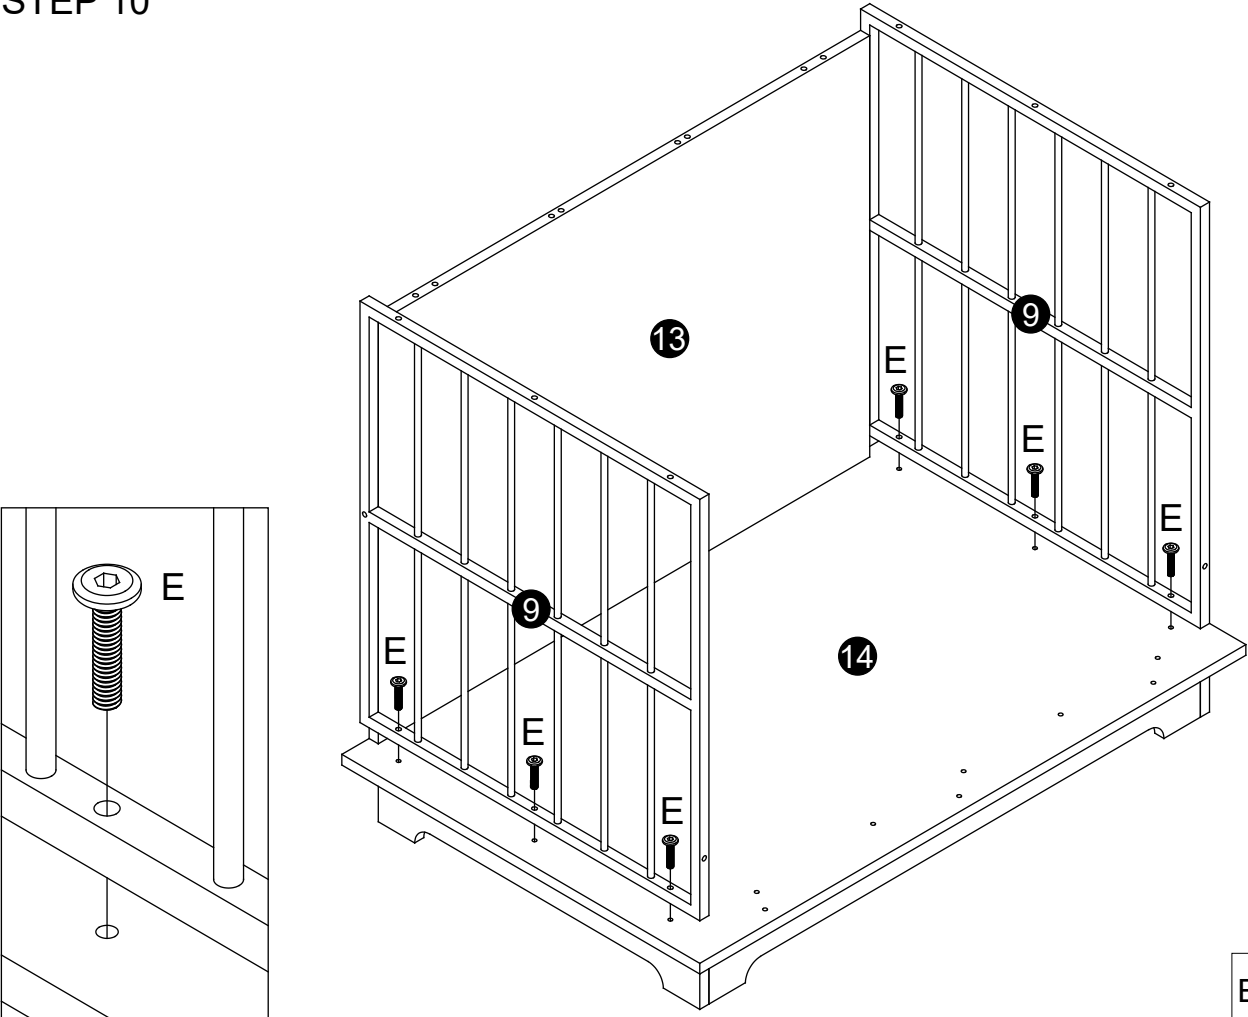


Ex6




STEP 11

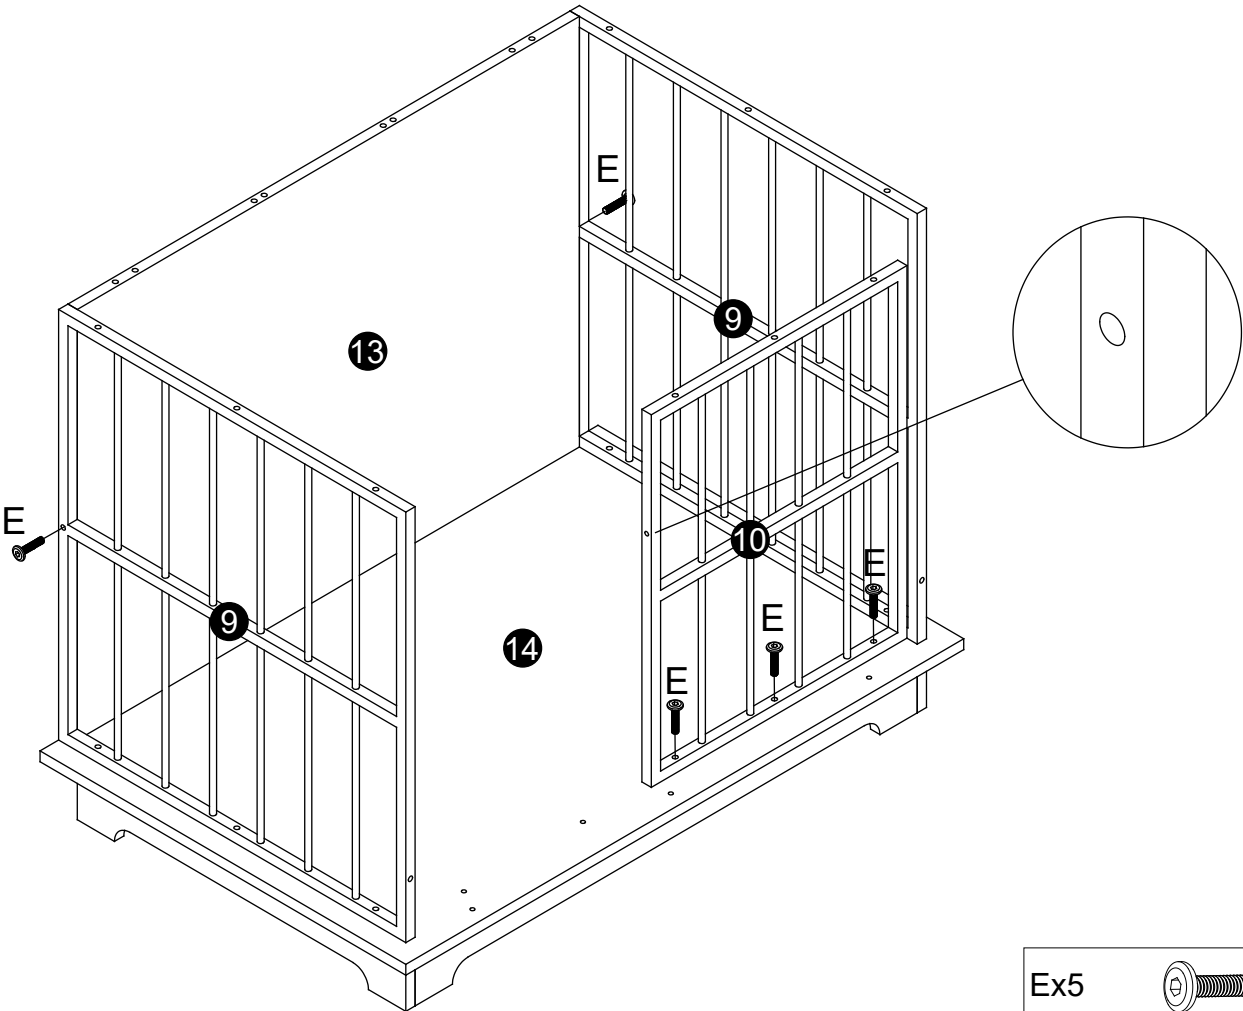


Ex5




STEP 12

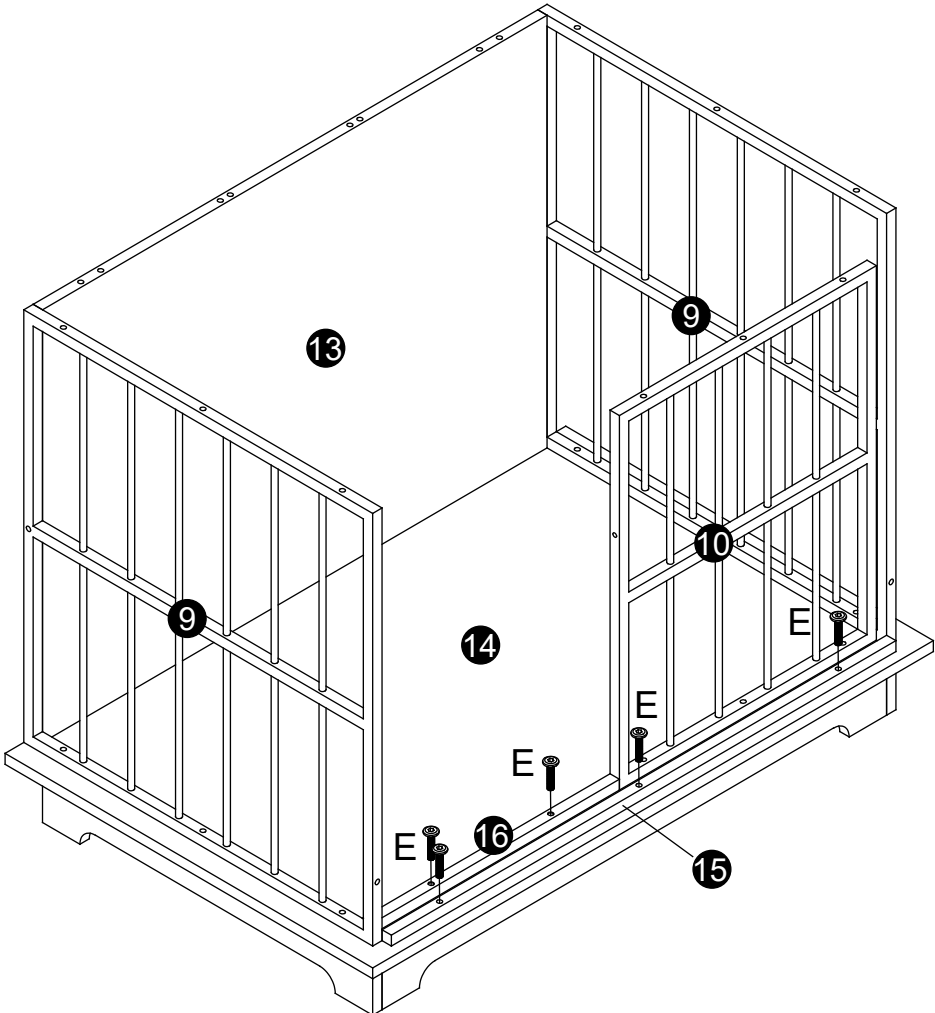


Ex5




STEP 13

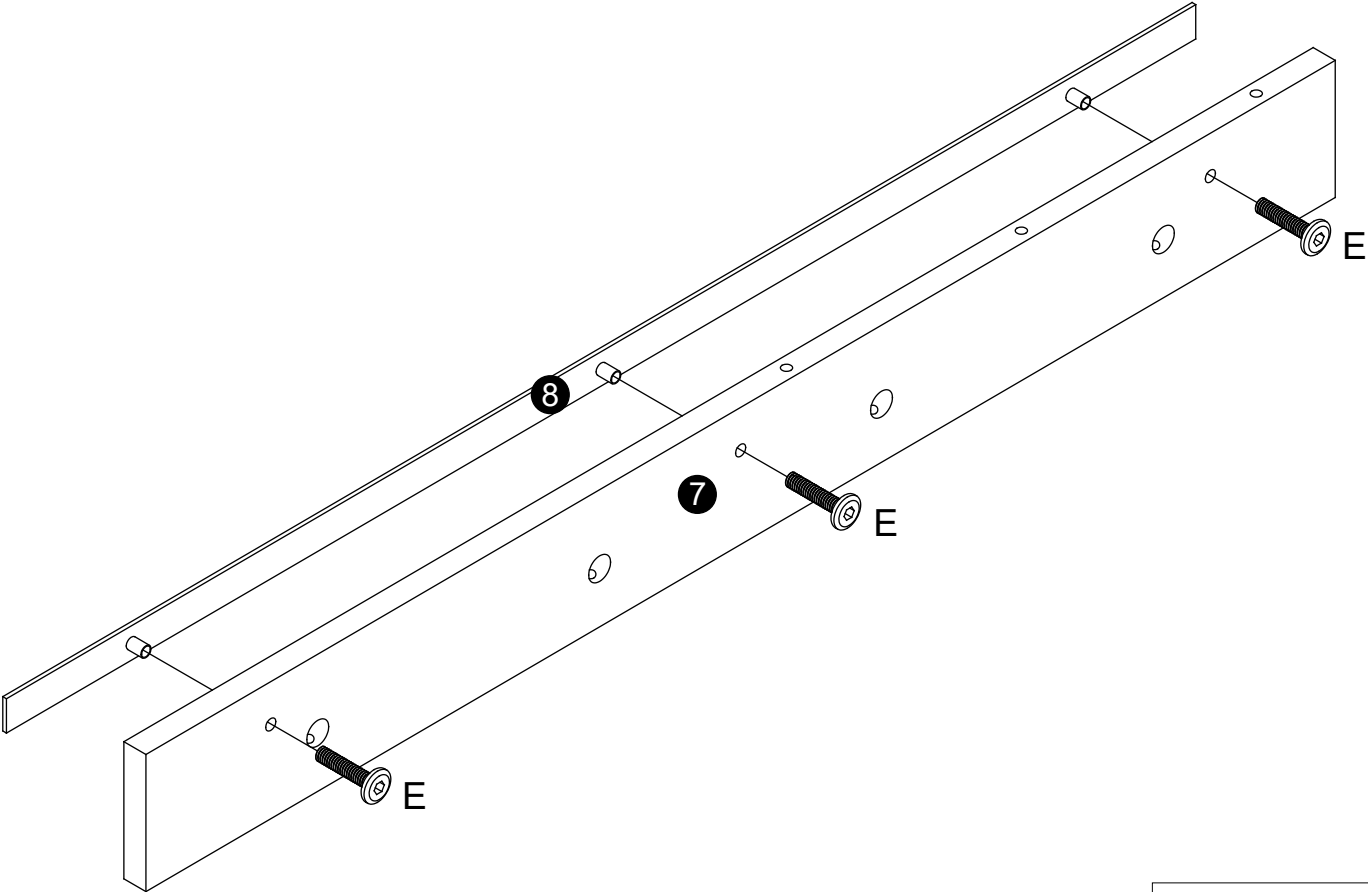


Ex3




STEP 14

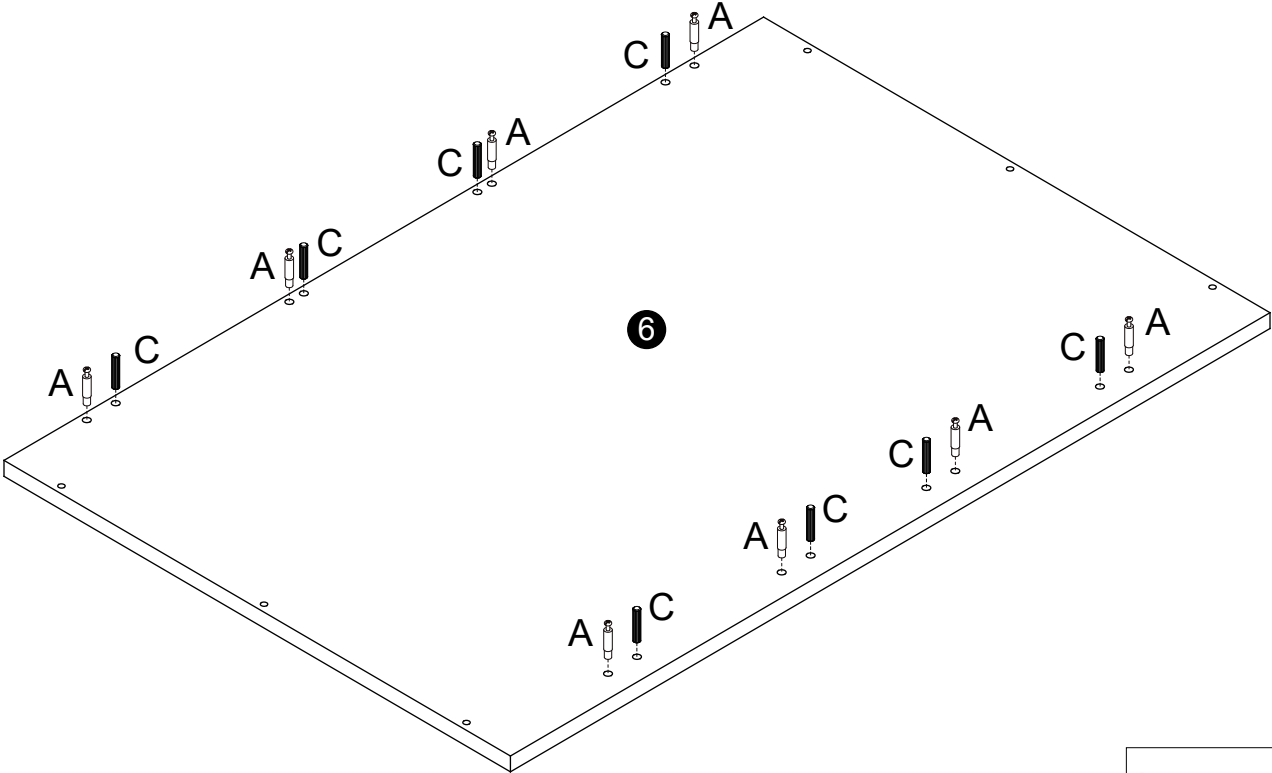


Ax8



Cx8




STEP 15

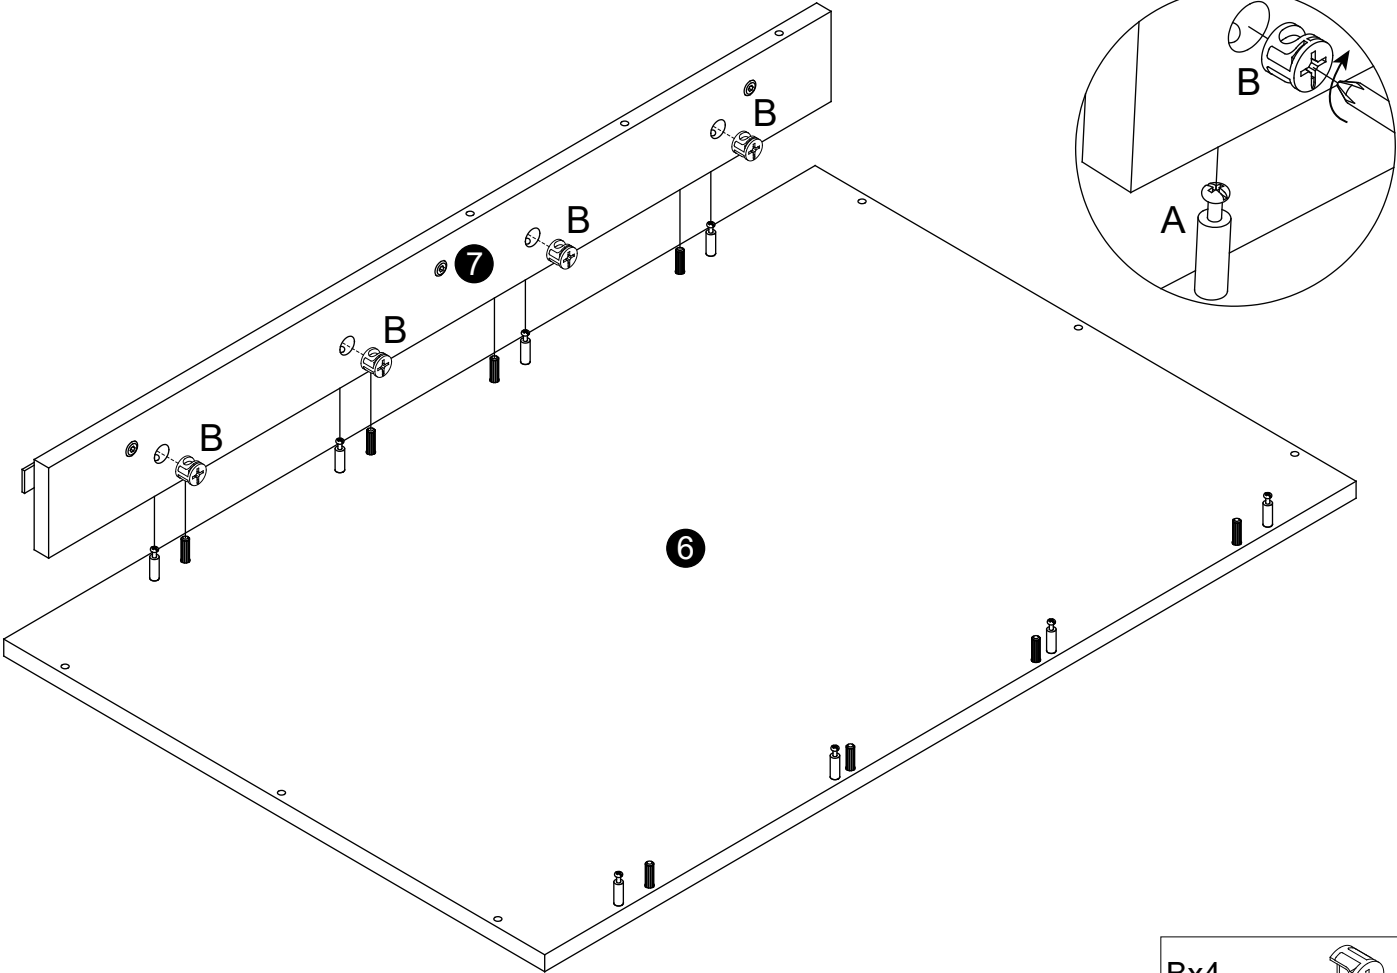

Bx4





STEP 16

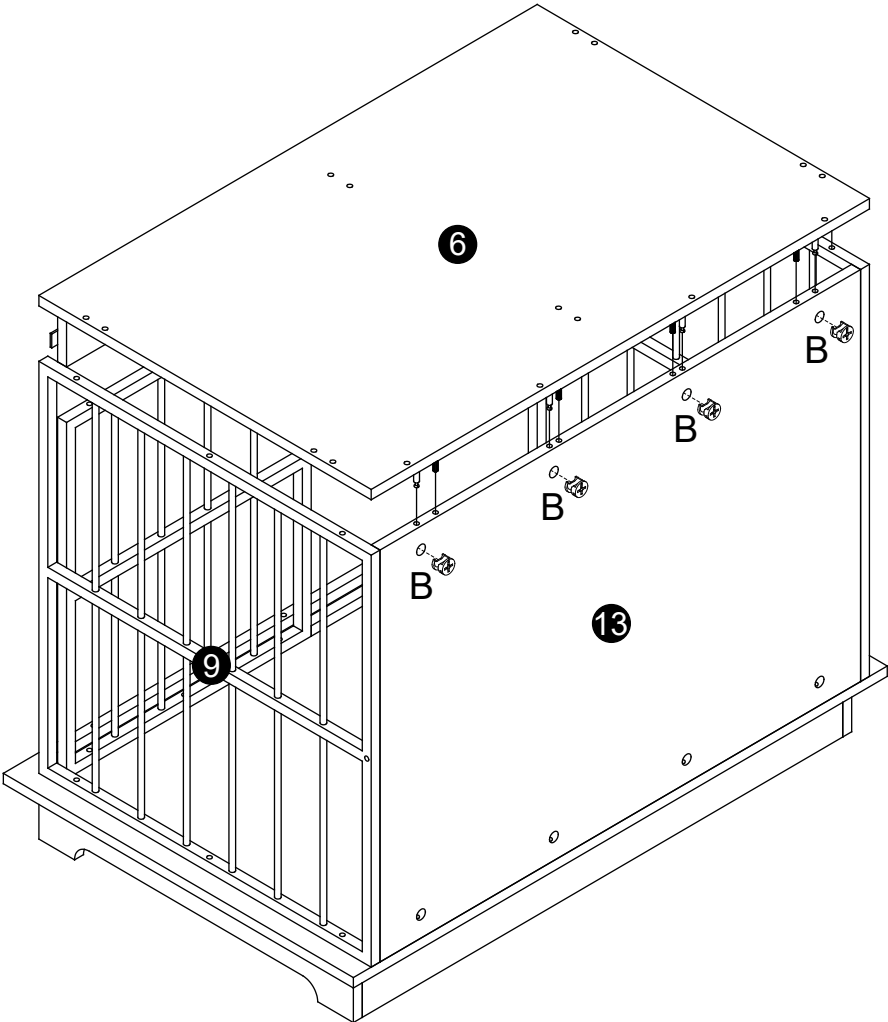



Bx4





STEP 17

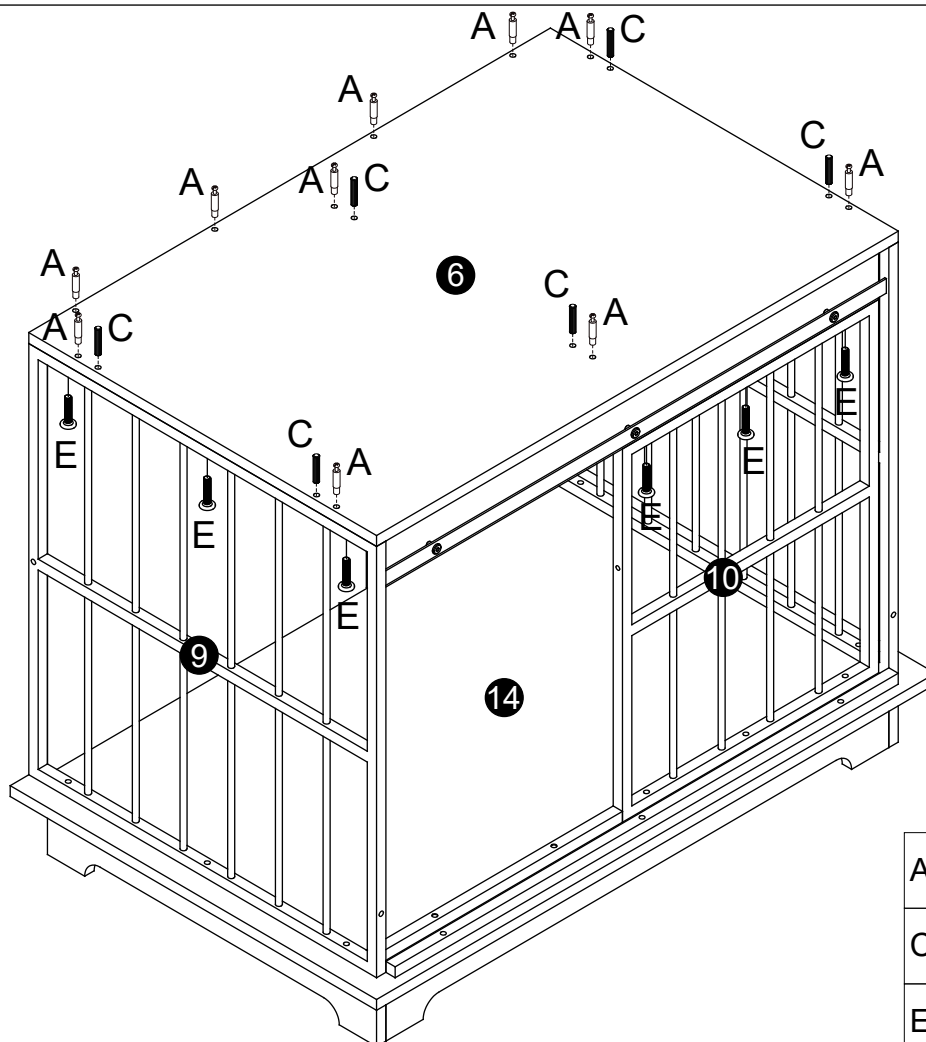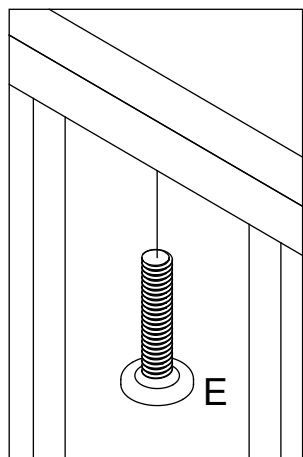


STEP 18


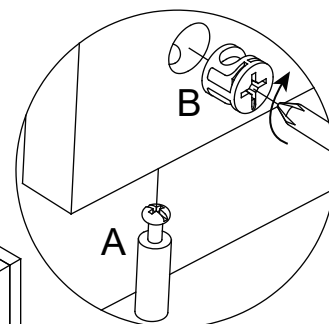
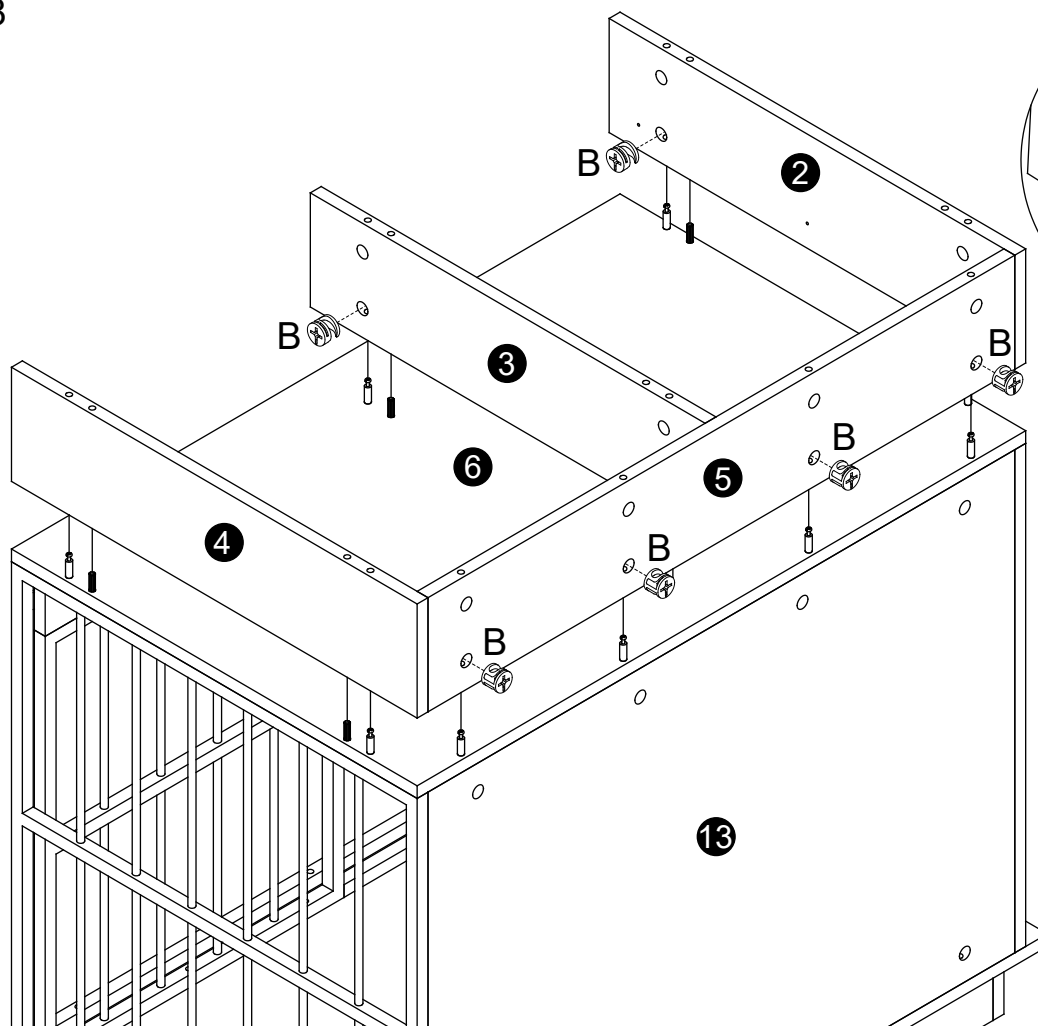


STEP 19

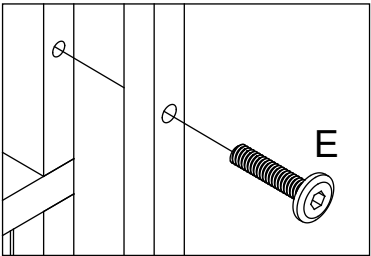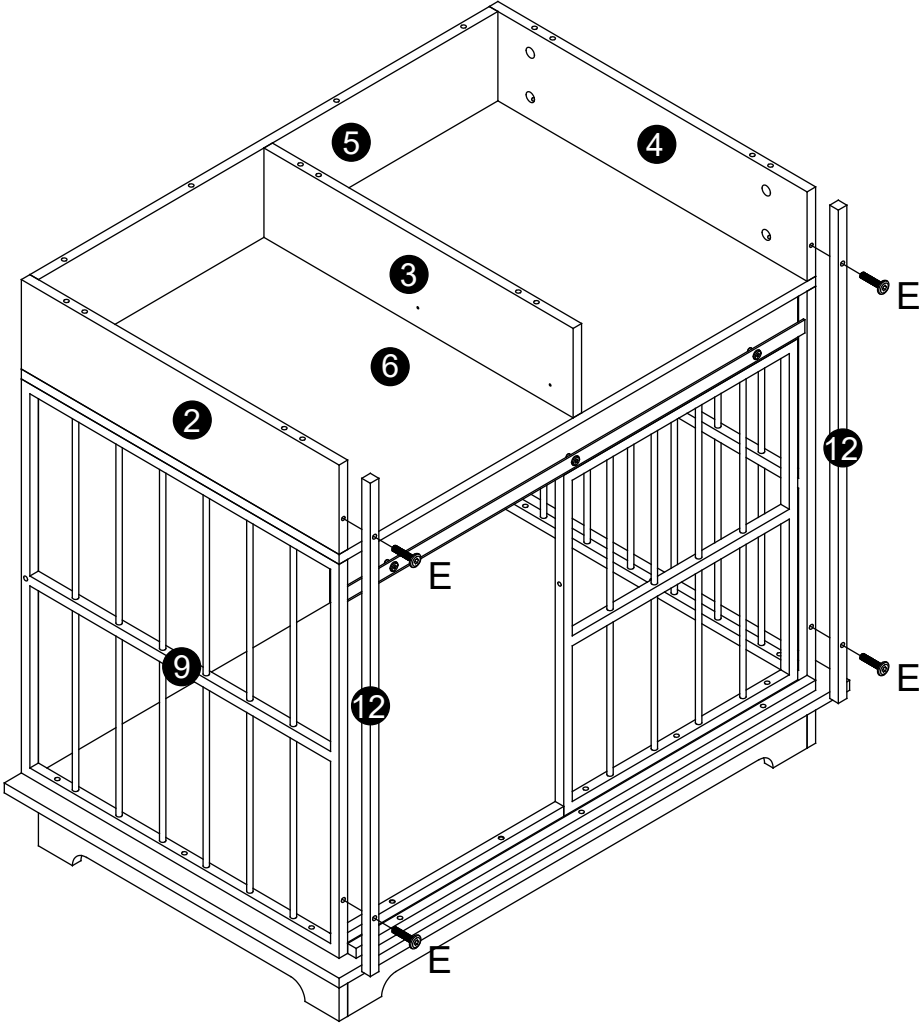

Ex4 



STEP 20

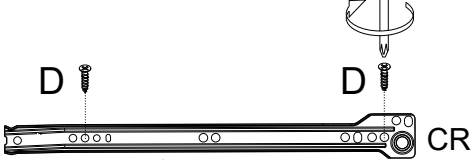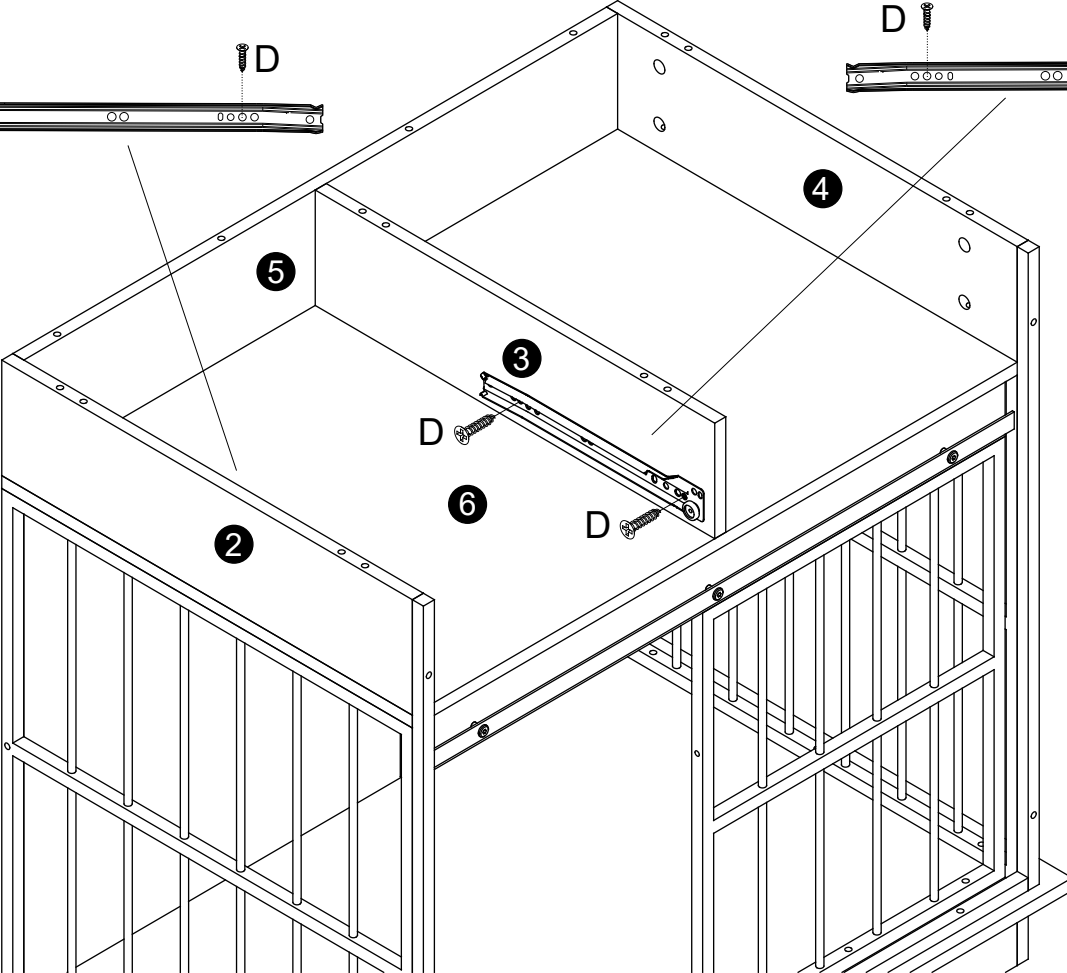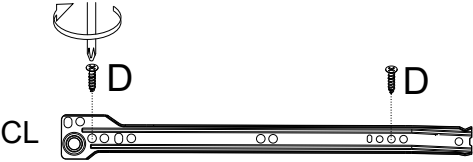



Dx4 

Nx1 


STEP 21

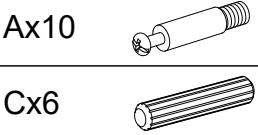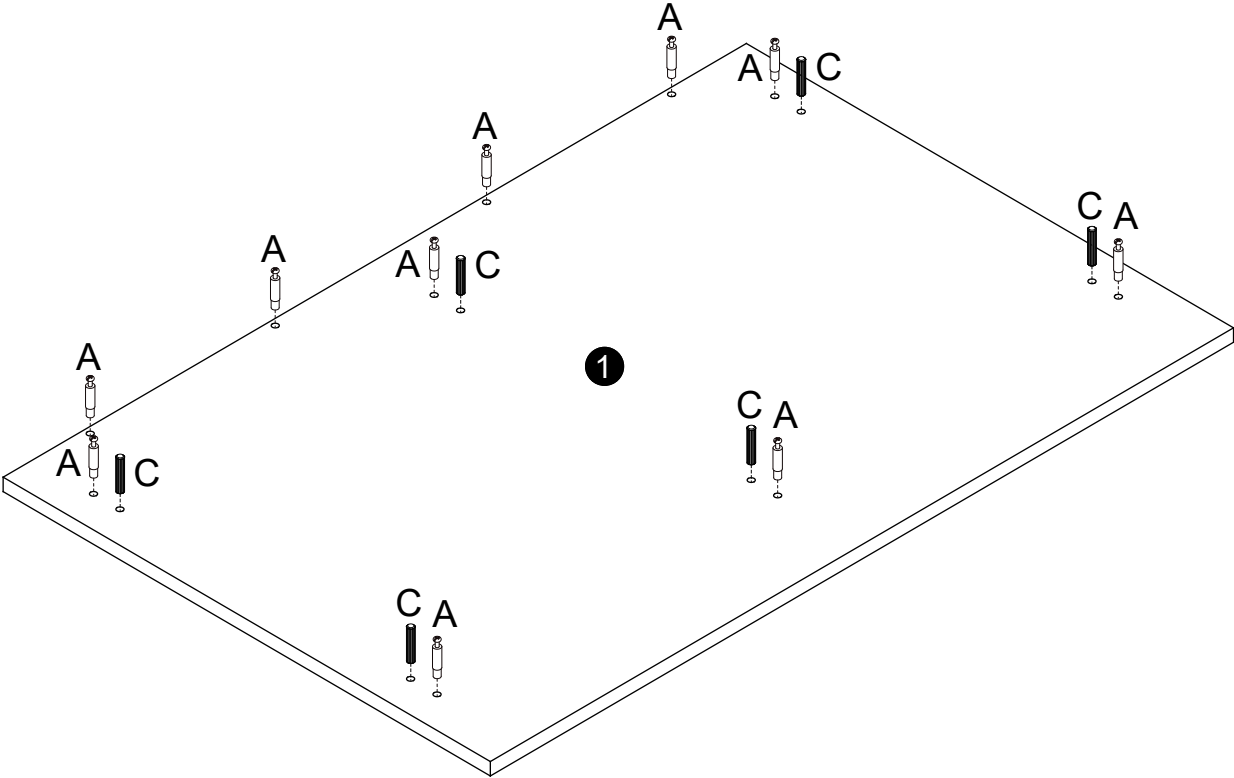


STEP 22

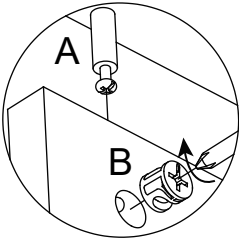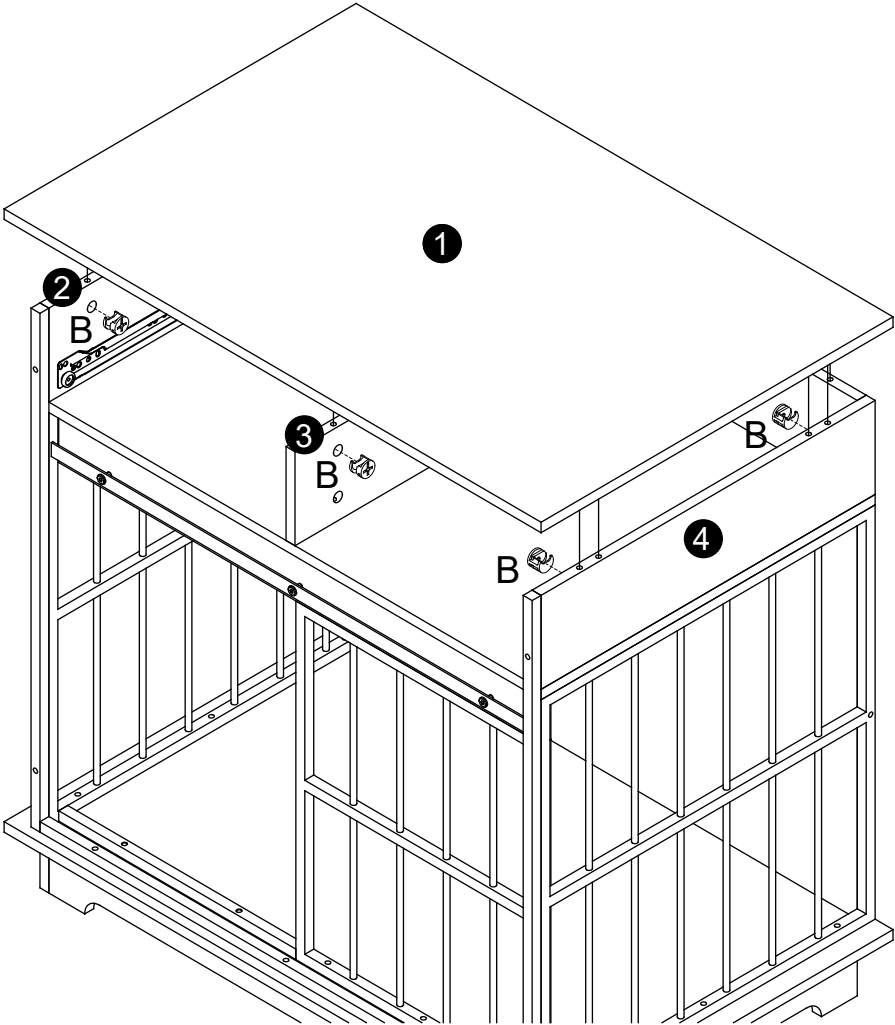


STEP 23

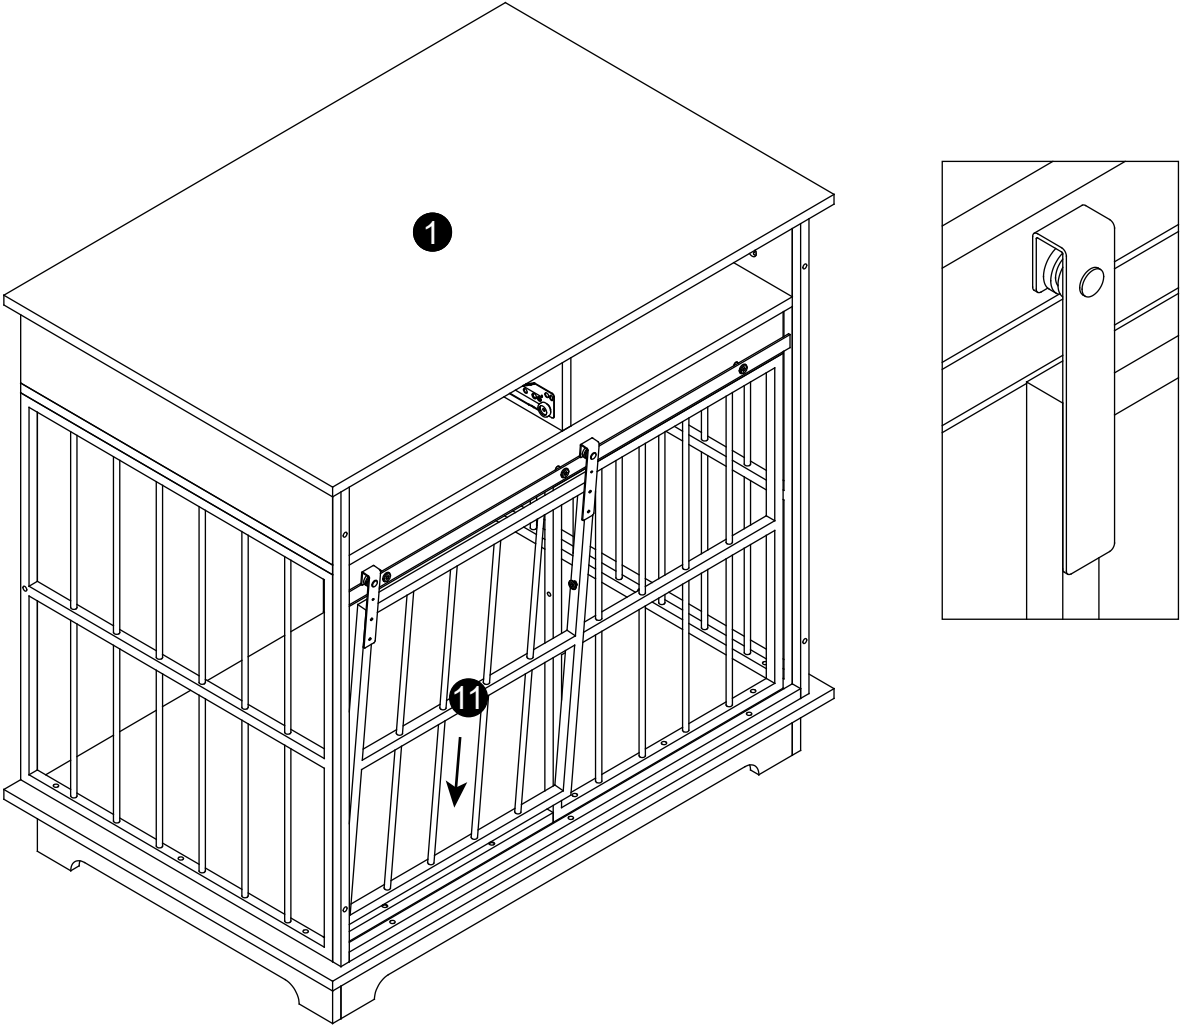

STEP 24

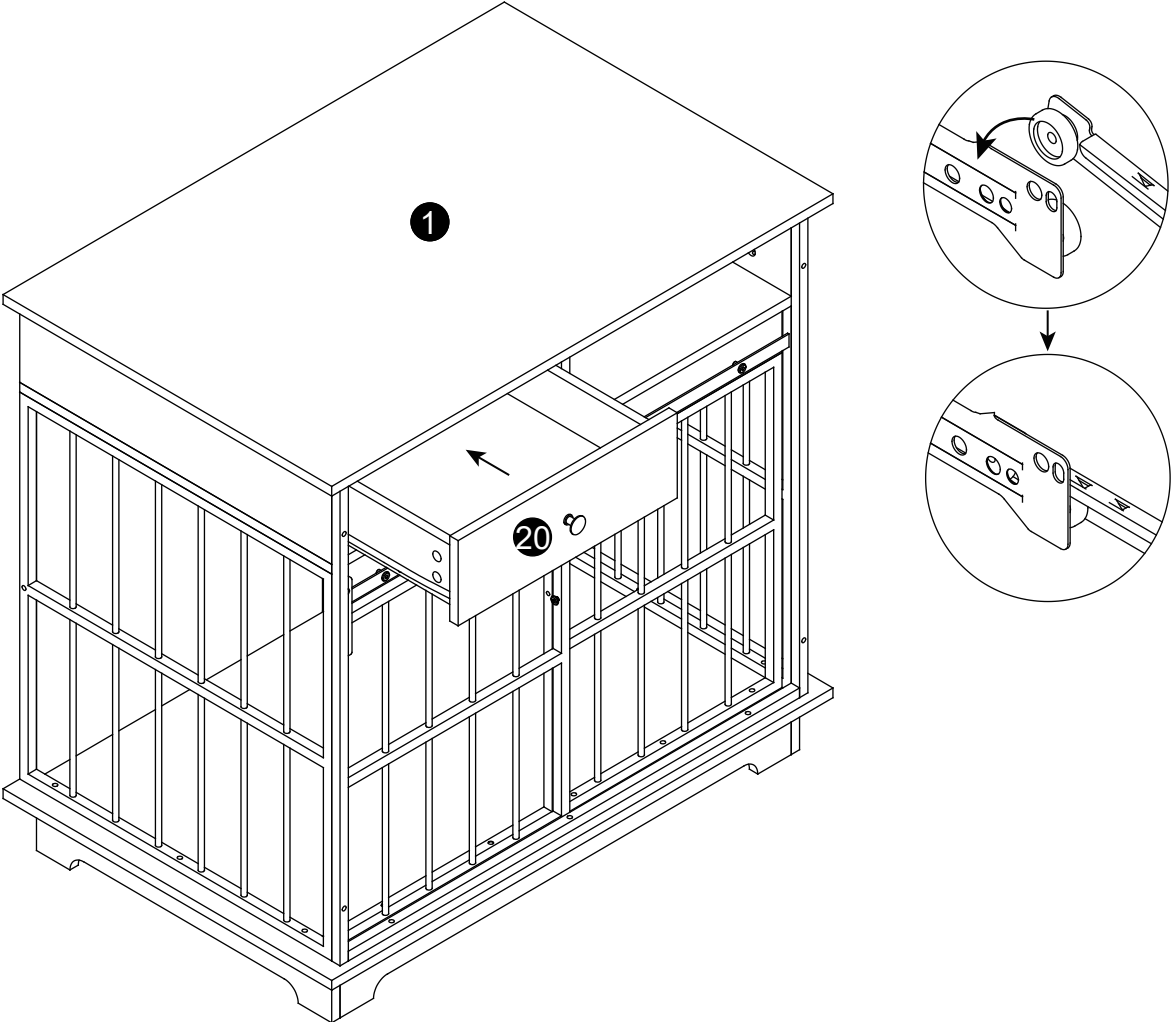

STEP 25

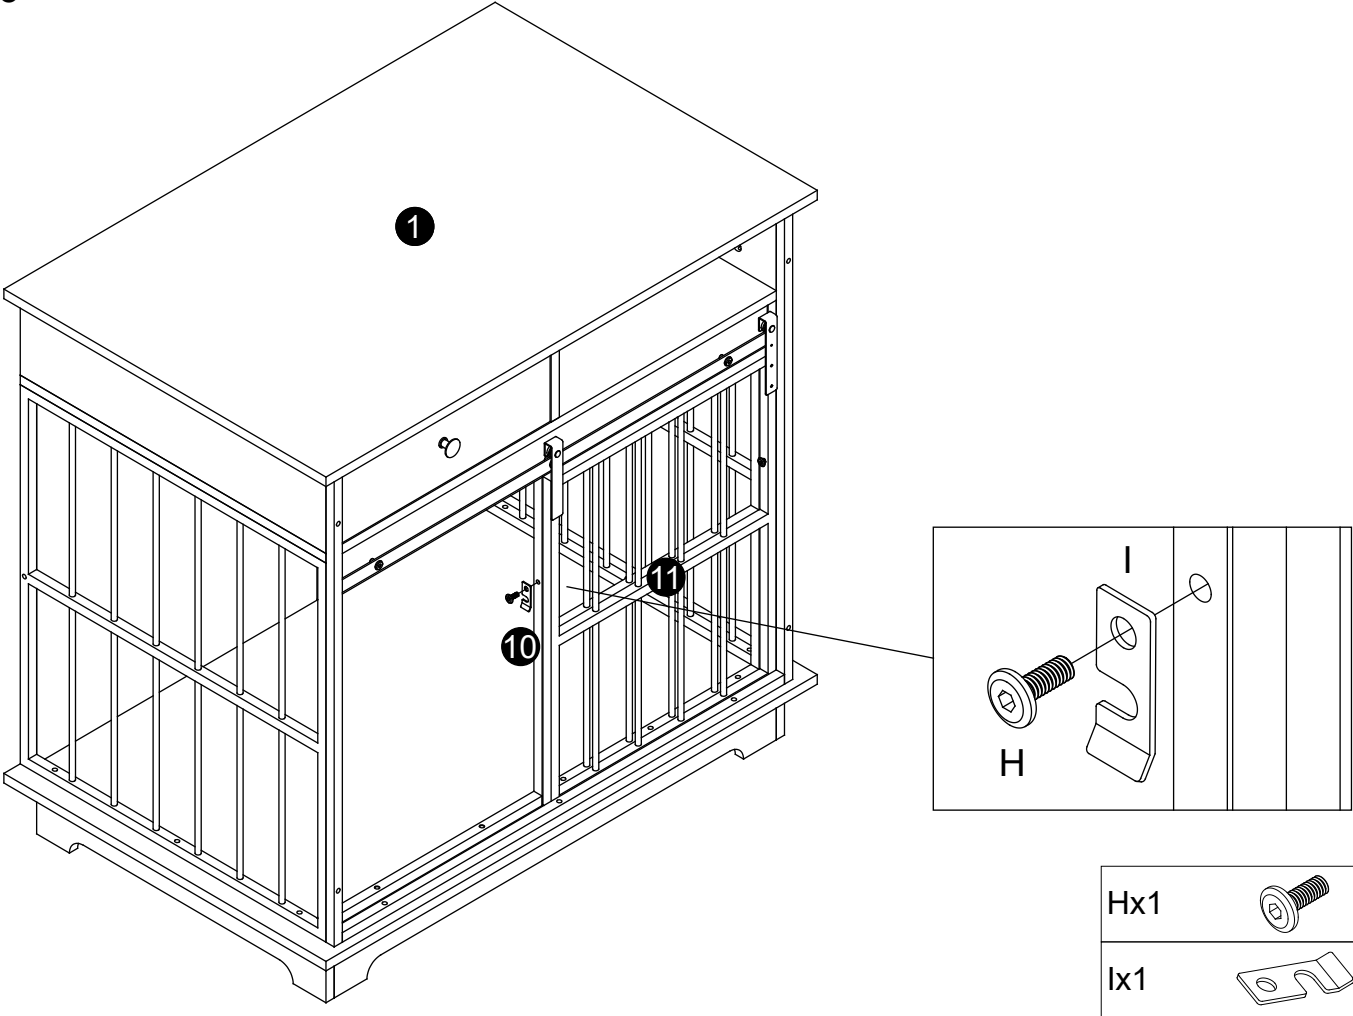

STEP 26

Glue the J part if needed

