
#### INSTALLATION INSTRUCTIONS FOR FIFTH FLOOR FILE CABINET

#### SKUI

DSN039BN001A DSN039WN008A DSN039DG010A DSN039BG012A DSN039GB031A DSN039BN002A DSN039WN013A DSN039DG015A DSN039BG017A DSN039GB032A DSN039BN001B DSN039GN009A DSN039GG011A DSN039BR027A DSN039BB033A DSN039GN014A DSN039GG016A DSN039BR028A

DSN039BN002B DSN039BB034A

10042

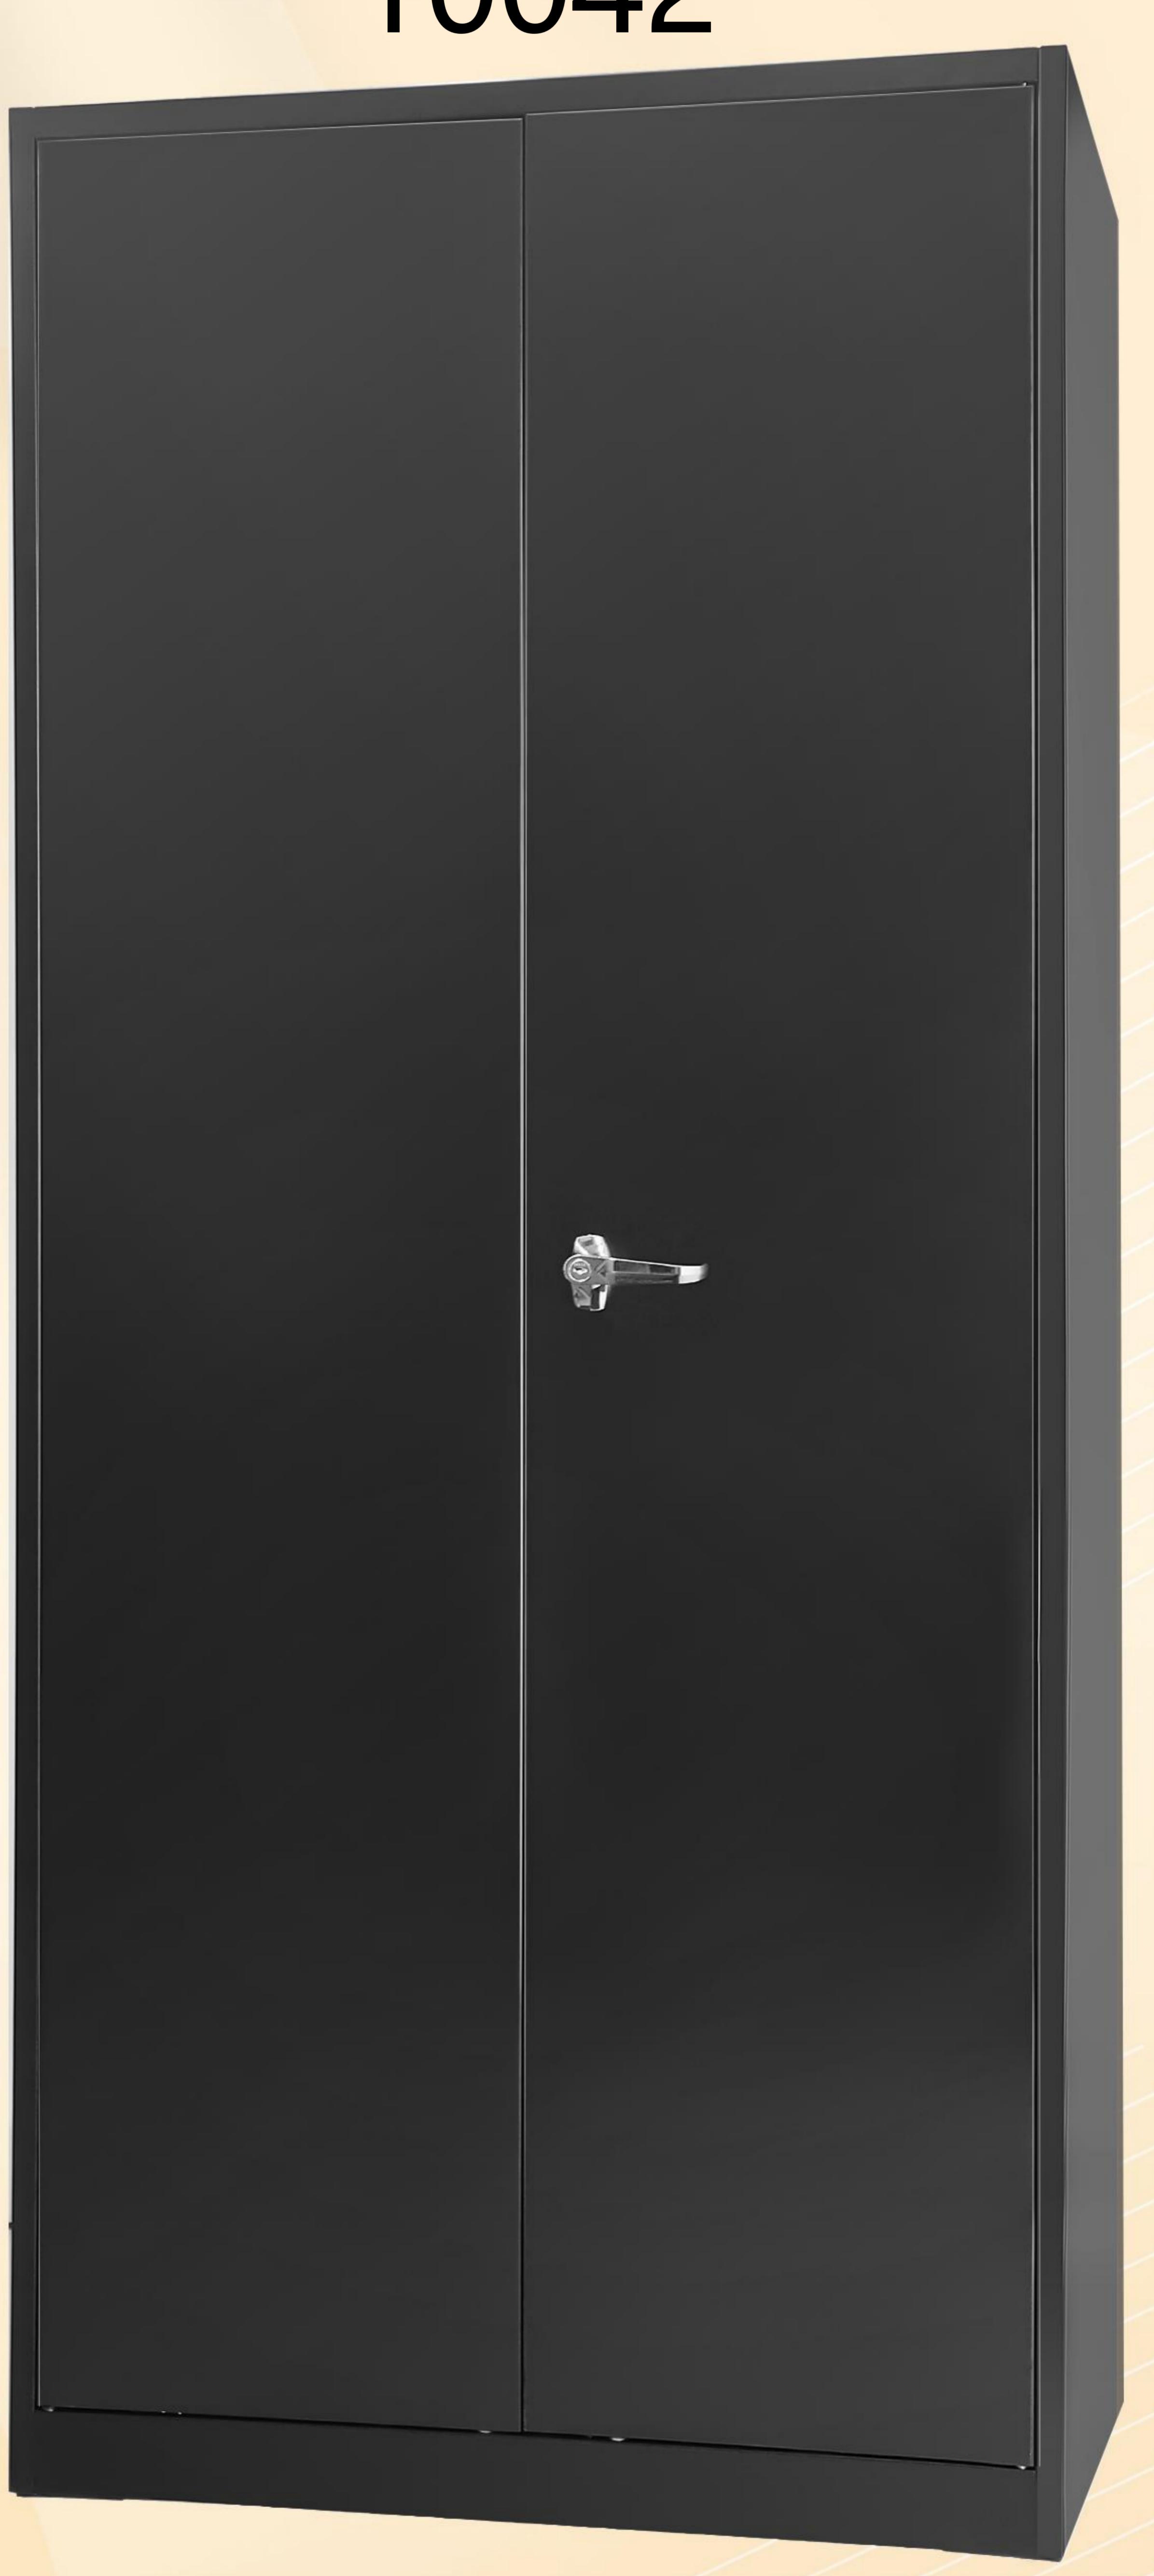

#### THANK YOU FOR CHOOSING US!

Your new Five layer steel cabinet has arrived and it will make your life so much easier. That's why we put so much effort into designing it to perfectly fit your needs.

But first things first, we need to install it!

When we say "we", we mean we're going to guide you, step by step. We created this instructions manual so that you won't feel overwhelmed and get your new cabinet up and ready to use in no time! We also know that sometimes things just don't seem to fit, so don't hesitate to drop us a line at help@amrecianoffice.com if you have questions or need help!

Anyway, this steel cabinet can't wait to be put into use, so let's assemble it!

## MISSING A PART? DON'T WORRY, WE GOTYOUR BACK!


Compare the sketch on the next page with your package. Are all the pieces there? However, sometimes errors happen, so if anything is missing just send us an email and we will make sure to fix it!

#### Before you start, here are a few quick pointers:

The installation requires two people. so call a friend to join the fun!

For more stability, it's best to anchor the cabinet to the wall. In this case, along with the items provided you will also need a Level, Percussion Drill and a Hammer



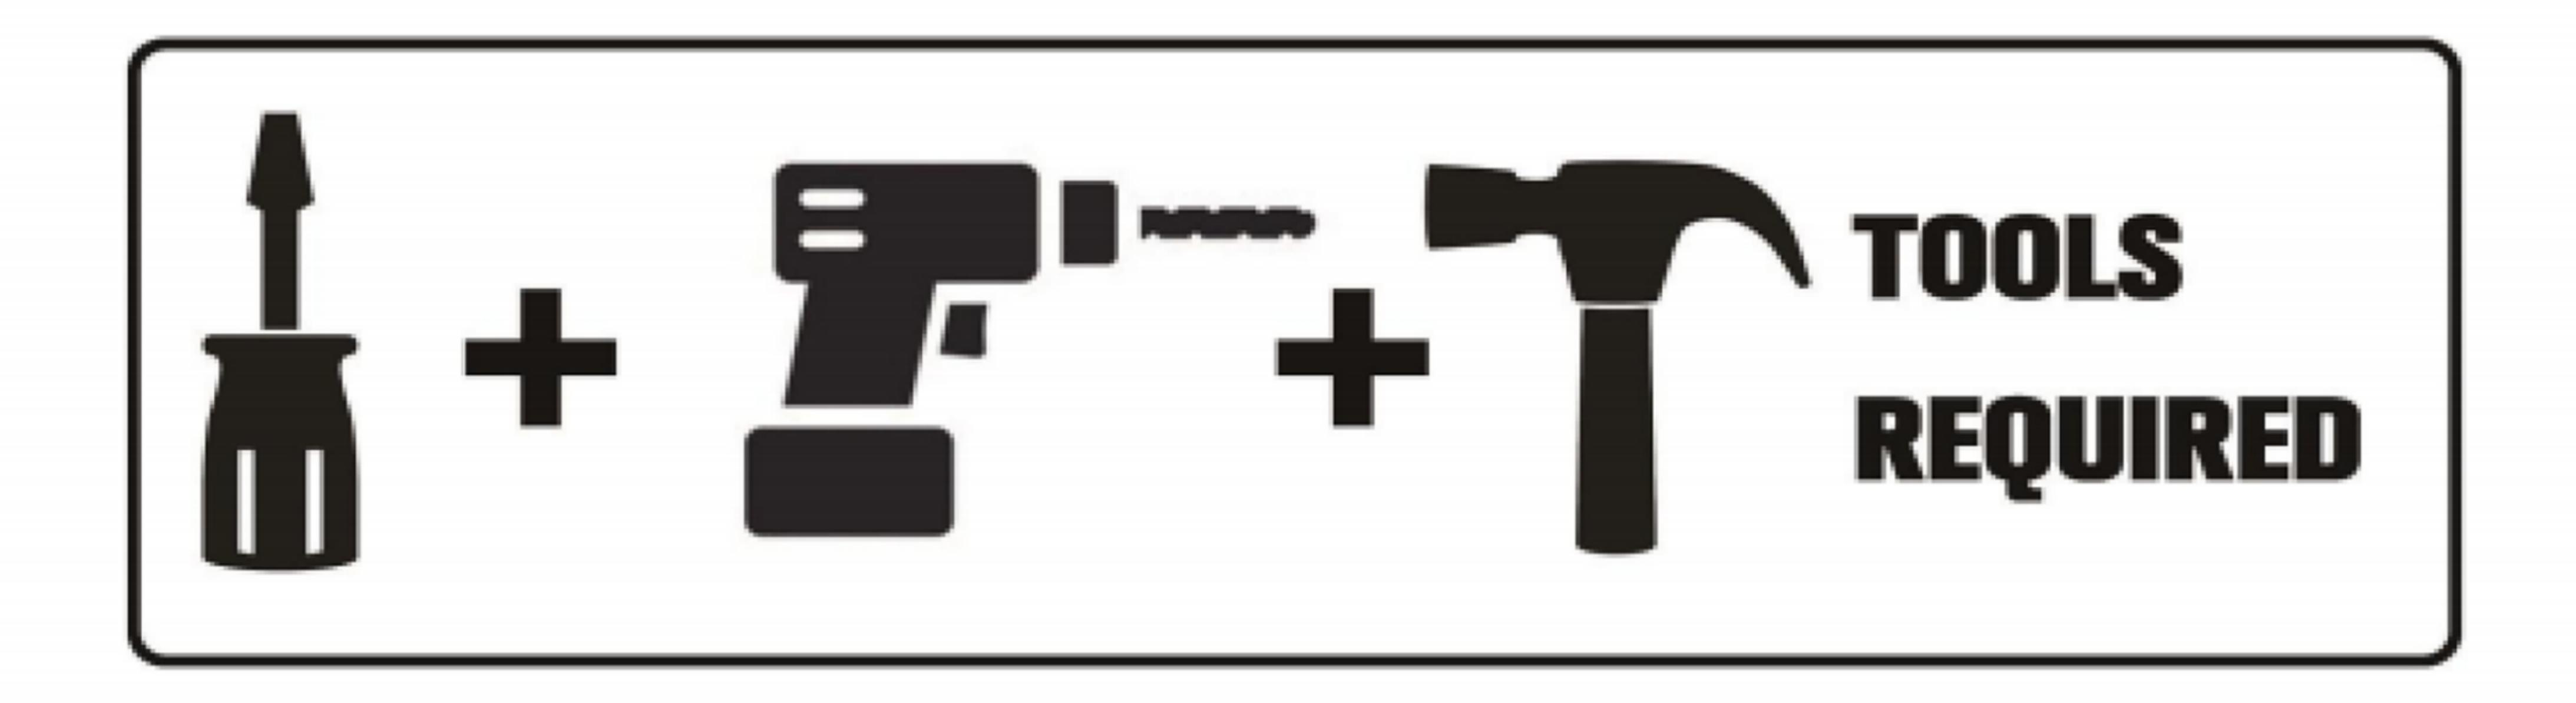



#### 

#### 


	0042						
Name		Part	Qty.		Name	Part	Qty.
A	Left back panel		1	N	Bottom fixing parts		4
В	Right back panel	•	1	0	Laminated buckle		16
C	Left side panel		1	P	Partition pin		2
D	Right side panel		1	Q	Anti-collision soft plug		4
E	Top bar		1	R	Anti tipping		2
F	Bottom bar		1	S	Door lock		1
G	Top cover		1	T	Plastic Cap		2
H	Bottom cover		1	U	Lifting rod		2
	Partition board		4	V	Top door fixing parts		2
J	Left door		1	W	Glove		1
K	Right door	•	1	X	Screwdriver		1
	Screw		35				
	Nut screw		4				




Connect panel  $\underline{A}$  and panel  $\underline{B}$  to each other, align the hole position, and secure with screw  $\underline{M}$ .



Connect panel  $\underline{\mathbb{C}}$  to panel  $\underline{\mathbb{A}}$  and panel  $\underline{\mathbb{D}}$  to panel  $\underline{\mathbb{B}}$ , then align the hole position and secure with screw  $\underline{\mathbb{L}}$ .

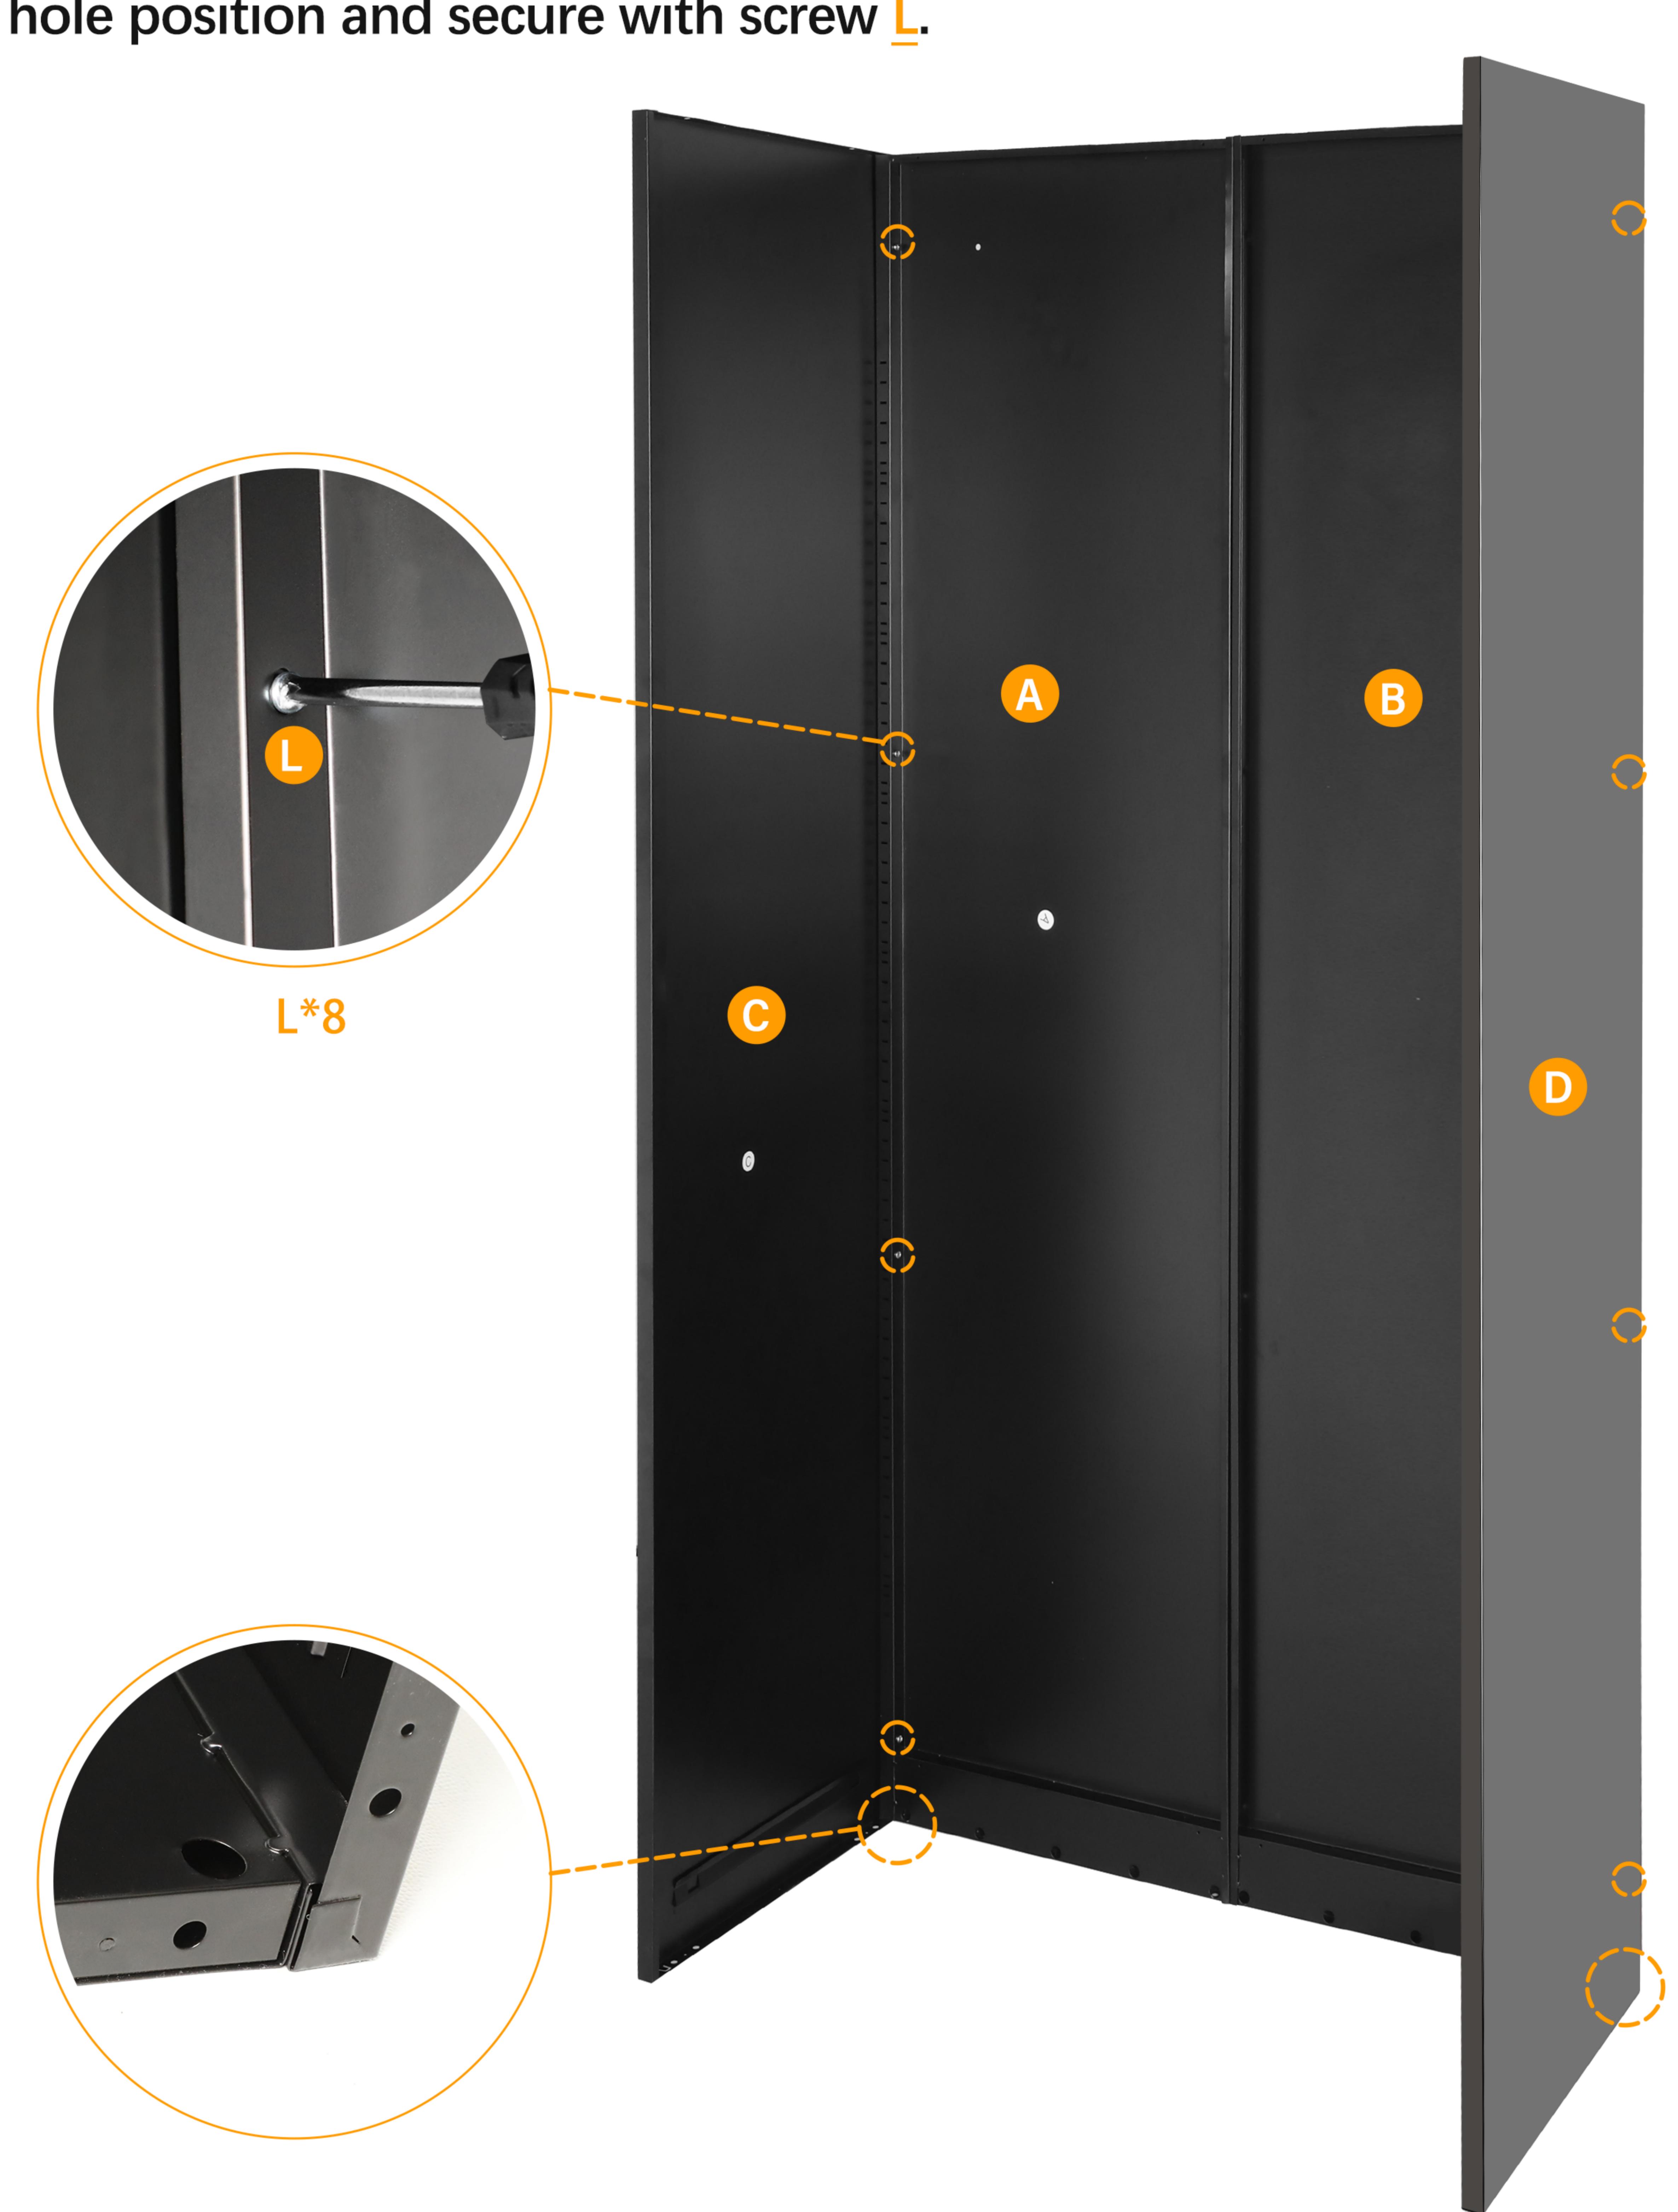


Set the frame  $\underline{\mathbf{E}}$  at the top of the  $\underline{\mathbf{C}}$   $\underline{\mathbf{D}}$  position. Drive two screws on

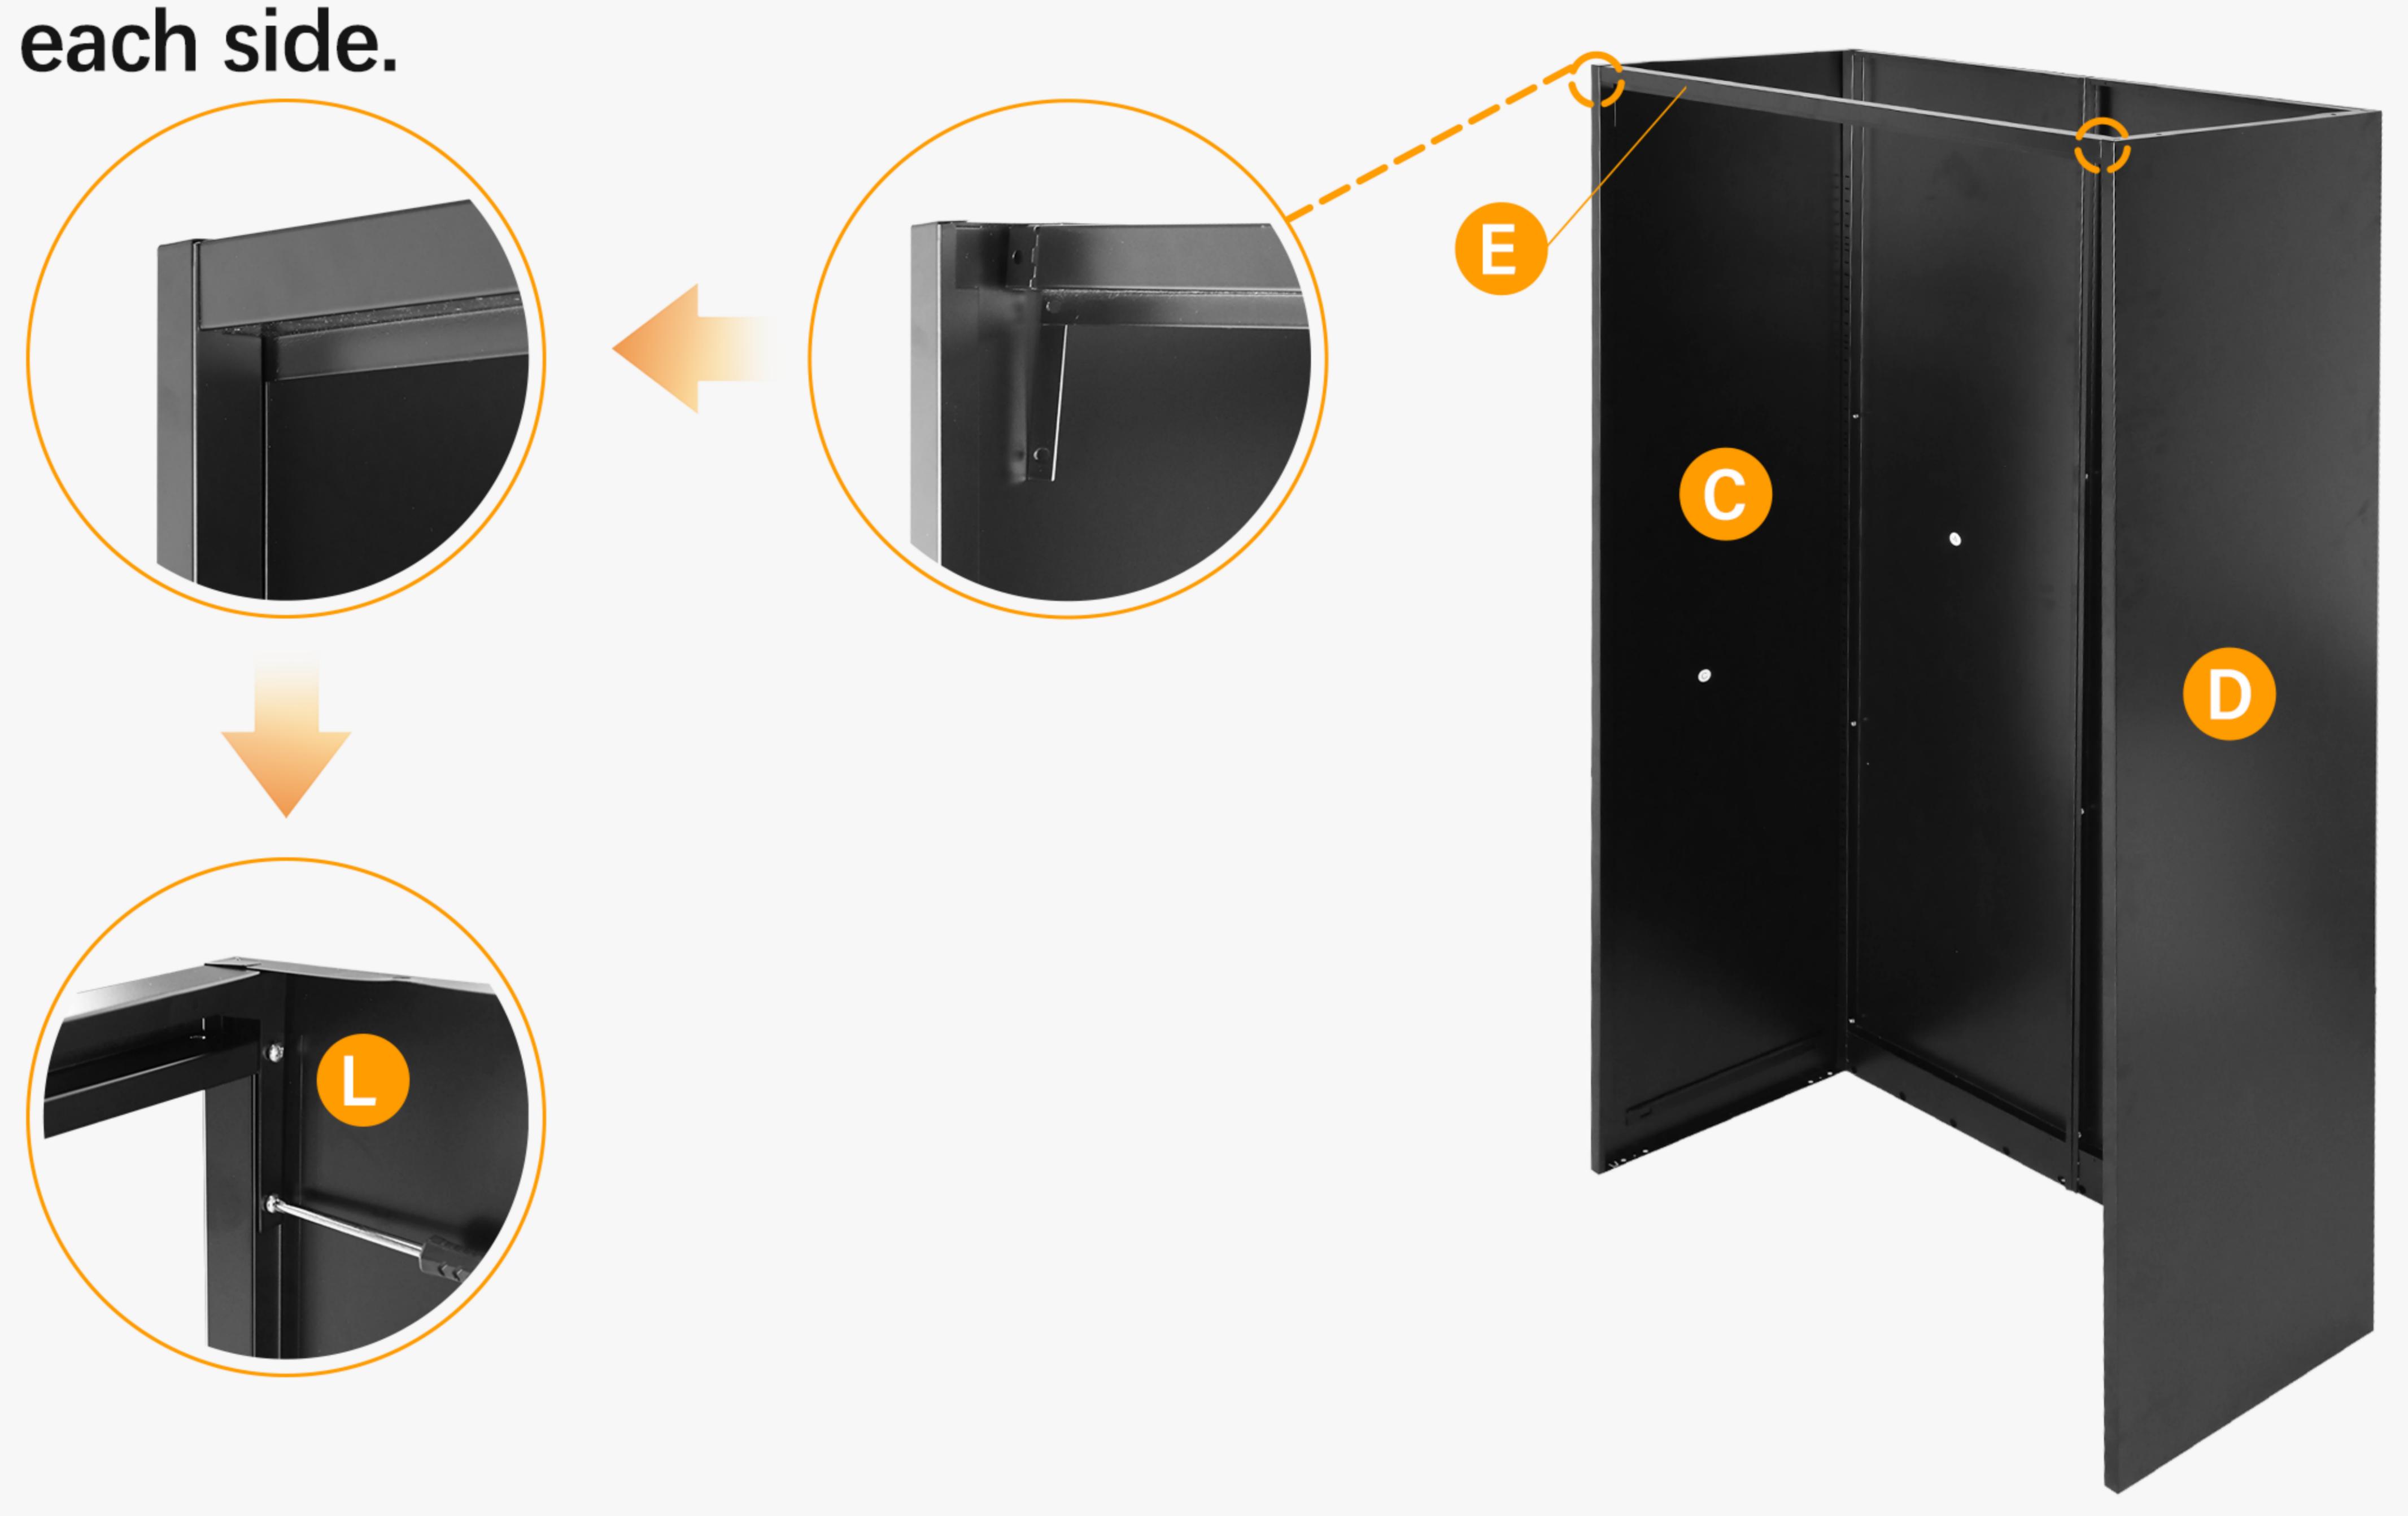

## STEP 4

Install the frame  $\underline{F}$  to the bottom of the  $\underline{C}$  and  $\underline{D}$ , and push the bottom opening position of the  $\underline{C}$  and  $\underline{D}$  up with the screw.

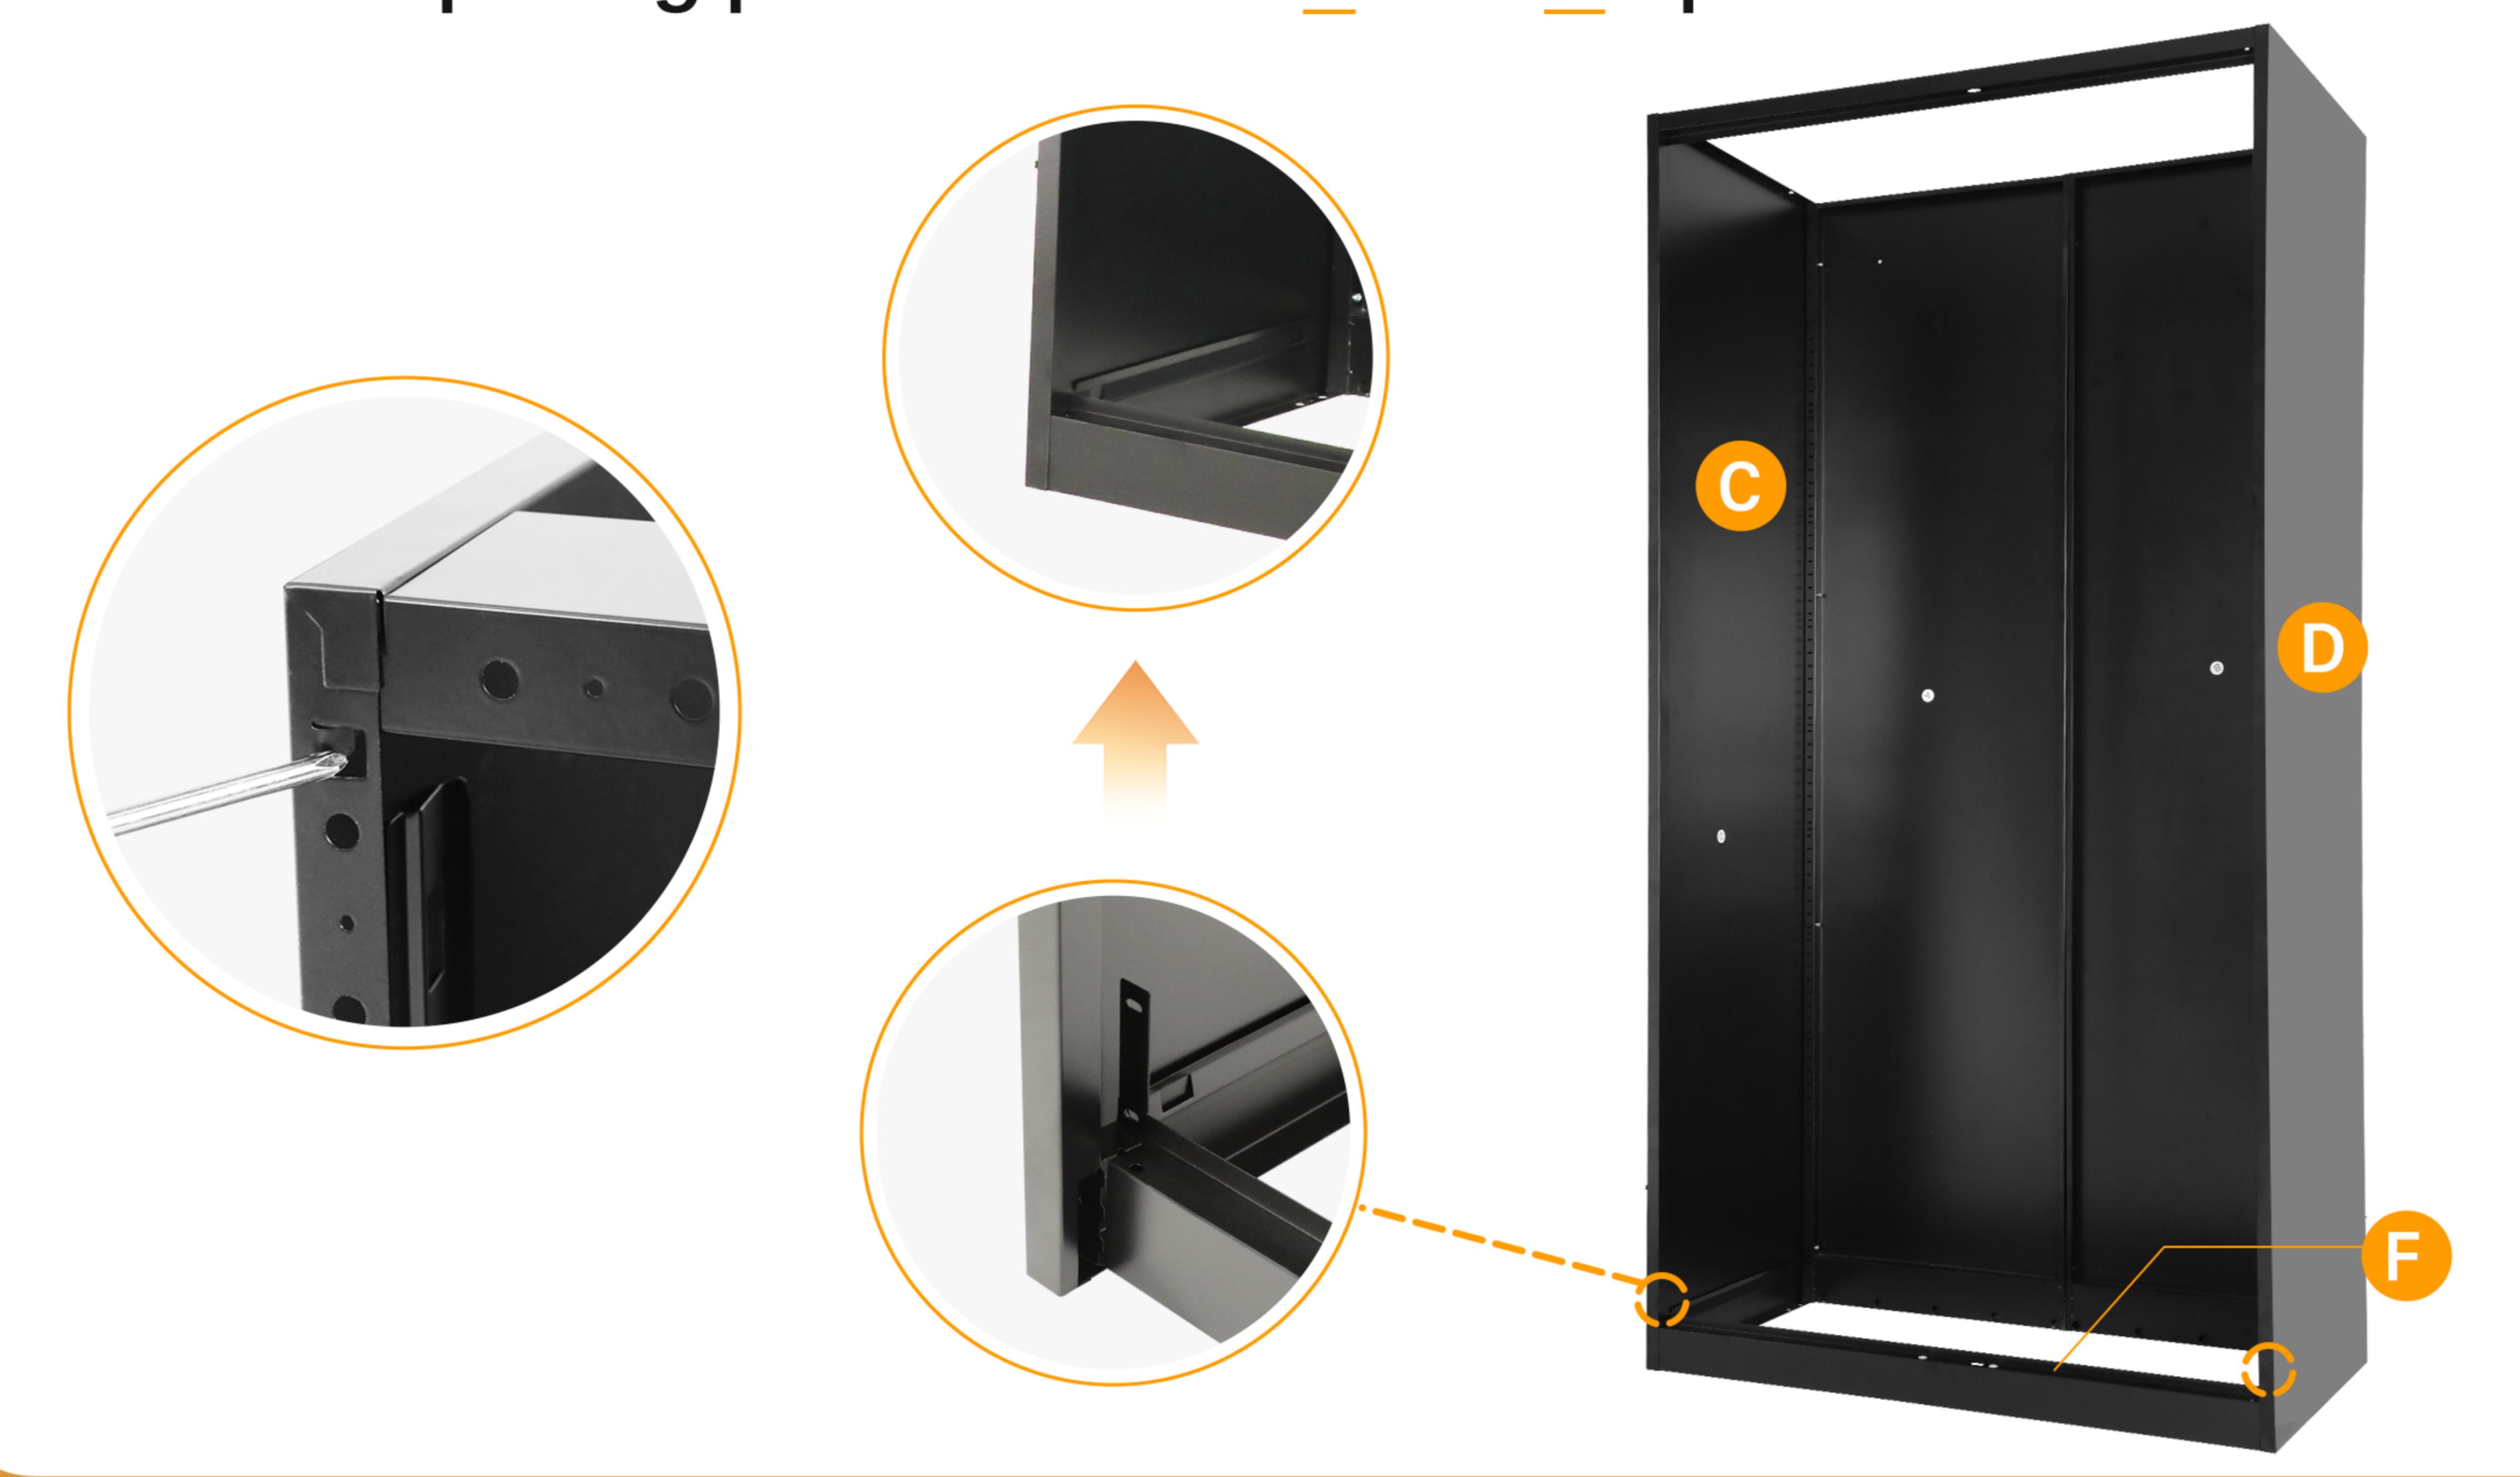


Connect C to F and D to F with four screws L.



## STEP 6

Push the top G from the bottom to the top position. Fixed with 7

screws\_\_.

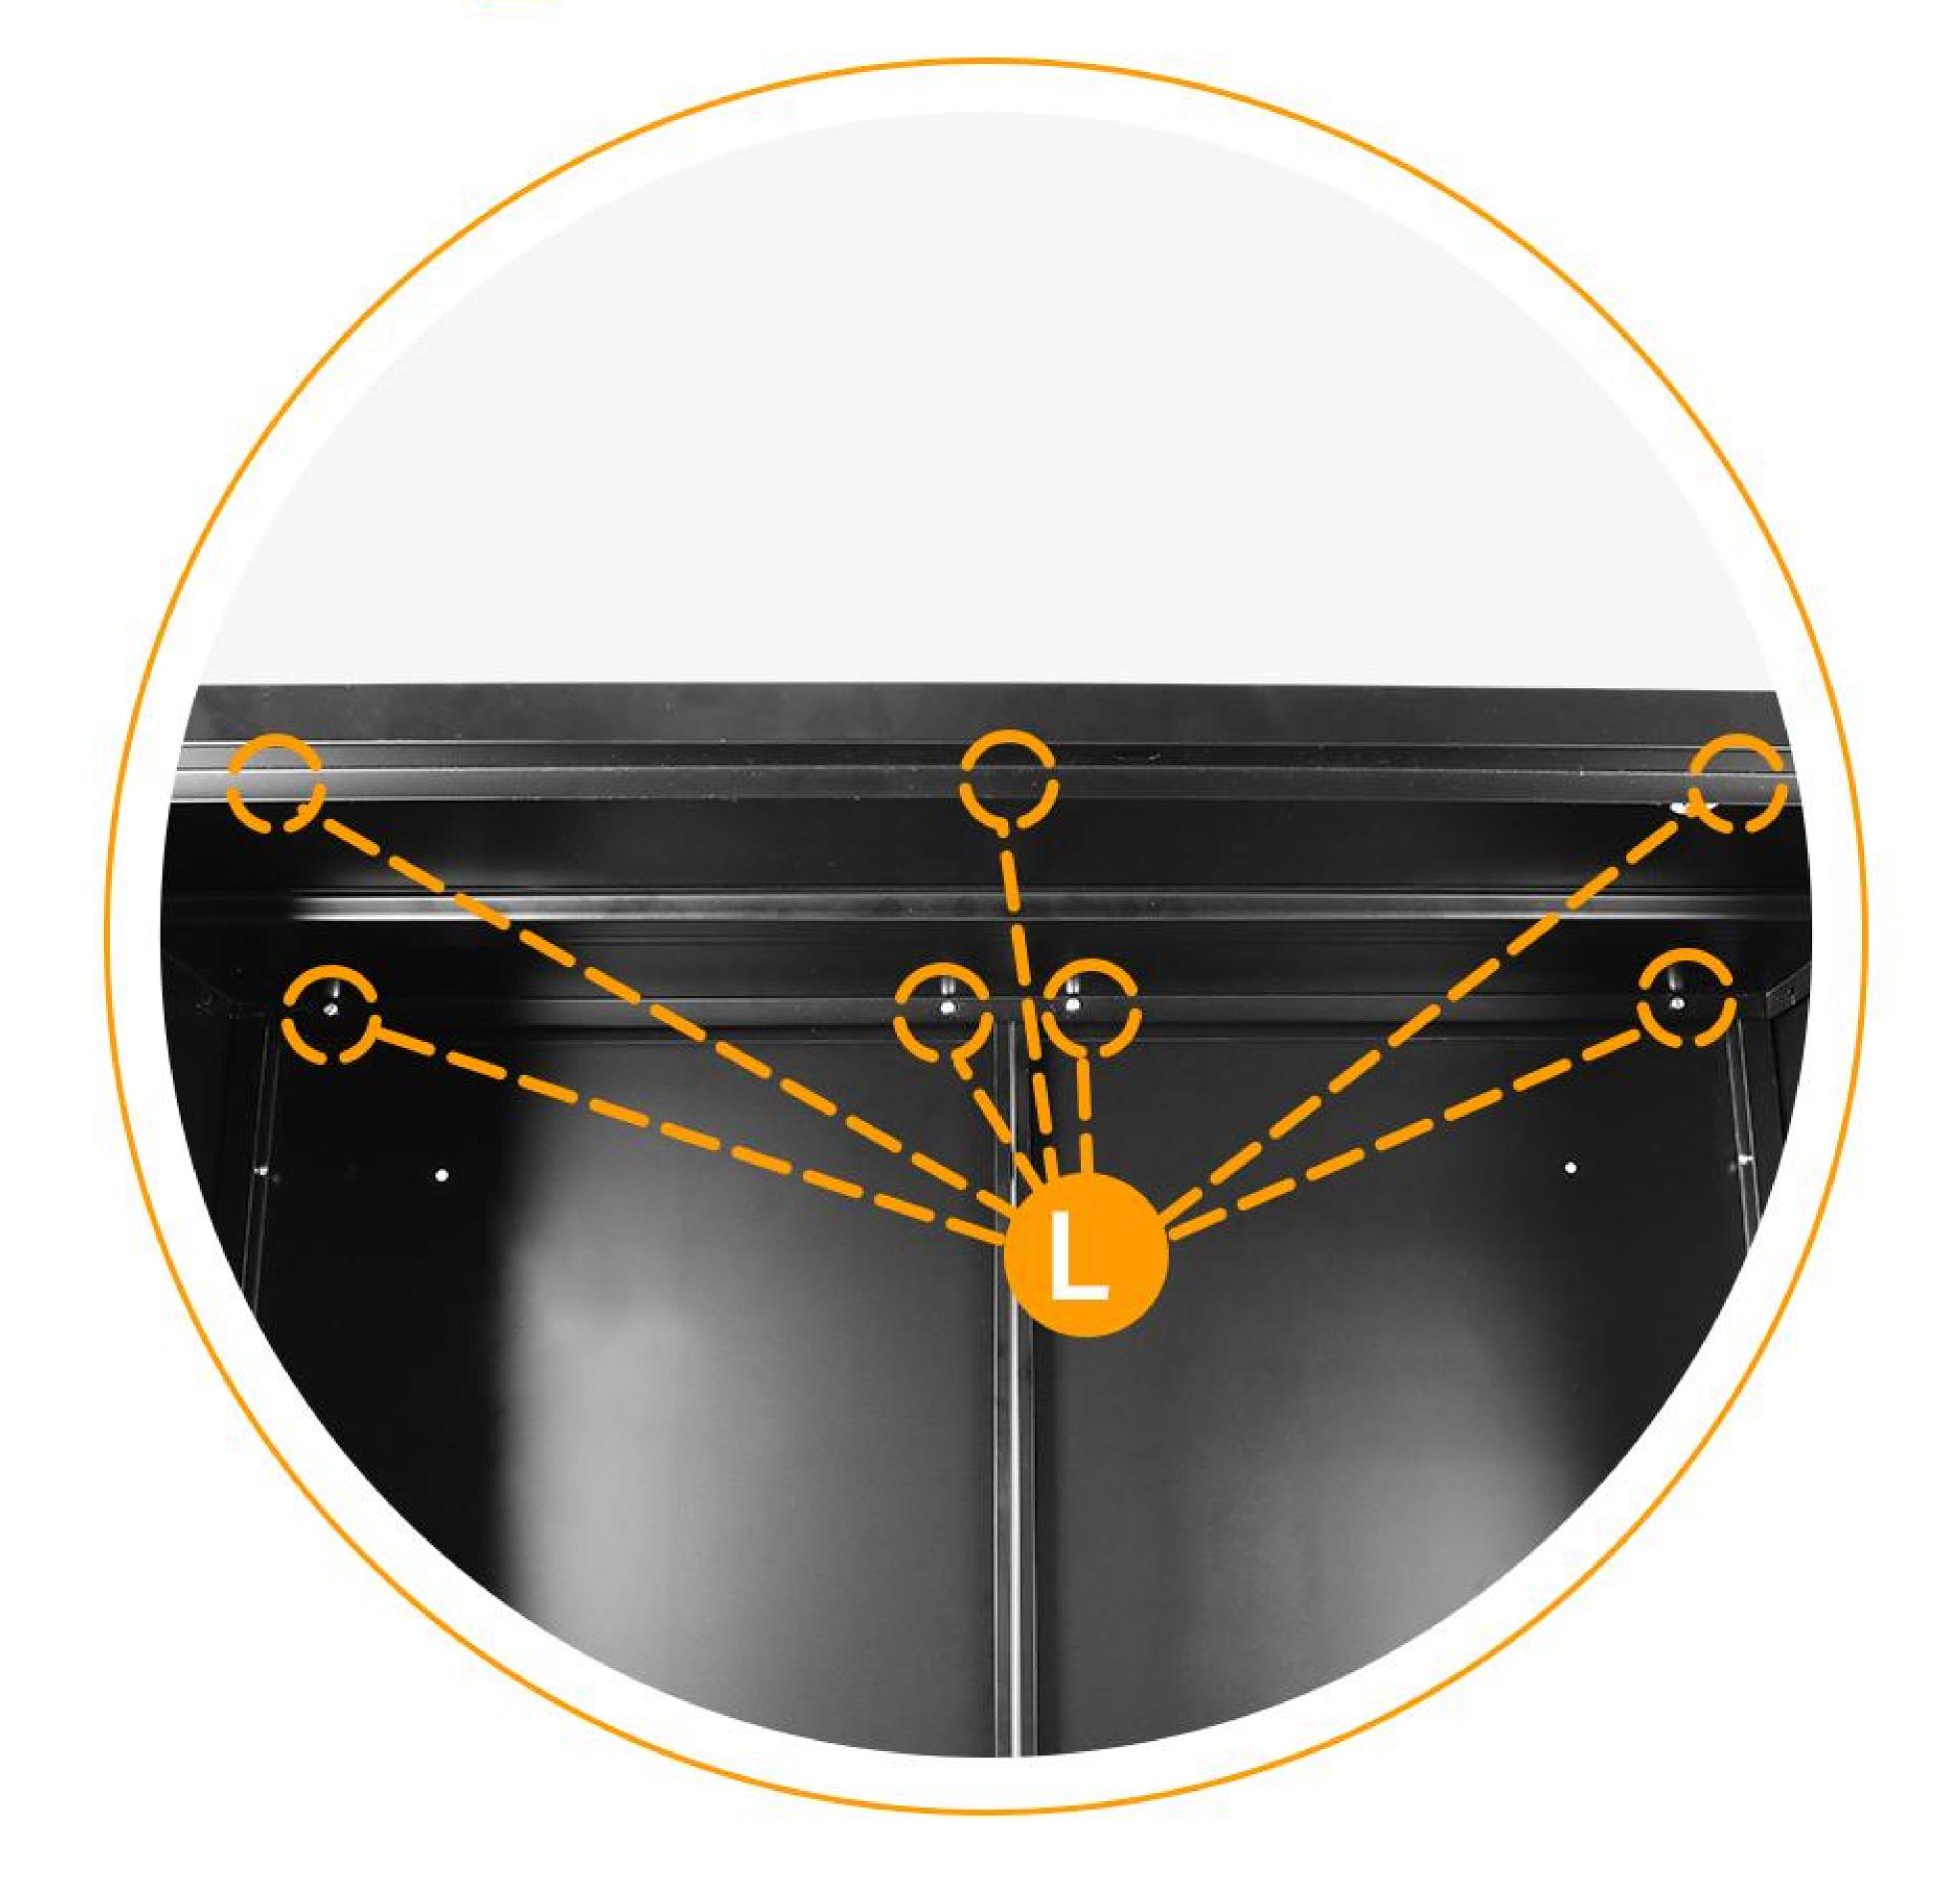




Install Bottom Panel H




## STEP 8

Secure 4 screws L in the bottom plate hole position.

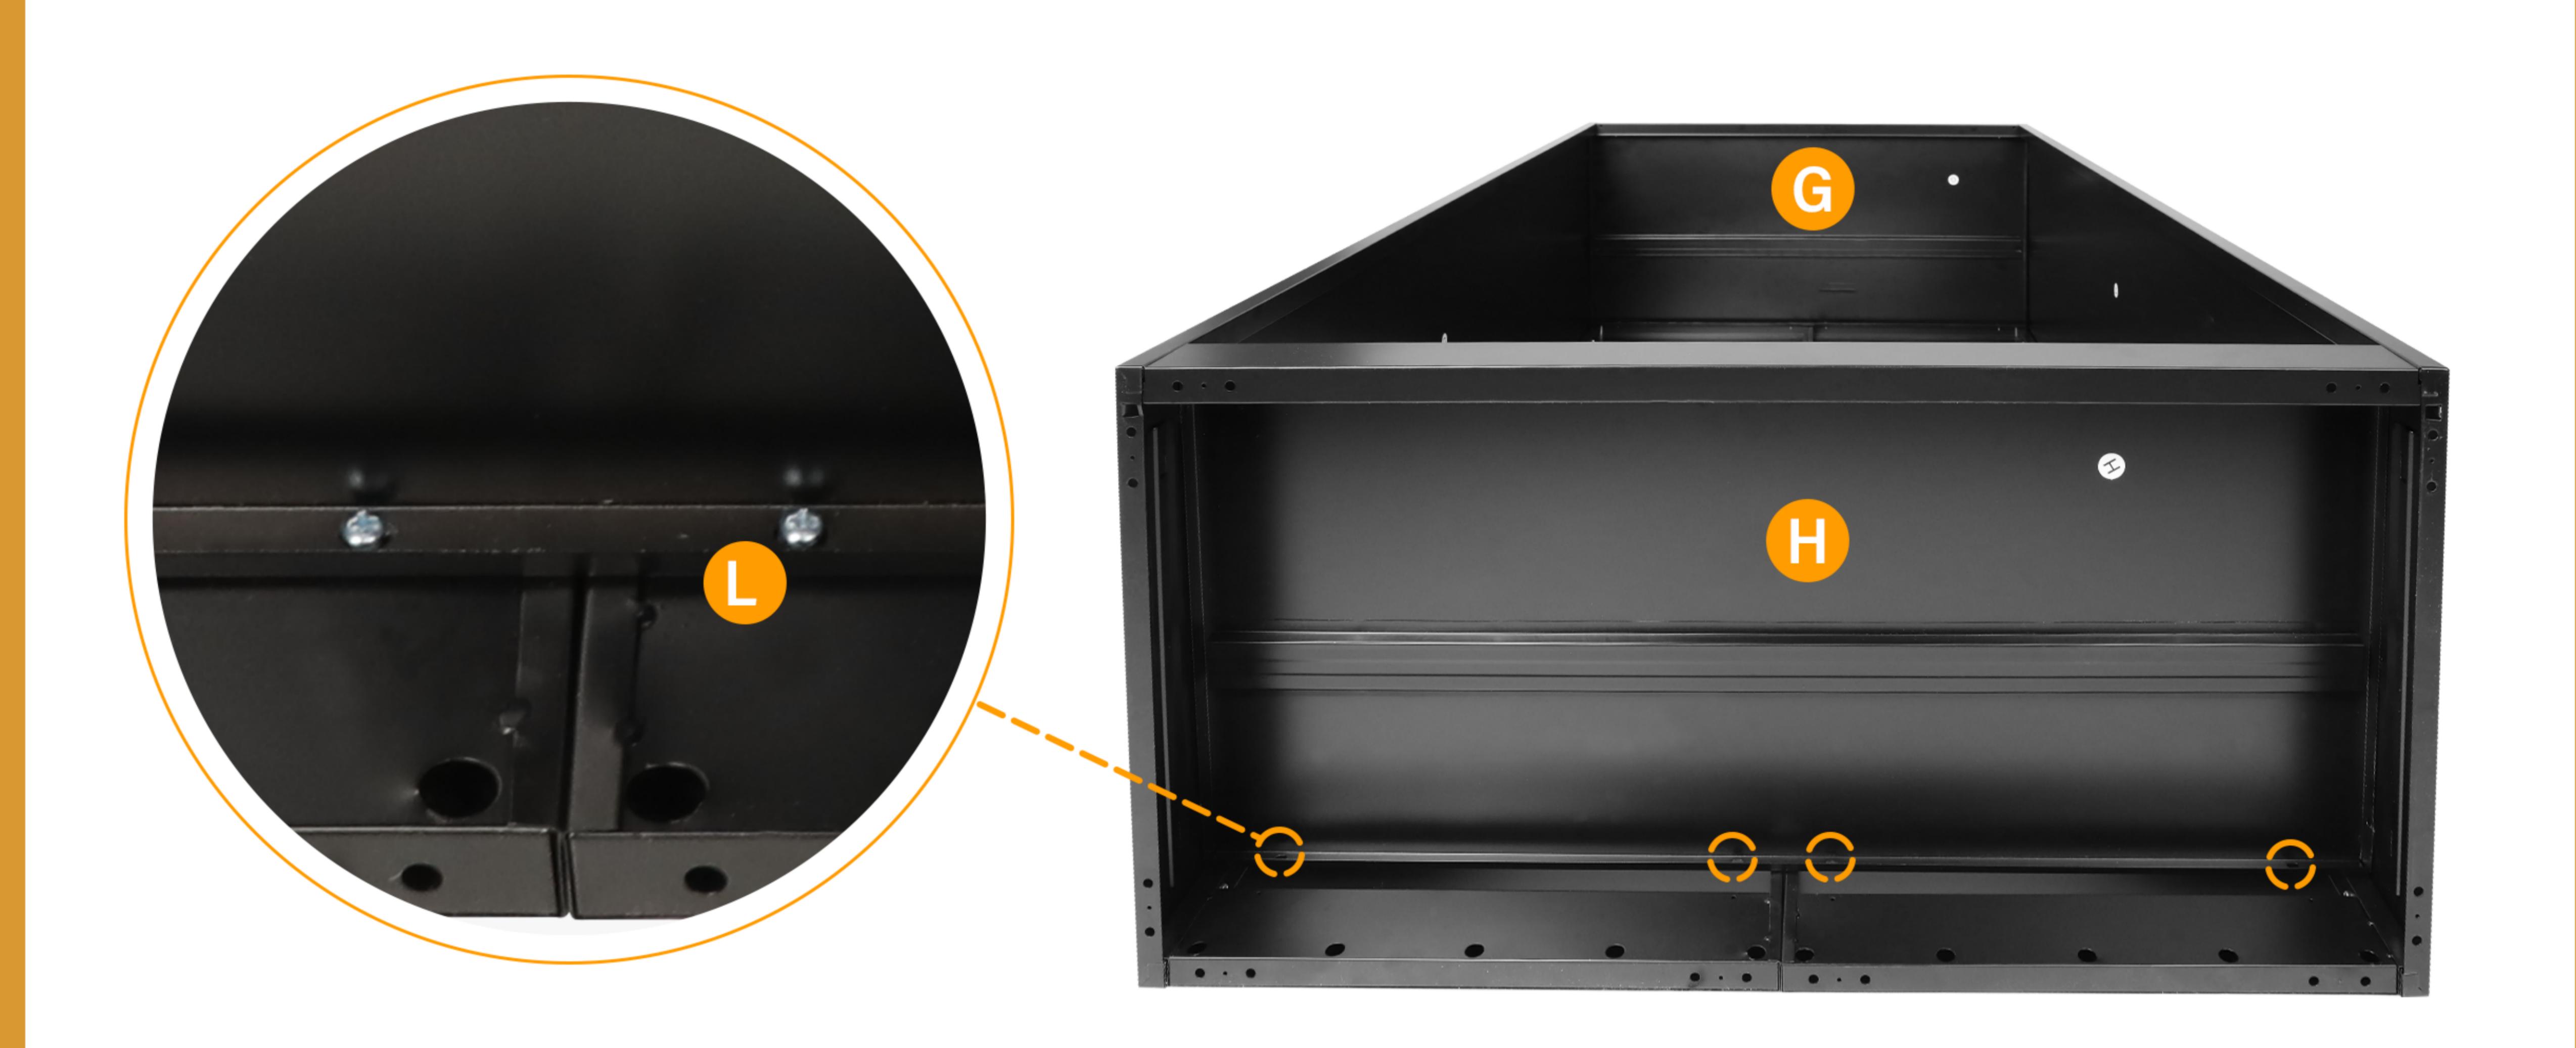


Fix the four standing feet N to the four bottom feet with screws L.

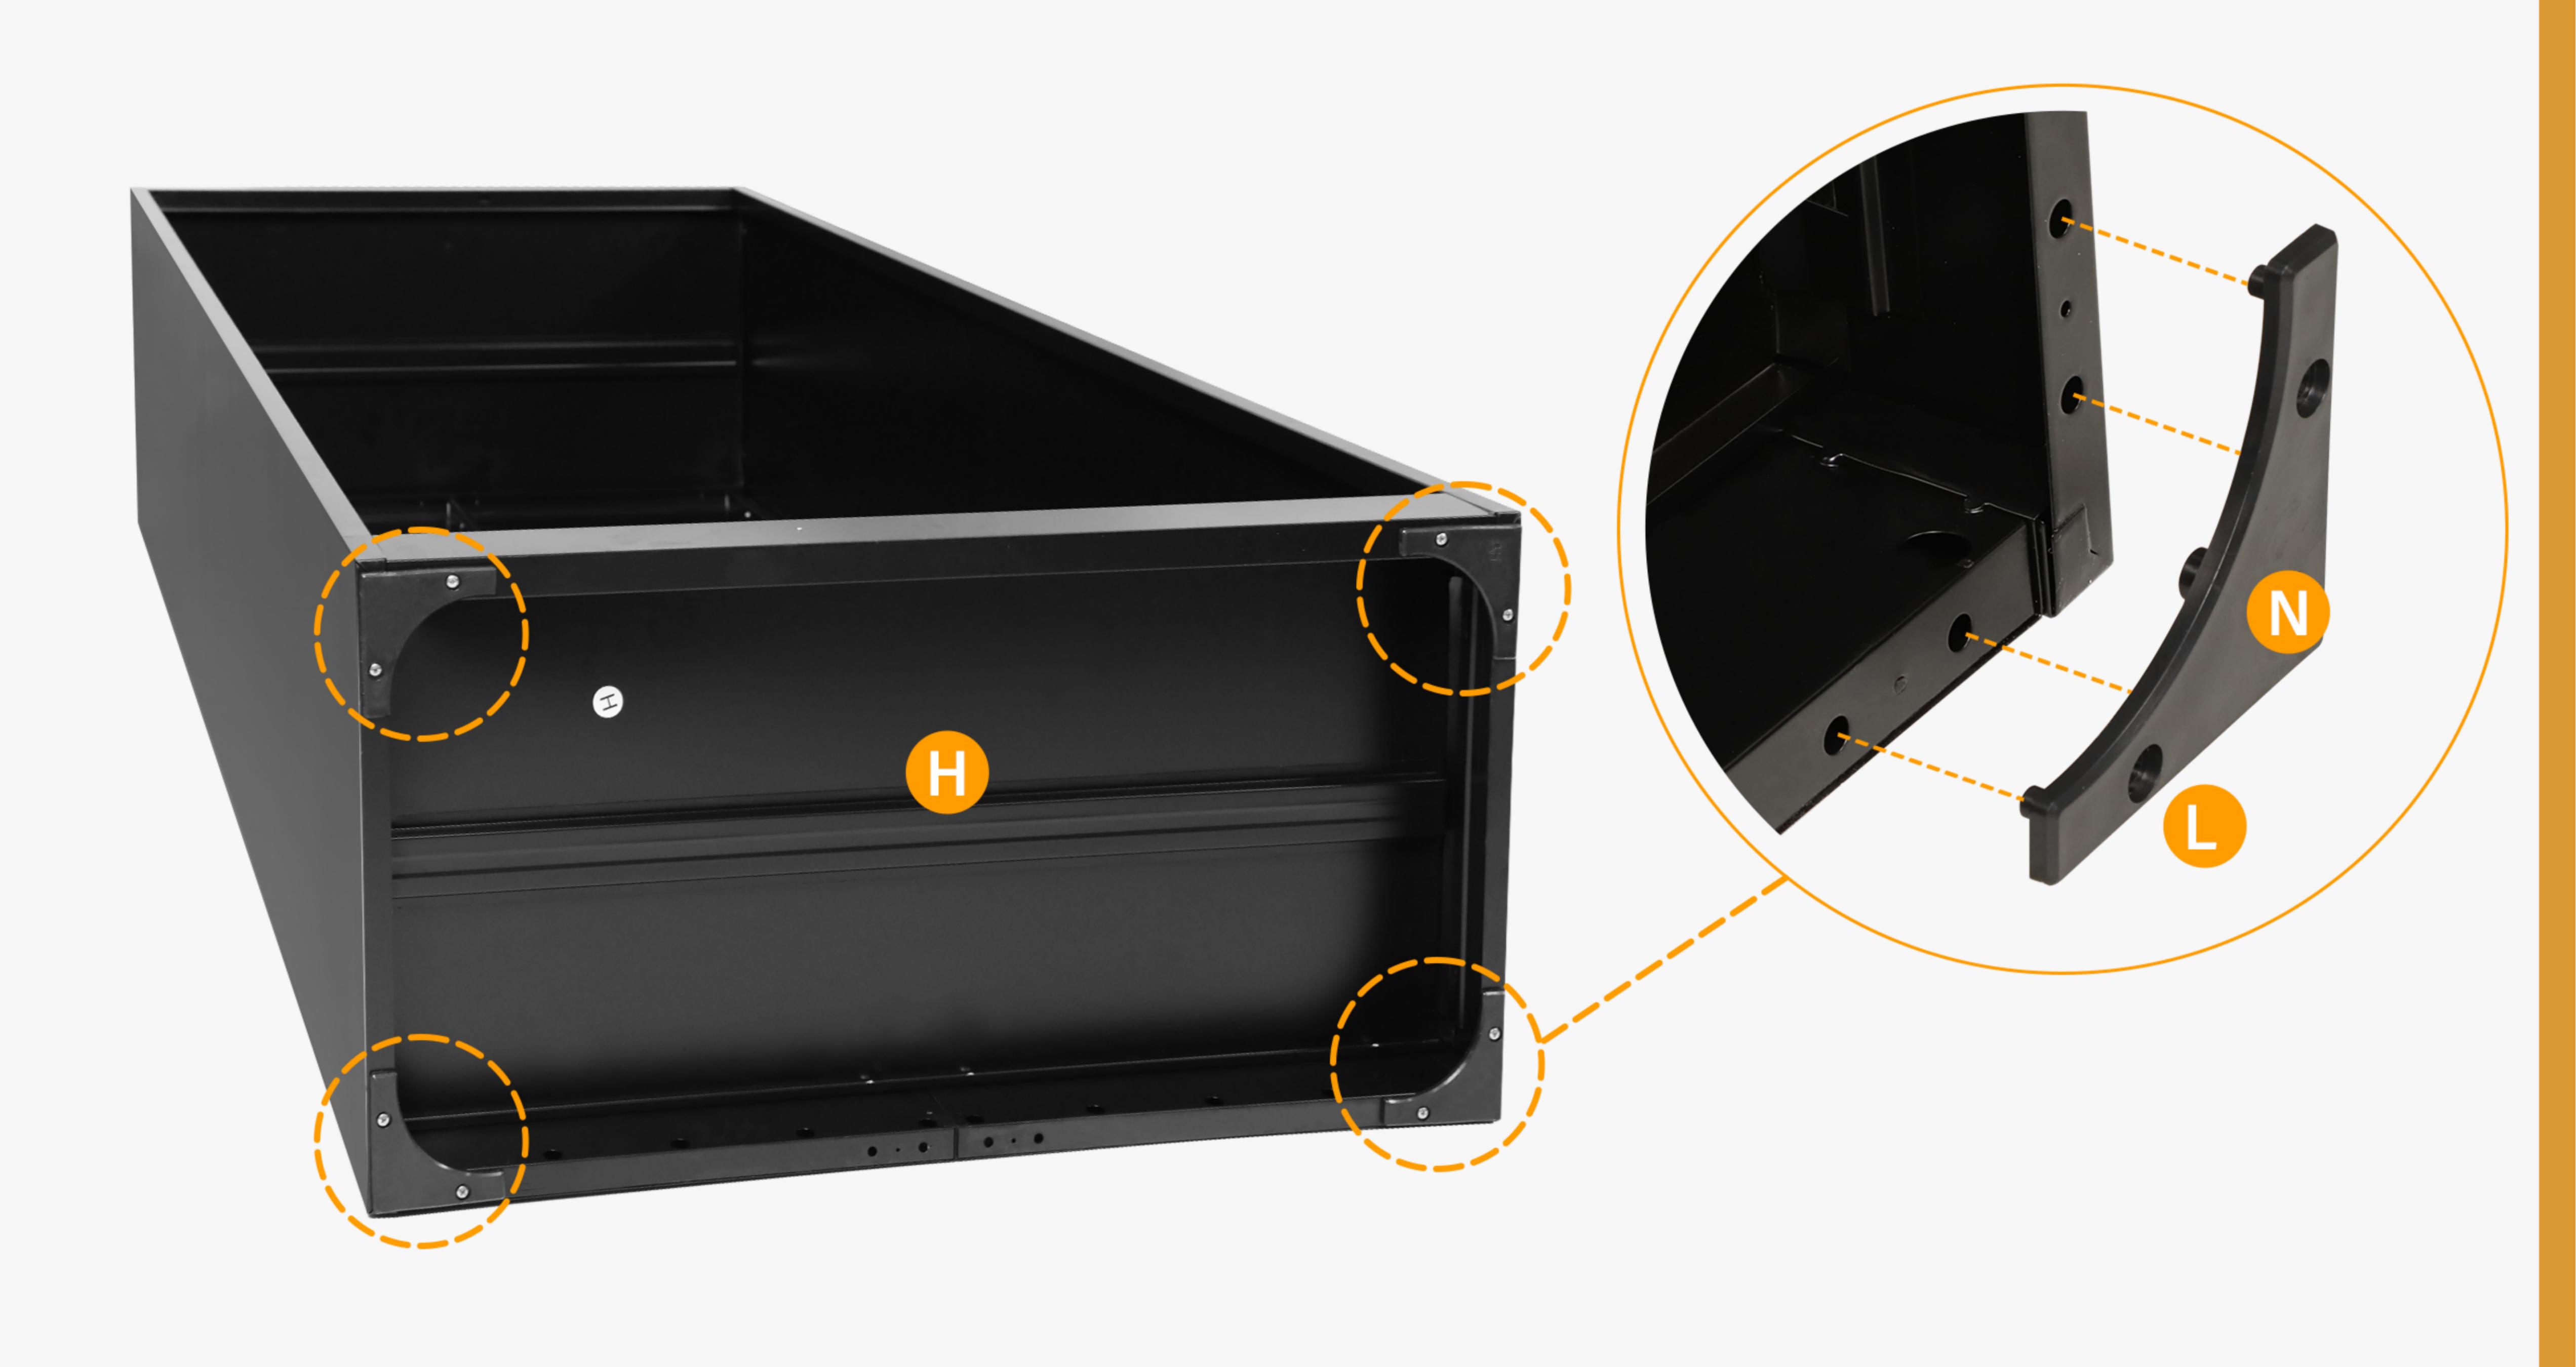

## STEP 10

First install the laminate O buckle and then put the shelf on

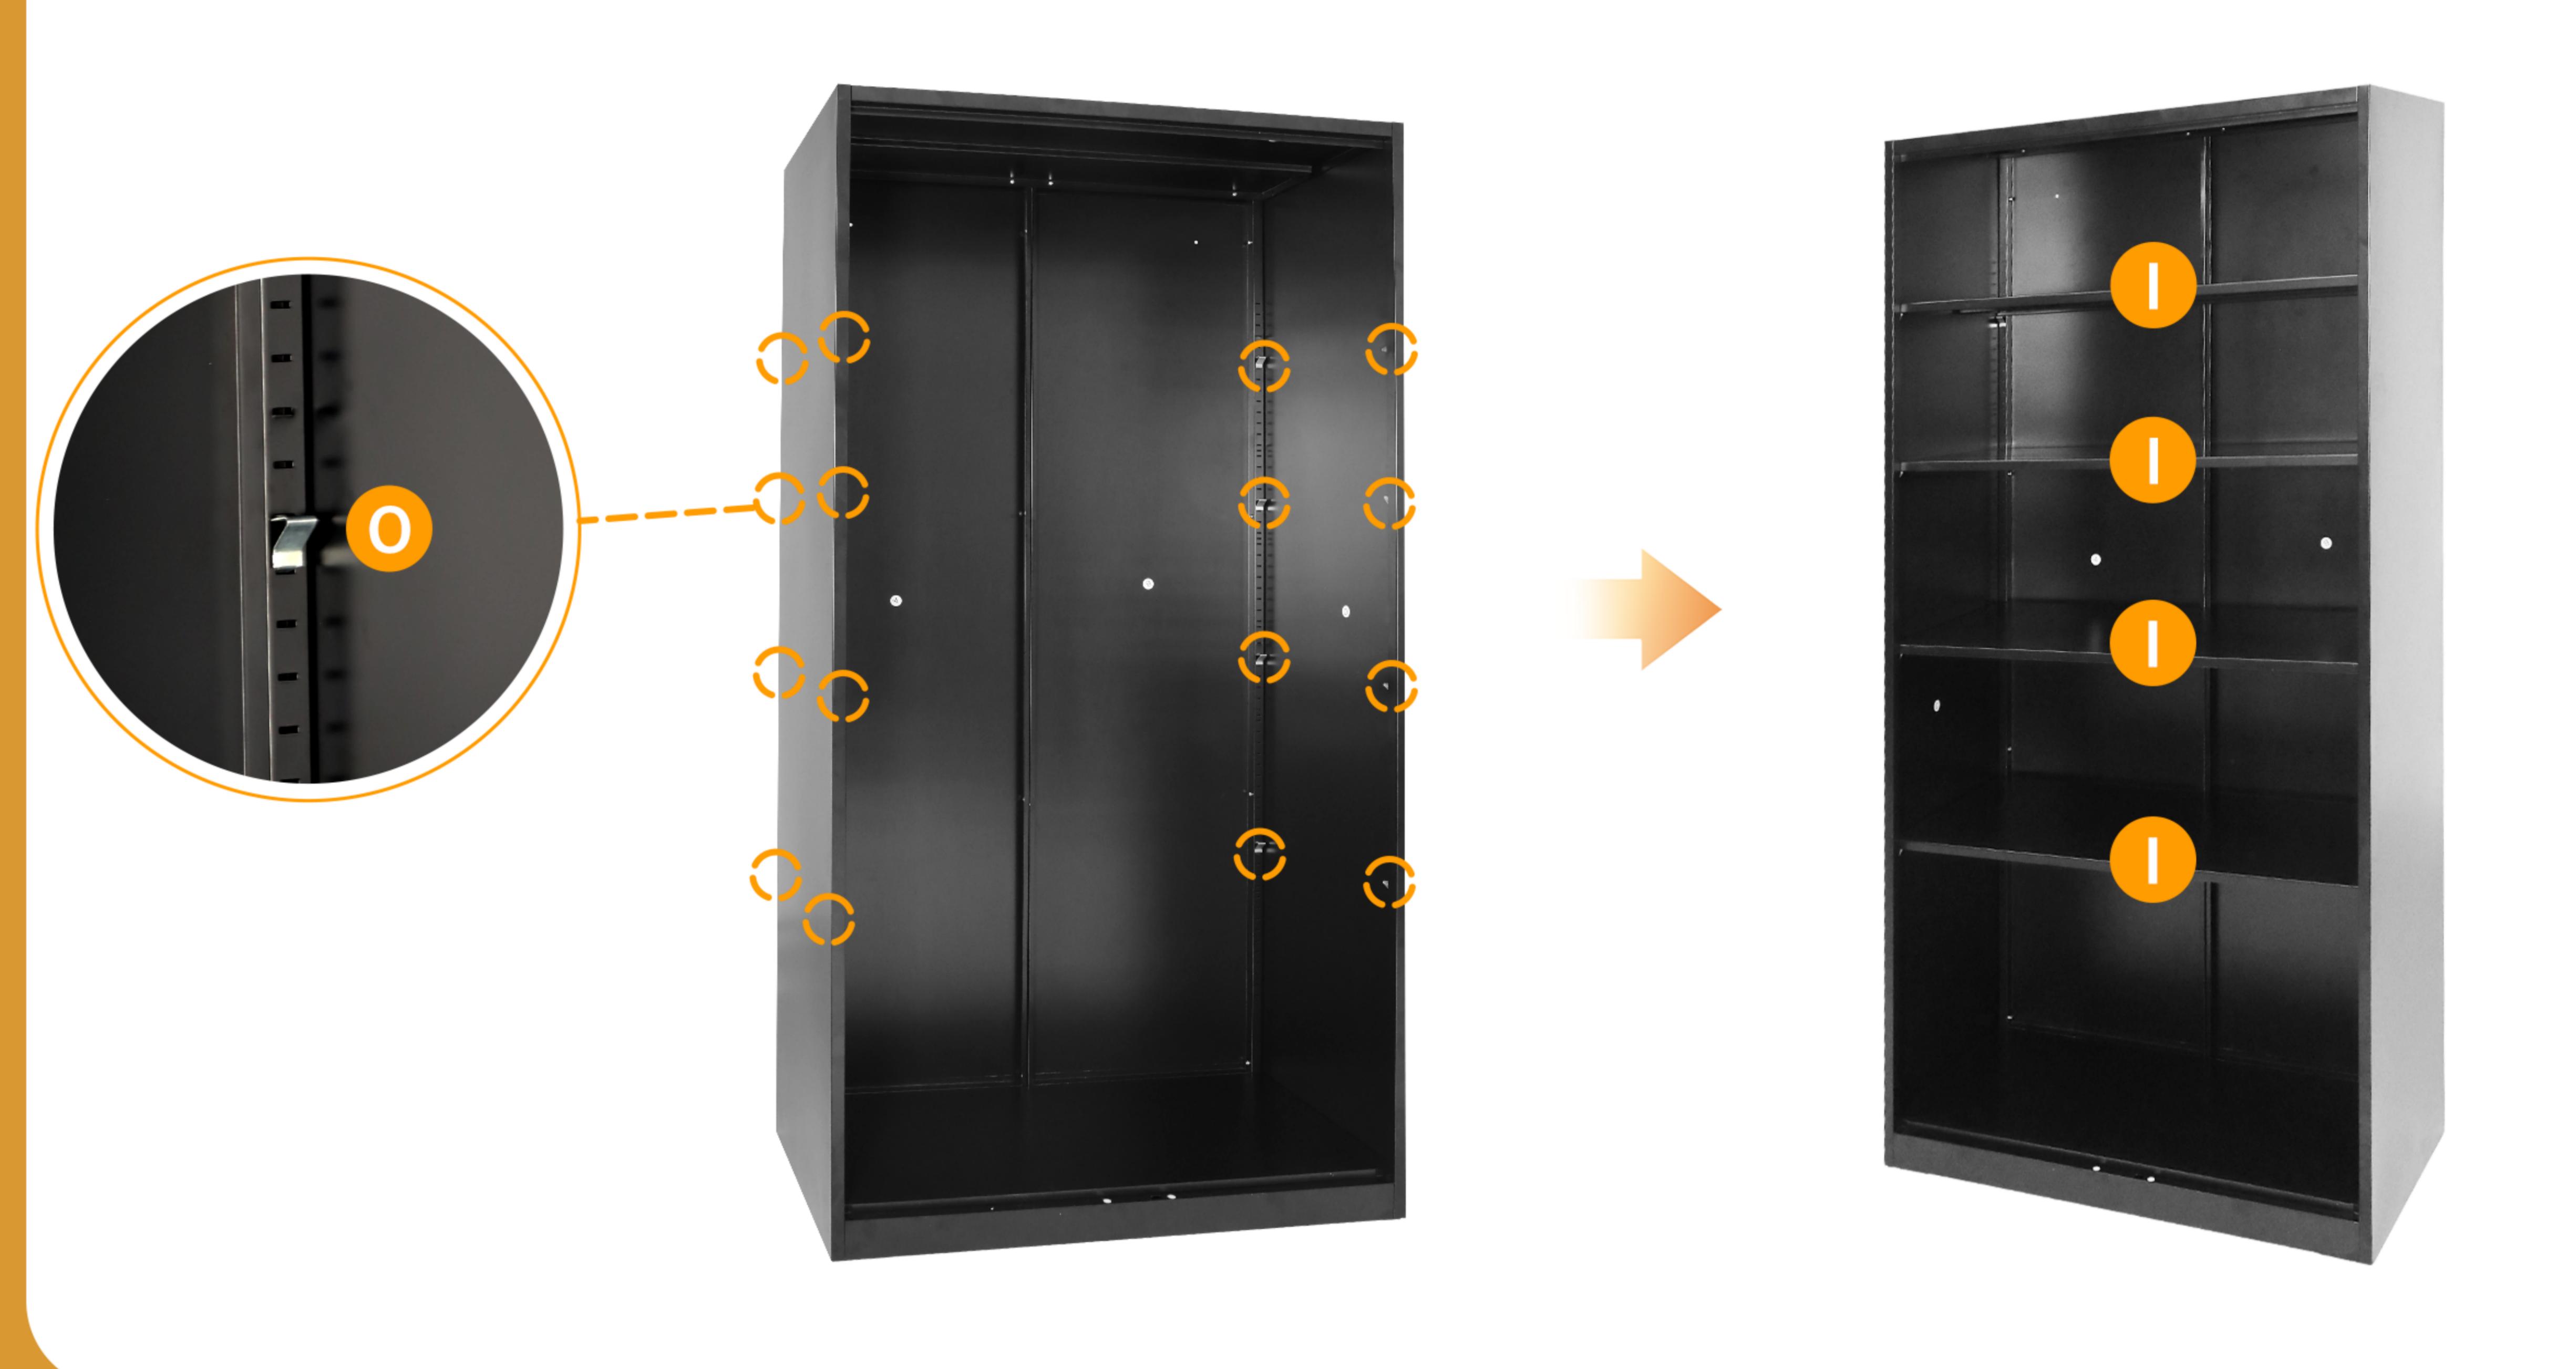

Insert the  $\underline{P}$  into the bottom hole on both sides, install the  $\underline{J}$  and  $\underline{K}$  with the  $\underline{V}$  to connect the  $\underline{E}$  hole to fix, and finally install the  $\underline{Q}$  on the J and K above.



Look at the position of  $\underline{\mathsf{T}}$ ,  $\underline{\mathsf{S}}$ ,  $\underline{\mathsf{U}}$  on the drawing and install on the  $\underline{\mathsf{K}}$ .



# THANK YOU FOR BEING PART OF OUR STORY

Don't forget, we're always happy to hear from you.

If you have any issue or just want to say hello, don't hesitate to write.