


ASSEMBLY INSTRUCTIONS


PF035

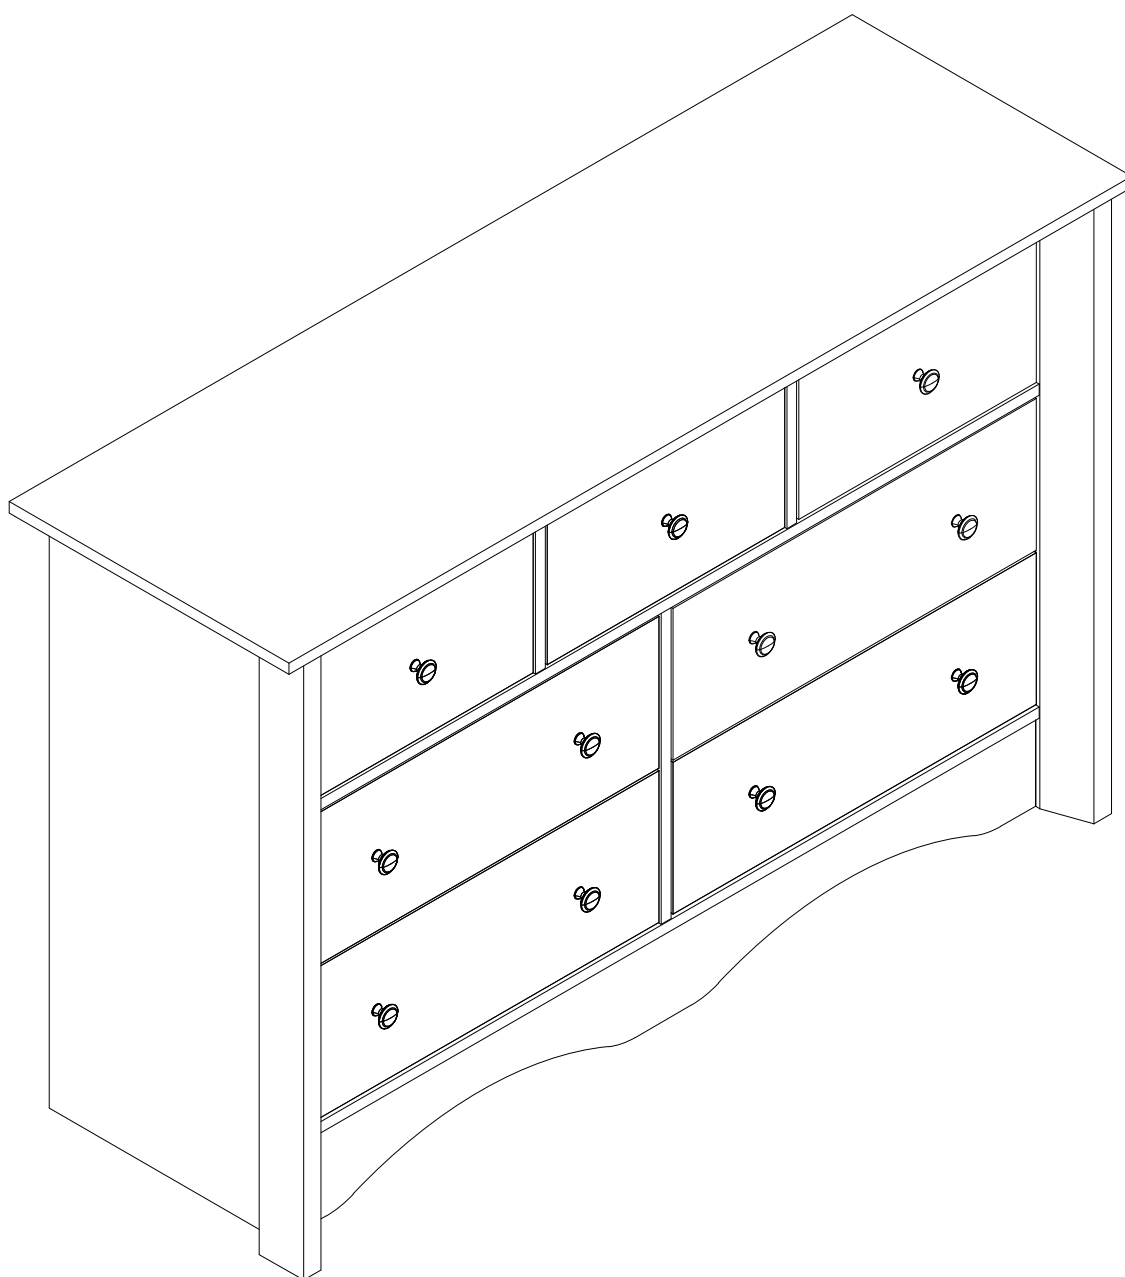

WARNING !

PF035


MAXIMUM LOAD
220 lb/ 100kg

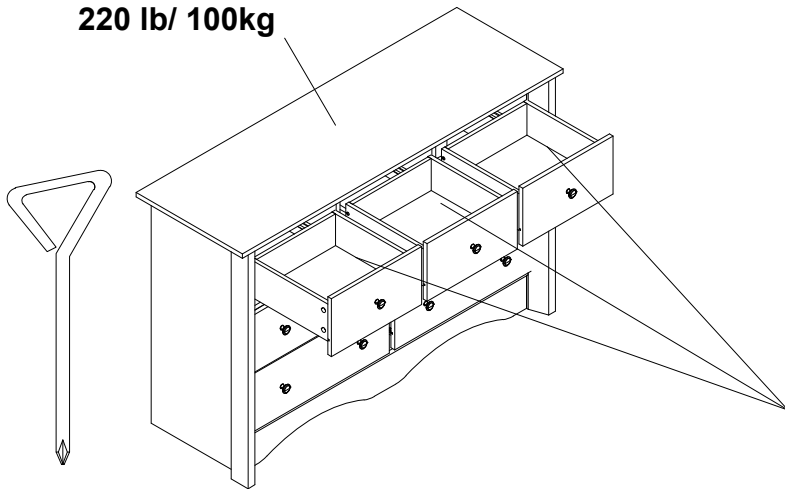


Estimated Time for Assembly

60 mins

MAXIMUM LOAD
20 lb/ 9.1kg

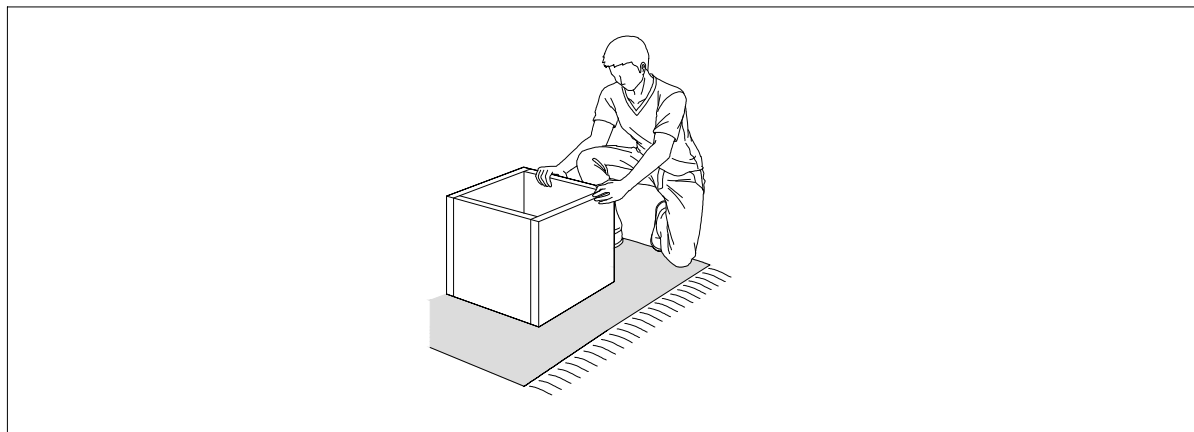

Assembly the furniture on empty carton, carpet, or rug to prevent scratches or damage.

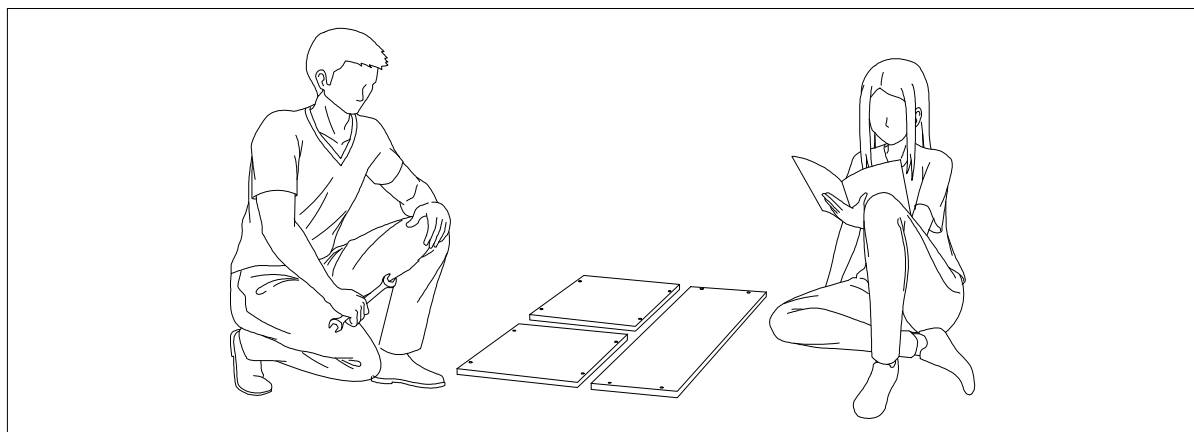


This furniture requires 2 people to assembly.

Make sure no parts are missing or damaged before assembly.

Board Identification

PF035


Not actual size

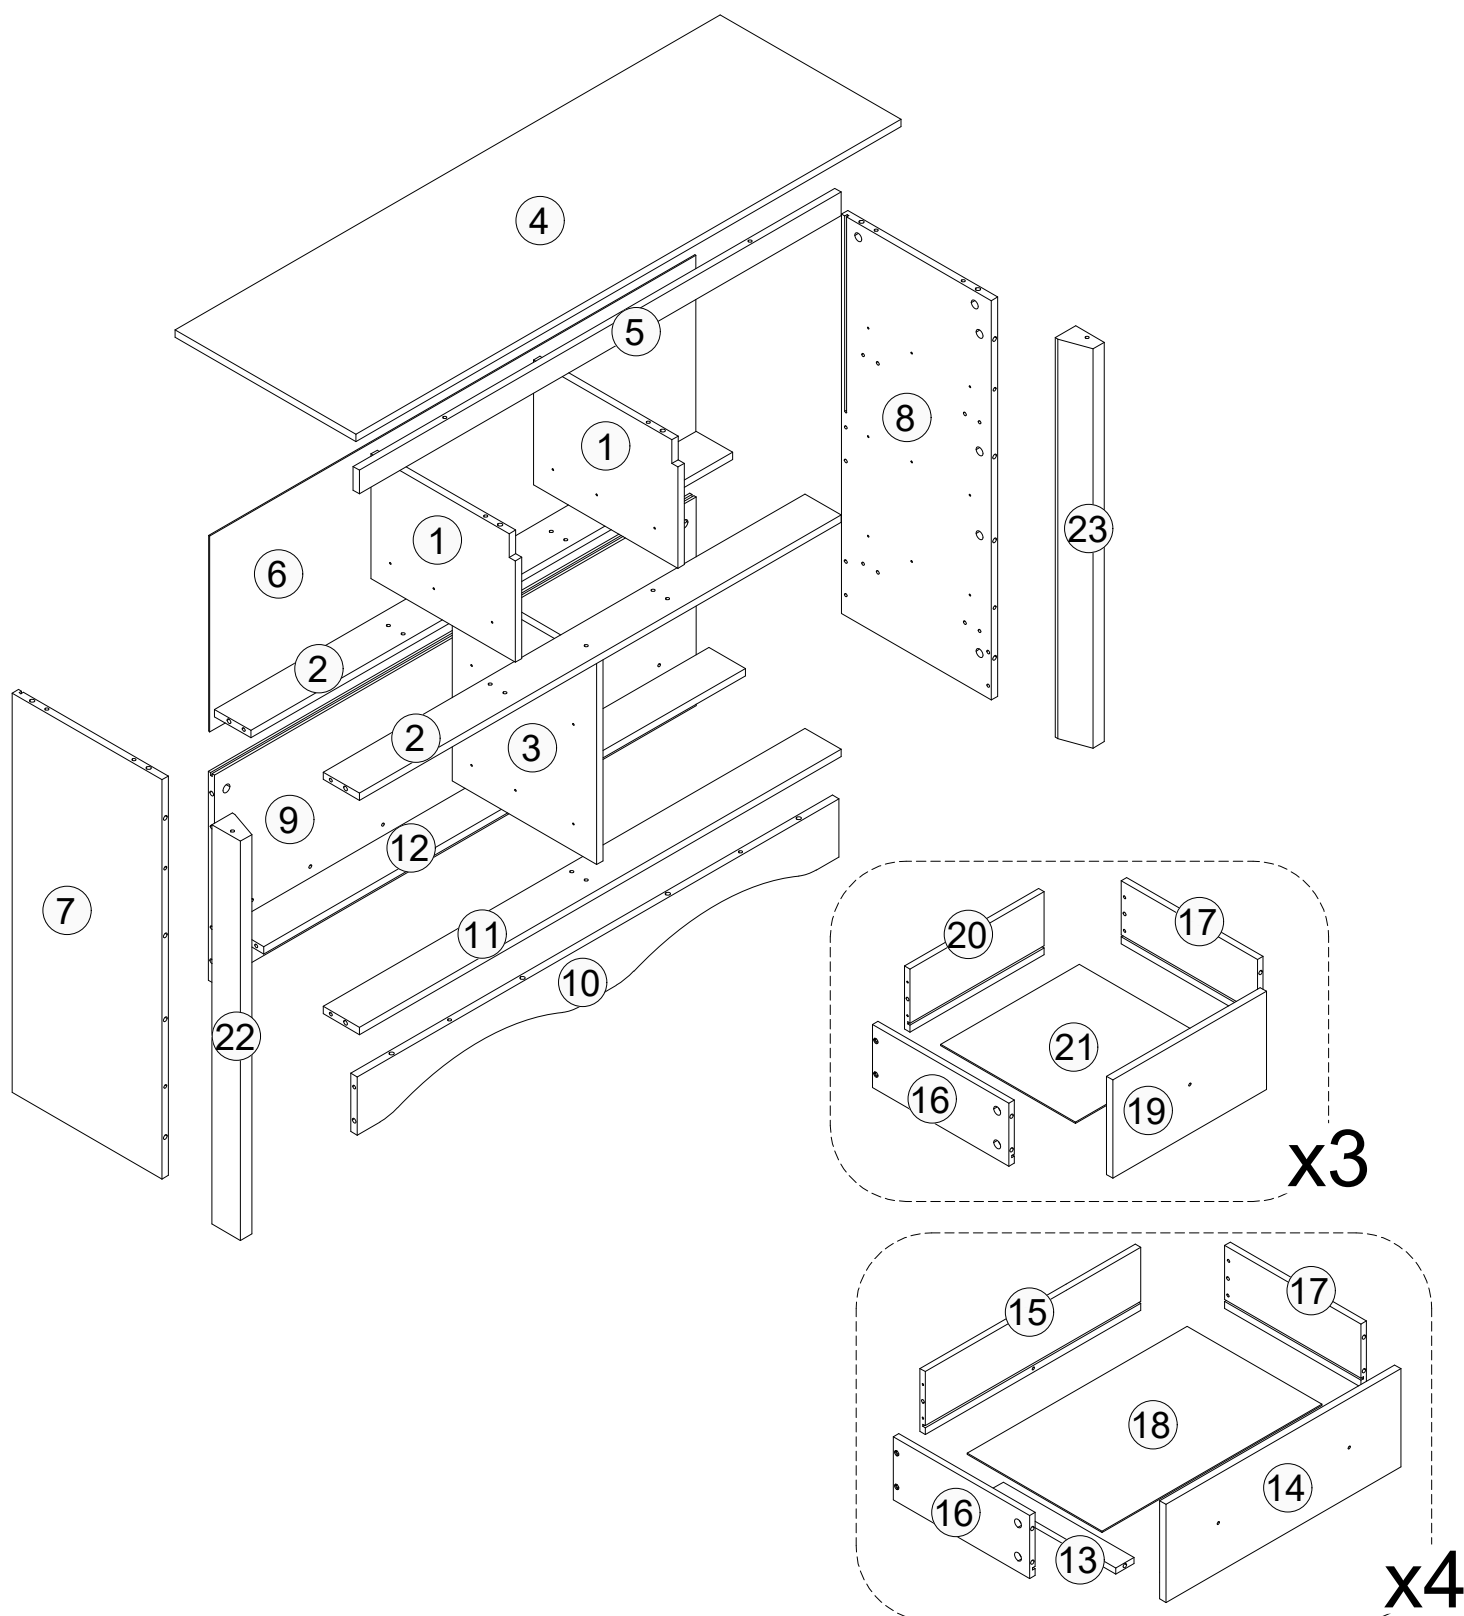


BOARD IDENTIFICATION

Not actual size


PF035

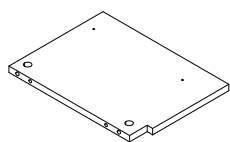


① x2

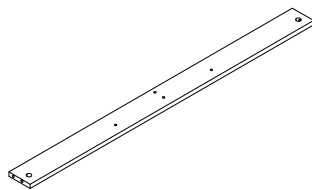


② x2

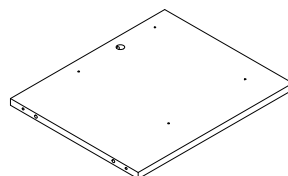


③ x1

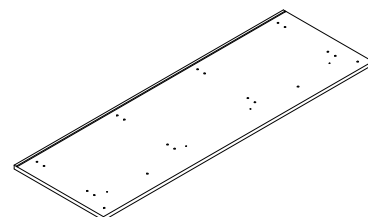


④ x1

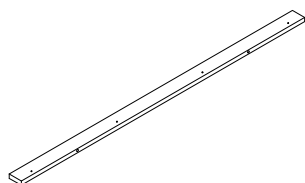


⑤ x1

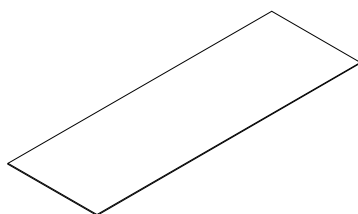


⑥ x1

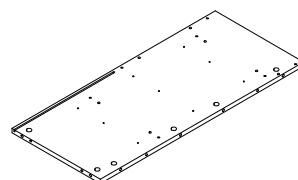


⑦ x1

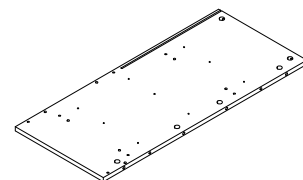


⑧ x1

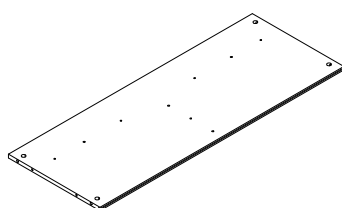


⑨ x1

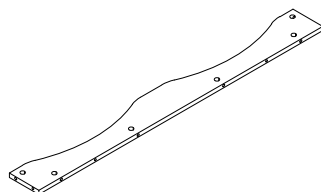


⑩ x1

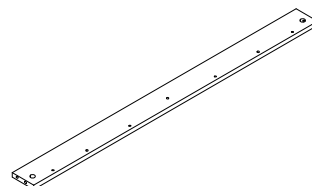


⑪ x1

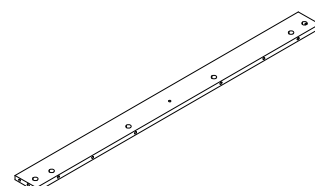


⑫ x1




⑬ x4

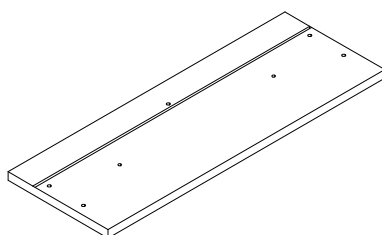


⑭ x4

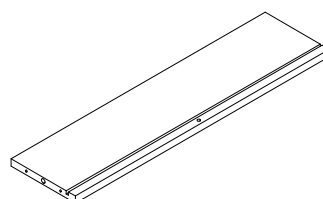


⑮ x4

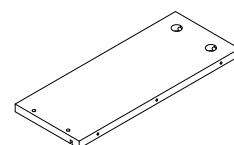


⑯ x7

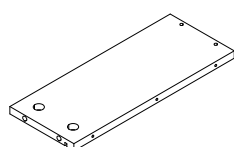


⑰ x7

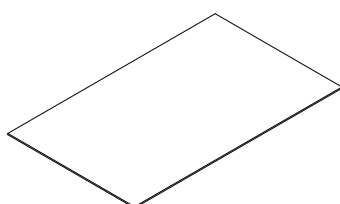

⑱ x4

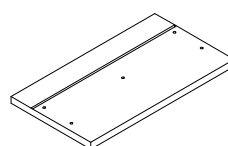

⑲ x3

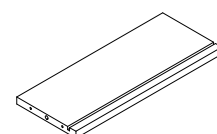


⑳ x3


BOARD IDENTIFICATION

PF035


Not actual size

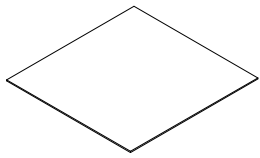

②1 x3

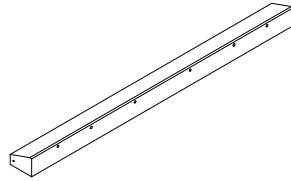











②2 x1

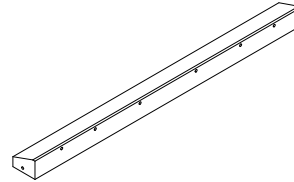

②3 x1


HARDWARE LIST

PF035

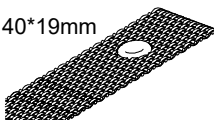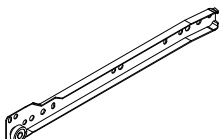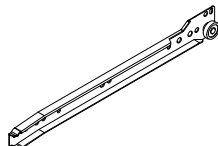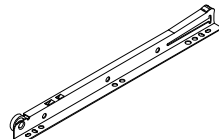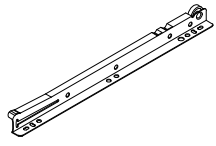
 Ø6*33.5mm A x71+7	 Ø15*9.5mm B x71+7	 Ø6*30mm C x58+5	 Ø5*38mm D x8+1
 Ø3.5*12mm E x88+8	 F x4	 G x11	 M4*20mm H x11
 Ø4*38mm I x32+3	 J x1	 Ø3x15mm K x6+1	
L1x2 140*19mm  L2x4 Ø16xØ6.5x1mm  L3x2 Ø4x16mm  L			
M1x2 Ø6*30mm  M2x2 Ø4*35mm  M			
 N x2+2			
 CL x7	 CR x7	 DR x7	 DL x7

Cam Lock Fastening System




Insert the cam bolt into the hole first, then insert the cam lock and lock it.

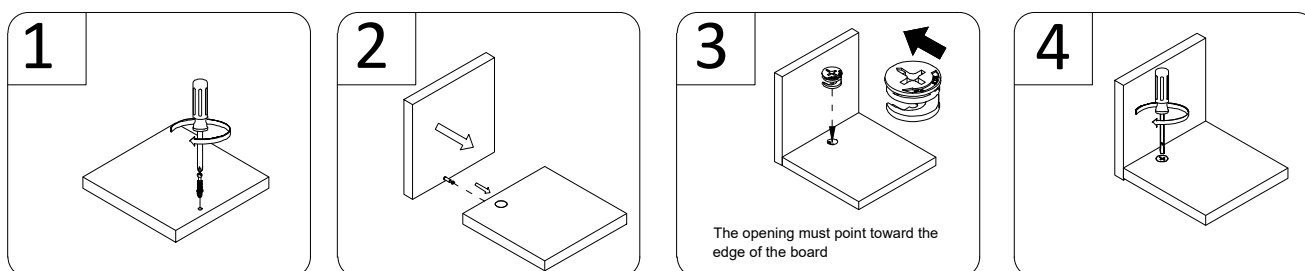


STEP 1

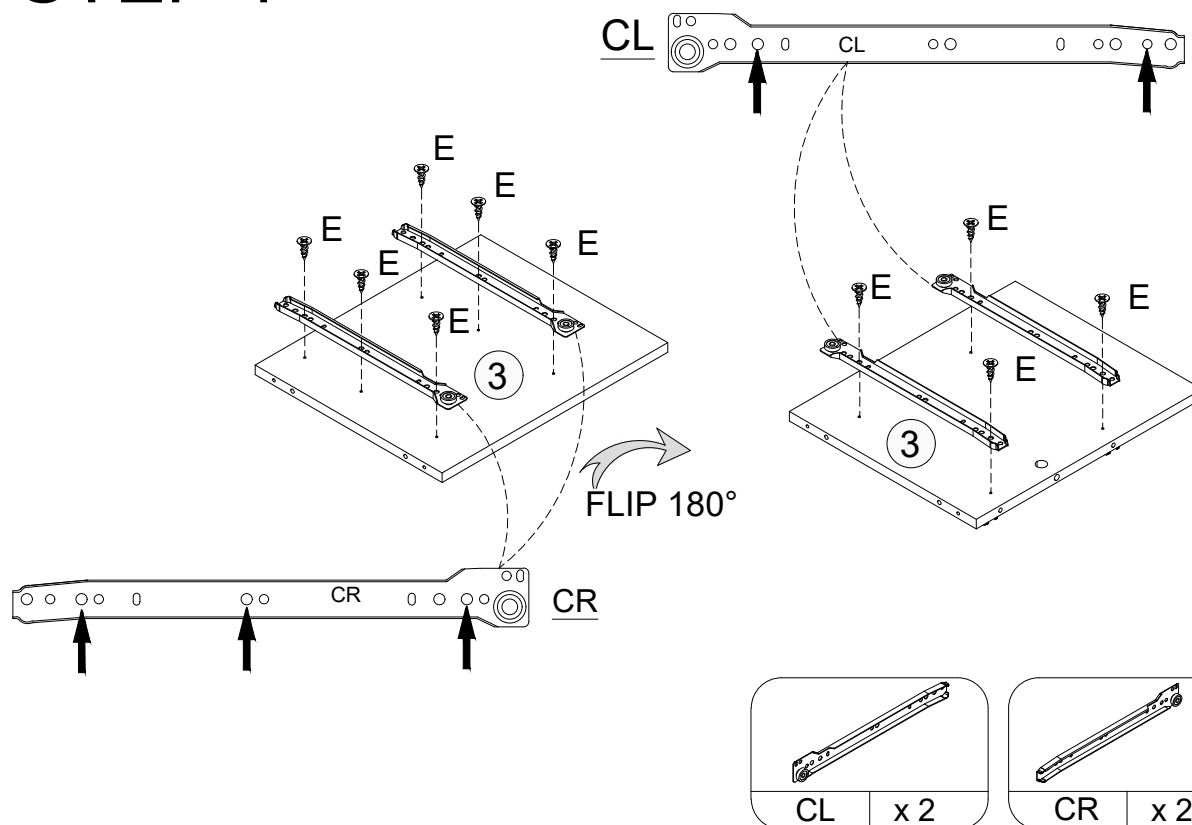


STEP 2

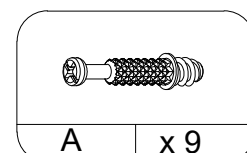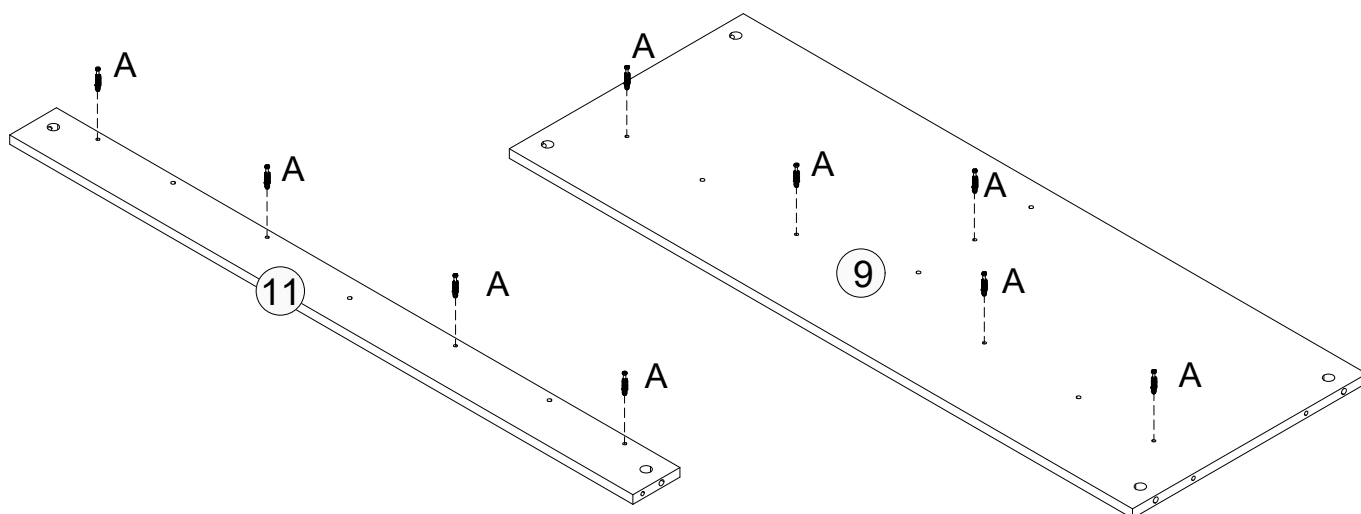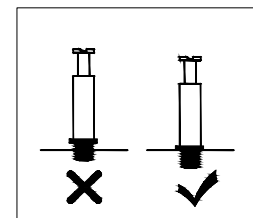


STEP 3

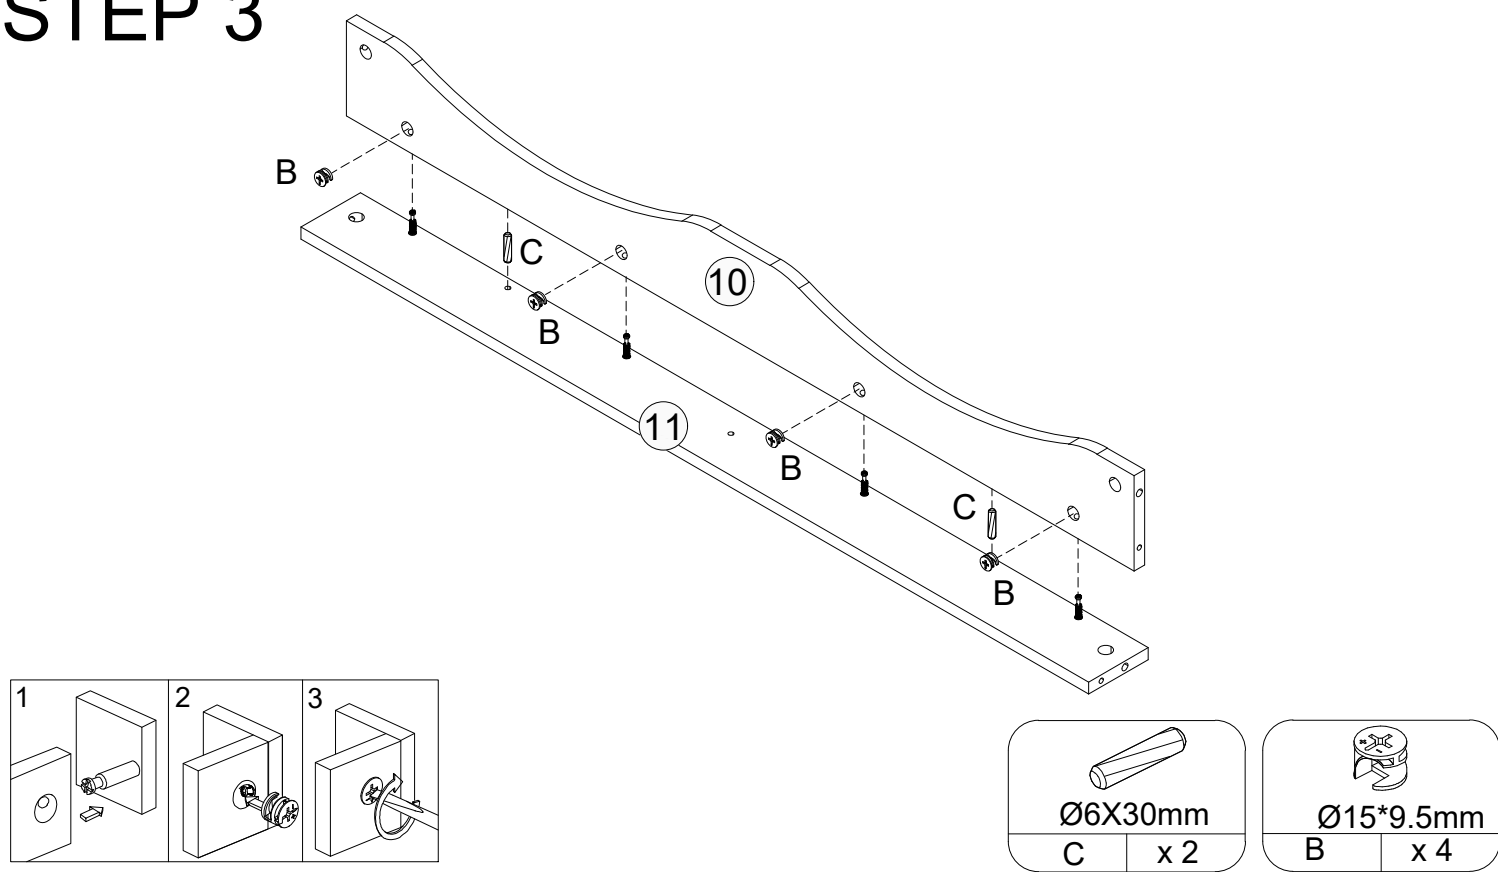


STEP 4

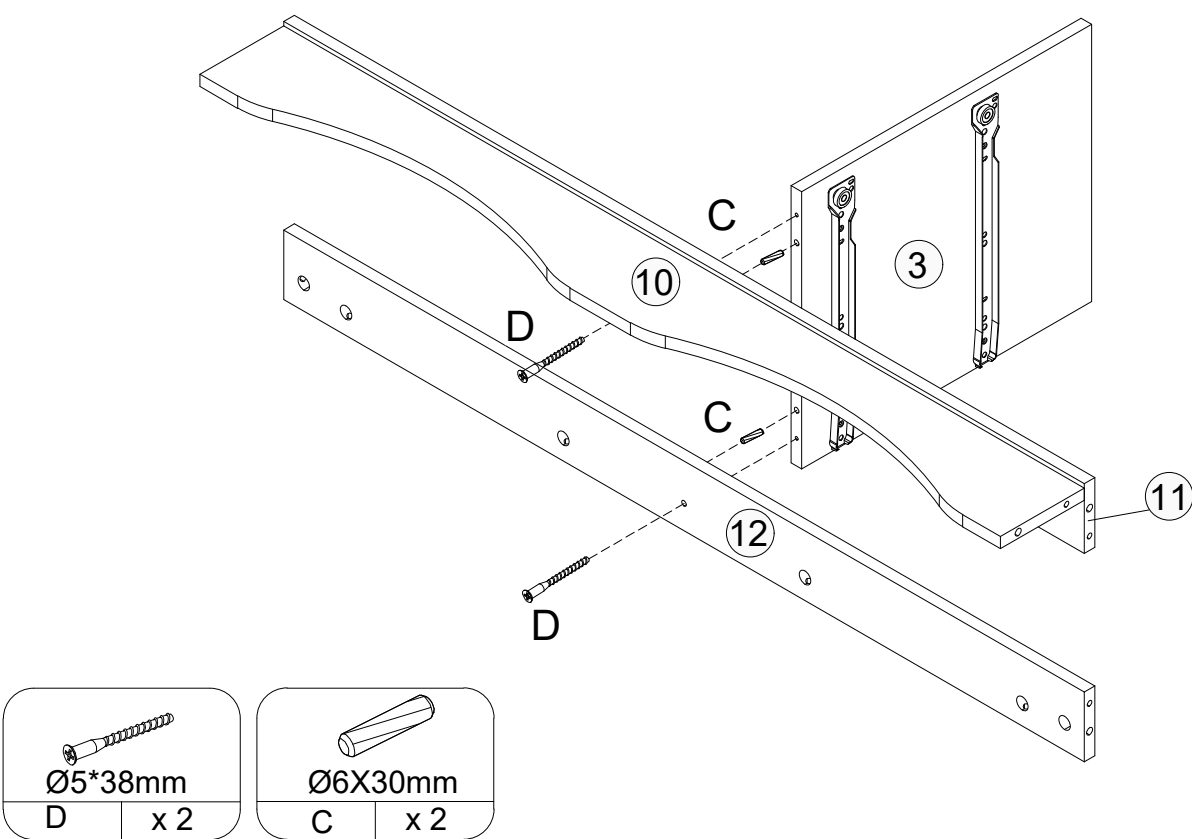




STEP 5

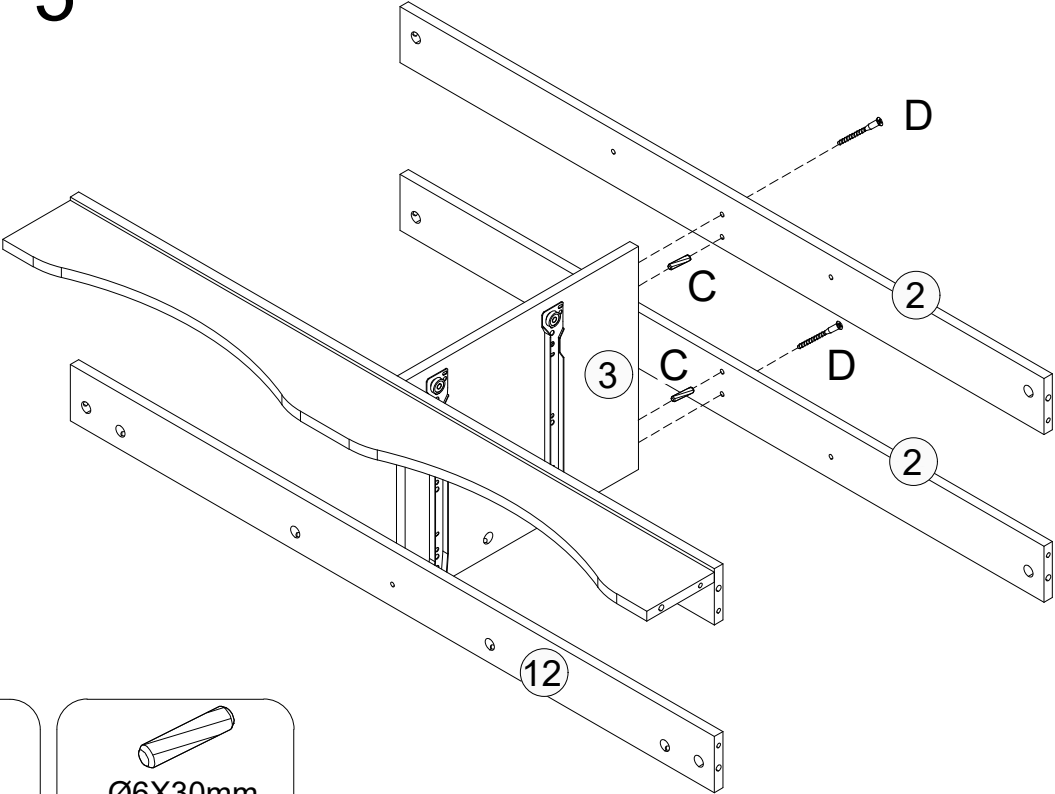


	
Ø5*38mm	
D	x 2

	
Ø6X30mm	
C	x 2

STEP 6

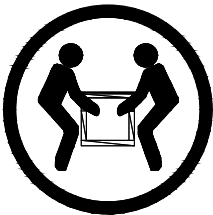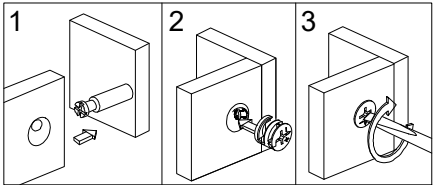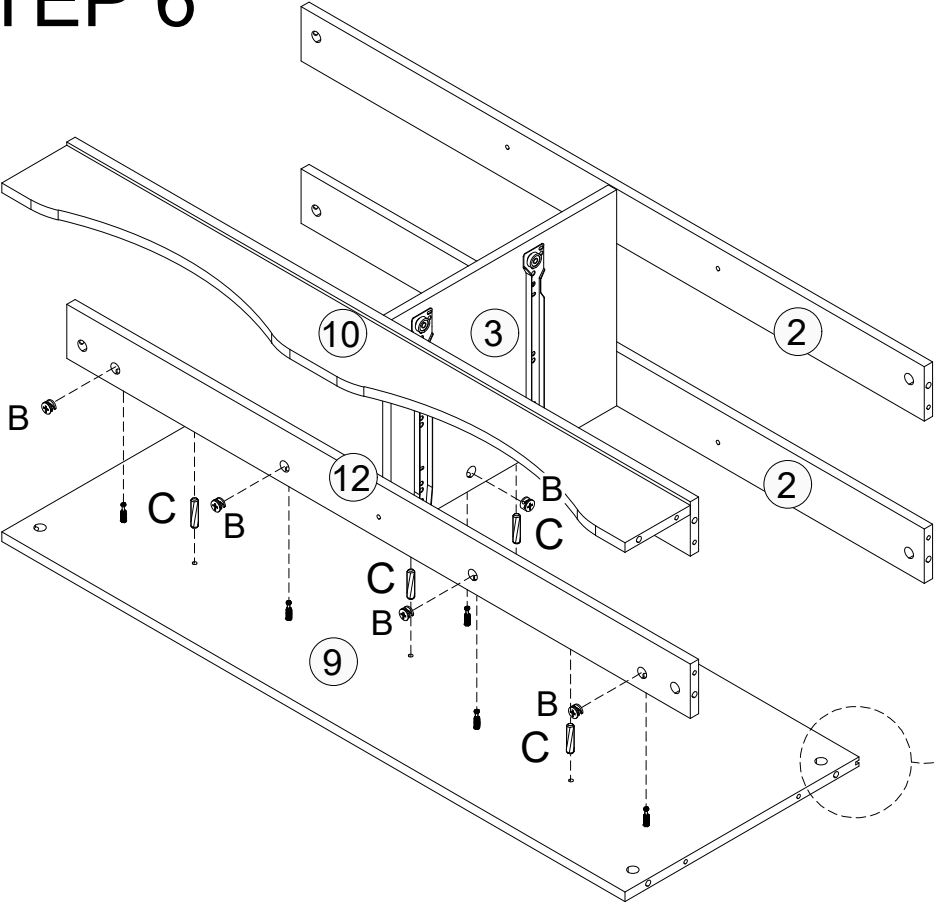


CAUTION: Heavy! You may need assistance with this step

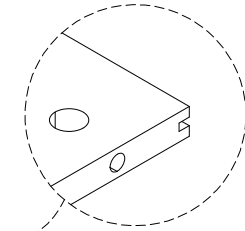


	
Ø6*30mm	
C	x 4

	
Ø15*9.5mm	
B	x 5





STEP 7

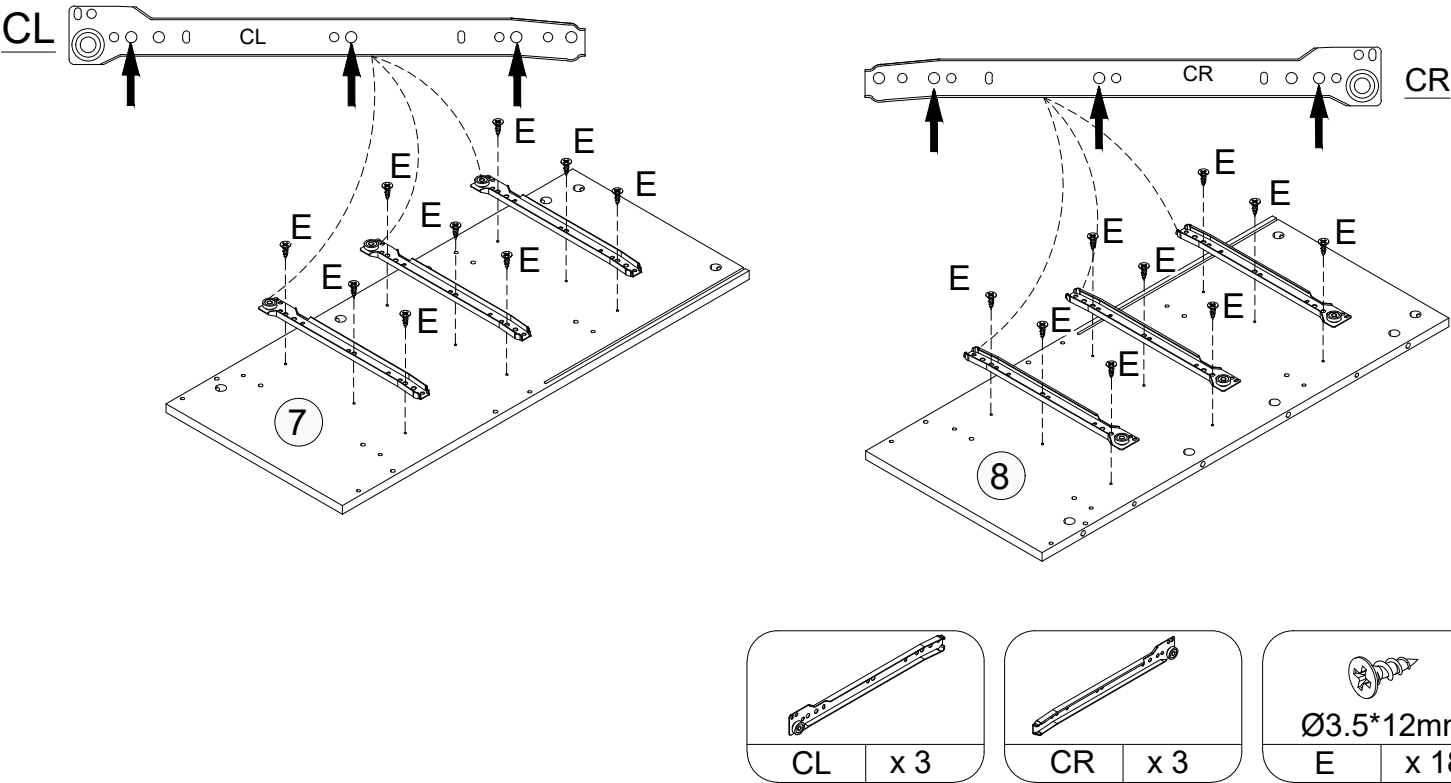




STEP 8

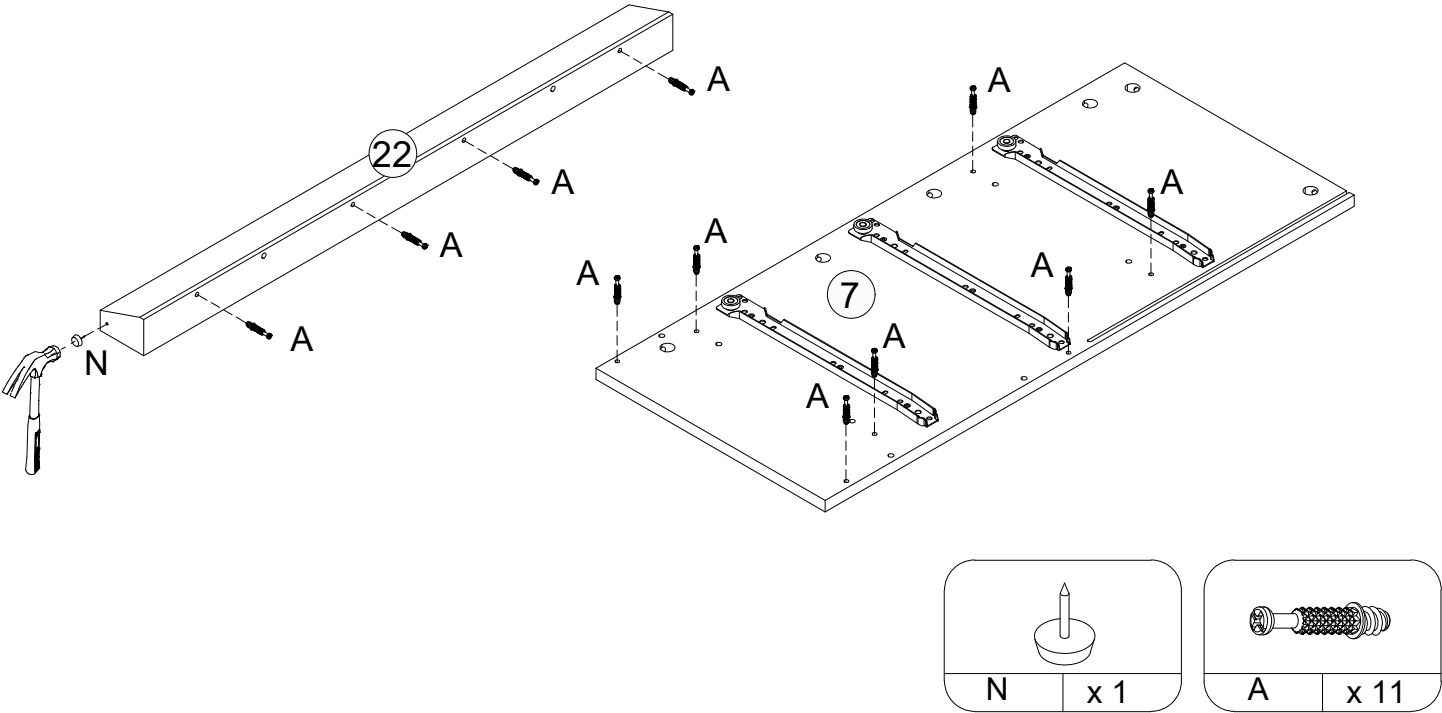





STEP 9

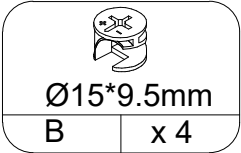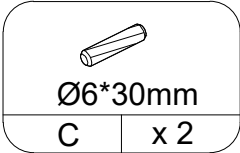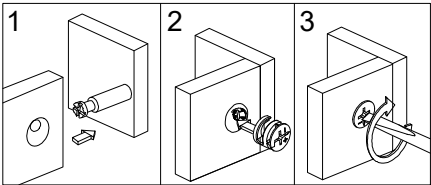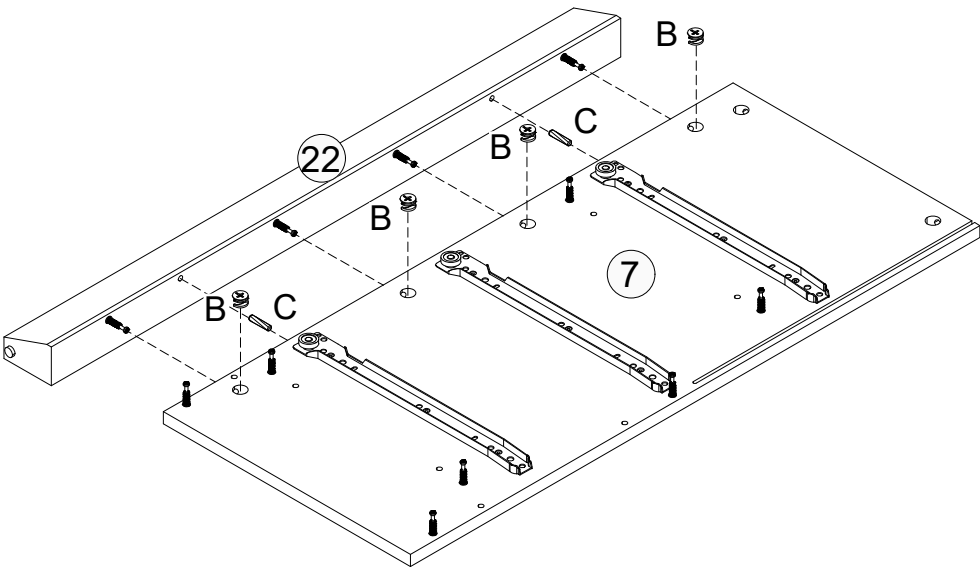





STEP 10

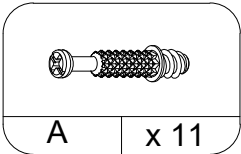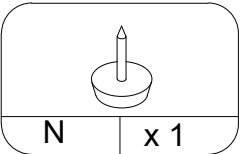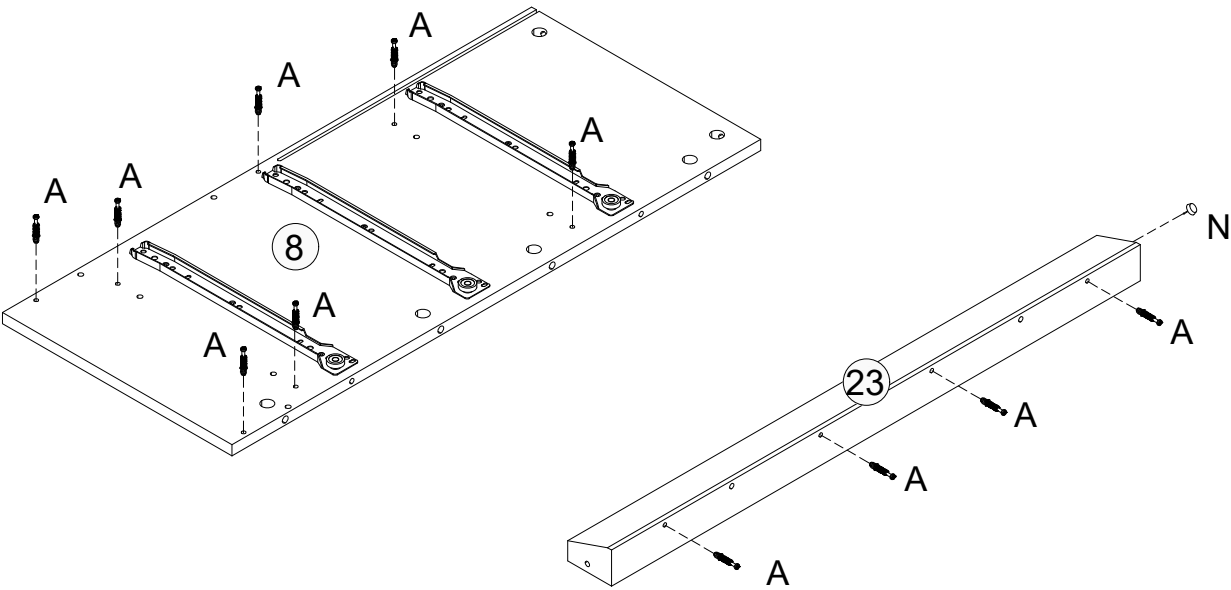

STEP 11

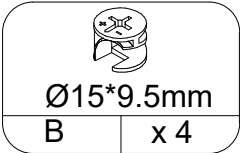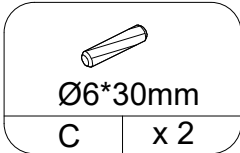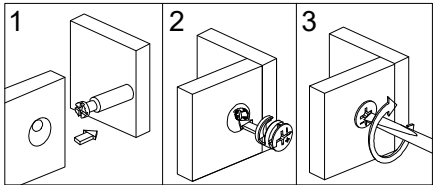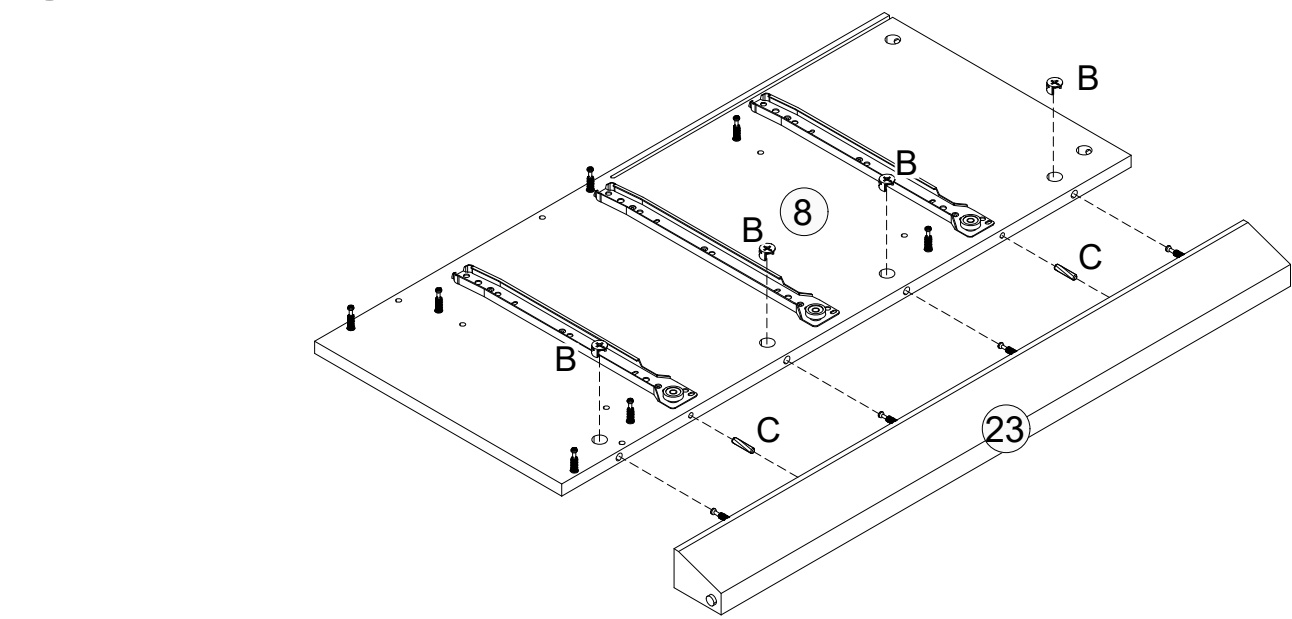


STEP12

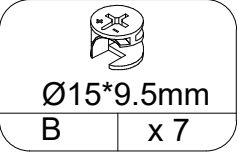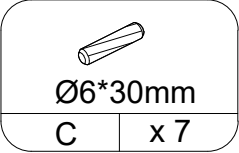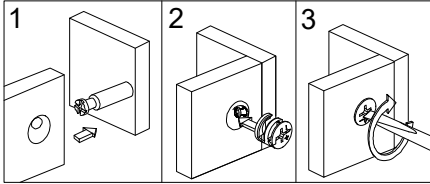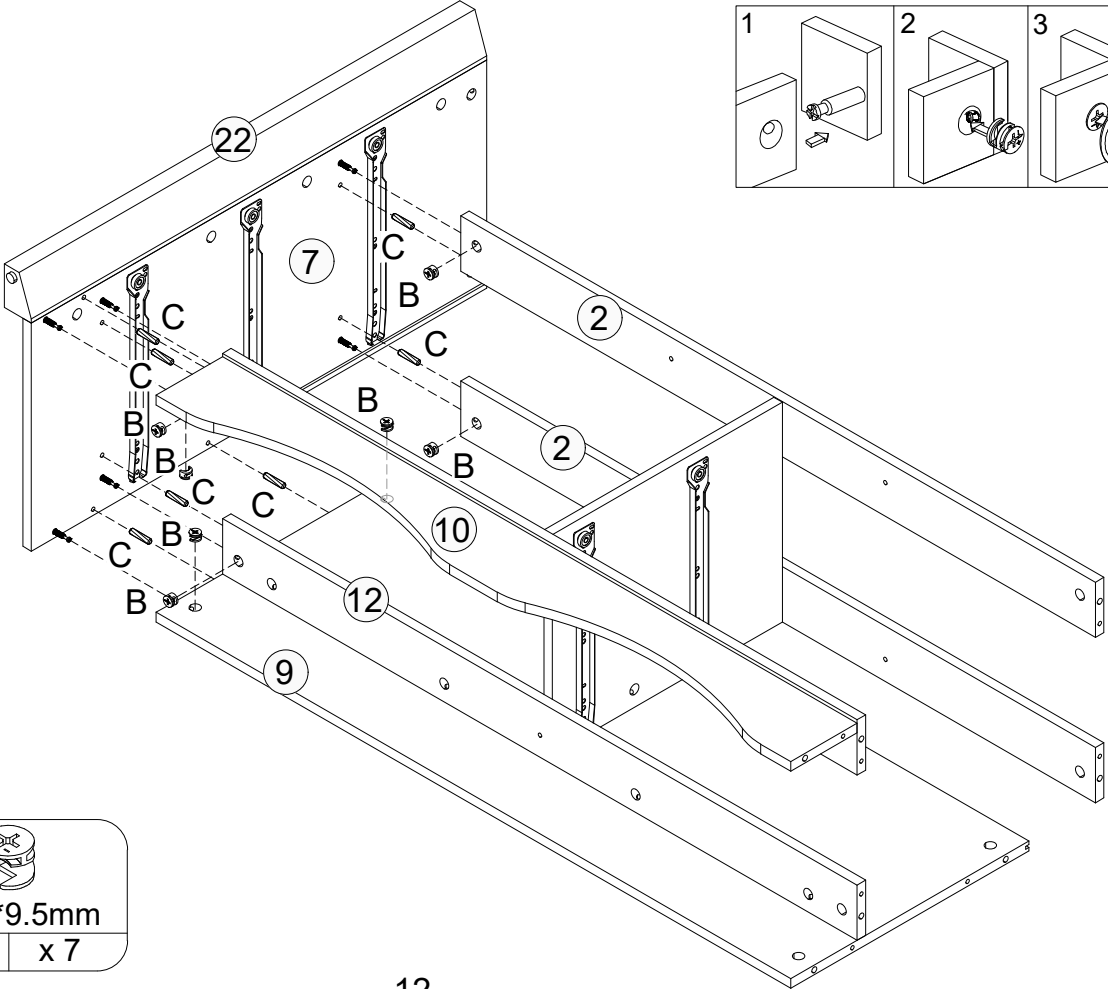

STEP 13



CAUTION: Heavy! You may need assistance with this step

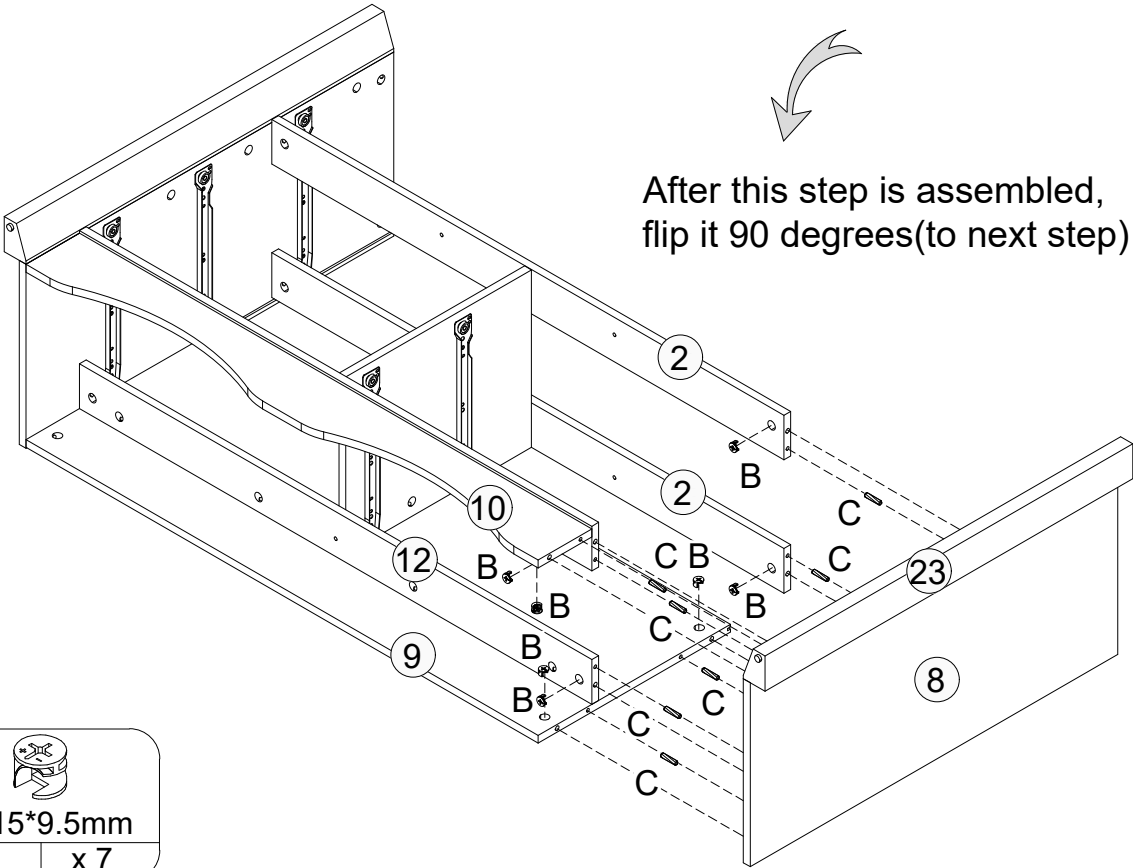





Ø6*30mm
C x 7




Ø15*9.5mm
B x 7

STEP14

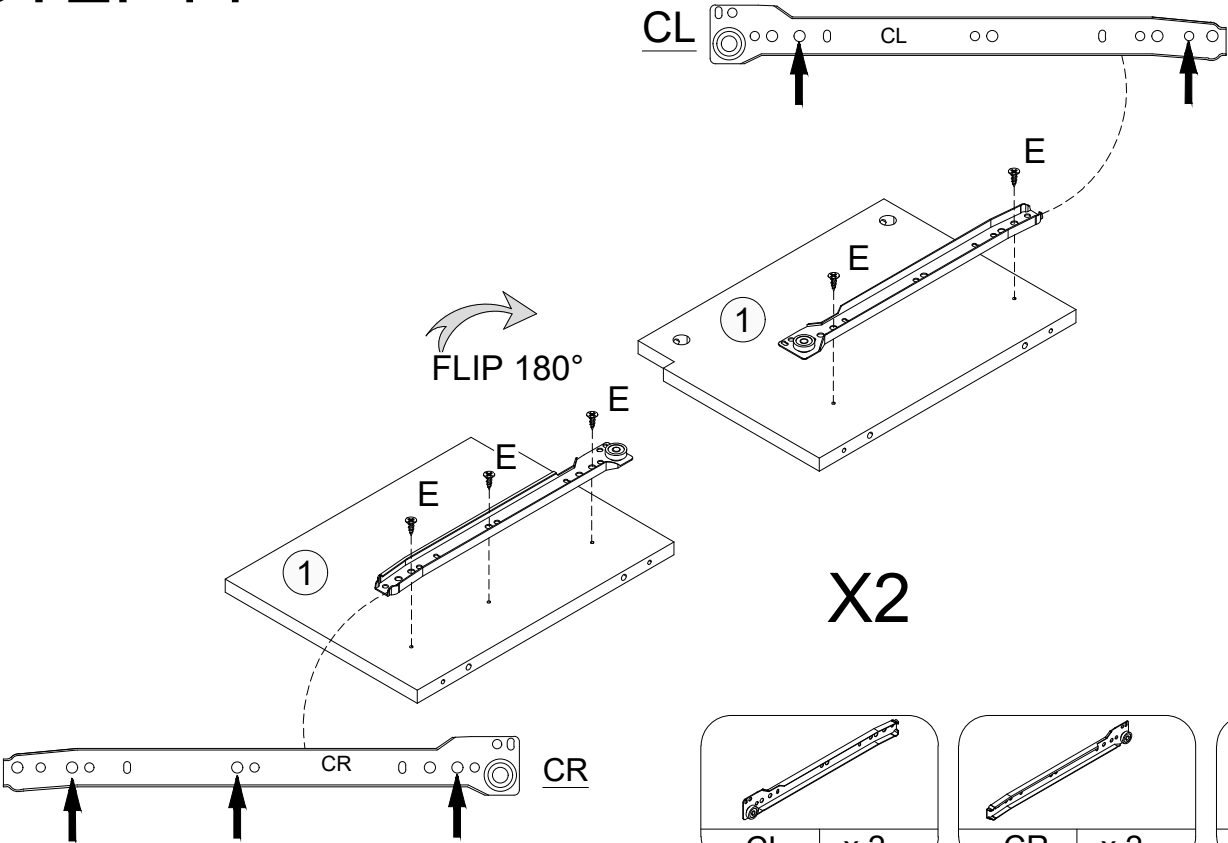



CL x 2




CR x 2




Ø3.5*12mm
E x 10


STEP 15

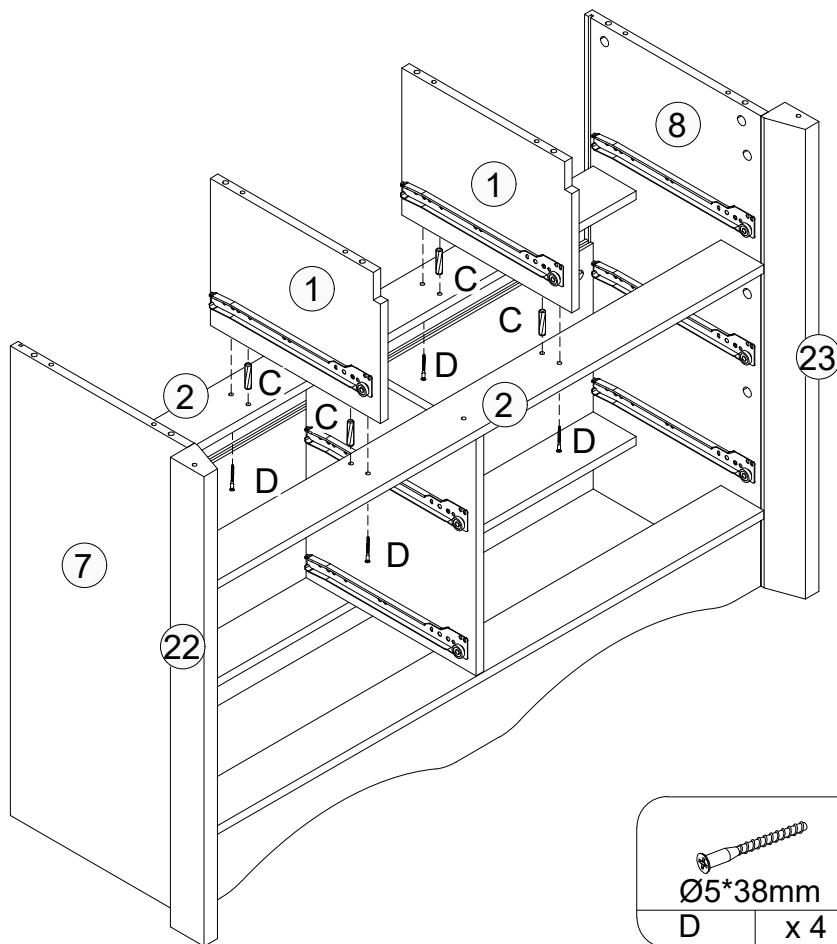


STEP 16

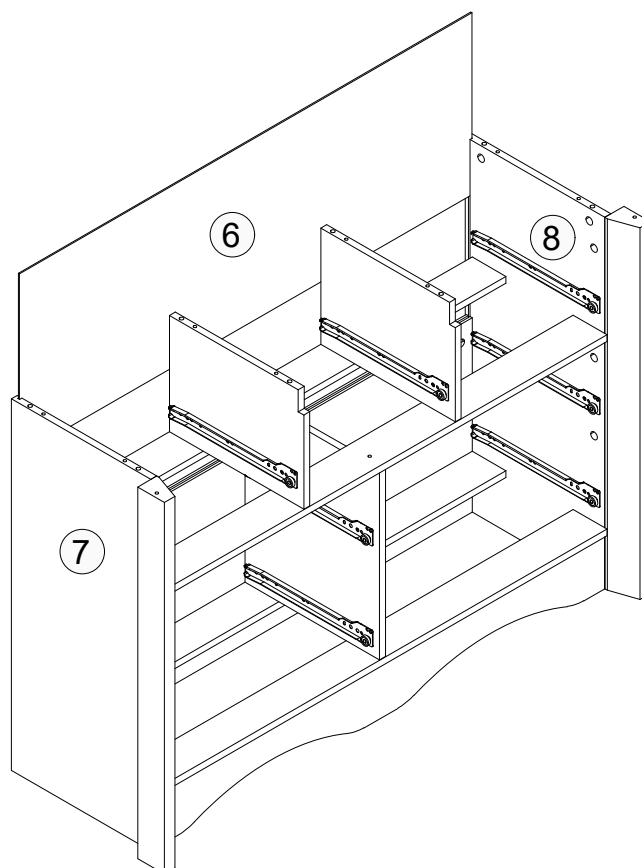



STEP 17

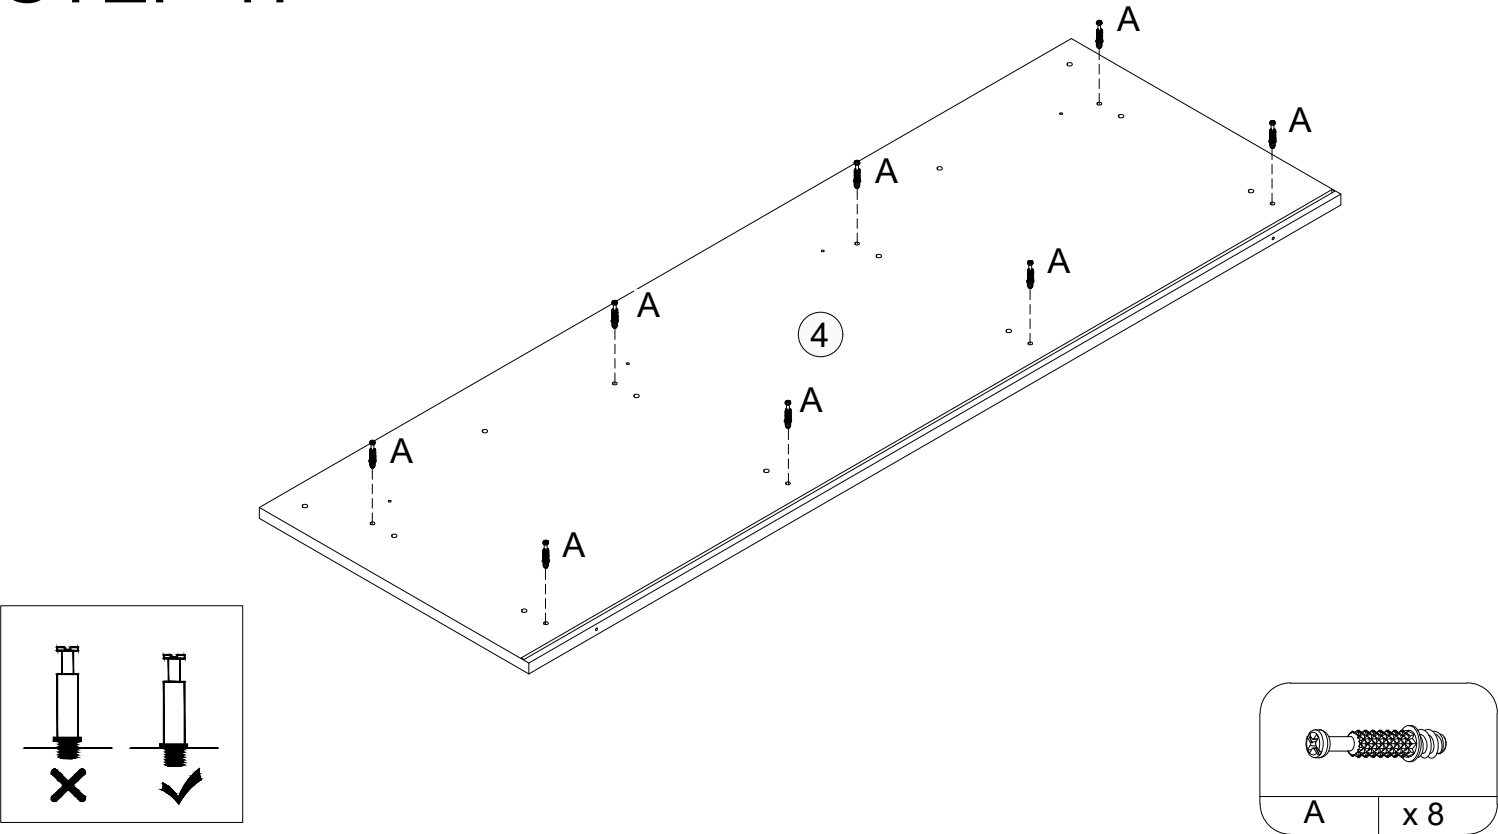

STEP 18

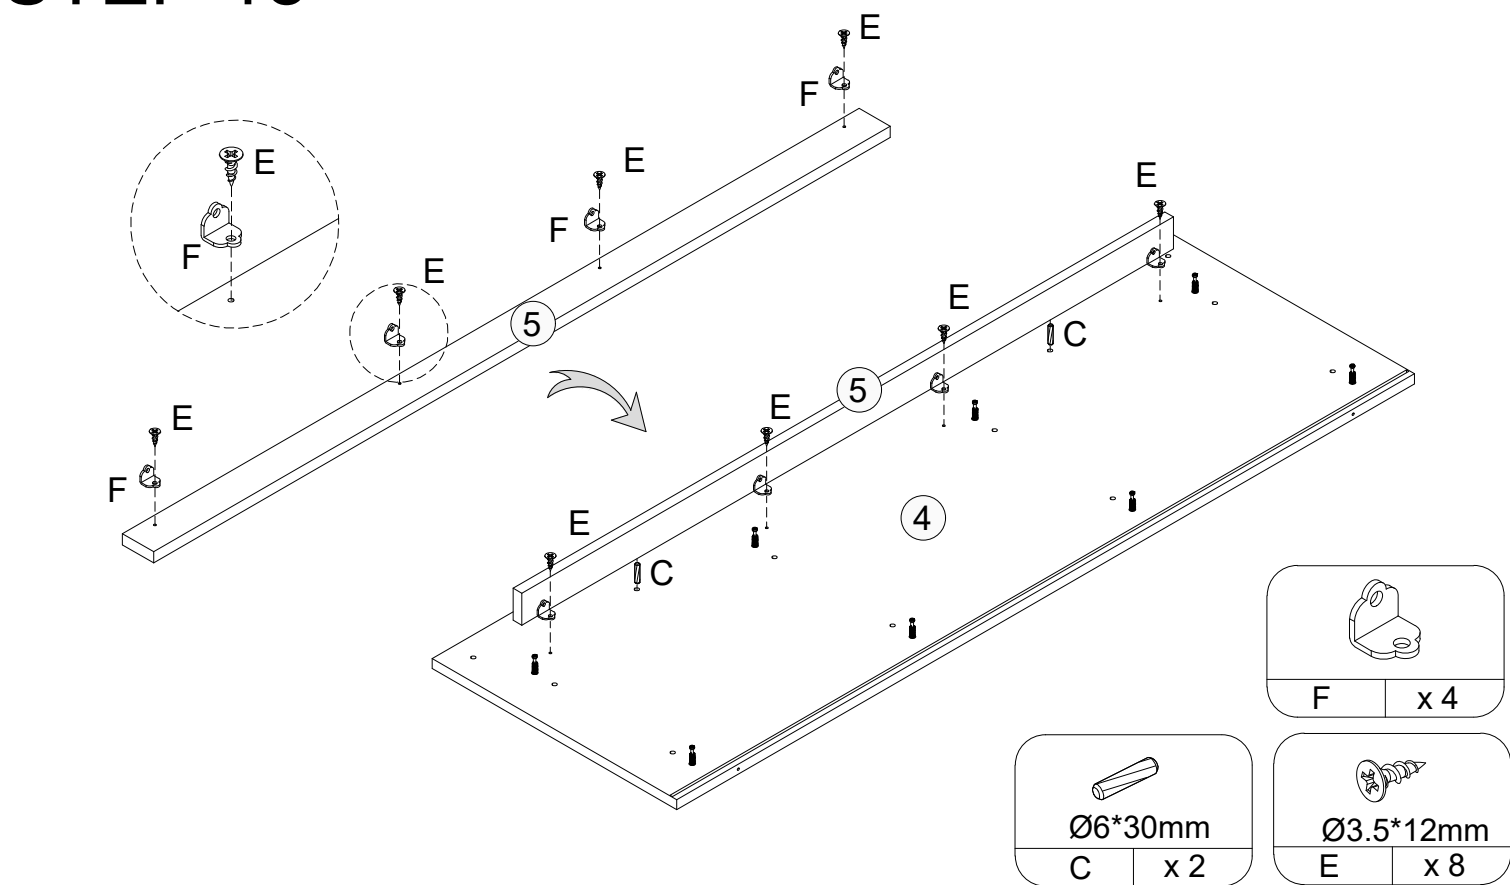

STEP 19

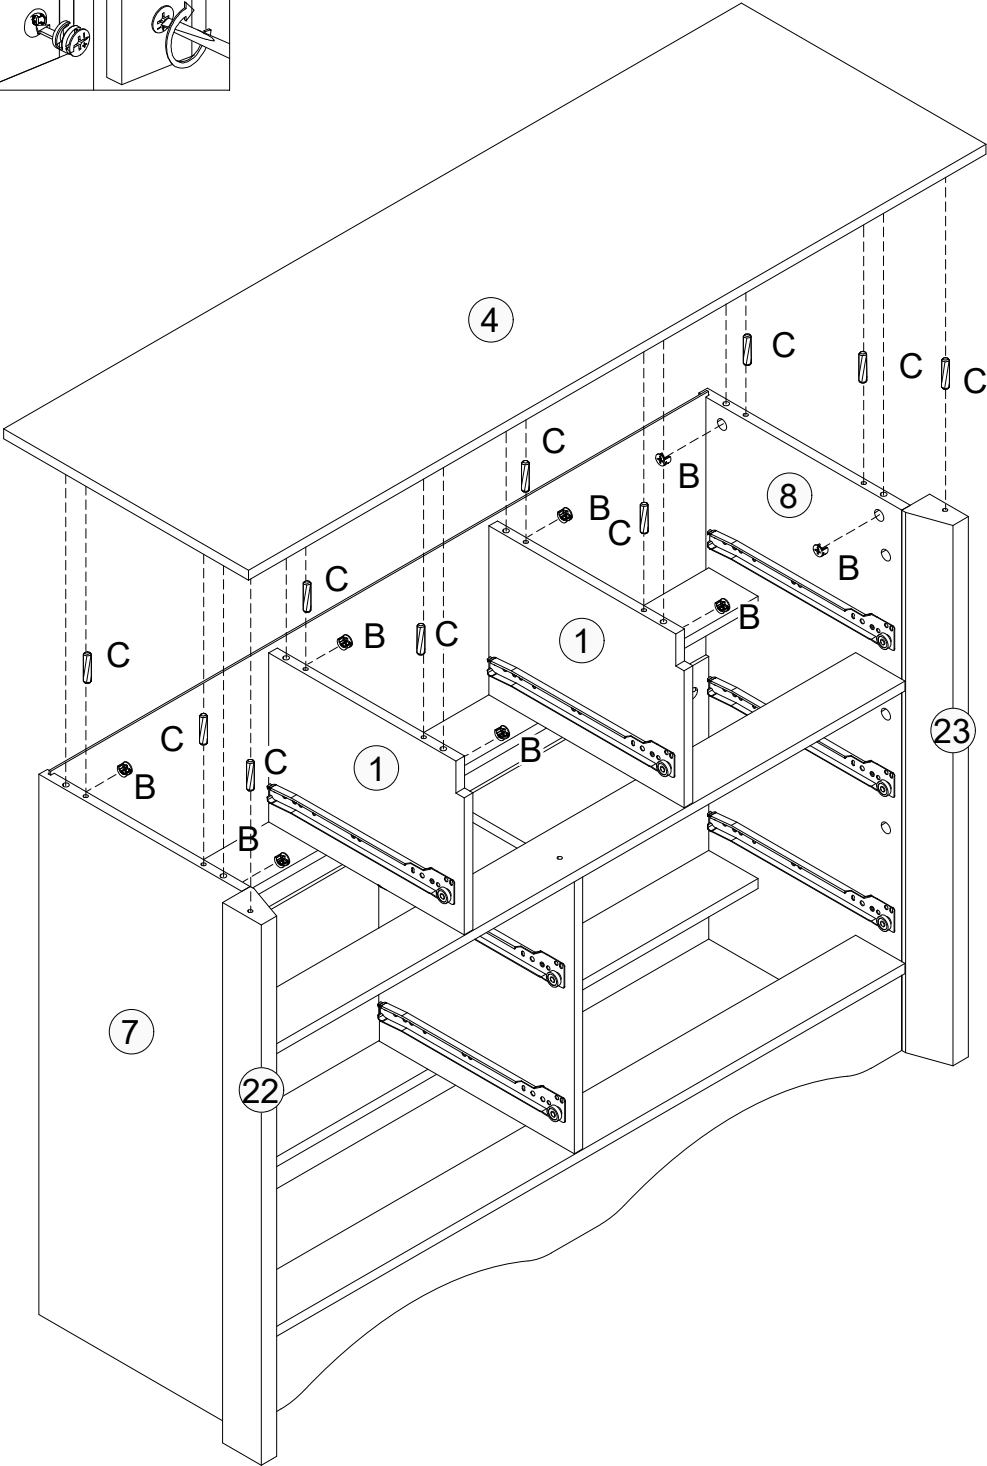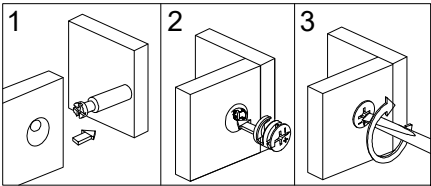



Ø6*30mm






Cx 10






Ø15*9.5mm

Bx 8


STEP 20

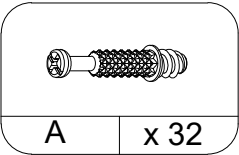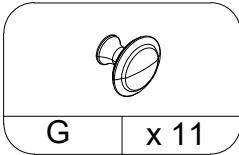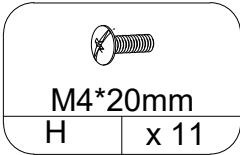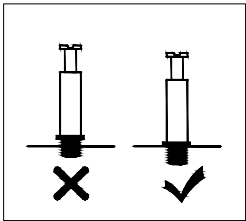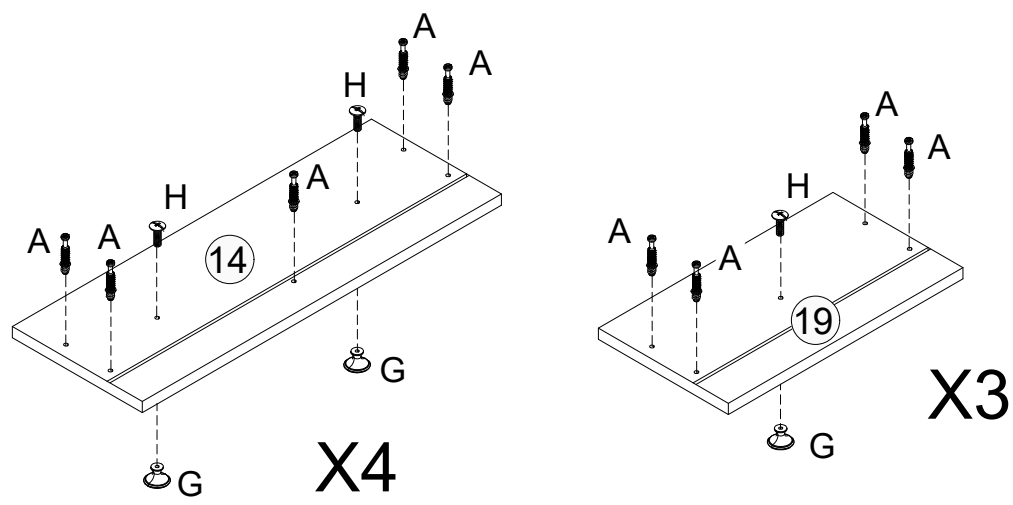



STEP 21

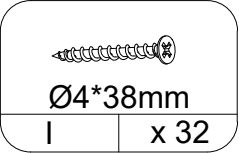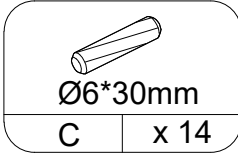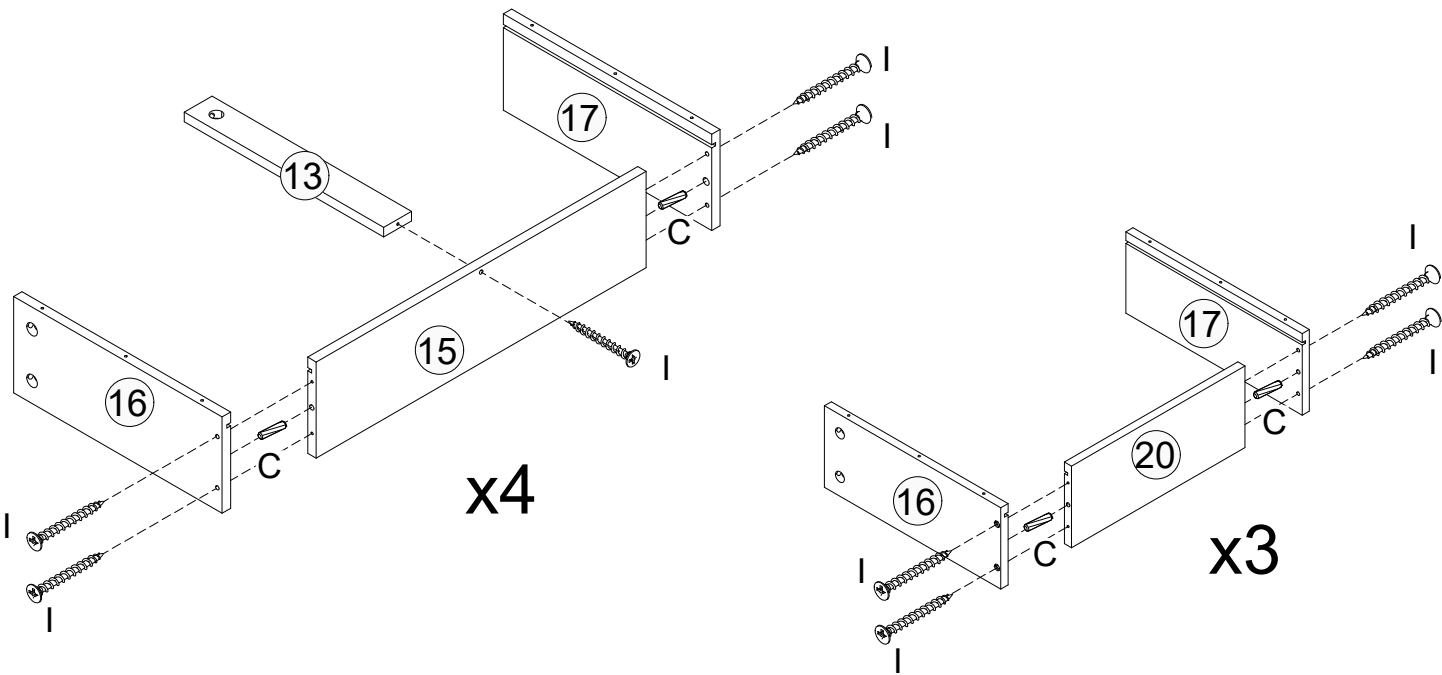





STEP 22

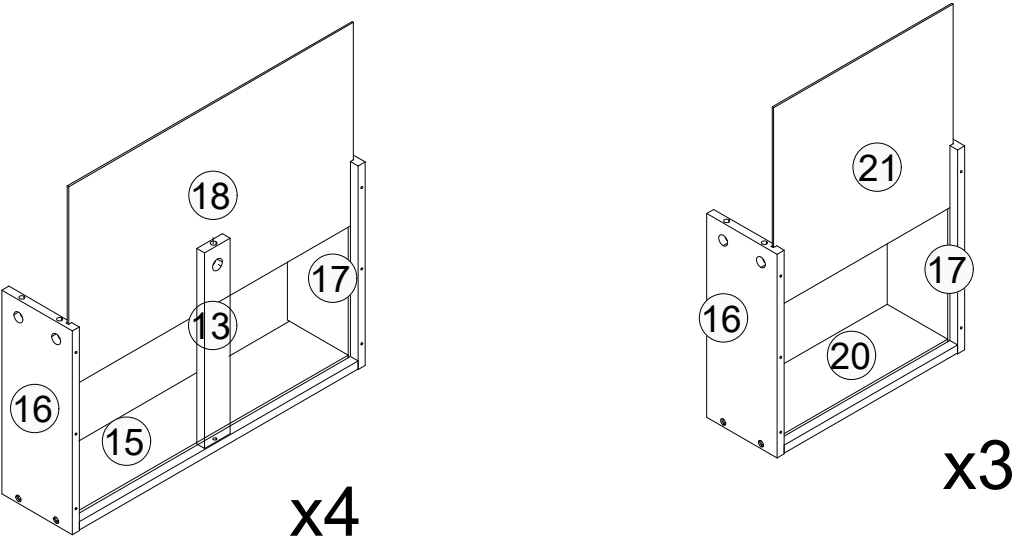


STEP 23

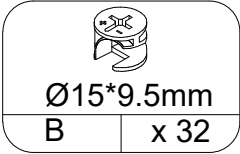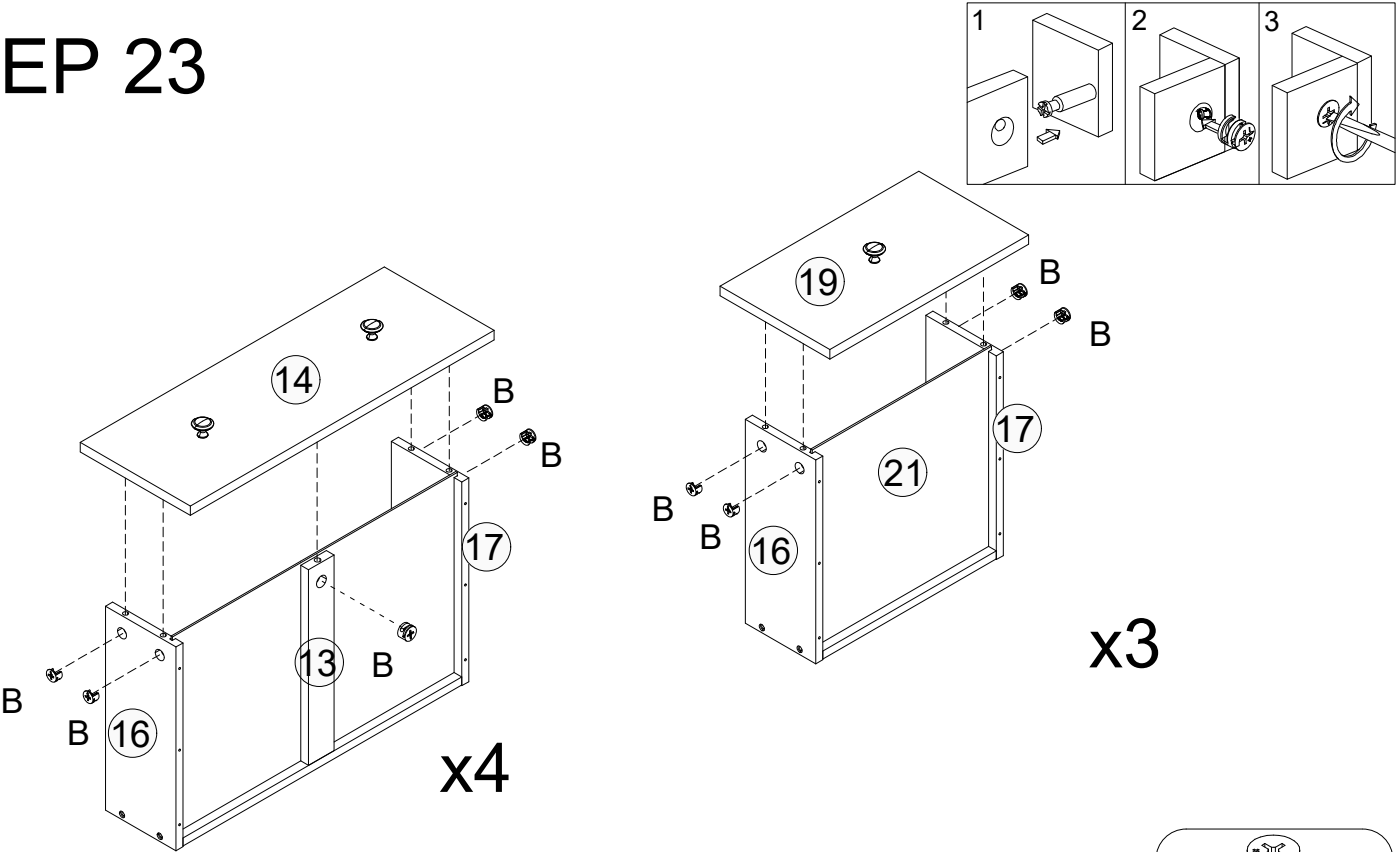


STEP 24

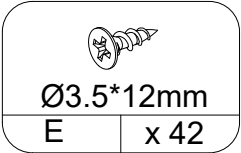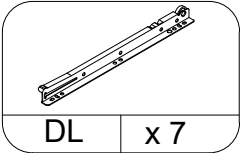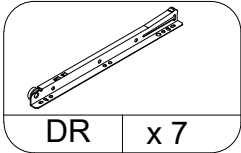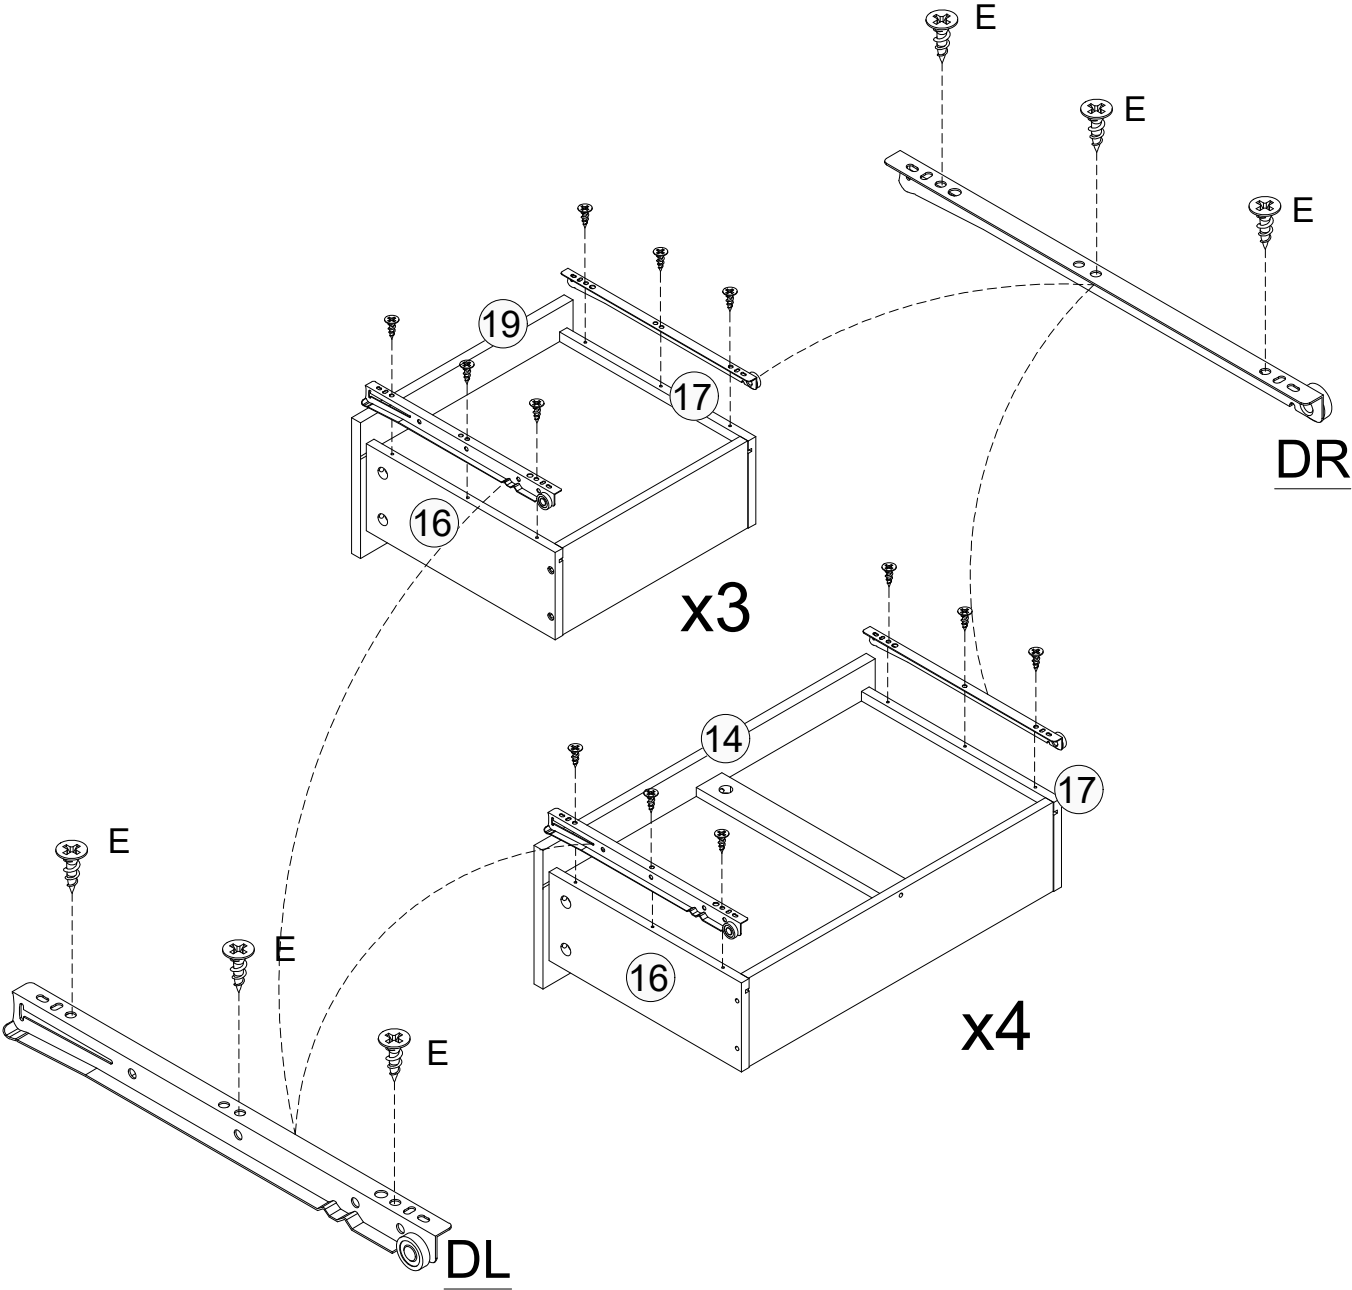


STEP 25

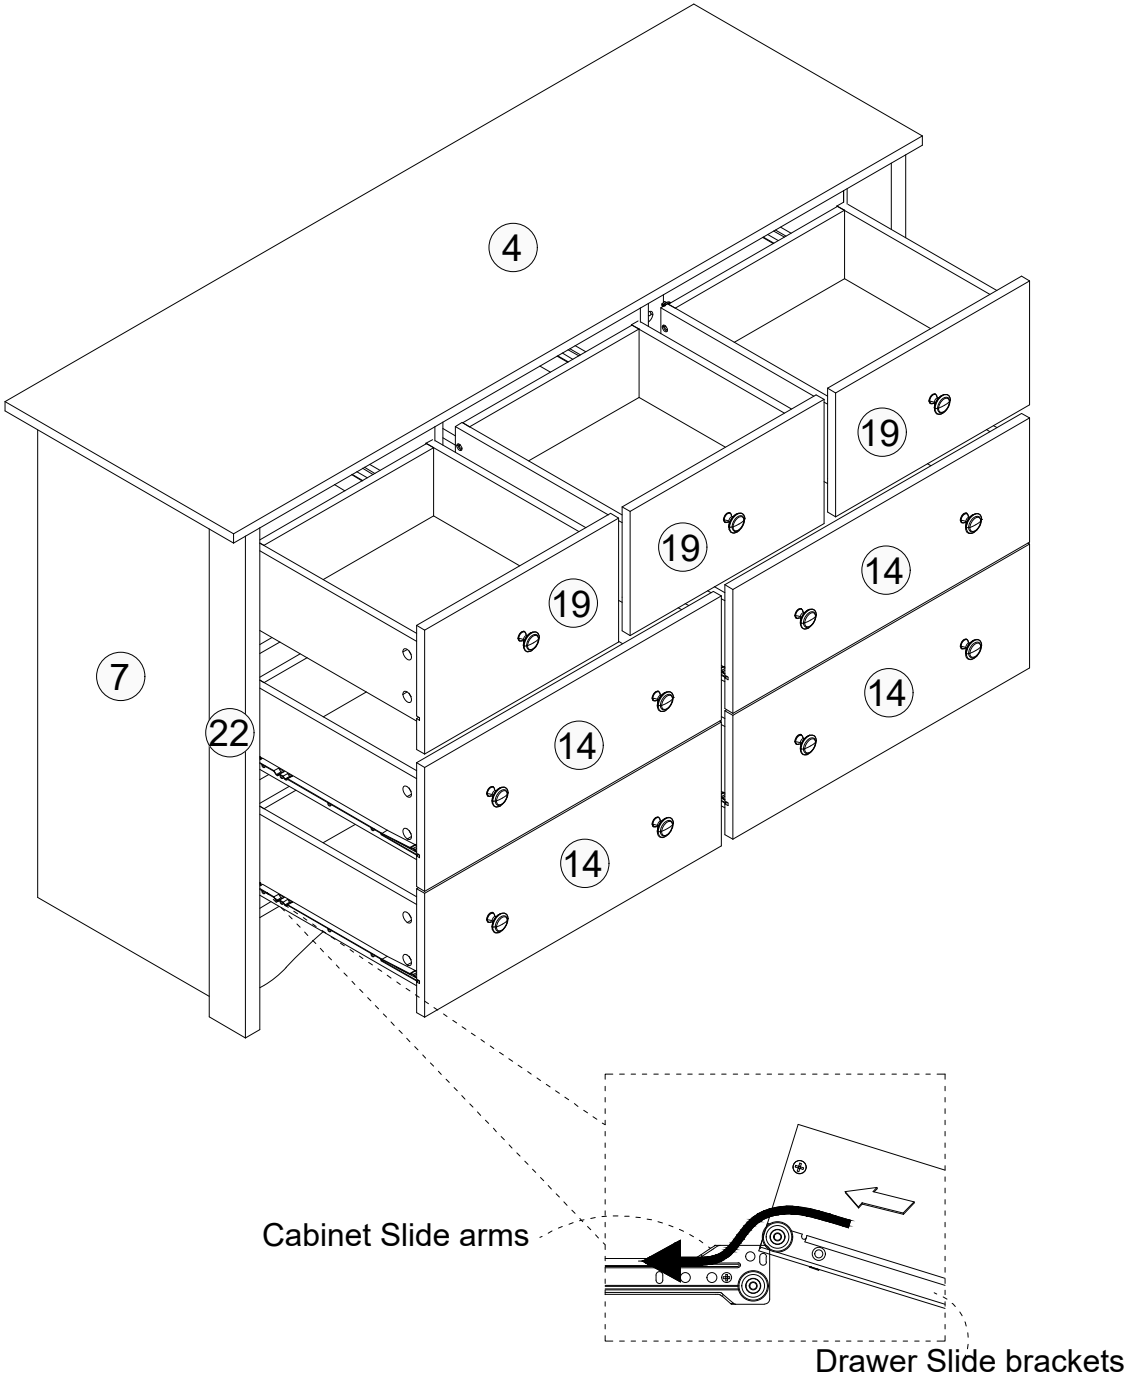

STEP 26

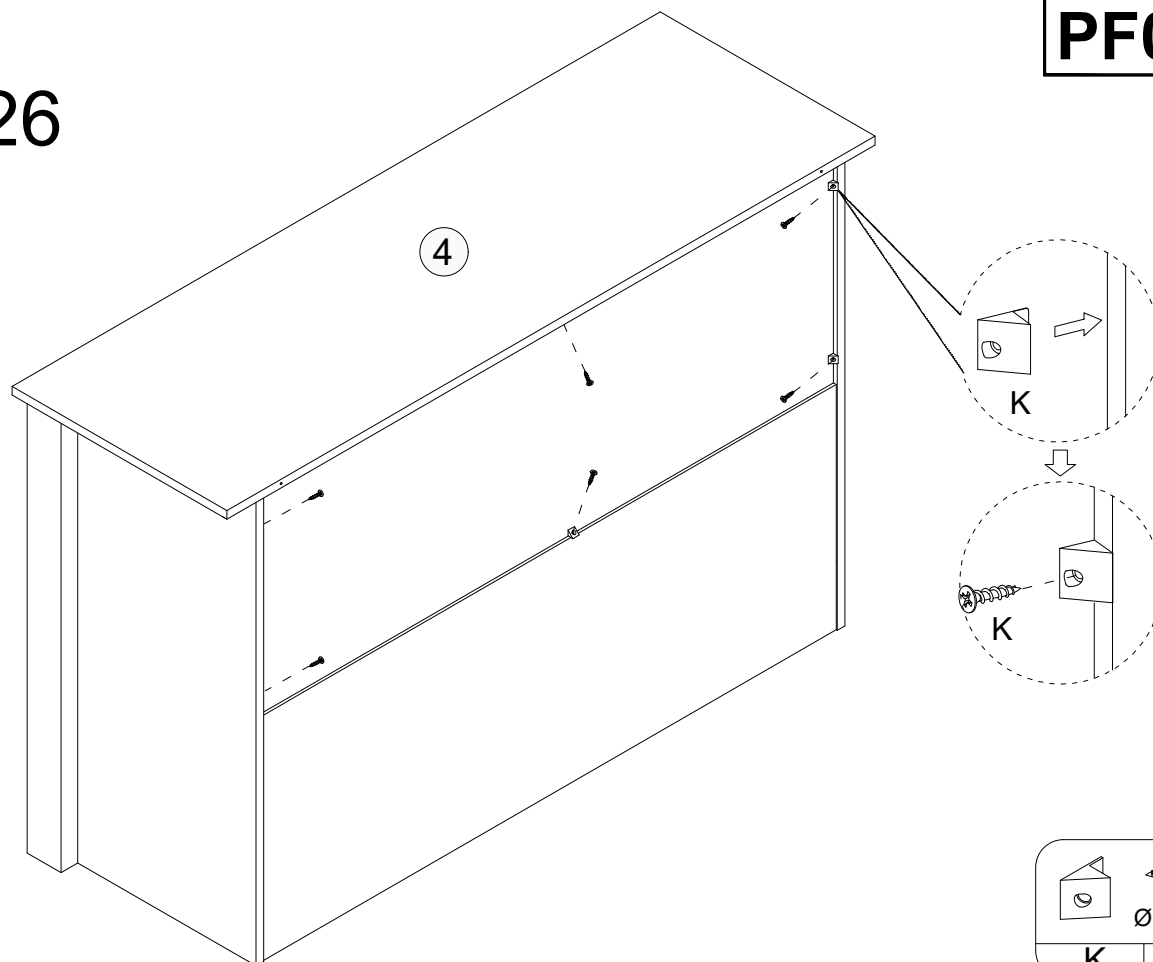



STEP 27

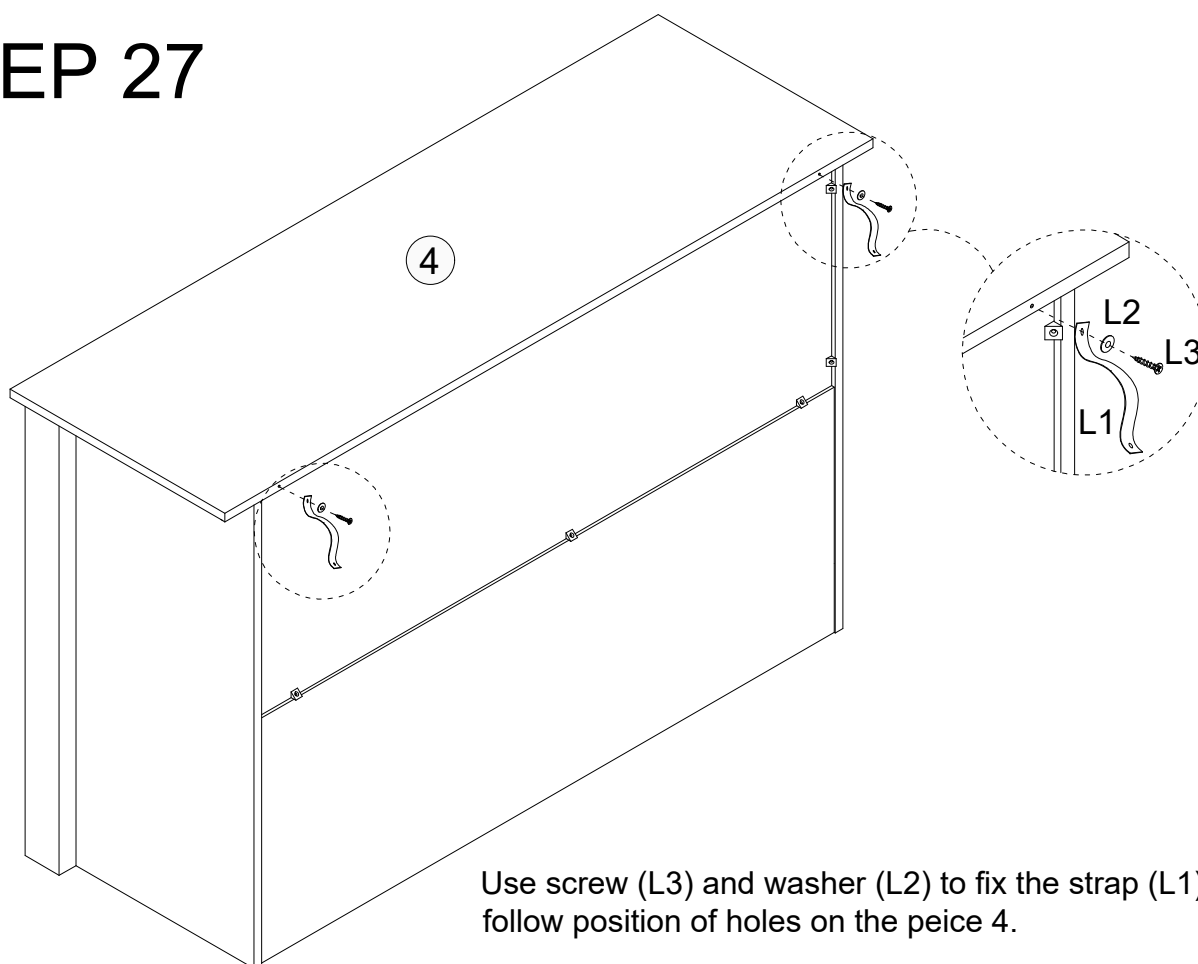

Use screw (L3) and washer (L2) to fix the strap (L1) follow position of holes on the peice 4.

L1 x 2
L2 x 2
L3 x 2

STEP 28

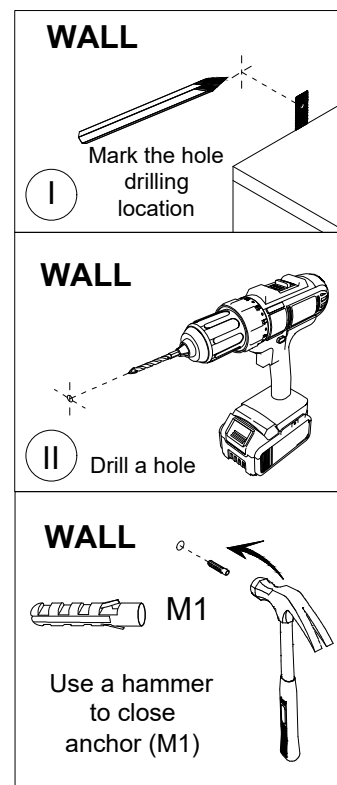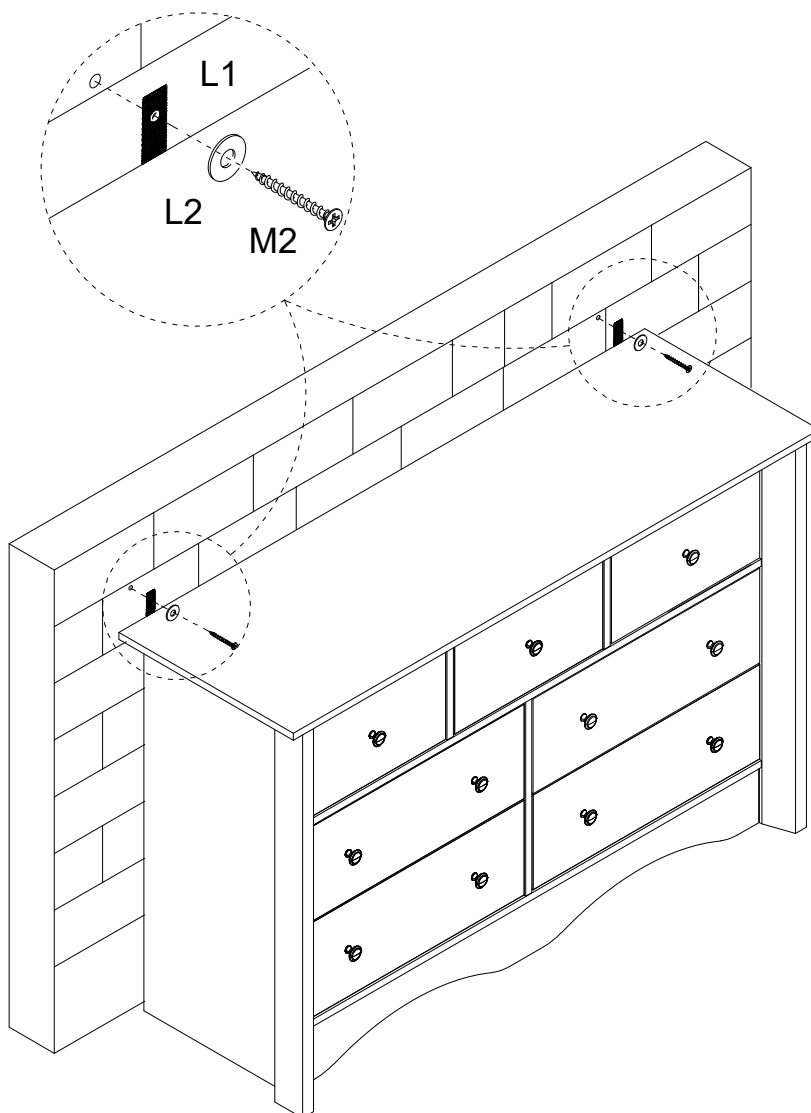

Step1: determine the location of the anti-overturning on the wall and then mark the position after confirming the product has been balanced.

Step 2: drill the hole and then fixed the anchor (M1) on the wall.

Step 3: use screw (M2) to fix the strap (L1), (L2) on the wall .

M1 x2
M2 x2
L2 x2

FURNITURE CARE AND MAINTENANCE

Medium - Density Fiberboard and Particle board

Thank you for your purchase. We want your item to last as long as possible. To ensure the product gives you years of service, please refer to this care and maintenance guide.



MAINTENANCE

- Tighten all bolts and screws again within the first 2 weeks of assembly
- Check the tightness of all bolts every 2 months, tighten them if necessary



CLEANING

- Clean the surface of the MDF (medium - density fiberboard) or PB (particle board) with a lightly dampened cloth.
- Small amount of mild soap can be used if necessary
- Dry the surface immediately after cleaning.

⚠ DO NOT use bleach or alcohol detergent to clean the surface.

⚠ DO NOT apply wood treatment on parts made with MDF and PB.

Medium - density fiberboard and Particle board will swell and distort when suffer from water damage.

Make sure to dry the furniture immediately after cleaning