

General Guidelines

.Please read the following instruction carefully and use the product accordingly..Please keep this manual and hand it over

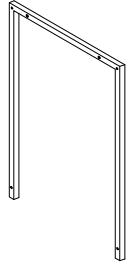
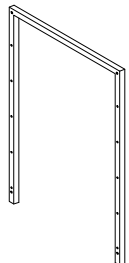
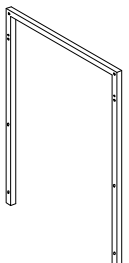


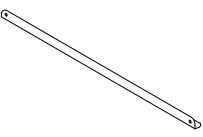
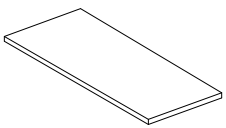
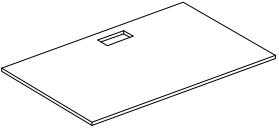
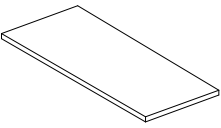
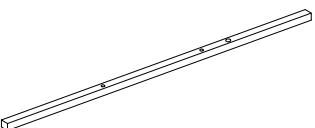


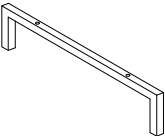
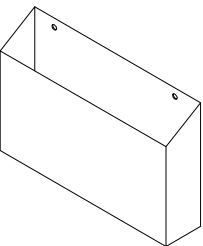
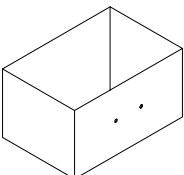















when you transfer the product.This summary may not include every detail of all variations and considered steps.Please contact us when further information and help are needed

Notes Product is intended for indoor use only. It must be assembled and used according to the instructions. The seller does not accept any responsibility for damage or injury resulting from improper assembly or use.

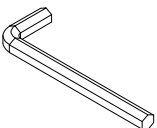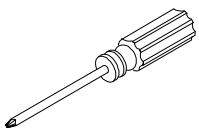
Please avoid long-term exposure to humid environment to prevent mildew.

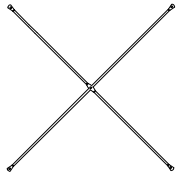-During assembly, align all screws with the corresponding pre-drilled holes first. Do not tighten the screws too tightly at the beginning of installation. Tighten screws after they are all assembled one by one. Inspect the screws regularly as screws may become loose during long-term use. If necessary, retighten them to ensure stability and security.



<p>①</p>  <p>x1</p>	<p>②</p>  <p>x1</p>	<p>③</p>  <p>x1</p>	<p>④</p>  <p>x2</p>	<p>⑤</p>  <p>x2</p>	<p>⑥</p>  <p>x14</p>
<p>⑦</p>  <p>x1</p>	<p>⑧</p>  <p>x1</p>	<p>⑨</p>  <p>x2</p>	<p>⑩</p>  <p>x2</p>	<p>⑪</p>  <p>x1</p>	<p>⑫</p>  <p>x1</p>
<p>⑬</p>  <p>x2</p>	<p>⑭</p>  <p>x1</p>	<p>⑮</p>  <p>x7</p>	<p>⑯</p>  <p>x7</p>	<p>A</p>  <p>M6-35x14</p>	<p>B</p>  <p>M6-30x8</p>
<p>C</p>  <p>M4-10x21</p> <p>x1</p>	<p>D</p>  <p>x8</p>	<p>E</p>  <p>x8</p>	<p>F</p>  <p>x1</p>	<p>G</p>  <p>x1</p>	<p>H</p>  <p>M5-40x8</p>
<p>I</p>  <p>M6-45x4</p>	<p>J</p>  <p>M6-20x2</p>	<p>K</p>  <p>M4-8x12</p>	<p>L</p>  <p>M6-10x4</p>	<p>M</p>  <p>x1</p>	<p>N</p>  <p>x1</p>

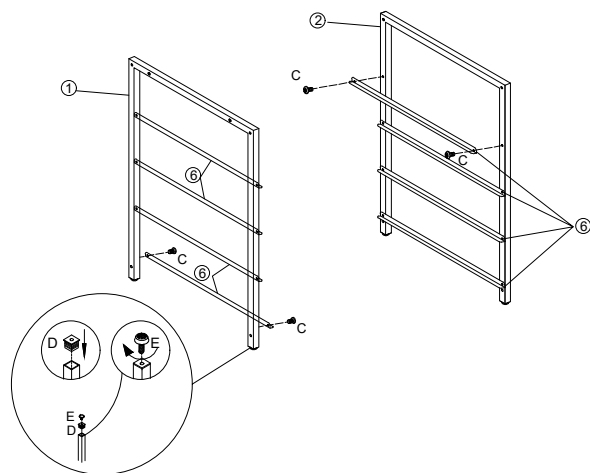
STEP 1



Install D and E at the bottom of numbers 1, 2, 3, and 11.


Use screw C to link frame NO.6 to frames NO. 1 and NO.2 respectively

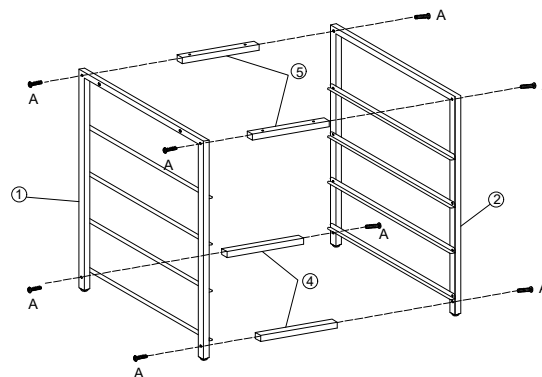STEP 2




Use screw A to connect NO. 4 and NO. 5 to frame 1 and frame 2
Note that the NO.5 large circular hole is facing downwards.

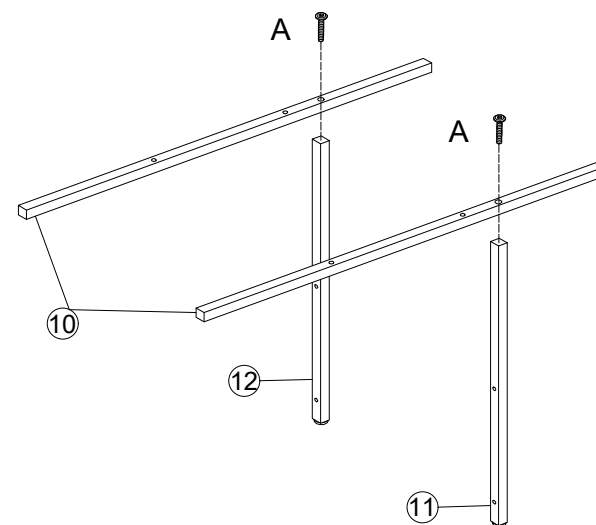STEP 3




Use screw A to connect NO. 10, NO.11, and NO.12, with NO. 12 at the back.

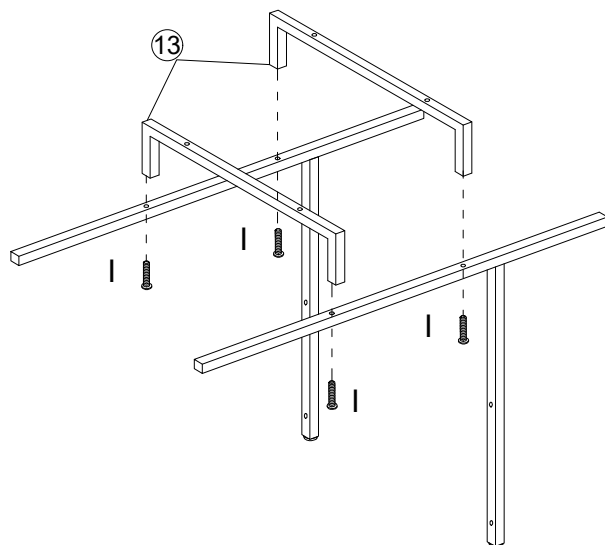STEP 4




Use screw I to connect NO. 13 and step 3

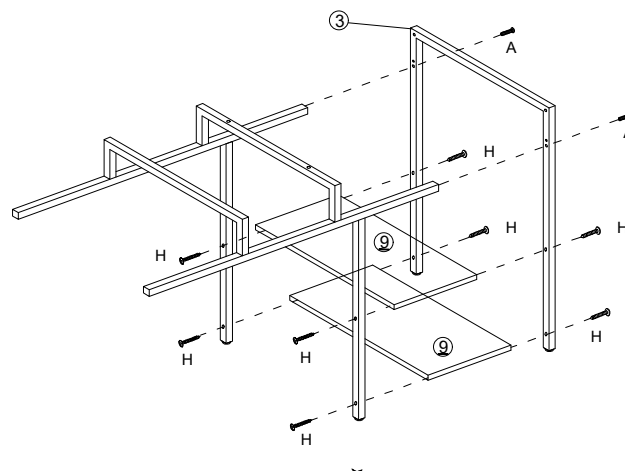STEP 5




Use screws A and H to connect and fix NO.9 to NO. 3 and step 4,

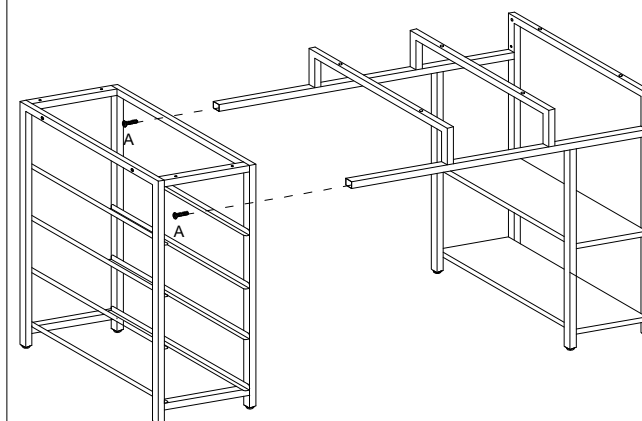STEP 6




Use screw A to connect step 2 and step 5.

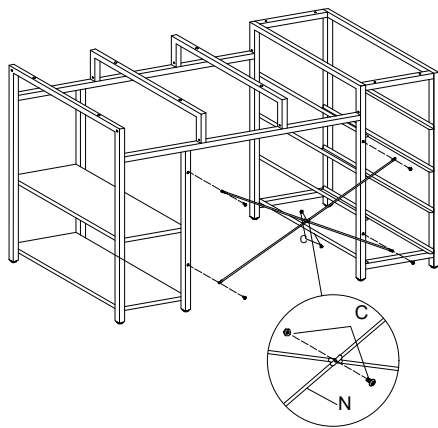STEP 7




Connect N to the back of the computer desk using screw C

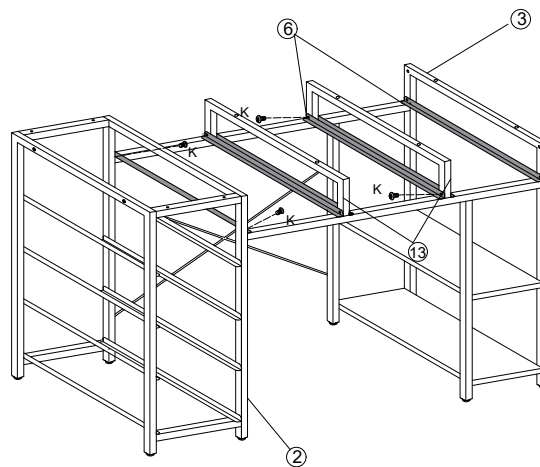STEP 8




Use screw K to connect No. 6 to No. 2, No. 3, and No. 13 respectively.

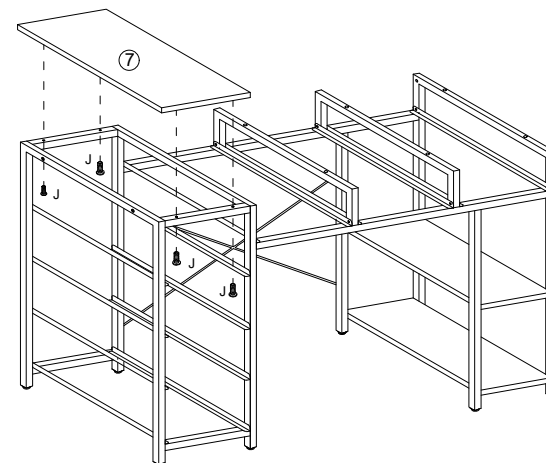STEP 9




Use screw J to connect steps 2 and 7.

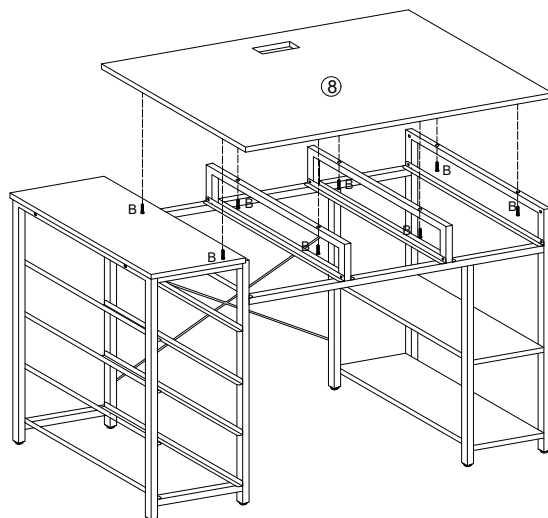STEP 10




Connect screw B to NO. 8 and step 5

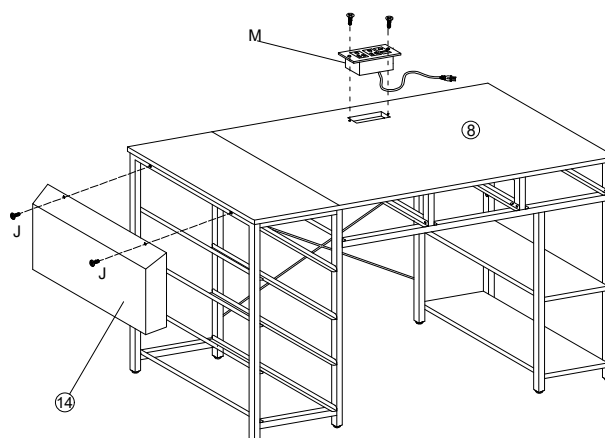STEP 11



Install M onto board 8 using the screws provided with M.
Then use screw J to install the No. 14 onto the frame.

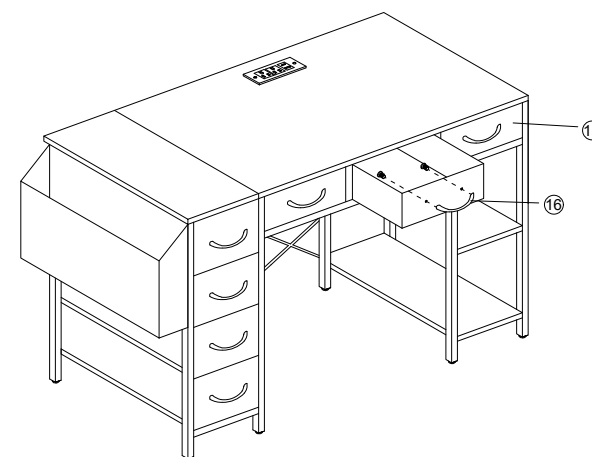STEP 12



Install handle 16 onto drawer 15.
Then push the corresponding drawer into the computer desk