



# Assembly Instructions

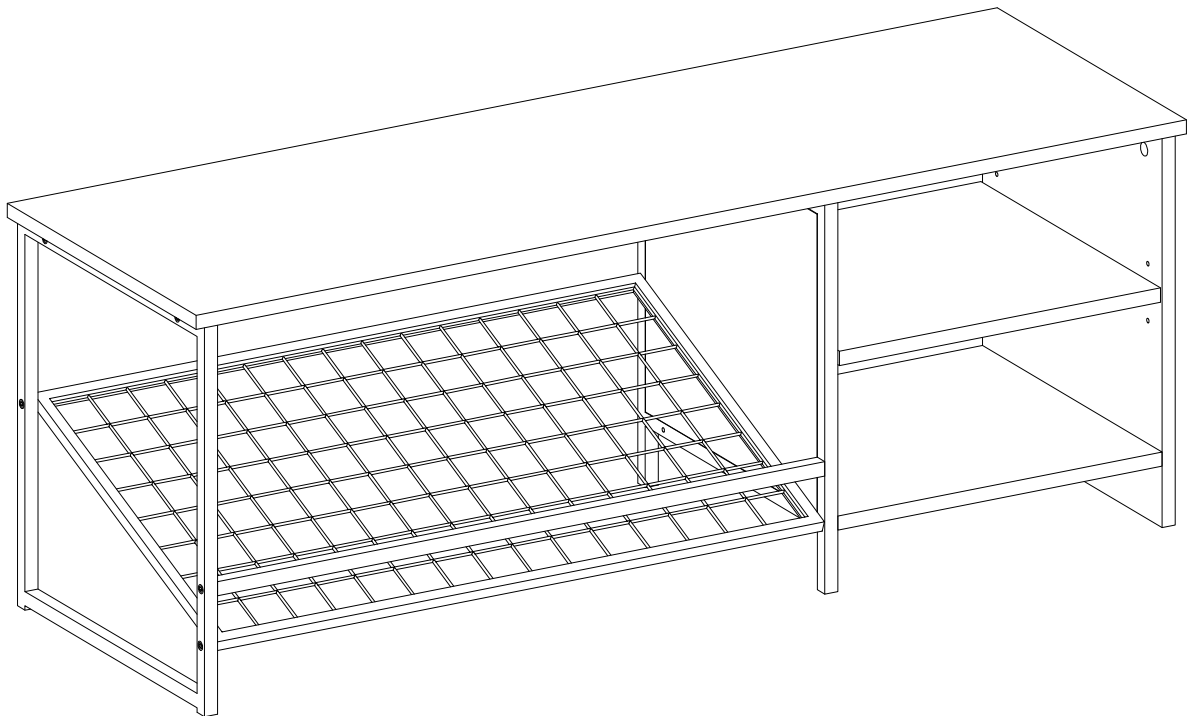


*Please visit our website for the most current instructions, assembly tips, report damage, or request parts.*

# General Assembly Guidelines


- I. Ensure that all parts and hardware are available before beginning assembly.
- II. Follow each step carefully to ensure the proper assembly of this product.
- III. Two people are recommended for ease in the assembly of this product.
- IV. The three main types of hardware used to assemble this product are: wood dowels, screws and bolts.
- V. The provided glue is to secure wood dowels in place. When first inserting dowels, locate the appropriate hole for the dowel, place a small amount of glue in the hole and insert the dowel. Wipe away excess glue immediately.

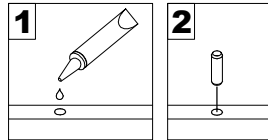


In future assembly steps when dowels are necessary to attach assembly parts together, place a small amount of glue on the end of the dowel before attaching parts together. Wipe away excess glue immediately.

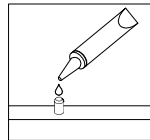

- VI. A Phillips head screwdriver is required for the assembly of this product.

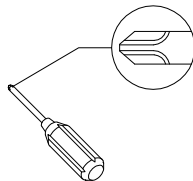


- VII. Power tools should not be used to assemble this product.

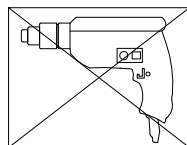



- VIII. Drill may be needed for securing product to wall.

# Parts List

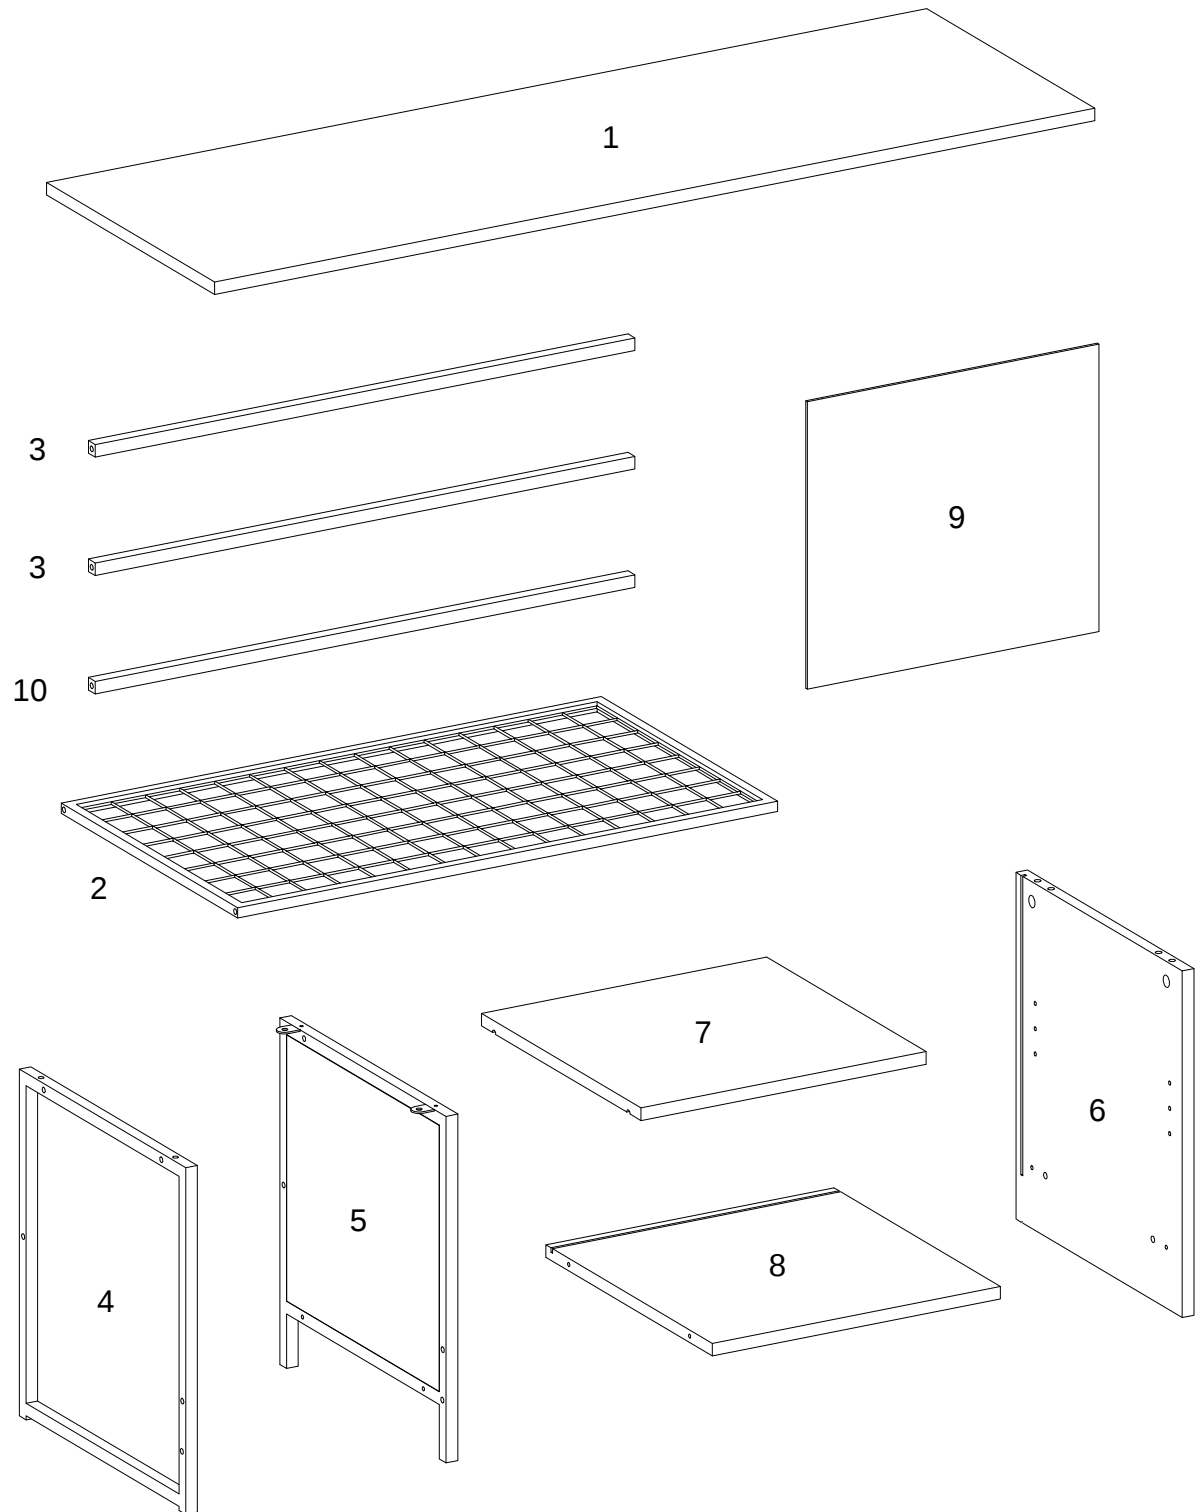

# Hardware List


|   |                                                                                     |          |                   |        |
|---|-------------------------------------------------------------------------------------|----------|-------------------|--------|
| A |    | Ø8x30mm  | Wooden dowel      | 4 pcs  |
| B |    | Ø15x11mm | Cam lock          | 4 pcs  |
| C |    | Ø6x35mm  | Cam bolt          | 4 pcs  |
| D |    | Ø30mm    | Sticker           | 4 pcs  |
| E |    | M 4      | Hex Key           | 1 pc   |
| F |    | Ø6x12mm  | Bolt              | 2 pcs  |
| G |    | Ø6x25mm  | Bolt              | 12 pcs |
| J |    |          | Shelf support pin | 4 pcs  |
| K |    | Ø4x38mm  | Screw             | 2 pcs  |
| L |    |          | Plastic wedge     | 3 pcs  |
| M |   | Ø3x17mm  | Screw             | 3 pcs  |
| N |  |          | Glue tube         | 1 pc   |

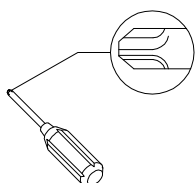

Philips head screwdriver required for assembly  
(not included)


*The hardware quantities listed above are required for proper assembly.  
Some extra hardware may also have been included.*

# Step 1

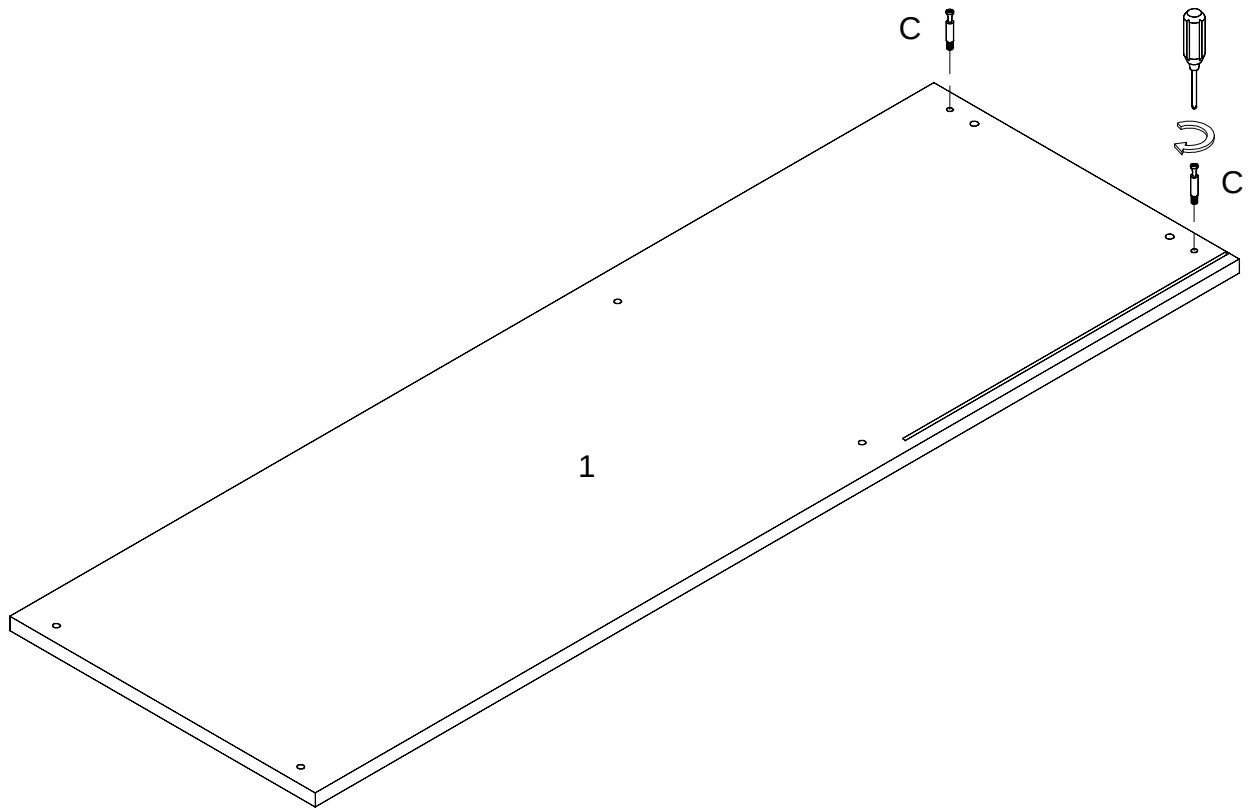


Using cam bolt (C) secure part (1) with Philips head screwdriver as per diagram.

## Step 2

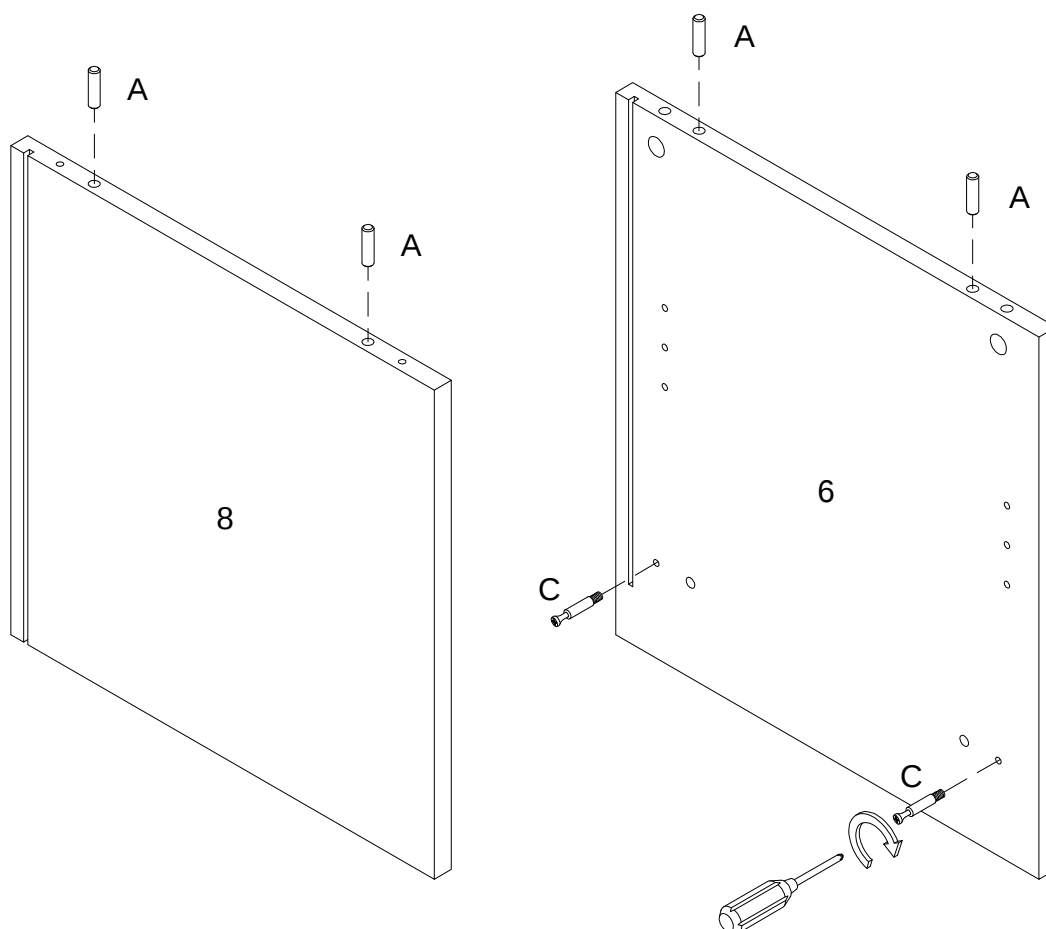



Insert wooden dowel (A) into parts (6,8) and screw cam bolt (C) into designated hole on the side panel as per diagram.

## Step 3

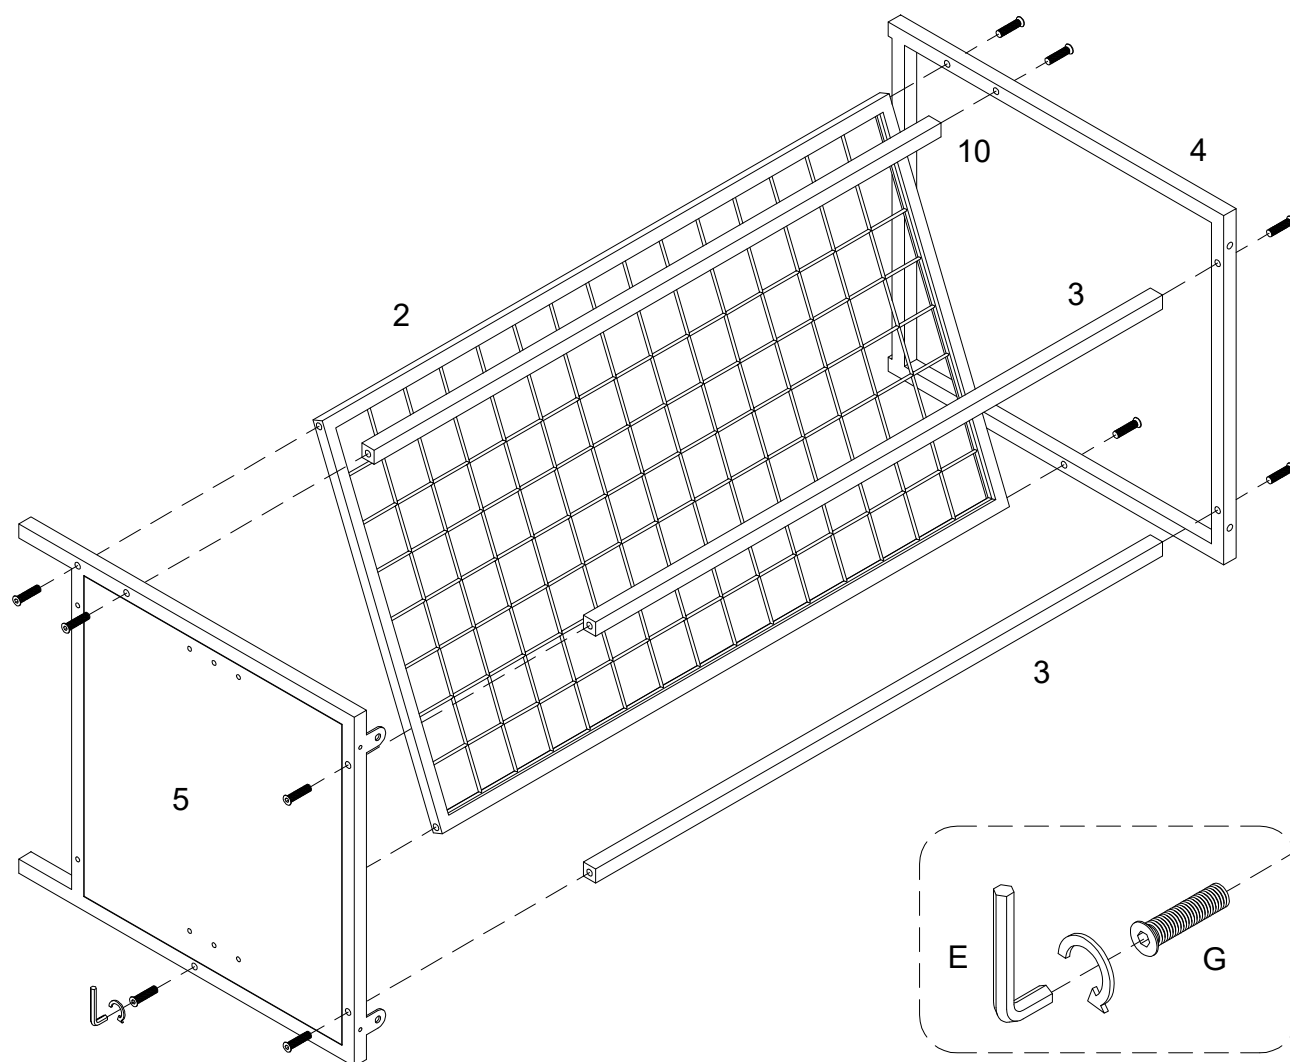


Using bolt (G) secure parts (4,5) into parts (2,3,10 ) with hex key (E) as per diagram.

## Step 4

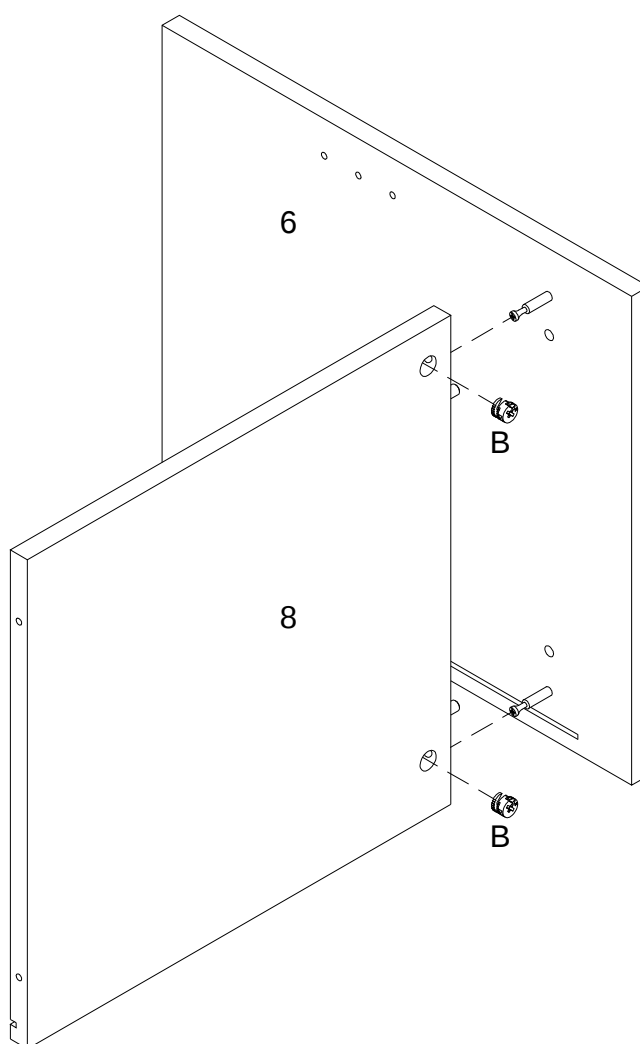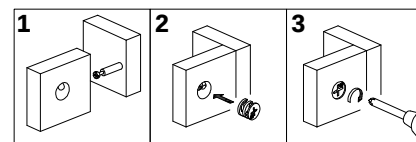


Attach and align the bottom panel (8) to side panel (6) using cam lock (B).

## Step 5

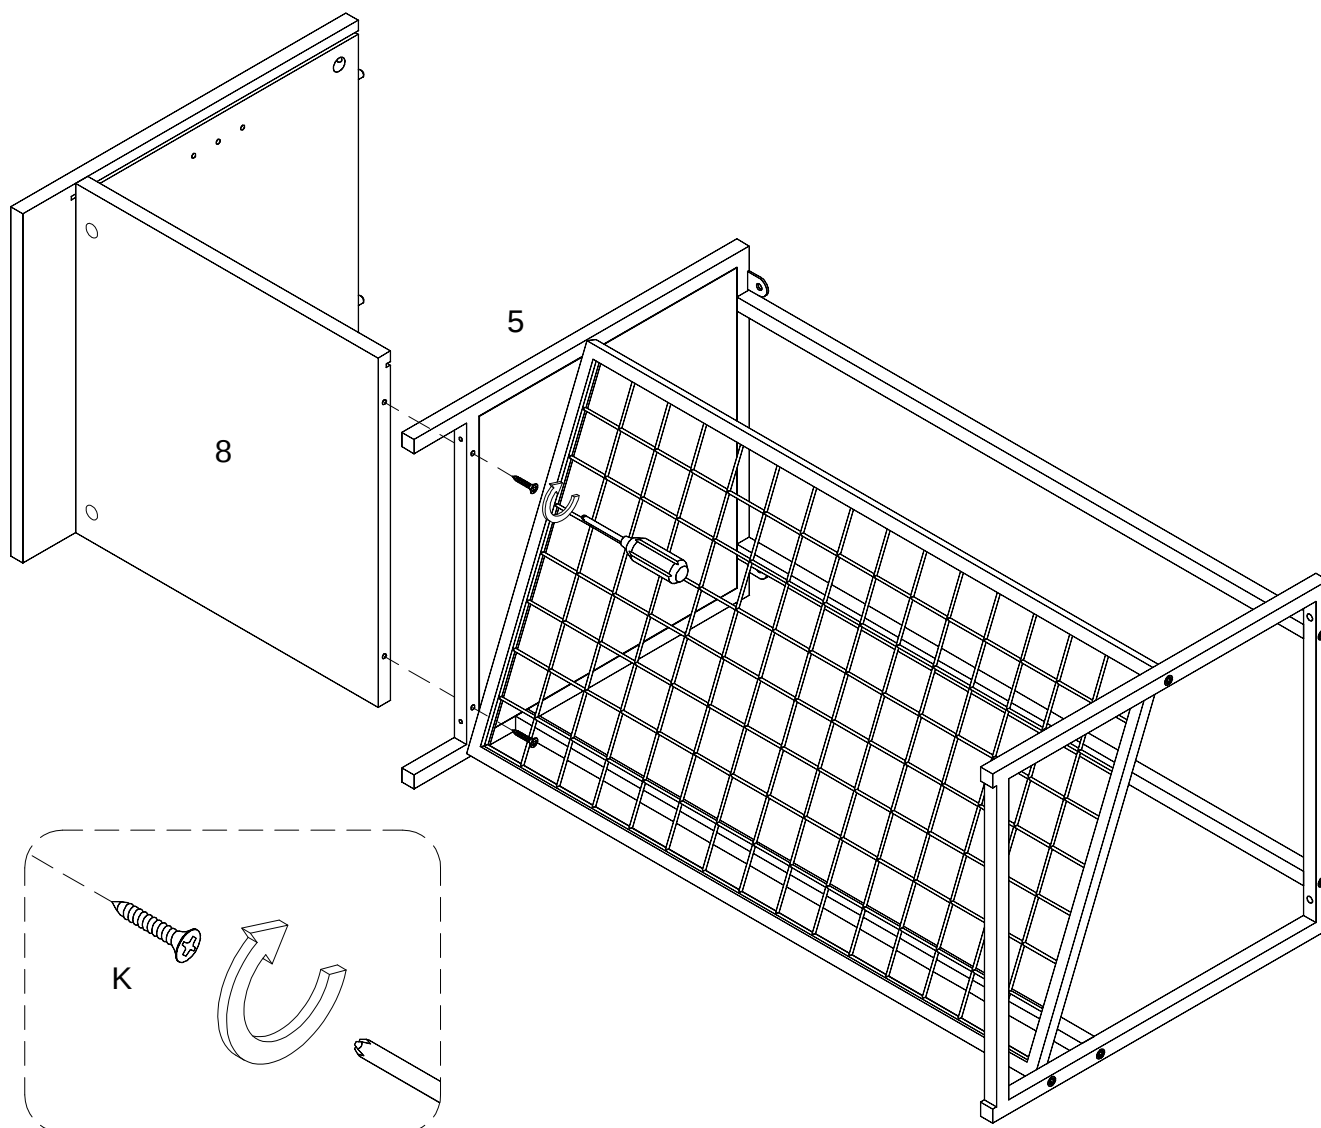



Using screw (K) secure part (5) into part (8) with Philips head screwdriver as per diagram.

## Step 6

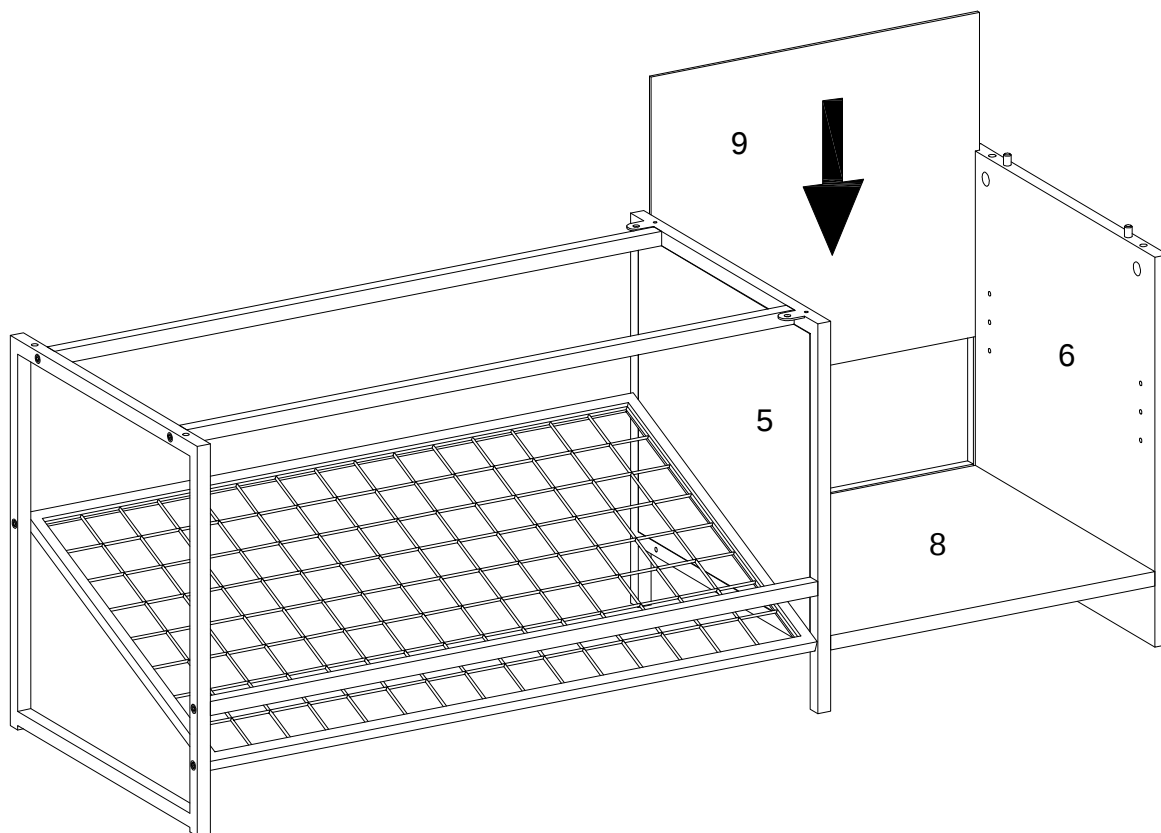




Put part (9) into parts (5,6,8) as per diagram.

## Step 7

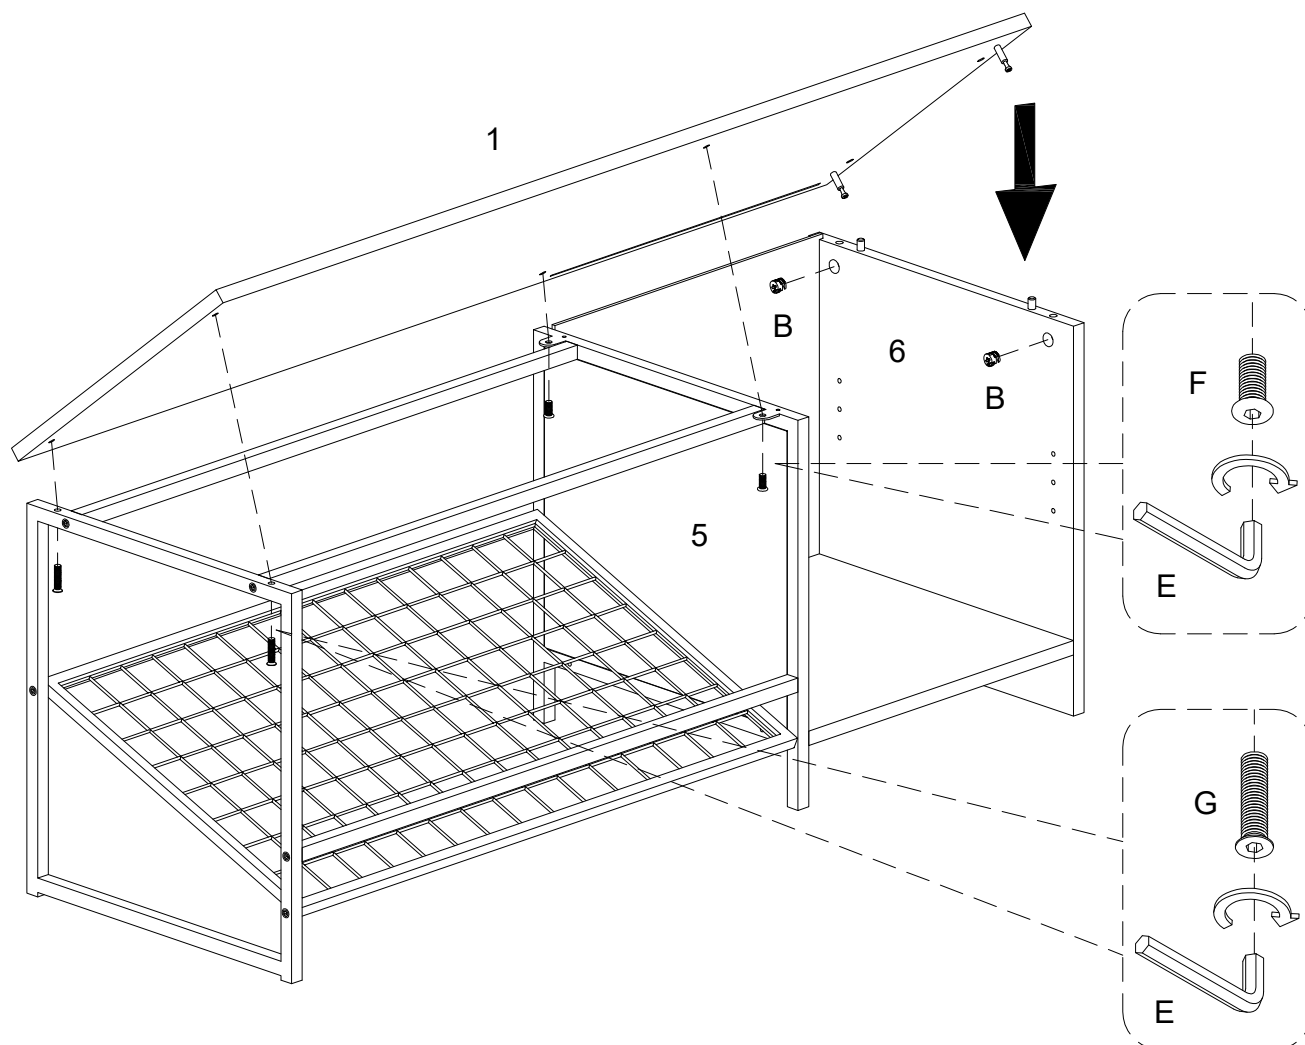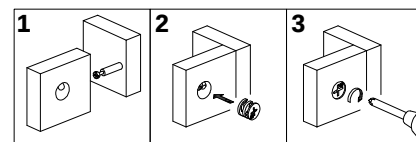


Position the Top Panel (1) onto the inserted Wooden Dowels and fasten it in place with Cam Lock (B) and Bolts (F, G) as per diagram.

## Step 8

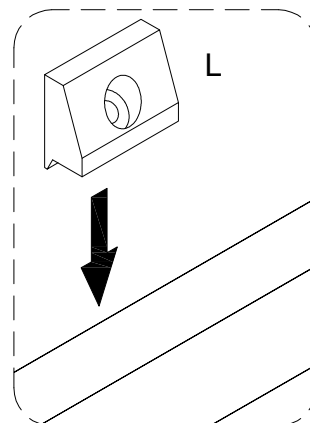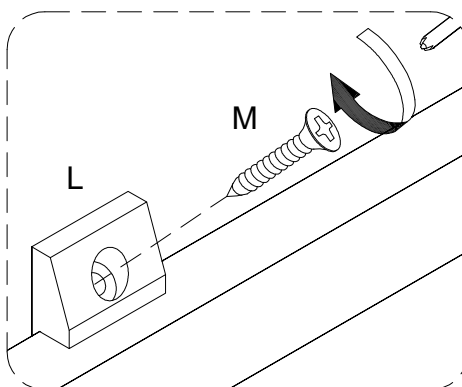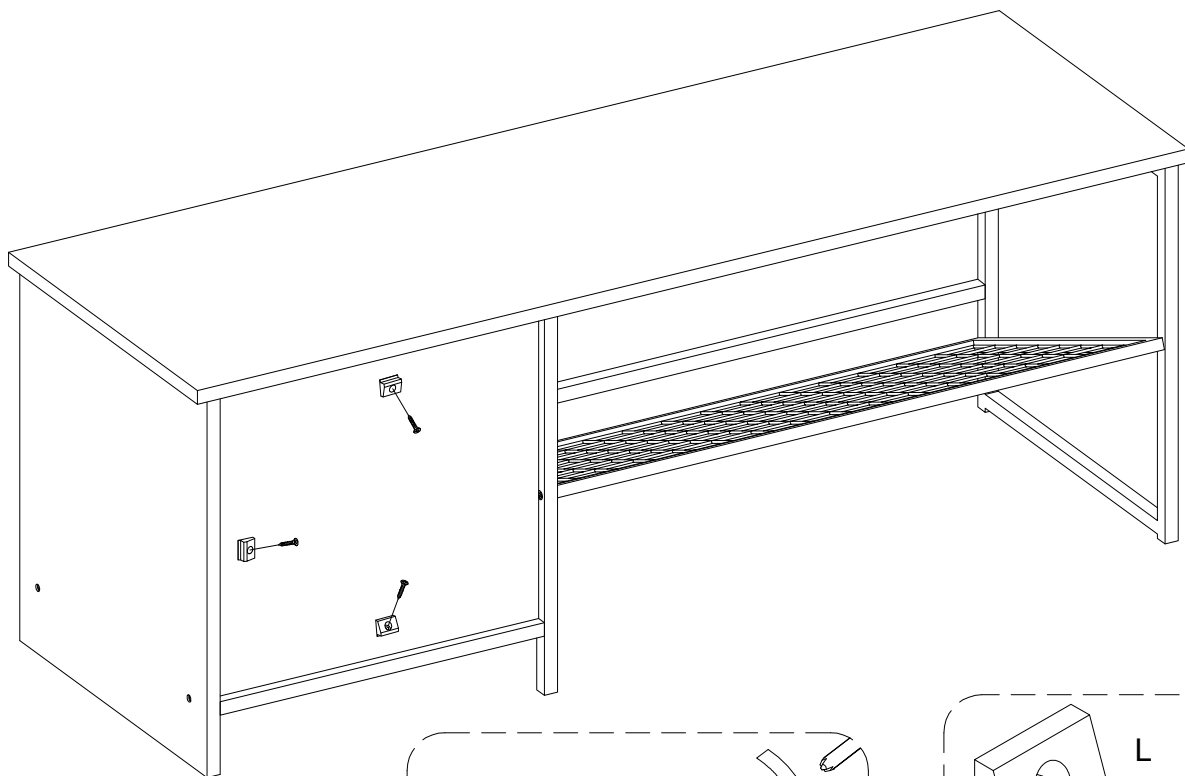




Using screw (M) secure plastic wedge (L) with Philips head screwdriver as per diagram.

## Step 9

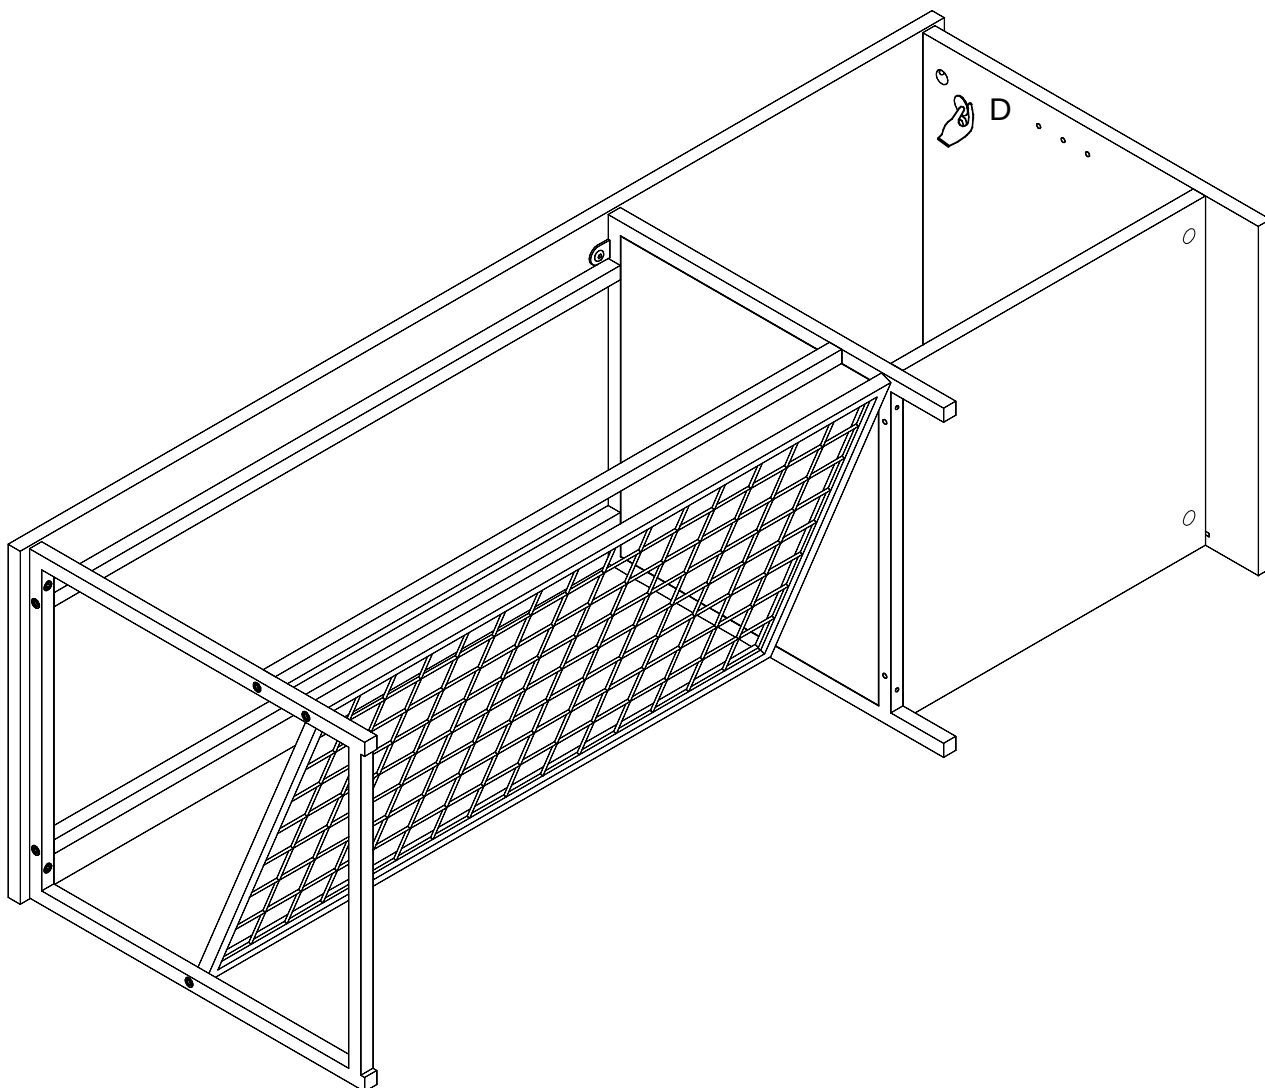


Place sticker (D) cover the holes as per diagram.

## Step 10

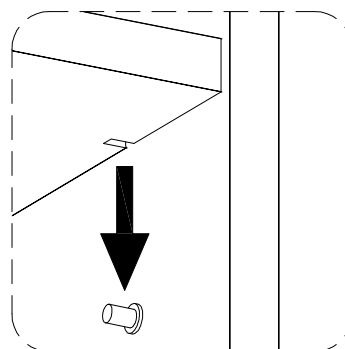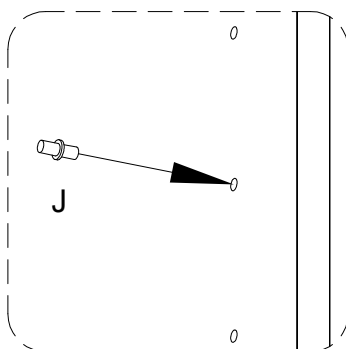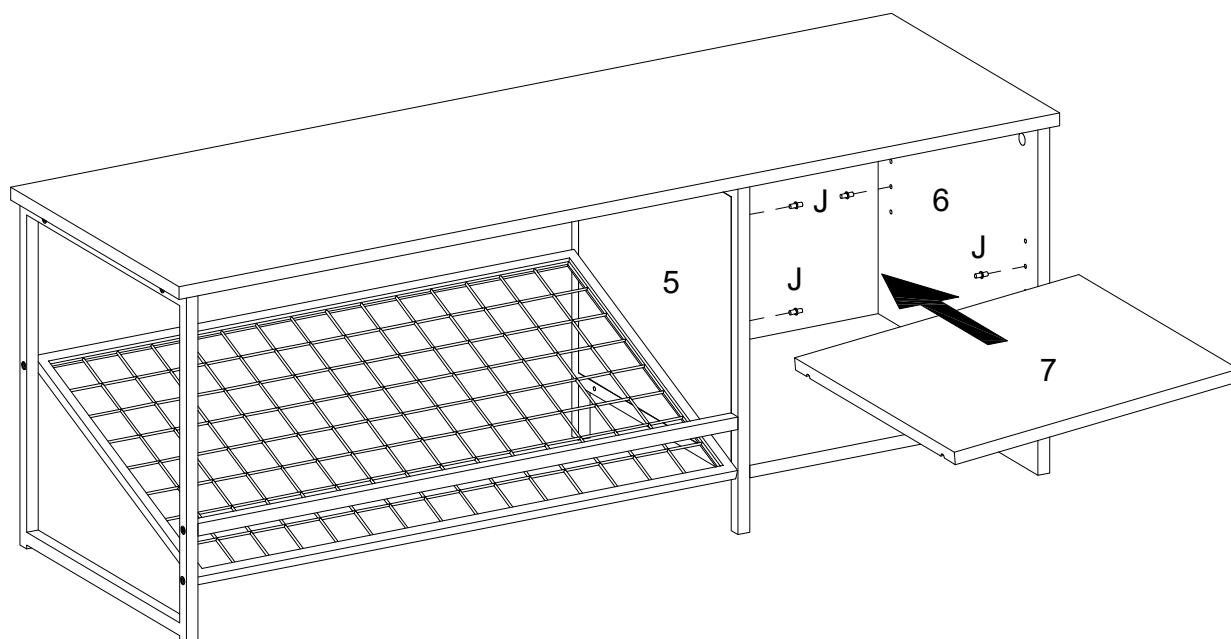

Put shelf support pin (J) into parts (5,6) ,then put part (7) into cabinet as per diagram.

## Step 11

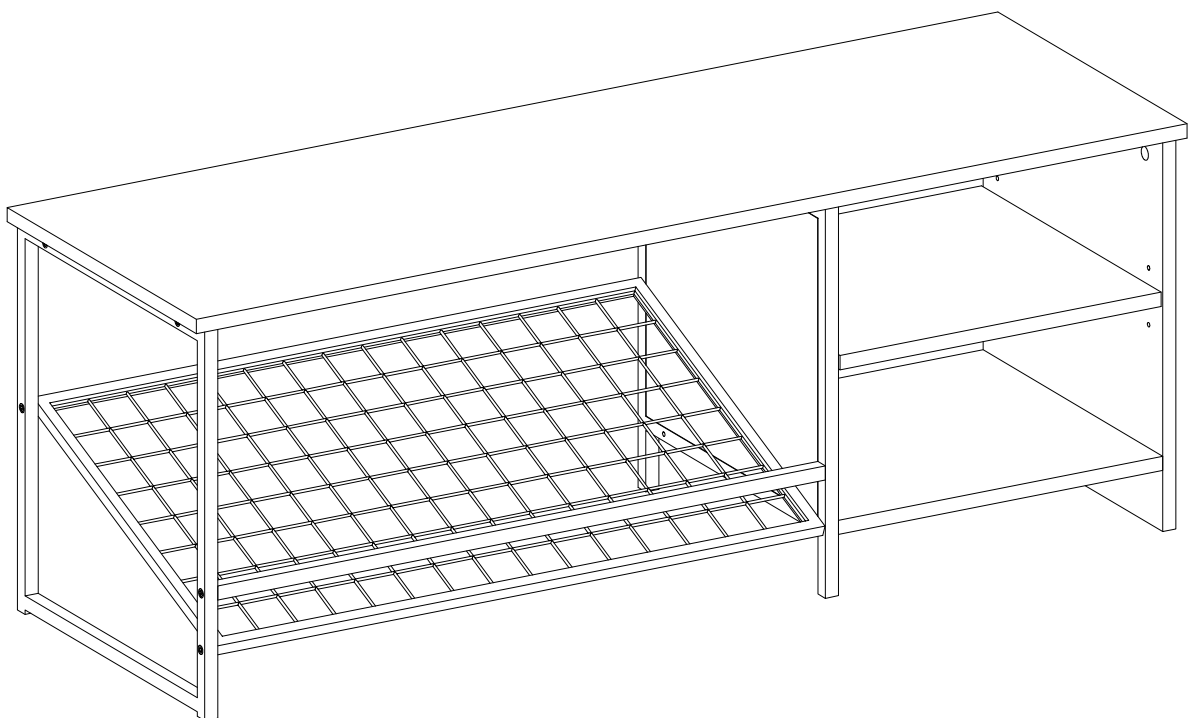

## Final Assembly