























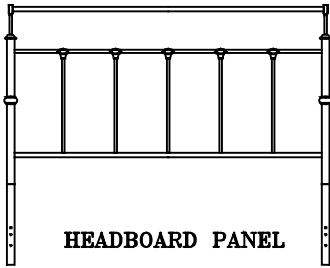



# Parts List

<b>BED CARTON</b>	<b>HEADBOARD CARTON</b>													
<p>(7) HEADBOARD PANEL (8) FOOTBOARD PANEL</p> <p>HARDWARE BAG FOR BED ATTACHMENT TO FRAME</p> <p>(1) 1/4-20 2" COUNTER SUNK ALLEN HEAD SCREW-4 (2) 1/4-20 1" FLAT ALLEN HEAD SCREW-4 (3) 1/4-20 HEX NUT-4 (4) 5/8" OD FLAT WASHER-8 (5) ALLEN WRENCH (6) LEG EXTENSION-2</p>	<p>(7) HEADBOARD PANEL</p> <p>HARDWARE BAG FOR HEADBOARD ATTACHMENT TO FRAME</p> <p>(1) 1/4-20 2" COUNTER SUNK ALLEN HEAD SCREW-4 (3) 1/4-20 HEX NUT-4 (4) 5/8" OD FLAT WASHER-4 (5) ALLEN WRENCH (6) LEG EXTENSION-2</p>	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="text-align: center;">1 </td> <td style="text-align: center;">2 </td> <td style="text-align: center;">3 </td> <td style="text-align: center;">4 </td> </tr> <tr> <td style="text-align: center;">5 </td> <td colspan="3" style="text-align: center;">6 </td> </tr> <tr> <td colspan="2" style="text-align: center;">7 </td> <td colspan="2" style="text-align: center;">8 </td> </tr> </table>	1 	2 	3 	4 	5 	6 			7 		8 	
1 	2 	3 	4 											
5 	6 													
7 		8 												


## PRODUCT FULLY ASSEMBLED




HEADBOARD PANEL

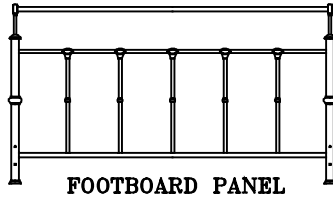


FOOTBOARD PANEL

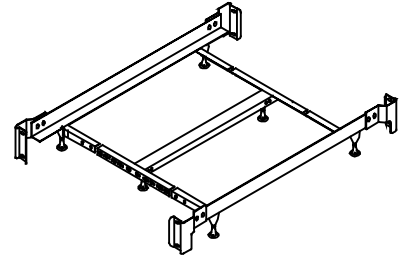


**QUEEN - KING BED FRAME FULLY ASSEMBLED**  
NOTE: SEE INSTRUCTIONS INCLUDED IN FRAME CARTON FOR FRAME ASSEMBLY

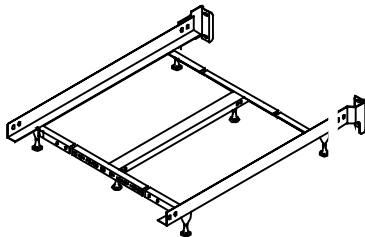

**QUEEN - KING HEADBOARD ONLY FRAME FULLY ASSEMBLED**  
NOTE: SEE INSTRUCTIONS INCLUDED IN FRAME CARTON FOR FRAME ASSEMBLY

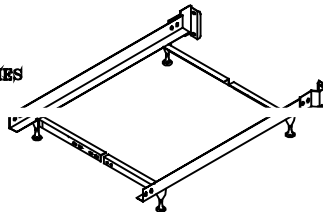

**TWIN - FULL HEADBOARD ONLY FRAME FULLY ASSEMBLED**  
NOTE: SEE INSTRUCTIONS INCLUDED IN FRAME CARTON FOR FRAME ASSEMBLY

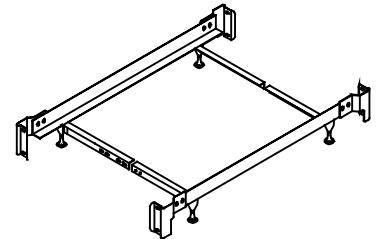

**TWIN - FULL BED FRAME FULLY ASSEMBLED**  
NOTE: SEE INSTRUCTIONS INCLUDED IN FRAME CARTON FOR FRAME ASSEMBLY

FOR ASSISTANCE IN ASSEMBLY ONLY OF THIS PRODUCT. CALL OUR HELP DESK. PLEASE HAVE THE STYLE NUMBER AVAILABLE BEFORE YOU CALL. (STYLE # OR NAME CAN BE FOUND ON PACKING CARTON OR SALES RECEIPT.) OUR PRODUCT IS INSPECTED TO ENSURE IT IS IN GOOD CONDITION. IF YOUR FURNITURE APPEARS TO HAVE BEEN DAMAGED IN SHIPMENT OR YOU ARE IN NEED OF REPLACEMENT PARTS PLEASE CONTACT THE DEALER FROM WHOM YOU PURCHASED THE PRODUCT.

# Instruction Sheet

SAVE ALL PACKAGING MATERIALS UNTIL PRODUCT IS FULLY ASSEMBLED. HARDWARE AND SMALL PIECES MAY NOT BE SEEN AND BE ACCIDENTALLY DISCARDED WITH PACKAGING MATERIALS.

FIGURE 1

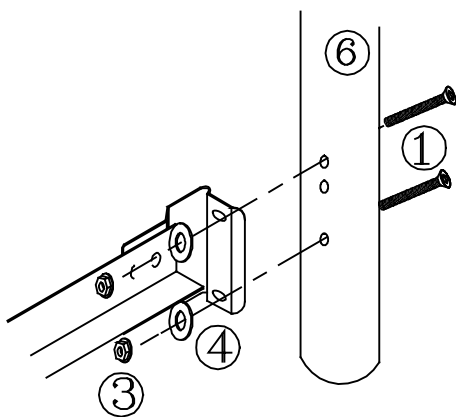
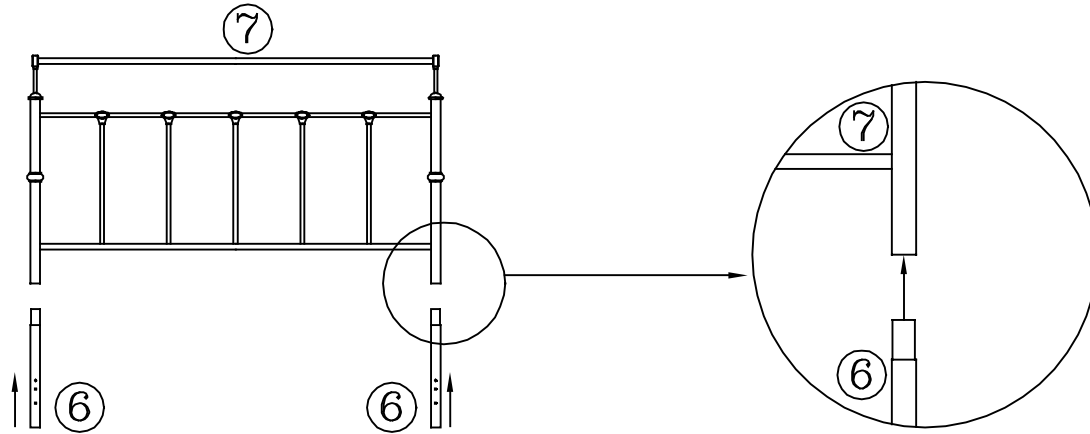


FIGURE 2

### Step 1

- Align top reduction of extension legs (6) with bottom of headboard posts. (See Figure 1) Make sure the 3 holes on extension legs are perpendicular to headboard panel.
- Now carefully insert extension legs (6) into bottom of headboard (7) posts.

### Step 2

- Place headboard and frame in desired location in room.
- Place 2 screws (1) through holes located in leg (6). (See Figure 2)
- Align bed frame bracket over screws.
- Place a flat washer (4) and a nut (3) on each screw. Hand-tighten, DO NOT TIGHTEN screws all the way.
- Repeat on other side of headboard.
- Tighten all screws securely using the Allen wrench (5).

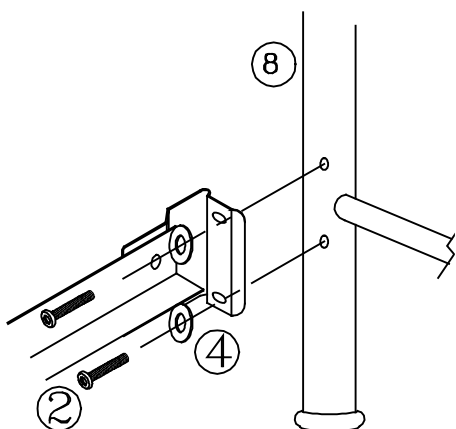


FIGURE 3

### Step 3

- Position footboard panel (8) and align holes in the post with holes in the frame bracket. (See figure 3)
- Place flat washer (4) on each screw (2). Insert through bracket and into post. Hand-tighten, DO NOT TIGHTEN screws all the way.
- Repeat on other side of footboard panel.
- Tighten all screws securely using the Allen wrench (5).