

Installation Guide

1



Unpack and
check contents

2




Foam Insert: 4 Rolls
Cover: 2 Bags

3



Fold inserts and
place into covers

4

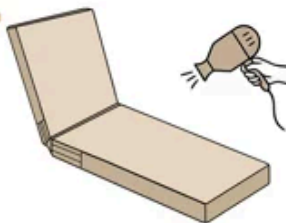

Allow 1-2 days to rebound
and smooth out wrinkles



Note: Items ship compressed and require assembly.