


Frameless Sliding Shower Door

Reversible installation • Clear step-by-step diagrams

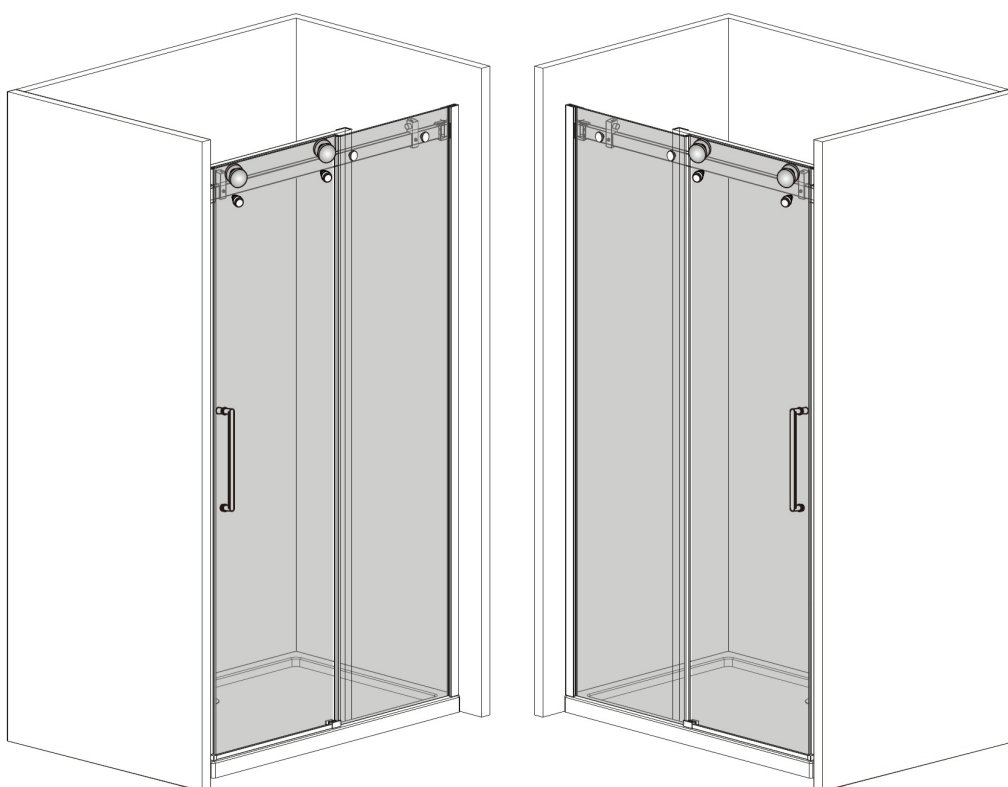

APPLICABLE SIZES

60 in W × 60 in H

60 in W × 76 in H

TWO-PERSON INSTALLATION

Keep this guide for future reference

Read the complete manual before starting installation.

Use safety glasses during installation. Plan for two-person installation when handling the glass panels.

1 General Safety

Keep this manual for future reference. Work carefully around glass and metal components, and follow each installation step in order.

2 Ceramic Tile Installation

If installing over ceramic tile, the tile should extend fully beneath the wall jamb. Use silicone to seal the gap where tile meets the fixed panel.

3 Sealing Notice

Do not apply sealant inside the shower unless a step specifically instructs you to do so. Some configurations use clear sealing gaskets.

4 Care & Cleaning

Do not use abrasive pads, scouring powders, or sharp tools on glass or metal. Clean with mild soap diluted in water.

5 After Each Use

A quick pass with a squeegee helps keep the glass looking clean. Product specifications may change without notice.

Recommended personal protection

● Read the full manual


● Safety glasses

● Two-person installation

Choose Your Configuration


Select the orientation that matches your shower opening before drilling or mounting hardware.

CHOOSE CONFIGURATION

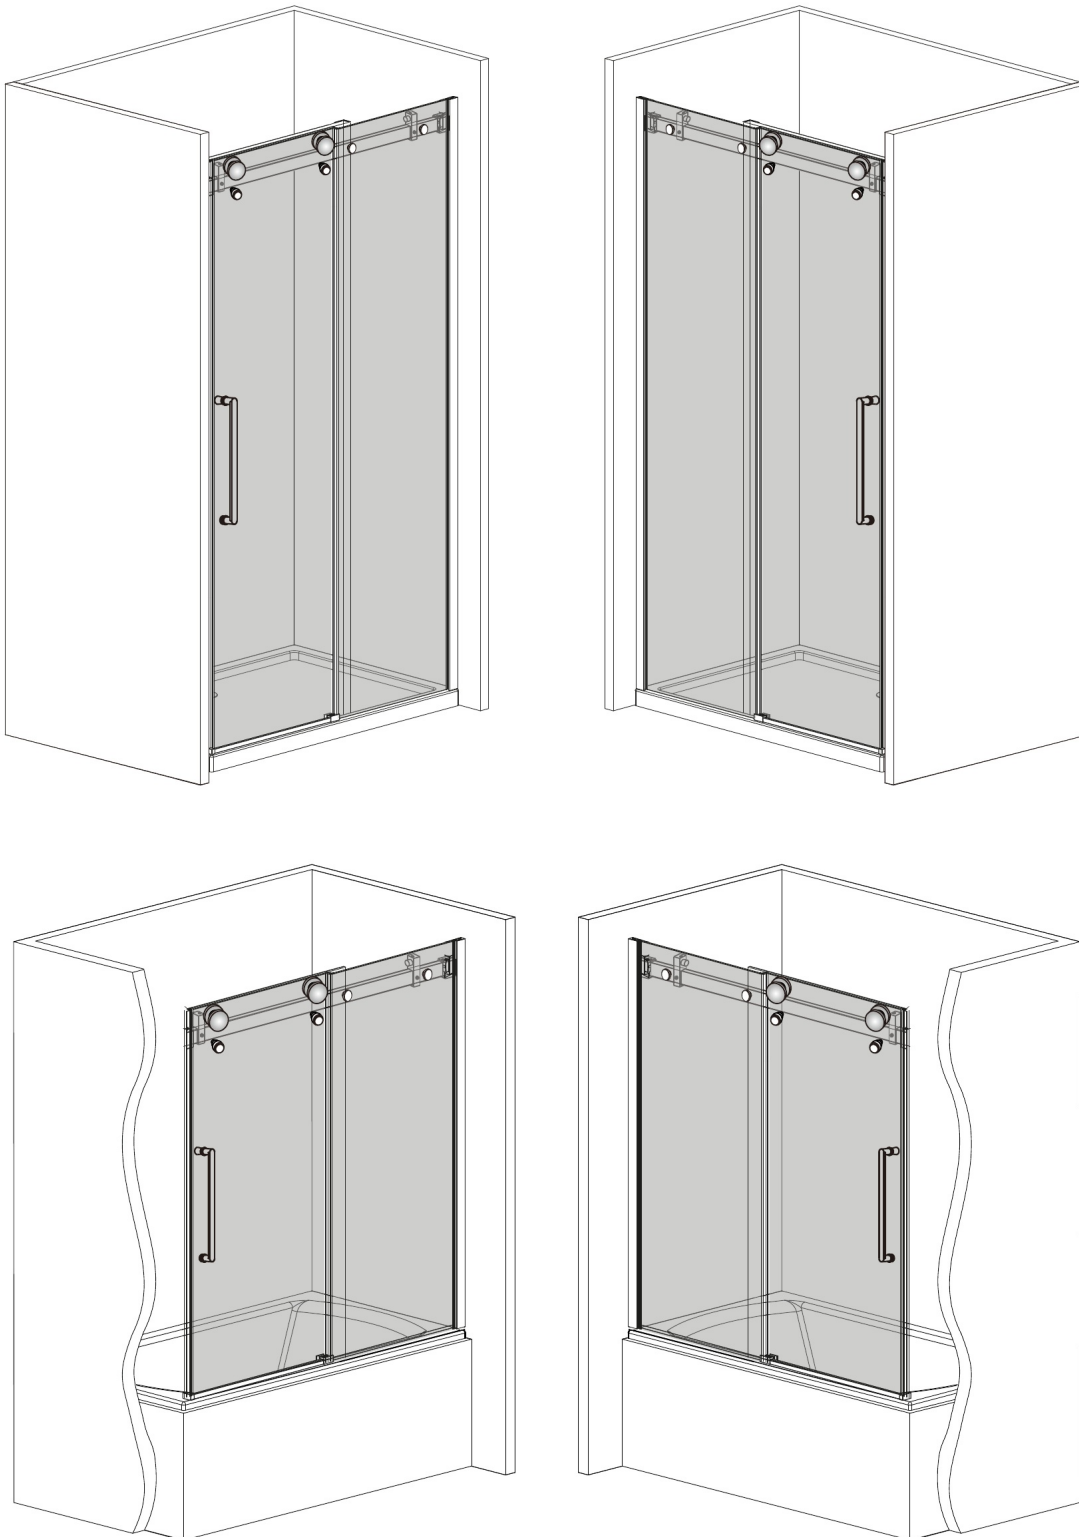

Parts Diagram

Use the numbered callouts below with the parts list on the next page.

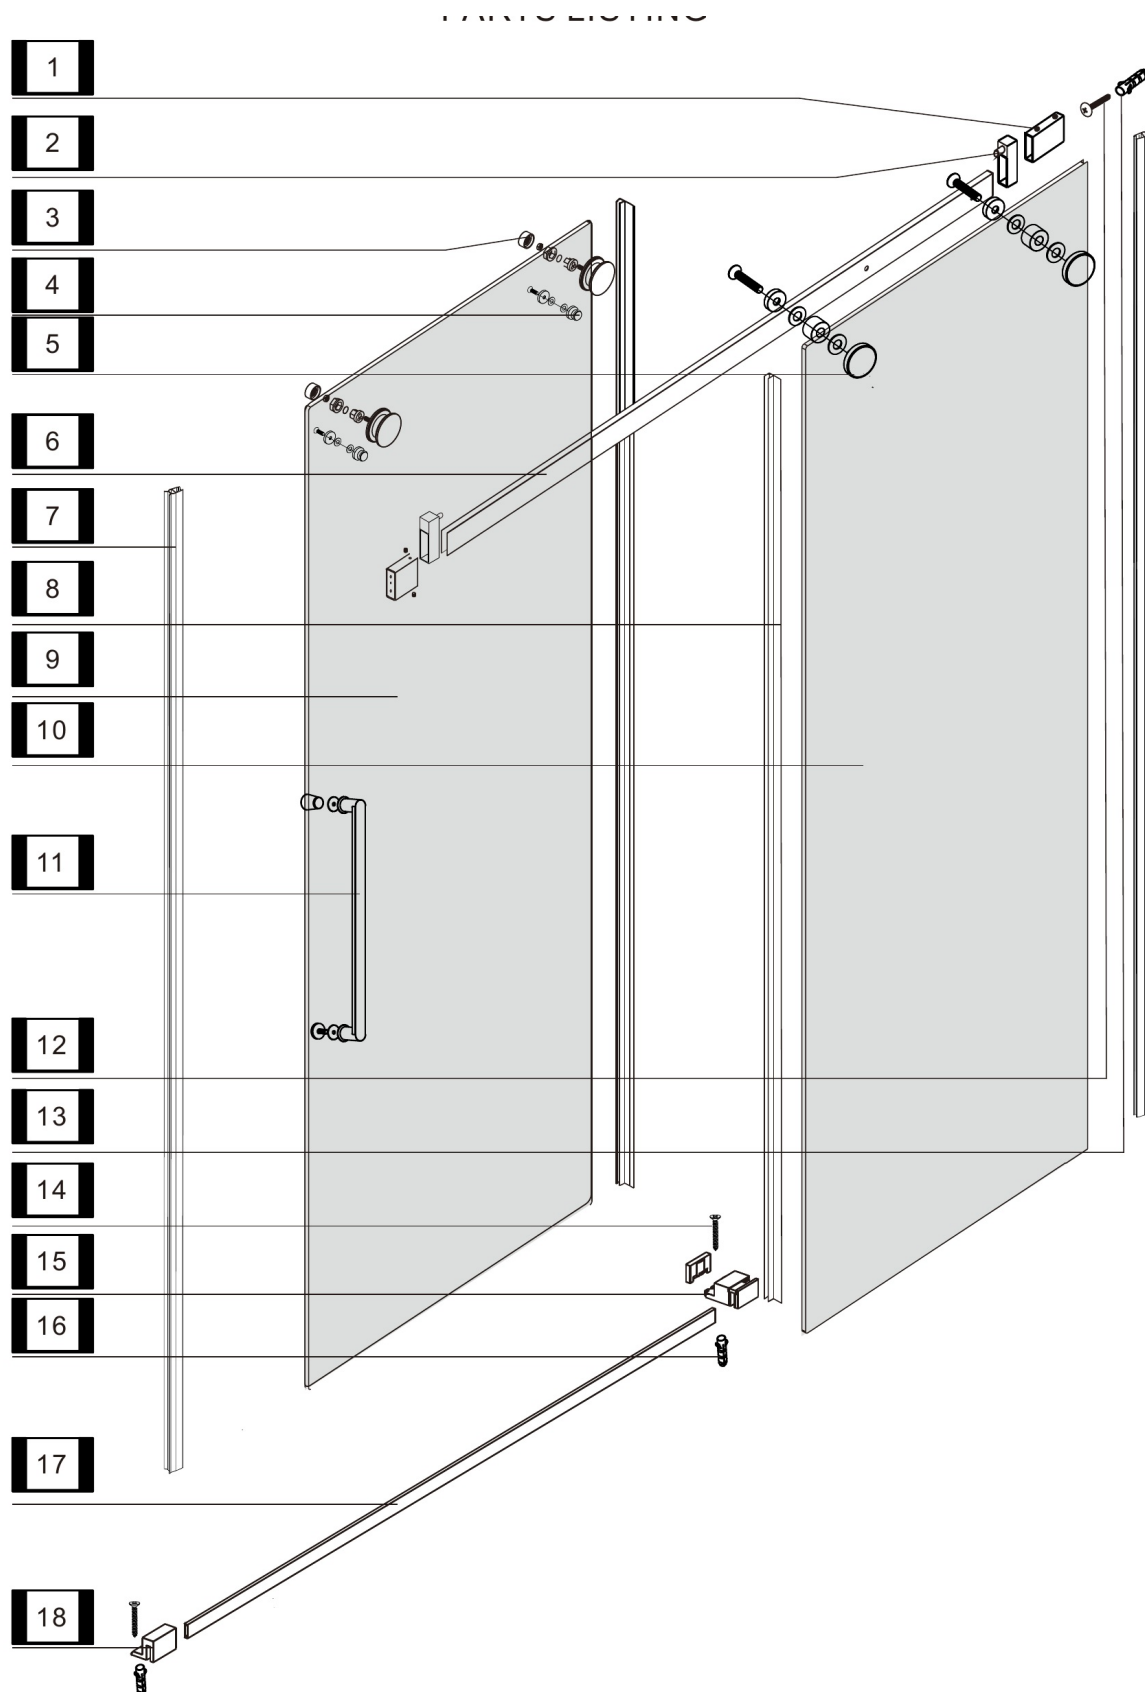


TOOLS YOU WILL NEED


- 6 mm / 8 mm drill bits
- Level
- Hex keys SW2.0–SW4.0
- Sealant gun
- Tape measure
- Pencil
- Safety glasses

ITEM	PART / COMPONENT	QTY
1	Stainless Steel Wall Bracket	2
2	Stainless Steel Positioning Block	2
3	Roller	2
4	Glass Anti-Jump Clip	2
5	Fixed Glass Clamp Set	2
6	Stainless Steel Crossbar (40×10 mm)	1
7	Waterproof Sealing Gasket / Door Seal	2
8	F-Shaped Water Barrier	2
9	Movable Glass Panel	1
10	Fixed Glass Panel	1
11	Stainless Steel Pull Handle	1
12	Round Head Screw (5×35 mm)	2
13	Wall Plug / Anchor (Ø8 mm)	2
14	Flat Head Screw (4×30 mm)	2
15	Stainless Steel Hinge (41 mm center)	1
16	Wall Plug / Anchor (Ø6 mm)	2
17	Bottom Water Guide / Threshold	1
18	Bottom Water Guide Bracket	1


Opening Check & Threshold Level

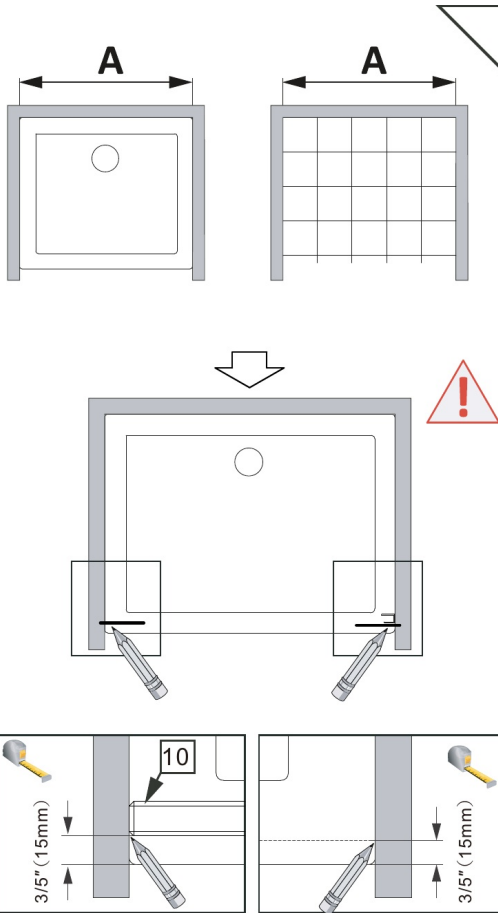

2.1

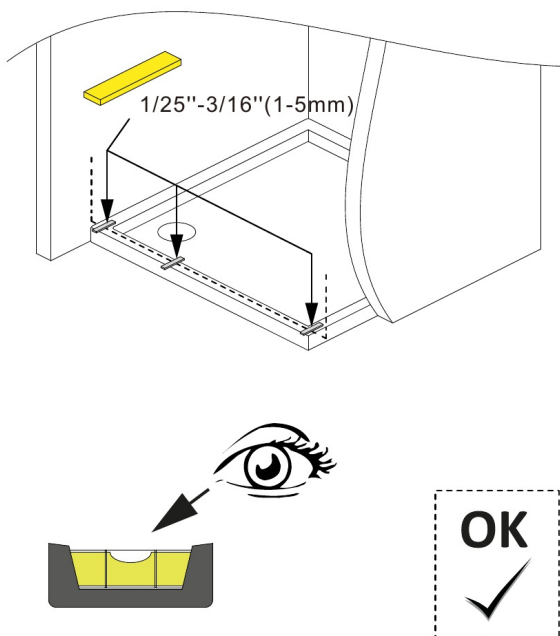


2.2

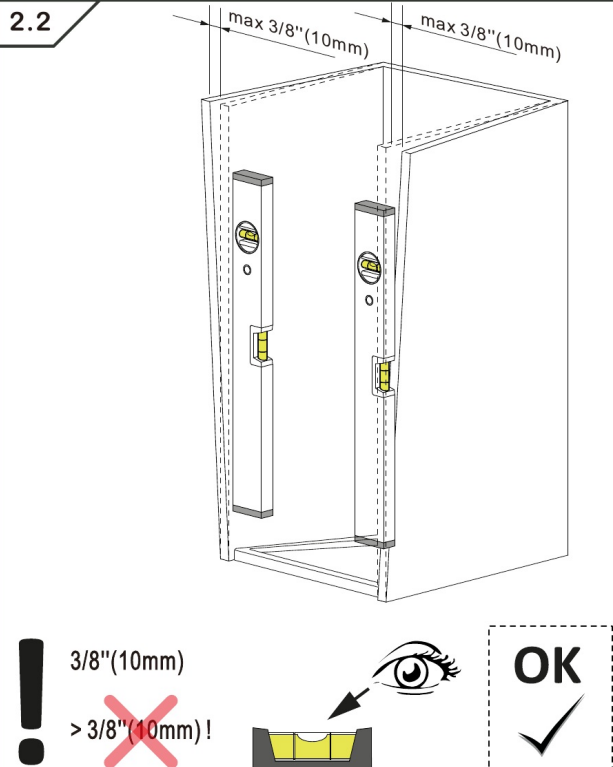


Wall Bracket Positioning

4


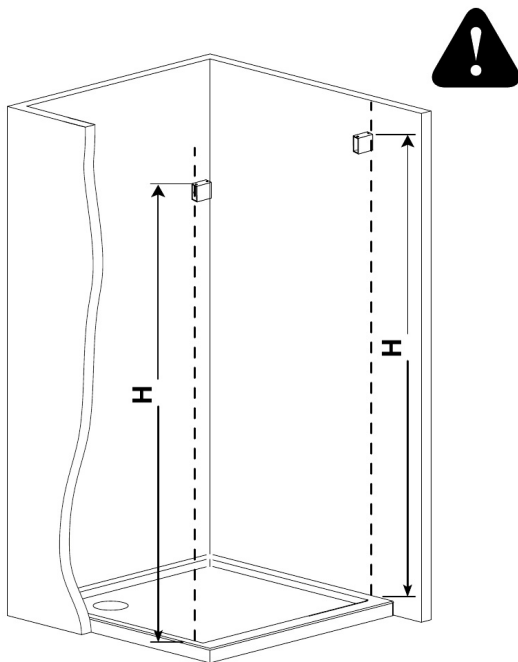


H-55=Total height reduced by 2-11/64" (55mm)

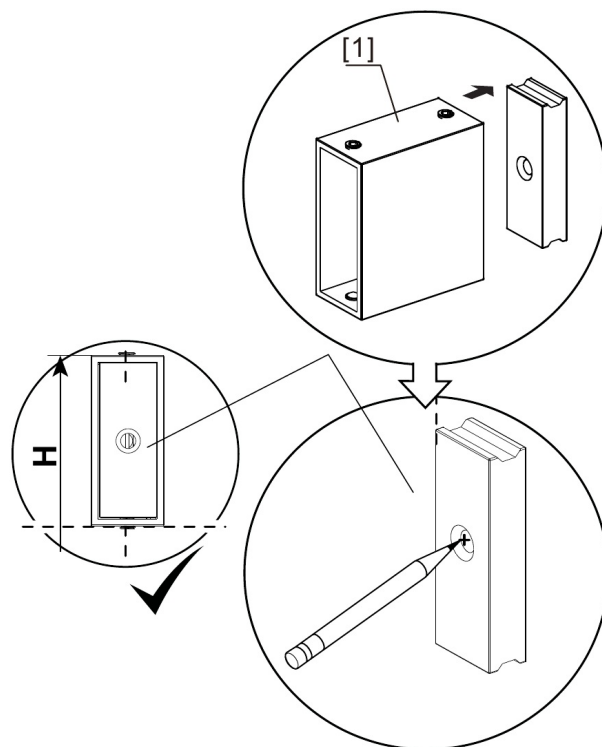


Mark the center hole with a pencil

5

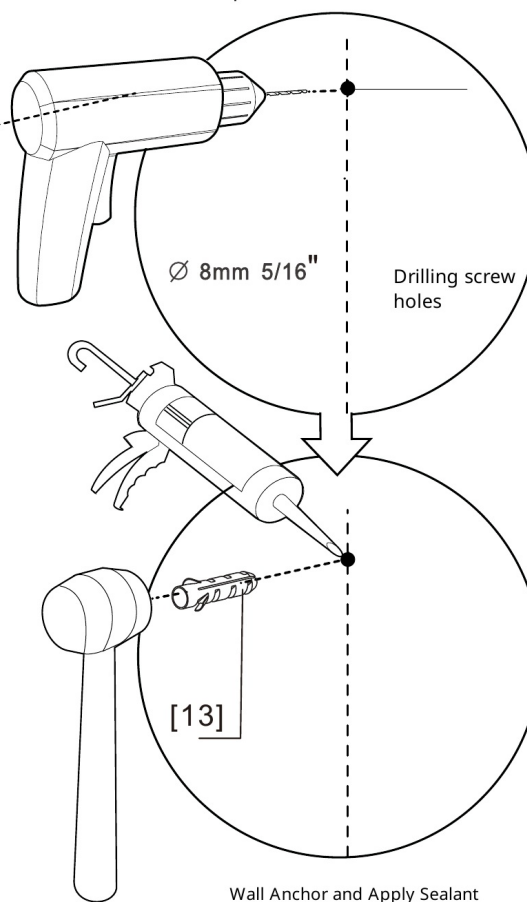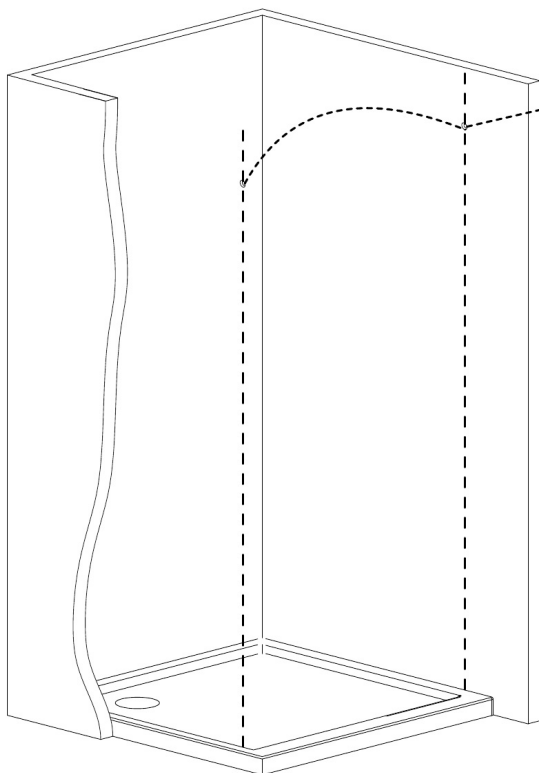

Wall Anchor and Apply Sealant


Header Height Reference

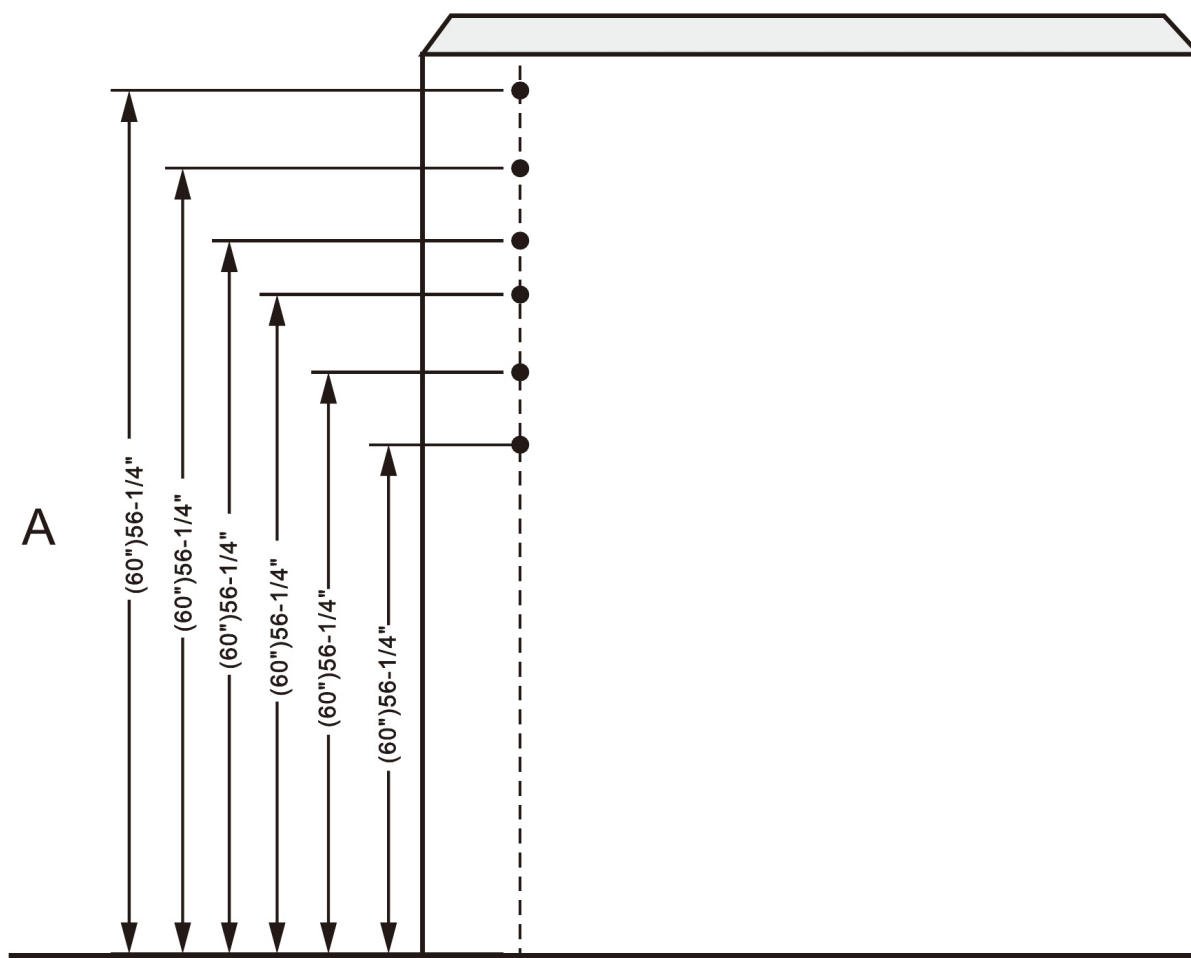


product Height"	Header Height"
(60")	56-1/4"
(66")	62-1/4"
(72")	68-1/4"
(76")	72-1/4"
(79")	75-1/4"
(84")	80-1/4"

Mount Brackets & Size Crossbar


6

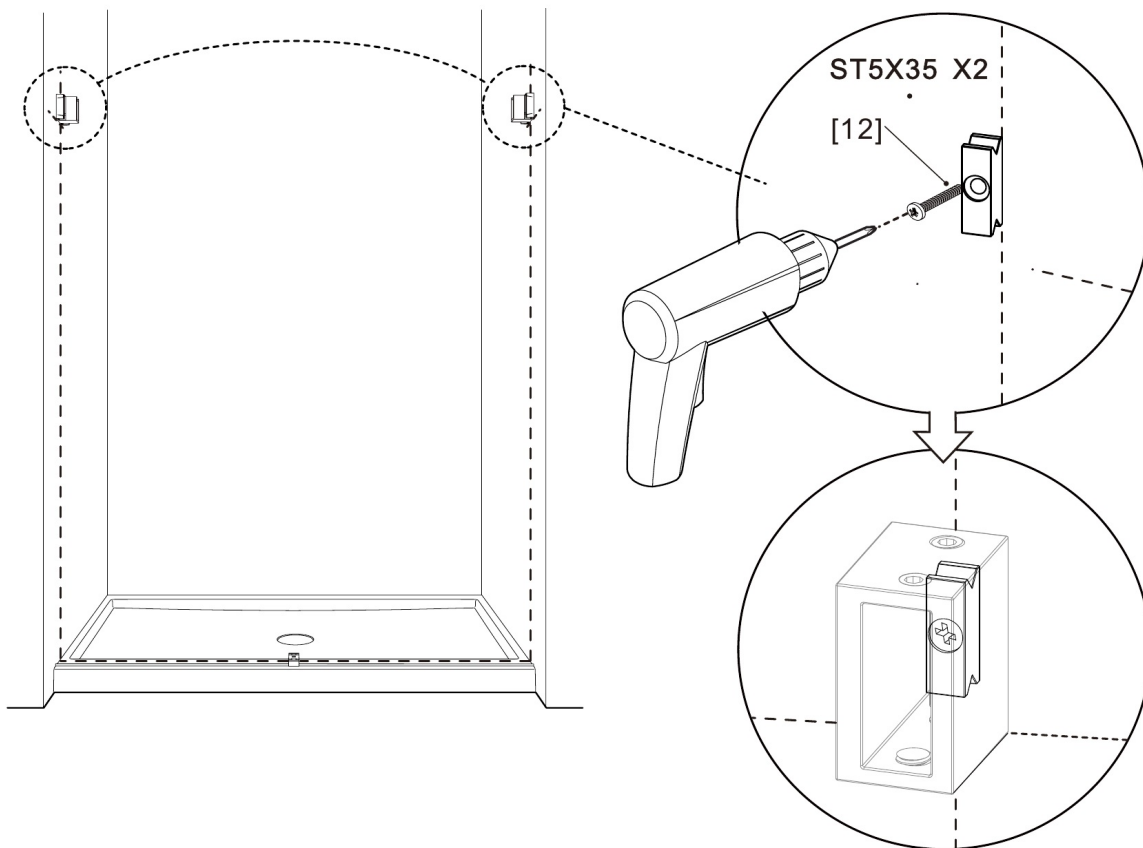


7

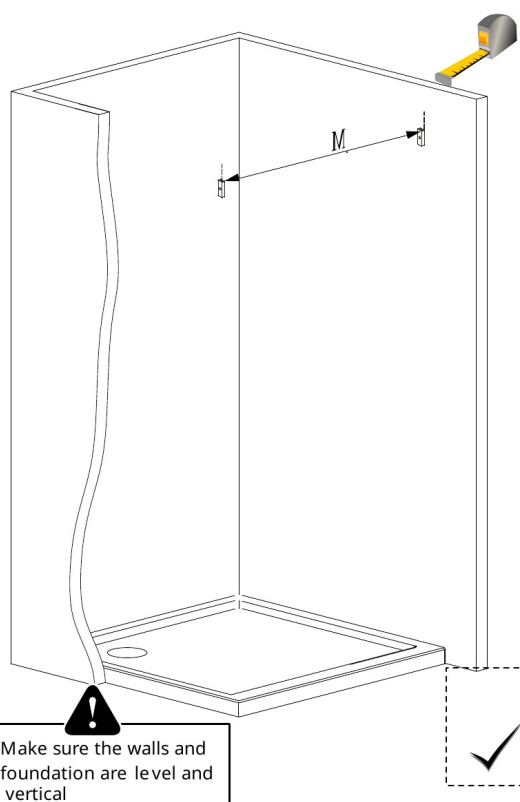

7.1

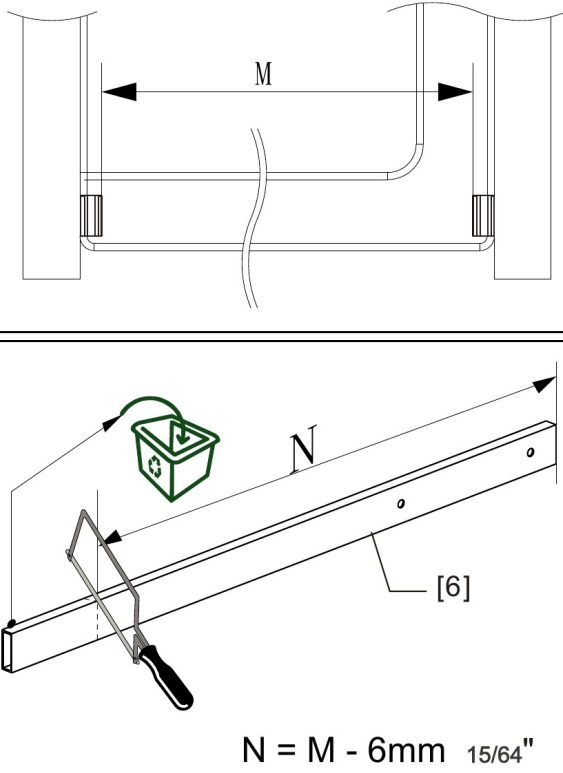


Assemble Crossbar Hardware

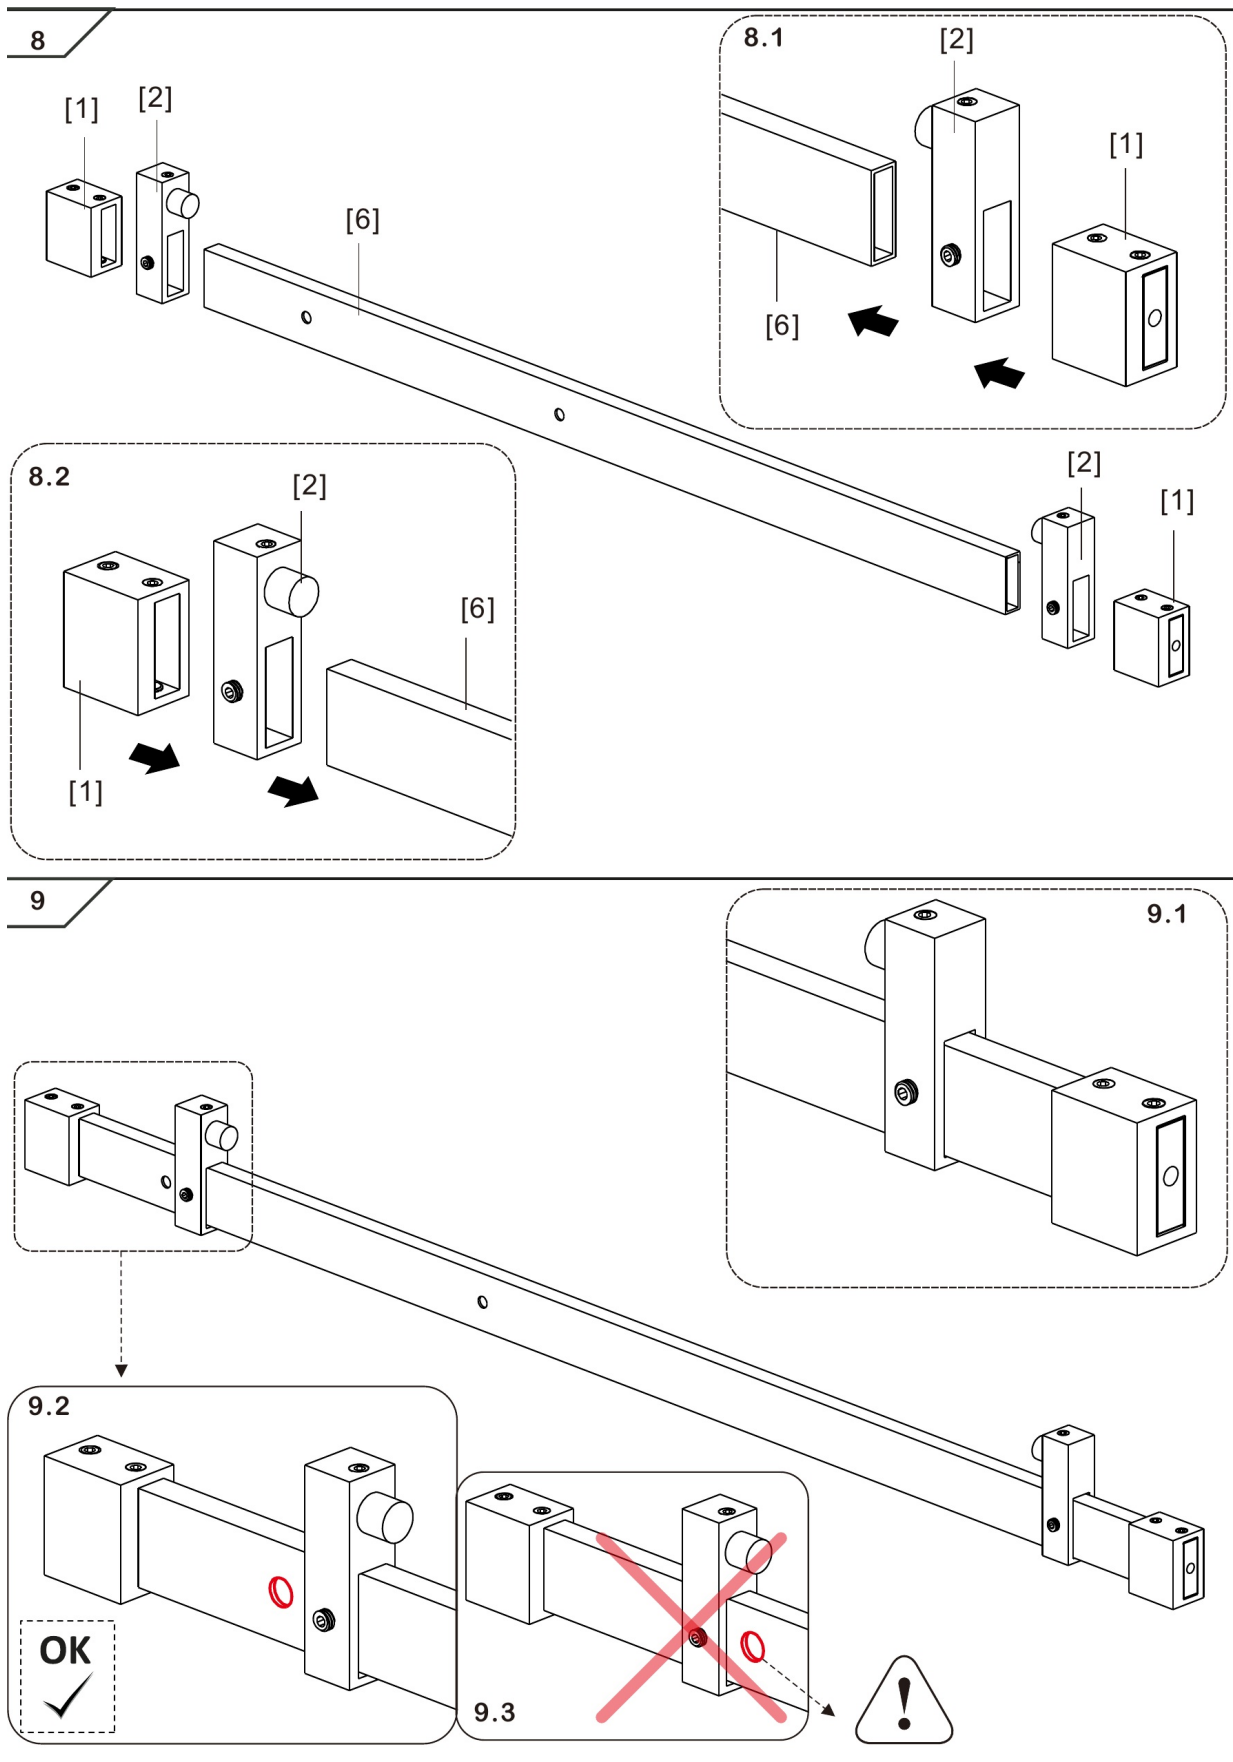


Install Crossbar


10

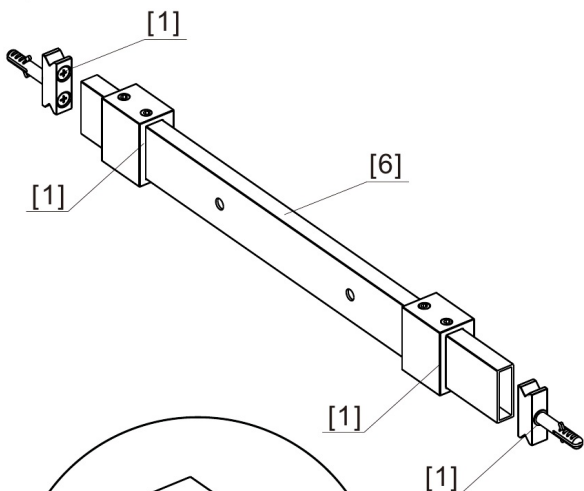




10.1

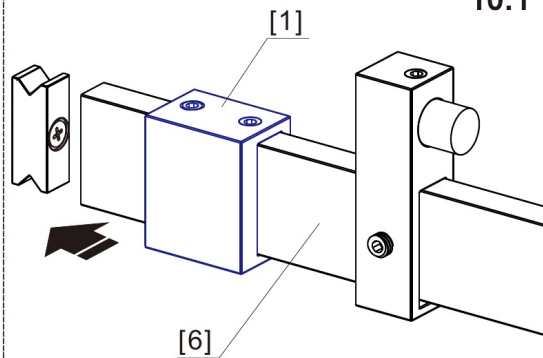


10.2

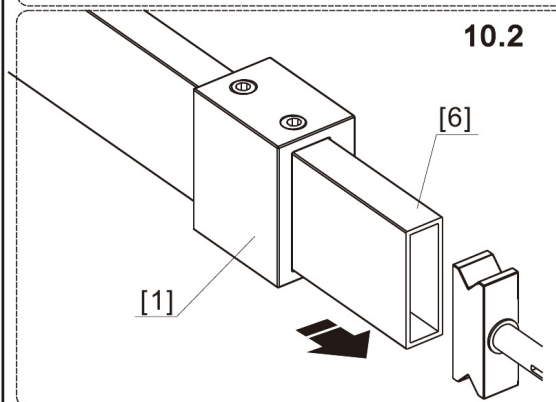


11

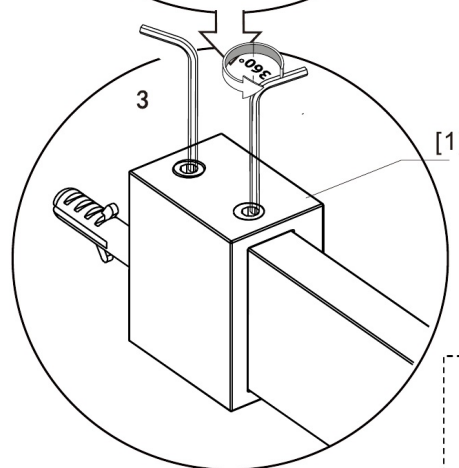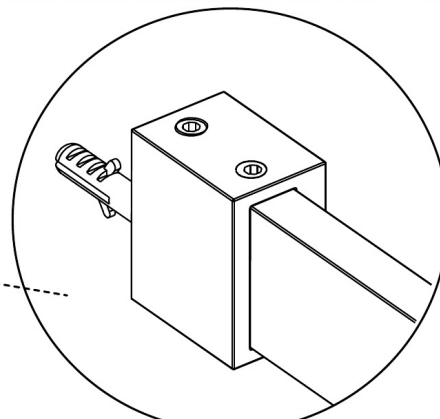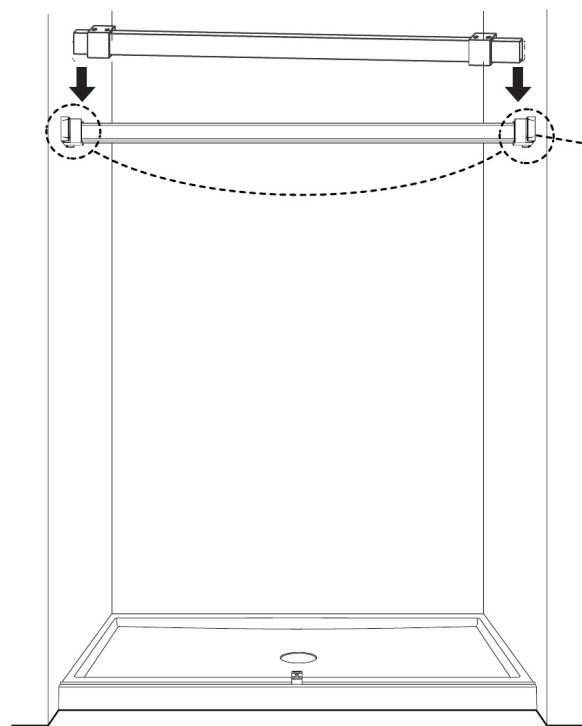



Install Fixed Glass Panel

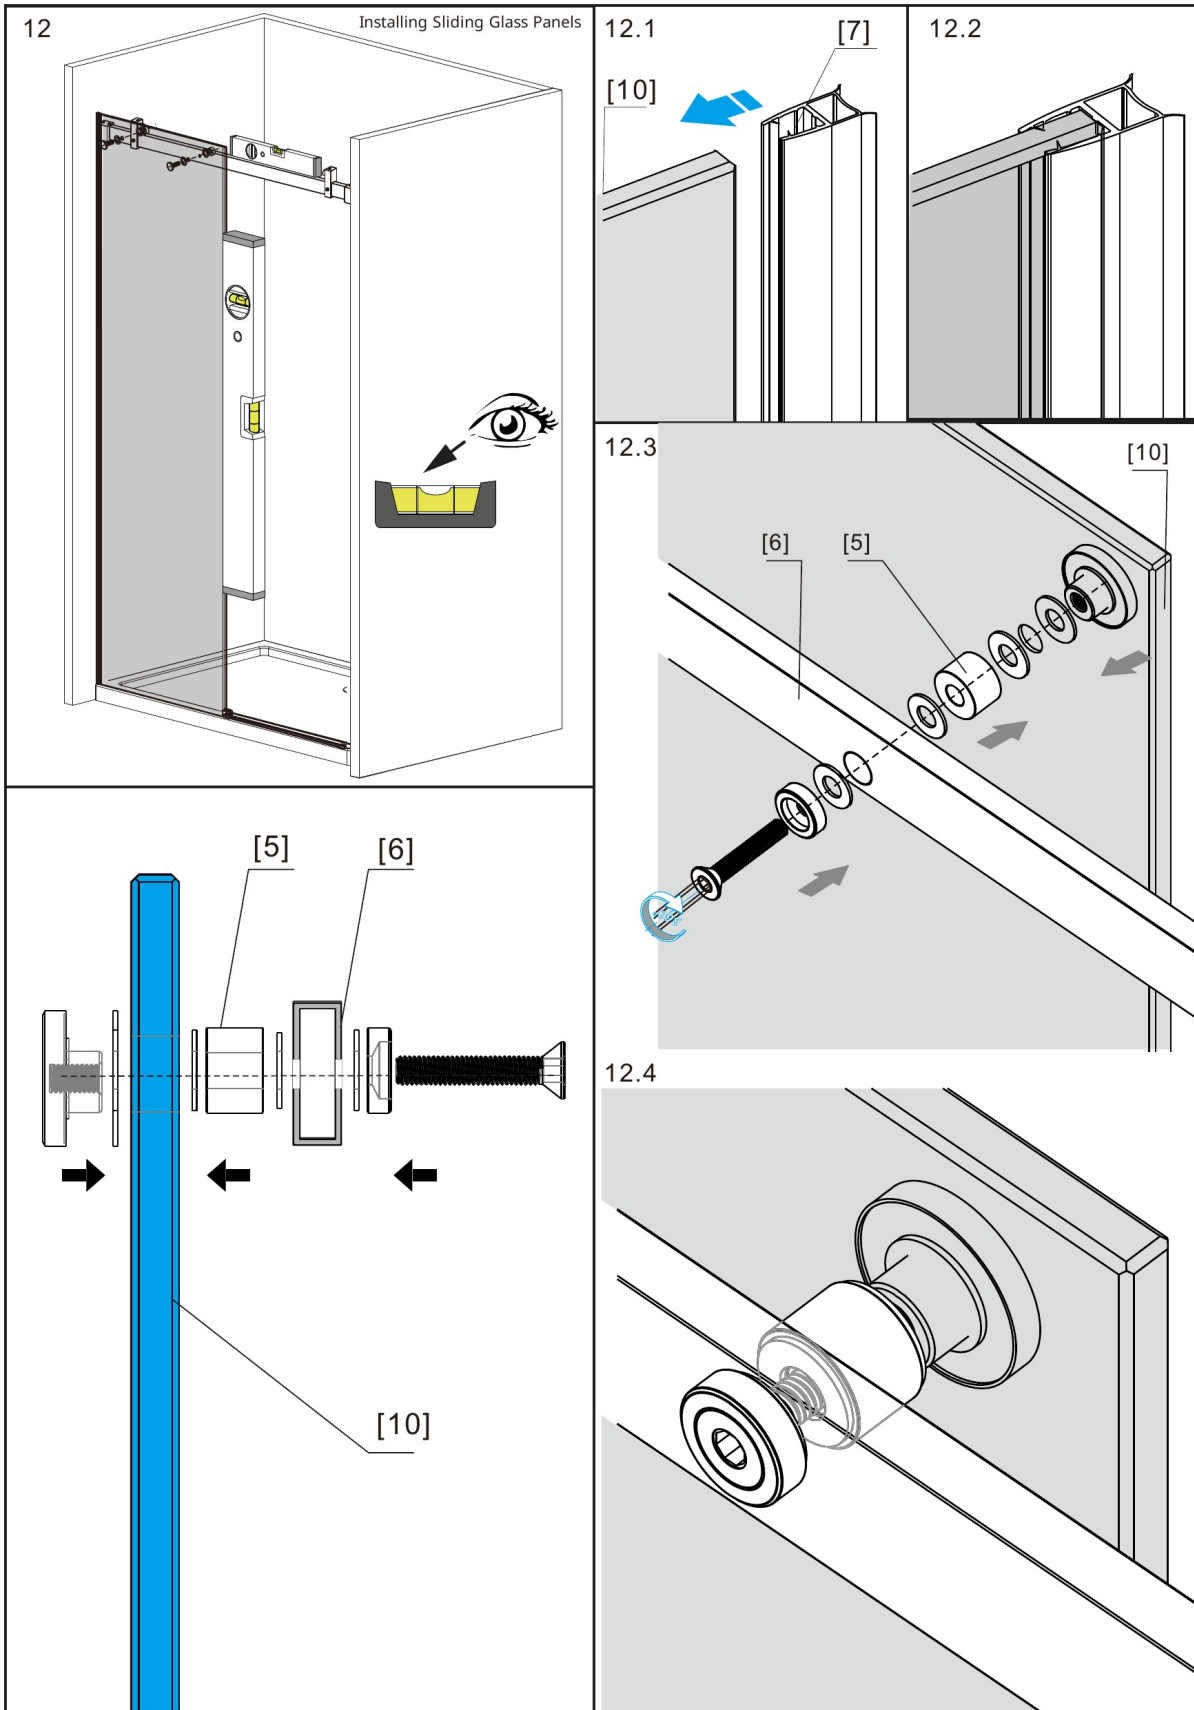



13

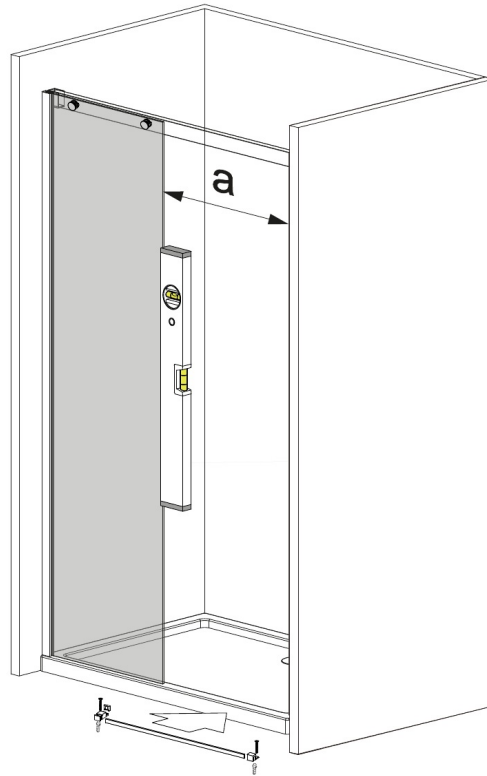

13.1

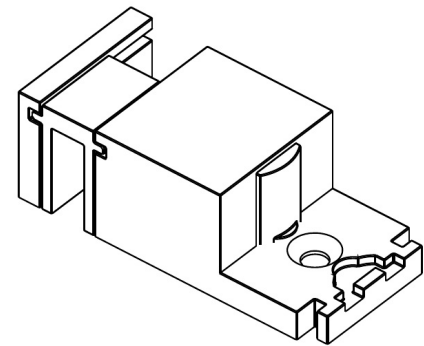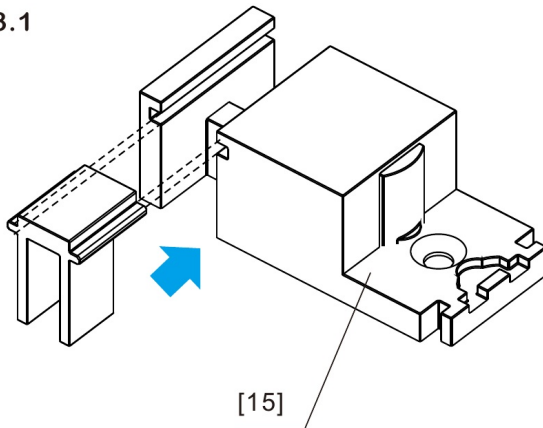


13.2

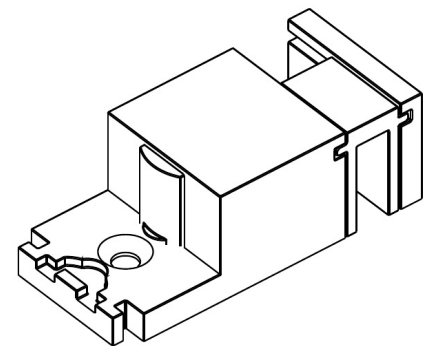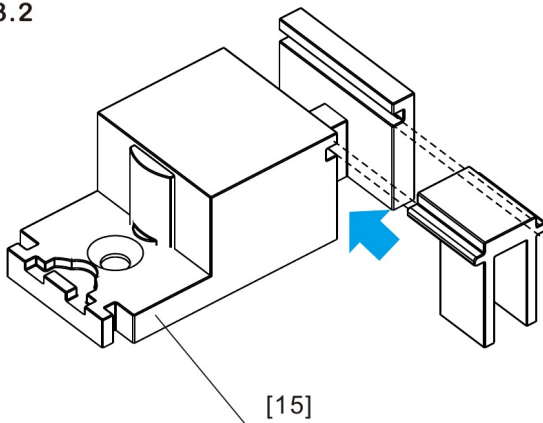


Secure Bottom Guide & Threshold


13.3

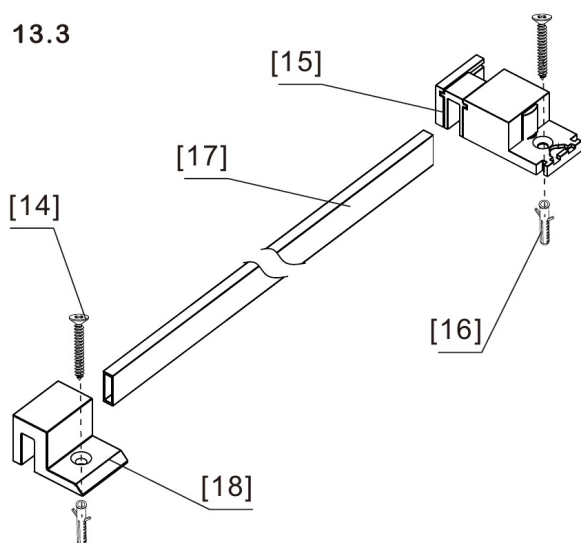


13.4

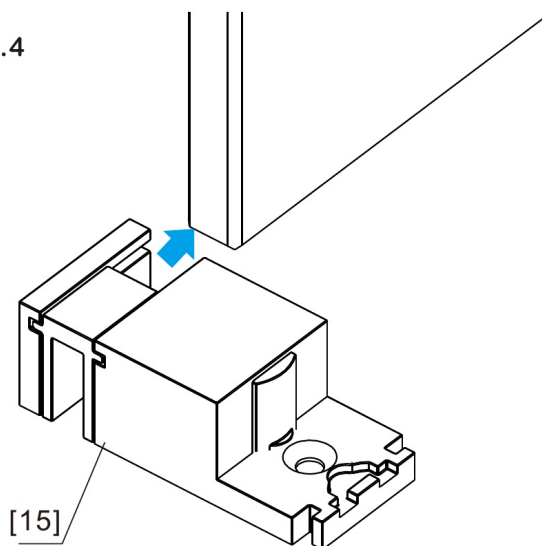


13.5

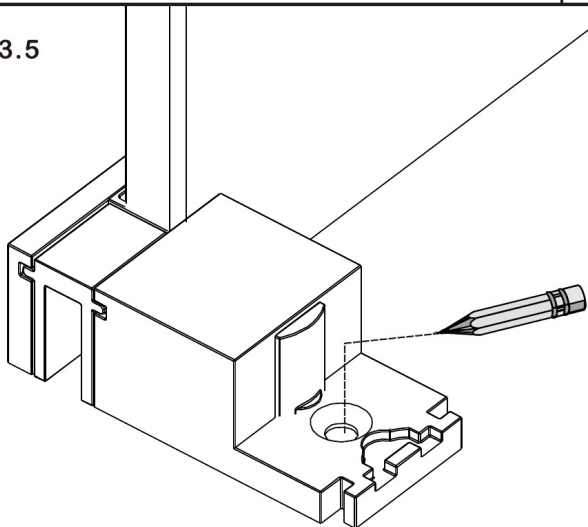


13.6

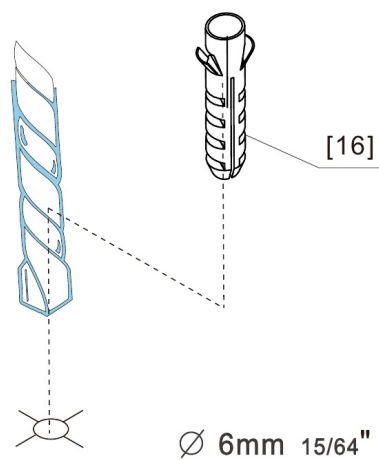


13.7

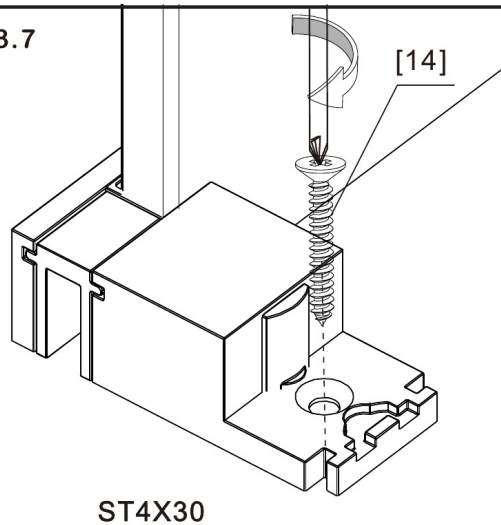


13.8

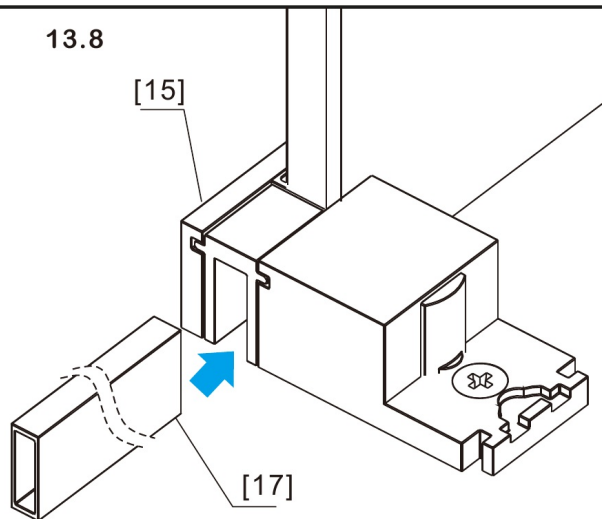


13.9

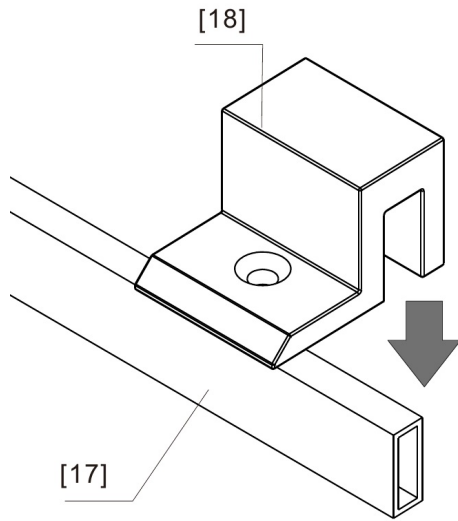


13.10

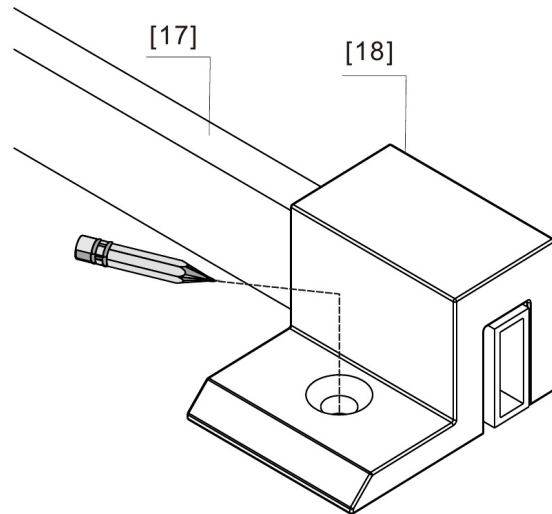

13.11

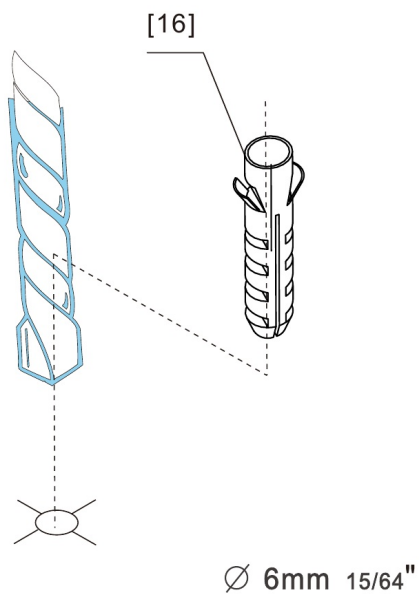


13.12

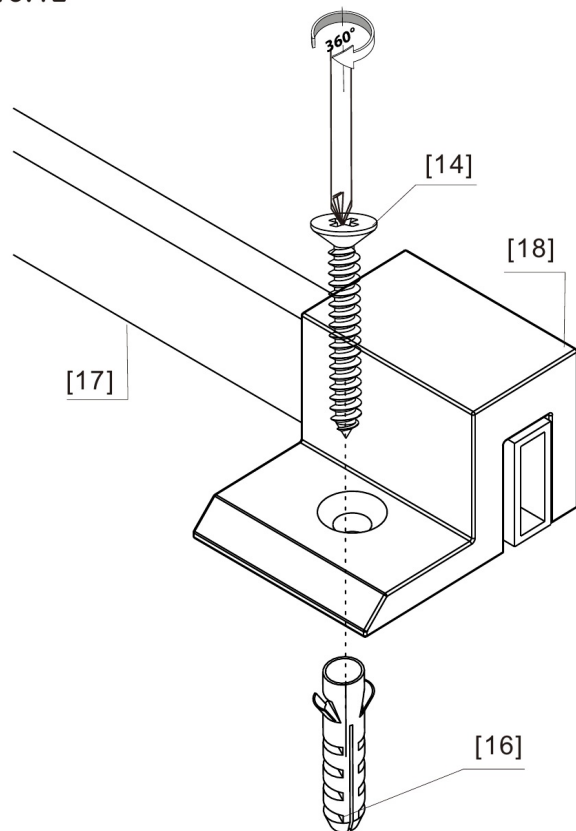


ST4X30

Install Rollers on Movable Panel


14

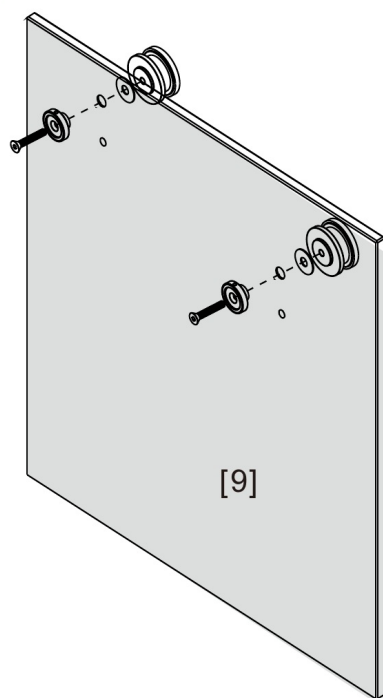


14.2

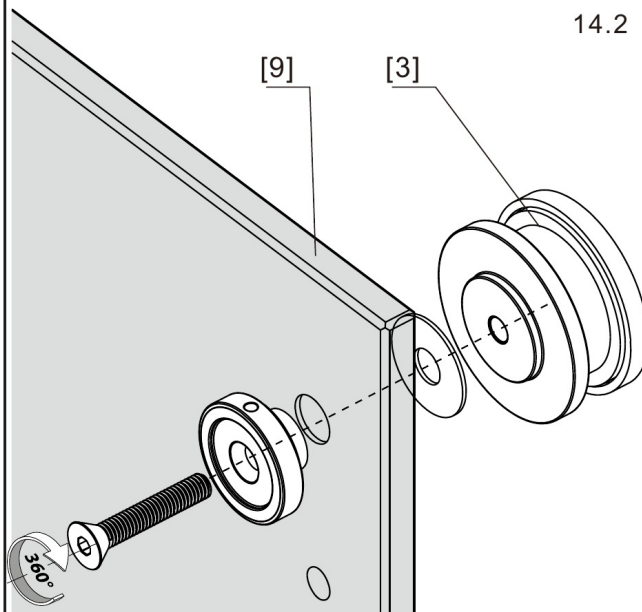

14.1

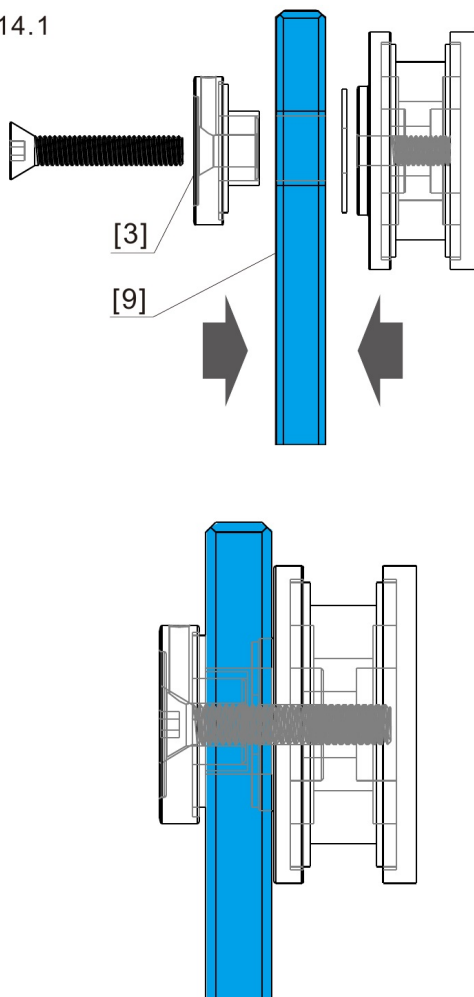


14.3

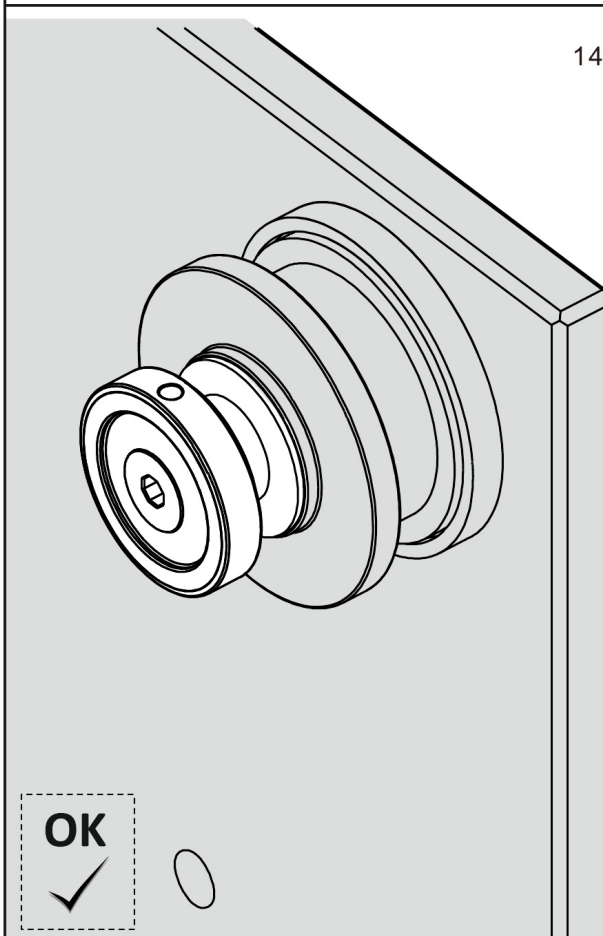


Hang Movable Glass Panel


15

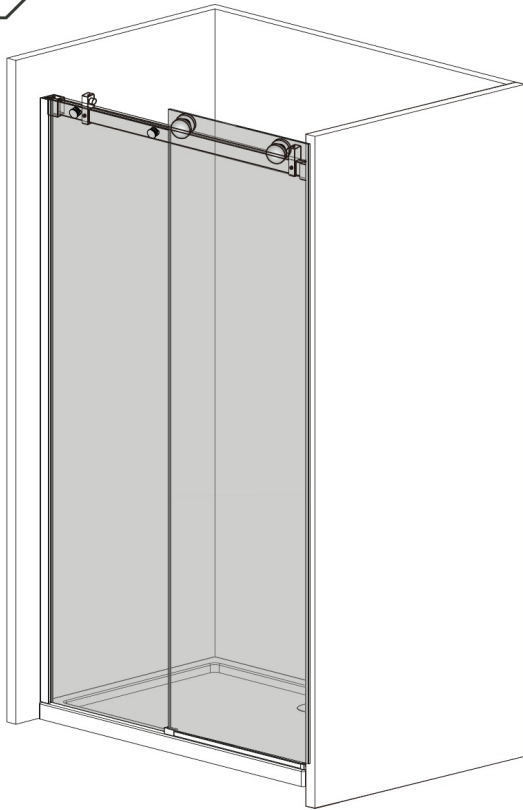


15.3

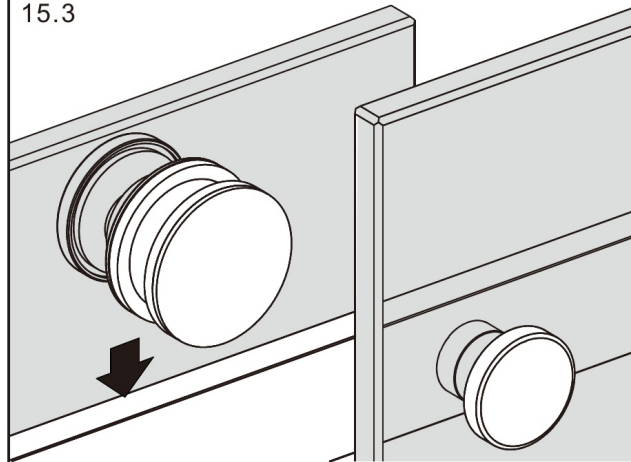


15.4

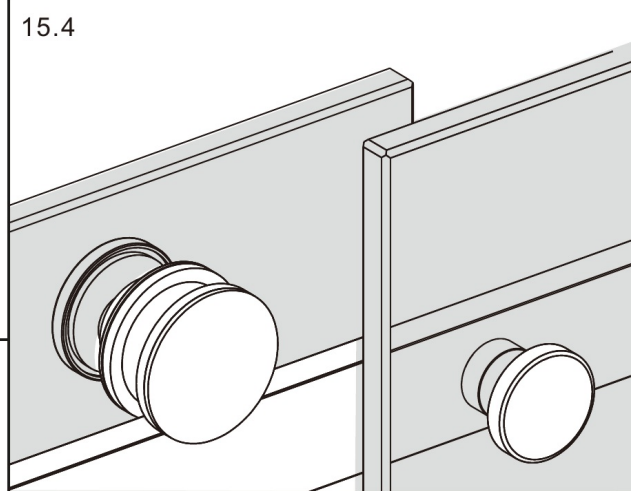


15.1

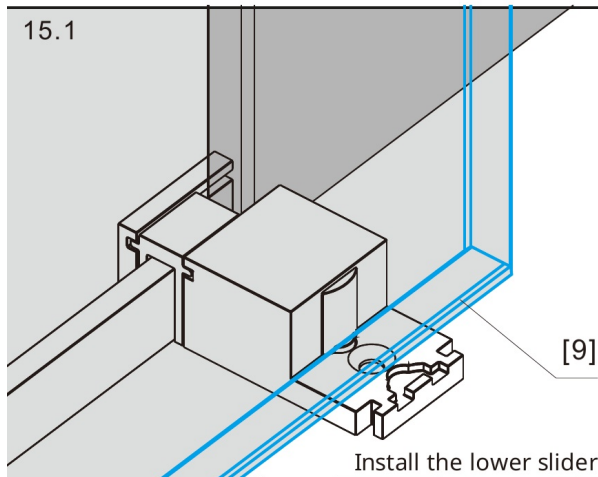

15.2

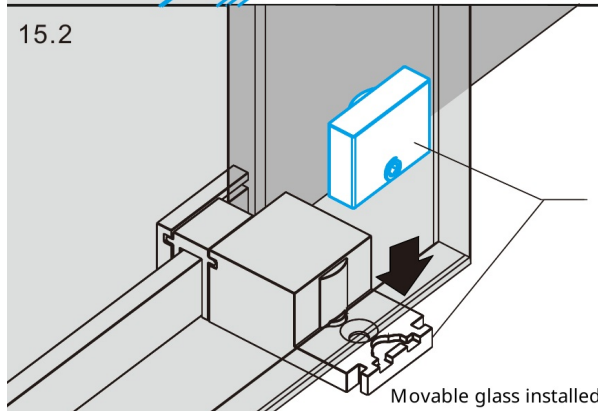


15.5

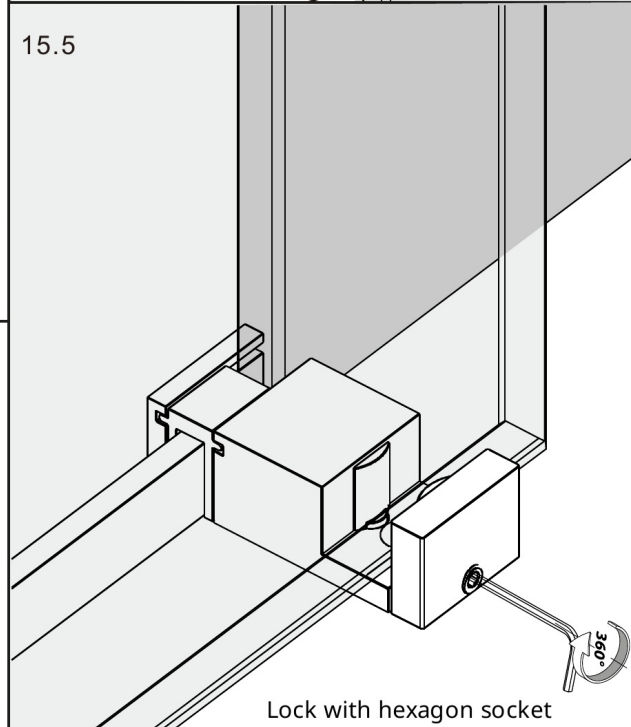


Install Anti-Jump Clips

16

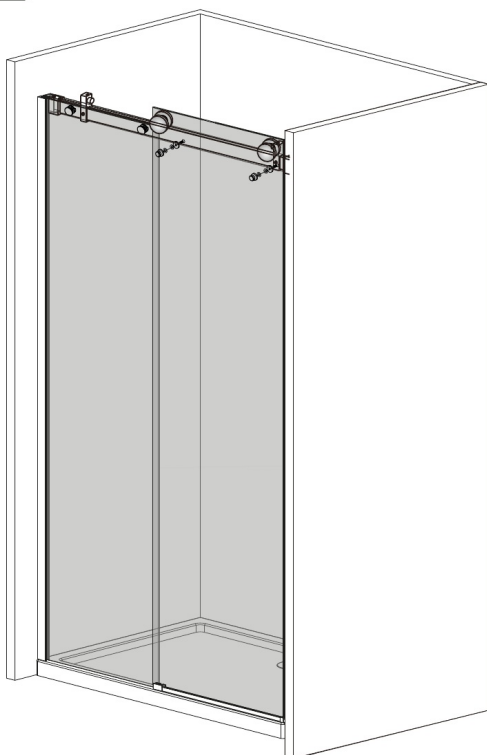


16.2


The anti-jump piece is installed on the movable door [9].

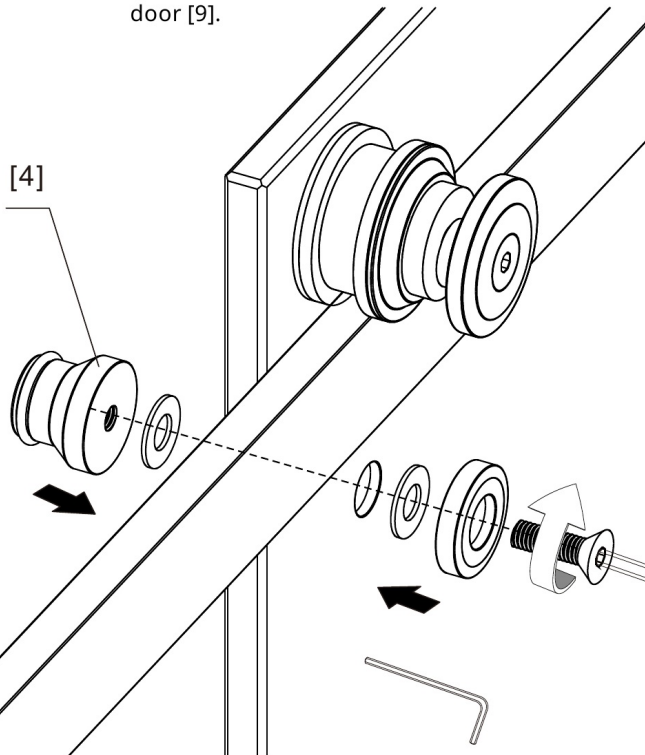

16.1

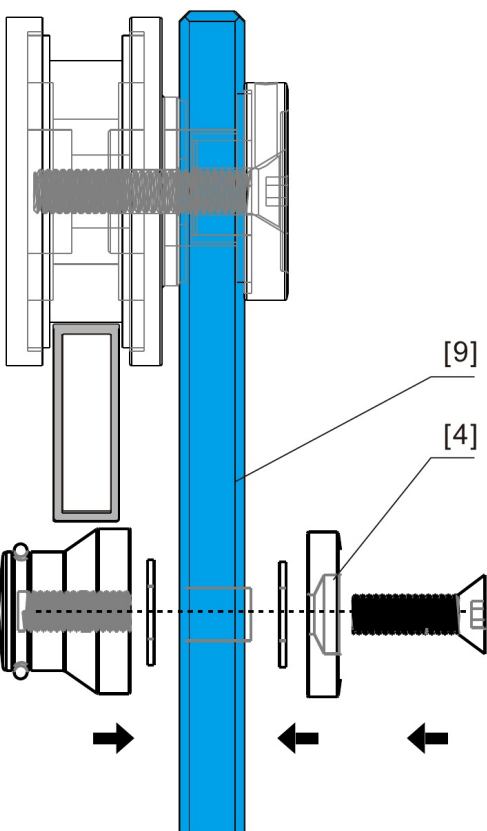


16.3

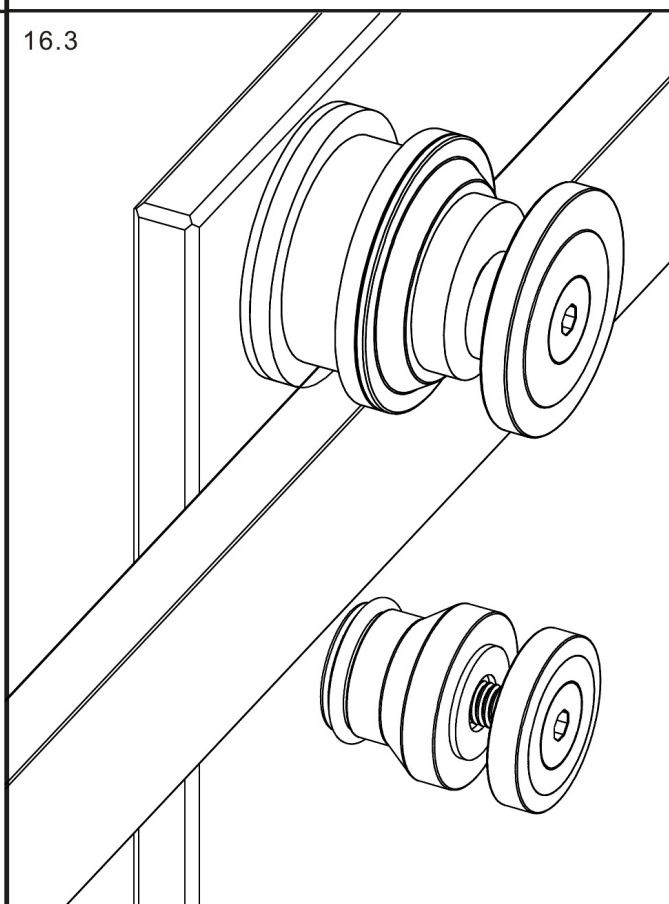



Install Door Seals & Water Barriers

17



Install water barrier

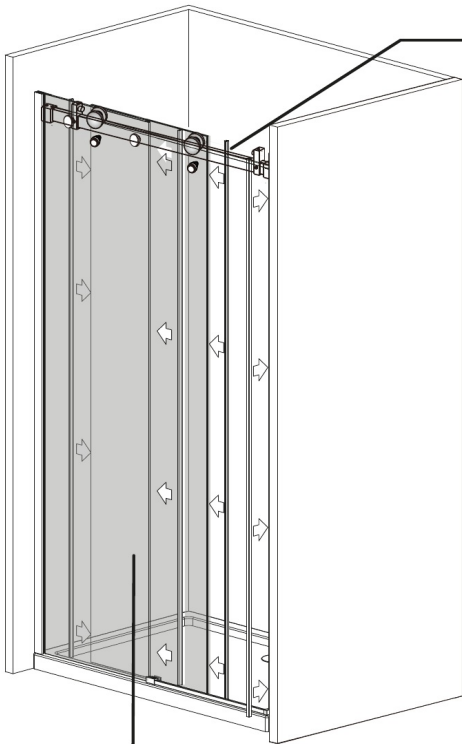



17.1

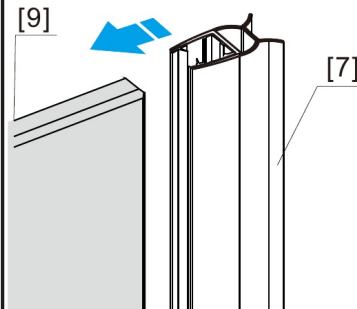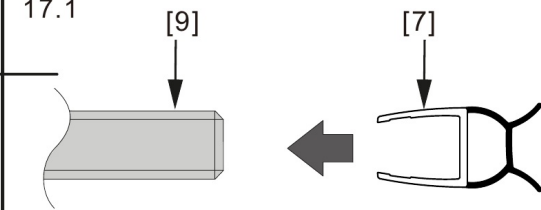


Install waterproof strips [7]

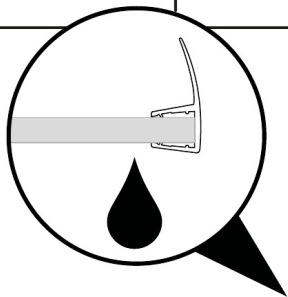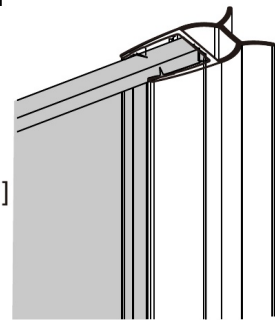


17.2

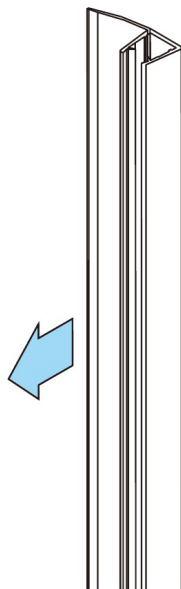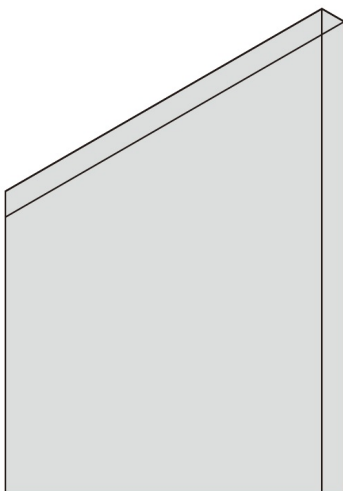


[9] [10]

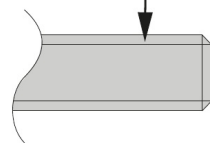


[8]

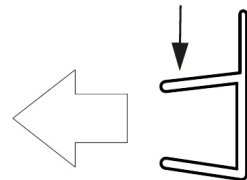


Install F-shaped water barriers on fixed and movable glass [8].

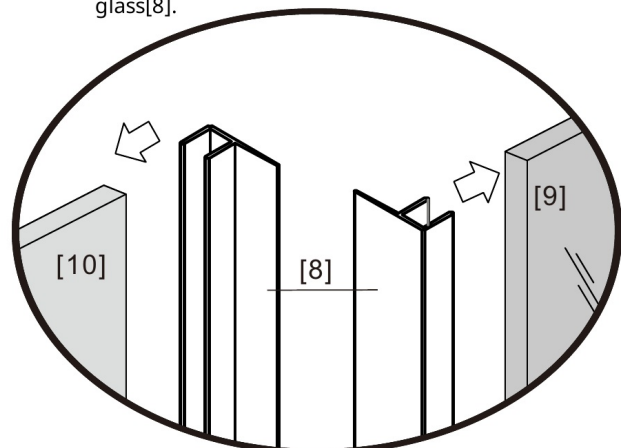


Adjust Roller Height

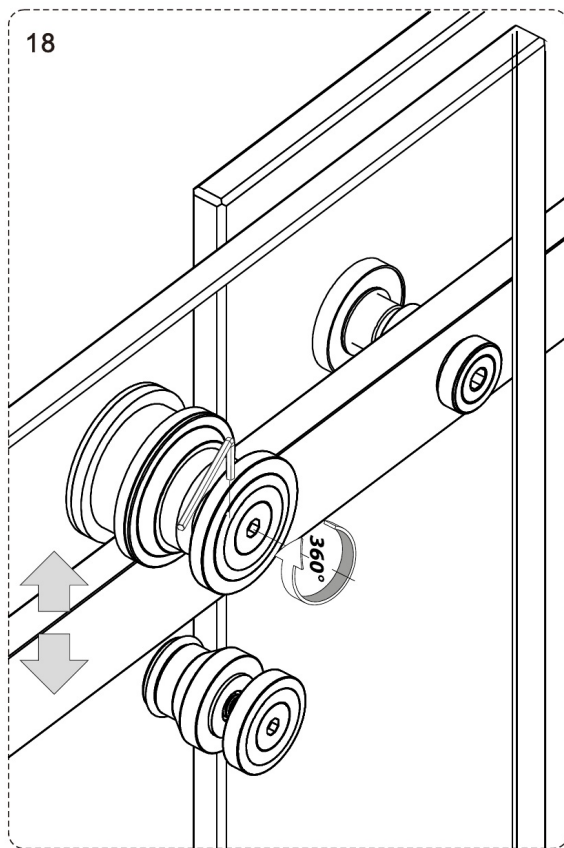


Up and down level height adjustment

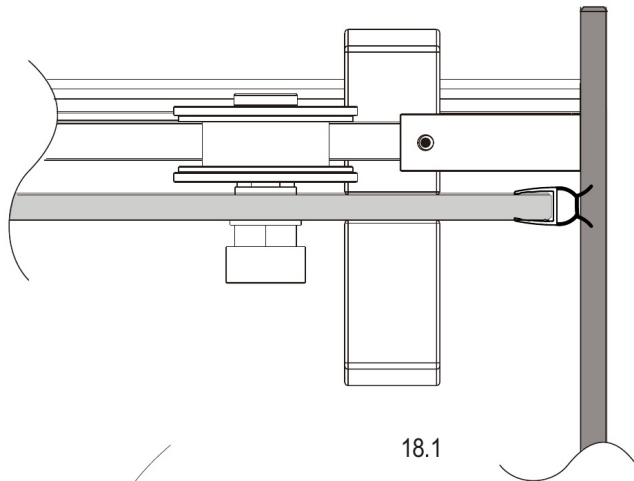

18.2

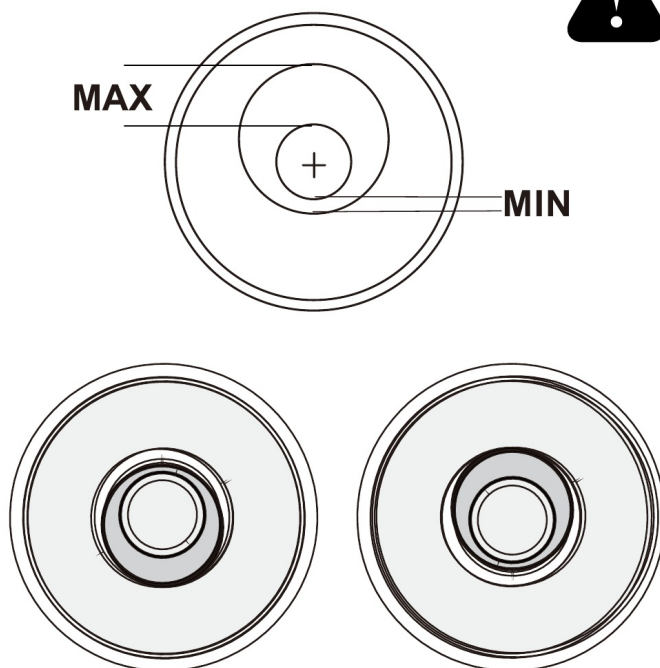


18.3

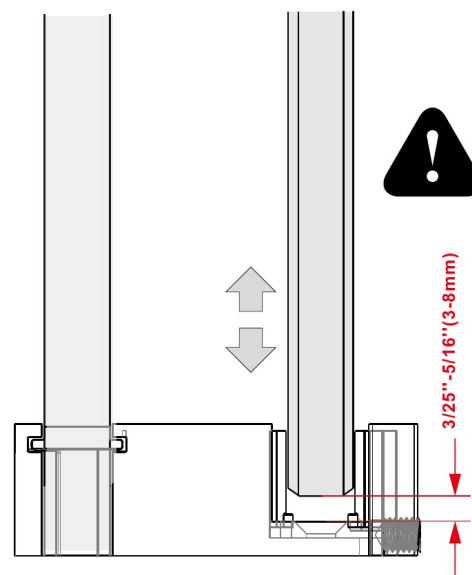


Final Leveling & Locator Adjustment


19

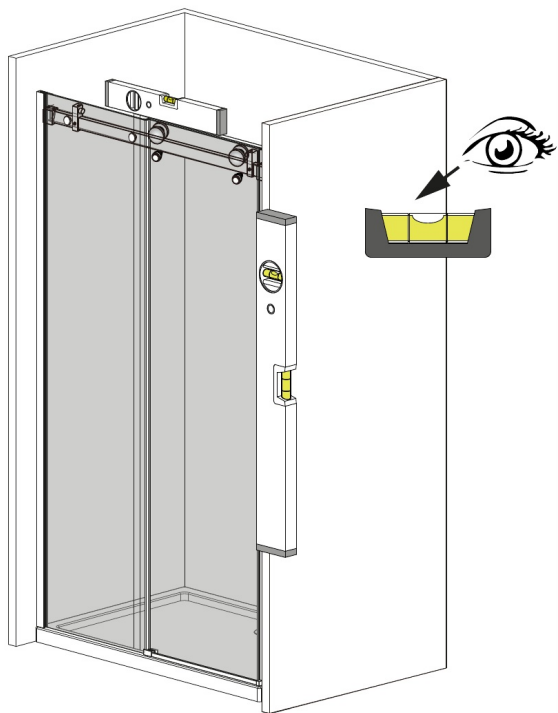


19.1

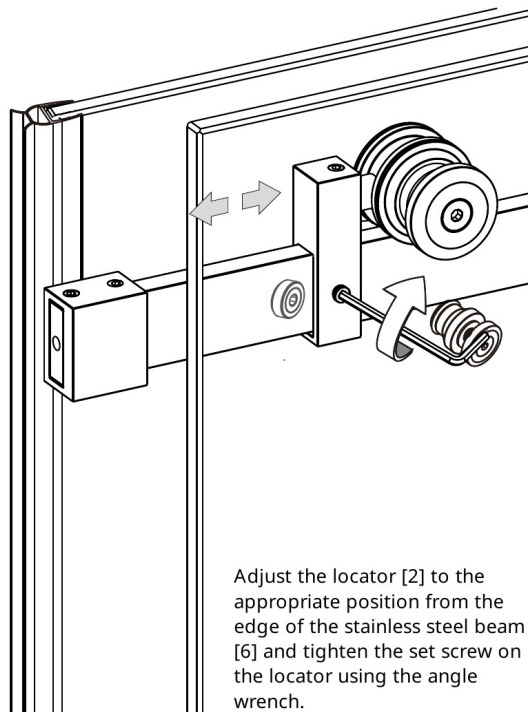

19.2

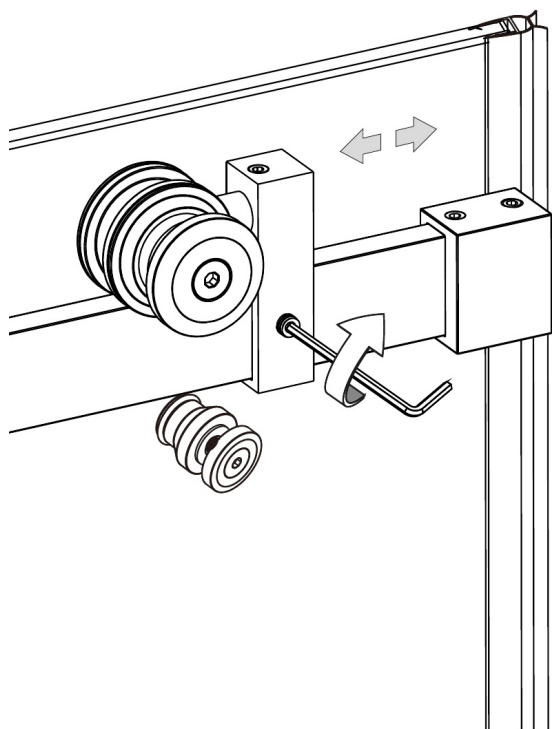


19.3

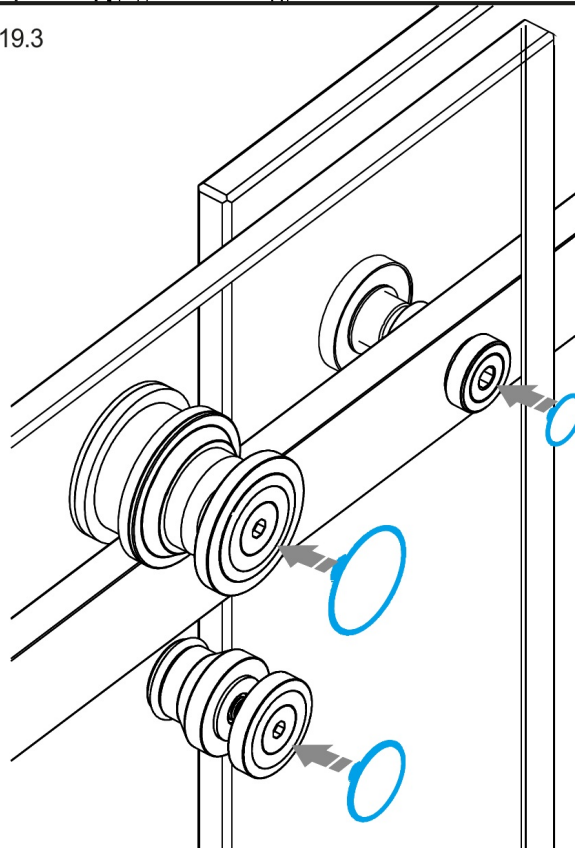


Install Handle & Apply Sealant

20

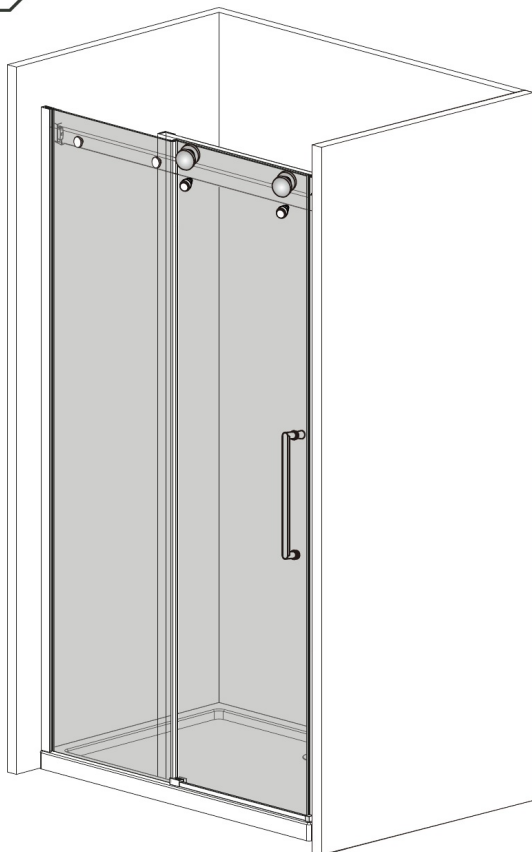

20.1

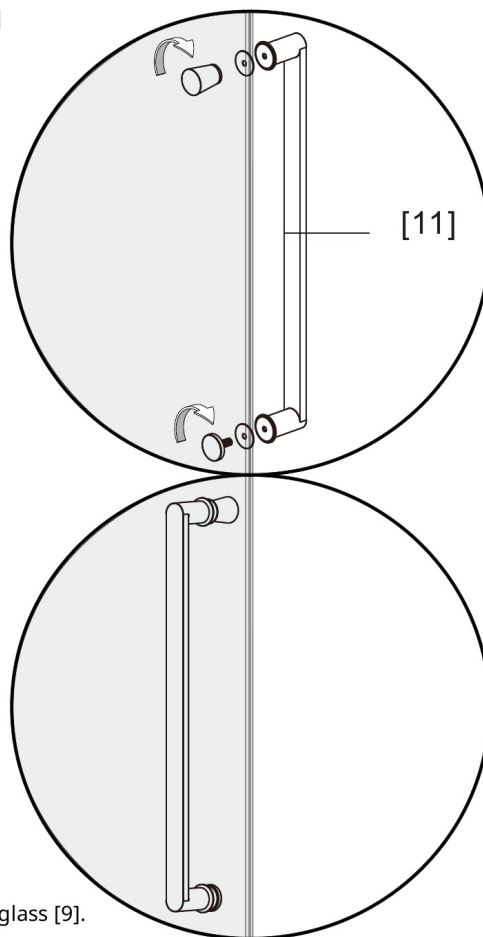


Install the handle [11] onto the sliding glass [9].

21



Allow the glass glue to cure for 24 hours before using the shower.



21.1

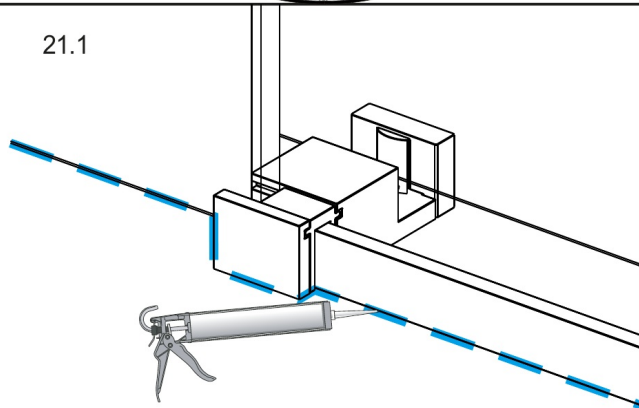

21.2

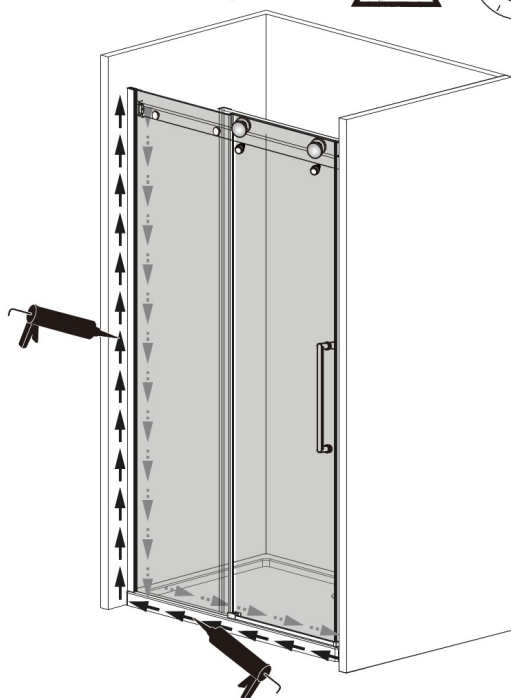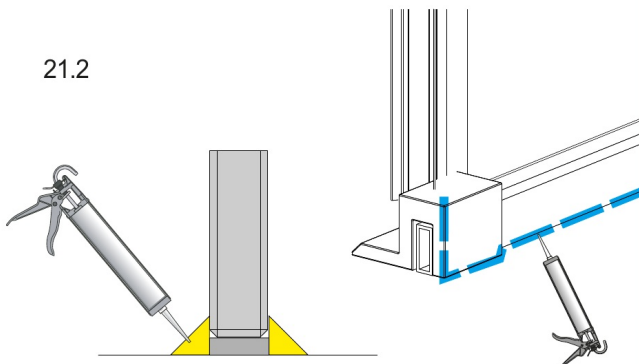

You're ready for the final check.

Verify that the door slides smoothly, hardware is tight, and all specified sealant lines are complete.

WAIT 24 HOURS

Before using the shower, allow the applied sealant / adhesive to cure for 24 hours.



Final Function Check

Open and close the sliding panel several times. Confirm the bottom guide, rollers, anti-jump clips, handle, and locator are secure.



Clean the Glass

Use mild soap diluted in water. Avoid scouring pads, abrasive powders, or sharp tools on the glass and metal components.



After Each Shower

Use a squeegee on the glass after each use to help minimize water spots and keep the panels looking clean.



Keep This Guide

Store this installation guide with your home records for future maintenance or replacement-part reference.

Thank you.

We hope you enjoy your new shower door.

For installation questions, review the corresponding step in this guide before making any adjustment.