




# 85062 Product Installation Instructions

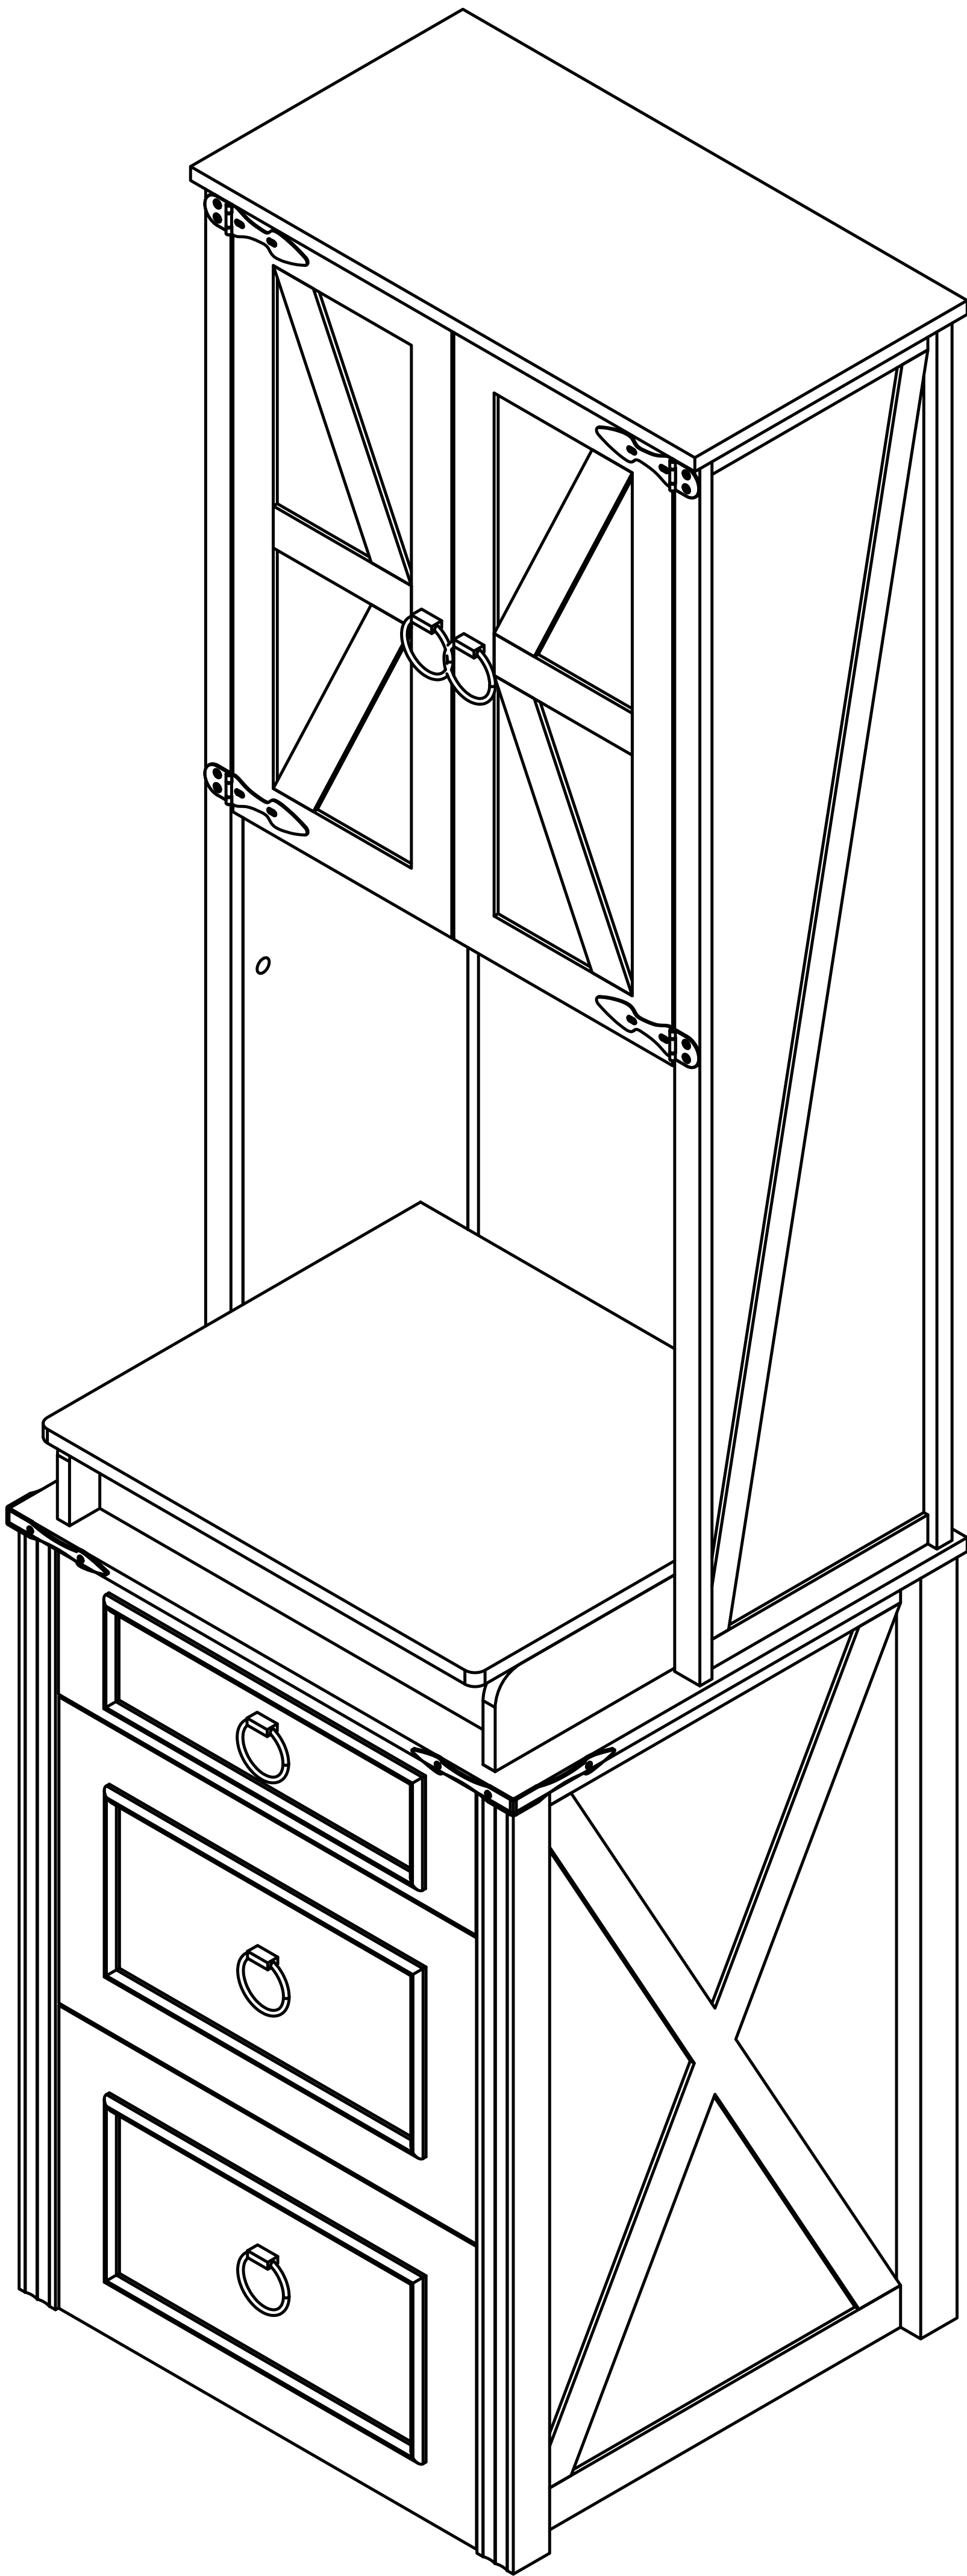


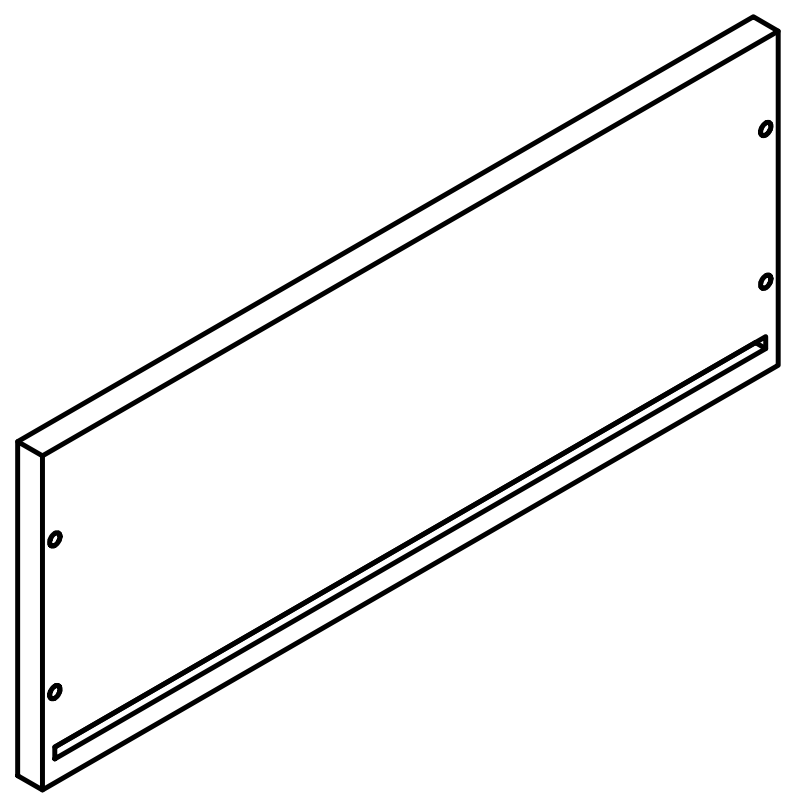


1x1

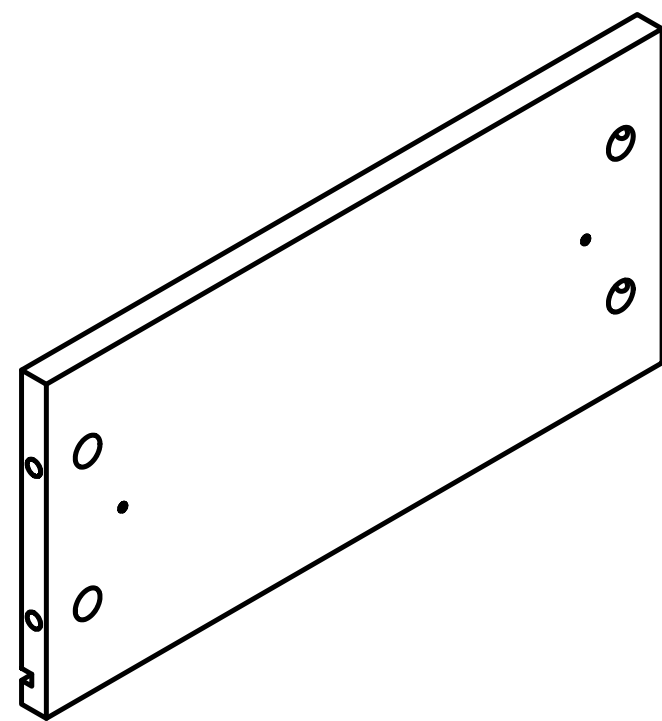


2x2

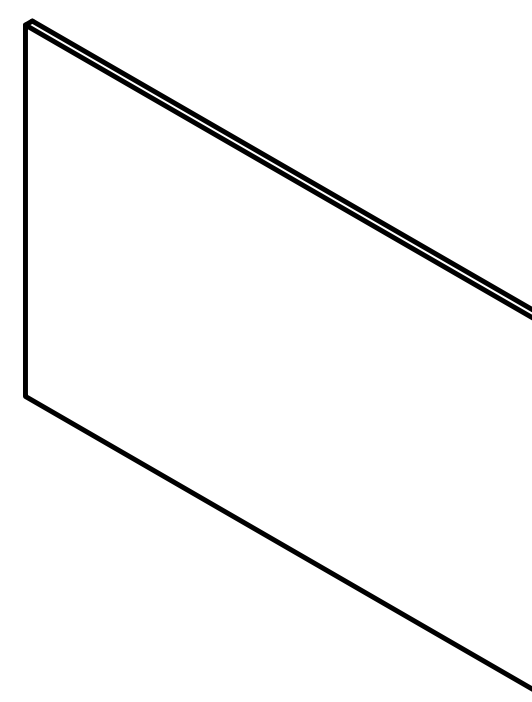


3x1

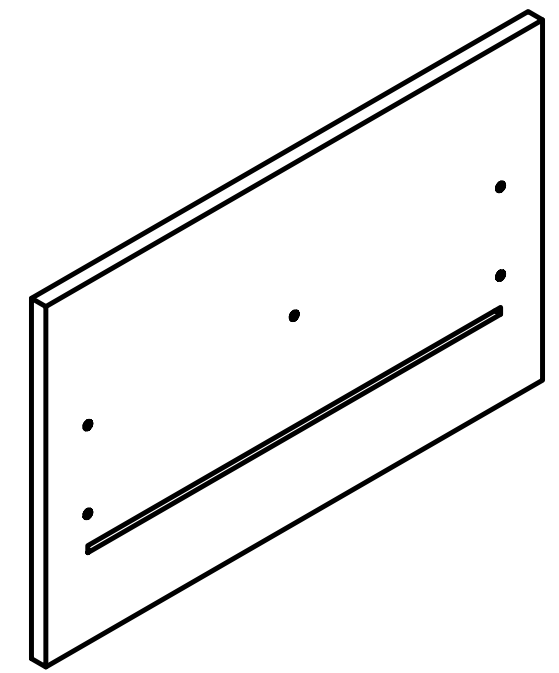


4x1

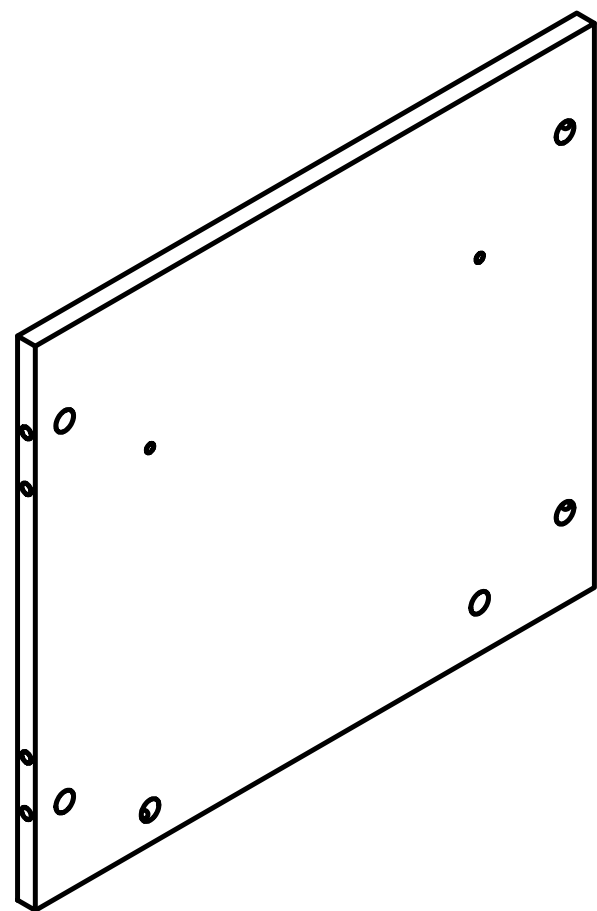


5x1

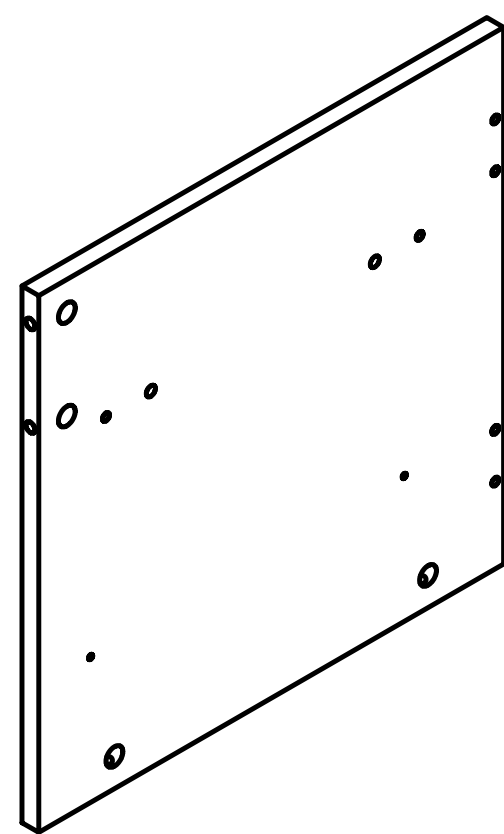


6x1

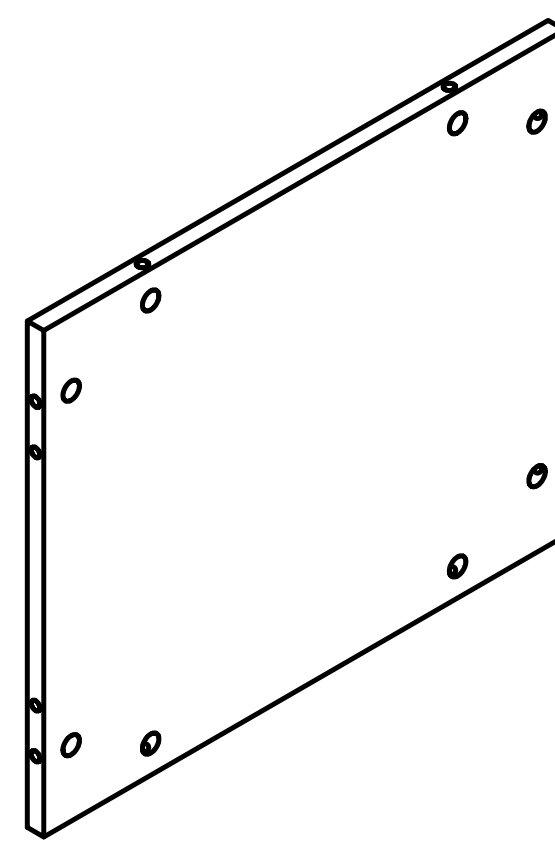


7x1

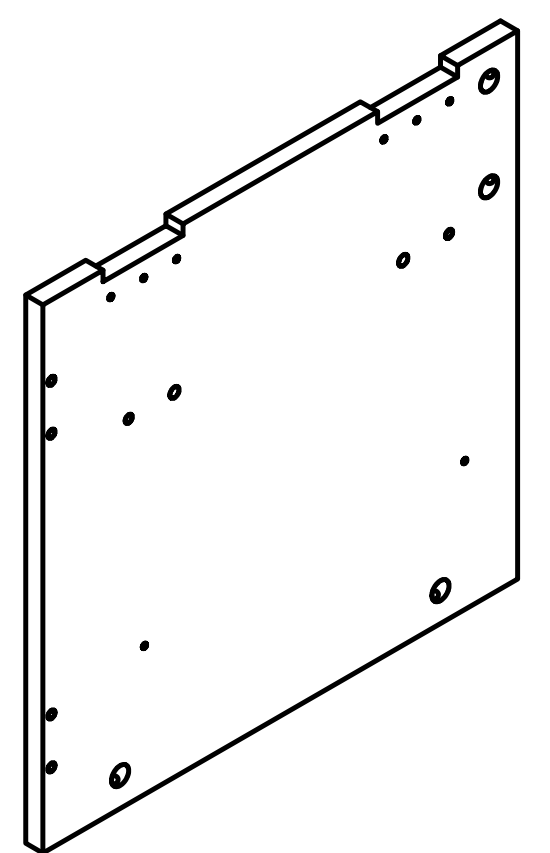


8x1

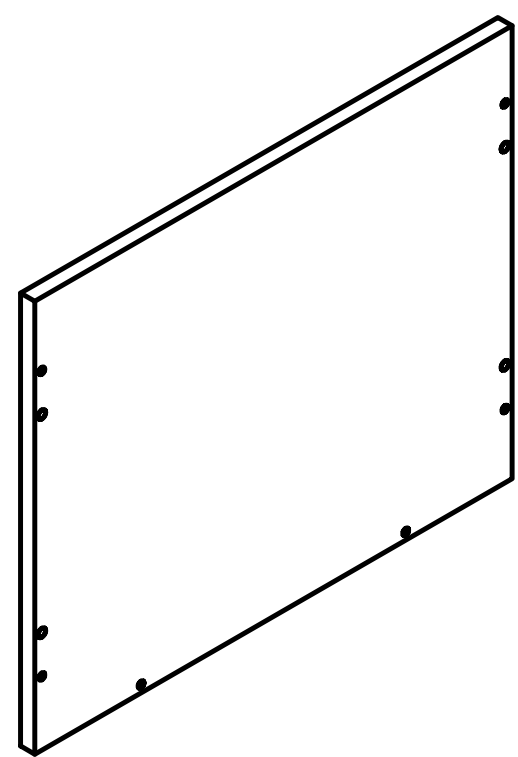


9x1

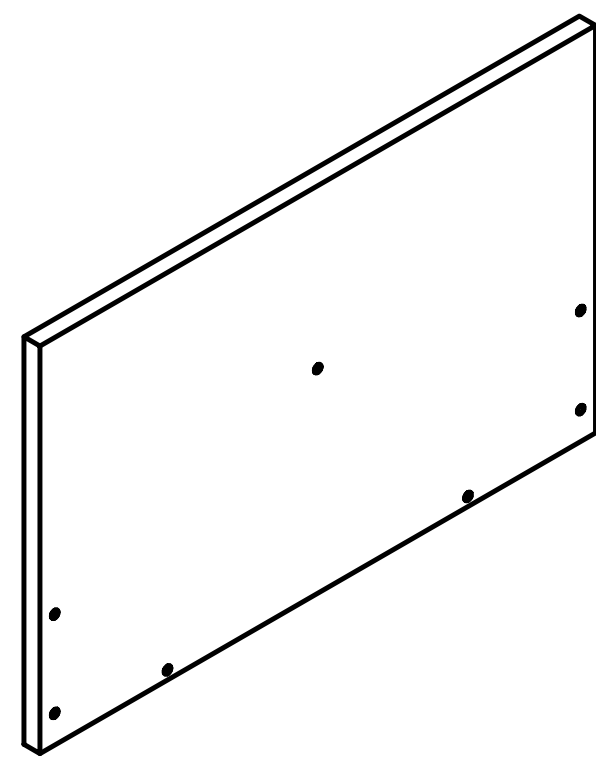


10x1

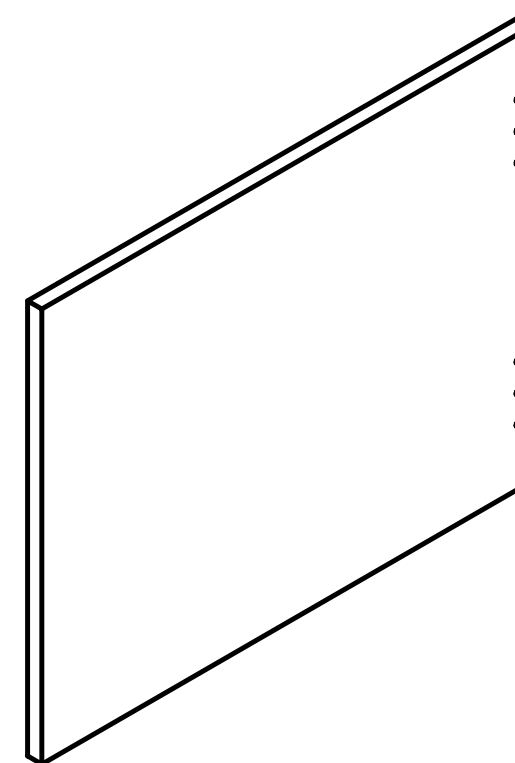


11x1

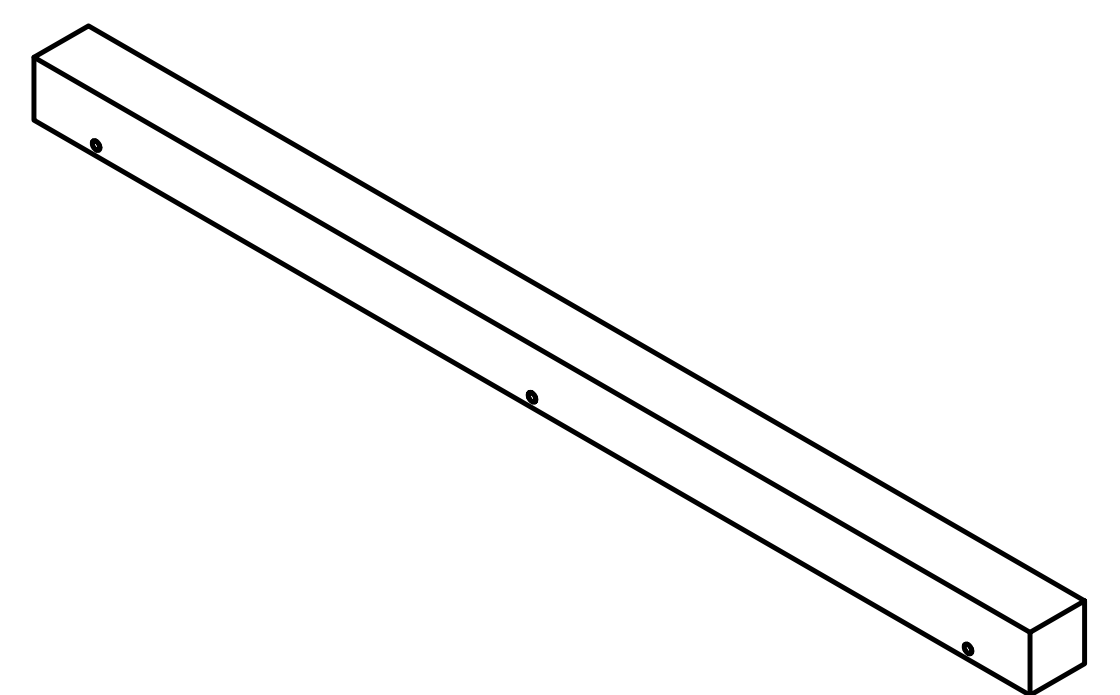


12x1

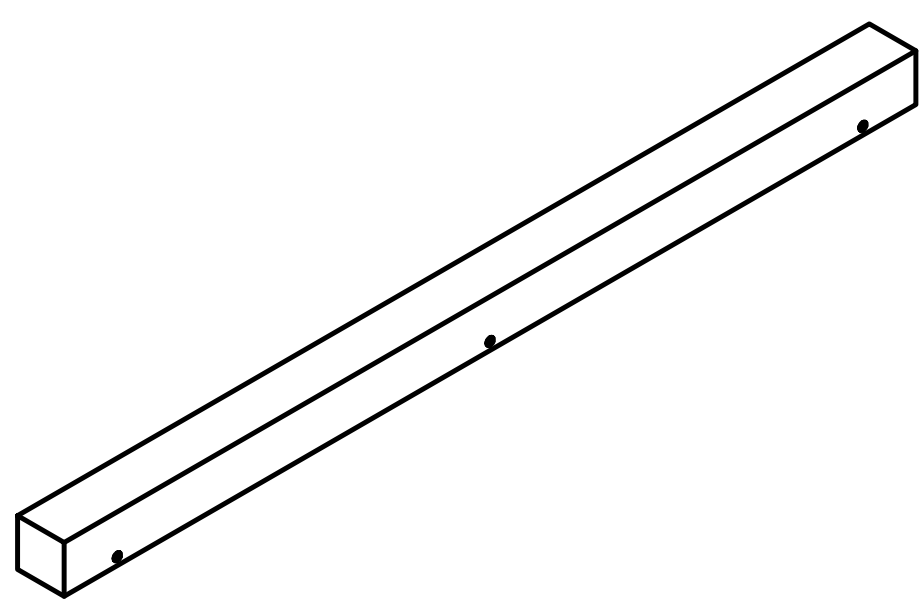


13x1

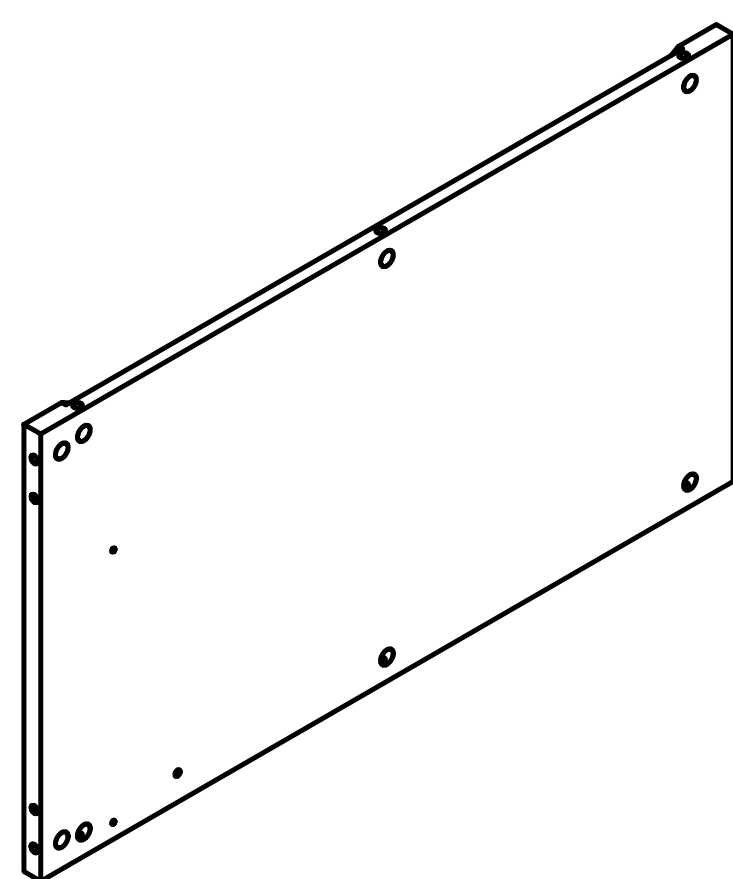


14x1

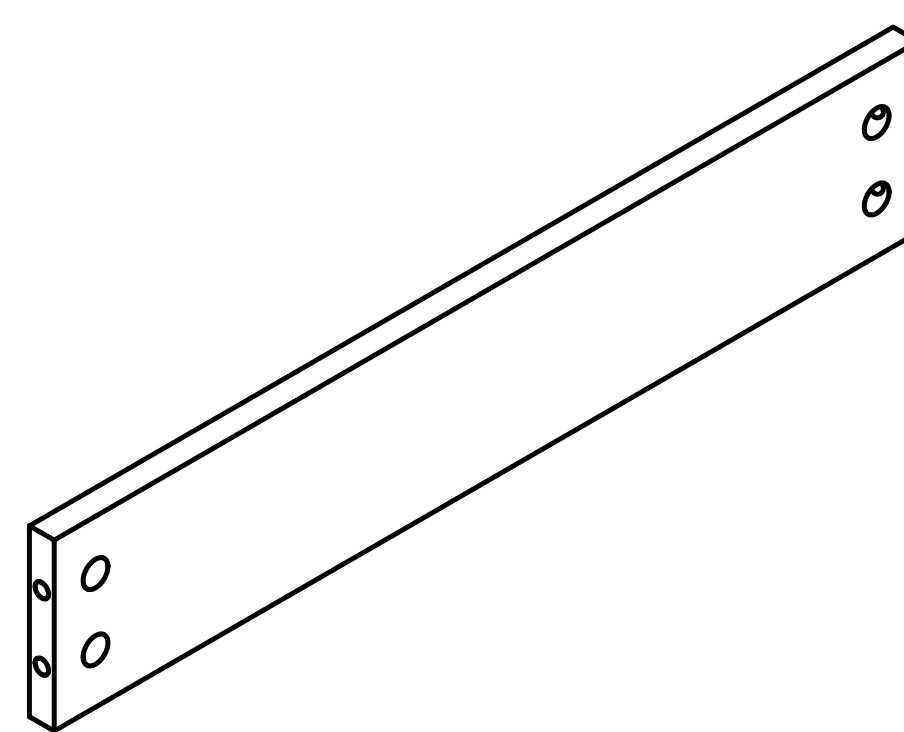


15x1

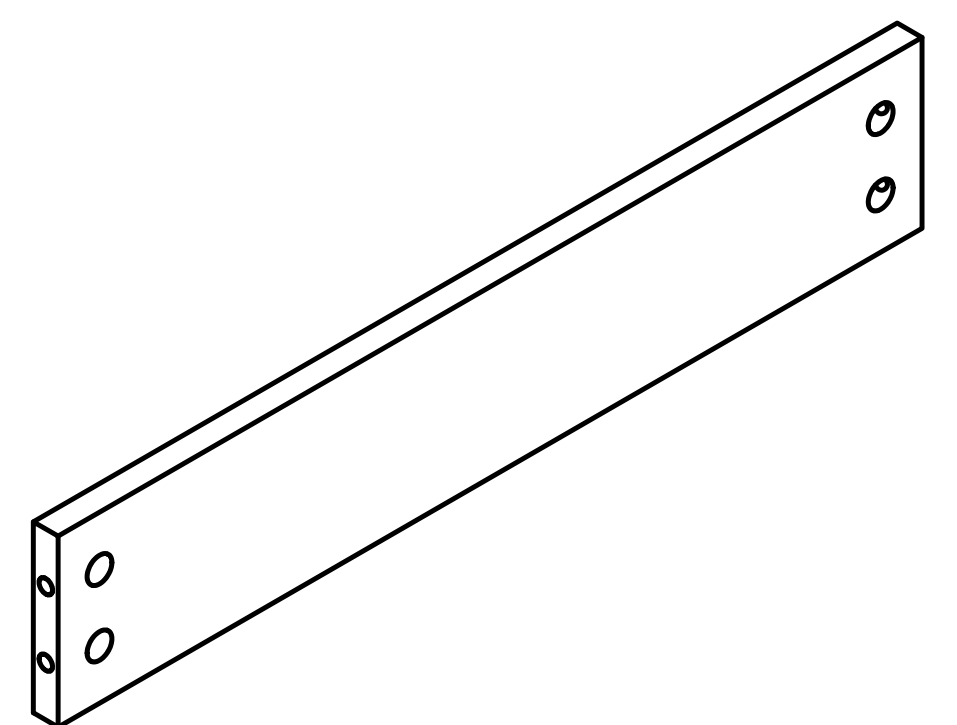


16x1

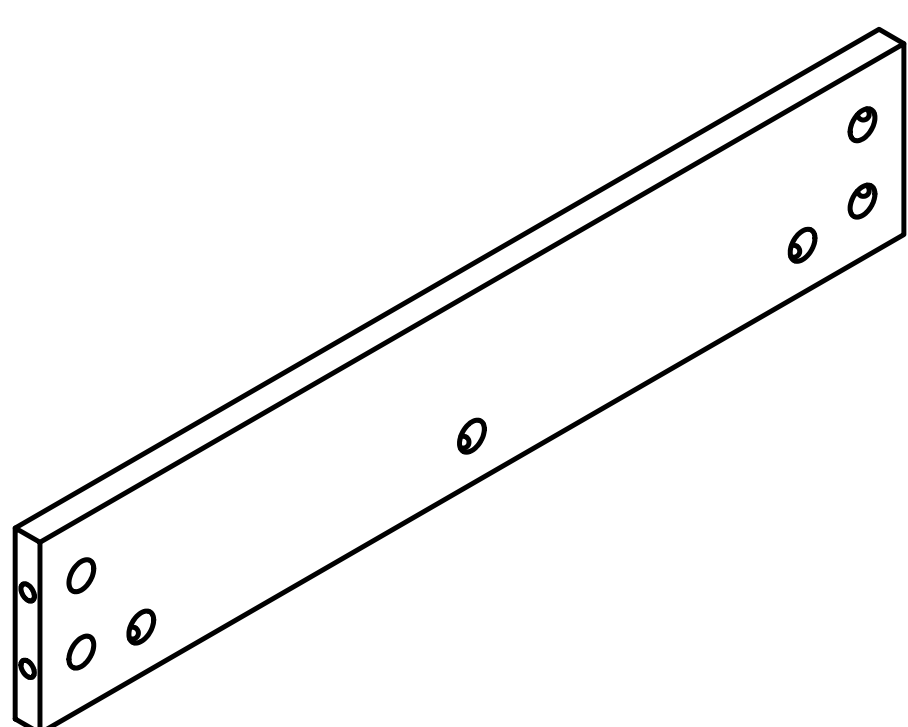


17x1




18x1

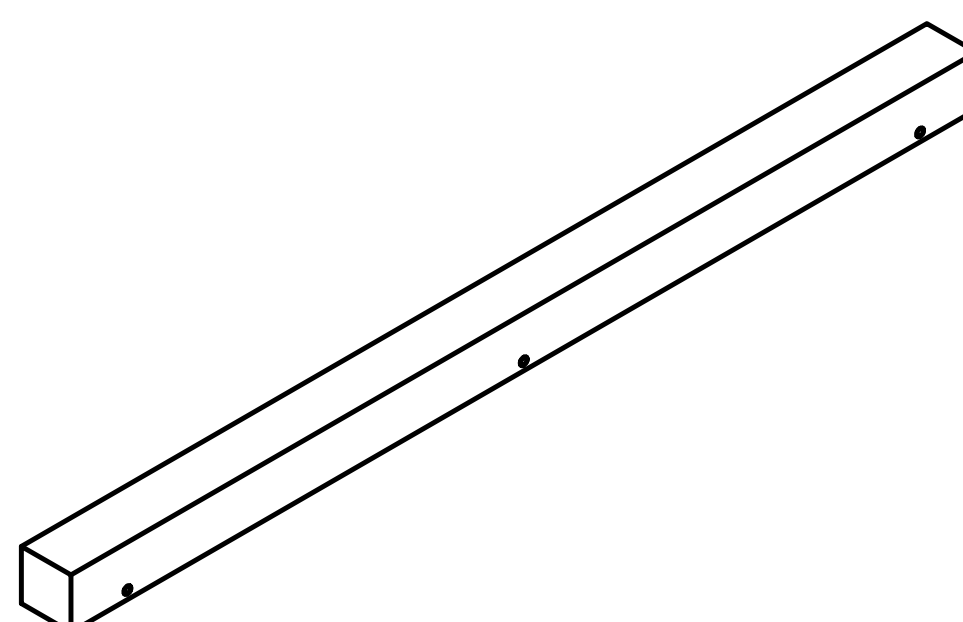


19x1

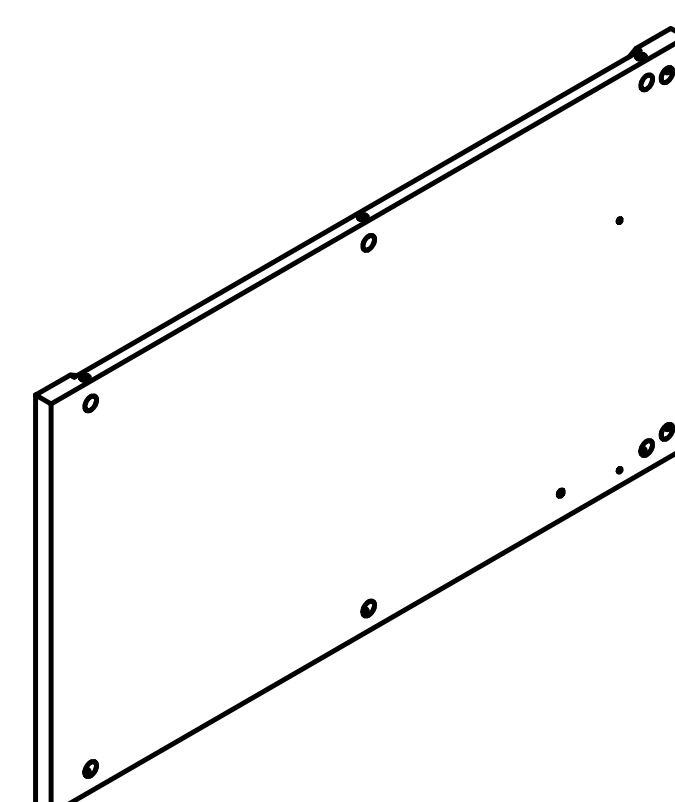


20x1

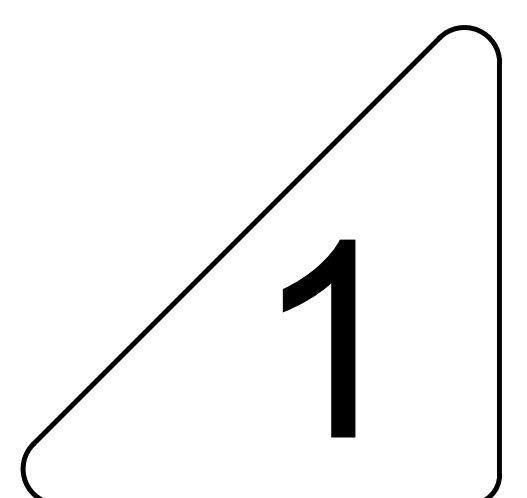


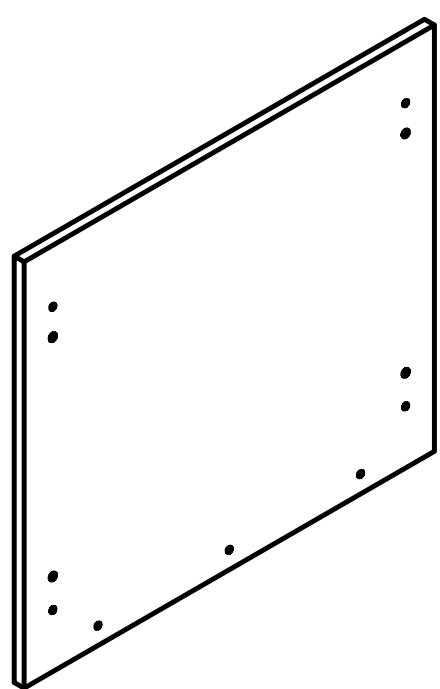


21x1

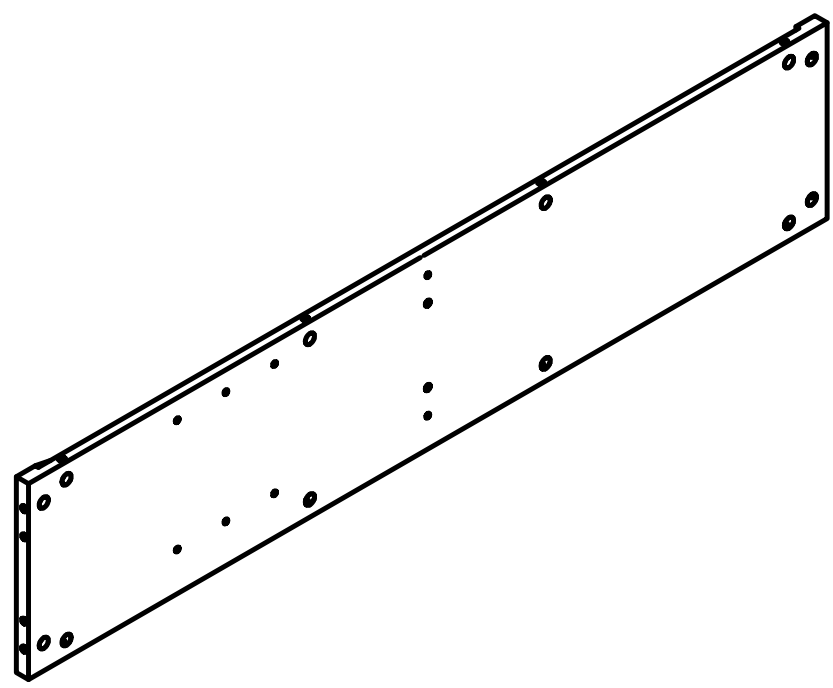


22x1

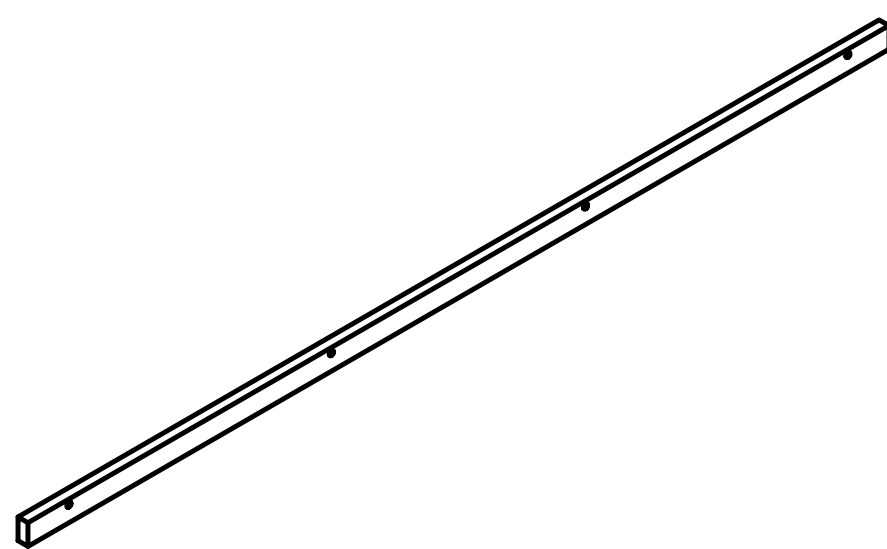


23x1

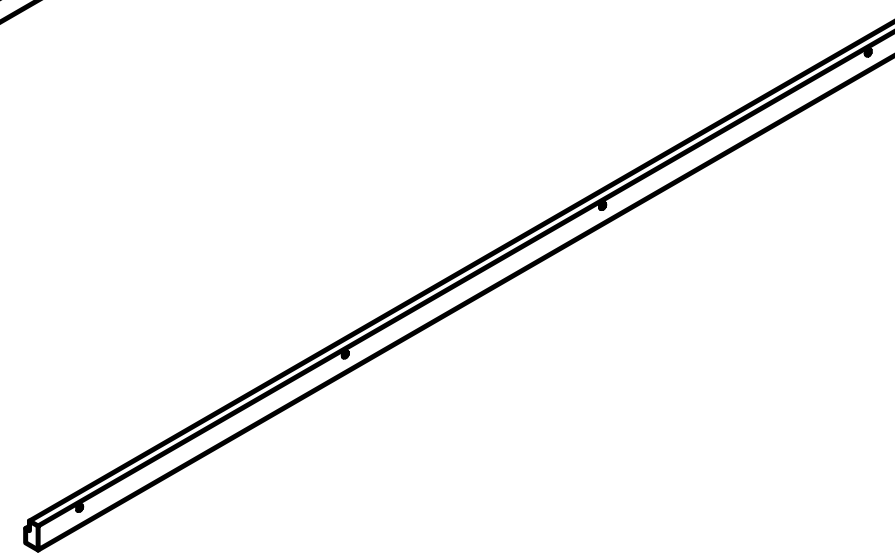


24x2

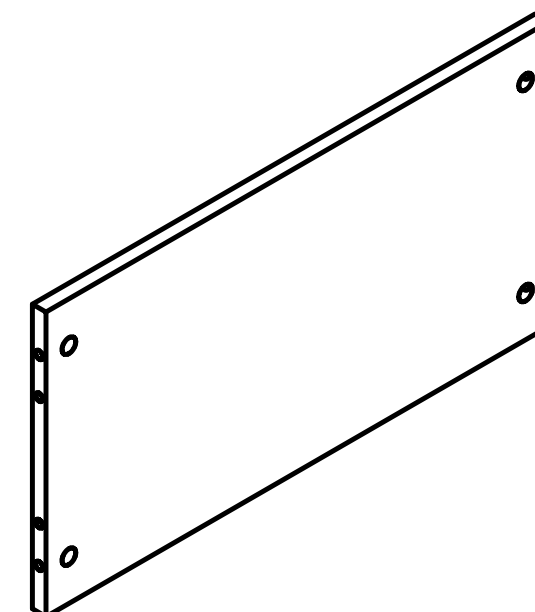


25x1

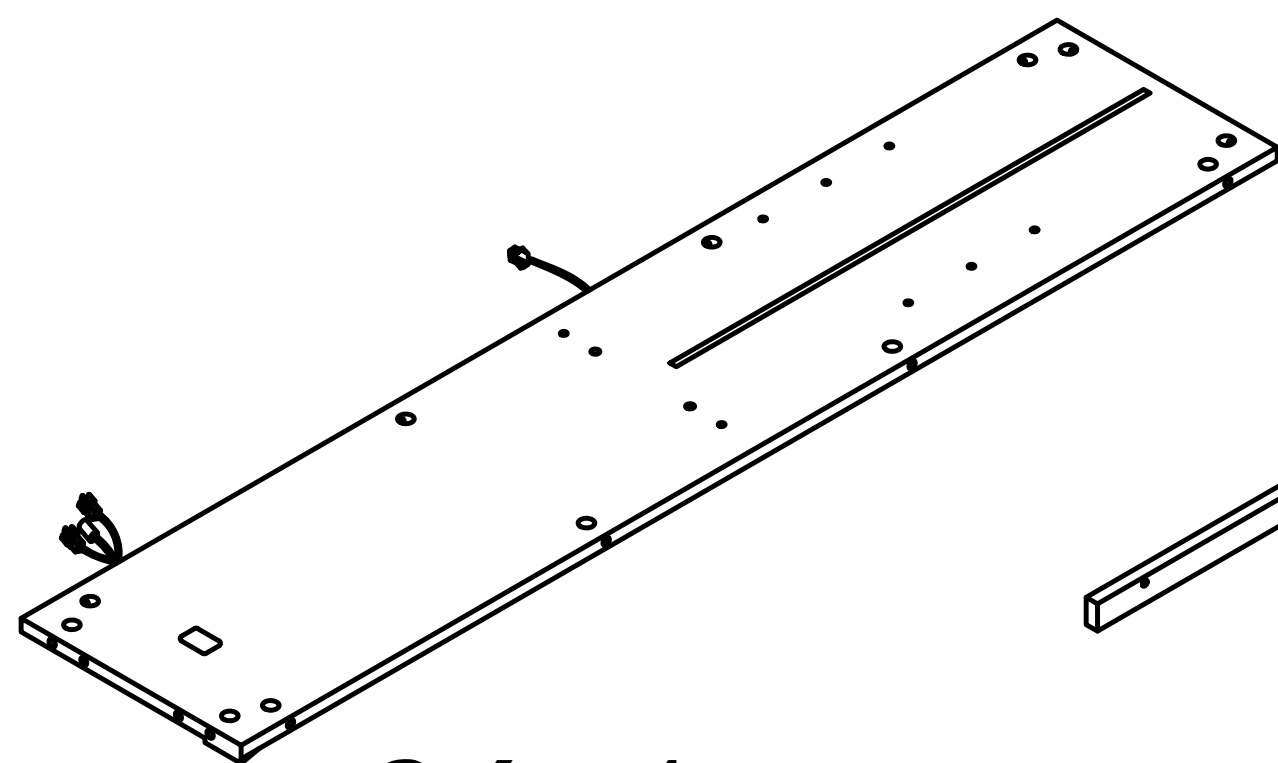


26x1

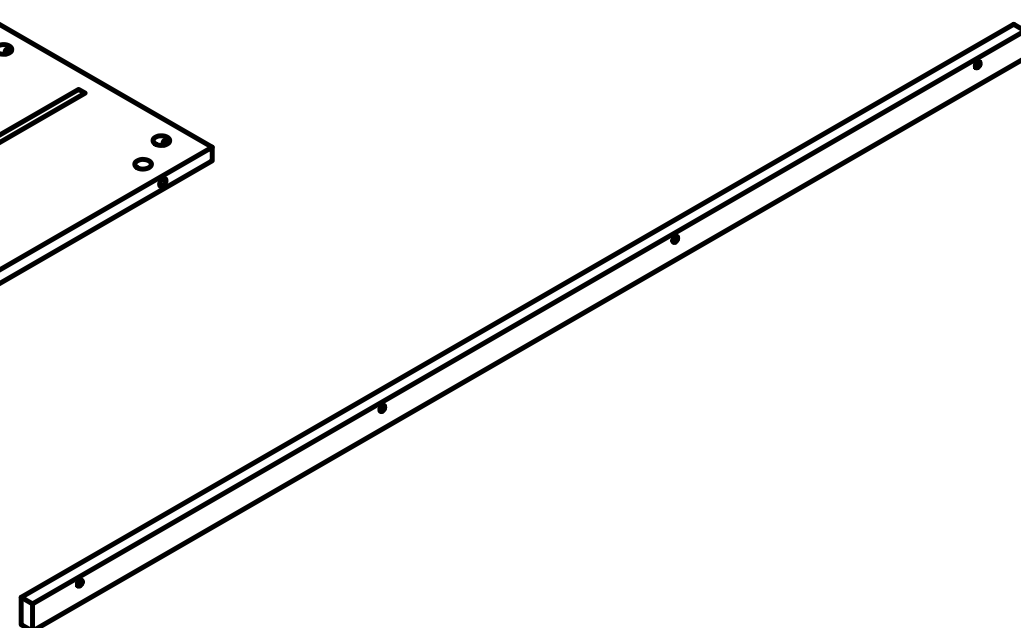


27x1

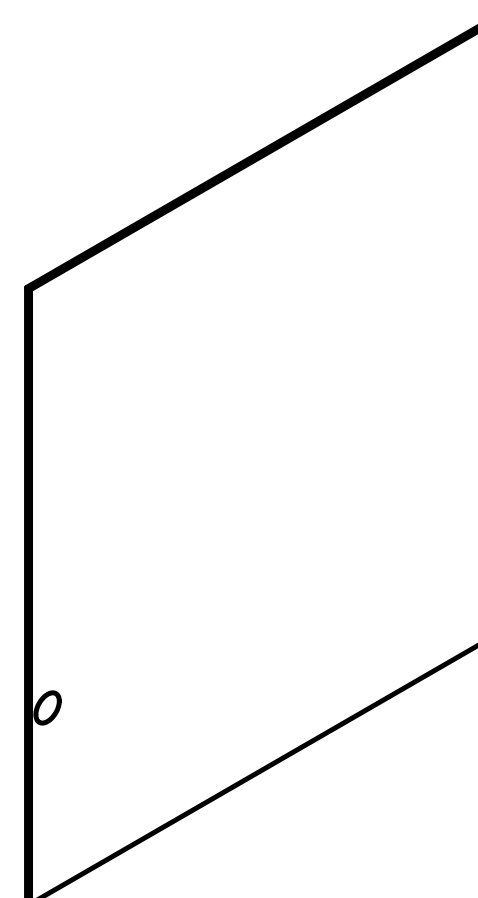


28x1

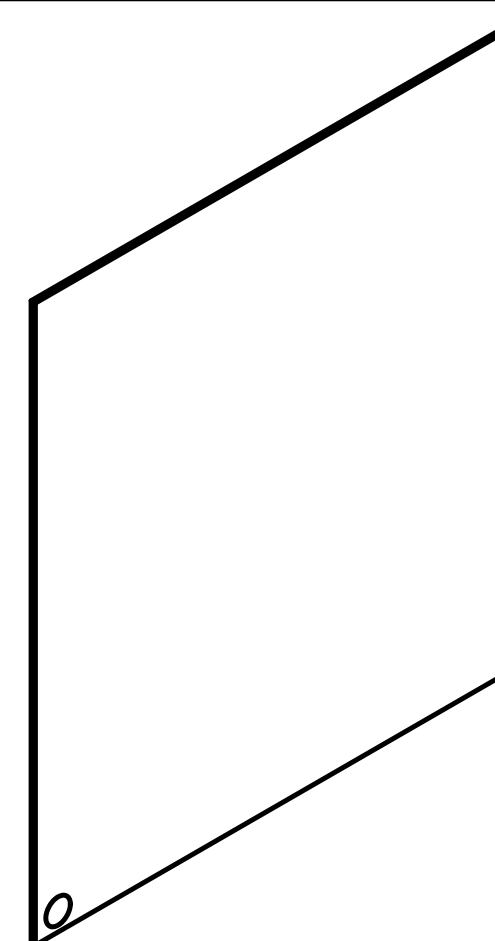


29x1

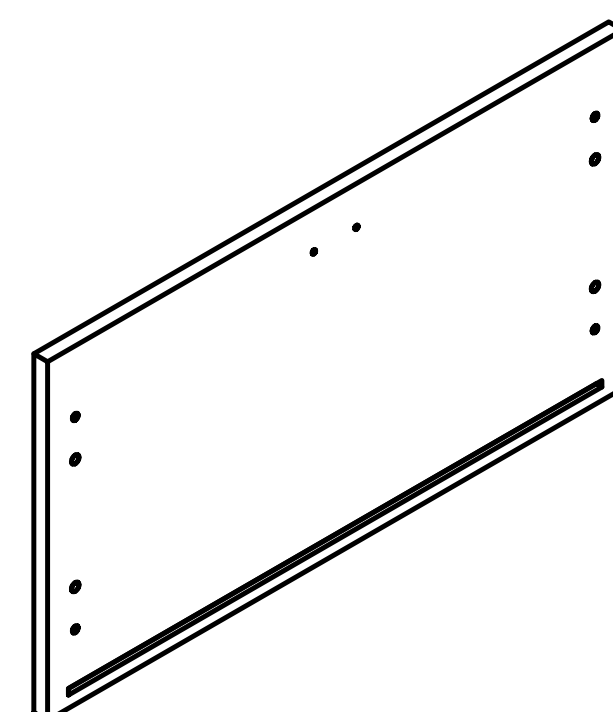


30x1

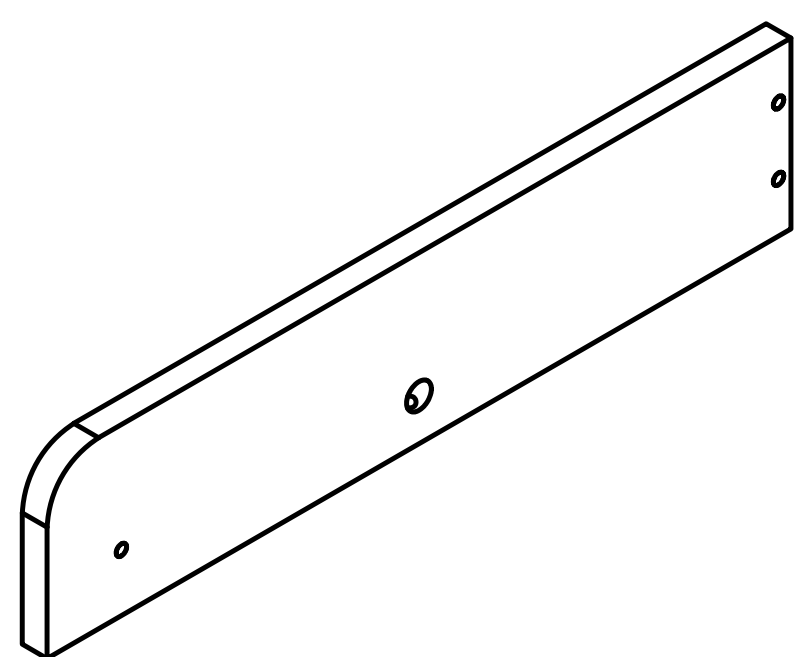


31x1

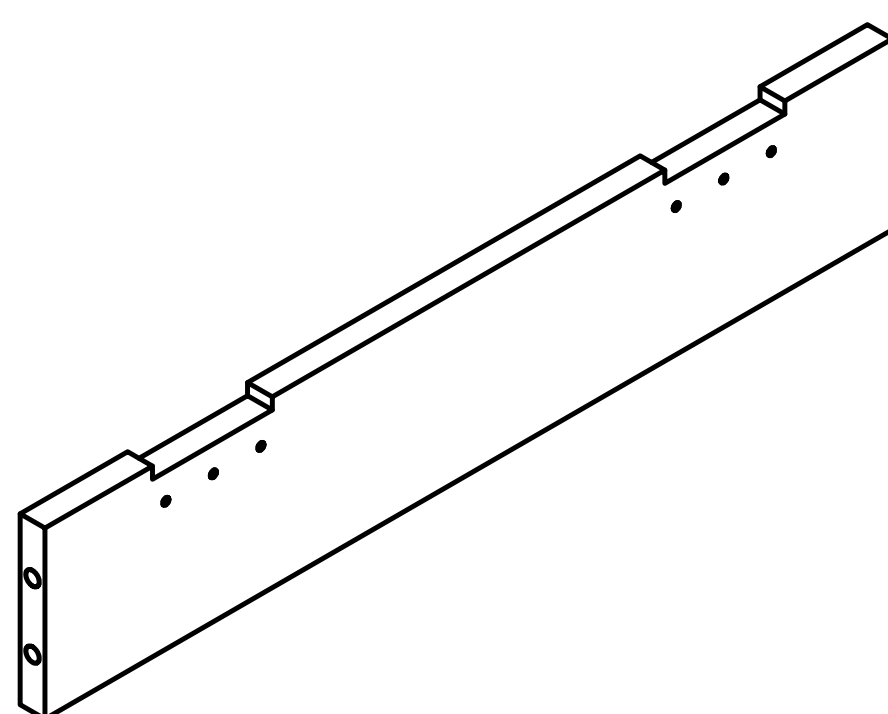


32x1

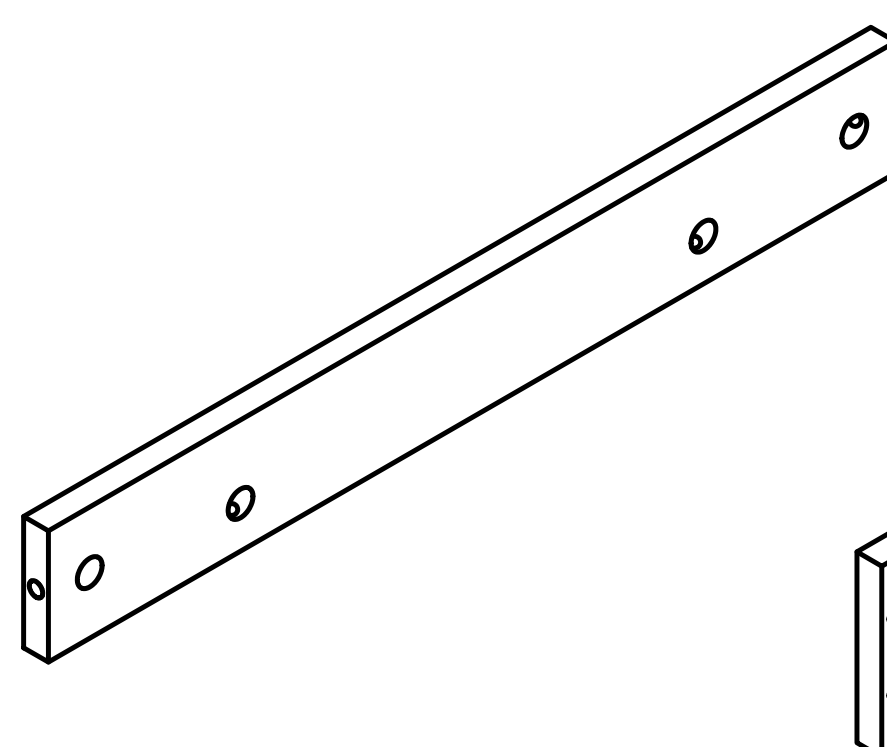


33x1

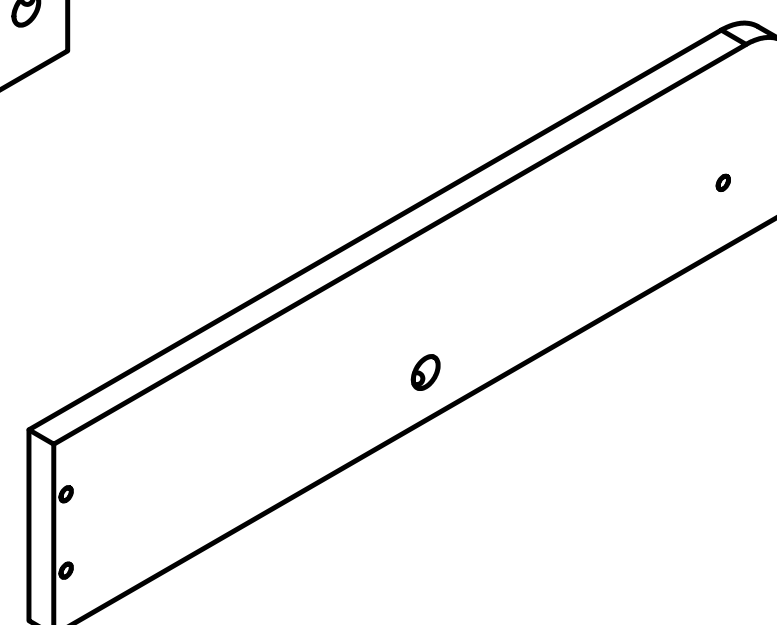


34x1

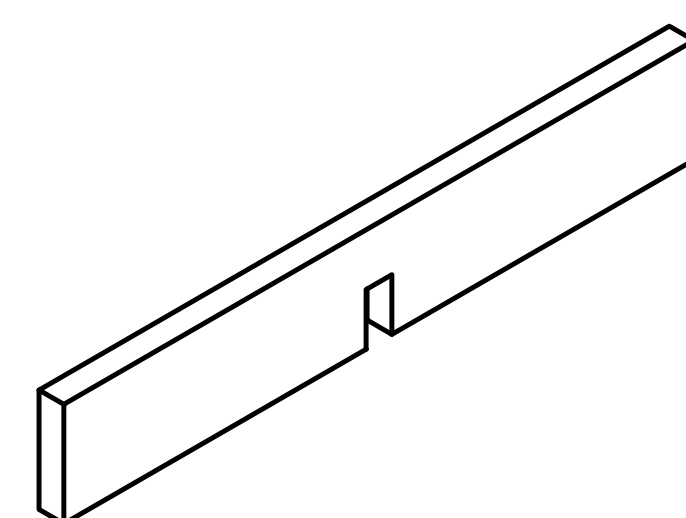


35x1

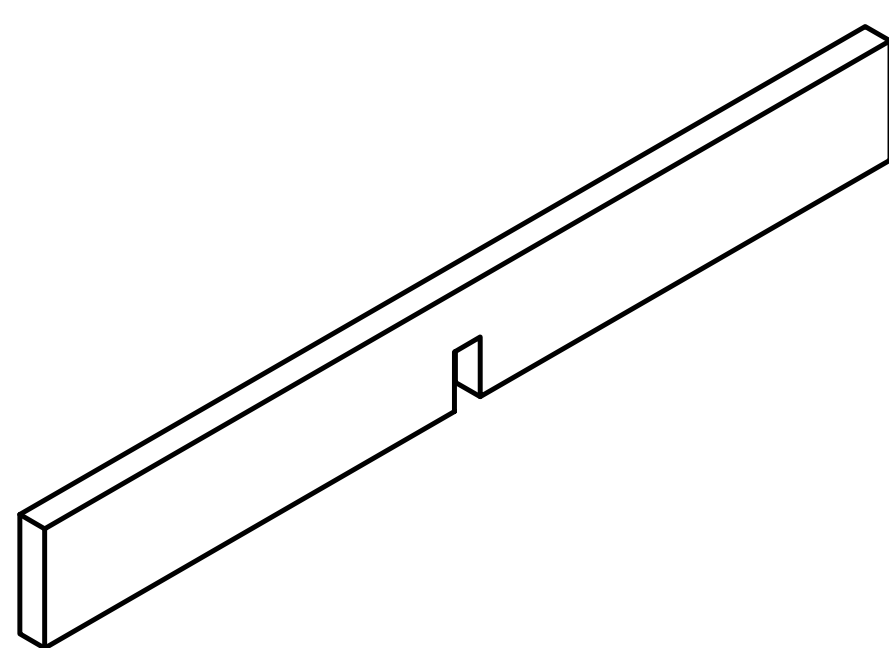


36x1

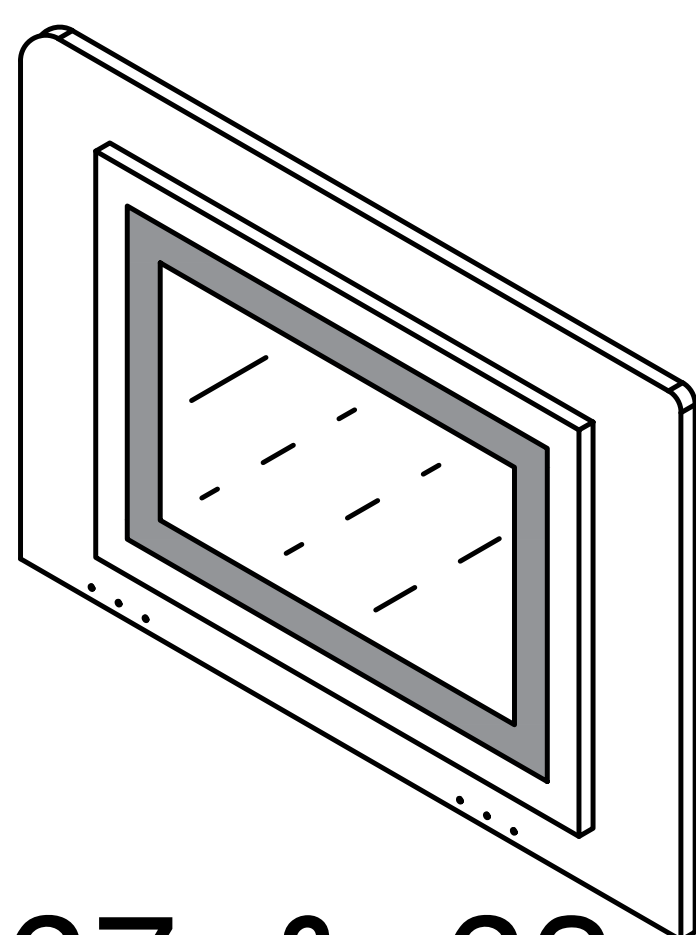


37 & 38

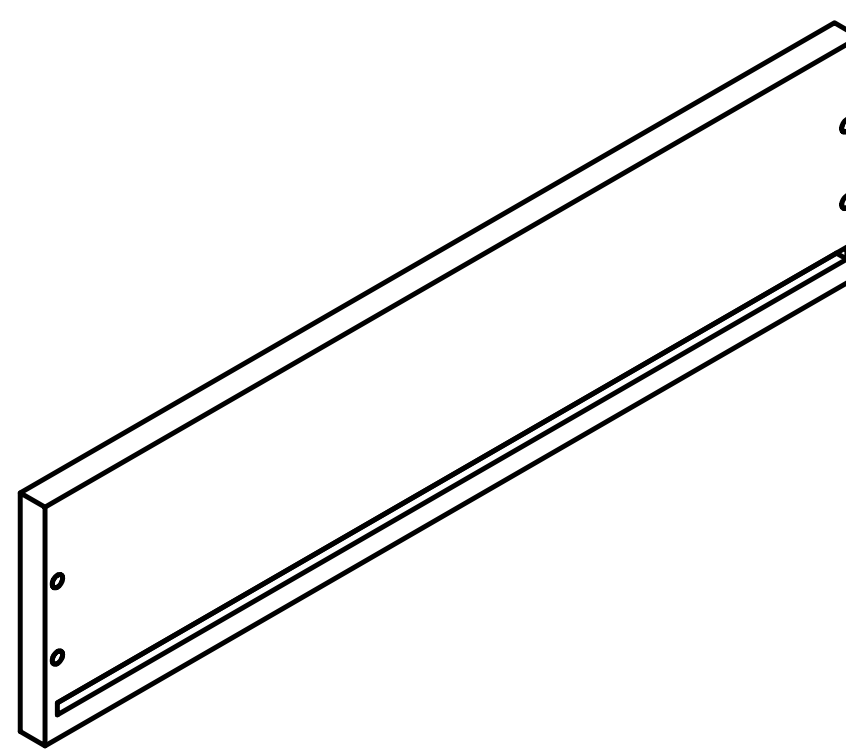


39x1

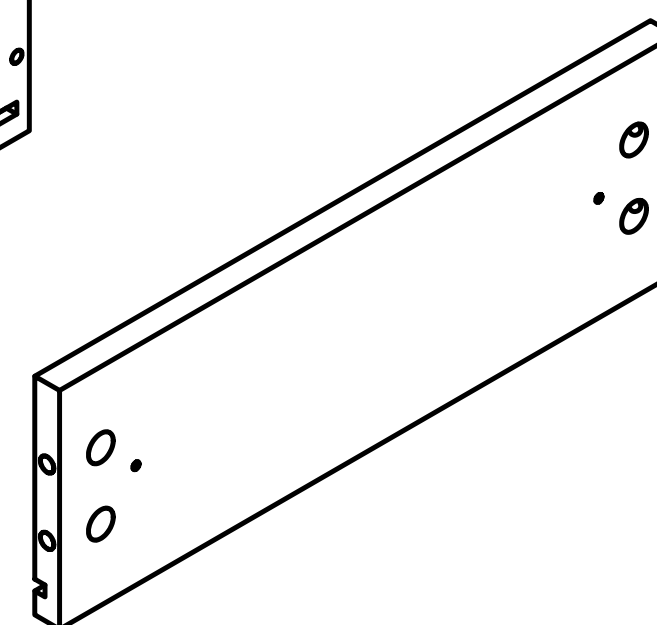


40x2

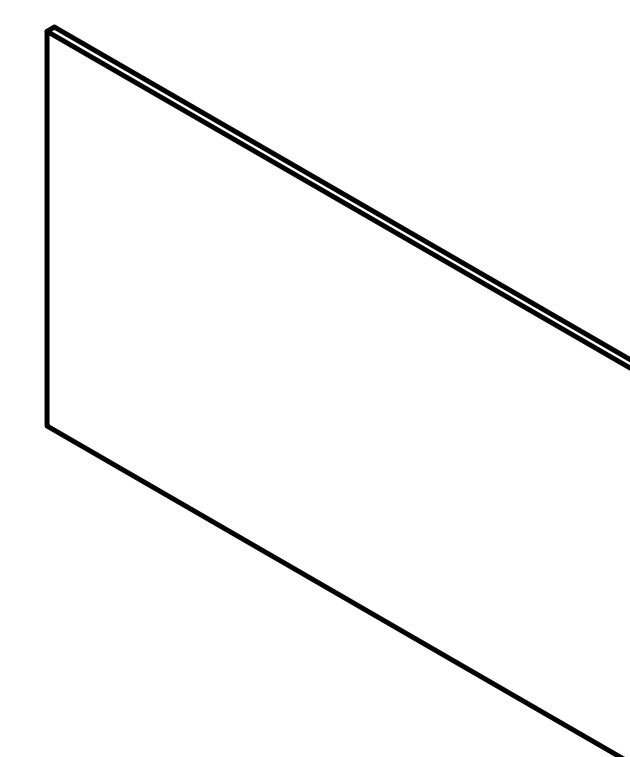


41x1

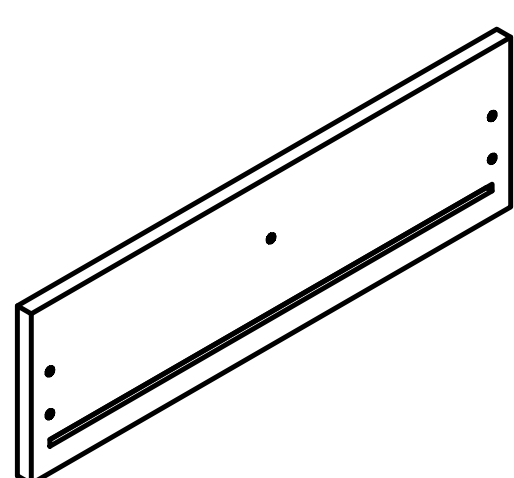


42x1

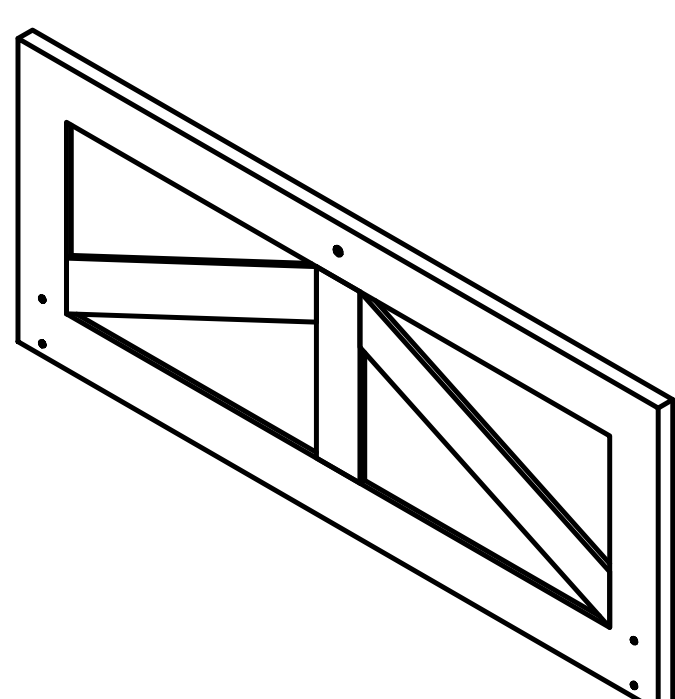


43x1

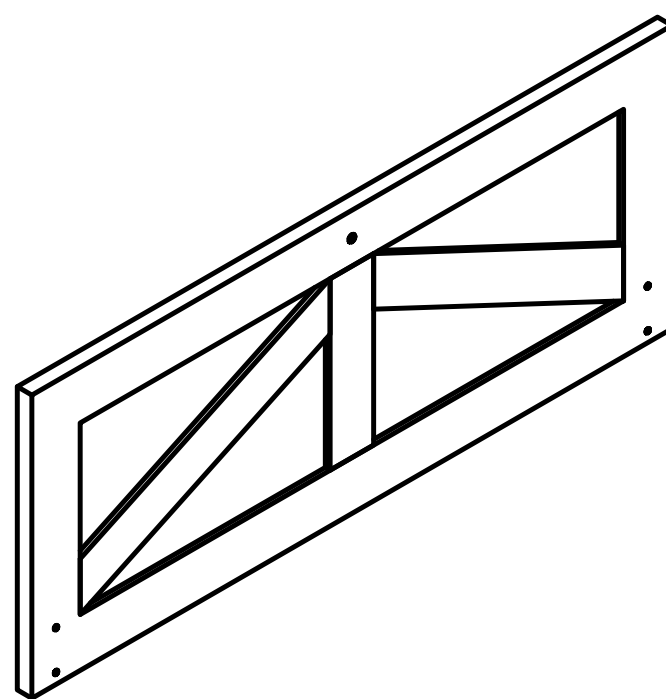


44x1

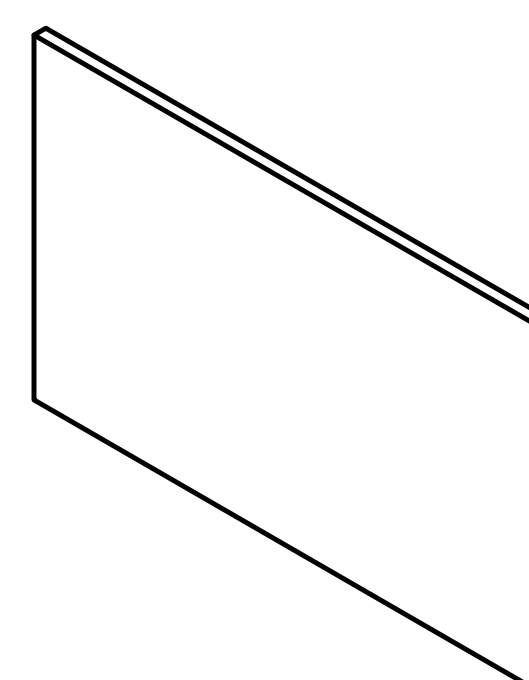

45x1


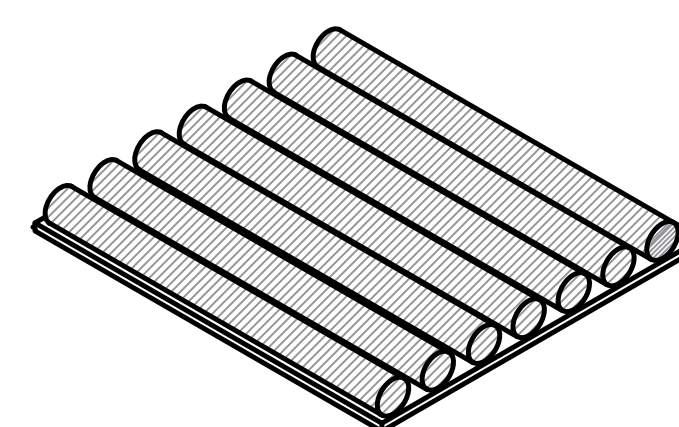

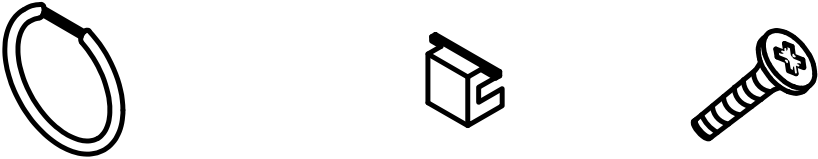
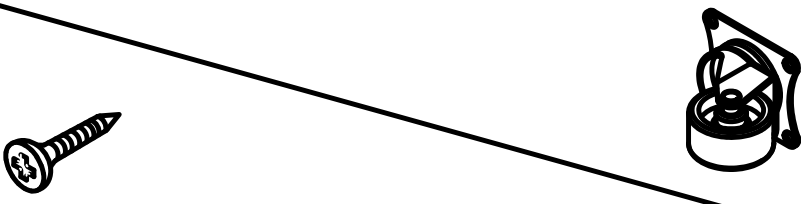
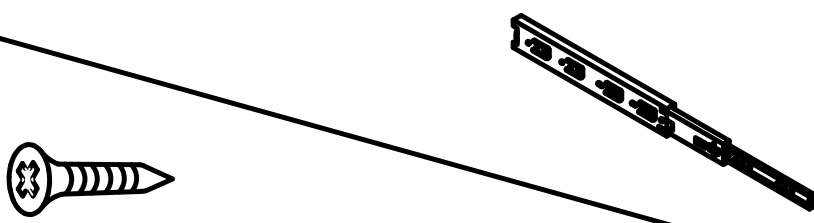
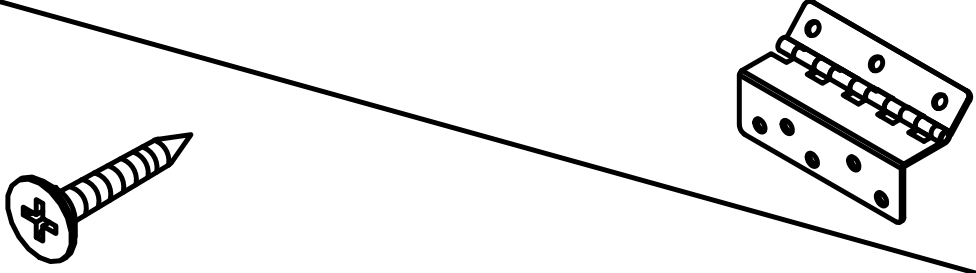



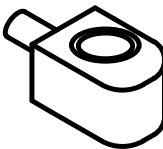
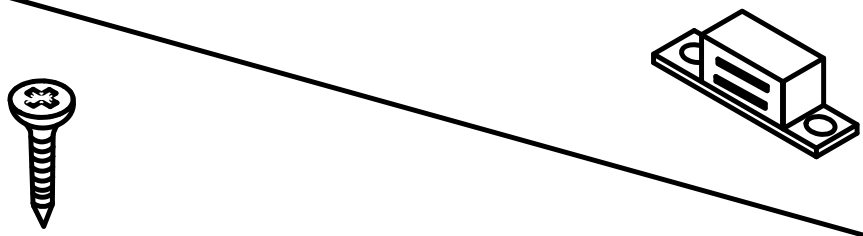
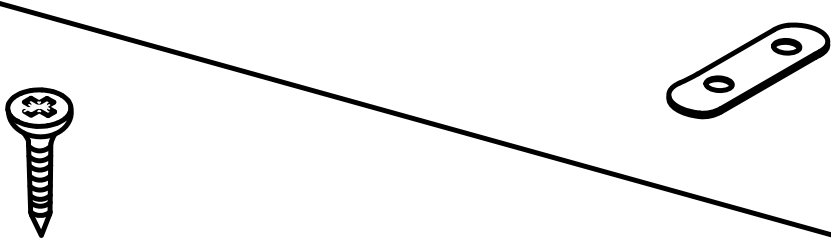
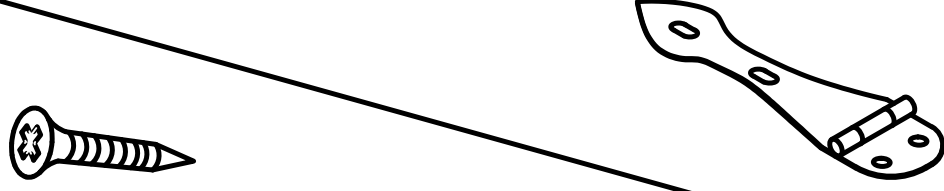
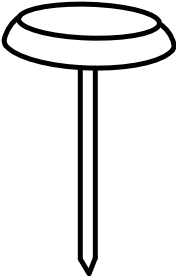
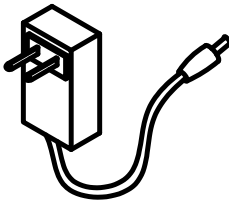
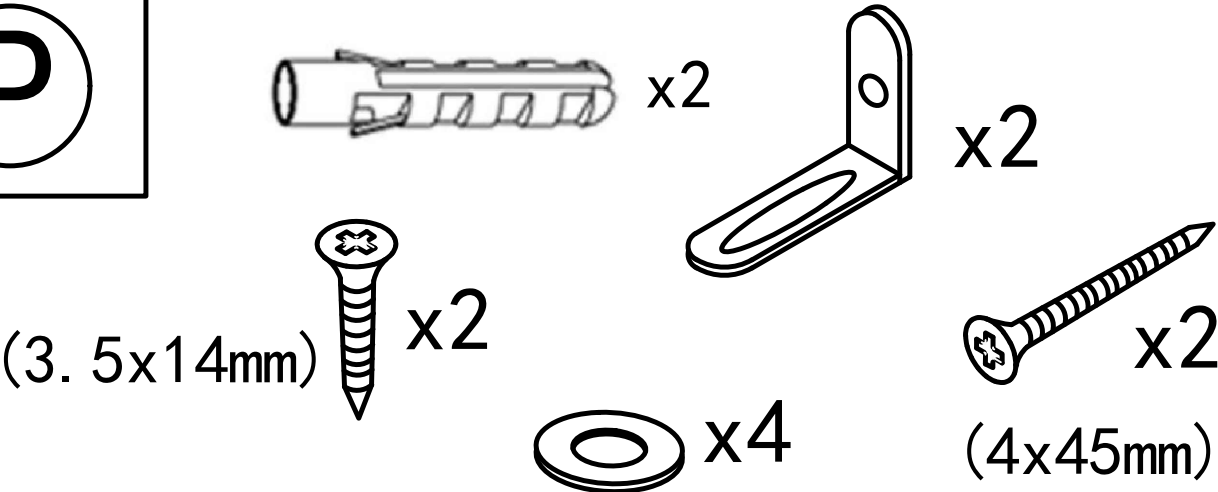
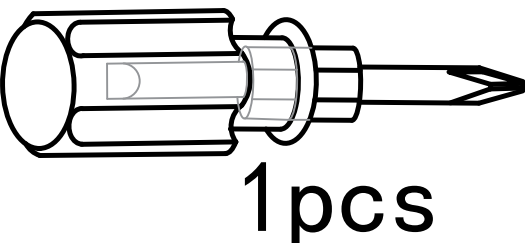
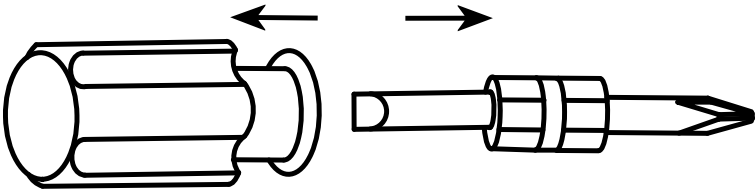
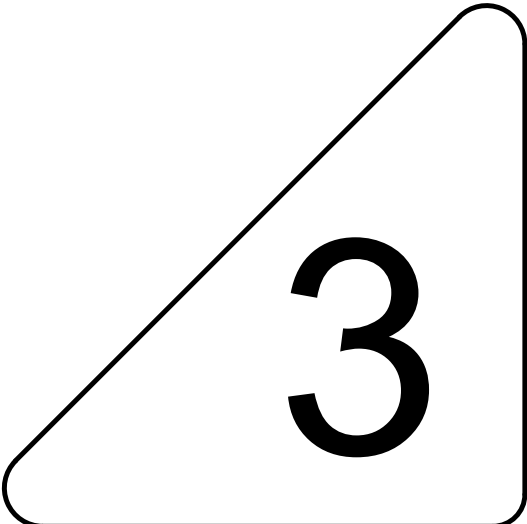


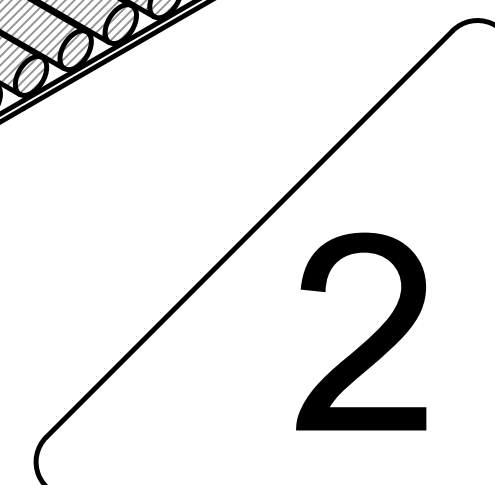46x1




2

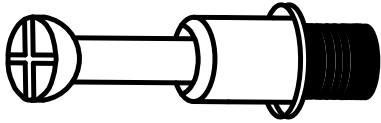
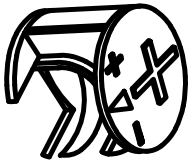






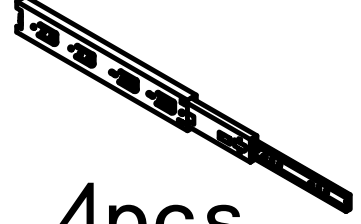
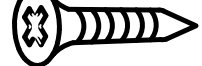
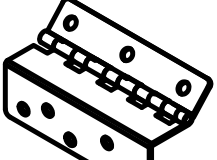
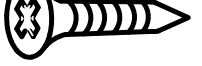

# Accessories list


A		Two In One Screw (6x28mm)	109pcs +4pcs
B		Two In One Nut (10x12mm)	109pcs +4pcs
C		Wood Chipping (6x30mm)	28pcs +2pcs
D		Pull loop handle (4x14mm)	5pcs
E		Wheel & Screw (3.5x12mm)	4pcs 16pcs +2pcs
F		Screw & Guide(12 inch) (3x12mm)	4pcs 20pcs +4pcs
G		Hinge& Screw (3.5x12mm)	4pcs 32pcs +4pcs
H		Non-slip pads	4pcs
I		Buffer plastic particles (10x2mm)	4pcs
J		Clamp	1pcs
K		Laminate support nail	4pcs
L		Magnetic attraction & Screw (3.5x12mm)	1pcs 2pcs +1pcs
M		Iron sheet & Screw (3x10mm)	2pcs 4pcs +1pcs
N		Cabinet Door Hinge & Screw (3. 5x12mm)	4pcs 16pcs +2pcs
O		Foot nail	6pcs +2pcs
		AC/DC Adapter (12V==2. 0A)	1pcs
P		 1pcs  Double-head screwdriver, use as required	

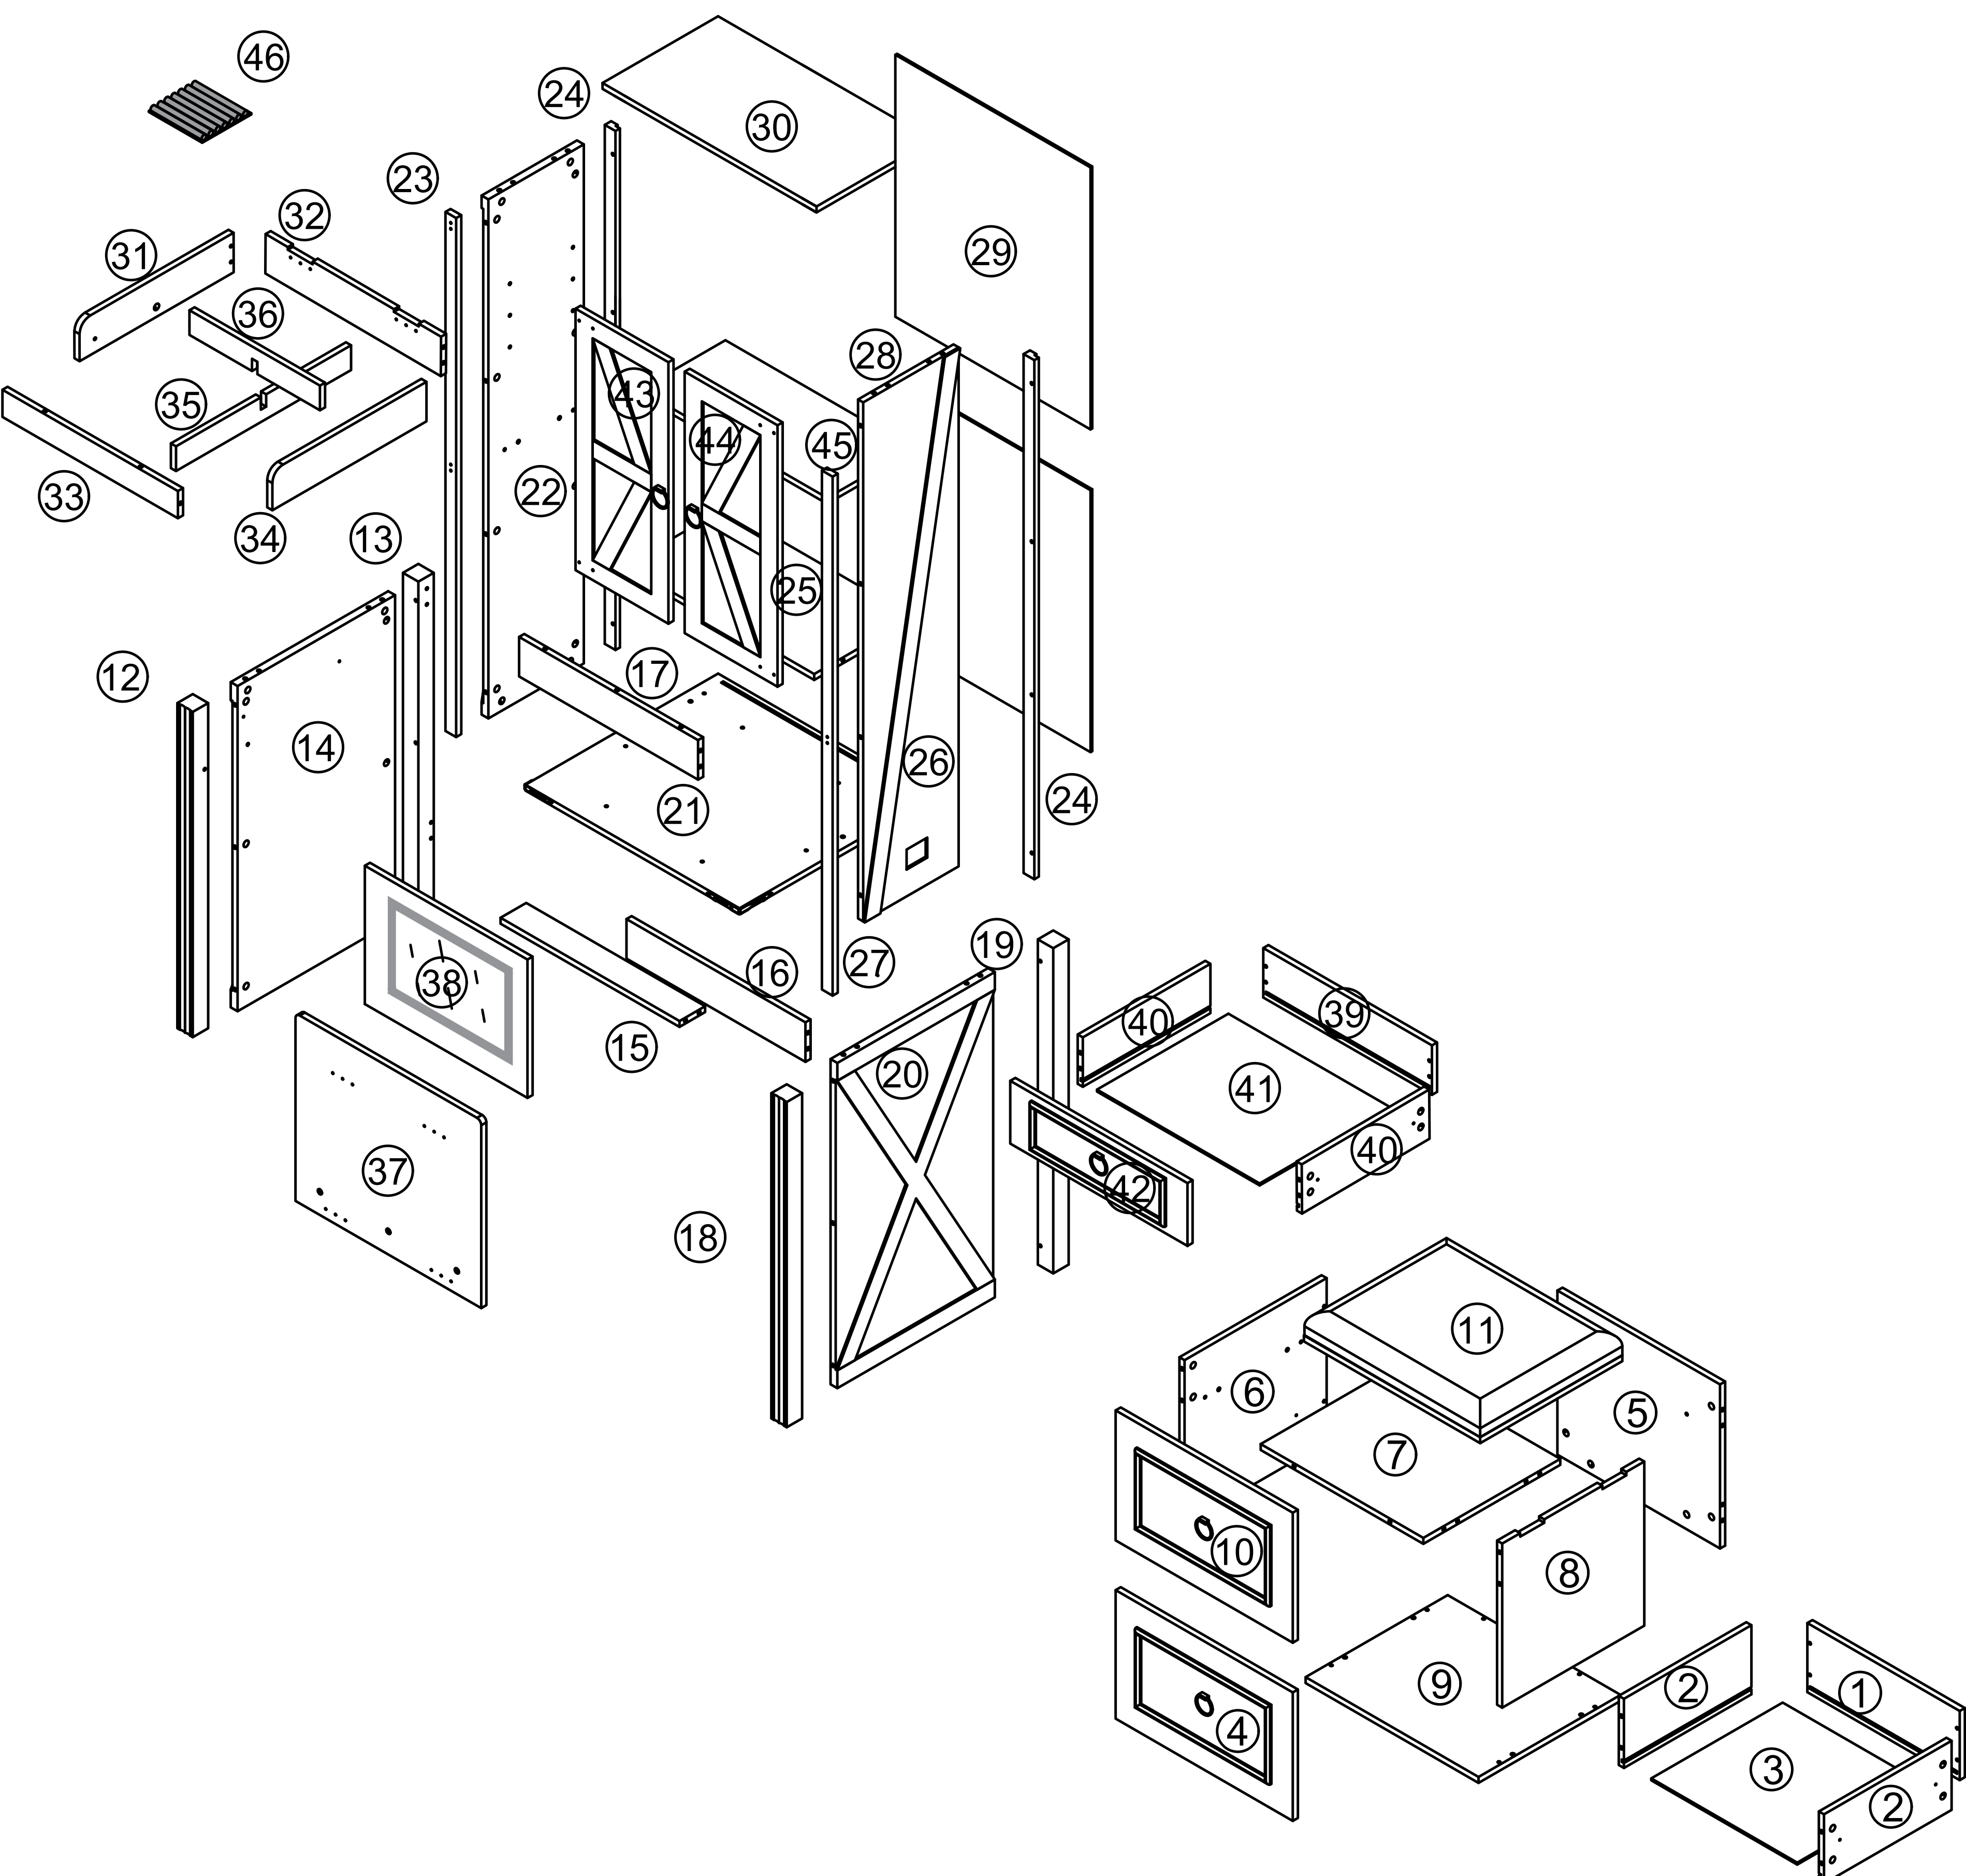
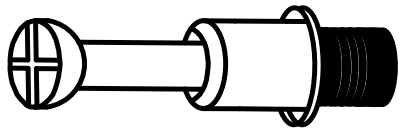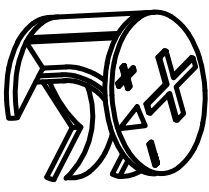
# Product structure decomposition

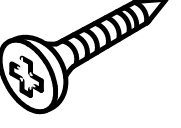


<b>A</b>		38pcs	<b>B</b>		38pcs	<b>C</b>		12pcs
<b>D</b>	 3pcs  3pcs  3pcs		<b>E</b>	 16pcs  4pcs		<b>F</b>	 4pcs  14pcs	
<b>G</b>	 2pcs  16pcs		<b>I</b>	 2pcs				

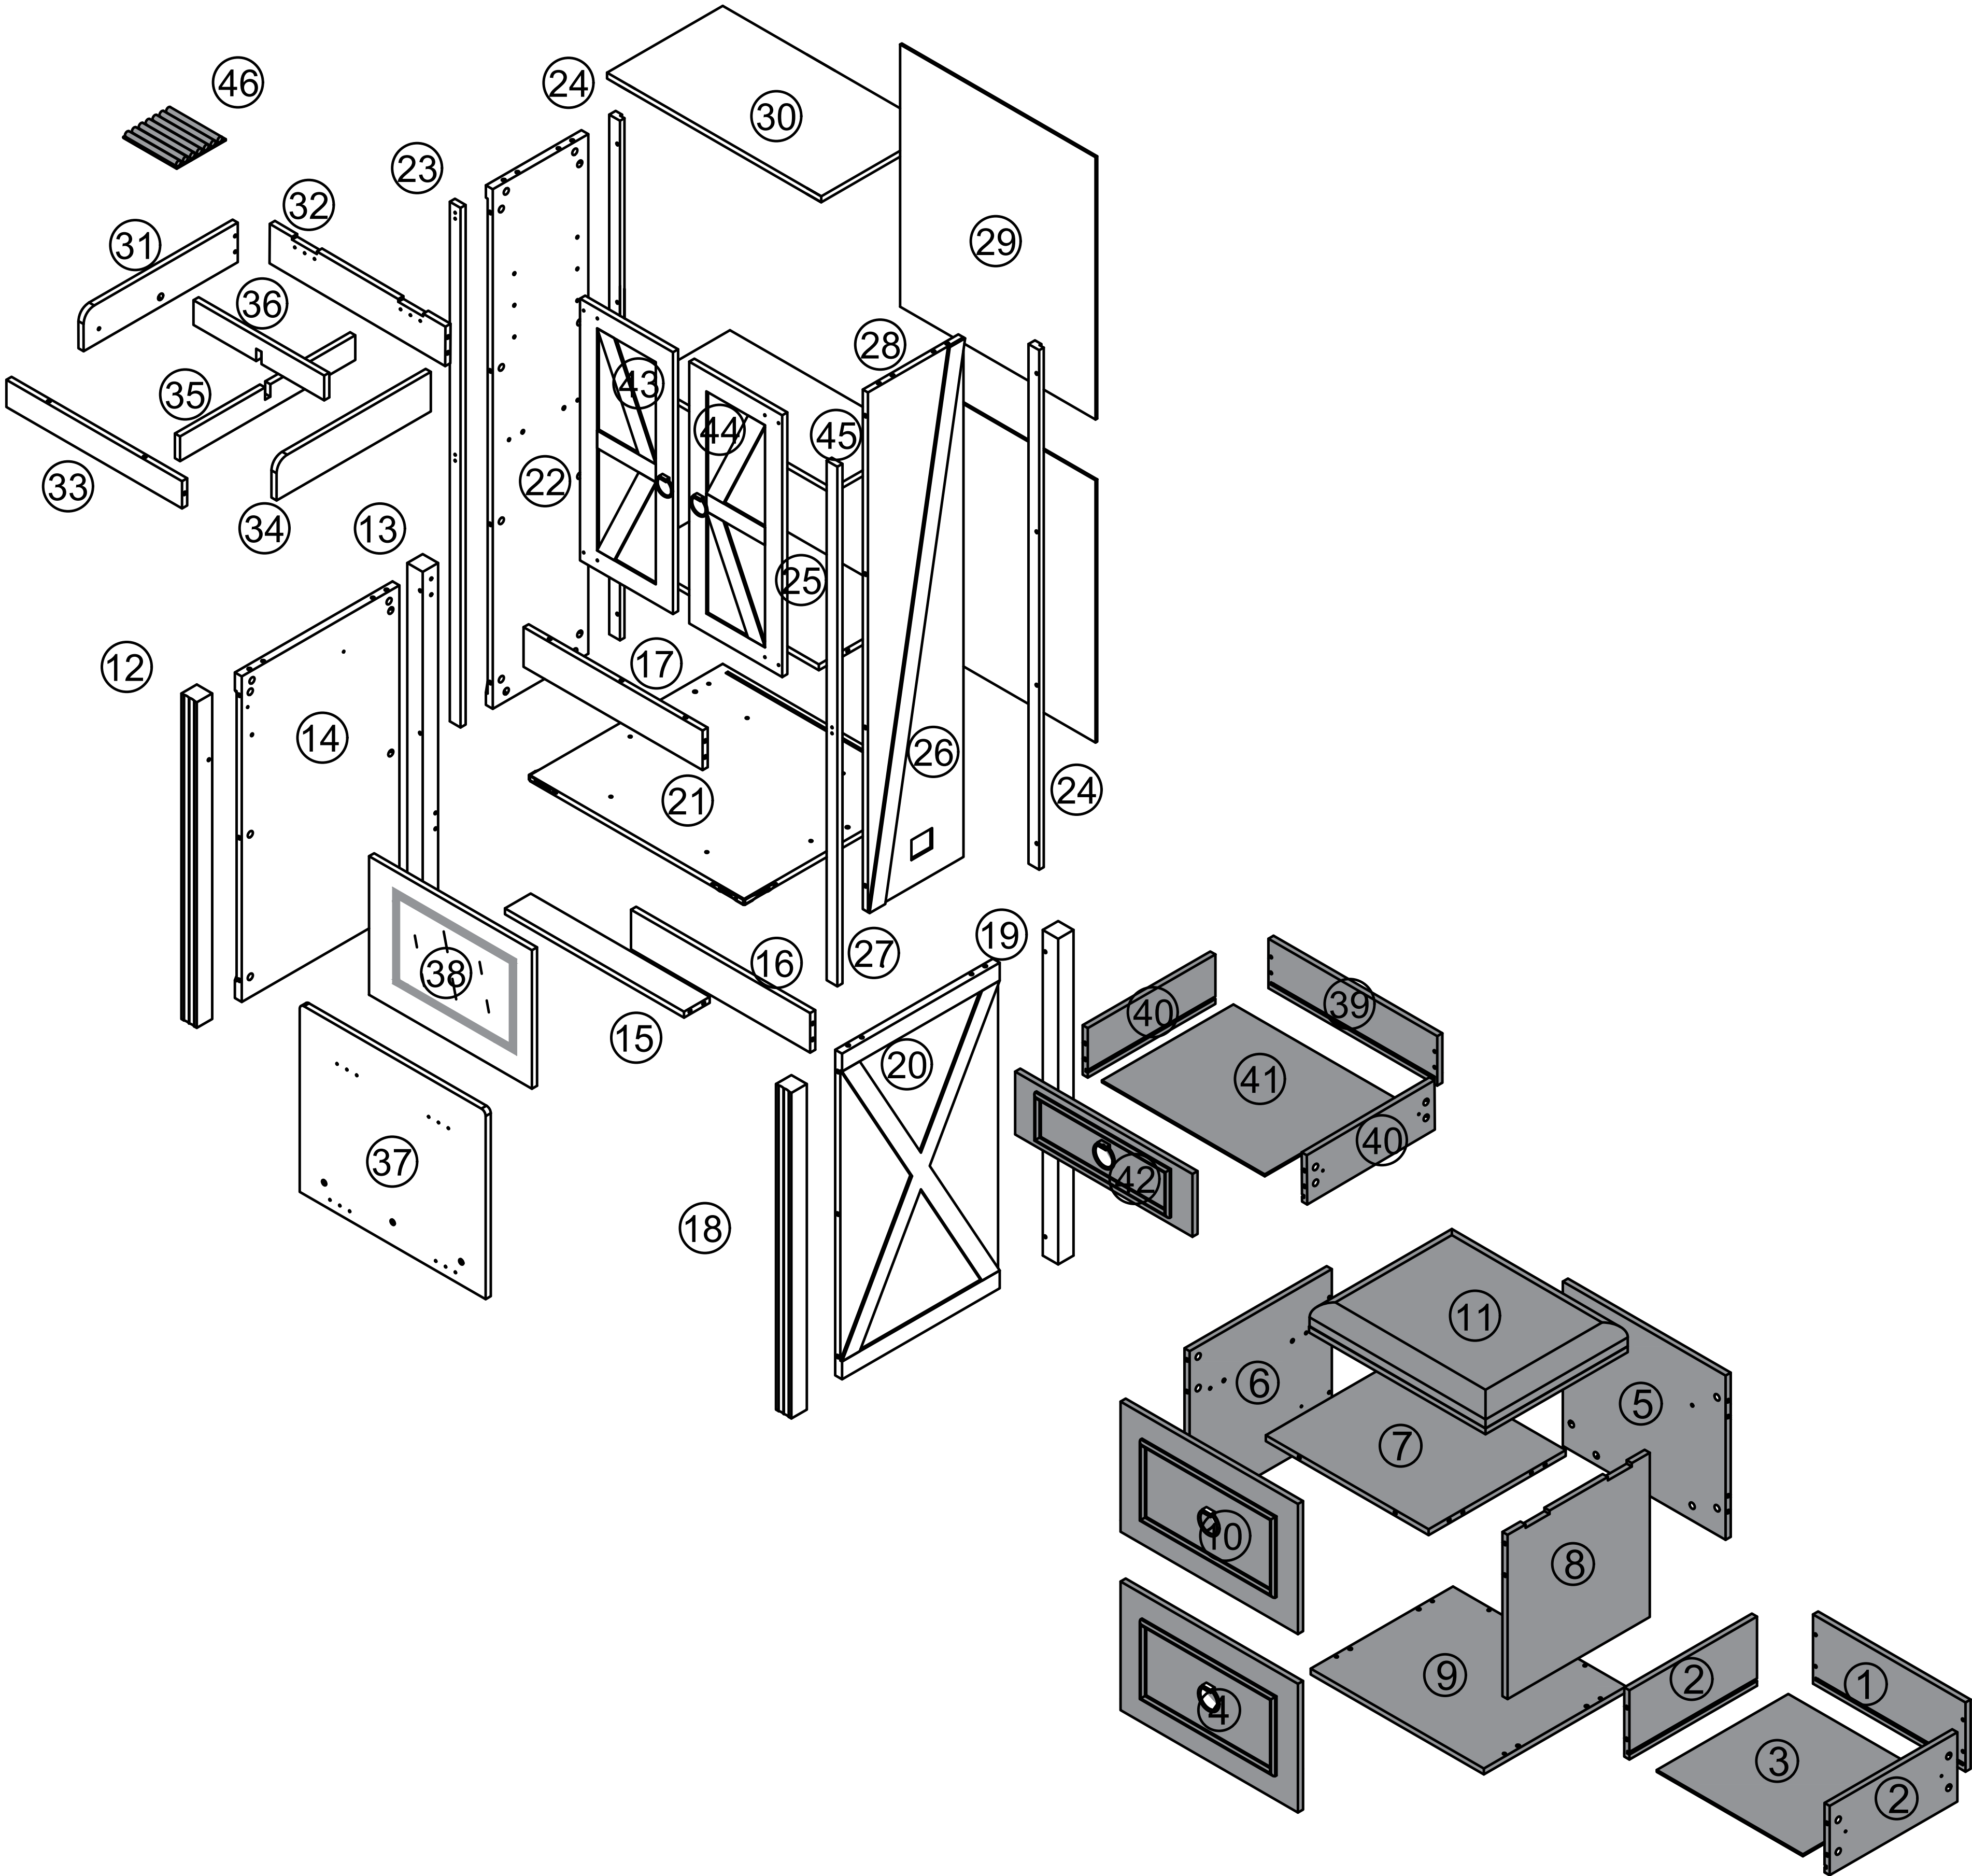


# Use parts A and B



Step1

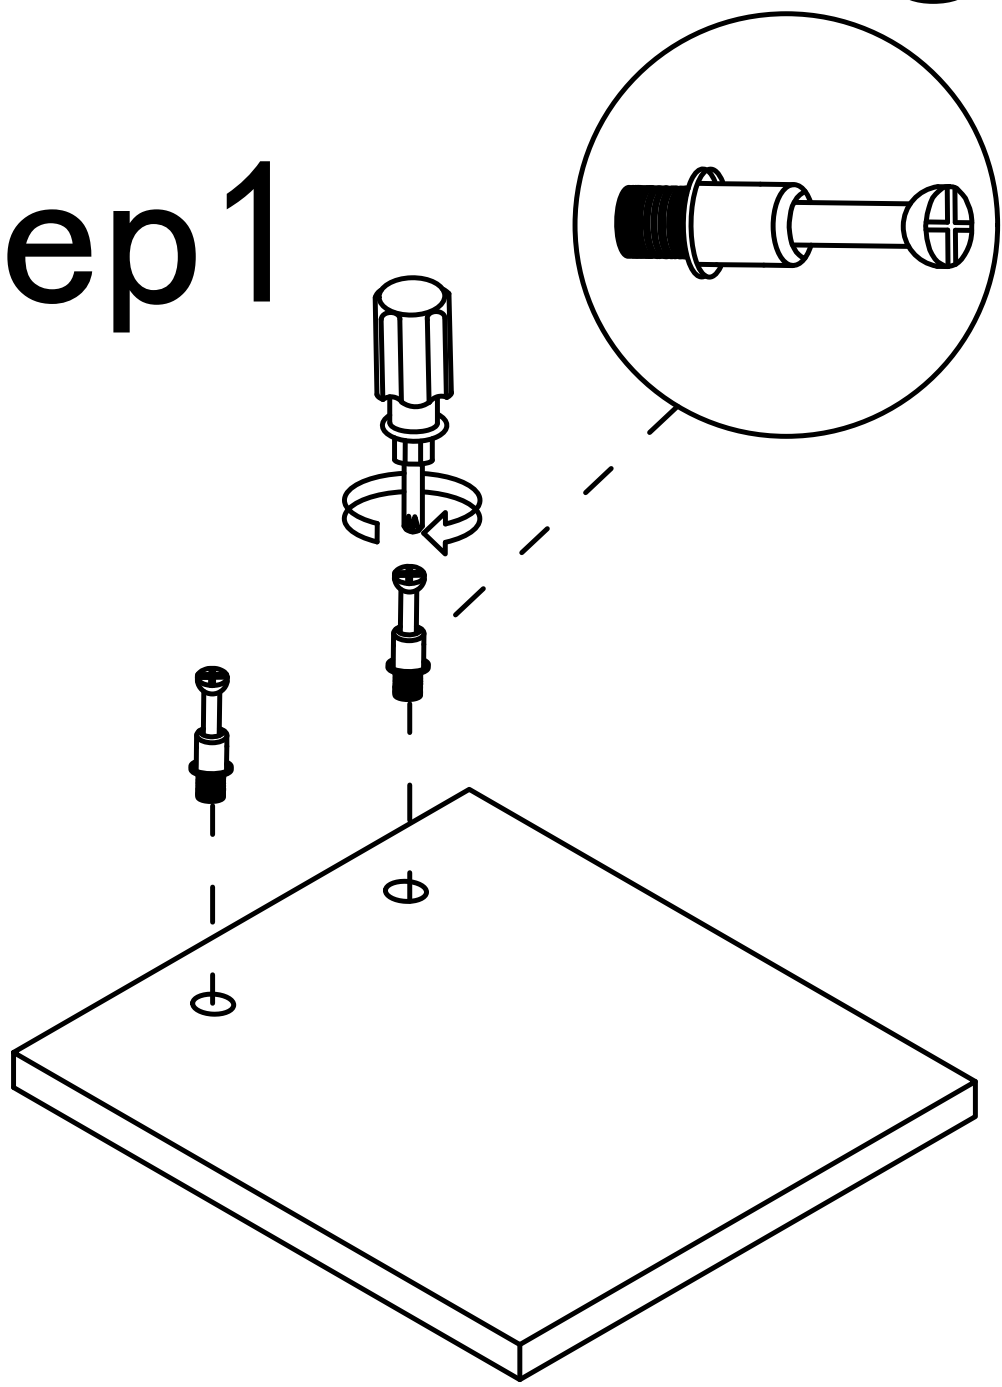


Step2

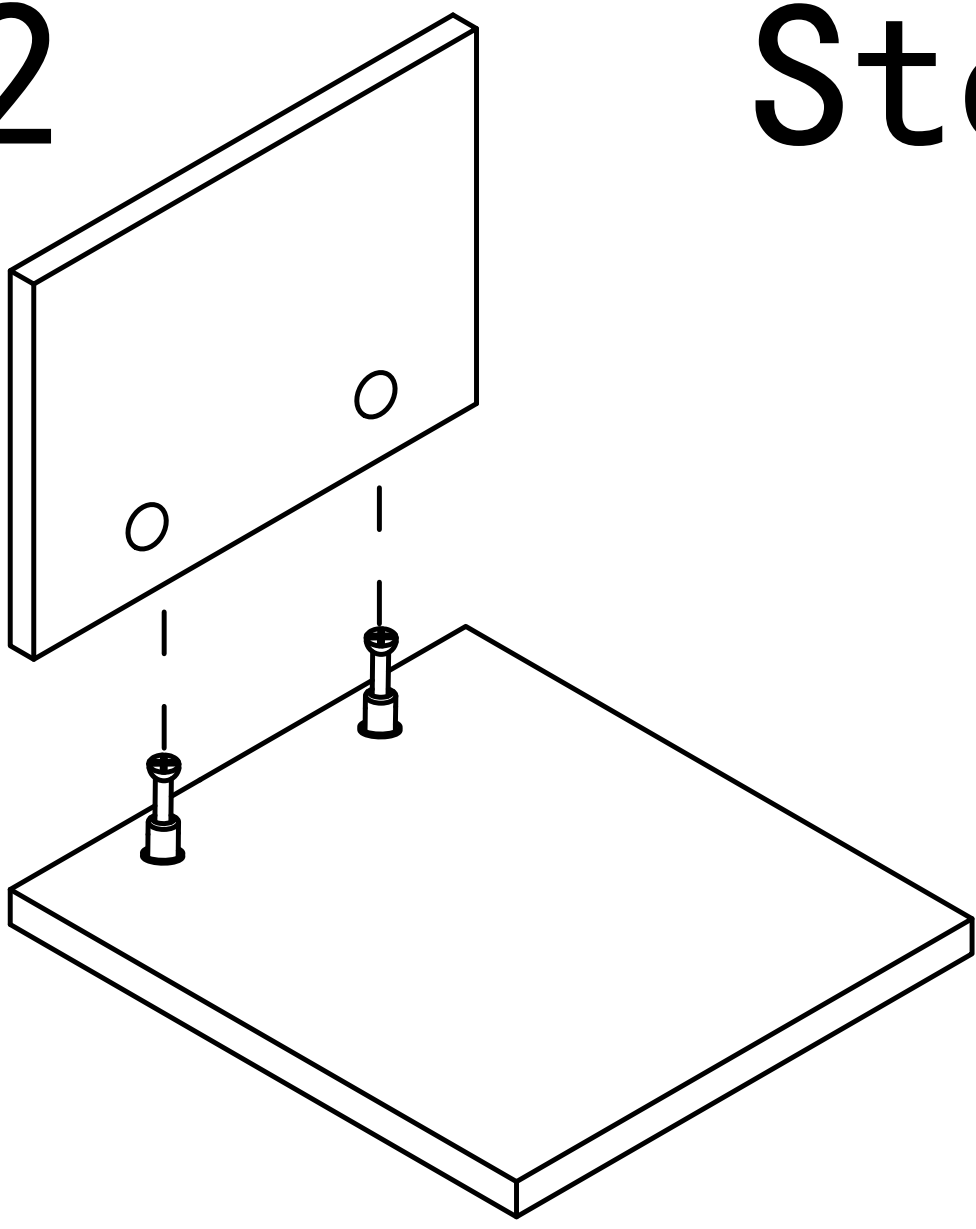

Step3

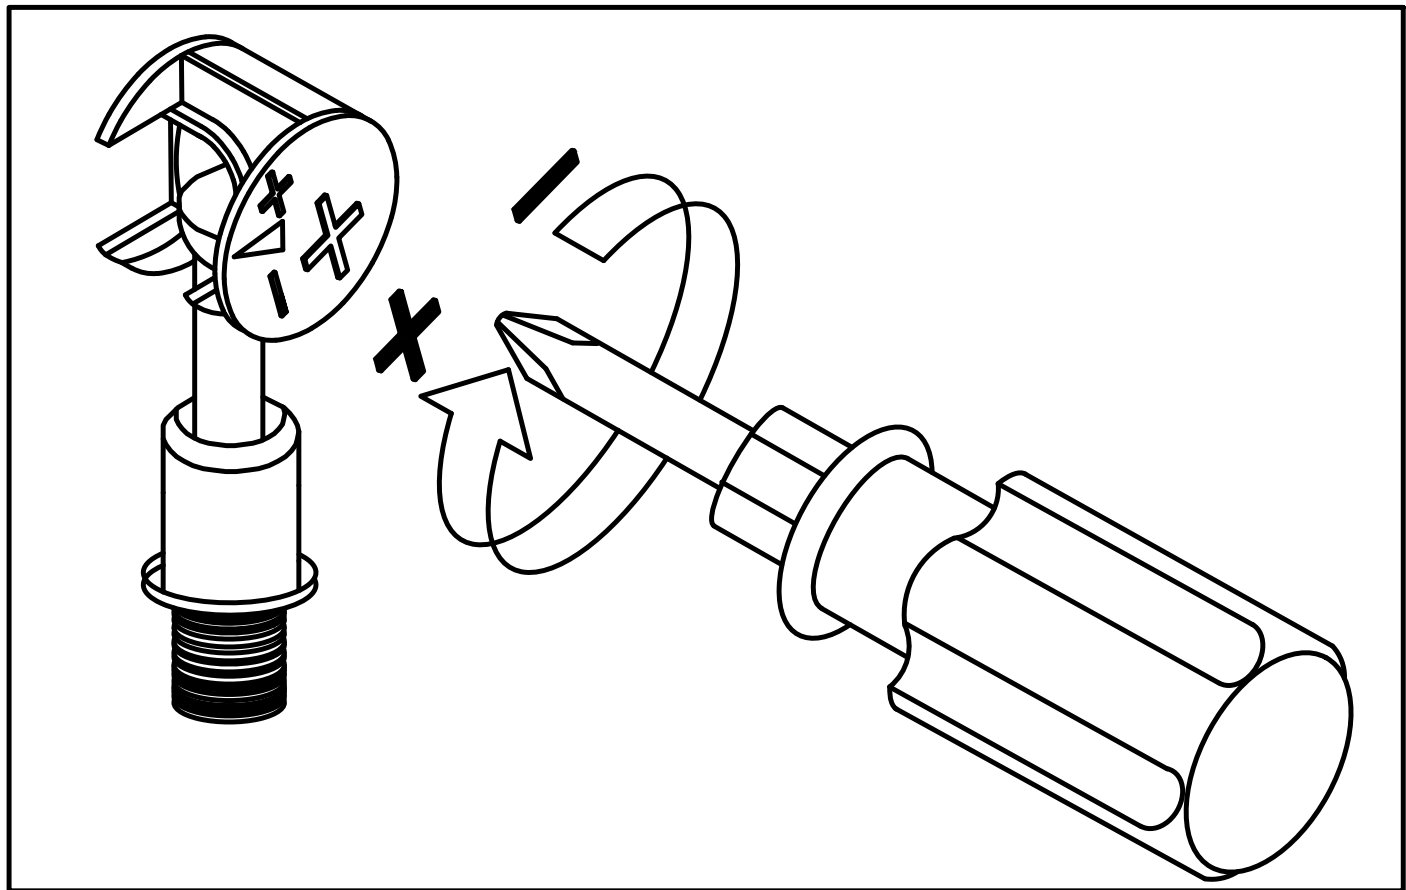
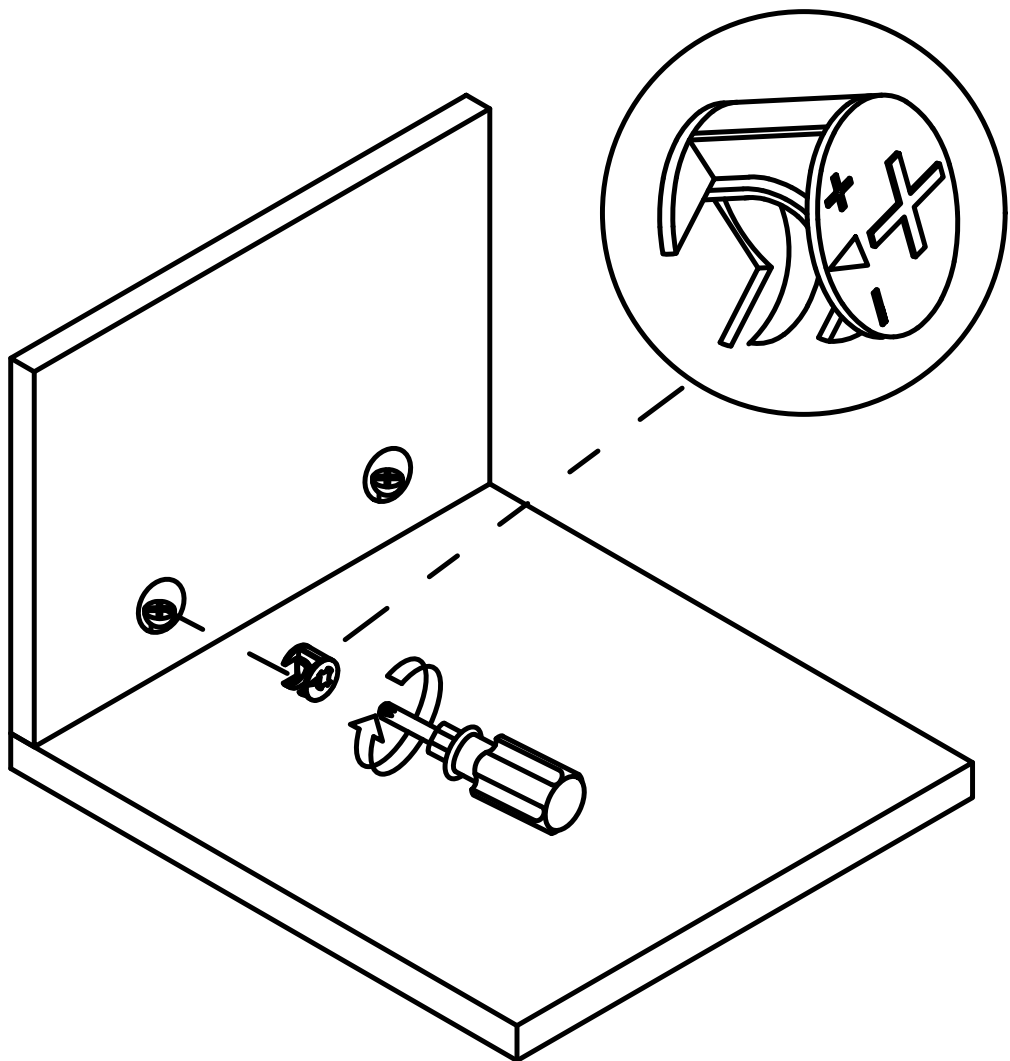


Use a screwdriver to lock in the direction of the "+" sign

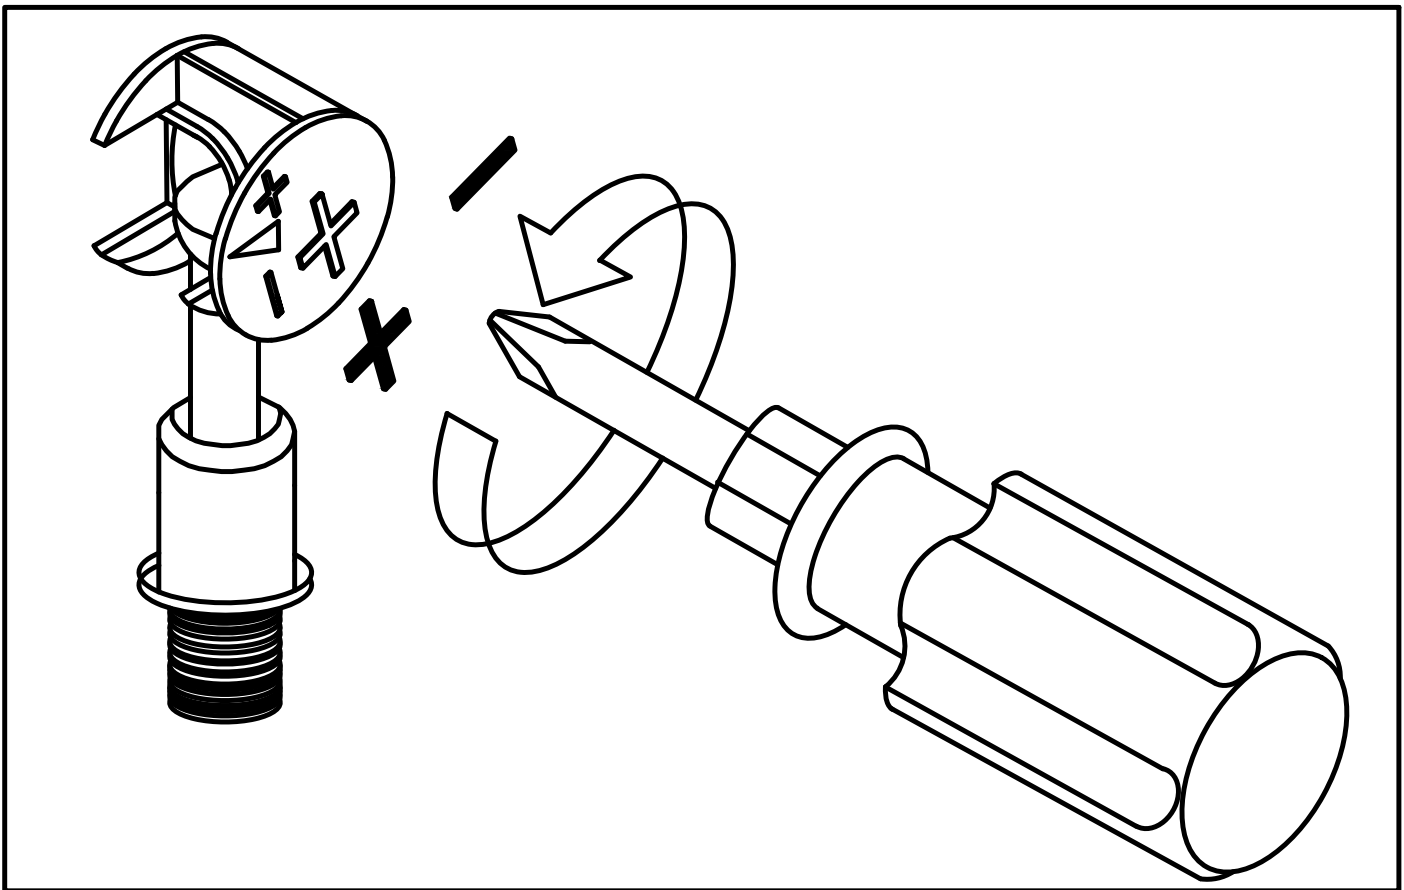


Disassemble along the direction of "-" sign


Step 1

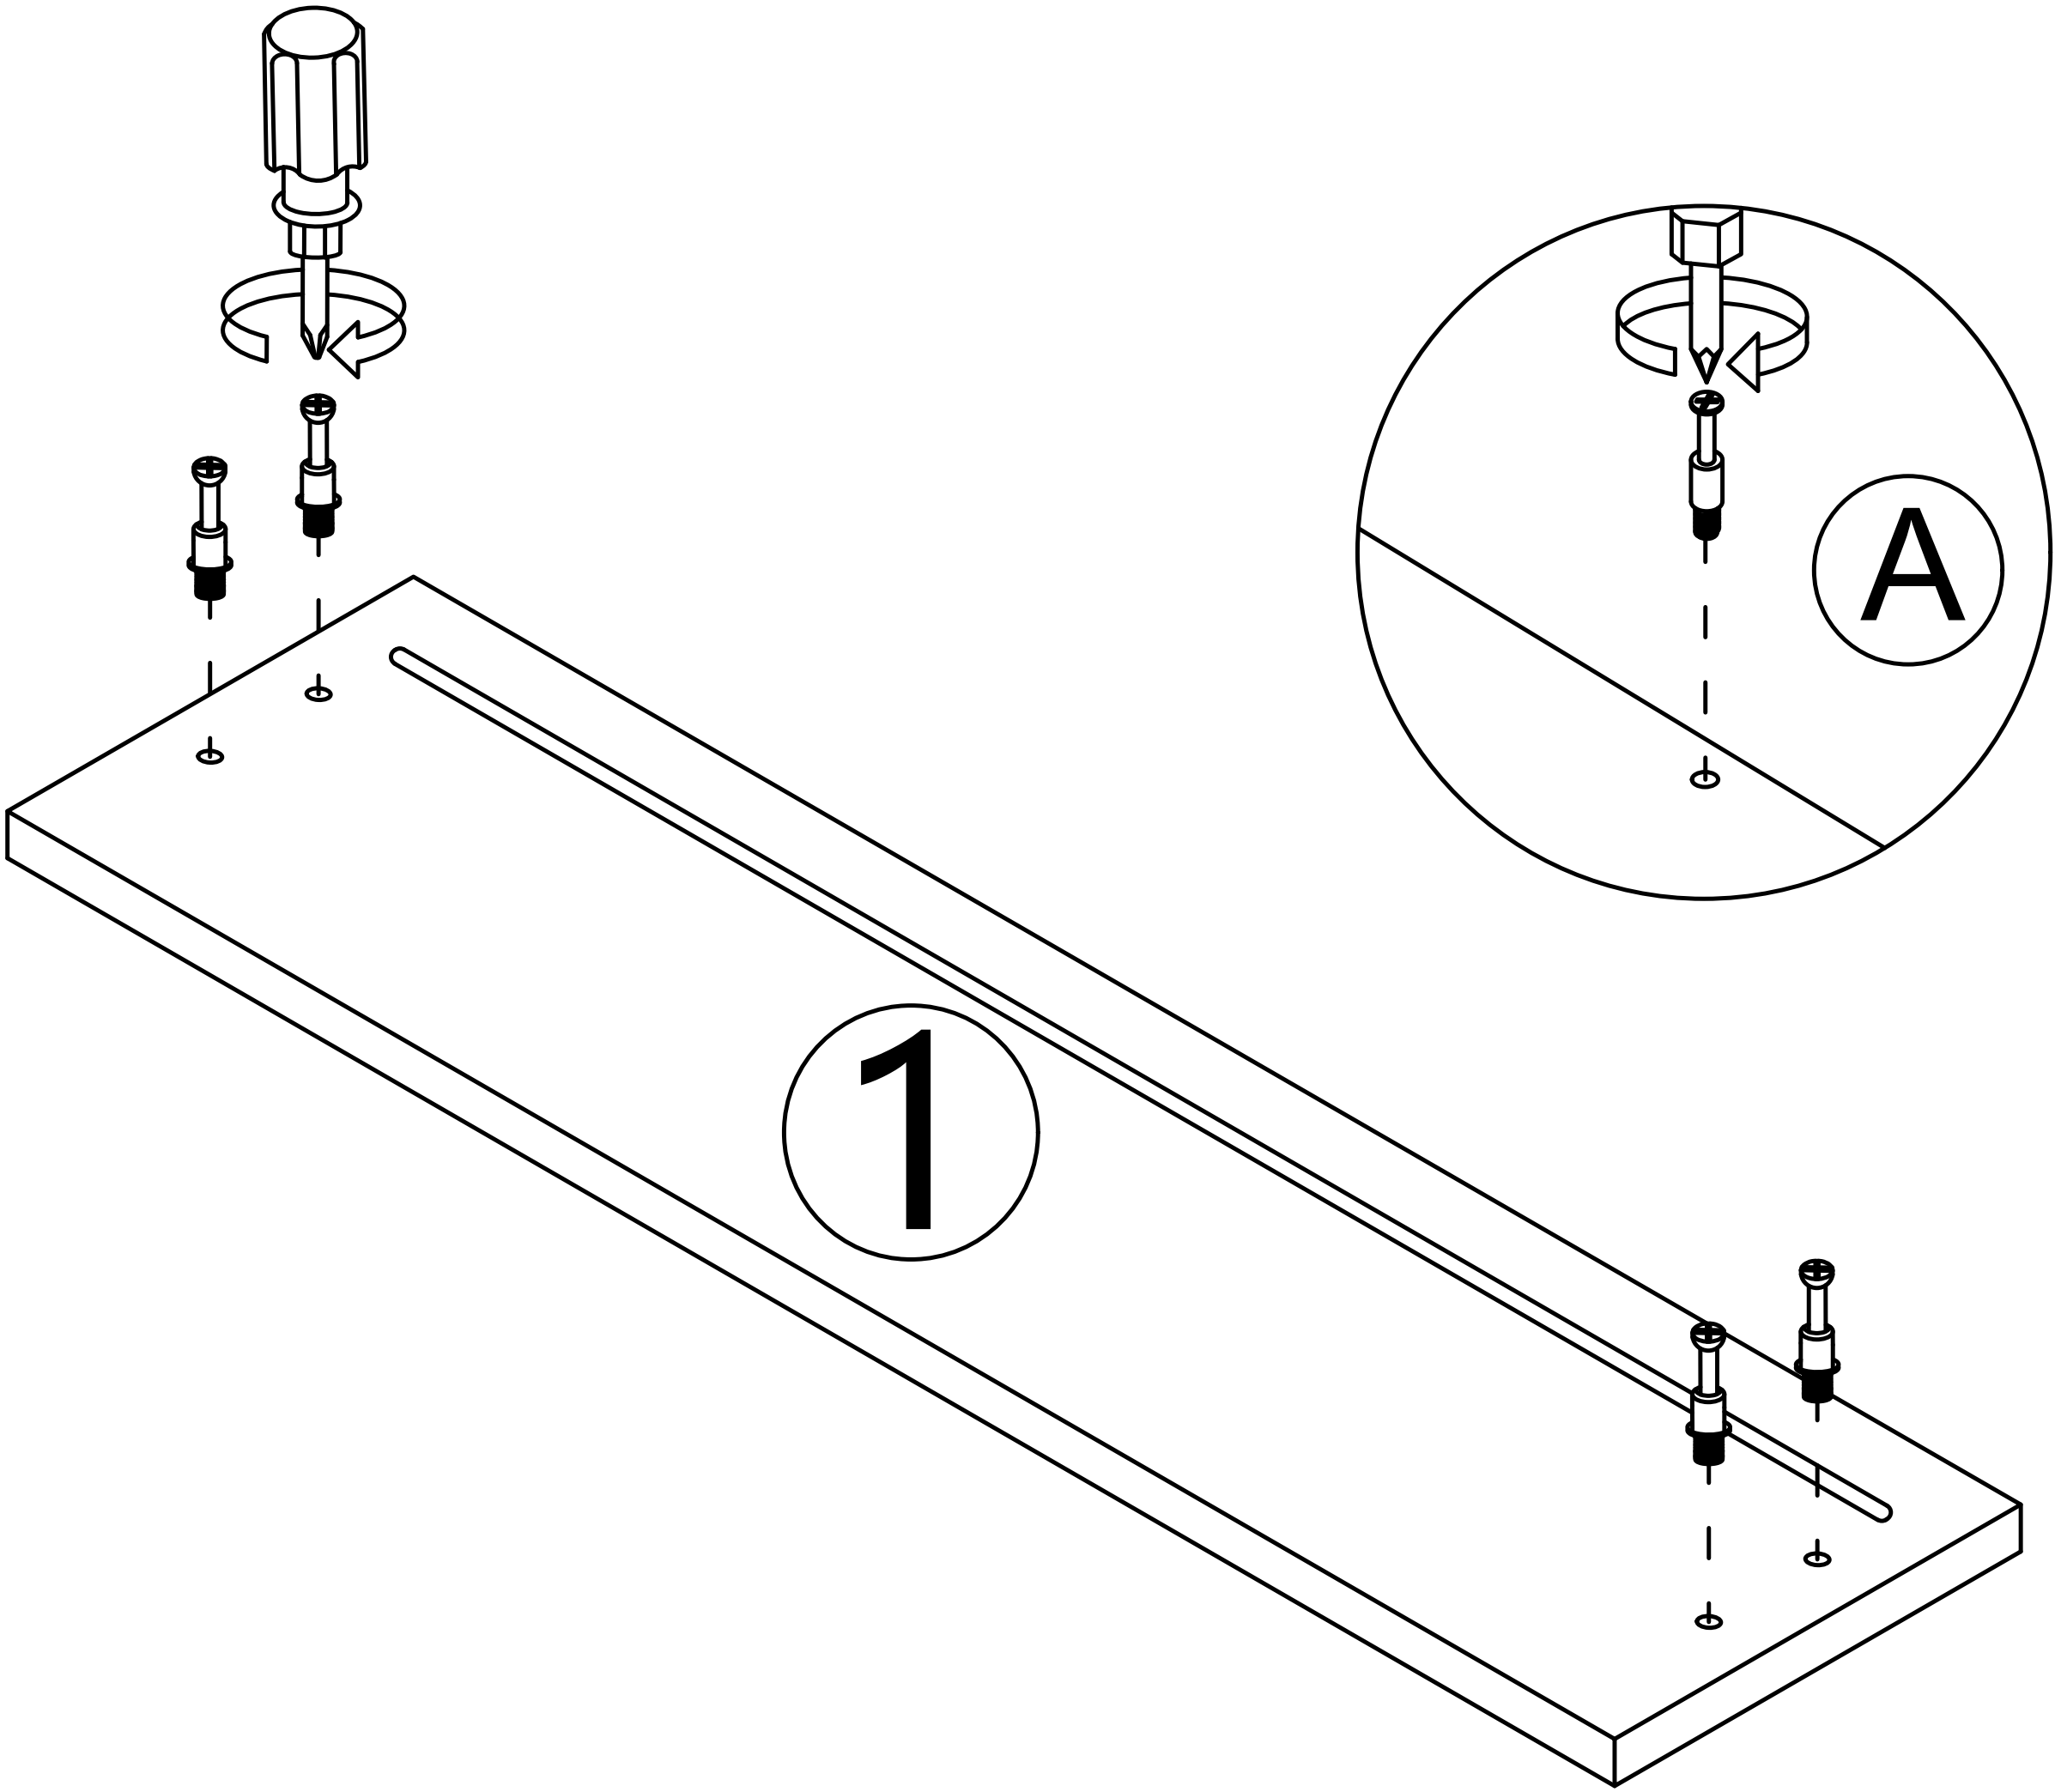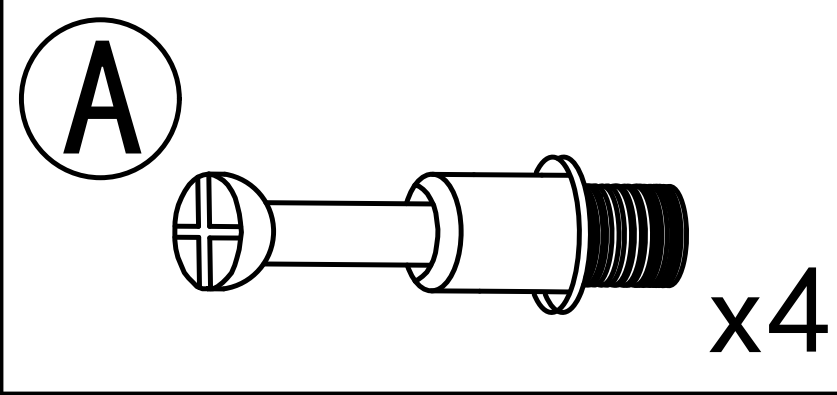

Step 2

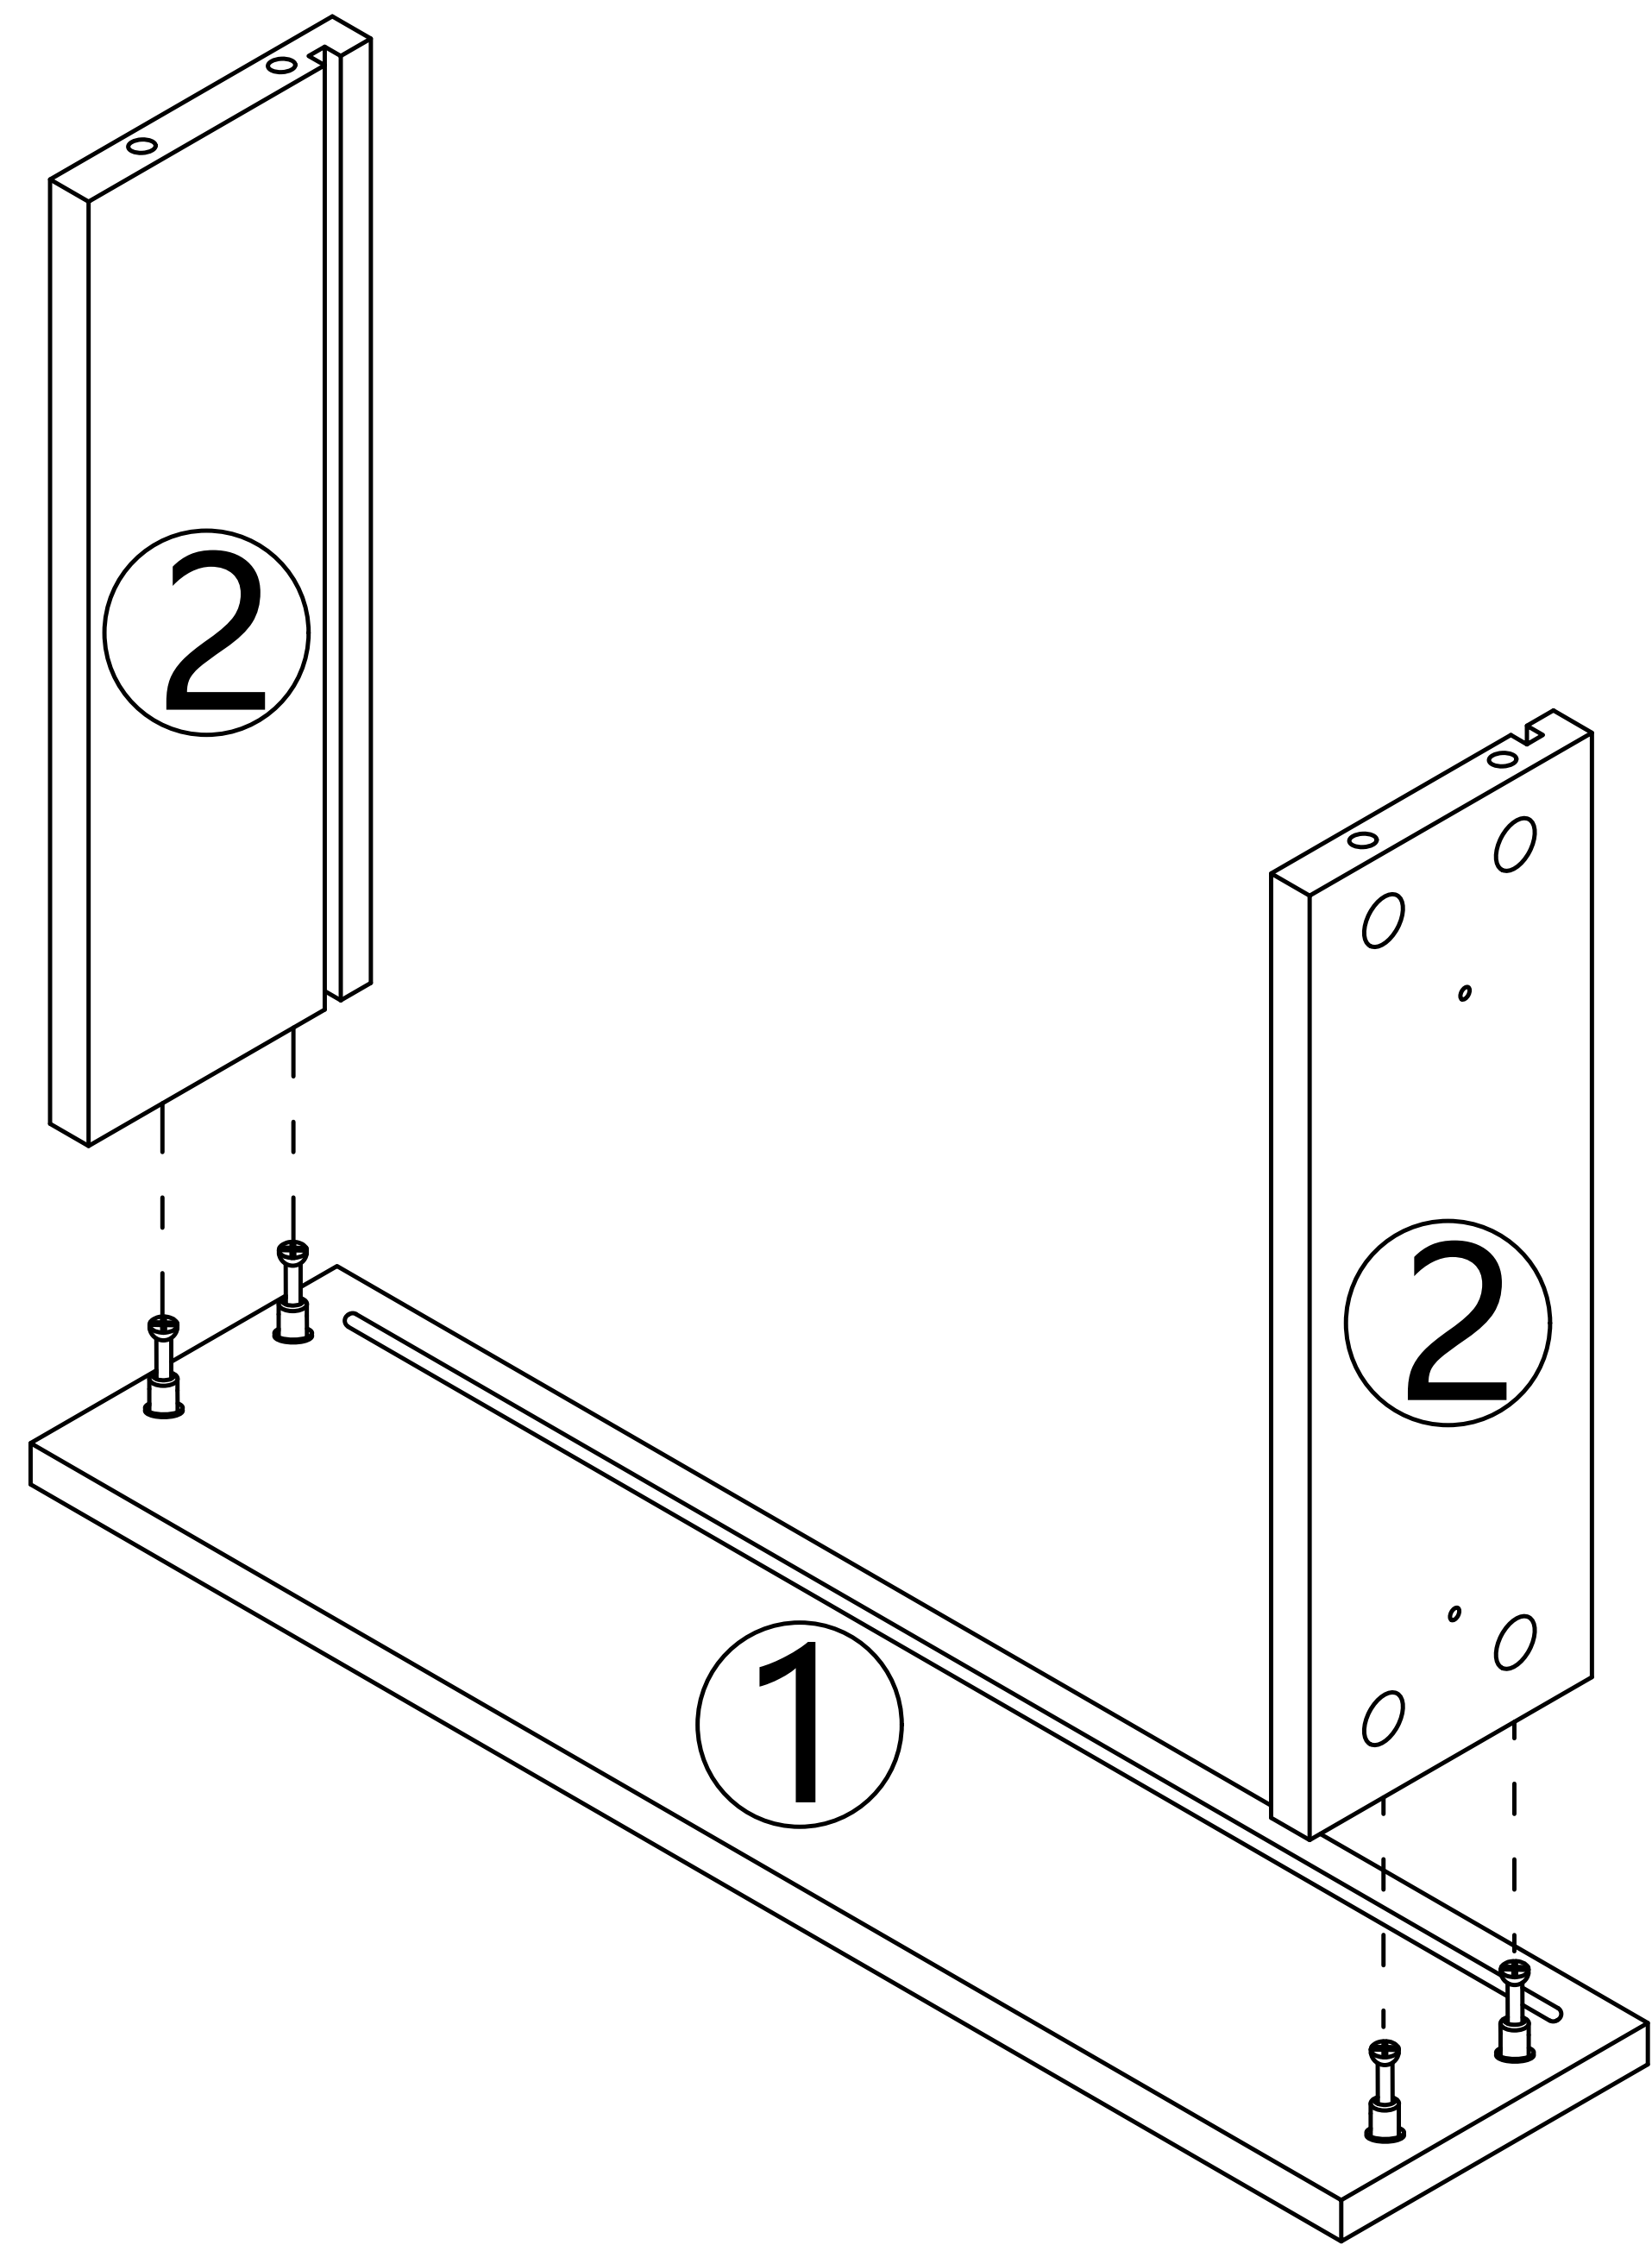


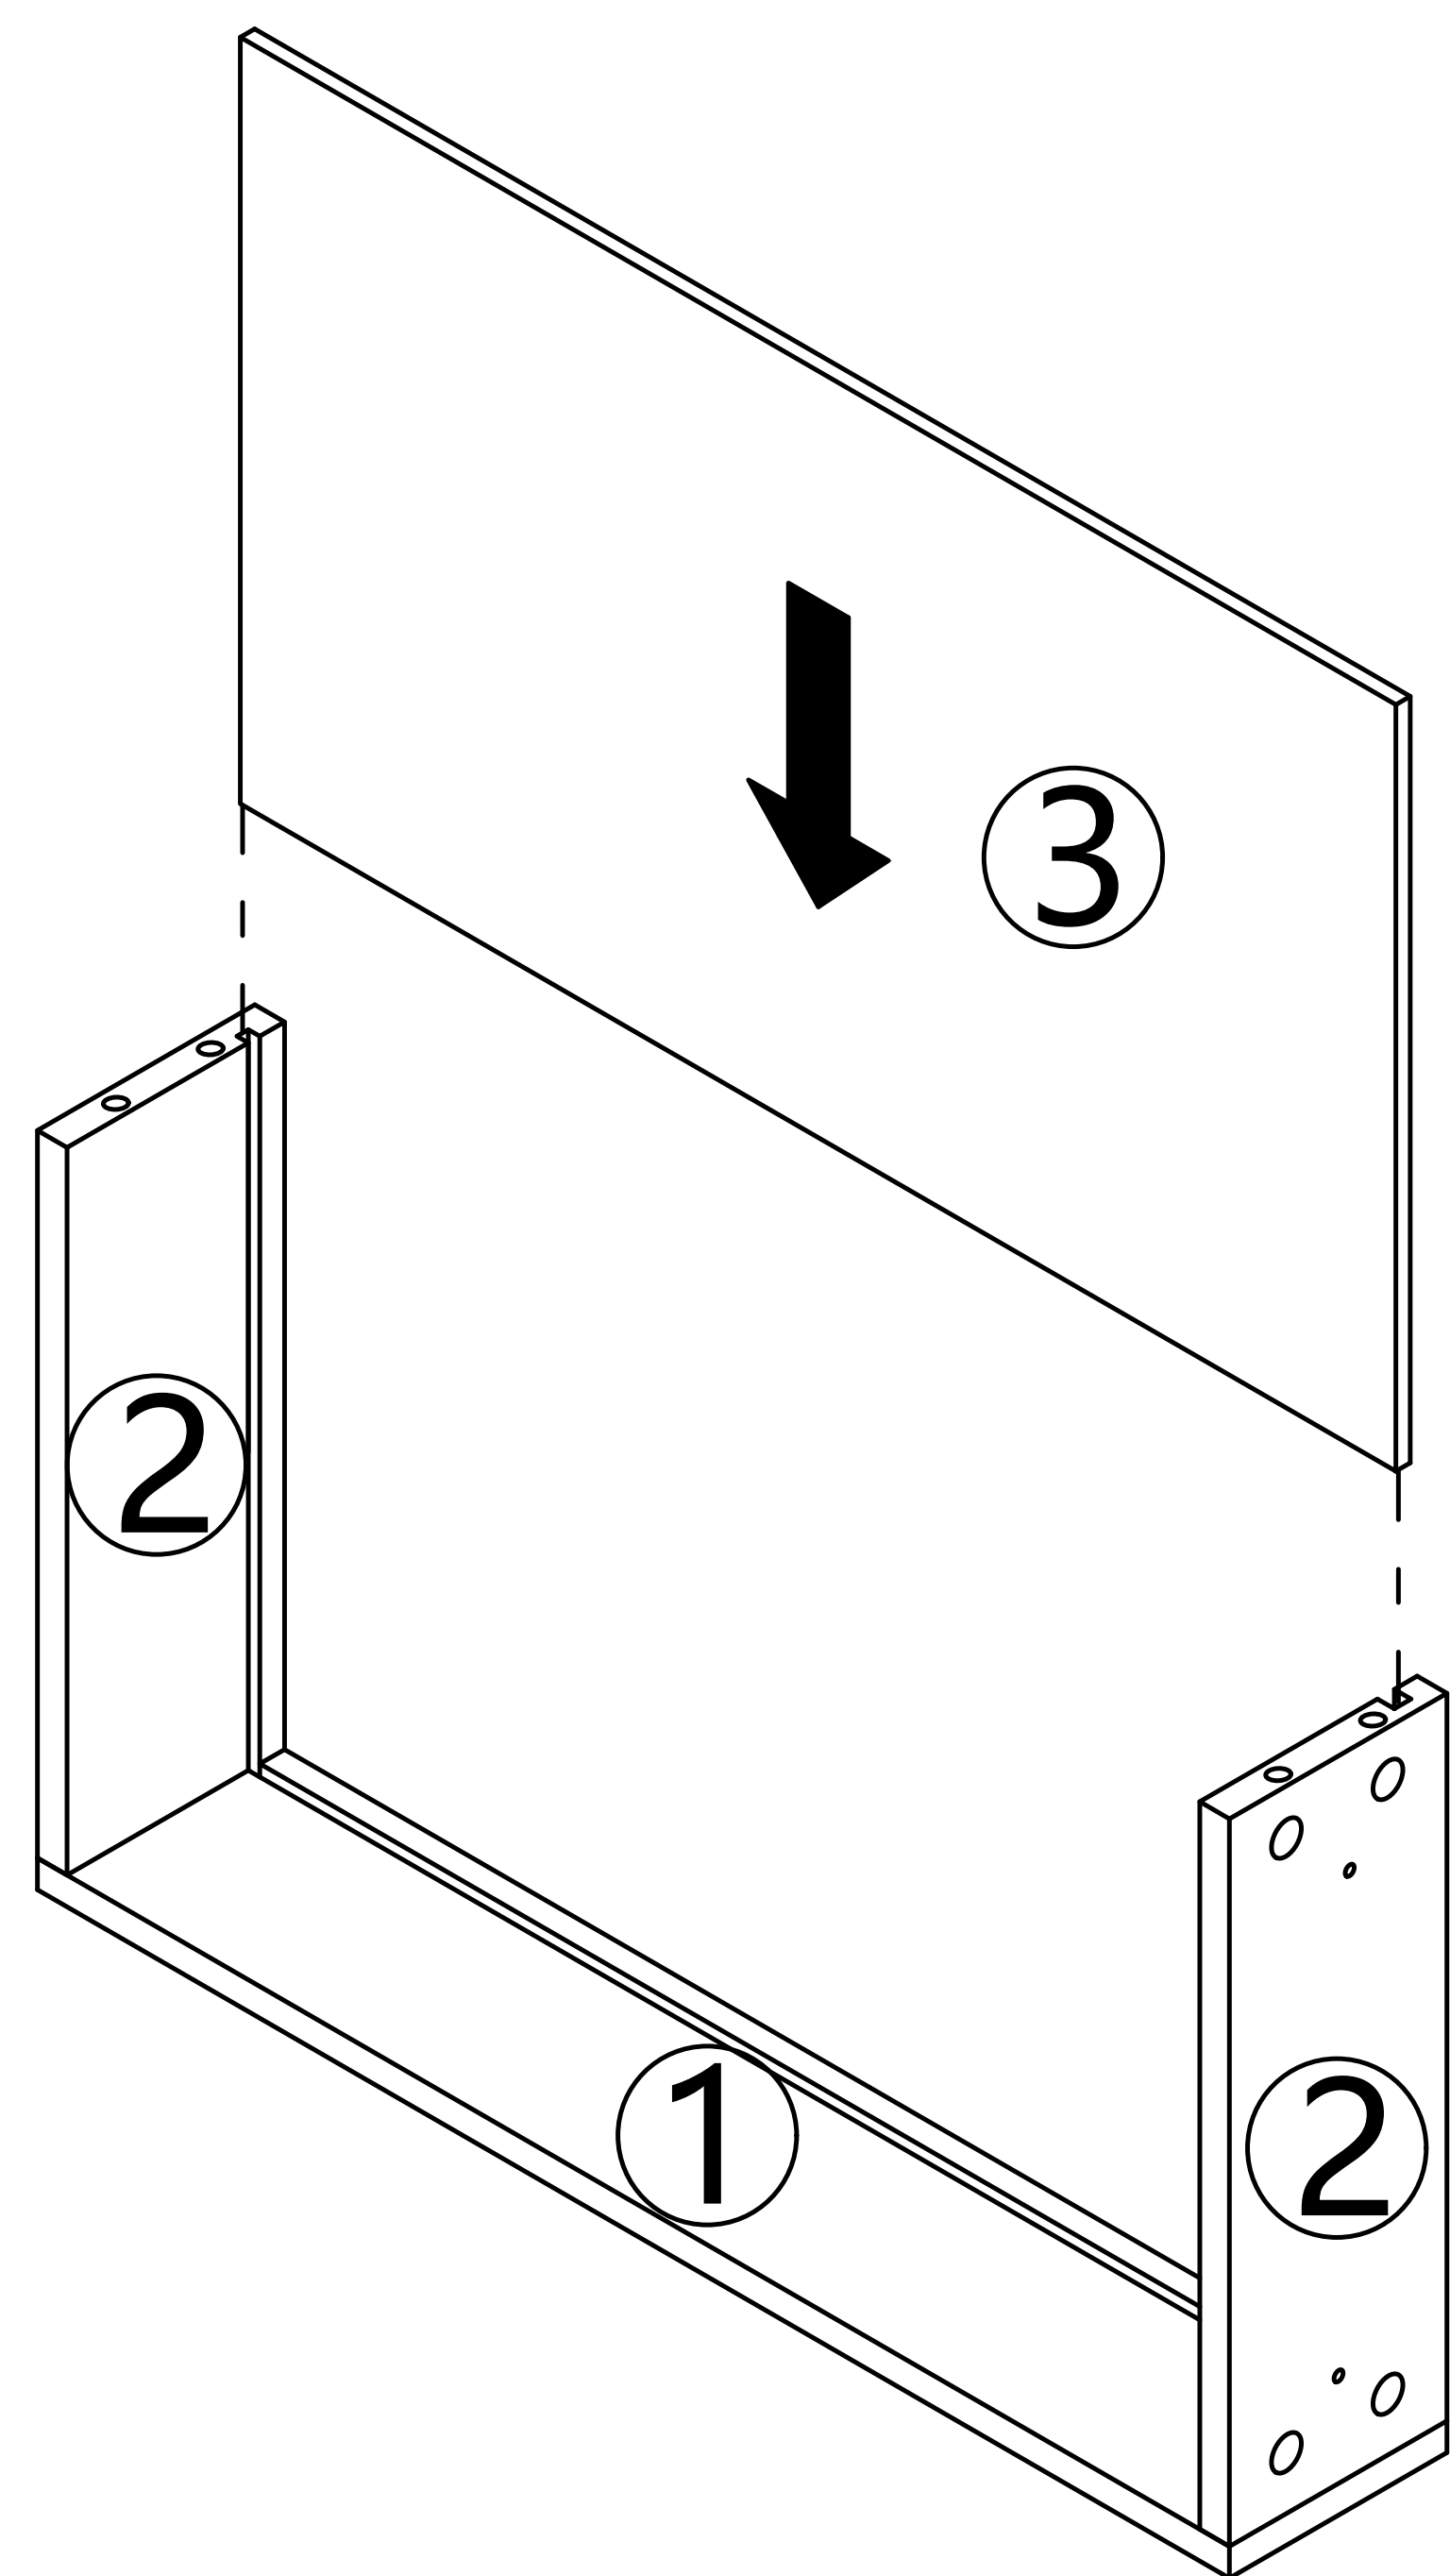



Step 3



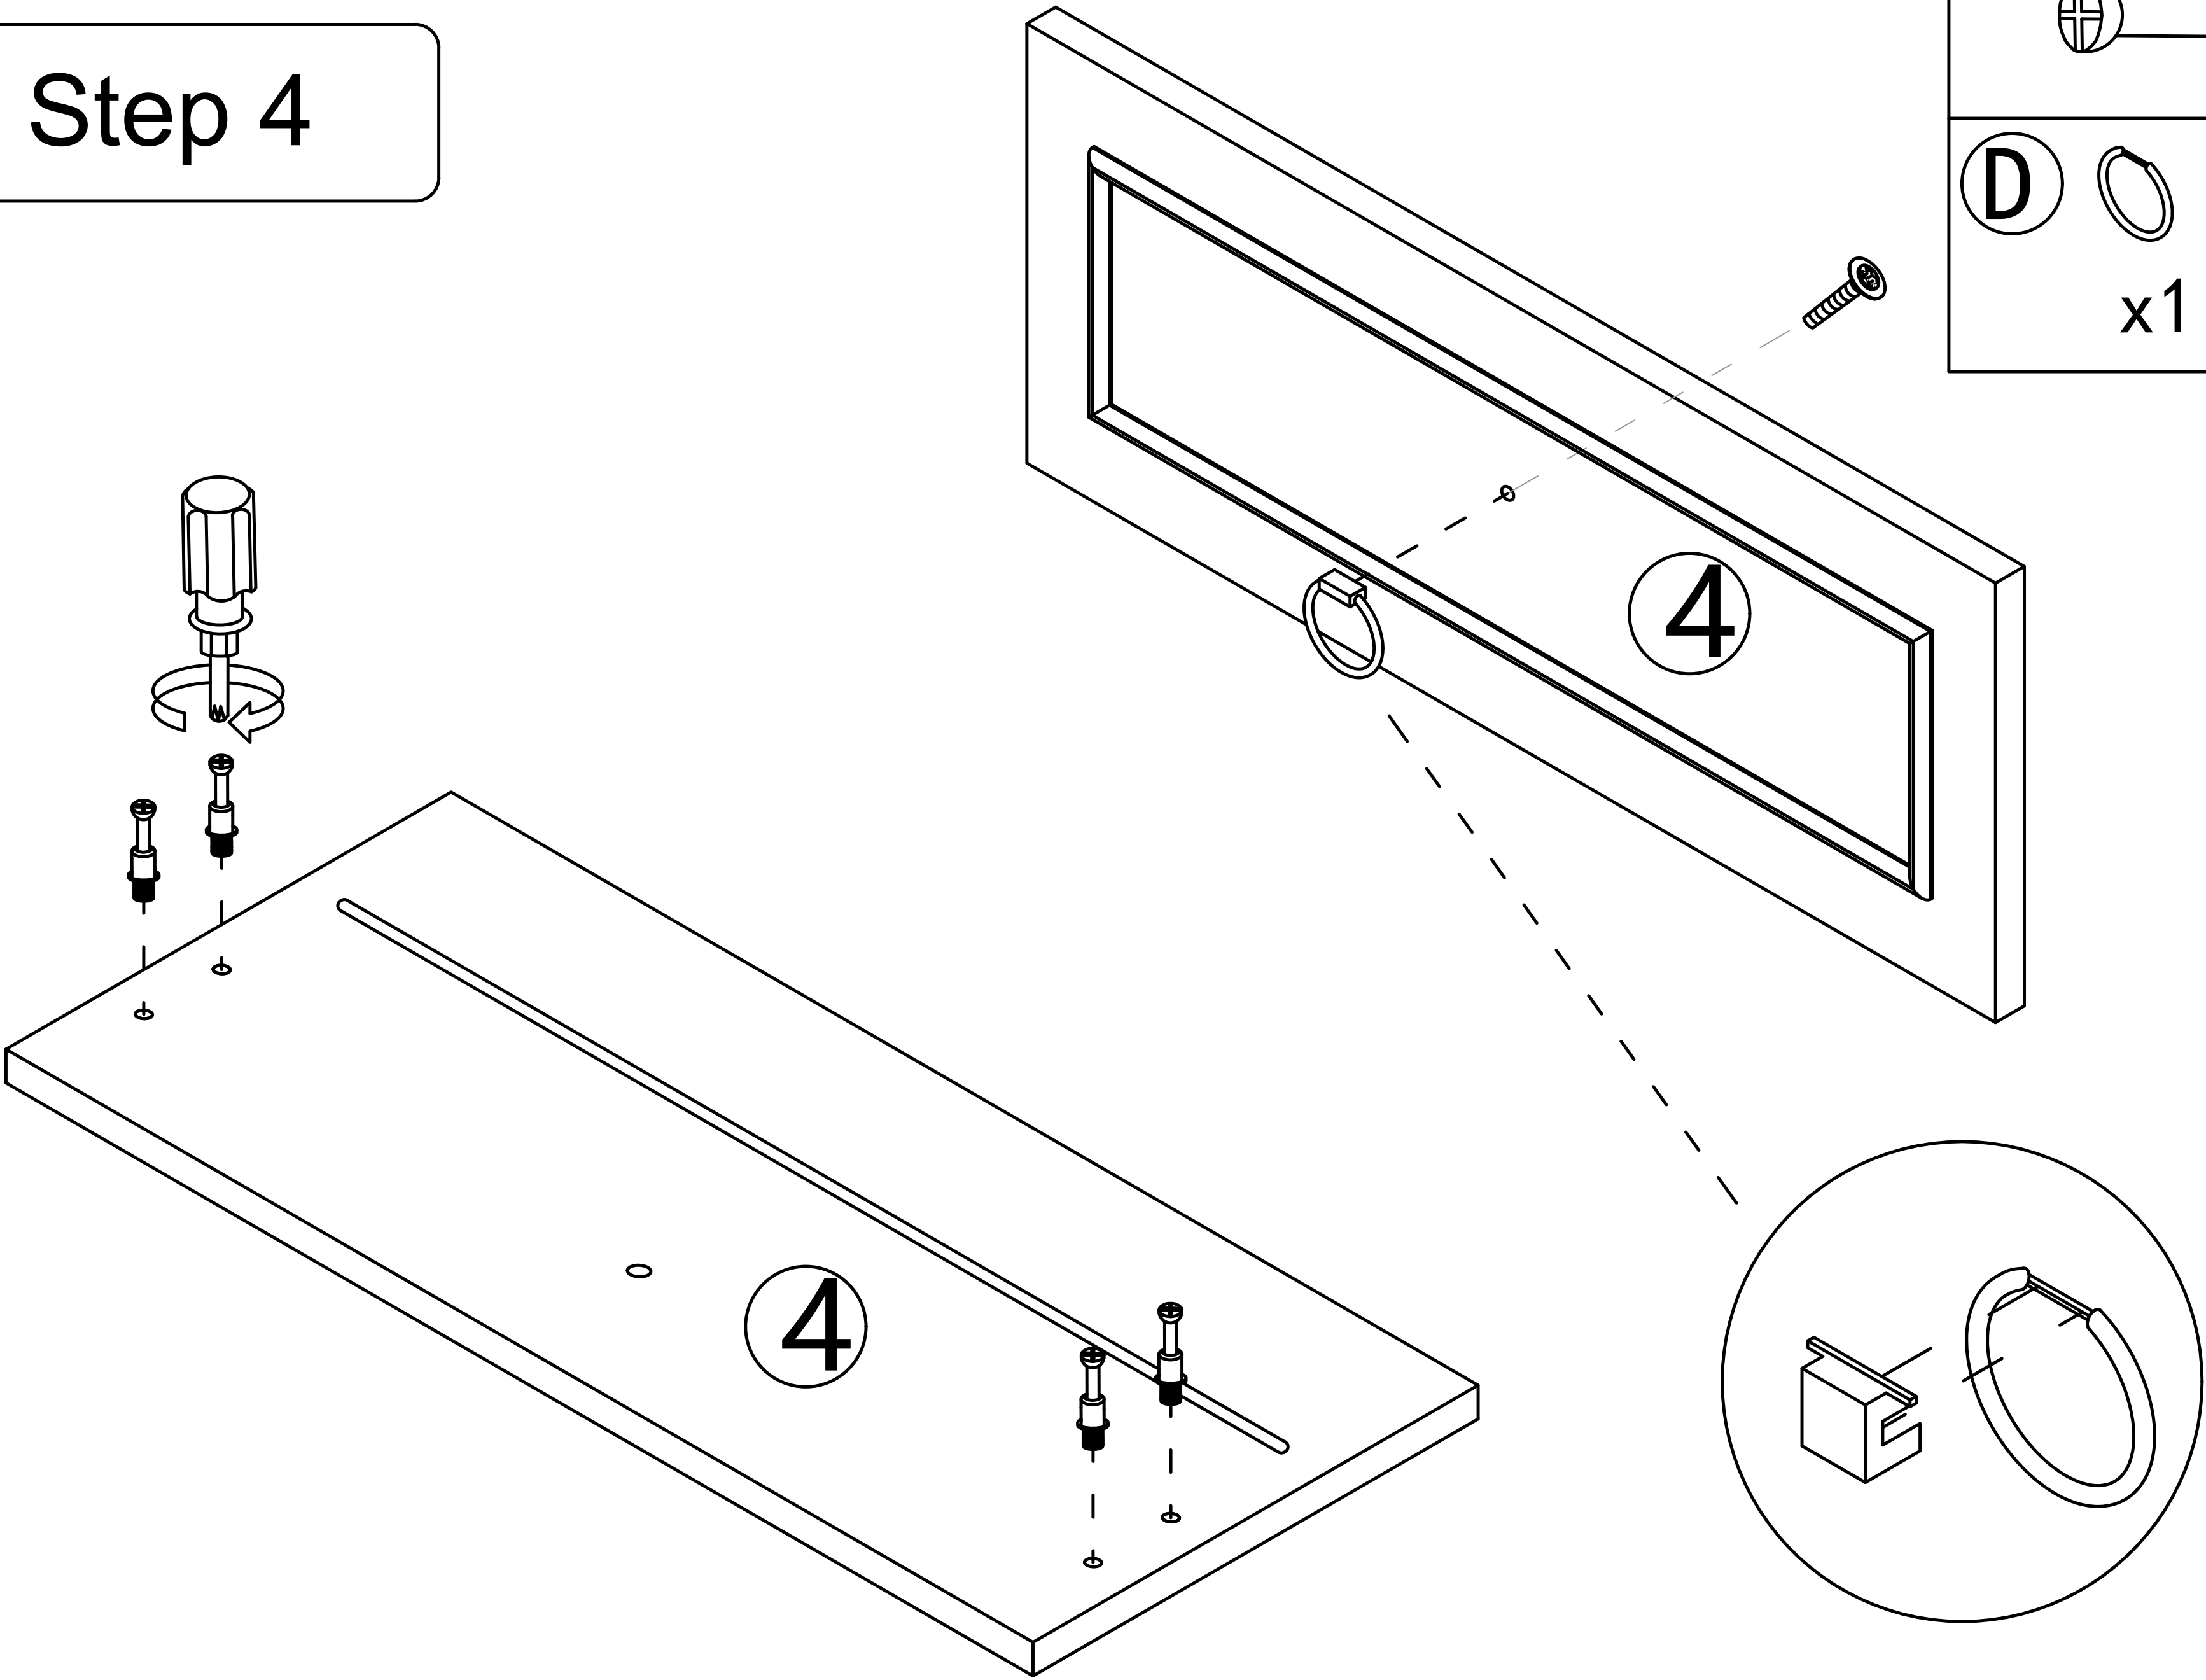



Step 4

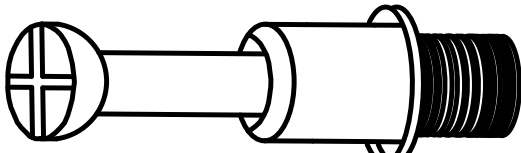


- A**  x4
- D**  x1  x1  x1

Step 5

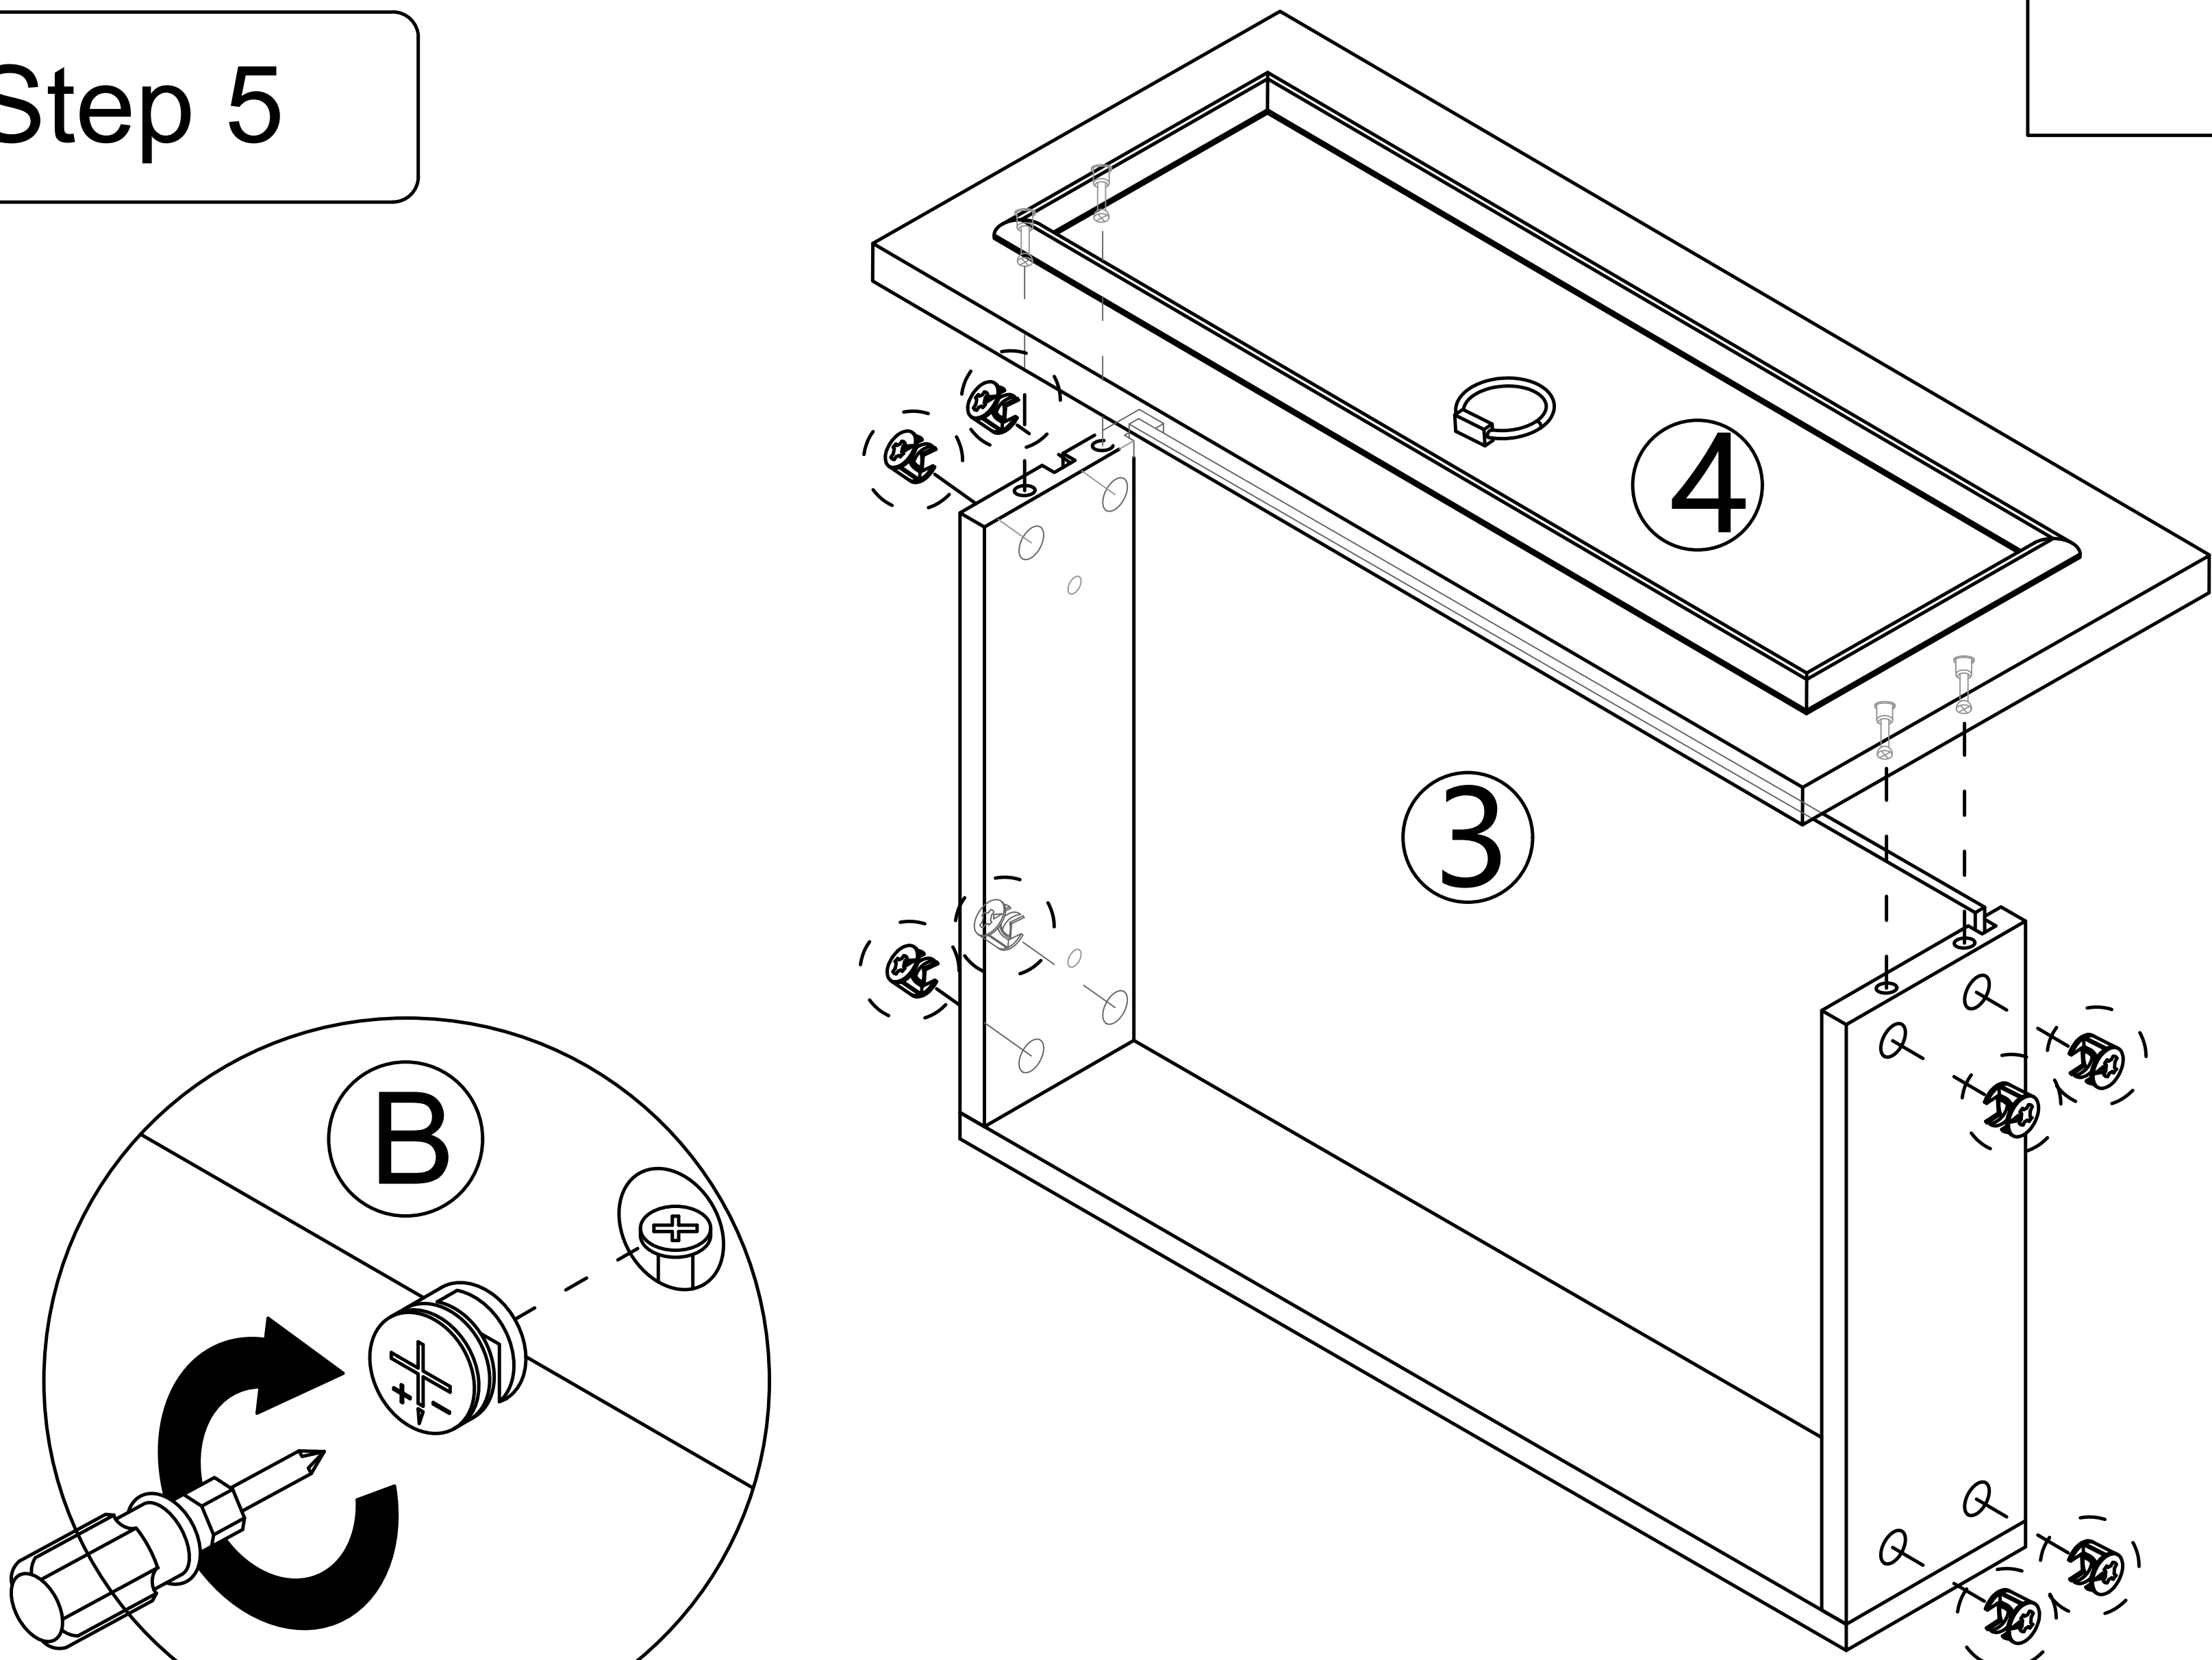


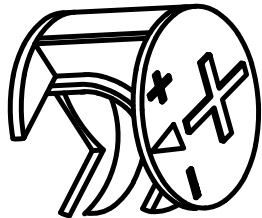
- B**  x8

Drawer rail breakdown diagram

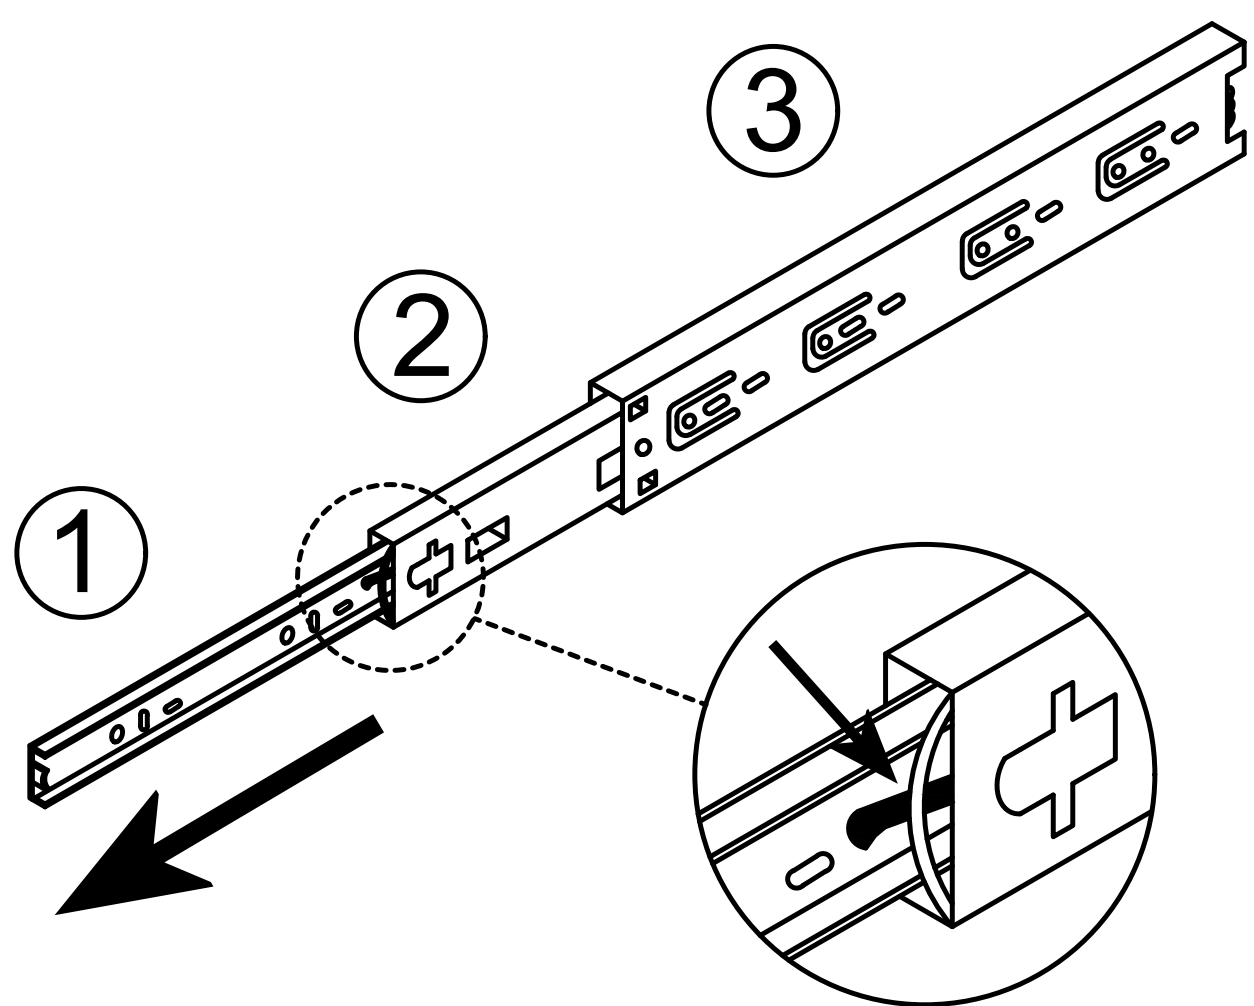


Step 1 : Pull the rails apart

Step 2 : Push the nylon buckle outward ①

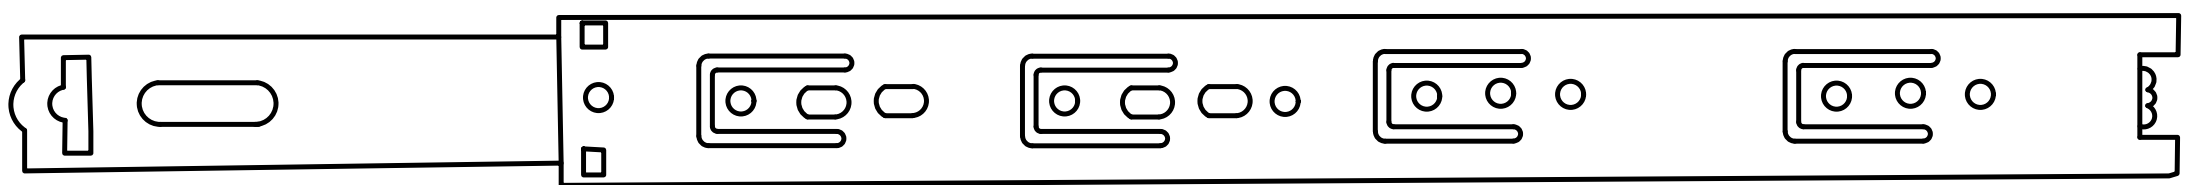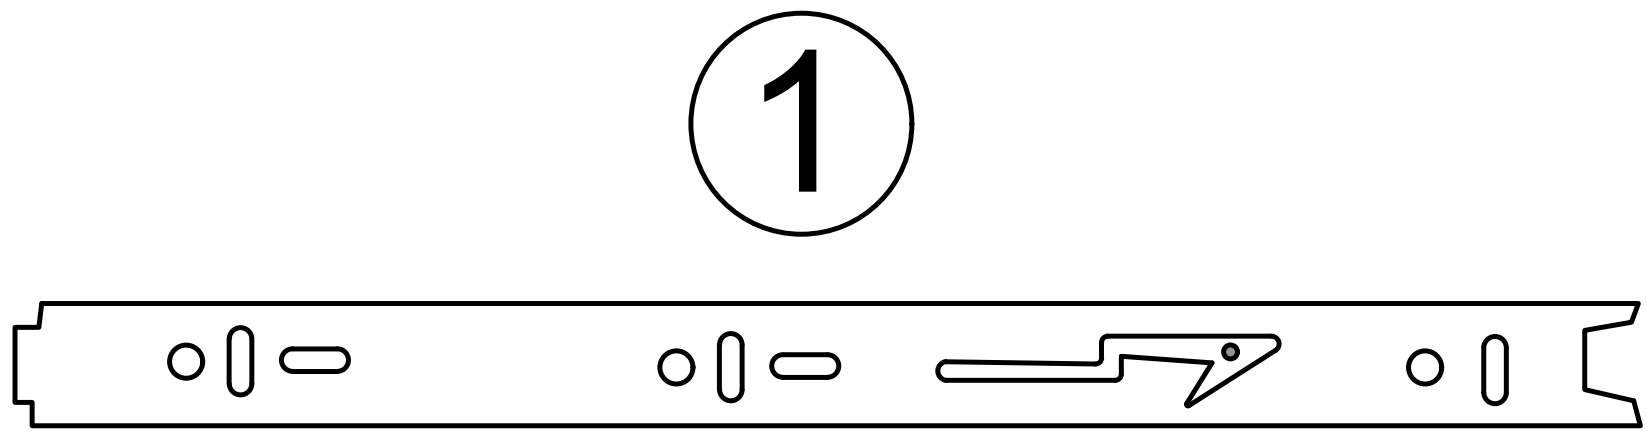

②

③


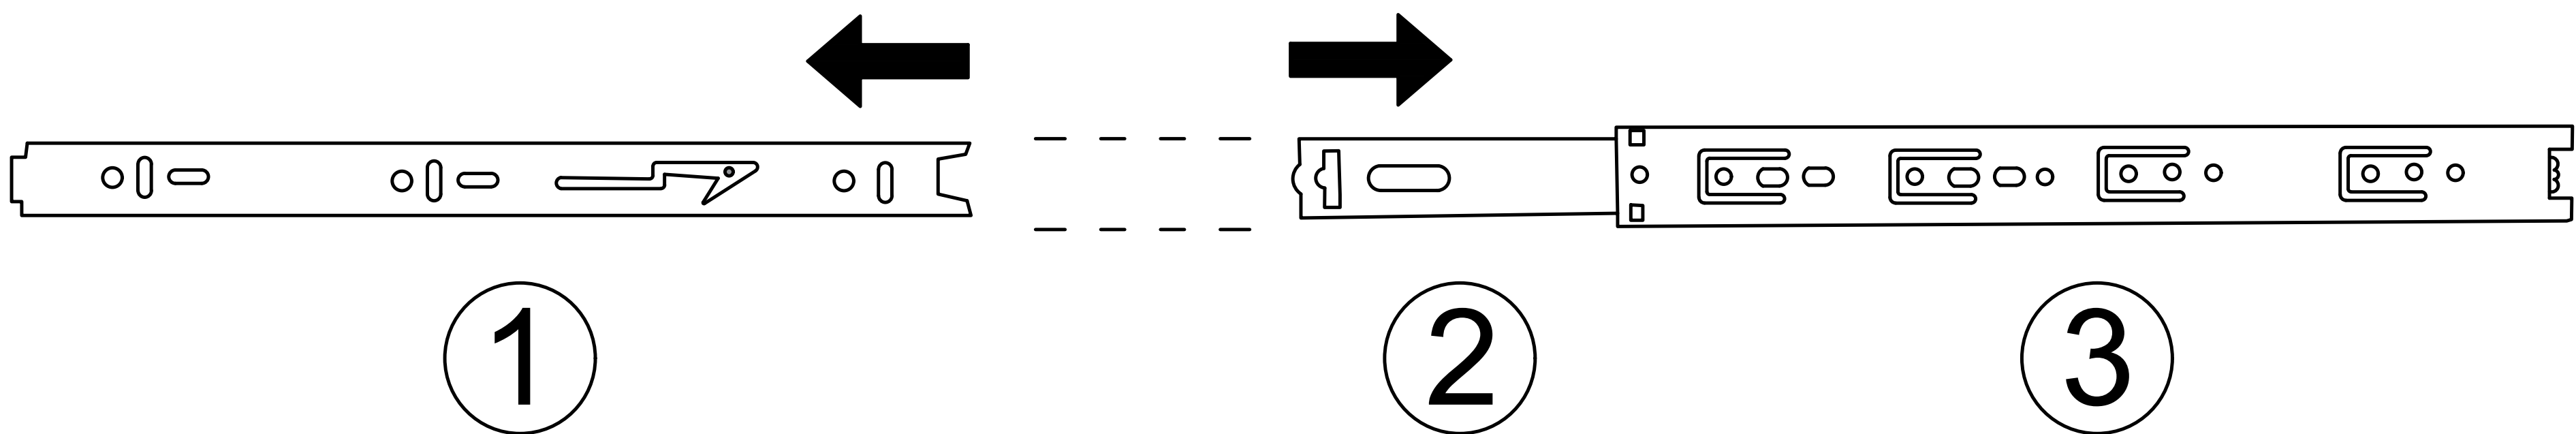


①

②


③

Step 6

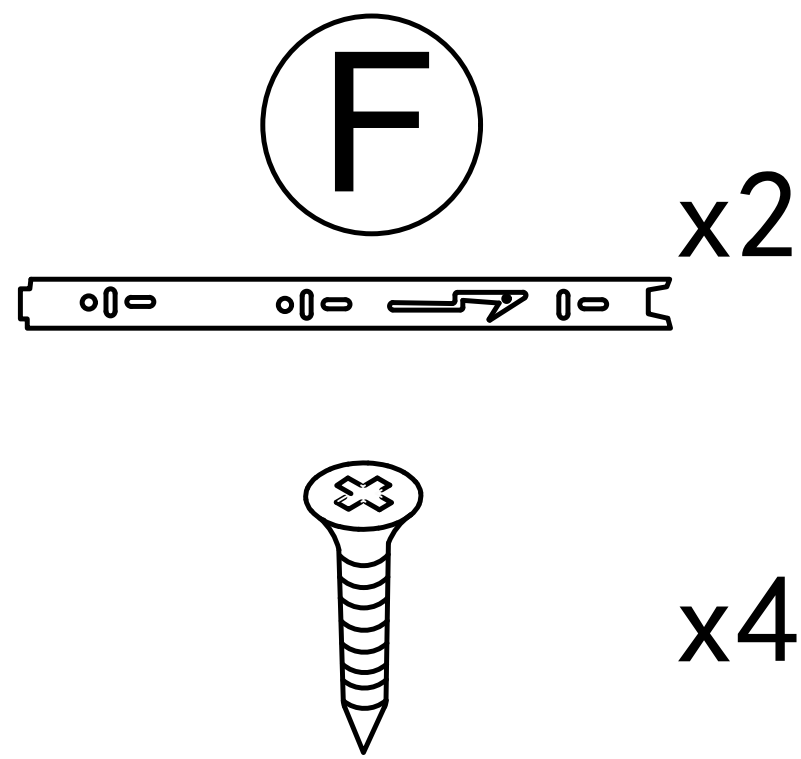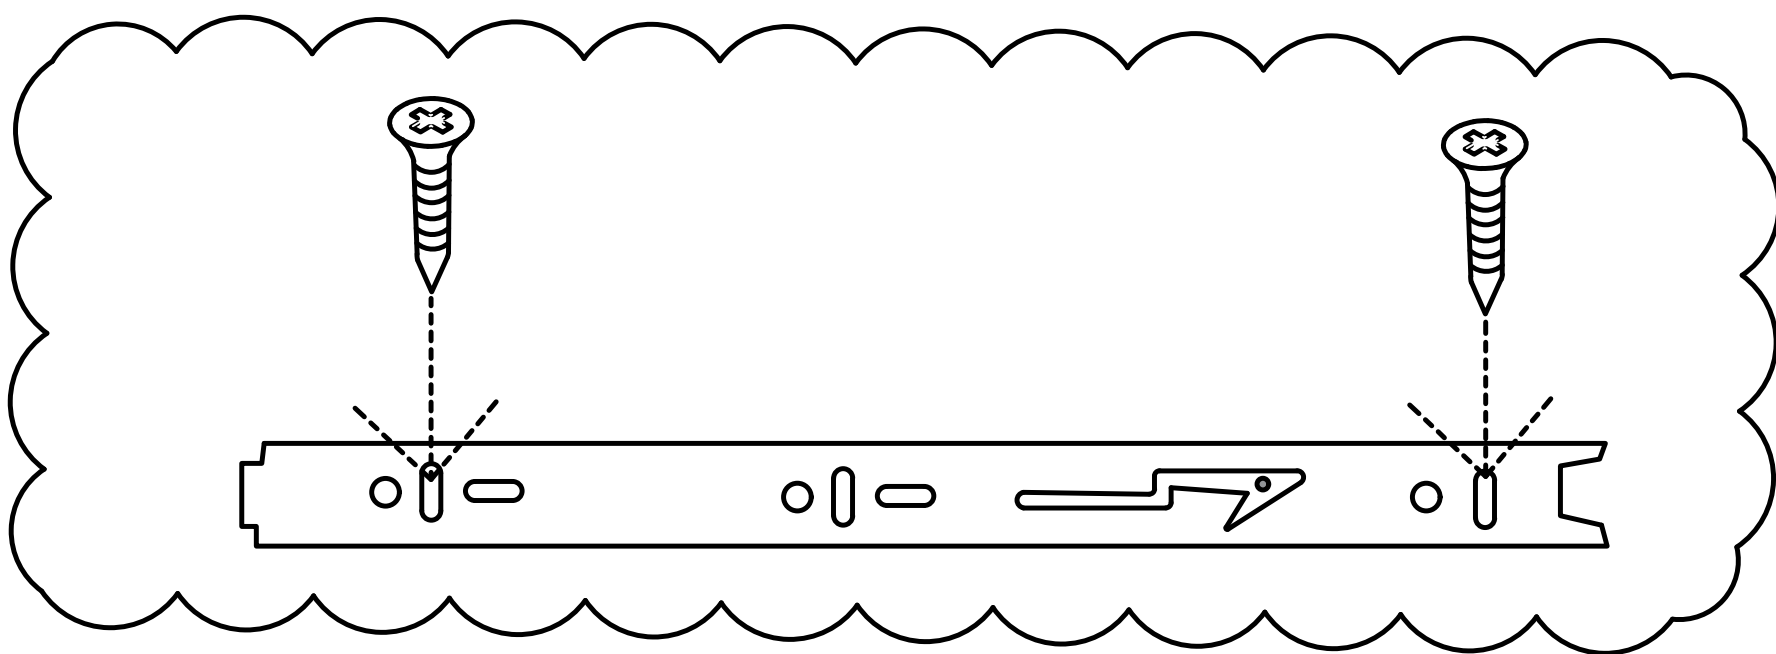



x2

x4


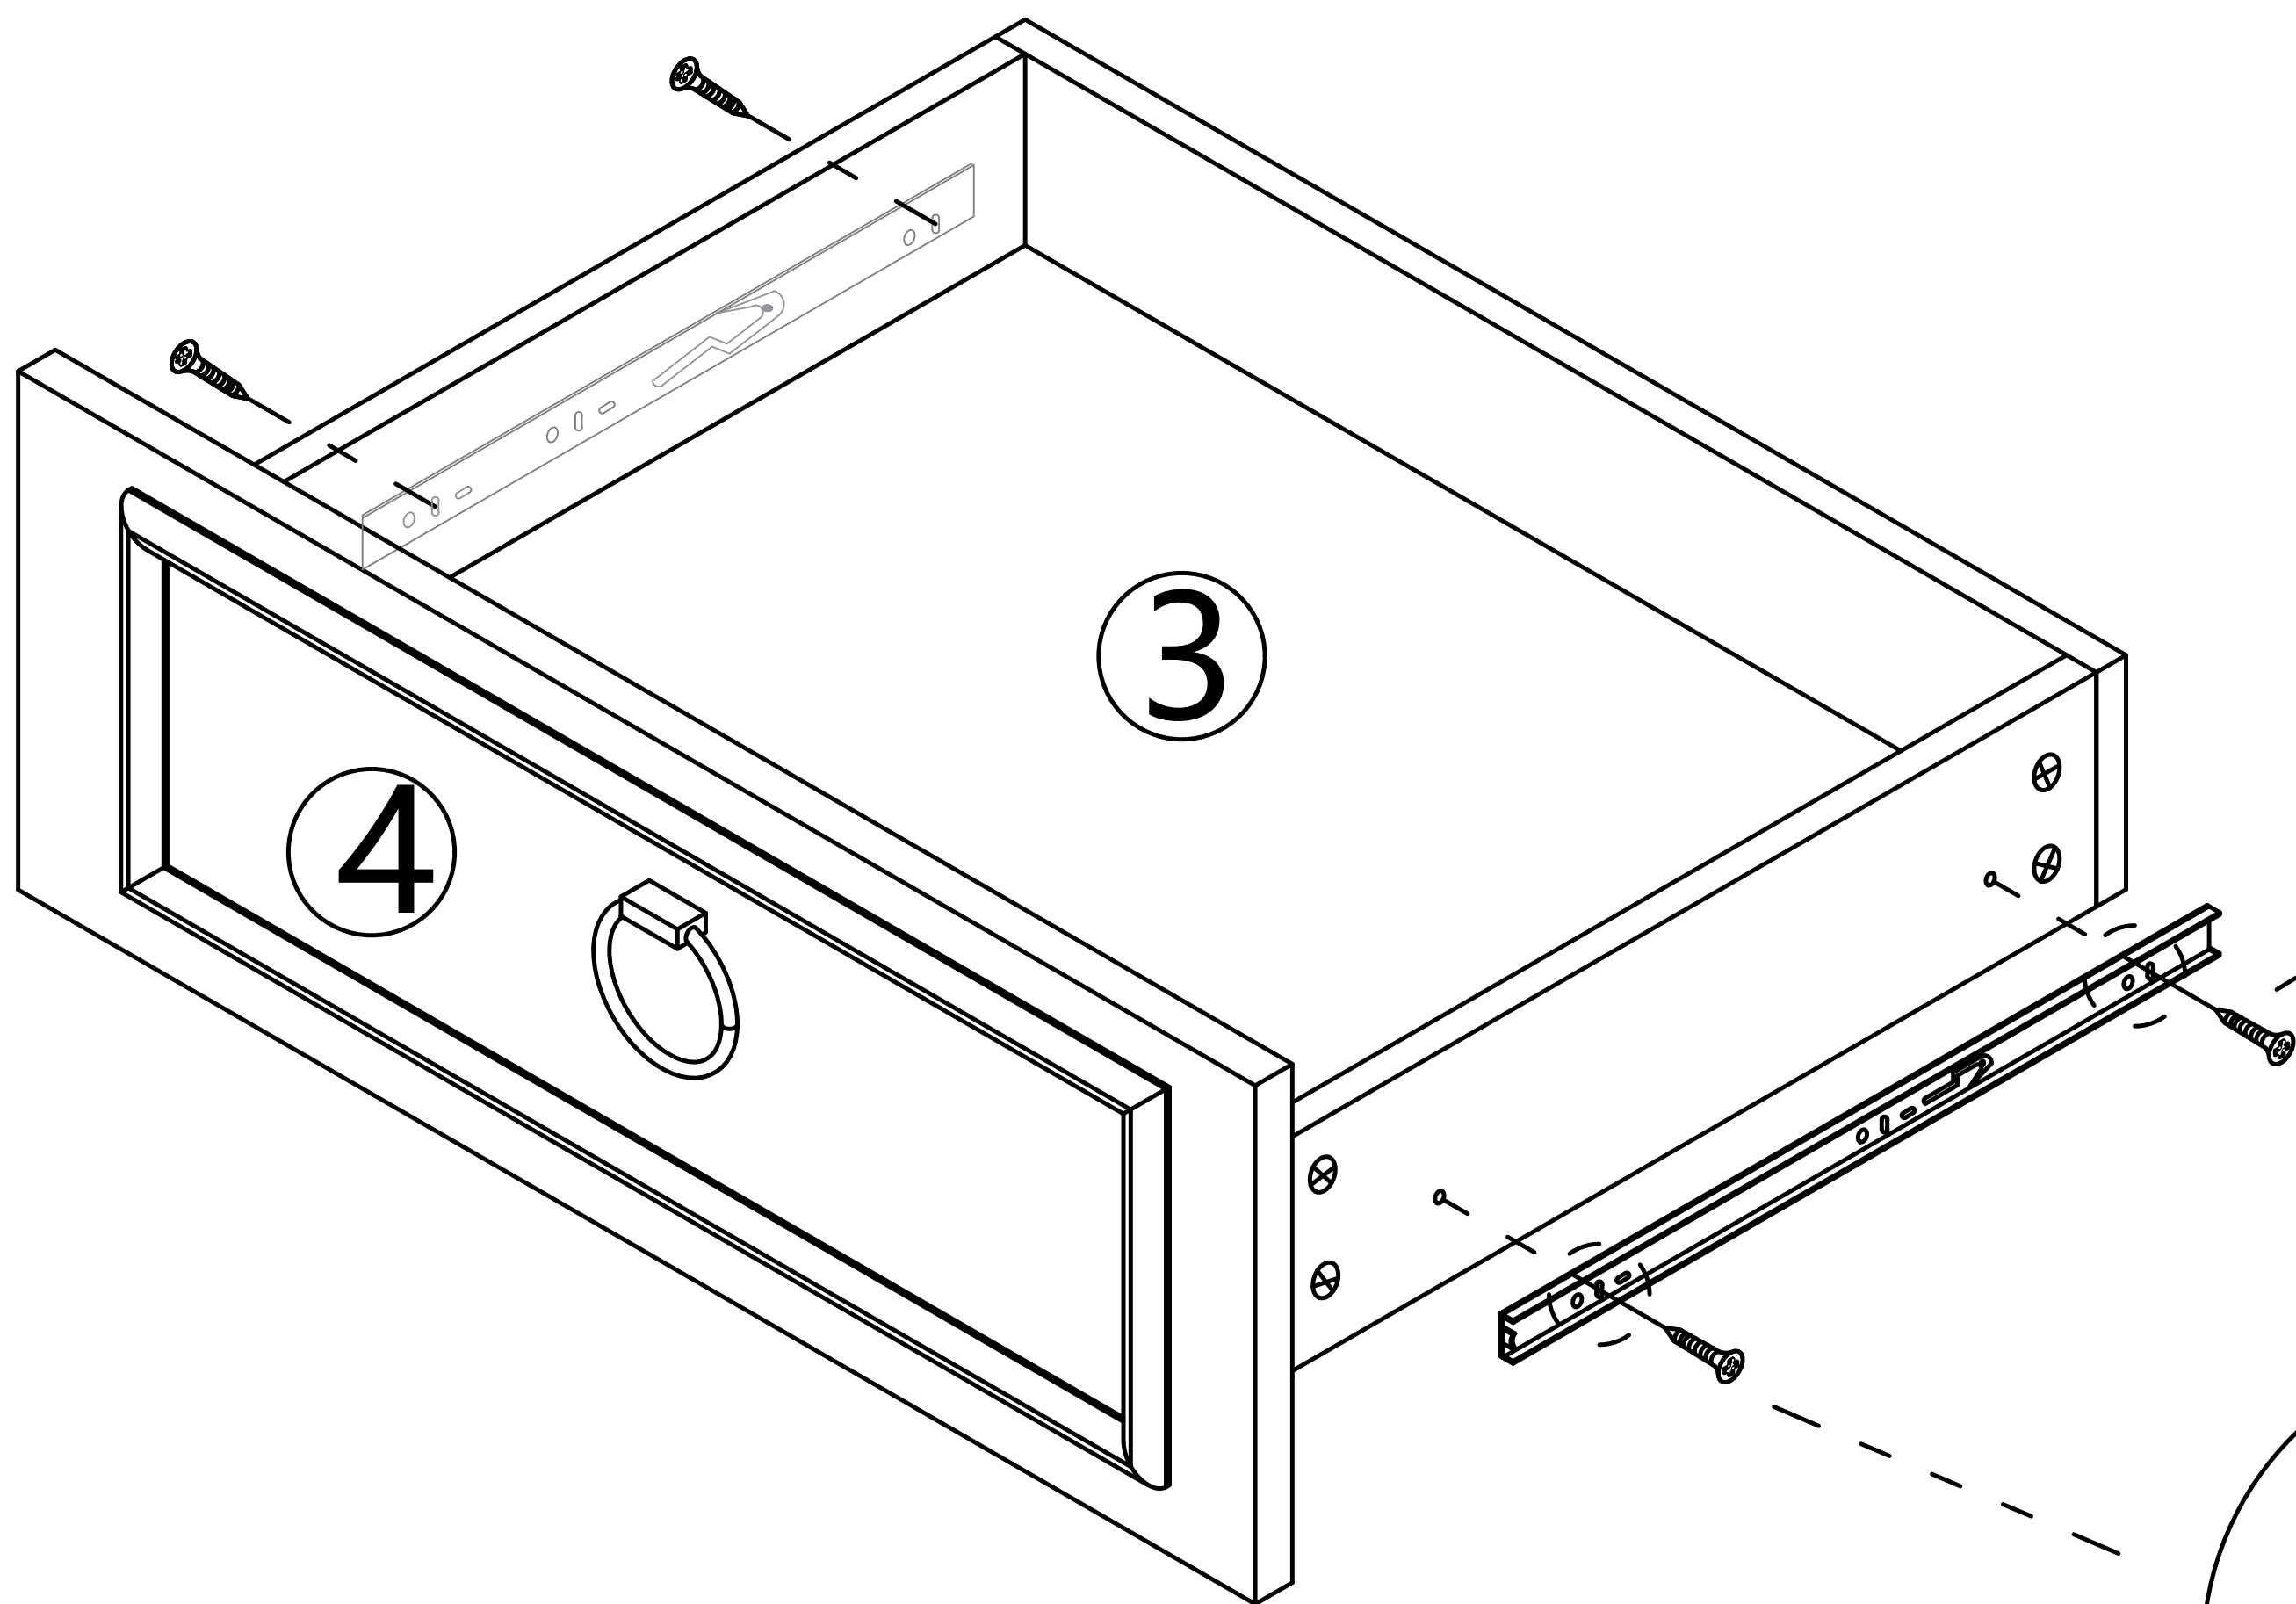


③


④

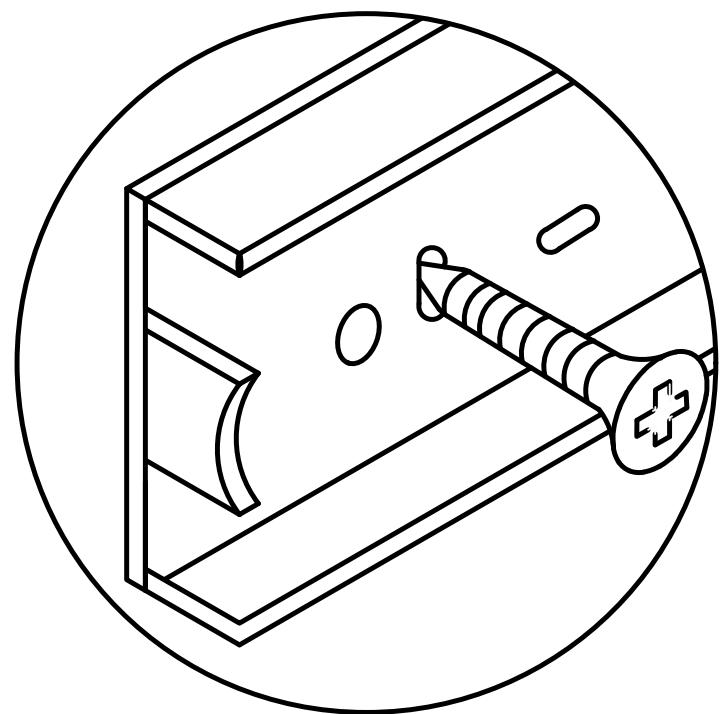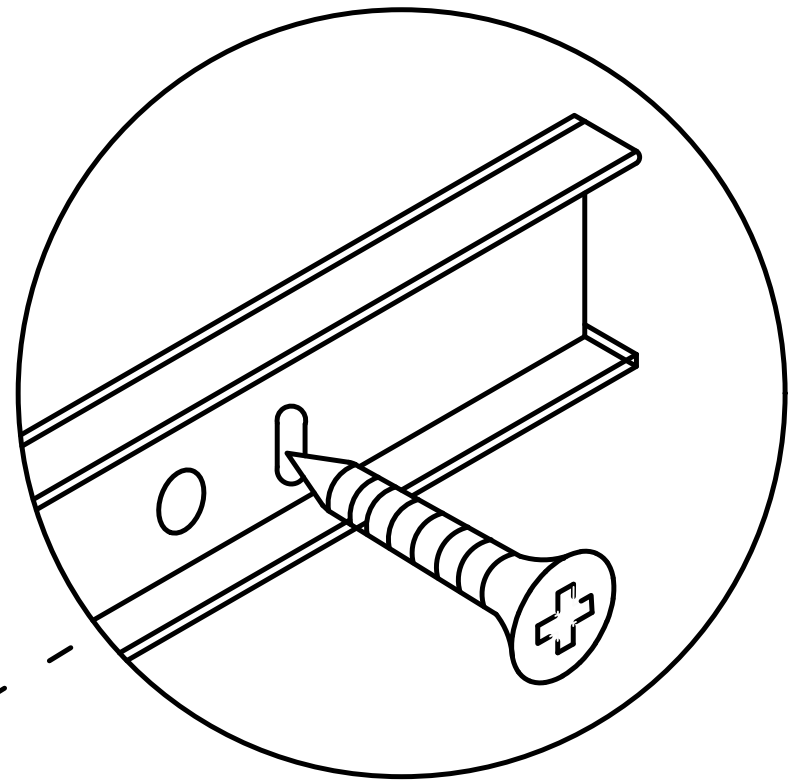

Step 7

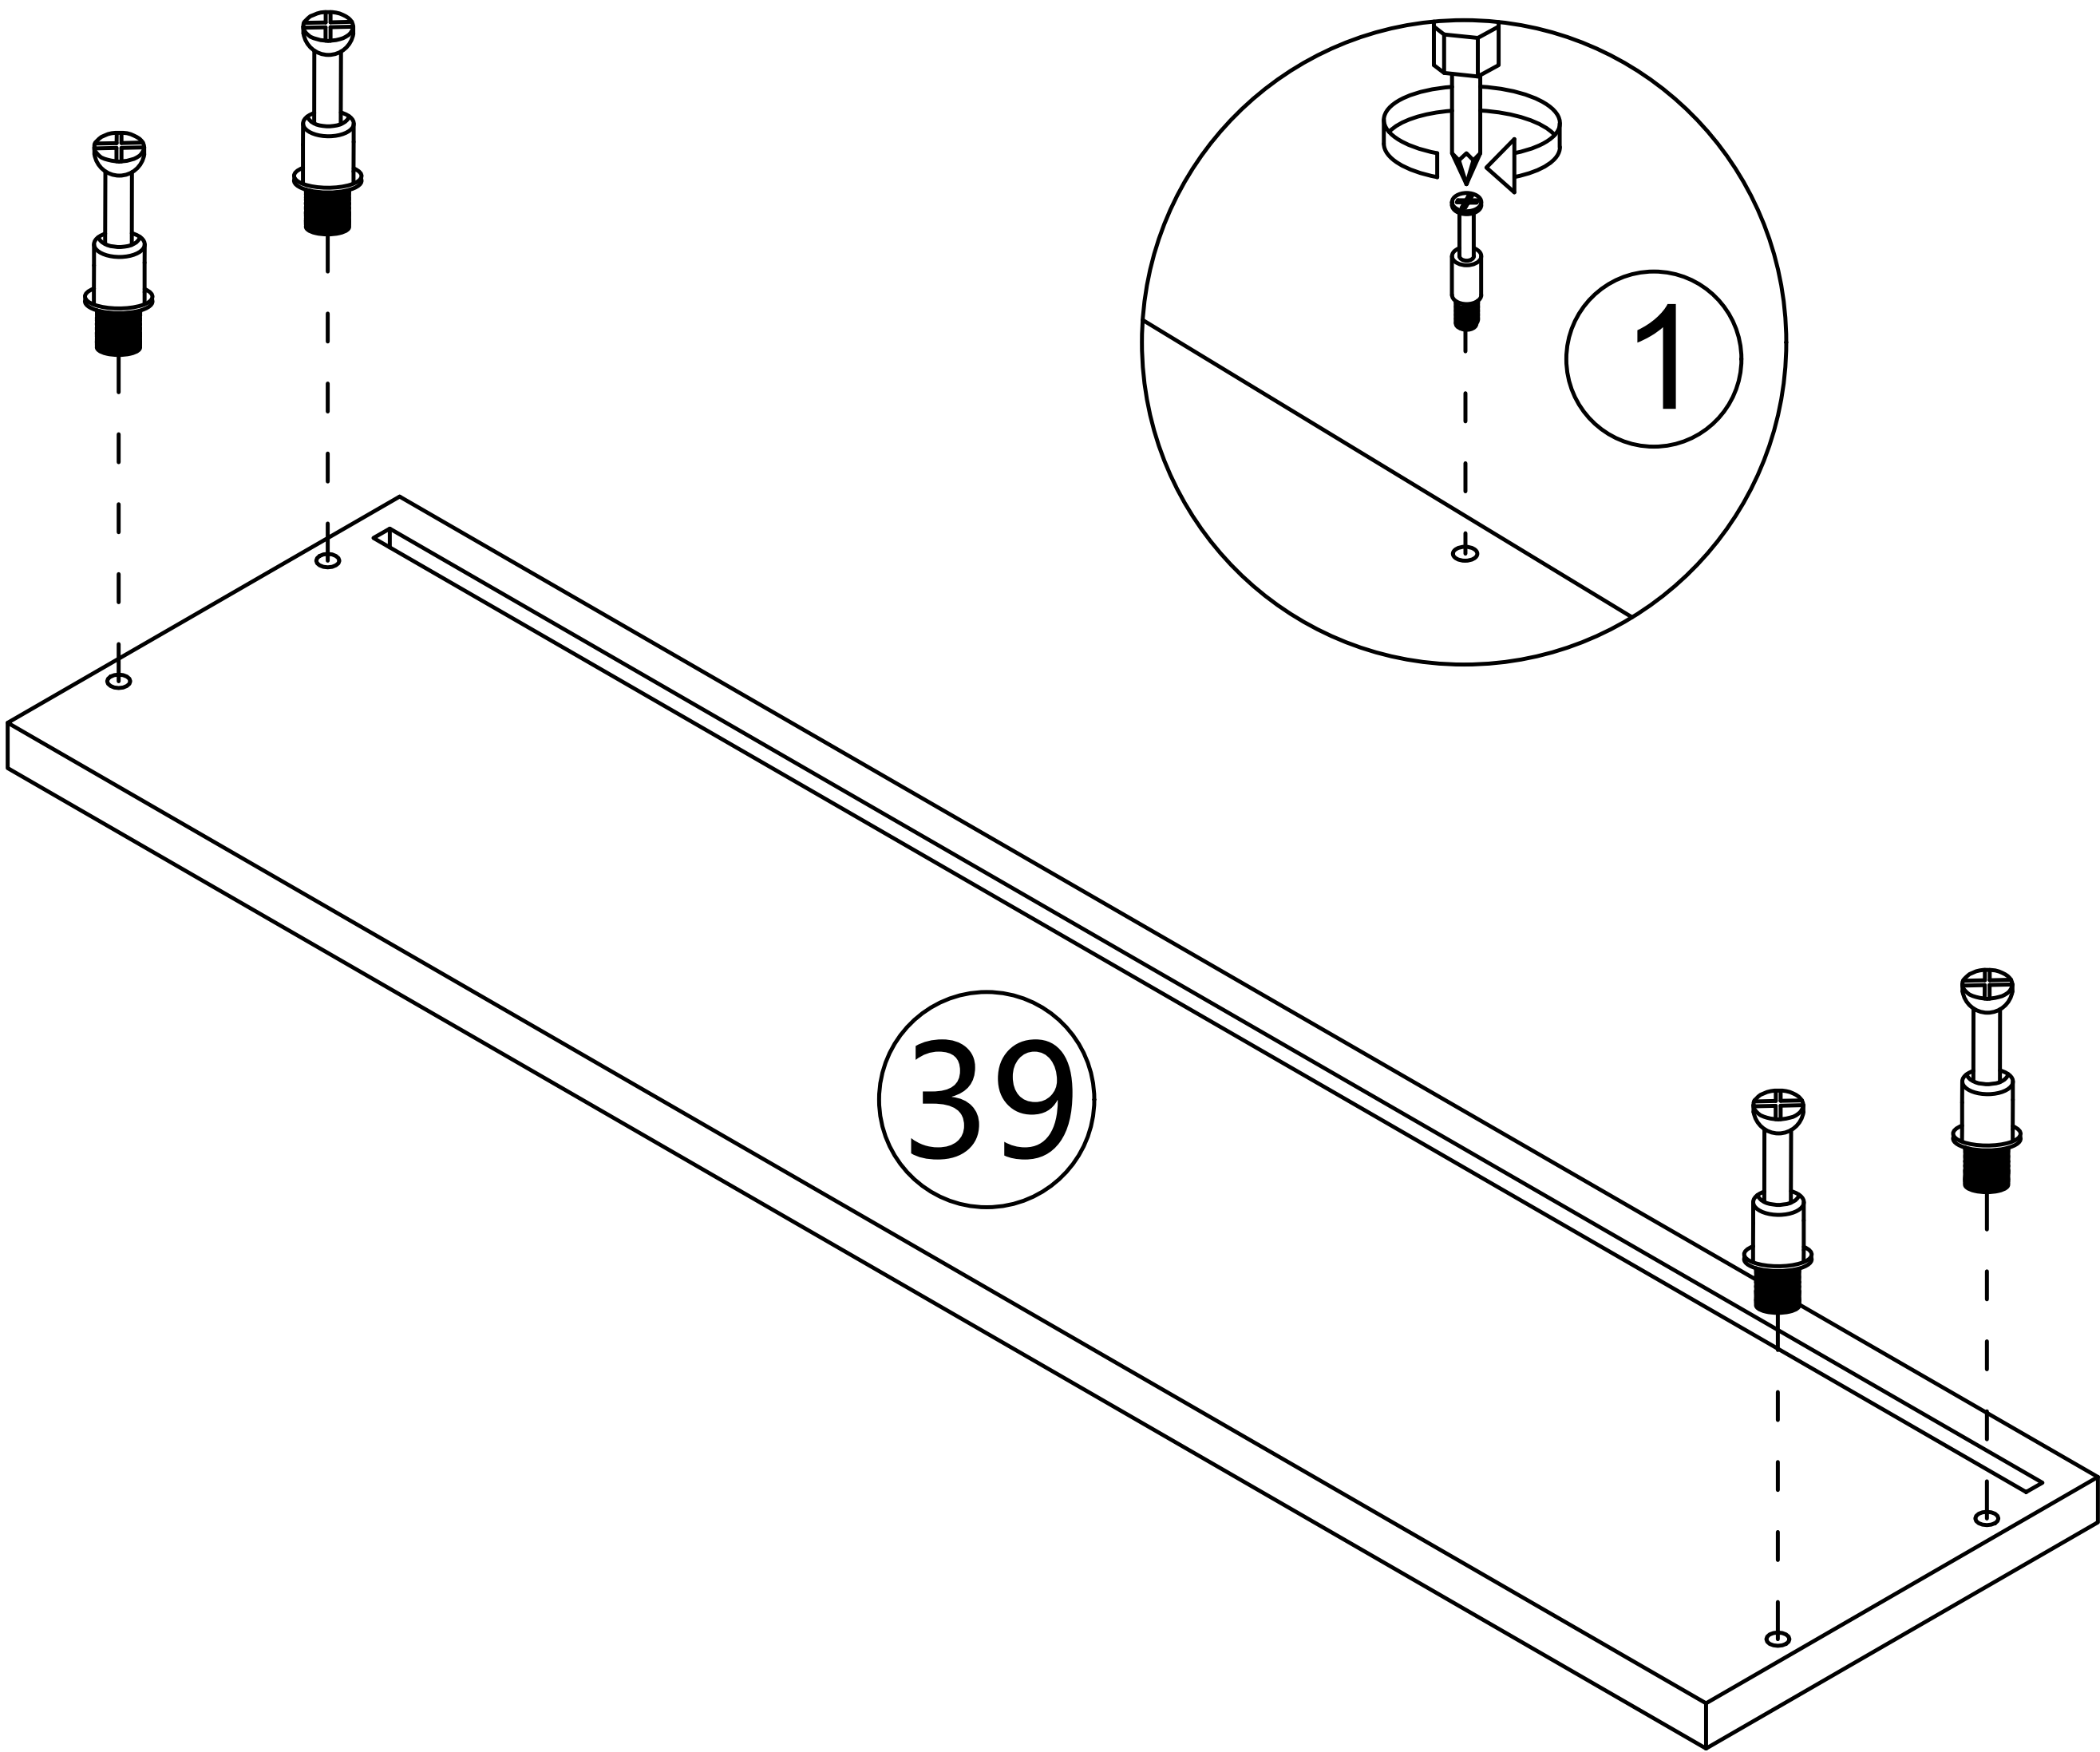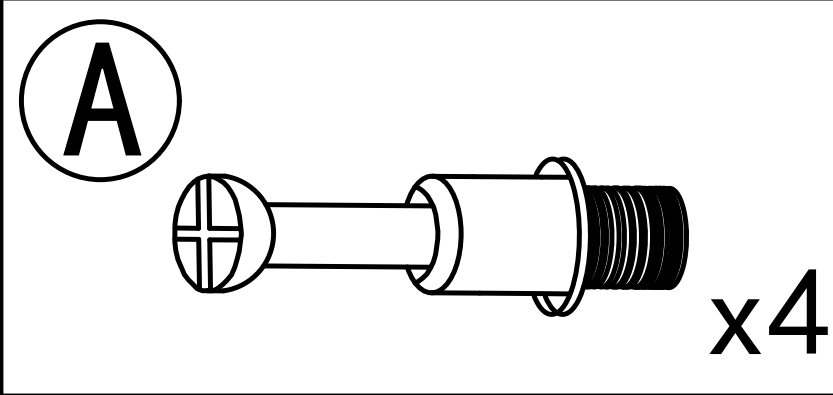


Step 8

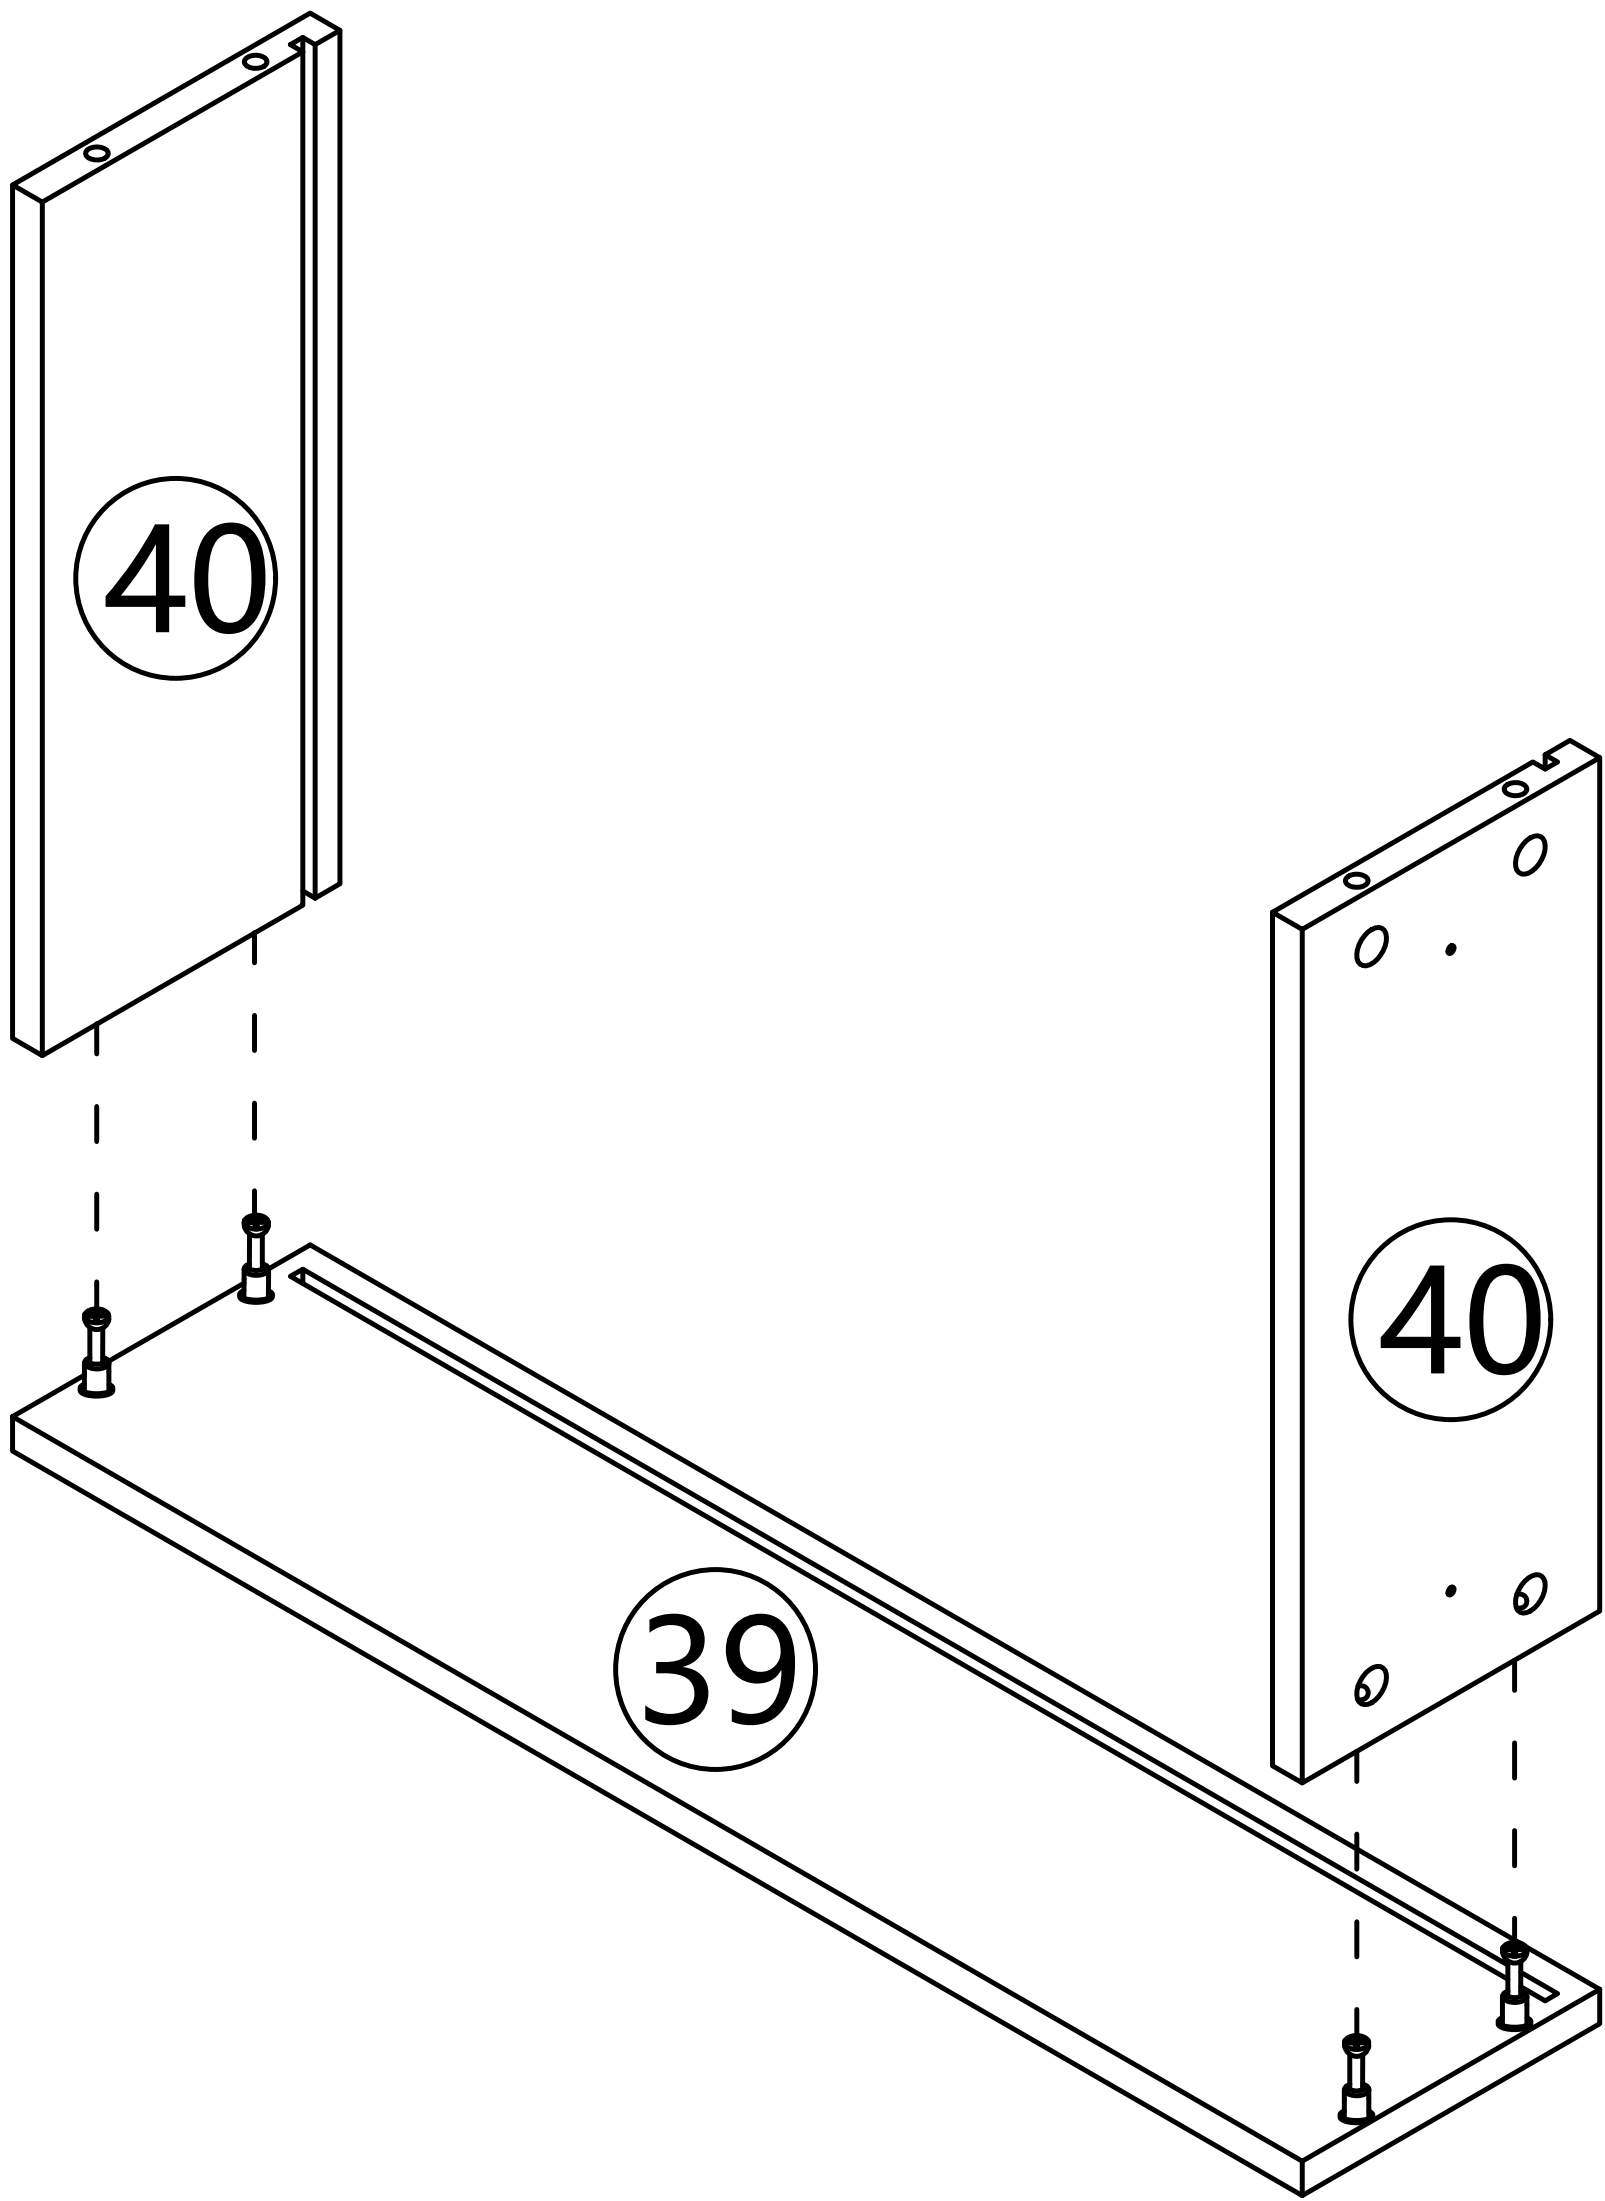




Step 9

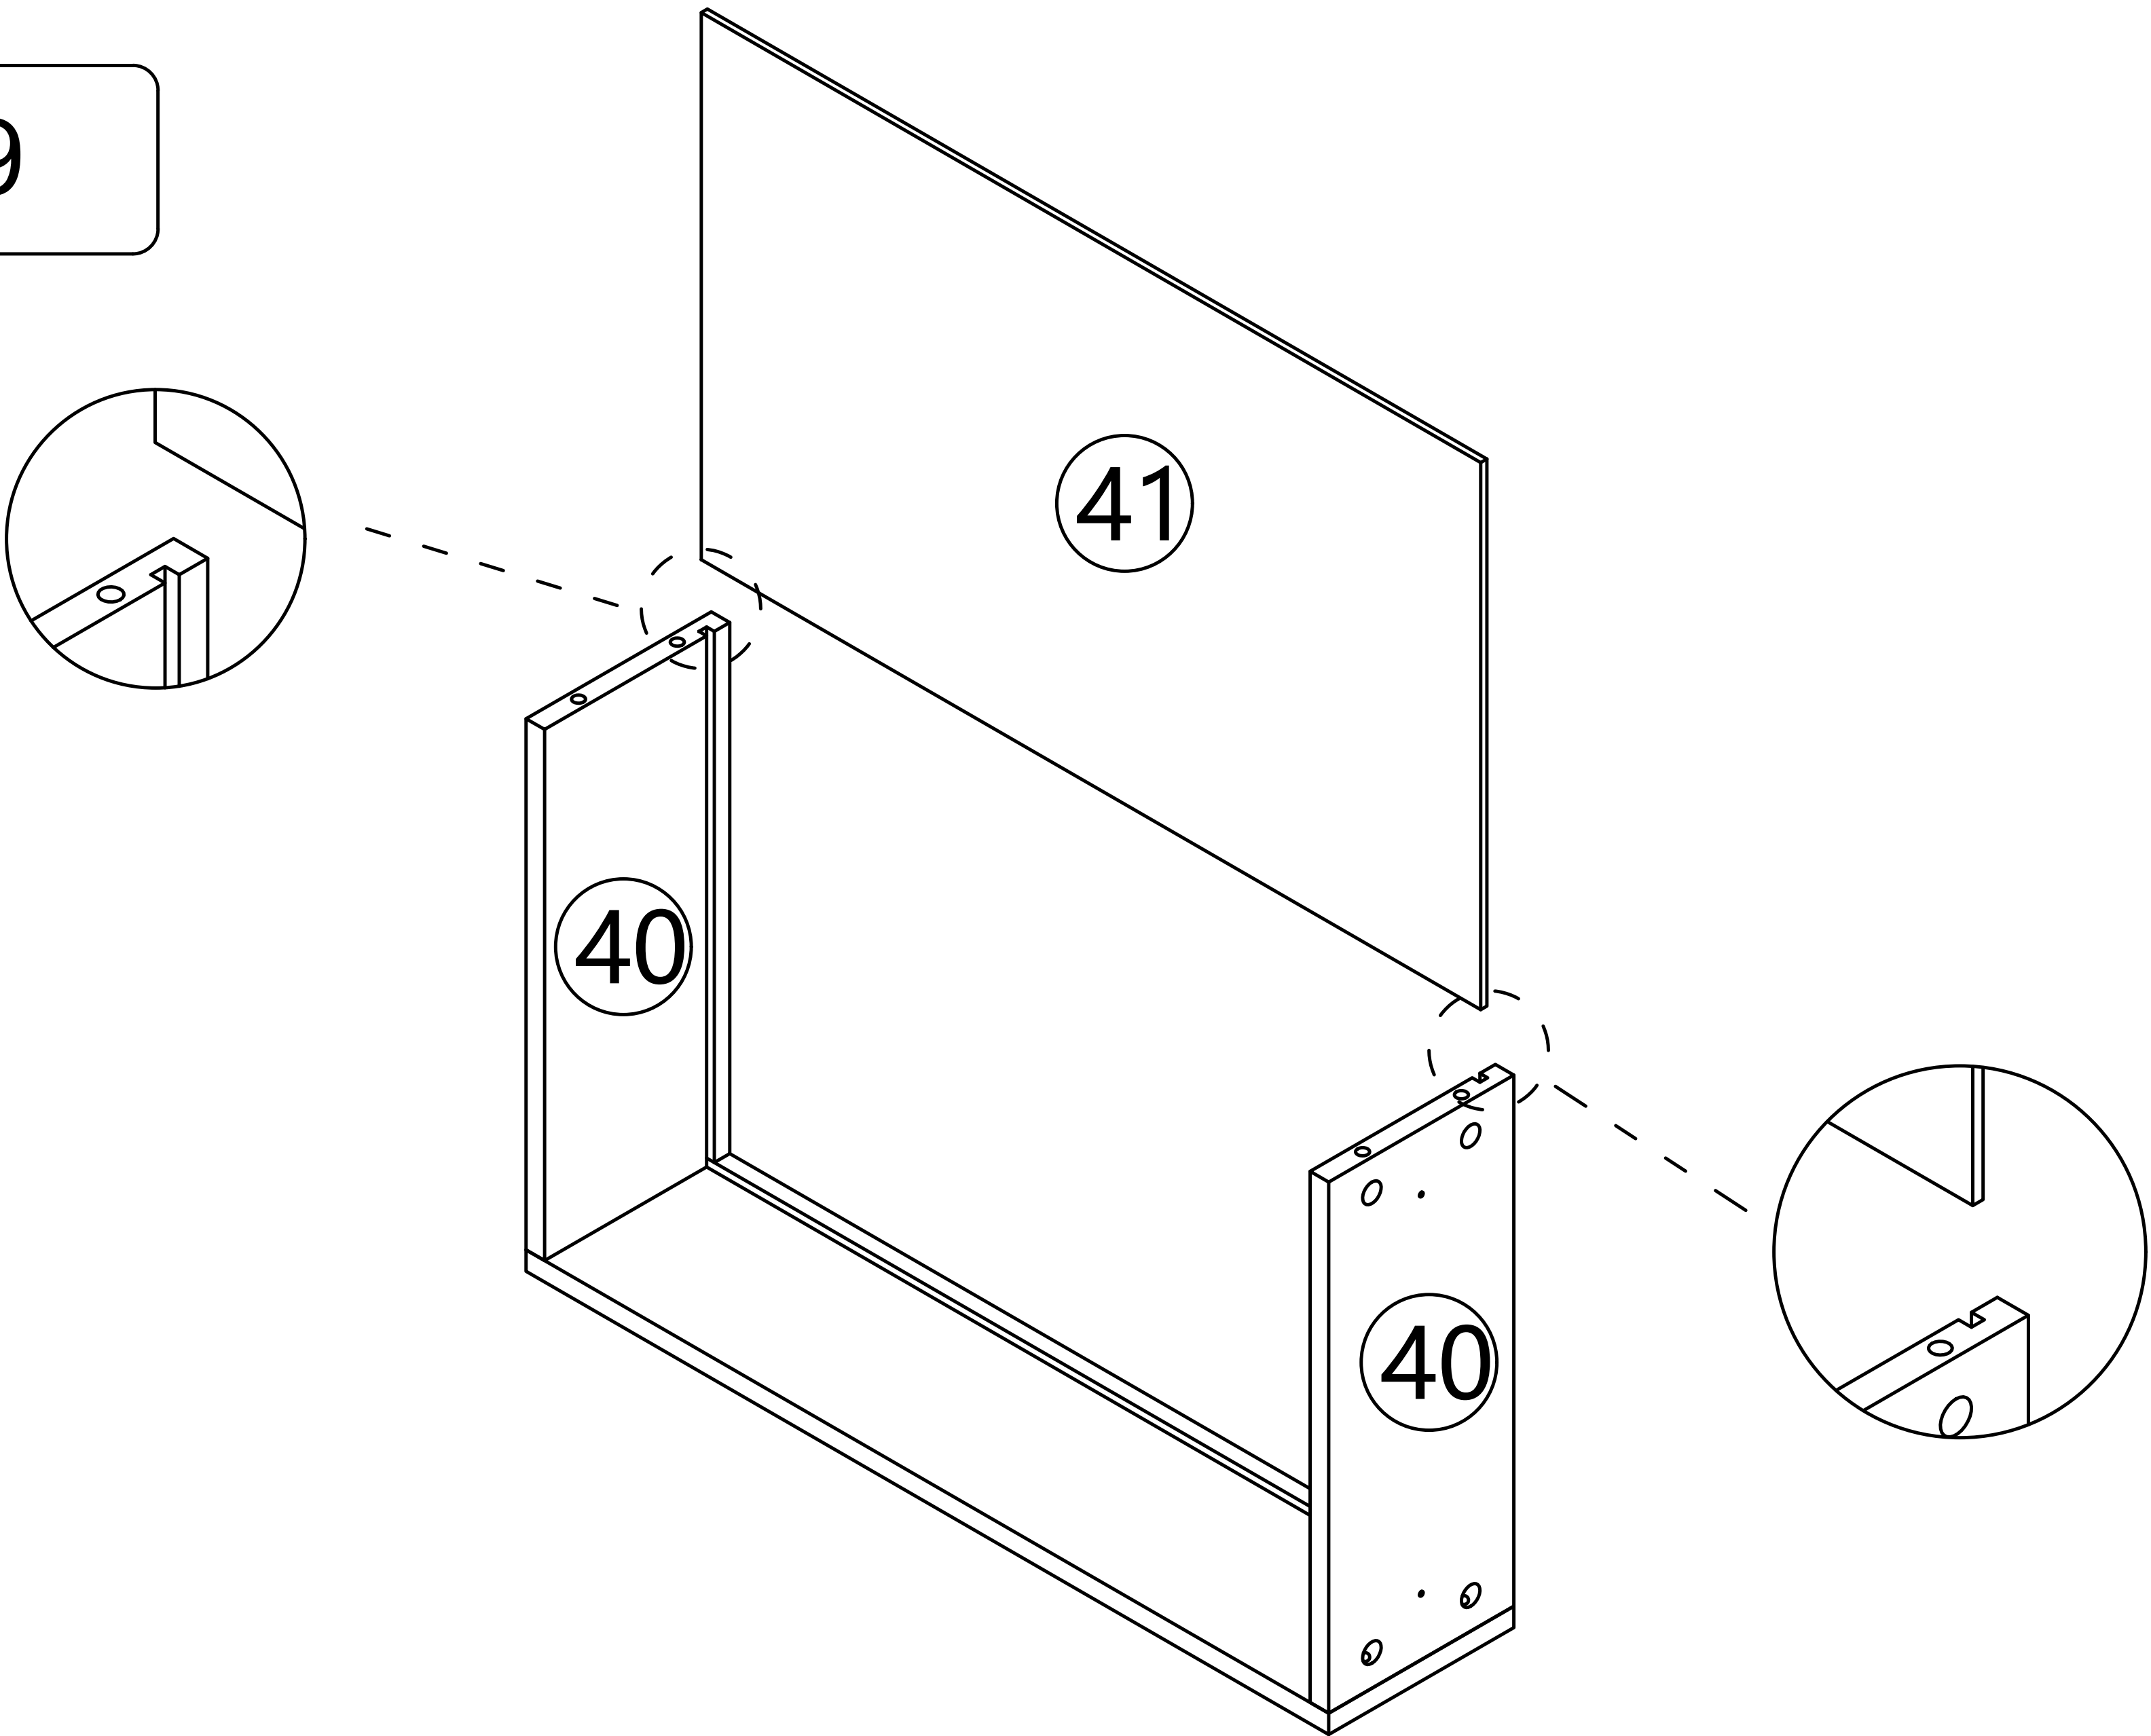



Step 10

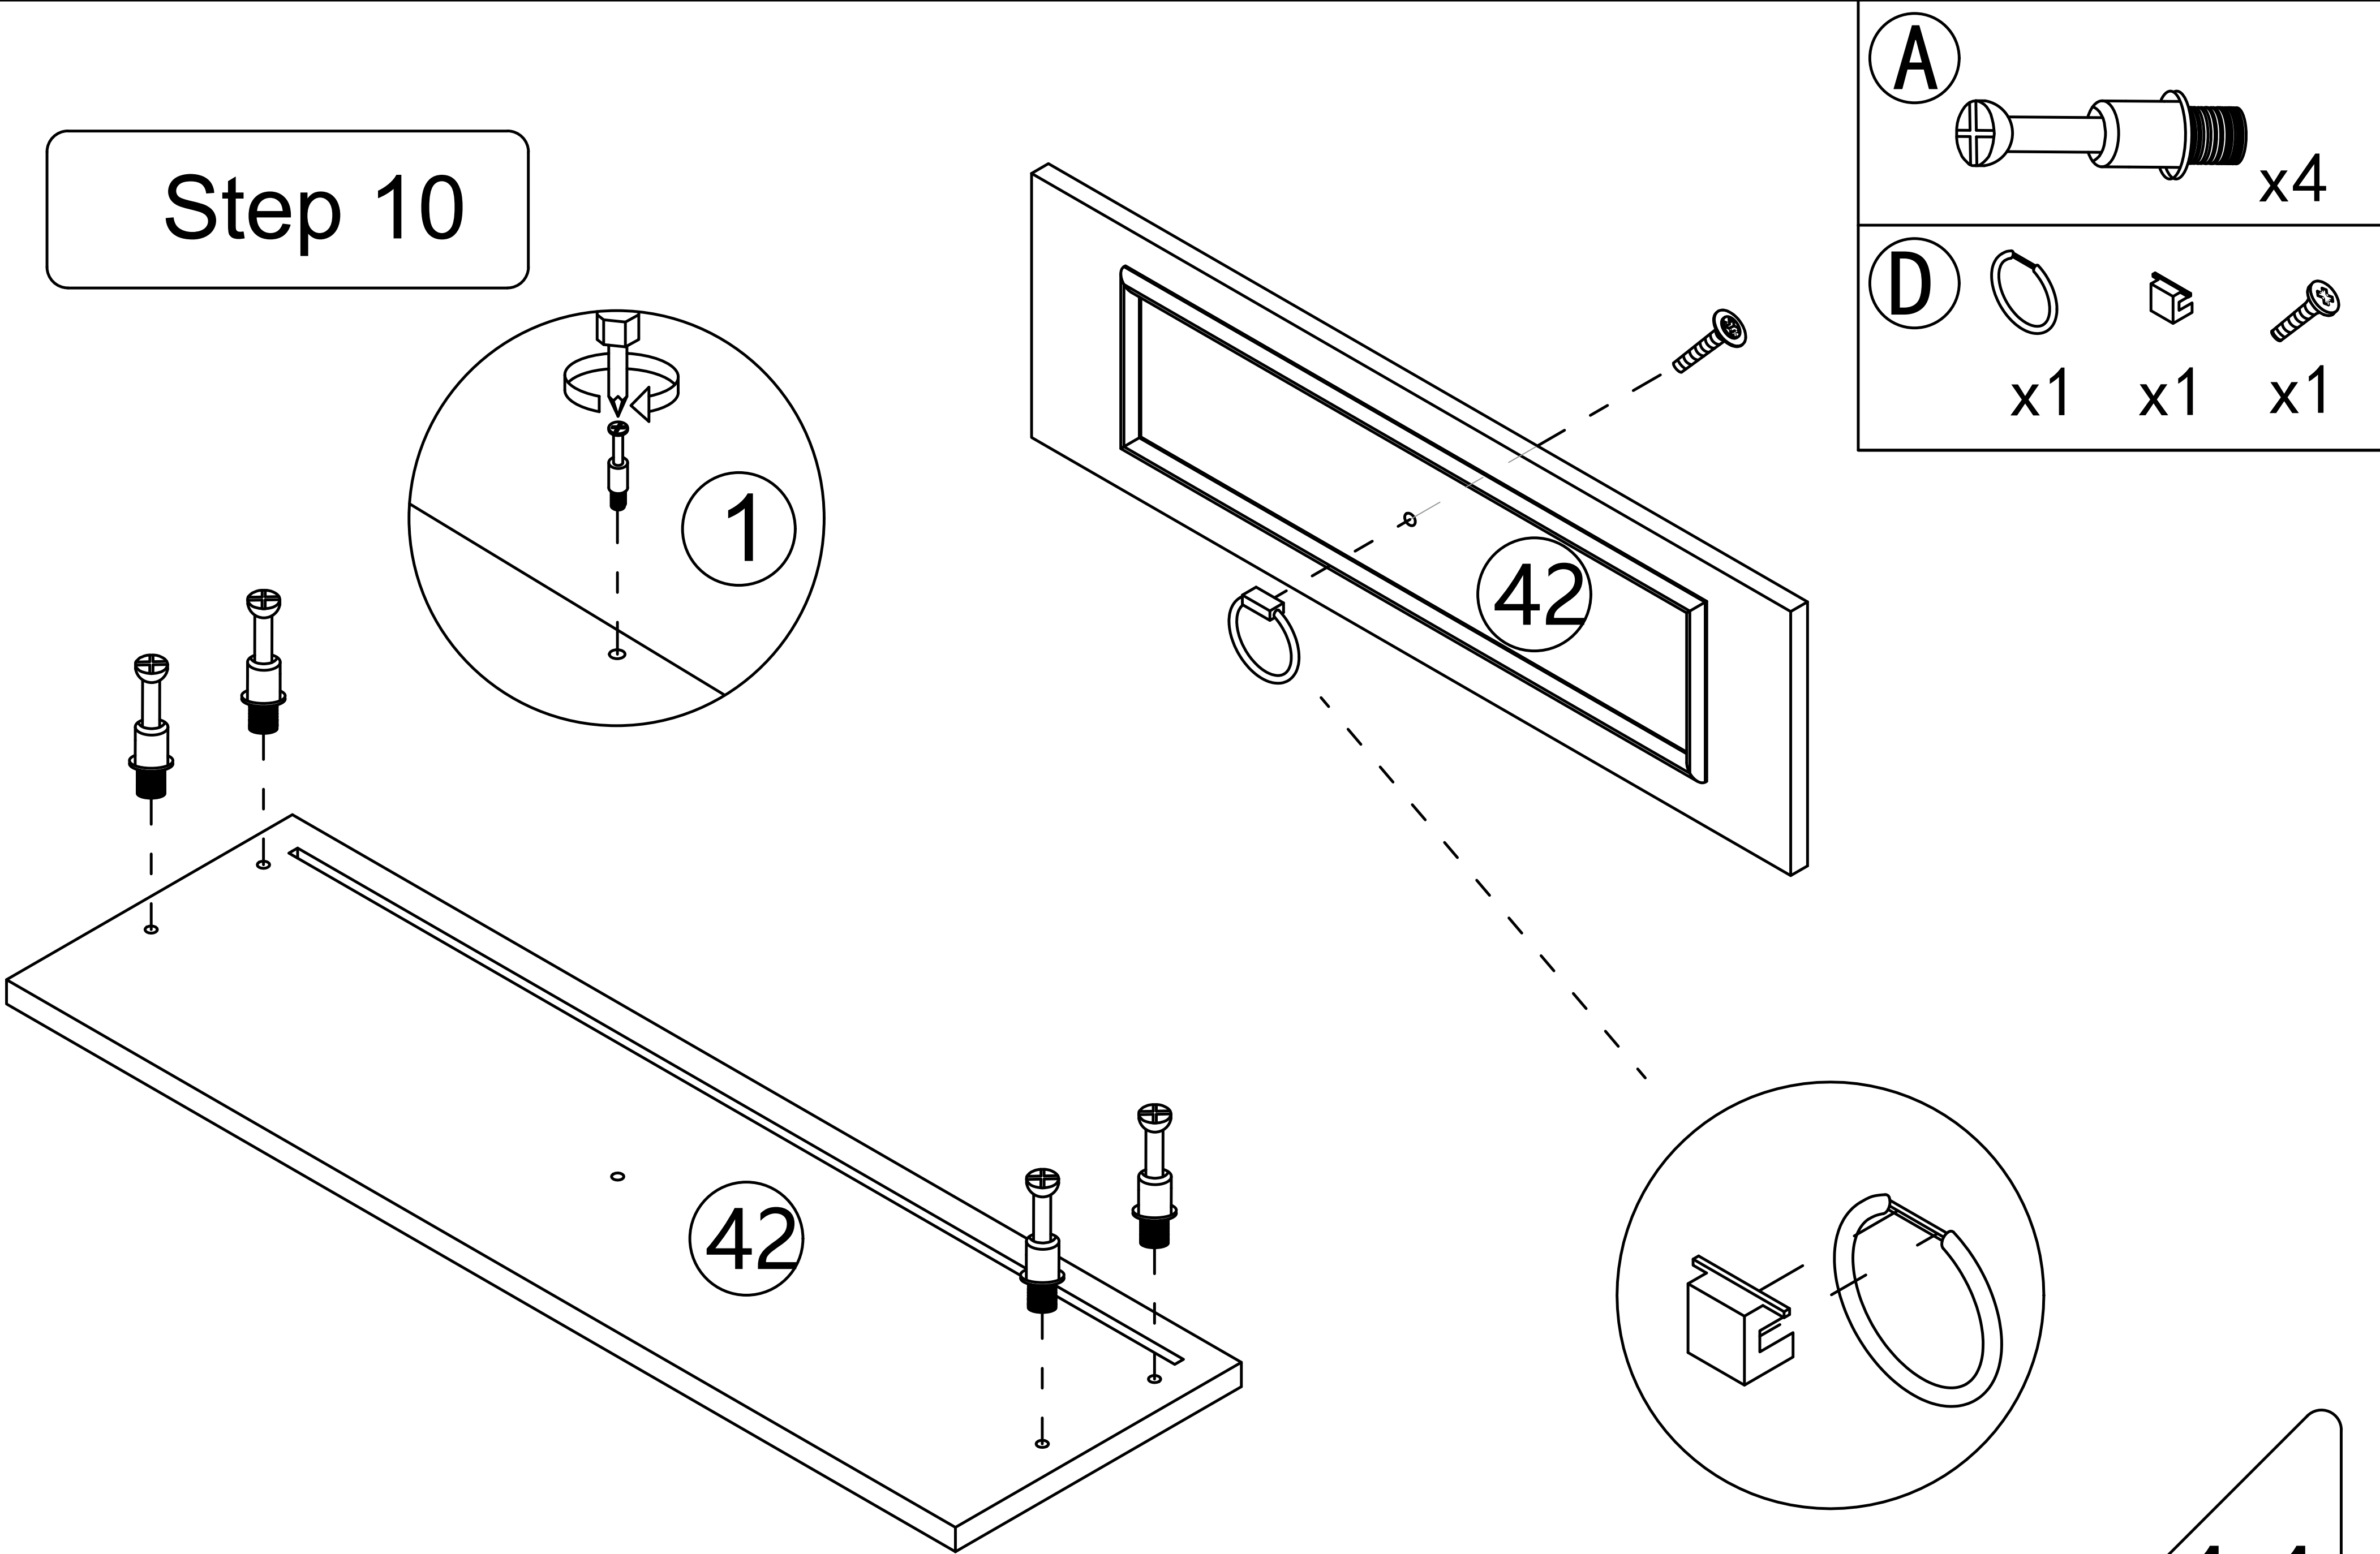


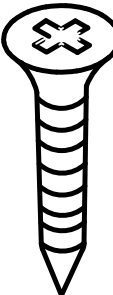



Step 11

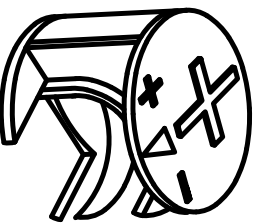**B**  x8


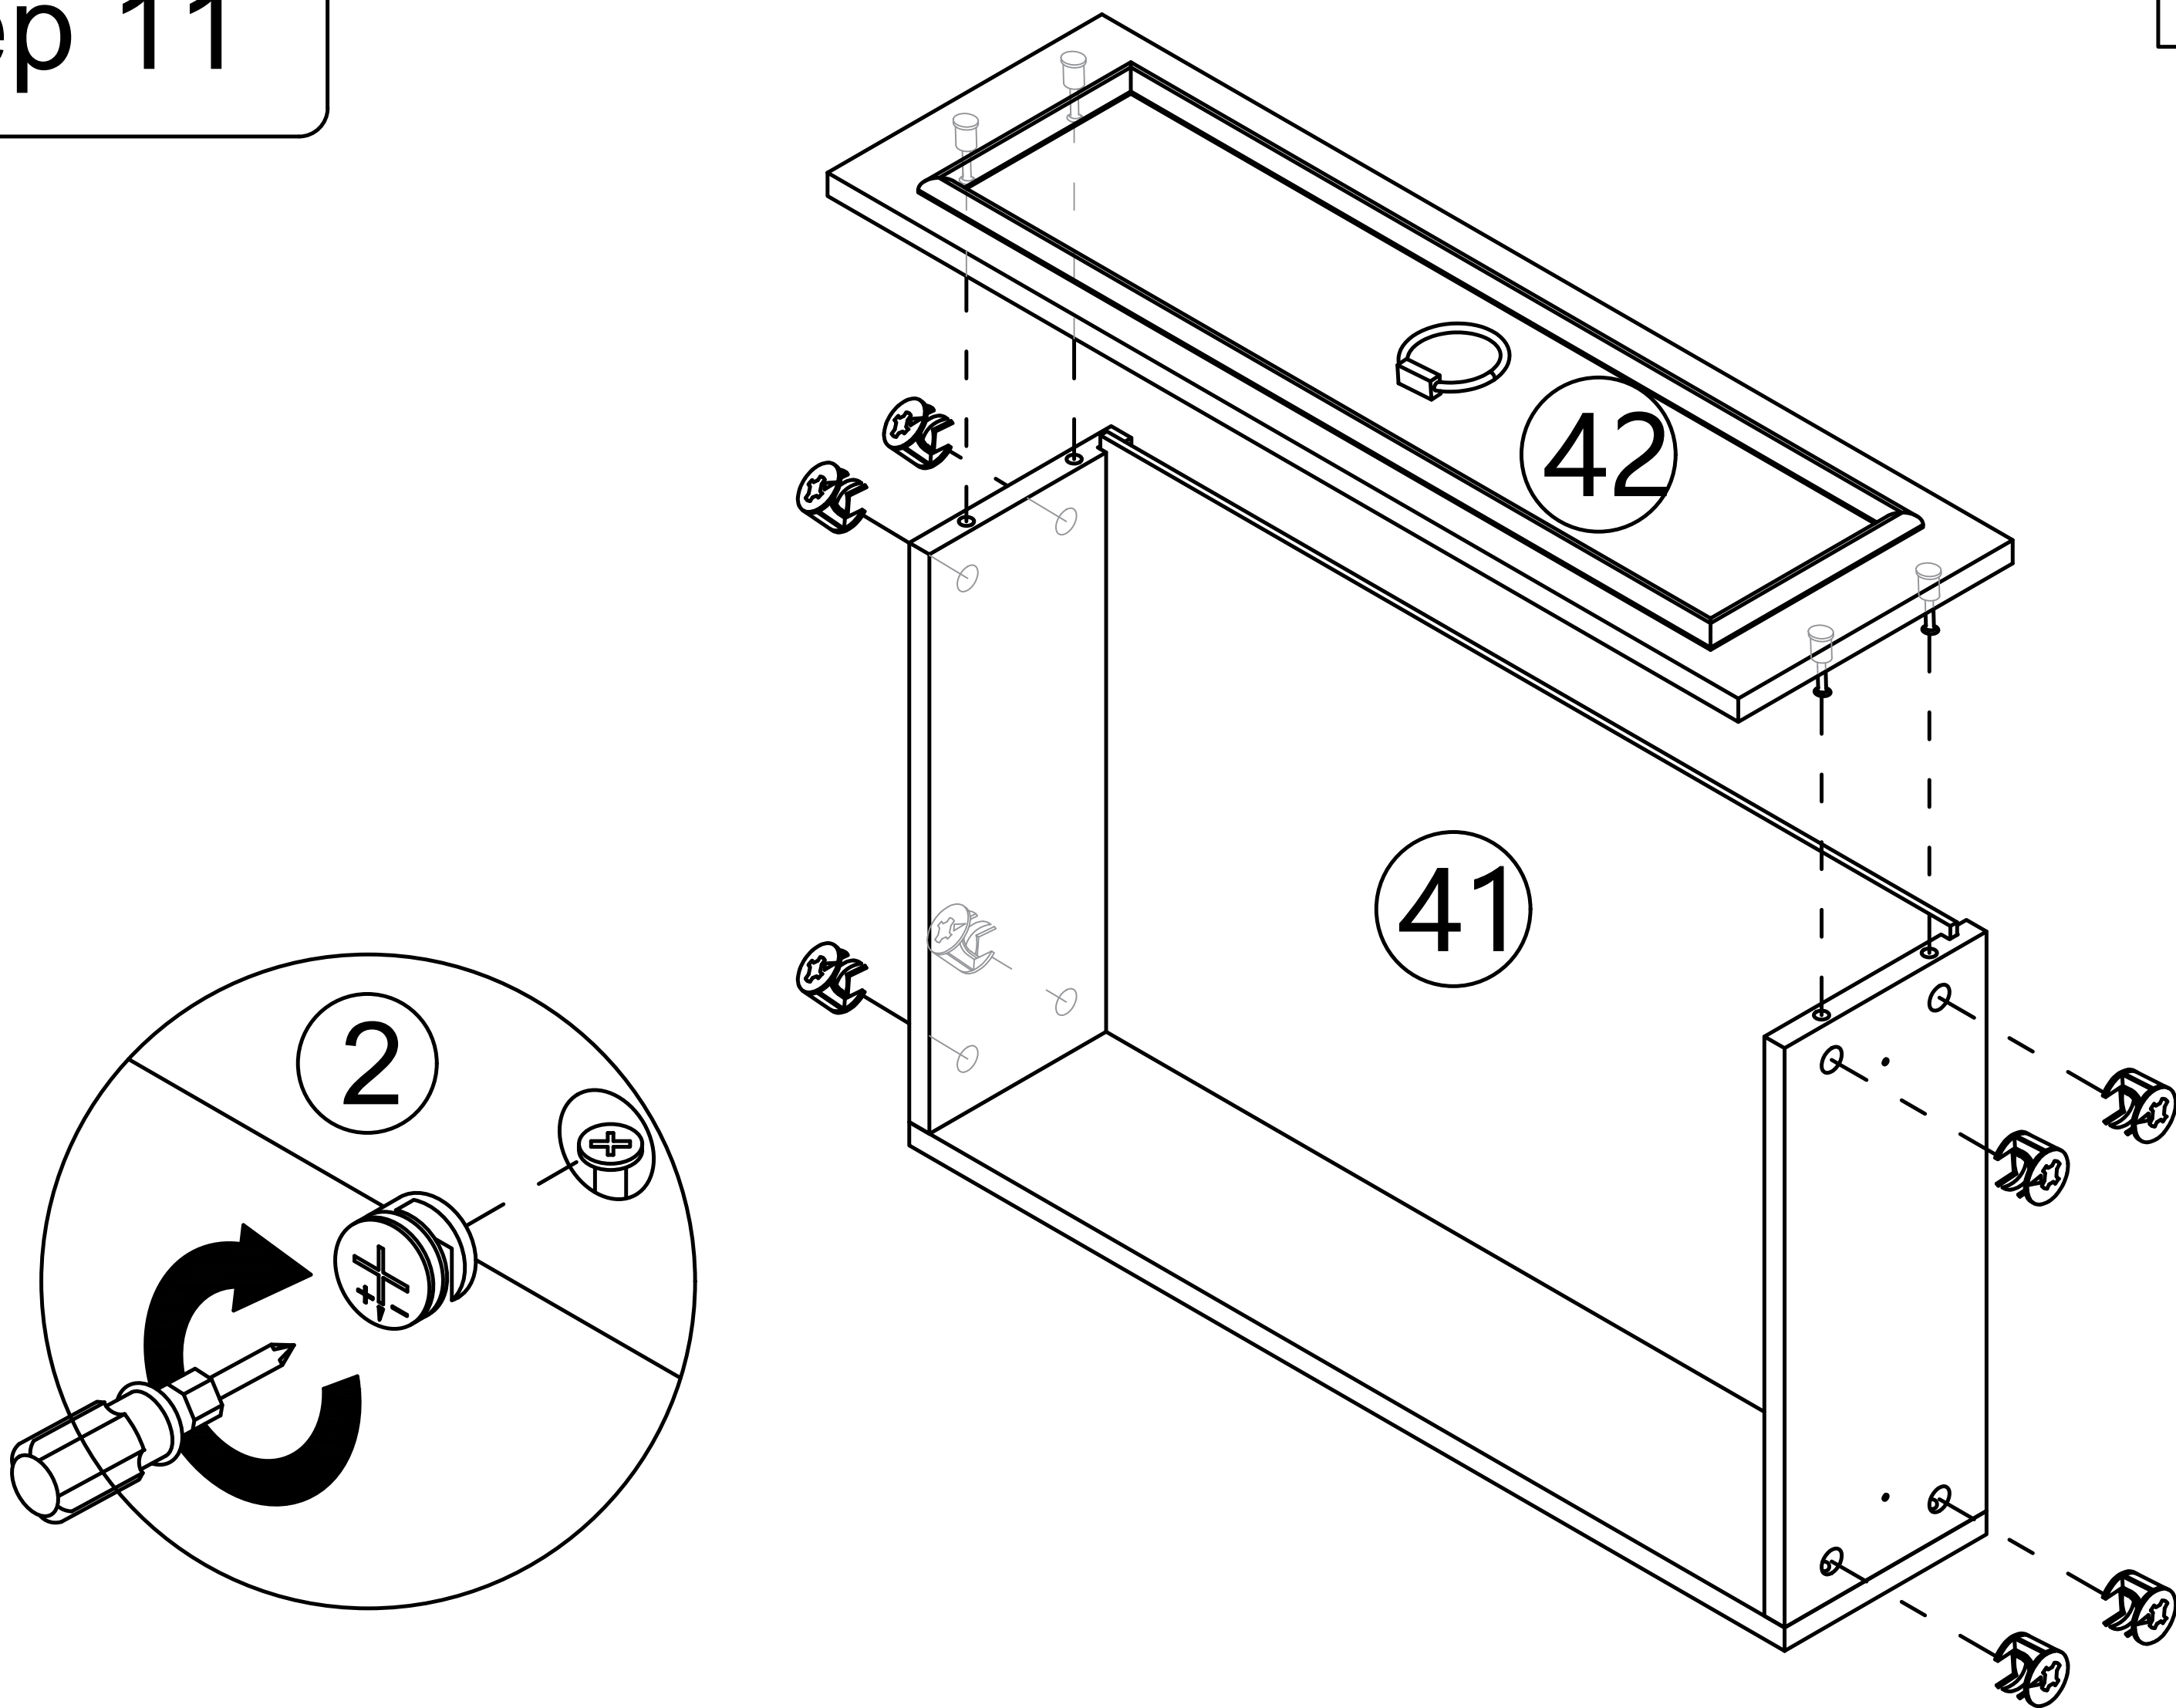


Step 12



**F**  x2  
 x4

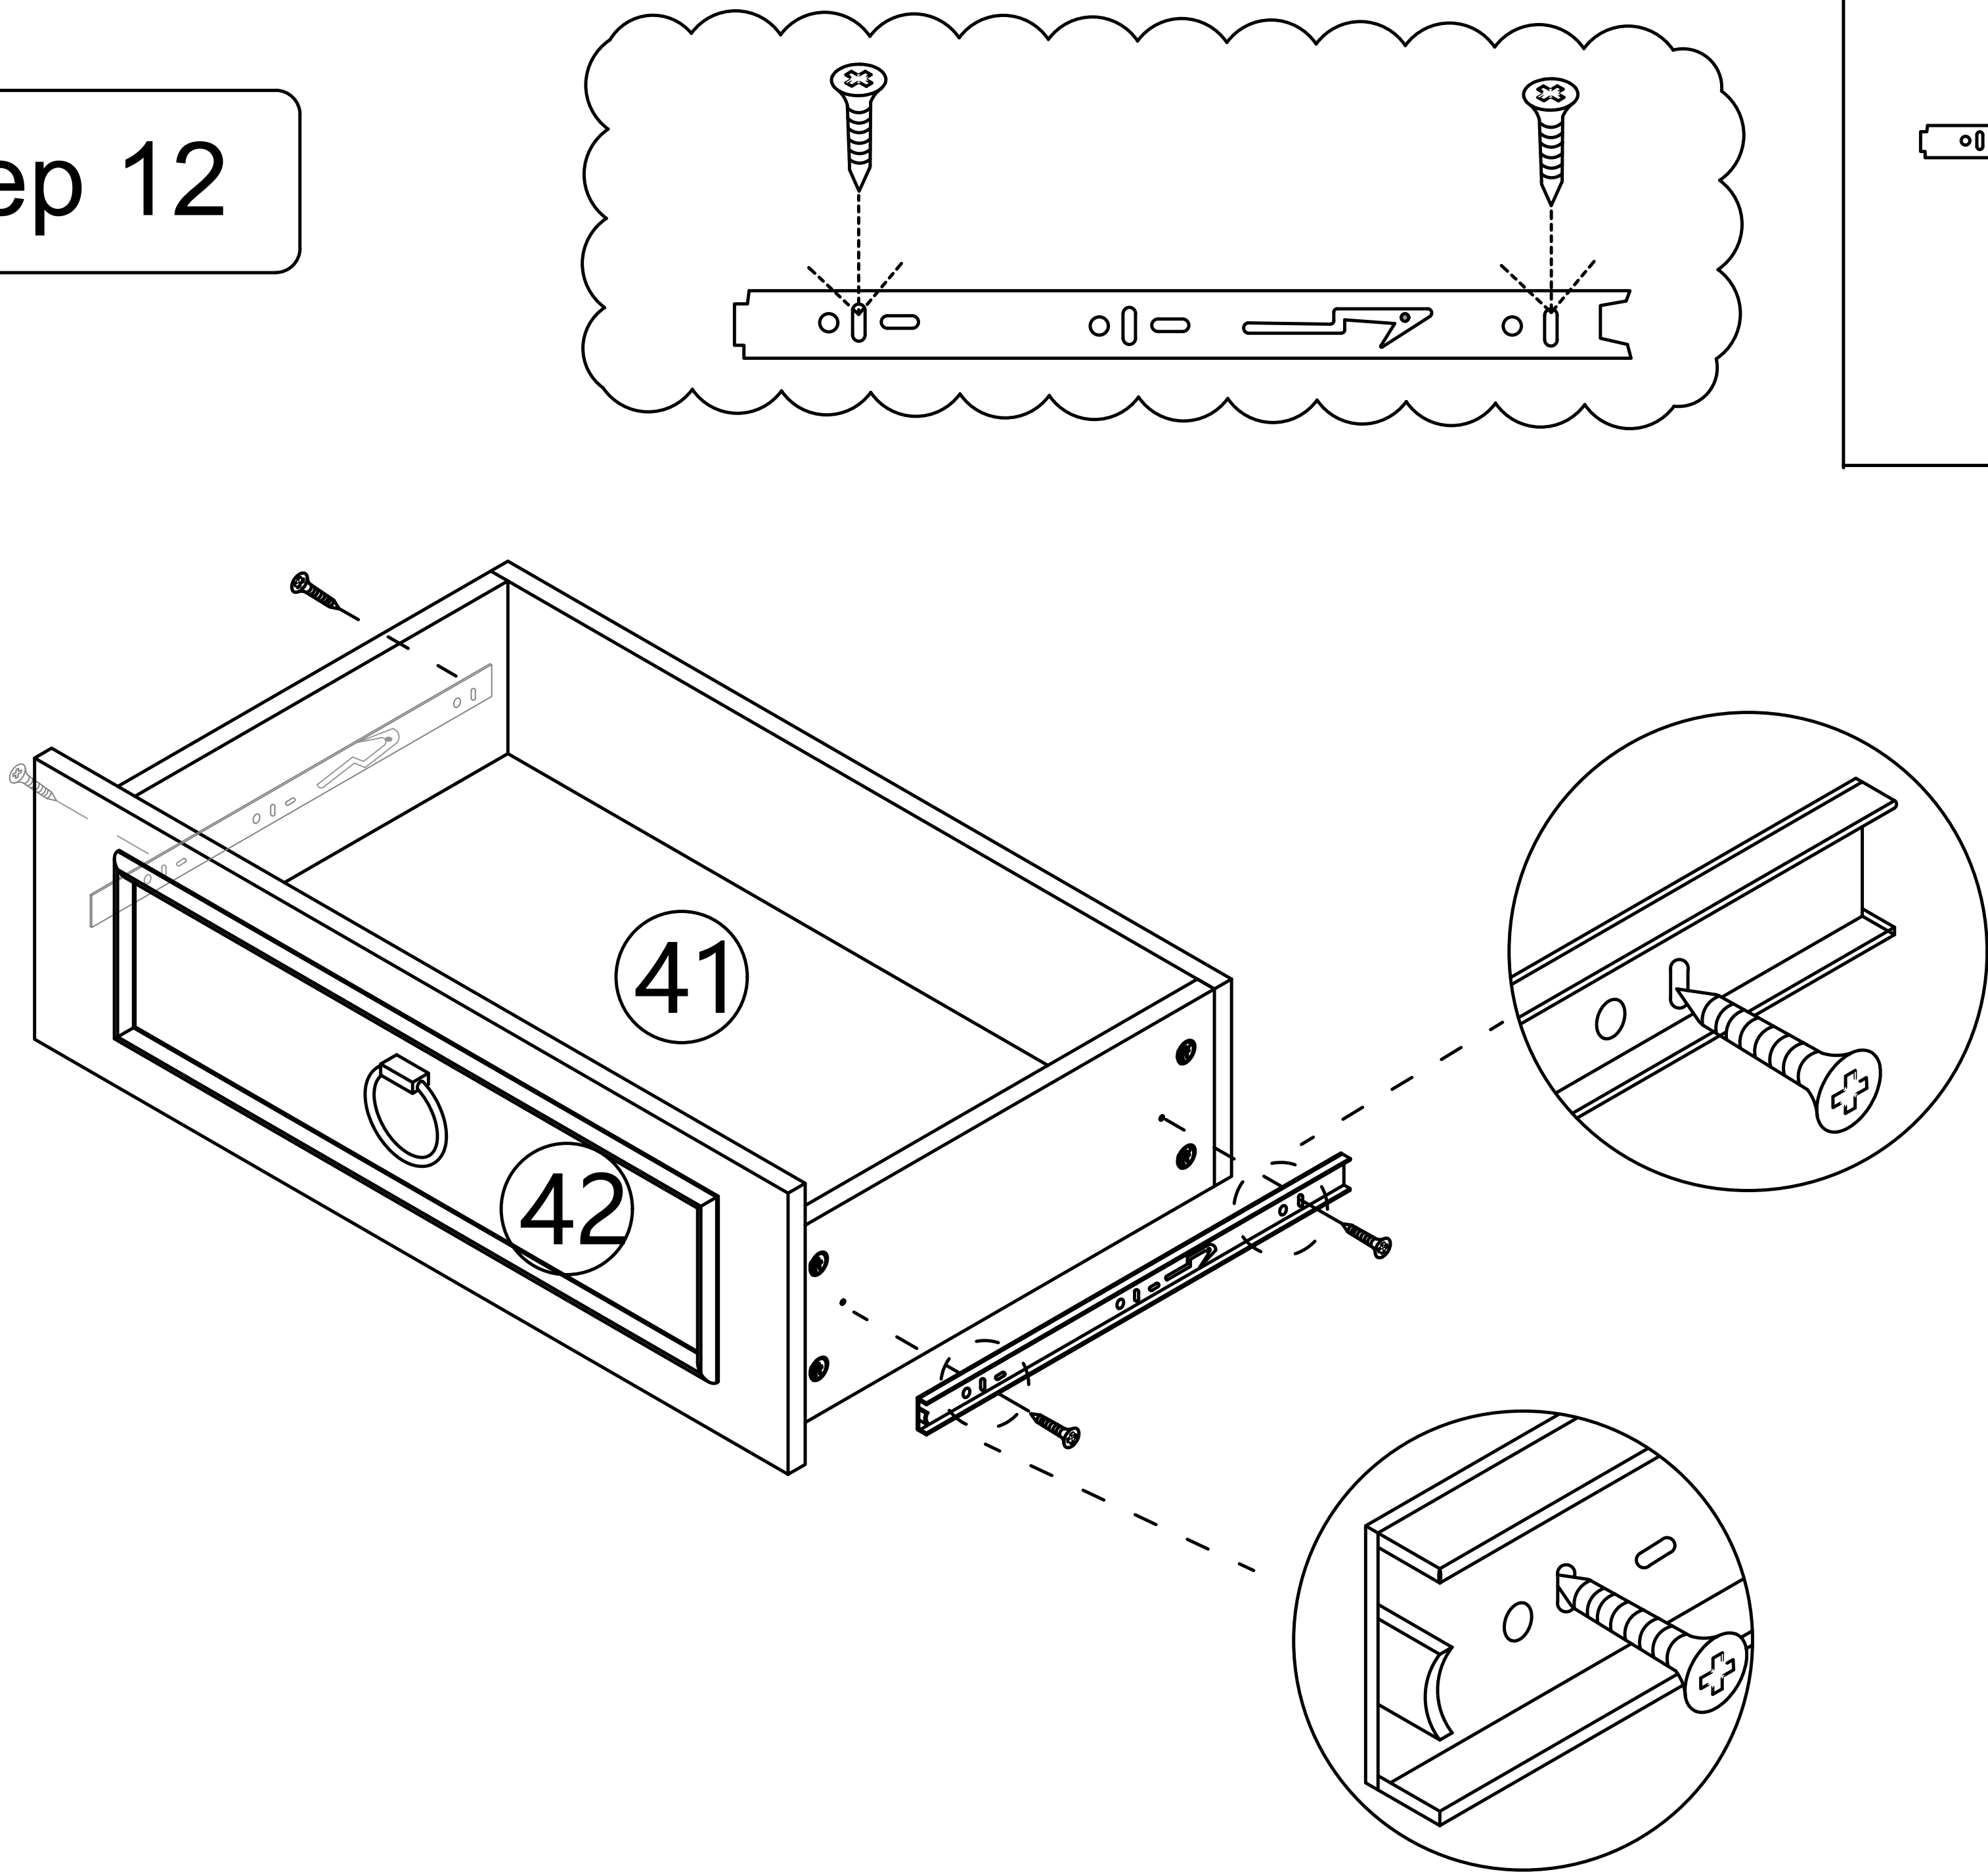

Step 13

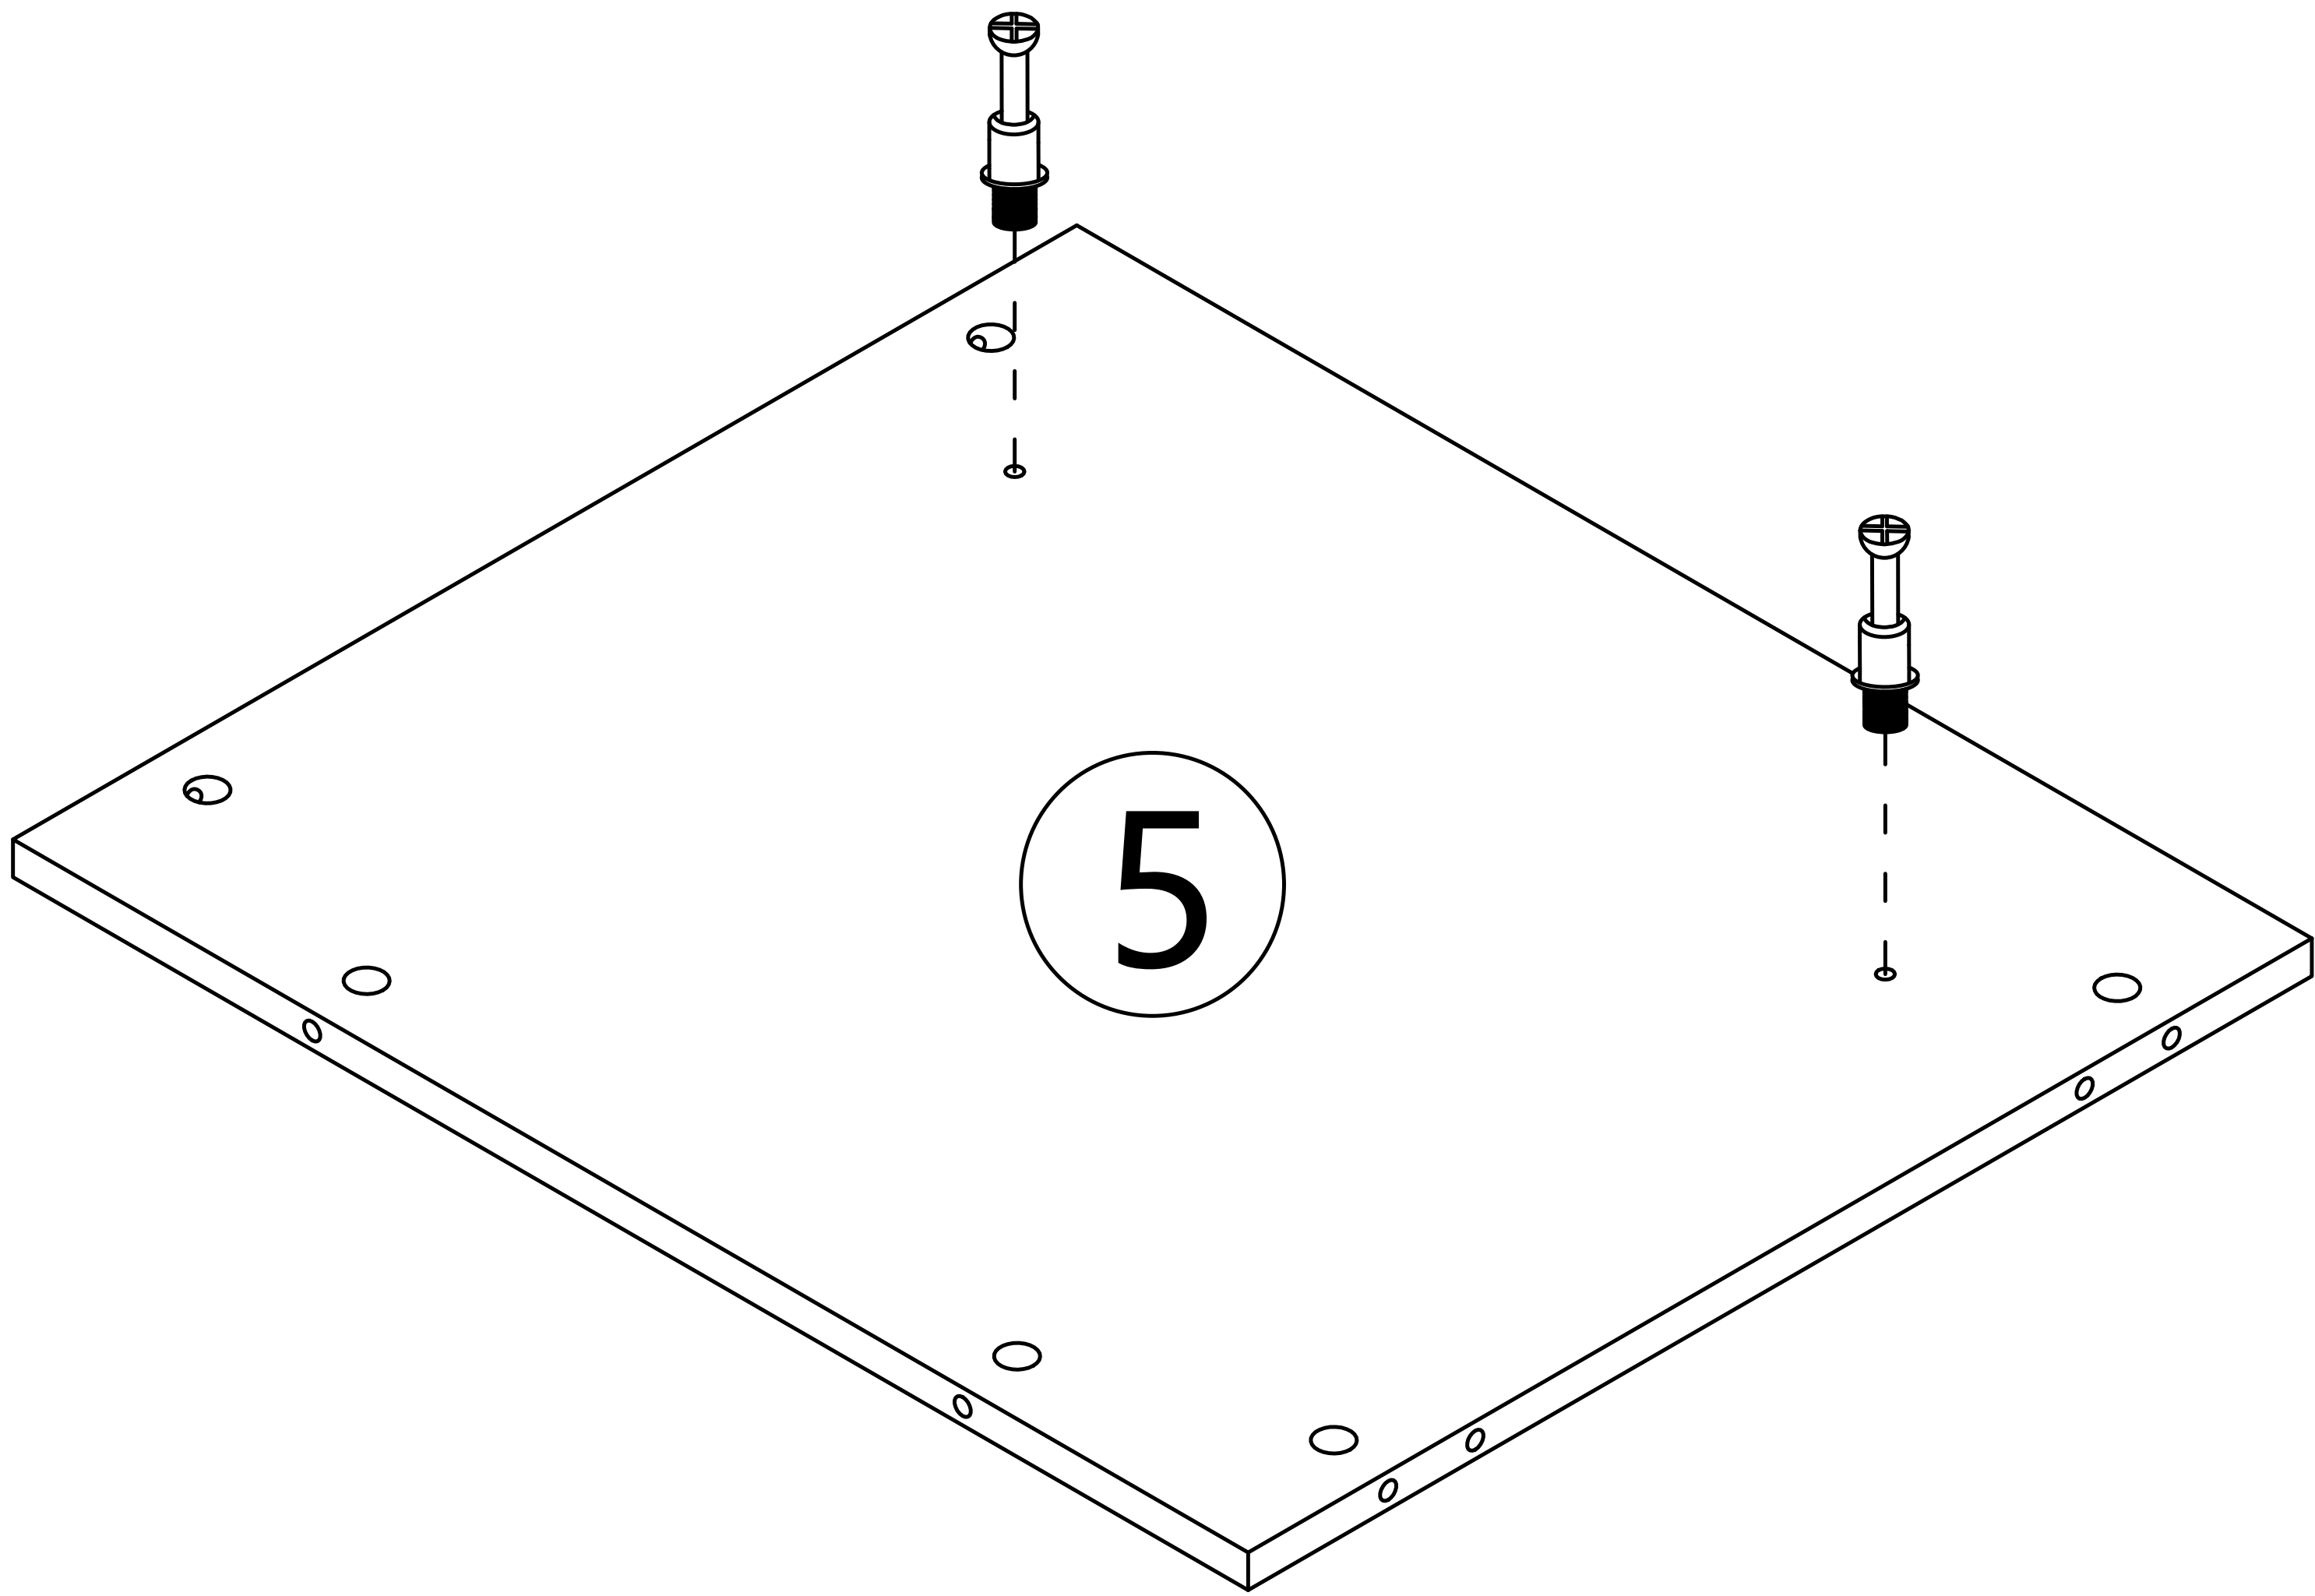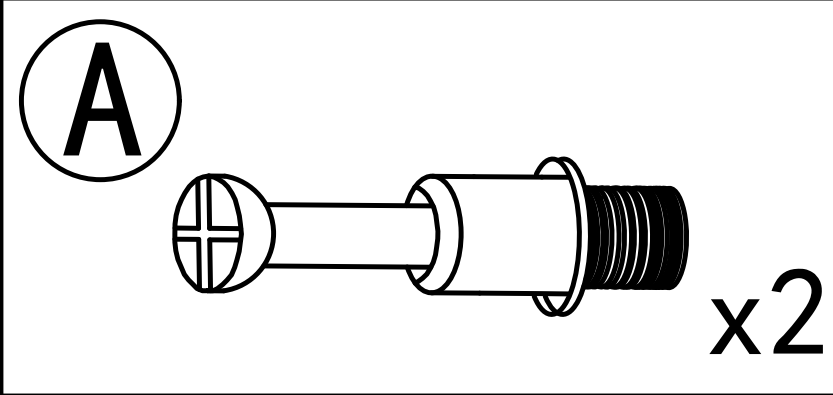


Step 14

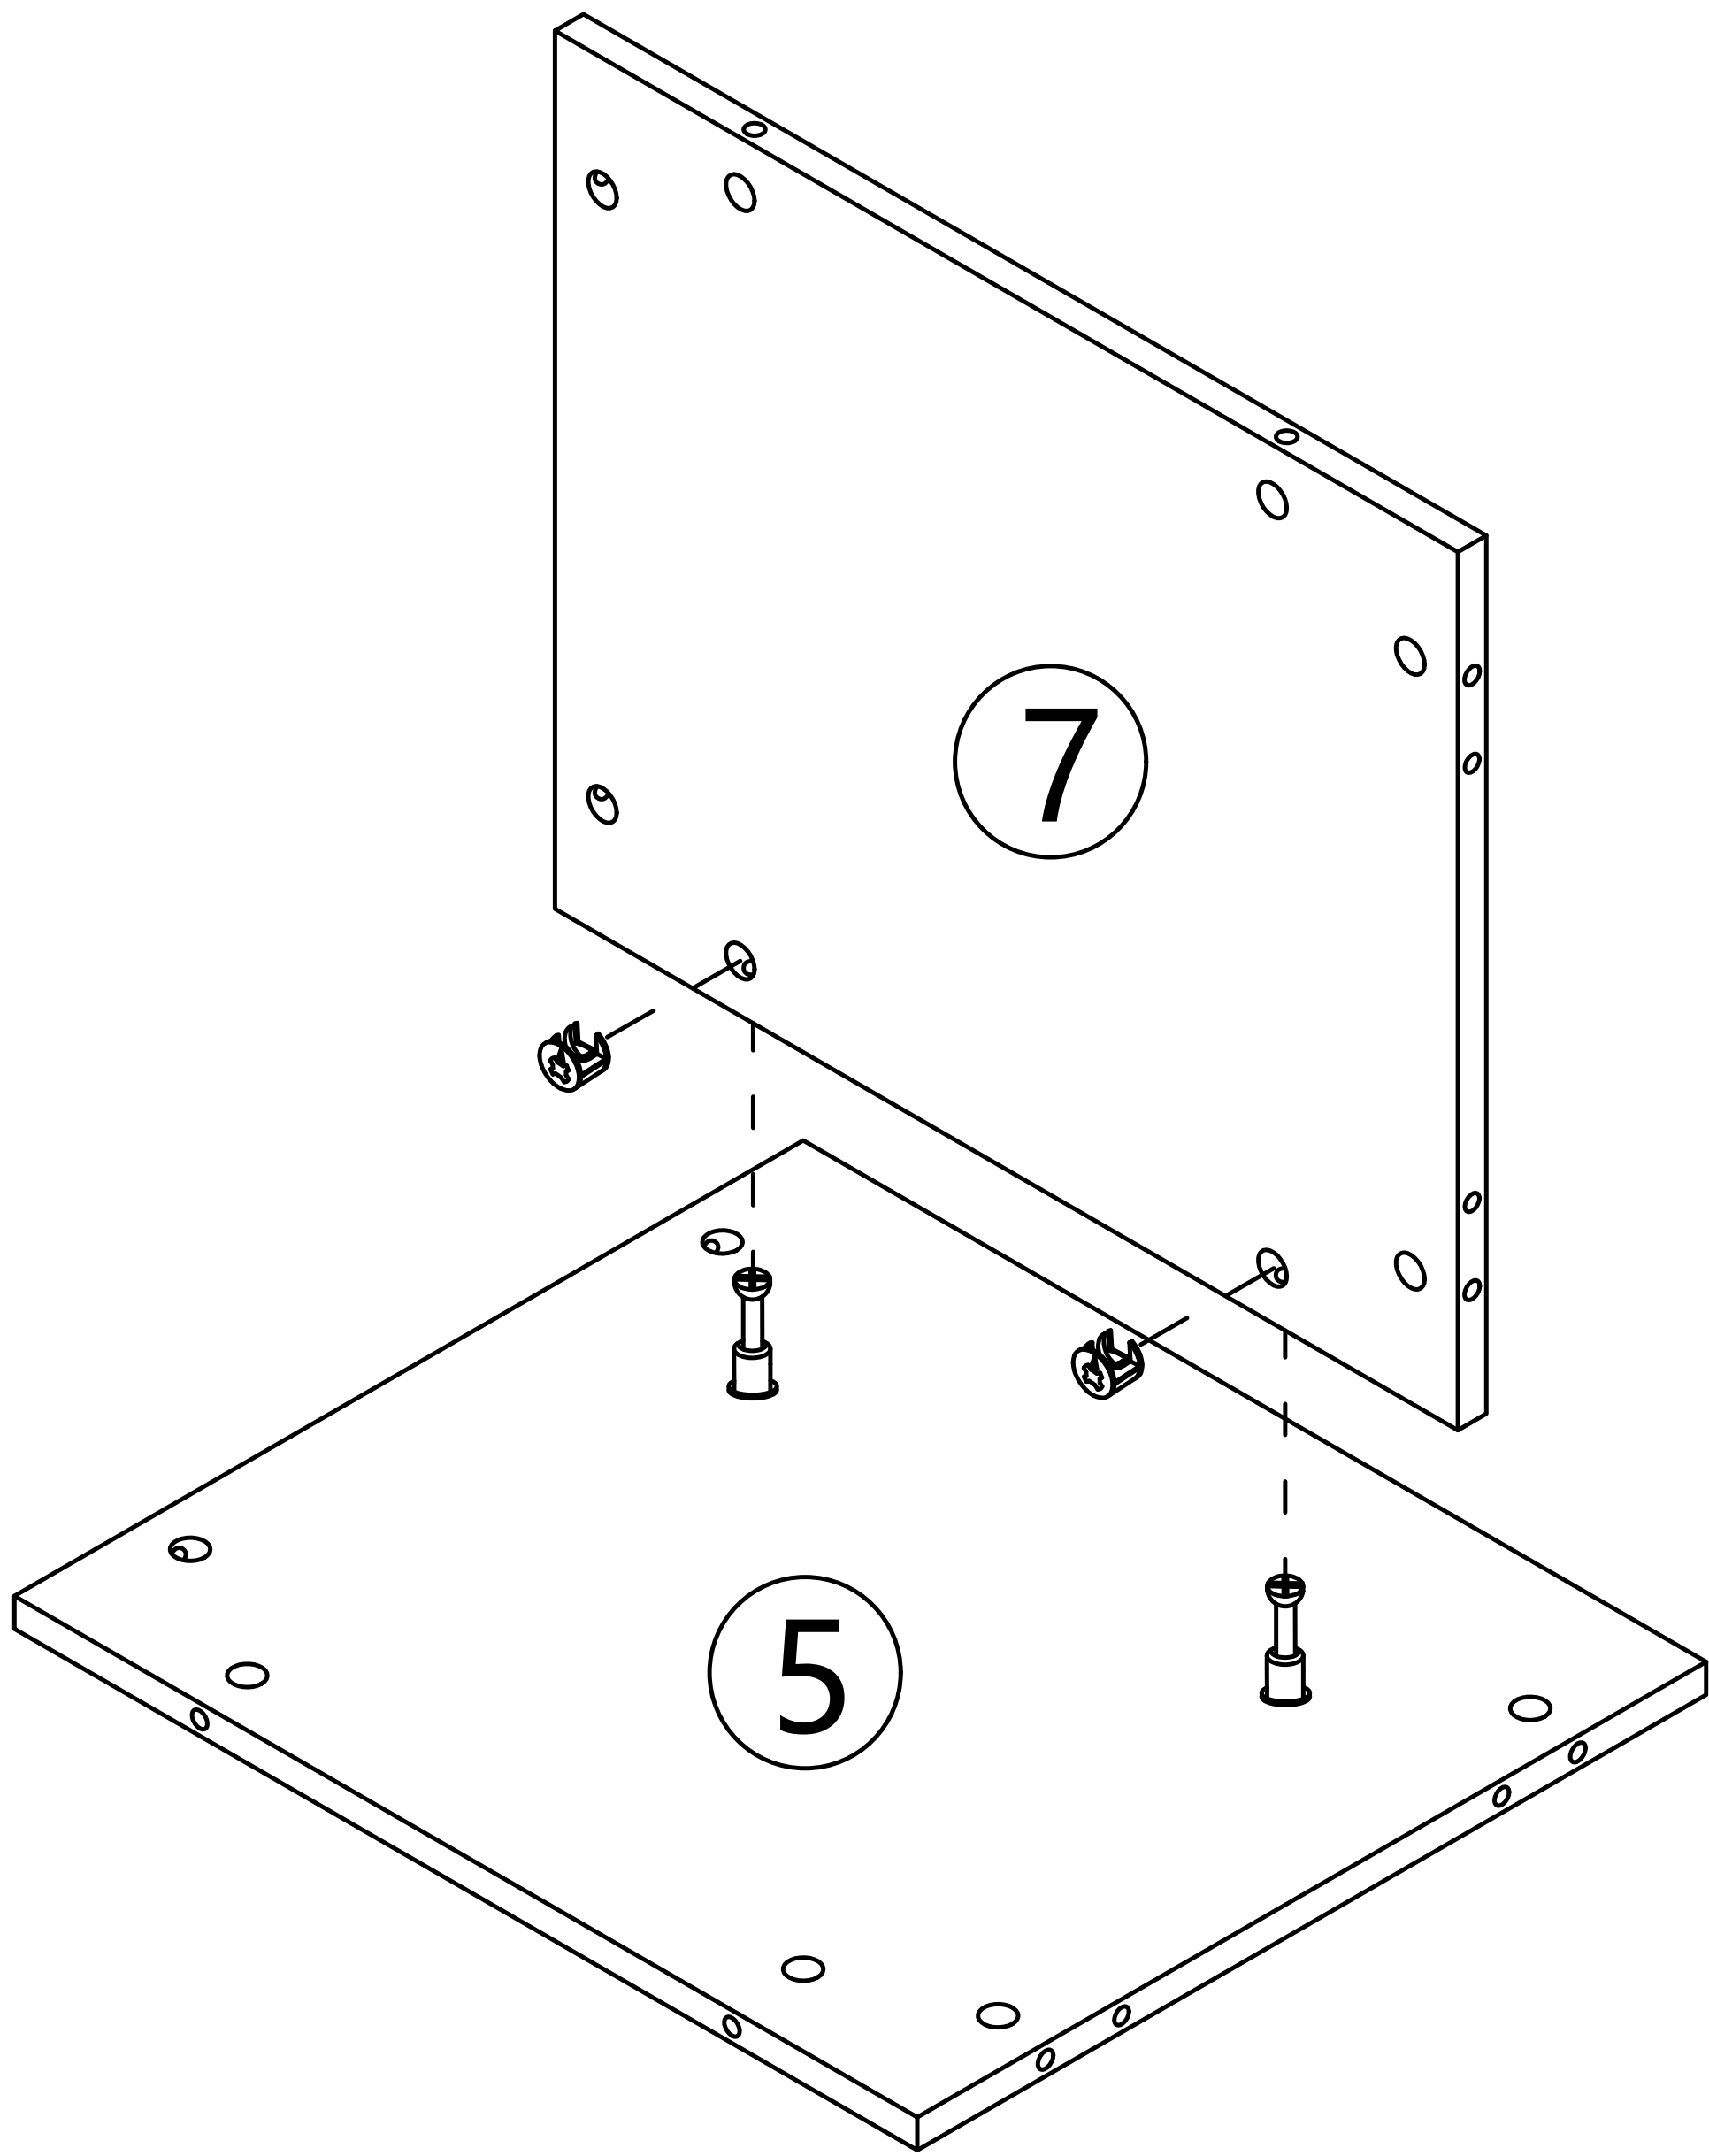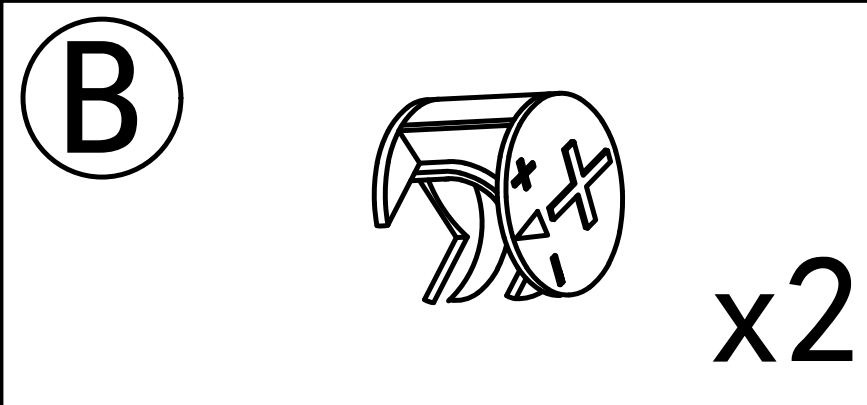


## Step 15

F

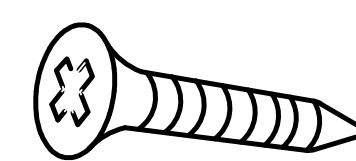


x2

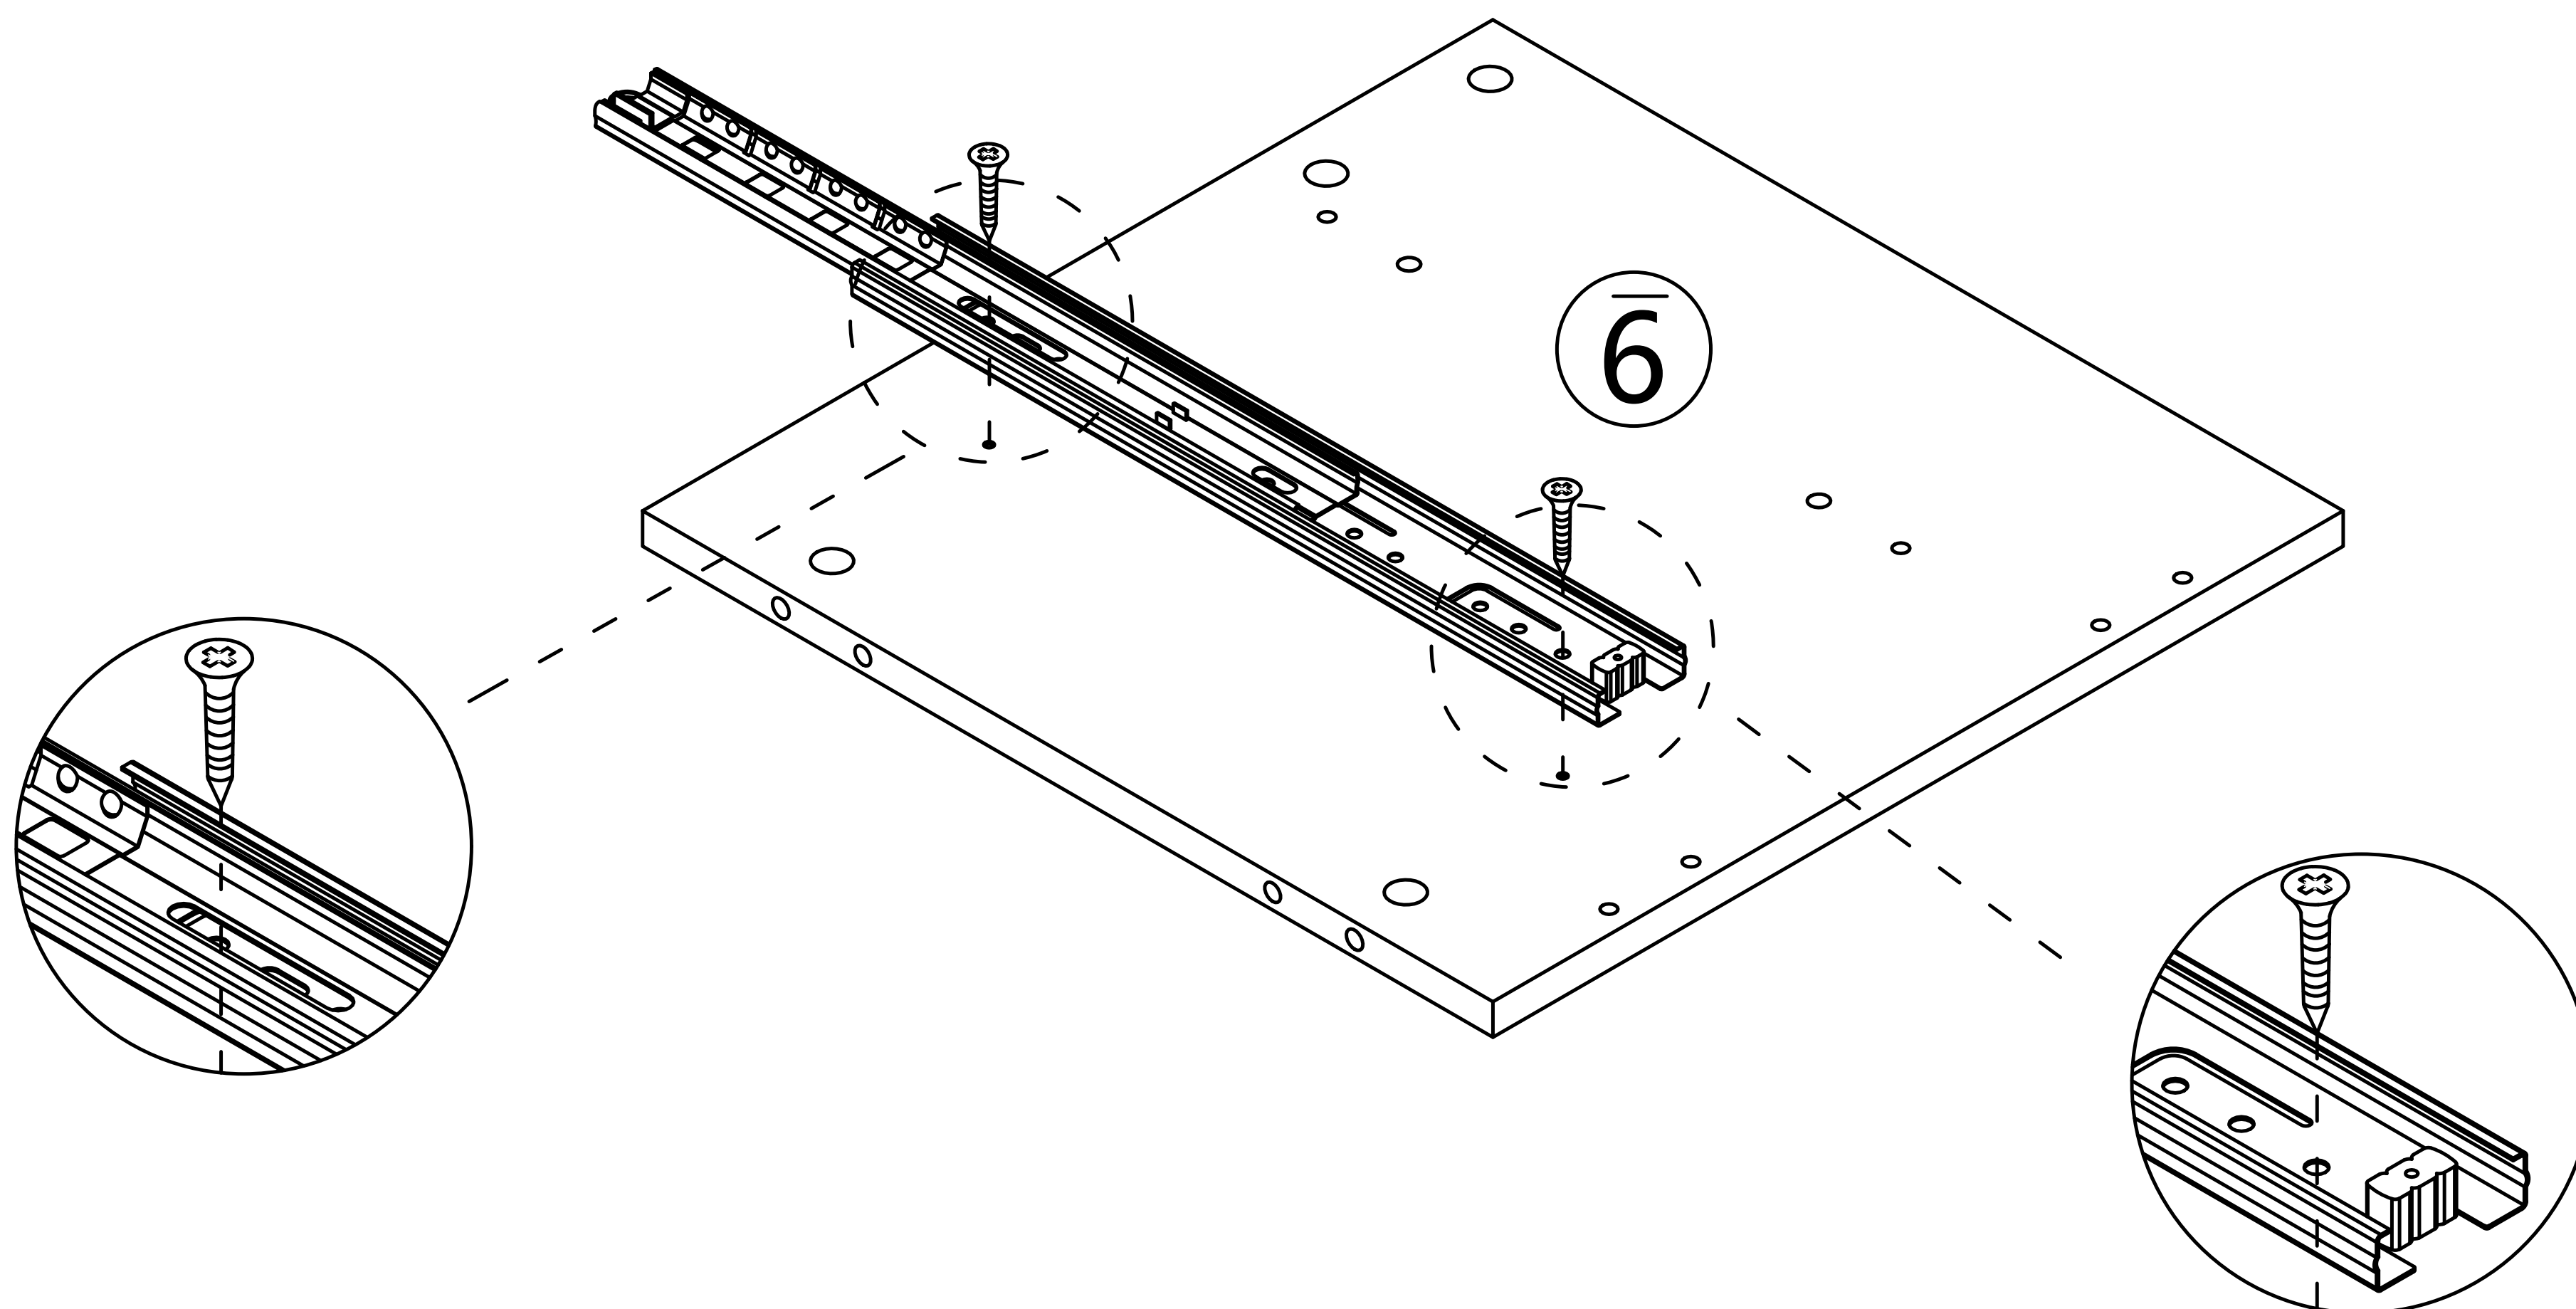


## Step 16

F

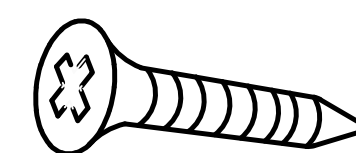




x1

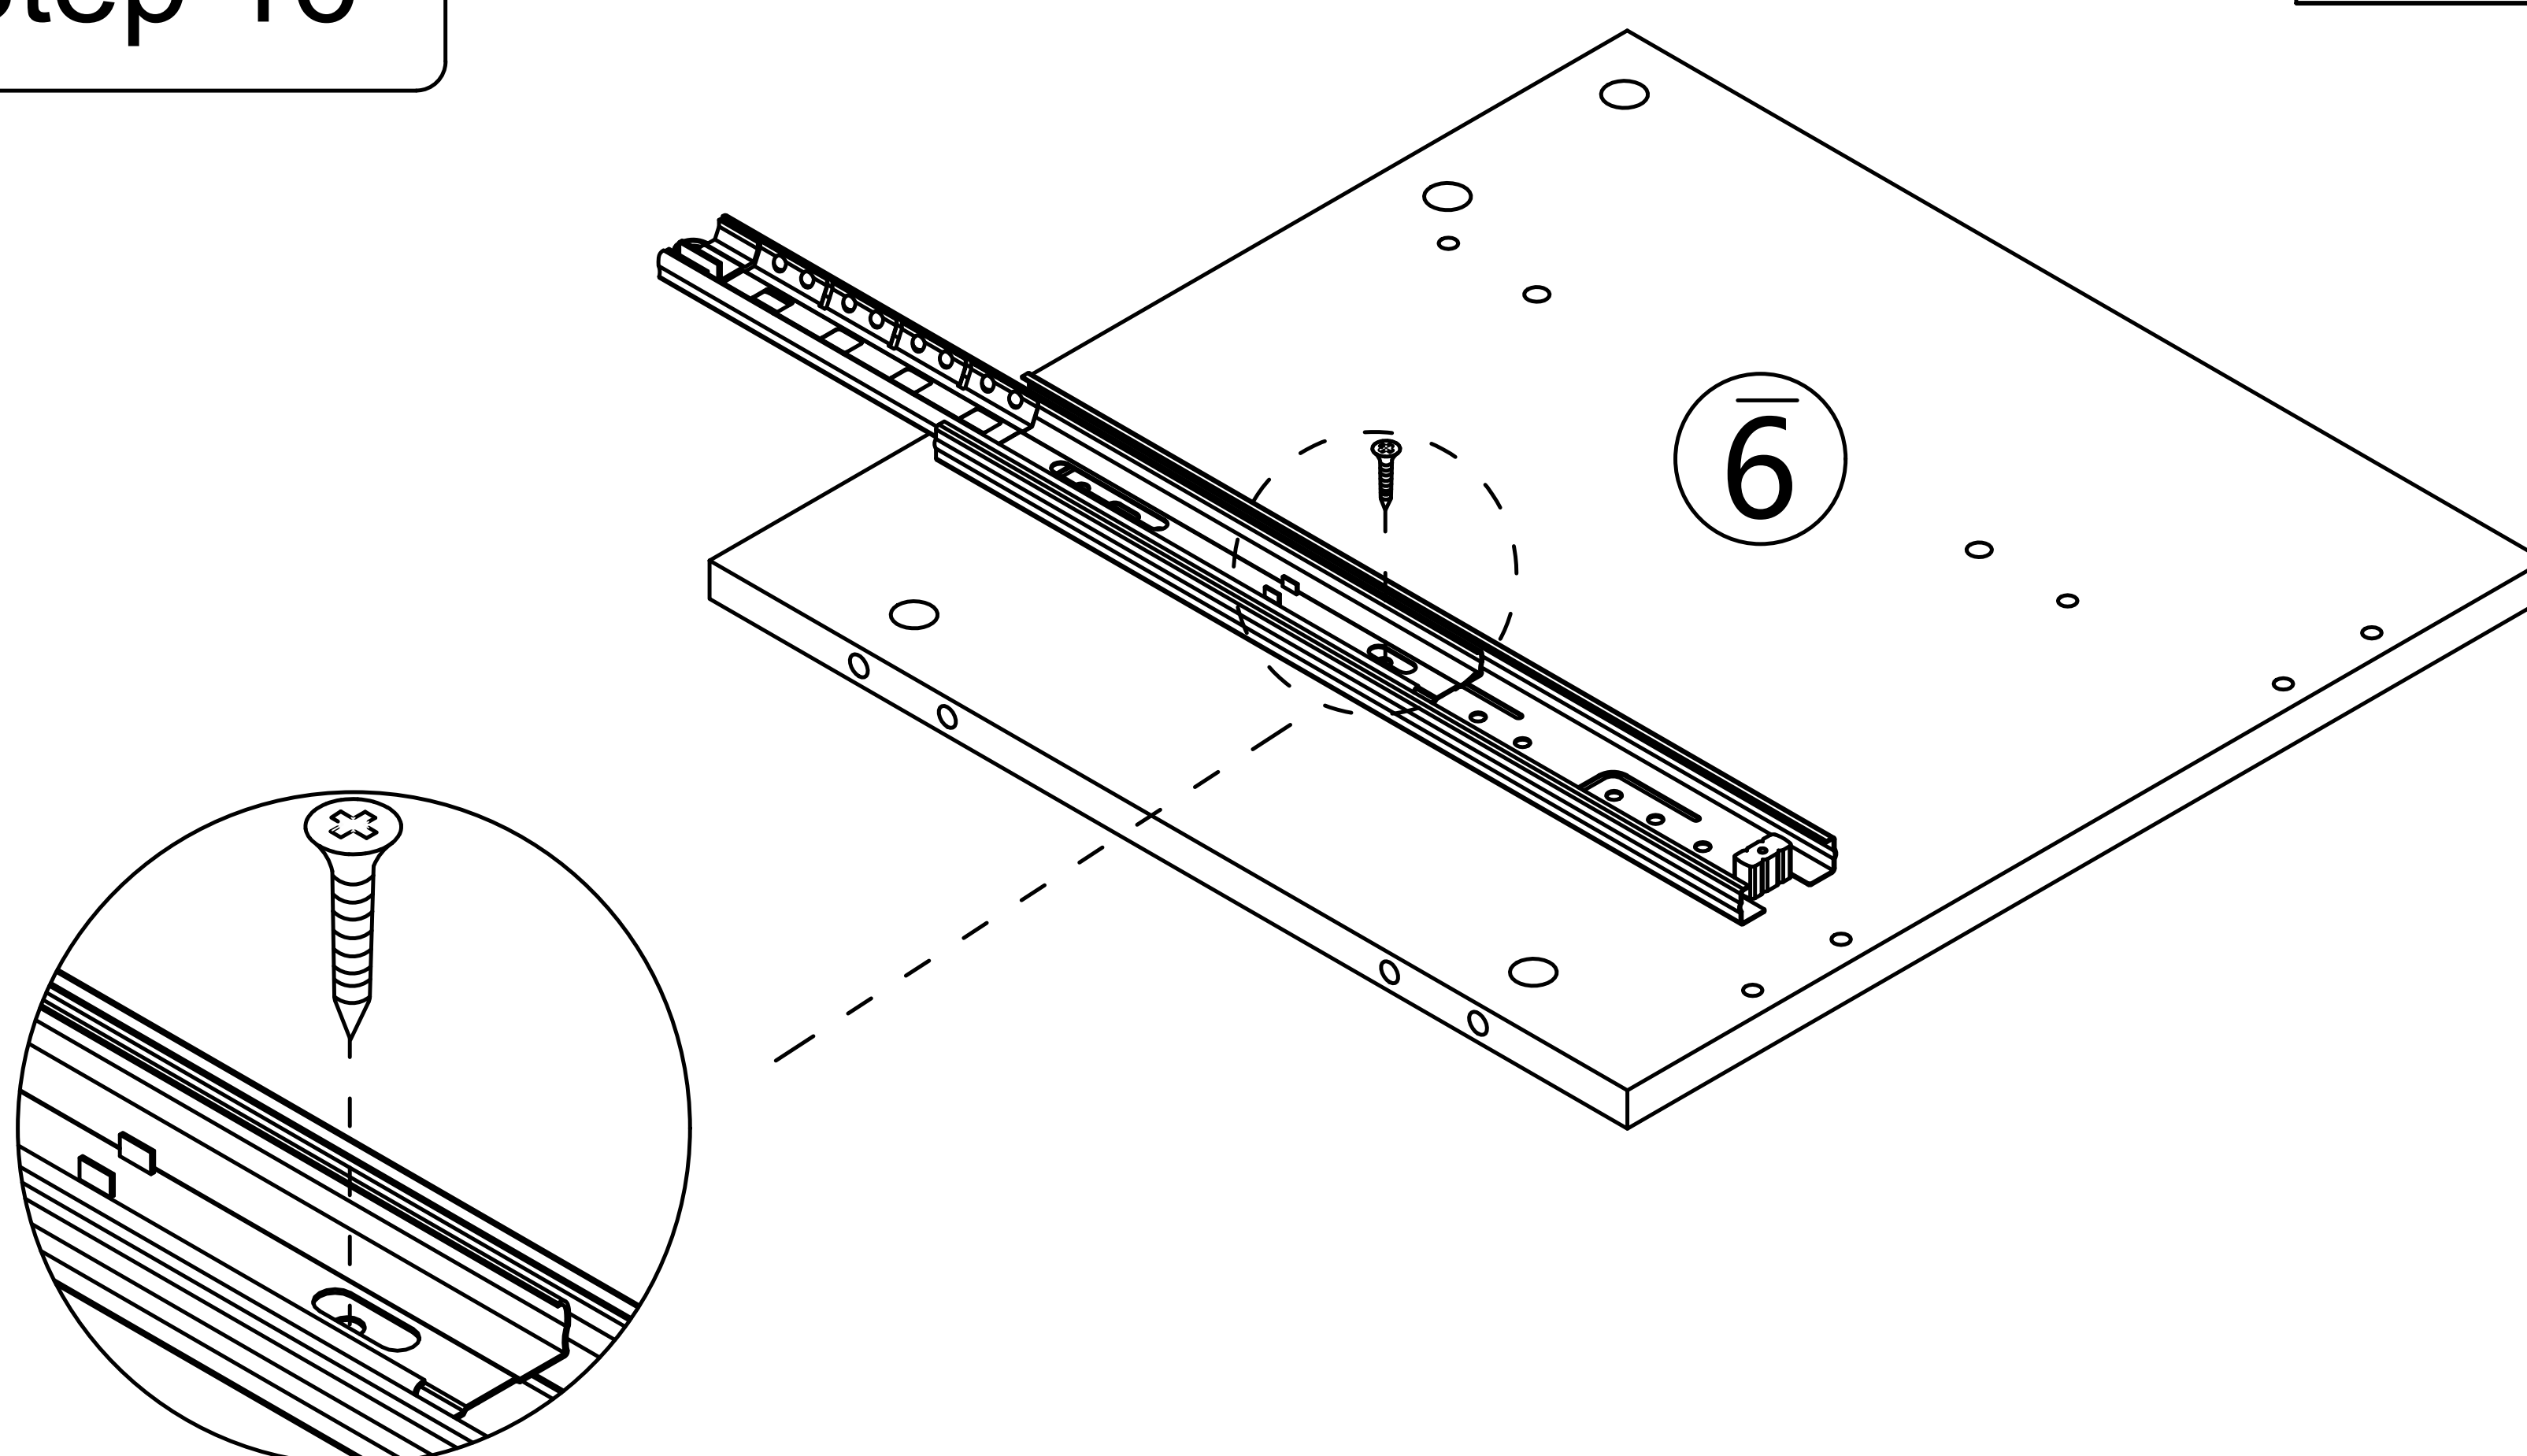


This hole is for strengthening fixed hole customers can choose to install according to their needs.


Step 17

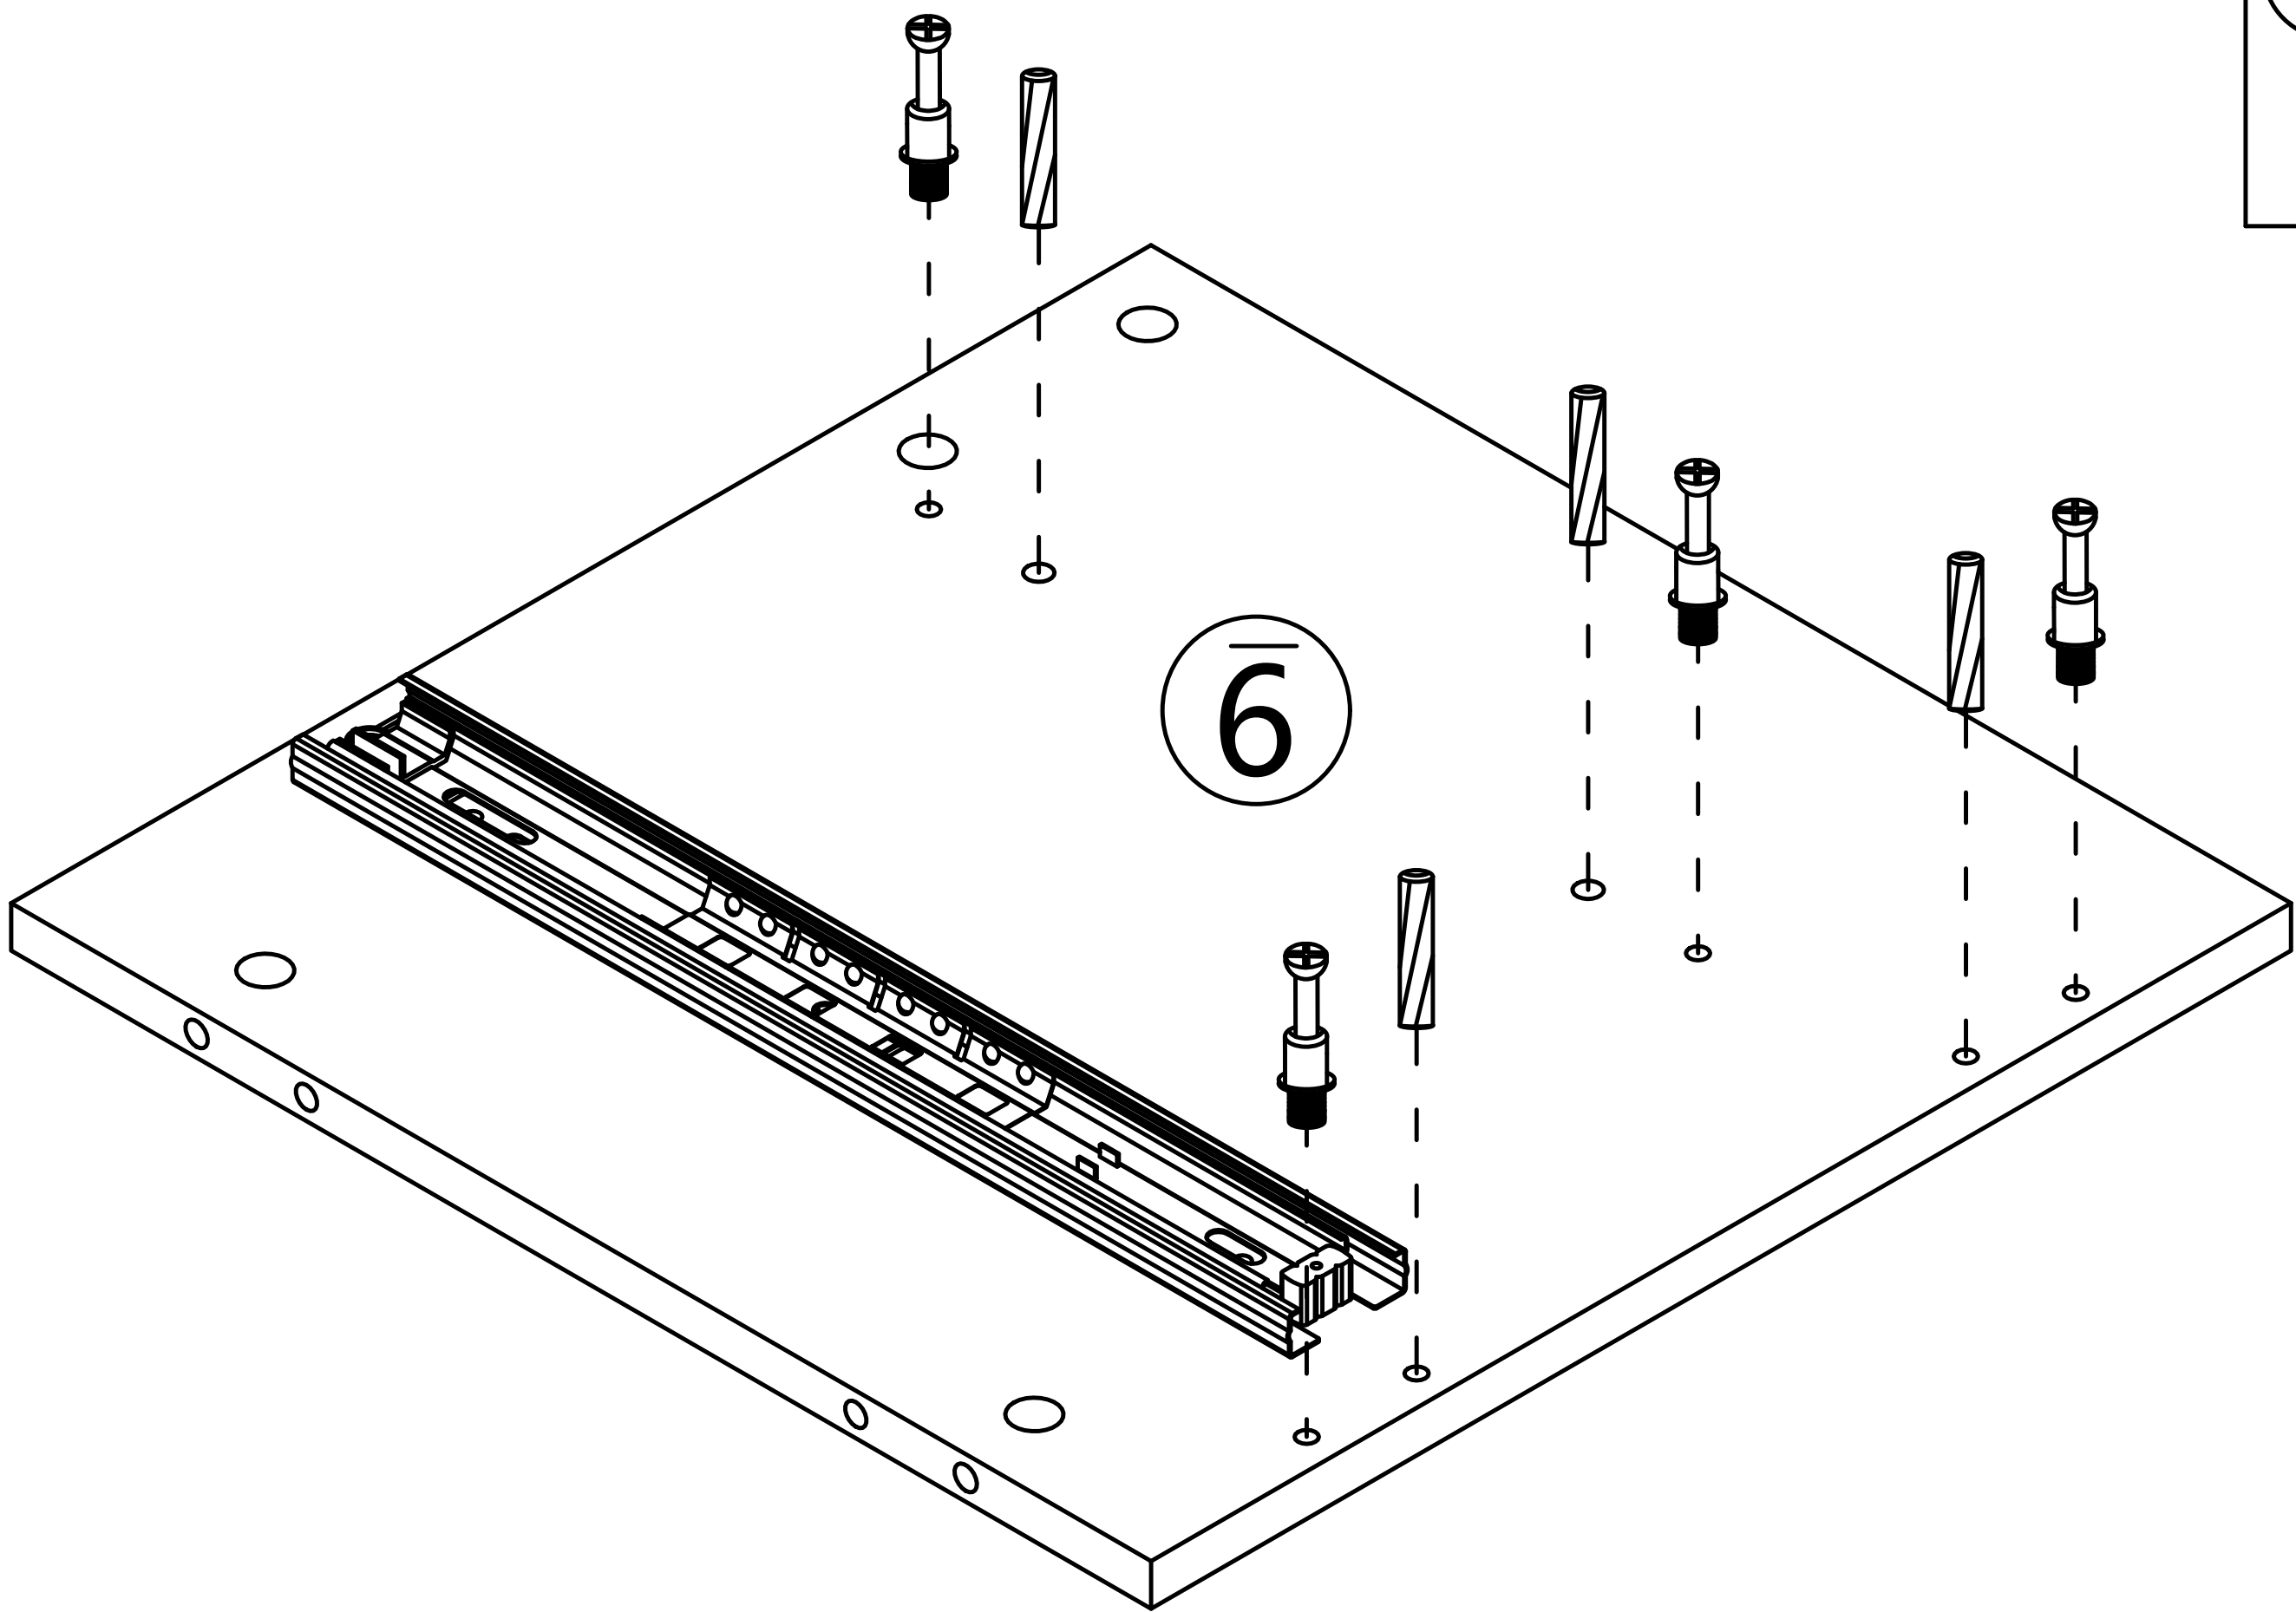

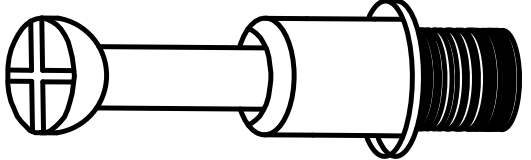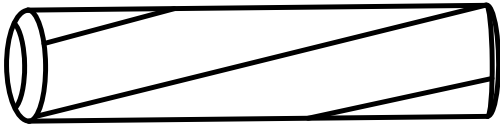- A  x4
- C  x4

Step 18

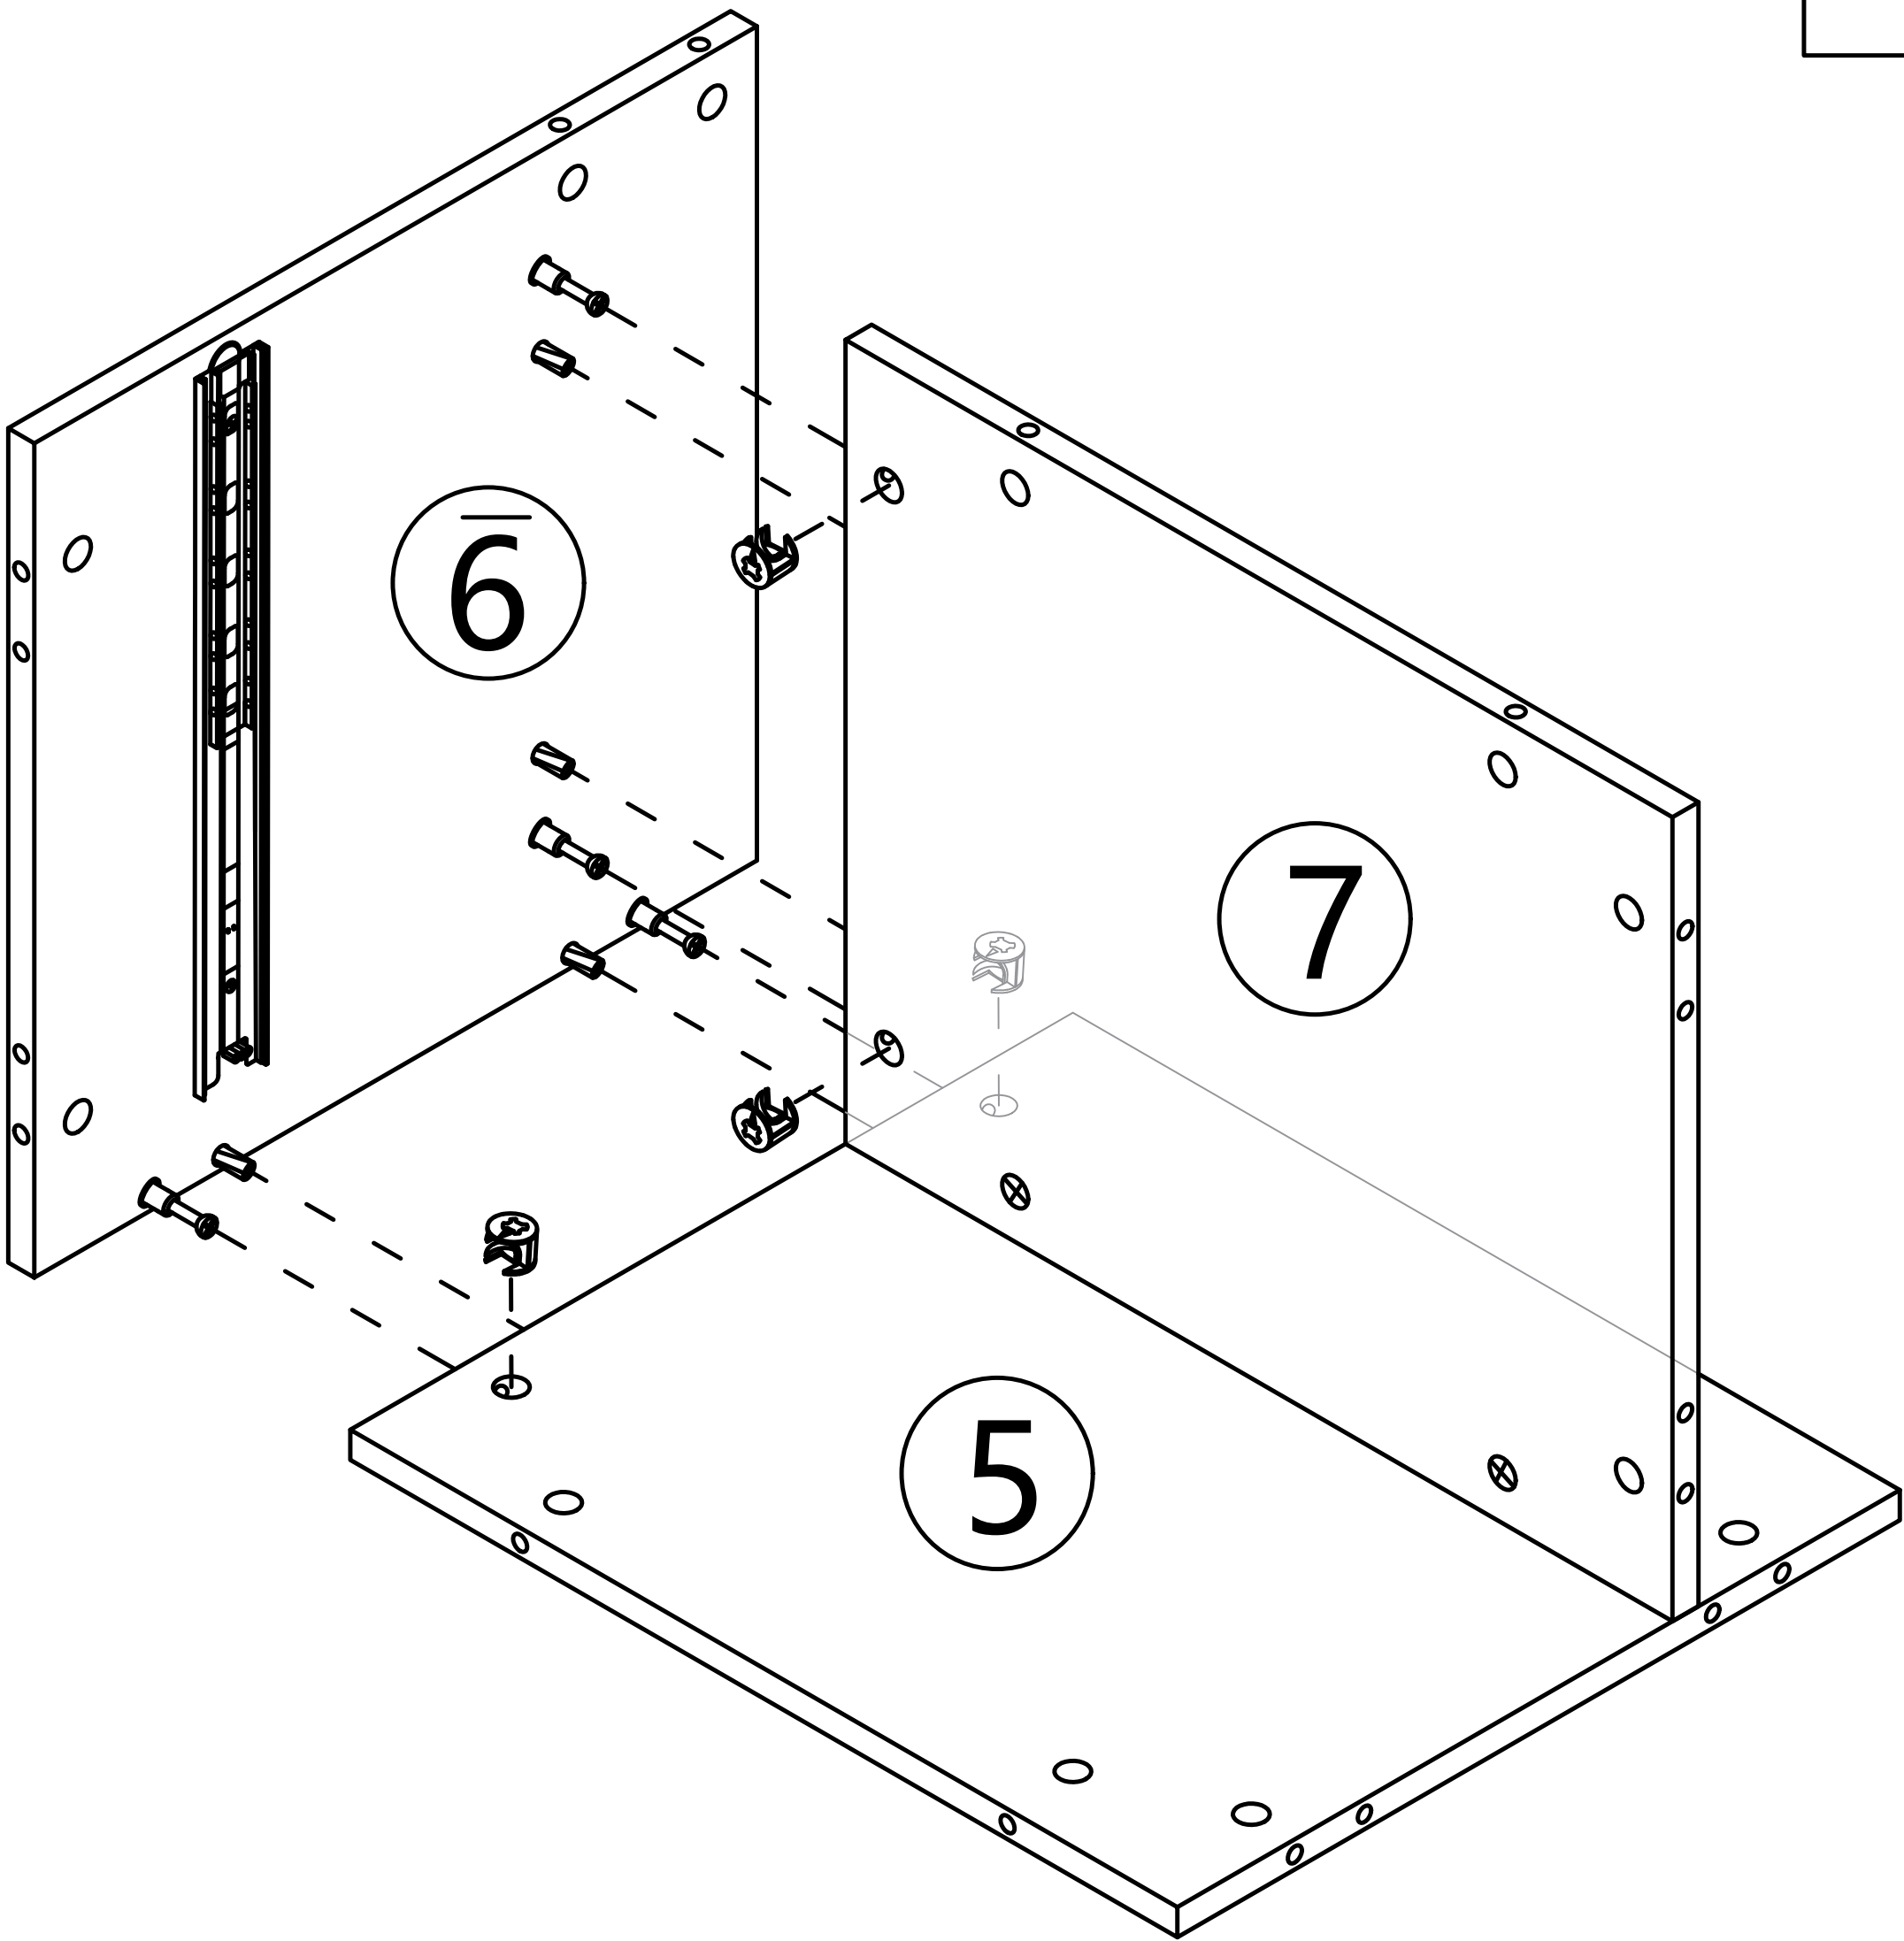


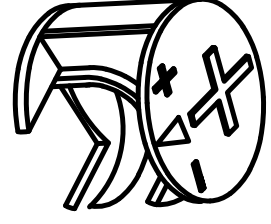- B  x4




## Step 19

F

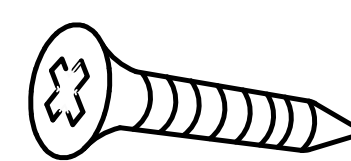


x2

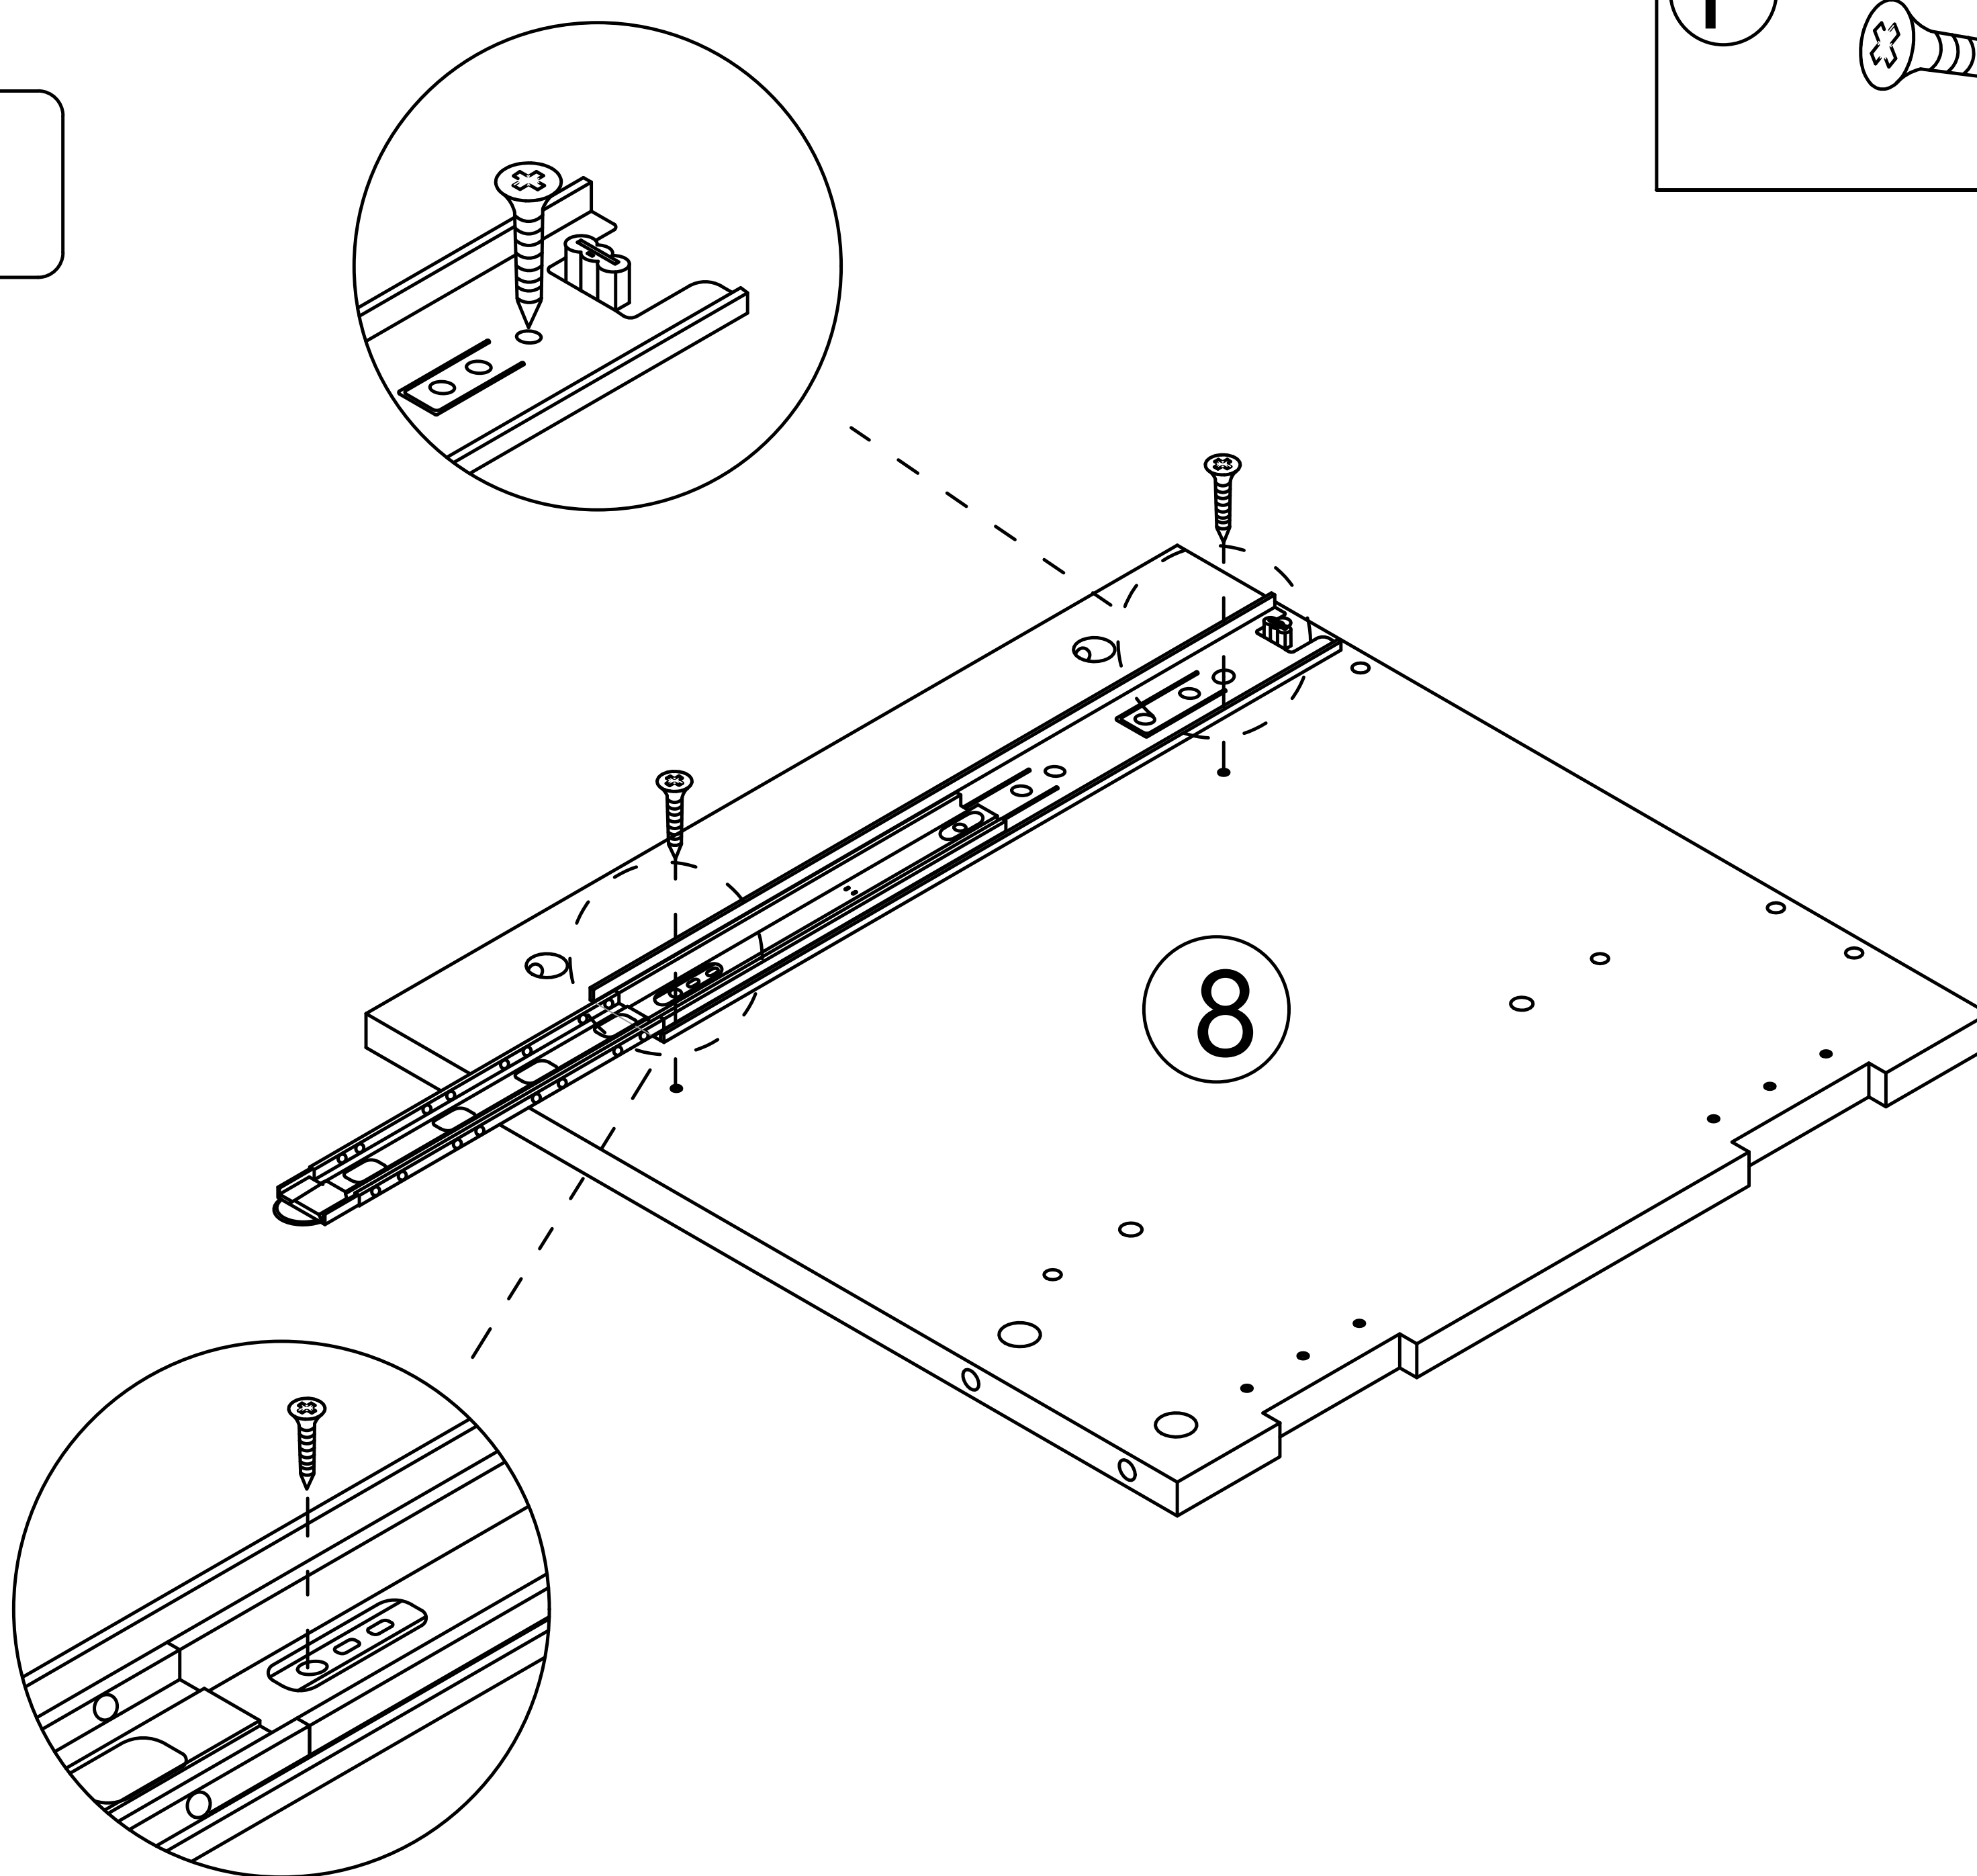


## Step 20

F

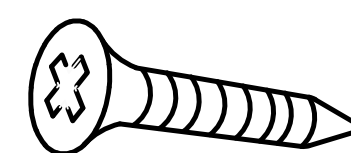


x1

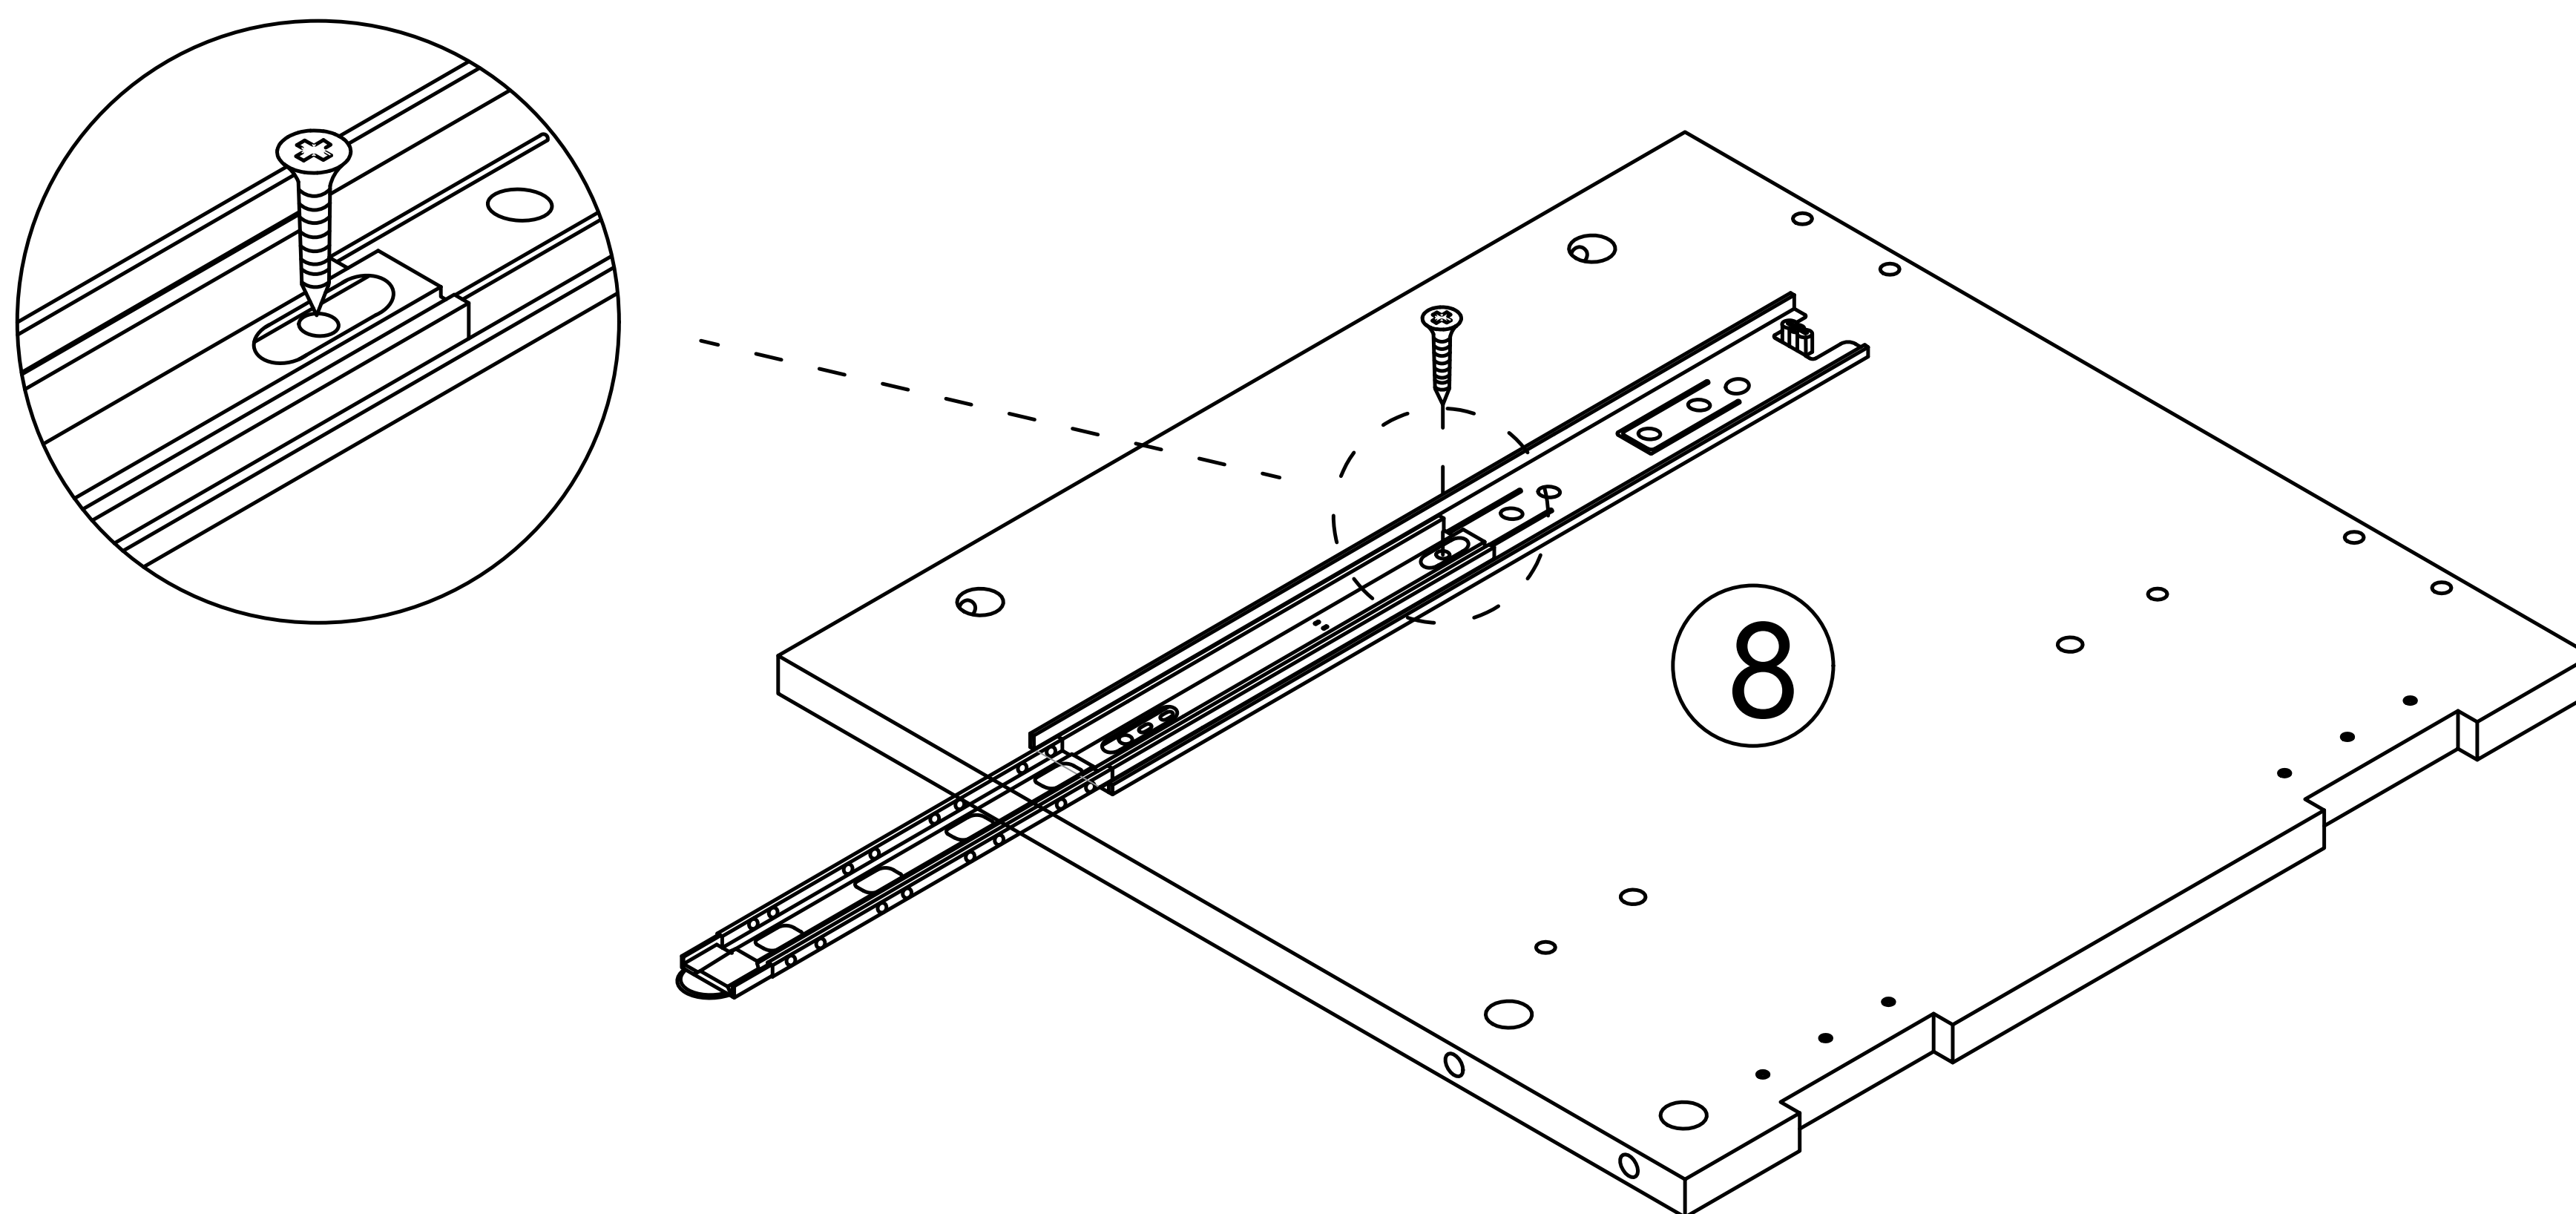


This hole is for strengthening fixed hole customers can choose to install according to their needs.

Step 21


- A

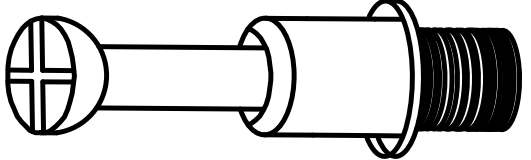


x4
- C

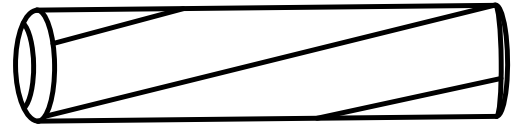


x4


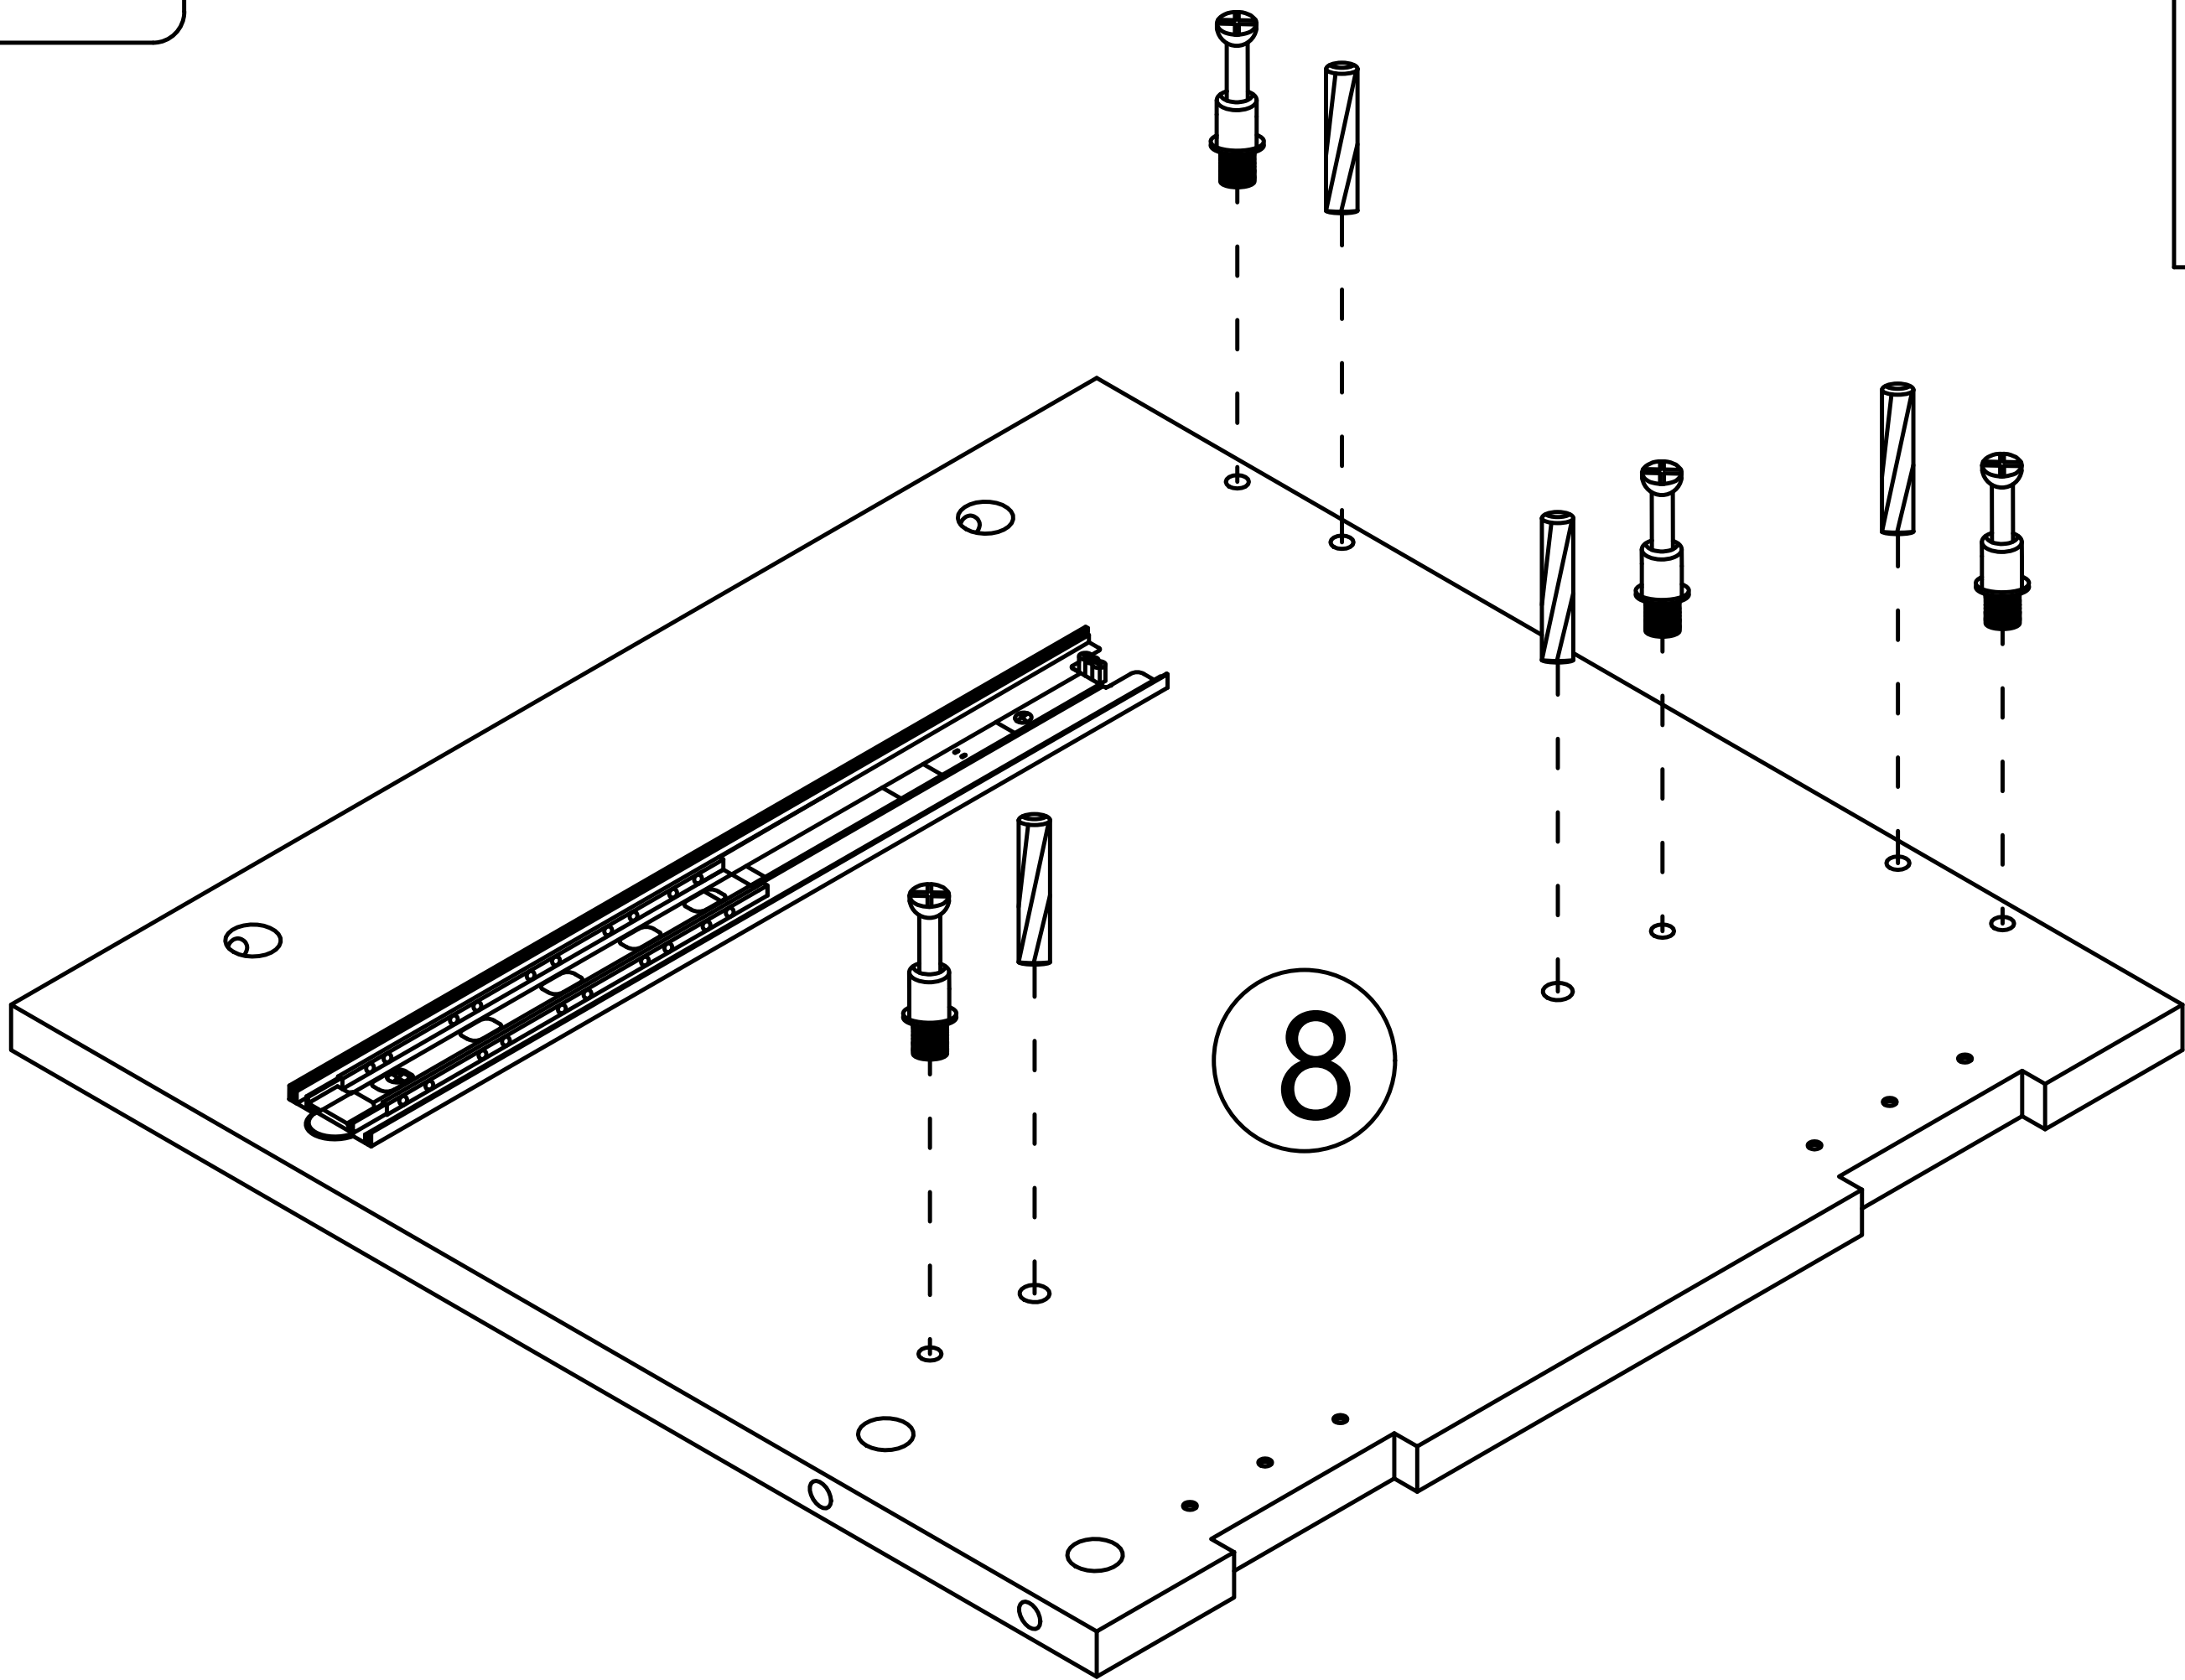


Step 22


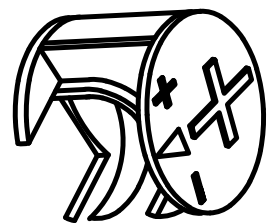
- B
- 
- x4

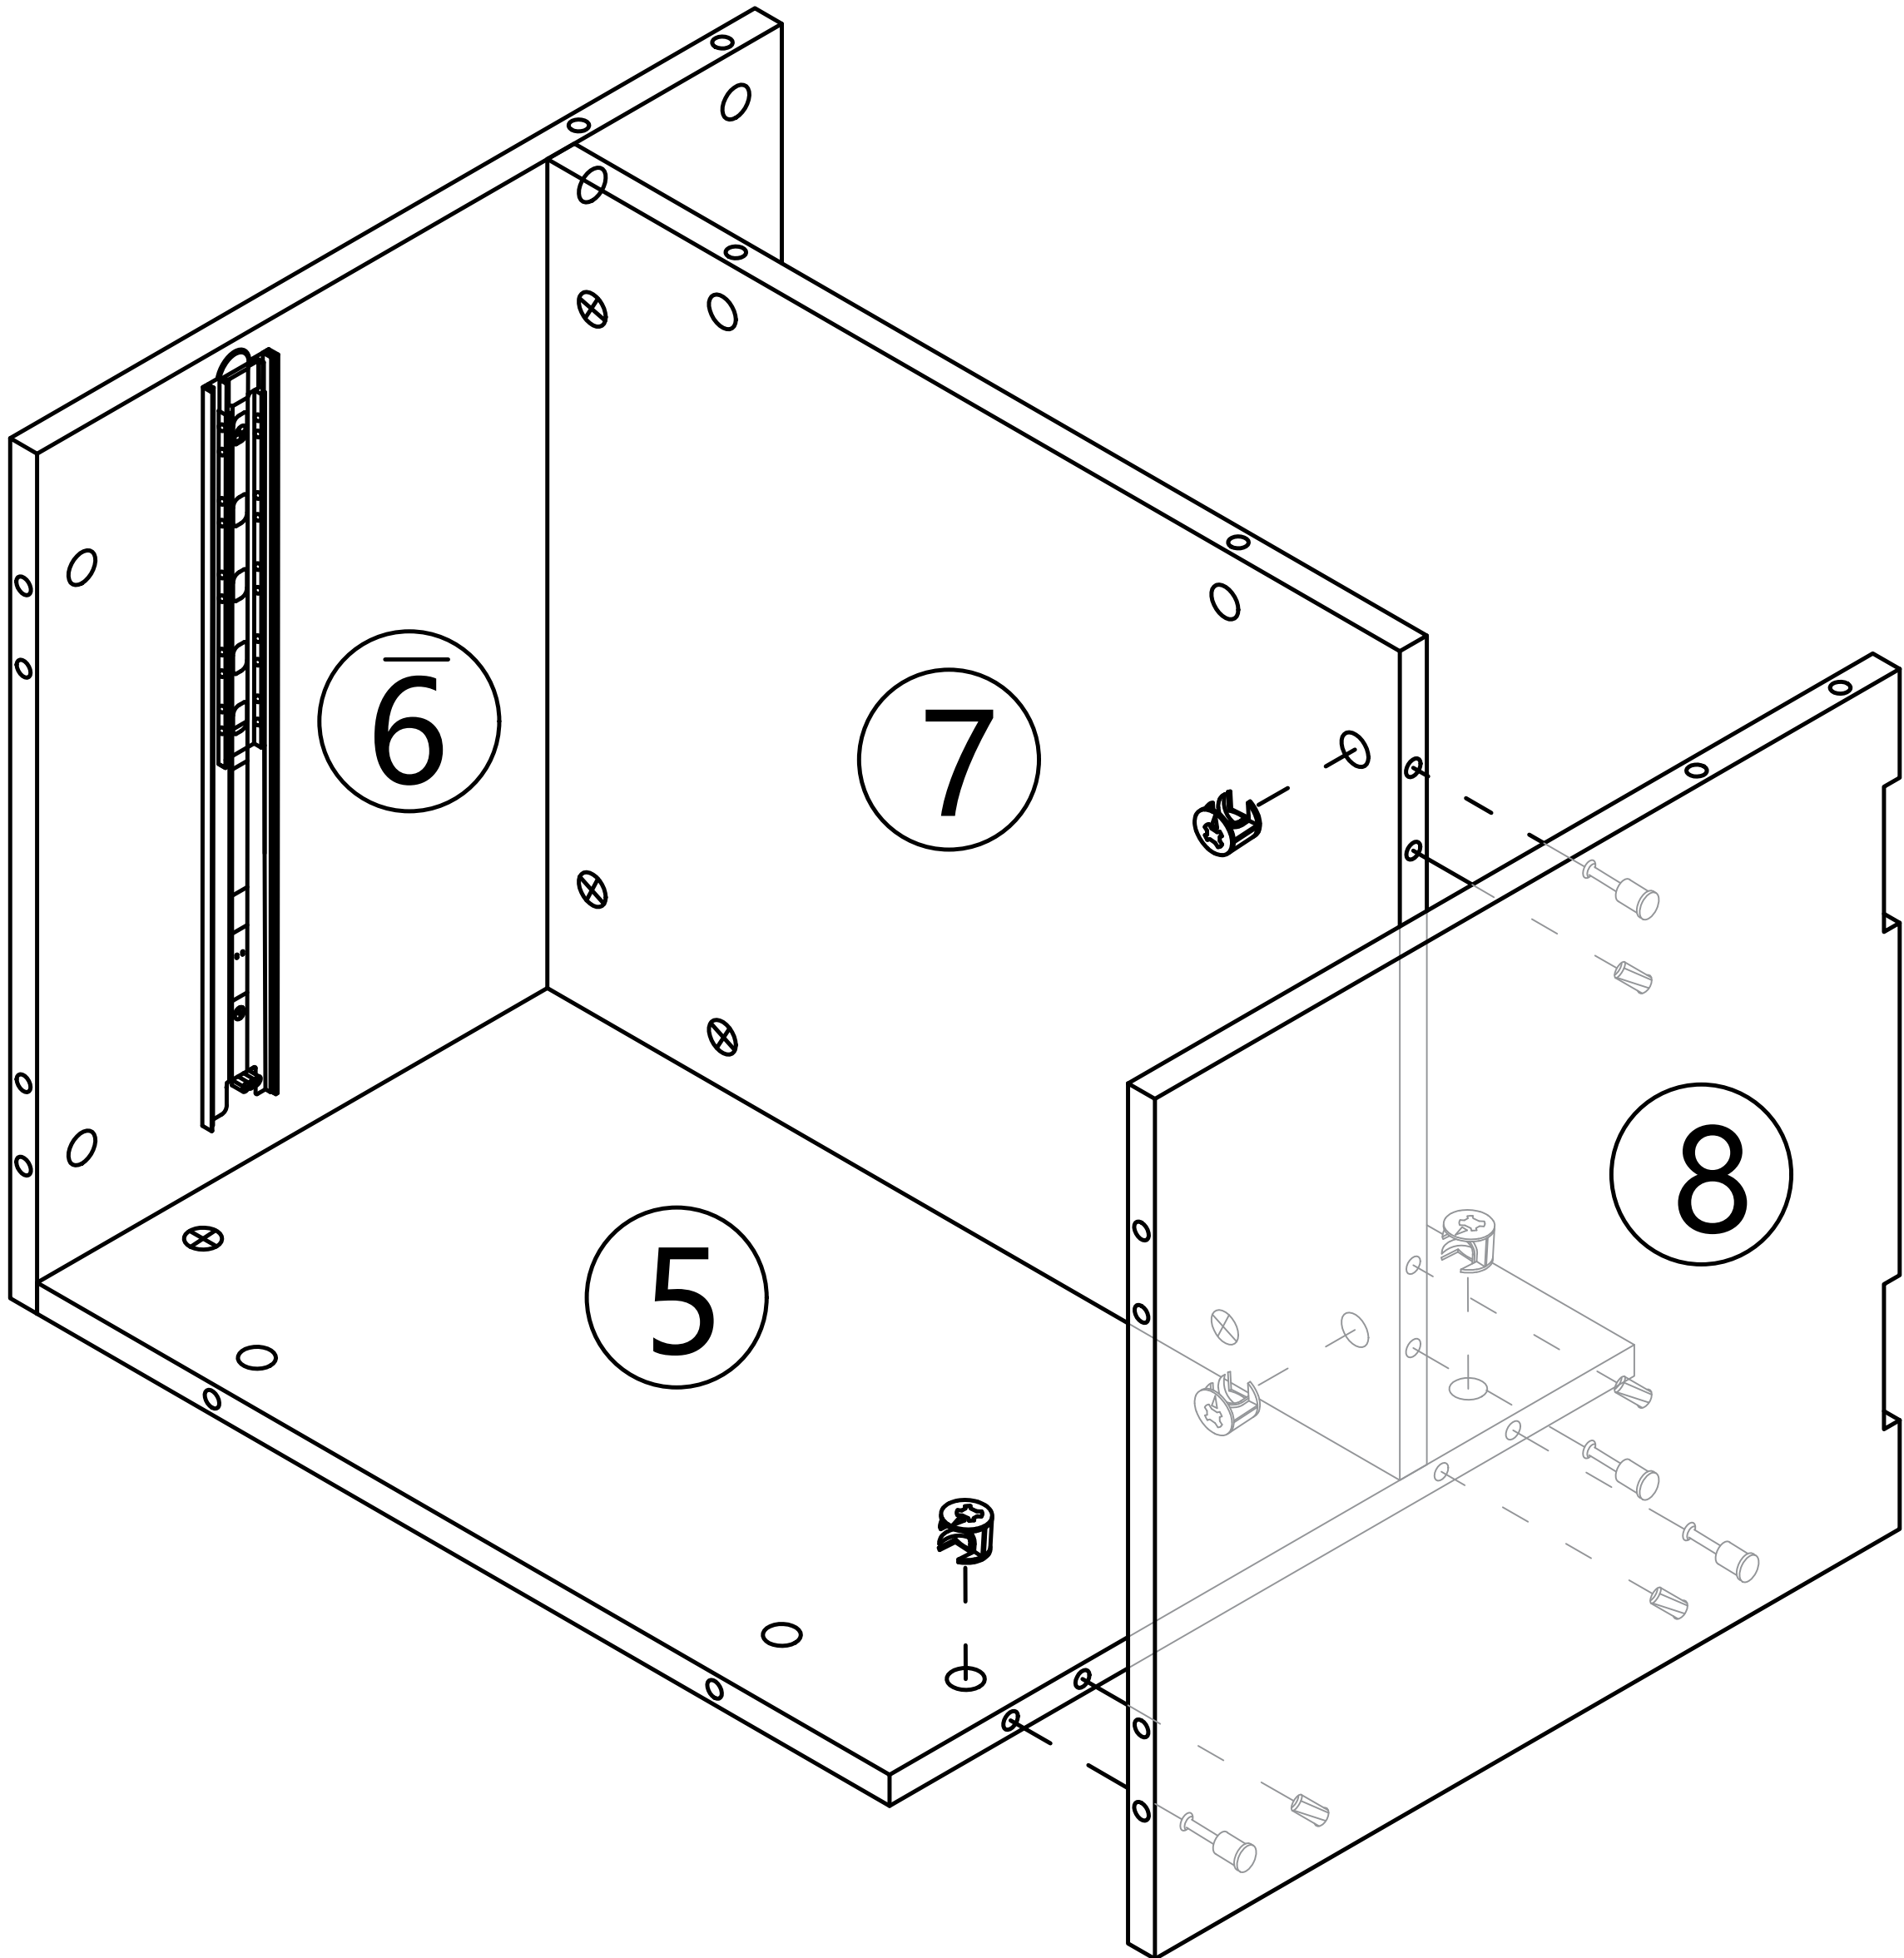

Step 23

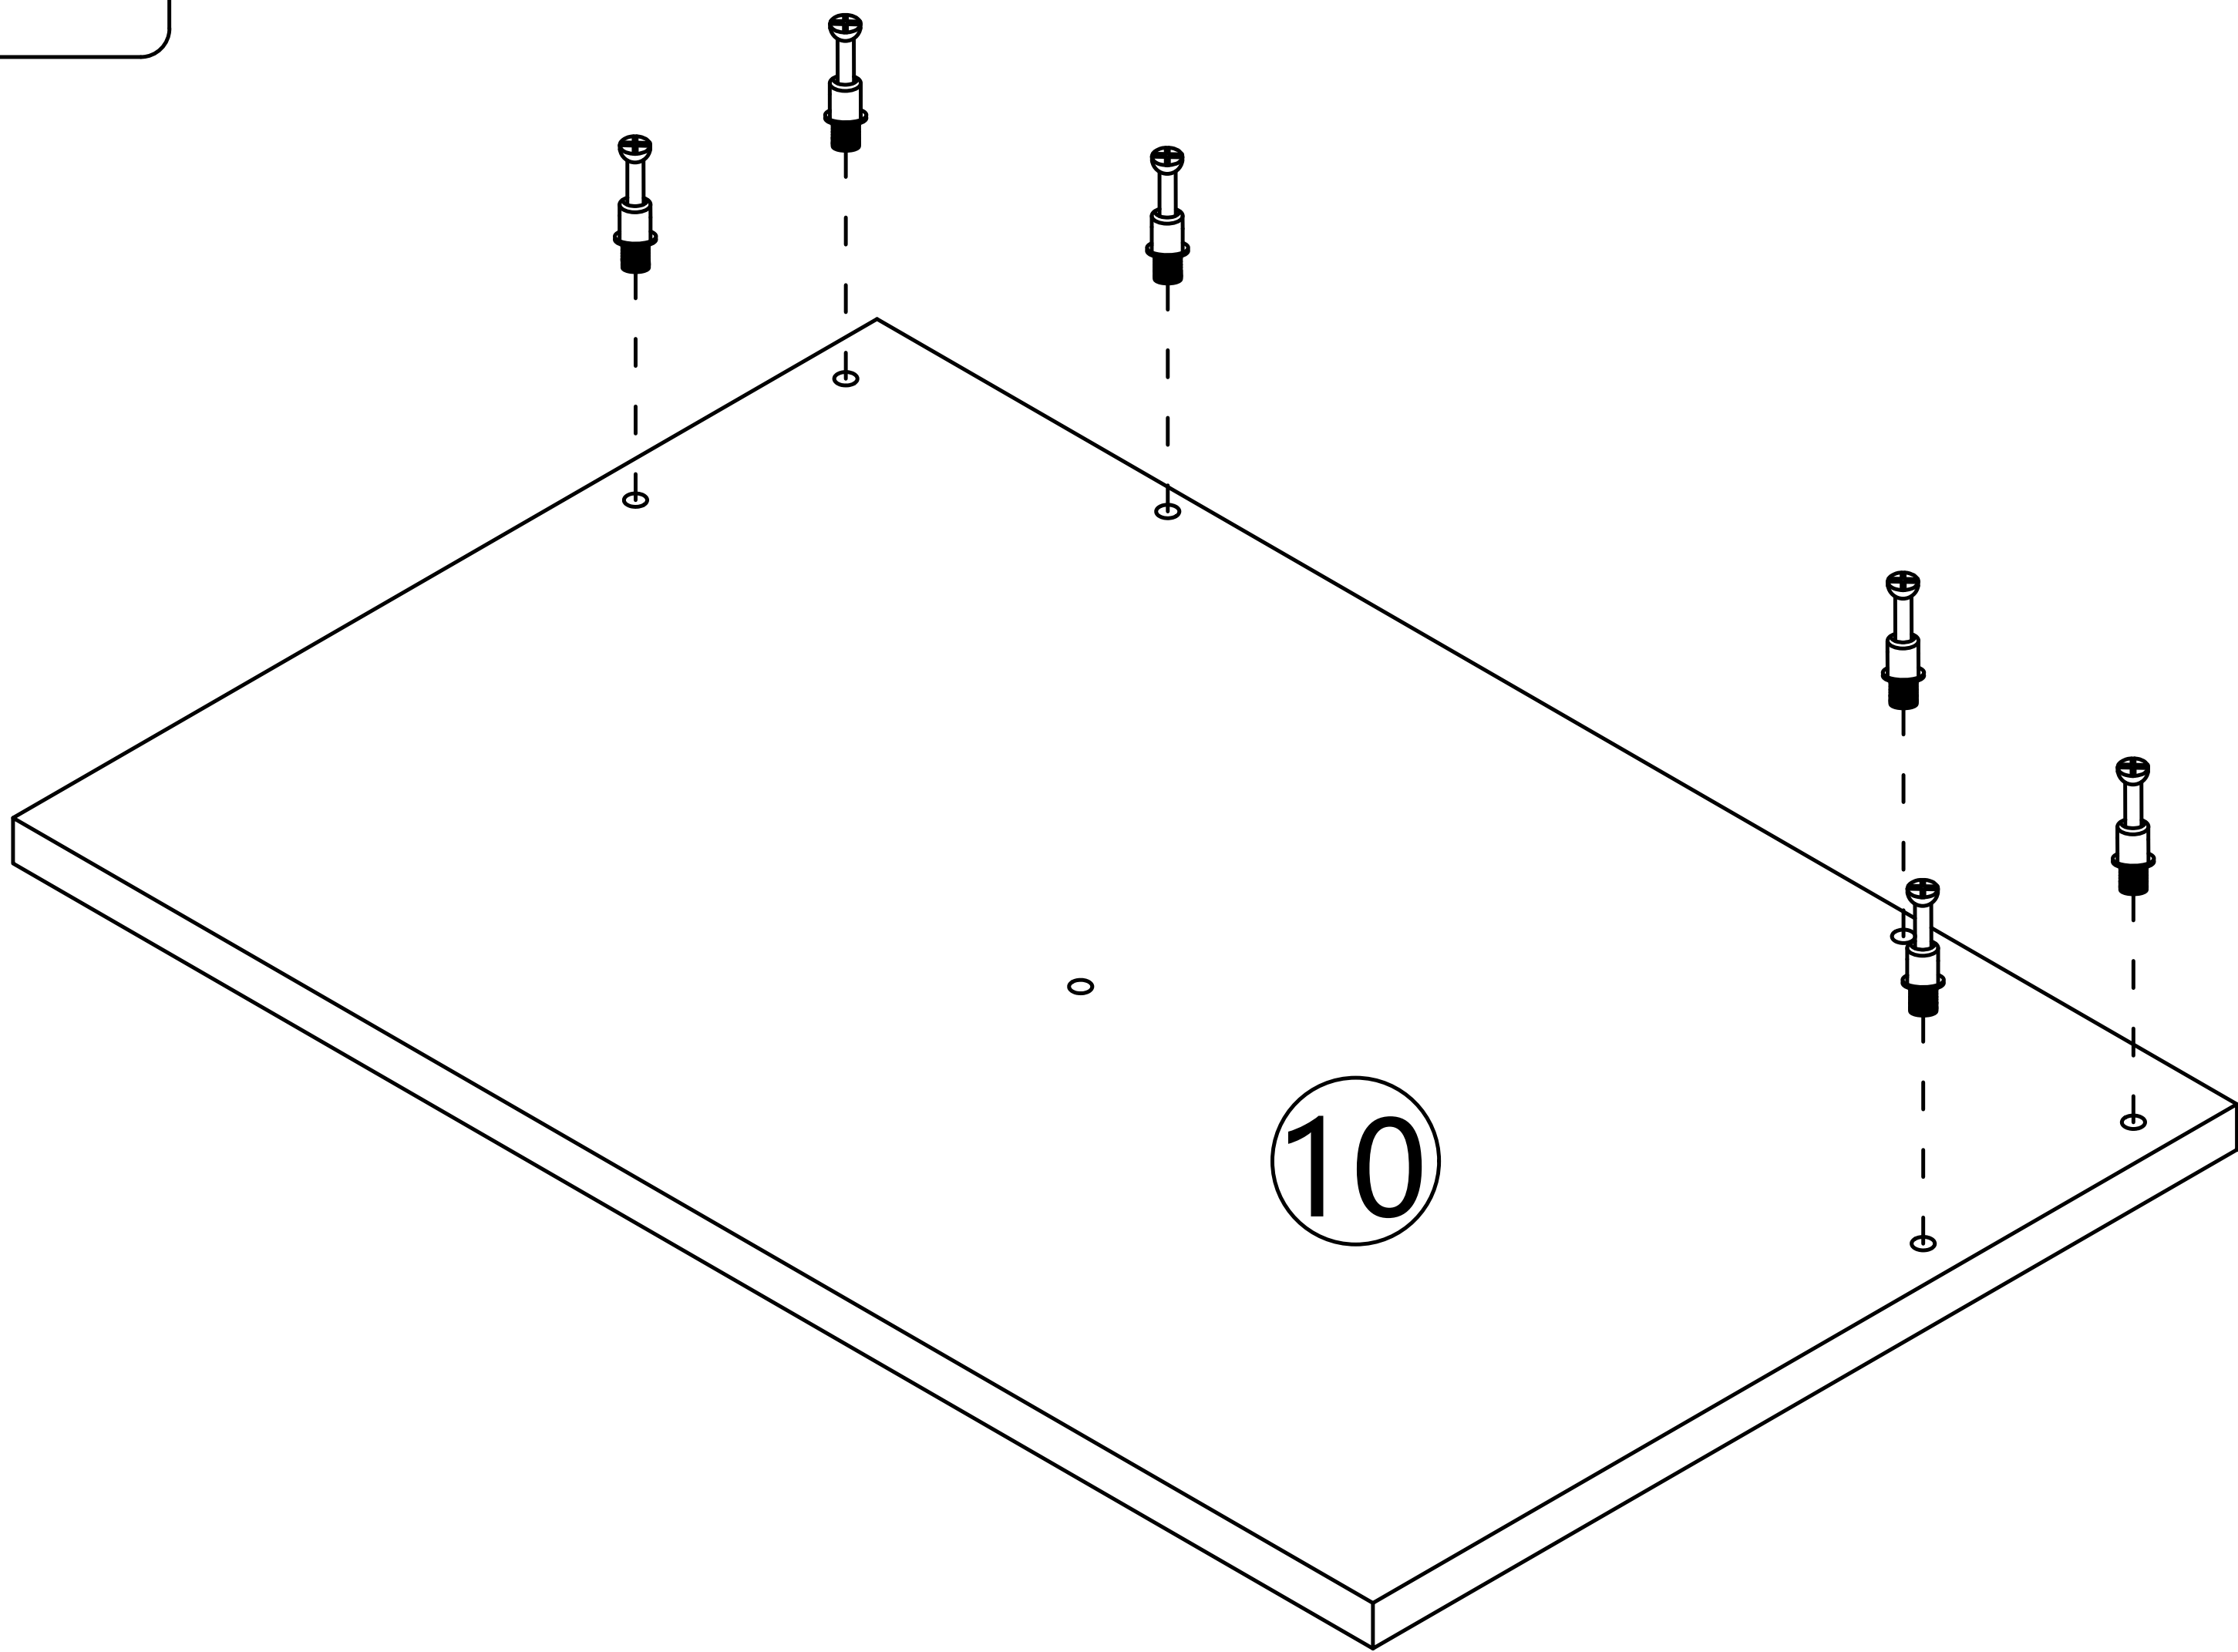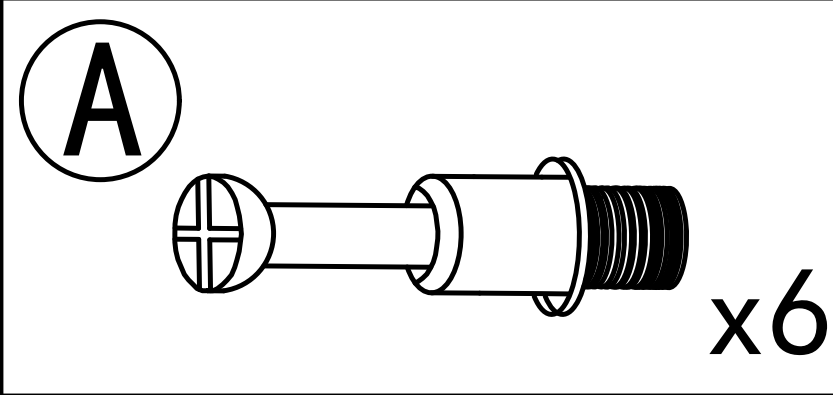


Step 24

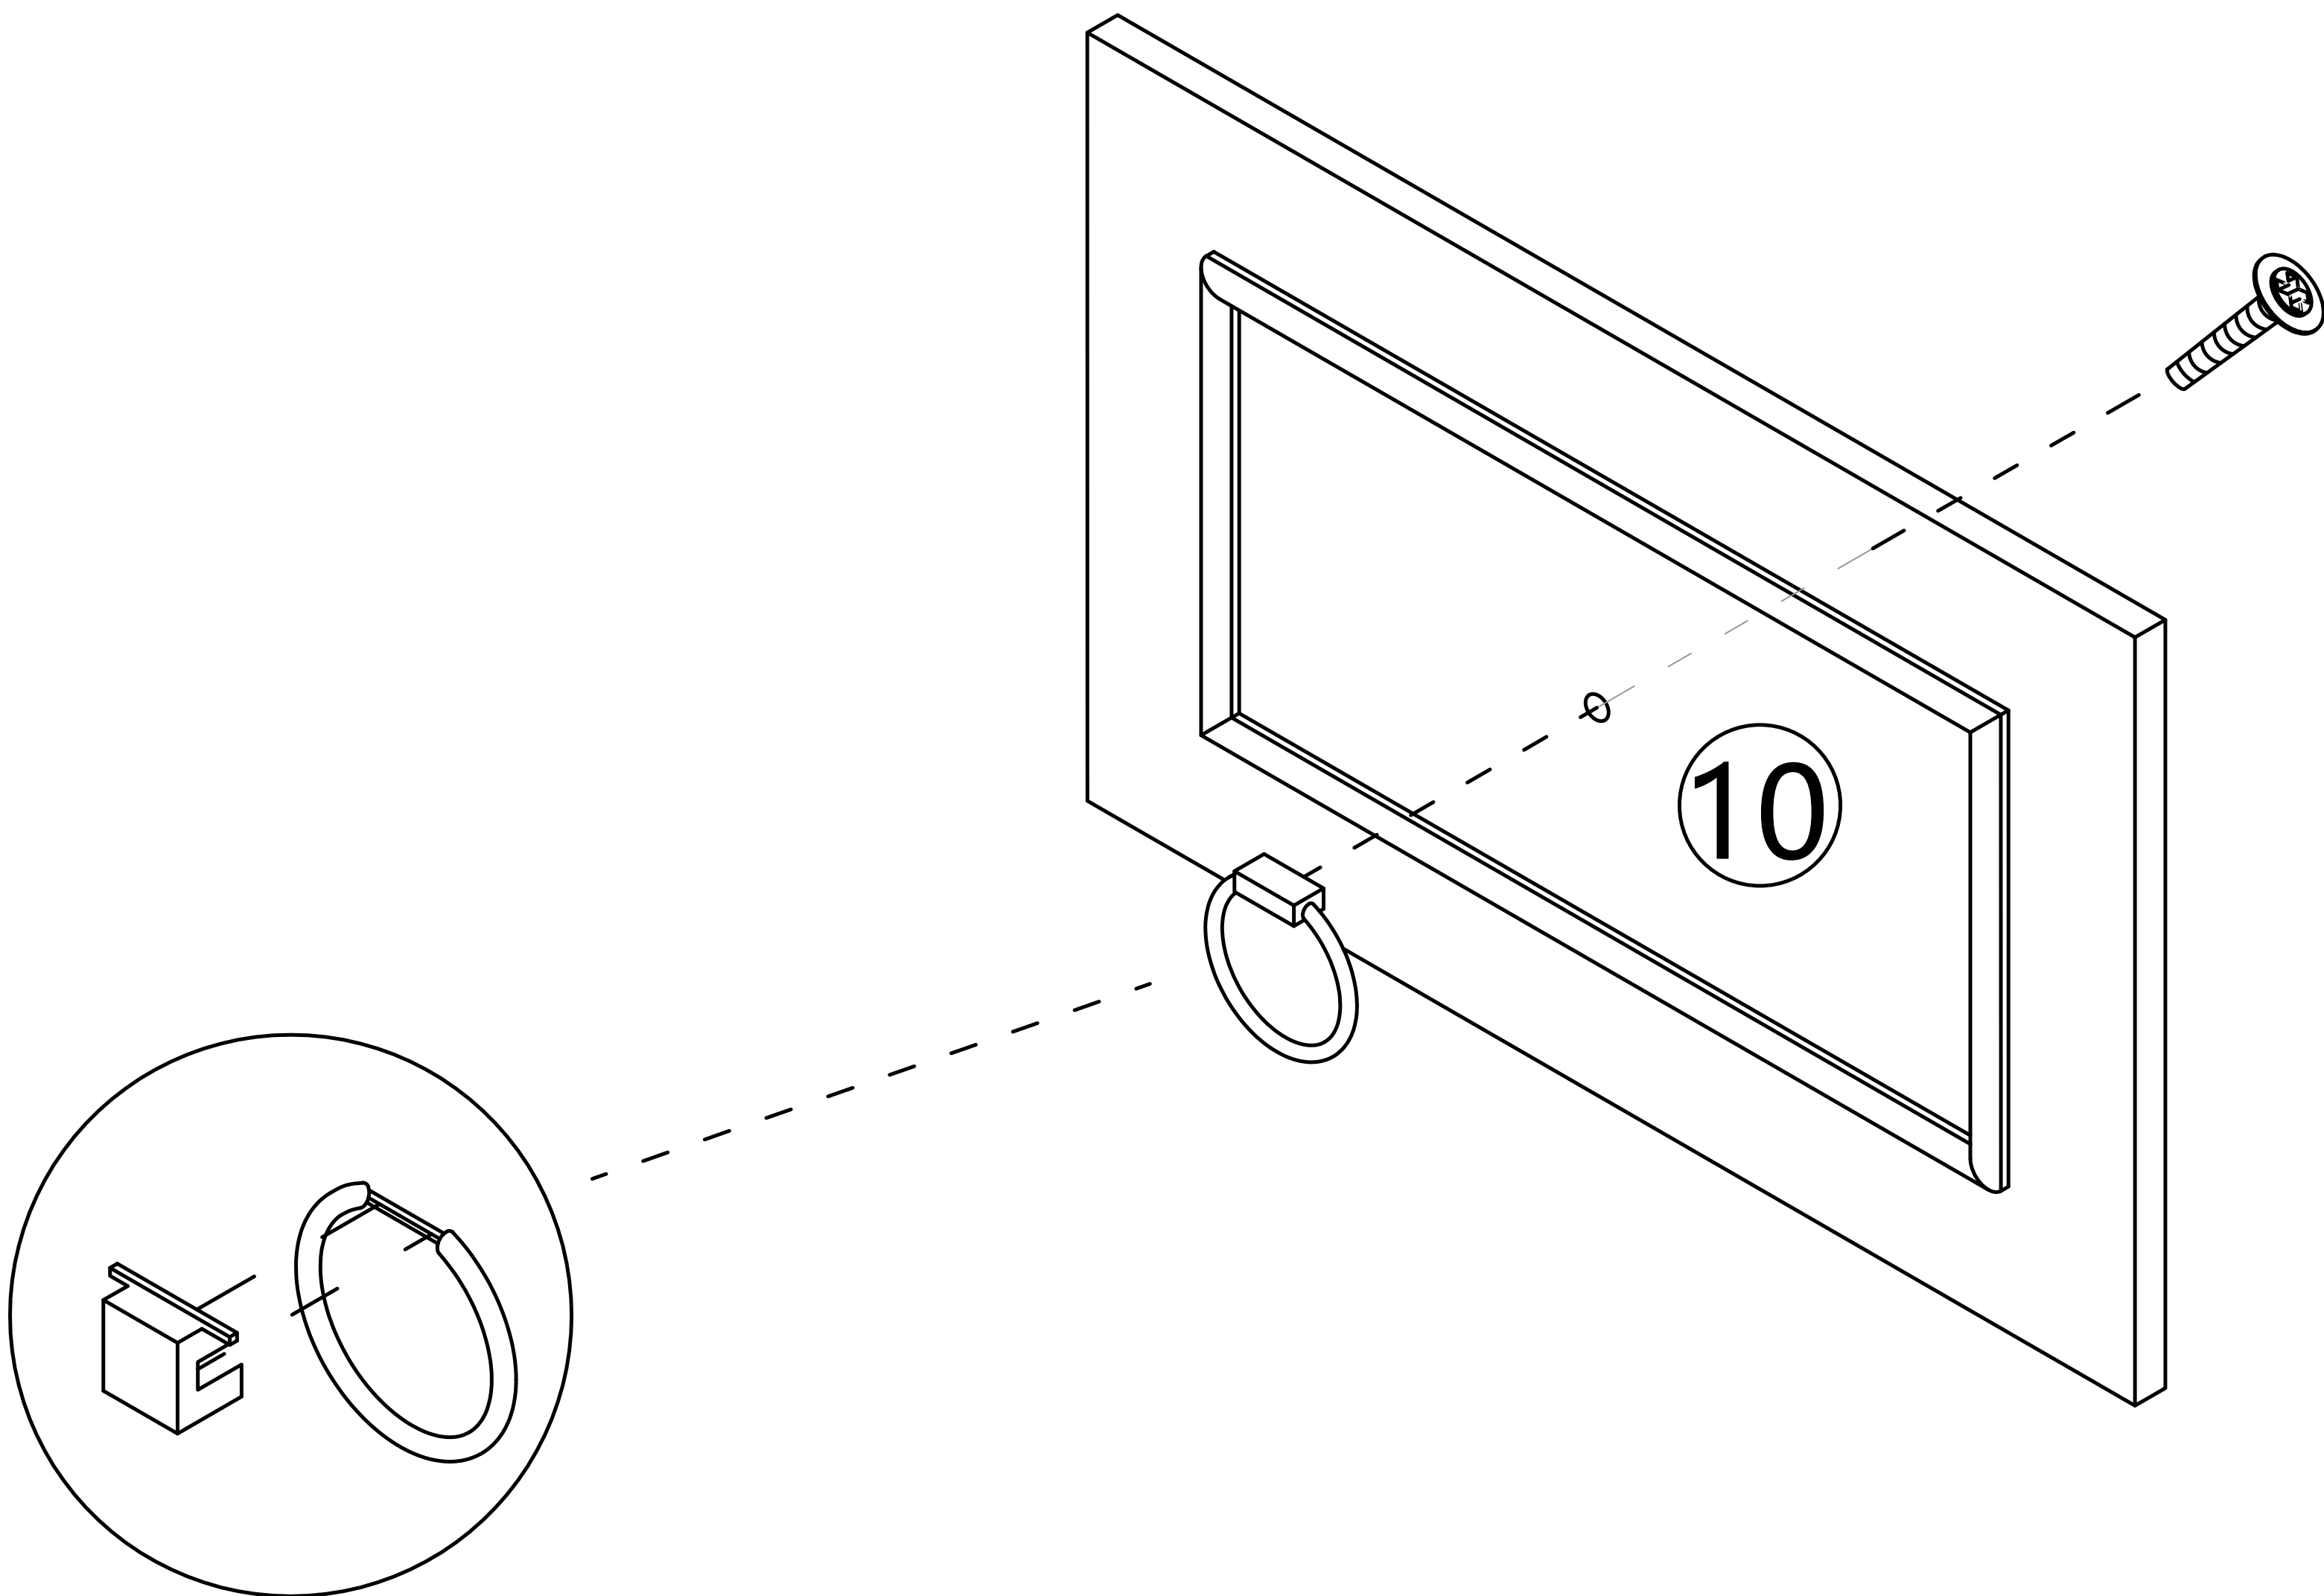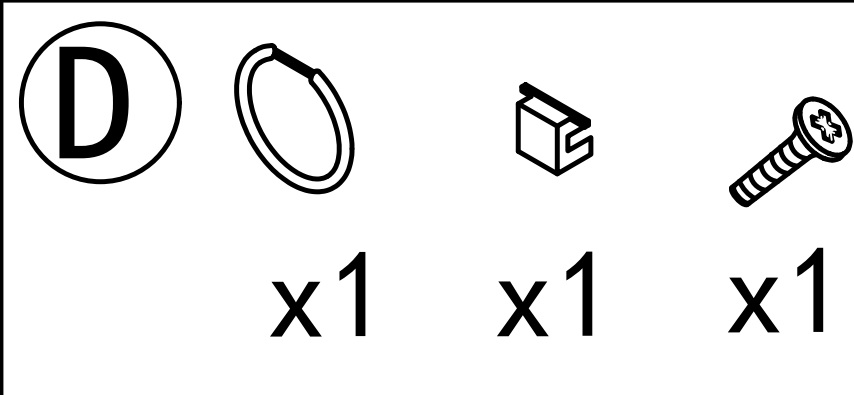




Step 25

B

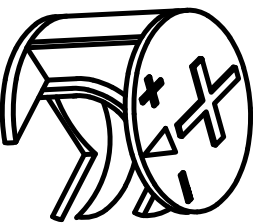


x6

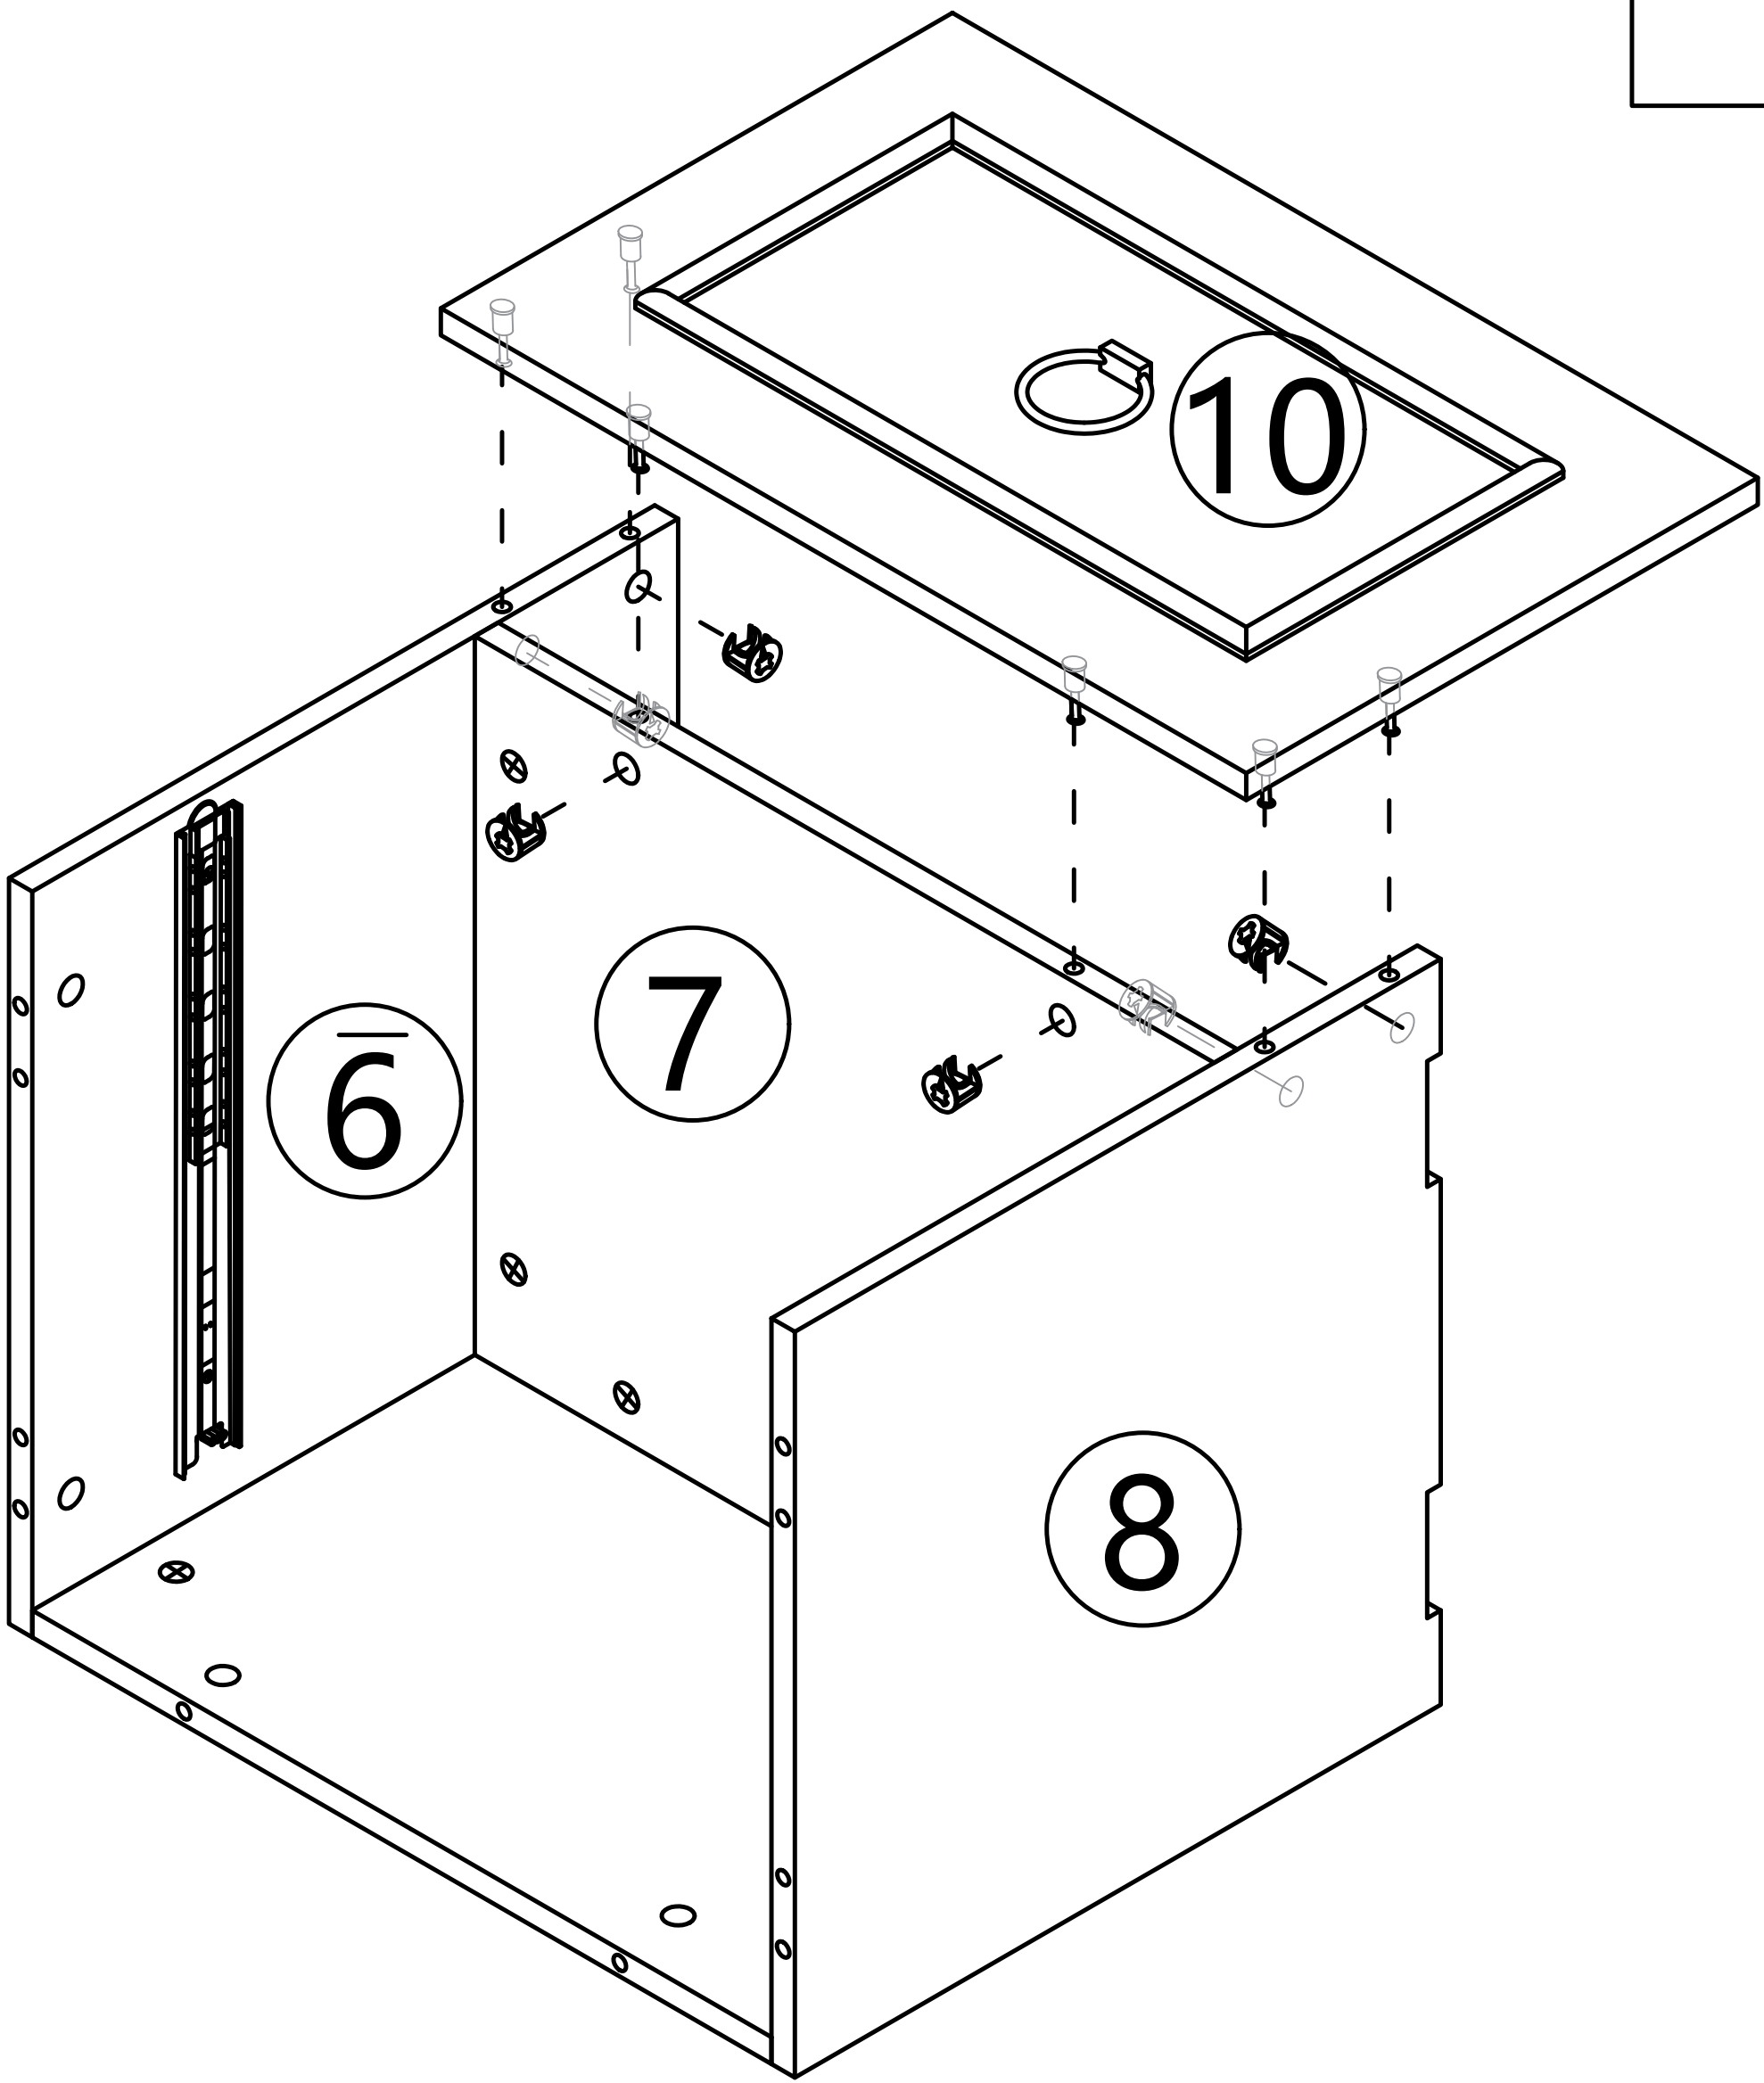


Step 26

A

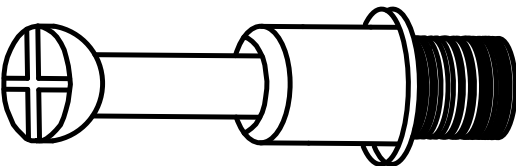


x6

C




x4

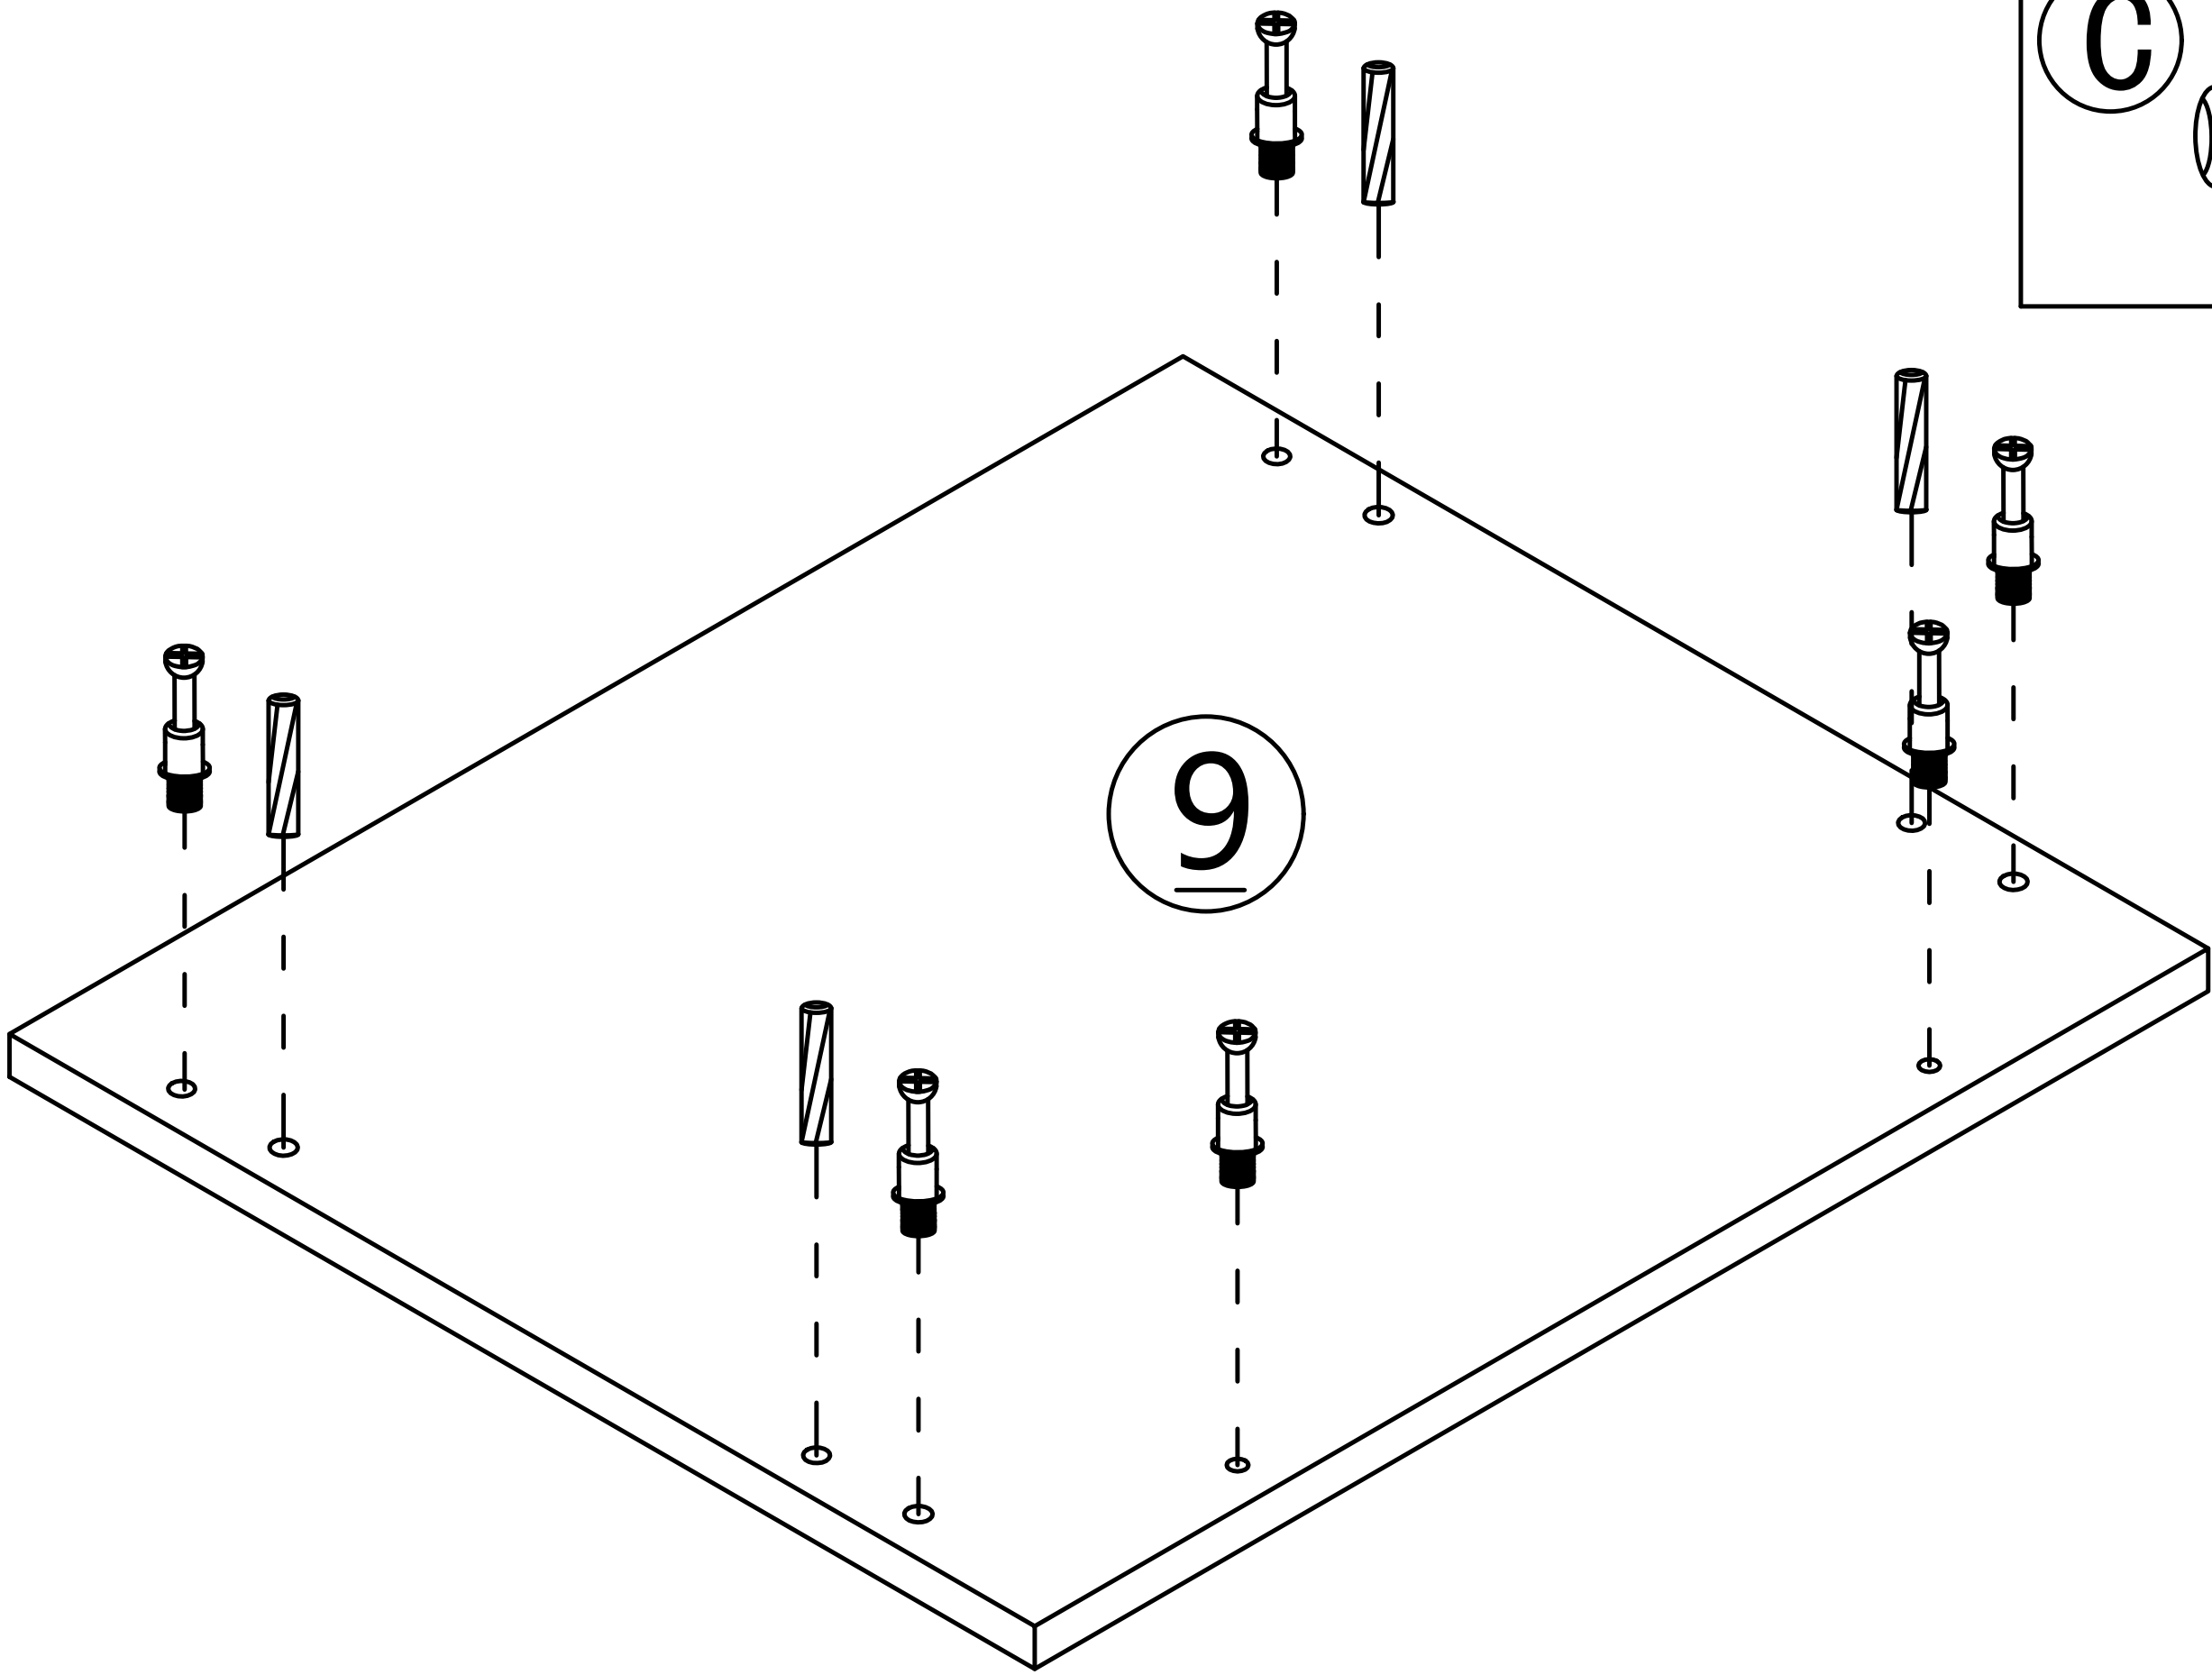




Step 27

B

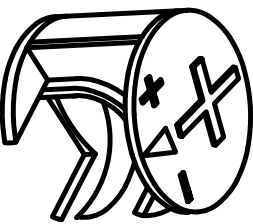


x6

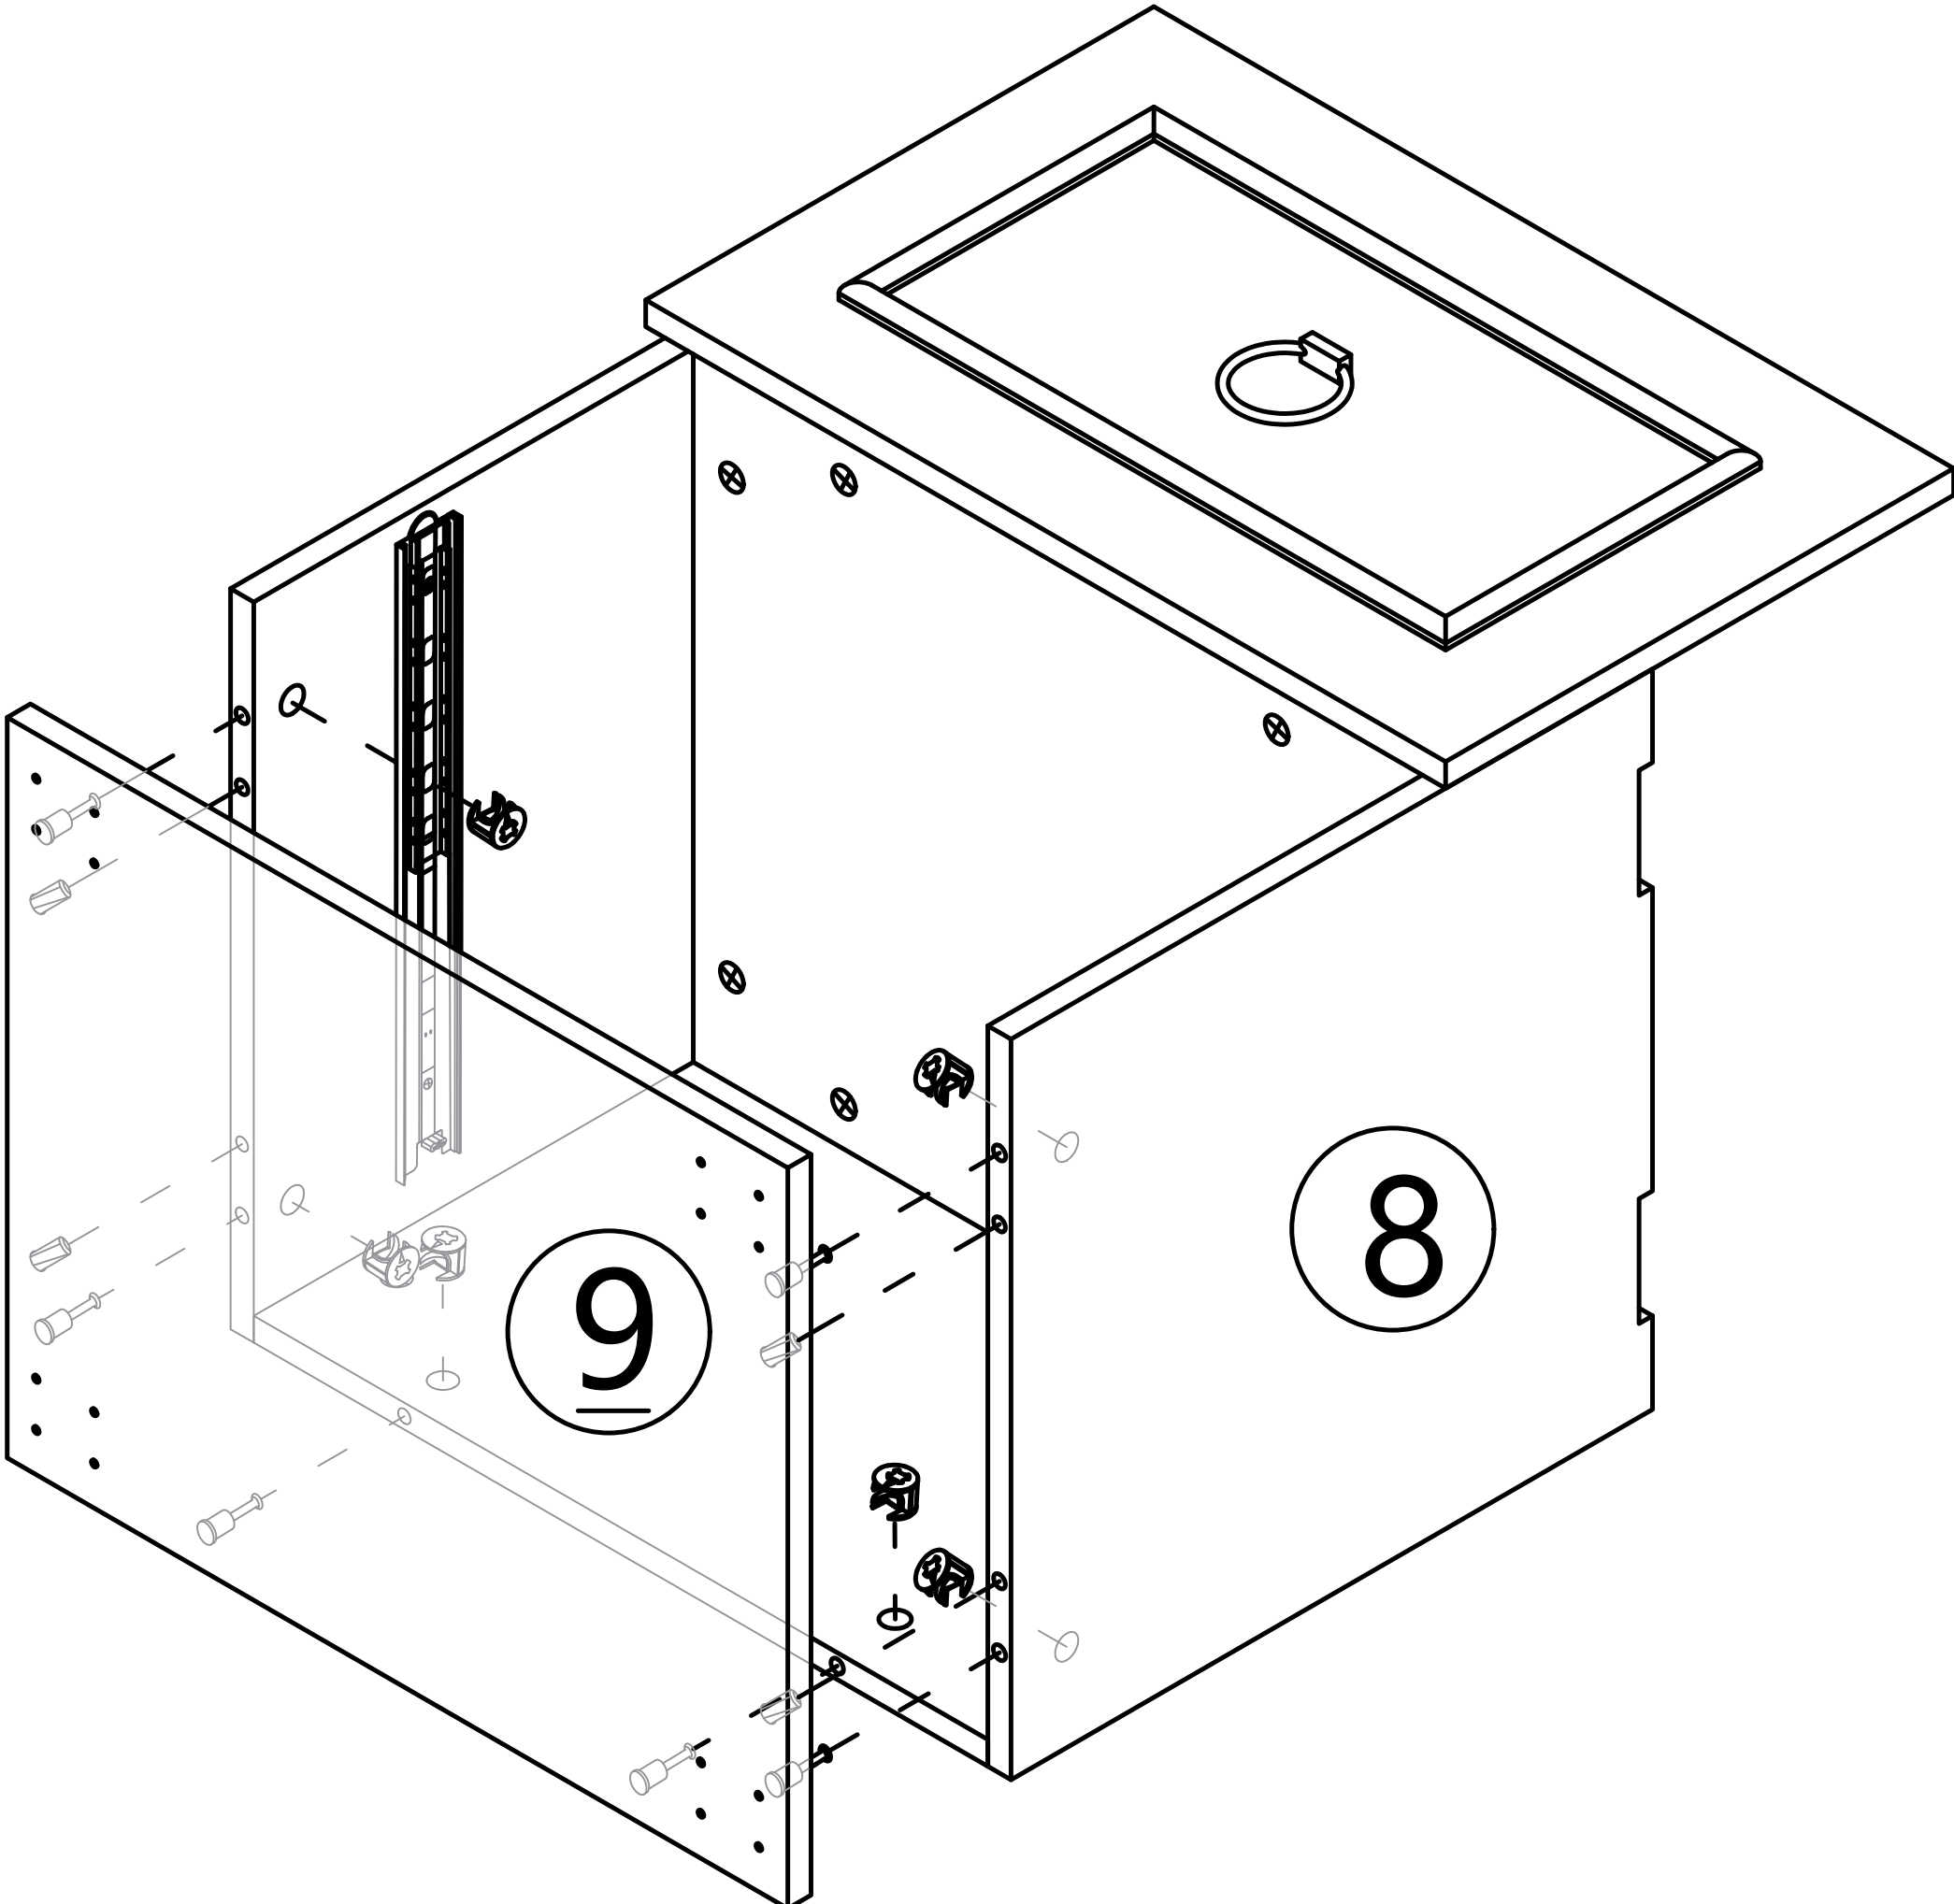


Step 28


E







x4

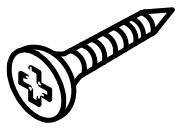

x16




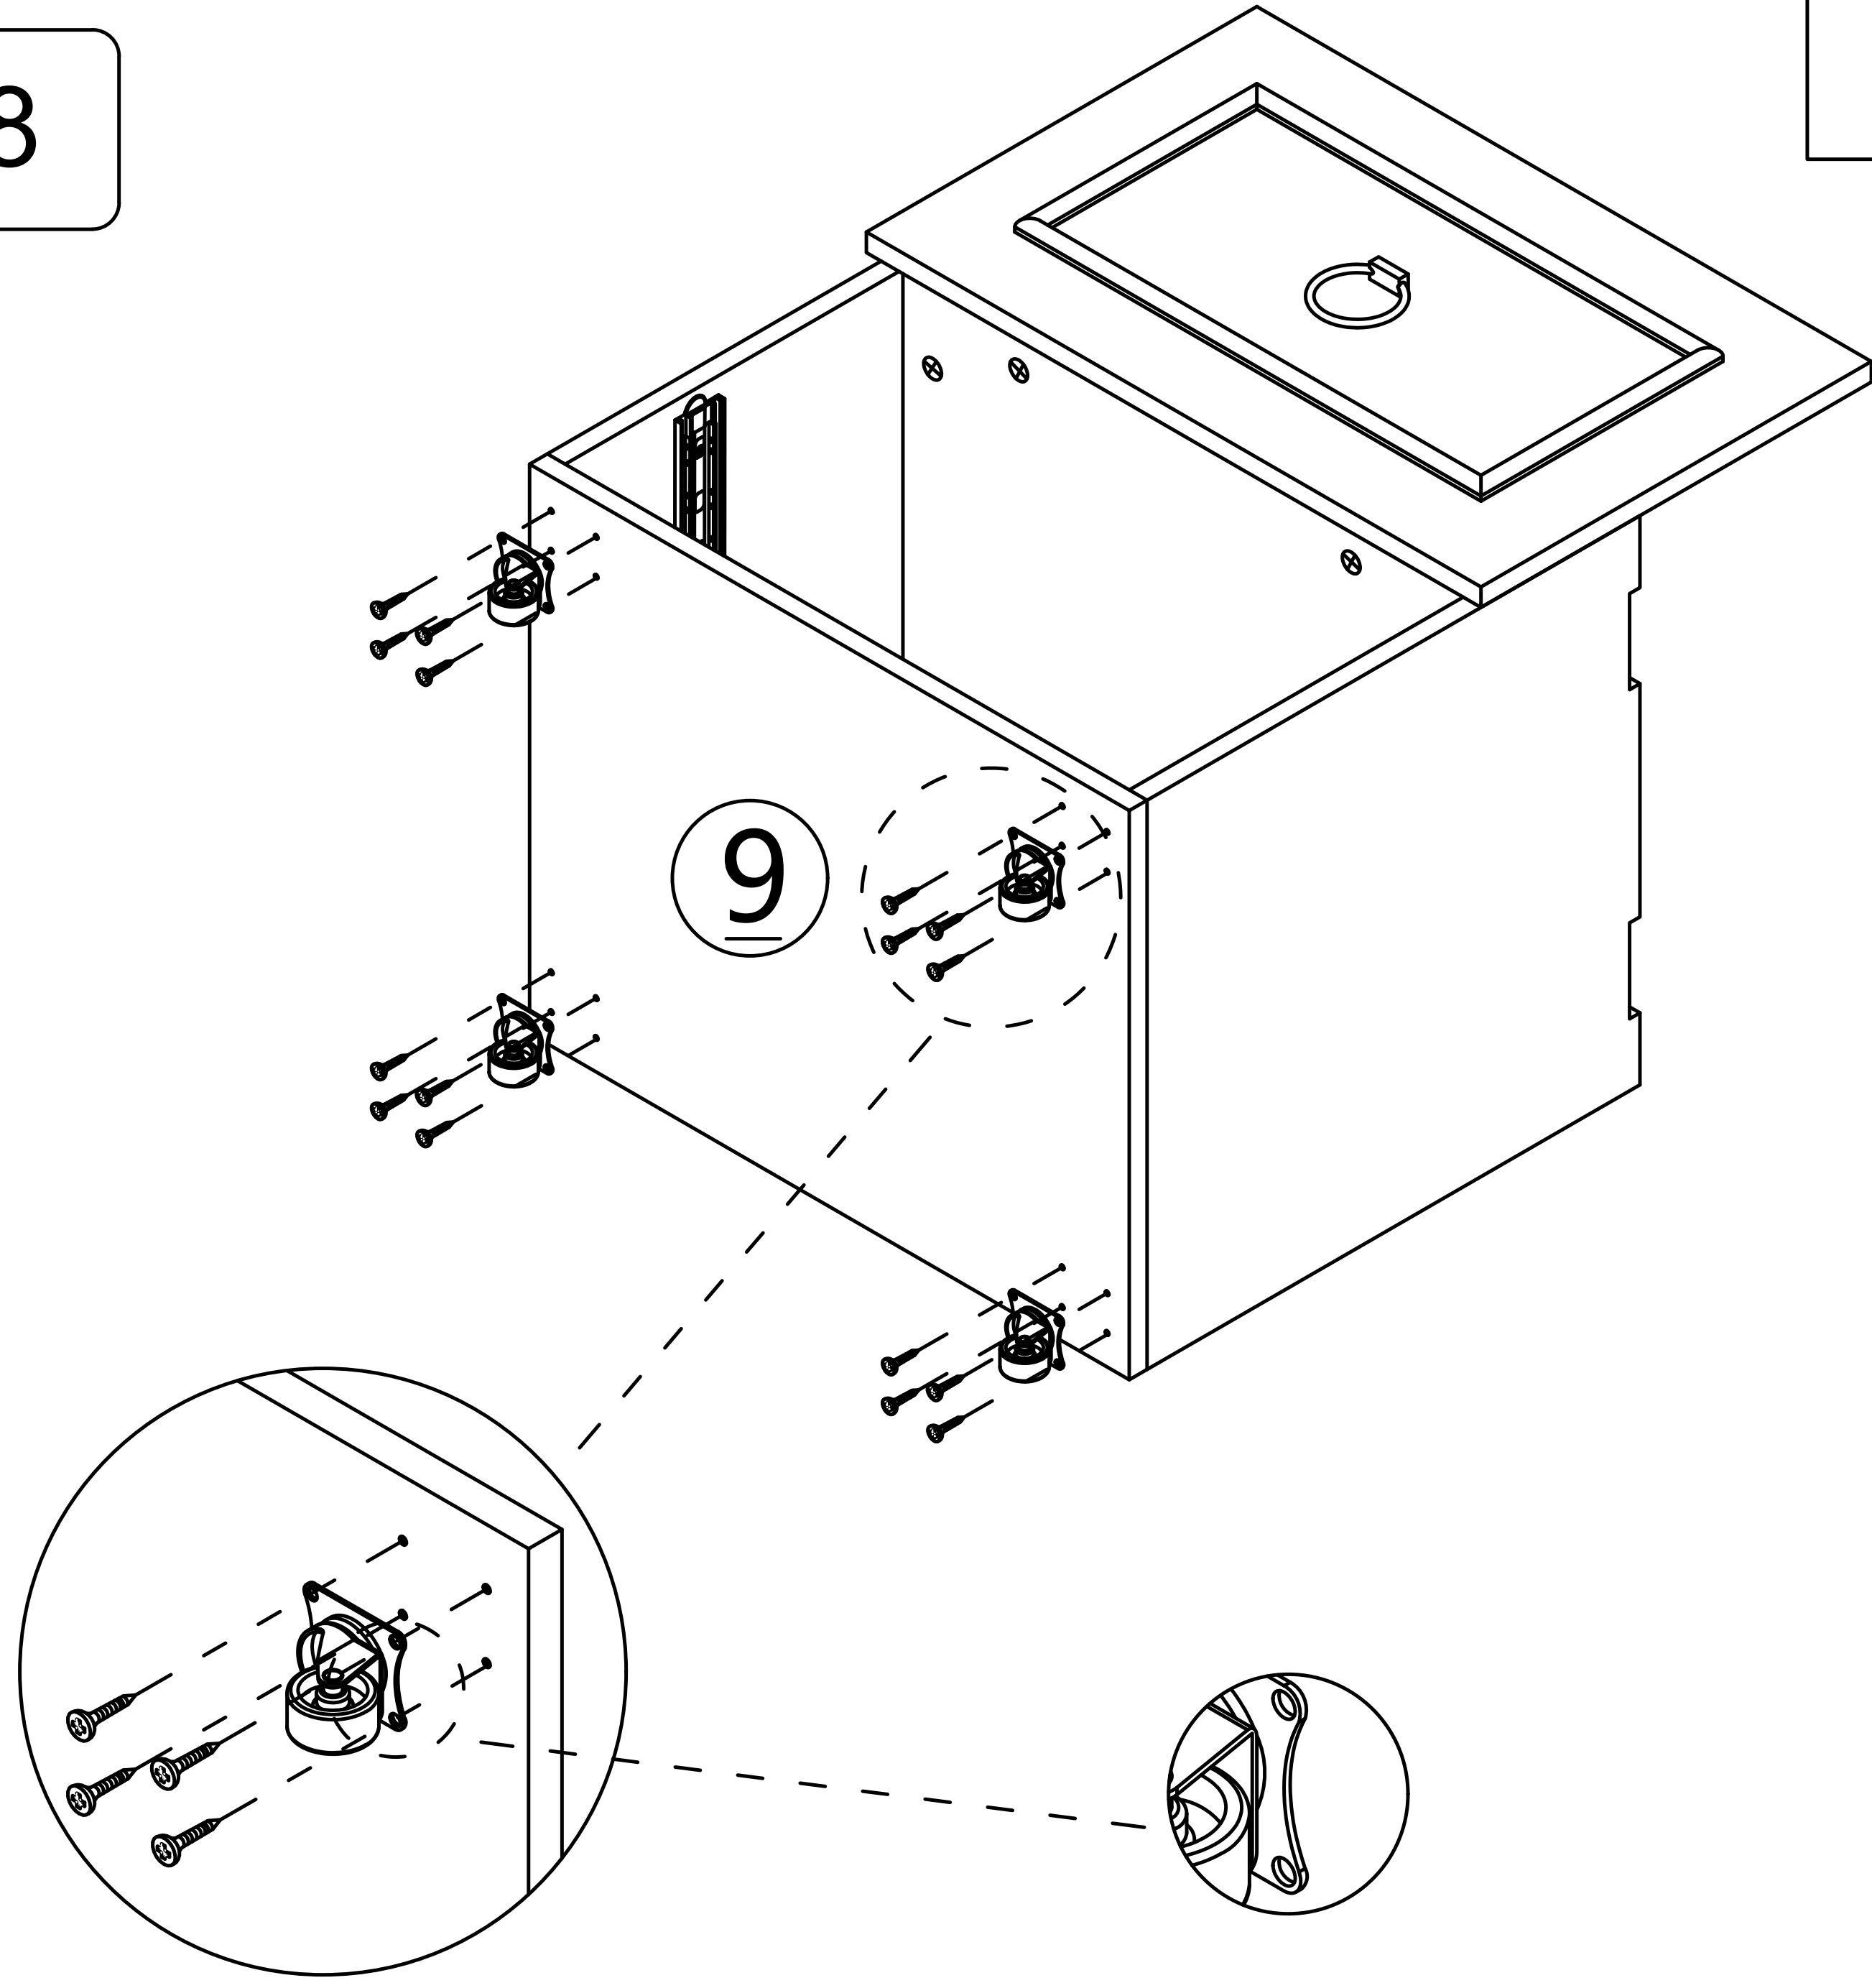


## Step 29

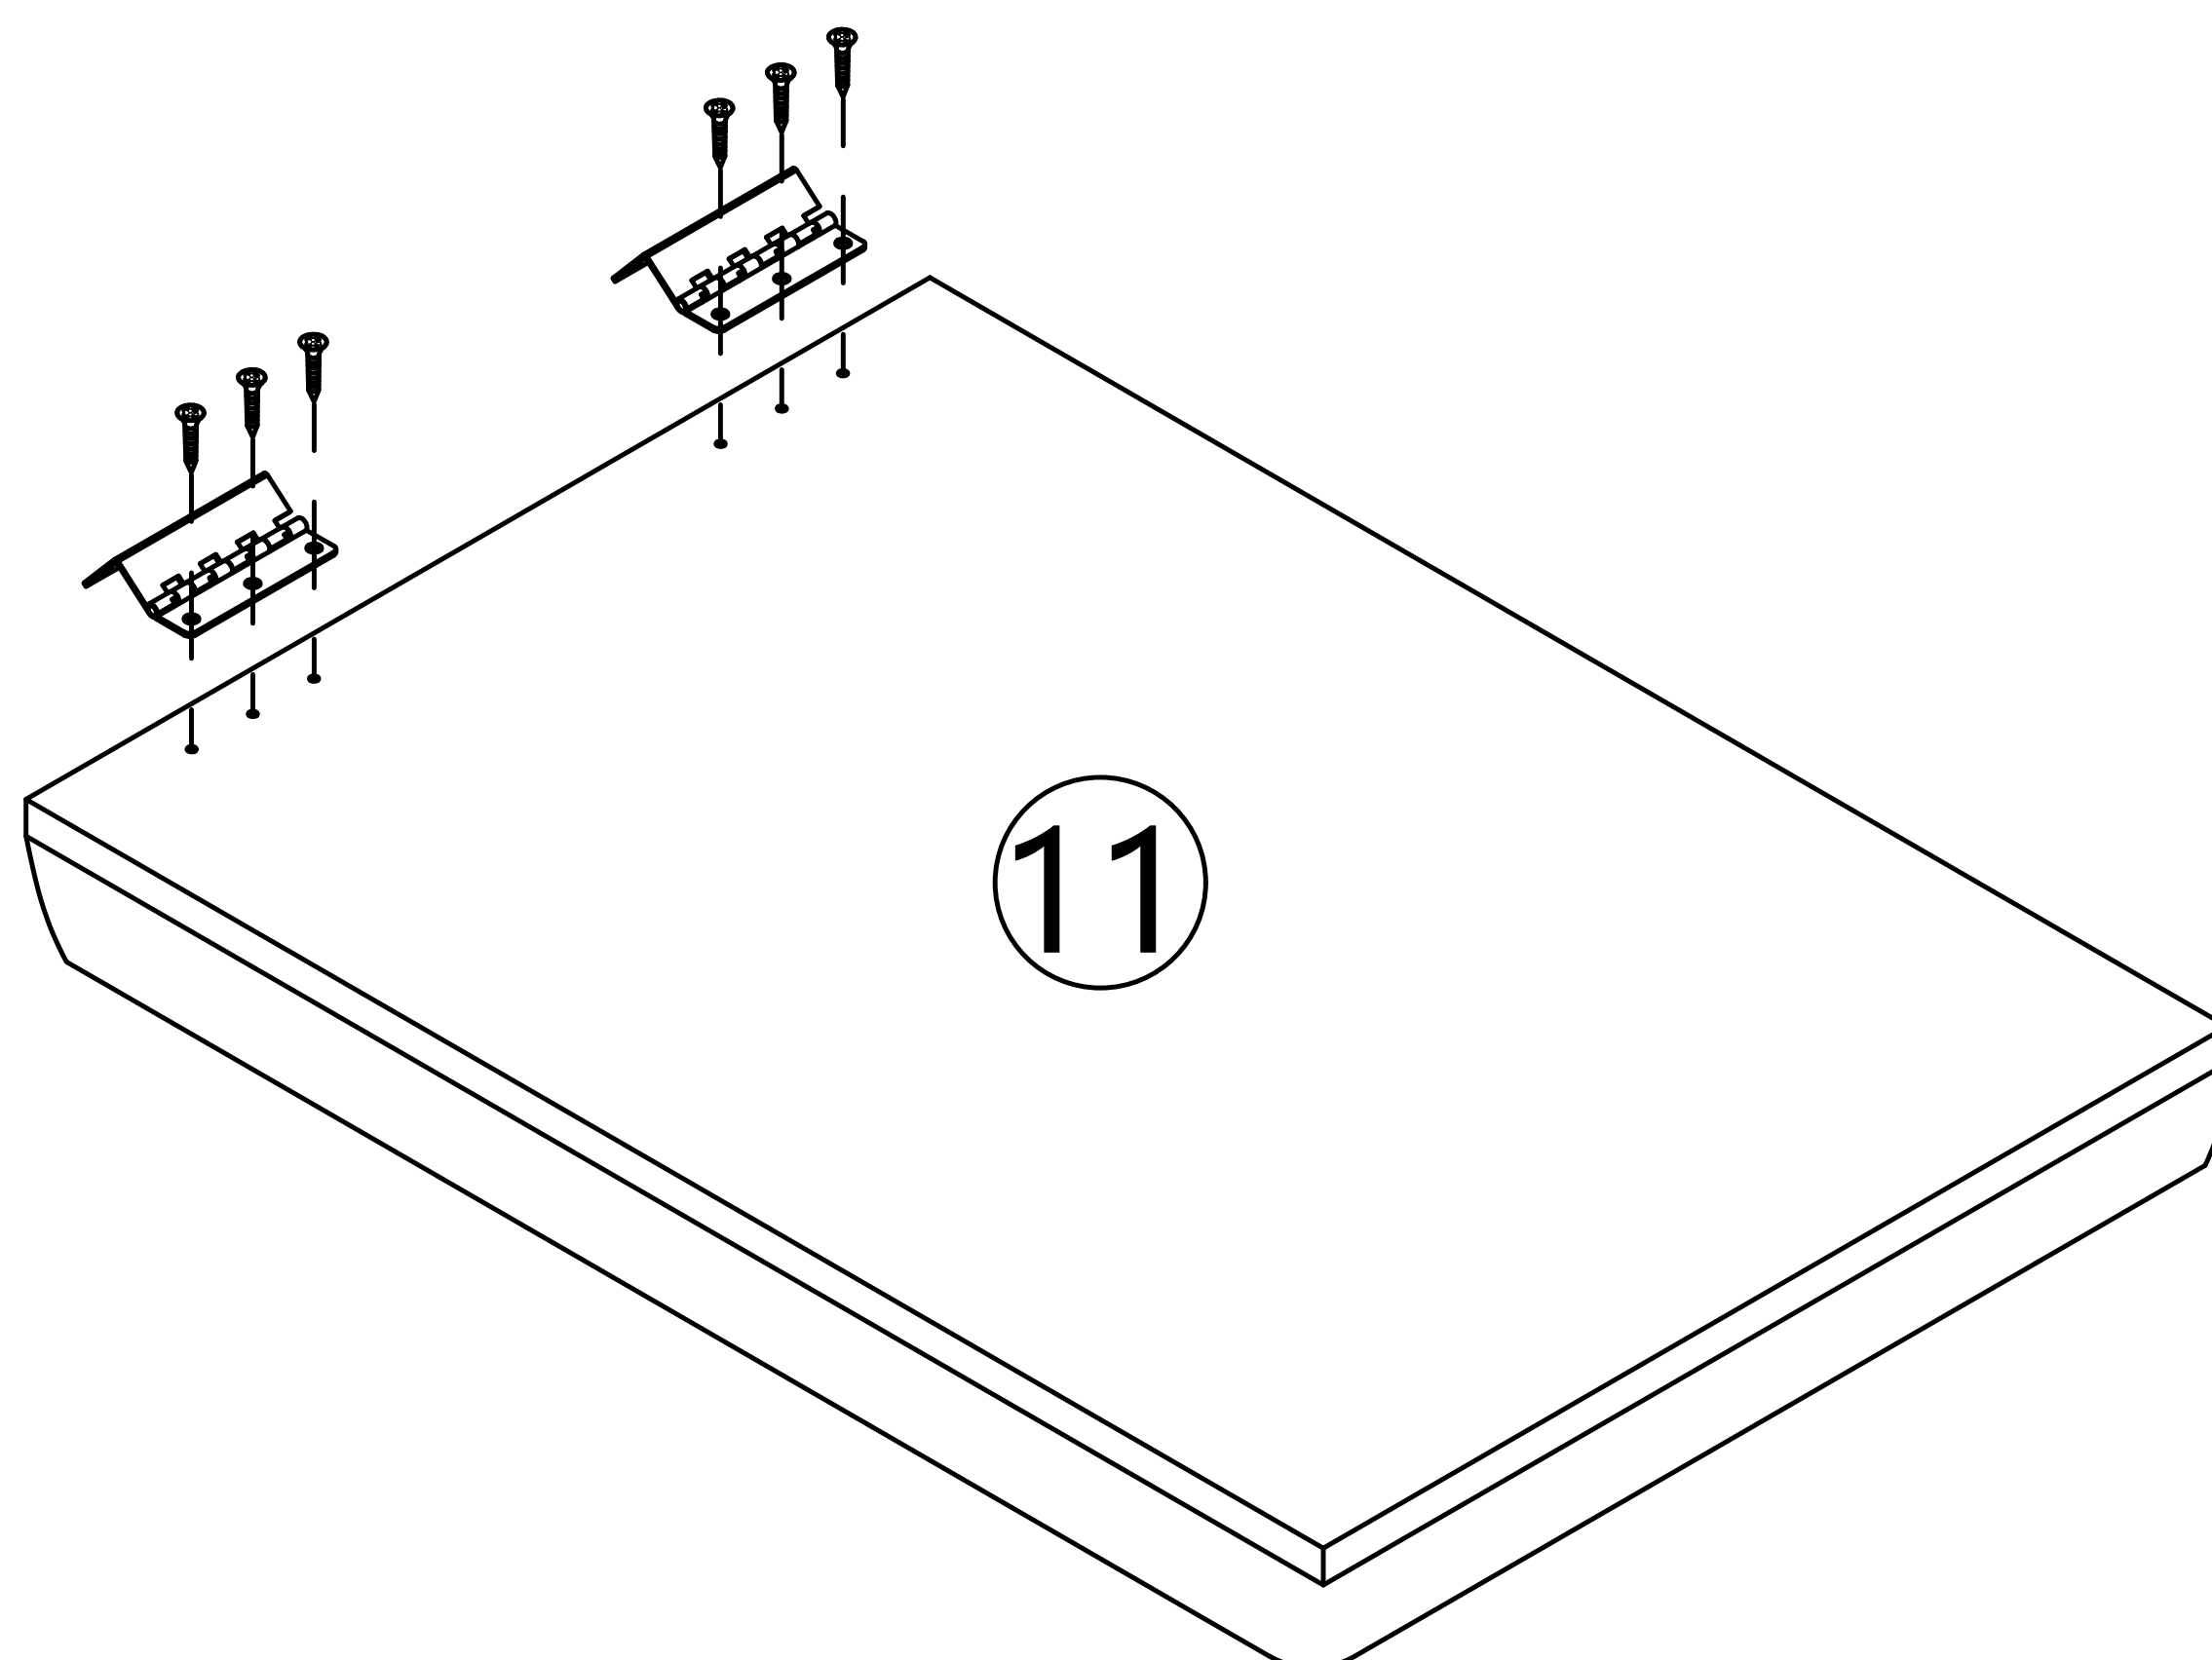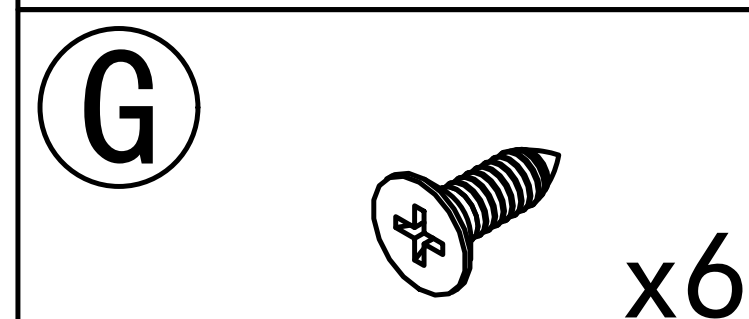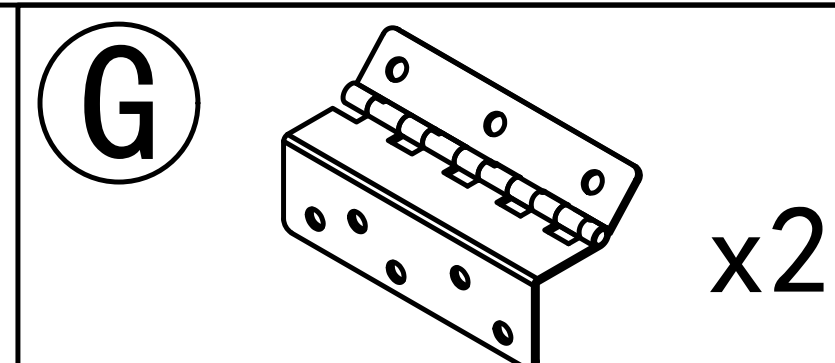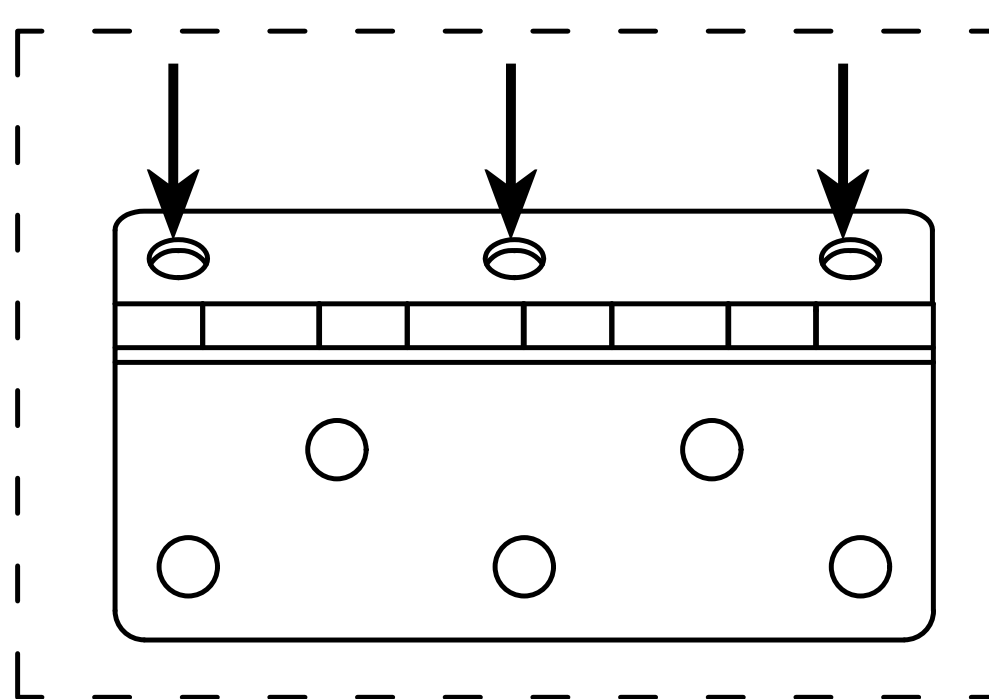

Please note that the screw holes cannot be tightened during installation and require adjustment positions for adjustment



## Step 30

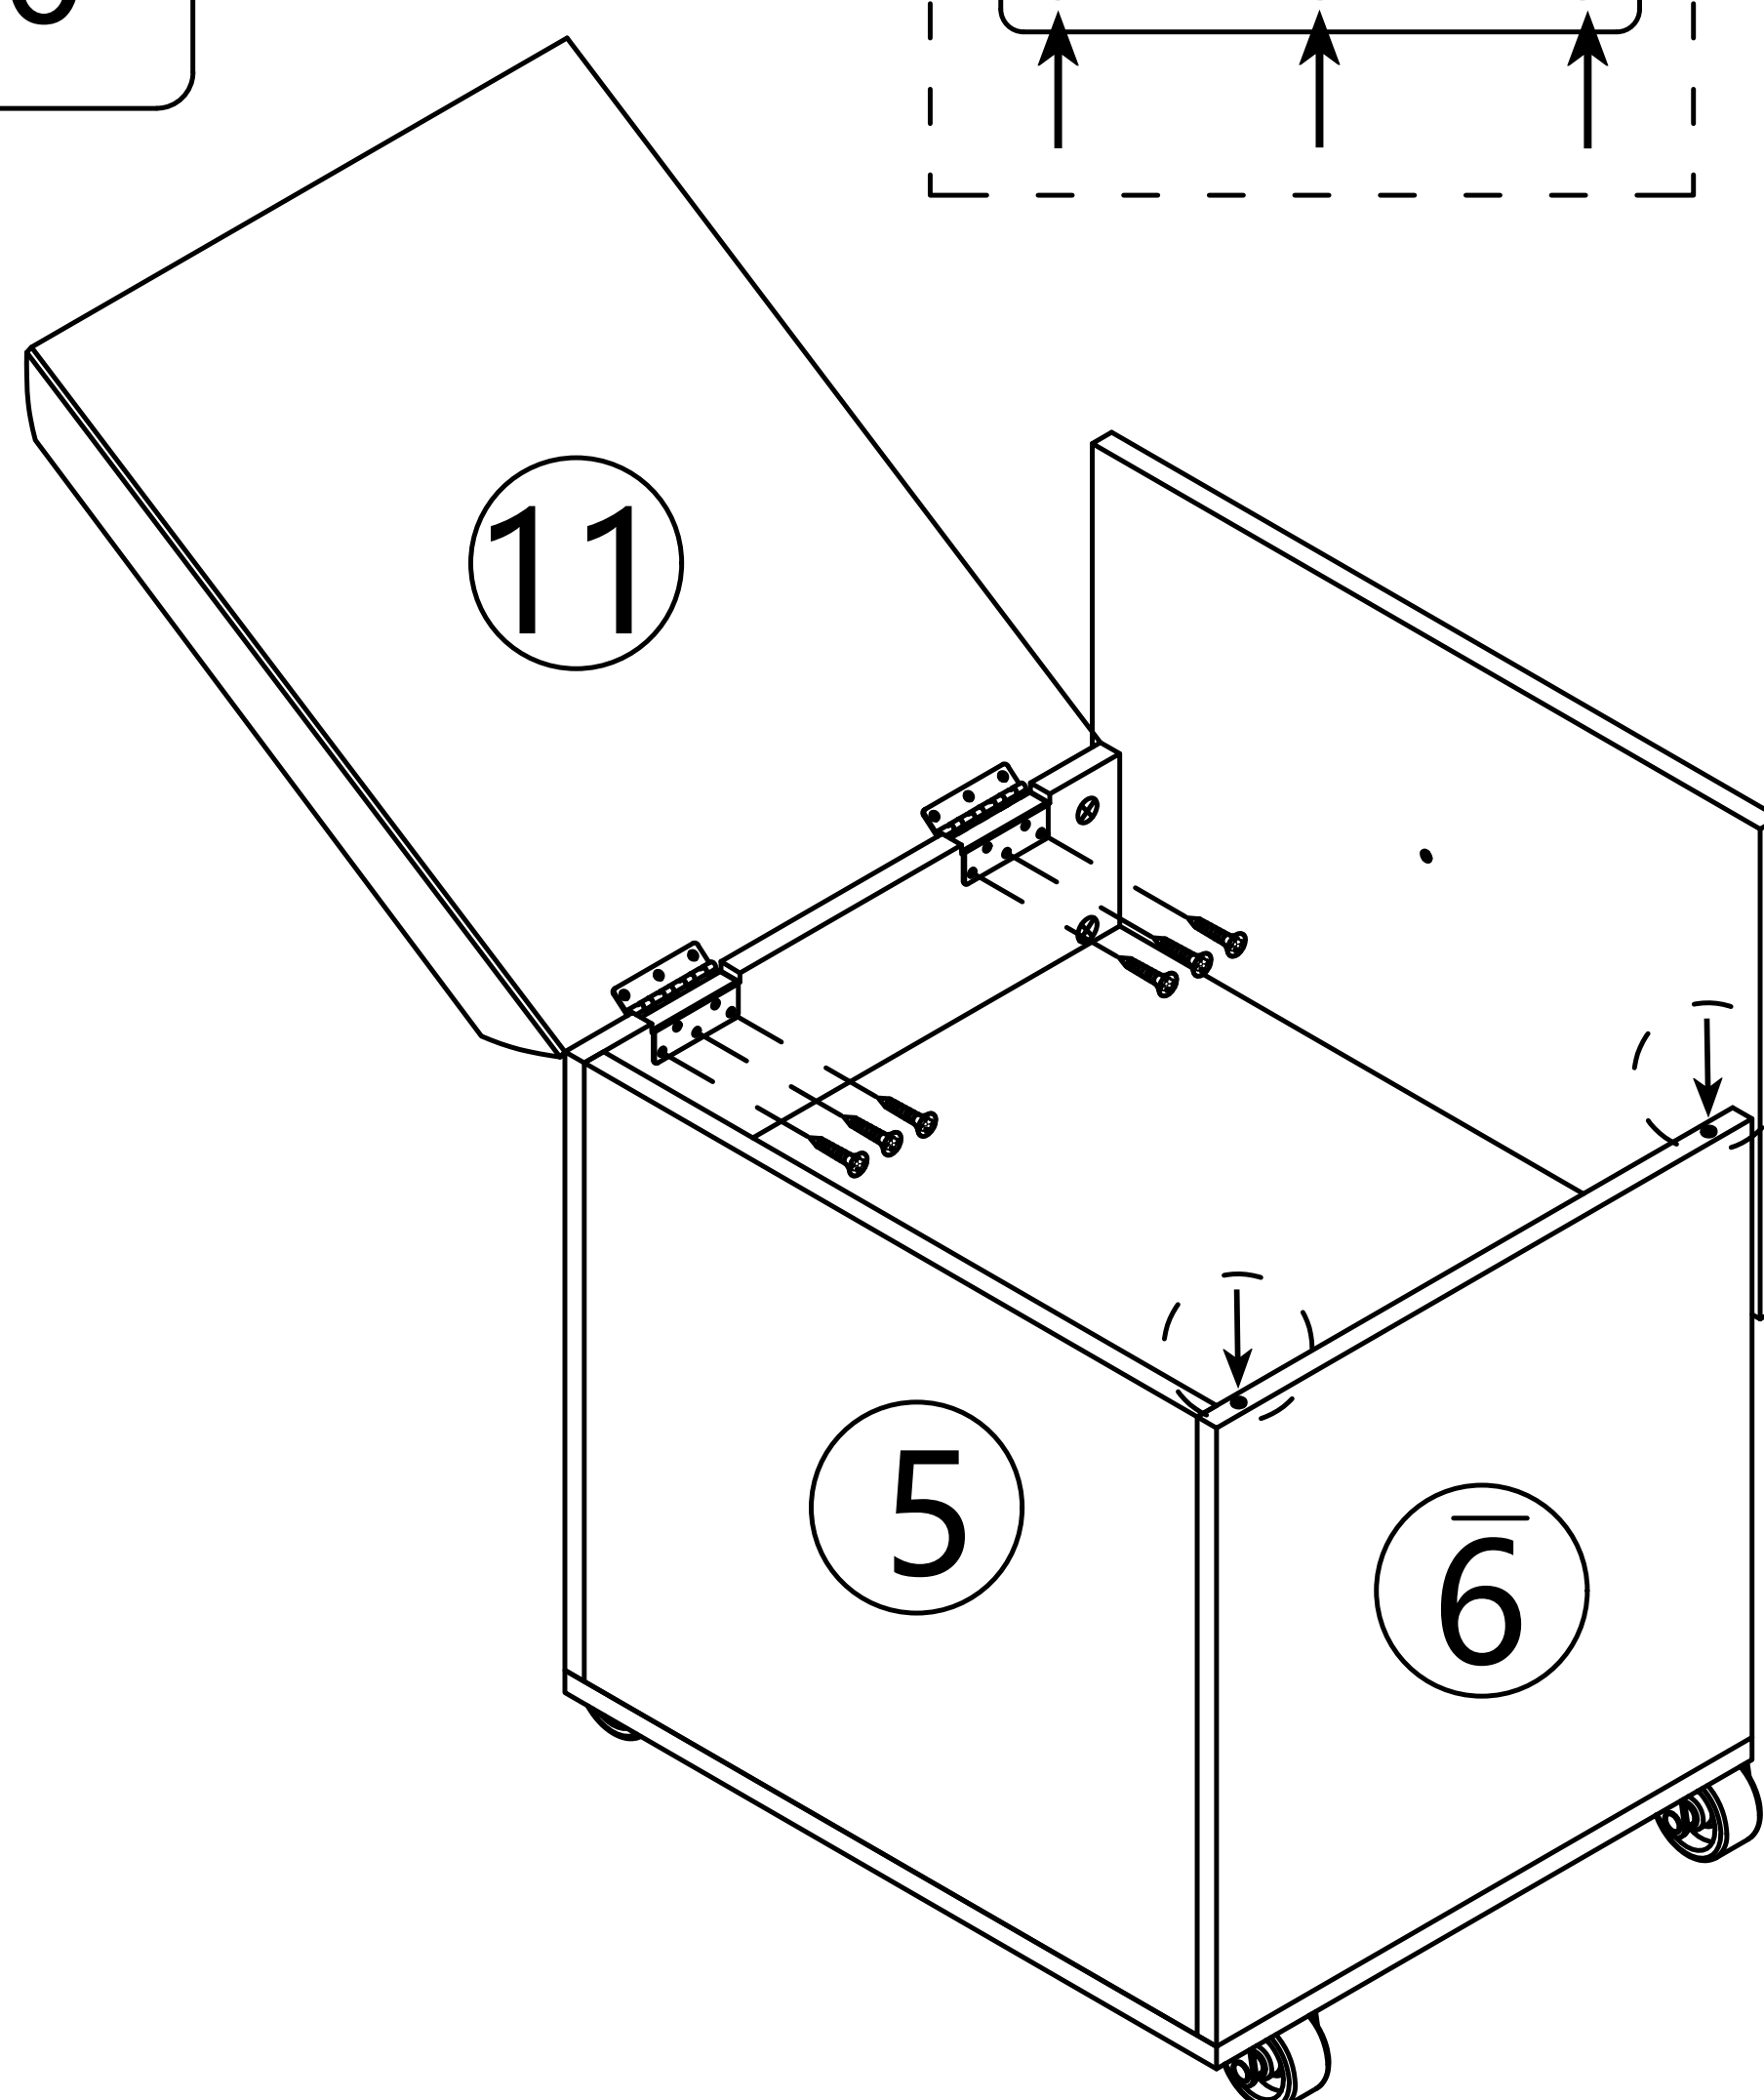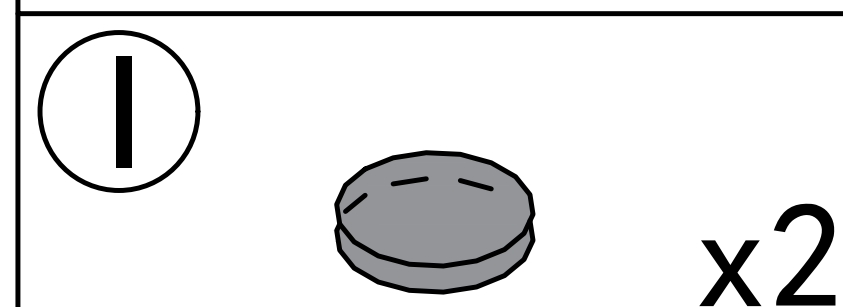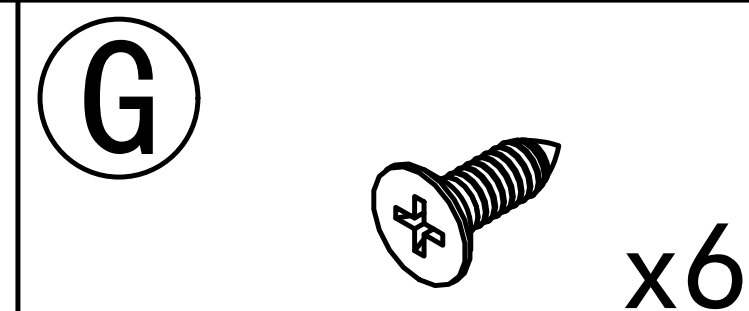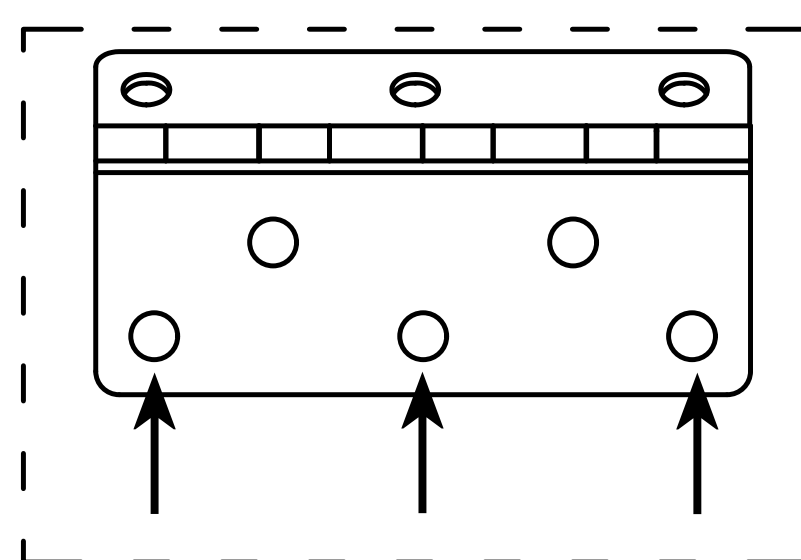

After installing the hinge, tighten all screws

Attention: Please find something to support the stool on your own to prevent it from sliding away during the installation of the 11 boards


## Step 31

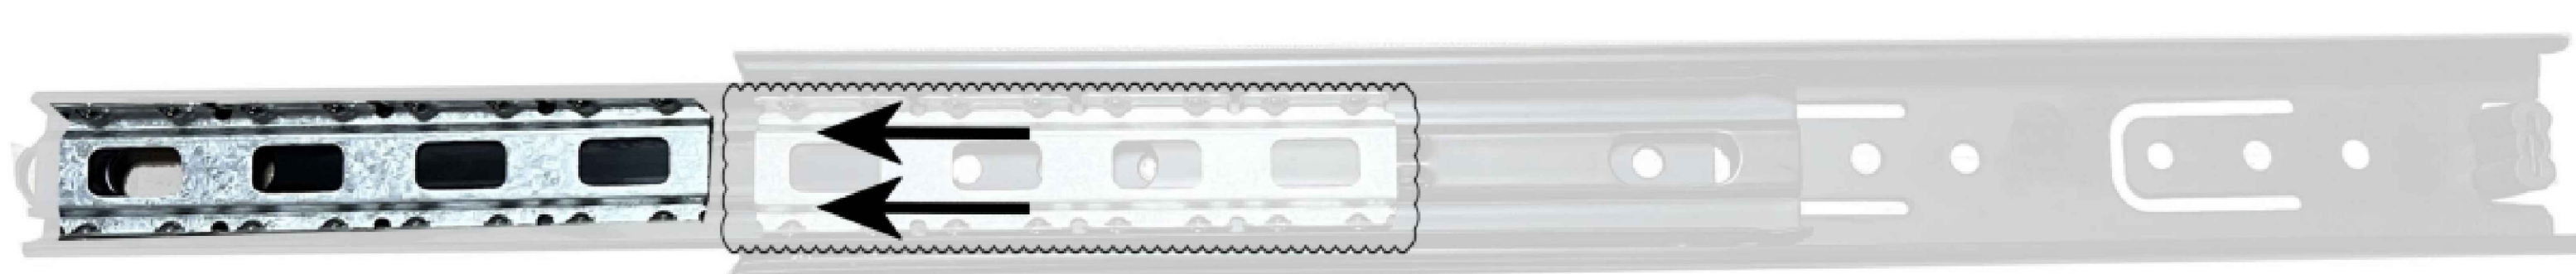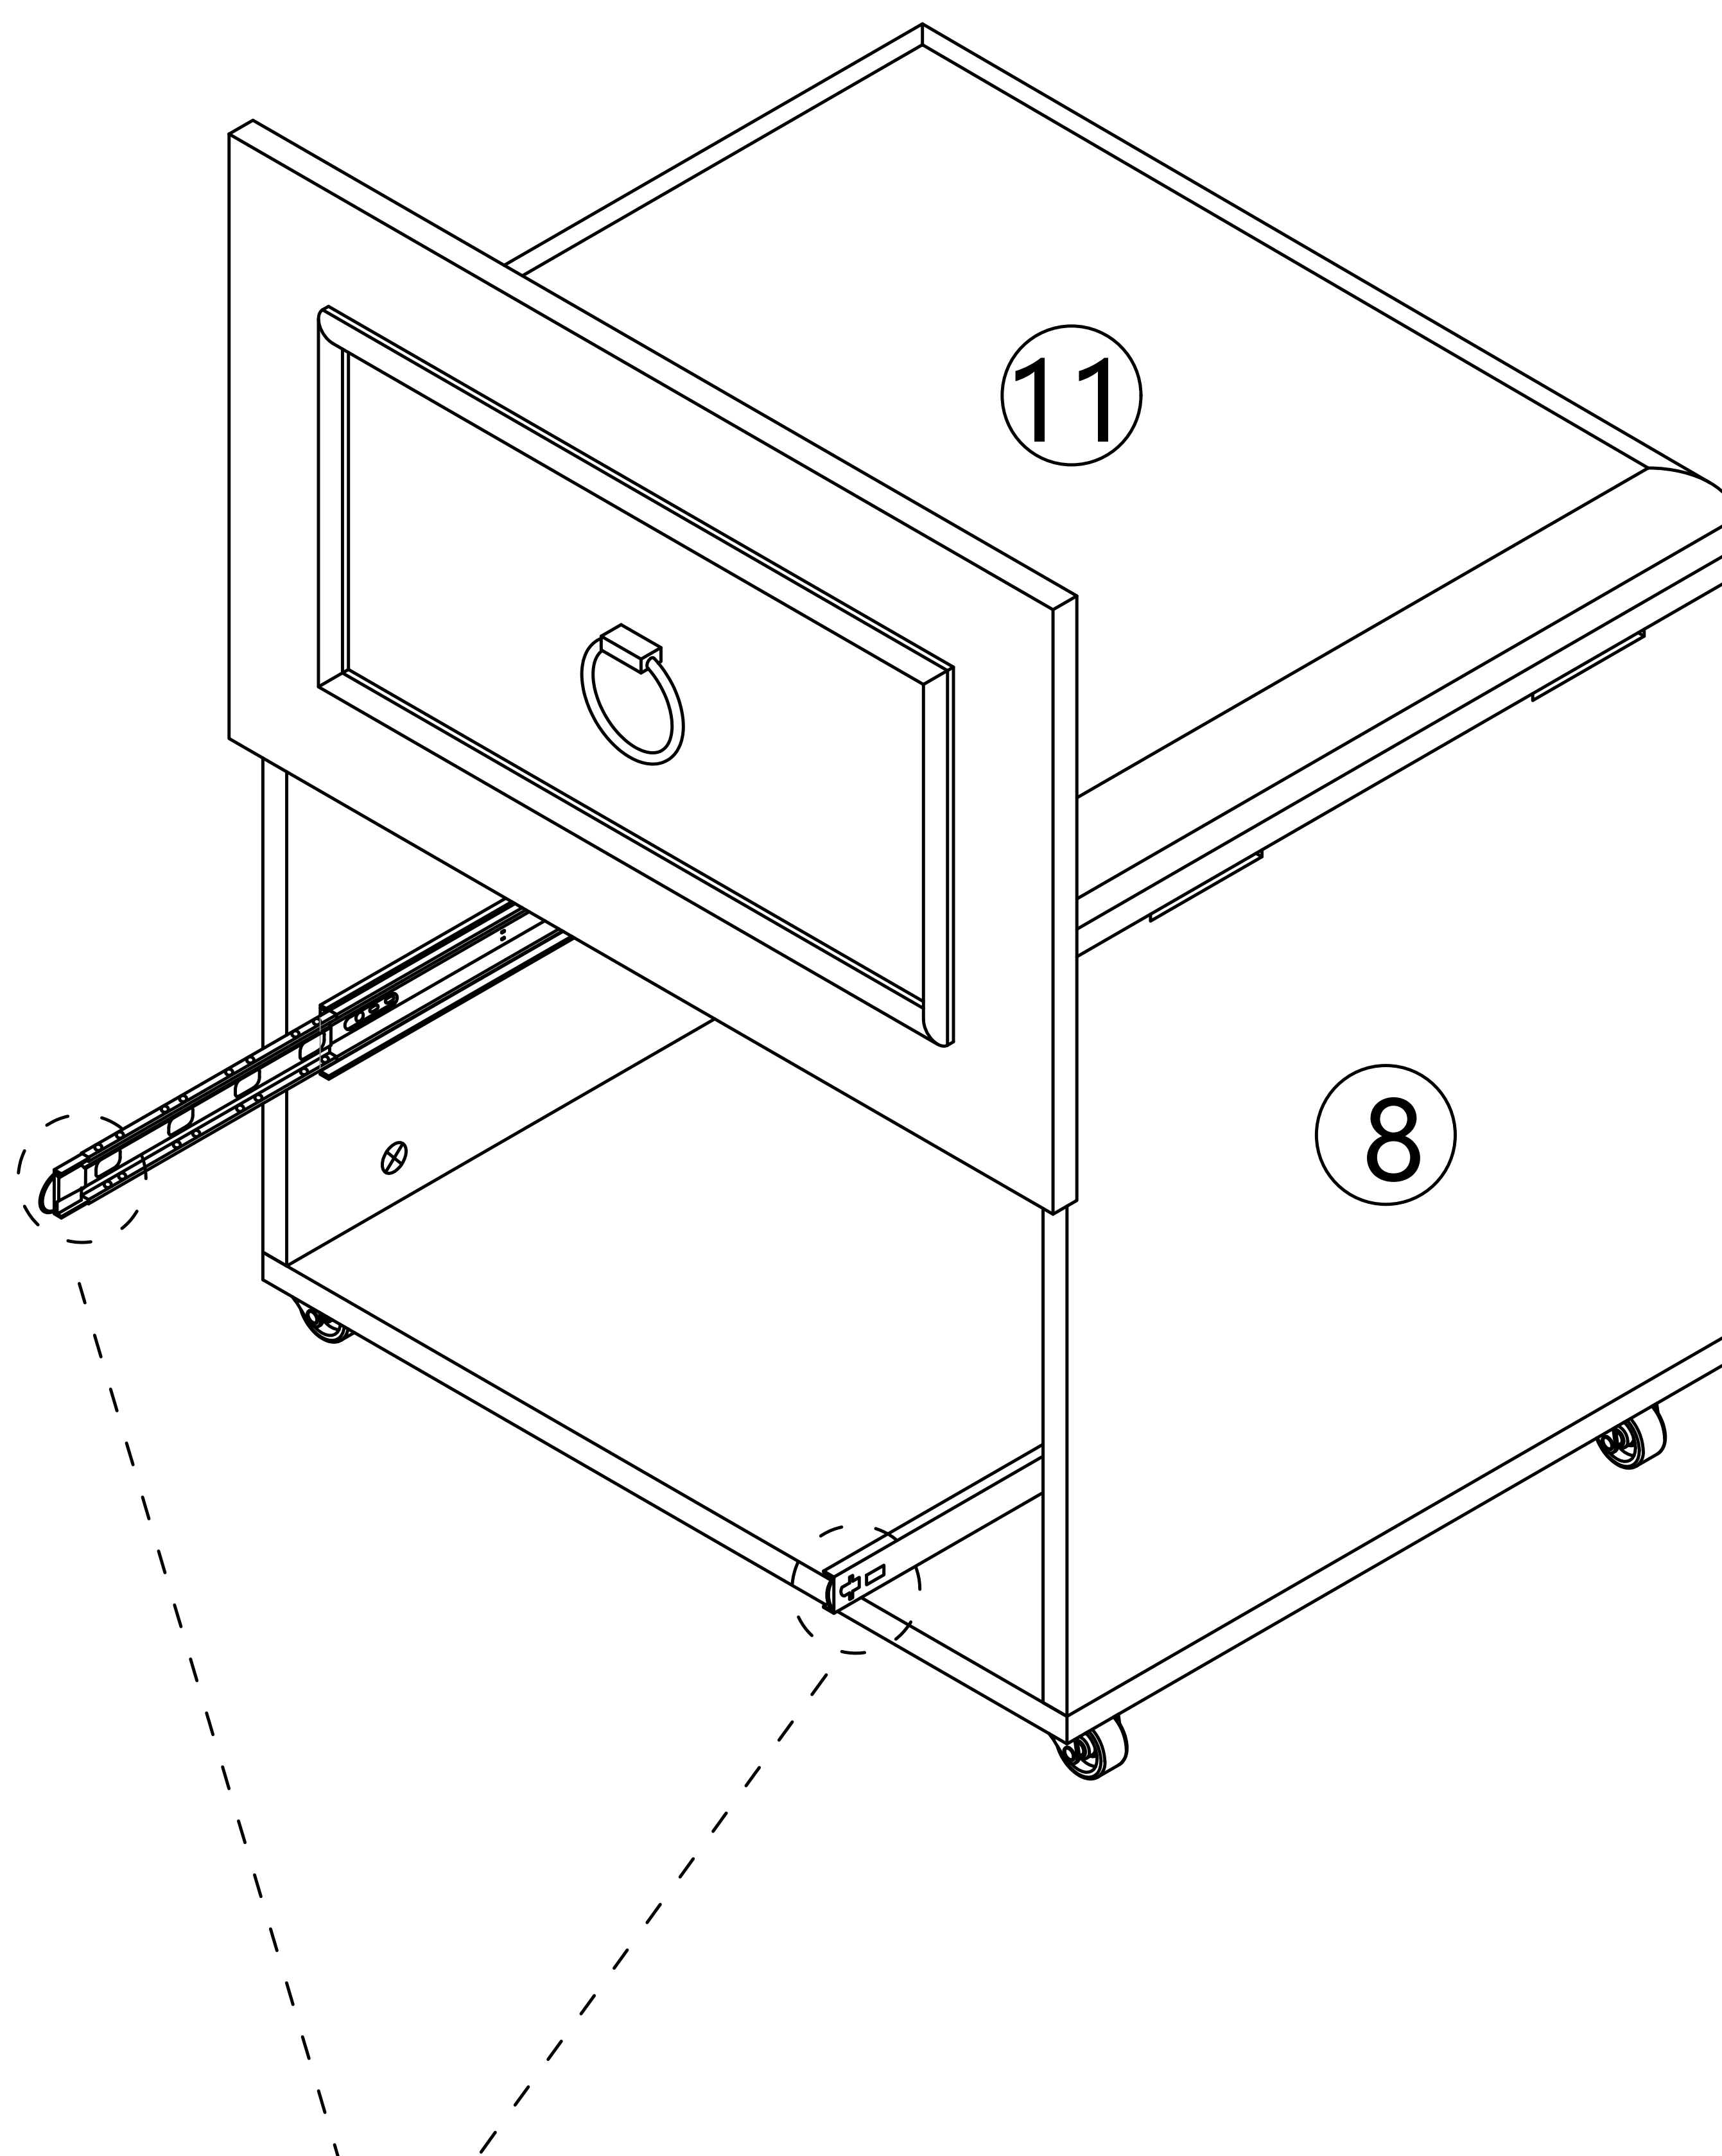

As shown, When installing the drawer,  
pull the guide rail out first, Slide beads are also pulled out.





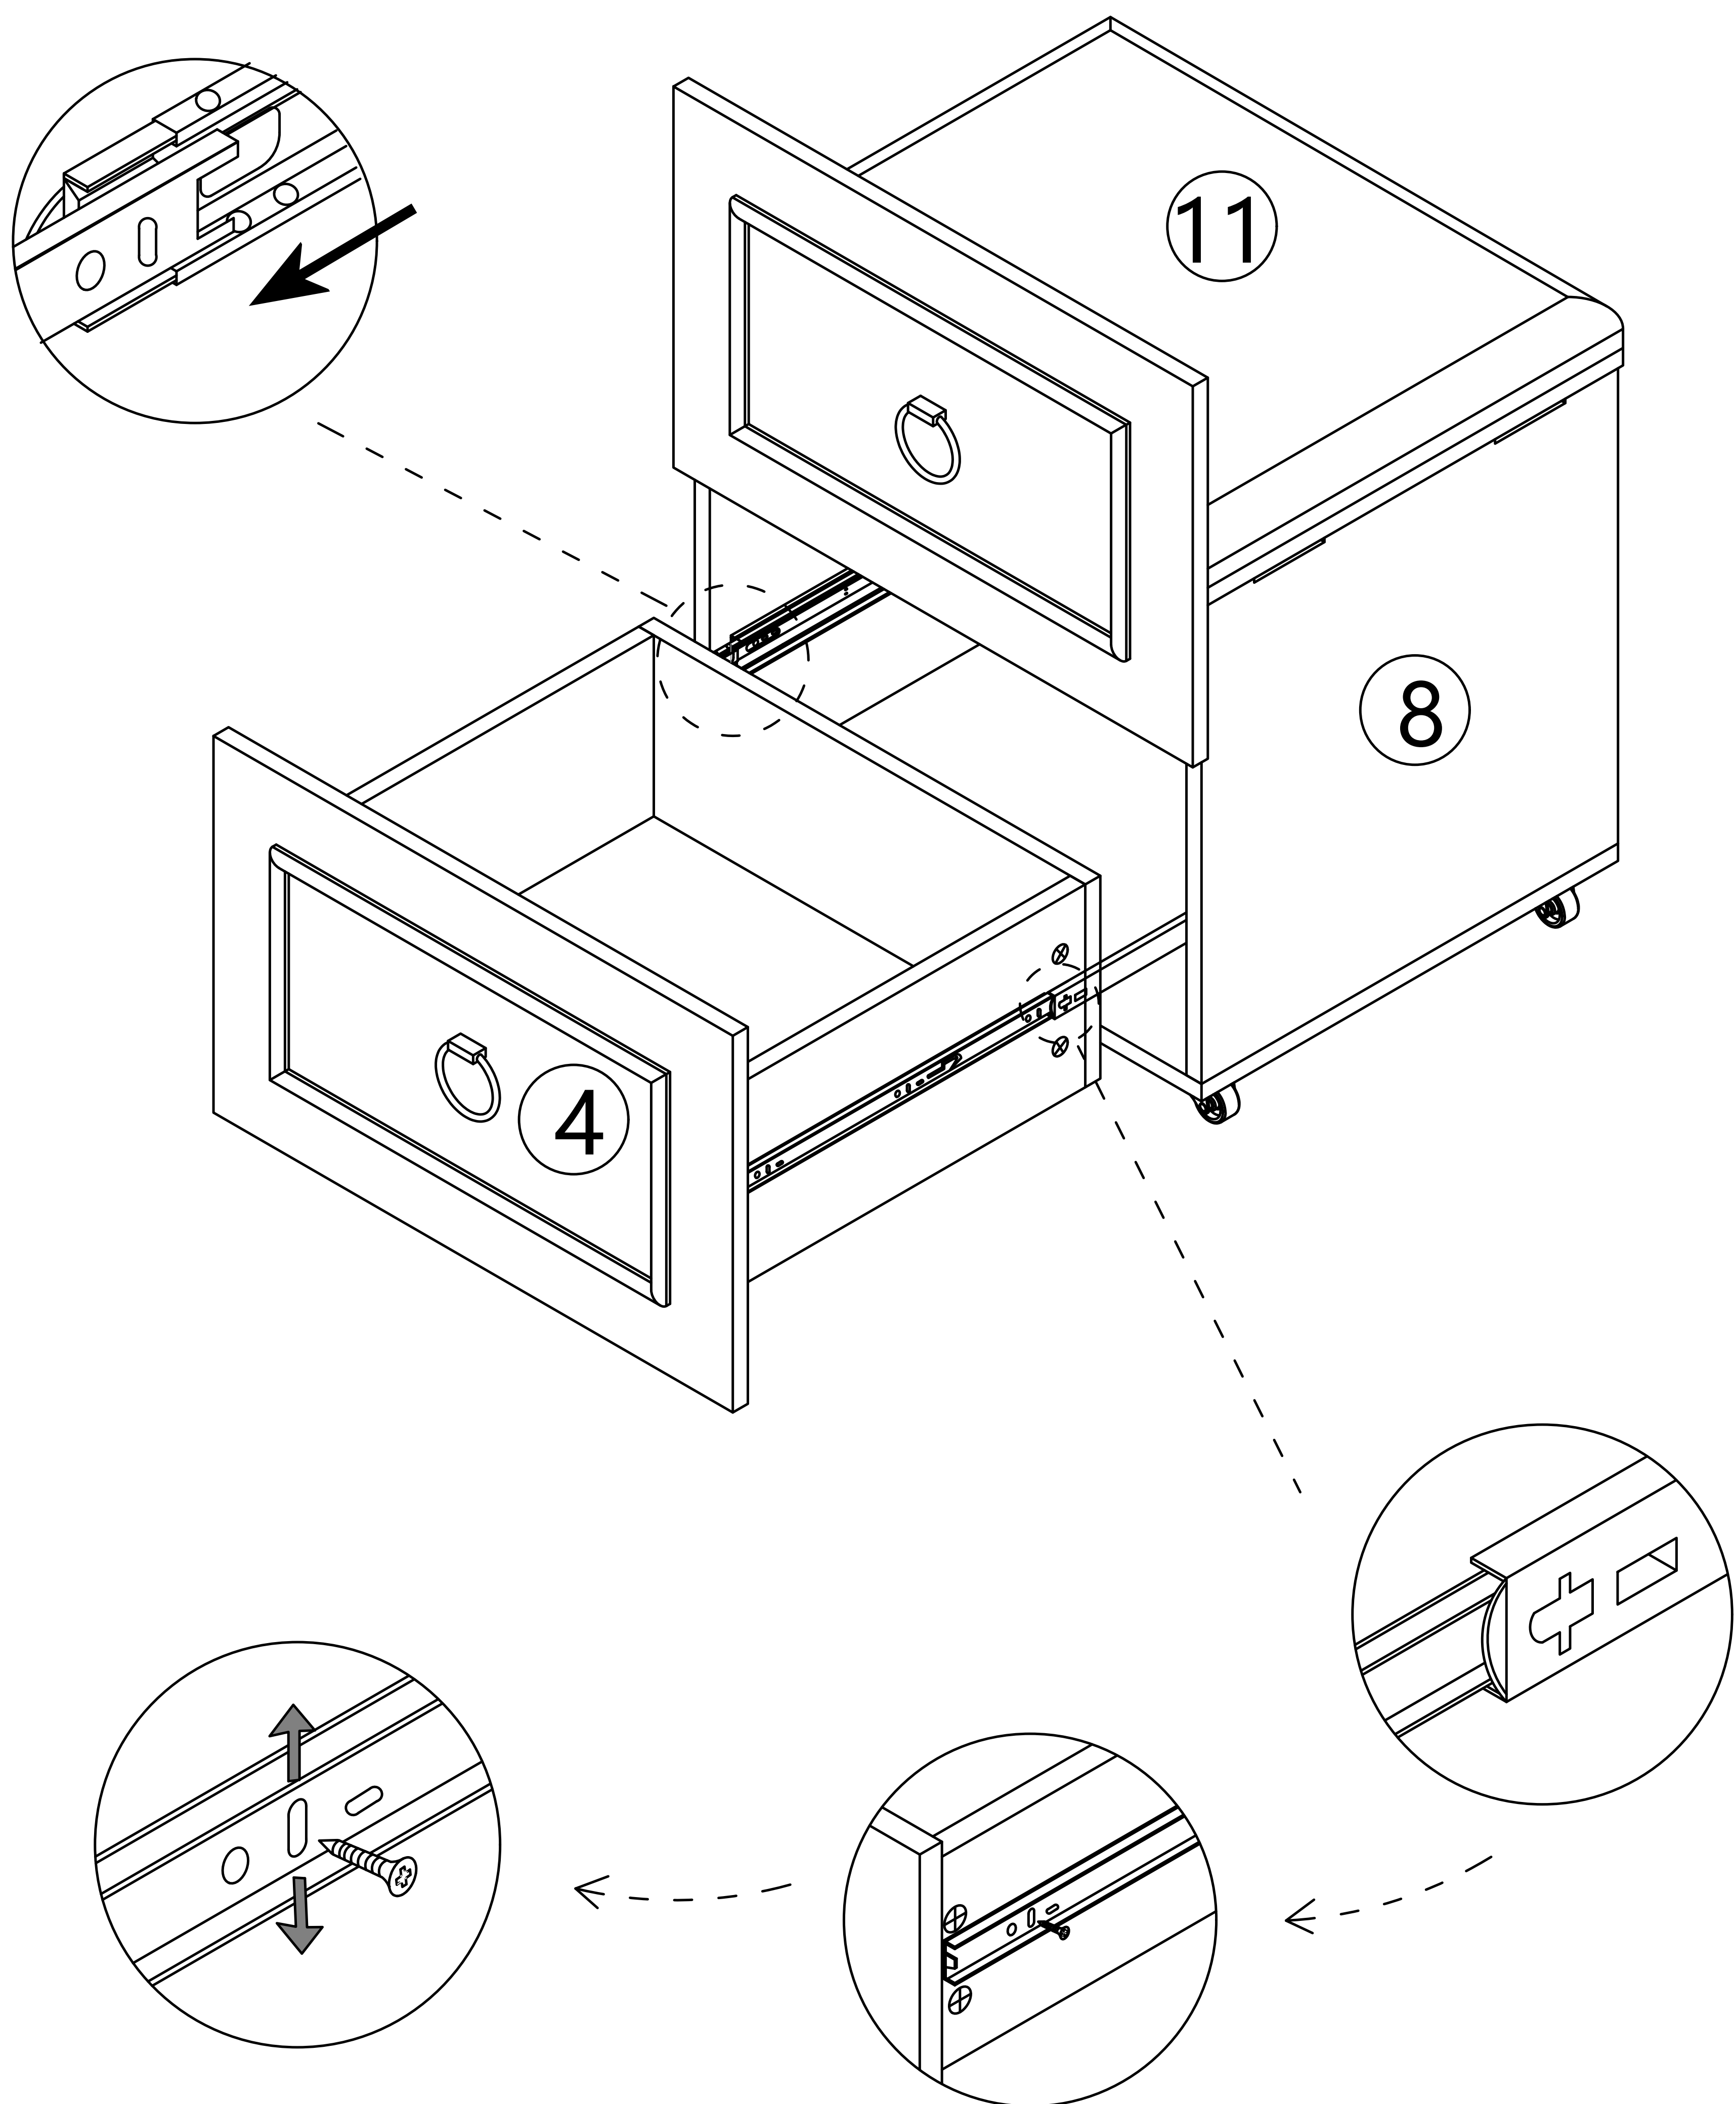


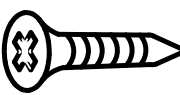
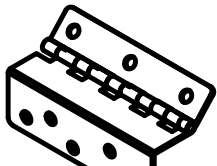
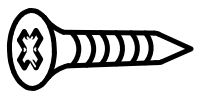

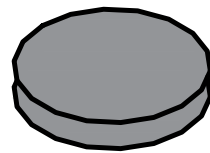

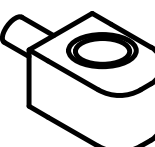

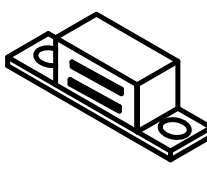



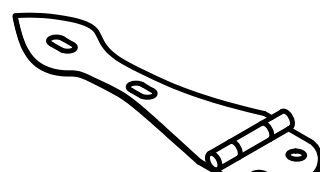
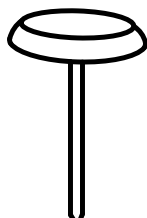
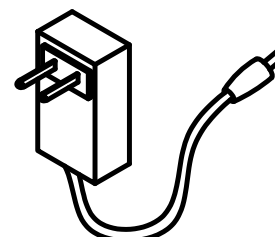





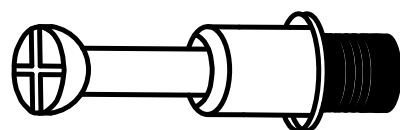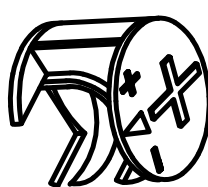


## Step 32



If a large gap is found after installing the drawer the slide rail can be moved up and down to adjust the gap

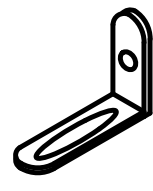



A		71pcs	B		71pcs	C		16pcs	
D	 2pcs	 2pcs	 2pcs	F	 4pcs	 6pcs	G	 2pcs	 16pcs
H		4pcs	I		2pcs	J		1pcs	
K		4pcs	L	 2pcs	 1pcs	M	 4pcs	 2pcs	
N	 16pcs	 4pcs	O		6pcs		 1pcs		
P	 2pcs	 4pcs	 2pcs	 (3. 5x14mm) 2pcs	 (4x45mm) 2pcs				

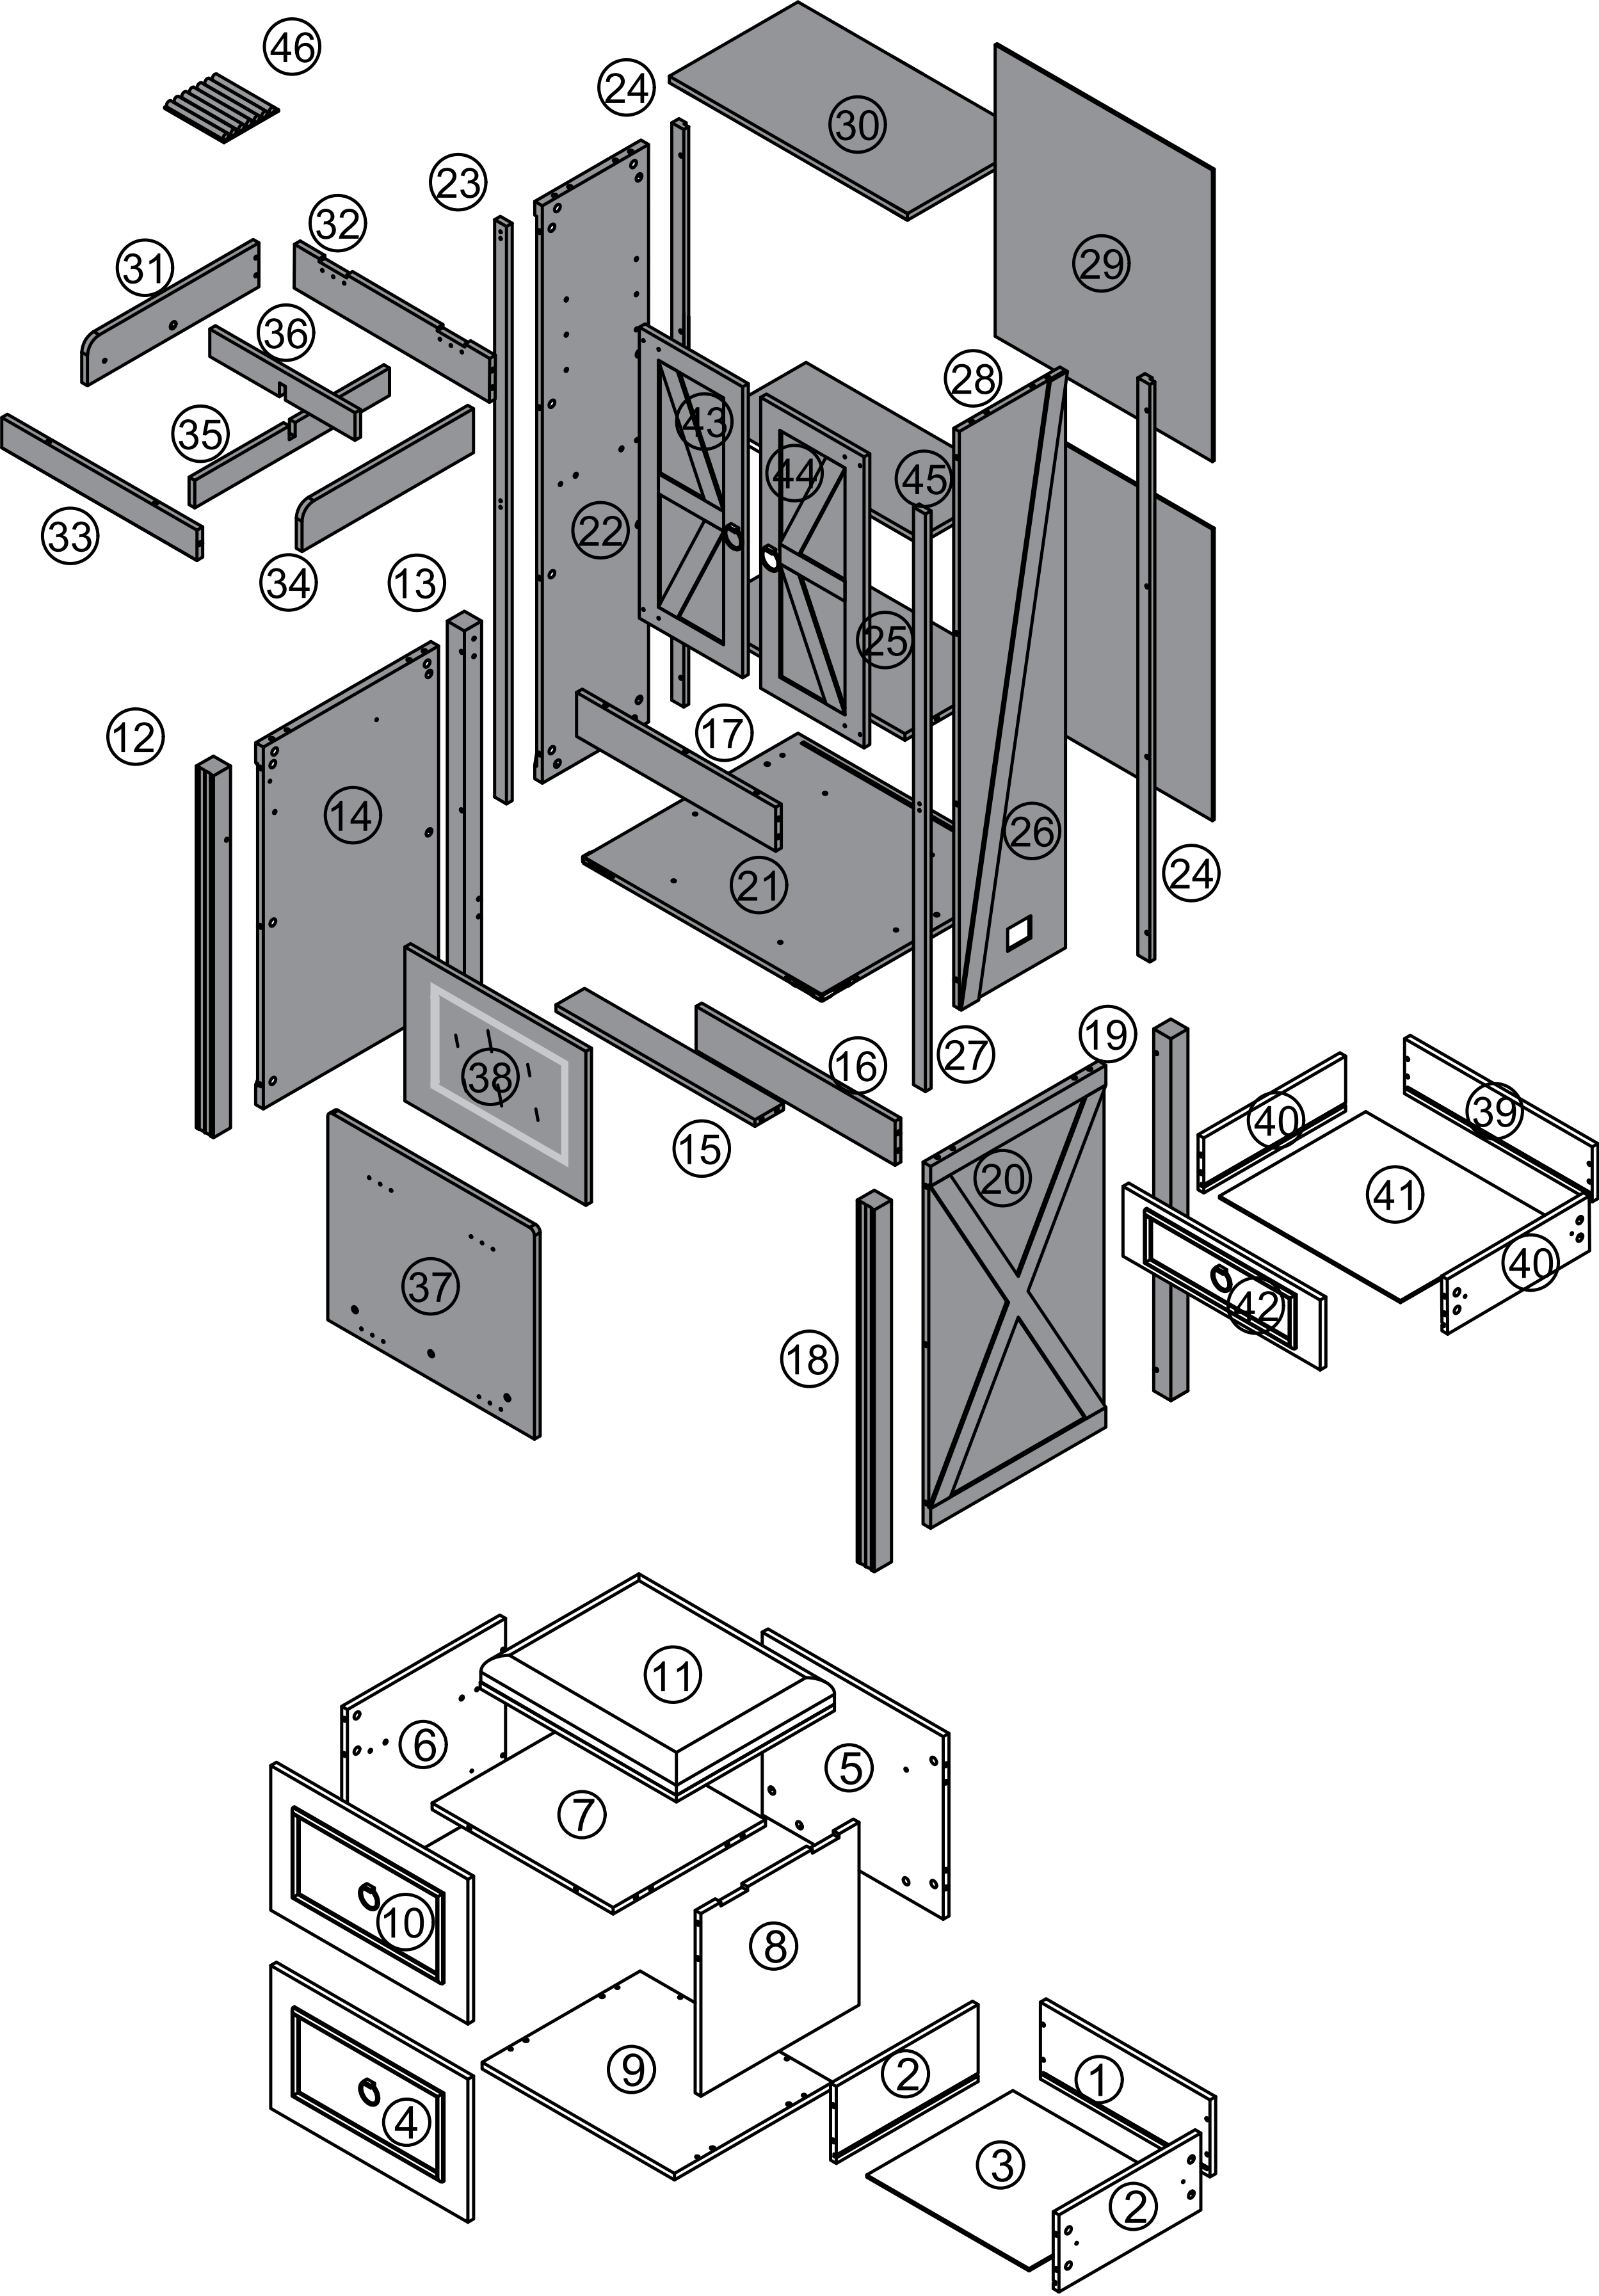


Step 33

- A

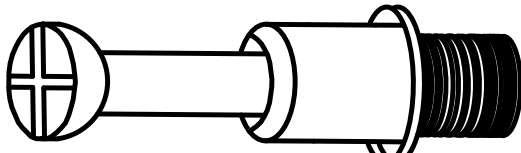x6
- B

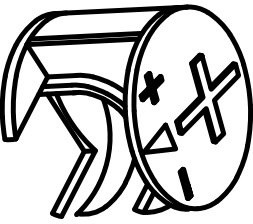
x6

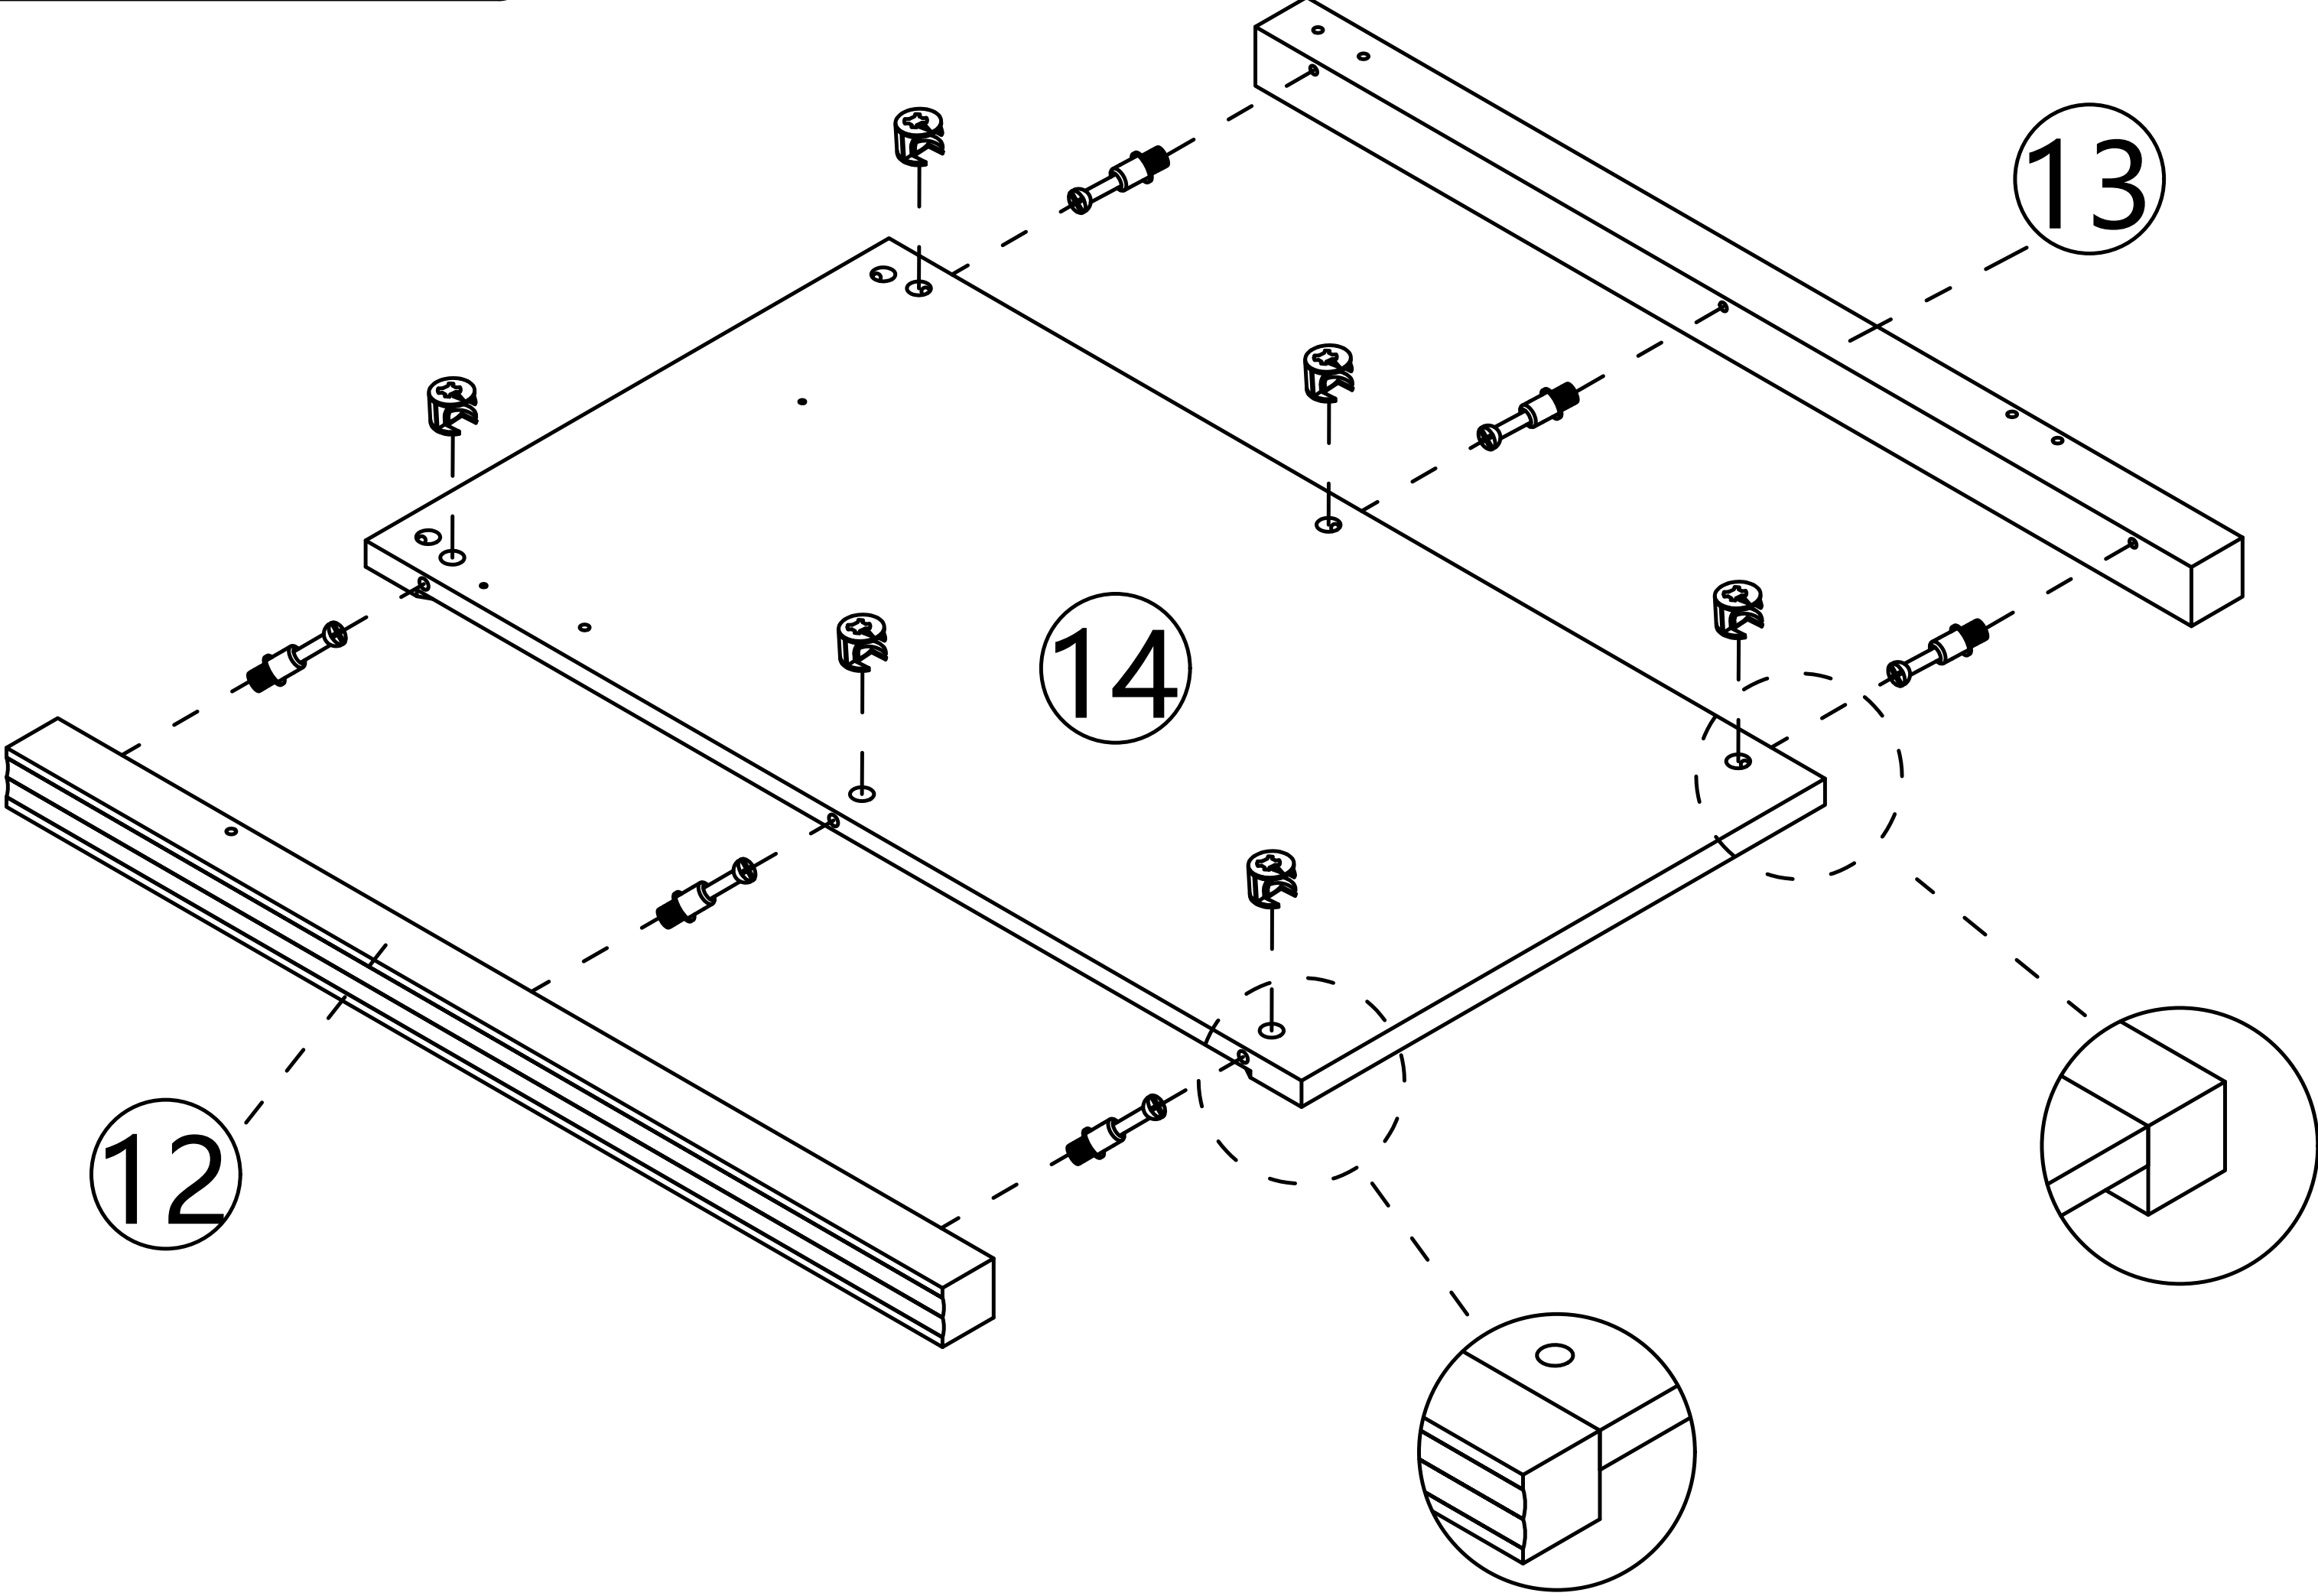


Attention: First install the two in one, then install the nut

Step 34

- F

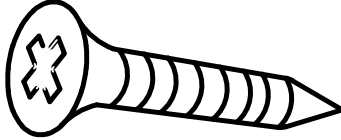
x2

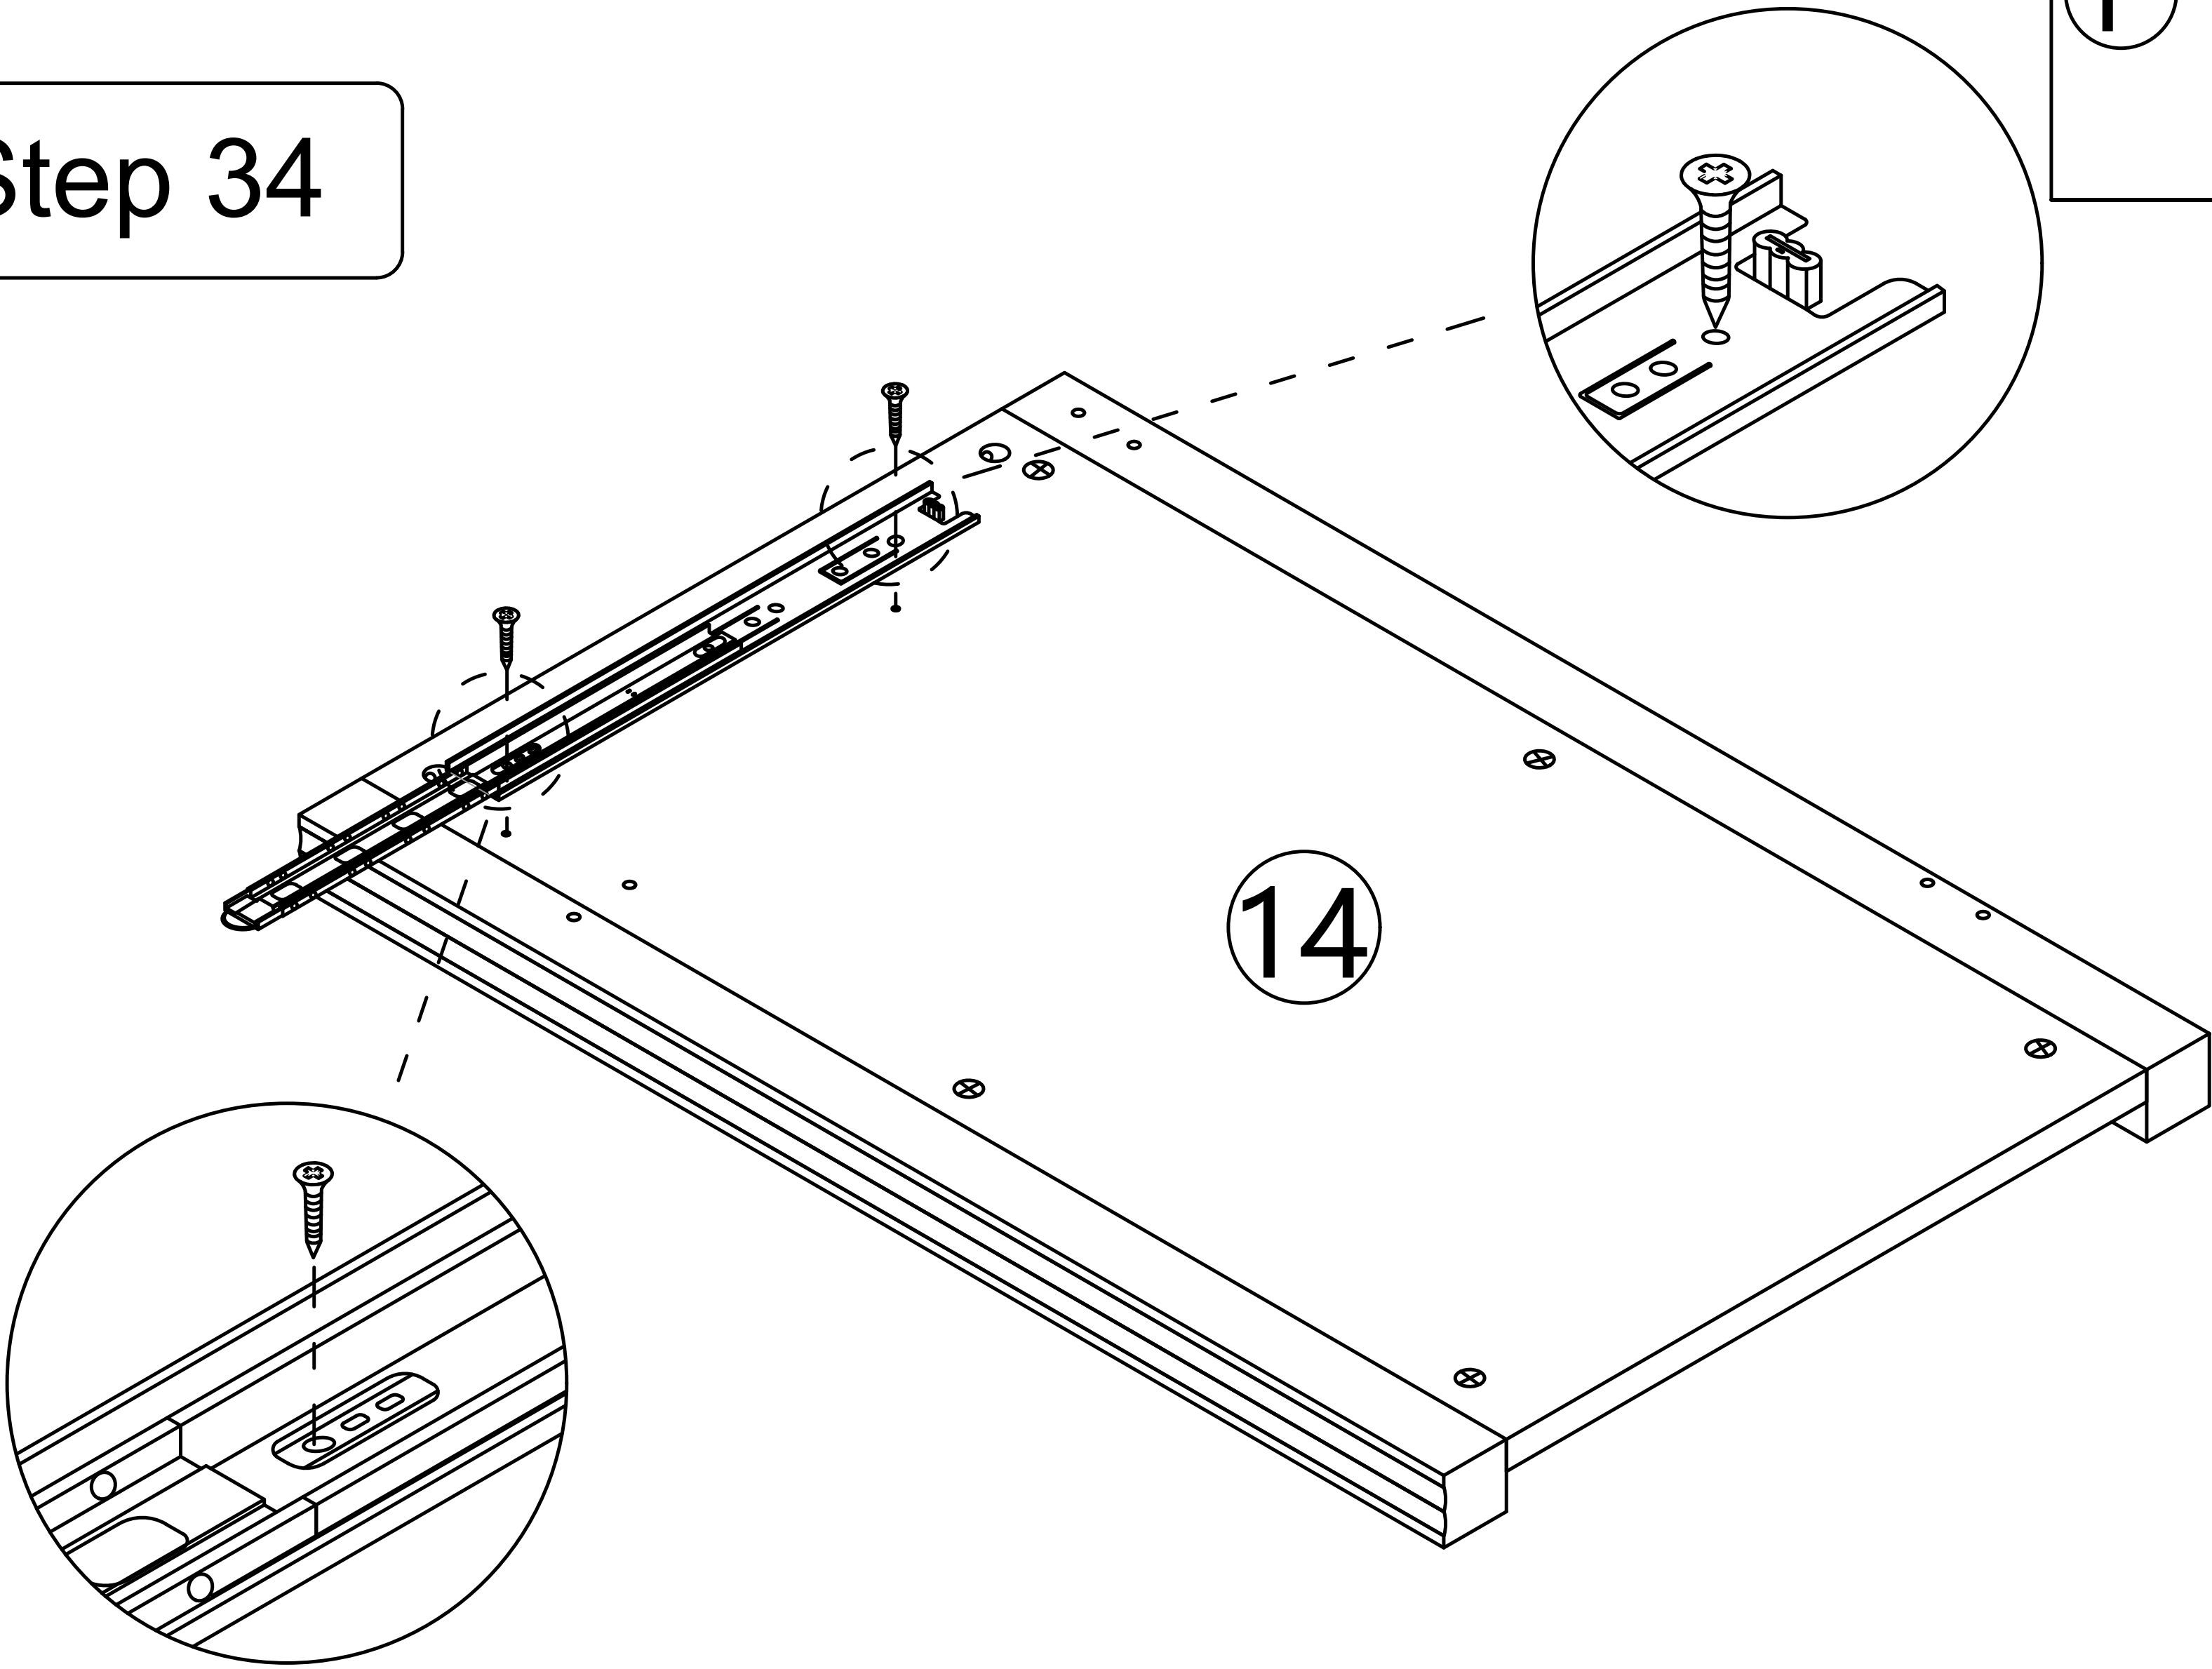




## Step 35

F

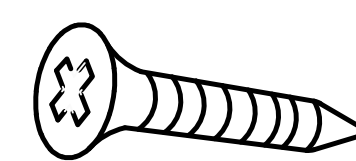


x1

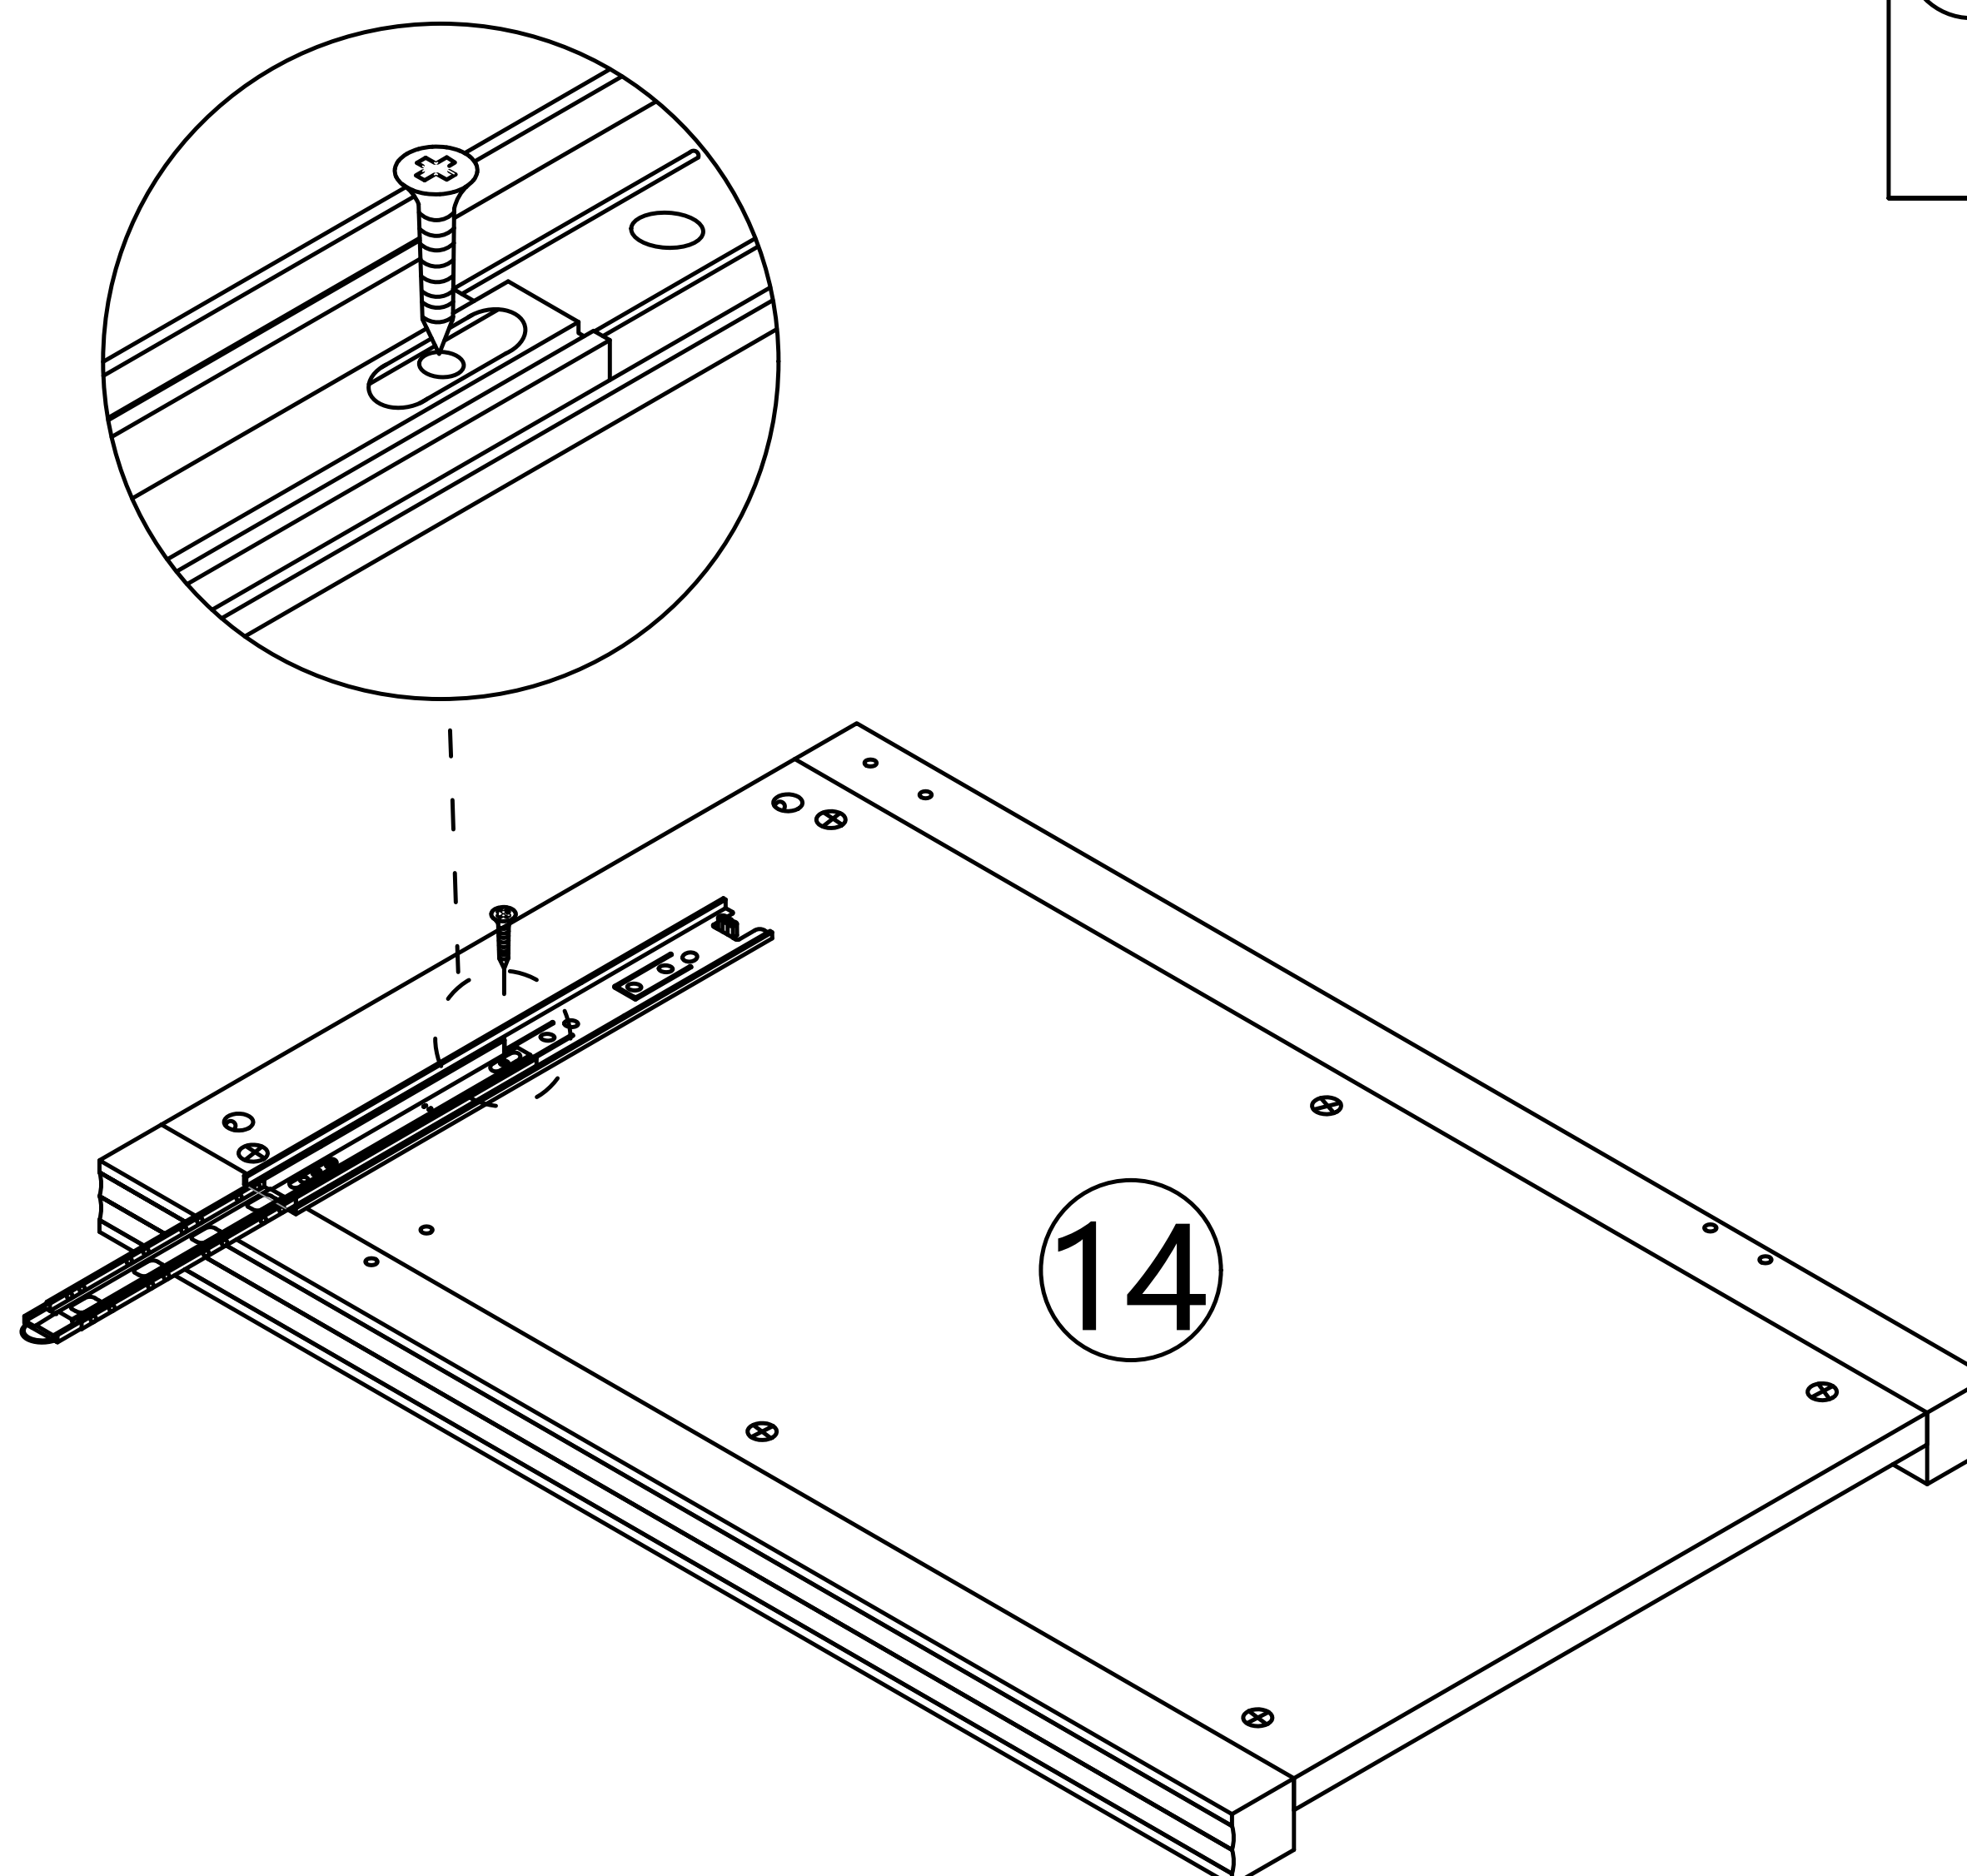


This hole is for strengthening fixed hole customers can choose to install according to their needs.

## Step 36


A

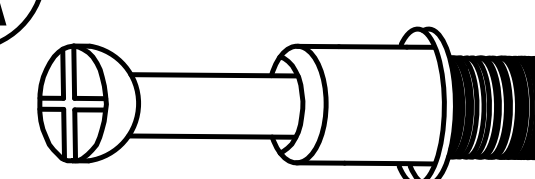


x6

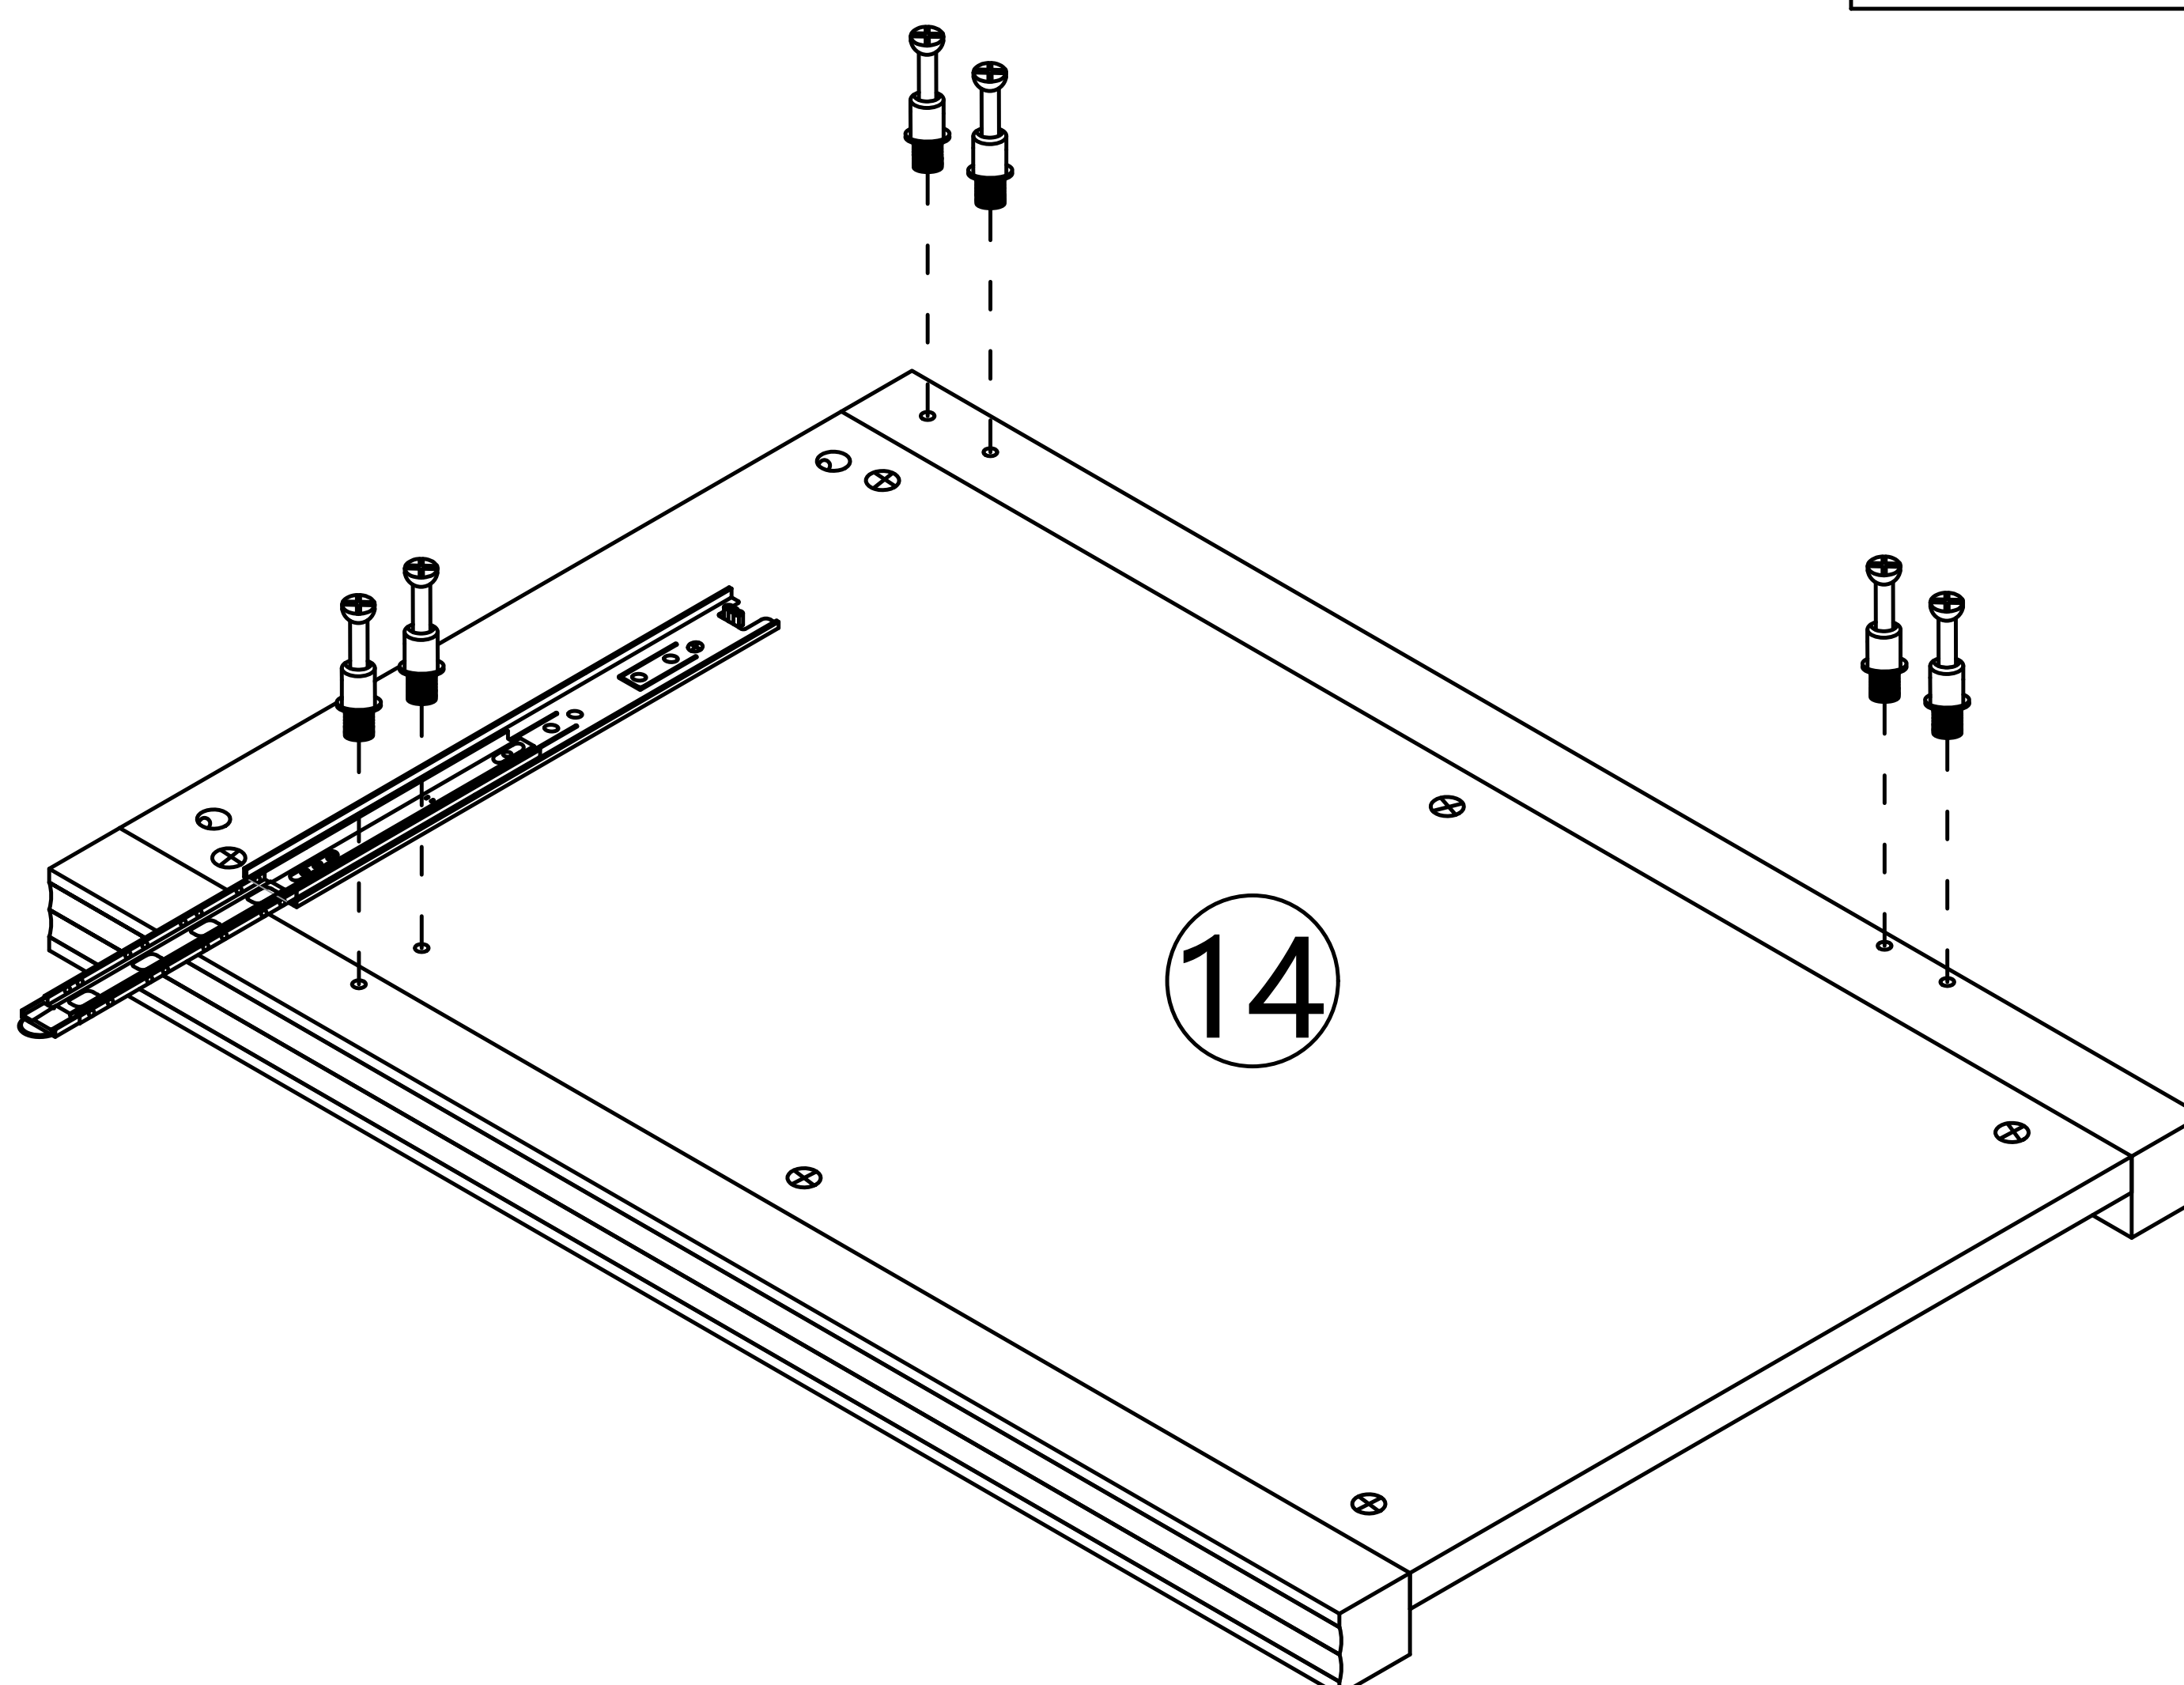



Step 37

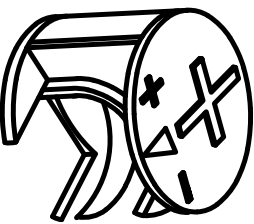Ⓑ  x2

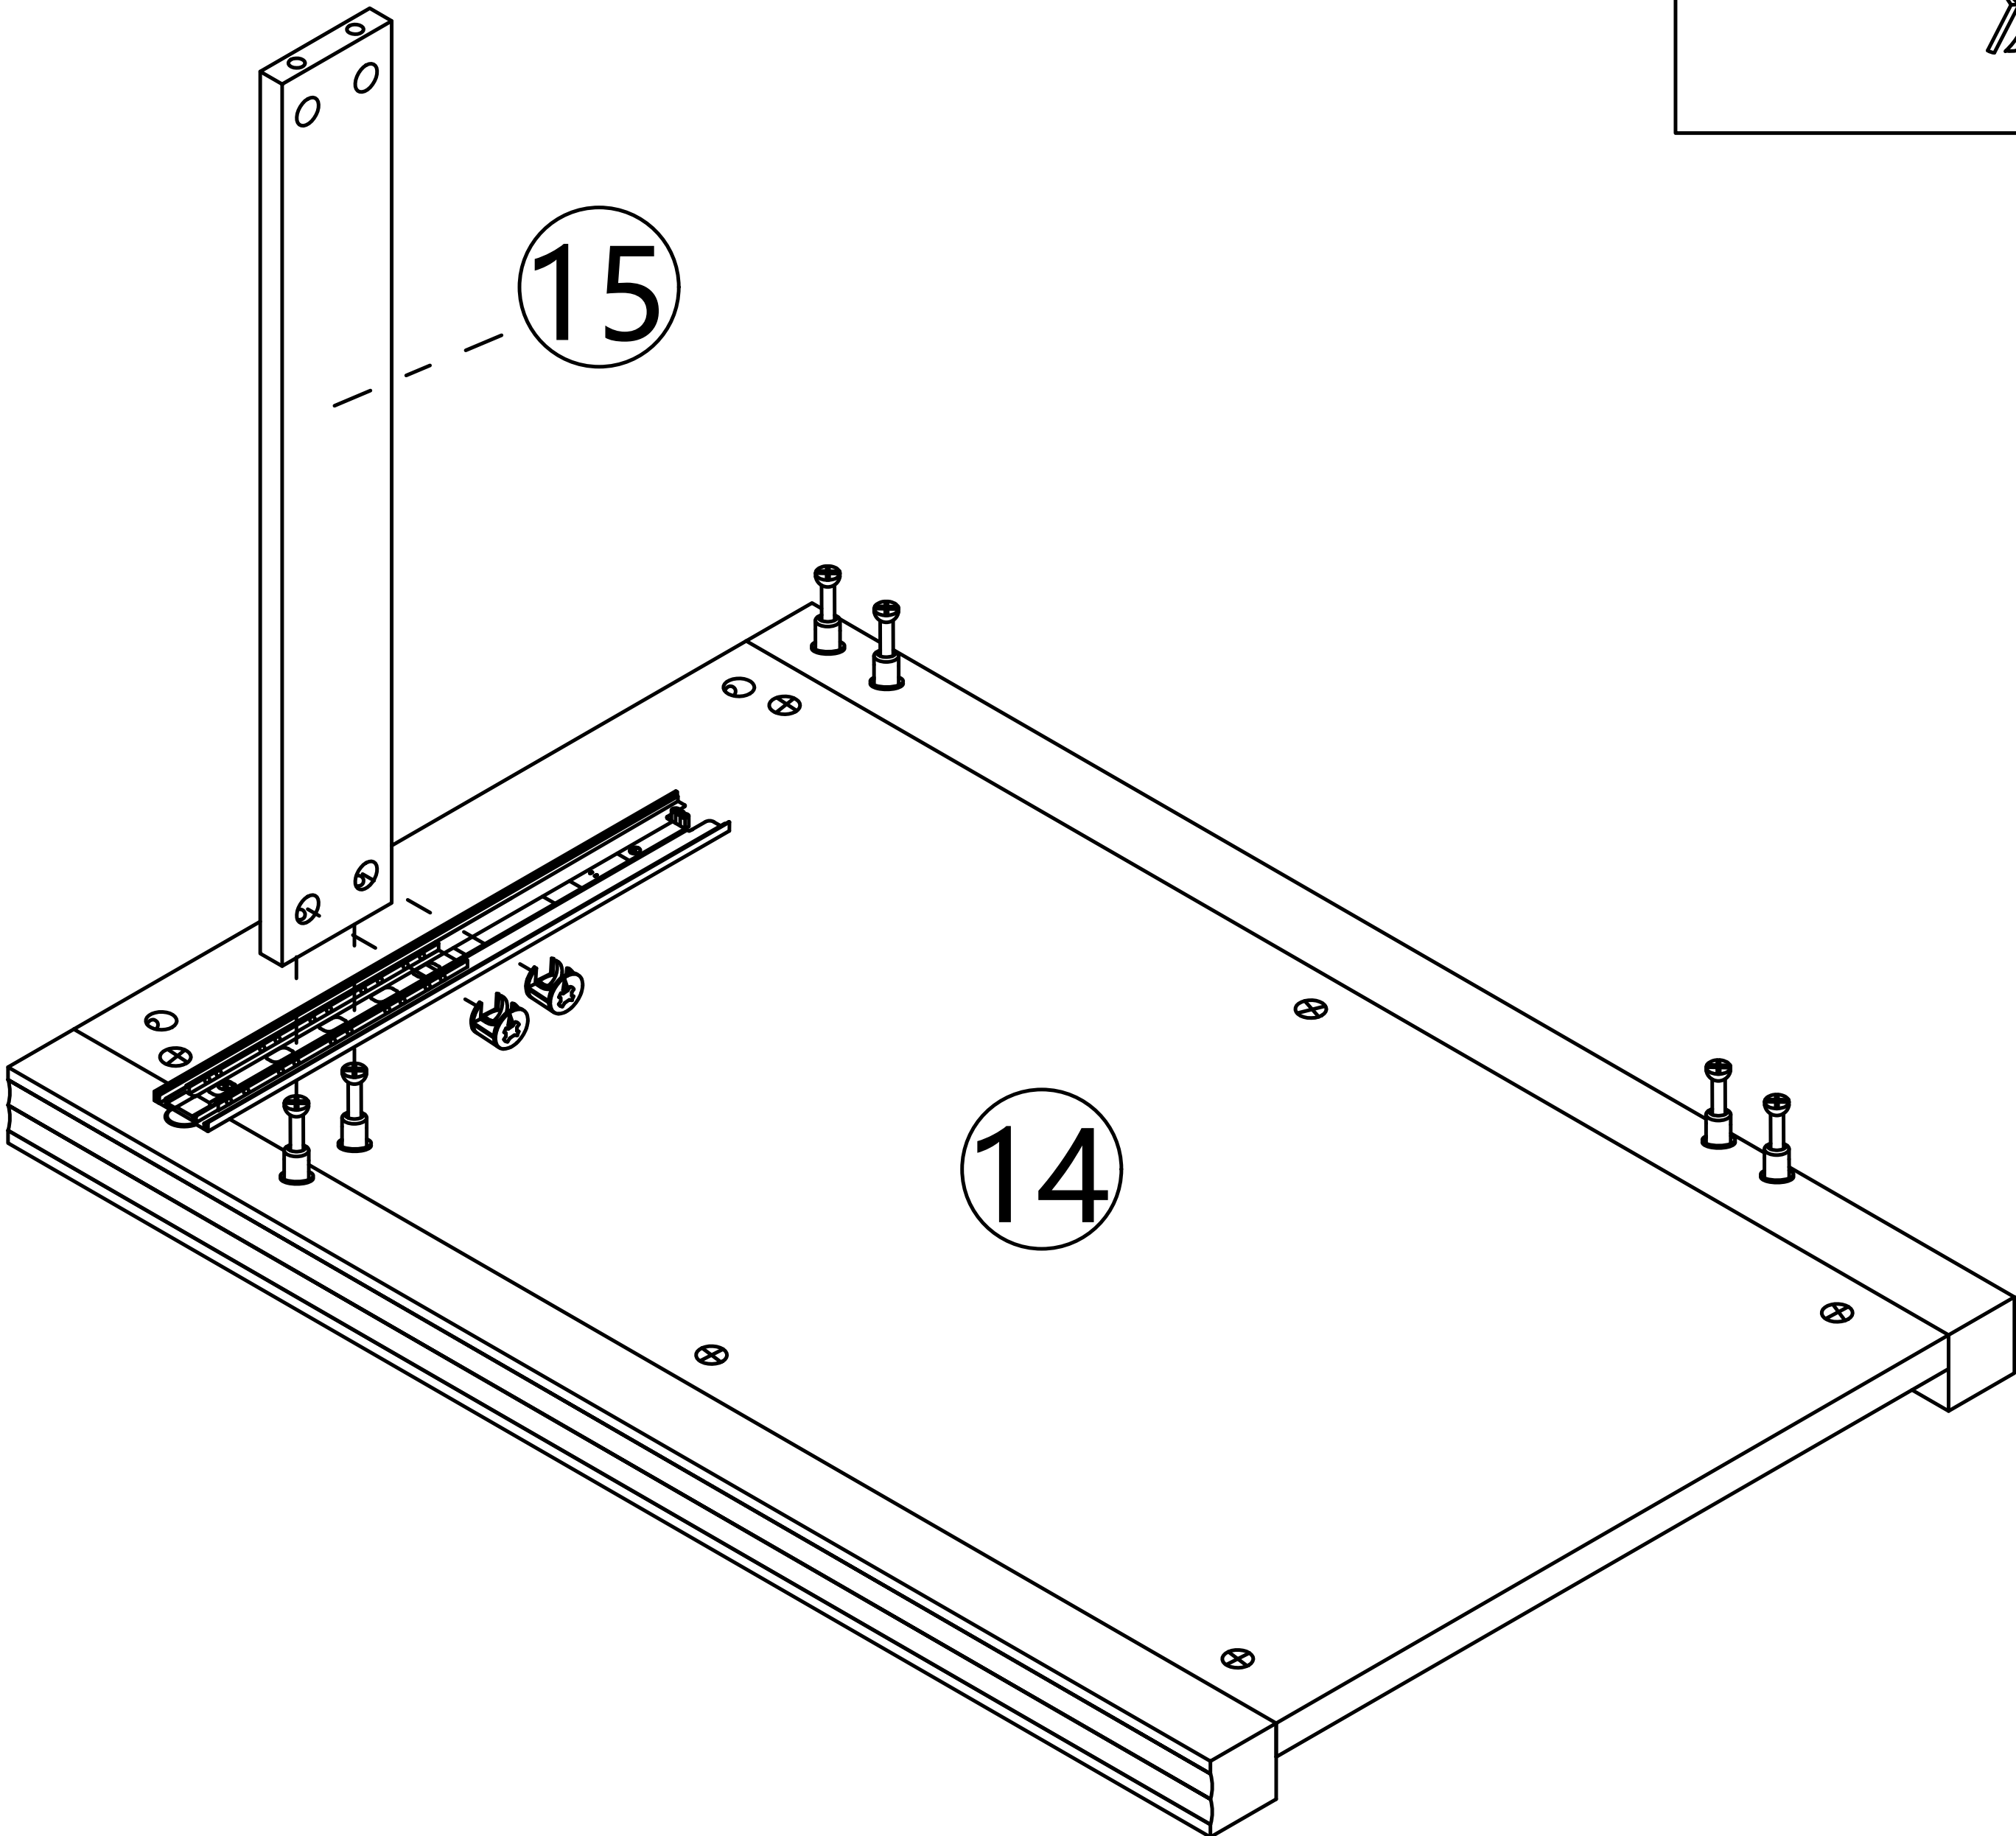

Step 38

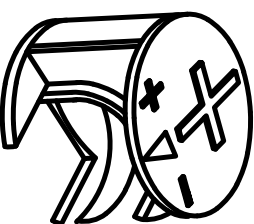
Ⓑ  x2

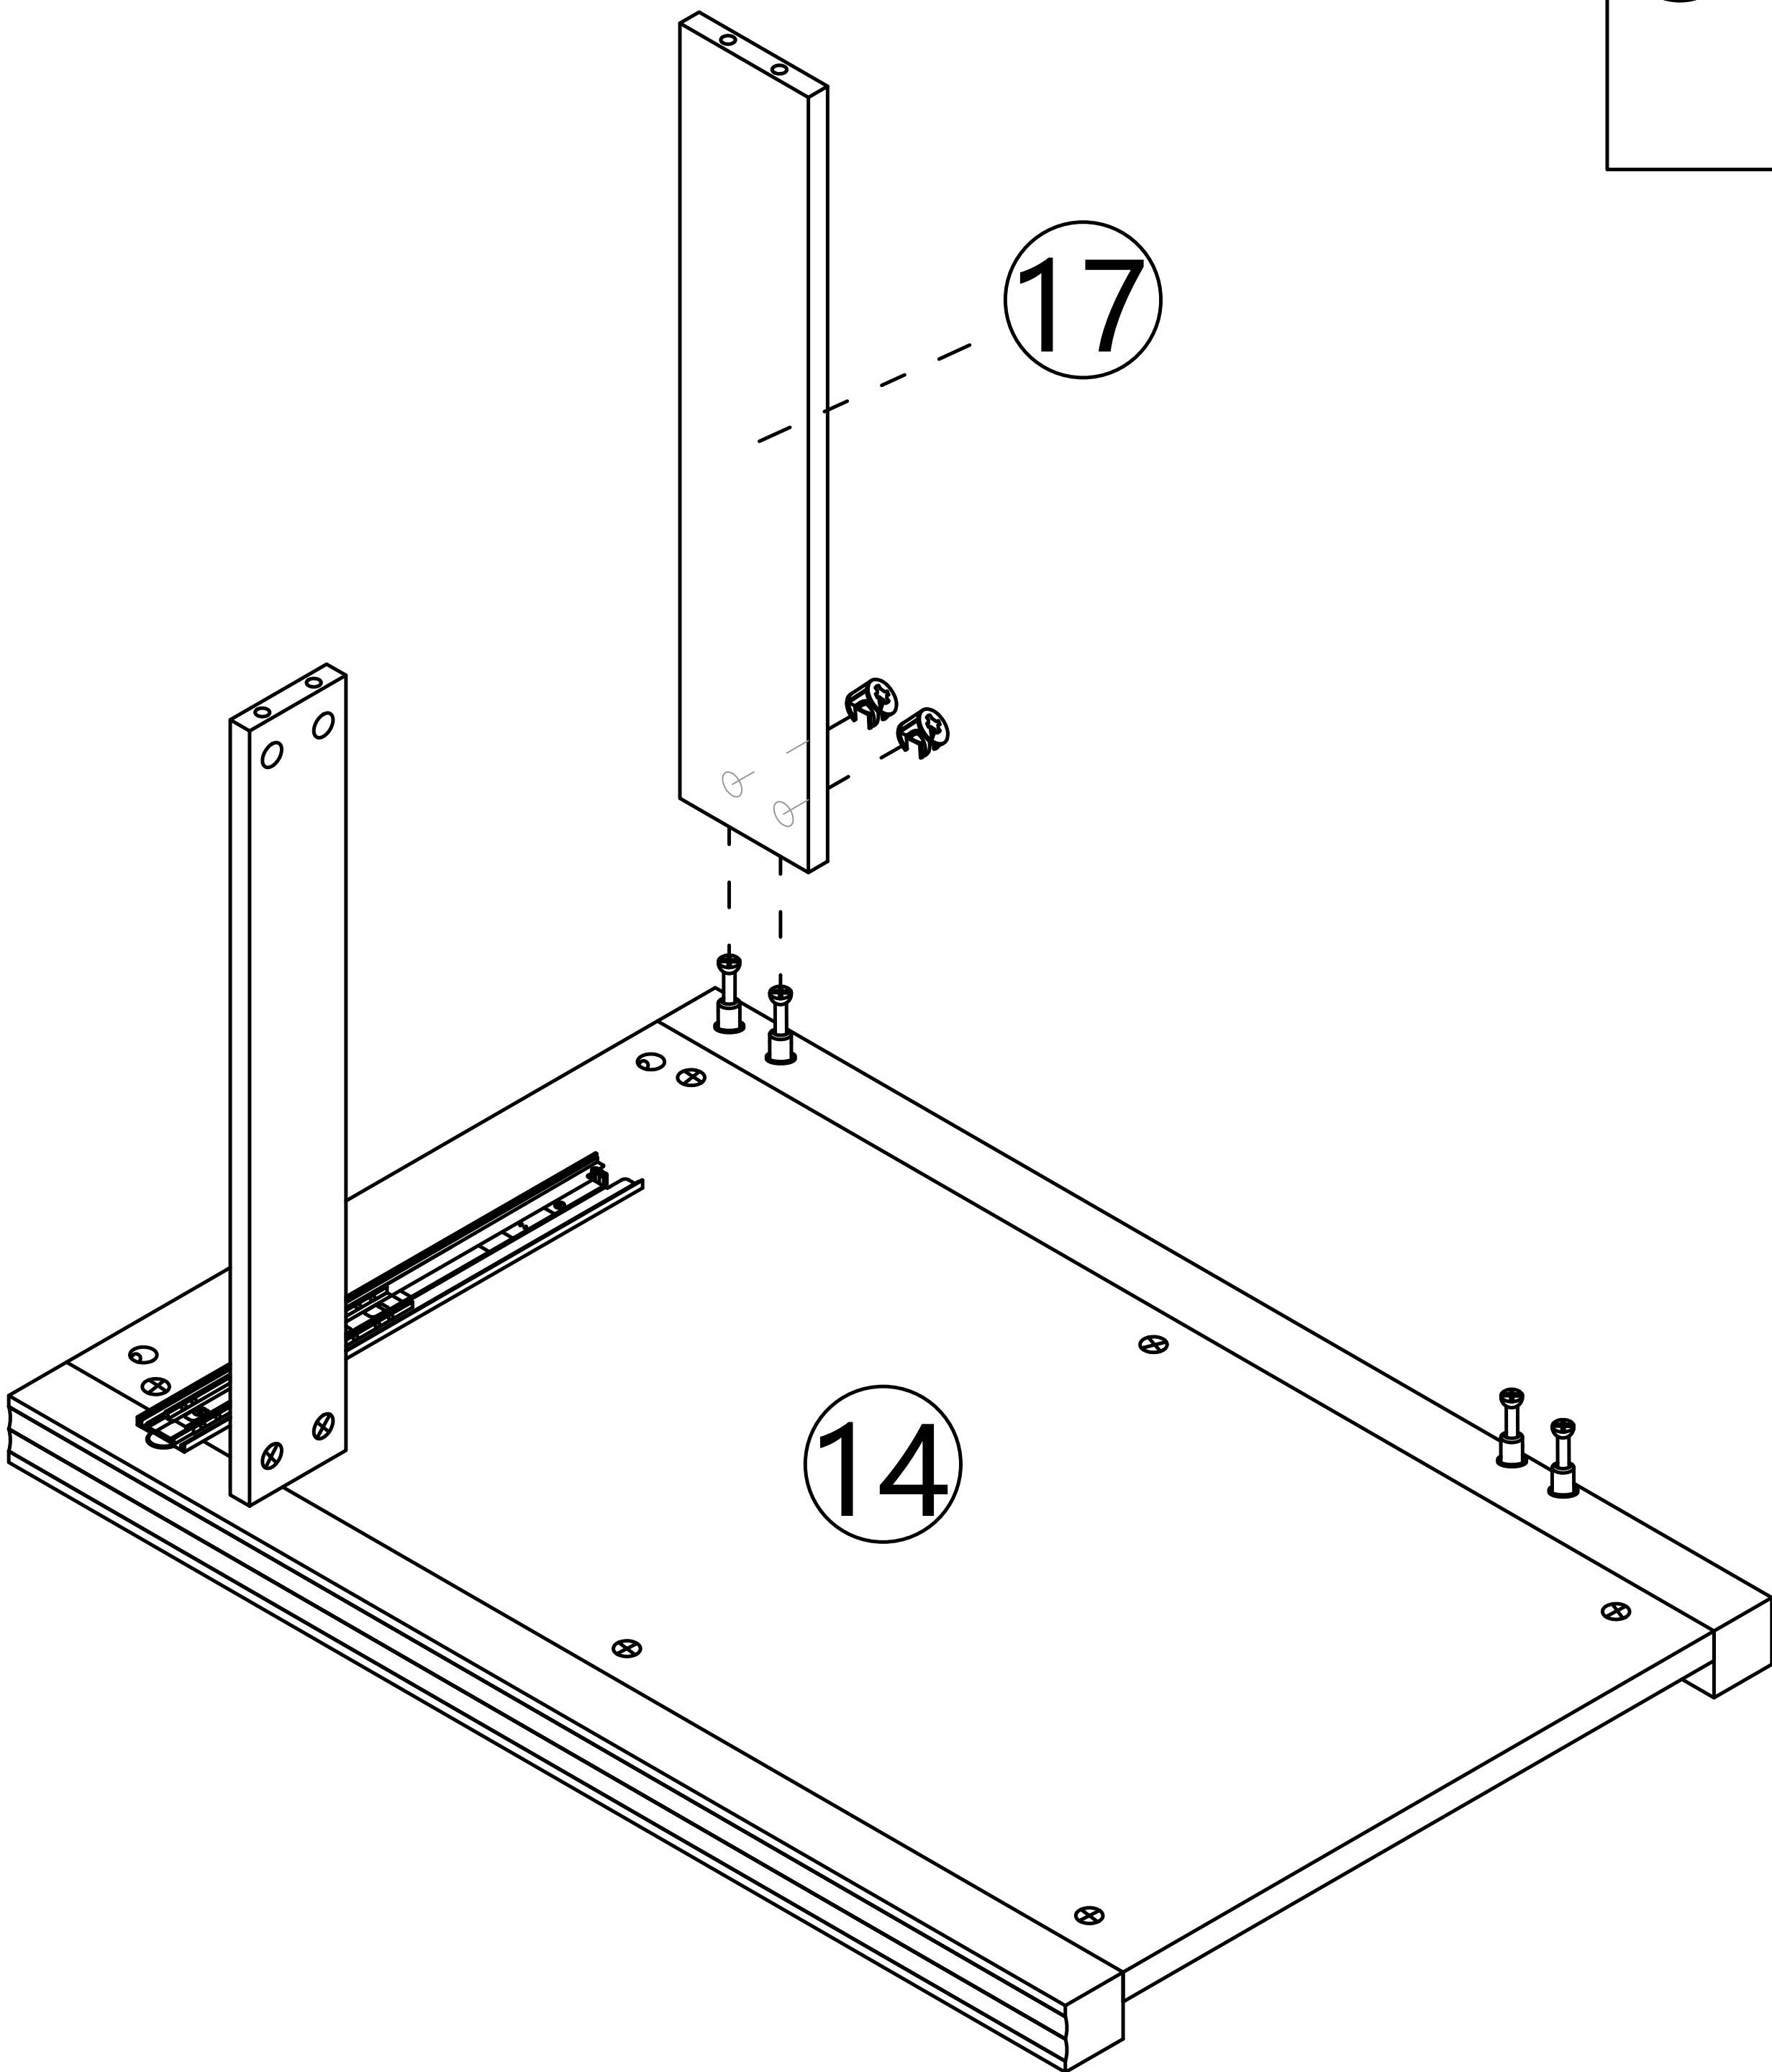




Step 39

B

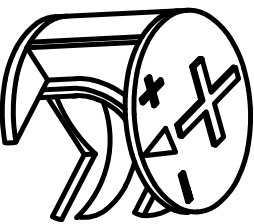


x2

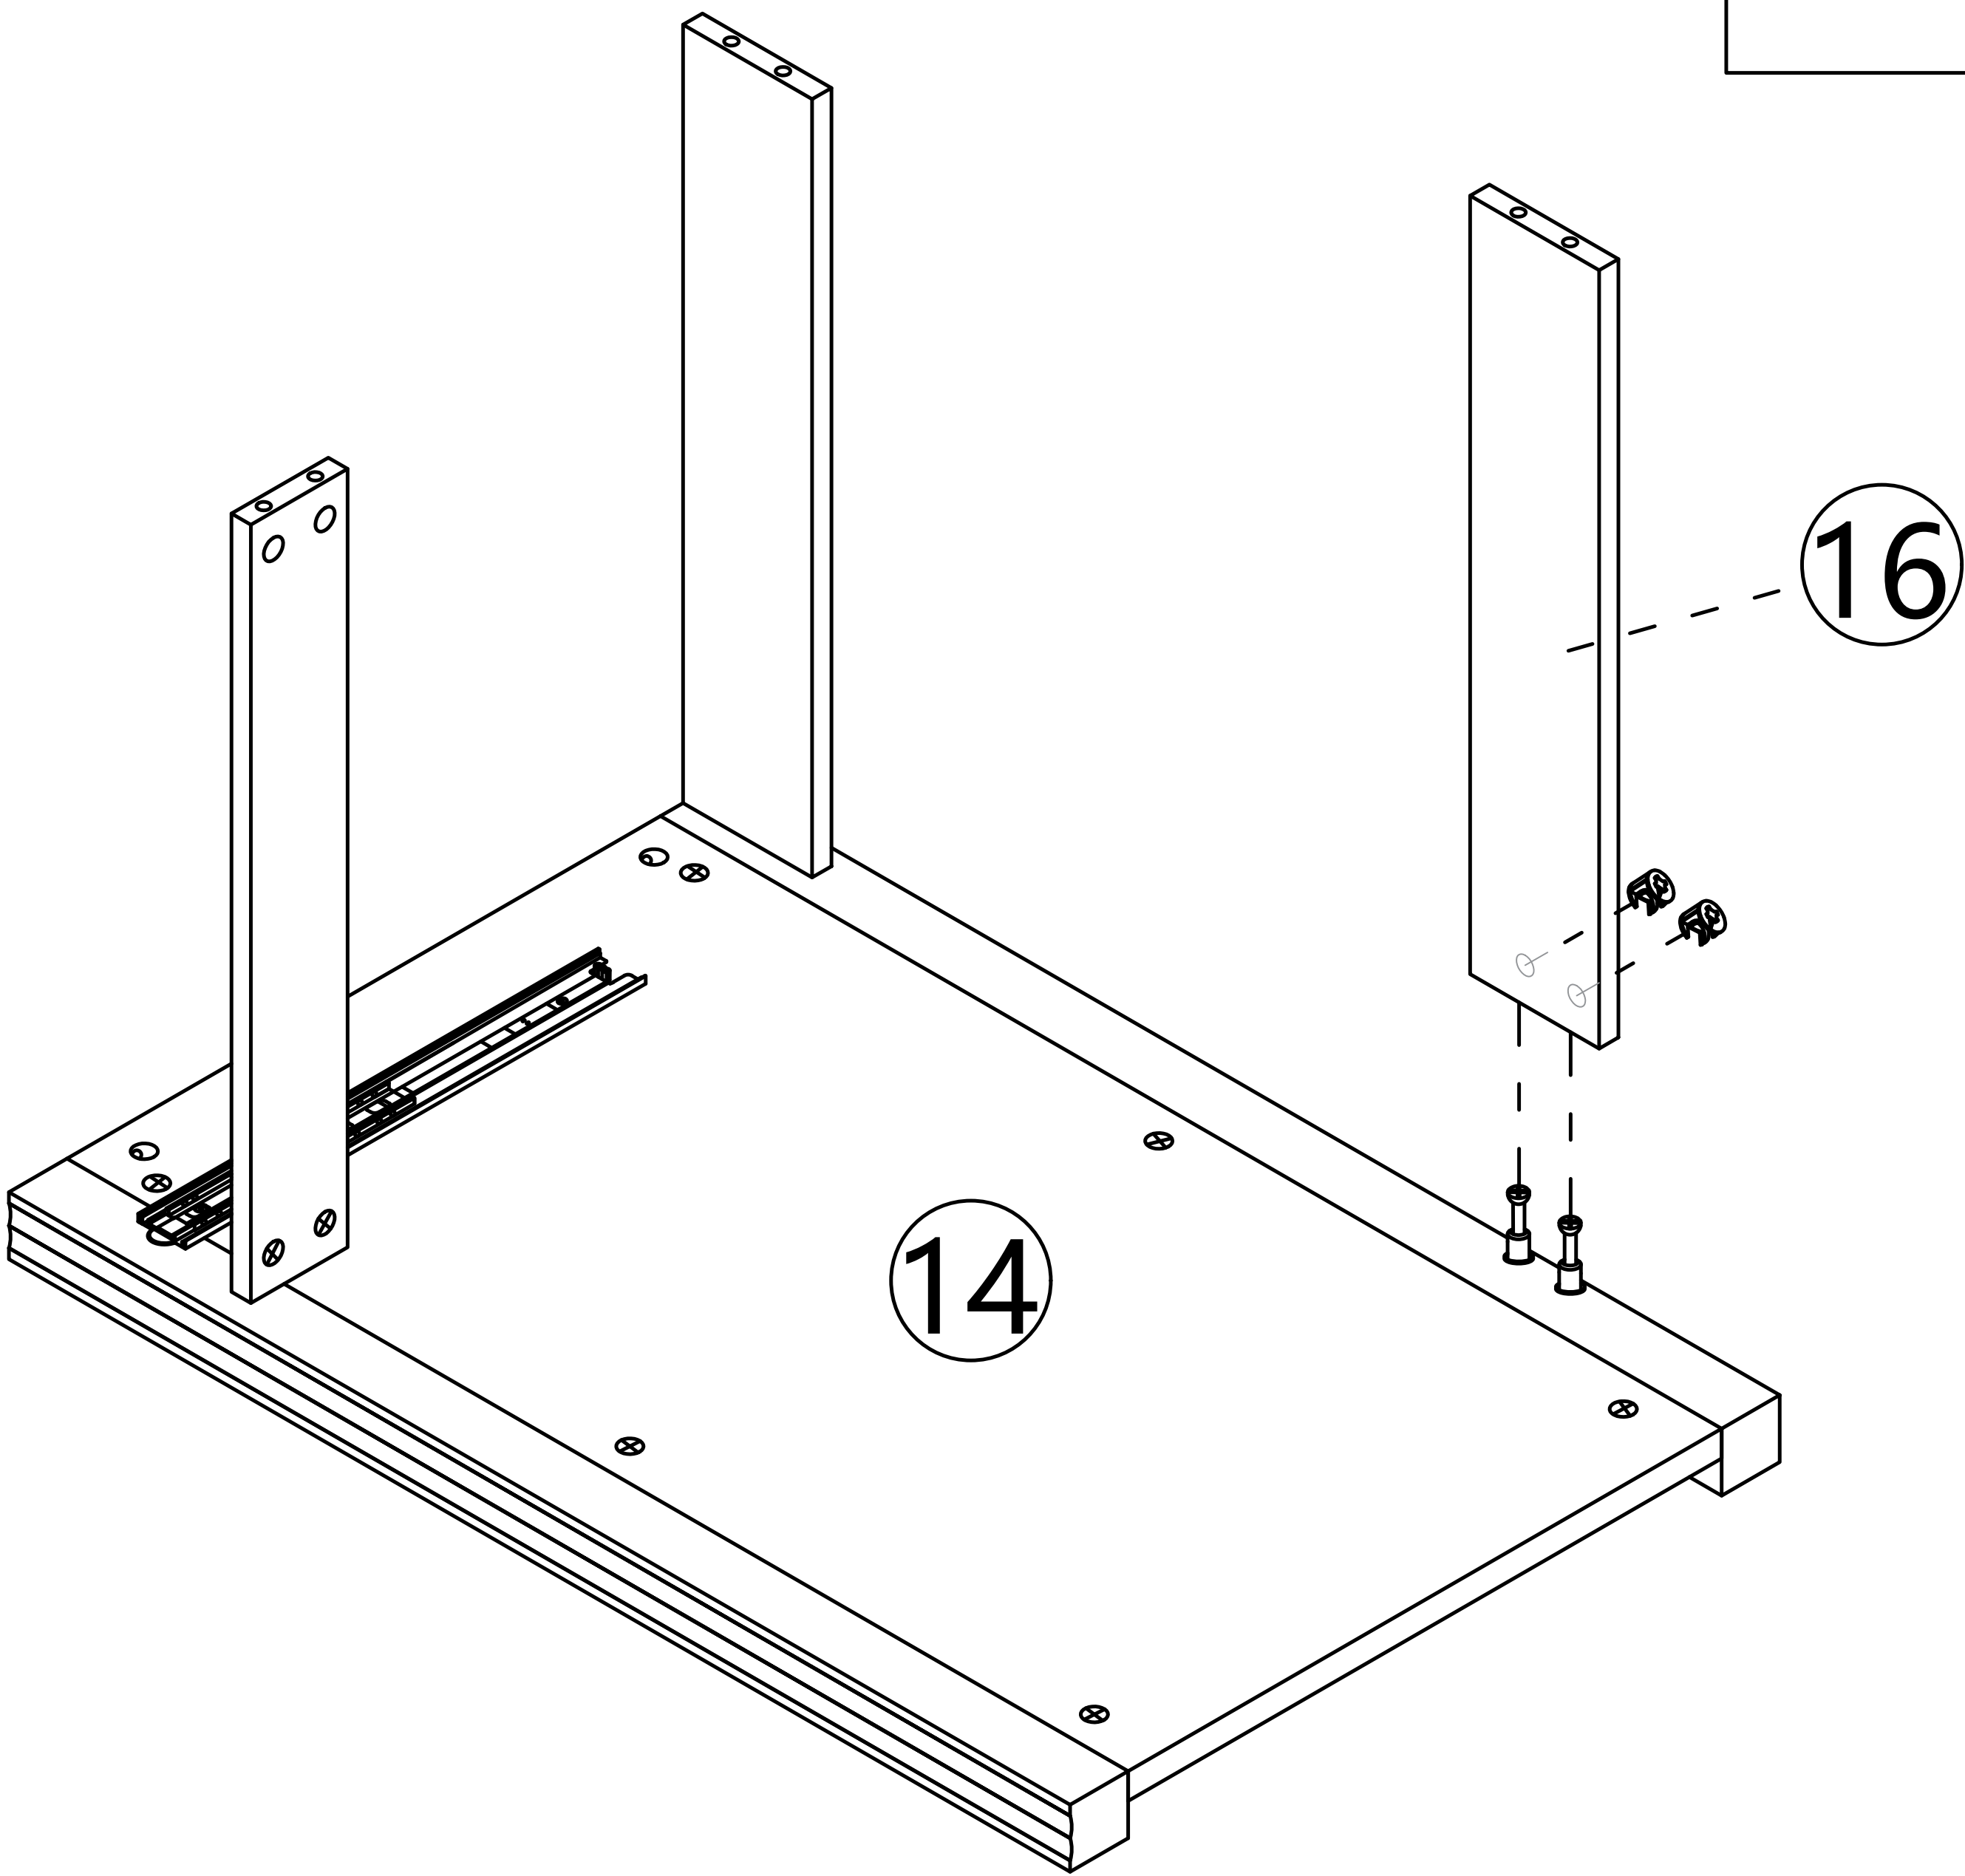


Step 40

A

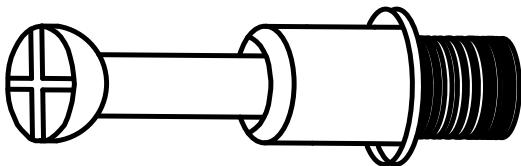


x6

B

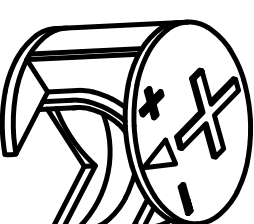


x6

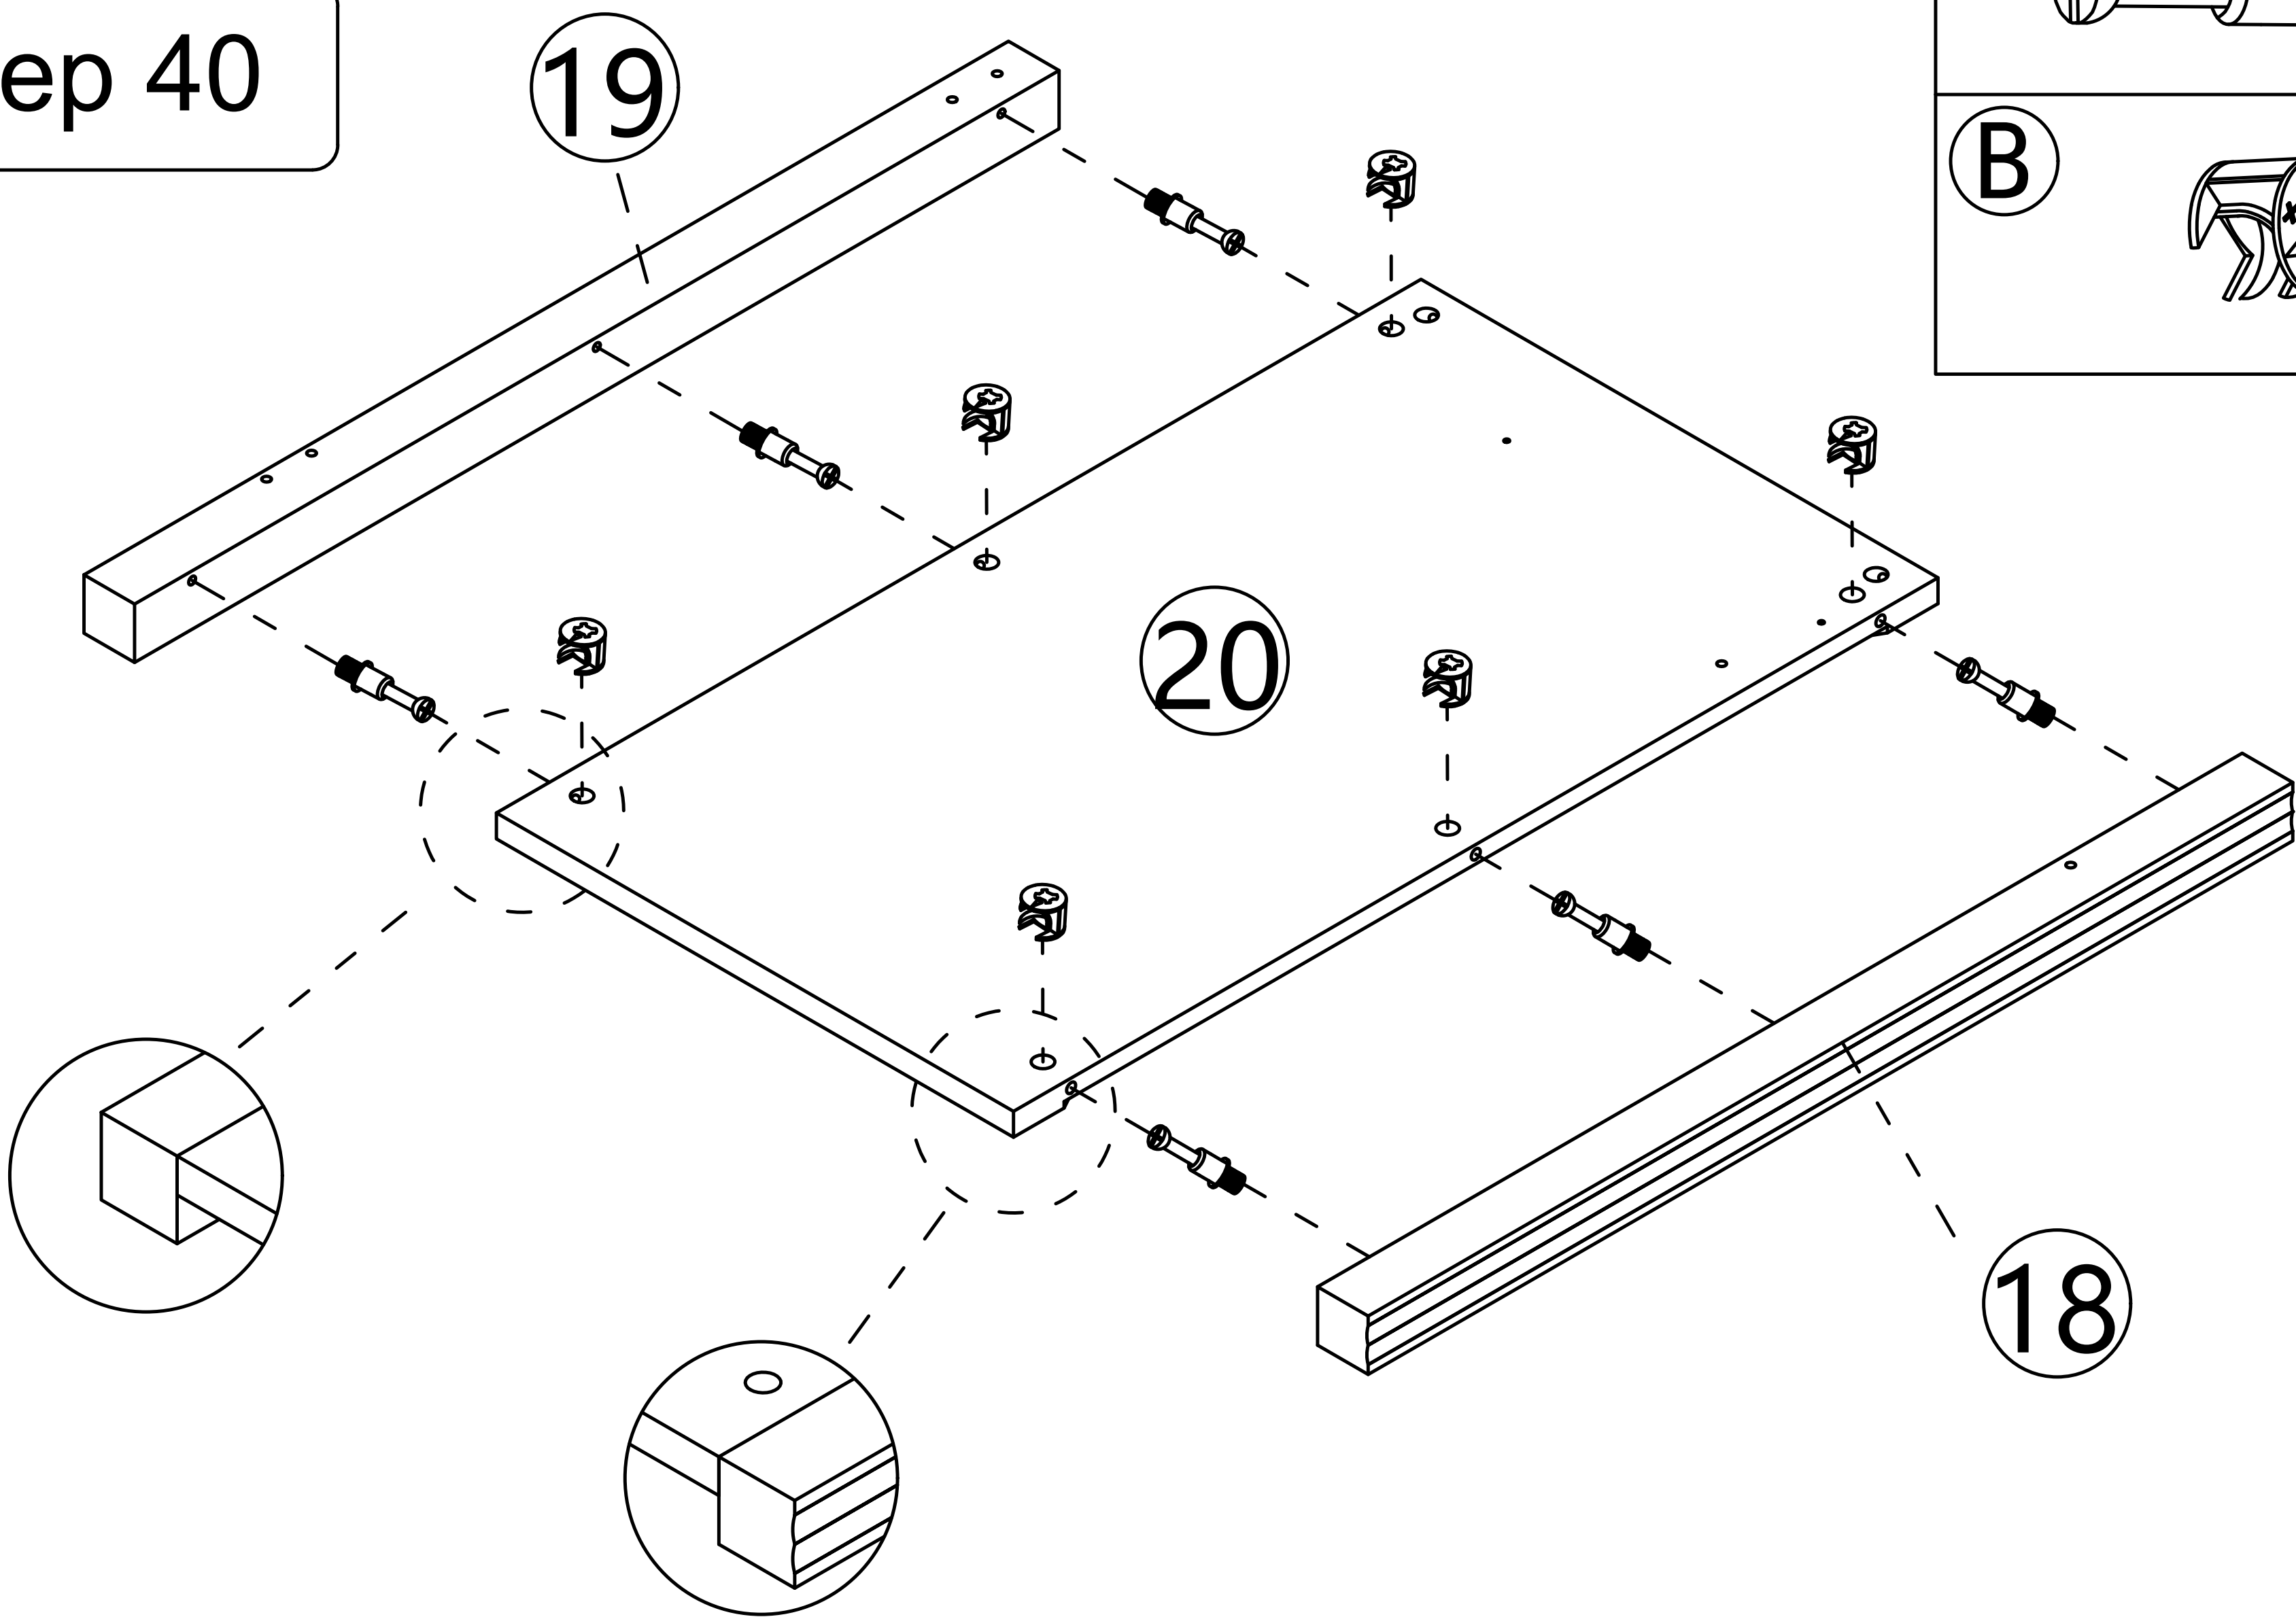


Attention: First install the two in one, then install the nut

## Step 41

F

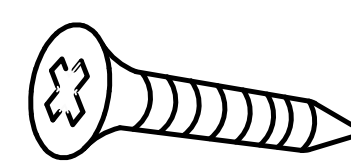


x2

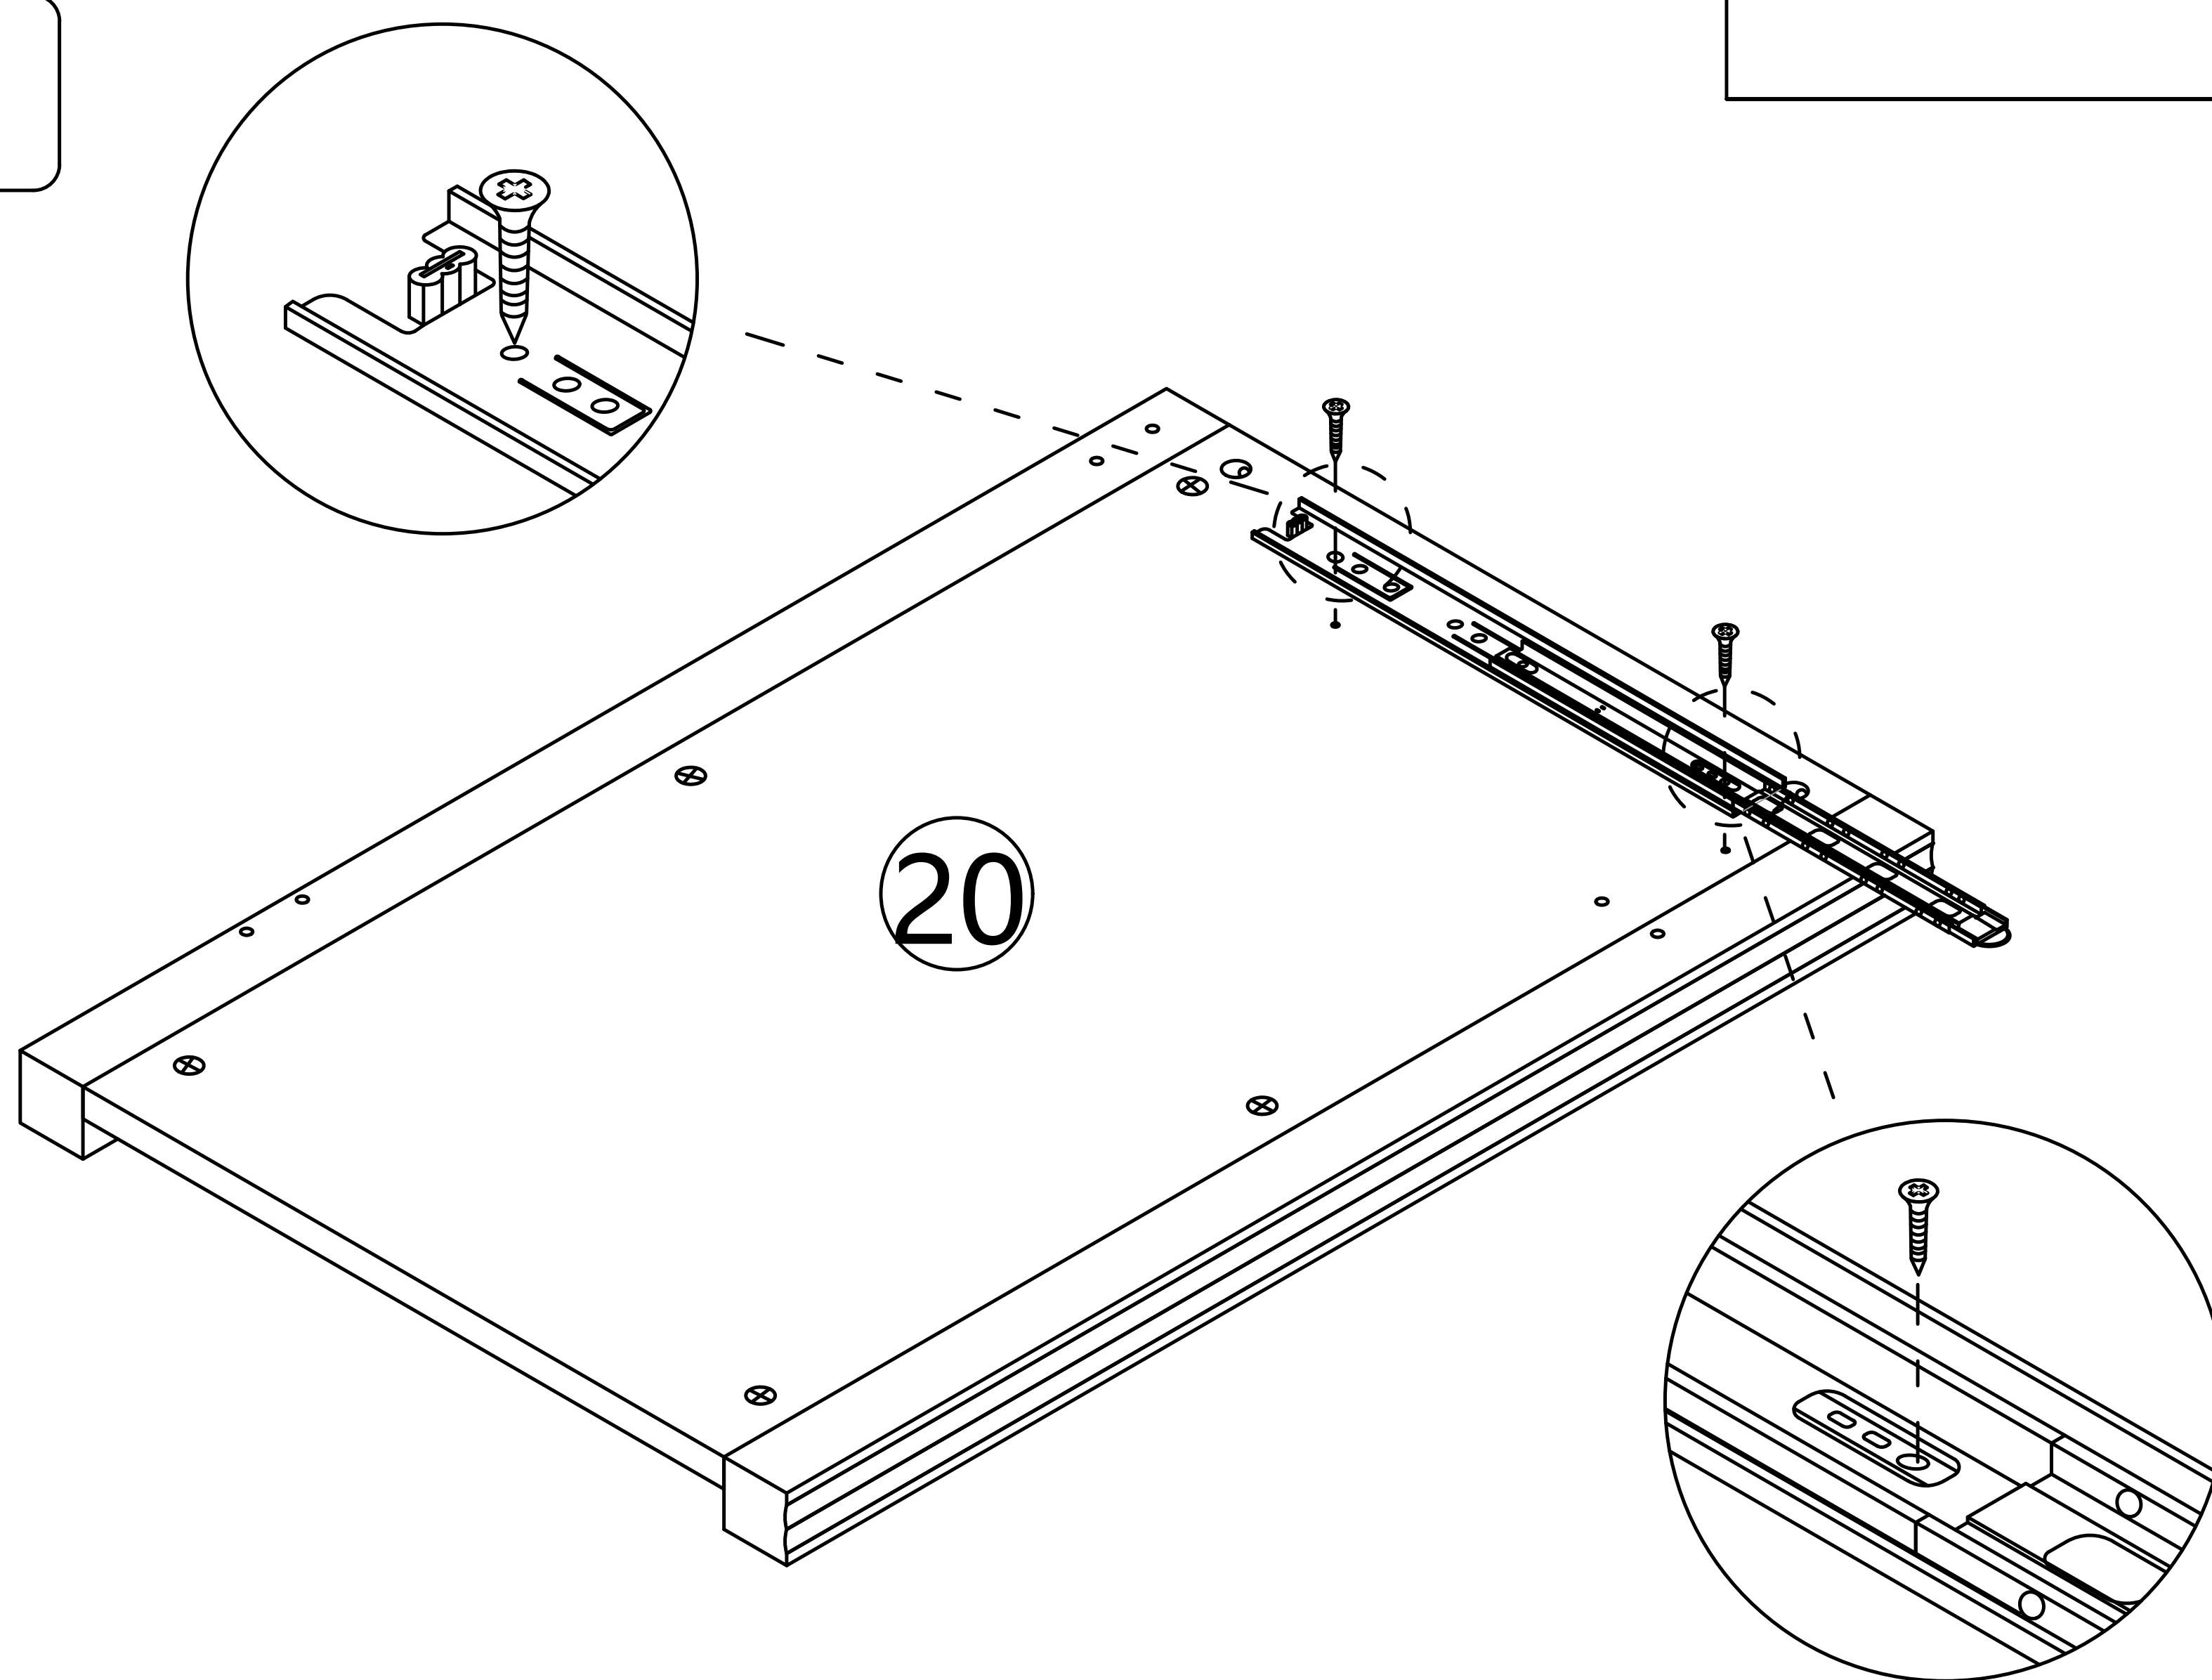


## Step 42

F

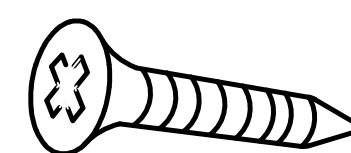

x1


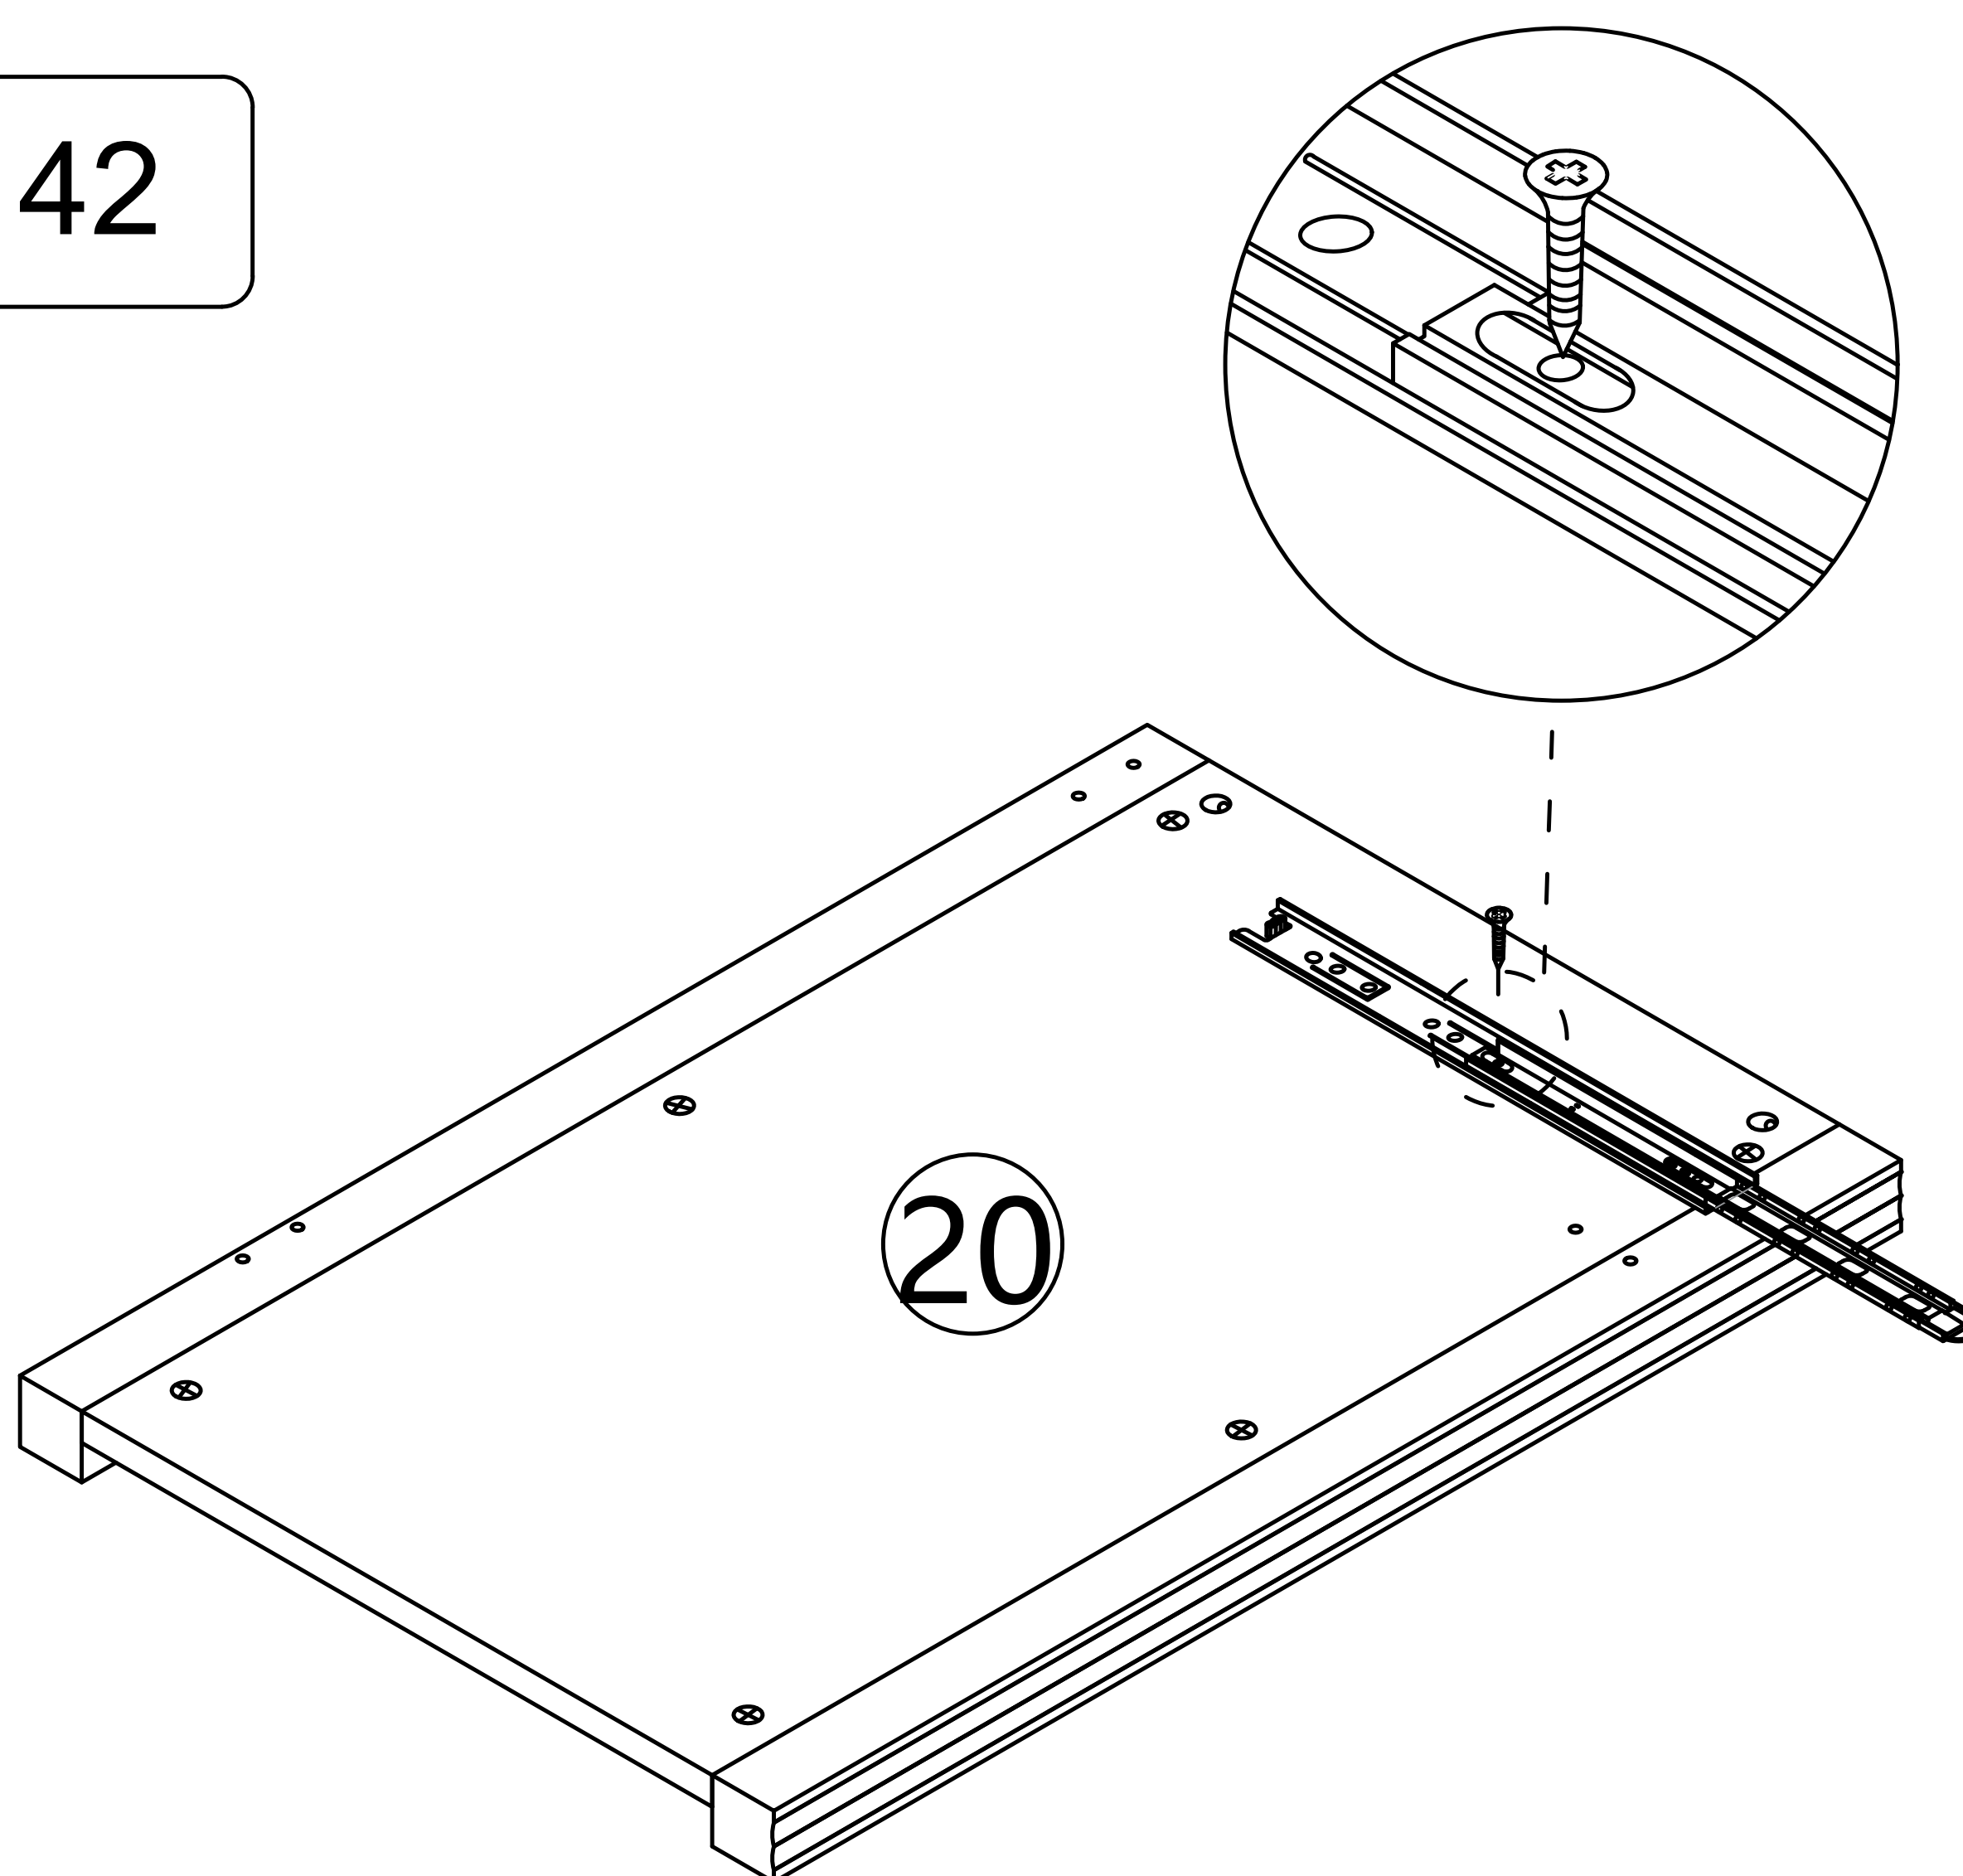


This hole is for strengthening fixed hole customers can choose to install according to their needs.



29



Step 43

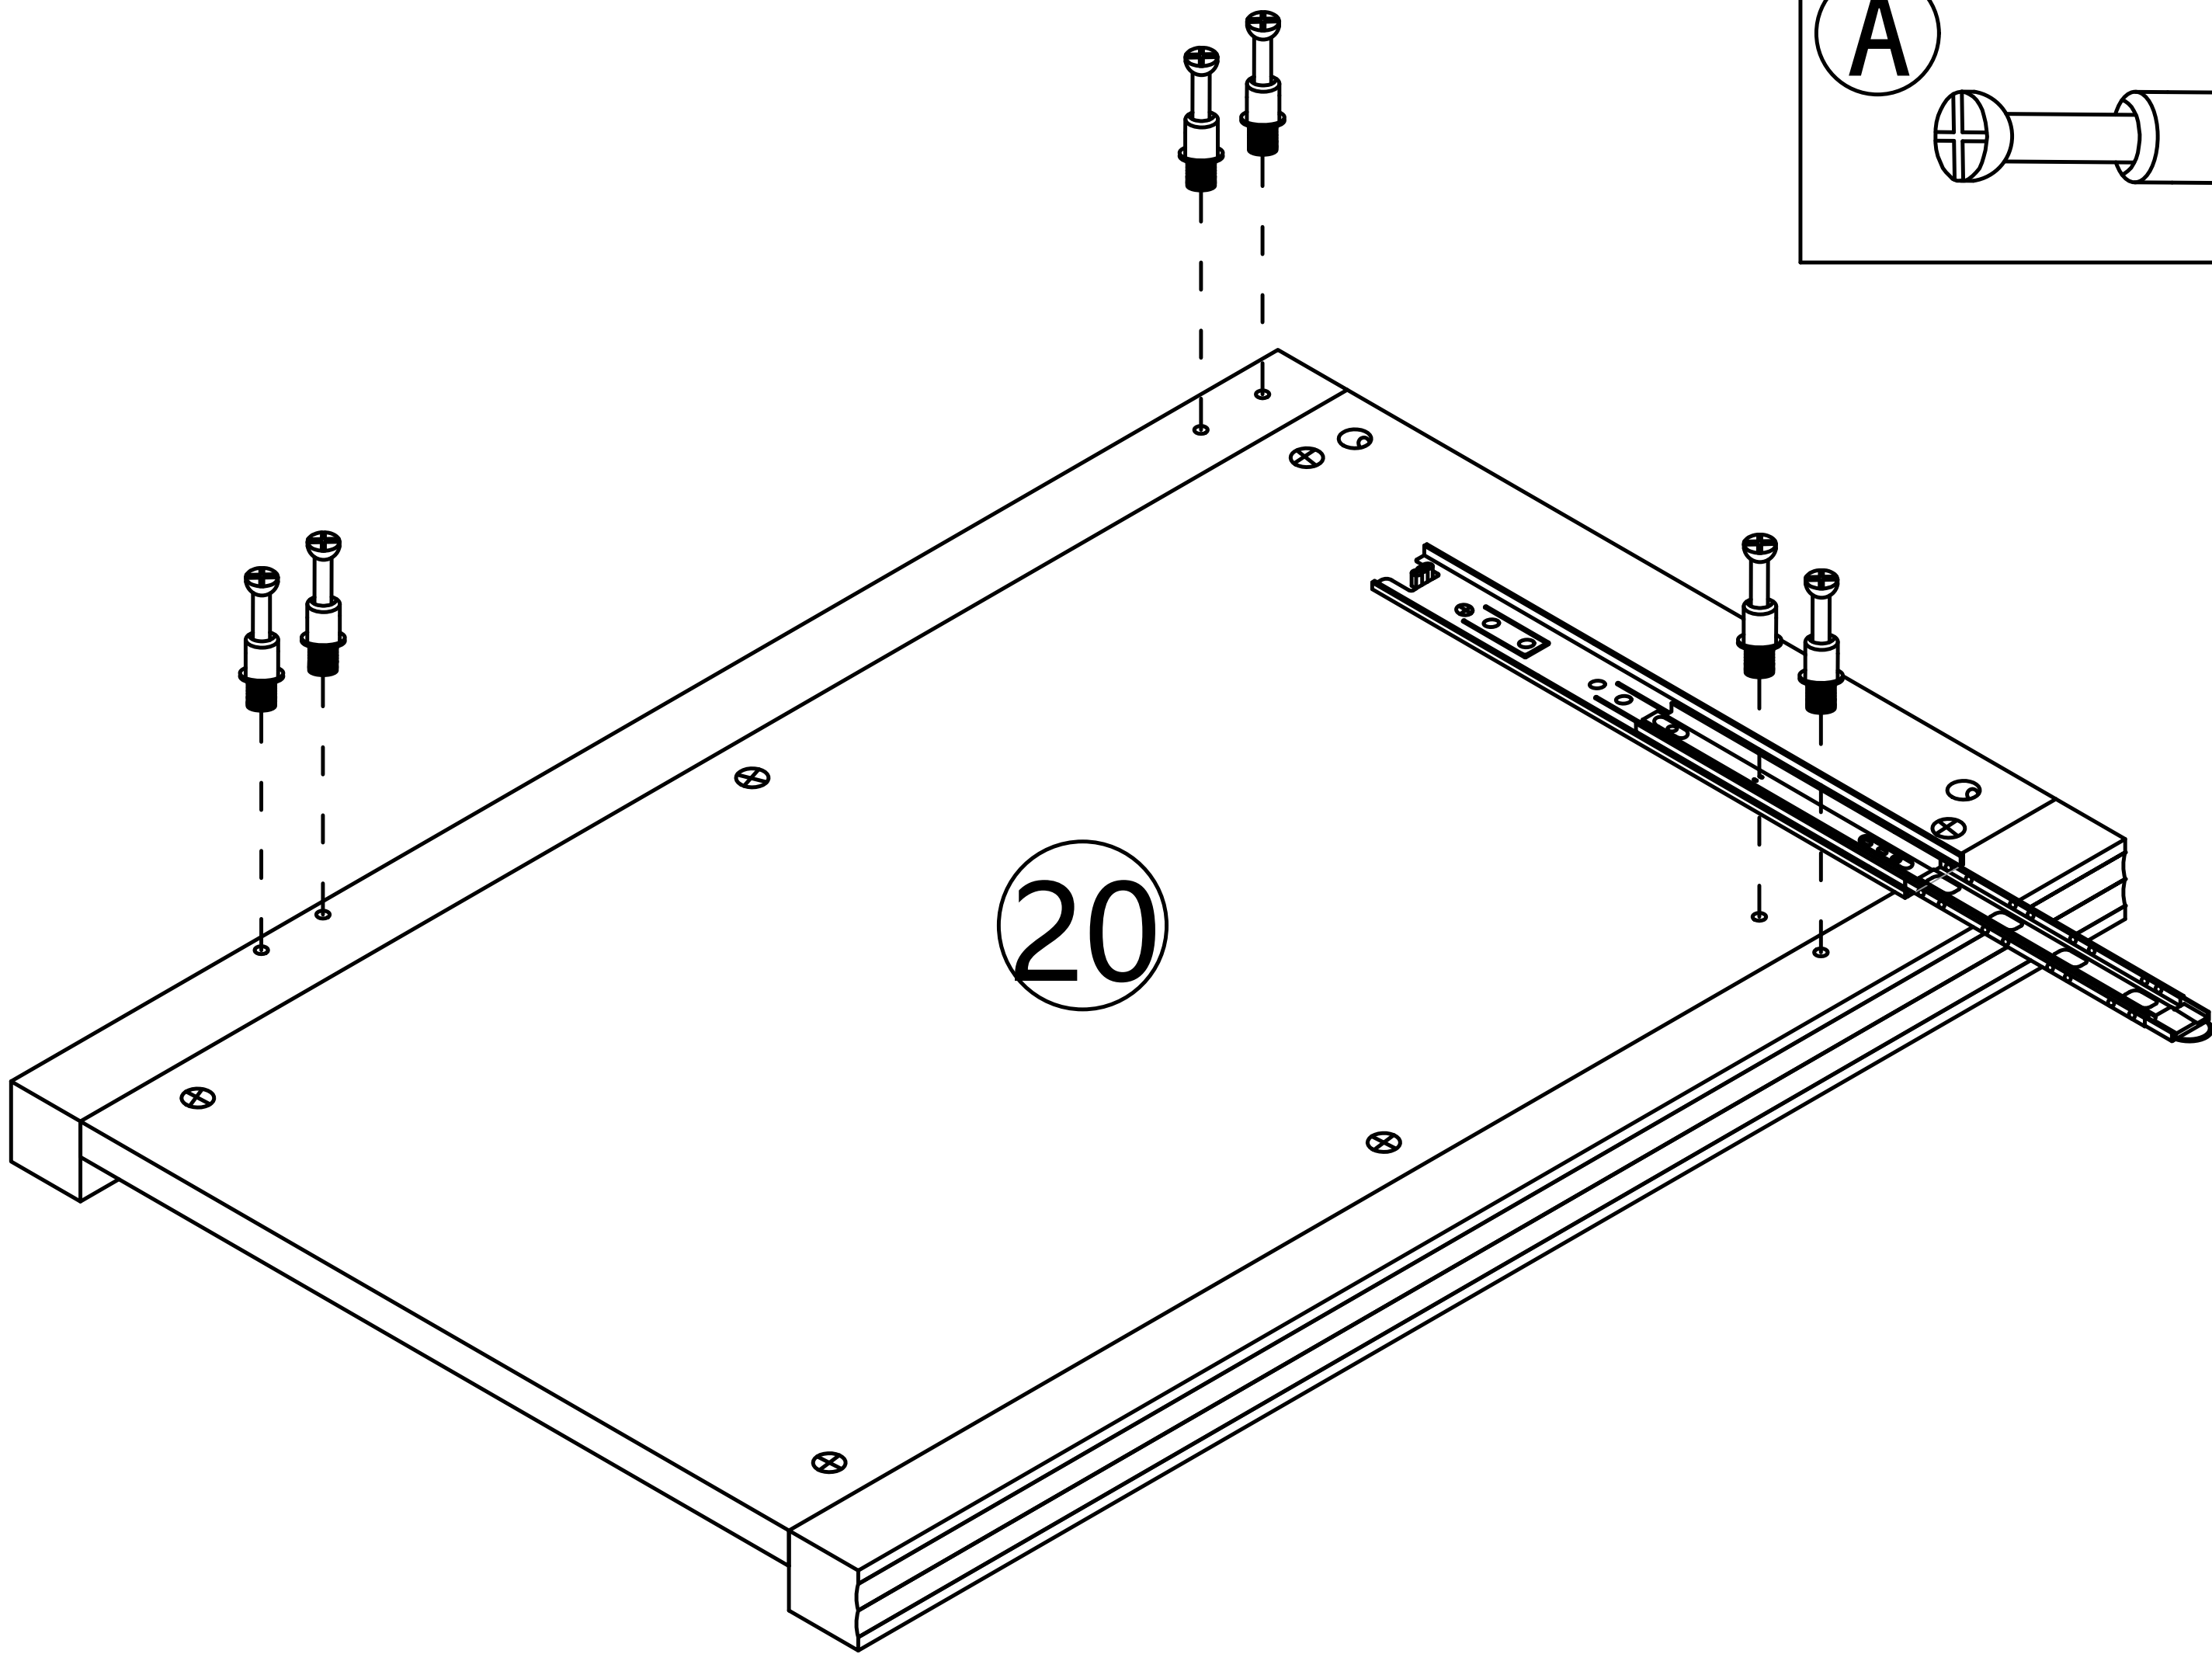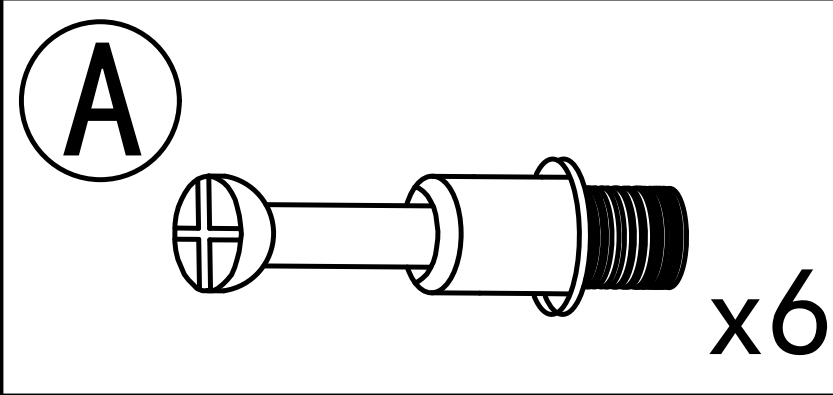


Step 44

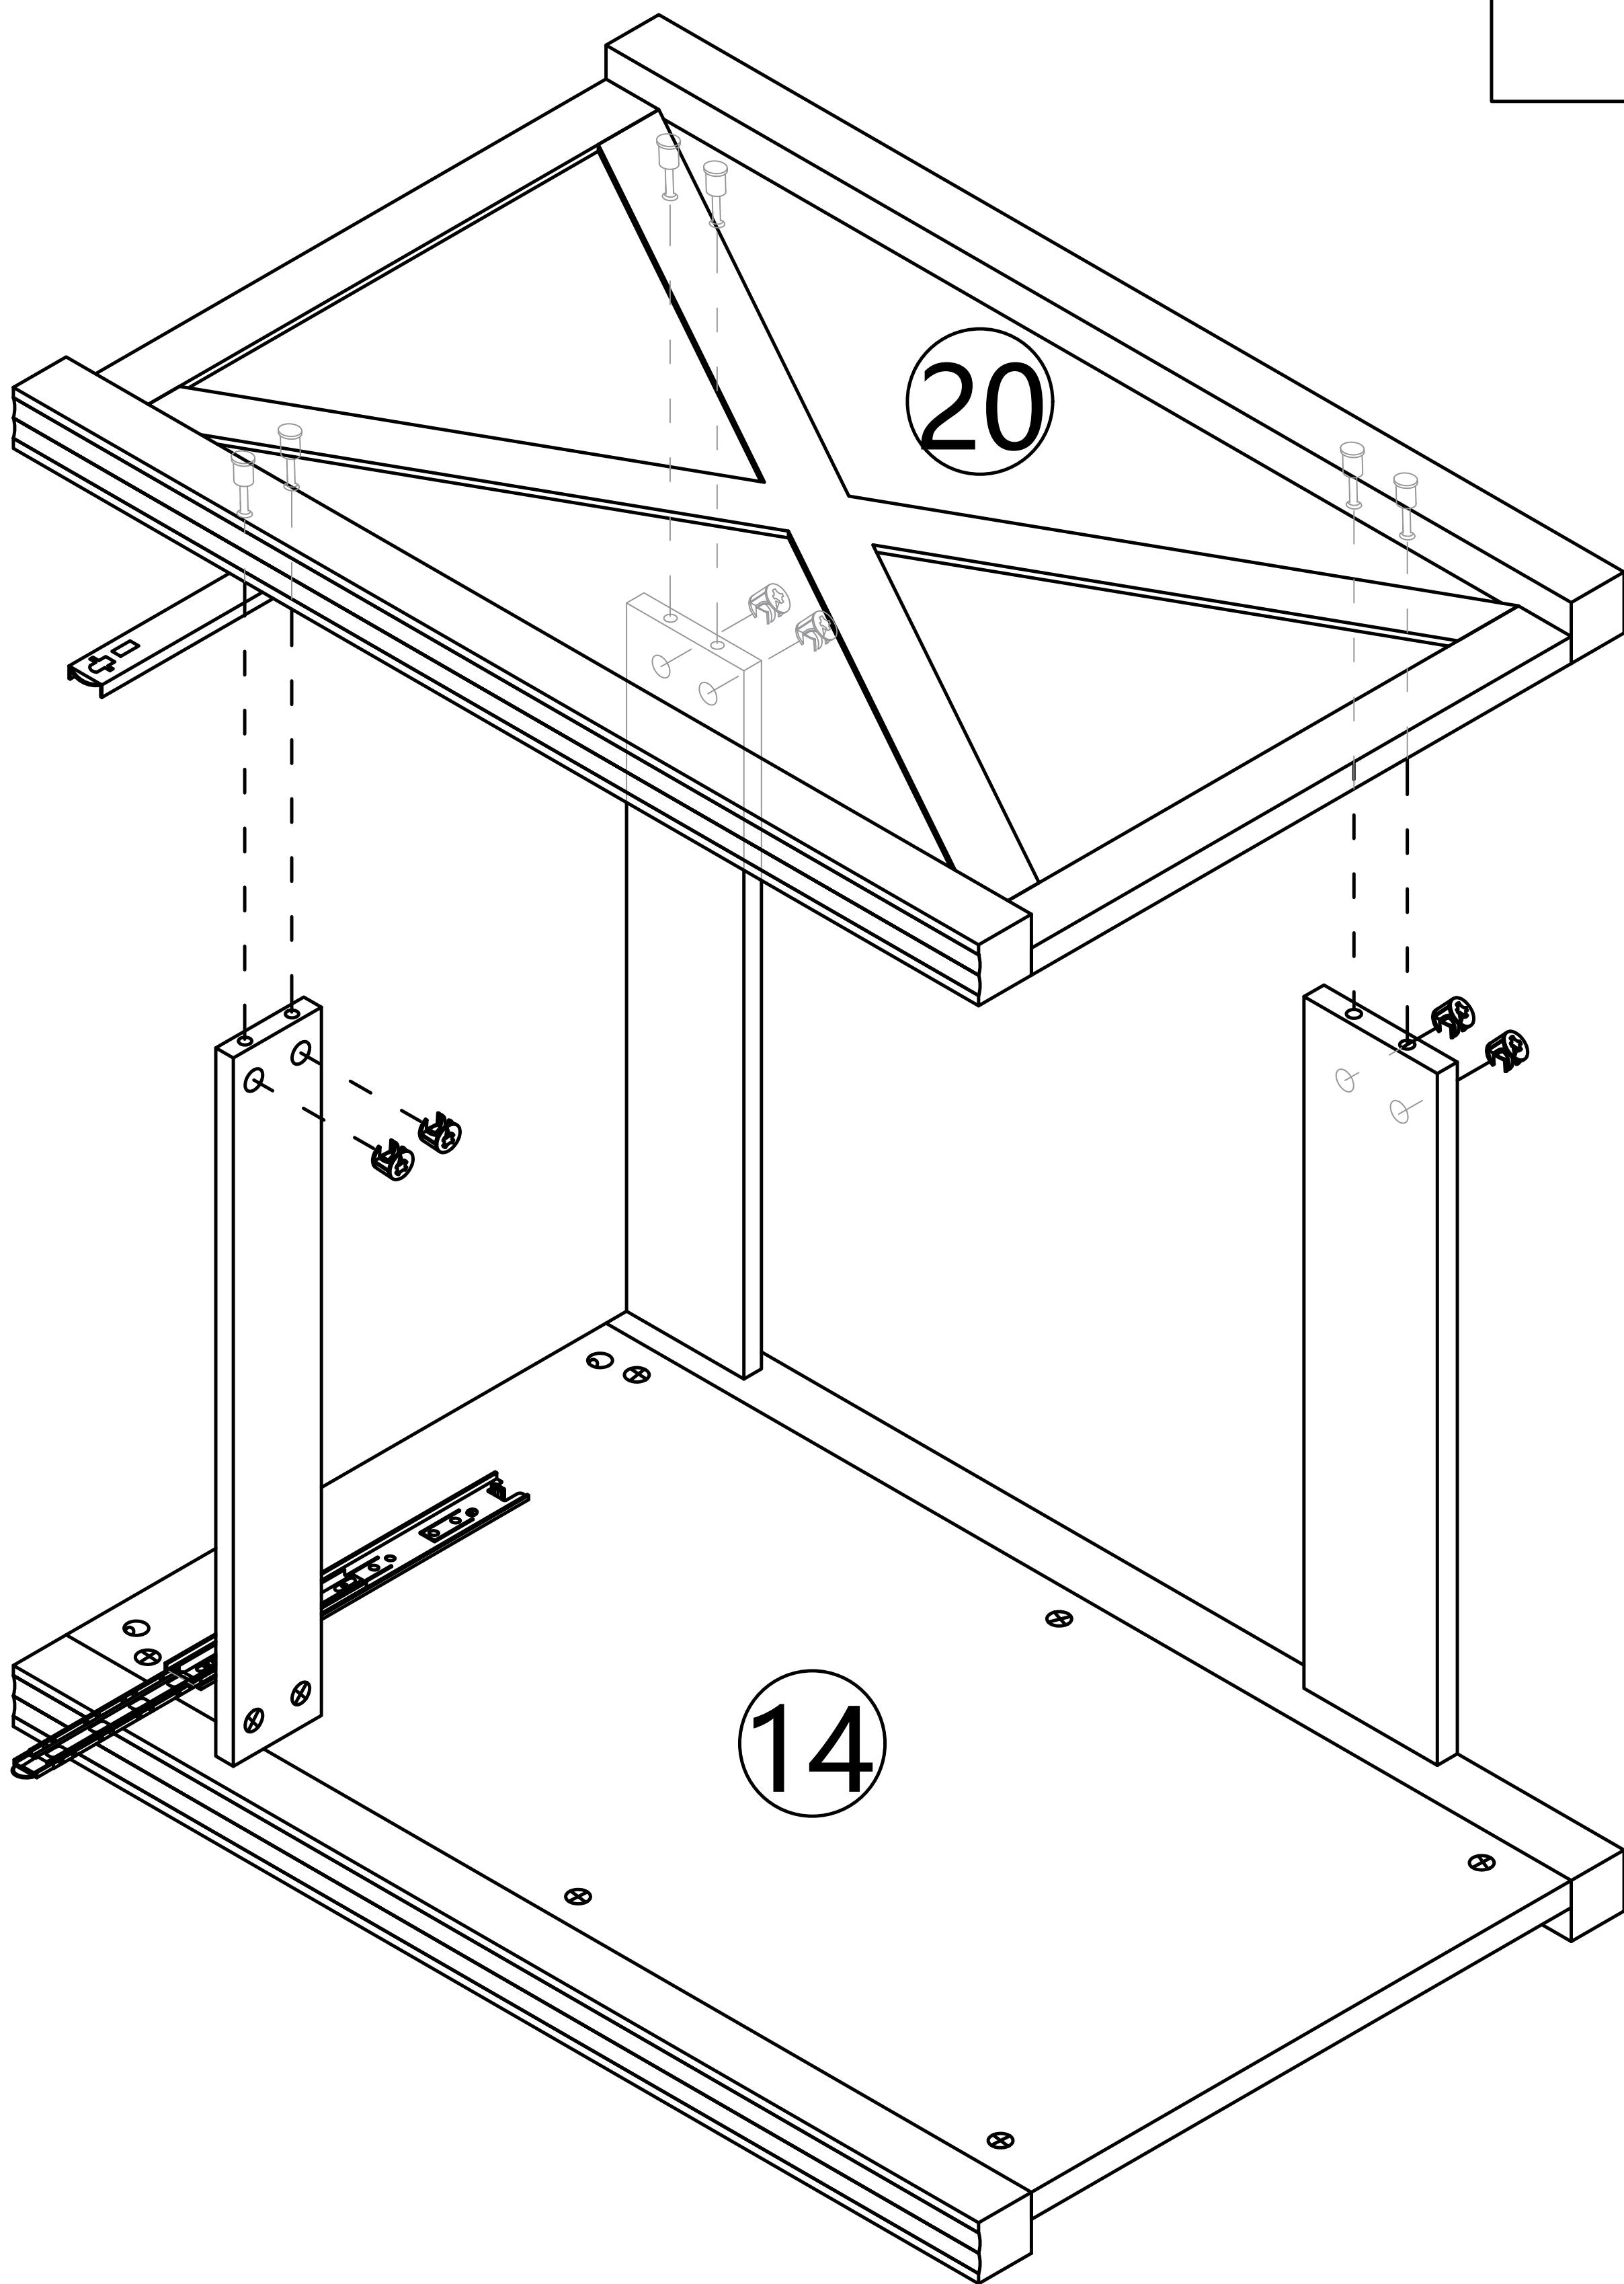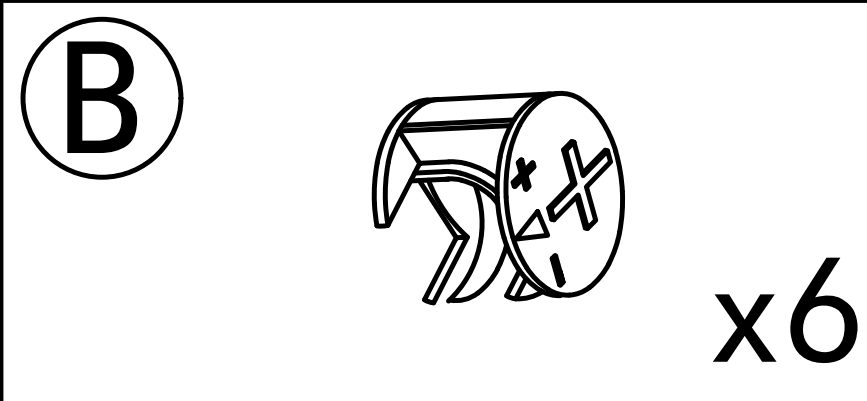


Step 45

H

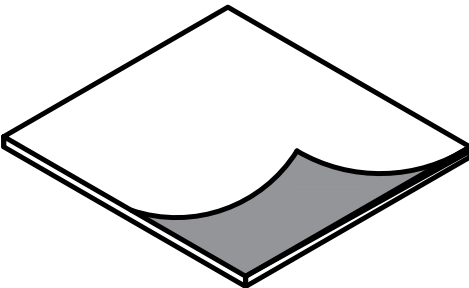


x4

Tear off release paper and stick the black foot pad on the board

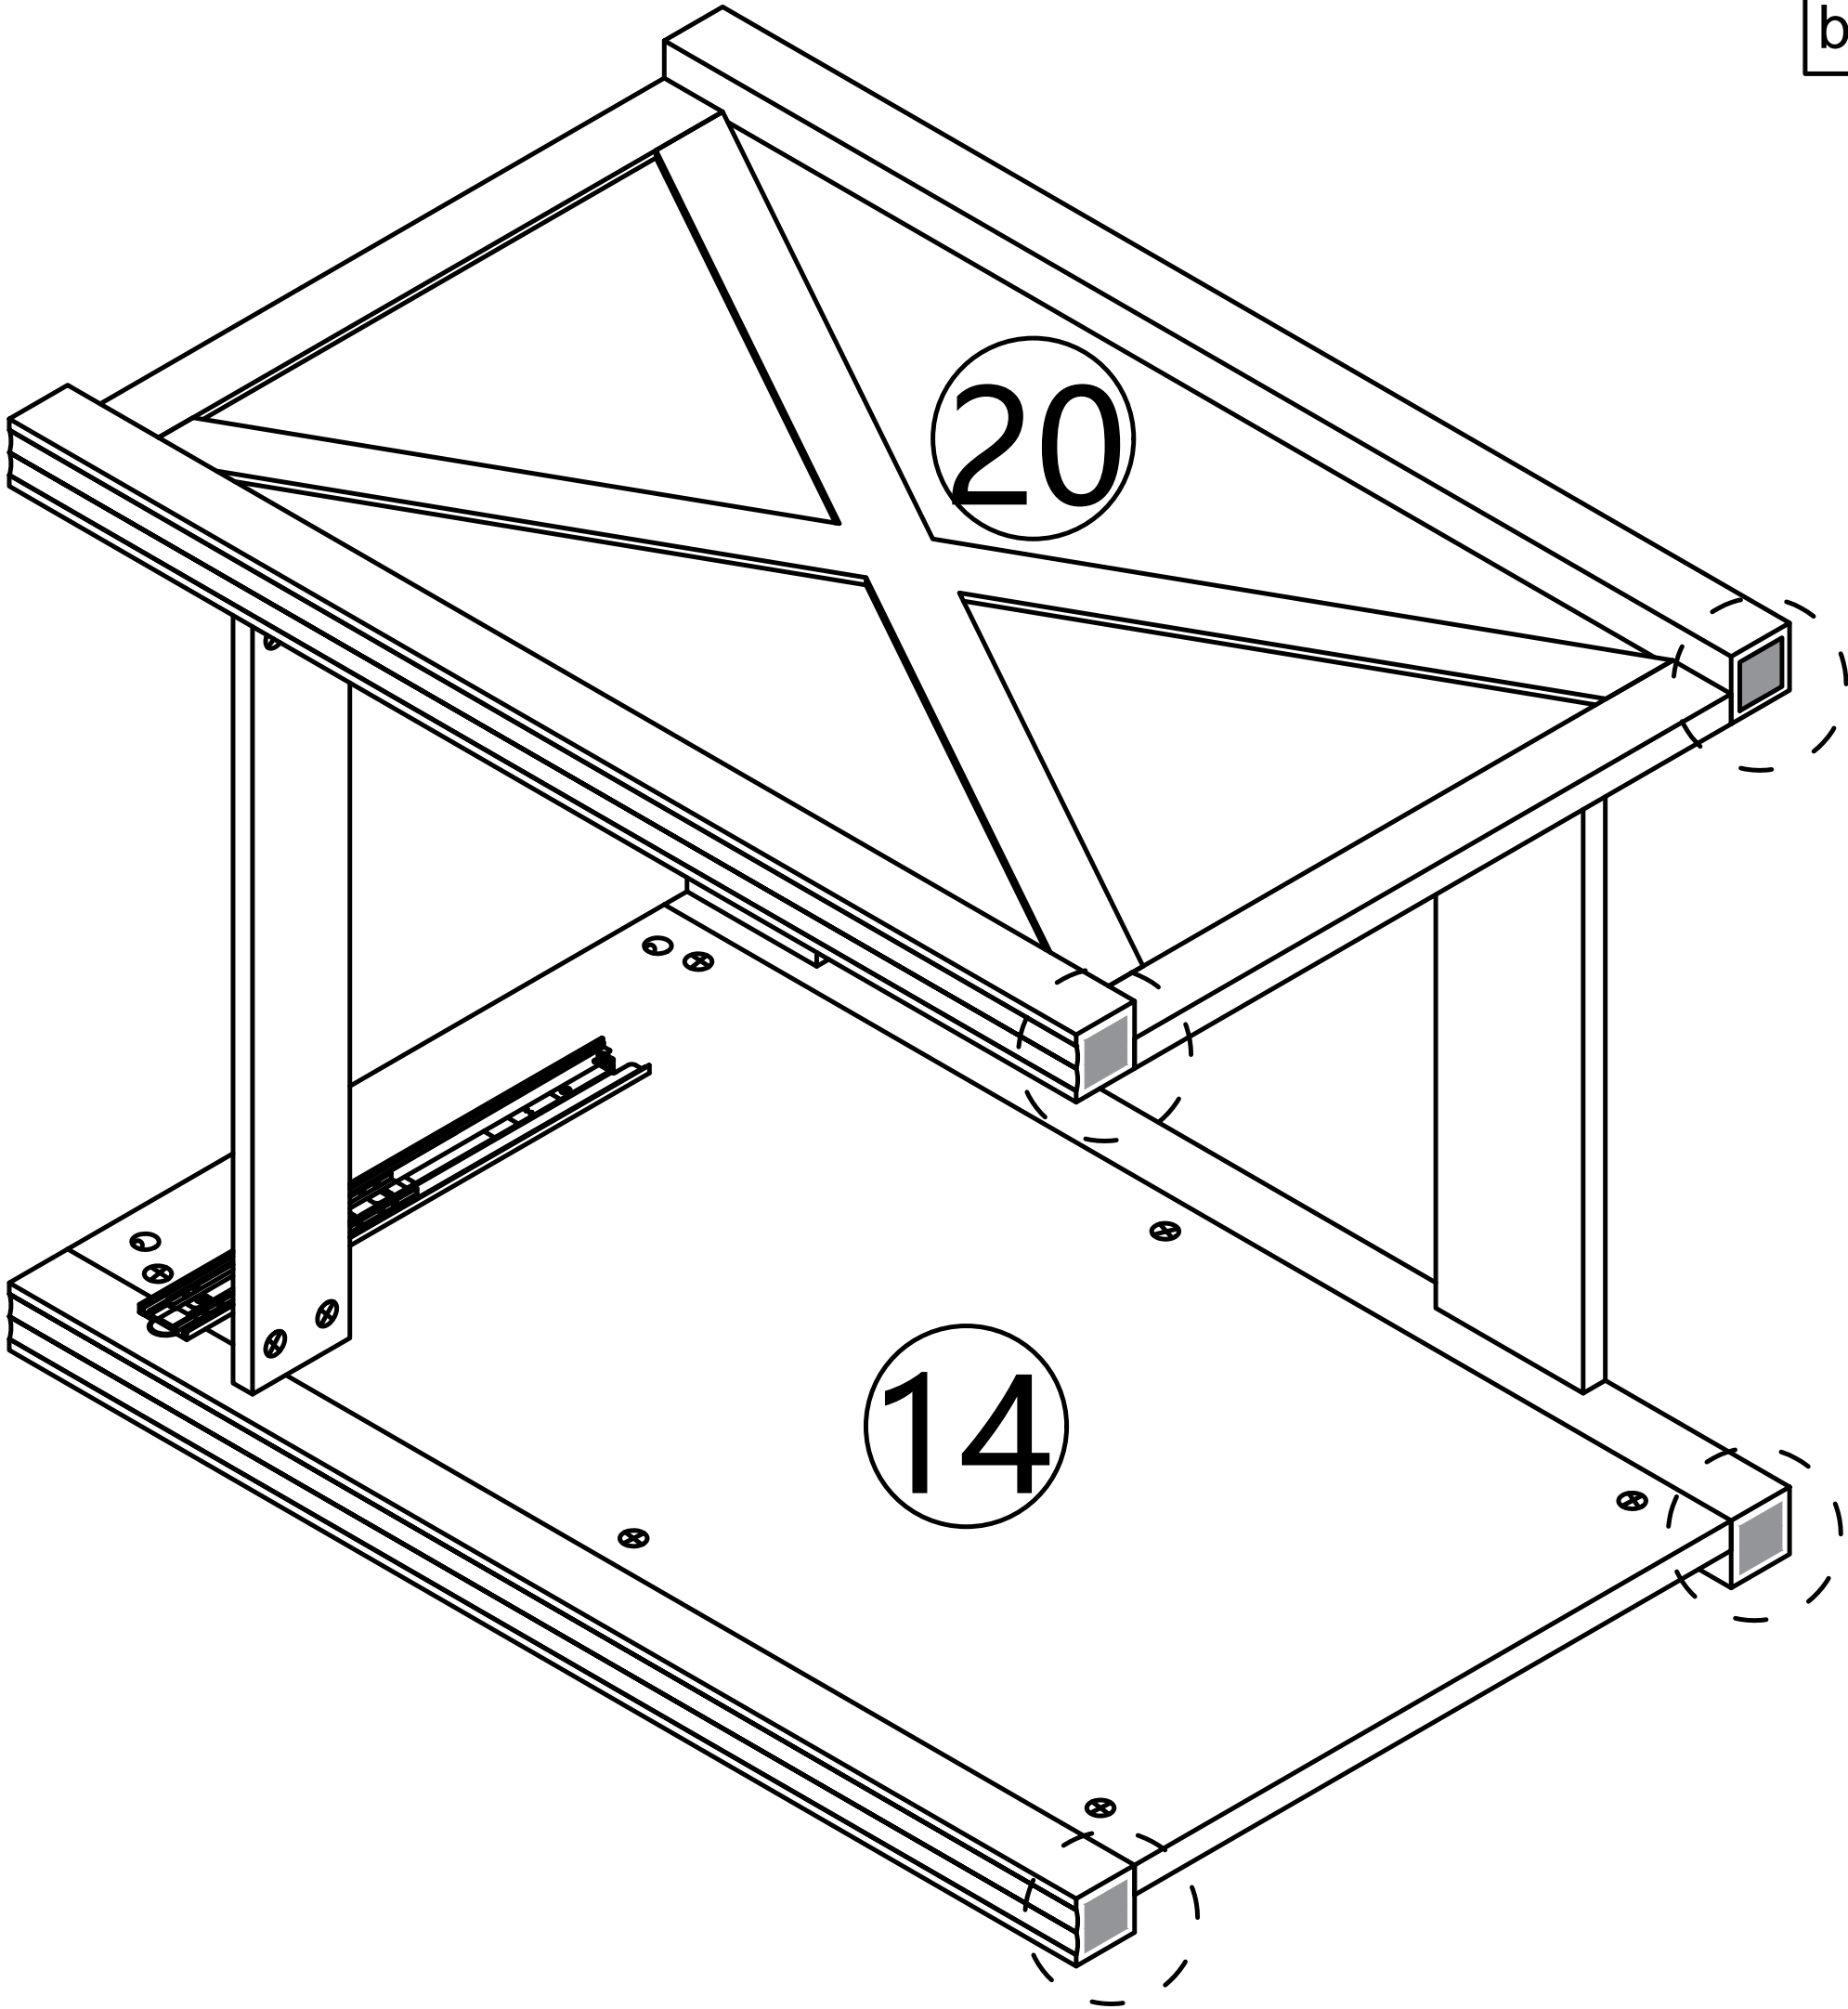


Step 46

A


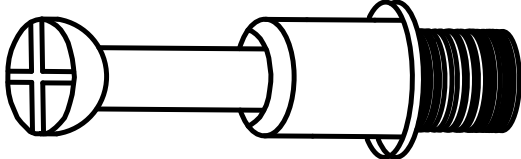


x7


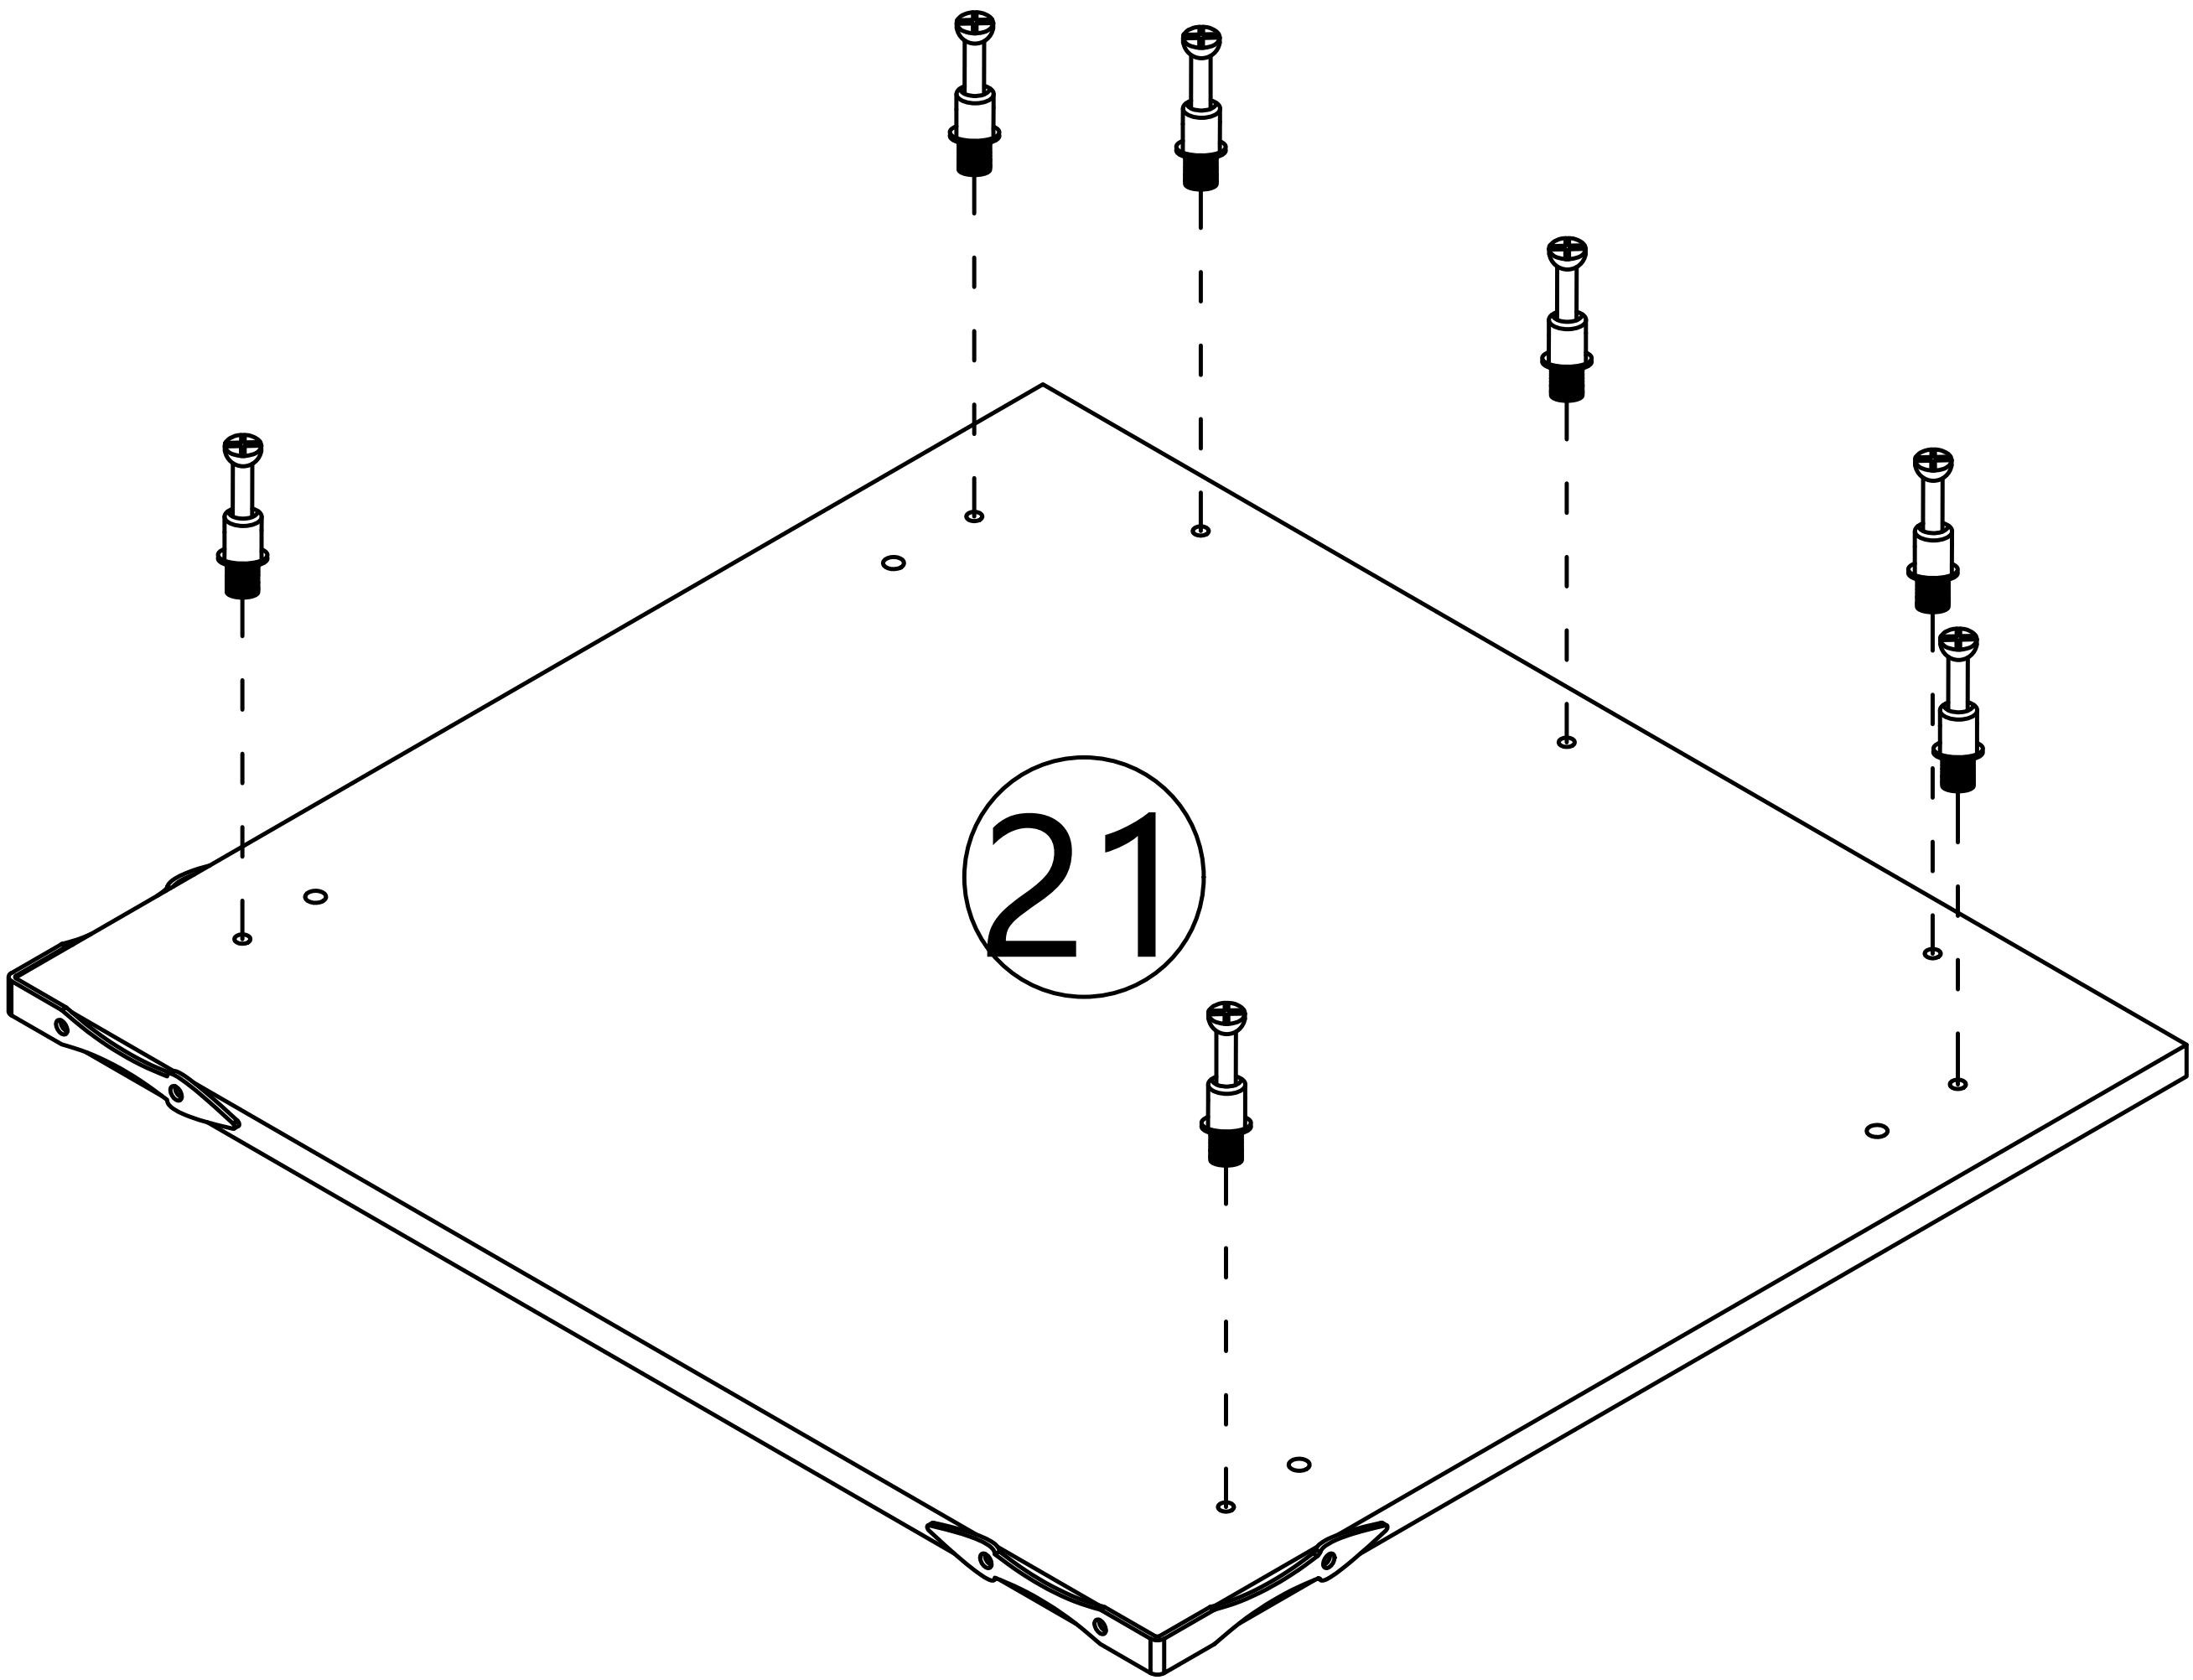




Step 47

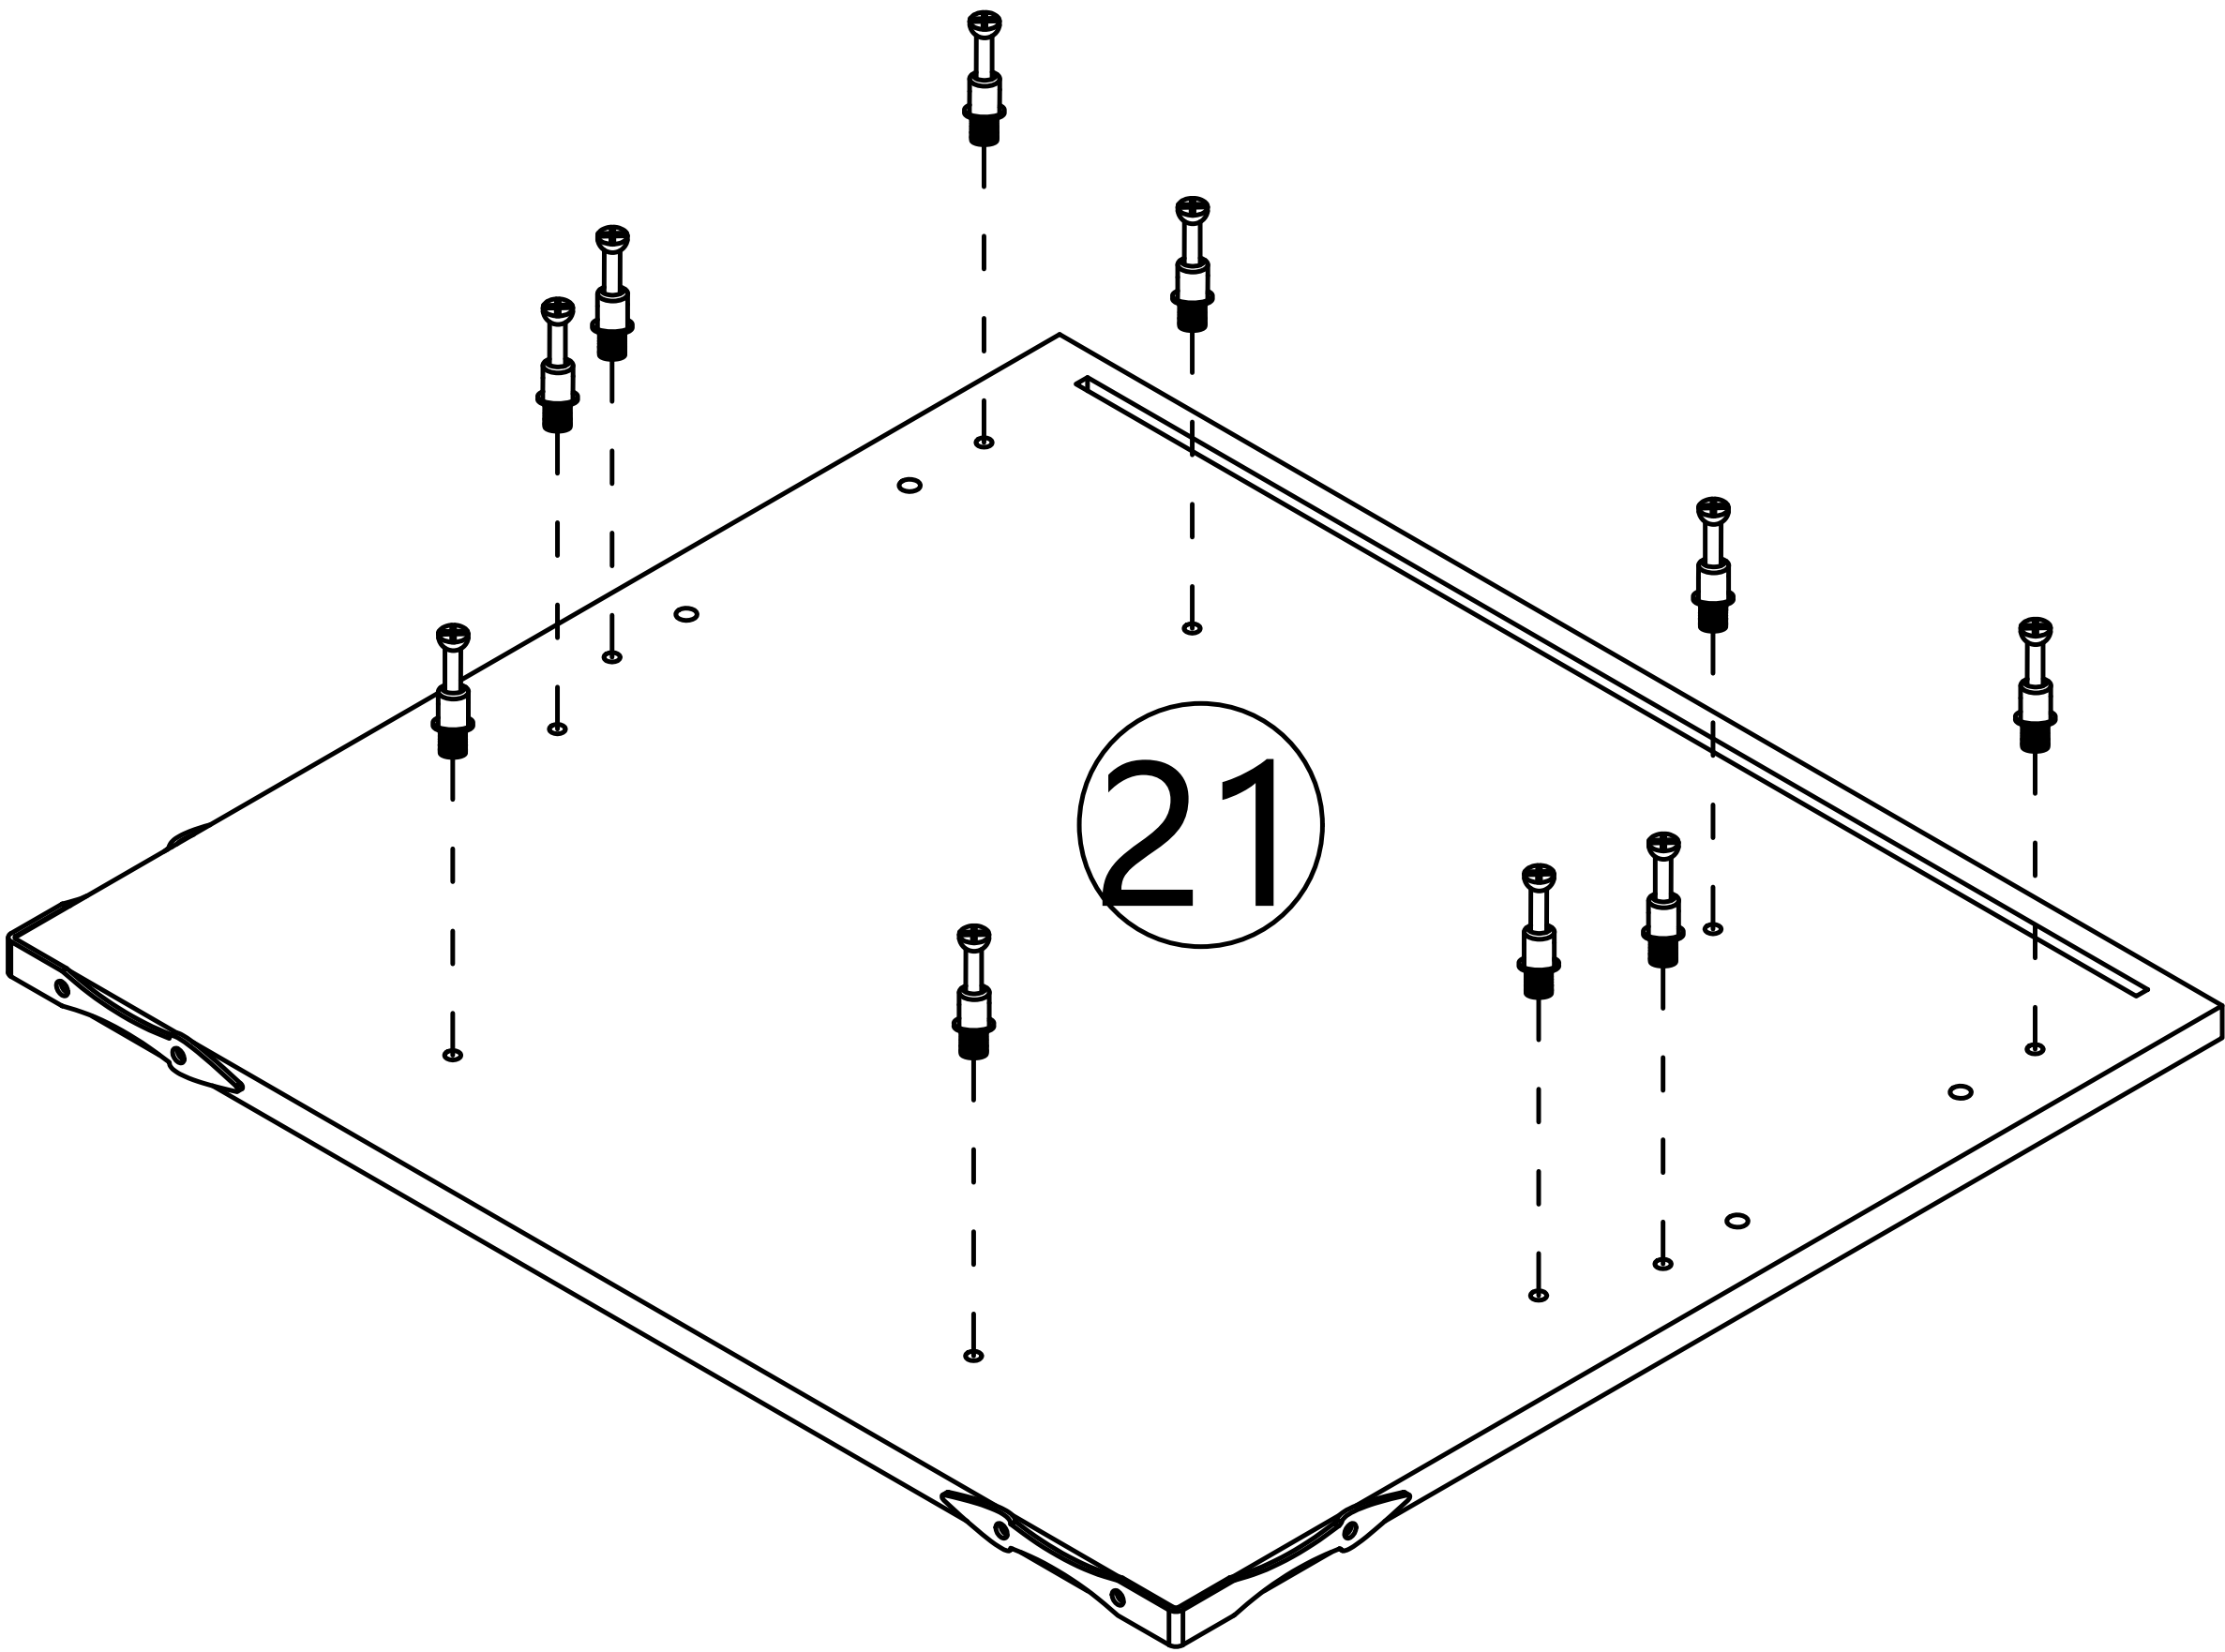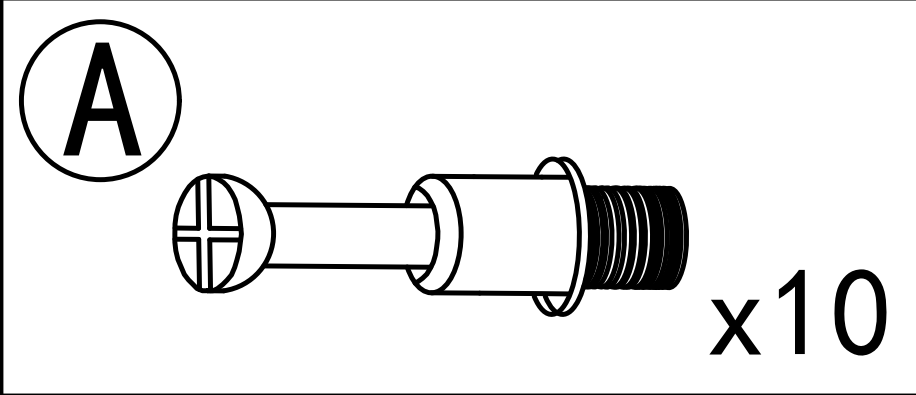


Step 48

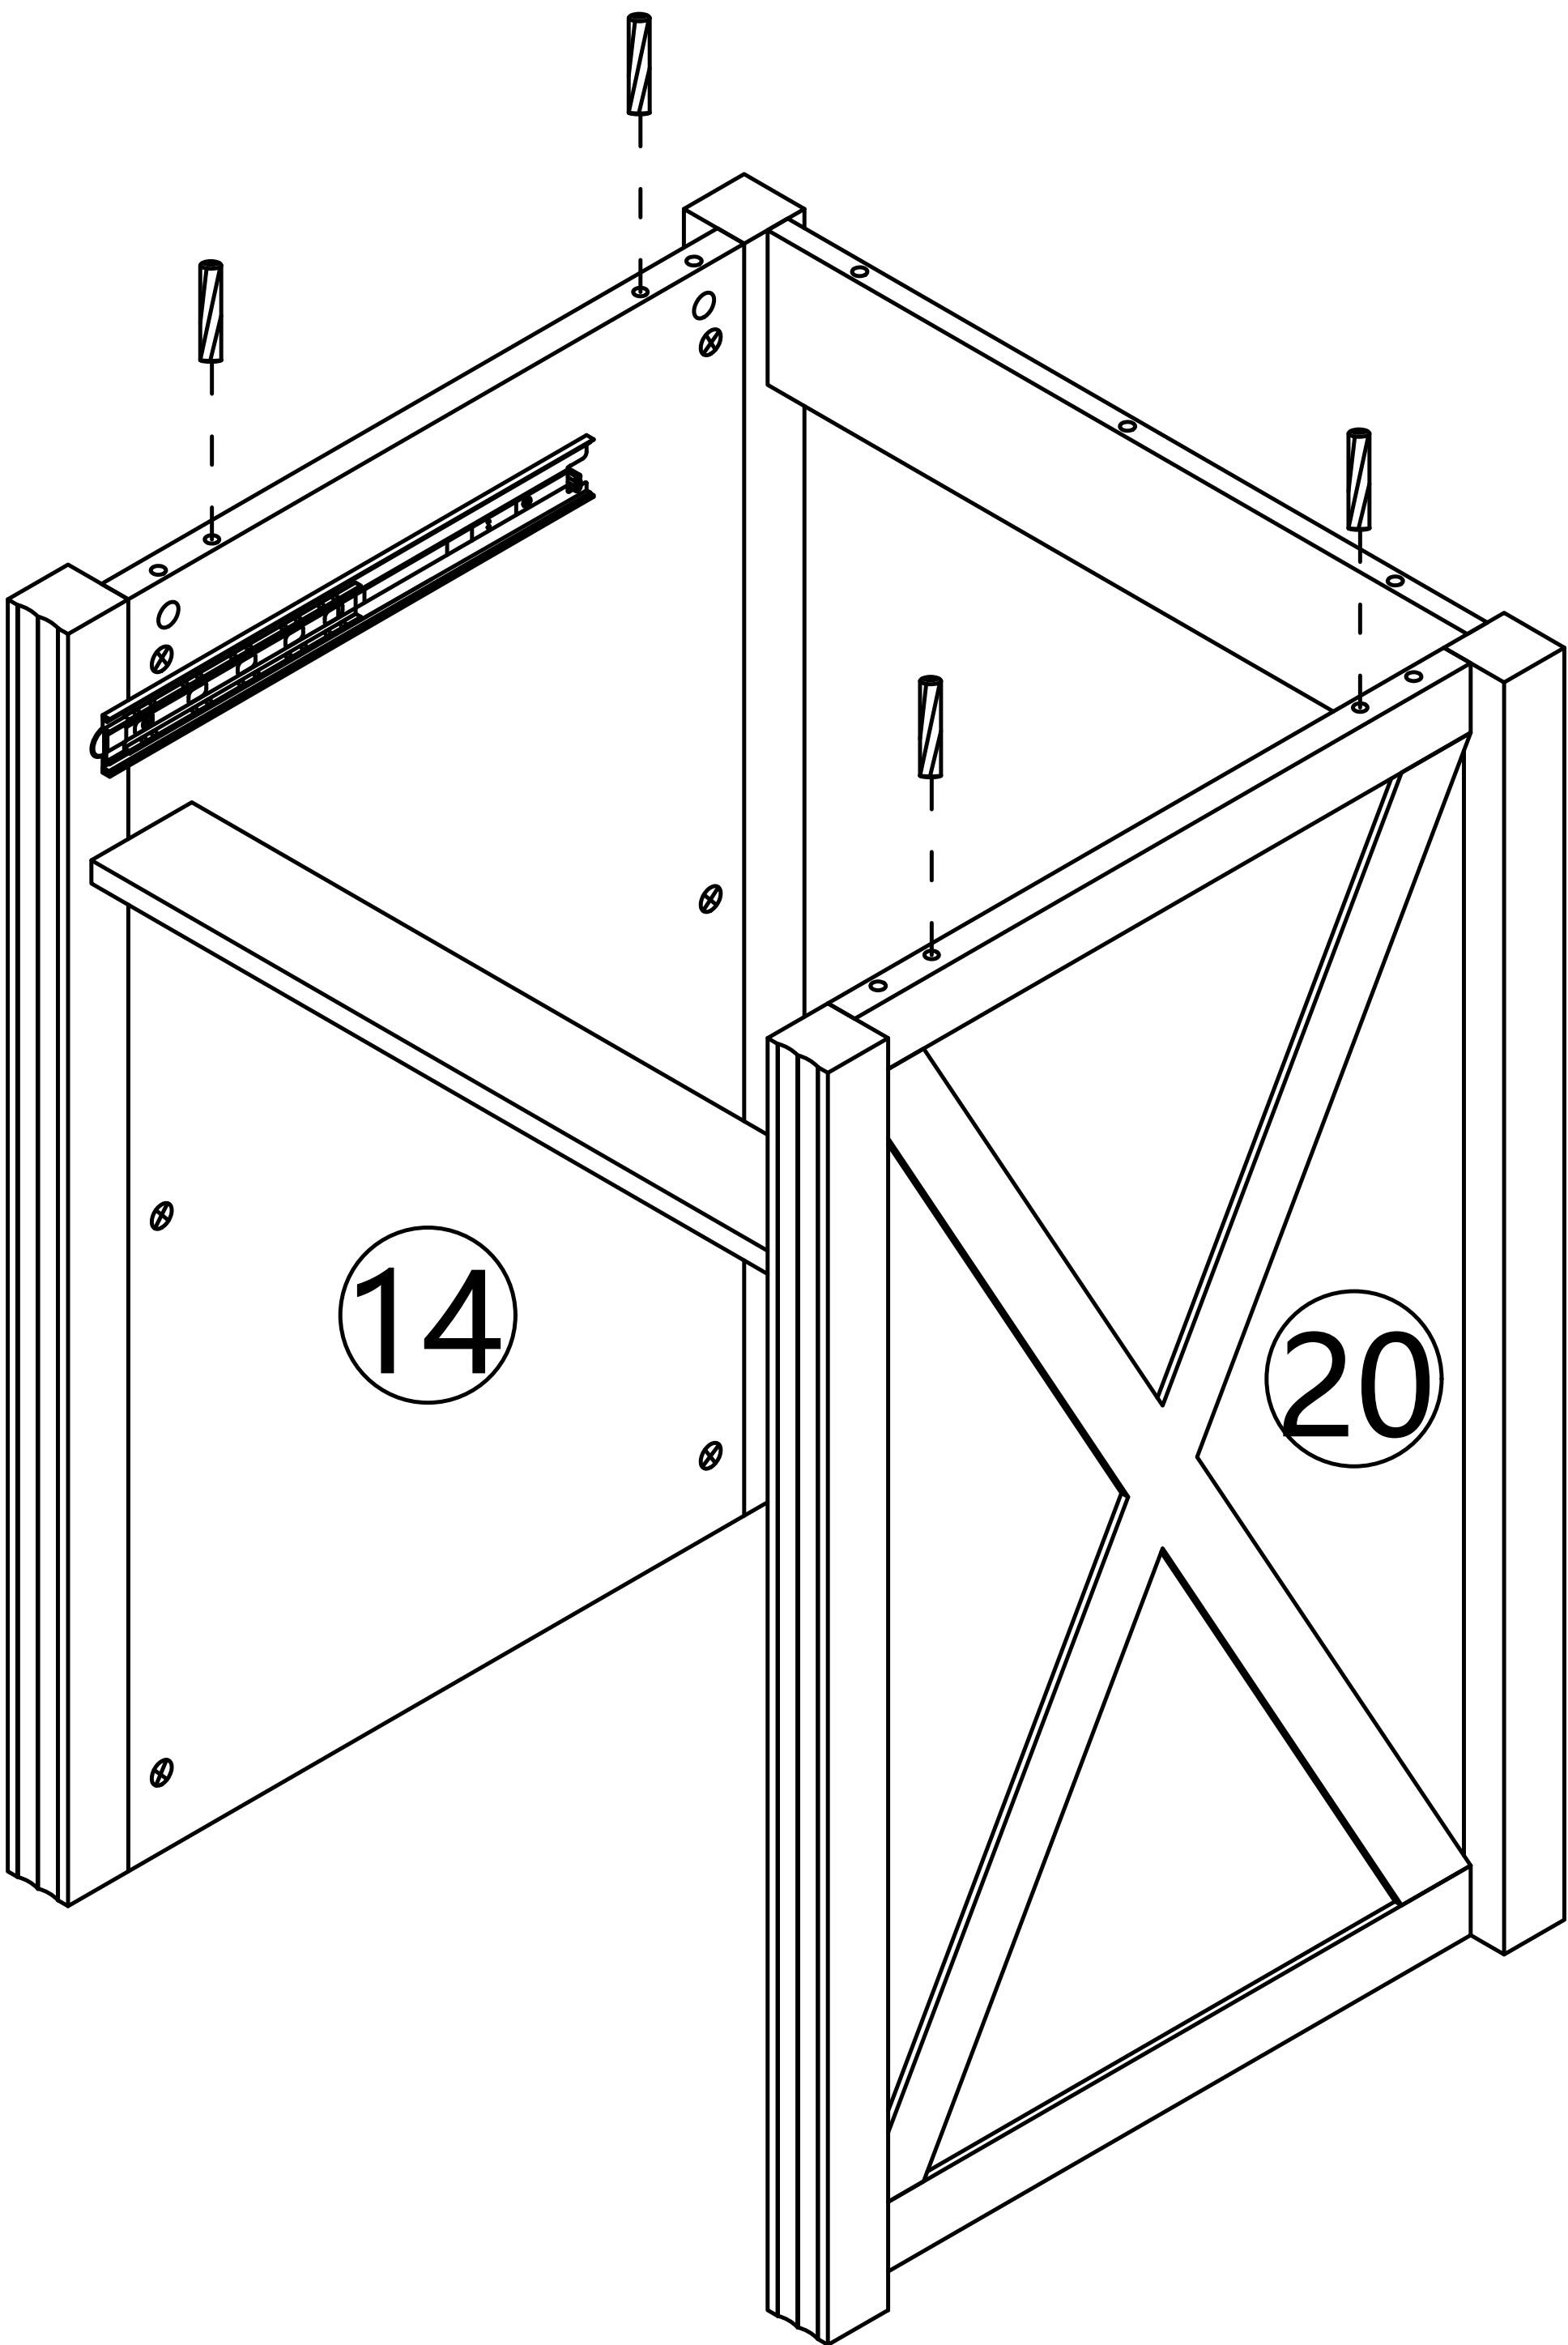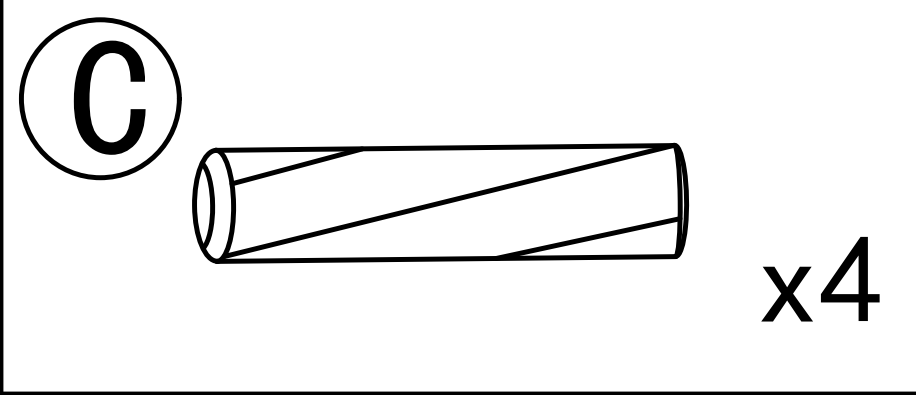


Step 49

B

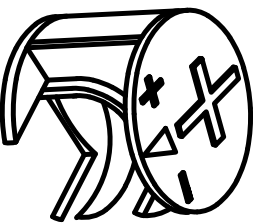


x7

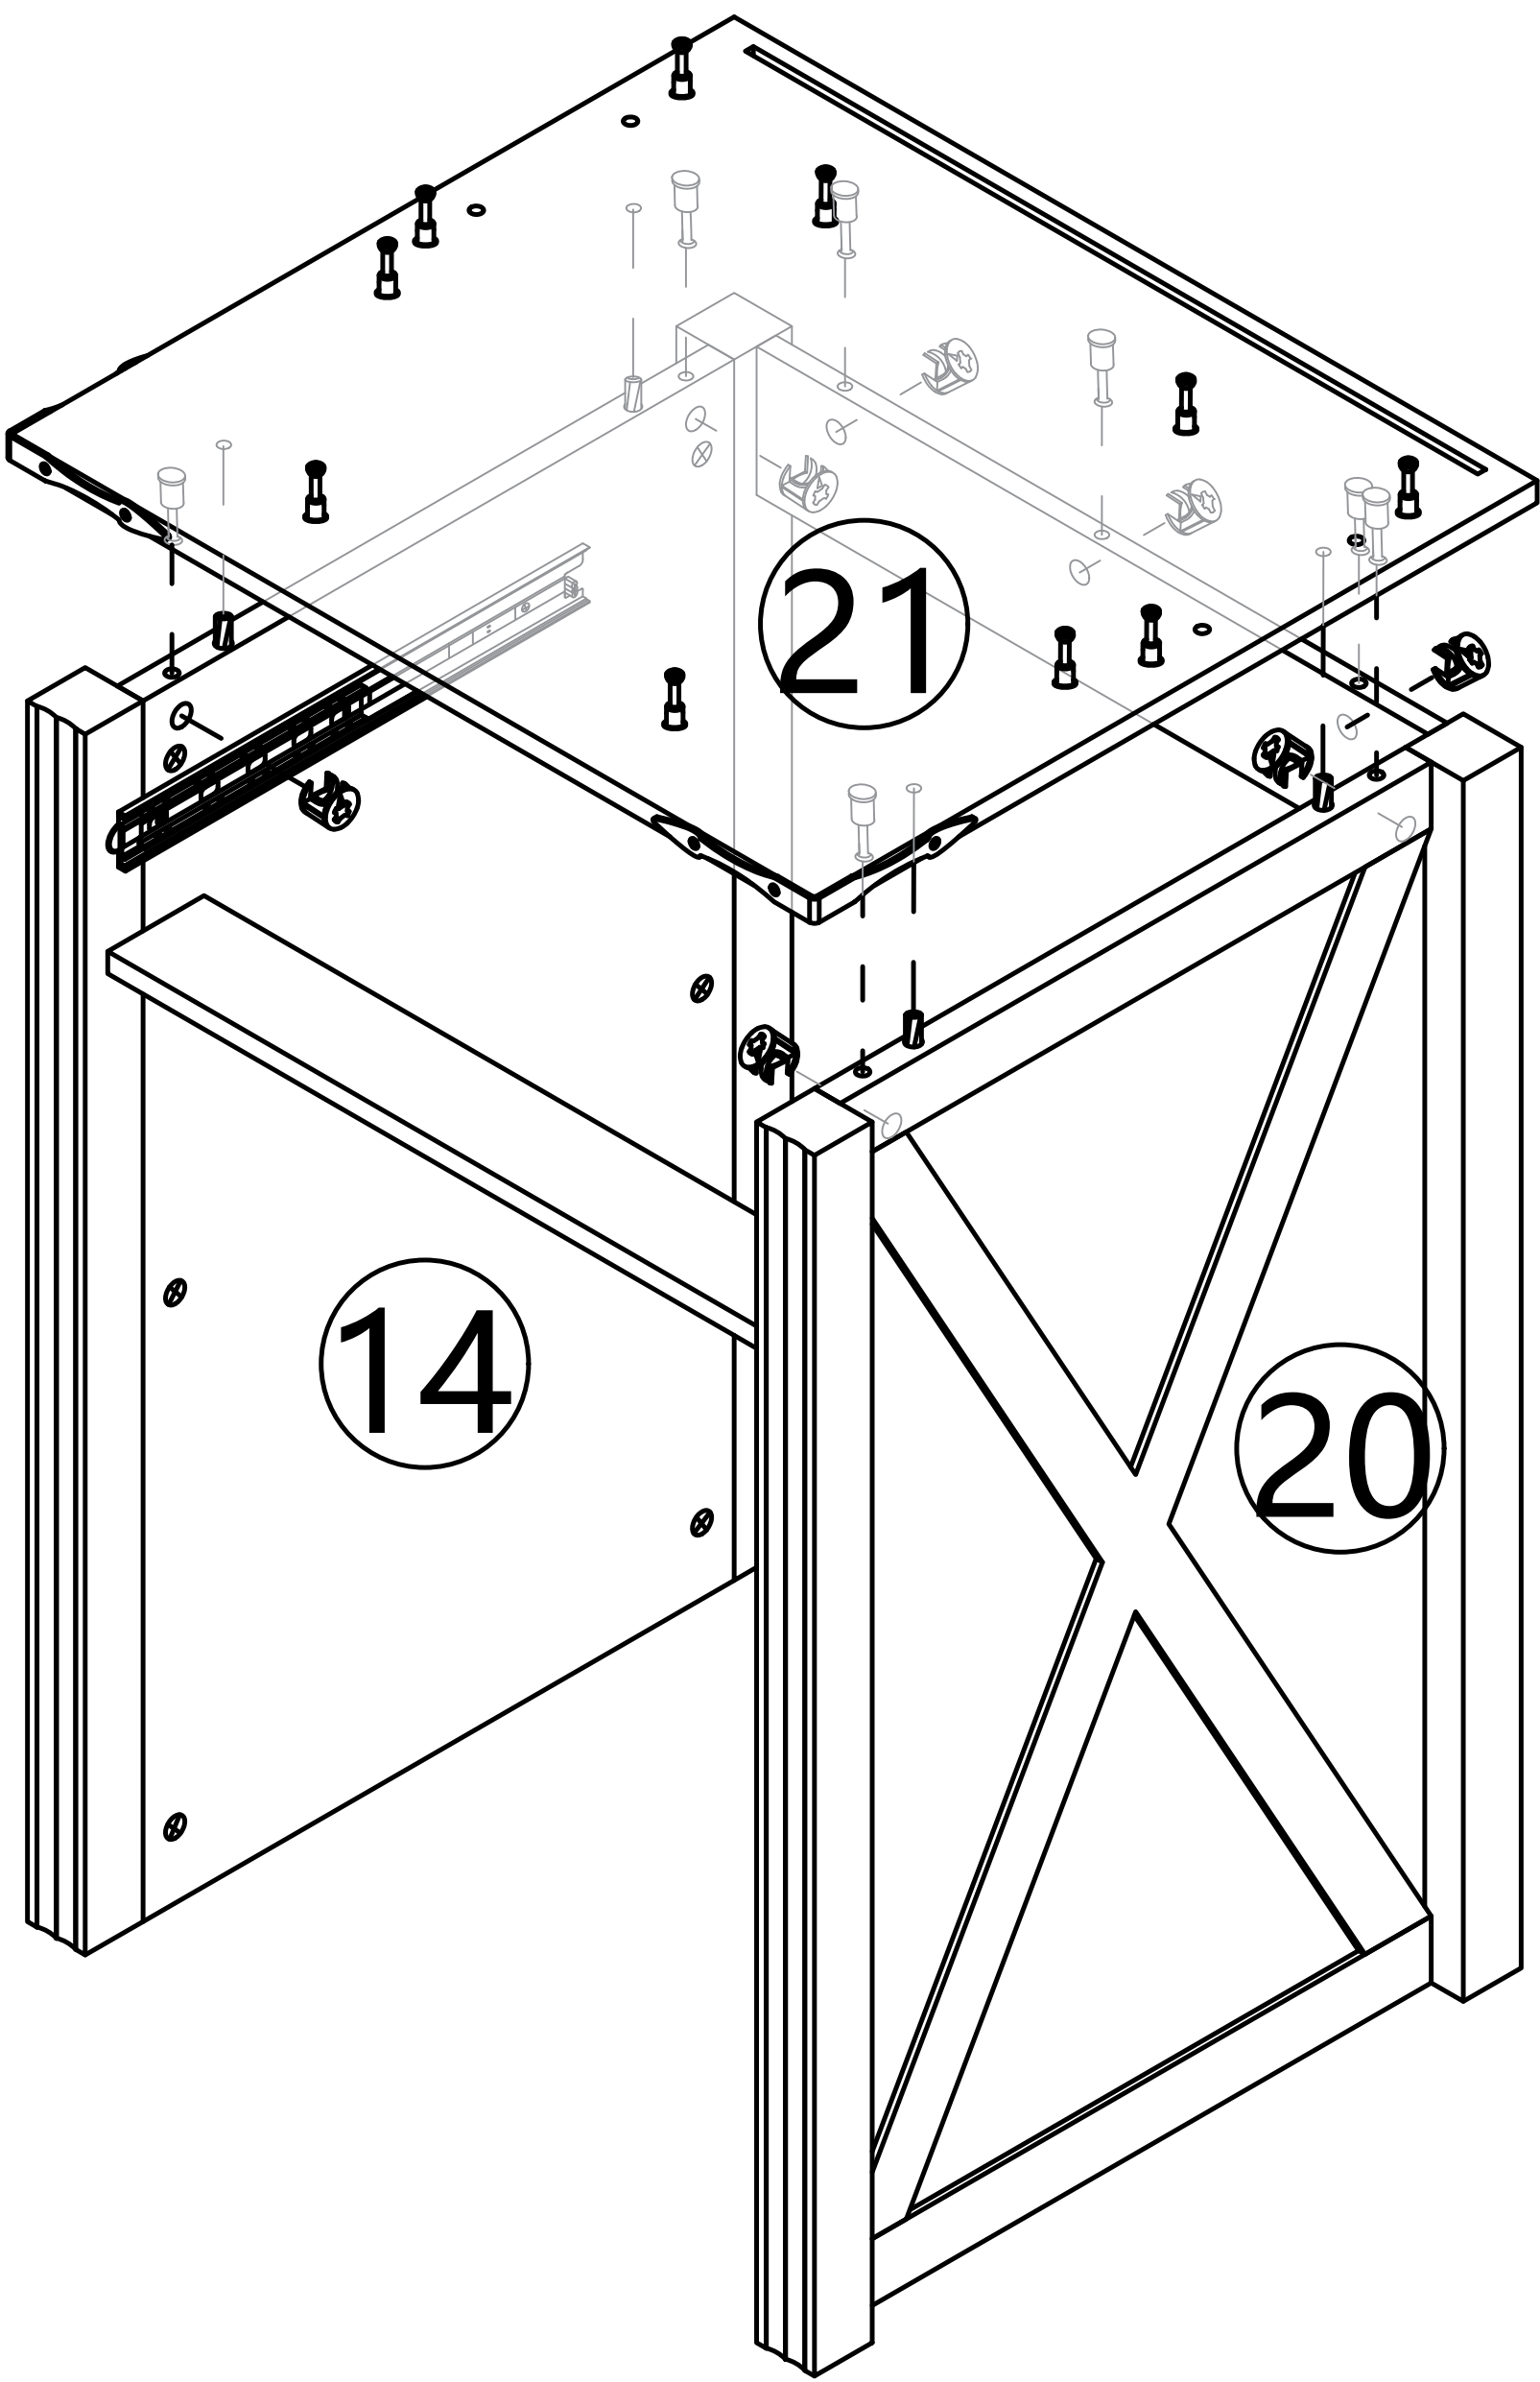


Step 50

A

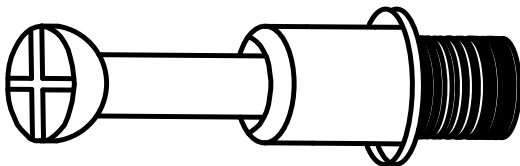


x8

B

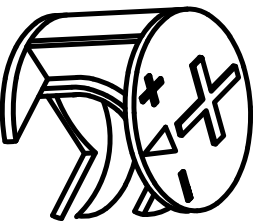


x8

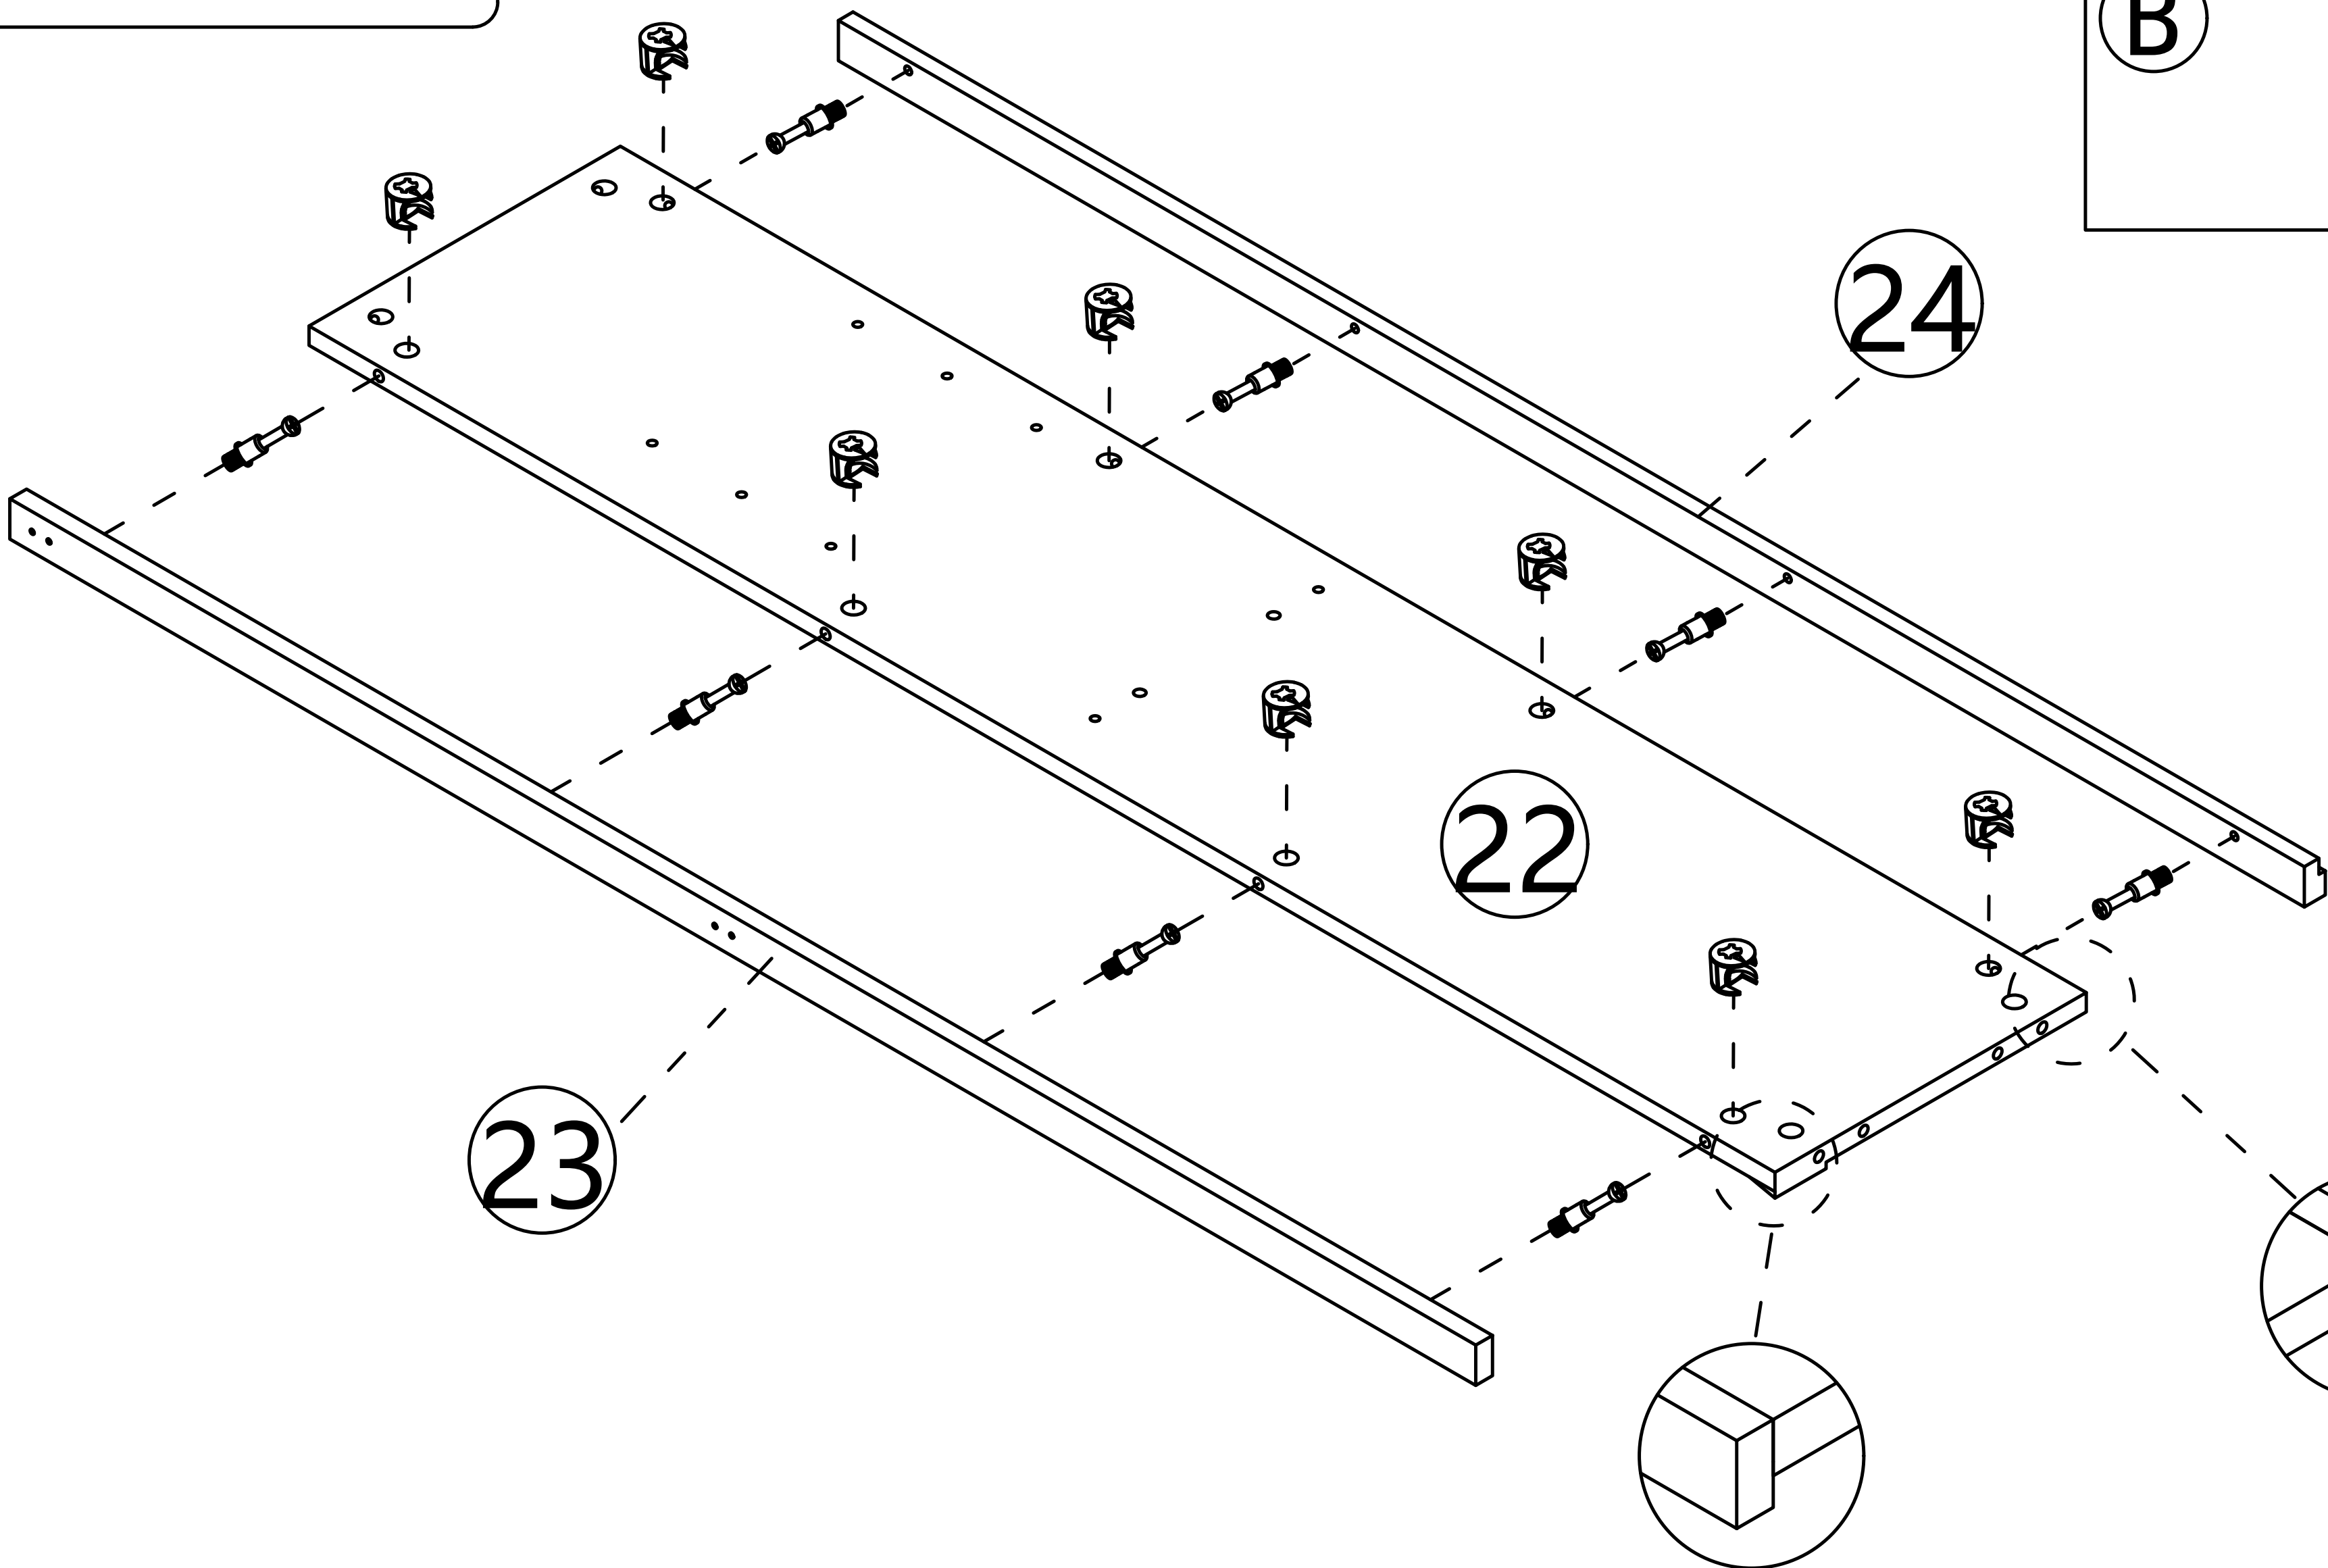


Step 51


- A

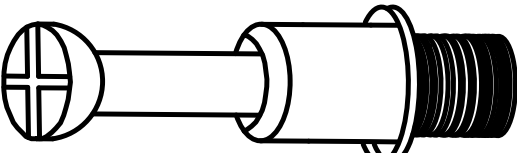


x2
- C

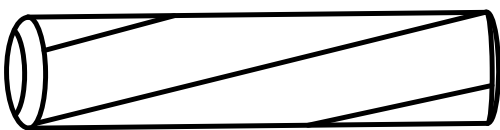


x2

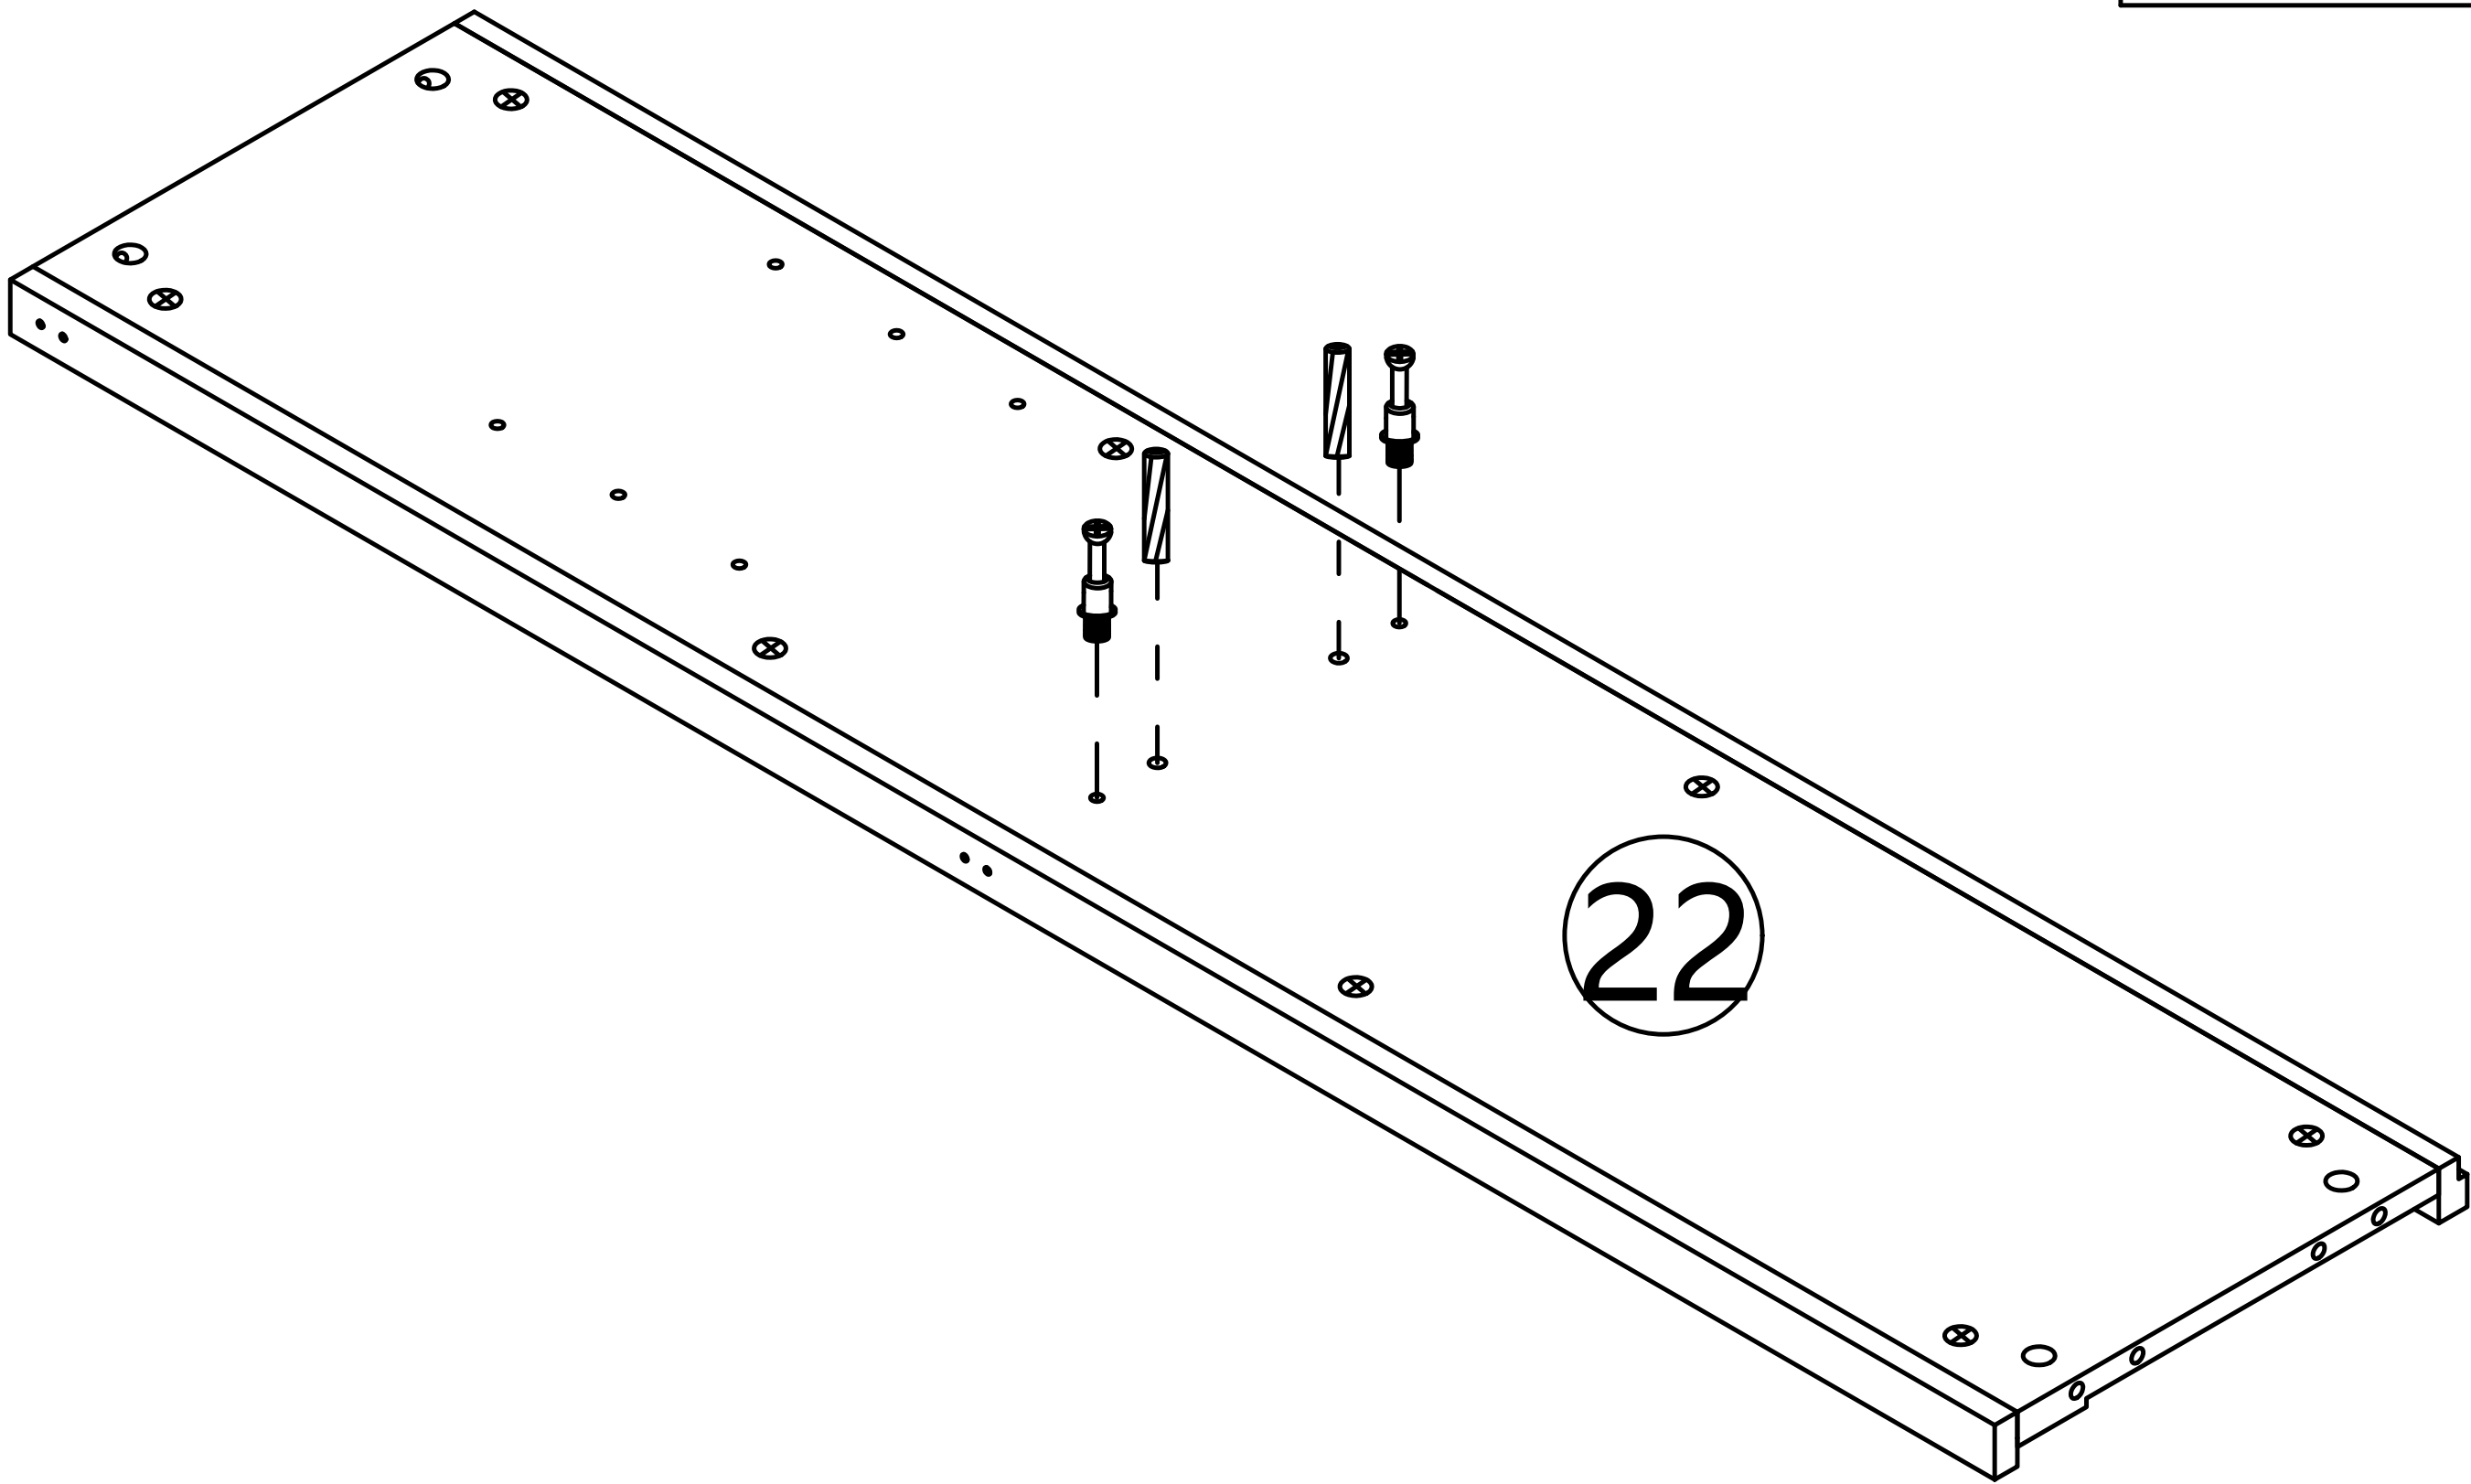



Step 52

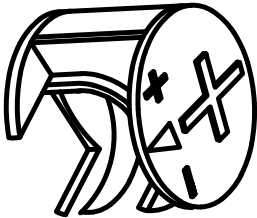
- B
- 
- x2

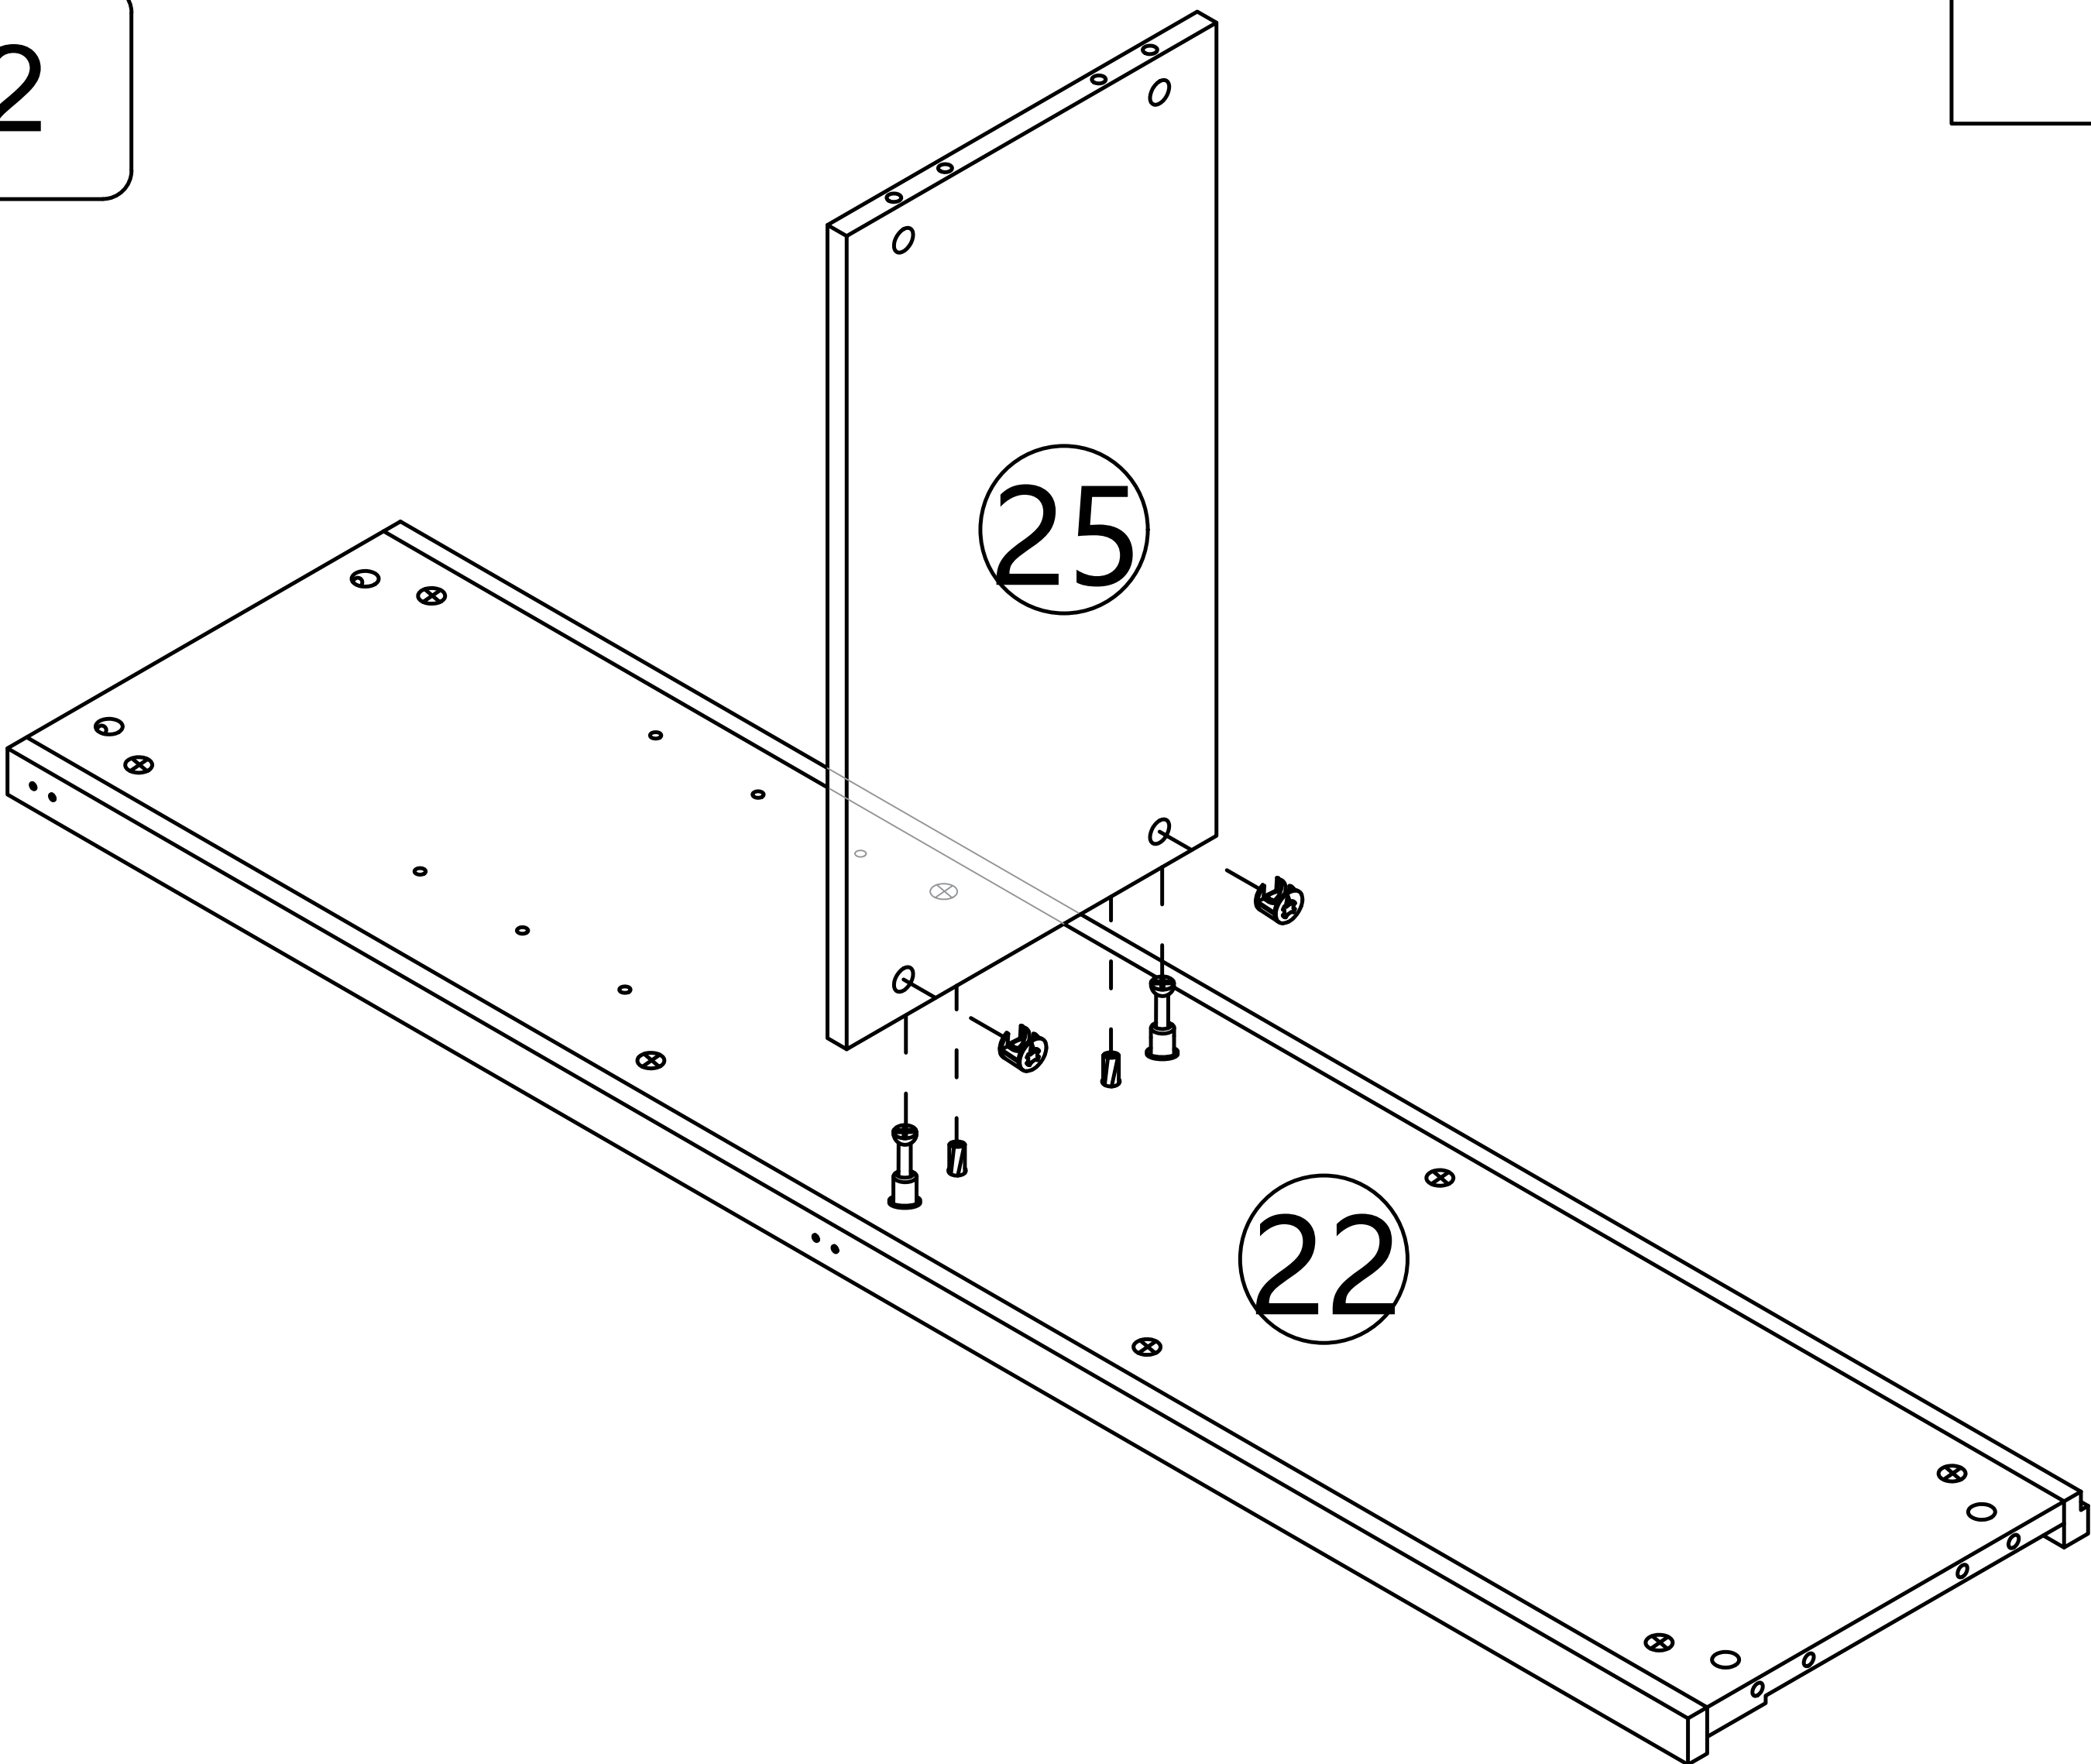


Step 53

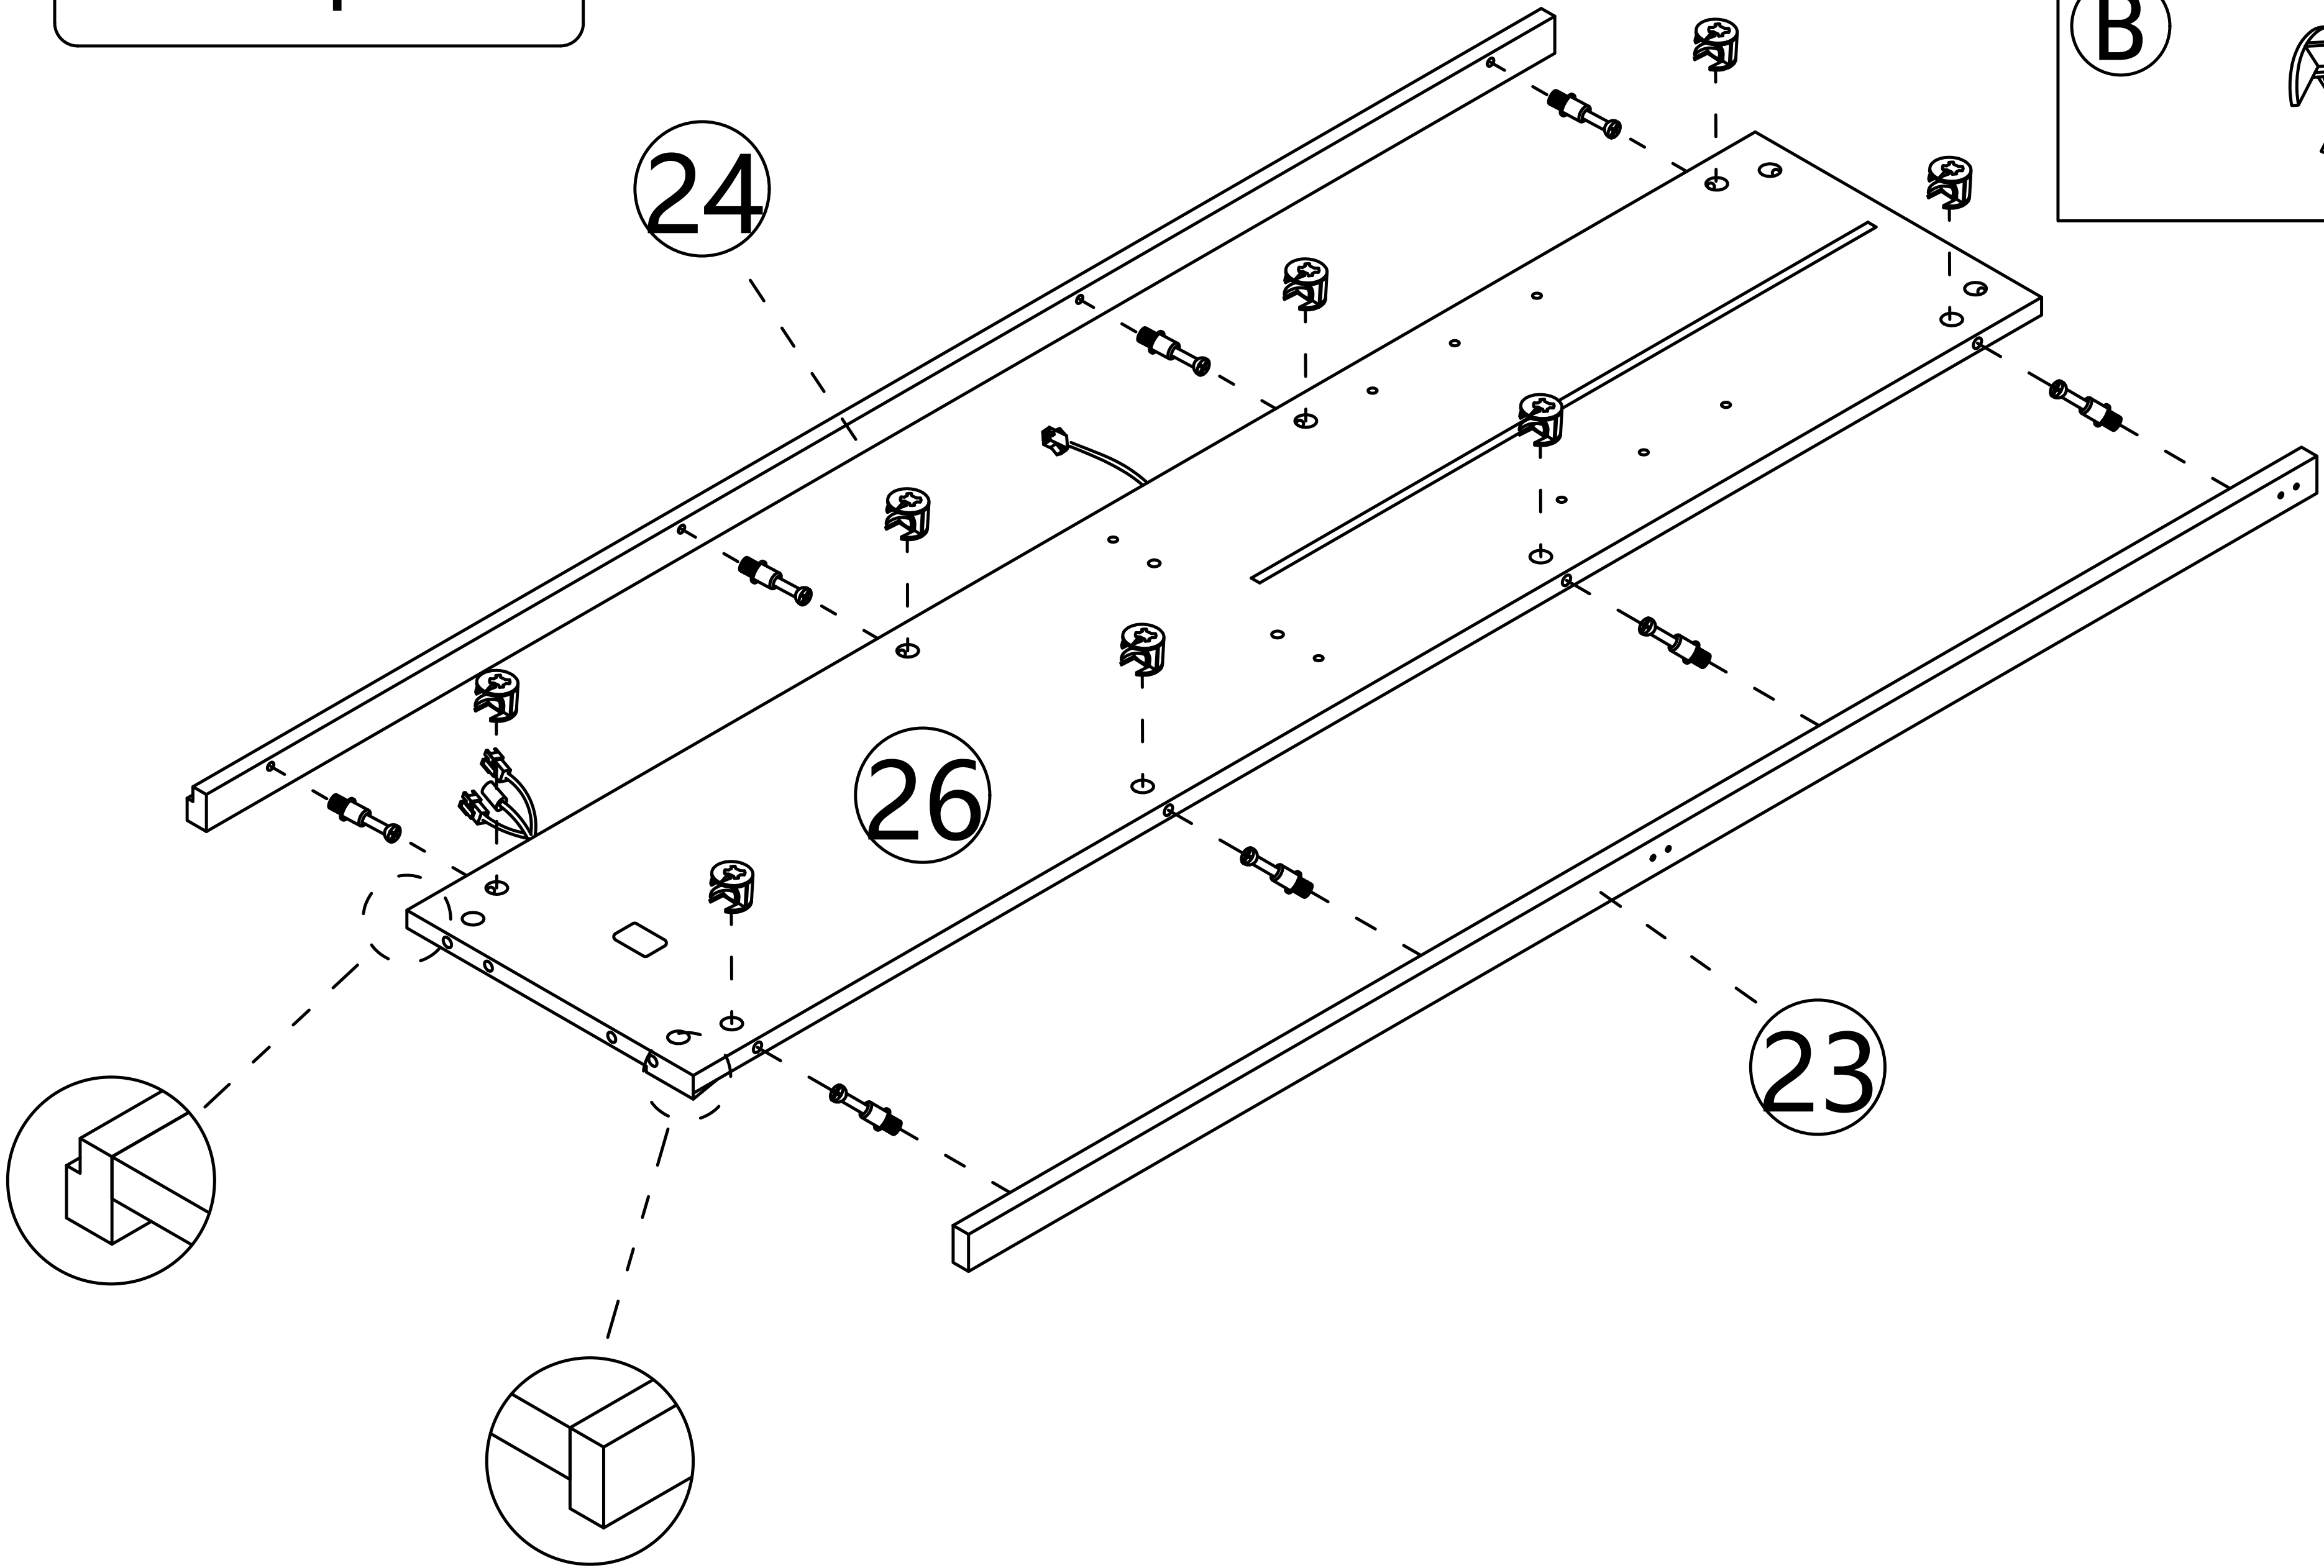


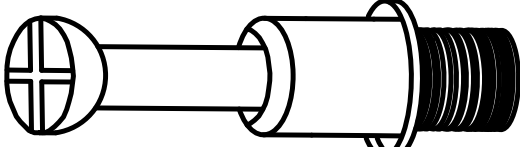
A  x8

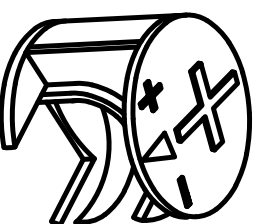B  x8

Step 54

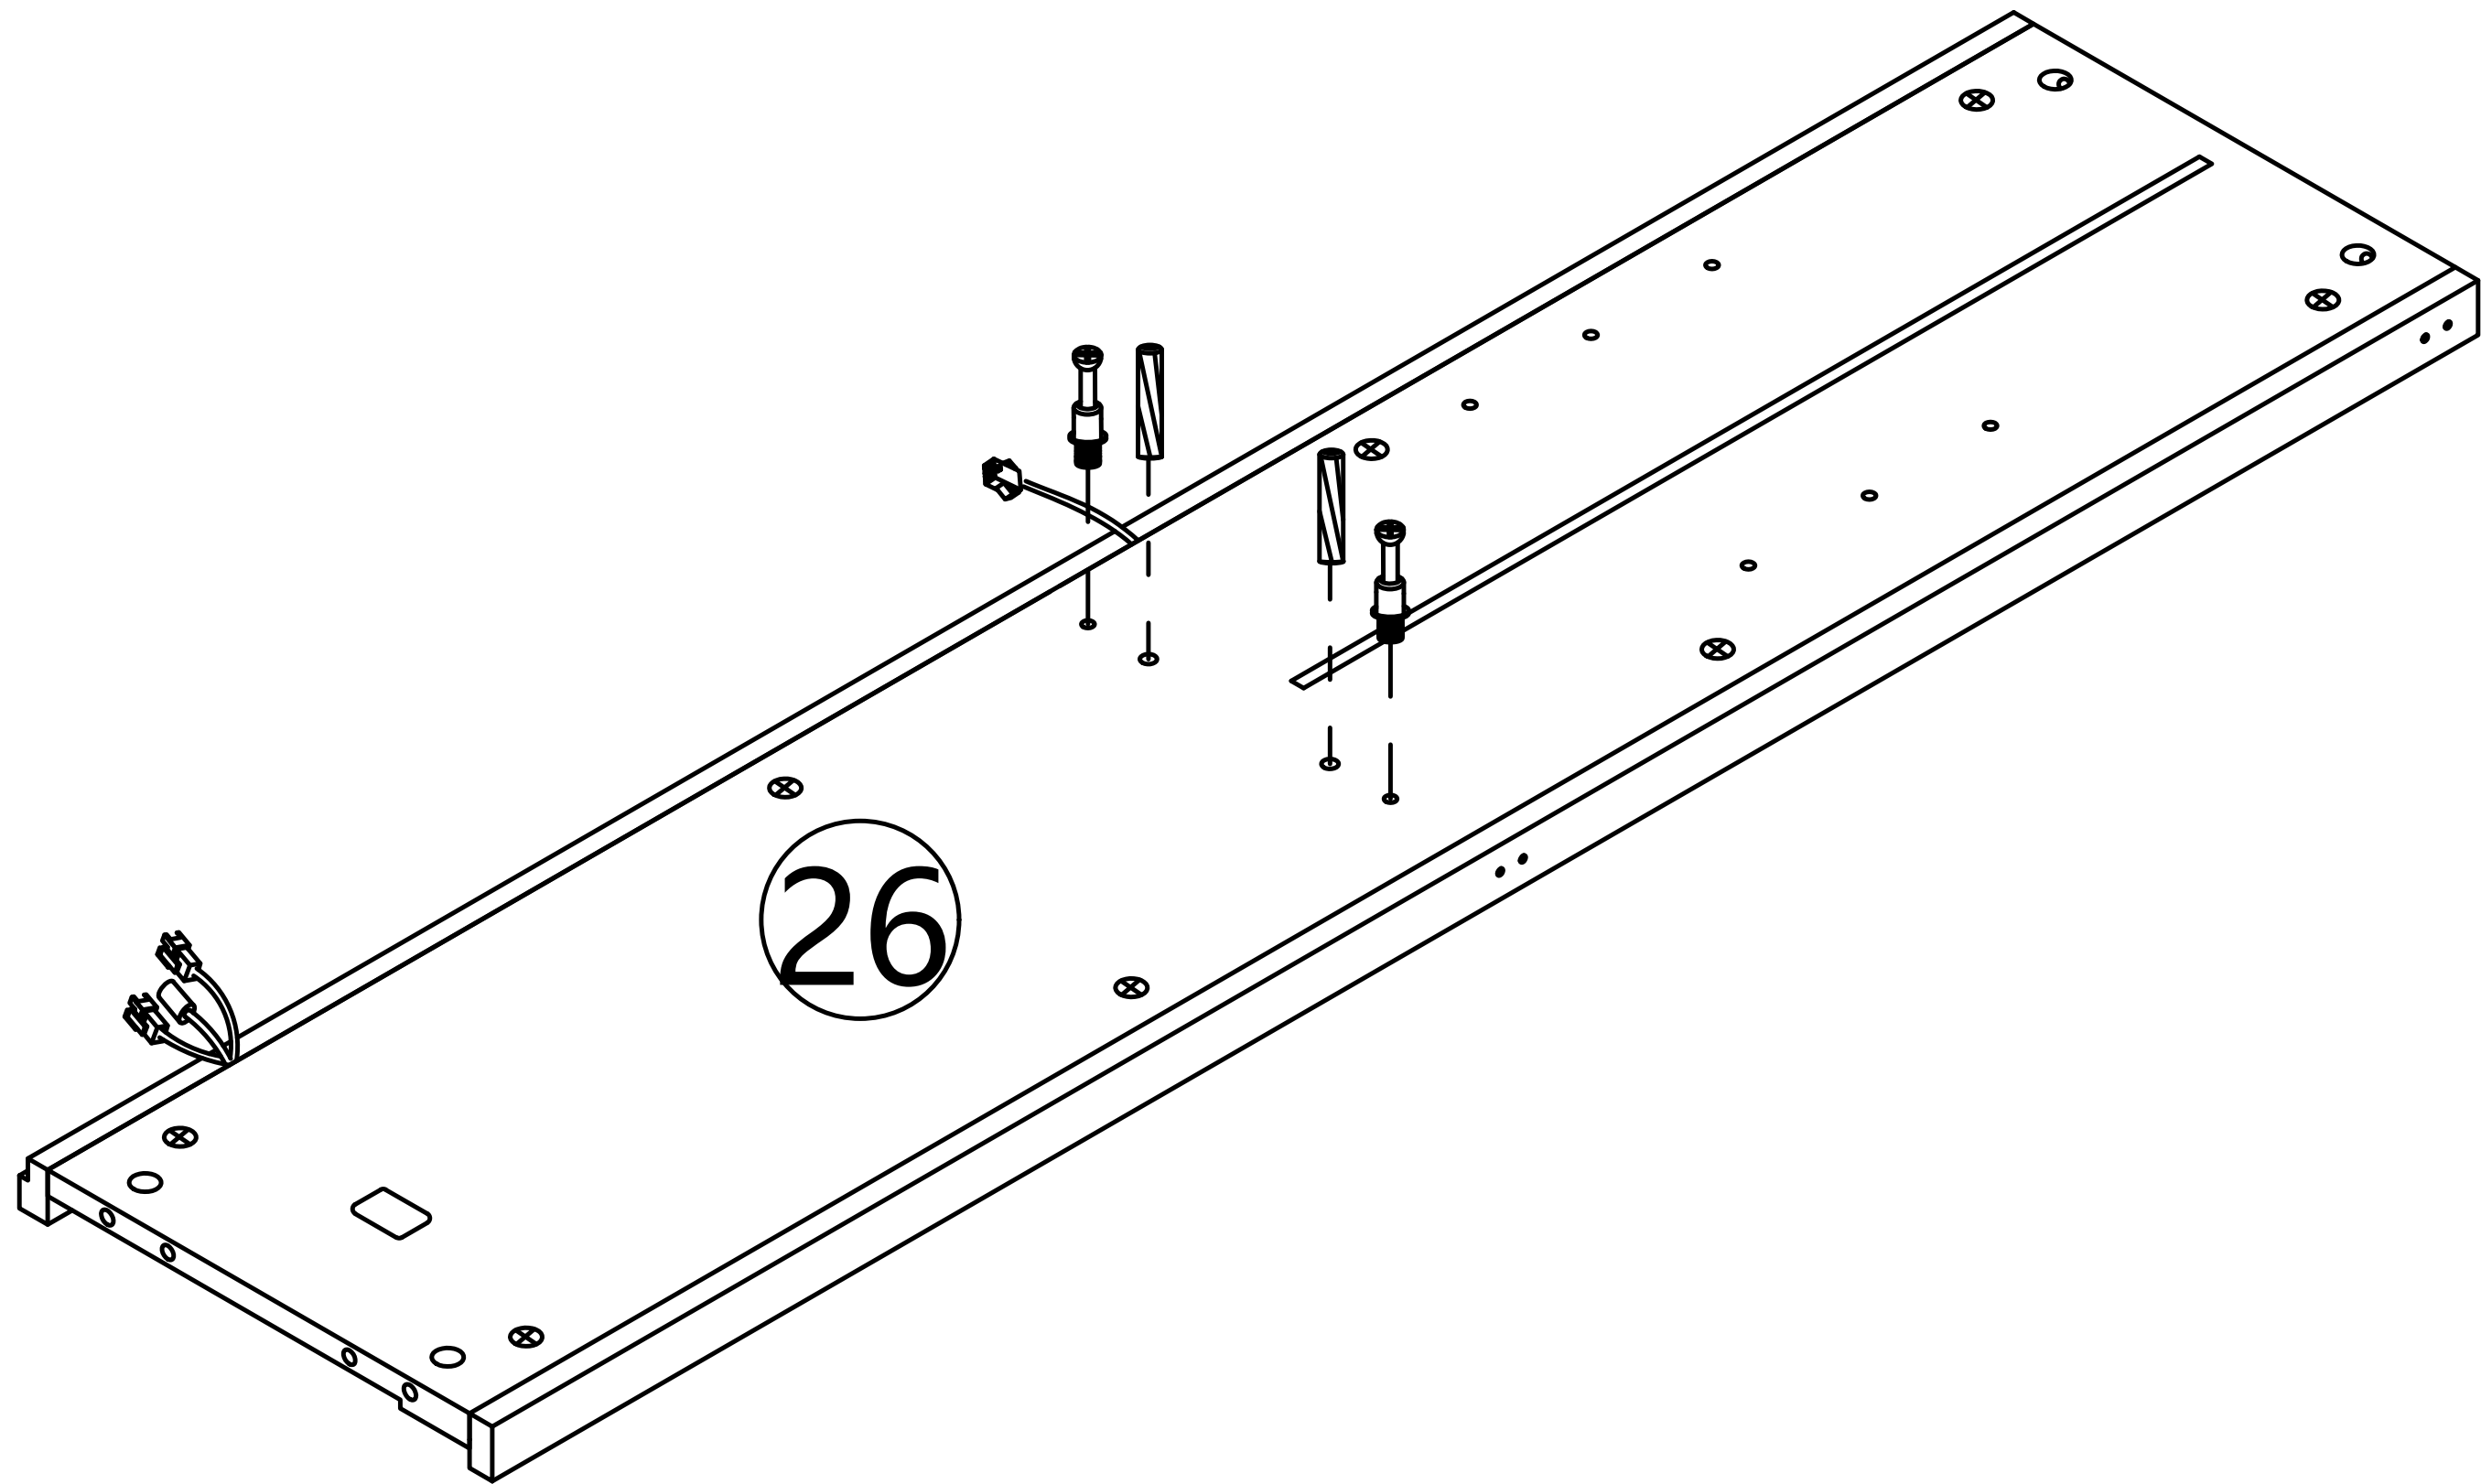

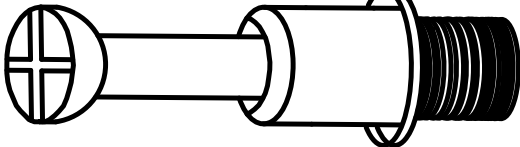
A  x2

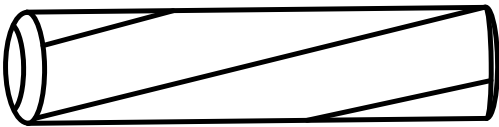C  x2




Step 55


B

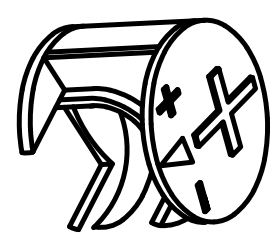


x2

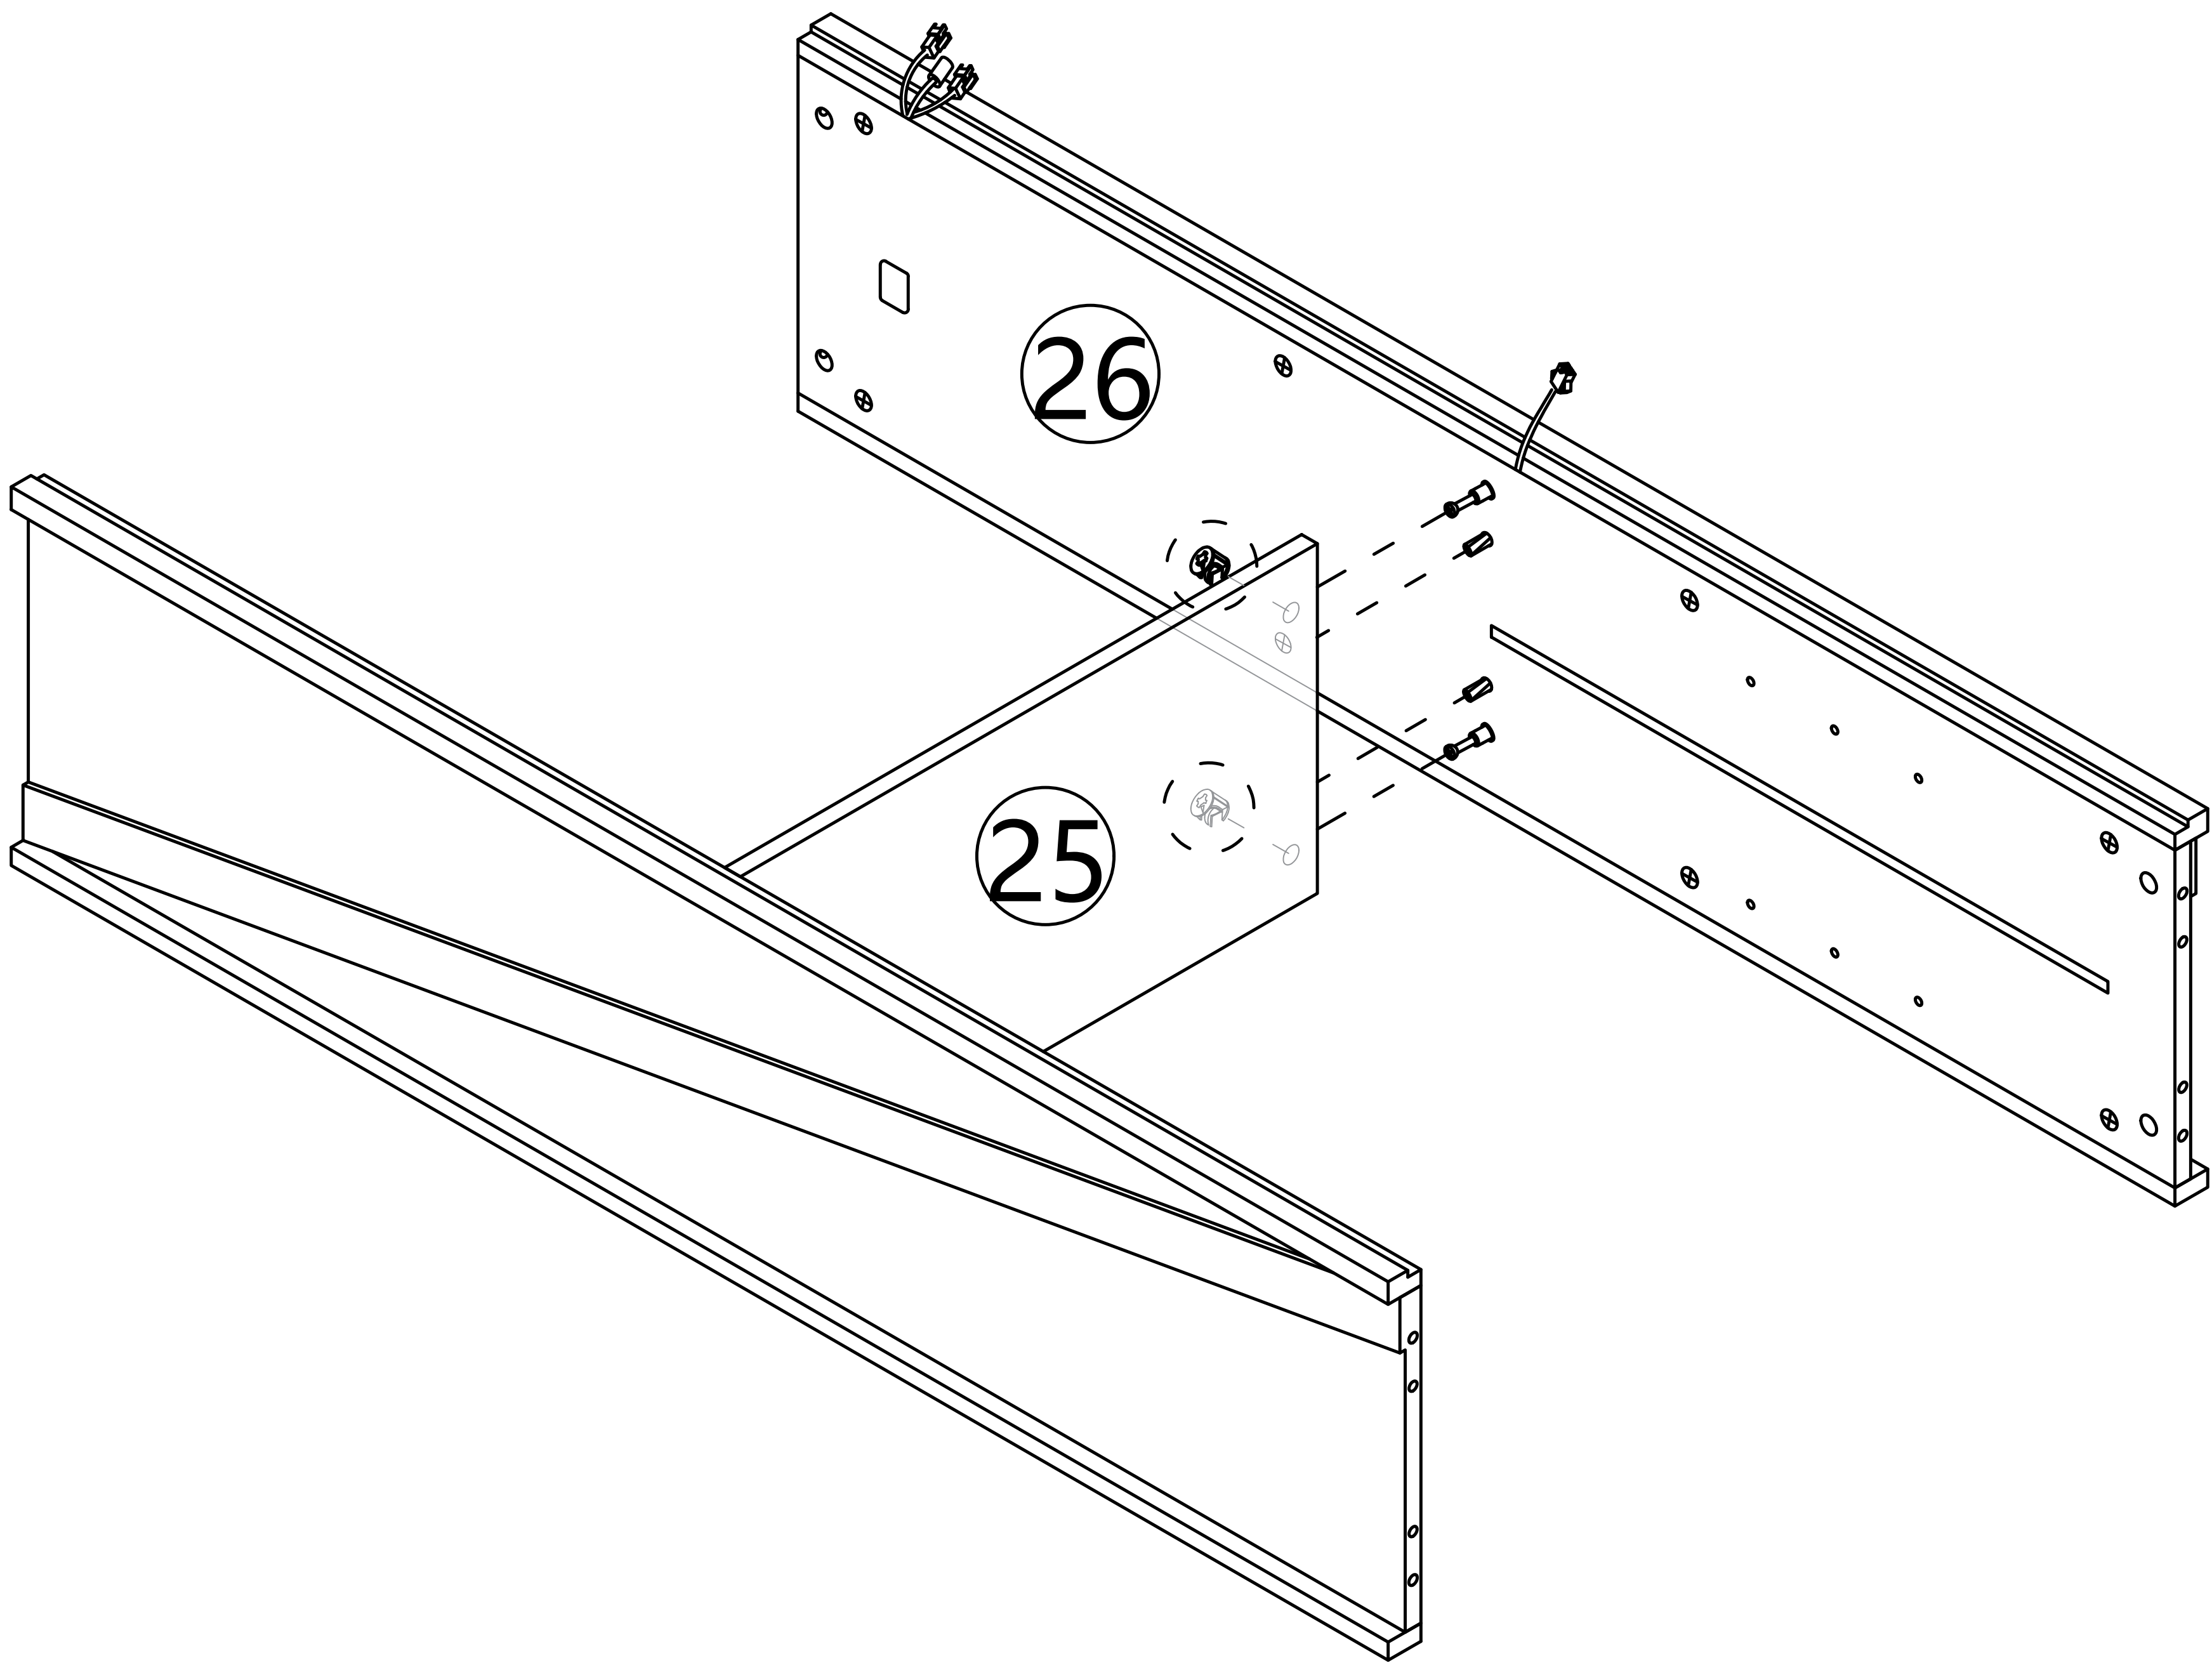



Step 56

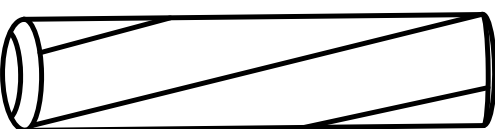
Cx4

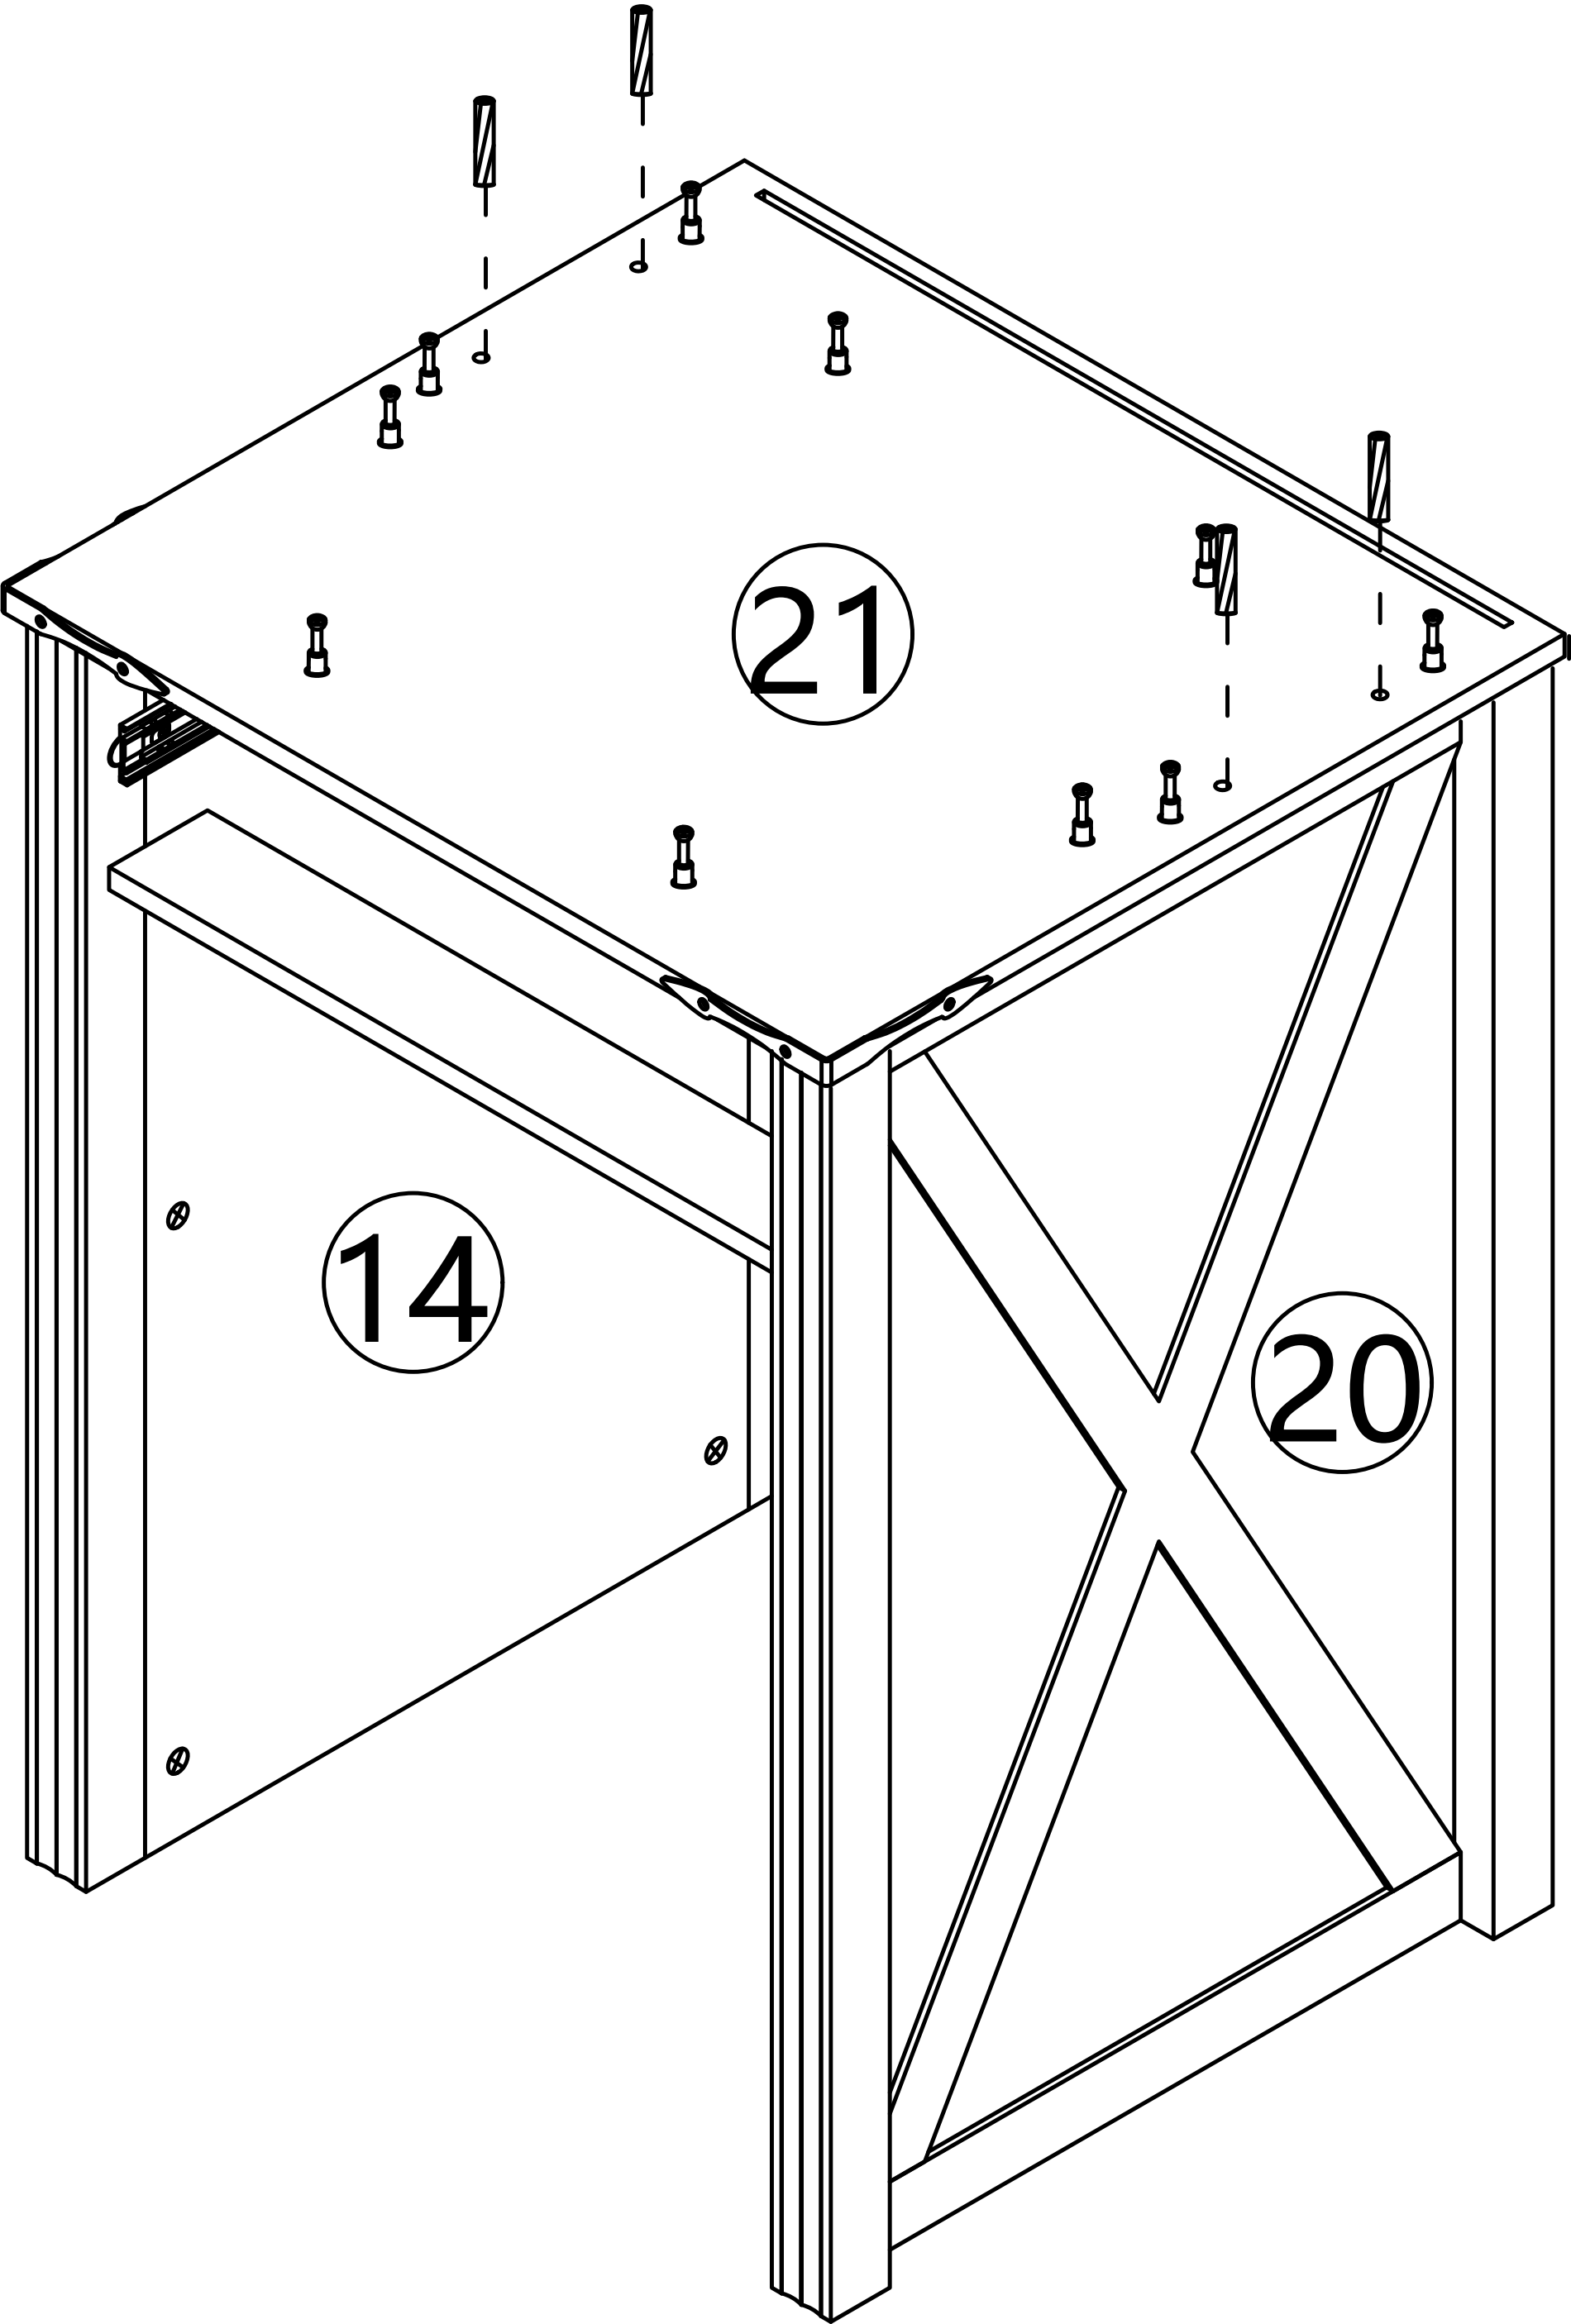


Step 57

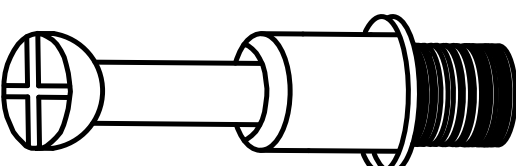
Ax4


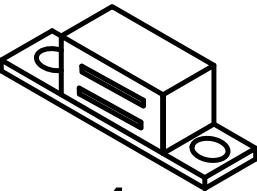
Lx1

x2

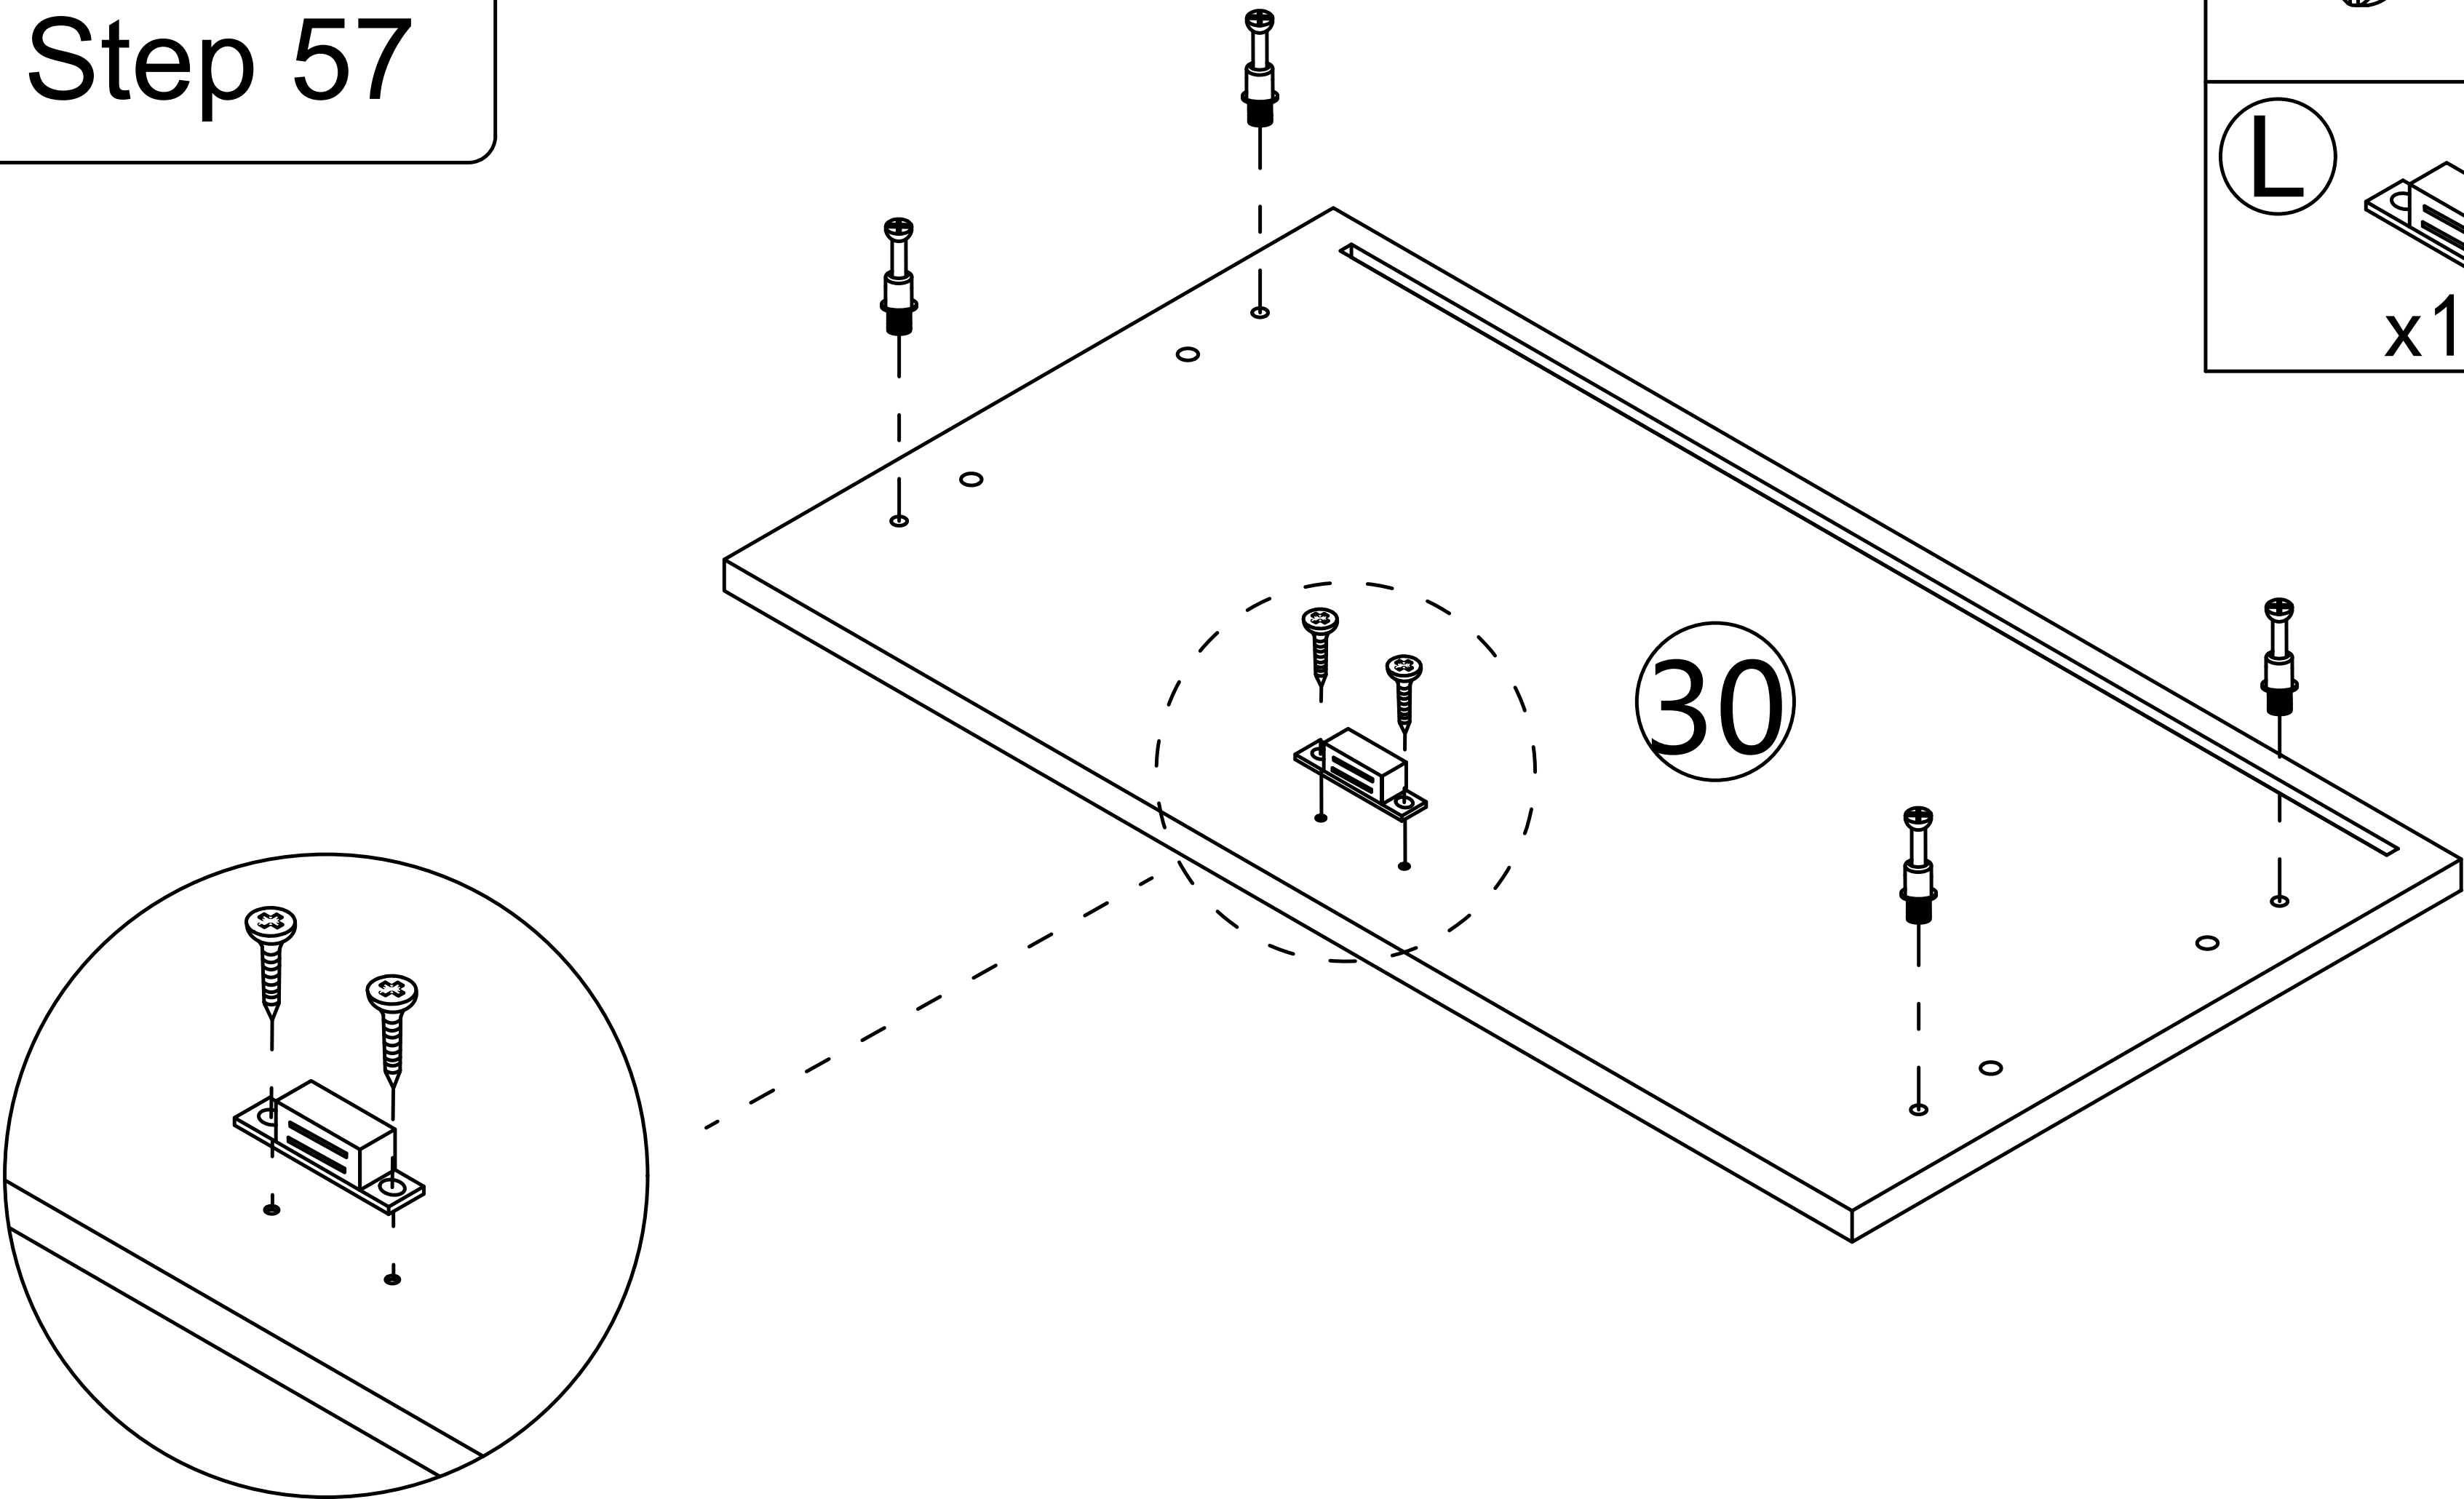


Step 58


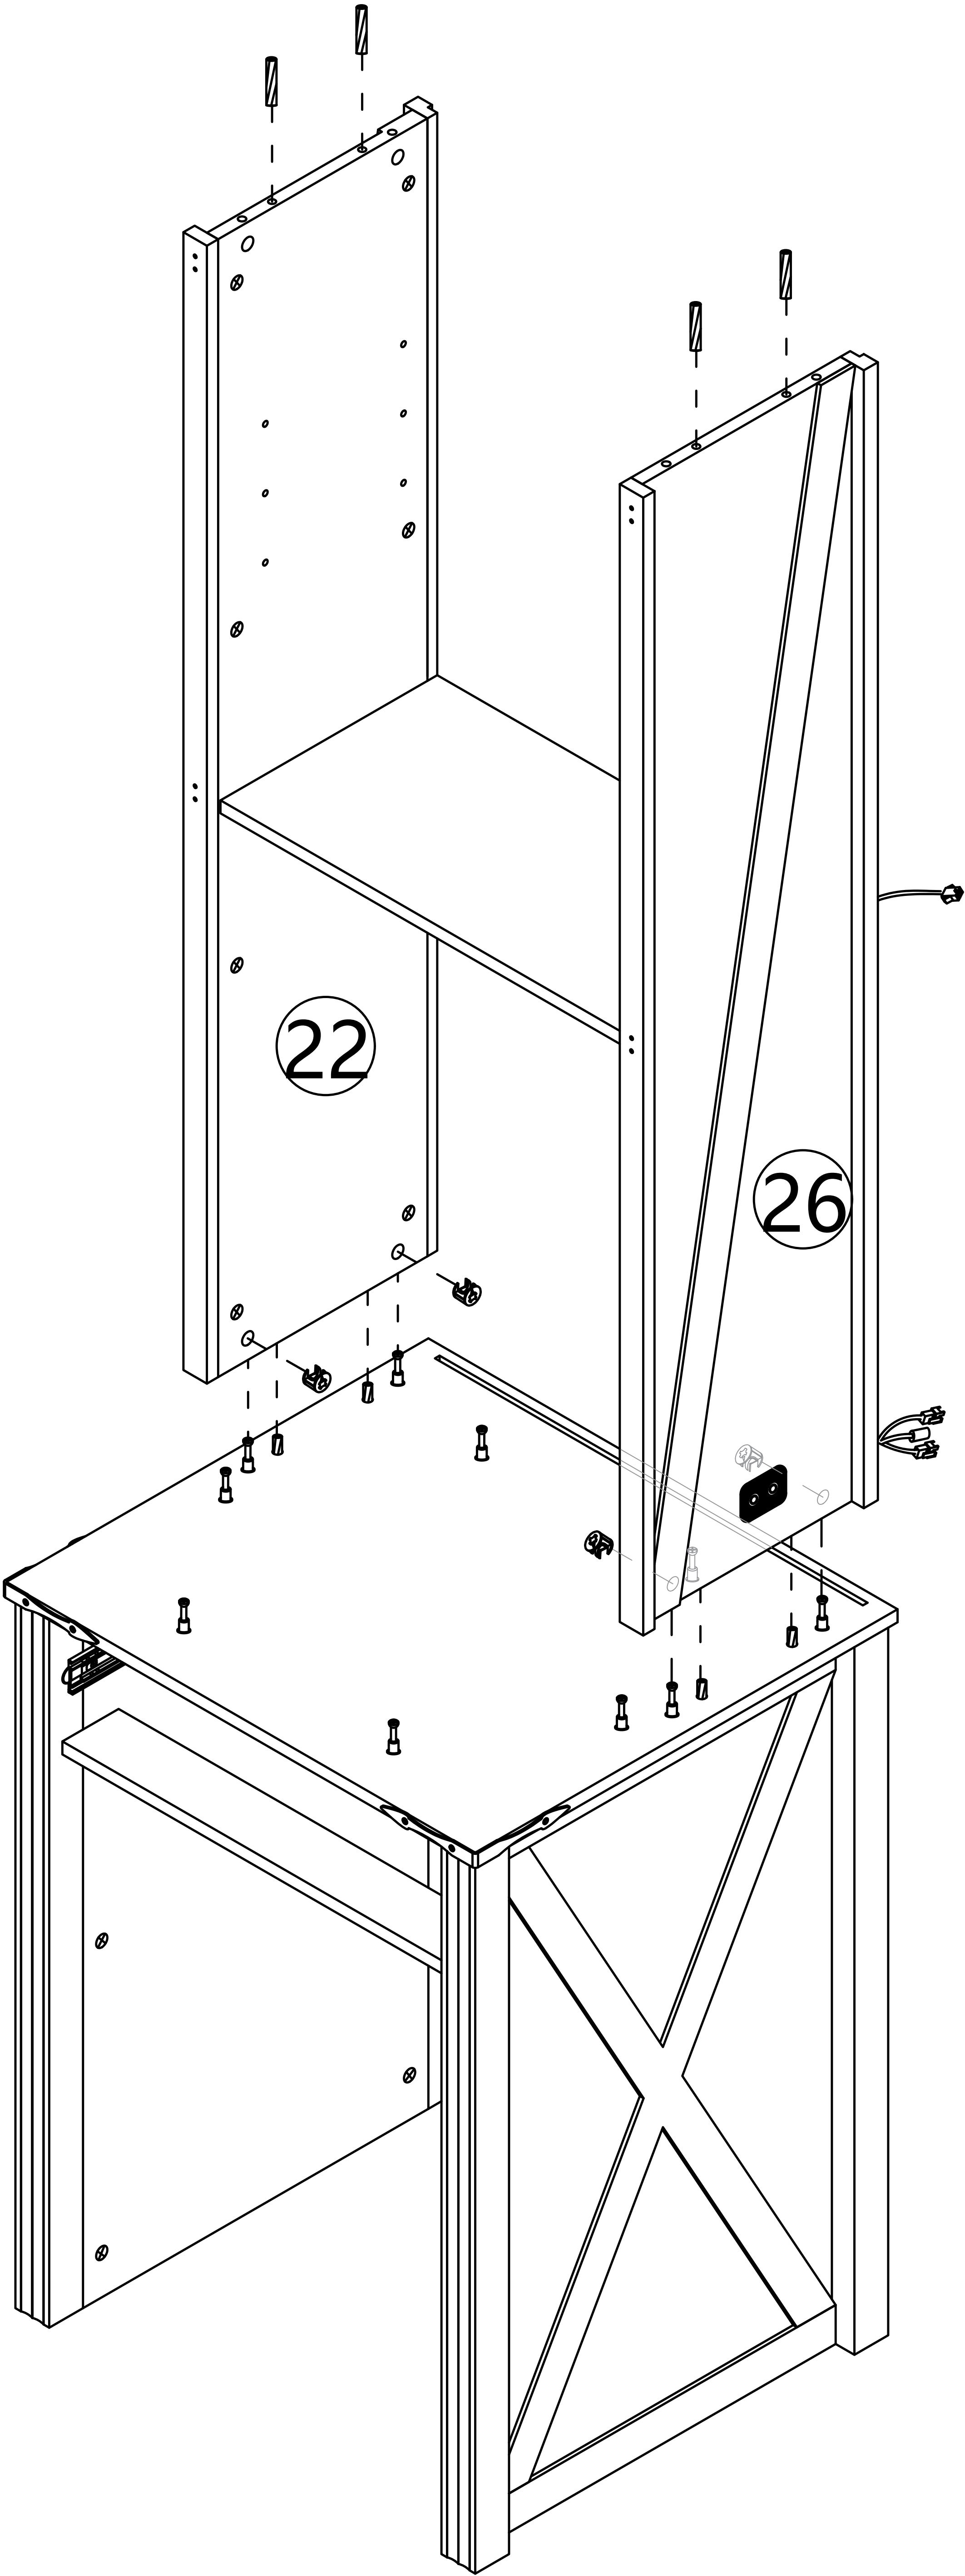


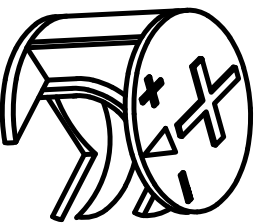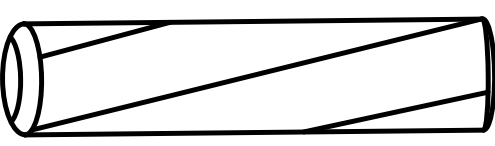- |   |                                                                                        |
|---|----------------------------------------------------------------------------------------|
| B |  x4  |
| C |  x4 |






Step 59

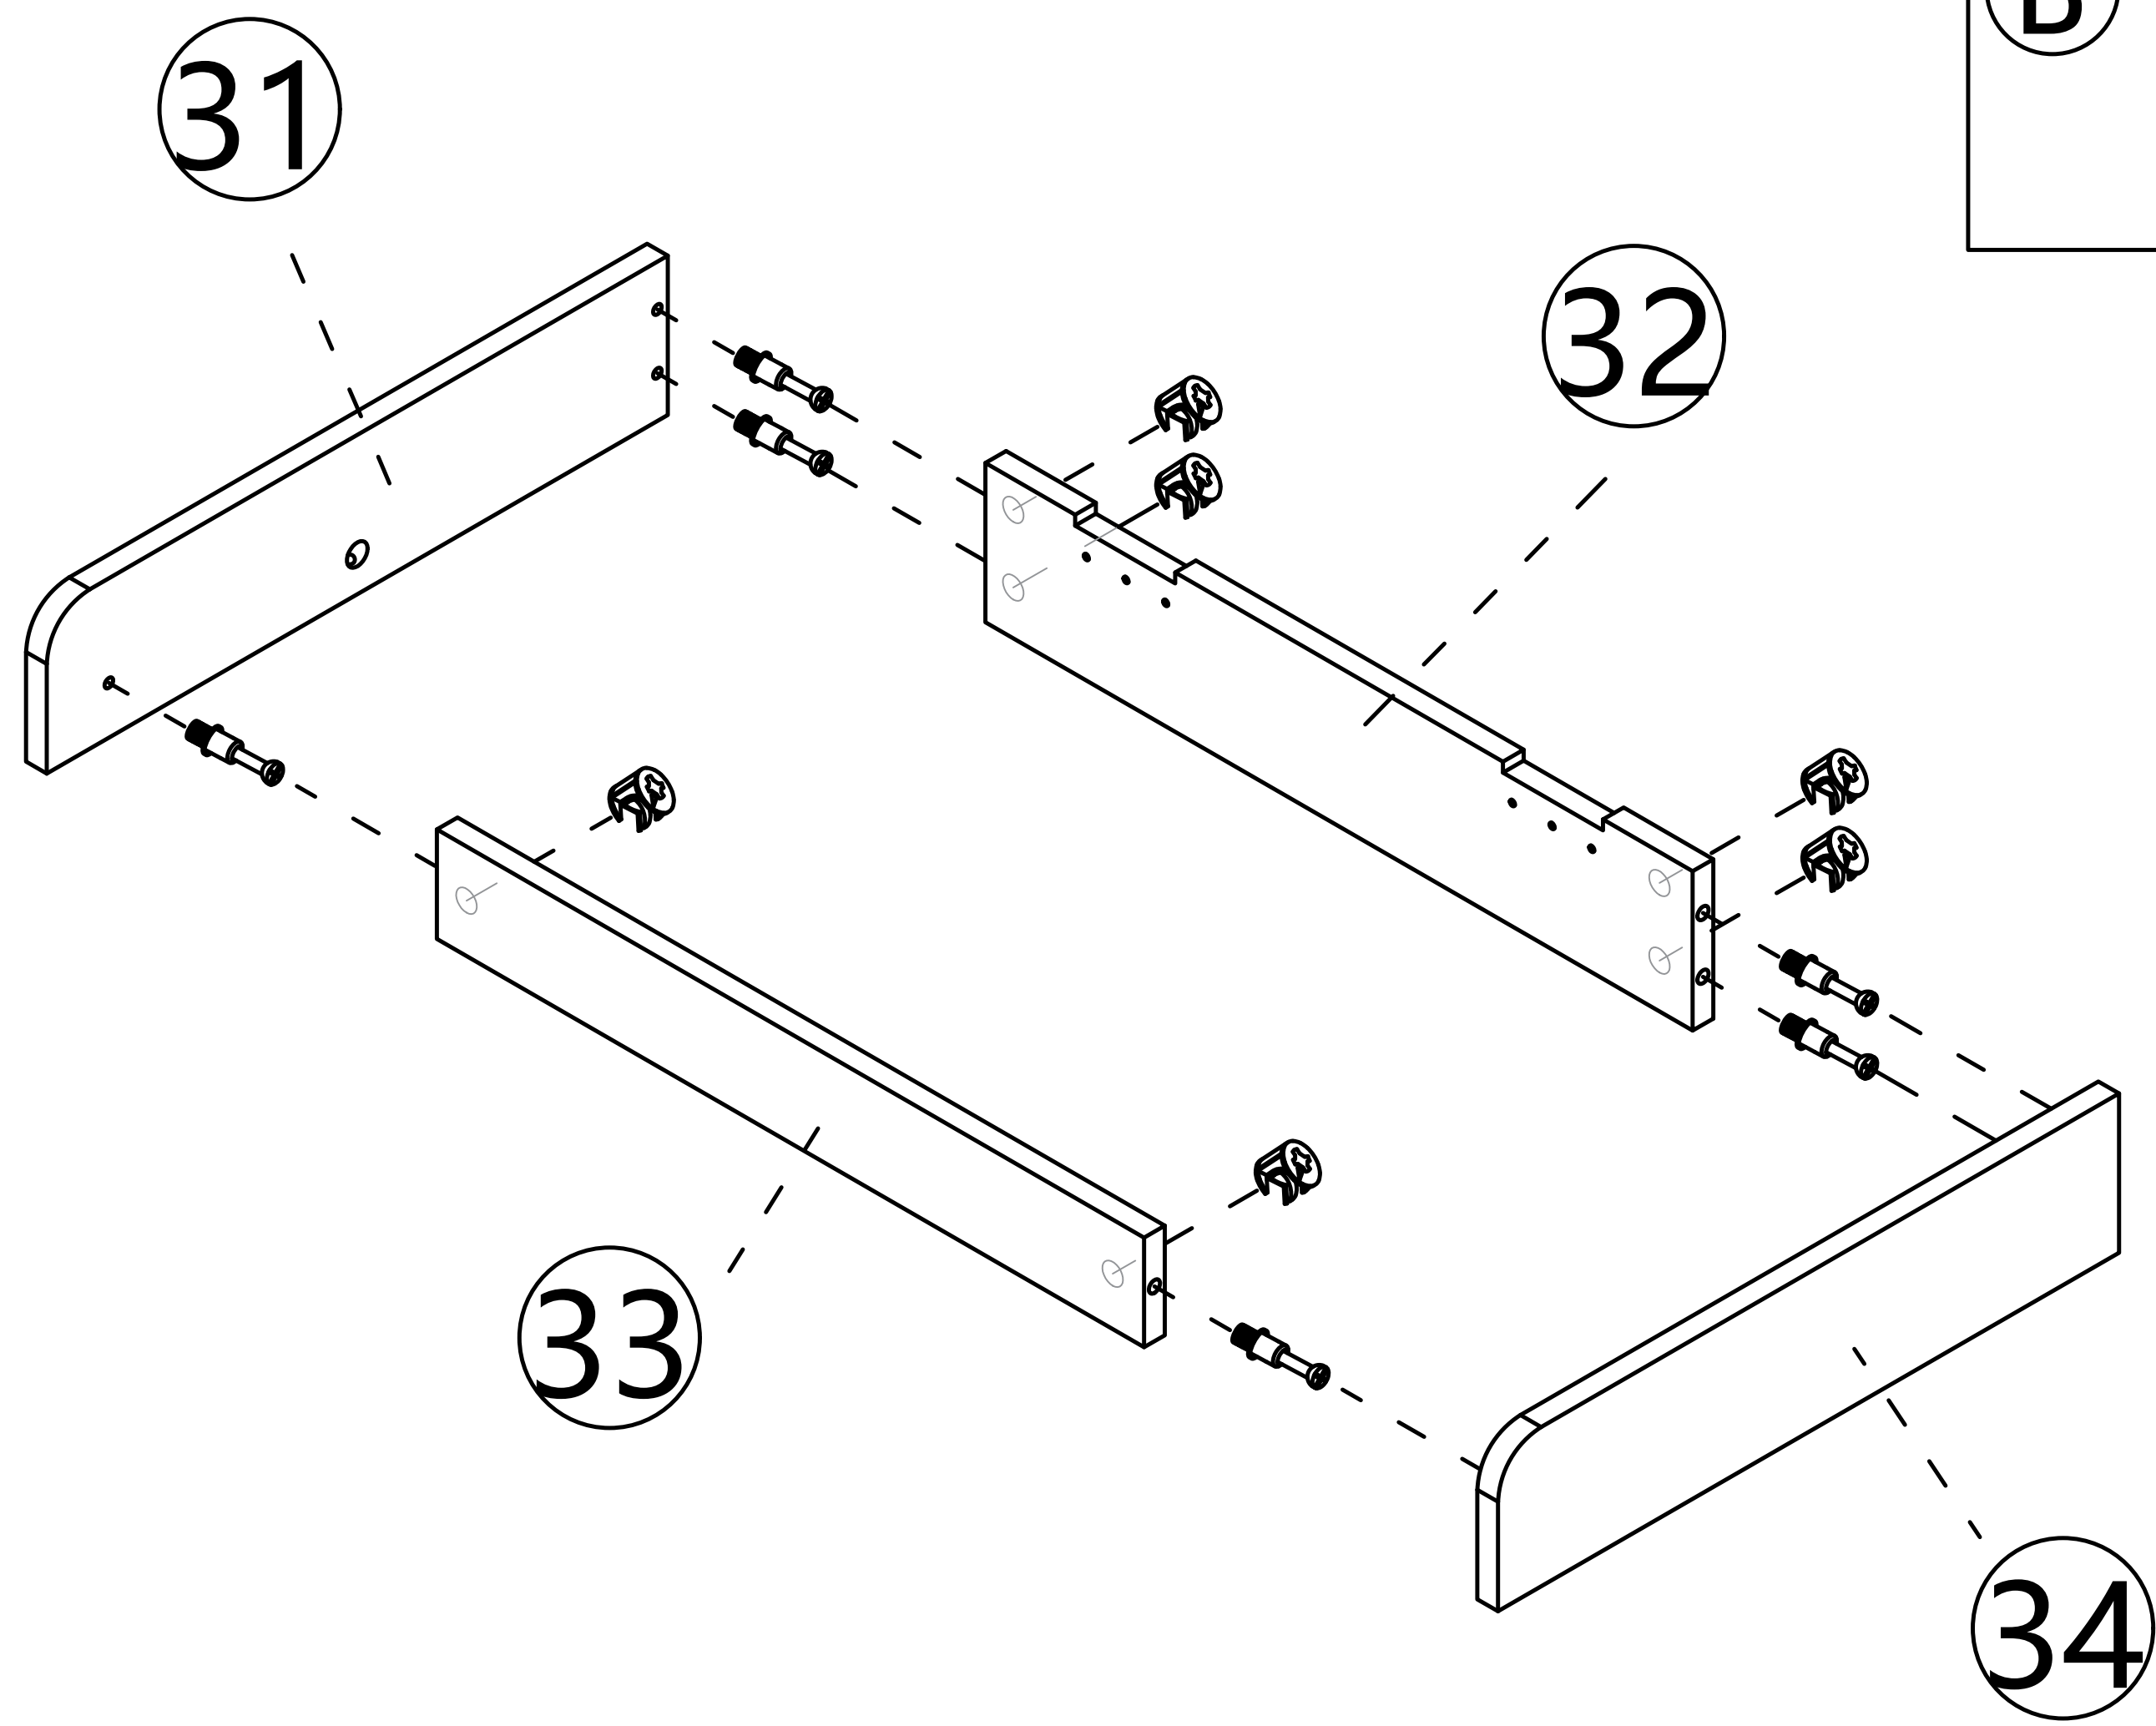

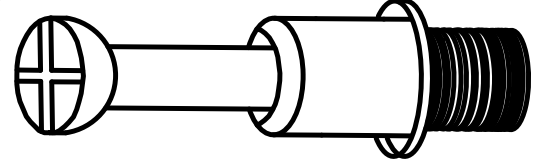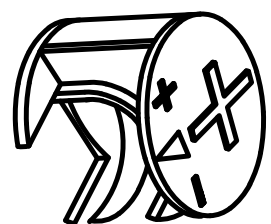- A  x6
- B  x6


Step 60

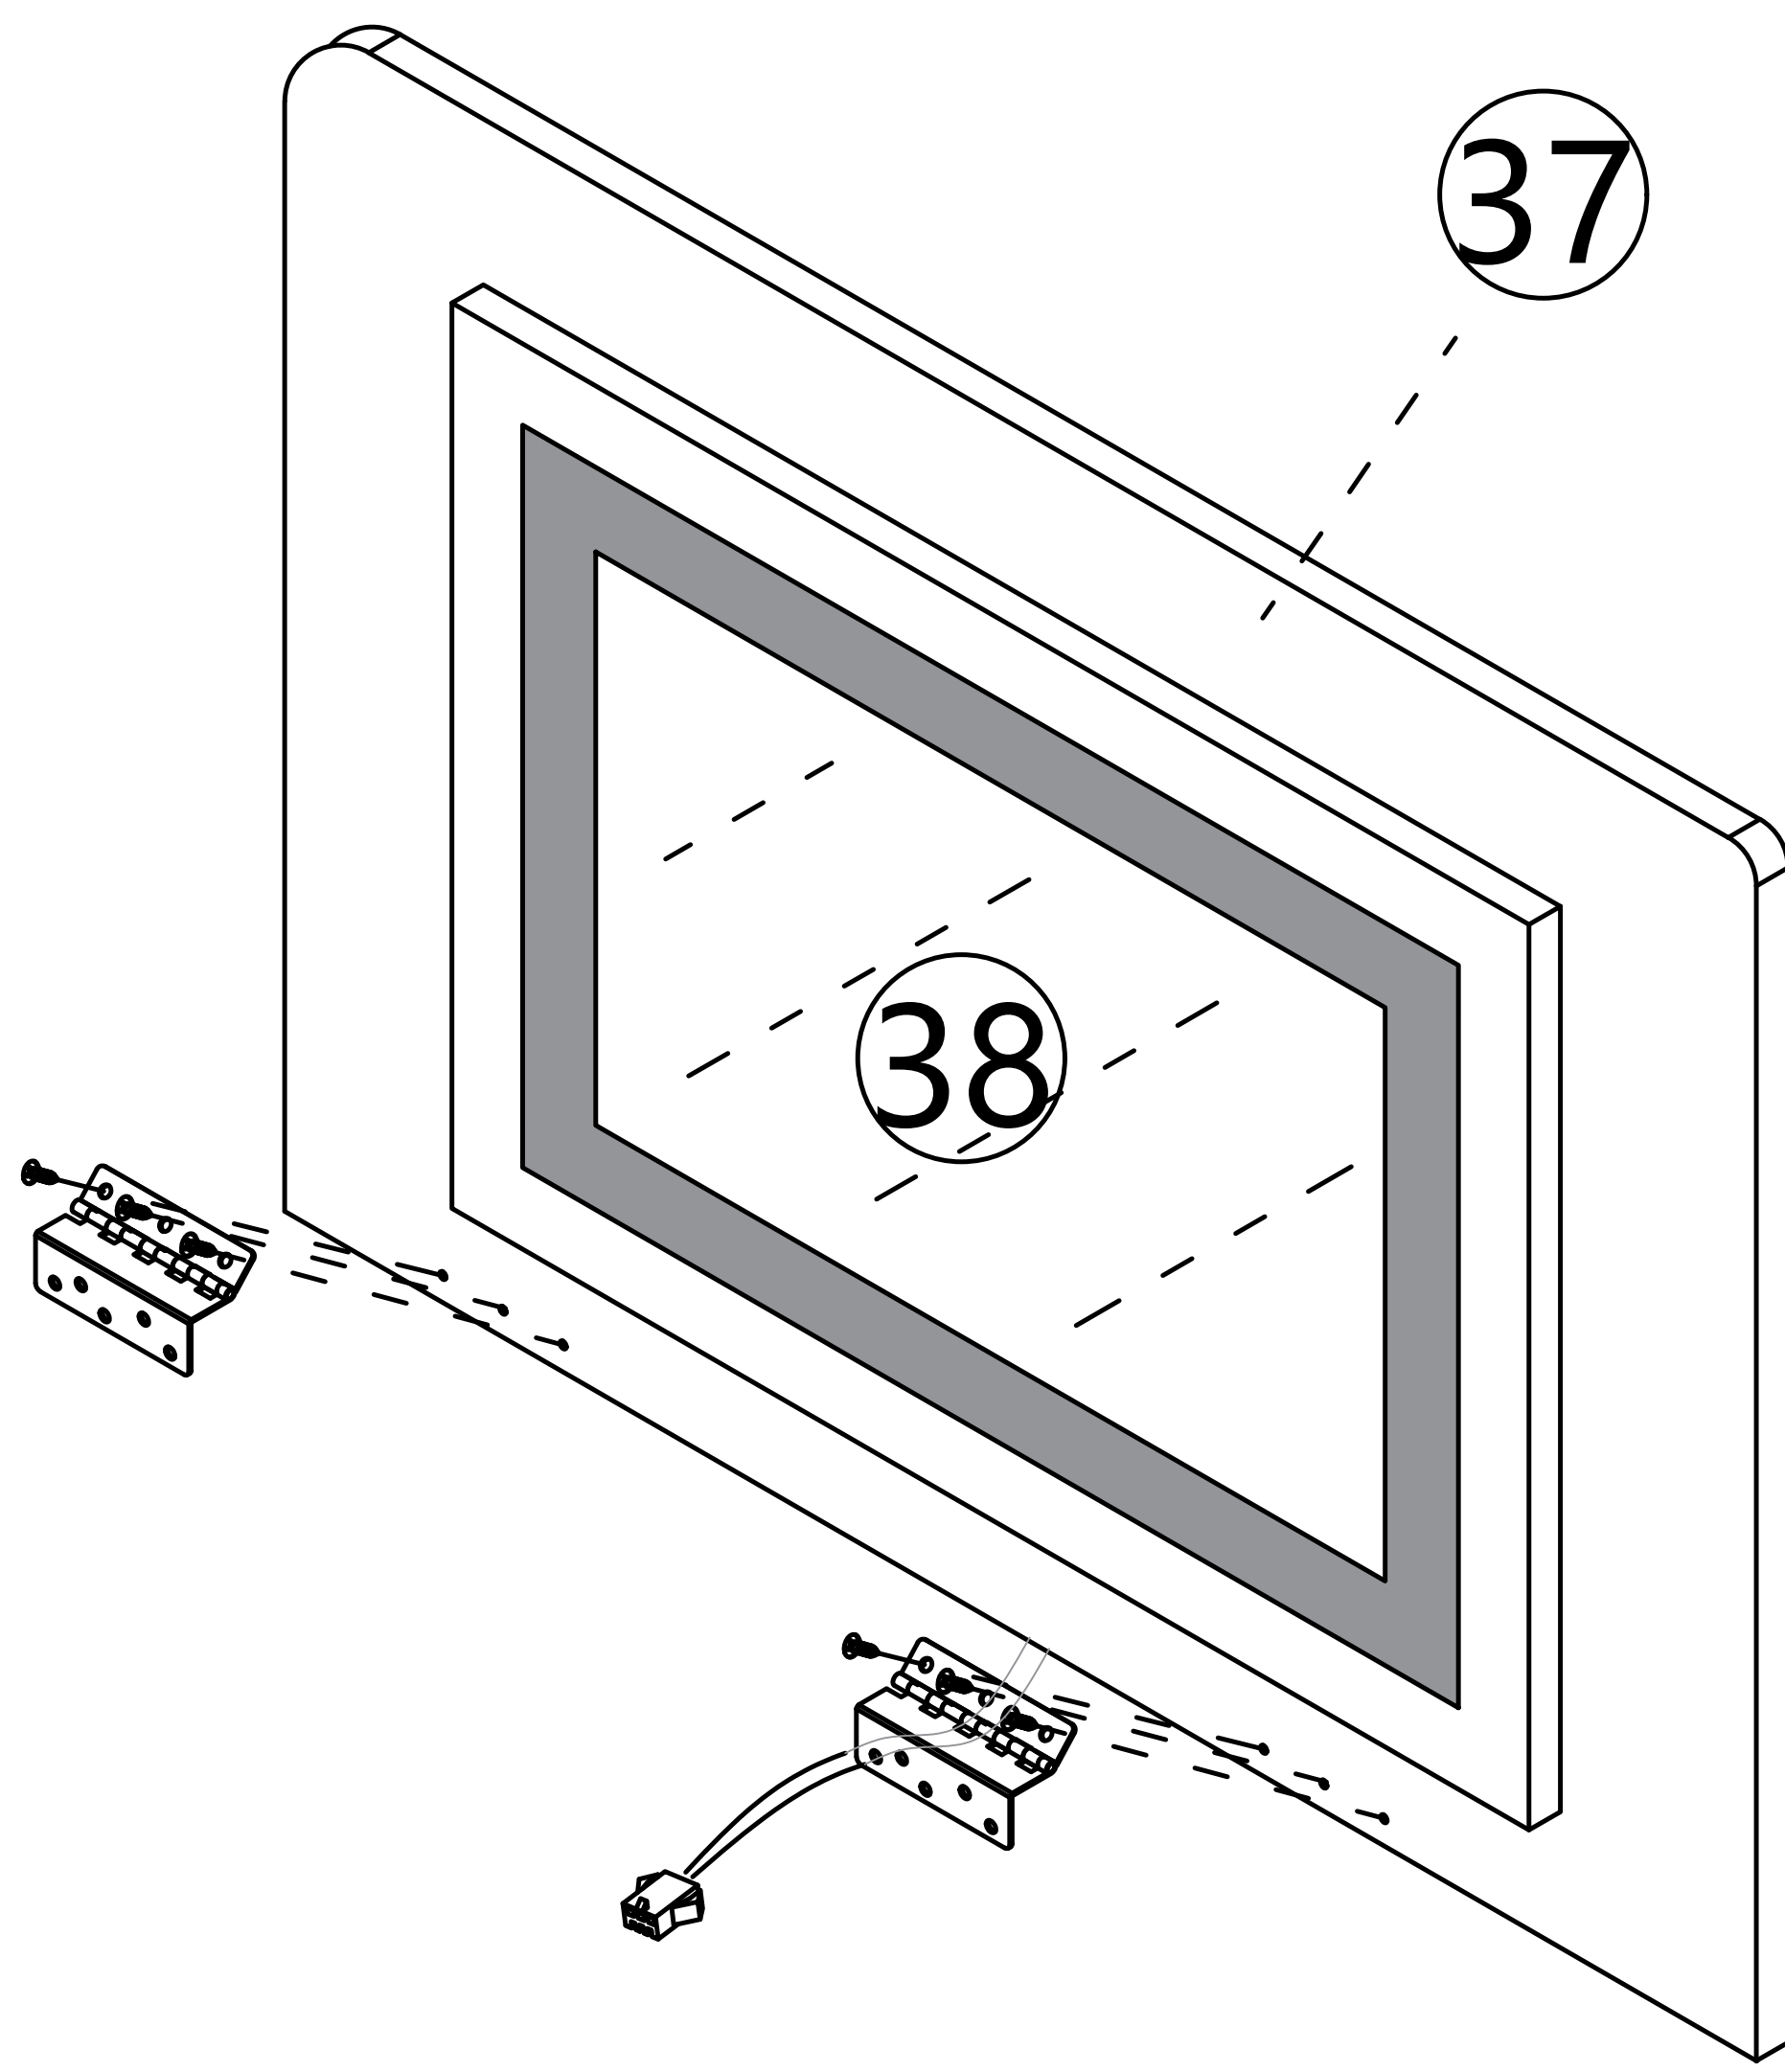

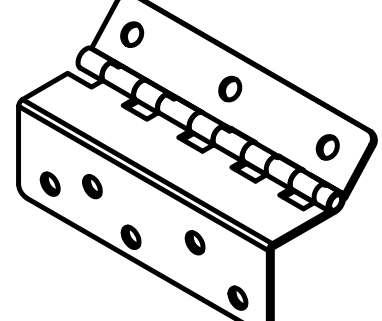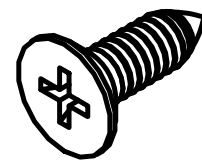
- G  x2
- G  x6

Please note that the screw holes cannot be tightened during installation and require adjustment positions for adjustment

## Step 61

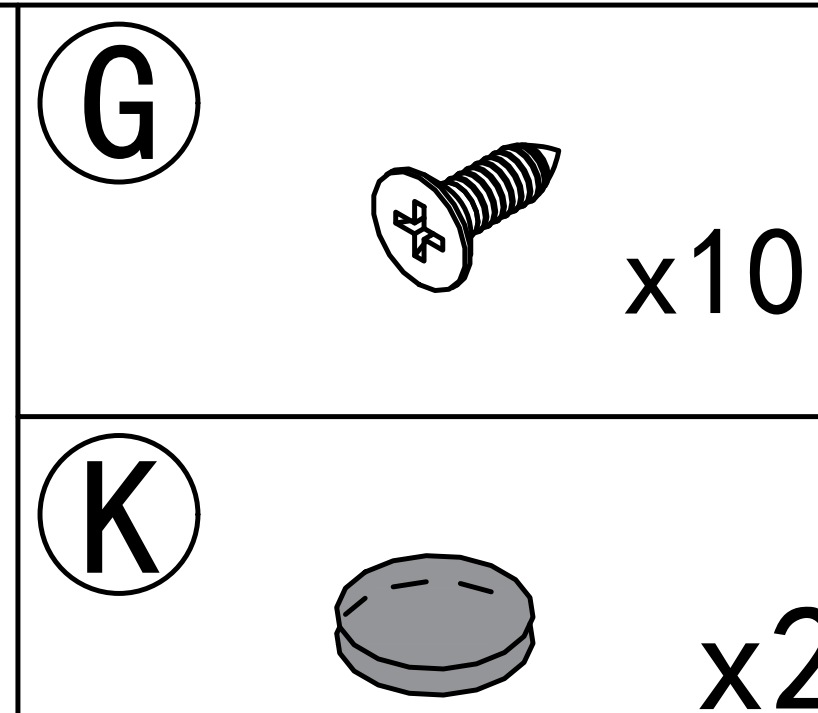

After installing the hinge, tighten all screws

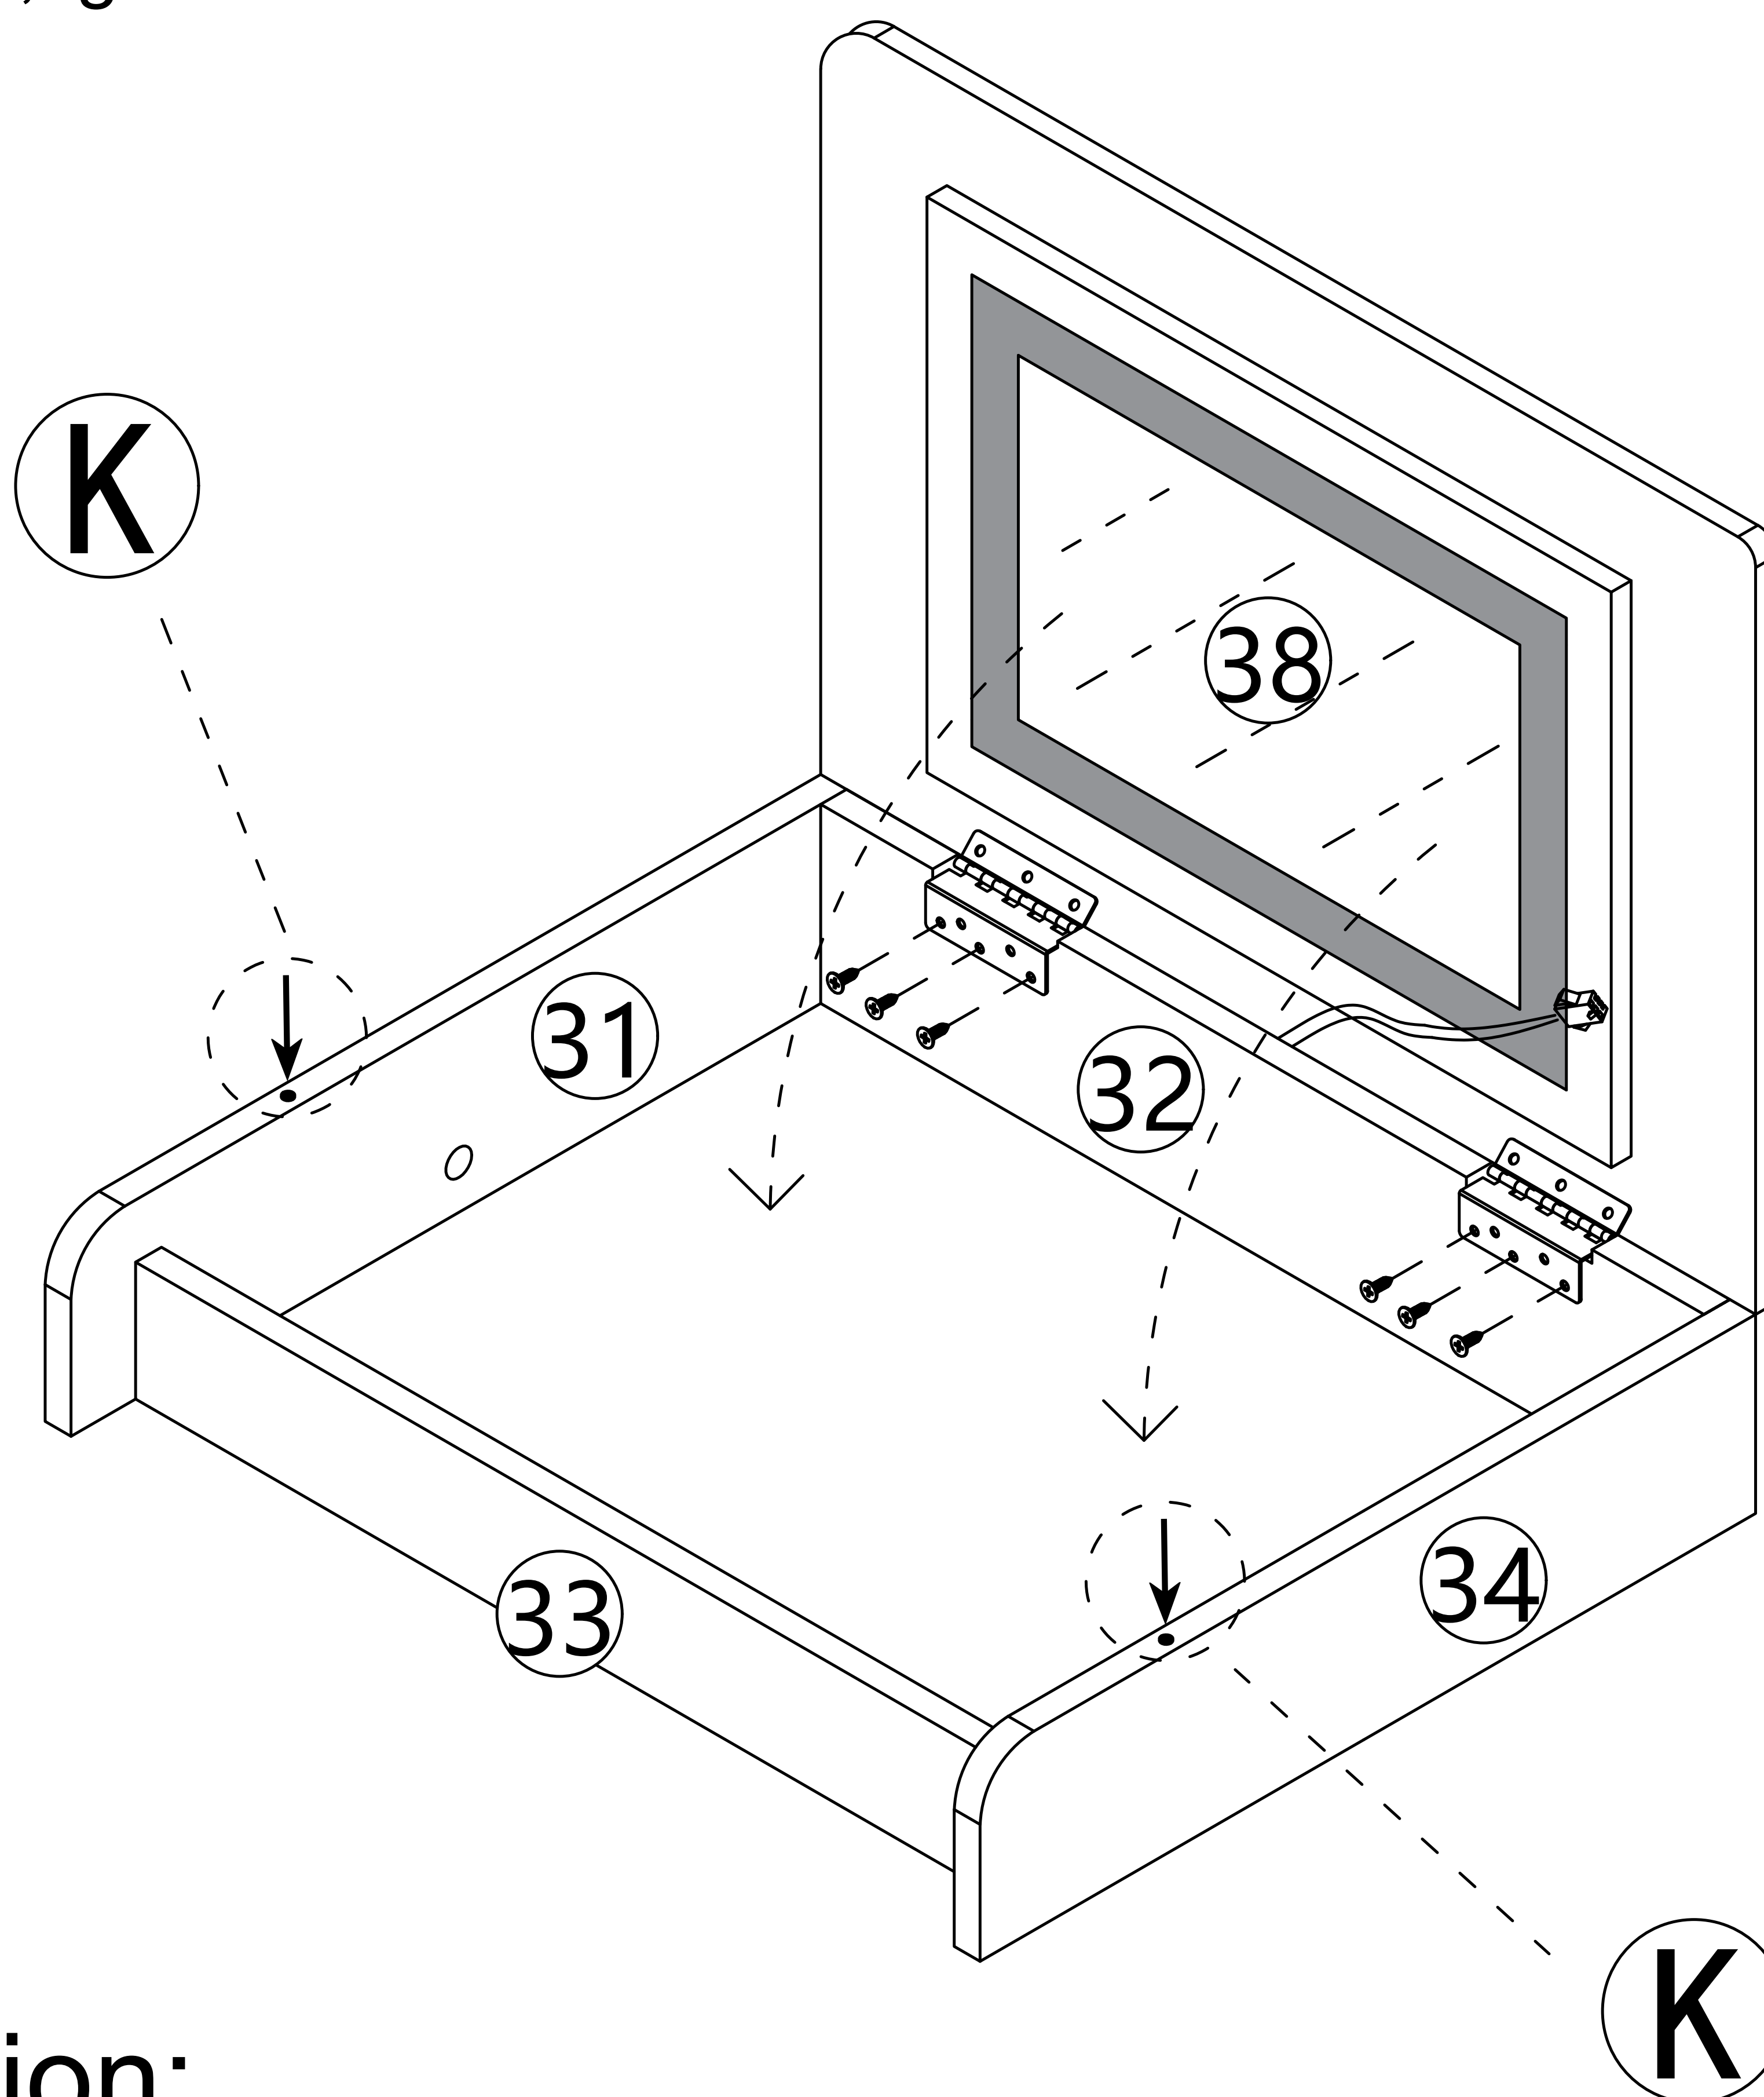


## Attention:


1. Please gently close the mirror panel
2. After installing the mirror panel you need to check if you need to adjust the position slightly

Step 62

B

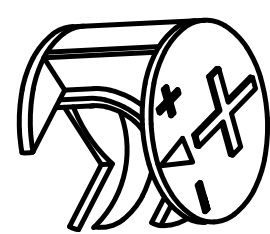


x6

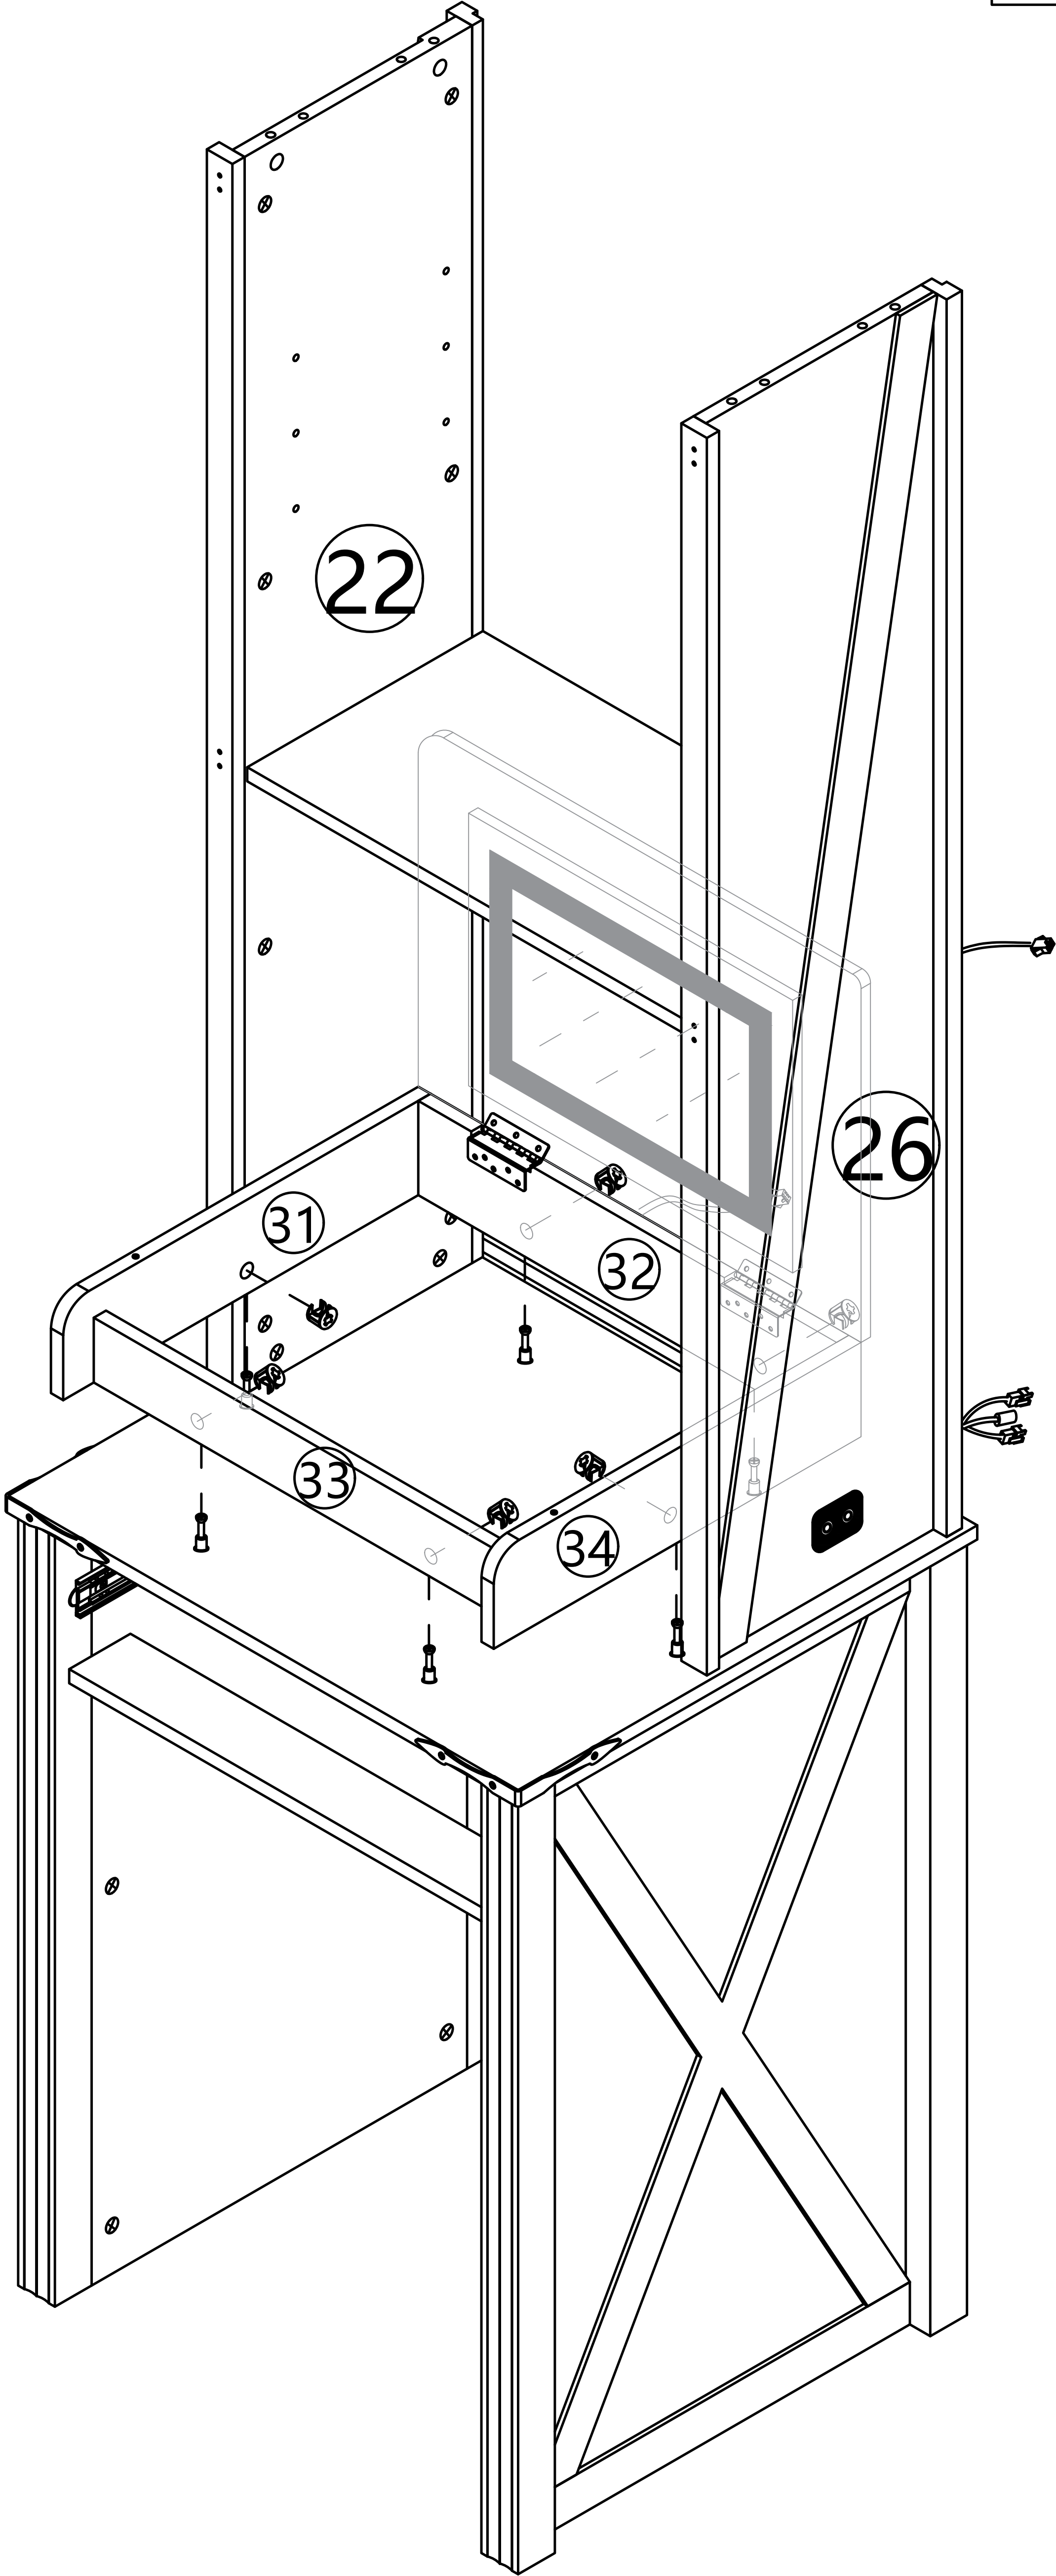




## Step 63

Stick the "35" board into the "36" board

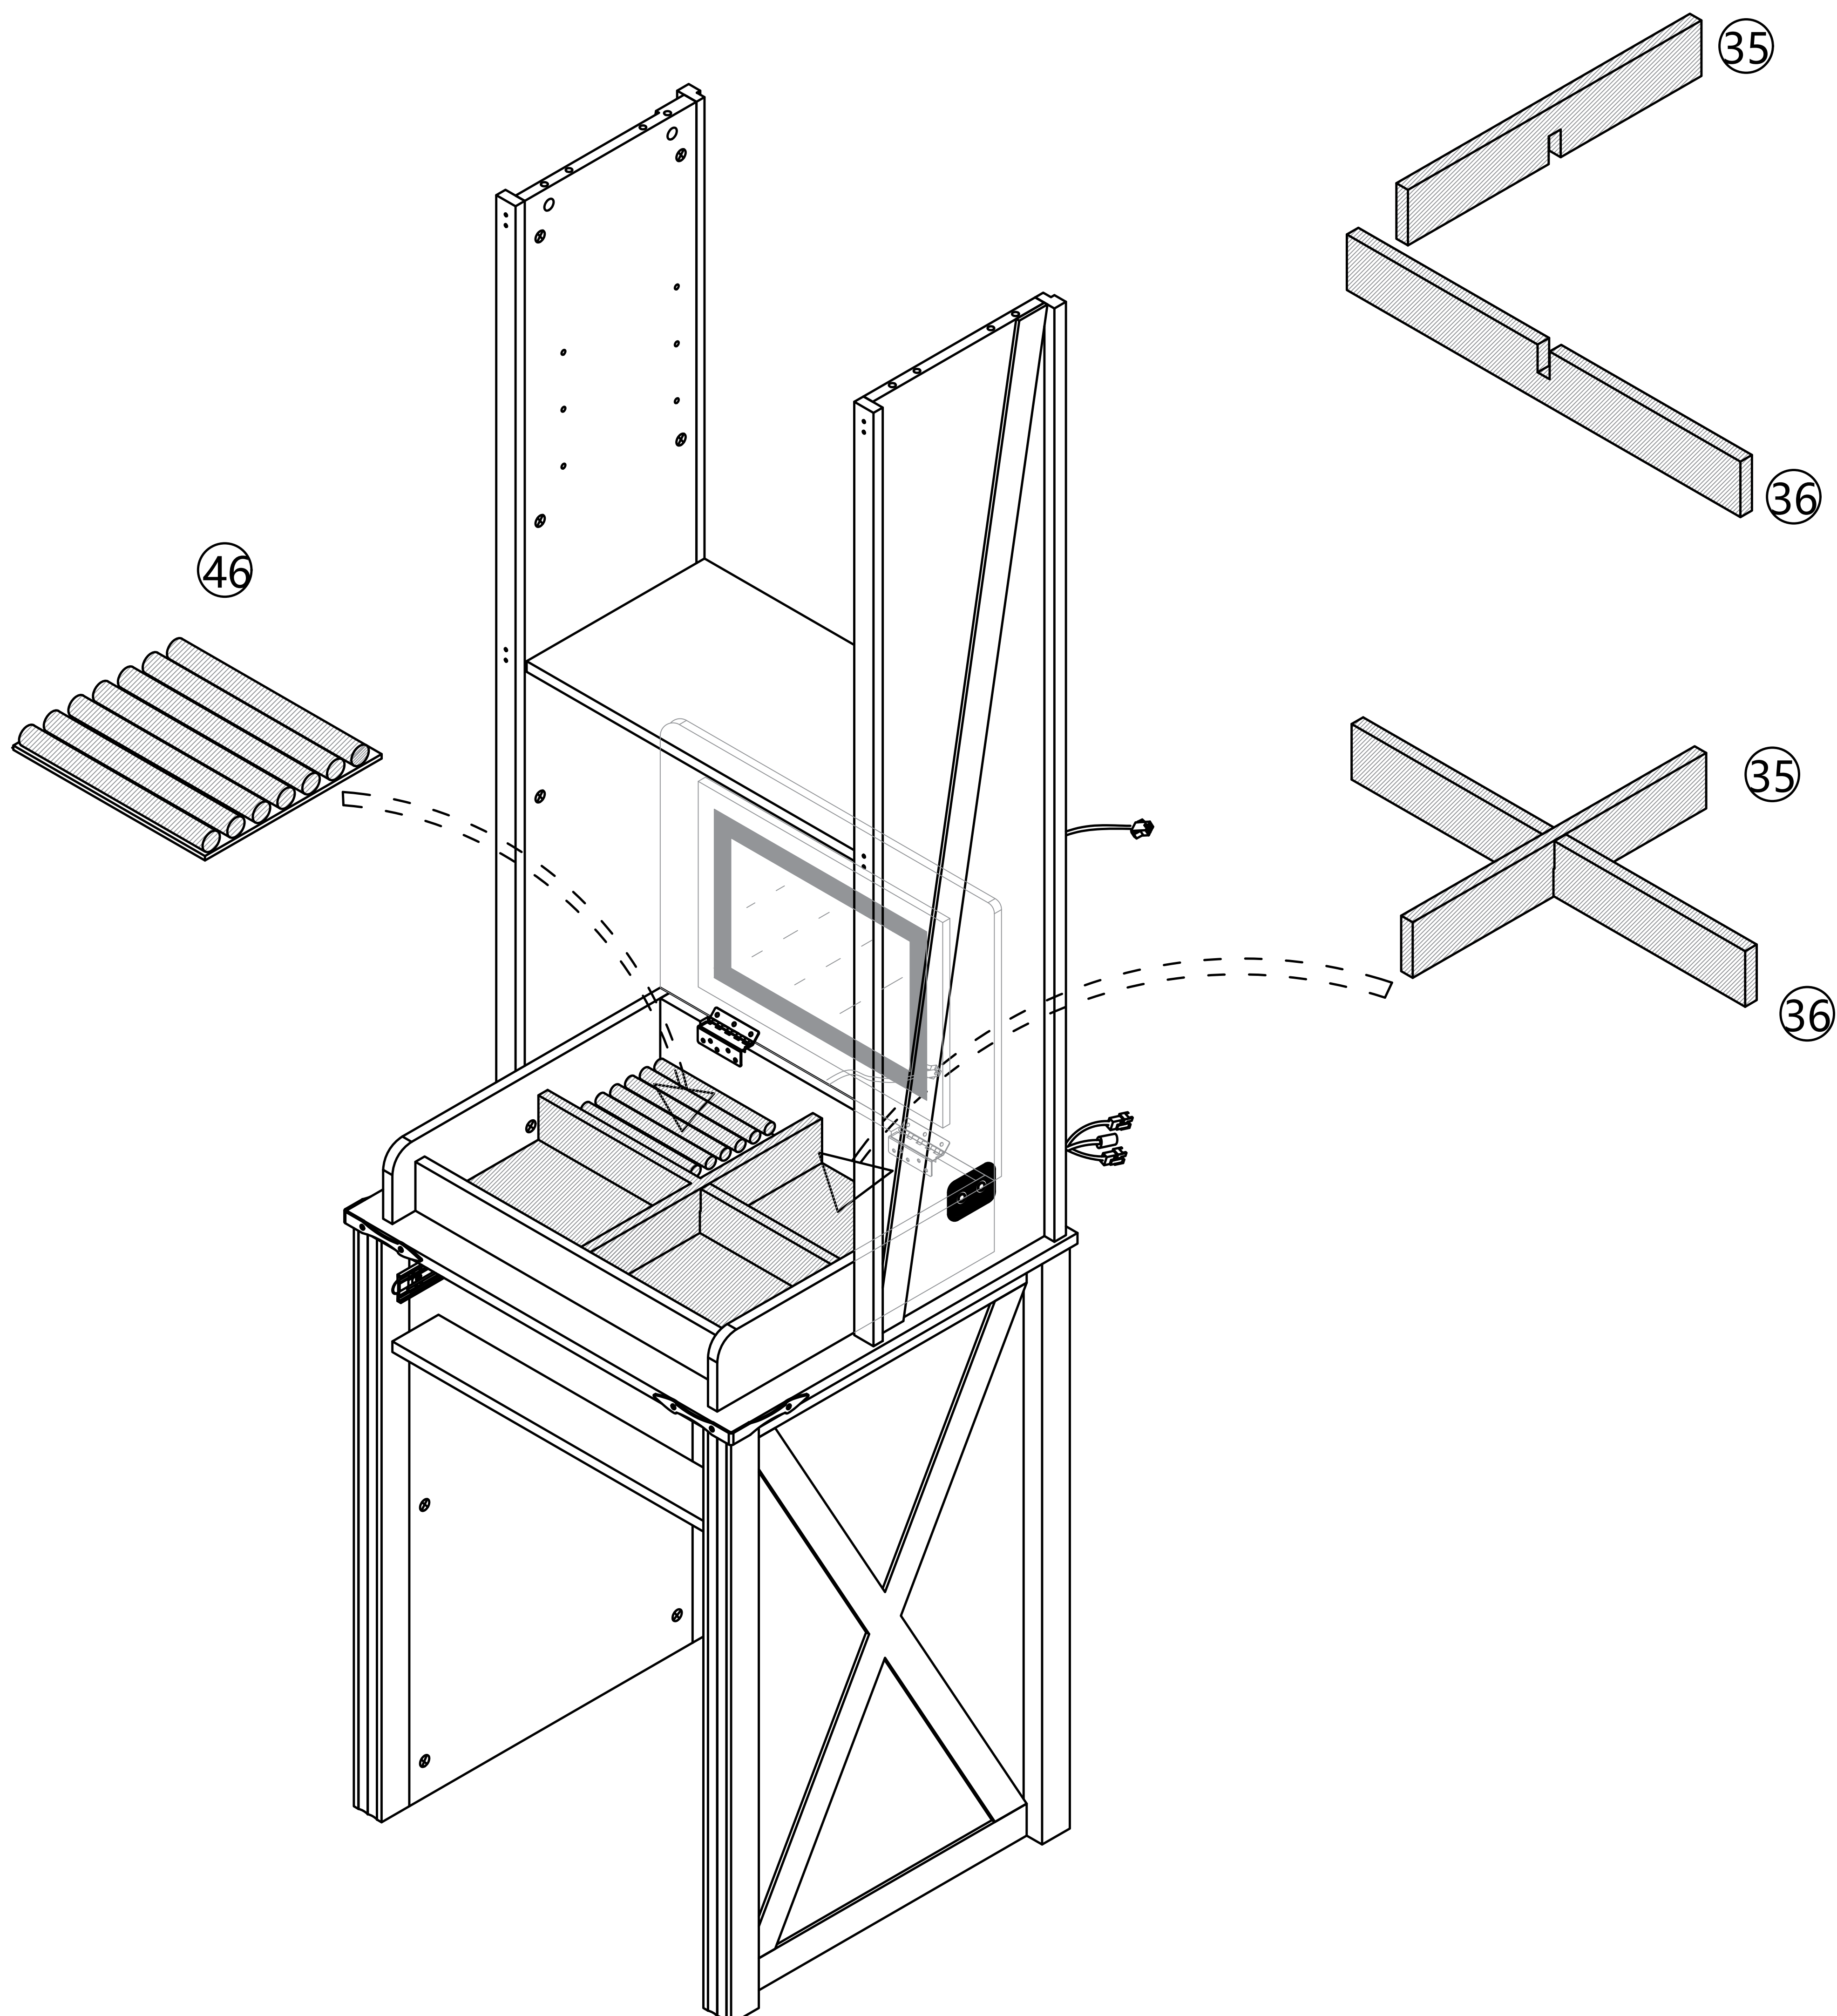


Step 64

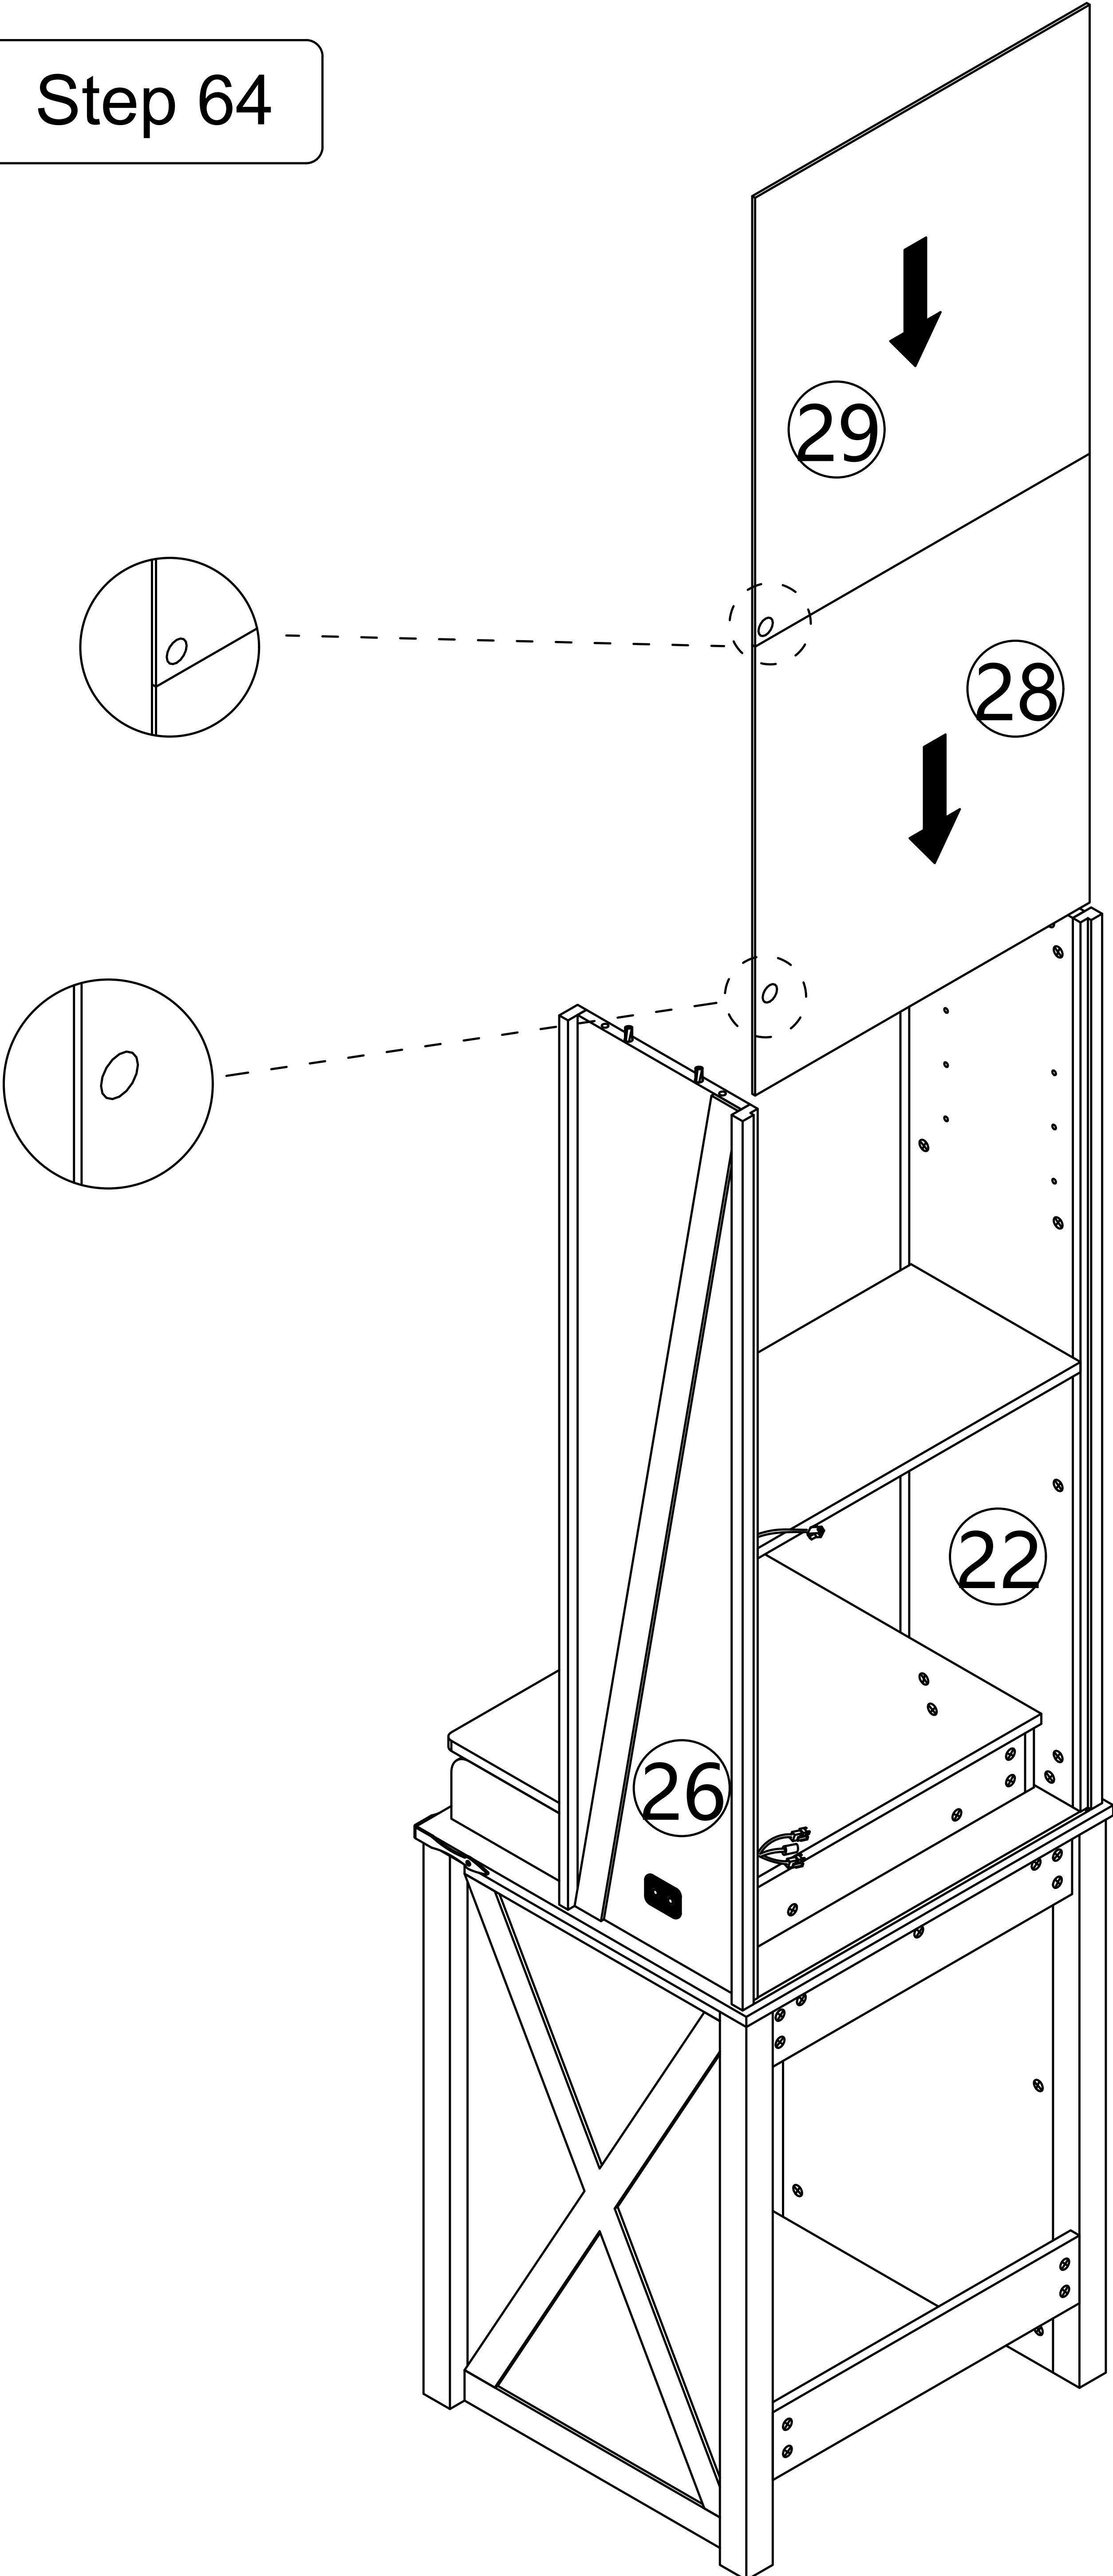


Step 65

B



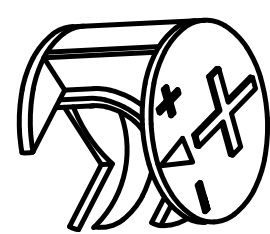


x4

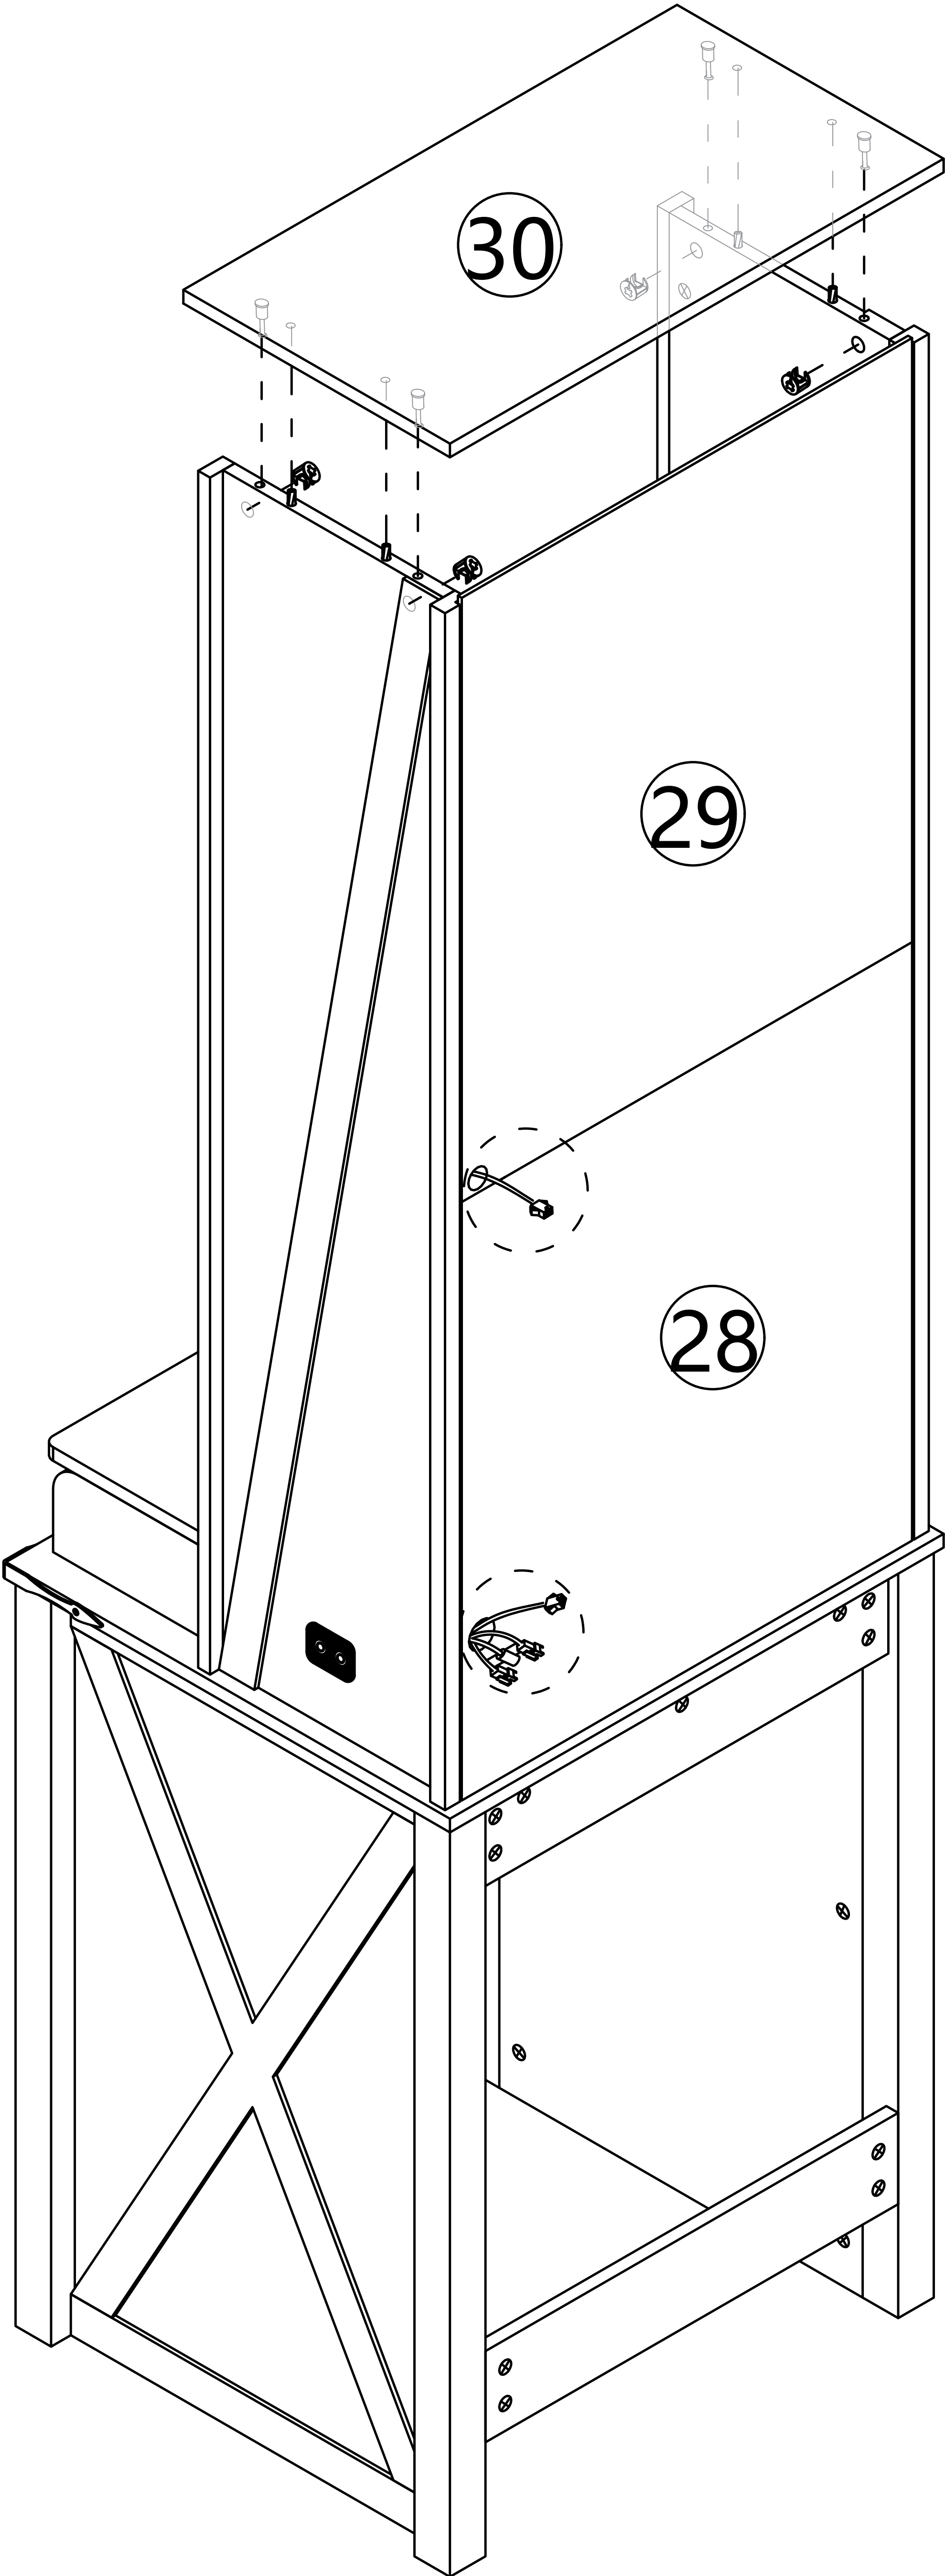







Step 66

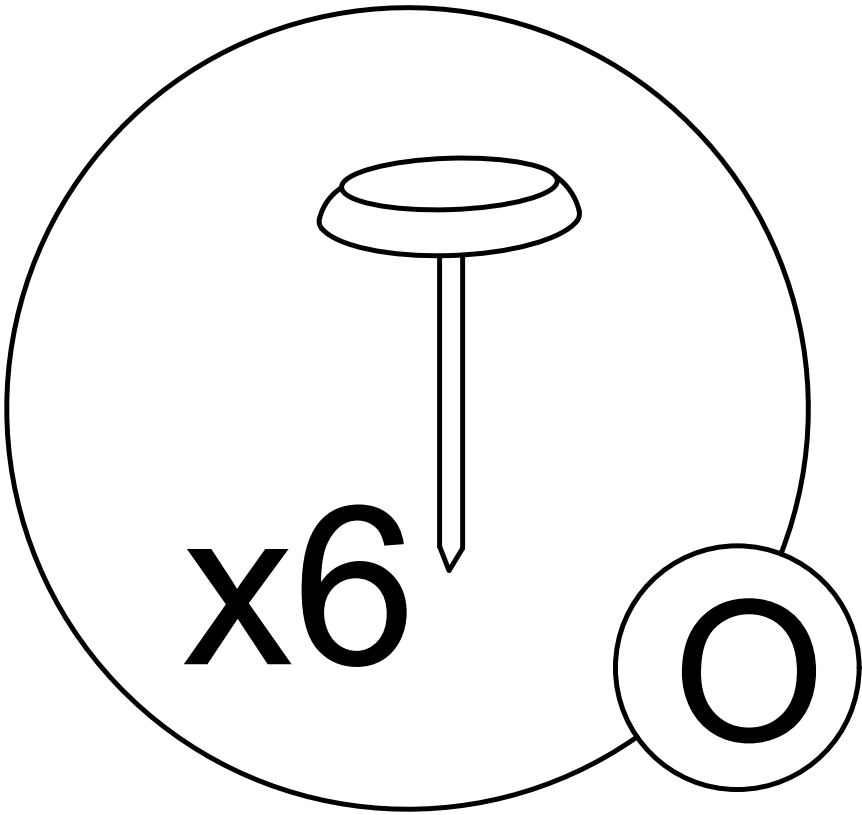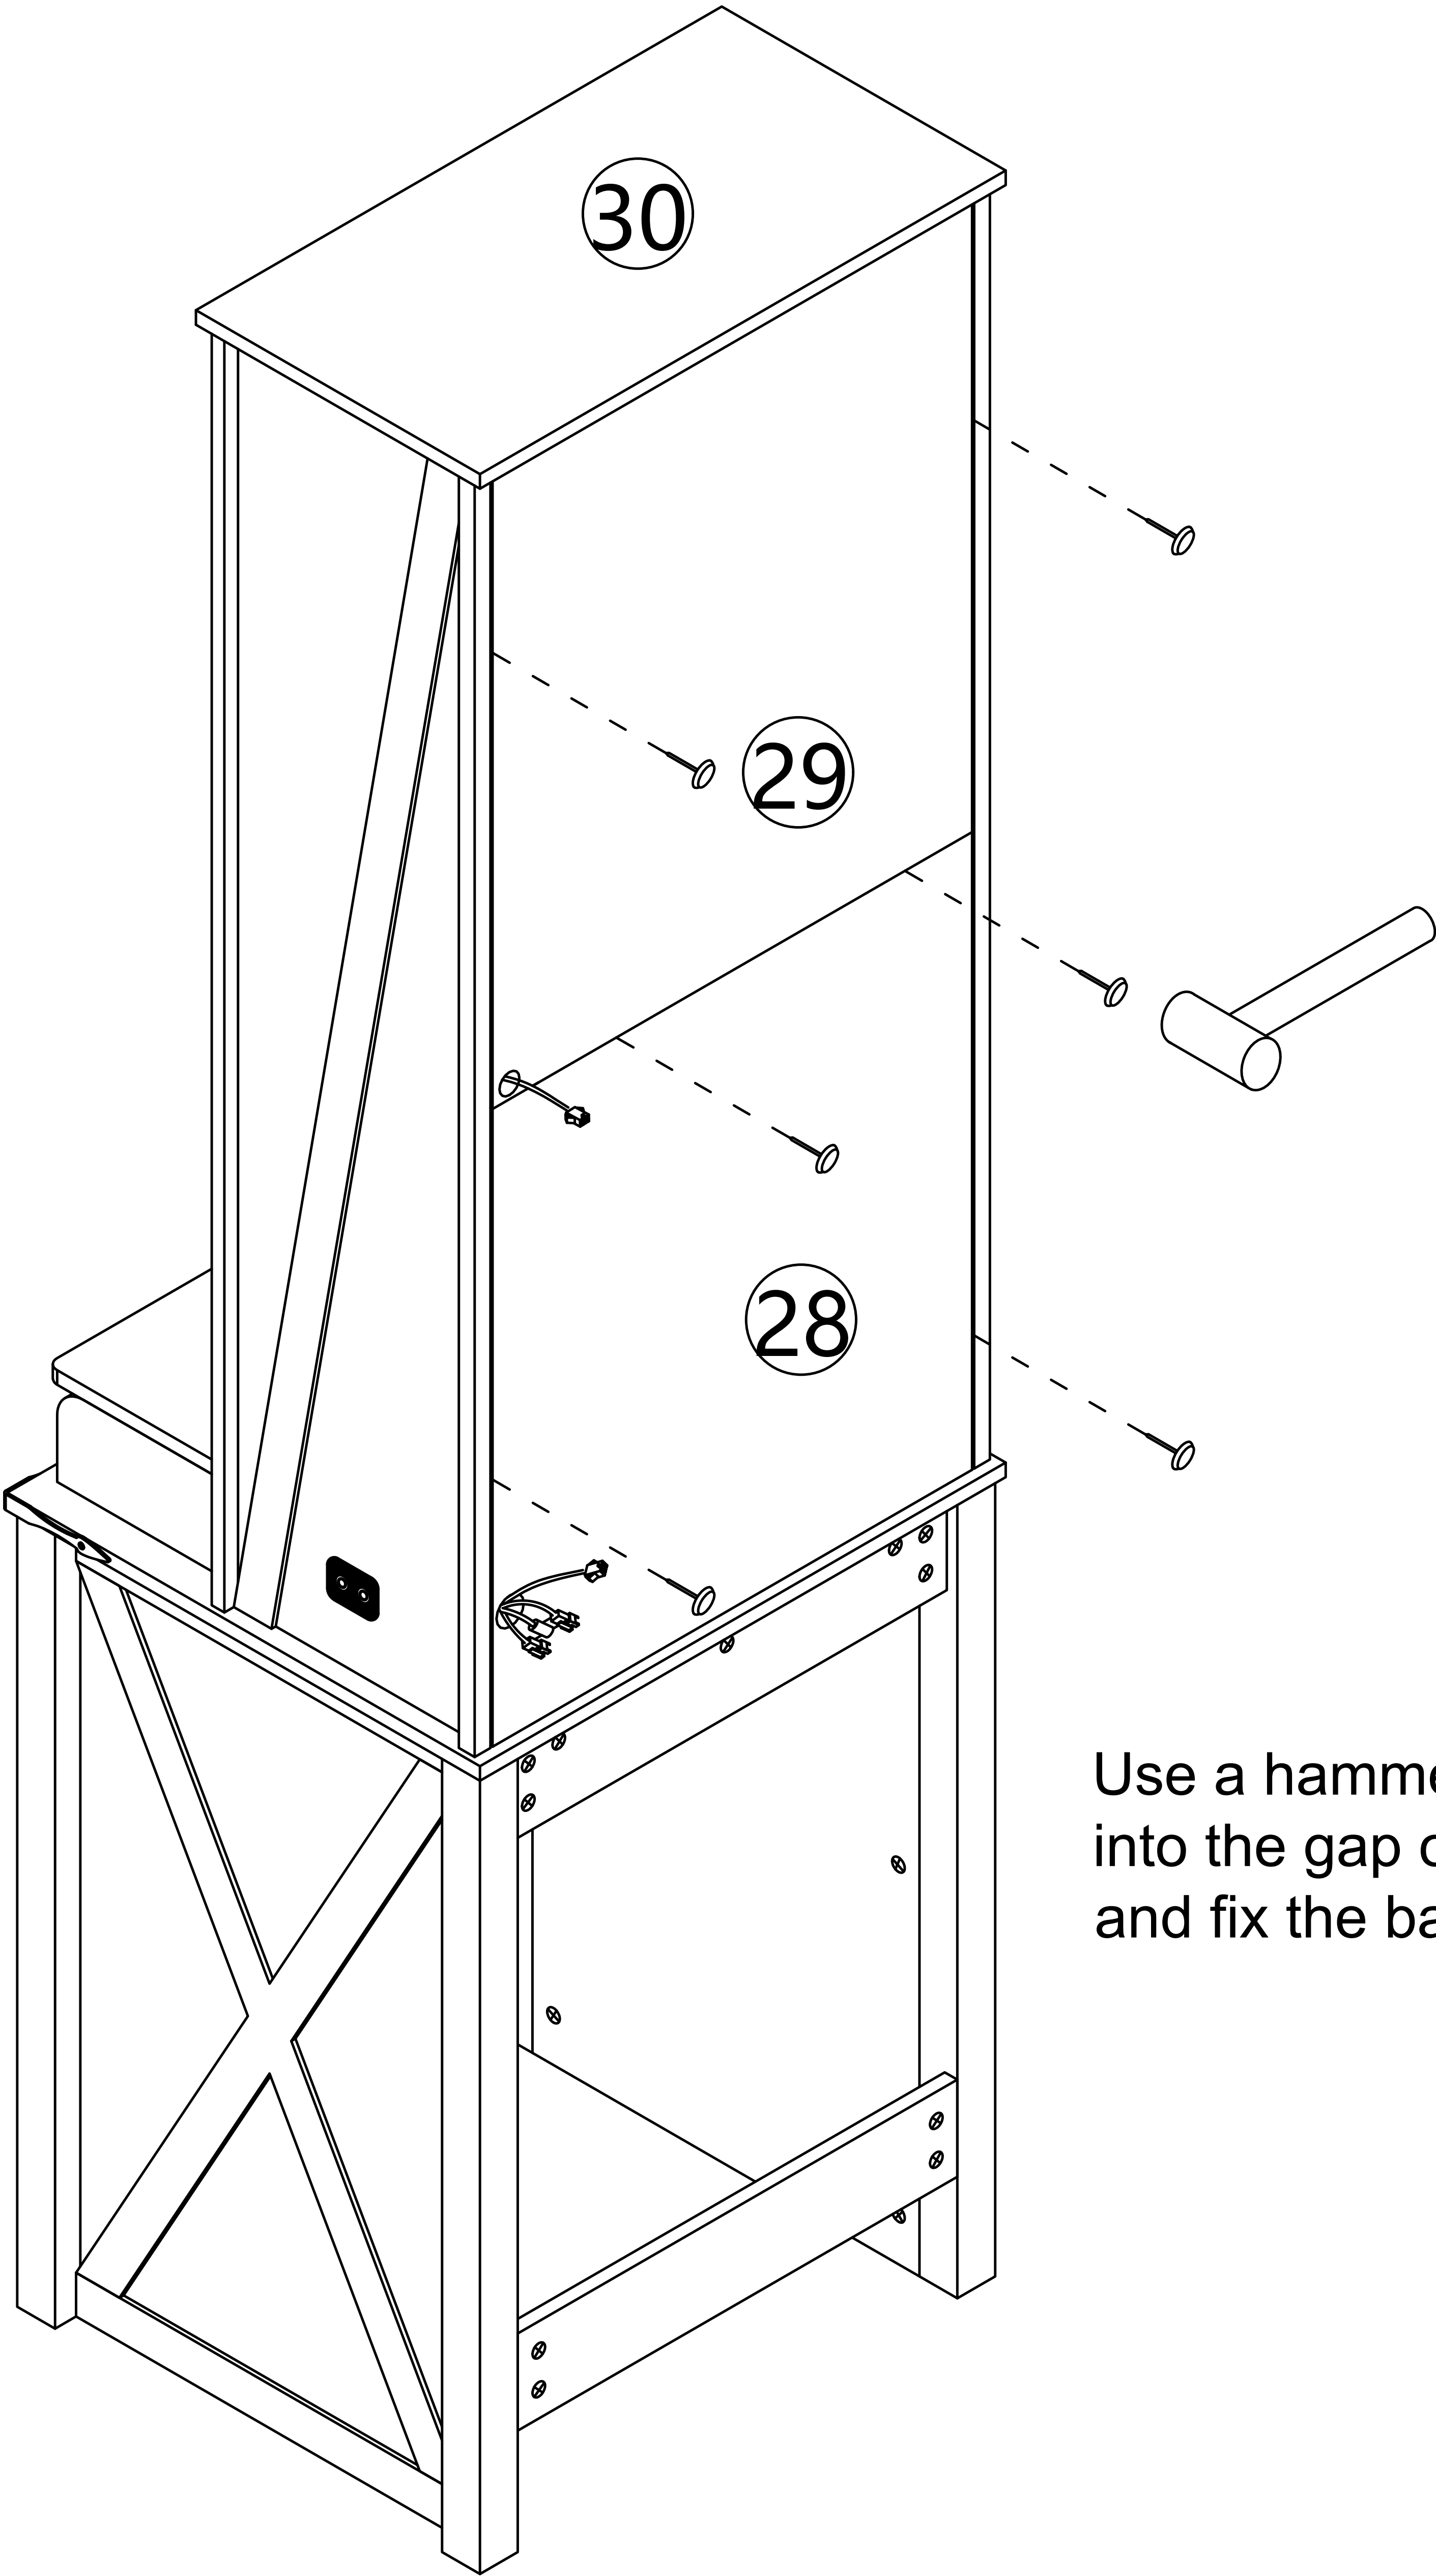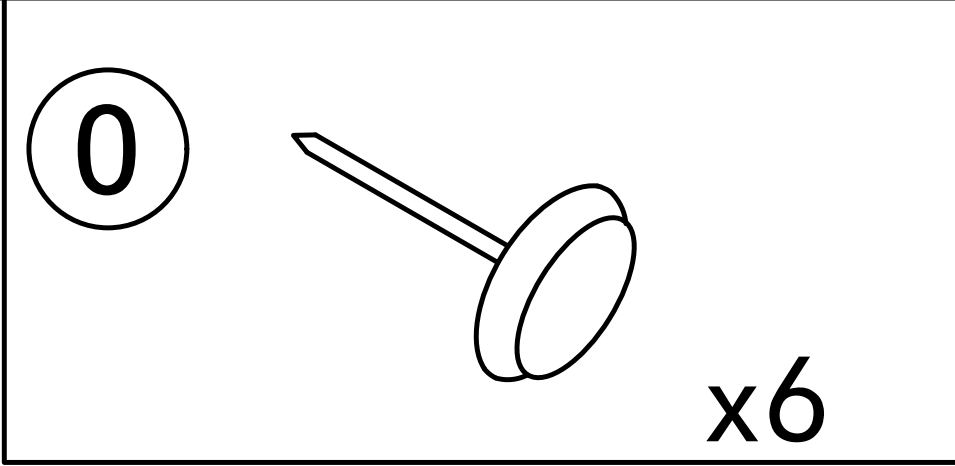



Use a hammer to drive the nail into the gap of the wooden board and fix the back board

Step 67

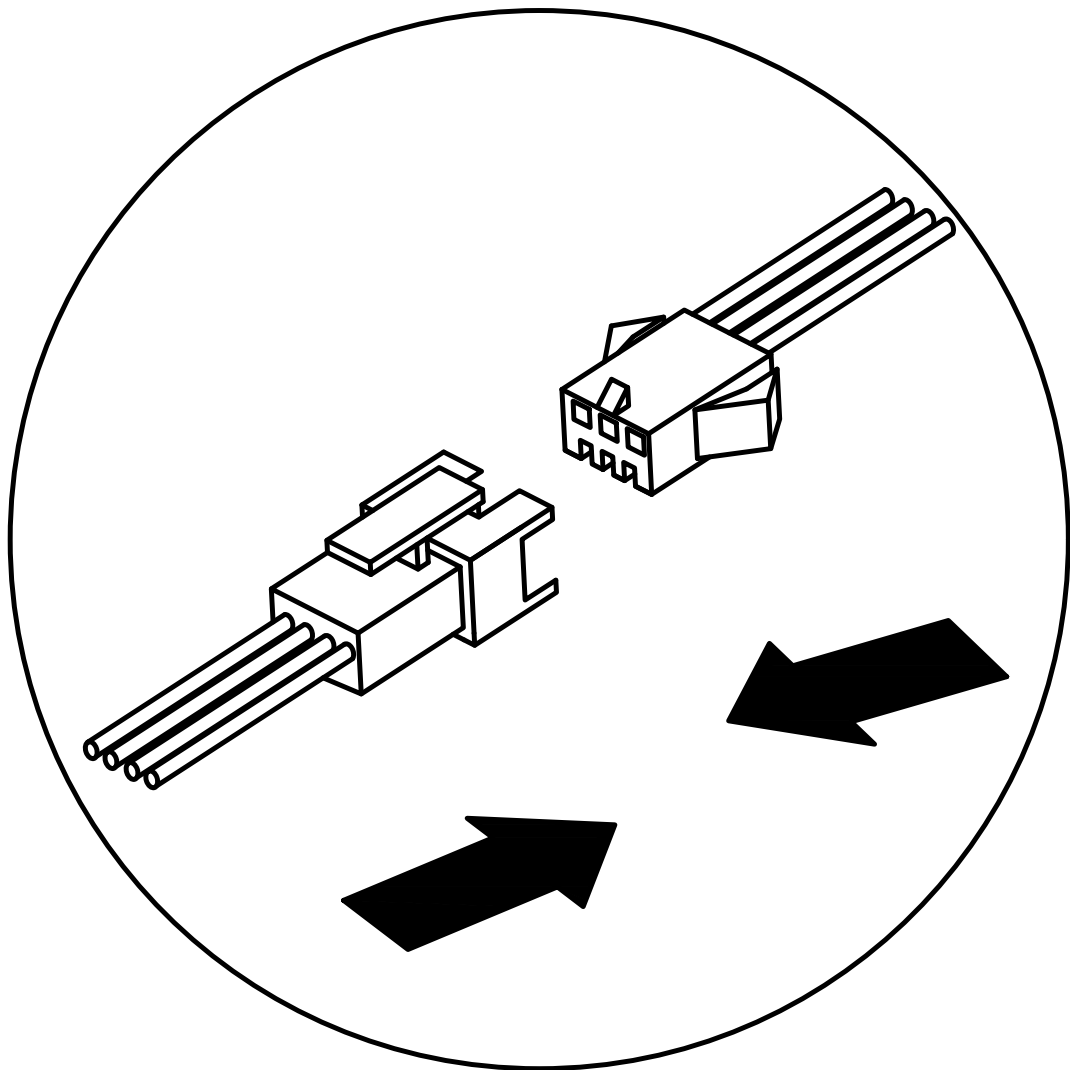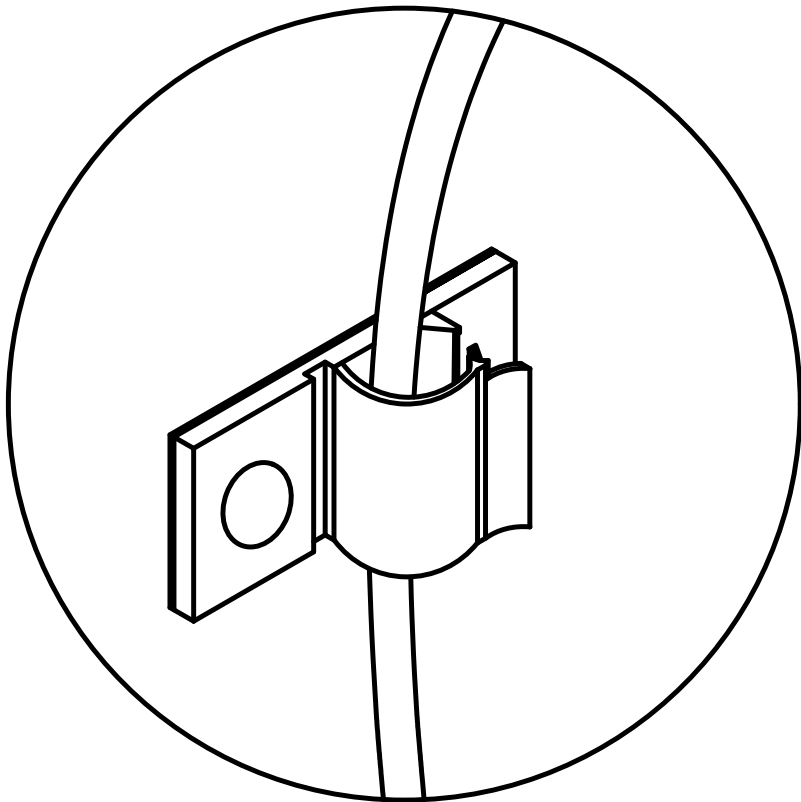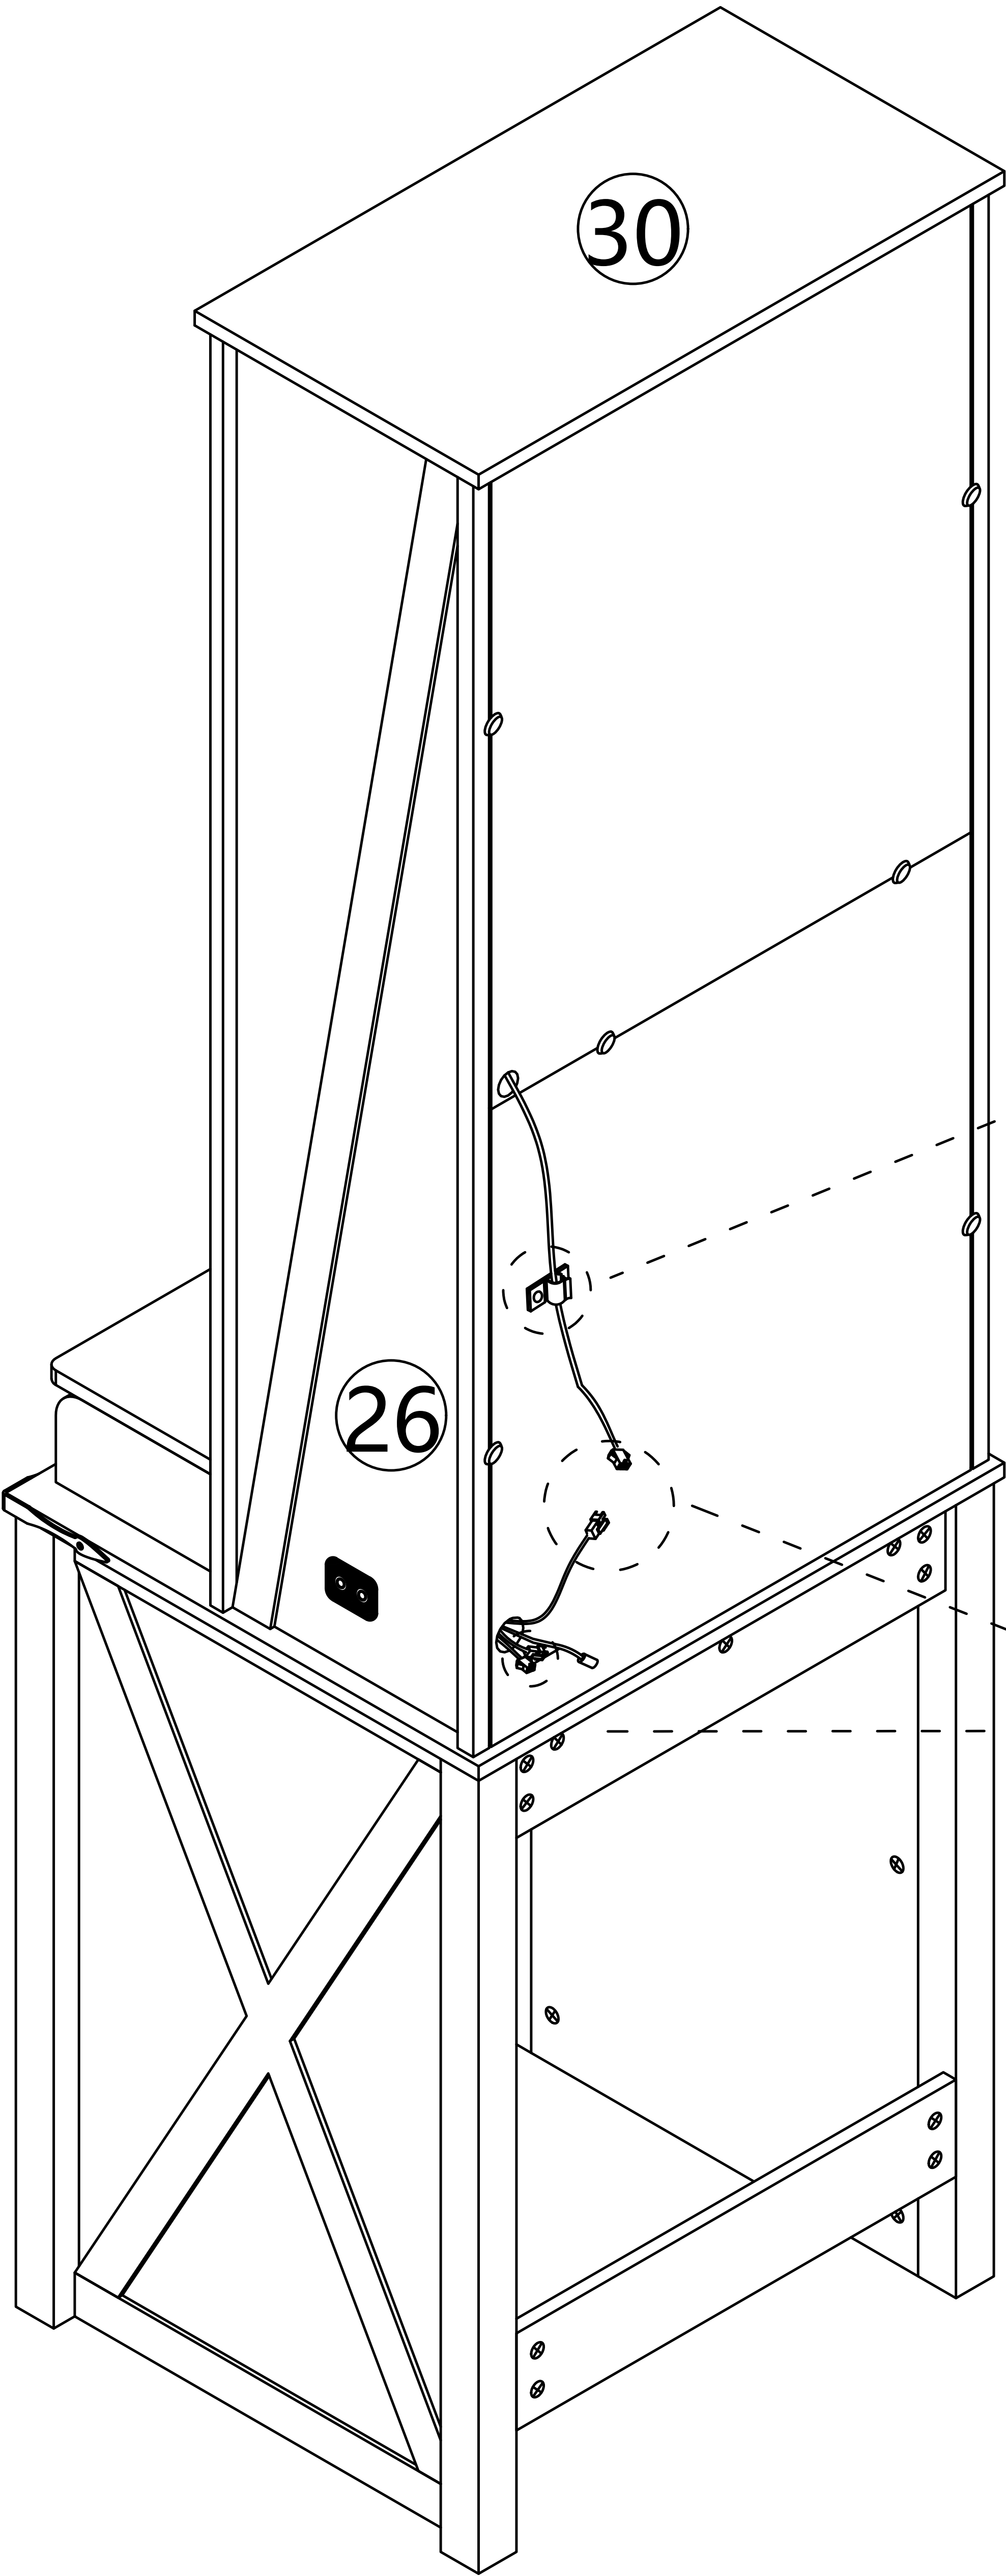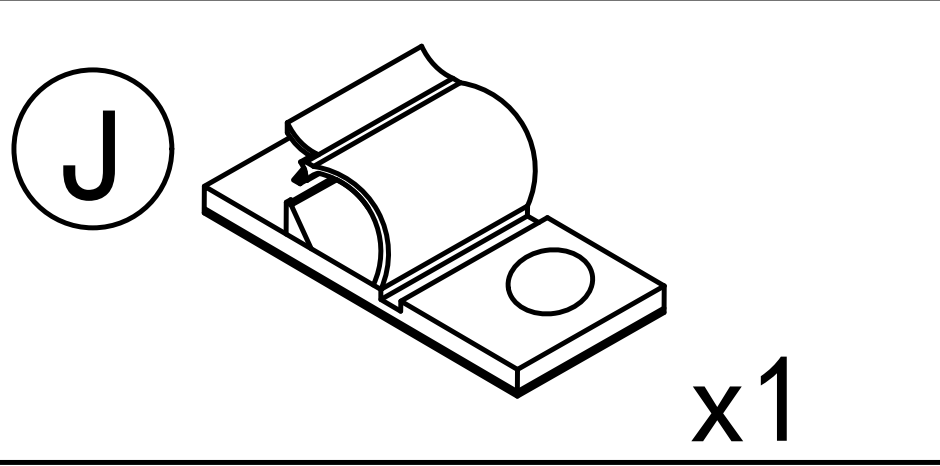


Step 68

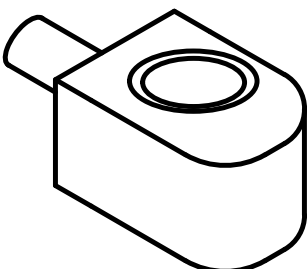K  x4

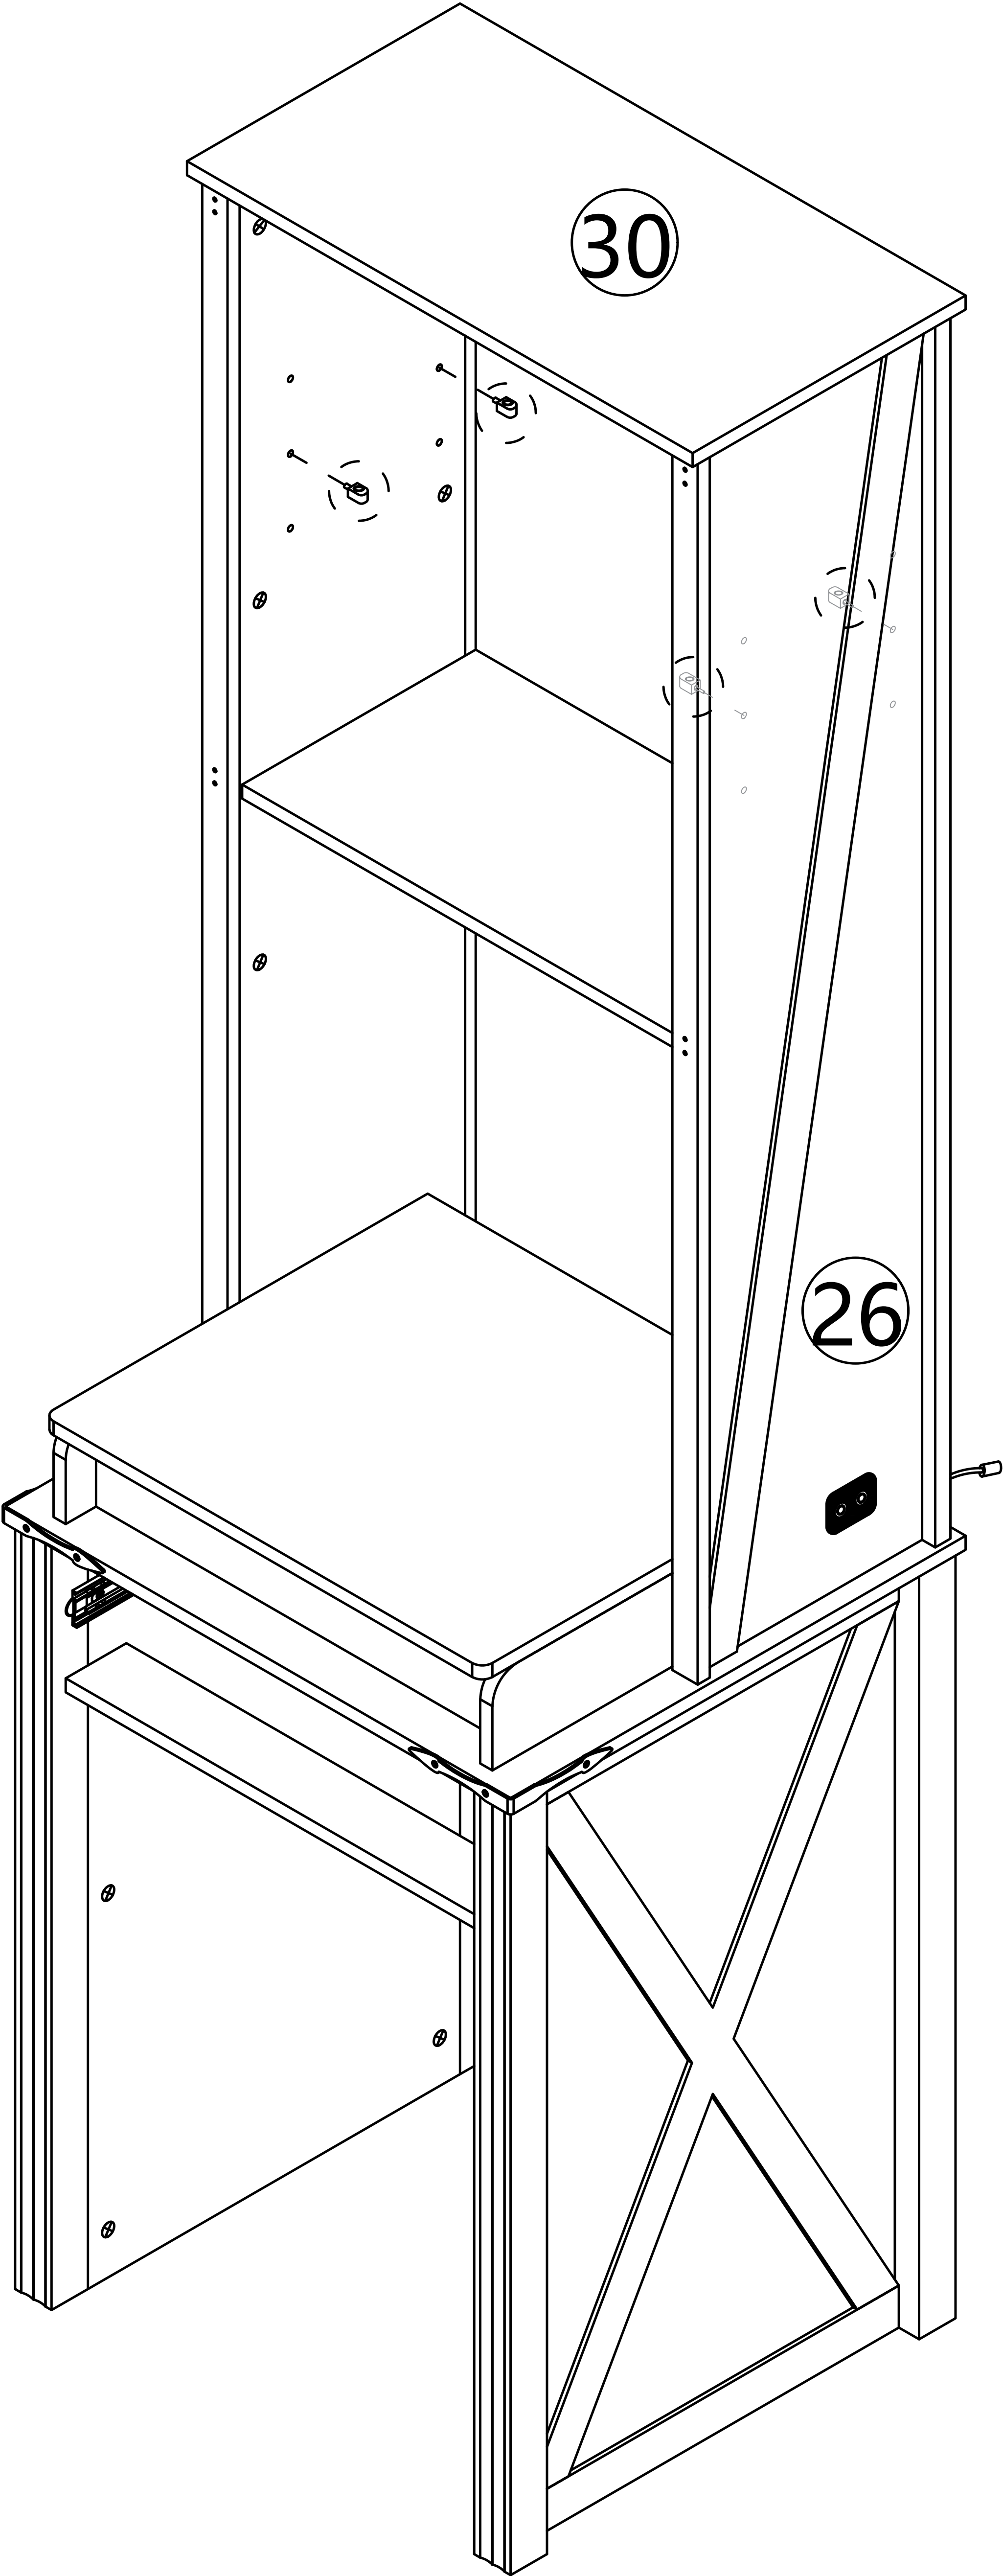


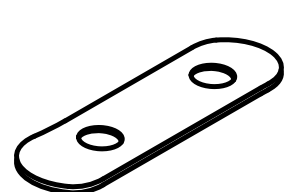
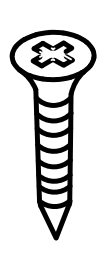
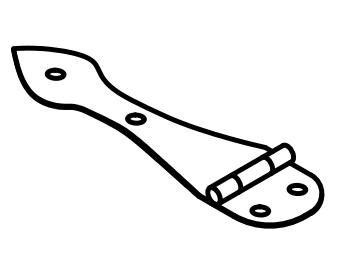
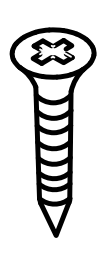





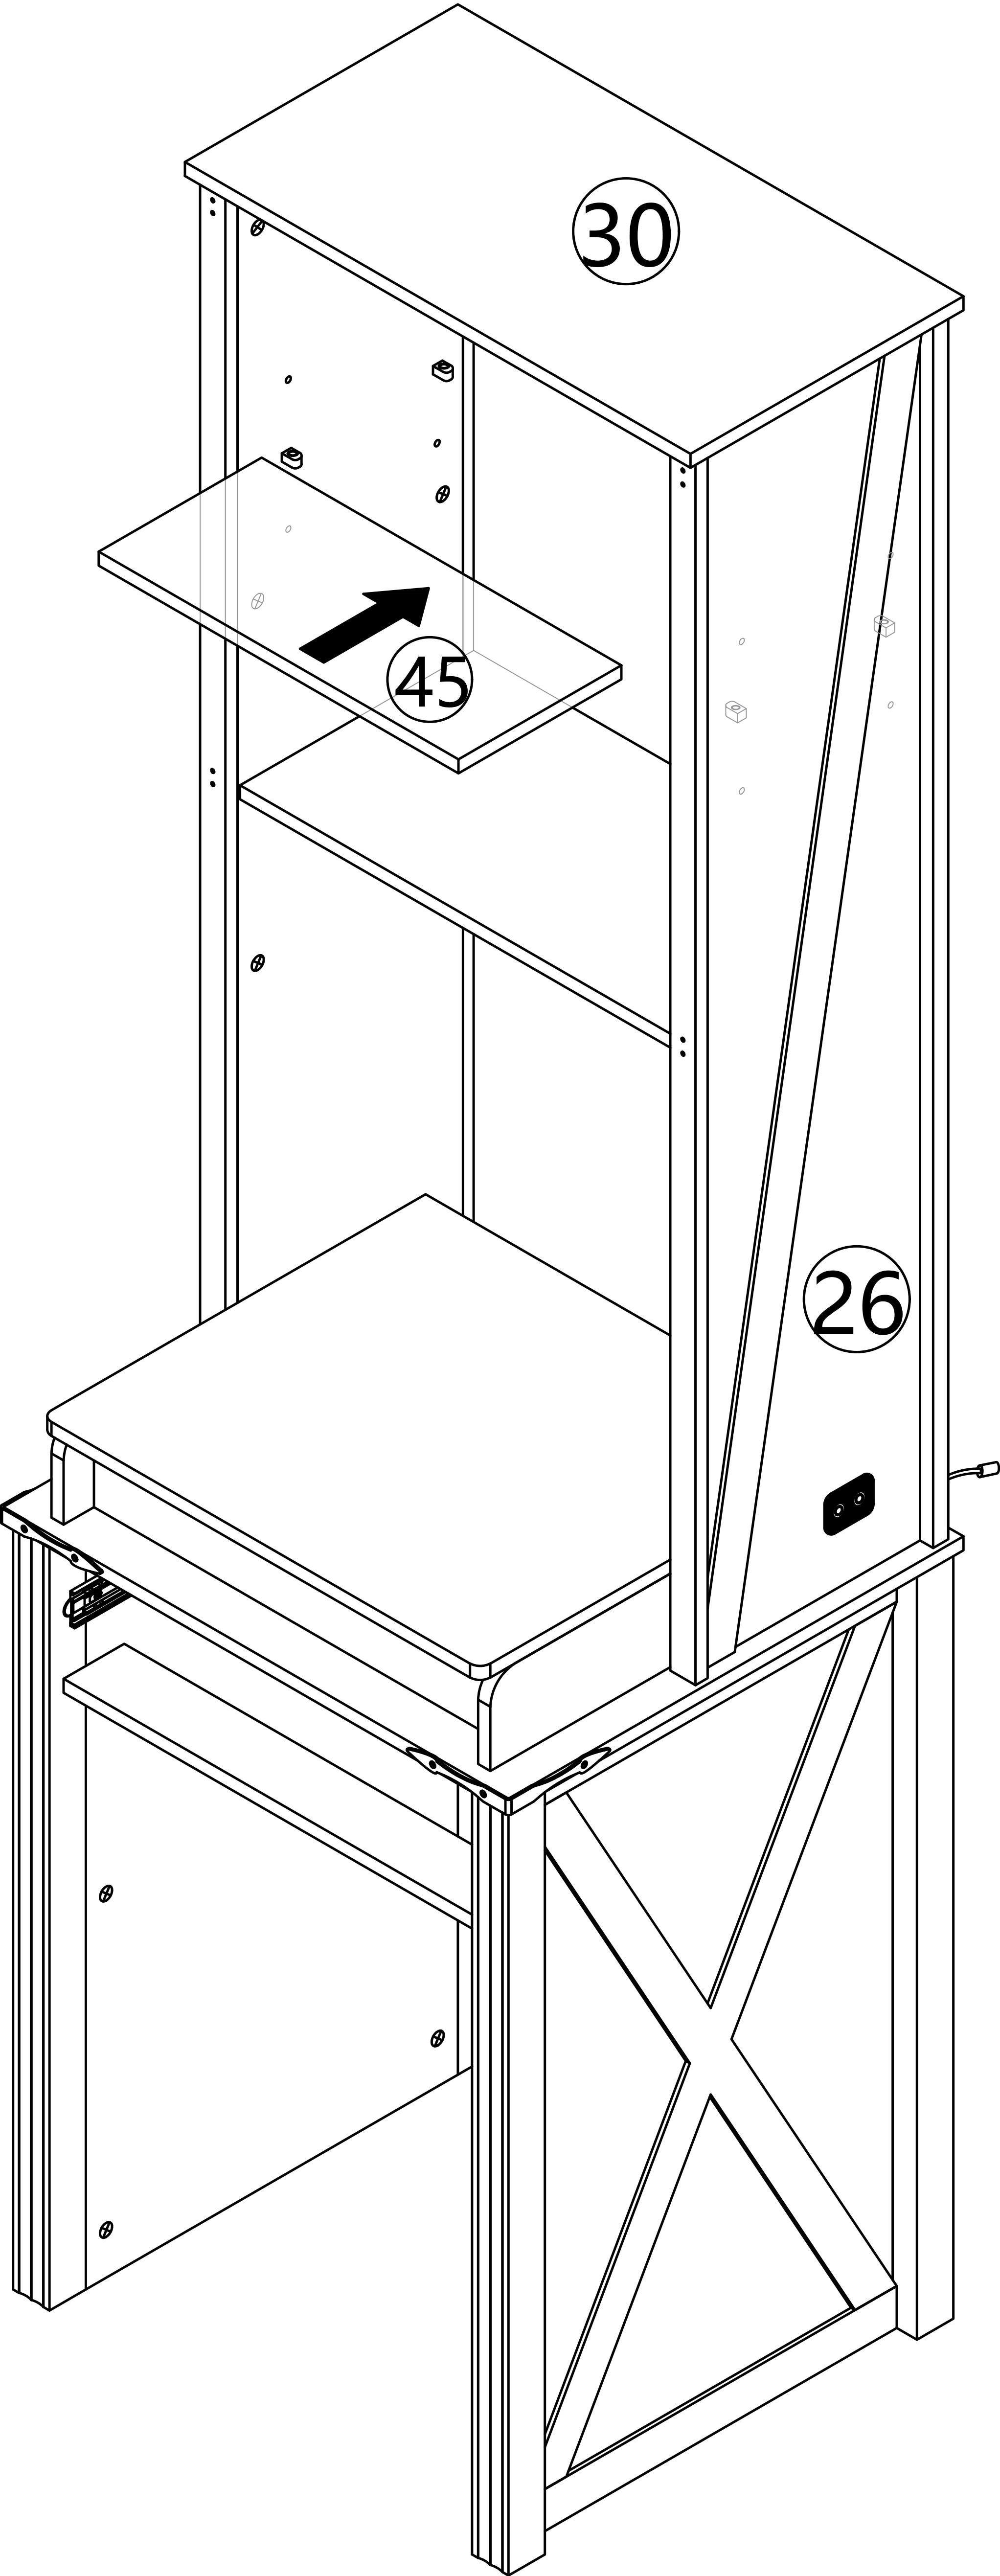


Step 69






Step 70

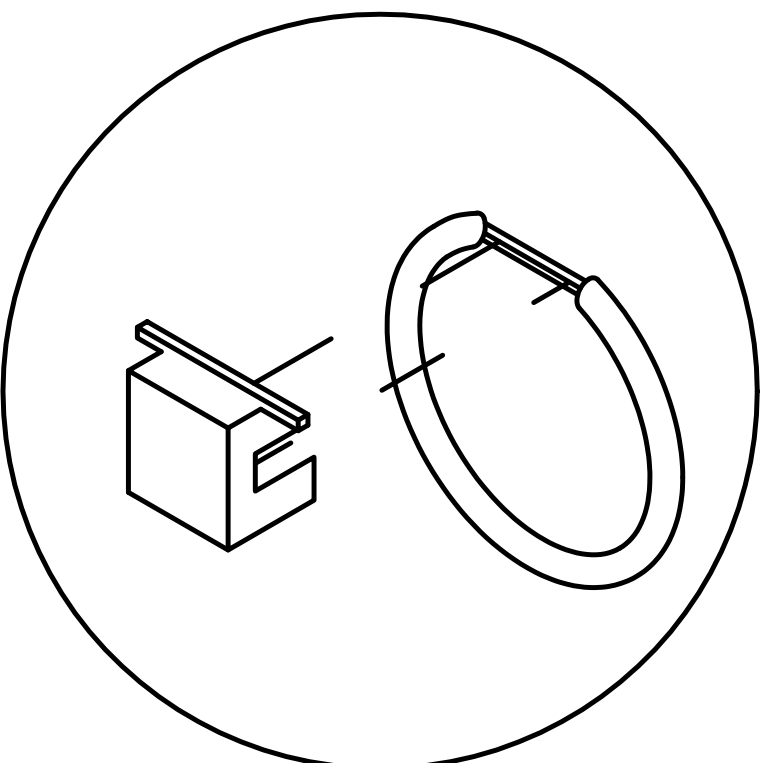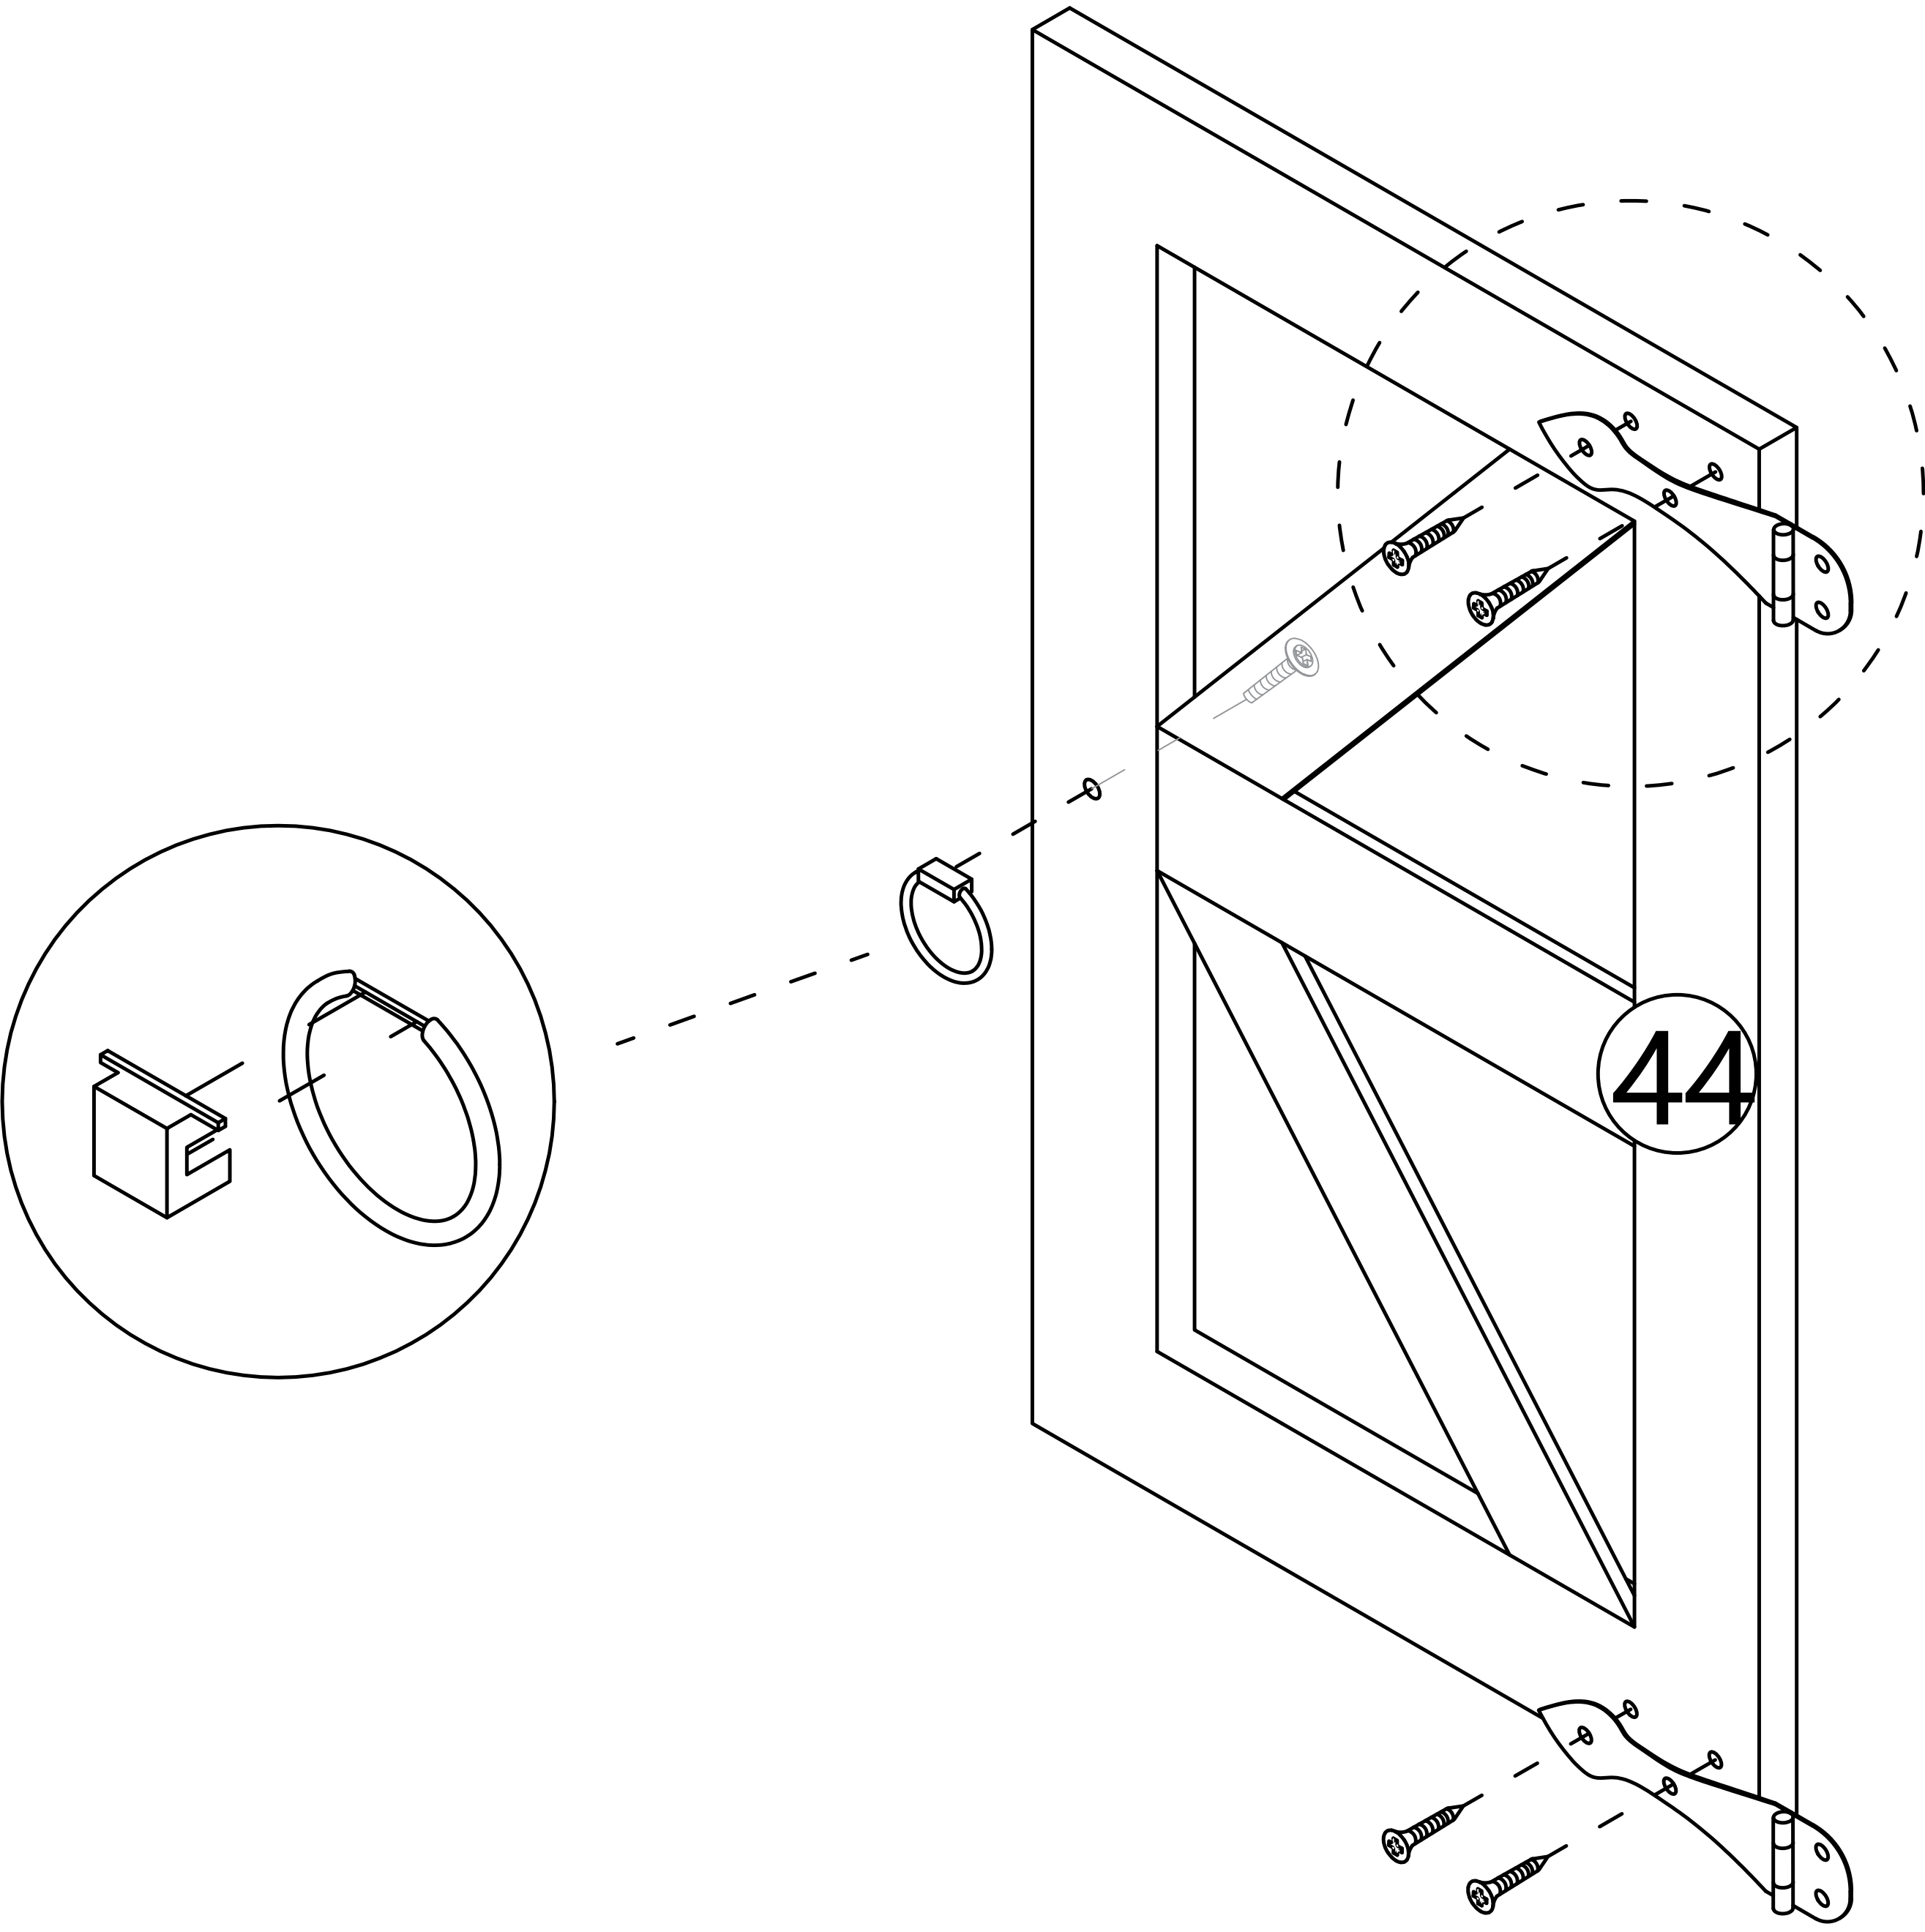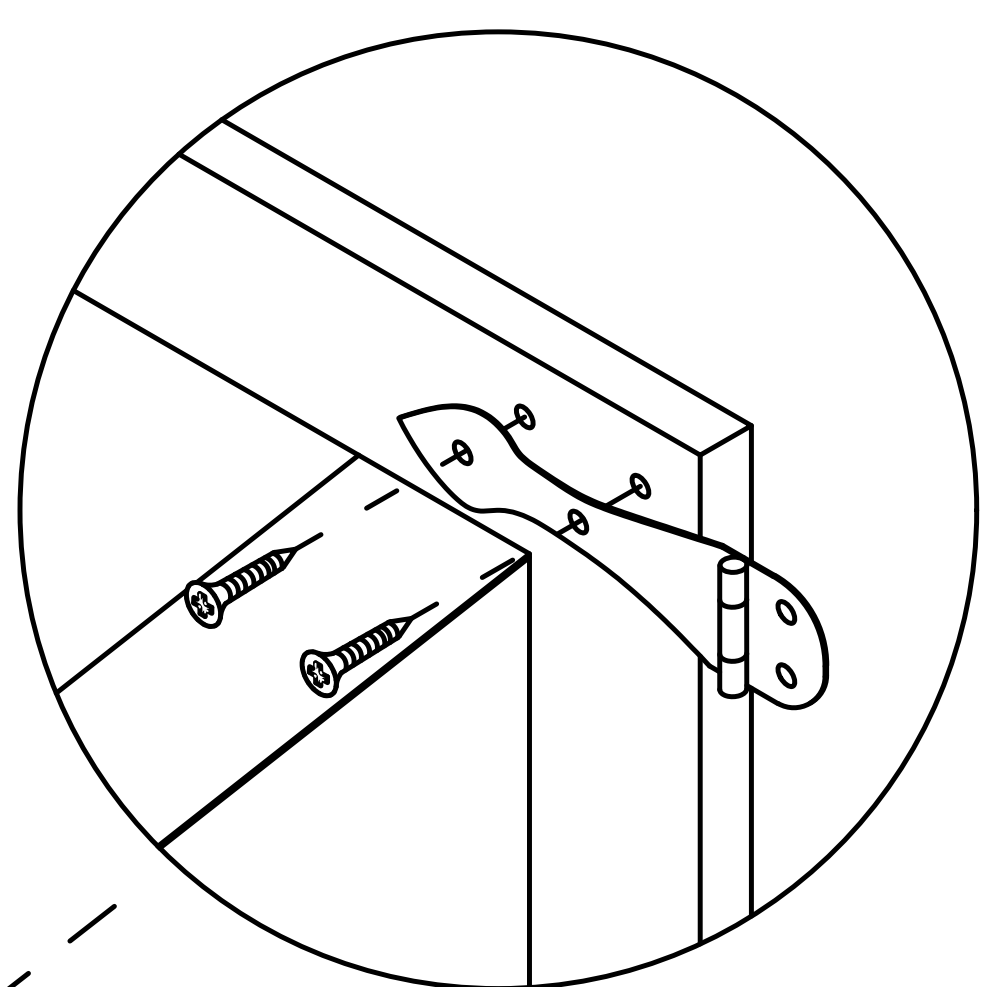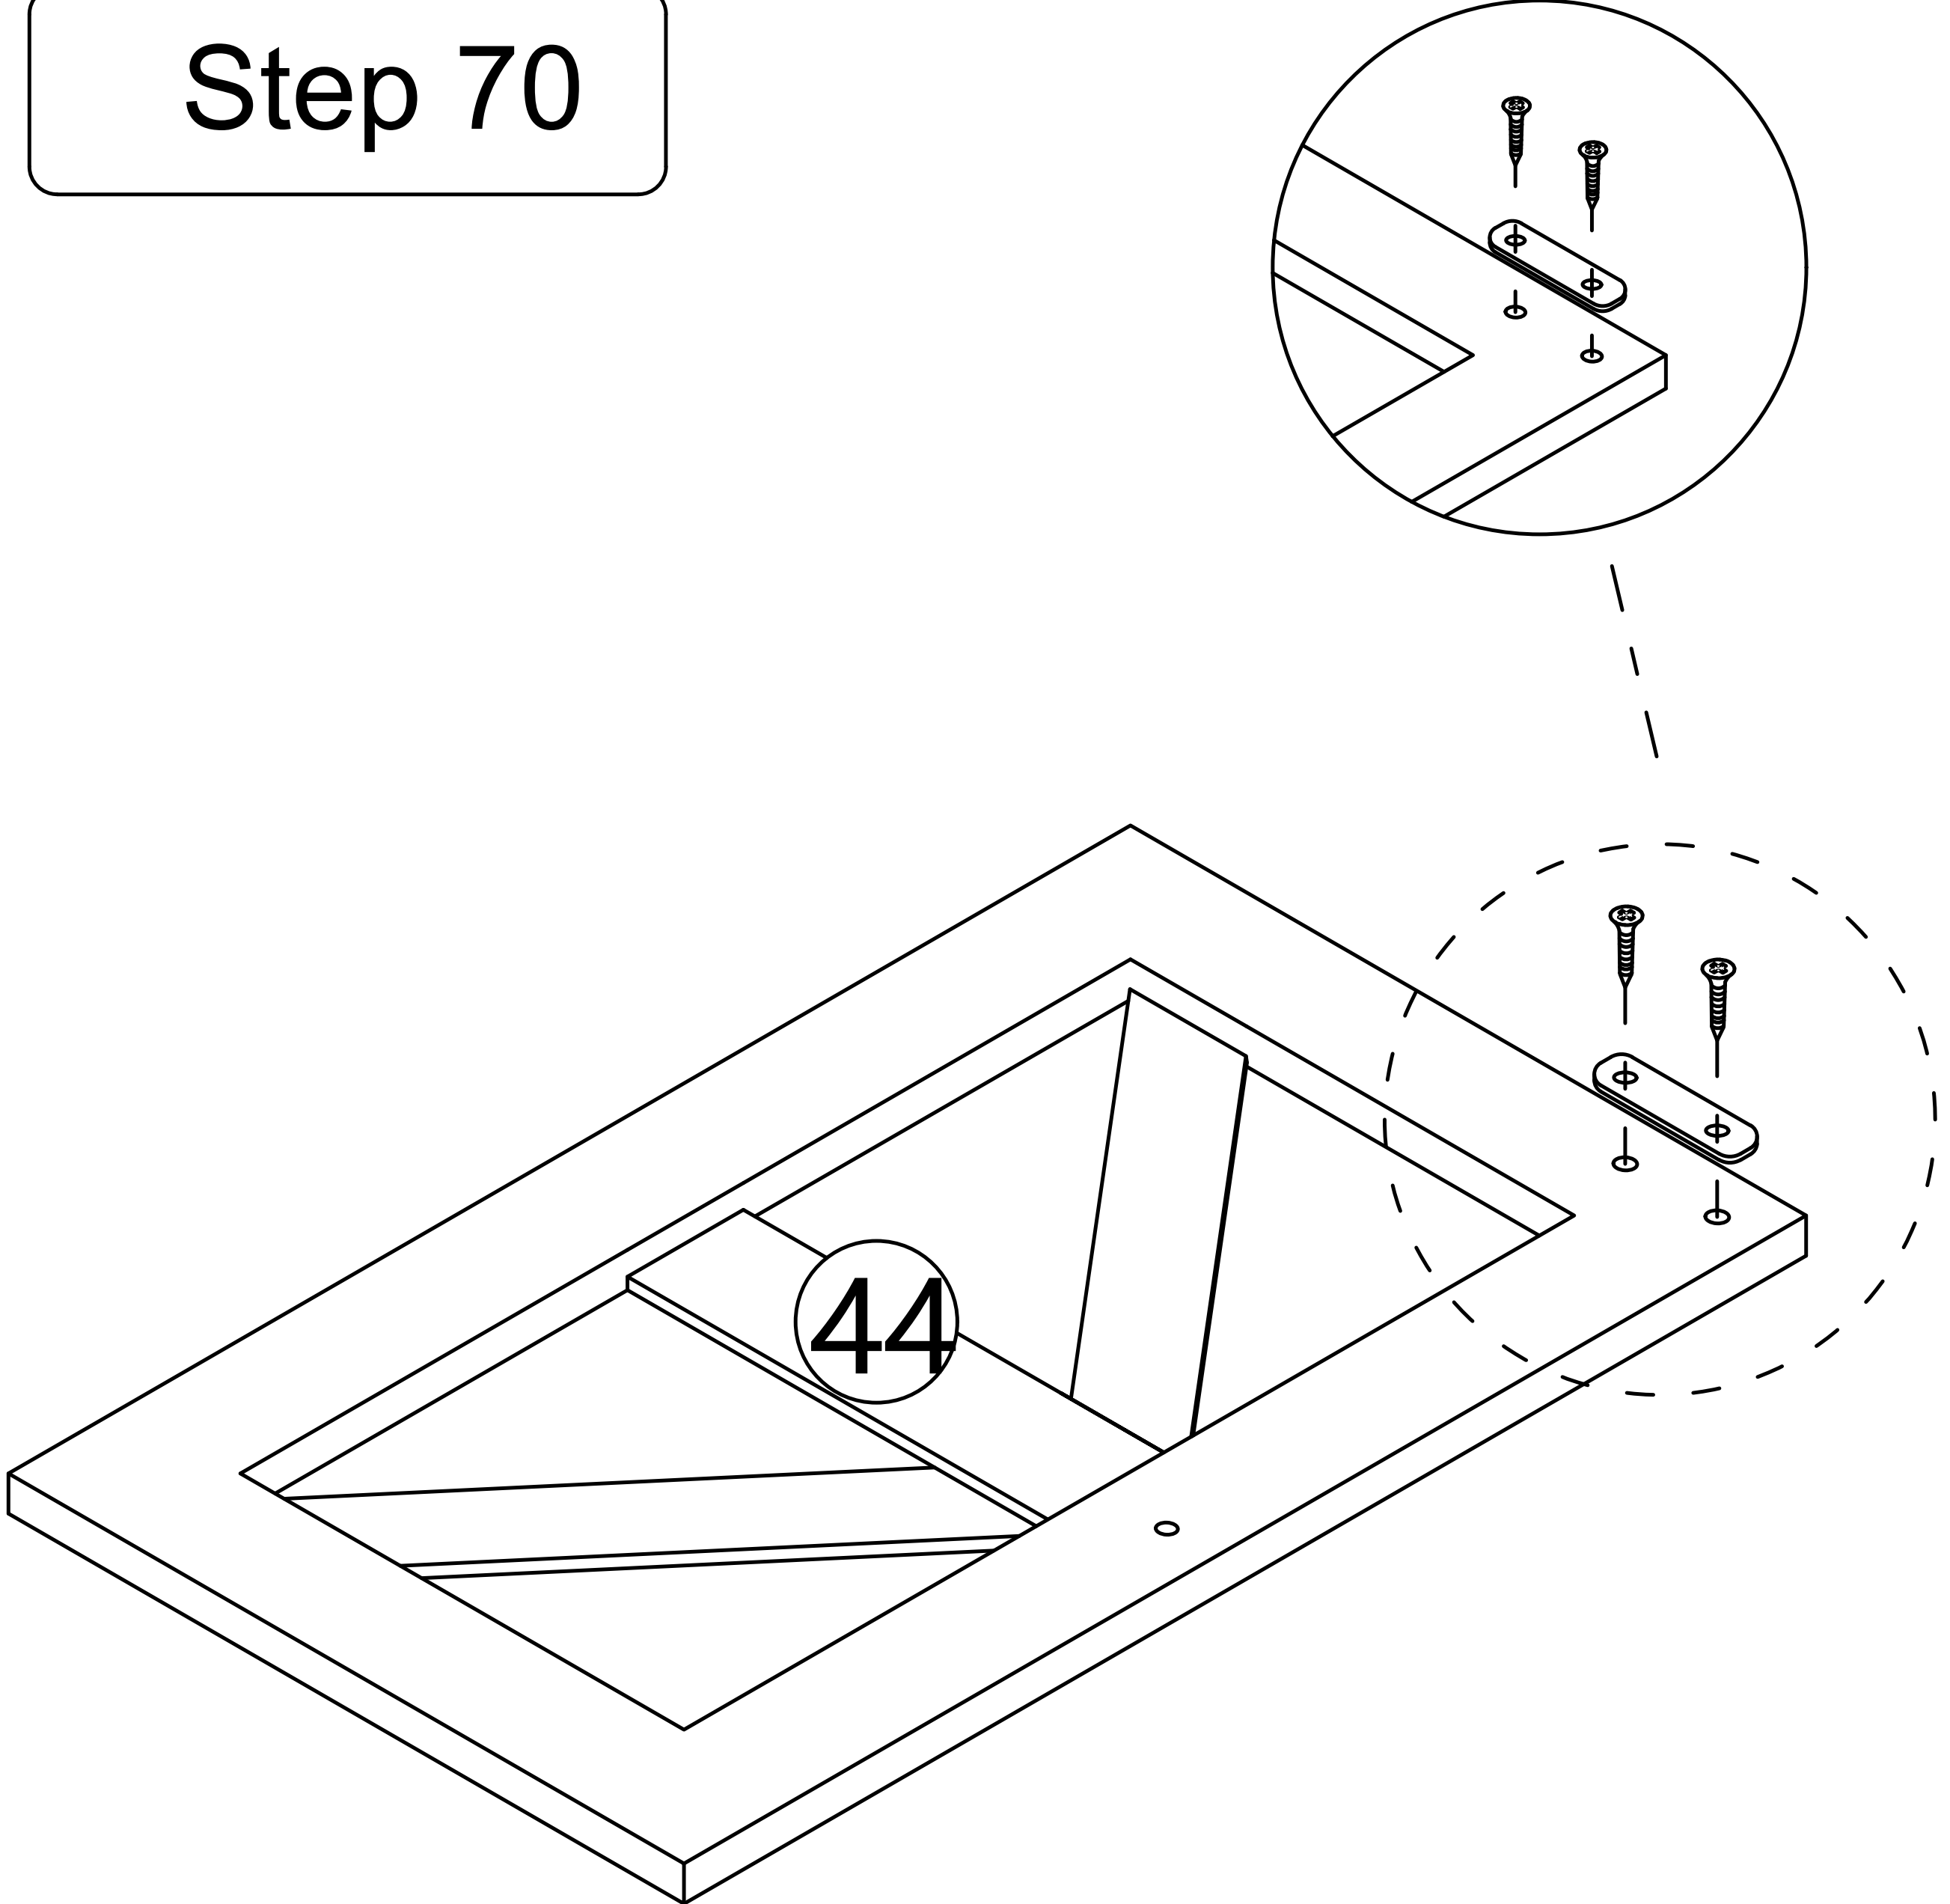D			
	x1	x1	x1
M			
	x1	x2	
N			
	x2	x4	





Step 71

- D





x1x1x1

- M




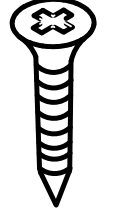
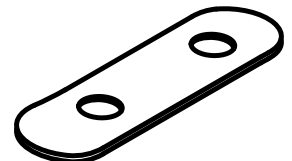


x1x2

- N

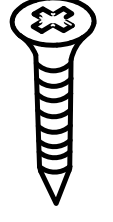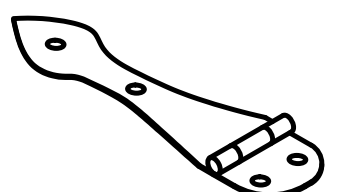


x2x4

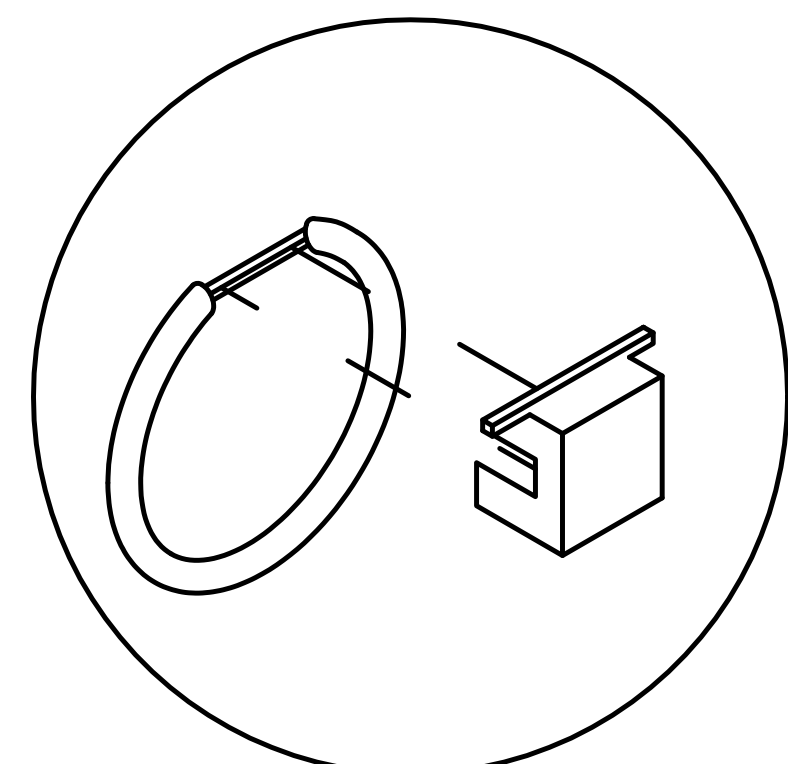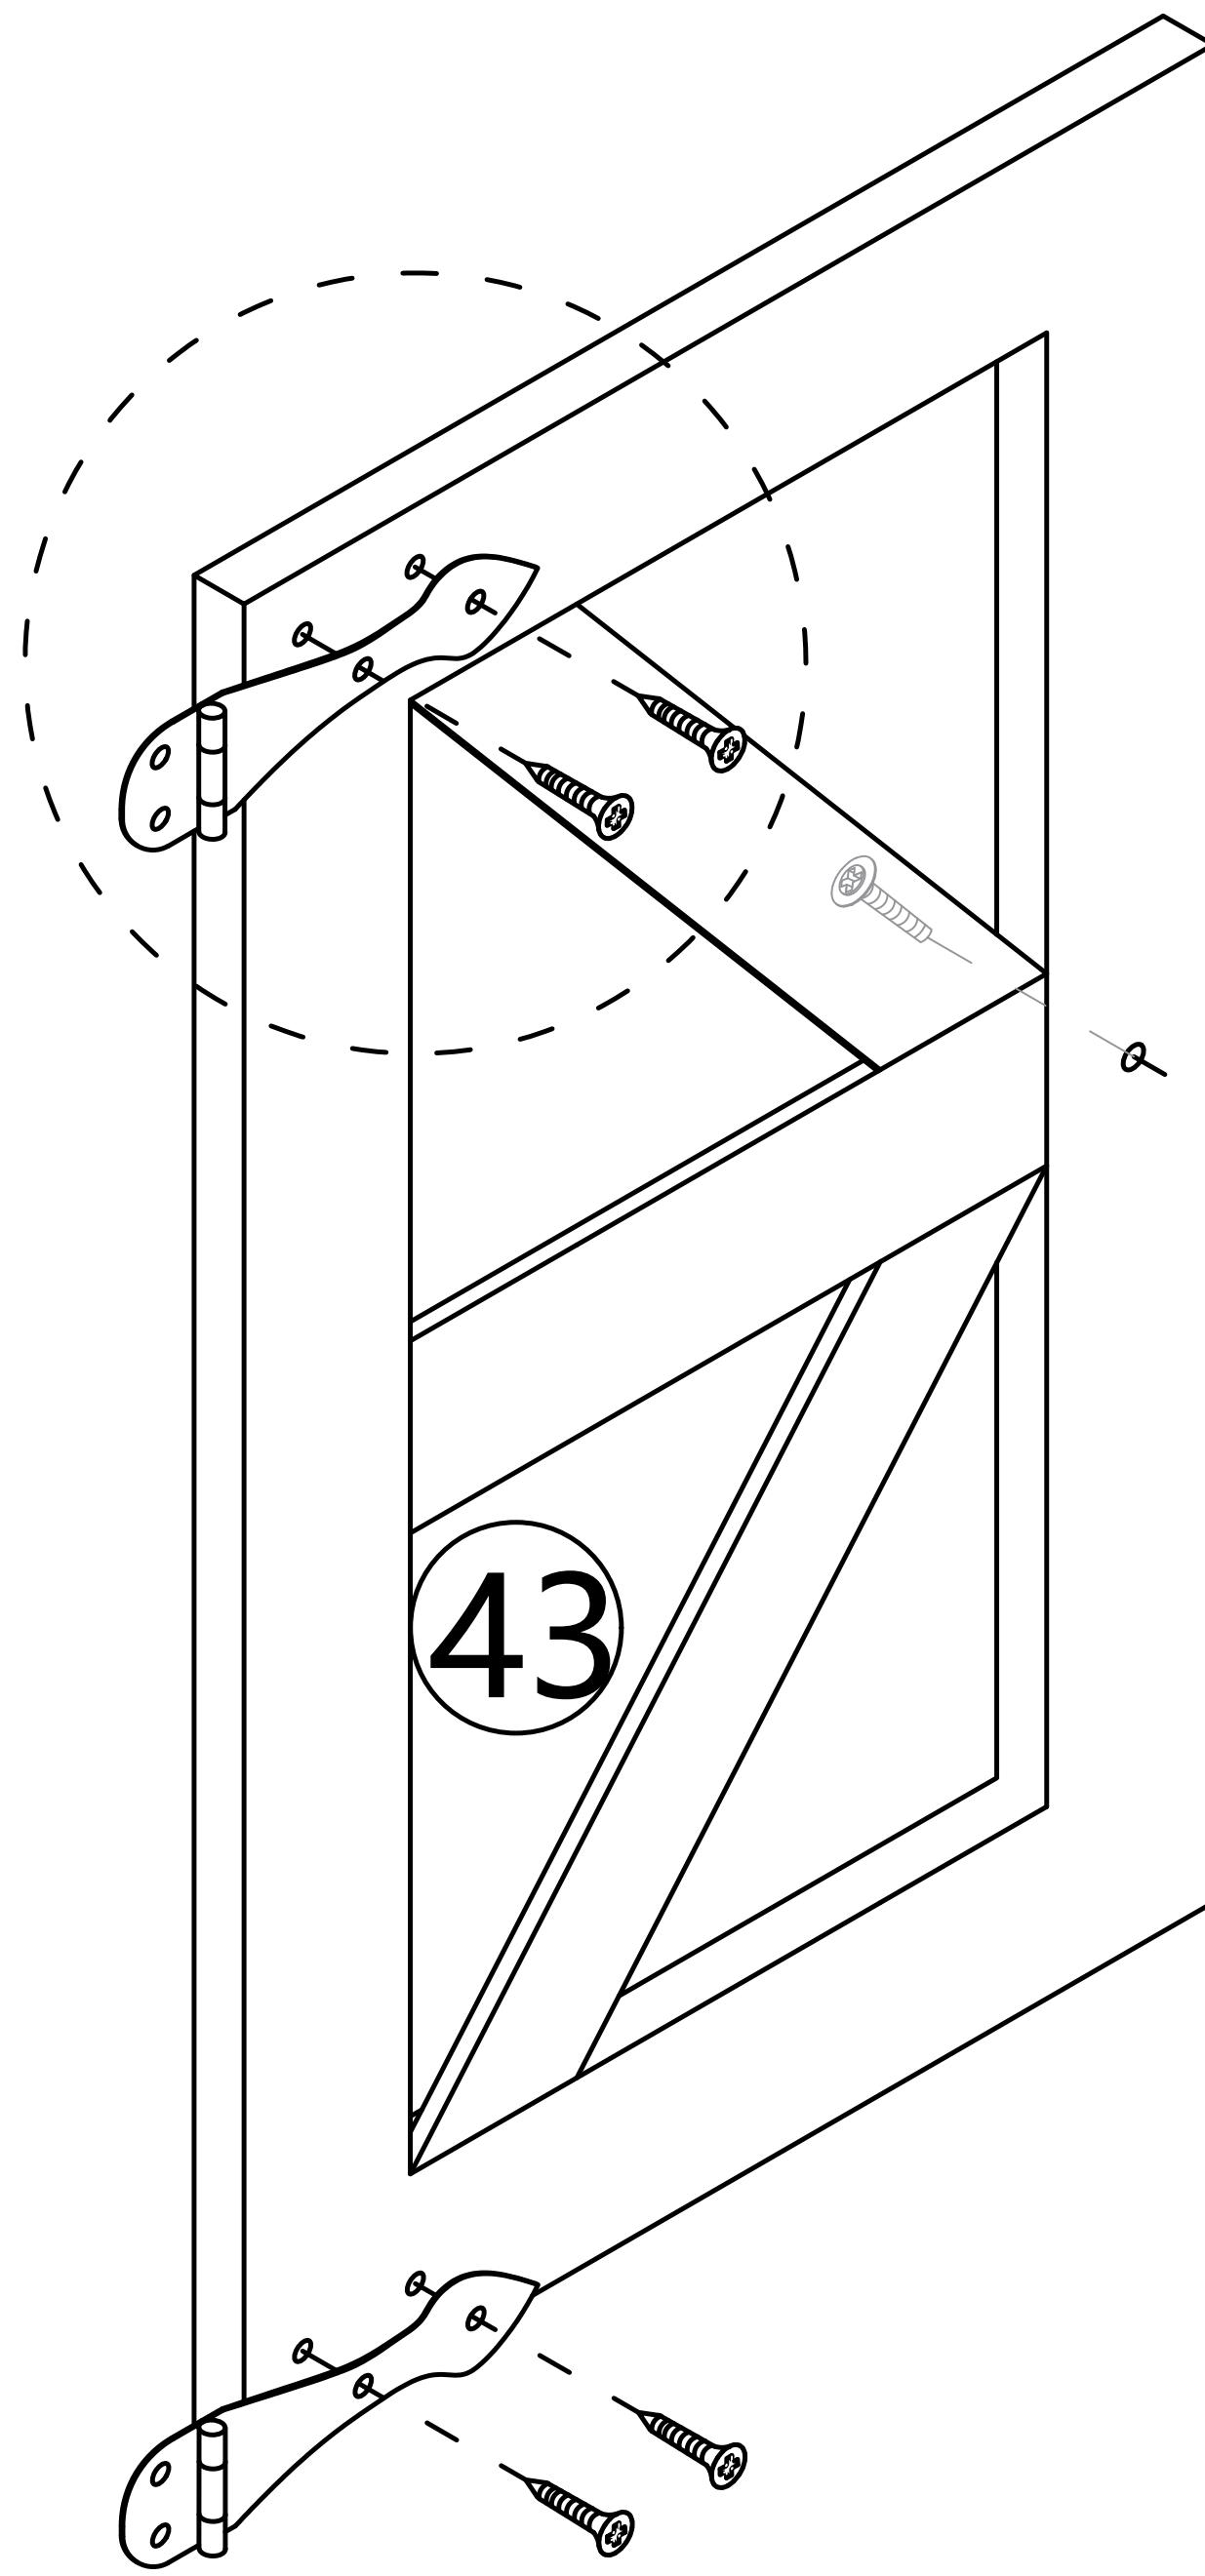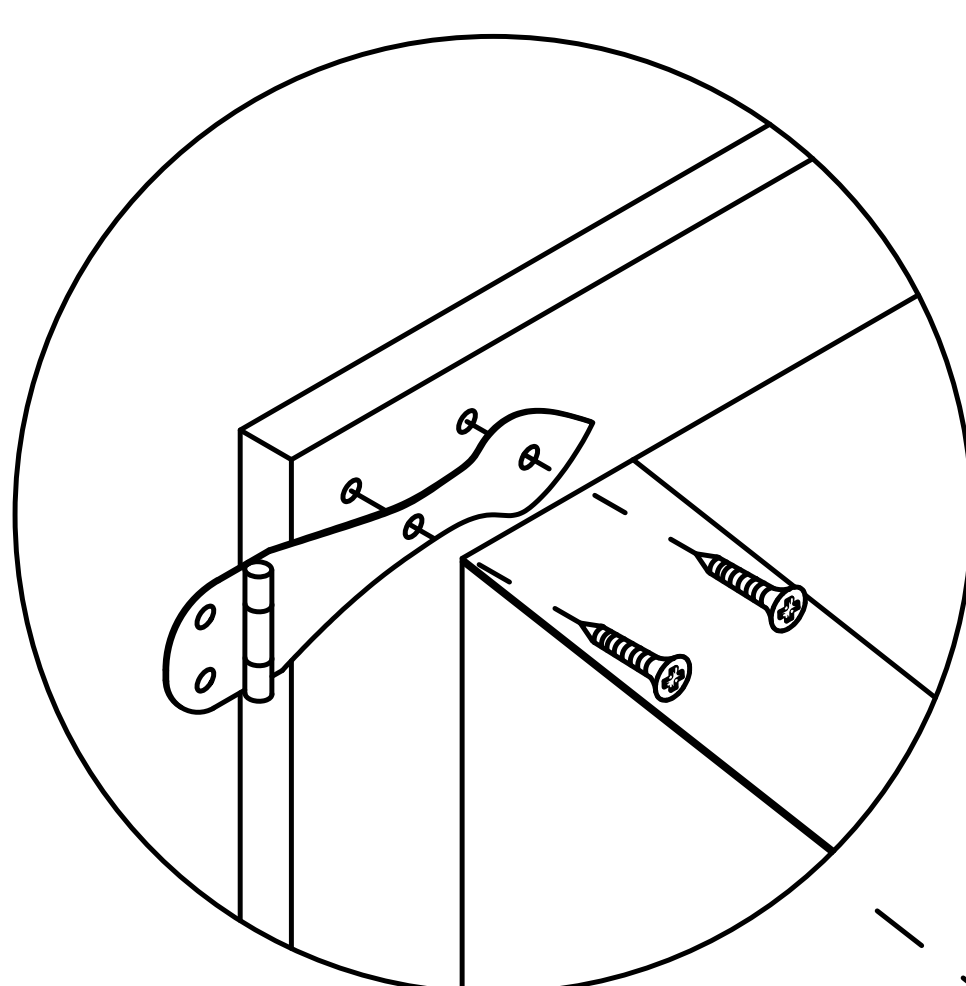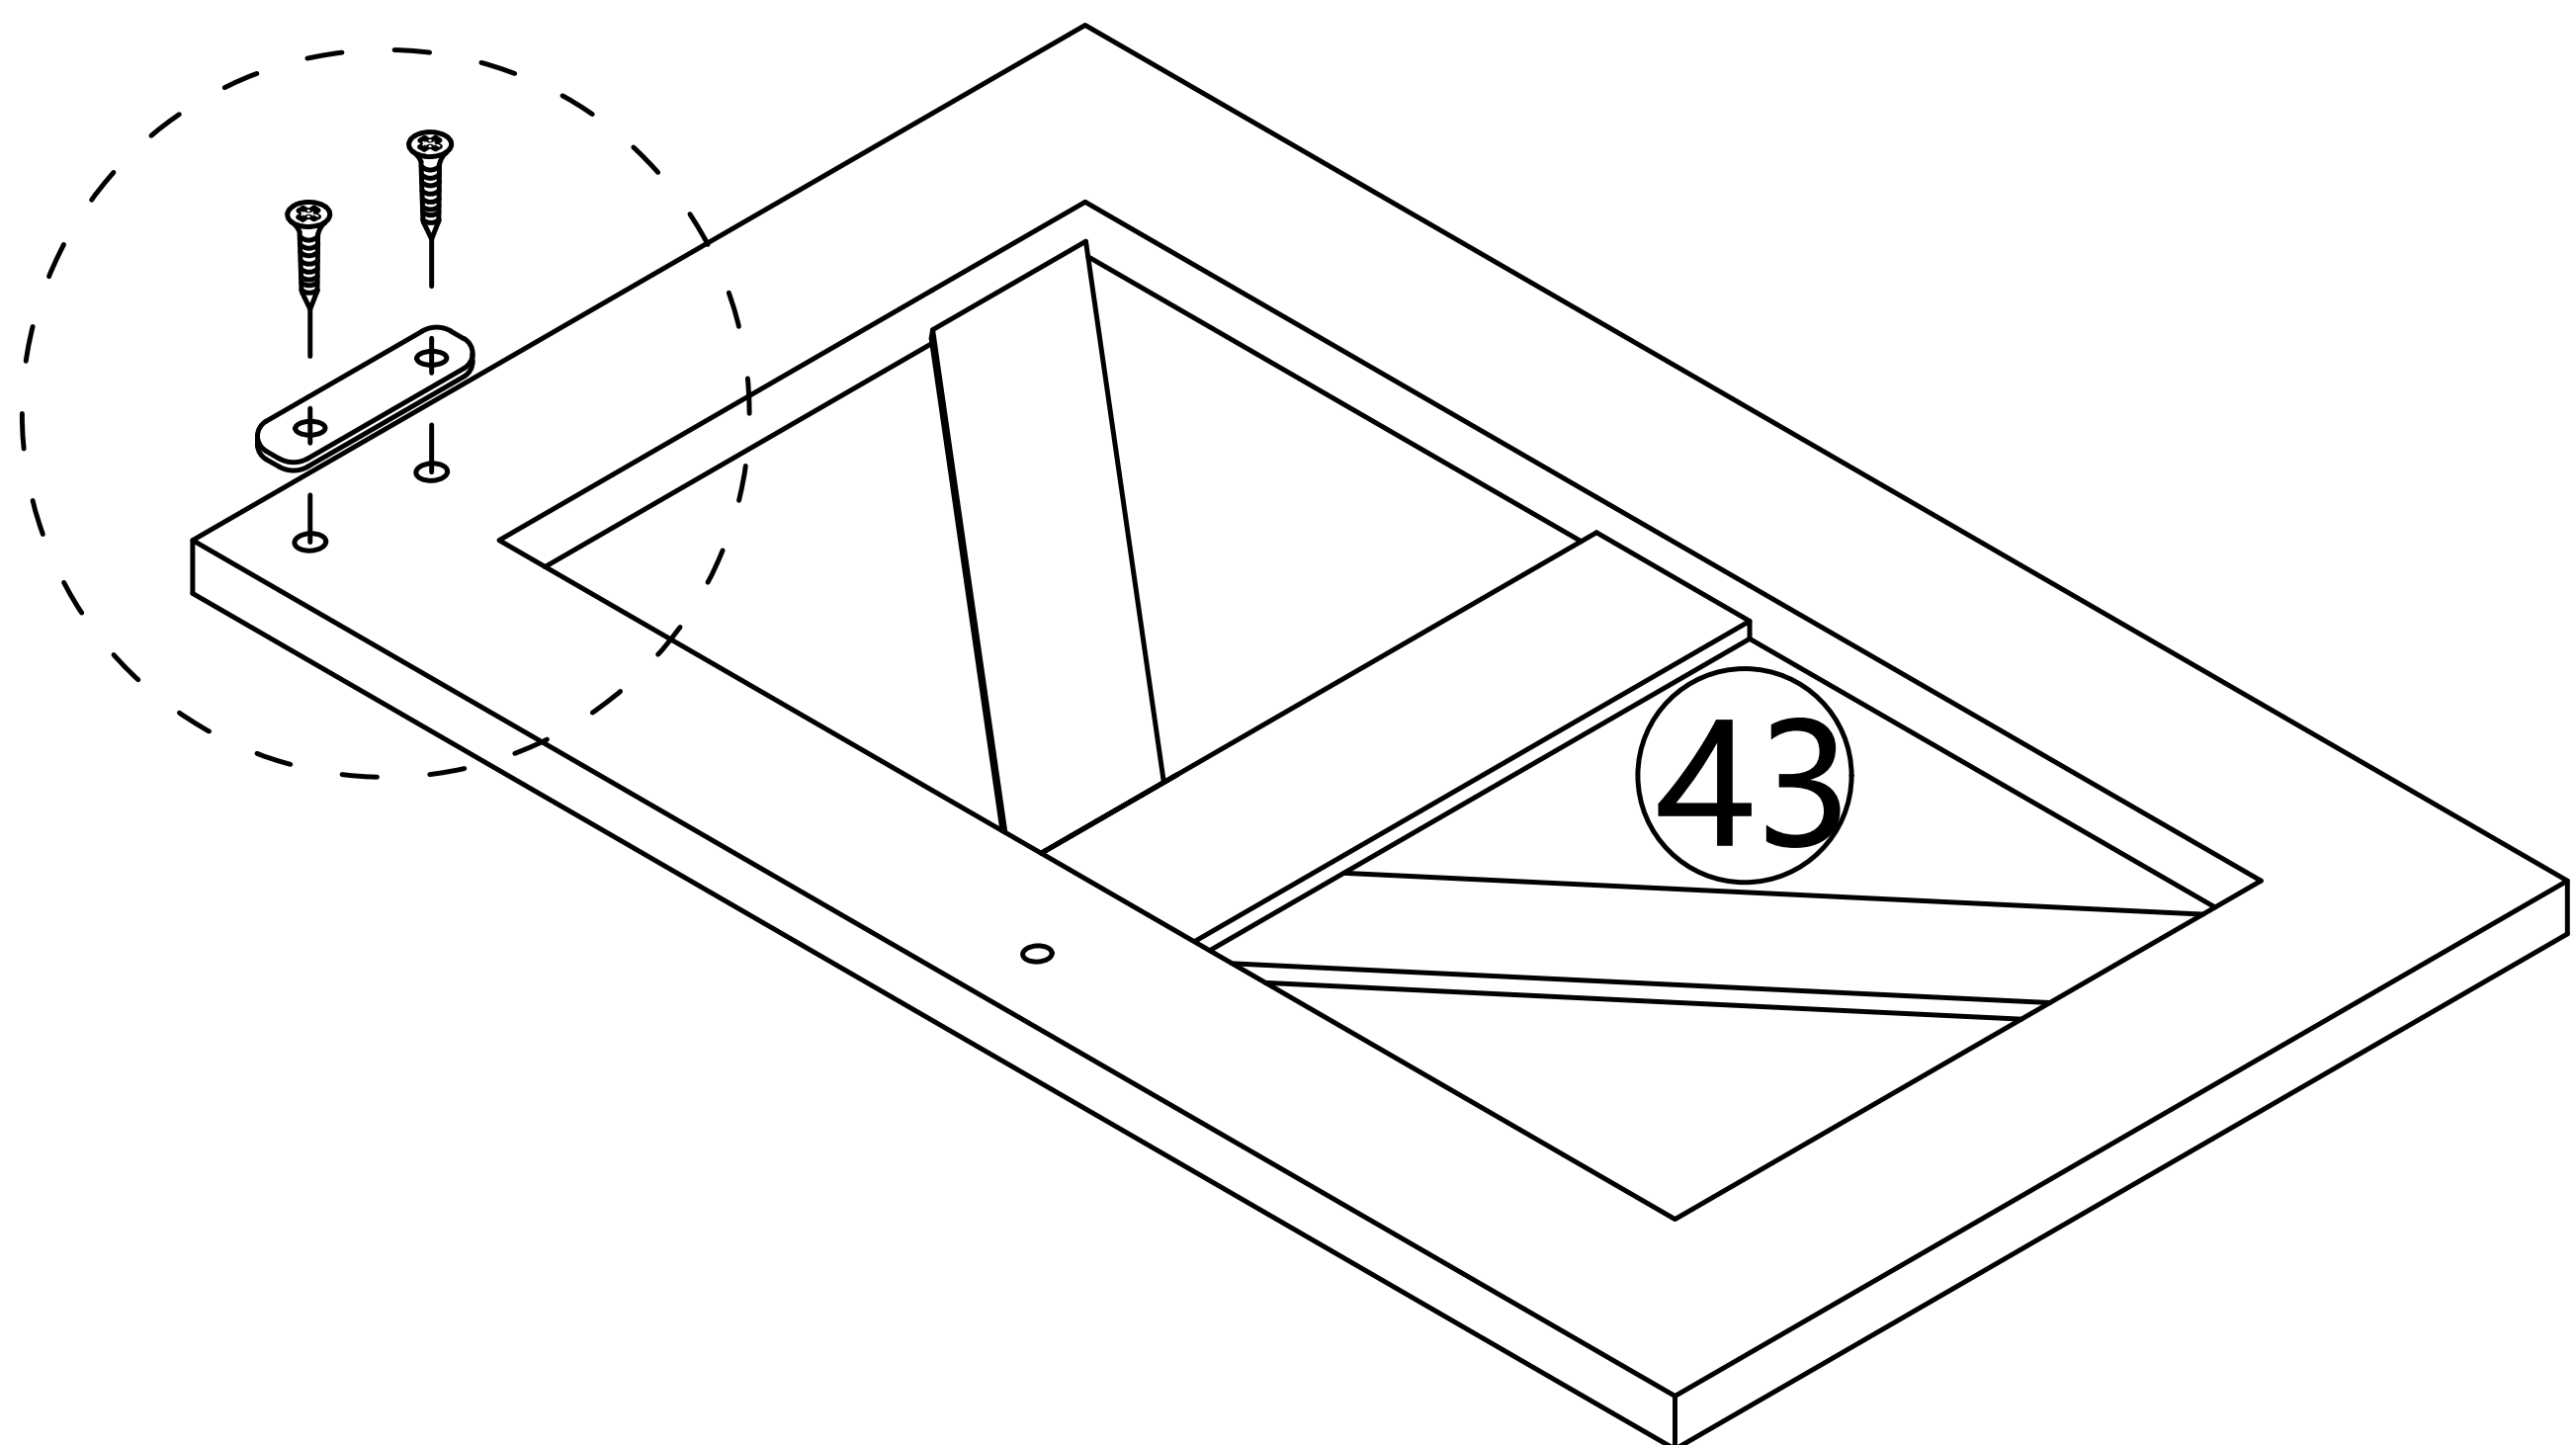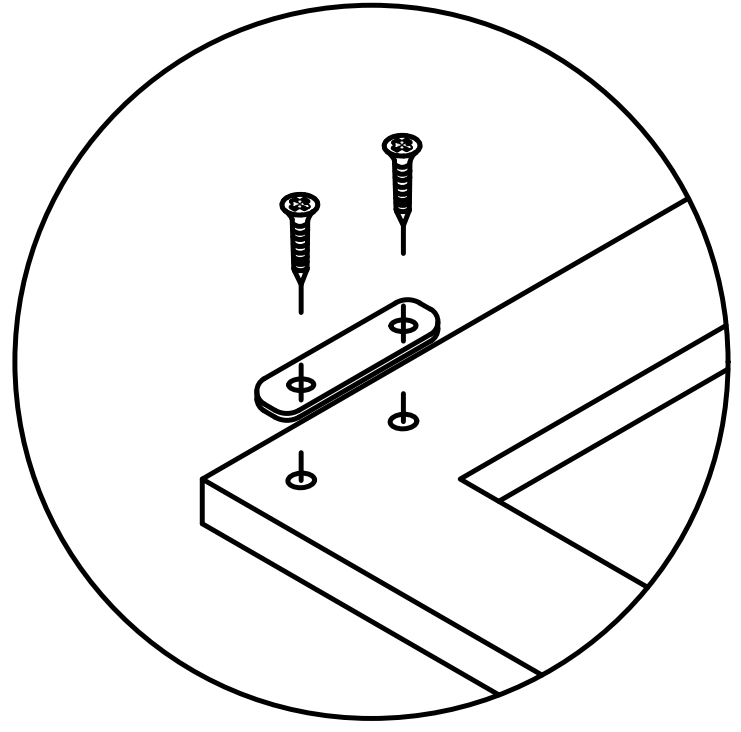




Step 72


N



x8


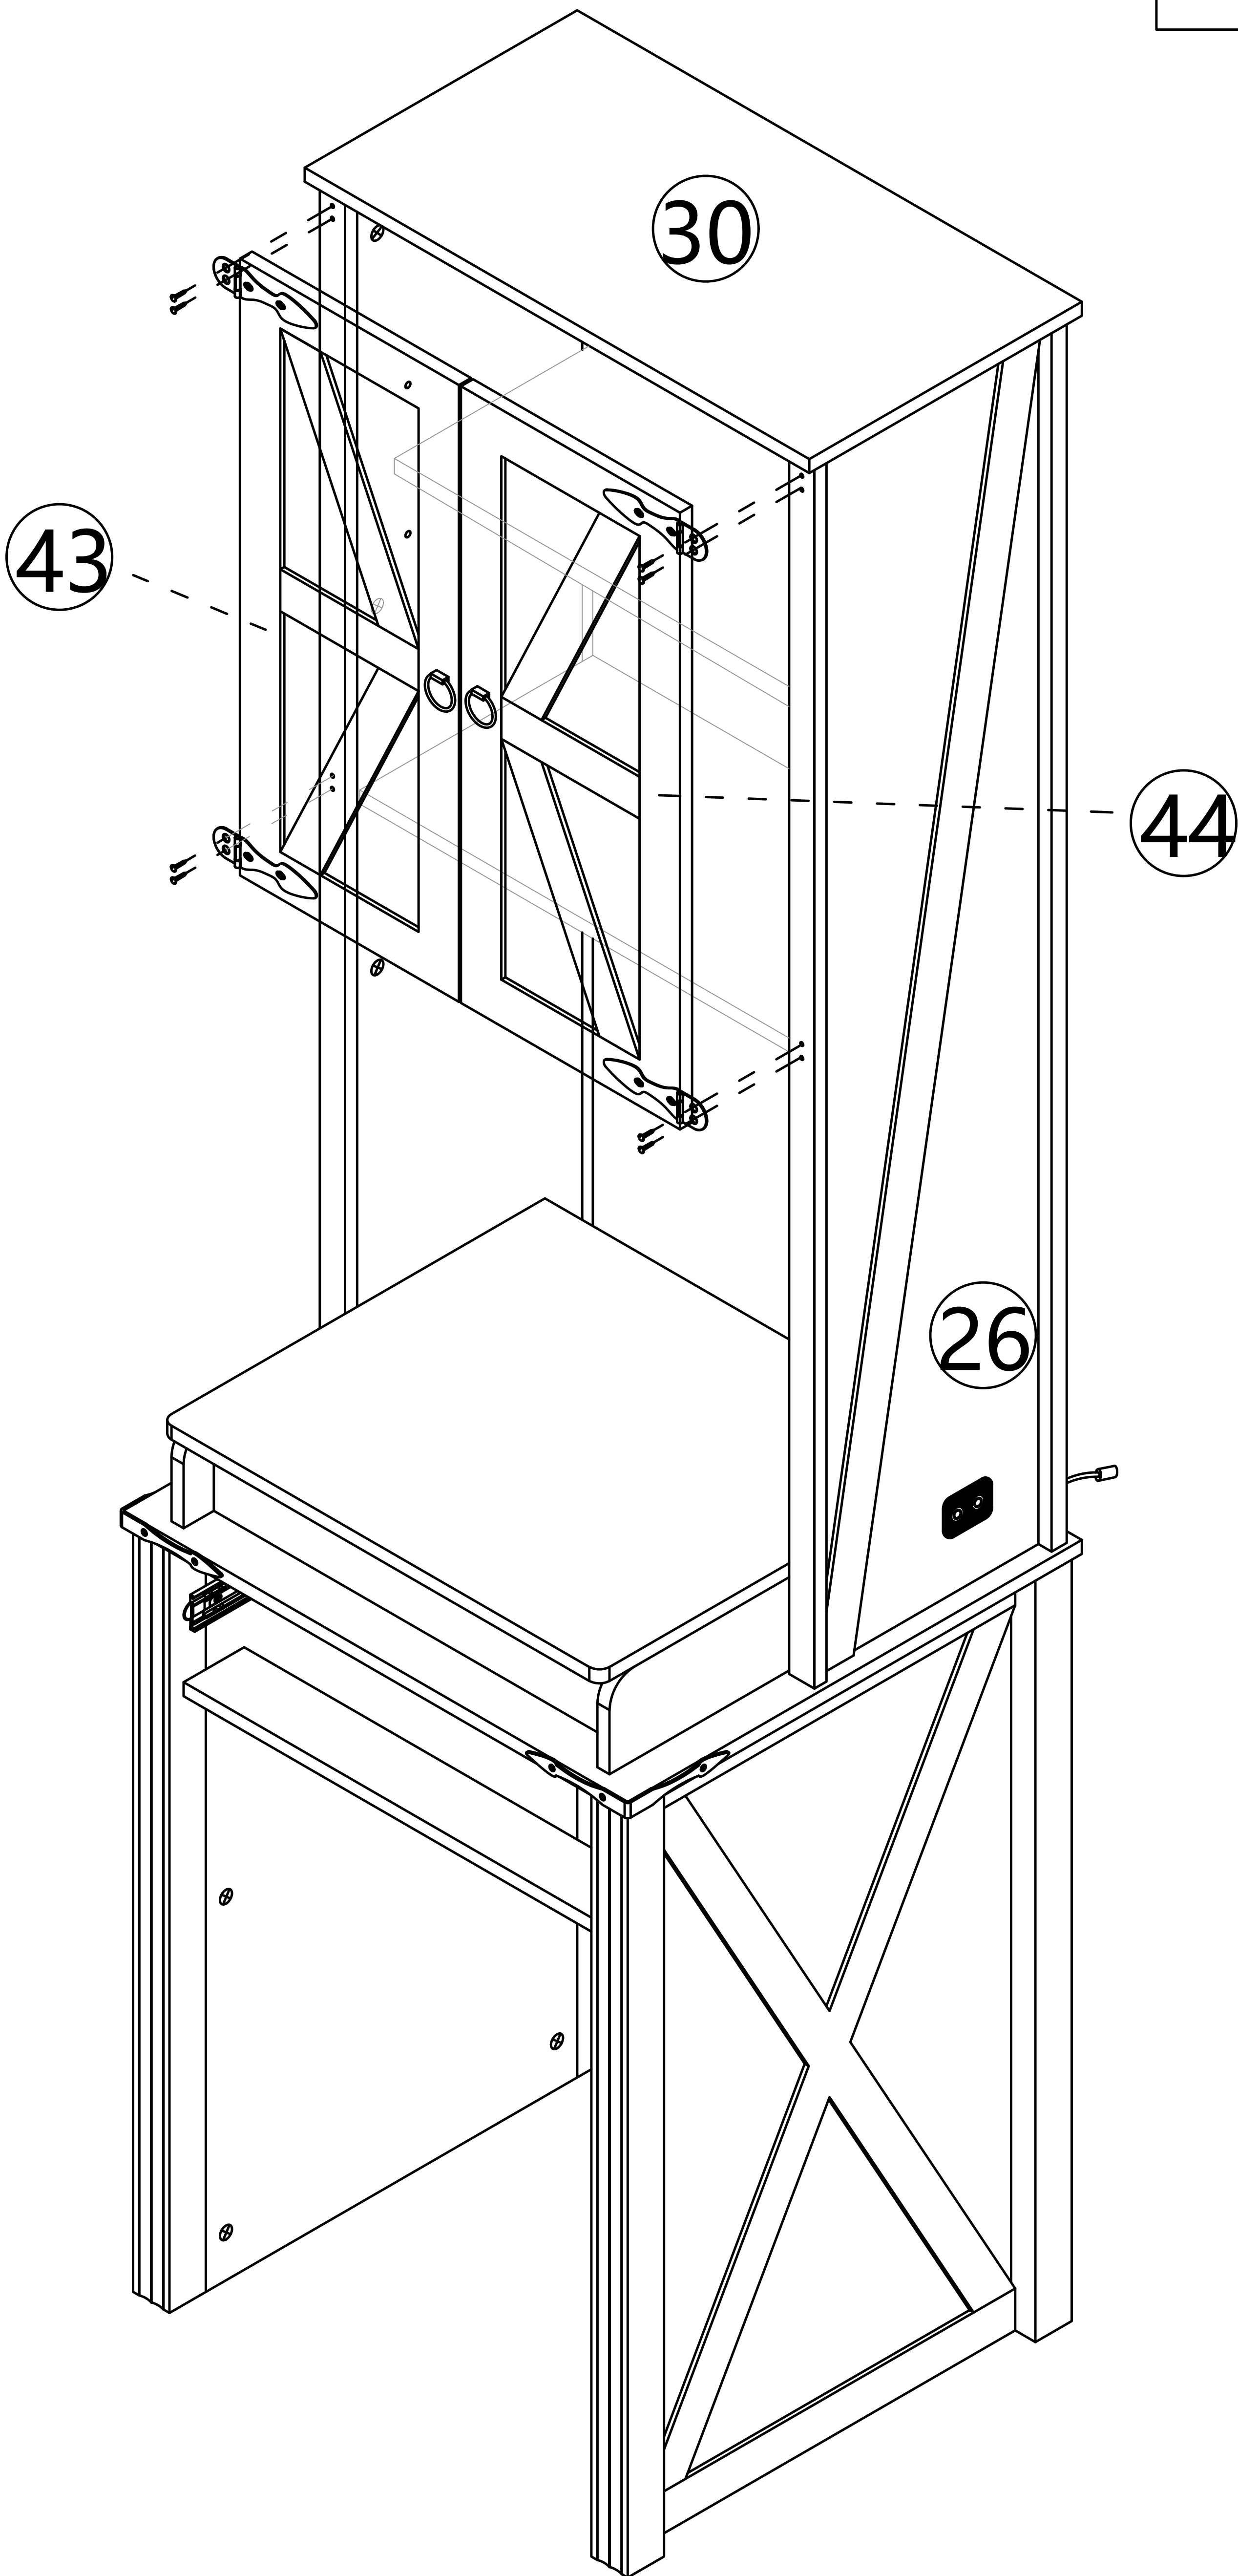


## Step 73

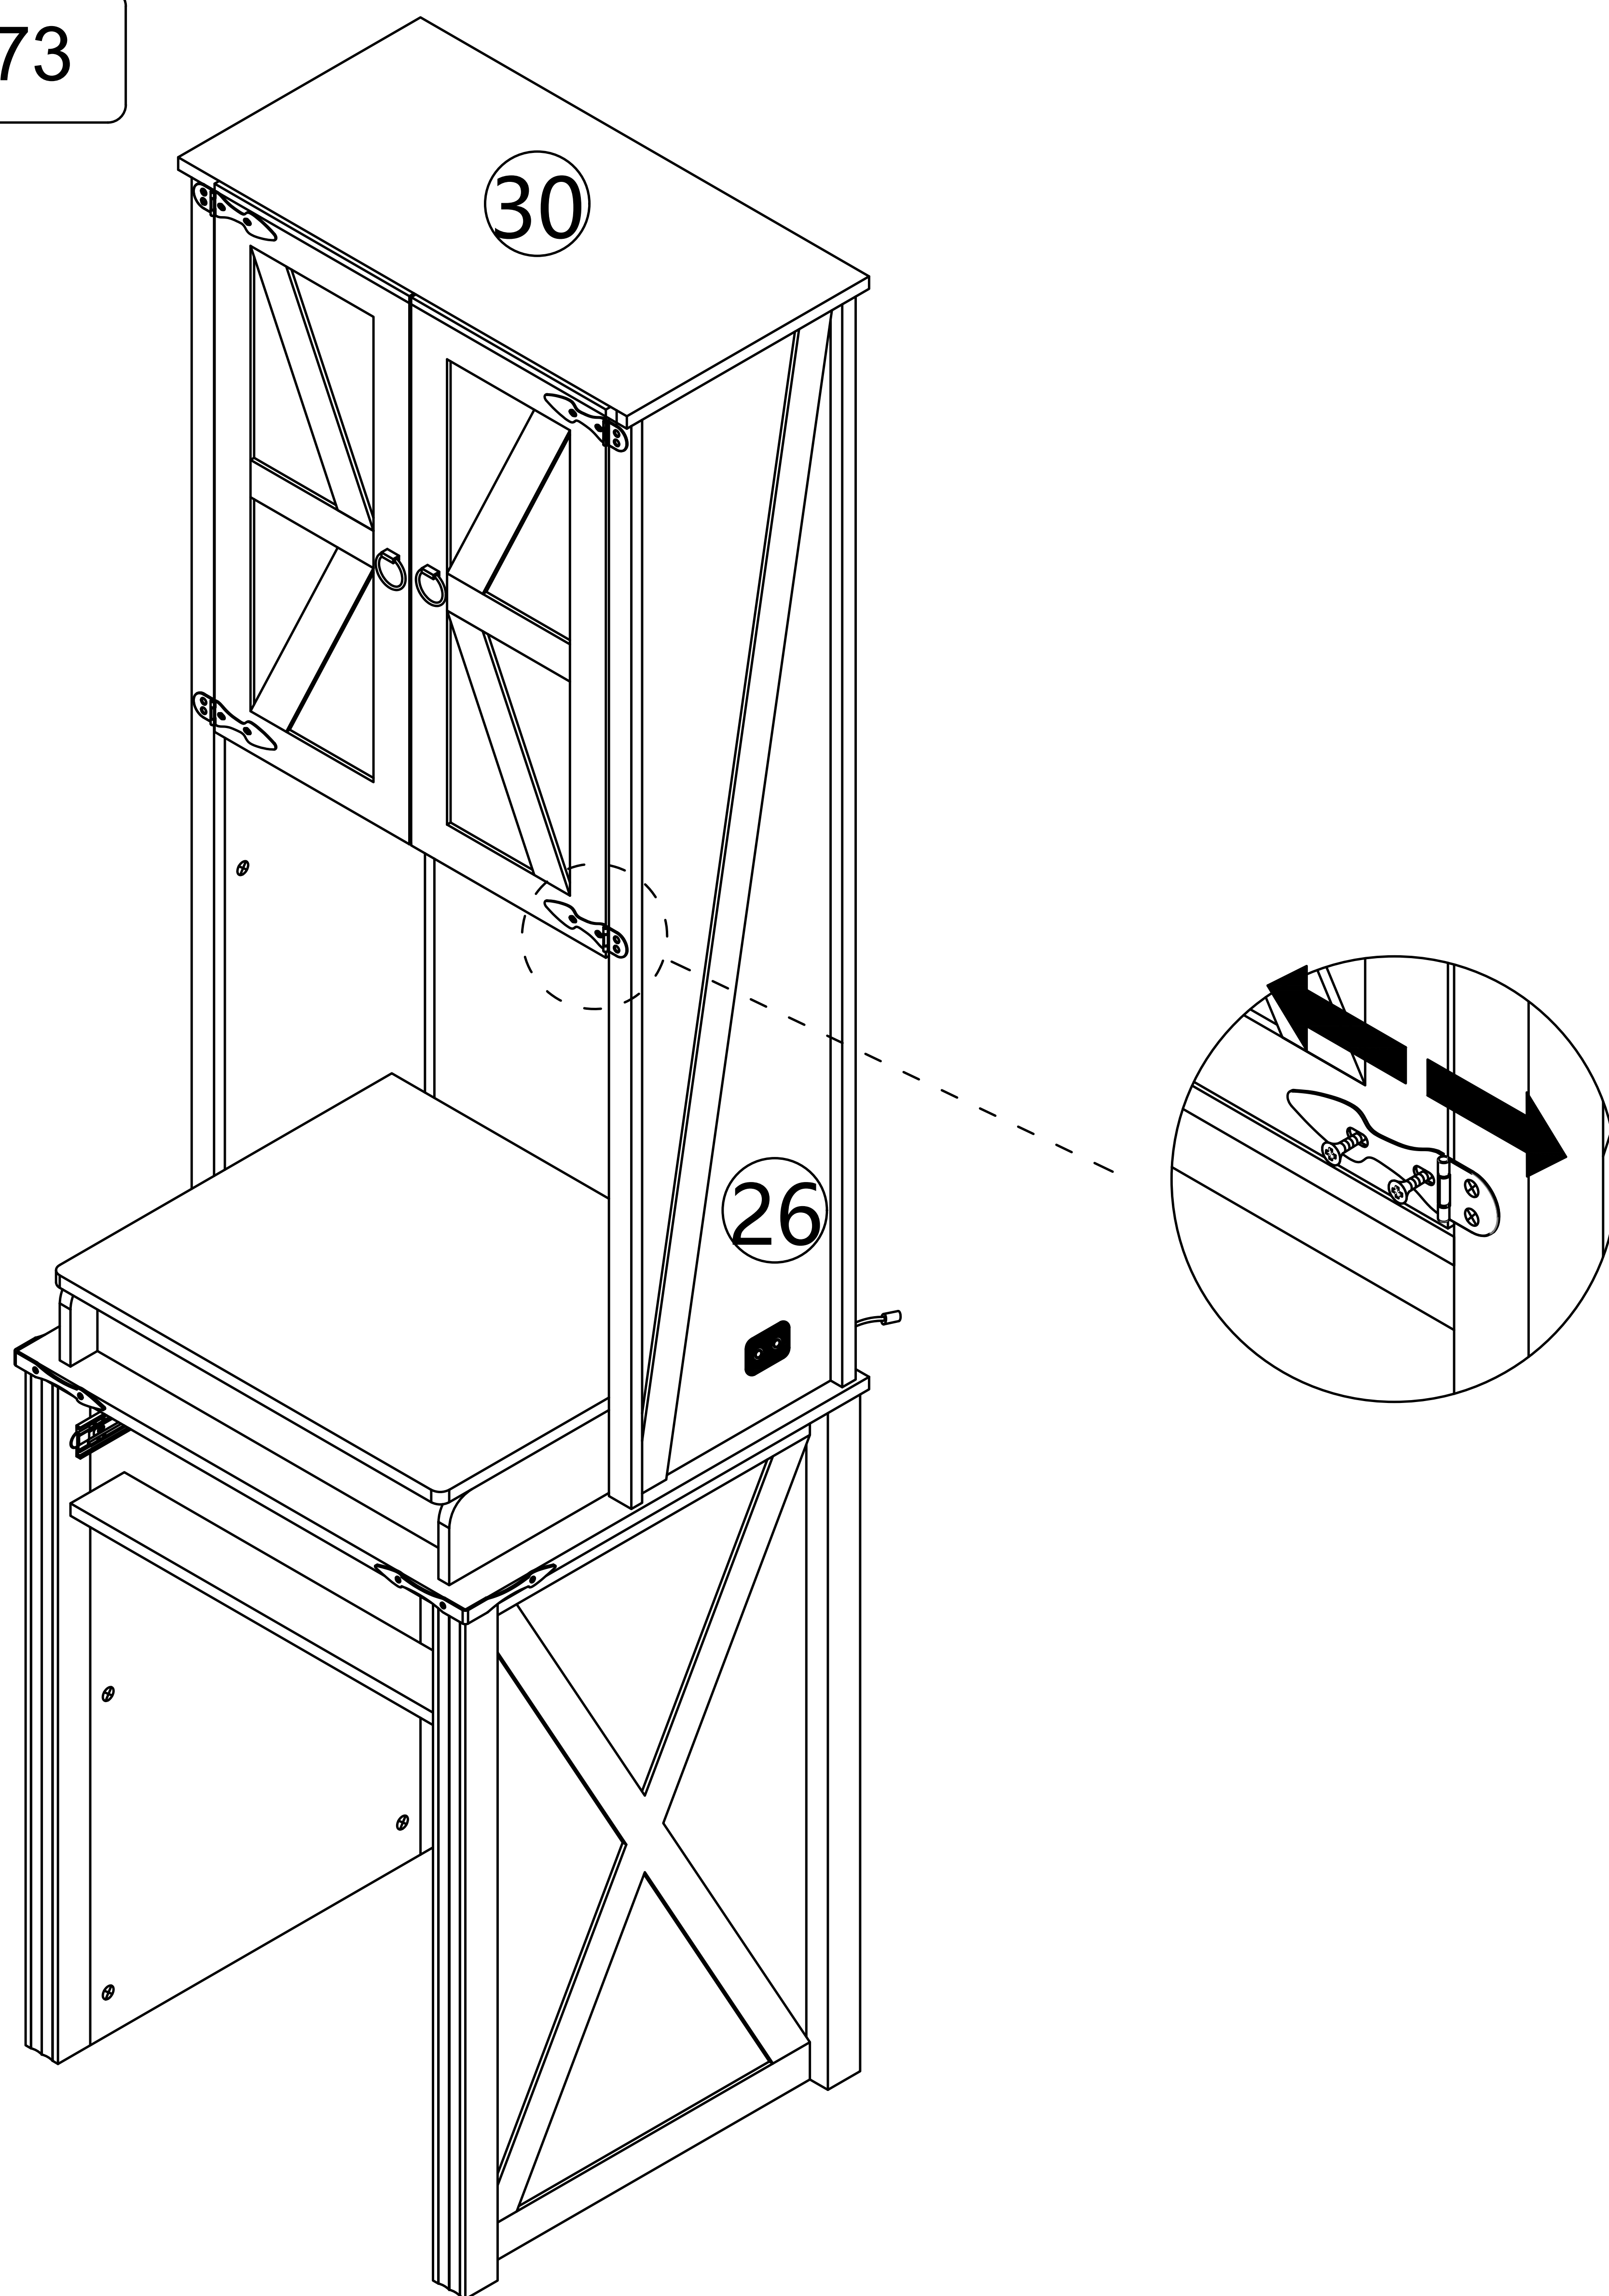

If there is a large gap after the installation of the door, please twist the screw of the door hinge back halfway and move the door left and right.


## Step 74

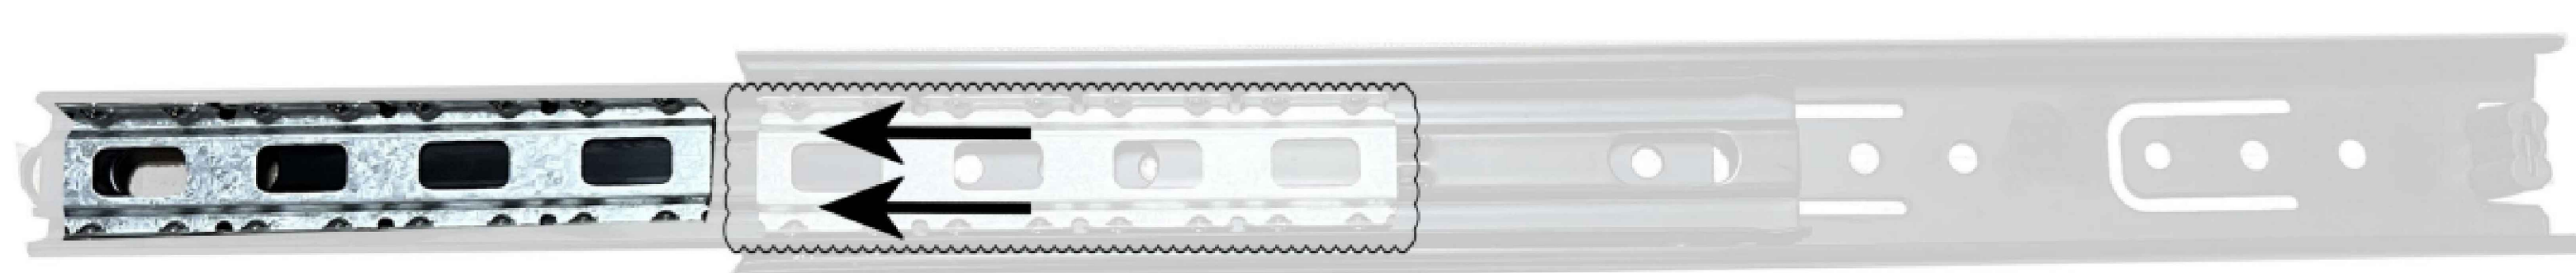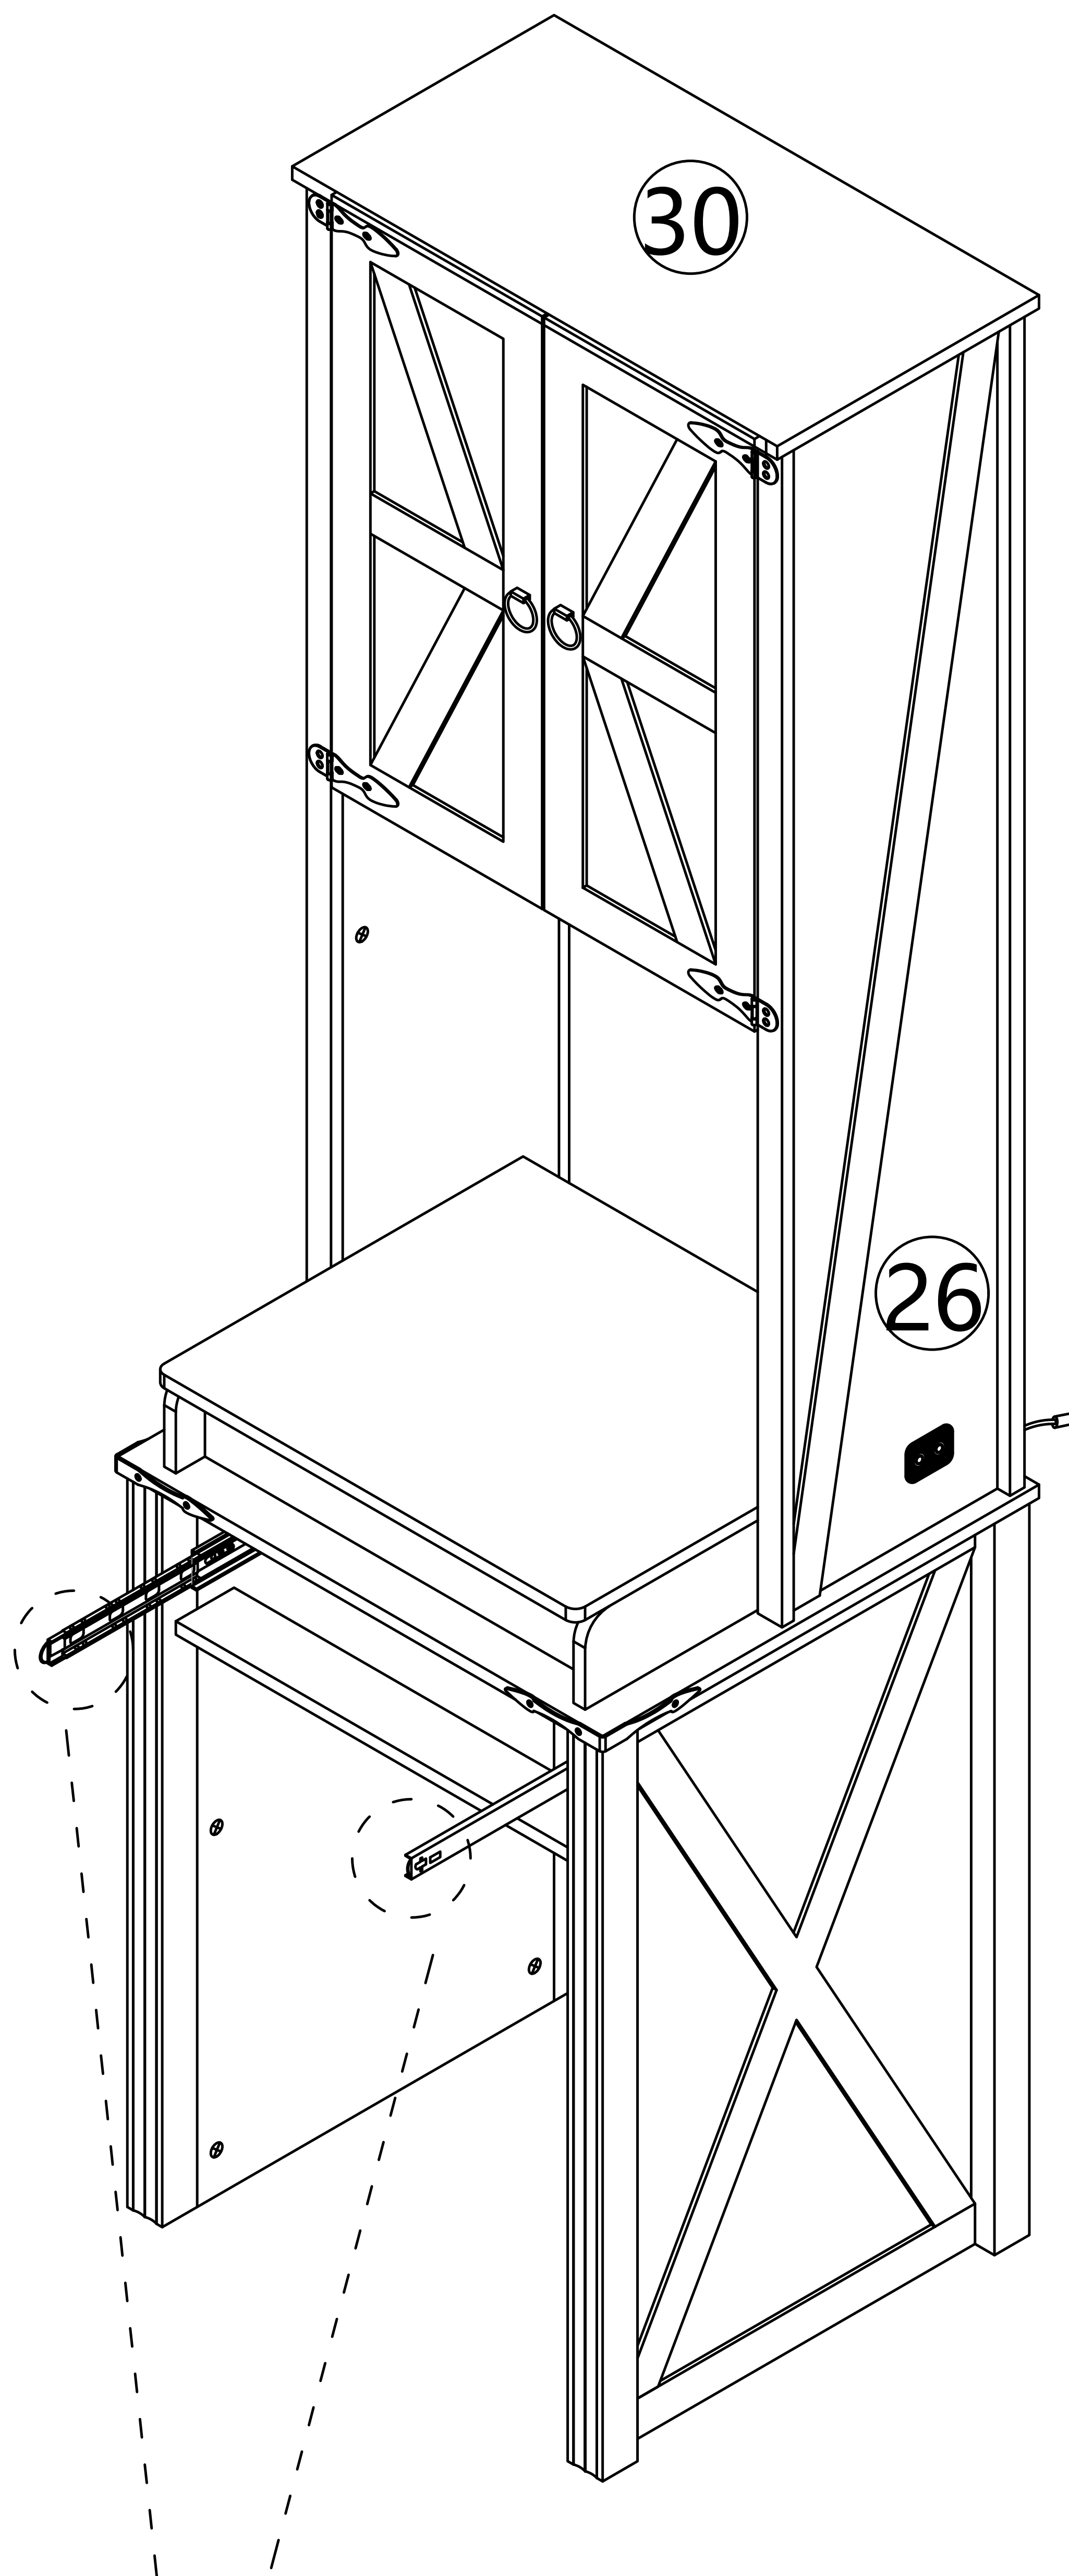

As shown, When installing the drawer,  
pull the guide rail out first, Slide beads are also pulled out.




## Step 75

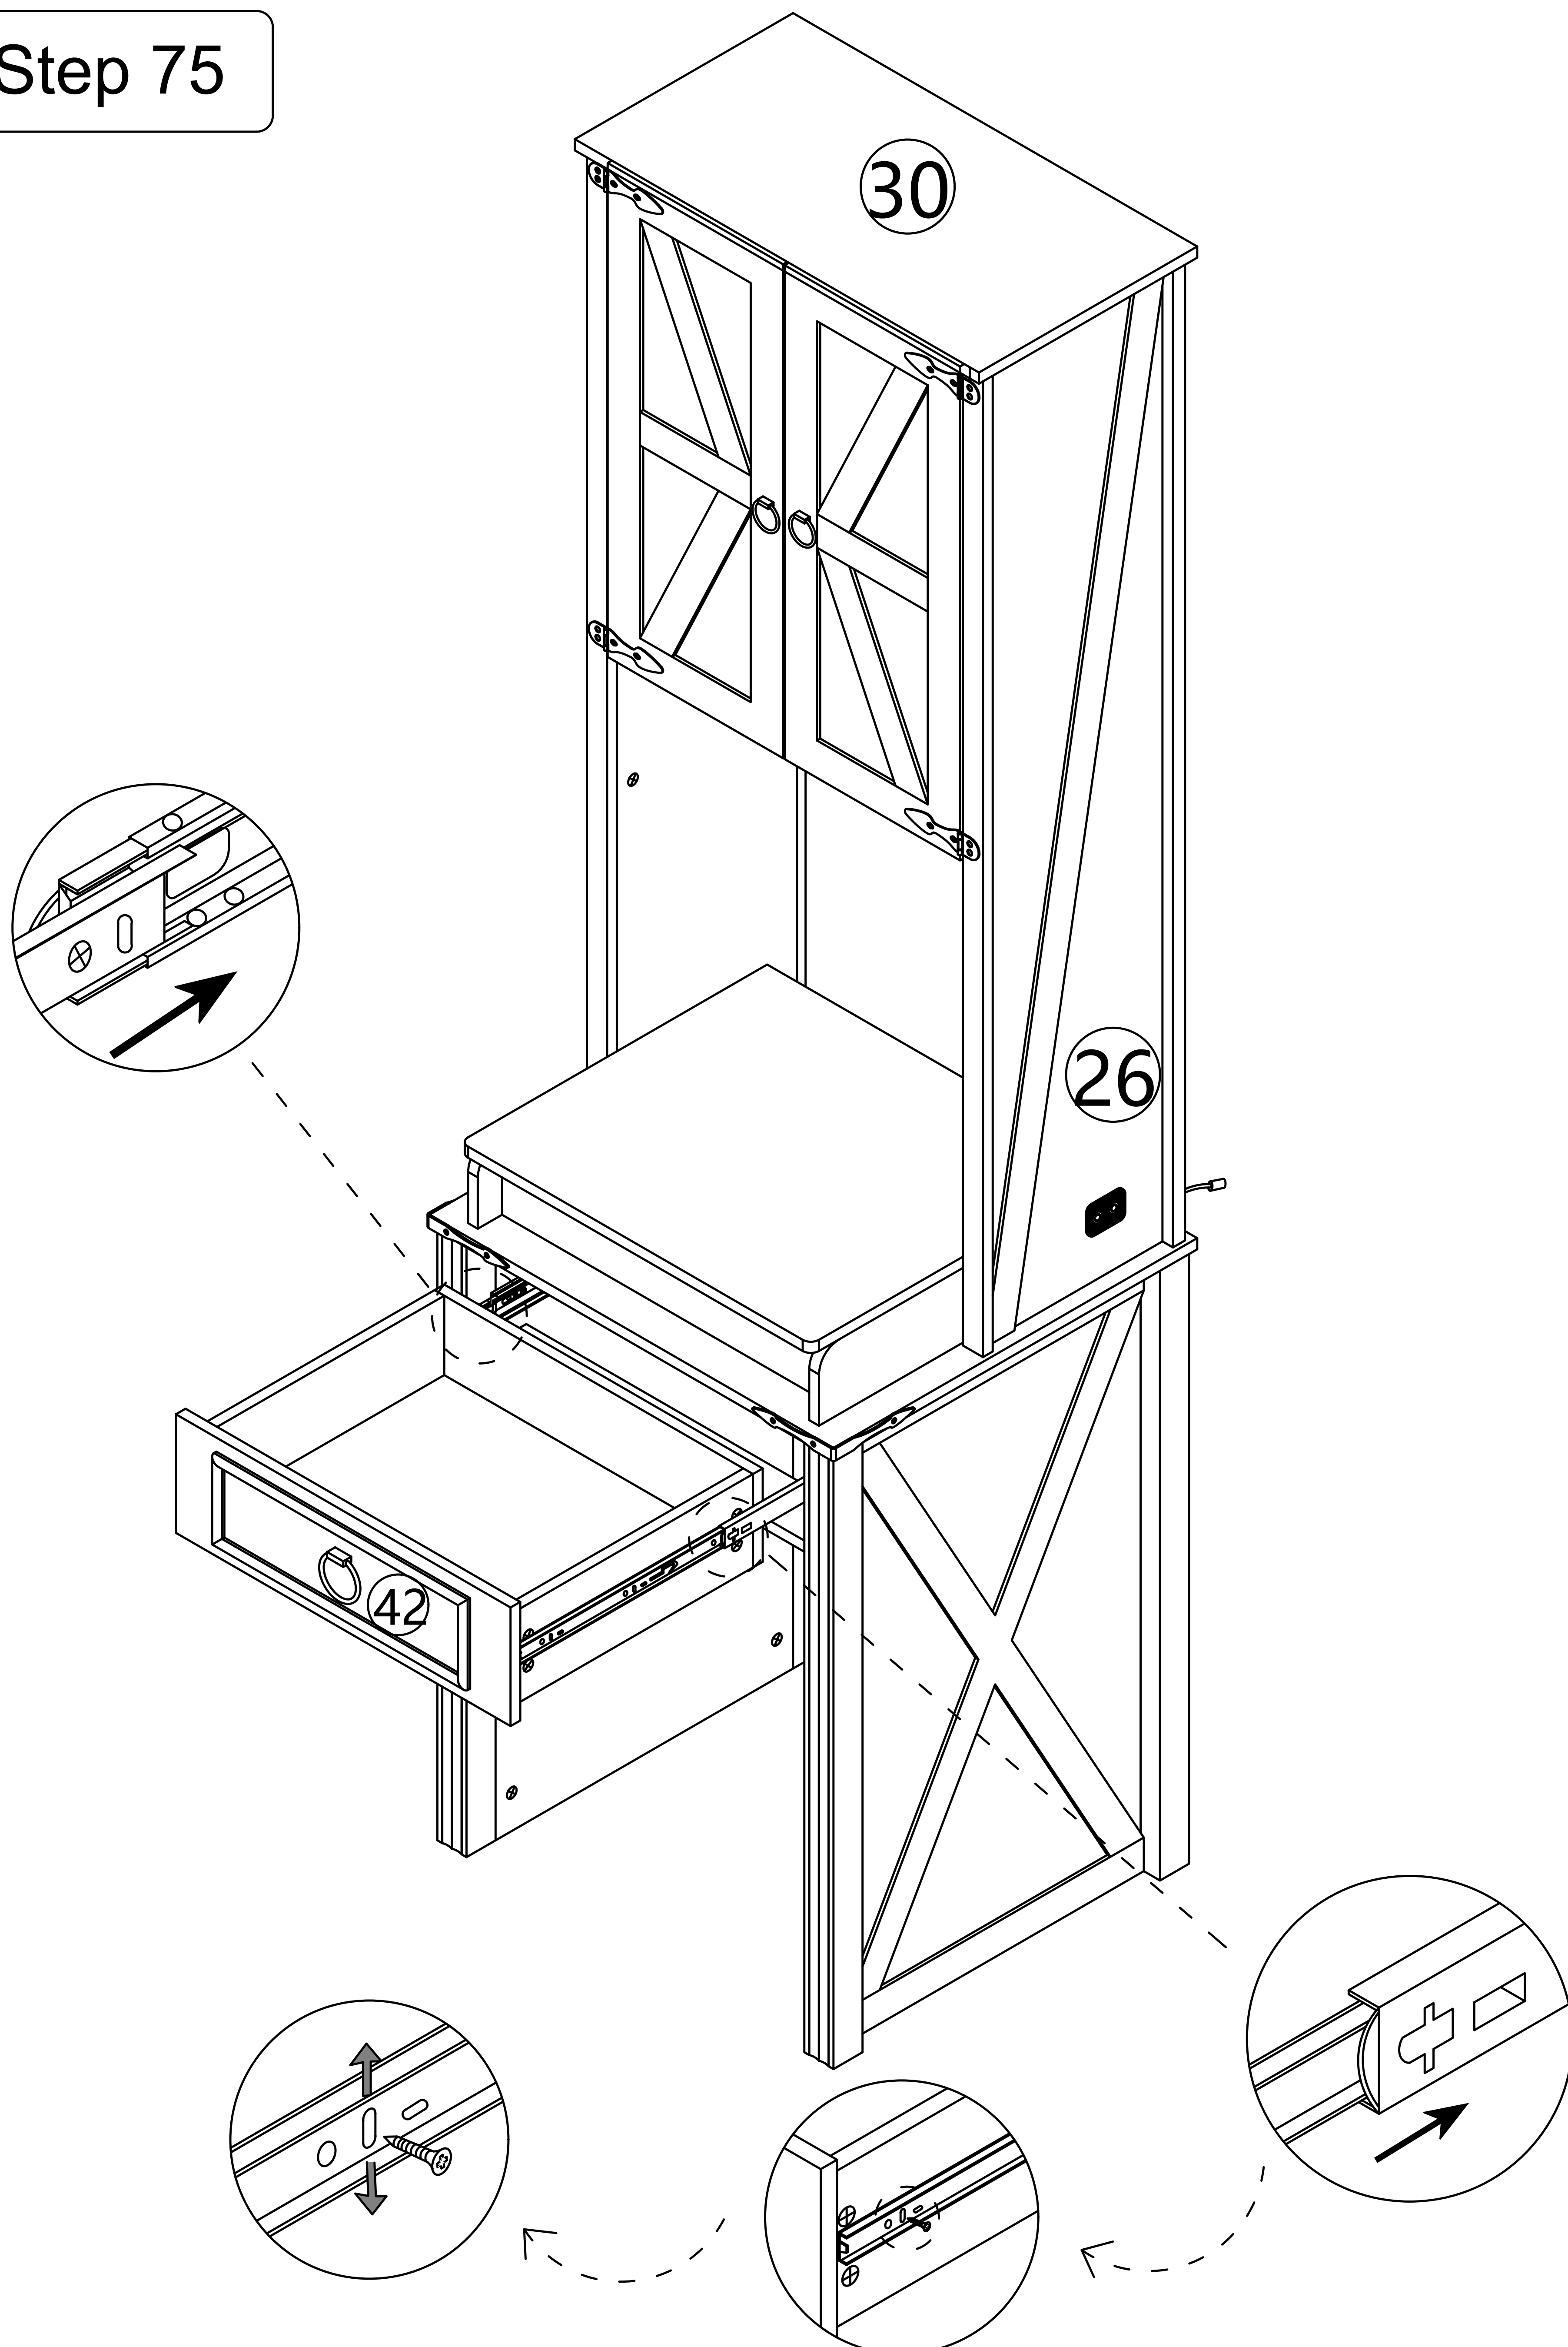


If a large gap is found after installing the drawer the slide rail can be moved up and down to adjust the gap

Step 76

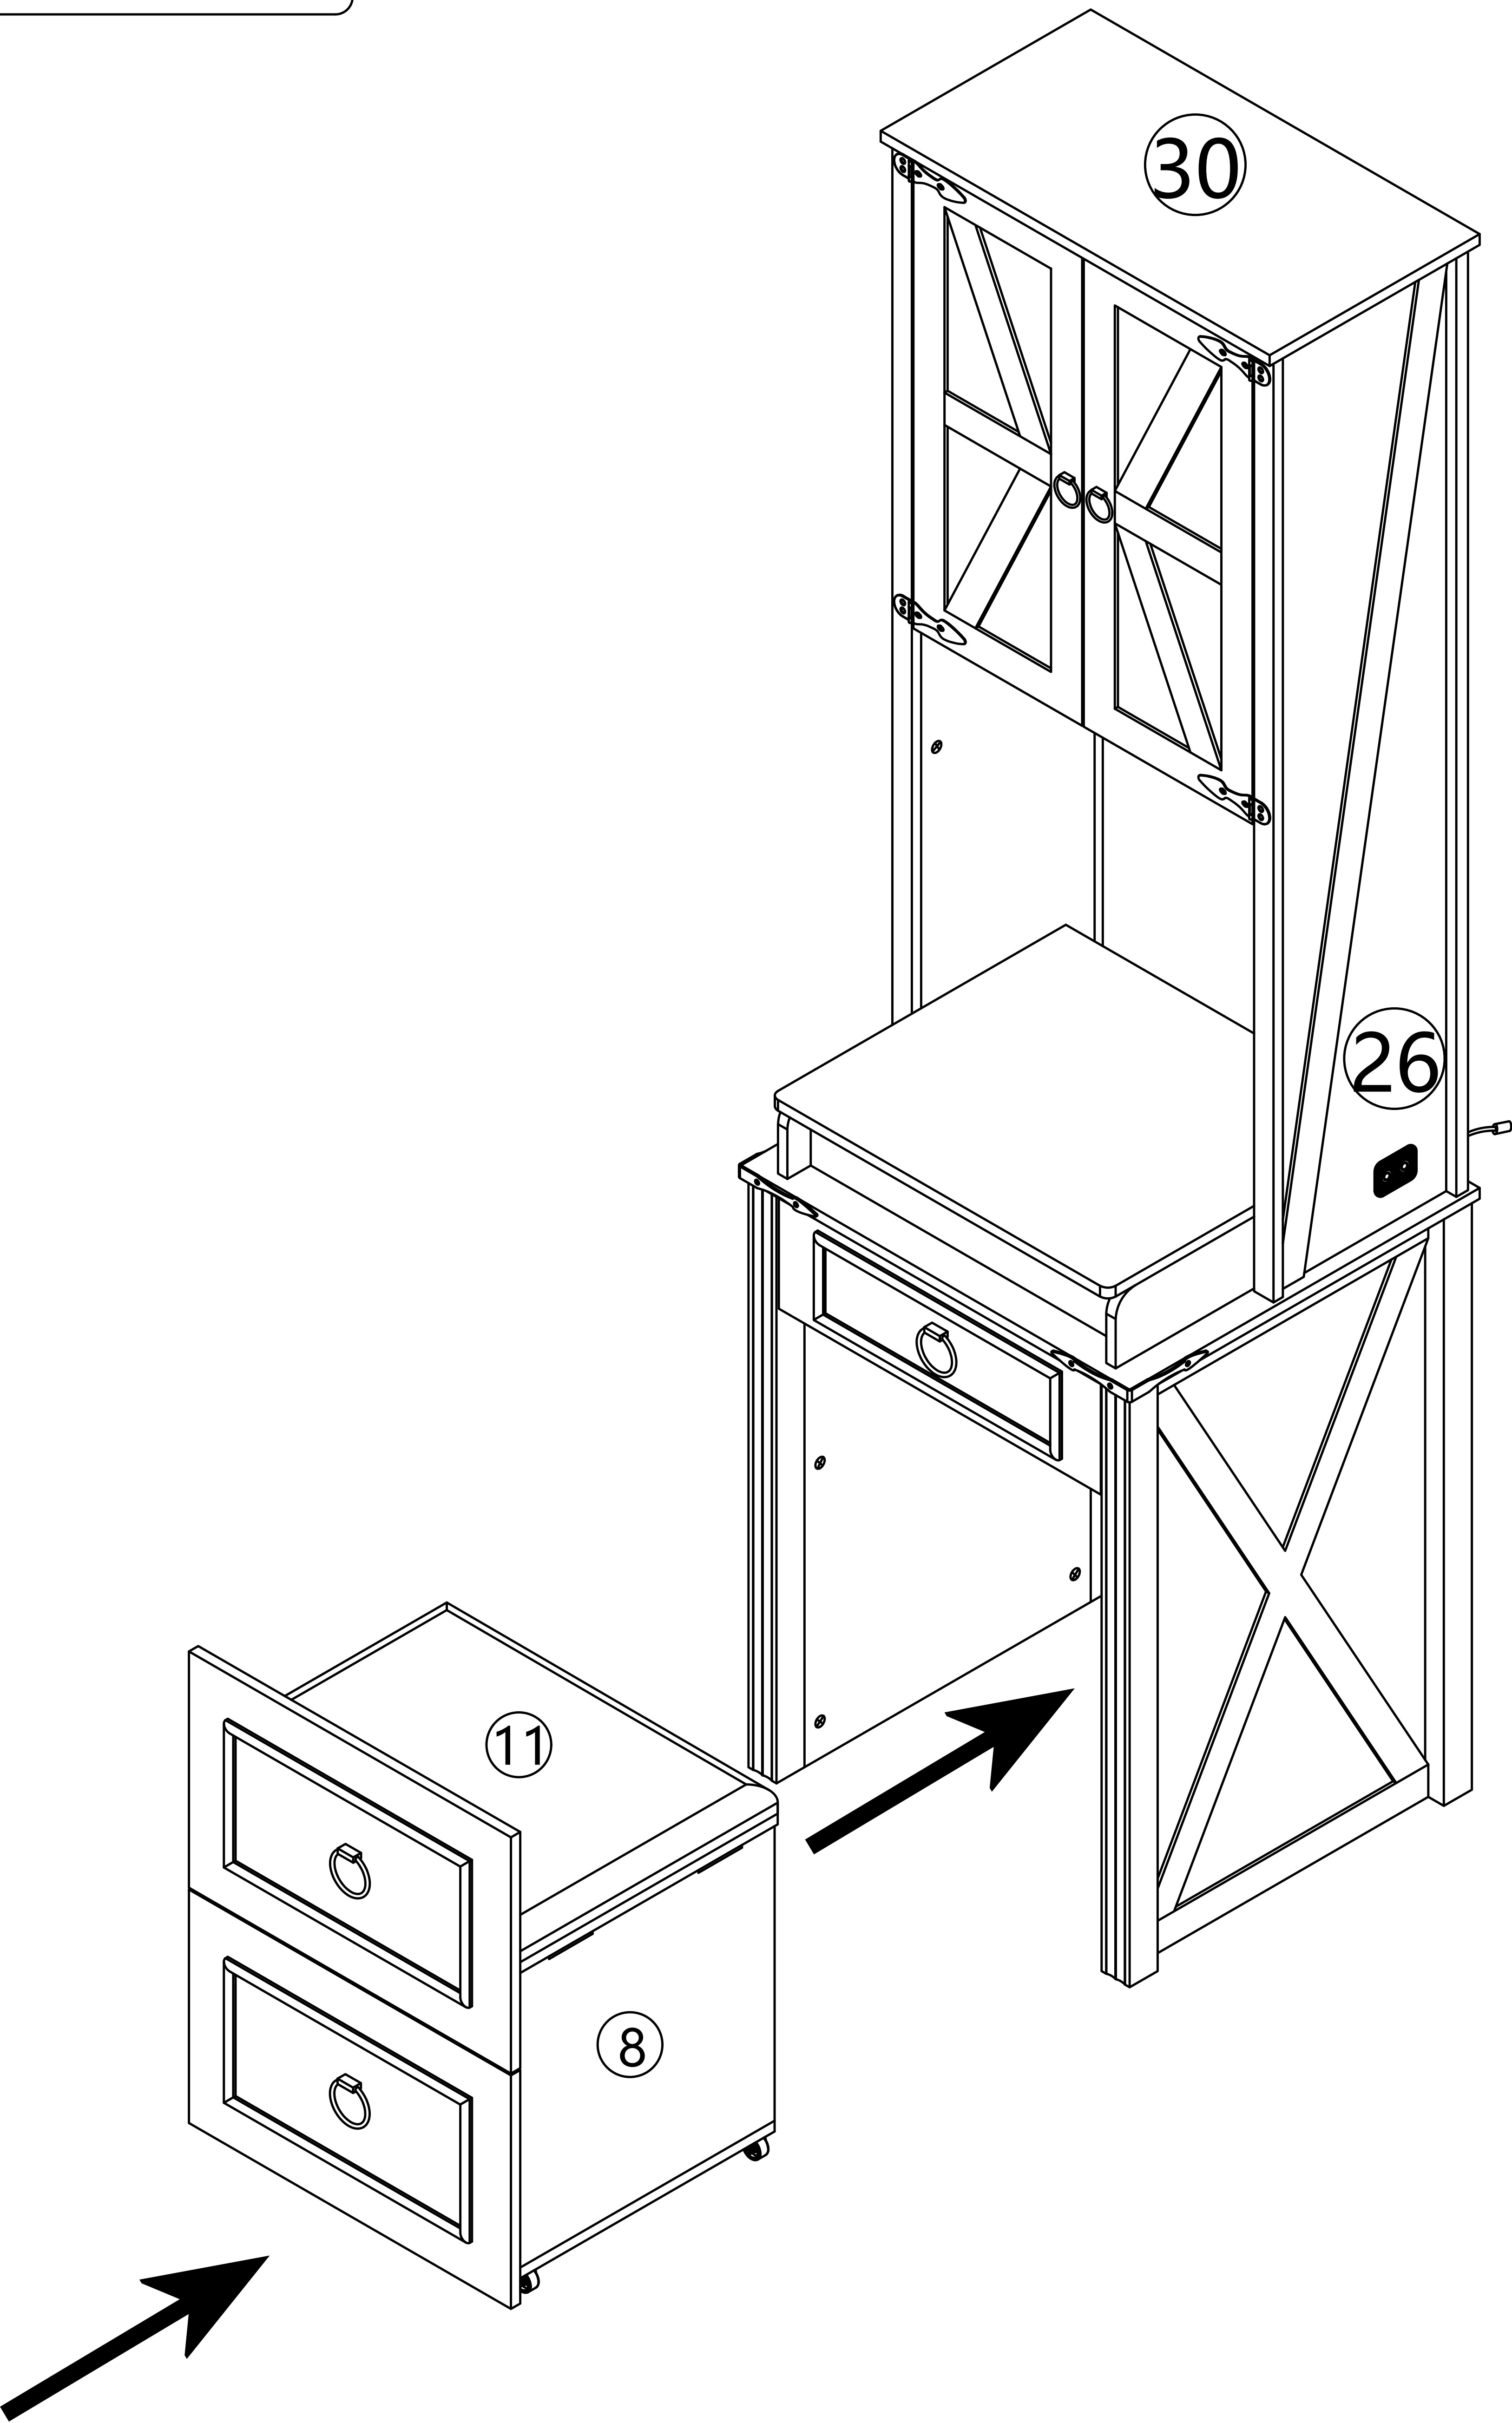




## Step 77

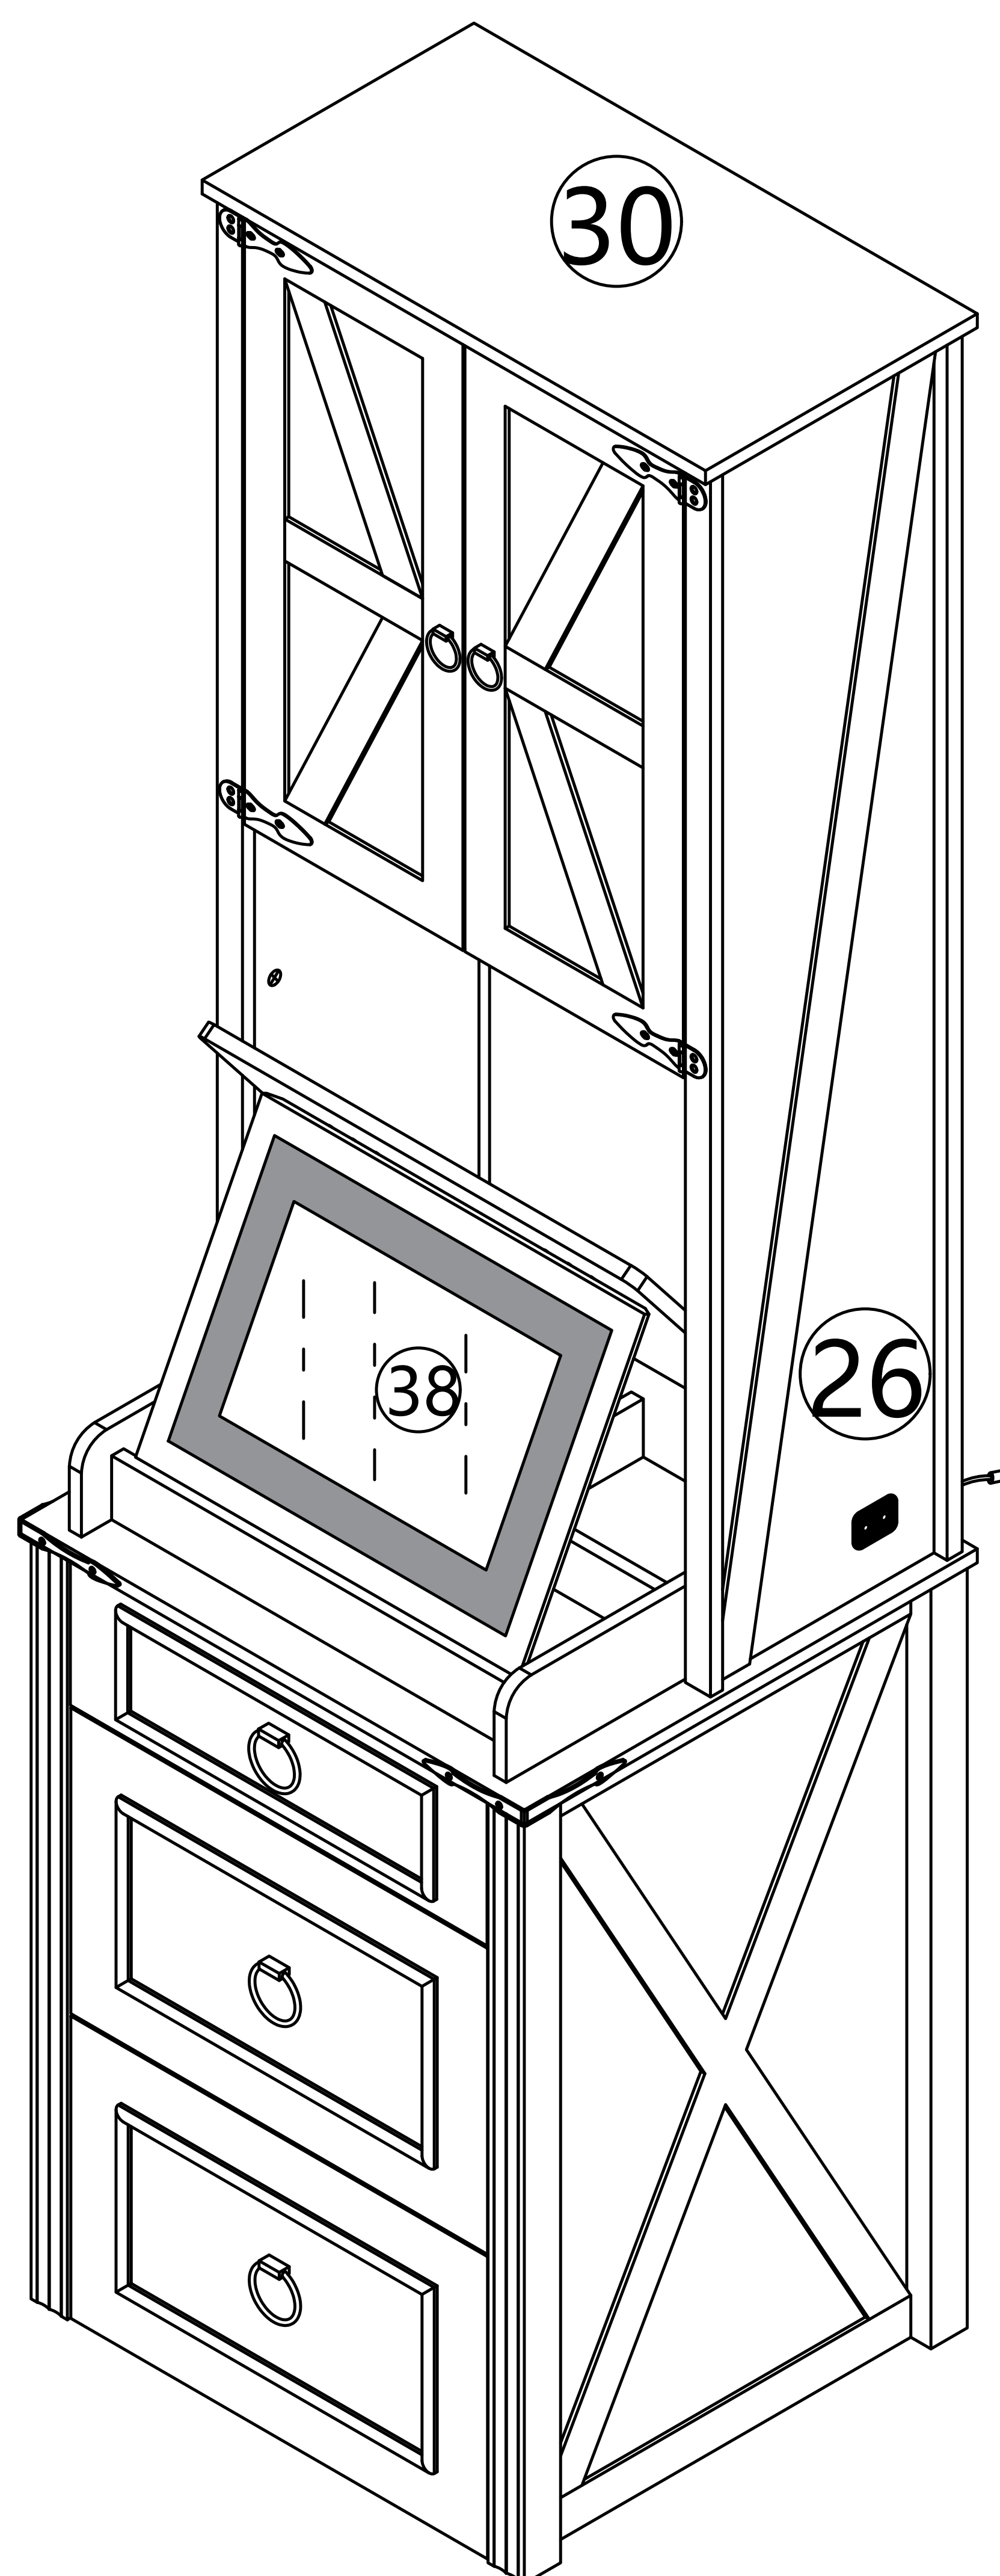

Attention: Mirrors can be opened



Step 78

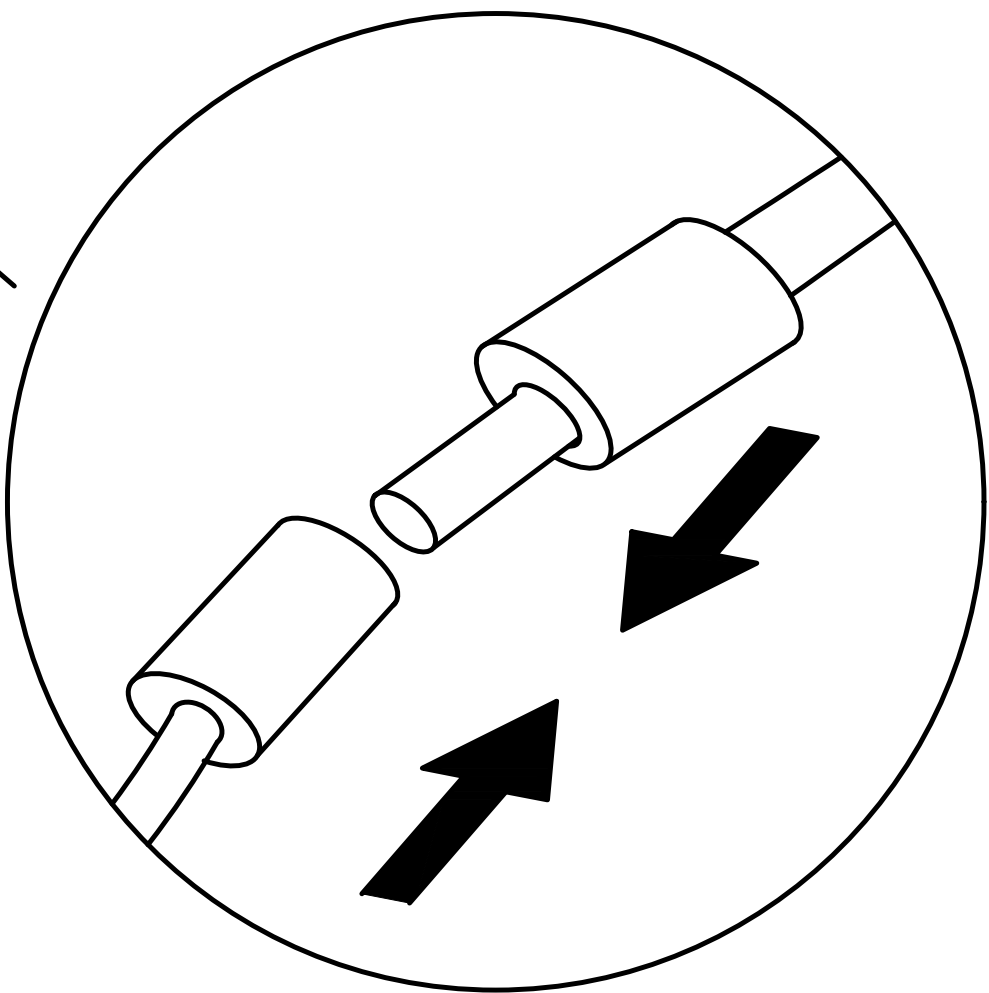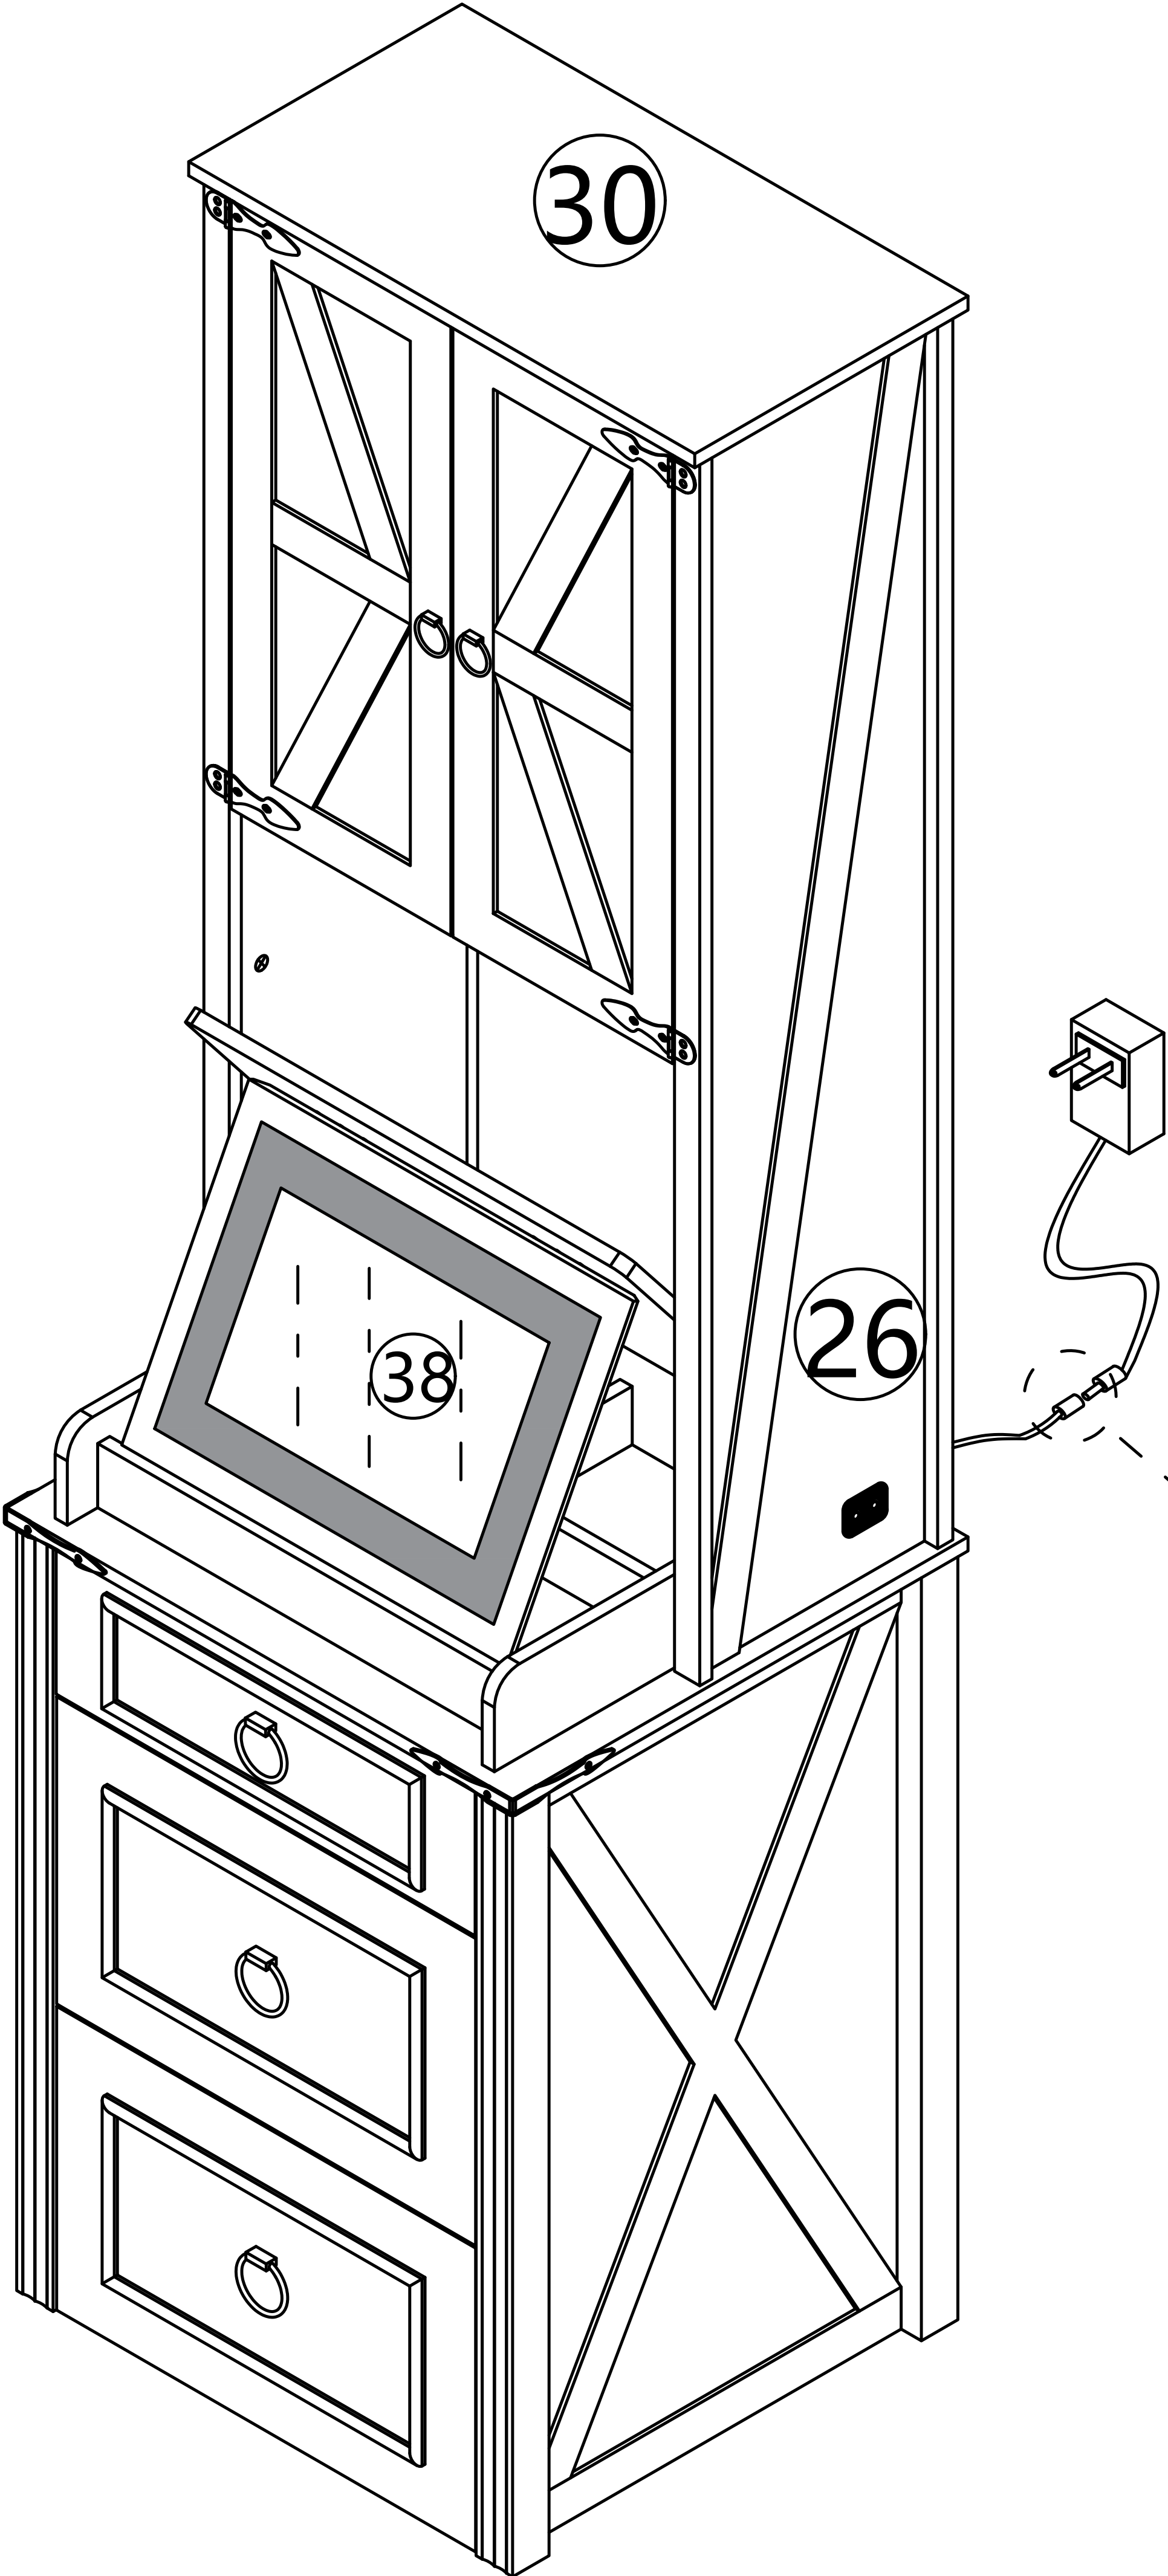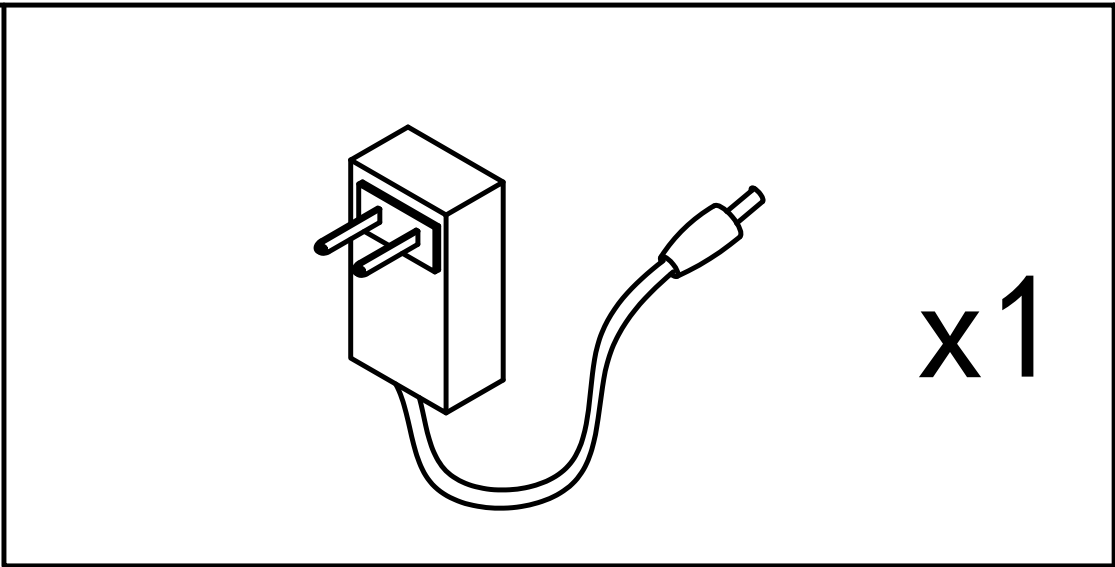

Step 79

Install as required


P

x2


x2

x2

3.5x14mm

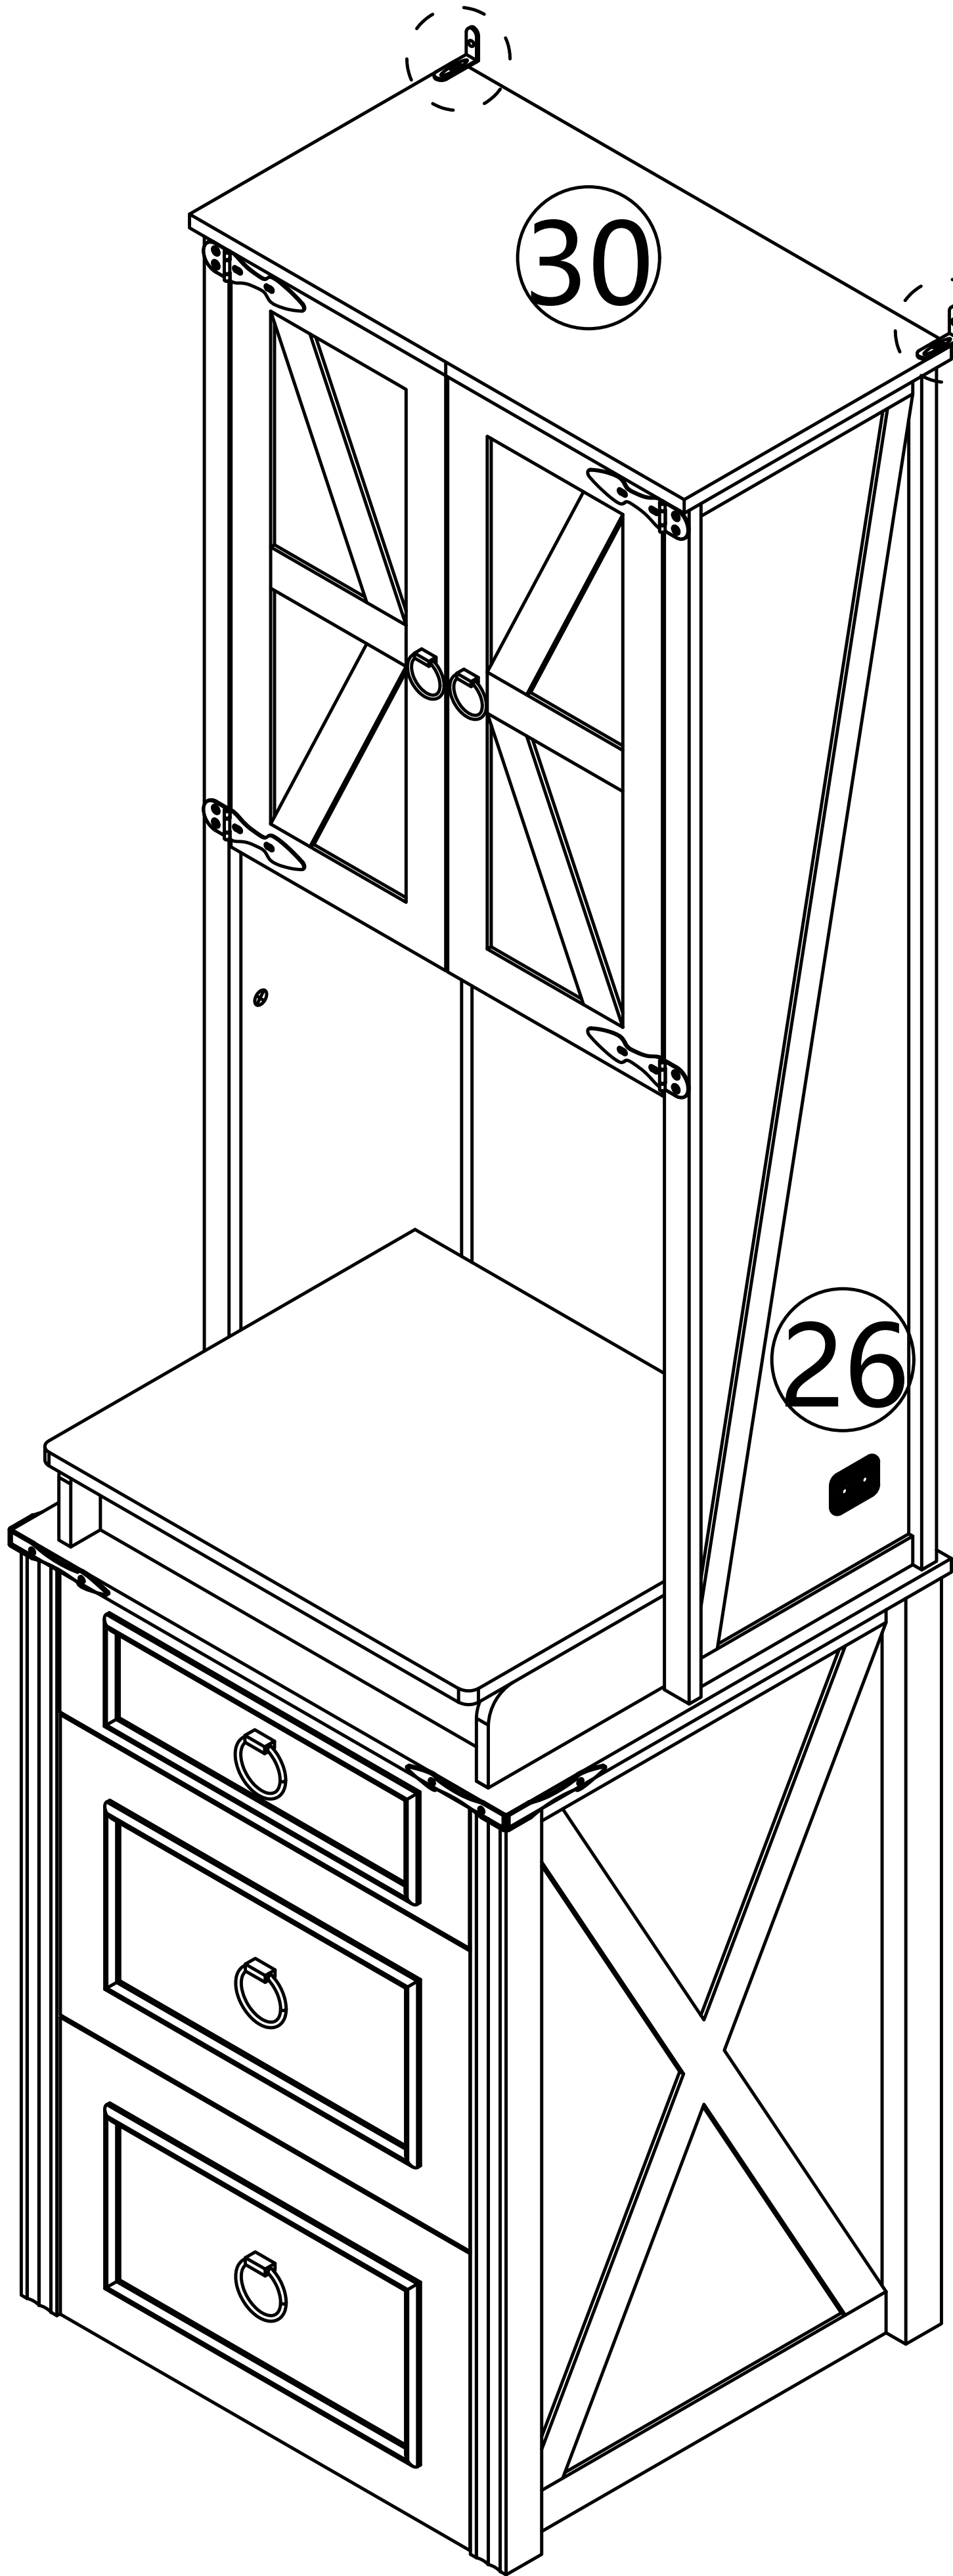




Install the anti fall hardware on the cabinet as shown in the picture first

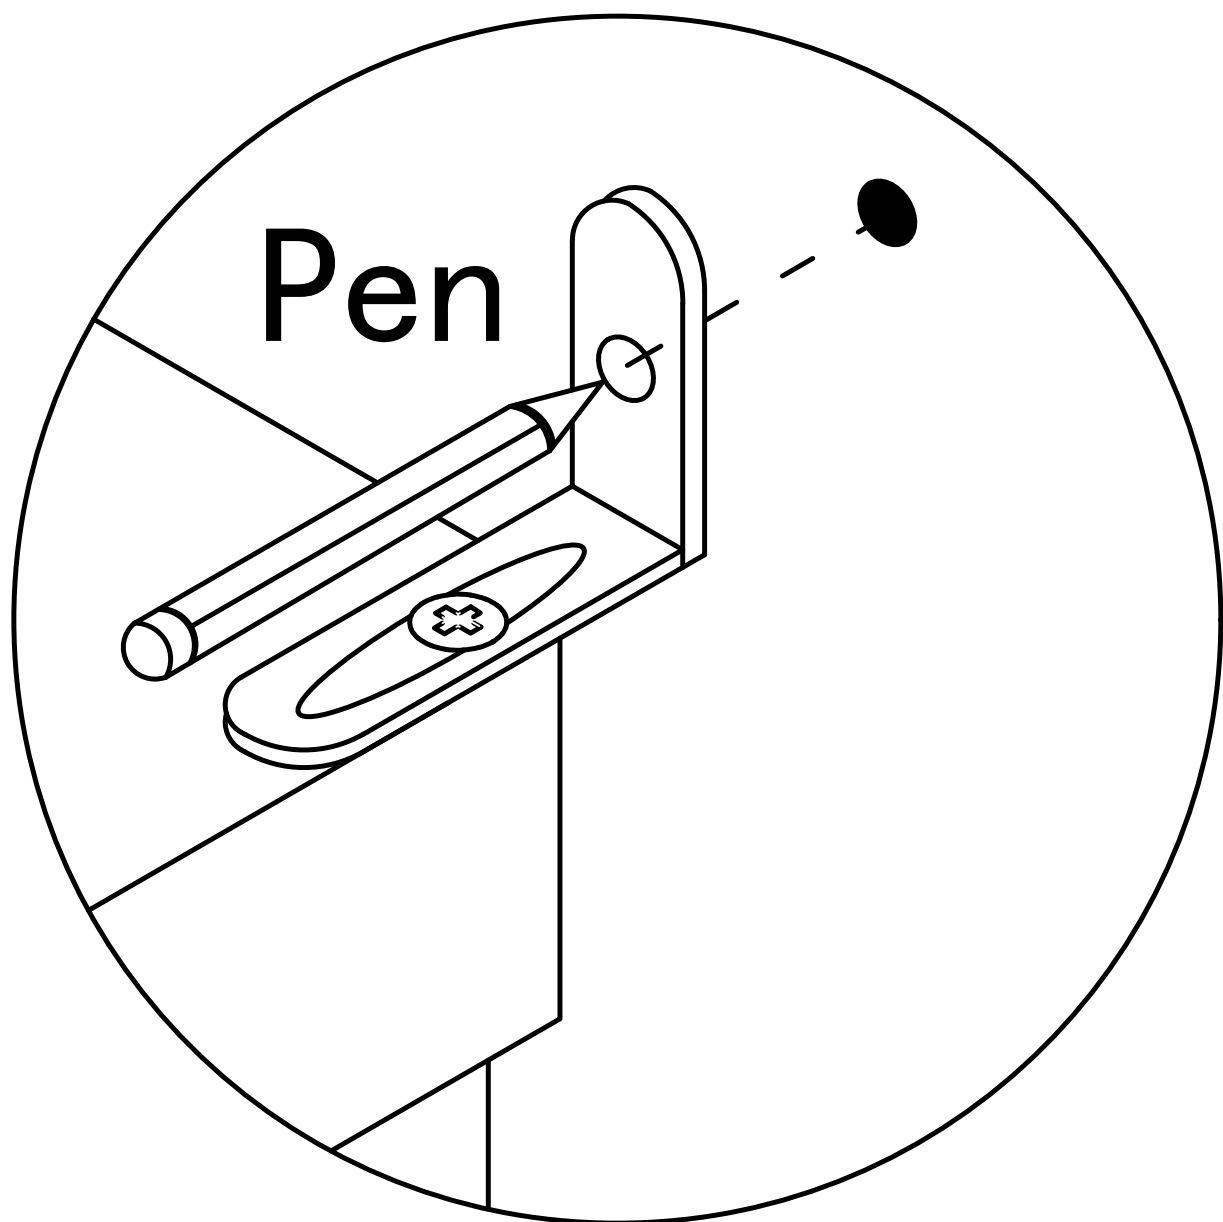




Then mark the wall with a pen through the holes in the anti-fall hardware

Step 80

Wall Mount

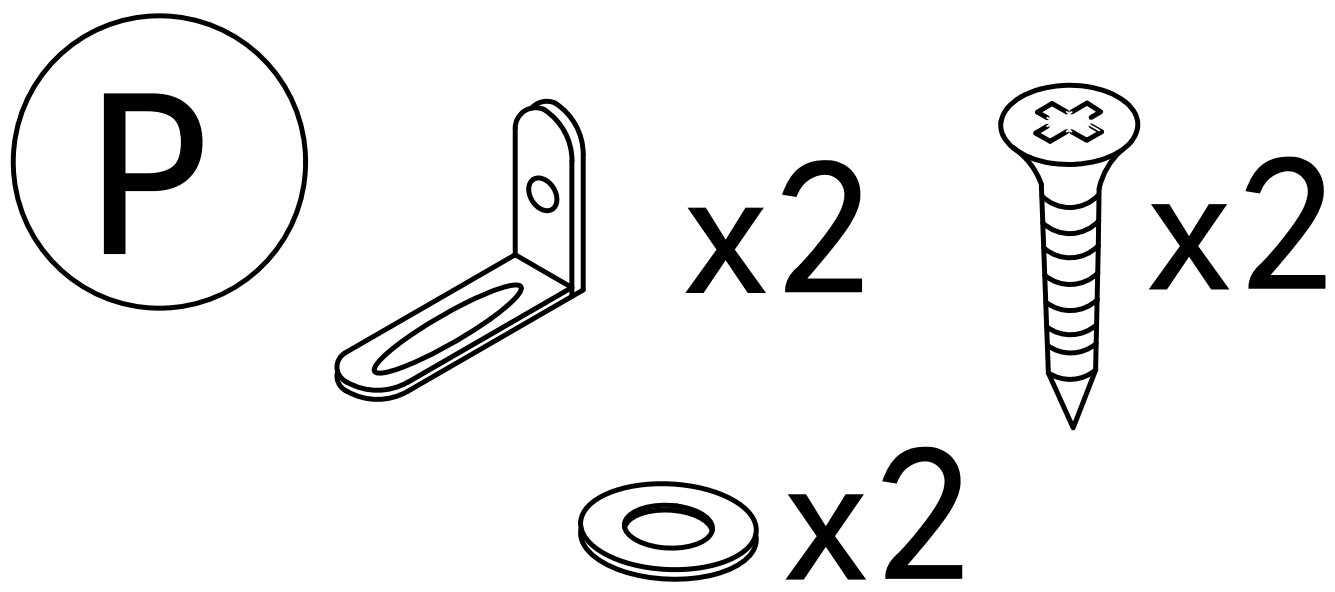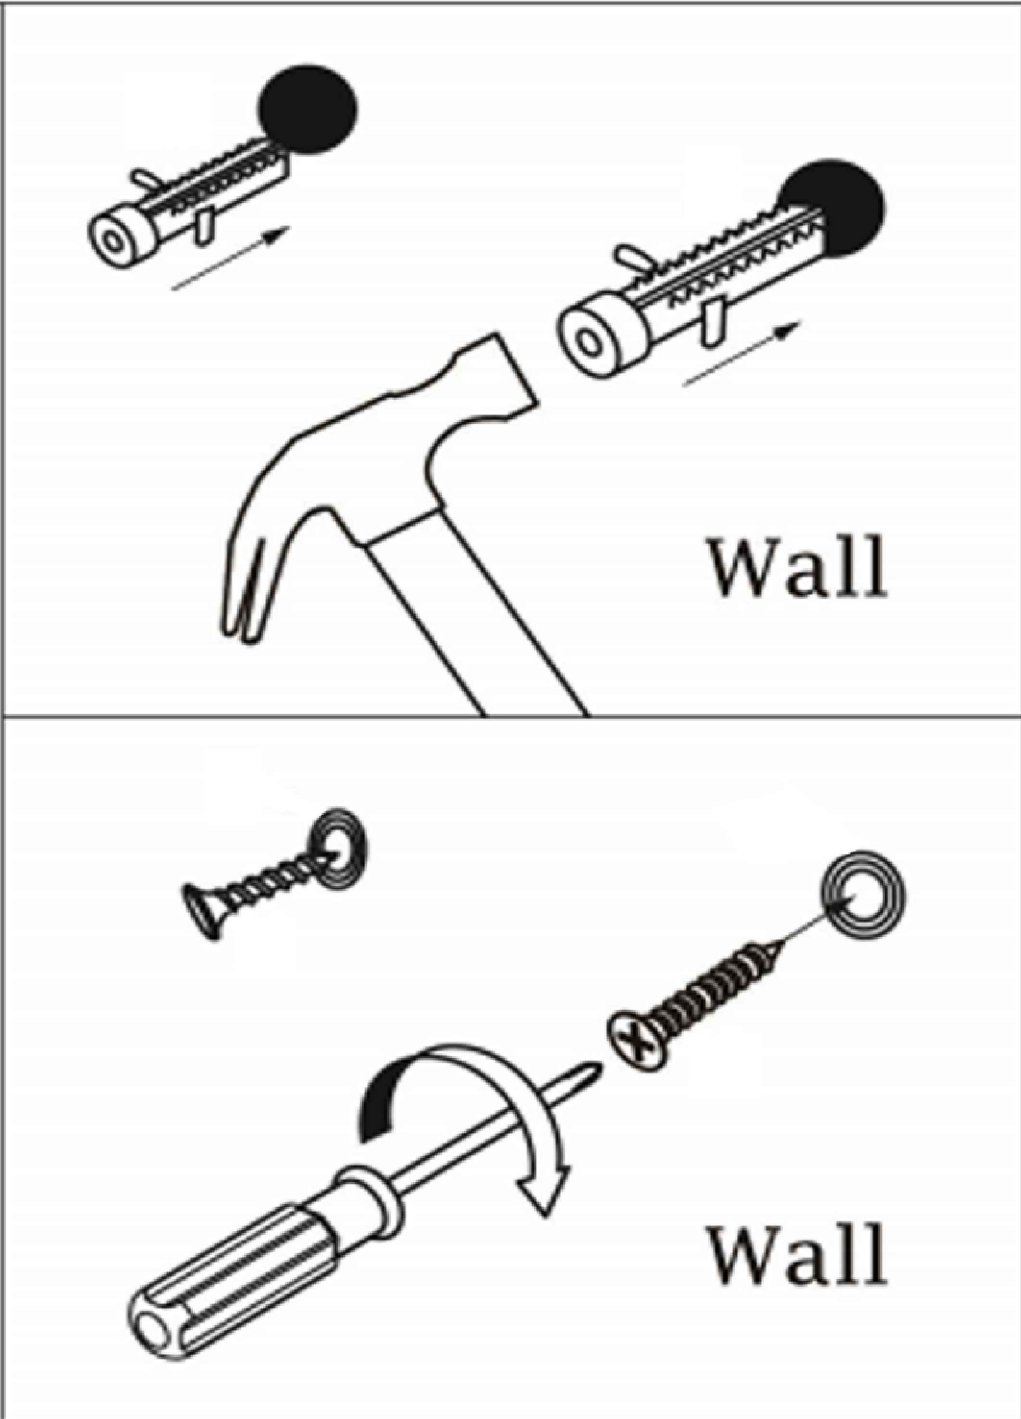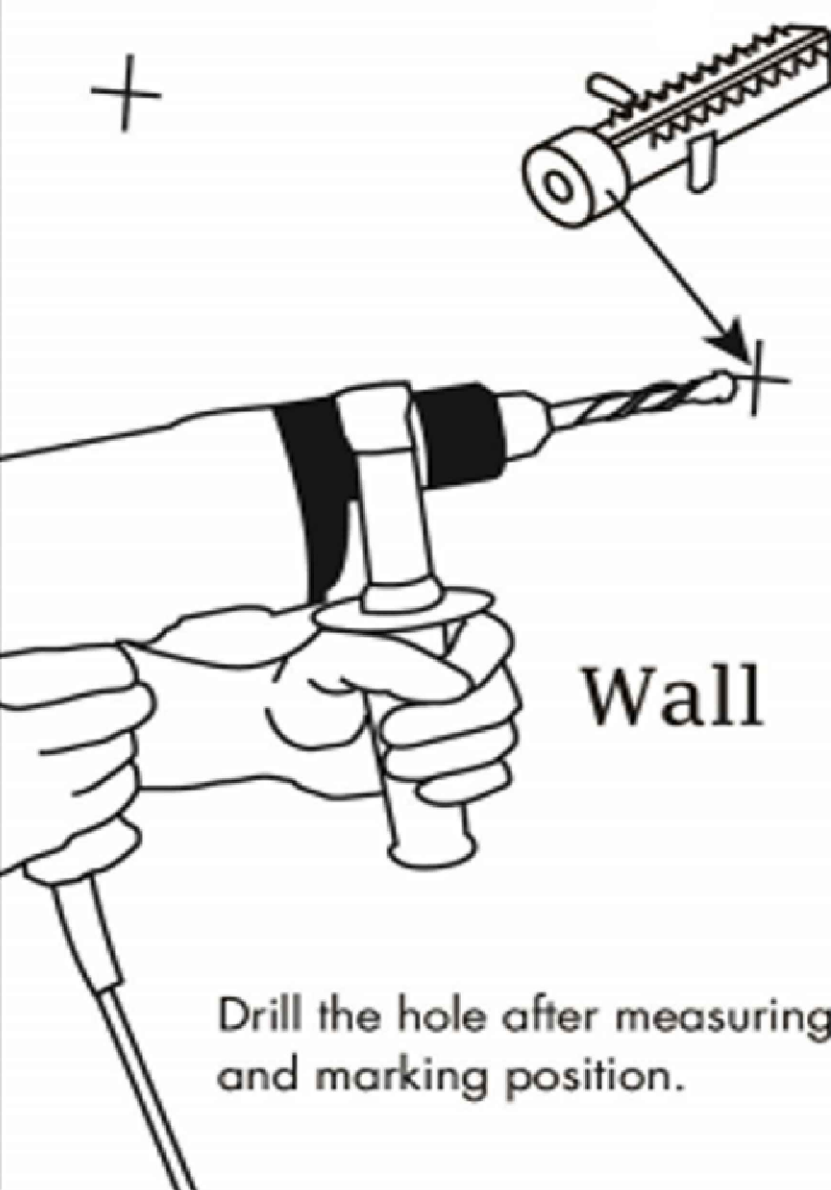

Drill the hole with an electric drill and punch in the colloidal particles

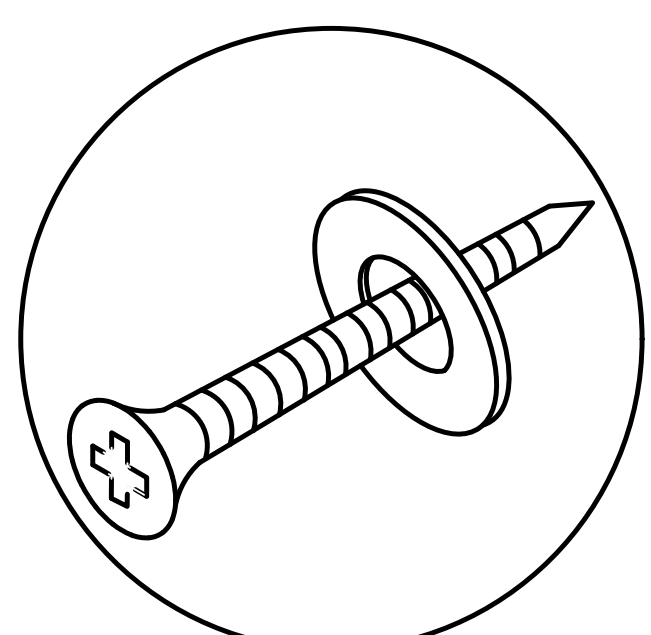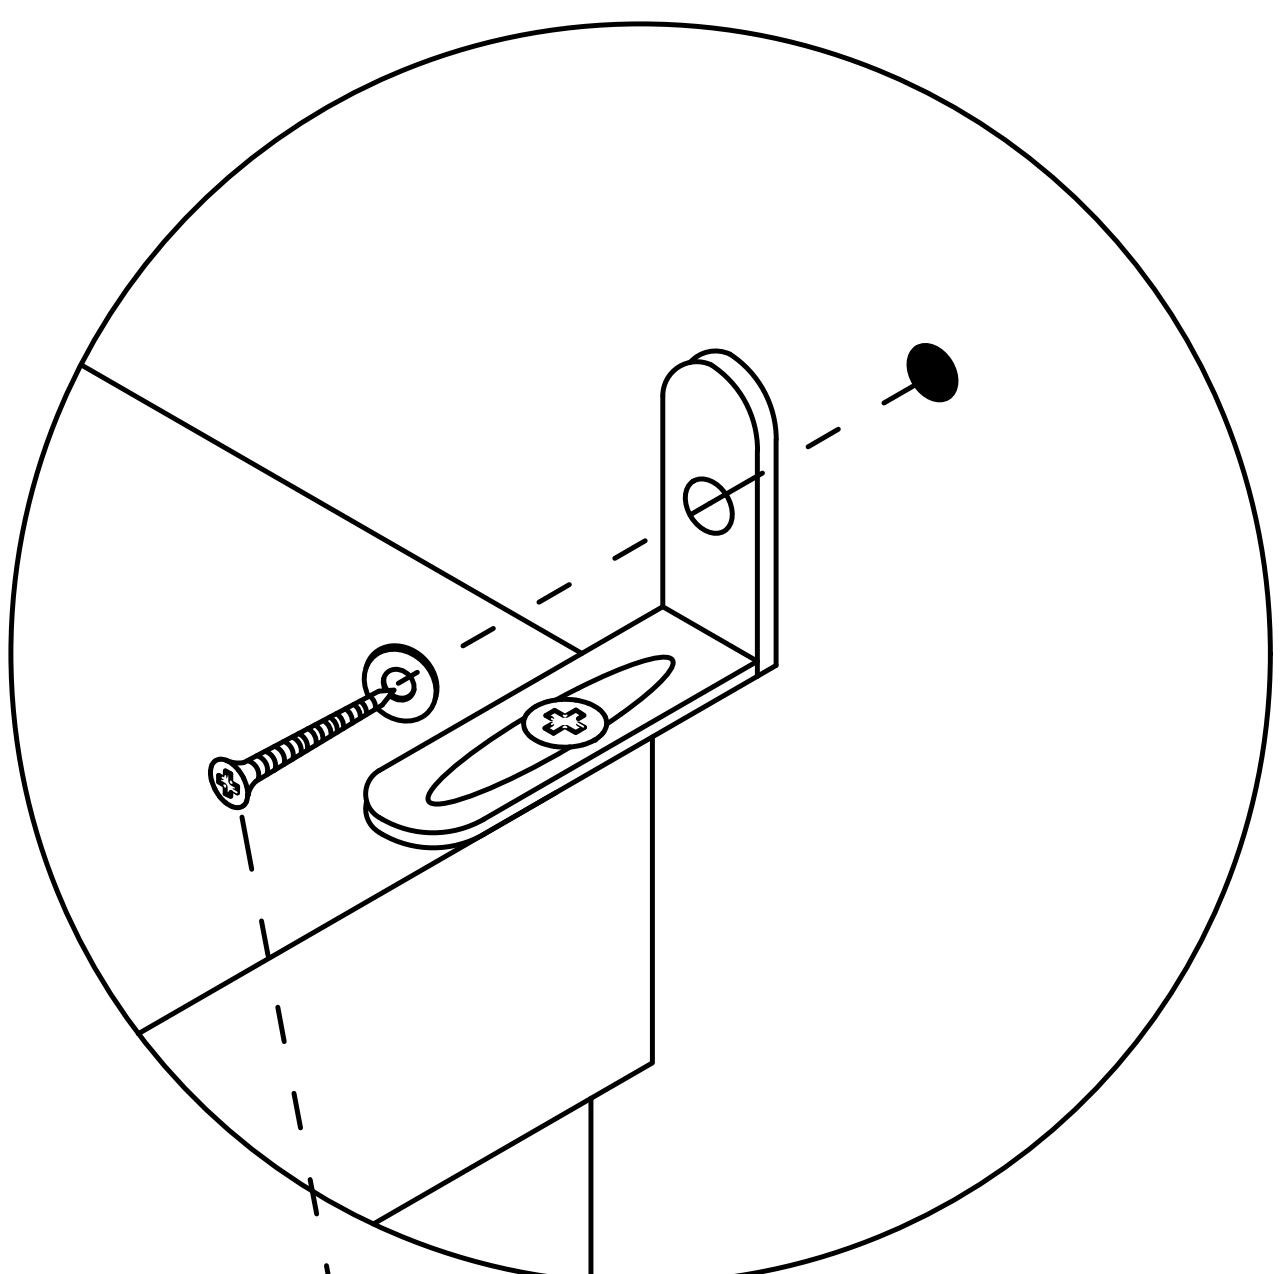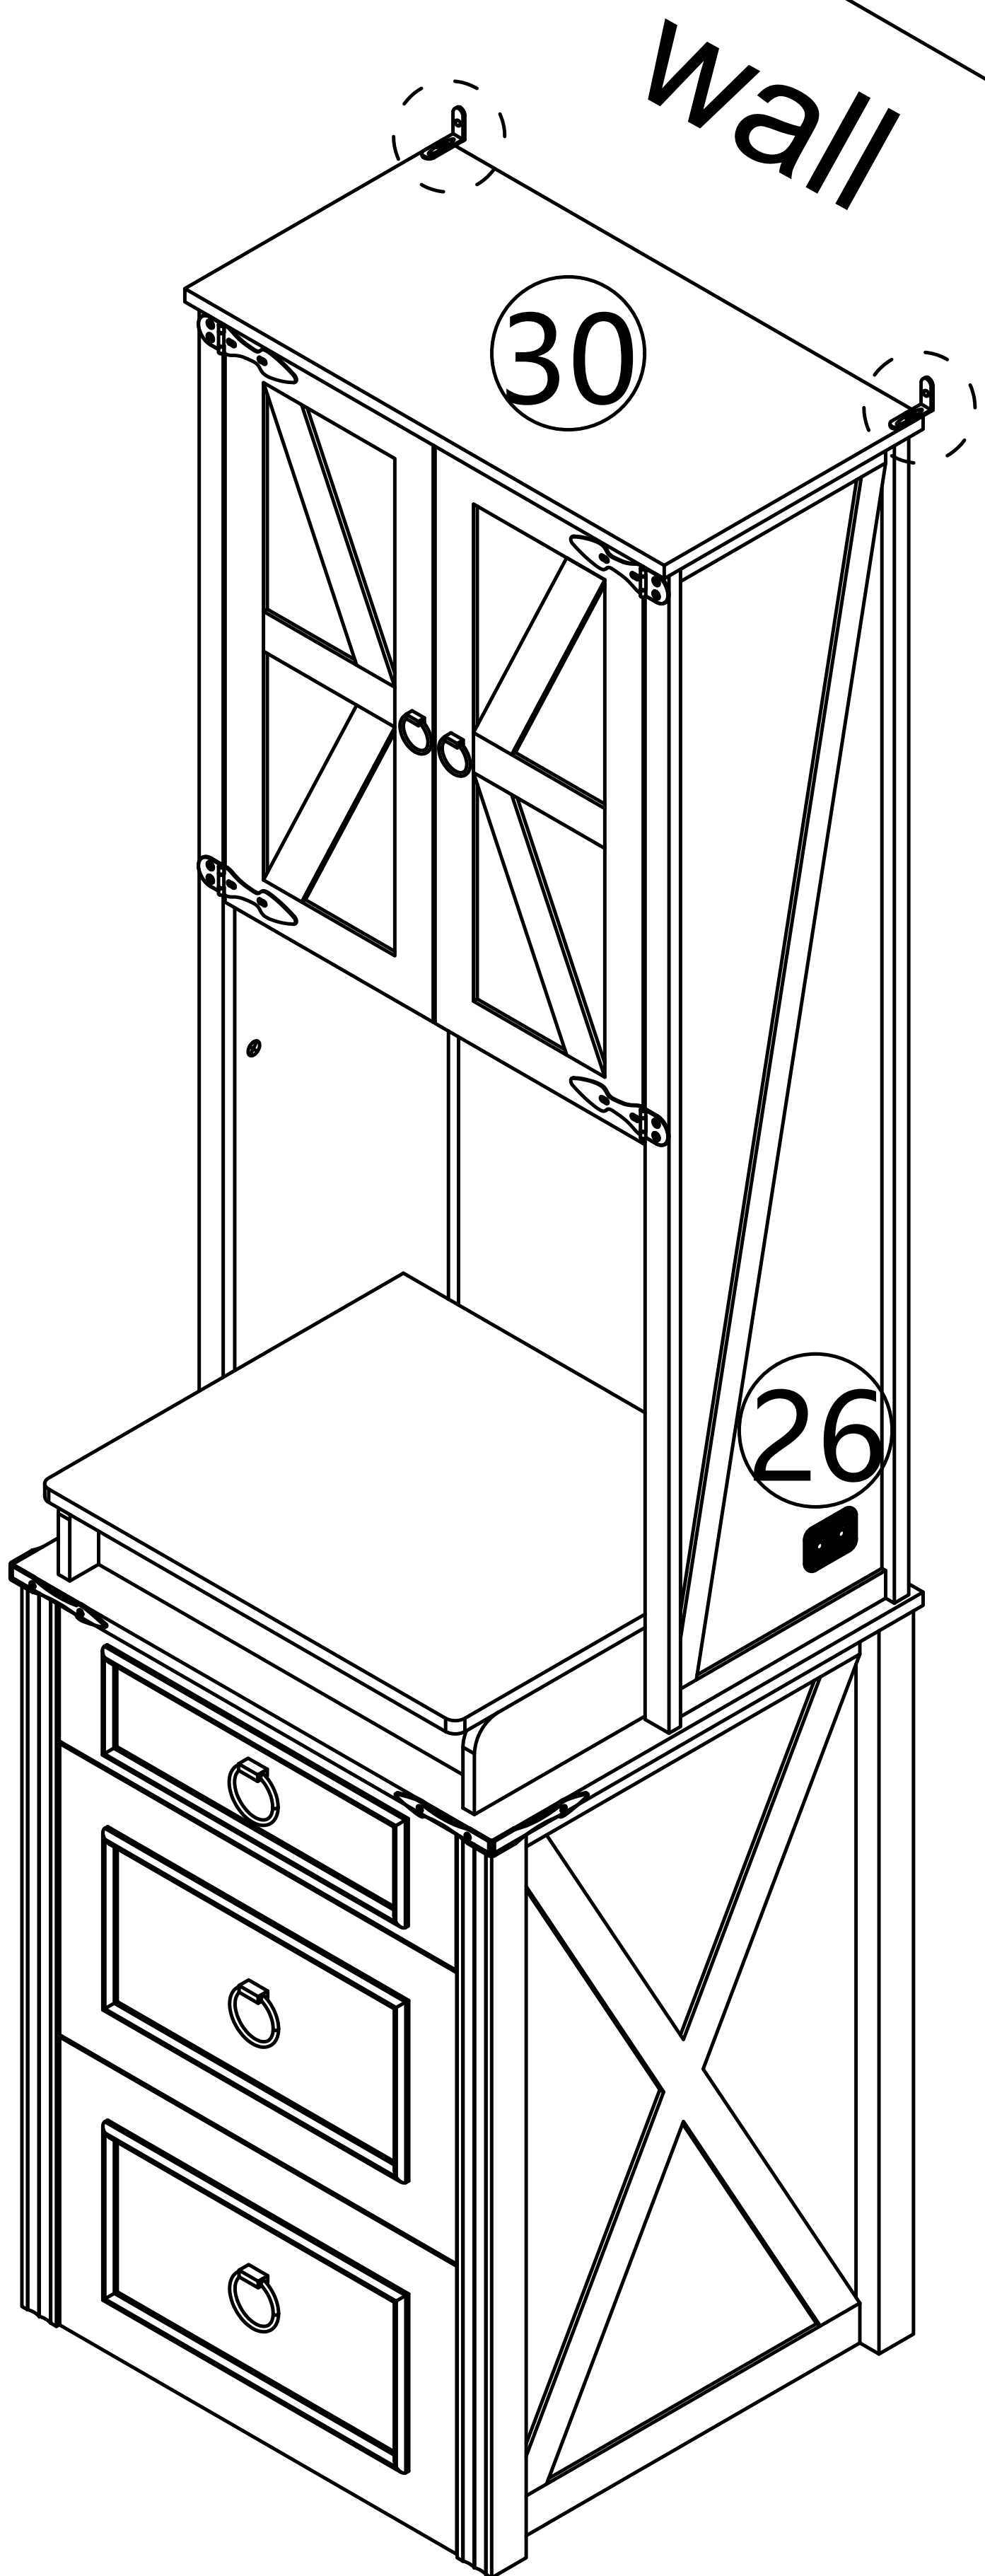

4x45mm

Fix the dressing table to the wall




# User's Guide

Thank you for purchasing this product. To use this product, please plug it into a 12V DC power supply. Please use if the product works normally after connecting to power.

## Introduction

The box is an intelligent controller with 2 touch buttons. It can turn ON/OFF the light, change light colors, and adjust the light luminance.

## Product Show

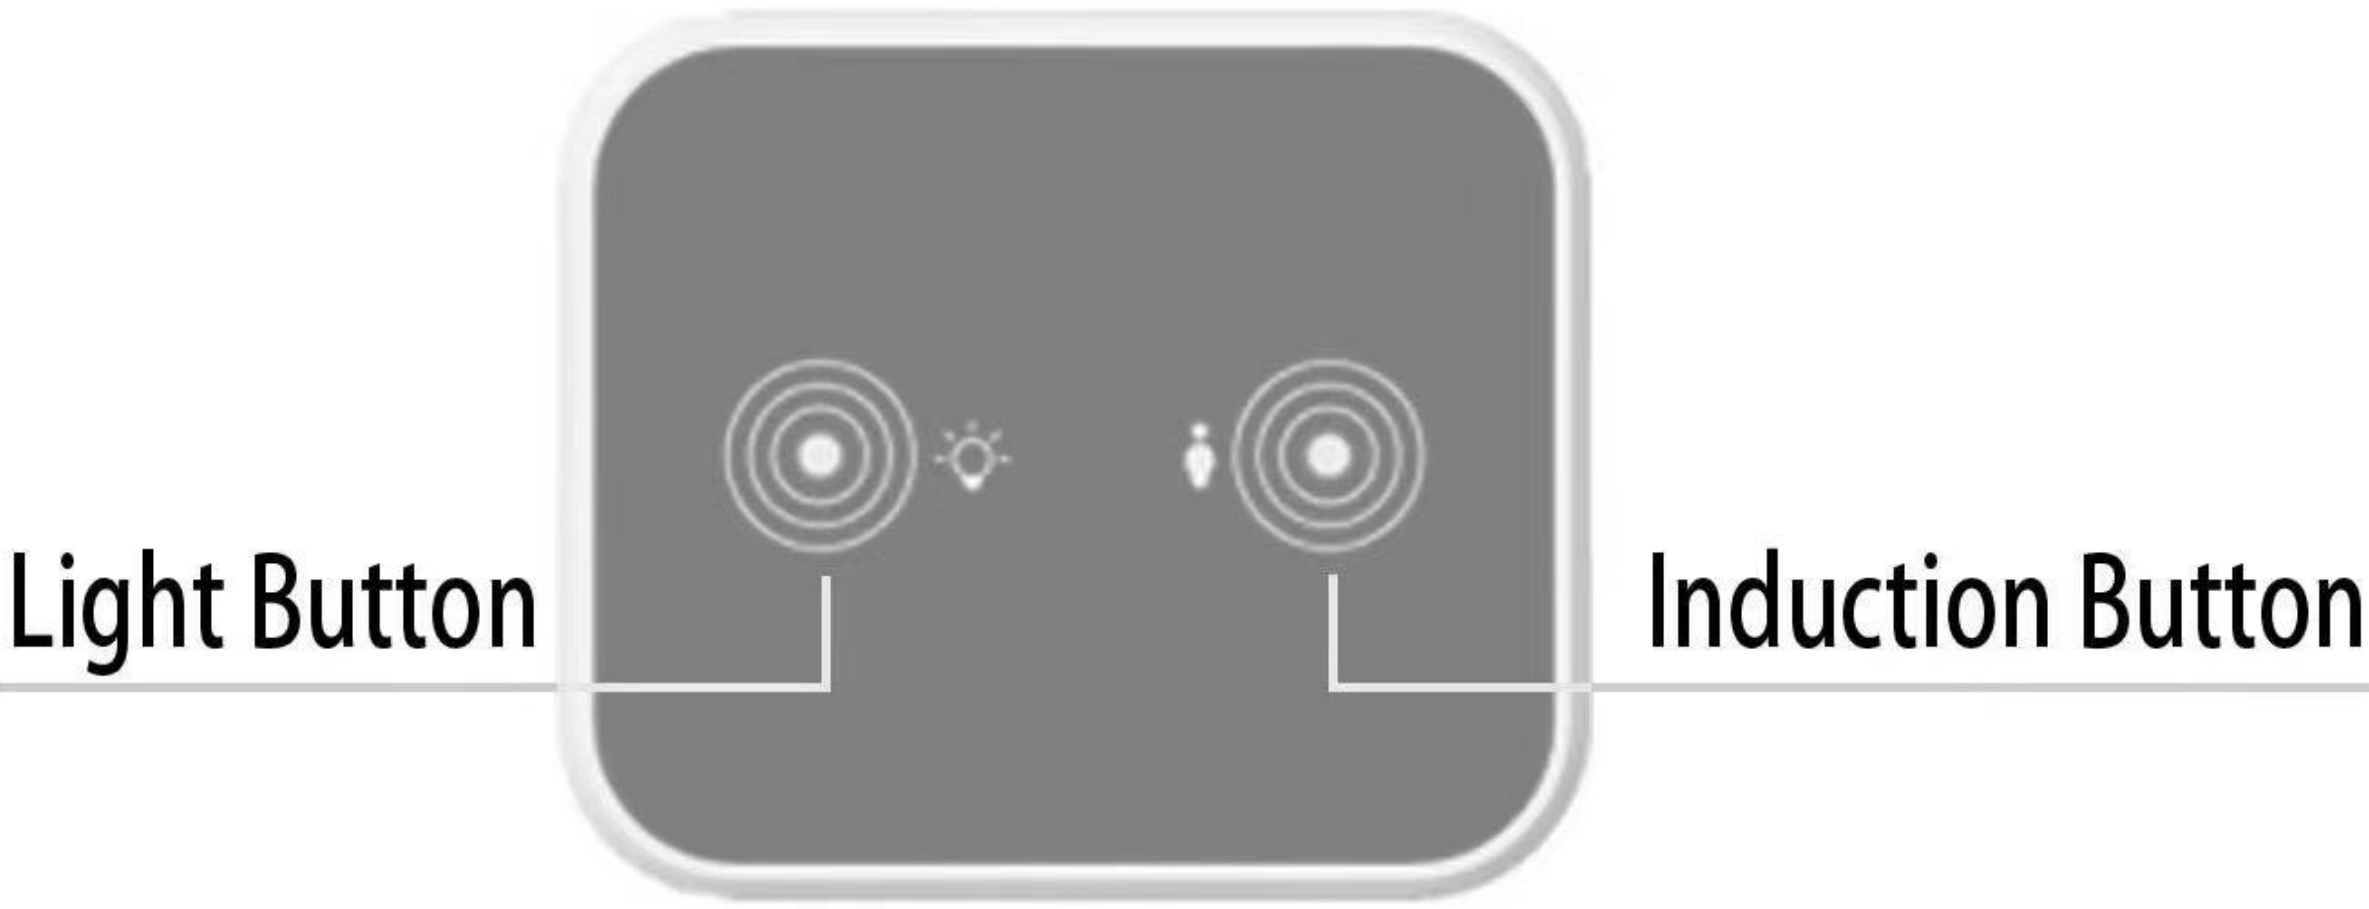

### ATTENTION PLEASE

1. If there is no touch response suddenly, Re-plug the power to reset the touch static electricity.
2. If bubbles appear on the panel, remove the protective film.

## Operation



This touch button is used to turn on/off, change colors, and adjust brightness.

A. Short touch -> lighting on -> short touch -> change light color -> short touch -> change light color -> short touch -> lighting off. B. Long touch -> adjust the luminance



This touch button is used to turn on/off the induction function.

- A. Short touch to turn on the induction function. It can auto-turn on the light when people are close to the controller in 1 meters. It can auto power off the light when the body is far away from the controller after 30 seconds.
- B. Long touch to turn off the induction function.
- C. Note: When you touch the light button to change the light modes, the induction function will automatically turn off. It is best to turn on this function after selecting the light color and adjusting the brightness you want.